

OWNER'S MANUAL NX350 / NX250 / NX200



© 2021 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.

Before driving	Important points to know before driving the vehicle	1
Driving the vehicle	Basic operations for when driving the vehicle	2
Driving according to the conditions	Using the air conditioning system and interior convenience features	3
Interior features	Using the air conditioning system and interior convenience features	4
Vehicle status information and indicators	Reading driving-related information	5
Driving support system	Safe driving support function and SRS airbag settings	6
Wireless communication	Wireless communication services which support safety, comfort and convenience	7
Maintenance and care	Caring for your vehicle and maintenance procedures	8
When trouble arises	What to do in case of malfunction and emergency	9
Vehicle specifications	Vehicle specifications, customizable features	10
Index	Search alphabetically	

For your information		1-4. Obtaining the correct driving posture	
	For your information8	Adjusting the seats98	
	Pictorial index11	Adjusting the rear seats102	
1	Before driving	Using the seat belts103	
1-1.	Using the dedicated floor mats	Adjusting the position of the steering wheel and mirrors 107	
	Using the dedicated floor mats correctly22	2 Driving the vehicle	
1-2	. Preparations for safe driving with	2-1. Starting and stopping the engine	
	children in the vehicle	Starting the engine122	
	Riding with children24	Stopping the engine126	
	Selecting an appropriate child	Stop & Start system 127	
	restraint system27	2-2. Driving procedures	
	Installing a child restraint sys- tem 35	Driving procedure135	
	Installing a child restraint sys-	Breaking in your new Lexus 138	
	tem to the front passenger's seat40	Intended use of each shift position (Automatic transmis-	
	Airbag manual on-off system 42	sion)139	
1-3	Entering/exiting the vehicle and loading luggage	Intended use of each shift position (Multidrive)141	
	Key types44 Smart entry & start system48	Changing the shift position (Automatic transmission)142	
	Opening/closing the doors53	Changing the shift position (Multidrive)148	
	Locking/unlocking the doors57	Starting off151	
	Theft deterrent system	Operations when turning left or right or changing lanes 152	
	gage68 Trailer towing (vehicles with	Changing the shift range (Automatic transmission)153	
	towing package)86	Changing the shift range	
	Trailer towing (vehicles with- out towing package)93	(Multidrive)	
	Opening and closing the win-	tomatic transmission)157	

Changing the gear step (Mul-	Defog the rear window195
tidrive)159	Defog the outside rear view
2-3. Parking the vehicle	mirrors 196
When parking the vehicle161	3-5. Driving when it is cold
Stopping163	Preparing for cold weather197
Parking the vehicle165	Cold weather driving tips200
2-4. Refueling	3-6. Driving when in the fog or on a
Refueling169	mountain road and visibility is
Driving according to the conditions	poor Fog light illumination202
3-1. Driving when the surrounding	Sounding the horn204
area is dark	3-7. Utility vehicle precautions
Using the headlights172	Utility vehicle precautions205
Automatically changing be- tween the low beam head-	3-8. Changing the driving characteristics
lights and high beam head-	Driving modes208
lights176	Changing the driving mode 210
3-2. Driving when the sun or head- lights of other vehicles are	Trail Mode (AWD vehicles)212
bright	DAC (Downhill assist con-
Using the sun visors184	trol system) 214
Inside rear view mirror anti-	3-9. Brake hold system
glare function (vehicles with	Brake hold system216
auto anti-glare inside rear view mirror)185	4 Interior features
Digital Rearview Mirror anti-	4-1. Favorite settings
glare function (optical mirror	My Settings220
mode)186	4-2. Adjusting the preferred driving
3-3. Driving in the rain	position
Precautions for driving in the rain187	Enabling easier driver entry and exit (Power easy access
Ensuring visibility in the rain188	system)
3-4. Driving when the windows or mirrors are fogged up	Driving position registration/ recall/deletion223
Defog the windshield193	

4-3. Adjusting the temperature/environment inside the vehicle	Gauges and meters (F SPORT models) <mark>290</mark>
Comfortable condition to be	5-2. Functions of the displays
maintained without adjusting each system (Lexus Climate Concierge)	Multi-information display (ve- hicles without a head-up dis- play) <mark>295</mark>
Air conditioning controls	Multi-information display (ve- hicles with a head-up dis- play)297
Seat ventilators240	Head-up display <mark>299</mark>
Using the moon roof 241	Displayed content301
Using the panoramic moon roof	5-3. Changing the settings of the displays
Opening and closing the electronic sunshade247	Changing the instrument pan- el light brightness
4-4. Illuminating the interior Using the interior lights249	Changing settings for the head-up display
4-5. Using the interior features	6 Driving support system
Location of the storage fea-	3.177
tures253	6-1. Features of the safe driving sup- port functions
Convenient interior features 259	Lexus Safety System +316
4-6. Using the luggage compartment	Driving assist systems325
Using the cargo hooks270 Using the cargo net hooks271	6-2. Using the safe driving support functions
Using the grocery bag hooks272	Pre-Collision System334
Deck board 273	Lane Tracing Assist347
Stowing the luggage cover275	Lane Change Assist352
Vehicle status information	Lane Departure Alert356
and indicators	Front crossing traffic alert362
5-1. Functions and displays of the meter	Assistance in detecting vehicles behind when changing lanes365
Warning lights and indicators. 278 Gauges and meters (except F SPORT models)285	Supporting safe exit by de- tecting detectable objects at

the rear of the vehicle by outputting sounds, display- ing screens as a warning or	8 Maintenance and care
cancelling opening of the doors	8-1. Exterior maintenance and care
Buzzer and screen notifications when approaching an object at low speed378	Washing the vehicle456 8-2. Cleaning and protecting the vehicle interior
Buzzer and screen notifications when traveling at a low speed and an approaching vehicle is detected at the rear	Cleaning the vehicle interior 462 Cleaning the areas with satinfinish metal accents
Buzzer and screen notifica- tions when traveling at a low speed and a pedestrian is	Cleaning the synthetic leather areas466 8-3. Maintenance
detected at the rear	Maintenance requirements (except for Azerbaijan, Ar- menia and Russia)467 Scheduled maintenance out-
Road Sign Assist410 Dynamic radar cruise control416	line (except for Azerbaijan, Armenia and Russia)468
Cruise Control	Maintenance requirements (for Azerbaijan, Armenia and Russia)469
Engine output restriction when the accelerator pedal	Scheduled maintenance outline (for Azerbaijan, Armenia and Russia)470
and brake pedal are de- pressed at the same time 437 Sudden start restraint control 438	Do-it-yourself maintenance471 Scheduled maintenance (for
6-3. Reducing impact to the occupants in a collision	Azerbaijan, Armenia and Russia) <mark>472</mark>
·	8-4. Inspection of consumables
Reducing impact to passengers in a collision439	Do-it-yourself service precautions478
7 Wireless communication	Opening the hood481
71 Emergency assistance	Engine compartment482

Adding washer fluid494 Air conditioning filter mainte- nance495	When the starter does not operate and the engine cannot be started553	
8-5. Tire maintenance Tire maintenance497	When the interior lights or headlights are dim and the engine cannot be started556	
Tire inspection items	When the interior lights or headlights do not illuminate and the engine cannot be started562	
Checking tire inflation pressure	When the horn sounds at a low volume and the engine cannot be started563	
jack	When the horn does not sound and the engine cannot be started564	
Wheels517	9-4. If a tire is flat	
9 When trouble arises 9-1. What to do if a problem occurs	Replacing a tire with a spare tire (vehicles with a spare tire)565	
while driving What to do if a problem occurs while driving521	If you get a flat front tire on a snowy or icy road (vehicles with a spare tire)576	
9-2. If a warning light illumi- nates/flashes or a warning mes- sage is displayed on the meter	Precautions for when you have a flat tire (vehicles with run-flat tires)577	
If a warning light turns on/ flashes525	9-5. If a door cannot be opened or locked	
If a warning message is dis-	If a key has been lost578	
9-3. If the engine will not start When the engine will not start	When the doors/windows/ moon roof cannot be oper- ated using an electronic key 579	
even though the starter operates	If a door cannot be opened using the door opener switch	
slowly and the engine cannot be started552	If the rear doors cannot be opened from the inside	

If the back door cannot be opened593	9-11. Items to check before contacting a dealership
9-6. If the moon roof or electronic sunshade does not operate correctly	The steering wheel cannot be turned after the engine is stopped616
If the moon roof does not operate correctly	If the windows do not open or close by operating the power window switches
electronic sunshade does not operate correctly	The engine switch is turned off automatically619
9-7. If refueling cannot be performed	If your vehicle overheats620
If the fuel filler door cannot be opened598	If electrical components can- not be used or do not oper-
9-8. If an indicator on an interior fea-	ate when a switch is operat- ed 62 4
ture illuminates or flashes	If a light does not illuminate 625
When the wireless charger operation indicator light (on the charging tray) flashes599	10 Vehicle specifications
9-9. If the vehicle cannot move	10-1. Specifications
When the engine can be start- ed but the vehicle does not	Maintenance data (fuel, oil level, etc.)632
move601	Fuel information646
If the transmission makes ab- normal sounds602	10-2. Customizable features
Towing with a tow truck603	User customization function outline648
Using a flatbed truck607	Method to change settings649
Towing with another vehicle608	Customizable features650
Getting unstuck from mud,	10-3. Initialization
sand, or snow612	Items to initialize669
9-10. If you think something is wrong	Supplement670
If a vehicle abnormality is found613	Index673
If abnormal sounds are emit- ted from the vehicle614	Certification684
If the vehicle behaves abnor- mally615	

For your information

Information contained in this Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Lexus policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of color and equipment.

For Eurasian Economic Union: The information on the procedure for the safe use of the vehicle and its systems, presented on the manufacturer's labels on the body in English, is intended only for service workers.

Reading this manual

This section explains symbols used in this manual.

■ Meanings of symbols in the text

The names and meanings of symbols are as follows:



WARNING

Explains something that, if not obeyed, could cause death or serious injury to people.



NOTICE

Explains something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.

123...

Step number


Indicates operating or working procedures. Follow the steps in numerical order.




Explains important points other than functions and operating methods.

■ Meanings of symbols in illustrations


The names and meanings of symbols are as follows:

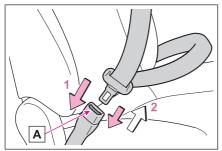

 - Indicates the action (pushing, turning, etc.) used to operate switches and other devices.
- Indicates the outcome of an operation (e.g. a lid opens).

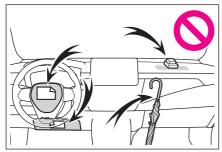





Precautions for safe driving

WARNING

- Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.
- Driver distraction: Always give your full attention to driving. Anything that distracts the
 driver, such as adjusting controls, talking on a cellular phone or reading can result in a
 collision with resulting death or serious injury to you, your occupants or others.
- Always observe the legal speed limit when driving on public roads.
- Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.
- When driving over long distances, take regular breaks before you start to feel tired.
 Also, if you feel tired or sleepy while driving, do not force yourself to continue driving and take a break immediately.

General precaution regarding children's safety

WARNING

Never leave children unattended in the vehicle, and never allow children to have or use the key.


Children may be able to start the vehicle or shift the vehicle into neutral.

There is also a danger that children may injure themselves by playing with the windows, the moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Pictorial index

Exterior

Light bulbs of the exterior lights for driving (Replacing method: \rightarrow P.628)

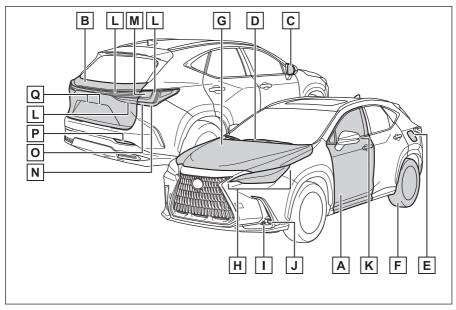


Α	Side doors	P.53
	Locking/unlocking	P.57
	Opening/closing the side doors	P.53
	Opening/closing the side windows	P.94,95
	Locking/unlocking by using the mechanical key	P.582
	Warning messages	P.537
В	Back door	P.69
	Opening from inside the cabin	P.69
	Opening from outside	P.69
	Warning messages	P.537
С	Outside rear view mirrors	P.117
	Adjusting the mirror angle	P.117

	Folding the mirrors	P.119
	Driving position memory*	P.223
	Defogging the mirrors	P.196
D	Windshield wipers	P.188,191
	Precautions for winter season	P.197
	Precautions for car wash	P.460
Е	Fuel filler door	P.169
	Refueling method	P.169
	Fuel type/fuel tank capacity	P.635
F	Tires	P.497
	Tire size/inflation pressure	P.514,644
	Winter tires/tire chains	P.197
	Checking/rotation/tire pressure warning system	P.497,498,501,516
	Coping with flat tires	P.565
G	Hood	P.481
	Opening	P.481
	Engine oil	P.636,637,639
	Coping with overheating	P.620
	Warning messages	P.537
Н	Headlights/front position lights/daytime running light	s/turn signal lights P.172
Ι	Cornering lights*	P.174
J	Front fog lights*	
K	Turn signal lights	
L	Stop/tail lights	P.172
М	Turn signal lights	P.152
N	Back-up light	
	Changing the shift position to R	P143.148
О	Stop lights	
	Emergency brake signal	P325
Р	Rear fog light	
	License plate lights	
×	License plate lights	F.1/ Z

 $^{^{\}star}$: If equipped

Instrument panel

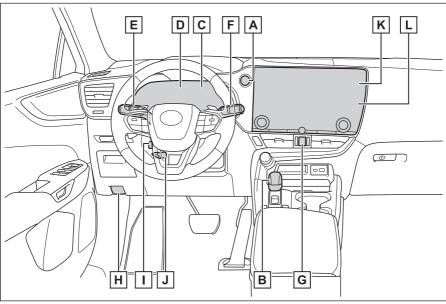


A Engine switch	P.122
Starting the engine/changing the modes	P.122,123
Emergency stop of the engine	P.521
When the engine will not start	P.551
Warning messages	P.537
B Shift lever	P.139,141
Changing the shift position	P.142,148
Precautions for towing	P.603,607,608
When the shift lever does not move	P.149
C Meters	P.285,290
Reading the meters/adjusting the instrument panel ligh	tP.285,290,312
Warning lights/indicator lights	P.278
When a warning light turns on	P.525
D Multi-information display	P.295,297
Display	P.295,297
When a warning message is displayed	P.537

E Turn signal lever/Headlight switch	P.152,172
Headlights/front position lights/tail lights/license plat lights	
Front fog lights*/Rear fog light	P.202
F Windshield wiper and washer switch	P.188,191
Usage	P.188,191
Adding washer fluid	
Warning messages	
G Emergency flasher switch	
H Hood lock release lever	P.481
I Tilt and telescopic steering control switch*	P.107,108
Adjustment	
Driving position memory	P.223
J Tilt and telescopic steering control lever*	P.107,108
Adjustment	
K Air conditioning system	P.229
Usage	P.230
Rear window defogger	P.195
L Audio system*1	

 $^{^{\}star}$: If equipped

 $^{^{\}star 1}$: Refer to "Multimedia owner's manual".


Switches

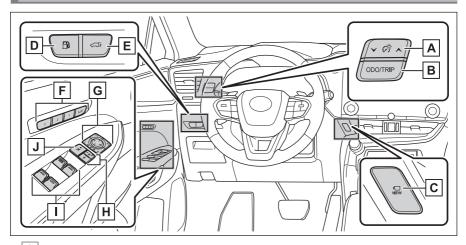

$oxedsymbol{A}$ Instrument panel light control switches	P.312
B ODO/TRIP switch	P.289
C Camera switch**2	
D Fuel filler door opener switch	P.169
E Power back door switch*	P.76
F Driving position memory switches*	P.223
G Outside rear view mirror switches	P.117
H Door lock switches	P.59
Power window switches	P.94,95
J Window lock switch	P.97

 $^{^*}$: If equipped

 $^{^{*2}}$: Refer to "Multimedia owner's manual".

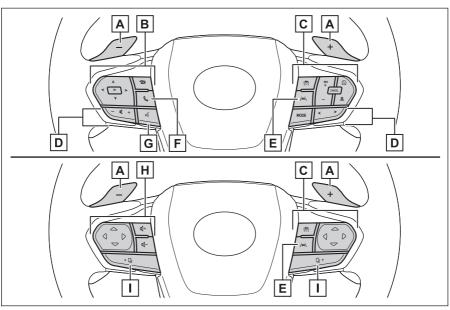


A Paddle shift switches	153,155,157,159
B Meter control switches	P.301
C Cruise control switch	
Dynamic radar cruise control	P.416
D Audio remote control switches *3	
E LTA (Lane Tracing Assist) switch	P.347,352
F Telephone switch*4	
G Talk switch*5	
H Audio remote control switches/telephone switch/talk switch*	⁶ P.301
Switch function change switch	P.301

^{*3:} Refer to "Multimedia owner's manual".

^{*4:} Refer to "Multimedia owner's manual".


^{*5:} Refer to "Multimedia owner's manual".

^{*6:} Refer to "Multimedia owner's manual".

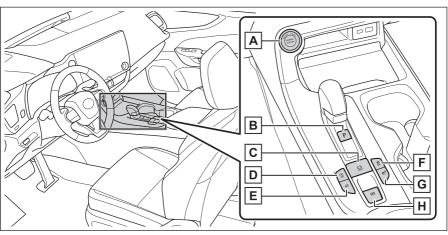


A Driving mode select switch	P.210
B P position switch*	P.143
C Brake hold switch	P.216
D Stop & Start cancel switch*	P.131
E DAC switch*	P.214
F VSC OFF switch	P.325
G Trail Mode switch*	P.212
H Parking brake switch	P.143,165,216
Applying/releasing the parking brake	P.143,165,216
Precautions for winter season	P.200
Warning buzzer/messages	P.537

Interior

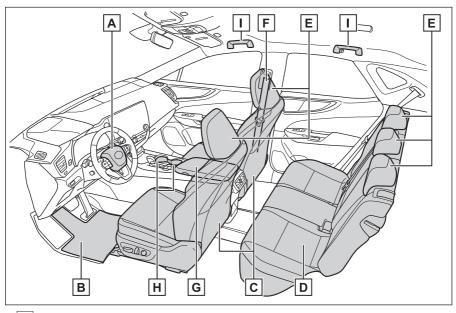

Α	SRS airbags	P.439
В	Floor mats	P.22
С	Front seats	P.98
D	Rear seats	P.102
Е	Head restraints	P.99
F	Seat belts	P.103
G	Console box	P.257
Н	Cup holders	P.255
	Assist grips	P.268

Ceiling

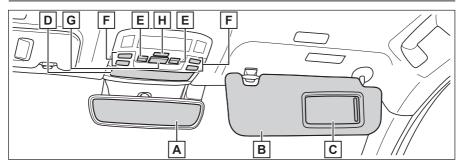

A Inside rear view mirror	P.108,109,185,186
B Sun visors*7	P.184
C Vanity mirrors	P.269
D Auxiliary box	P.254
Moon roof switches*/Panoramic moon roof switches*	P.241
F Interior light/Personal lights	P.251,252
G [SOS] button*	P.450
H Door-linked interior light switch	P.251

 \star7 : NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.



^{*:} If equipped

1

Before driving

_
Using the dedicated floor mats correctly22
1-2. Preparations for safe driving with children in the vehicle
Riding with children24
Selecting an appropriate child restraint system27
Installing a child restraint system35
Installing a child restraint system to the front passenger's seat40
Airbag manual on-off system42
1-3. Entering/exiting the vehicle and loading luggage
Key types44
rey types
Smart entry & start system48
Smart entry & start system48
Smart entry & start system48 Opening/closing the doors53
Smart entry & start system48 Opening/closing the doors53 Locking/unlocking the doors57
Smart entry & start system
Smart entry & start system48 Opening/closing the doors53 Locking/unlocking the doors57 Theft deterrent system62 Loading the vehicle with luggage68 Trailer towing (vehicles with
Smart entry & start system48 Opening/closing the doors53 Locking/unlocking the doors57 Theft deterrent system62 Loading the vehicle with luggage68 Trailer towing (vehicles with towing package)86 Trailer towing (vehicles with-

ture

Adjusting the seats98
Adjusting the rear seats102
Using the seat belts103
Adjusting the position of the
steering wheel and mirrors107

Using the dedicated floor mats correctly

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

WARNING


- When installing a driver's side floor mat, do not use floor mats designed for other models or different model year vehicles, even if they are Lexus Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottomside up or upside-down.

Securing the floor mats


WARNING

Check the following before driving.

 Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.

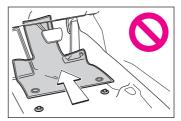

- With the engine stopped and the shift position in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.
- Insert the retaining hooks (clips) into the floor mat eyelets.

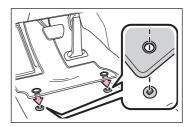


WARNING

Always install the floor mat securely using the retaining hooks (clips) provided.

2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

Always align the Δ marks $\boxed{\mathbf{A}}$.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

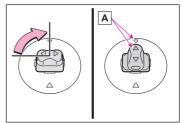


Riding with children

If a child which is not large enough to correctly wear a seat belt intended for adults is to ride in the vehicle, use a child restraint system. Child restraint systems are designed to keep children safe.

To ensure safety, observe the following when children are in the vehicle.

- Make sure that children always wear a seat belt.
 - If a child is not wearing a seat belt, in a collision, they may collide with a window, other passenger, or the interior of the vehicle. Also, if a child is riding on the lap of another passenger, in a collision, they may collide with a window, other passenger, or the interior of the vehicle.
- Seat children in the rear seats.
 - It is recommended that children sit in the rear seats to avoid accidental contact with the driver's controls.
- Do not allow children to operate equipment such as the doors, windows, etc.
 - Do not let children operate equipment such as the doors, power windows, seats, etc. as a part of their body may become pinched.
 - To prevent children from opening and closing the doors and power windows, use the child-protector locks and window lock switch.
- Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on.
 - The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.

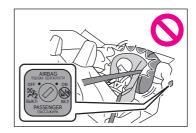

 There is a label(s) on the passenger side sun visor, indicating it is forbidden to attach a rear-facing child restraint system to the front passenger seat.



WARNING

- Never leave children unattended in the vehicle, and never allow children to have or use the key.
 - Children may be able to start the vehicle or shift the vehicle into neutral.
- Do not leave children unattended in the vehicle.
 - Children may accidentally cause the vehicle to move, leading to an accident, or start a fire.
- Do not leave people or animals in the vehicle.
 - The temperature inside the vehicle can become extremely high during the daytime, possibly leading to heat stroke or death.
- Do not allow children to ride on the lap of a passenger.
 - If a child is riding on the lap of another passenger, in a collision, they may collide with a window, another passenger, or the interior of the vehicle. Make sure that children wear a seat belt or use a child restraint system.
- Use a child restraint system for small children.
 - If a child which is not large enough to correctly wear a seat belt is to ride in the vehicle, use a child restraint system.
- Use child restraint systems correctly.
 - Child restraint systems are designed to protect children in a collision or sudden stop. Make sure to securely install child restraint systems and use them correctly.
- Replace child restraint systems which have been involved in a collision.
 If the vehicle has been involved in a collision, it is possible that an installed child restraint system has been damaged and will not be able to deliver the same level of impact absorption performance, even if the outside of it looks normal.
- When a child restraint system is not in use, secure it so that it does not interfere with driving.
 - When removing a child restraint system, store it outside of the vehicle or securely in the luggage compartment.

Seating positions for children


It is recommended that children sit in the rear seats to avoid accidental contact with the driver's controls. In the event of an accident, the force of deployment of the SRS front passenger airbag can cause death or serious injury to a child seated on the front passenger's seat. Do not allow a child to ride on the front passenger's seat unless it is unavoidable.

WARNING

- When installing a child restraint system to the front passenger's seat is unavoidable, move the seat as far back as possible, and install the child restraint system so that it faces forward. If the child restraint system is not installed correctly, in the event of an accident, the force of deployment of the SRS front passenger airbag can cause death or serious injury.
- Do not allow children to lean against the doors, roof side rails, or pillars. In the event
 of an accident, the force of deployment of an SRS airbag can cause death or serious
 injury to a child.
- When adjusting the driver's seat, if it contacts a child or child restraint system, install
 the child restraint system to the rear seat behind the front passenger's seat.
- Adjust the front passenger seat so that it does not interfere with the child or child restraint system.
- If a child which is over 100 cm tall is to ride in the vehicle, use a junior seat. When using
 a junior seat, make sure that the seat belt is worn correctly.

Preventing the rear doors from being opened from the inside of the vehicle (child-protector lock)

The door cannot be opened from inside the vehicle when the lock is set.

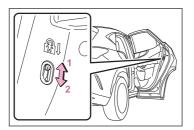

- 1 Unlock
- 2 Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear doors switch to lock both rear doors.

Door opening method when using a child-protector lock

Unlock the door and pull the exterior door handle to open the door. If it is necessary to open the door from inside the vehicle, open the rear door window and pull the exterior door handle

Selecting an appropriate child restraint system


Precautions for selecting a child restraint system

To ensure safety, observe the following when using a child restraint system.

- Make sure to observe the precautions regarding child restraint systems.
- Choose a child restraint system appropriate to the age and size of the child.
- Check the compatibility of the child restraint system with each seating position. Depending on the child restraint system, it may not be able to be installed.
- For details about use of a child restraint system, check the user's manual of the child restraint system.

WARNING

- Check that the seat belt for the seat next to a child restraint system can be worn
 properly. Depending on the type of child restraint system, the seat belt may not be able
 to be worn properly. In this case, use another seat.
- When adjusting the driver's seat, if it contacts a child or child restraint system, install the child restraint system to the rear seat behind the front passenger's seat.
- Adjust the front passenger seat so that it does not interfere with the child or child restraint system.
- When installing a child restraint system with support base, if the child restraint system
 contacts a seatback when installing it to the support base, adjust the seatback rearward until they do not contact.
- If the seat belt shoulder anchor is in front of the seat belt guide of a child restraint system, move the seat forward.

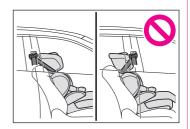

 When installing a junior seat, if the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position.

Selecting a child restraint system

Use a child restraint system that conforms to UN (ECE) R44 or UN (ECE) R129. UN (ECE) R44 and UN (ECE) R129 are U.N. regulations for child restraint systems.

■ Example

"UN (ECE) R44"



"UN (ECE) R129"



⚠ NOTICE

- The displayed mark may differ depending on the product.
- If the category of a child restraint system is unclear, refer to the user's manual of the child restraint system or check with the manufacturer.

■ Recommended child restraint systems information

	Recommended child	Fixation		
Mass group	restraint system	fixed with a seat belt	fixed with lower an- chorages	
Group 0 or 0+	LEXUS		N	
Up to 10 kg or 13 kg (Up to 22 lb. or 28 lb.)	GO+, BABY SAFE PLUS	Yes	Not Applicable	
Group I	LEXUS			
9 to 18 kg (20 to 39 lb.)	DUO PLUS	Yes	Yes	

	Recommended child	Fixation		
Mass group Recommended of restraint system		fixed with a seat belt	fixed with lower an- chorages	
Group II and III 15 to 25 kg and 22 to 36 kg (34 to 55 lb. and 48 to 79 lb.)	LEXUS KIDFIX 2S ⁽¹⁾ (2)	Yes	Yes	
	LEXUS MAXI PLUS	Yes	Yes	

- Adjust the restraint system headrest, so that it does not interfere with the vehicle interior.
- (2) Be sure to attach the seat belt through the SecureGuard.

The child restraint systems mentioned in the table may not be available outside the EU countries and United Kingdom.


 When using the child restraint system with SecureGuard, be sure to guide the lap belt into SecureGuard A as shown in the illustration.



Lexus recommends the use of a Lexus genuine child restraint system, as they meet strict quality standards.

Lexus genuine child restraint systems are made specifically for Lexus vehicles. For details, refer to the Lexus web site or contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Child restraint system compatibility with each seating position

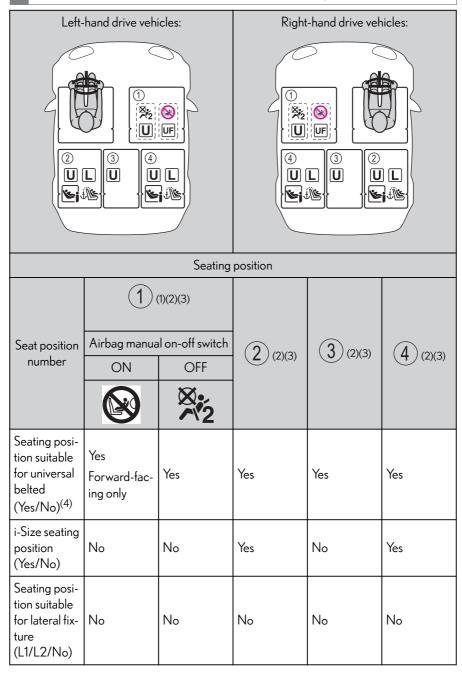


Left-hand drive vehicles:			Right-hand drive vehicles:		
		Seating	position		
Seat position number		rbag manual on-off switch		3 (2)(3)	4 (2)(3)
Suitable rearward facing fixture (R1/R2X/R2 /R3/No)	No	No	R1, R2X, R2, R3	No	R1, R2X, R2, R3
Suitable forward facing fixture (F2X/F2/F3/No)	No	No	F2X, F2, F3	No	F2X, F2, F3
Suitable junior seat fixture (B2/B3/No)	No	No	B2, B3	No	B2, B3

⁽¹⁾ Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.

1-2. Preparations for safe driving with children in the vehicle

(2) Raise the seatback to be as upright as possible and reduce the gap between the child restraint system and seatback.

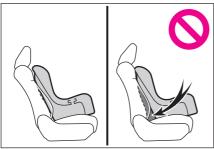

- (3) If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.
- (4) All universal categories (group 0, 0+, I, II and III).
- ullet Lexus suggests the users to use \bullet and \bullet seating positions.

	Activation of front passenger airbag.
	Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on.
× × Ž	Deactivation of front passenger airbag.
U	Suitable for "universal" category child restraint system fixed with the seat belt.
UF	Suitable for forward-facing "universal" category child restraints system fixed with the seat belt.
L	Suitable for recommended child restraint systems given on recommended child restraint systems information. $(\rightarrow P.27)$
	Suitable for i-Size and ISOFIX child restraint system.
	Includes a top tether anchorage point.

In the following situations, refer to the "vehicle compatibility list" from the manufacturer of the child restraint system, or contact your Lexus dealer or the retailer of the child restraint system.

- When the child restraint system is not a "universal" category child restraint system
- When it is unknown if the child restraint system is a "universal" category child restraint system or not

Installation fixture list

ISOFIX child restraint systems are divided into different "fixture" types. Select a fixture type according to the position where the child restraint system is to be installed. Refer to the following table for the "fixture" types.

- To check the "fixture" type of a child restraint system, check the user's manual included with it.
- If the child restraint system has no "fixture" type (or if the information is not in the table), refer to the "vehicle compatibility list" from the manufacturer of the child restraint system or contact the retailer of the child restraint system.

Mass group	Child weight	Size class	Fixture	Description
0	Up to 10 kg (22 lb.)	Е	R1	Rearward-facing infant seat
		F	L1	Left lateral-facing infant seat (Carrycot)
		G	L2	Right lateral-facing infant seat (Carrycot)
0+	Up to 13 kg (28 lb.)	С	R3	Full-size, rearward- facing child re- straint systems
		D	R2	Reduced-size, rearward-facing child restraint sys- tems
		_	R2X	Reduced-size, rearward-facing child restraint sys- tems

1-2. Preparations for safe driving with children in the vehicle

Mass group	Child weight	Size class	Fixture	Description
0 +	Up to 13 kg (28 lb.)	Е	R1	Rearward-facing infant seat
		А	F3	Full-height, for- ward-facing child restraint systems
		В	F2	Reduced-height forward-facing child restraint sys- tems
	9 to 18 kg (20 to 39 lb.)	B1	F2X	Reduced-height forward-facing child restraint sys- tems
		С	R3	Full-size, rearward- facing child re- straint systems
		D	R2	Reduced-size, rearward-facing child restraint sys- tems
II	15 to 25 kg (34 to 55 lb.)		D2 D2	lucia a sast
III	22 to 36 kg (48 to 79 lb.)	-	B2, B3	Junior seat

Installing a child restraint system

Lexus recommends that child restraint systems be installed to a rear seat. For safety, when using a child restraint system, make sure to install it to a rear seat.

If installing the child restraint system to the front passenger seat is unavoidable, refer to Installing a child restraint system to the front passenger's seat $(\rightarrow P.40)$.

Use a child restraint system appropriate for the size of the child. Never use an incorrectly sized child restraint system.



Before installing a child restraint system, make sure to read the user's manual included with it.

Installing an ISOFIX/i-Size compatible child restraint system

This vehicle is equipped with ISOFIX lower anchorages. Therefore, ISOFIX compatible child restraint systems can quickly and easily be installed.

Installation using ISOFIX lower anchorages

Install the child restraint system according to the user's manual included with it.

In the following situations, refer to the "vehicle compatibility list" from the manufacturer of the child restraint system, or contact your Lexus dealer or the retailer of the child restraint system.

- When the child restraint system is not a "universal" category child restraint system
- When it is unknown if the child restraint system is a "universal" category child restraint system or not

WARNING

Observe the following when installing a child restraint system.

- After installing a child restraint system, do not adjust the seat.
- When using the lower anchorages, make sure that the area around the anchors is free
 of objects and that the seat belt will not be caught behind the child restraint system.
- Securely install the child restraint system according to the user's manual of the child restraint system.

If a head restraint interferes with a child restraint system

When installing a child restraint system, if a head restraint interferes with the child restraint system, remove the head restraint or adjust its position.

Remove the head restraint.

If a head restraint cannot be removed, move it to the uppermost position.

Installing a child restraint system with ISOFIX lower anchorages

Engage the connectors of an ISOFIX compatible child restraint system to the ISOFIX lower anchorages of the vehicle.

Install the child restraint system according to the user's manual included with it.



- 1 Check the positions of the lower anchorages.
- 2 Install the child restraint system to the seat.
- 3 Engage the connectors of the child restraint system to the lower anchorages.
- 4 Install the child restraint system according to the user's manual included with it.
- 5 Shake the installed child restraint system in all directions. Make sure that the child restraint system is securely installed.

Using a top tether anchorage


WARNING

Observe the following when installing a child restraint system.

- Make sure that the top strap is not twisted.
- Make sure that the top strap is engaged to the top tether anchorage.
- Make sure that the top strap is securely attached.
- After installing a child restraint system, do not adjust the seat.
- After installing a child restraint system, do not adjust the head restraint.
- Securely install the child restraint system according to the user's manual of the child restraint system.

Attach the top strap of the child restraint system to the top tether anchorage of the vehicle.

Install the child restraint system according to the user's manual included with it.

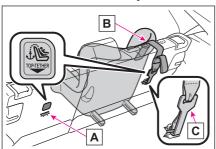

- A Top tether anchorages
- B Top strap
- C Hook
- Remove the head restraint.

If the head restraint cannot be removed, move it to the uppermost position. Route the top strap under the head restraint.

- 2 Engage the hook to the top tether anchorage.
- 3 Tighten the top strap to secure the hook.
 Make sure that the top strap is tight and the hook is securely engaged.

Installing a child restraint system with a seat belt

Install the child restraint system according to the user's manual included with it.

In the following situations, refer to the "vehicle compatibility list" from the manufacturer of the child restraint system, or contact your Lexus dealer or the retailer of the child restraint system.

- When the child restraint system is not a "universal" category child restraint system
- When it is unknown if the child restraint system is a "universal" category child restraint system or not

WARNING

Observe the following when installing a child restraint system.

• After installing a child restraint system, do not adjust the seat.

WARNING

 Securely install the child restraint system according to the user's manual of the child restraint system.

If a head restraint interferes with a child restraint system

When installing a child restraint system, if a head restraint interferes with the child restraint system, remove the head restraint or adjust its position.

Remove the head restraint.

If a head restraint cannot be removed, move it to the uppermost position.

Installing a child restraint system with a seat belt

When installing a child restraint system which is not ISOFIX/i-Size compatible, use a seat belt to install it.

Install the child restraint system according to the user's manual included with it.



WARNING

Observe the following when installing a child restraint system with a seat belt.

- Do not allow children to play with the seat belt. If the seat belt becomes twisted around
 a child's neck, it may lead to choking or other serious injuries that could result in death.
 If this occurs and the buckle cannot be unfastened, scissors should be used to cut the
 helt
- When using a junior seat, make sure that the shoulder belt is securely positioned over the child's shoulder.
- After installing a child restraint system, do not adjust the seat.
- Make sure that the seat belt plate and buckle are securely fastened.
- Make sure that the seat belt is not twisted.
- Securely install the child restraint system according to the procedure in the user's manual of the child restraint system.

WARNING

- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- 1 Pass the seat belt through the child restraint system.


Install the child restraint system according to the user's manual included with it.

2 Insert the plate into buckle until a sound is heard.

Make sure that the belt is not twisted.

3 Check that the seat belt is secure.

You may need a locking clip to install the child restraint system. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer: Locking clip for child restraint system (Part No. 73119-22010)

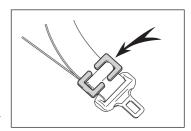

4 After installing the child restraint system, rock it back and forth to ensure that it is installed securely.

Make sure that the child restraint system is securely installed.

Removing a child restraint system that is installed with a seat belt

If a child restraint system is installed with a seat belt, release the seat belt to remove it.

Press the buckle release button.

When the buckle is released, the child restraint system may spring up. Make sure to hold down the child restraint system when releasing the buckle.

2 Remove the seat belt from the child restraint system.


The seat belt will be retracted automatically.

Installing a child restraint system to the front passenger's seat

Do not install a child restraint system to the front passenger's seat unless it is unavoidable. In the event of an accident, the force of deployment of an SRS airbag can cause death or serious injury to a child.

If installation of a child restraint system to the front passenger's seat is unavoidable, adjust the front passenger's seat as follows:

- Move the seat to the rearmost position
- Move the seat to the uppermost position
- Adjust the seatback angle to the most upright position.
 Adjust the seatback angle of the front passenger's seat until good contact is achieved.
- Remove the head restraint
 If the head restraint cannot be removed, move it to the uppermost position.

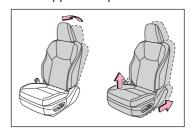

WARNING

 There is a label(s) on the passenger side sun visor, indicating it is forbidden to attach a rear-facing child restraint system to the front passenger seat.



When installing a child restraint system to the front passenger's seat, move the seat as
far back as possible. In the event of an accident, the force of deployment of an SRS
airbag can cause death or serious injury to a child.

WARNING

- Make sure that the child's body will not contact the doors, roof side rails, or pillars. In
 the event of an accident, the force of deployment of an SRS airbag can cause death or
 serious injury to a child.
- When using a junior seat, make sure that the seat belt is worn correctly.
- Choose a child restraint system appropriate to the age and size of the child.

Installing a child restraint system to the front passenger's seat

 Make sure to appropriately adjust the front passenger's seat before installing the child restraint system.


Install the child restraint system according to the user's manual included with it.

Airbag manual on-off system

This system deactivates the following airbags.

SRS front passenger airbag

Only deactivate the airbags when using a child restraint system on the front passenger seat.

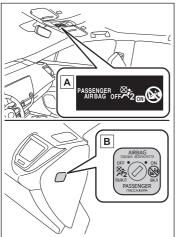

- A "PASSENGER AIR BAG" indicator

 "PASSENGER AIR BAG" and "ON" indicator light turns on when the airbag system is on, and about after 60 seconds they go off. (only when the engine switch is in ON).
- B Airbag manual on-off switch

☐ INFORMATION

■ "PASSENGER AIR BAG" indicator information

If any of the following problems occur, it is possible that there is a malfunction in the system.

Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

- The "OFF" indicator does not illuminate when the airbag manual on-off switch is set to "OFF".
- The indicator light does not change when the airbag manual on-off switch is switched to "ON" or "OFF".

WARNING

When installing a child restraint system

For safety reasons, always install a child restraint system in a rear seat. In the event that the rear seat cannot be used, the front seat can be used as long as the airbag manual on-off system is set to "OFF". If the airbag manual on-off system is left on, the strong impact of the airbag deployment (inflation) may cause serious injury or even death.

WARNING


■ When a child restraint system is not installed on the front passenger seat

Ensure that the airbag manual on-off system is set to "ON". If it is left off, the airbag may not deploy in the event of an accident, which may result in serious injury or even death.

Deactivating the airbags for the front passenger


• Insert the mechanical key into the cylinder and turn to the "OFF" position.

The "OFF" indicator light turns on (only when the engine switch is in ON).

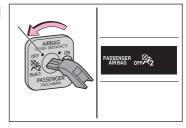

Key types

The following keys are provided with the vehicle.

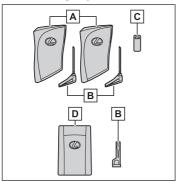

- A Electronic keys
 - Operating the smart entry & start system
 - Operating the wireless remote control function
- B Mechanical keys
- C Key number plate
- D Card key (electronic key)*

Operating the smart entry & start system

⚠ NOTICE

■ To prevent key damage

Observe the following precautions

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for long periods of time.
- Do not get the keys wet or wash them in an ultrasonic washer, etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not disassemble the keys.
- Do not attach a sticker or anything else to the surface of the electronic key.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems and induction cookers, or medical electrical equipment, such as low-frequency therapy equipment.

Carrying the electronic key on your person

Carry the electronic key 10 cm (3.9 in.) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 10 cm (3.9 in.) of the electronic key may interfere with the key, causing the key to not function properly.

Handling the card key

If the battery or card key terminals get wet, the battery may corrode and the card key
may stop working. If the key is dropped into water, or if drinking water, etc., is spilled on
the key, immediately remove the battery cover and wipe the battery and terminals. (To
remove the battery cover, lightly grasp and pull it.) If the battery is corroded, have any

^{*:} If equipped

∧ NOTICE


authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer replace the battery.

- Do not crush the battery cover or use a screwdriver to remove the battery cover.
 Forcibly removing the battery cover may bend or damage the key.
- If the battery cover is frequently removed, the battery cover may become loose.
- When installing the battery, make sure to check the direction of the battery. Installing
 the battery in the wrong direction may cause the battery to deplete rapidly.
- The surface of the card key may be damaged, or its coating may peel off in the following situations:
 - The card key is carried together with hard objects, such as coins and keys.
 - The card key is scraped with a sharp object, such as the tip of a mechanical pencil.
 - The surface of the card key is wiped with thinner or benzene.

☐ INFORMATION

■ Handling the card key

- The mechanical key that is stored inside the card key should be used only if a problem arises, such as when the card key does not operate properly.
- If the battery cover is not installed and the battery falls out or if the battery was removed because the key got wet, reinstall the battery with the positive terminal facing the Lexus emblem.

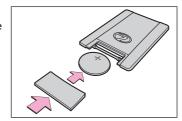

The card key is not waterproof.

■ When riding in an aircraft

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag, etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.

■ Electronic key battery depletion

- The standard battery life is 1 to 2 years (The card key battery life is about 1 year.).
- If the battery becomes low, an alarm will sound in the cabin when the engine stops.

1-3. Entering/exiting the vehicle and loading luggage

- As the electronic key always receives radio waves, the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Replace the battery when necessary.
 - The smart entry & start system or the wireless remote control does not operate.
 - The detection area becomes smaller.
 - The LED indicator on the key surface does not turn on.
- To avoid serious deterioration, do not leave the electronic key within 1 m (3 ft.) of the following electrical appliances that produce a magnetic field:
 - TVs
 - Personal computers
 - Cellular phones, cordless phones and battery chargers
 - Table lamps
 - Induction cookers
 - Table lamps

■ Battery-saving function

The battery-saving function will be activated in order to prevent the electronic key battery and the battery from being discharged while the vehicle is not in operation for a long time.

 
- In the following situations, the smart entry & start system may take some time to unlock the doors.
 - The electronic key has been left in an area of approximately 3.5 m (11 ft.) of the outside of the vehicle for 10 minutes or longer.
 - ullet The smart entry & start system has not been used for 5 days or longer.
- If the smart entry & start system has not been used for 14 days or longer, the doors
 cannot be unlocked at any doors except the driver's door. In this case, take hold of
 the driver's door handle, or use the wireless remote control or the mechanical key, to
 unlock the doors.

■ Electronic key battery-saving mode

When battery-saving mode is set, battery depletion is minimized by stopping the electronic key from receiving radio waves.

While pressing and holding Ω on the electronic key, press Ω twice. The indicator on the electronic key will flash 4 times and battery-saving mode will be entered.

The smart entry & start system cannot be used while the electronic key is in battery-saving mode. Battery saving mode can be cancelled by pressing any switch on the electronic key.



■ Confirmation of the registered key number

The number of keys already registered to the vehicle can be confirmed. Ask any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details.

■ When required to leave the vehicle's key with a parking attendant

Lock the glove box as circumstances demand. Remove the mechanical key for your own use and provide the attendant with the electronic key only.

Smart entry & start system

WARNING


Affects influenced by the radio wave (Affect from the Smart entry & start system antennas)

- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the smart entry & start system antennas. The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details, such as the frequency of radio waves and timing of the emitted radio waves. Then, consult your doctor to see if you should disable the entry function.
- Users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

Ask any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details on disabling the entry function.


INFORMATION

Antenna location

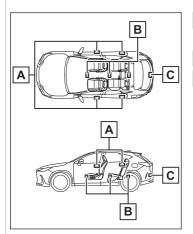

- A Antennas outside the cabin (vehicles with entry function)
- B Antennas inside the cabin
- C Antenna outside the luggage compartment (vehicles with entry function)

■ Effective range (areas within which the electronic key is detected)

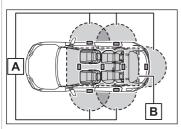

A When locking or unlocking the doors (vehicles with entry function)

The system can be operated when the electronic key is within about $0.7 \, \text{m} \, (2.3 \, \text{ft.})$ of an outside door handle. (Only the doors detecting the key can be operated.)

B When starting the engine or changing engine switch modes

The system can be operated when the electronic key is inside the vehicle.

If an alarm sounds or a warning message is displayed

A combination of exterior and interior alarms as well as warning messages shown on the multi-information display are used to prevent theft of the vehicle and accidents resulting from erroneous operation. Take appropriate measures in response to any warning message on the multi-information display.

The following table describes situations and correction procedures when only an alarm sounds.

When an interior alarm pings repeatedly

Situation: The engine switch was turned to ACC while the driver's door was open (The driver's door was opened when the engine switch was in ACC).

Correction procedure: Turn the engine switch off and close the driver's door.

■ Conditions affecting operation

The smart entry & start system, wireless remote control and immobilizer system use weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart entry & start system, wireless remote control and immobilizer system from operating properly.

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport
 or other facility that generates strong radio waves or electrical noise
- When the electronic key is in contact with, or is covered by the following metallic objects
 - · Cards to which aluminum foil is attached
 - Cigarette boxes that have aluminum foil inside
 - Metallic wallets or bags
 - Coins

- Hand warmers made of metal
- Media such as CDs and DVDs
- When other wireless keys (that emit radio waves) are being used nearby
- When carrying the electronic key together with the following devices that emit radio waves
 - Portable radio, cellular phone, cordless phone or other wireless communication devices
 - Another vehicle's electronic key or a wireless key that emits radio waves
 - Personal computers or personal digital assistants (PDAs)
 - Digital audio players
 - Portable game systems
- If window tint with a metallic content or metallic objects are attached to the rear window
- When the electronic key is placed near a battery charger or electronic devices
- When the vehicle is parked in a pay parking spot where radio waves are emitted Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
- The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
- The electronic key is near the ground or in a high place, or too close to the rear bumper center when the back door is opened.
- The electronic key is on the instrument panel, rear package tray or floor, or in the door pockets or glove box when the engine is started or engine switch modes are changed.

■ Note for the entry function

- Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave reception conditions, it may be detected by the antenna outside the cabin and the door will become lockable from the outside, possibly trapping the electronic key inside the vehicle.
- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone.
- Even if the electronic key is not inside the vehicle, it may be possible to start the hybrid system if the electronic key is near the window.
- The doors may unlock if a large amount of water splashes on the door handle, such as
 in the rain or in a car wash when the electronic key is within the effective range. (The
 door will automatically be locked after approximately 30 seconds if the doors are not
 opened and closed.)

- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)
- Touching the door lock sensor while wearing gloves may delay or prevent lock operation. Remove the gloves and touch the lock sensor again.
- When the lock operation is performed using the lock sensor, recognition signals will be shown up to two consecutive times. After this, no recognition signals will be given.
- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:
 - Place the electronic key in a location 2 m (6 ft.) or more away from the vehicle.
 (Take care to ensure that the key is not stolen.)
 - Set the electronic key to battery-saving mode to disable the smart entry & start system.
- If the electronic key is inside the vehicle and a door handle becomes wet during a
 car wash, a message may be shown on the multi-information display and a buzzer will
 sound outside the vehicle. To turn off the alarm, lock all the doors.
- The lock sensor may not work properly if it comes into contact with ice, snow, mud.
 Clean the lock sensor and attempt to operate it again.
- A sudden approach to the effective range or door handle may prevent the doors from being unlocked. In this case, return the door handle to the original position and check that the doors unlock before pulling the door handle again.
- If there is another electronic key in the detection area, it may take slightly longer to unlock the doors after the door handle is gripped.

■ When the vehicle is not driven for extended periods

- To prevent theft of the vehicle, do not leave the electronic key within 2 m (6 ft.) of the vehicle.
- The smart entry & start system can be deactivated in advance.
- Setting the electronic key to battery-saving mode helps to reduce key battery depletion.

■ To operate the system properly

Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention may not operate.)

---- Related Links --

Customizable features (P. 650)

Opening/closing the doors

WARNING

Precautions for when driving

Observe the following precautions while driving.

- Make sure that all of the doors are closed and locked.
- Do not press an inside door opener switch while driving.
 Be especially careful with the driver's door, as it can be opened even when the doors are locked.
- When a child is riding in a rear seat, set the child protector locks to prevent the rear doors from being opened from inside the vehicle.

Precautions for when opening or closing a door

When opening or closing a door, check the surrounding area and hold the door handle tightly.

- When on a slope
- When the space between a door and a wall, etc. is small
- When in an area with strong winds

Door lock buzzer

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously for 5 seconds. Fully close the door to stop the buzzer, and lock the vehicle once more.

■ Open door warning buzzer

If the vehicle speed reaches 5 km/h (3 mph), the master warning light flashes and a buzzer sounds to indicate that door(s) or the hood in not fully closed. The open door(s) or hood is displayed on the multi-information display.

Rear seat reminder function

In order to remind you not to forget luggage, etc. in the rear seat, when the engine switch is turned off after any of the following conditions are met, a buzzer will sound and a message will be displayed on the multi-information display for approximately 6 seconds.

- The engine is started within 10 minutes after opening and closing a rear door.
- A rear door has been opened and closed after the engine was started.
 However, if a rear door is opened and then closed within approximately 2 seconds, the rear seat reminder function may not operate.

1-3. Entering/exiting the vehicle and loading luggage

The rear seat reminder function determines that luggage, etc. has been placed in a rear seat based on opening and closing of a rear door. Therefore, depending on the situation, the rear seat reminder function may not operate and you may still forget luggage, etc. in the rear seat, or it may operate unnecessarily.

• The rear seat reminder function can be enabled/disabled.

- Related Links -

Key types(P. 44)

Locking/unlocking the doors(P. 57)


Using the mechanical key(P. 582)

If a door cannot be opened using the door opener switch(P. 589)

Customizable features (P. 650)

Opening the doors

▶ Outside the vehicle

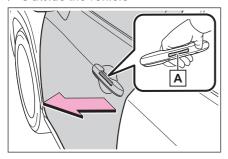

When the doors are locked:

While carrying an electronic key, press the door opener switch \blacksquare of the door handle and open the door.


Make sure to securely press the door opener switch old A on the inner side of the door handle with the electronic key within the detection area.

When the doors are unlocked:

Press the door opener switch **A** of the door handle to open the door.

Make sure to securely press the door opener switch $\boxed{\mathbf{A}}$ on the inner side of the door handle.

▶ Inside the vehicle

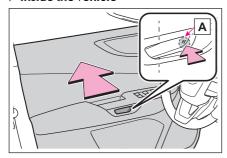

Driver's door:

Even if the door is locked, pressing the front side of the door opener switch $\boxed{\mathbf{A}}$ will open the door.

The door will unlock and the door lock indicator will turn off.

Passenger doors:

Press the door lock switch to unlock the door, and then pressing the front side of the door opener switch $\boxed{\mathbf{A}}$ to open the door.

The door will unlock and the door lock indicator will turn off.

■ Inside door opener switch operating conditions

When any of the following conditions are met:

- lacktriangle The vehicle speed is less than 4 km/h (2 mph) and the parking brake is engaged
- The vehicle speed is less than 4 km/h (2 mph) and the brake pedal is depressed
- The shift position is in P

■ When opening a door from inside the vehicle

Open the door pressing the door opener switch.


If the door is not fully unlatched, press the door opener switch twice to open the door.

Manual release handles inside the vehicle

The door opener switches inside the vehicle can also be used to manually open the doors.

1-3. Entering/exiting the vehicle and loading luggage

A door can be opened through electronic operation by pressing a the door opener switch, or it can be opened using the door opener switch as a manual release handle and pulling it twice.

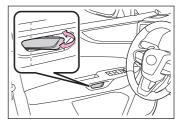

Locking/unlocking the doors

☐ INFORMATION

■ Impact detection door lock release system

If the vehicle is involved in a severe frontal or rear collision, manual release handle operation will be enabled for all of the doors.

Operation signals

Unlocking is indicated by the emergency flashers flashing. (twice)

Locking is indicated by the emergency flashers flashing. (Once)


■ Security feature

If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

Using the smart entry & start system (vehicles with entry function)

Locking/unlocking the doors using smart entry & start system

The driver should always carry an electronic key (or the card key) on their person, for example in their pocket.

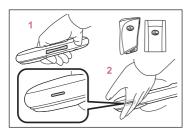

- 1 Grip the door handle to unlock the doors.*1 Make sure to touch the sensor on the back of the handle.
 - The doors cannot be unlocked for 3 seconds after the doors are locked.
- 2 Touch the lock sensor (the indentation on the surface of the door handle) to lock the doors.

Check that the door is securely locked.

Locking the doors will set the alarm* system.


■ When the door cannot be locked even though the lock sensor has been touched with a finger

Touch the lock sensor with the palm of your hand.

^{*1:} The door unlock settings can be changed.

^{*:} If equipped

When gloves are being worn, remove the gloves.

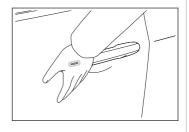

Switching the door unlock function

It is possible to set which doors the entry function unlocks using the wireless remote control.

- 1 Turn the engine switch off.
- 2 Cancel the intrusion sensor* and tilt sensor* of the alarm system to prevent unintended triggering of the alarm while changing the settings.
- 3 When the indicator light on the key surface is not on, press and hold $\widehat{f n}$ or



for approximately 5 seconds while pressing and holding $oldsymbol{\Omega}$.

The setting changes each time an operation is performed, as shown below. (When changing the setting continuously, release the buttons, wait for at least 5 seconds, and repeat step 3.)

Multi-information display/Beep	Unlocking function
1	Holding the driver's door handle unlocks only the driver's door.
Exterior: Beeps 3 times Interior: Pings once	Holding any of the passenger door handles unlocks all the doors.
Exterior: Beeps twice Interior: Pings once	Holding a door handle unlocks all the doors.


To prevent unintended triggering of the alarm, unlock the doors using the wireless remote control and open and close a door once after the settings have been changed.

^{*:} If equipped

(If a door is not opened within 30 seconds after is \mathbf{n} pressed, the doors will be locked again and the alarm will automatically be set.) In a case that the alarm is triggered, immediately stop the alarm.

Operations using the wireless remote control


Lock/unlock the doors using wireless remote control

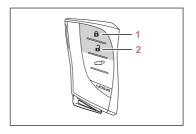

- Locks all the doors
 Check that the door is securely locked.
- 2 Unlocks all the doors

Using the door lock switches

Locking/unlocking the doors with the door lock switches

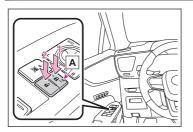

- 1 Press the 🔒 switch.
 - All of the doors will lock.
 - The indicator A comes on.
- 2 Press the a switch.
 - All of the doors will unlock.
 - The indicator A turns off.

Close & lock (walk away) *function

When the power back door is open, all of the doors will be locked when the power back door is closed.

■ Close & lock (walk away) function operating conditions

This function can be operated when all of the following conditions are met:

- An electronic key is not detected within the vehicle.
- All of the doors other than the power back door are closed.
- The brake pedal is not depressed.

^{*:} If equipped

• The engine switch is off.

■ Hands free close & lock (walk away) function operating conditions

This function can be operated when all of the following conditions are met:


- The hands free close & lock function setting is on.
- The Hands Free Power Back Door operating conditions are met.
- An electronic key is not detected within the vehicle.
- All of the doors other than the power back door are closed.
- The brake pedal is not depressed.
- The engine switch is off.

■ Situations in which the close & lock (walk away) function may not operate properly

In the following situations, the close & lock function may not operate properly:

- If the switch on the lower part of the power back door is pressed by a hand which is holding an electronic key
- If the switch on the lower part of the power back door is pressed when the electronic key is in a bag, etc. that is placed on the ground
- If the switch on the lower part of the power back door is pressed with the electronic key not near the vehicle

Closing the back door and lock all of the doors

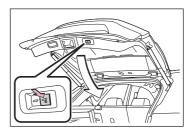

Perform the following procedure with no electronic keys for this vehicle inside the vehicle. When the power back door is closed, all of the doors will lock.

Using the switch:

2 While carrying an electronic key, press the switch on the lower part of the power back door.

When you move away from the power back door, it will automatically fully close.

If the power back door is approached while carrying an electronic key, the closing operation will stop.

A different buzzer than normal will sound. When the power back door is closed, door lock operation signals will indicate that all of the doors have been locked.

Vehicles with Hands Free Power Back Door:*2

3 If the power back door is closed using a hands free power back door close operation while carrying an electronic key, all of the doors will be locked at the same time.

When you move away from the power back door, it will automatically fully close.

If the power back door is approached while carrying an electronic key, the closing operation will stop.

A different buzzer than normal will sound. When the power back door is closed, door lock operation signals will indicate that all of the doors have been locked.

WARNING

When closing the power back door using the close & lock function, a different buzzer than the normal one will sound before the operation begins.

To check that the operation has started correctly, check that a different buzzer than the normal one has sounded.

Additionally, when the power back door is fully closed and locked, operation signals will indicate that all of the doors have been locked.

Before leaving the vehicle, make sure that the operational signals have operated and that all of the doors are locked.

^{*2:} This setting must be customized at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Theft deterrent system

This vehicle is equipped with an engine immobilizer system and alarm system to help prevent vehicle theft. The engine immobilizer is a system which helps prevent intrusion into the vehicle and starting of the engine using keys other than a key registered to this vehicle. Through a transponder chip built into the keys, registered keys can be recognized over unauthorized copies. The alarm uses light and sound to give an alert when an intruder is detected.

Note for the entry function

The engine immobilizer system is designed to help prevent vehicle theft but does not guarantee absolute security against all vehicle thefts.

System maintenance

The engine immobilizer system and alarm system are maintenance-free.

■ Triggering of the alarm

The alarm may be triggered in the following situations:

- The doors are unlocked using the mechanical key.
- A person inside the vehicle opens a door or the hood, or unlocks the vehicle using the lock lever on an inside door handle.
- The battery is recharged or replaced when the vehicle is locked.
- A locked door is unlocked or opened in any way other than using the entry function, wireless remote control or mechanical key. (The doors will lock again automatically.)
- The hood is opened from outside of the vehicle.
- The intrusion sensor detects something moving inside the vehicle. (Example: an intruder breaks a window and gets into the vehicle.)
- The tilt sensor* detects a change of vehicle inclination.

Alarm-operated door lock function operating conditions

In the following cases, depending on the situation, the door may automatically lock to prevent improper entry into the vehicle:

- When a person remaining in the vehicle unlocks the door and the alarm is activated.
- While the alarm is activated, a person remaining in the vehicle unlocks the door.
- When recharging or replacing the battery.

^{*:} If equipped

Enable the engine immobilizer system


⚠ NOTICE

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

Turn the engine switch off.

When the engine immobilizer system is enabled, the security indicator flashes to indicate that the system is operating.

Never leave the keys inside the vehicle when you leave the vehicle.

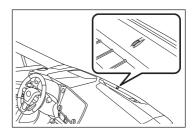

INFORMATION

Cancel the engine immobilizer system

While carrying a key registered to the vehicle, change the engine switch to ACC or ON. The engine immobilizer system will be cancelled and the security indicator will turn off.


Double locking system and its performance

The double locking system helps prevent intrusion into the vehicle by disabling unlocking of the doors from inside and outside of the vehicle.

WARNING

Never activate the double locking system when there are people in the vehicle, because all the doors cannot be opened from inside the vehicle.

Vehicles employing this system have labels on the window glass of both front doors.

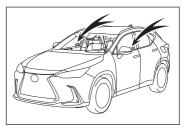

Setting the double locking system

Turn the engine switch off, have all the passengers exit the vehicle and ensure that all the doors are closed.

1-3. Entering/exiting the vehicle and loading luggage

Using the entry function: Touch the sensor area on the outside door handle twice within 5 seconds.

Using the wireless remote control: Press $\mathbf{1}$ twice within 5 seconds.

The double locking system will be set.

Canceling the double locking system

Using the entry function: Hold the outside door handle, press the power back door switch or move your foot under the center of the rear bumper (vehicles with Hands Free Power Back Door).

Using the wireless remote control: Press 1.

Setting the alarm system

Make sure of the following before setting the alarm:

- Nobody is in the vehicle.
- The windows and moon roof are closed before the alarm is set.
- No valuables or other personal items are left in the vehicle.


M NOTICE

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

Close the doors and hood, and lock all the doors using the entry function* or wireless remote control. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

If all doors are closed with hood open, alarm system can be set.

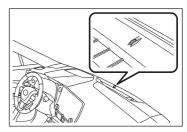

Canceling/stopping the alarm system

Do one of the following to deactivate or stop the alarms:

- Unlock the doors using the entry function or wireless remote control.
- Start the engine.

The alarm will be deactivated or stopped after a few seconds.

^{*:} If equipped

Intrusion sensor and tilt sensor*

The intrusion sensor detects intruders or movement in the vehicle. The tilt sensor detects changes in vehicle inclination, such as when the vehicle is towed away. This system is designed to deter and prevent vehicle theft but does not guarantee absolute security against all intrusions.




To ensure correct operation of the intrusion sensor, observe the following.

 Do not spray air fresheners or other products directly into the sensor holes.



Do not touch or cover the sensors.

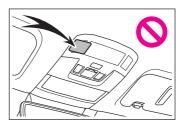

- Do not install accessories other than genuine Lexus parts or leaving objects between the driver's seat and front passenger's seat. Otherwise, the detection performance may reduce.
- The intrusion sensor may be canceled when the electronic key is near the vehicle.

☐ INFORMATION

Intrusion sensor detection considerations

The sensor may trigger the alarm in the following situations:

- People or pets are in the vehicle.
- A window or the moon roof is open. In this case, the sensor may detect the following:
 - Wind or the movement of objects such as leaves and insects inside the vehicle
 - Ultrasonic waves emitted from devices such as the intrusion sensors of other vehicles

^{*:} If equipped

1-3. Entering/exiting the vehicle and loading luggage

- The movement of people outside the vehicle
- Small insects such as moths or flies are in the vehicle.
- Unstable items, such as dangling accessories or clothes hanging on the coat hooks, are in the vehicle.
- The vehicle is parked in a place where extreme vibrations or noises occur, such as in a parking garage.
- Ice or snow is removed from the vehicle, causing the vehicle to receive repeated impacts or vibrations.
- The vehicle is inside an automatic or high-pressure car wash.
- The vehicle experiences impacts, such as hail, lightning strikes, and other kinds of repeated impacts or vibrations.

■ Tilt sensor detection considerations

The sensor may trigger the alarm in the following situations:

- The vehicle is transported by a ferry, trailer, train, etc.
- The vehicle is parked in a parking garage.
- The vehicle is inside a car wash that moves the vehicle.
- Any of the tires loses air pressure.
- The vehicle is jacked up.
- An earthquake occurs or the road caves in.
- Cargo is loaded onto or unloaded from the roof luggage carrier.

Related Links -

Customizable features (P. 650)

Set the intrusion sensor and tilt sensor

The intrusion sensor and tilt sensor will be set automatically when the alarm is set.

Cancel the intrusion sensor and tilt sensor

If you are leaving pets or other moving things inside the vehicle, make sure to disable the intrusion sensor and tilt sensor before setting the alarm, as they will respond to movement inside the vehicle.

The alarm will still be set even when the intrusion sensor and tilt sensor are canceled.

- 1 Touch the Shortcut screen switch.
- 2 Touch the 👟.

Operation of the intrusion sensor and tilt sensor will be canceled, and a message will be displayed on the multi-information display in the instrument cluster.

Touch the switch again to set the intrusion / tilt sensor again.

A message will be shown on the multi-information display in the instrument cluster.

Automatic re-enabling of the intrusion sensor and tilt sensor

- After the intrusion sensor and tilt sensor are canceled, unlocking the doors using the entry function or wireless remote control will re-enable the intrusion sensor and tilt sensor.
- The intrusion sensor and tilt sensor will automatically be re-enabled when the alarm system is reactivated.

Loading the vehicle with luggage

Precautions for loading luggage into the luggage compartment

WARNING

Storage precautions

Observe the following precautions.

Failure to do so may prevent the pedals from being depressed properly, may block the driver's vision, or may result in items hitting the driver or passengers, possibly causing an accident.

- The following things may cause a fire if loaded in the luggage compartment:
 - Receptacles containing gasoline
 - Aerosol cans
- Stow cargo and luggage in the luggage compartment whenever possible.
- Do not stack cargo and luggage in the luggage compartment higher than the seatbacks.
- When you fold down the rear seats, long items should not be placed directly behind the front seats.
- Never allow anyone to ride in the luggage compartment.

It is not designed for passengers.

They should ride in their seats with their seat belts properly fastened.

- Do not place cargo or luggage in or on the following locations.
 - At the feet of the driver
 - On the front passenger or rear seats (when stacking items)
 - On the luggage cover
 - On the instrument panel
 - On the dashboard
- Secure all items in the occupant compartment.

Precautions for luggage weight and distribution

- Do not overload your vehicle.
- Load the vehicle as evenly as possible.

If the vehicle is loaded unevenly, the load on each tire will differ. This will lead to a decrease in handling ability and brake performance, possibly leading to an accident.

WARNING

When using a roof luggage carrier (vehicles with roof rails)

Observe the following precautions:

- Place the cargo so that its weight is distributed evenly between the front and rear axles.
- If loading long or wide cargo, never exceed the vehicle overall length or width.
- Before driving, make sure the cargo is securely fastened on the roof luggage carrier.
- Loading cargo on the roof luggage carrier will make the center of gravity of the vehicle higher.

Avoid high speeds, sudden starts, sharp turns, sudden braking, or abrupt maneuvers. The vehicle may not be able to be controlled correctly and may rollover.

- If driving for a long distance, on rough roads, or at high speeds, stop the vehicle now and then during the trip to make sure the cargo remains in its place.
- Do not exceed 80 kg (176.3 lb.) cargo weight on the roof luggage carrier.

⚠ NOTICE

Do not set luggage on the moon roof and panoramic roof. Failure to observe so may lead to cause damage.

Back door functions and operation

The back door can be locked/unlocked and opened/closed by the following procedures.

WARNING

Before driving the vehicle

Observe the following precautions.

Before driving the vehicle, make sure that the back door is fully closed. If the back door is not fully closed, it may open unexpectedly while driving, causing an accident.

Caution while driving

- Keep the back door closed while driving.
 - If the back door is left open, it may hit nearby objects while driving or luggage may be unexpectedly thrown out, causing an accident.
 - In addition, exhaust gases may enter the vehicle, causing death or a serious health hazard. Make sure to close the back door before driving.
- Never let anyone sit in the luggage compartment.

WARNING

In the event of sudden braking, sudden swerving or a collision, they are susceptible to death or serious injury.

When children are in the vehicle

Observe the following precautions.

- Do not allow children to play in the luggage compartment.
 If a child is accidentally locked in the luggage compartment, they could have heat exhaustion or other injuries.
- Do not allow a child to open or close the back door.
 Doing so may cause the back door to move unexpectedly, or cause the child's hands, arms, head, or neck to be caught by the closing back door.

Operating the back door

Observe the following precautions.

- Remove any heavy loads, such as snow and ice, from the back door before opening it.
 Failure to do so may cause the back door to suddenly shut again after it is opened.
- When opening or closing the back door, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- Use caution when opening or closing the back door in windy weather as it may move abruptly in strong wind.
- Vehicles without power back door: The back door may suddenly shut if it is not
 opened fully. It is more difficult to open or close the back door on an incline than
 on a level surface, so beware of the back door unexpectedly opening or closing by
 itself. Make sure that the back door is fully open and secure before using the luggage
 compartment.
- Vehicles with power back door: The back door may suddenly shut if it is not opened fully. It is more difficult to open or close the back door on an incline than on a level surface, so beware of the back door unexpectedly opening or closing by itself. Make sure that the back door is fully open and secure before using the luggage compartment.
- When closing the back door, take extra care to prevent your fingers, etc., from being caught.
- When closing the back door, make sure to press it lightly on its outer surface. If the back door handle is used to fully close the back door, it may result in hands or arms being caught.

- Do not pull on the back door damper stay (vehicles without power back door) or back door spindle (vehicles with power back door) to close the back door, and do not hang on the back door damper stay (vehicles without power back door) or back door spindle (vehicles with power back door). Doing so may cause hands to be caught or the back door damper stay (vehicles without power back door) or back door spindle (vehicles with power back door) to break, causing an accident.
- If a bicycle carrier or similar heavy object is attached to the back door, it may suddenly shut again after being opened, causing someone's hands, arms, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Lexus part is recommended.

Back door closer (vehicles with power back door)

- In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position. It takes several seconds before the back door closer begins to operate. Be careful not to catch fingers or anything else in the back door, as this may cause bone fractures or other serious injuries.
- Be careful not to catch fingers or anything else when using the back door closer as it still operates when the power back door system is canceled.

Power back door

Observe the following precautions.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- If anyone is in the vicinity, make sure they are safe and let them know that the power back door is about to open or close.
- If the power back door system is disabled while the power back door is operating, the
 power back door will stop operating. The power back door must then be operated
 manually. Take extra care in this situation, as the power back door may open or close
 suddenly.
- If the operating conditions of the power back door are no longer met, a buzzer may sound and the power back door may stop opening or closing. The power back door must then be operated manually. Take extra care on an incline in this situation, as the power back door may move suddenly.
- On an incline, the power back door may suddenly shut after it opens. Make sure the power back door is fully open and secure.
- In the following situations, the power back door may detect an abnormality and automatic operation may be stopped. In this case, the power back door must then be operated manually. Take extra care in this situation, as the stopped power back door may suddenly open or close, causing an accident.

- When the power back door contacts an obstacle
- When the battery voltage suddenly drops, such as when the engine switch is turned to ON or the engine is started during automatic operation
- If a bicycle carrier or similar heavy object is attached to the power back door, the power back door may not operate, causing a malfunction, or the power back door may suddenly shut again after being opened, causing someone's hands, arms, head or neck to be caught and injured. When installing an accessory part to the power back door, using a genuine Lexus part is recommended.

■ Jam protection function (vehicles with power back door)

Observe the following precautions.


- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the power back door fully closes. Be careful not to get fingers caught or anything else.
- The jam protection function may not work depending on the shape of the object that is caught. Be careful not to catch fingers or anything else.

⚠ NOTICE

Precautions for the back door spindles (vehicles with the power back door)

The back door is equipped with spindles **A** that hold the back door in place.

Observe the following precautions. Failure to do so may cause damage to the back door spindle $\boxed{\mathbf{A}}$, resulting in malfunction.

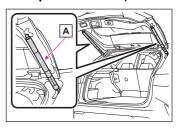


- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the spindle rod.
- Do not touch the spindle rod with gloves or other fabric items.
- Do not attach heavy accessories to the back door.
 When attaching, ask any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details.
- Do not place your hand on the spindle or apply lateral forces to it.

⚠ NOTICE

■ Precautions for the back door damper stays (vehicles without the power back door)

The back door is equipped with damper stays A that hold the back door in place. Observe the following precautions. Failure to do so may cause damage to the back door damper stay A resulting in malfunction.

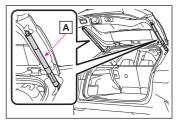

- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the damper stay rod.
- Do not touch the damper stay rod with gloves or other fabric items.
- Do not attach any accessories other than genuine Lexus parts to the back door.
- Do not place your hand on the damper stay or apply lateral forces to it.
- To prevent malfunction of the power back door and back door closer (vehicles with the power back door)

Observe the following precautions. Failure to do so may lead to malfunction of the power back door or back door closer.

- Do not apply excessive force to the back door while the back door closer is operating.
- Make sure that there is no ice between the back door and frame that would prevent movement of the back door.
- Take care not to damage the sensors (installed on the right and left edges of the power back door) with a knife or other sharp object.

If the sensor is disconnected, the power back door will not close automatically.

Luggage compartment light

- The luggage compartment light turns on when the back door is opened.
- If the luggage compartment light is left on when the engine switch is turned off, the light will go off automatically after 20 minutes.

Power back door operating conditions

With the power back door operations set to ON, it can automatically open and close for the following conditions:

When the back door is unlocked.

1-3. Entering/exiting the vehicle and loading luggage

- When the engine switch is in ON, the back door will operate if any of the following conditions are met, in addition to the above conditions:
 - Parking brake is engaged
 - The brake pedal is depressed
 - The shift position is in P

Operation of the power back door (vehicles with the power back door)

In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position.

Whatever the state of the engine switch, the back door closer operates.

Operation of the power back door (vehicles with the power back door)

- A buzzer sounds and the emergency flashers flash twice to indicate that the back door is opening/closing.
- When the power back door operations are OFF, the power back door does not operate but it can be opened and closed by hand.
- When the power back door automatically opens, if an abnormality due to people or objects is detected, operation will stop.


■ When reconnecting the battery (vehicles with the power back door)

To enable the power back door to operate properly, close the back door manually.

■ Jam protection function (vehicles with the power back door)

Sensors are installed in the right and left sides of the power back door.

When the door is automatically closing and the sensors are pushed due to an object being clamped, the jam protection function operates. From that position the door automatically moves a little in the opposite direction and then the function stops.

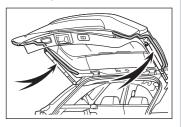

– Related Links -

Customizable features (P. 650)


Operating the back door using the smart entry & start system*1

The back door can be locked/unlocked while carrying an electronic key or the card key. The driver should always carry the electronic key or the card key.

^{*1:} Vehicles with entry function

Locking/unlocking the back door using smart entry & start system*2

Perform the following while carrying an electronic key.

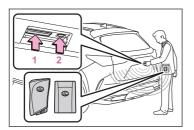

1 Press 1.


All of the doors will unlock. However, the doors cannot be unlocked within 3 seconds after they were locked.

2 Press 2.

All of the doors will lock. Make sure that the doors are securely locked.

Locking/unlocking the back door using the door lock switches

Locking/unlocking the back door using the door lock switches

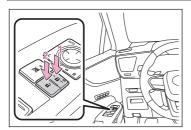

1 Press the 🔝 switch.


All of the doors, including the back door, will lock.

2 Press the a switch.

All of the doors, including the back door, will unlock.

Back door operations using the wireless remote control

Opening/closing the back door using the wireless remote control(vehicles with the power back door)

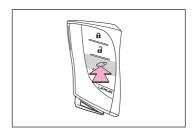




The power back door can be operated when it is unlocked *3 .

The back door will open.

*2: Vehicles with entry function

Lock/unlock the back door using wireless remote control

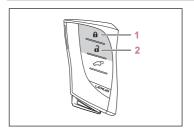

1 Press 🚹.

All of the doors, including the back door, will lock.

Make sure that the doors are securely locked.

2 Press 🔒.

All of the doors, including the back door, will unlock.

Back door operations using the back door operation switch inside the vehicle ${}^{\!\!\!\!\!^{\star}}$

 
Opening/closing the back door from the inside

Press the for 1 second.

A buzzer sounds and the back door automatically opens and closes.

Pressing the while the back door is opening/closing stops the operation.

When the is pressed again during the halted operation, the back door will perform the reverse operation.



Back door operations using the back door switch*


Opening/closing the back door using the back door switch

Press the .

A buzzer sounds and the back door automatically closes.

Pressing the while the back door is closing stops the operation.

Pressing the again will reverse the operation.

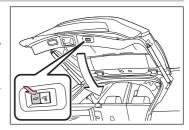

^{*3:} Through a customization setting, the back door can also be operated when it is locked

^{*:} If equipped


Back door operations using the back door opener switch

Open the back door automatically using the back door opener switch(vehicles with power back door)

Press the back door opener switch with the back door unlocked.

A buzzer sounds and the back door automatically opens.

Pressing the switch while the back door is opening stops the operation.

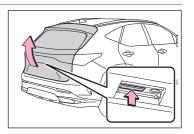


INFORMATION

Open the back door with the back door opener switch when the back door is locked

While carrying the electronic key on your person, press the back door opener switch.

A buzzer sounds and the back door automatically opens.

Open the back door manually using the back door opener switch (vehicles without power back door)

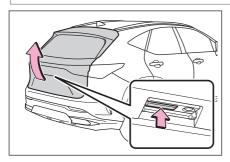

Lift the back door while pressing the back door opener switch.

Back door operations using the back door handle

Closing the back door automatically using the back door handle*4

WARNING

Observe the following when closing the back door.


^{*4:} Vehicles with power back door

- When closing the back door, take extra care to prevent your fingers, etc., from being caught.
- When closing the back door, make sure to press it lightly on its outer surface.
 If the back door handle is used to fully close the back door, it may result in hands or arms being caught.
- Do not pull on the back door spindle to close the back door, and do not hang on the back door spindle.

Doing so may cause hands to be caught or the back door spindle to break, causing an accident.

Pull the back door downward using the back door handle.

A buzzer sounds and the back door automatically closes.

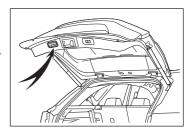

Close the back door manually using the back door handle *5


WARNING

Observe the following when closing the back door.

- When closing the back door, take extra care to prevent your fingers, etc., from being caught.
- If the back door handle is used to fully close the back door, it may result in hands or arms being caught.
- Do not pull on the back door damper stay to close the back door, and do not hang on the back door damper stay.

Doing so may cause hands to be caught or the back door damper stay to break, causing an accident.

^{*5:} Vehicles without power back door

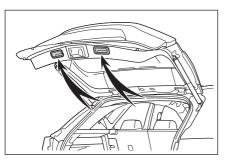

Lower the back door using the back door handle, and make sure to push the back door down from the outside to close it.

Back door operations using the kick sensor*6

⚠ NOTICE

The kick sensor is located behind lower center part of the rear bumper.

Observe the following to ensure that the power back door operates properly:

• Keep the lower center part of the rear bumper clean at all times.

If the lower center part of the rear bumper is dirty or covered with snow, the kick sensor may not operate.

In this situation, clean off the dirt or snow, move the vehicle from the current position and then check if the kick sensor operates.

If it does not operate, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

- Do not apply coatings that have a rain clearing (hydrophilic) effect, or other coatings, to the lower center part of the rear bumper.
- Do not park the vehicle near objects that may move and contact the lower center part
 of the rear bumper, such as grass or trees.

If the vehicle has been parked for a while near objects that may move and contact the lower center part of the rear bumper, such as grass or trees, the kick sensor may not operate.

In this situation, move the vehicle from the current position and then check if the kick sensor operates.

If it does not operate, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Do not subject the kick sensor or its surrounding area to a strong impact.

^{*6:} Vehicles with Hands Free Power Back Door

⚠ NOTICE

If the kick sensor or its surrounding area has been subjected to a strong impact, the kick sensor may not operate properly.

If the kick sensor does not operate in the following situations, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

- The kick sensor or its surrounding area has been subjected to a strong impact.
- The lower center part of the rear bumper is scratched or damaged.
- Do not disassemble the rear bumper.
- Do not attach stickers to the rear bumper.
- Do not paint the rear bumper.
- If a bicycle carrier or similar heavy object is attached to the power back door, disable the kick sensor.

☐ INFORMATION

Kick sensor operating conditions

- When the kick sensor operation setting is turned on
- The electronic key is within the operational range

Situations in which the kick sensor does not operate properly

In the following situations, the kick sensor may not operate properly:

- When a foot remains under the rear bumper.
- If the rear bumper is strongly hit with a foot or is touched for a while If the rear bumper has been touched for a while, wait for a short time before attempting to operate the back door again.
- When operated while a person is too close to the rear bumper.
- When an external radio wave source interferes with the communication between the vehicle and electronic key
- When the vehicle is parked near an electrical noise source which affects the sensitivity of the kick sensor, such as a pay parking spot, gas station, electrically heated road, or fluorescent light
- When the vehicle is near a TV tower, electric power plant, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When a large amount of water is applied to the rear bumper, such as when the vehicle is being washed or in heavy rain

- When mud, snow or ice is attached to the rear bumper
- When the vehicle has been parked for a while near objects that may move and contact the rear bumper, such as plants
- When an accessory is installed to the rear bumper
 If an accessory has been installed, turn the kick sensor operation setting off.

■ Situations in which the kick sensor may operate unintentionally

When an electronic key is in the operation range, the kick sensor may operate unintentionally, so be careful in the following situations.

- When a large amount of water is applied to the rear bumper, such as when the vehicle is being washed or in heavy rain
- When dirt is wiped off the rear bumper
- When a small animal or small object, such as a ball, moves under the rear bumper
- When an object is moved from under the rear bumper
- If someone is swinging their legs while sitting on the rear bumper
- If the legs or another part of someone's body contacts the rear bumper while passing by the vehicle
- When the vehicle is parked near an electrical noise source which affects the sensitivity
 of the kick sensor, such as a pay parking spot, gas station, electrically heated road, or
 fluorescent light
- When the vehicle is near a TV tower, electric power plant, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When the vehicle is parked in a place where objects such as plants are near the rear bumper
- If luggage is set near the rear bumper
- $\ \, \blacksquare$ If accessories or a vehicle cover is installed/removed near the rear bumper
- When the vehicle is being towed

To prevent unintentional operation, turn the kick sensor operation setting off.

Open/close the back door using the kick sensor(vehicles with Hands Free Power Back Door)

WARNING


Observe the following precautions when operating the power back door.

 Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.

 When putting your foot near the lower center part of the rear bumper and moving it from the rear bumper, be careful not to touch the exhaust pipes until they have cooled down sufficiently.

If the exhaust pipes are hot, they can cause burns.

 Do not operate the Hands Free Power Back Door if there is little space under the rear bumper.

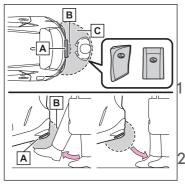

- A Kick sensor
- B Kick sensor detection area
- C Smart entry & start system operation detection area

While carrying an electronic key, stand within the smart entry & start system operation range, approximately 50 to 70 cm (19.7 to 27.6 in.) from the rear bumper.

Move your foot to approximately 10 cm (3.9 in.) from the rear bumper.

Operate the back door without contacting the rear bumper with your foot.

- 3 When a buzzer sounds, move your foot back. A buzzer will sound and the back door will automatically fully open or close.
 - Perform the entire kick operation within 1 second.
 - The back door will not start operating while a foot is detected under the rear bumper.
 - If another electronic key is in the cabin or luggage compartment, it may take slightly longer than normal for the operation to occur.
 - If the buzzer sounds twice, perform a kick operation again.

If a kick operation is performed while the power back door is operating, the power back door will stop.

When all of the doors are locked, if a kick operation is detected by the kick sensor, all of the doors will unlock.

Adjusting the open position of the back door(vehicles with the power back door)

The open position of the power back door can be adjusted.

- 1 Stop the back door in the desirable position.
- 2 Press and hold the switch on the lower part of the back door for approximately 2 seconds.

When the settings are completed, the buzzer sounds 4 times.

When opening the back door the next time, the back door will stop at that position.

Canceling the adjusted open position of the back door

 Press and hold the switch on the lower part of the back door for approximately 7 seconds.

After the buzzer sounds 4 times, it sounds twice more.

When the power back door does the opening operation the next time, the door will open to the initial settings position.

Rear seat seatbacks

Folding the seat backs can be done with either lever or switch operations.

WARNING

When operating the rear seatback

Observe the following precautions.

- Do not operate the rear seat if it is occupied.
- After adjusting the seat, make sure that the seat is locked in position. If the seatback is not securely locked, the red marking will be visible. Make sure that the red marking is not visible.



When a rear seatback is folded

Observe the following precautions.

- Do not fold down the rear seatbacks while driving.
- Stop the vehicle on level ground, apply the parking brake and change the shift position to P.
- Do not allow anyone to sit on a folded rear seatback or in the luggage compartment while driving.
- Do not allow children to enter the luggage compartment.

After adjusting the rear seats

Observe the following precautions.

 Make sure that the rear seatback is securely locked in position by lightly pushing it back and forth.

If the seatback is not securely locked, the red marking will be visible. Make sure that the red marking is not visible.



 Check that the seat belts are not twisted or caught between or behind in the rear seatback


⚠ NOTICE

The seat belt for the rear center seat, seat belt buckles and armrest must be stowed before you fold down the rear seatbacks.

Fold the rear seatbacks


- Stow the rear center seat belt, seat belt buckles and armrest.
- 2 Lower the head restraint of the rear seat.

3 Pull the seatback angle adjustment lever and fold down the seatback.

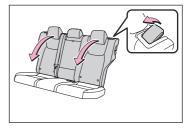

Return the rear seatbacks

1 Raise the rear seatback until it locks.

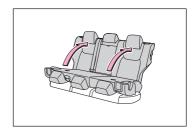

2 Check that the plate for each seat belt is on the front side of the seat.



Trailer towing (vehicles with towing package)

Trailer towing

Your vehicle is designed primarily as a passenger carrying vehicle. Towing a trailer will have an adverse effect on handling, performance, braking, durability, and fuel consumption. Your safety and satisfaction depend on the proper use of correct equipment and cautious driving habits. For your safety and the safety of others, do not overload the vehicle or trailer. To tow a trailer safely, use extreme care and drive the vehicle in accordance with the trailer's characteristics and operating conditions. Lexus warranties do not apply to damage or malfunction caused by towing a trailer for commercial purposes. Ask your local authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for further details before towing, as there are additional legal requirements in some countries.

Weight limits

Check the allowable towing capacity, GVM (Gross Vehicle Mass), MPAC (Maximum Permissible Axle Capacity), and permissible draw bar load before towing.

Towing hitch/bracket

Lexus recommends the use of the Lexus hitch/bracket for your vehicle. Other products of a suitable nature and comparable quality may also be used.

For vehicles where the towing device blocks any of the lights or license plate, the following shall be observed:

- Do not use towing devices that cannot be easily removed or repositioned.
- Towing devices must be removed or repositioned when not in use.

Connecting trailer lights

 
Please consult at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer when installing trailer lights, as incorrect installation may cause damage to the vehicle's lights. Please take care to comply with your state's laws when installing trailer lights.

⚠ NOTICE

Do not directly splice trailer lights. Directly splicing trailer lights may damage your vehicle's electrical system and cause a malfunction.

Important points regarding trailer loads

■ Total trailer weight and permissible drawbar load



A Total trailer weight


Weight of the trailer itself plus the trailer load should be within the maximum towing capacity. Exceeding this weight is dangerous.

When towing a trailer, use a friction coupler or friction stabilizer (sway control device).

B Permissible drawbar load

Allocate the trailer load so that the drawbar load is greater than $25\ kg\ (55.1\ lb.)$ or 4% of the towing capacity. Do not let the drawbar load exceed the indicated weight

■ Information tag (manufacturer's label)

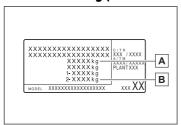

A Gross vehicle mass

The combined weight of the driver, passengers, luggage, towing hitch, total curb mass and drawbar load should not exceed the gross vehicle mass by more than 100 kg (220.5 lb.). Exceeding this weight is dangerous.

B Maximum permissible rear axle capacity

The weight borne by the rear axle should not exceed the maximum permissible axle capacity by 15% or more. Exceeding this weight is dangerous.


The values for towing capacity were derived from testing conducted at sea level. Take note that engine output and towing capacity will be reduced at high altitudes.


WARNING

If the gross vehicle mass or maximum allowable axle capacity is exceeded, observe the following:

- \bullet Add an additional 20.0 kPa (0.2 kgf/cm 2 or bar, 3 psi) to the recommended tire inflation pressure value.
- Do not exceed the established speed limit for towing a trailer in built-up areas or 100 km/h (62 mph), whichever is lower.

Installation positions for the towing hitch/bracket and hitch ball

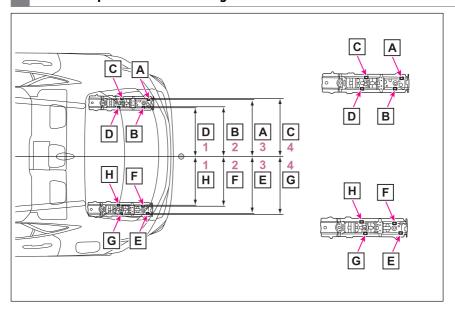

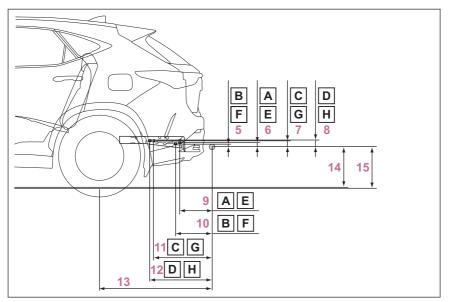

- 1 457 mm (18.0 in.)
- 2 461 mm (18.1 in.)
- 3 536 mm (21.1 in.)
- 4 538 mm (21.2 in.)
- 5 27 mm (1.1 in.)
- 6 38 mm (1.5 in.)
- 7 53 mm (2.1 in.)
- 8 59 mm (2.3 in.)
- 9 300 mm (11.8 in.)
- 10 338 mm (13.3 in.)
- 11 538 mm (21.2 in.)
- 12 569 mm (22.4 in.)
- 13 1036 mm (40.8 in.)
- 14 378 mm (14.9 in.)*1
- 15 389 mm (15.3 in.)*2

^{*1:} Vehicles with 235/60R18 tires

^{*2:} Vehicles with 235/50R20 tires

■ Tire information

- Increase the tire inflation pressure to 20.0 kPa (0.2 kgf/cm² or bar, 3 psi) greater than the recommended value when towing.
- Increase the air pressure of the trailer tires in accordance with the total trailer weight and according to the values recommended by the manufacturer of your trailer.

■ Trailer lights

Check that the turn signal lights and stop lights are operating correctly every time you hitch up the trailer. Directly wiring up to your vehicle may damage the electrical system and stop the lights from functioning correctly.

■ Break-in schedule

Lexus recommends that vehicles fitted with new power train components should not be used for towing trailers for the first 800 km (500 miles).

Safety checks before towing

- Check that the maximum load limit for the towing hitch/bracket and hitch ball is not exceeded. Bear in mind that the coupling weight of the trailer will add to the load exerted on the vehicle. Also make sure that the total load exerted on the vehicle is within the range of the weight limits.
- Ensure that the trailer load is secure.
- Supplementary outside rear view mirrors should be added to the vehicle if the traffic
 behind cannot be clearly seen with standard mirrors. Adjust the extending arms of
 these mirrors on both sides of the vehicle so that they always provide maximum
 visibility of the road behind.

■ Maintenance

- Maintenance must be performed more frequently when using the vehicle for towing due to the greater weight burden placed on the vehicle compared to normal driving.
- Retighten all bolts securing the hitching ball and bracket after towing for approximately 1000 km (600 miles).

Guidance

Your vehicle will handle differently when towing a trailer. In order to avoid accident, death or serious injury, keep the following in mind when towing:

■ Checking connections between trailer and lights

Stop the vehicle and check the operation of the connection between the trailer and lights after driving for a brief period as well as before starting off.

■ Practicing driving with a coupled trailer

- Get the feel for turning, stopping and reversing with the trailer coupled by practicing in an area with no or light traffic.
- When reversing with a coupled trailer, hold the section of the steering wheel nearest to you and rotate clockwise to turn the trailer left or counterclockwise to turn it right. Always rotate a little at a time to prevent steering error. Have someone guide you when reversing to lessen the risk of an accident.

■ Increasing vehicle-to-vehicle distance

At a speed of 10 km/h (6 mph), the distance to the vehicle running ahead of you should be equivalent to or greater than the combined length of your vehicle and trailer. Avoid sudden braking that may cause skidding. Otherwise, the vehicle may spin out of control. This is especially true when driving on wet or slippery road surfaces.

■ Sudden acceleration/steering input/cornering

Executing sharp turns when towing may result in the trailer colliding with your vehicle. Decelerate well in advance when approaching turns and take them slowly and carefully to avoid sudden braking.

■ Important points regarding turning

The wheels of the trailer will travel closer to the inside of the curve than the wheels of the vehicle. To make allowance for this, take the turns wider than you would normally do.

■ Important points regarding stability

Vehicle movement resulting from uneven road surfaces and strong crosswinds will affect handling. The vehicle may also be rocked by passing buses or large trucks. Frequently check behind when moving alongside such vehicles. As soon as such vehicle movement occurs, immediately start to decelerate smoothly by slowly applying the brakes. Always steer the vehicle straight ahead while braking.

■ Passing other vehicles

Consider the total combined length of your vehicle and trailer and ensure that the vehicle-to-vehicle distance is sufficient before executing lane changes.

Transmission information

To maintain engine braking efficiency and charging system performance, when using engine braking, do not use the transmission in D. If in the M mode, the transmission shift range position must be in 6 or lower.

■ If the engine overheats

Towing a loaded trailer up a long, steep incline in temperatures exceeding 30° C (85° F) may result in the engine overheating. If the engine coolant temperature gauge indicates that the engine is overheating. Turn the air conditioning off immediately, leave the road and stop the vehicle in a safe place.

■ When parking the vehicle

Always place wheel chocks under the wheels of both the vehicle and trailer. Set the parking brake and change the shift position to P.

WARNING

Follow all the instructions described in this section.

Trailer towing precautions

When towing, make sure that none of the weight limits are exceeded.

To avoid accident or injury

- Vehicles with compact spare tire: Do not tow a trailer when the compact spare tire is installed on your vehicle.
- Do not use the following systems when trailer towing.
 - PCS (Pre-Collision System)
 - LTA (Lane Tracing Assist)
 - Dynamic radar cruise control
 - BSM (Blind Spot Monitor) (if equipped)

Vehicle speed in towing

Observe the legal maximum speeds for trailer towing.

Before descending hills or long declines

Reduce speed and downshift. However, never downshift suddenly while descending steep or long downhill grades.

Operation of the brake pedal

Do not hold the brake pedal depressed often or for long periods of time. Doing so may result in the brake overheating or reduce braking effects.

Trailer towing (vehicles without towing package)

Lexus does not recommend towing a trailer with your vehicle. Lexus also does not recommend the installation of a tow hitch or the use of a tow hitch carrier for a wheelchair, scooter, bicycle, etc. Your vehicle is not designed for trailer towing or for the use of tow hitch mounted carriers.



Opening and closing the windows

WARNING

Observe the following precautions. The driver is responsible for all power window operations, including the operation for the passengers.

- Do not let a child operate the power windows. Operation by a child may cause a child
 or other passengers to have a body part caught in a power window. Also, when riding
 with a child, it is recommended to turn the window lock switch on.
- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- When exiting the vehicle, turn the engine switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

☐ INFORMATION

■ Operating conditions of the power windows

The engine switch is in ON.

Operating the power windows after turning the engine off

The power windows can be operated for approximately 45 seconds after the engine switch is turned to ACC or OFF.

They cannot, however, be operated once either front door is opened.

■ Using the voice control system*

The following operations can be performed using the voice control system:

- Opening/closing of all of the windows simultaneously
- Opening/closing of each window individually

(Operation is possible only when the window lock switch is off.)

For details, refer to the "Multimedia owner's manual".

Functions which aid in safe opening and closing of the windows

The following functions aid in safe opening and closing of the windows.

Jam protection function

If an object becomes jammed between the window and the window frame while the window is closing, window movement is stopped and the window is opened slightly.

^{*:} If equipped

Catch protection function

If an object becomes caught between the door and window while the window is opening, window movement is stopped.

Power windows open warning buzzer

The buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the engine switch is turned off and the driver's door is opened with the power windows open.

WARNING

Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets jammed just before the window is fully closed.

Be careful not to get any part of your body jammed in the window.

Catch protection function

- Never use any part of your body or clothing to intentionally activate the catch protection function.
- Be careful not to get any part of your body or clothing caught in the window. The catch
 protection function may not work if something gets caught just before the window is
 fully opened.

Operations using the power window switches

Opening/closing the windows using the power window switch



- Lift the power window swich partway.
 The window will close while the switch is lifted.
- 2 Fully lift the power window swich. The window will fully close automatically. To stop the window partway, operate the switch in the opposite direction.
- 3 Push the power window swich partway. The window will open while the switch is pushed.
- 4 Fully push the power window switch.
 The window will fully open automatically.

To stop the window partway, operate the switch in the opposite direction.

Operations using the wireless remote control

The power windows can be opened and closed using the wireless remote control.*1

WARNING

When using the wireless remote control or to operate the power windows, operate the power windows after making sure that there is no possibility of any passenger having any of their body parts caught in a power window. Also do not let a child operate the windows using the wireless remote control. Children and other passengers may get caught in the power window.

Related Links

Customizable features (P. 650)

Open the windows using the wireless remote control

Using the wireless remote control, the doors can be unlocked and all of the windows opened at the same time. $^{\star 2}$



Push and hold the unlock switch on the wireless remote control.

The doors will unlock and the windows and moon roof^* or panoramic moon roof^* will open.

A buzzer sounds to indicate that all of the windows and the moon roof^* or panoramic moon roof^* are opening.


^{*1:} These settings must be customized at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

^{*2:} This setting must be customized at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

^{*:} If equipped

Close the windows using the wireless remote control

Using the wireless remote control, the doors can be locked and all of the windows closed at the same time. \star3

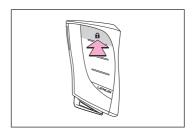

• Press and hold the lock switch on the wireless remote control.

All of the doors will lock and the windows and moon roof * or panoramic moon roof * will close.

A buzzer sounds to indicate that all of the windows and the moon roof * or panoramic moon roof * are opening/closing.


Check that the doors are securely locked and the windows are fully closed.

Prevent accidental operation of the windows

The window lock switch is designed to prevent children from accidentally opening or closing a window.

Press the window lock switch.

The indicator **A** will come on and the passenger windows will be locked.

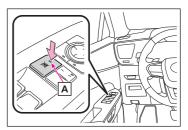

^{*3:} This setting must be customized at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.


^{*:} If equipped

Adjusting the seats

Adjusting the front seats


Adjust the seat forward/backward and up/down as necessary to obtain a correct posture.

▶ Manual seat

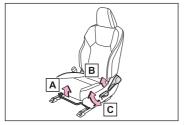

- A Seat position adjustment lever
- B Seatback angle adjustment lever
- C Vertical height adjustment lever

▶ Power seat

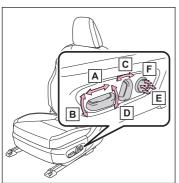

- A Seat position adjustment switch
- B Seat cushion (front) angle adjustment switch
- C Seatback angle adjustment switch
- D | Vertical height adjustment switch
- E Lumbar support firmness adjustment switch (for driver's side)
- F Lumbar support height adjustment switch (for driver's side)*

☐ INFORMATION

■ When adjusting the seats

Take care so that a head restraint does not contact the ceiling or a sun visor.

WARNING

Observe the following when adjusting the seats.

- Do not adjust the position of the driver's seat while driving.
 Doing so could cause the driver to lose control of the vehicle.
- Be careful so that the seat does not contact and injure a passenger.

^{*:} If equipped

- Do not place anything under the front seats.
 - Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident and the adjustment mechanism may also be damaged.
- Do not put your hands under the seat or near the moving parts to avoid injury.
 Fingers or hands may become jammed in the seat mechanism.
- To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.
 - If the seat is reclined excessively, in a collision, one may slide under the lap belt and it may apply restraint forces directly to the abdomen, etc., or their neck may contact the shoulder belt.
- Manual seat: After adjusting the seat, make sure that the seat is locked in position.
- Do not place a cushion between the driver or passenger and the seatback.
 A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint.

Adjusting the head restraints


Head restraints are provided for all seats.

▲ WARNING

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.

Adjusting the front seat head restraints vertically

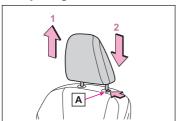


1 Up

Pull the head restraints up.

2 Down

Push the head restraint down while pressing the lock release button **A**.

■ Adjusting the rear seat head restraints vertically

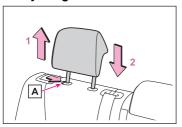

1 Up


Pull the head restraints up.

2 Down

Push the head restraint down while pressing the lock release button **A**.

Adjusting the height of the head restraints (front seats)

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears

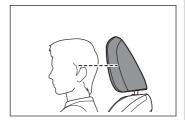


Adjusting the height of the head restraints

When the rear seat is to be used, make sure the head restraint is at least one step above the storage position.

■ Adjusting the front seat head restraints horizontally (F SPORT)


Adjustment can be performed in 4 steps.

If the head restraint is pulled forward from the foremost position, it will return to the rearmost position.

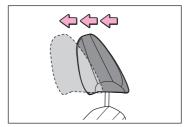

Removing the head restraints


▶ Front seats

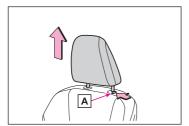

Pull the head restraint up while pressing the lock release button **A**.

If the head restraint touches the ceiling, making the removal difficult, change the seat height or angle.


▶ Rear seats

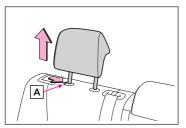

Pull the head restraint up while pressing the lock release button $\boxed{\mathbf{A}}$.

Installing the head restraints


▶ Front seats

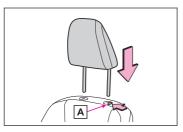

Align the head restraint with the installation holes and push it down to the lock position.

Press and hold the lock release button **A** when lowering the head restraint.

▶ Rear seats

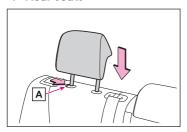


Align the head restraint with the installation holes and push it down to the lock position.

Press and hold the lock release button **A** when lowering the head restraint.

Adjusting the rear seats

Reclining adjustments and folding the seat backs can be done with the levers.

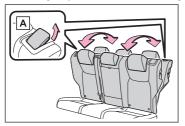

A Reclining adjustment

WARNING

Observe the following when adjusting the seatbacks.

- Keep other passengers from being hit with the seatback.
- Do not bring your hands close to the moving parts or between the seats, as well as do not let any part of your body get caught.
- To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is reclined excessively, in a collision, one may slide under the lap belt and it may apply restraint forces directly to the abdomen, etc., or their neck may contact the shoulder belt.

Using the seat belts



- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seatback. Sit up straight and well back in the seat.
- Do not twist the seat belt.

WARNING


Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident. Failing to do so may cause death or serious injury.

- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only.
 Do not use a seat belt for more than one person at once, including children.
- Lexus recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.

 Women who are pregnant should consult their doctor for any precautions for wearing the seat belt correctly.

Position the lap belt as low as possible over the hips in the same manner as other occupants, extending the shoulder belt completely over the shoulder and avoiding belt contact with the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

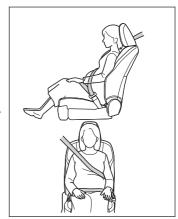

- Persons with a medical condition should consult their doctor for any precautions for wearing the seat belt correctly.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do
 not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an
 occupant from death or serious injury.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there's no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts.
 Have any necessary repairs carried out by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. Inappropriate handling may lead to incorrect operation.
- Do not allow children to play with the seat belt.

If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the helt.

■ Child seat belt usage


The seat belts of your vehicle were principally designed for persons of adult size.

 Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions regarding seat belt usage.

Seat belt regulations

If seat belt regulations exist in the country where you reside, please contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for seat belt replacement or installation.

Fastening and releasing the seat belts

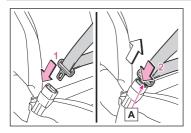

- 1 To fasten the seat belt, push the plate into the buckle until a click sound is heard.
- 2 To release the seat belt, press the release button **A**.

INFORMATION

■ Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. When the seat belt locks, pull the belt strongly and then release the belt, then a slow and easy pulling will allow the belt to extend.

A WARNING

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Ensure that the belt and plate are locked and the belt is not twisted.
 If the seat belt does not function correctly, immediately contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Adjusting the height of the front seat belts



- 1 Push the seat belt shoulder anchor down while pressing the release button A.
- 2 Push the seat belt shoulder anchor up while pressing the release button A.

Move the height adjuster up and down as needed until you hear a click.

WARNING

Adjustable shoulder anchor

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident.

Adjusting the position of the steering wheel and mirrors

Adjusting the position of the steering wheel horizontally/vertically (Manual type)

WARNING


Do not adjust the steering wheel while driving.

1 Hold the steering wheel and push the lever down.



2 Adjust to the ideal position by moving the steering wheel horizontally and vertically.

After adjustment, pull the lever up to secure the steering wheel.

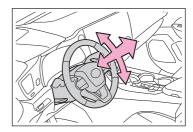

☐ INFORMATION

■ After adjusting the steering wheel

Make sure that the steering wheel is securely locked.

The horn may not sound if the steering wheel is not securely locked.

▲ WARNING

After adjusting the steering wheel, make sure that the steering wheel is securely locked.

Otherwise, the steering wheel may move suddenly.

Adjusting the position of the steering wheel horizontally/vertically (Power type)


INFORMATION

■ The steering wheel can be adjusted when

The engine switch is in ACC or ON.*1

WARNING

Do not adjust the steering wheel while driving.

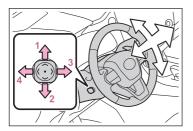

Operating the switch moves the steering wheel in the following directions:

- 1 Up
- 2 Down
- 3 Toward the driver
- 4 Away from the driver

☐ INFORMATION

Automatic adjustment of the steering position

A desired steering position can be entered to memory and recalled automatically by the driving position memory system.

■ Power easy access system

The steering wheel and driver's seat move in accordance with engine switch mode and the driver's seat belt condition.

Adjusting the position of the inside rear view mirror


WARNING

Do not adjust the position of the mirror while driving.

Adjust the position of the inside rear view mirror so that the correct driving posture can be achieved.

^{*1:} If the driver's seat belt is fastened, the steering wheel can be adjusted regardless of engine switch mode.

Adjust the inside rear view mirror vertically by grasping and moving it.

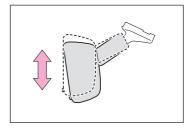

Digital Rear-veiw mirror effort and caution

The Digital Rear-view Mirror is a system that uses the camera on the rear of the vehicle and displays its image on the display of the Digital Rear-view Mirror.

The Digital Rear-view Mirror can be changed between optical mirror mode and digital mirror mode by operating the lever.

The Digital Rear-view Mirror allows the driver to see the rear view despite obstructions, such as the head restraints or luggage, ensuring rear visibility. Also, the rear seats are not displayed and privacy of the passengers is enhanced.


WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

Before using the Digital Rear-view Mirror

- Make sure to adjust the mirror before driving.
 - Change to optical mirror mode and adjust the position of the Digital Rear-view Mirror so that the area behind your vehicle can be viewed properly.
 - Change to digital mirror mode and adjust the display settings.
- As the range of the image displayed by the Digital Rear-view Mirror is different from that of the optical mirror, make sure to check this difference before driving.

System components of the Digital Rear-view Mirror

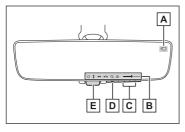

- A Camera indicator
 Indicates that the camera is operating normally.
- B Icon display area
 - Displays icons, adjusting gauge, etc.
- C Select/adjust button

^{*:} If equipped

Press to change the setting of the item you want to adjust.

D Menu button

Press to display the icon display area and select the item you want to adjust.

E Lever


Operate to change between digital mirror mode and optical mirror mode.

Related Links

Adjusting the Digital Rear-view Mirror(P. 111)

Changing modes of the Digital Rear-view Mirror

Operate the lever to change between digital mirror mode and optical mirror mode.

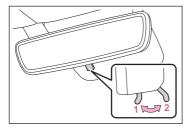

- 1 Digital mirror mode
 - Displays an image of the area behind the vehicle.
 - [] will illuminate in this mode.
- 2 Optical mirror mode

Turns off the display of the Digital Rearview Mirror allows it to be used as an optical mirror.

Digital mirror mode operating condition

The engine switch is turned to ON.

When the engine switch is changed from ON to OFF or ACC, the image will disappear after several seconds.

Precautions about digital mirror mode

If it is difficult to see the displayed image due to light reflected off the Digital Rear-view Mirror, the camera being dirty or covered with water droplets, dust, etc., or if lights of a vehicle behind your vehicle or the displayed image are bothering you, change to optical mirror mode.


When it is raining, if the image is unclear due to water on the rear window, operate the rear wiper.

- When the back door is open, the Digital Rear-view Mirror image may not display properly. Before driving, make sure the back door is closed.
- If the display is difficult to see due to reflected light, close the sunshade.
- Any of the following conditions may occur when driving in the dark, such as at night. None of them indicates that a malfunction has occurred.
 - Colors of objects in the displayed image may differ from their actual color.
 - Depending on the height of the lights of the vehicle behind, the area around the vehicle may appear white and blurry.
 - Automatic image adjustment for brighter surrounding image may cause flickering.
 If it is difficult to see the displayed image or flickering bothers you, change to optical mirror mode.
- The Digital Rear-view Mirror may become hot while it is in digital mirror mode. This is not a malfunction.
- Depending on your physical condition or age, it may take longer than usual to focus on the displayed image. In this case, change to optical mirror mode.
- Do not let passengers stare at the displayed image when the vehicle is being driven, as doing so may cause motion sickness.

■ When the system malfunctions

If the symbol shown in the illustration is displayed when using the Digital Rear-view Mirror in digital mirror mode, the system may be malfunctioning. The symbol will disappear in a few seconds.

Operate the lever, change to optical mirror mode and have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

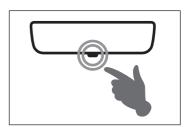


Adjusting the Digital Rear-view Mirror

Settings of the display in the digital mirror mode, on/off operation of the automatic anti-glare function, etc. can be changed.

1 Press the menu button.

The icons will be displayed.

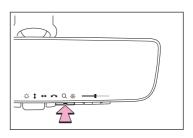

- 2 Press the menu button repeatedly and select the item you want to adjust.
- 3 Press [] or [] to change the setting.

The icons will disappear if a button is not operated for approximately ${\bf 5}$ seconds or more.

Icons	Settings
❖	Select to adjust the brightness of the display.
‡	Select to adjust the area displayed up/down.
↔	Select to adjust the area displayed to the left/right.
M	Select to adjust the angle of the displayed image.
Q	Select to zoom in/out the displayed image.
	Select to enable/disable the automatic anti-glare function.*2
- \$ -	Responding to the brightness of the headlights of vehicles behind, the reflected light is automatically adjusted.
	The automatic anti-glare function is enabled each time the engine switch is changed to ON.

^{*2:} This is a function for the optical mirror mode, however, the setting can also be changed while using the digital mirror mode.


Precautions when adjusting the Digital Rear-view Mirror

Display settings (digital mirror mode)

- The icons will disappear if a button is not operated for approximately 5 seconds or more.
- If the displayed image is adjusted, it may appear distorted. This is not a malfunction.
- If the brightness of the Digital Rear-view Mirror is set too high, it may cause eye strain. Adjust the Digital Rear-view Mirror to an appropriate brightness. If your eyes become tired, change to optical mirror mode.
- The brightness of the Digital Rear-view Mirror will change automatically according to the brightness of the area in front of your vehicle.

■ To prevent the light sensors from malfunctioning

To prevent the light sensors from malfunctioning, do not touch or cover them.

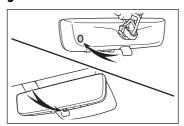

WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

While driving

- Do not adjust the position of the Digital Rear-view Mirror or adjust the display settings while driving.
 - Stop the vehicle and operate the Digital Rear-view Mirror control switches. Failure to do so may cause a steering wheel operation error, resulting in an unexpected accident.
- Always pay attention to the vehicle's surroundings.
 - The size of the vehicles and other objects may look different when in digital mirror mode and optical mirror mode. When backing up, make sure to directly check the safety of the area around your vehicle, especially behind the vehicle. Additionally, if a vehicle approaches from the rear in the dark, such as at night, the surrounding area may appear dim.

Cleaning the Digital Rear-view Mirror


■ Cleaning the mirror surface

If the mirror surface is dirty, the image on the display may be difficult to see. Wipe the mirror surface gently using a soft dry cloth.

INFORMATION

■ The camera

The camera for the Digital Rear-view Mirror is located as shown.

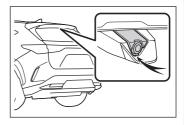


⚠ NOTICE

To prevent the camera from malfunctioning

- Observe the following precautions, otherwise the Digital Rear-view Mirror may not operate properly.
 - Do not strike or hit the camera or subject it to a strong impact, as the camera installation position and angle may be changed.
 - Do not remove, disassemble or modify the camera.
 - Do not allow an organic solvent, car wax, window cleaner or glass coating to adhere to the camera. If this happens, wipe it off as soon as possible.
 - When applying colored film (including transparent film) to the rear window glass, do not apply it to the area in front of the camera. If film is applied to the area in front of the camera, the image from the camera may not display properly.
- Do not subject the camera to a strong impact as this could cause a malfunction. If
 this happens, have the vehicle inspected by any authorized Lexus retailer or Lexus
 authorized repairer, or any reliable repairer as soon as possible.

⚠ NOTICE

Do not block the vent holes of the mirror. Otherwise, the mirror may be hot, leading to a malfunction or a fire.

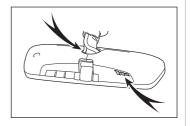

If you notice any symptoms about the Digital Rear-view Mirror

If you notice any of the following symptoms, refer to the following table for the likely cause and the solution.

If the symptom is not resolved by the solution, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Symptom	Likely cause	Solution
	The mirror surface is dirty.	Wipe the mirror surface gently, using a soft dry cloth.
The image is difficult to see.	Sunlight or headlights are shining directly into the Digital Rear-view Mirror.	Change to optical mirror mode. (If the light is coming through the moon roof or panoramic moon roof, close the sunshade or electronic sunshade.)

1-4. Obtaining the correct driving posture

Symptom	Likely cause	Solution
The image is difficult to see.	 The vehicle is in a dark area. The vehicle is near a TV tower, broadcasting station, electric power plant, or other location where strong radio waves or electrical noise may be present. The temperature around the camera is extremely high/low. The ambient temperature is extremely low. It is raining or humid. Sunlight or headlights are shining directly into the camera lens. The vehicle is under fluorescent lights, sodium lights, mercury lights, etc. Exhaust gas is obstructing the camera. 	Change to optical mirror mode. (Change back to digital mirror mode when the conditions have improved.)
	Foreign matters such as water droplets or dust is on the camera lens.	Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer
	The luggage in the luggage compartment is reflected off the rear window glass and obstructing the camera.	Change to optical mirror mode. Move the luggage to a position where it does not obstruct the camera or cover it with a black cloth to reduce the amount it is reflected off the rear window glass.
	The rear window glass is fogged up.	After defogging the rear window using the rear window defogger, use the digital mirror mode again.
	The outside of the rear window glass is dirty.	Use the rear window wiper to remove dirt.


Symptom	Likely cause	Solution
The image is difficult to see.	The inside of the rear window glass is dirty.	Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer
The image is out of align-ment.	The back door is not fully closed.	Fully close the back door.
	The camera or its surrounding area has received a strong impact.	Change to optical mirror mode and have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
The display is dim and [4\] is displayed.	The system may be malfunc- tioning.	Change to optical mirror mode and have the vehicle inspected by any authorized Lexus retailer or Lexus authorized re-
[4] goes off.		pairer, or any reliable repairer.
[📤] is displayed.	The Digital Rear-view Mirror is extremely hot. (The display will gradually become more dim. If the temperature continues to increase, the Digital Rear-view Mirror will turn off.)	Reducing the cabin temperature is recommended to reduce the temperature of the mirror. ([🖎] will disappear when
		the mirror becomes cool.) If [
The lever can- not be operat- ed properly.	The lever may be malfunctioning.	Change to optical mirror mode and have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. To change to optical mirror mode, press and hold the menu button for approxi-
		mately 10 seconds.

Adjusting the angle of the outside rear view mirrors

WARNING


Do not adjust the position of the mirror while driving.

1 To select a mirror to adjust, press the switch.

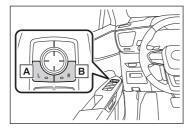

- A Select the left mirror
- B Select the right mirror

2 To adjust the mirror, press the switch.

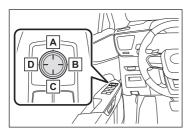

- A Adjust the mirror surface up
- B Adjust the mirror surface right
- C Adjust the mirror surface down
- D Adjust the mirror surface left

INFORMATION

■ Mirror angle can be adjusted when

The engine switch is in ACC or ON.

Automatic adjustment of the mirror angle (vehicles with driving position memory)

A desired mirror face angle can be entered to memory and recalled automatically by the driving position memory.

■ Linked mirror function when reversing (vehicles with driving position memory)

When the mirror select switch is in the "L" or "R" position, the outside rear view mirrors will automatically angle downwards when the vehicle is reversing in order to give a better view of the ground.

To disable this function, move the mirror select switch to the neutral position (between "L" and "R")

With the shift position in R, adjust the mirror angle at a desired position to set the mirror angle used when the vehicle is reversing.

The adjusted angle will be memorized and the mirror will automatically tilt to the memorized angle whenever the shift position is shifted to R from next time.

The memorized downward tilt position of the mirror is linked to the normal position (angle adjusted with the shift position in other than R). Therefore, if the normal position is changed after adjustment, the tilt position will also change.

When the normal position is changed, readjust the angle in reversing.

Using the reverse-linked function when it is cold


When reverse-linked function used in cold weather, the door mirror could be frozen and may not automatically point the mirror surface downward. In this event, remove any ice and snow from the mirror surface.

Related Links -

Customizable features(P. 650)

Folding/extending the outside rear view mirrors


▶ Using the switch

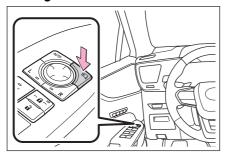

Press the switch to fold the mirrors.

Press it again to extend them to the original position.

▶ Setting automatic mode

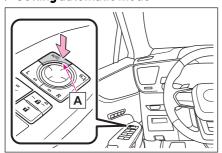

Automatic mode allows the folding or extending of the mirrors to be linked to locking/unlocking of the doors.

Press the switch to set automatic mode.

The indicator **A** will come on.

Pressing the switch once more will return to manual mode.

1-4. Obtaining the correct driving posture

Using automatic mode when it is cold

When automatic mode is used in cold weather, the door mirror could freeze up and automatic stowing and return may not be possible. In this event, after removing any ice and snow from the door mirror, operate the mirror using manual mode or move it by hand.

WARNING

Observe the following precautions.

- Do not drive with the mirrors folded.
- Do not touch an outside rear view mirror when it is moving. Failure to do so may lead
 to your finger being pinched or the mirror being damaged.
- As the mirror surface will be hot, do not touch an outside rear view mirror when the mirror heater is operating.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

Driving the vehicle

2-1. Starting and stopping the engine	2-4. Refueling	
Starting the engine122	Refueling	169
Stopping the engine126		
Stop & Start system127		
2-2. Driving procedures		
Driving procedure135		
Breaking in your new Lexus 138		
Intended use of each shift position (Automatic transmission)139		
Intended use of each shift position (Multidrive)141		
Changing the shift position (Automatic transmission)142		
Changing the shift position (Multidrive)148		
Starting off151		
Operations when turning left or right or changing lanes152		
Changing the shift range (Automatic transmission)153		
Changing the shift range (Multidrive)155		
Changing the gear step (Automatic transmission) 157		
Changing the gear step (Mul- tidrive) 159		
2-3. Parking the vehicle		
When parking the vehicle161		
Stopping163		
Parking the vehicle 165		

Starting the engine

Starting the engine

WARNING

Always start the engine while sitting in the driver's seat. Do not depress the accelerator pedal while starting the engine under any circumstances.

M NOTICE

When starting the engine

- Do not race a cold engine.
- If the engine becomes difficult to start or stalls frequently, have your vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

Operation of the engine switch

If the engine switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

Check that the parking brake is set.

The parking brake indicator will come on.

2 Firmly depress the brake pedal.

and a message will be displayed on the multi-information display. If it is not displayed, the engine cannot be started.

3 Press the engine switch shortly and firmly.

When operating the engine switch, one short, firm press is enough. It is not necessary to press and hold the switch.

The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal until the engine is completely started.

The engine can be started from any engine switch mode.



☐ INFORMATION

Engine switch illumination

According to the situation, the engine switch illumination operates as follows.

- When a door is opened, or the engine switch mode is changed from ACC or ON to off, the engine switch illumination slowly blinks.
- When depressing the brake pedal with carrying the electronic key on your person, the engine switch illumination rapidly blinks.
- When the engine switch is in ACC or ON, the engine switch illumination illuminates.

■ If the engine does not start

- The engine immobilizer system may not have been deactivated. Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- If a message related to start-up is shown on the multi-information display, read the message and follow the instructions.

Steering lock function

After turning the engine switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the engine switch again automatically cancels the steering lock.

Operation of the engine switch

- If the switch is not pressed shortly and firmly, the engine switch mode may not change or the engine may not start.
- If attempting to restart the engine immediately after turning the engine switch off, the engine may not start in some cases. After turning the engine switch off, please wait a few seconds before restarting the engine.


Related Links

Manual applying/releasing of the parking brake (manual mode) (P. 167)

Shift position display and how to change the shift position (P. 143)

Changing the engine switch mode

Modes can be changed by pressing the engine switch with brake pedal released. (The mode changes each time the switch is pressed.)

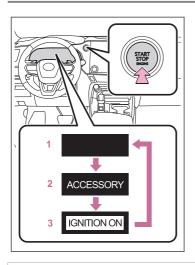

1 OFF

The emergency flashers can be used.

2 ACC*1

Some electrical components such as the audio system can be used. "ACCESSORY" will be displayed on the multi-information display.

3 ON

All electrical components can be used.

"IGNITION ON" will be displayed on the multi-information display.

Auto power off function

- If the vehicle is left in ACC or ON (the engine is not operating) for more than 20 minutes with the shift position in P, the engine switch will automatically turn to OFF.
- If the battery is low with the shift position is in P and the engine switch is in ACC or ON (the engine is not operating). The engine switch is automatically turn to OFF.

However, this function cannot entirely prevent the battery discharge. Do not leave the vehicle with the engine switch in ACC or ON for long periods of time when the engine is not operating.

■ When the shift control system malfunctions

If the shift control system is malfunctioning, when attempting to turn the engine switch off, it may not be able to be turned off. In this situation, it may be possible to turn the engine switch off by applying the parking brake and then operating the engine switch.

If there is a malfunction in the system, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. immediately.

M NOTICE

Do not leave the vehicle with the engine switch in ACC or ON for long periods of time when the engine is not operating.

If "ACCESSORY" or "IGNITION ON" is displayed on the meters while the engine is not running, the engine switch is not off. Exit the vehicle after turning the engine switch off.

^{*1:} This can be enabled/disabled through a customize setting.

— Related Links –

Customizable features (P. 650)

Stopping the engine

Stopping the engine

WARNING

If you want to stop the engine in an emergency while driving the vehicle, press and hold the engine switch for more than 2 seconds, or press it briefly 3 times or more in succession.

However, do not touch the engine switch while driving, except in an emergency. Turning the engine off while driving will not cause loss of steering or braking control, however the power assist to these systems will be lost. This will make it more difficult to steer and brake. Pull over and stop the vehicle as soon as it is safe to do so.

- Stop the vehicle completely.
- 2 Press the P position switch.

Check that the shift position indicator shows P and the parking brake indicator is illuminated.

3 Press the engine switch.

The engine will stop, and the meter display will be extinguished (the shift position indicator will be extinguished a few seconds after the meter display).

4 Release the brake pedal and check that the display on the instrument cluster is off.

Related Links

Manual applying/releasing of the parking brake (manual mode)(P. 167)

Shift position display and how to change the shift position(P. 143)

Shifting the shift lever (P. 148)

Situations where idling is necessary before stopping the engine (NX350)

To prevent damage to the turbocharger, immediately after high-load driving, such as continuous driving up steep mountain roads, driving on a race track, or when towing a trailer or another vehicle (vehicles with a towing package), allow the engine to idle for approximately 1 minute before stopping the engine.

Idling is not necessary after normal city driving or high-speed driving (at the legal or recommended highway speed limit).

Stop & Start system

Stop & Start sysmem effort and caution

The Stop & Start system stops and starts the engine according to brake pedal or shift lever operation when the vehicle is stopped, such as at a stoplight, intersection, etc., in order to improve fuel economy and reduce noise pollution caused by the engine idling.

■ Points for use

- If the engine switch is pressed when the engine is stopped by the Stop & Start system, the engine will not be able to be restarted by the automatic engine start function. In this case, restart the engine using the normal engine starting procedure.
- When the engine is being restarted by the Stop & Start system, the power outlets may be temporarily unusable, but this does not indicate a malfunction.
- Installation and removal of electrical components and wireless devices may affect the Stop & Start system.
 - Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- When stopping the vehicle for a longer period of time, turn the engine switch off to stop the engine completely.
- When the engine is restarted by the Stop & Start system, the steering wheel may temporarily feel heavy.

■ Hill-start assist control

When the engine is stopped by the Stop & Start system when the vehicle is on an incline, when the brake pedal is released, brake force is temporarily maintained to prevent the vehicle from rolling backwards before the engine is restarted and drive force is generated. When drive force is generated, the maintained brake force is automatically canceled.

- This function operates on flat surfaces as well as steep inclines.
- Sound may be generated from the brake system, but this does not indicate a malfunction.
- Sound may be generated from the brake system, but this does not indicate a malfunction.

^{*:} If equipped

WARNING

■ When the Stop & Start system is operating

- Make sure to disable the Stop & Start system while the vehicle is in a poorly ventilated
 area. If not disabled, the engine may be automatically restarted unexpectedly, causing
 exhaust gases to collect and enter the vehicle, possibly resulting in death or a serious
 health hazard.
- Do not leave the vehicle while the engine is stopped by the Stop & Start system (while the Stop & Start indicator is on). An accident may occur due to the automatic engine start function.
- Depress the brake pedal and apply the parking brake when necessary while the engine is stopped by the Stop & Start system (while the Stop & Start indicator is on).

M NOTICE

■ To ensure the system operates correctly

If any of the following situations occur, the Stop & Start system may not operate correctly Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

- While the driver's seat belt is fastened, the driver's and front passenger's seat belt reminder light flashes.
- Even though the driver's seat belt is not fastened, the driver's and front passenger's seat belt reminder light does not illuminate.
- Even though the driver's door is closed, the open door warning light is illuminated or the interior light is illuminated when the interior light switch is in the door position.
- Even though the driver's door is open, the open door warning light does not illuminate
 or the interior light does not illuminate when the interior light switch is in the door
 position.


- Related Links

Starting the engine (P. 122)

Stop & Start system operation

■ Stopping the engine

While driving with the D shift position selected, depress the brake pedal and stop the vehicle. The engine will stop automatically. When the engine stops, the Stop & Start indicator will illuminate.

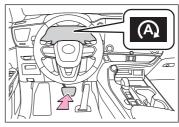

■ Restarting the engine

Release the brake pedal. The engine will start automatically. When the engine starts, the Stop & Start indicator will turn off.

■ When the brake hold system is operating

- When the engine is stopped by the Stop & Start system, if the brake pedal is released the engine will remain stopped.
- If the accelerator pedal is depressed while the engine is stopped by the Stop & Start system, the engine will restart.
- While the engine is stopped by the Stop & Start system, if the engine is restarted, the brake hold system will continue to apply the brakes, unless the operation conditions of the brake hold system are no longer met.

■ When the dynamic radar cruise control with full-speed range is operating

- When the vehicle is stopped by the dynamic radar cruise control with full-speed range, the engine will stop automatically even though the brake pedal is not depressed.
- When the preceding vehicle starts off, the engine will restart automatically.
- If the engine is restarted automatically by the Stop & Start system during a controlled stop by the dynamic radar cruise control with full-speed range, the controlled stop will continue.

Operating conditions

- The Stop & Start system is operational when all of the following conditions are met:
 - The vehicle has been driven a certain amount of time.

- The brake pedal is being depressed firmly. (Except when the vehicle is stopped by the dynamic radar cruise control with full-speed range when in vehicle-to-vehicle distance control mode)
- The D shift position is selected.
- The driver's seat belt is fastened.
- The driver's door is closed.
- The windshield defogger is off.
- The accelerator pedal is not being depressed.
- The engine is adequately warmed up.
- The outside temperature is -5°C (23°F) or higher.
- The hood is closed.
- In the following situations the engine may not be stopped by the Stop & Start system.
 This is not a malfunction of the Stop & Start system.
 - When the air conditioning system is being used.
 - When the battery is undergoing a periodic recharge.
 - When the battery is not sufficiently charged, such as if the vehicle has been parked
 for a long time and the battery charge has decreased, the electric load is large, the
 battery fluid temperature is excessively low or the battery has deteriorated.
 - When the brake booster vacuum is low.
 - When the elapsed time since the engine was restarted is short.
 - When the vehicle is stopped frequently, such as when in a traffic jam.
 - When the engine coolant temperature or transmission fluid temperature is extremely low or high.
 - When the vehicle is stopped on a steep incline.
 - When the steering wheel is being operated.
 - When the vehicle is being driven in a high altitude area.
 - When the battery fluid temperature is extremely low or high.
 - For a while after the battery terminals have been disconnected and reconnected.
- When the engine is stopped by the Stop & Start system, the engine will be restarted automatically if any of the following conditions are met: (To enable the engine to be stopped by the Stop & Start system again, drive the vehicle.)
 - The air conditioning system is turned on.
 - The windshield defogger is turned on.
 - The shift lever is shifted from D or P.

- The shift lever is shifted from P. (When the engine is stopped by the Stop & Start system when the shift lever is in P.)
- The driver's seat belt is unfastened.
- The driver's door is opened.
- The Stop & Start cancel switch is pressed.
- The steering wheel is operated.
- The accelerator pedal is depressed.
- The vehicle starts to roll on an incline.
- When the engine is stopped by the Stop & Start system, the engine may restart
 automatically in the following situations: (To enable the engine to be stopped by the
 Stop & Start system again, drive the vehicle.)
 - When the brake pedal is pumped or strongly depressed.
 - When the air conditioning system is being used.
 - When a switch of the air conditioning system is operated (windshield defogger switch, etc.).
 - If the battery charge becomes low.

■ When the hood is opened

- If the hood is opened while the engine is stopped by the Stop & Start system, the engine will stall and will not be able to be restarted by the automatic engine start function. In this case, restart the engine using the normal engine starting procedure.
- If the hood is closed after the engine is started with the hood open, the Stop & Start system will not operate. Close the hood, turn the engine switch off, wait 30 seconds or more, and then start the engine.

– Related Links

Brake hold system(P. 216)

Opening the hood(P. 481)

Starting the engine (P. 122)

Defog the windshield(P. 193)

Customizable features (P. 650)

Disabling the Stop & Start system

When the air conditioning is in automatic mode and the engine is stopped by the Stop & Start system, the fan may operate at a low speed in order to prevent the temperature in the cabin from increasing or decreasing or may be stopped.

2-1. Starting and stopping the engine

In the following situations, disable the Stop & Start system.

- When you want to prioritize air conditioning system performance
- If the windshield is fogged up
- If an odor is emitted from the air conditioning system

Press the Stop & Start cancel switch to disable the Stop & Start system.

The Stop & Start cancel indicator will illuminate. Pressing the switch again will enable the Stop & Start system and the Stop & Start cancel indicator will turn off.

► Vehicles without downhill assist control system



► Vehicles with downhill assist control system



☐ INFORMATION

Automatic enabling of the Stop & Start system

If the Stop & Start system is disabled using the Stop & Start cancel switch, it will be automatically re-enabled once the engine switch is turned off and then the engine is started.

Multi-information display messages

If the following situations, \bigcirc and a message may be displayed on the multi-information display.

▶ When the engine cannot be stopped by the Stop & Start system

Message	Details/Actions	
"Stop & Start System Mal- function Visit Your Dealer"	The Stop & Start system may be malfunctioning. Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.	
"Press Brake More to Acti- vate"	The brake pedal is not sufficiently depressed. If the brake pedal is depressed further, the system will operate.	
"Non-Dedi- cated Battery"	A battery not designed for use with a Stop & Start system may have been installed. The Stop & Start system does not operate. Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.	
"Battery Charging"	 The battery charge may be low. Stopping of the engine is temporarily prohibited to prioritize charging of the battery. After the engine runs for a certain amount of time, the system will be enabled. A refresh charge may be occurring After a refresh charge for up to an hour completes, the system can be operated. If displayed continuously for a long time (more than an hour) The battery may be deteriorated. Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details. 	
"Stop & Start system un- available"	 The Stop & Start system is temporarily disabled. Allow the engine to run for some time. The engine may have been started with the hood open. Close the hood, turn the engine switch off, wait for 30 seconds or more, and then start the engine. 	
"Preparing to Operate"	 The vehicle is being driven in a high altitude area. The brake booster vacuum is low. When the brake booster vacuum reaches a predetermined level, the system will be enabled. 	

2-1. Starting and stopping the engine

Message	Details/Actions	
"For Climate Control"	 The air conditioning system is being used when the ambient temperature is high or low. If the difference between the set temperature and cabin temperature becomes small, the system will be enabled. The windshield defogger is on. 	

▶ When the engine automatically restarts while stopped by the Stop & Start system

Message	Details/Actions	
"Preparing to Operate"	The brake pedal has been depressed further or pumped. The system will be enabled after the engine runs and the brake booster vacuum reaches a predetermined level.	
"For Climate Control"	 The air conditioning system has been turned on or is being used. The windshield defogger has been turned on. 	
"Battery Charg- ing"	The battery charge may be low.	

The audio system is suddenly cut off

When the volume of the audio system is excessively high, sound output from the audio system may suddenly be cut off in order to reduce battery consumption.

To re-enable the audio system, turn the engine switch off, wait for 3 seconds or more and then turn it to ACC or ON.

The audio system may not be activated if the battery terminals are disconnected and then reconnected.

Turn the engine switch off and then repeat the following operation twice to activate the audio system normally.

• Turn the engine switch to ON and then to OFF.

Driving procedure

WARNING

When driving the vehicle

- If the vehicle is coasting due to the engine being stopped, etc., do not operate the door locks or open a door until the vehicle has been safely stopped. Doing so may cause the steering lock function to operate, possibly leading to an accident.
- When backing up, you may twist your body around, leading to difficulty in operating the pedals.
 - Make sure to operate the pedals properly.
- Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
- Depress the brake pedal using your right foot.
 Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.
- Do not drive the vehicle over or stop the vehicle near flammable materials. The
 exhaust system and exhaust gases can be extremely hot. These hot parts may cause a
 fire if there is any flammable material nearby.
- Never turn the engine switch off during normal driving. If the engine is stopped while driving, steering and brake operations will still be possible, however, power assist will no longer be provided and the steering wheel and brakes will become difficult to operate. After checking the safety of the area around your vehicle, stop the vehicle on the side of the road. In an emergency, if the vehicle cannot be stopped normally, perform an emergency stop.
- Use engine braking (downshift) to maintain a safe speed when driving down a steep hill. Using the brakes continuously may cause the brakes to overheat and lose effectiveness.
- Do not adjust the positions of the steering wheel, the seat, or the inside or outside rear view mirrors while driving. Doing so may result in a loss of vehicle control.
- Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle.
- AWD models: This vehicle is not designed for extreme off-roading.
 - When driving in sand or mud is unavoidable, drive carefully and avoid continuous driving on sand or mud.
 - Do not drive on extremely rocky roads or extremely uneven roads.

WARNING

- Do not drive across a river or through other bodies of water. This may cause electric/electronic components to short circuit, damage the engine or cause other serious damage to the vehicle.
- Avoid sudden braking, acceleration, and steering inputs when driving on slick road surfaces. Doing so may cause the tires to lose traction, leading to loss of control of the vehicle.
- Avoid sudden accelerator pedal operations and shift operations when driving on slick road surfaces. Doing so may cause engine braking or changes in engine speed may cause the vehicle to slide sideways.
- After driving through a puddle, lightly depress the brake pedal to make sure that
 the brakes are functioning properly. Wet brake pads may prevent the brakes from
 functioning properly. If the brakes on only one side are wet and not functioning
 properly, steering control may be affected.
- AWD models:

When driving in sand or mud is unavoidable, drive carefully and avoid continuous driving on sand or mud.

Do not drive on extremely rocky roads or extremely uneven roads.

If you hear a squealing or scraping noise (brake pad wear limit indicators)

Have the brake pads checked and replaced by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer as soon as possible.

Rotor damage may result if the pads are not replaced when needed.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

⚠ NOTICE

Avoiding damage to vehicle parts

- Do not turn and hold the steering wheel at either fully turned position for an extended period of time. Doing so may damage the power steering motor.
- When driving over bumps or areas where the road height changes, drive as slowly as possible. Otherwise the wheels, etc. may be damaged.

If you get a flat tire while driving

In the following situations, firmly hold the steering wheel and gradually apply the brakes to decrease the vehicle's speed, as a tire may be flat or damaged:

- When the steering wheel pulls either direction
- When there are abnormal sounds or vibrations

⚠ NOTICE

- When the vehicle leans abnormally
- When encountering flooded roads

Do not drive on roads which have become flooded due to heavy rain, etc. Doing so may cause serious damage to the vehicle, such as the following:

- Engine stalling
- Shorts in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer check the following:

- Brake function
- Changes in quantity and quality of oil and fluid used for the engine, transmission, transfer (AWD models), rear differential (AWD models), etc.
- Lubricant condition for the propeller shaft (AWD models), bearings and suspension
 joints (where possible), and the function of all joints, bearings, etc.

If the shift control system is damaged by flooding, it may not be possible to change the shift position to P, or from P to other positions.

In this case, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Avoiding damage to the turbocharger (NX350)

Make sure to idle the engine immediately after high-load driving. Stop the engine only after the turbocharger has cooled down. Failure to do so may cause damage to the turbocharger.

■ Operating your vehicle in a foreign country

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel.

Breaking in your new Lexus

To extend the life of the vehicle, observing the following precautions is recommended:

- For the first 300 km (200 miles):
 - Avoid sudden stops.
- For the first 2000 km (1200 miles):
 - Do not drive at extremely high speeds.
 - Avoid sudden acceleration.
 - Do not drive continuously in low gears.
 - Do not drive at a constant speed for extended periods.
- For the first 800 km (500 miles):

Do not tow a trailer. (vehicles with towing package)

Intended use of each shift position (Automatic transmission)

Select the shift position depending on your purpose and situation.

Shift position	Objective or function
P	Parking the vehicle/starting the engine
R	Reversing
N	Neutral
D	Normal driving ⁽¹⁾
М	M mode driving ⁽²⁾

- (1) To improve fuel efficiency and reduce noise, set the shift position in D for normal driving. You can choose gear range suitable for your driving situation by operating the paddle shift switches.
- (2) Any gear range can be fixed when driving in M mode.

■ When engine braking is not performed

When the vehicle is being driven with the dynamic radar cruise control operating, engine braking will not be performed even if the following operations are performed.

- While driving in D position, downshifting to 7/6/5 or 4.
- When Sport mode is selected while driving in D position.

If a message about a shift operation is shown

To prevent the shift position from being selected incorrectly or the vehicle from moving unexpectedly, the shift position may be changed automatically or operating the shift lever may be required. In this case, change the shift position following the messages on the multi-information display.

AI-SHIFT

Al-SHIFT automatically selects the suitable gear according to driver's operations and the driving conditions. Al-SHIFT automatically operates when the shift position is in D. (This function will be canceled if the shift position is change to M.)

WARNING

Avoid sudden accelerator pedal operations and shift operations when driving on slick road surfaces. Engine braking or changes in engine speed may cause the vehicle to slide sideways.

⚠ NOTICE

Situations where shift control system malfunctions are possible

If any of the following situations occurs, shift control system malfunctions are possible.

Immediately stop the vehicle in a safe place on level ground, apply the parking brake, and then contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

- When the warning message indicating the shift control system appears on the multi-information display.
- The display indicates that no shift position is selected for more than a few seconds.

Intended use of each shift position (Multidrive)

Select shift positions according to their purpose and the conditions.

Shift position purpose and functions

Shift position	Objective or function
P	Parking the vehicle/starting the engine
R	Reversing
N	Neutral
D	Normal driving ⁽¹⁾
М	10-speed sport sequential shiftmatic mode driving ⁽²⁾

- (1) To improve fuel efficiency and reduce noise, change the shift lever to D for normal driving. Gear ranges suitable for the driving conditions can be selected by operating the paddle shift switches.
- (2) By selecting gear steps using M position, you can control accelerating force and engine braking force.

INFORMATION

■ When engine braking is not performed

When the vehicle is being driven with the cruise control or dynamic radar cruise control operating, engine braking will not be performed even if the following operations are performed.

- While driving in D position.
- When Sport mode is selected while driving in D position.

■ G AI-SHIFT

G AI-SHIFT automatically selects the suitable gear for sporty driving according to driver's operations and the driving conditions. G AI-SHIFT automatically operates when the drive mode select switch is set to Sport mode with the shift position in the D position. (This function will be canceled if the drive mode select switch is set to normal mode or the shift position is shifted to the M position.)

WARNING

Avoid sudden accelerator pedal operations and shift operations when driving on slick road surfaces. Engine braking or changes in engine speed may cause the vehicle to slide sideways.

Changing the shift position (Automatic transmission)


WARNING

- Do not let the vehicle roll backward while a forward driving position is selected, or roll forward while the shift position is in R.
 - Doing so may cause the engine to stall or lead to poor brake and steering performance, resulting in an accident or damage to the vehicle.
- Do not shift the shift position to P while the vehicle is moving. Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift position to R while the vehicle is moving forward. Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift position to a driving position while the vehicle is moving backward. Doing so can damage the transmission and may result in a loss of vehicle control.
- Changing the shift position to N while the vehicle is moving will disengage the engine from the transmission. Engine braking is not available when N is selected.
- Be careful not to change the shift position with the accelerator pedal depressed. Changing the shift position to any positions other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury. After changing the shift position, make sure to confirm the current shift position displayed on the shift position indicator inside the meter.

Related Links

If a warning message is displayed(P. 537)

Shift position display and how to change the shift position

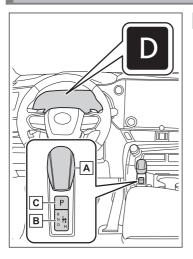

A Shift lever

Operate the shift lever gently and securely in the direction of the arrow on the shift position indicator.

To shift to N, slide the shift lever in the direction of the arrow and hold it.

Release the shift lever after each shifting operation to allow it to return to its regular position (•).

Shifting to M is only possible when the shift position is in D.

When shifting from P to N, D or R, from N, D, M or R to P, from D or M to R, or from R to D, ensure that the brake pedal is being depressed and the vehicle is stationary.

B Shift position indicator

Meter display:

The current shift position is illuminated.

Shift lever display:

The current shift position is illuminated.

When selecting the shift position, make sure that the shift position has been changed to the desired position by checking the shift position indicator provided on the instrument cluster.

C P position switch

Fully stop the vehicle and set the parking brake, and then press the P position switch.

When the shift position is changed to P, the switch illuminates.

Check that the shift position indicator shows P.

☐ INFORMATION

Changing the shift position in each engine switch mode

• The shift position cannot be changed when the engine switch is in ACC or off.

- When the engine switch is in ON, the shift position can only be changed to N.
- When the engine is running, the shift position can be changed from P to D, N, or R.

Shifting the shift position from P to other positions

- While depressing the brake pedal firmly, operate the shift lever. If the shift lever is operated without depressing the brake pedal, the buzzer will sound and the shifting operation will be disabled.
- When selecting the shift position, make sure that the shift position has been changed to the desired position by checking the shift position indicator provided on the instrument cluster.
- The shift position cannot be changed from P to M directly.

■ The shift position cannot be changed when

In the following situations, a buzzer will sound to inform you that the shift position cannot be changed. Use the appropriate operation to attempt to change the shift position again.

- When attempting to change the shift position from P with the brake pedal not depressed
- When attempting to change the shift position from P with the accelerator pedal depressed
- When attempting to change the shift position from N while stopped or driving at an
 extremely low speed with the brake pedal not depressed
- When attempting to change the shift position from N while stopped or driving at an
 extremely low speed with the accelerator pedal depressed
- lacktriangle When attempting to change the shift position from P or N to M
- When the P position switch is pressed while driving
 When driving at an extremely low speed, the shift position may change to P.

■ The shift position automatically changes to N when

In the following situations, a buzzer will sound to inform you that the shift position has been changed to N. Use the appropriate operation to attempt to change the shift position again.

- When attempting to change the shift position to R while the vehicle is moving forward When driving at a low speed, the shift position may change to R.
- When attempting to change the shift position to D while the vehicle is moving backward
 - When driving at a low speed, the shift position may change to D.
- \bullet When attempting to change the shift position from R to M

If the N shift position is selected while driving

If the shift lever is moved to N while driving above a certain speed, the shift position will change to N without holding the shift lever in the N position. In this situation, a buzzer will sound and a message will be displayed on the multi-information display to inform you that the shift position has been changed to N.

Automatic P position selection function

In the following situations, the shift position is automatically changed to P.

- When pressing the engine switch with the vehicle stopped while the engine switch is in ON and the shift position is in a position other than P (after the shift position has changed to P, the engine switch will turn off) *1
- If the driver's door is opened and all of the following conditions are met, while the shift position is in a position other than P
 - The engine switch is in ON.
 - The driver is not wearing the seat belt.
 - The brake pedal is not depressed.

To start off the vehicle after the shift position is changed to P, operate the shift lever again.

- When the vehicle is stopped after the engine has been stopped in an emergency while driving.
- When voltage of the battery drops while the shift position is in a position other than P.

If the shift position cannot be shifted from P

There is a possibility that the battery is discharged. Check the battery in this situation. $(\rightarrow P.556)$

WARNING

For the shift lever

- Do not remove the shift lever knob or use anything but a genuine Lexus shift lever knob. Also, do not hang anything on the shift lever. Doing so could prevent the shift lever from returning to position, causing unexpected accidents to occur when the vehicle is in motion.
- In order to prevent the shift position from accidentally being changed, do not touch the shift lever when not using them.

^{*1:} When the engine switch is pressed while driving at extremely slow speeds, such as immediately before stopping the vehicle, the shift position may automatically change to P. Make sure that the vehicle is completely stopped before pressing the engine switch.

WARNING

P position switch

- Do not press the P position switch while the vehicle is moving.
 - If the P position switch is pressed when driving at very low speeds (for example, directly before stopping the vehicle), the vehicle may stop suddenly when the shift position switches to P, which could lead to an accident.
- In order to prevent the shift position from accidentally being changed, do not touch the P position switch when not using them.

⚠ NOTICE

Notes regarding shift lever and P position switch operation

Avoid repeatedly operating the shift lever and P position switch in quick succession. The system protection function may activate and it will not be temporarily possible to shift the shift position other than P. If this happens, please wait for a while before attempting to change the shift position again.

When exiting the vehicle(driver's seat only)

Check that the shift position indicator shows P and that the parking brake indicator is illuminated before opening the door and exiting the vehicle.

When the engine switch is changed to ACC with the shift position held in ${\sf N}$

Performing the following operations allows the engine switch to be set to ACC with the shift position held in ${\sf N}$.

- Operate the shift lever and change the shift position to N when the engine is operating.
- 2 Return the shift lever to its regular position (•).
- 3 Operate the shift lever to N and hold it there until the buzzer sounds.
- 4 Press the engine switch within 5 seconds after the buzzer sounds.

The engine switch will be set to ACC with the shift position in $N.^{\star2}$

Make sure to check that the buzzer sounds and "Holding N Push P Switch When Done" is displayed on the multi-information display.

^{*2:} To keep this state, do not operate the engine switch. If the engine switch is operated repeatedly, the engine switch will turn off after the shift position has automatically changed to P.

- To change to a shift position other than N, press the P position switch. The shift position will be changed to P.
- Even if the engine is not operating, by operating the shift lever and the engine switch, the engine switch may be changed to ACC with the shift position held in N.
 Make sure that the engine is operating before performing the operation.

∧ NOTICE

Keeping the shift position in N when changing to ACC

When you wish to keep the shift position in N when changing the engine switch to ACC, make sure that the engine is running before operating the engine switch. If the engine switch mode is changed without the engine running, the shift position may change to P.

Changing the shift position (Multidrive)


M WARNING

- Do not let the vehicle roll backward while the shift lever is in a driving position, or roll
 forward while the shift lever is in R. Doing so may cause the engine to stall or lead
 to poor brake and steering performance, resulting in an accident or damage to the
 vehicle.
- Do not change the shift lever to P while the vehicle is moving. Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not change the shift lever to R while the vehicle is moving forward. Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not change the shift lever to a driving position while the vehicle is moving backward. Doing so can damage the transmission and may result in a loss of vehicle control.
- Changing the shift position to N while the vehicle is moving will disengage the engine.
 Engine braking is not available when N is selected.
- Be careful not to change the shift lever with the accelerator pedal depressed. Changing the shift position to any position other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

Shifting the shift lever

- While the engine switch is in ON and the brake pedal depressed*1, shift the shift lever while pushing the shift release button on the shift knob.
- Shift the shift lever while pushing the shift release button on the shift knob.
- Shift the shift lever normally.

When changing the shift lever between P and D, make sure that the vehicle is completely stopped.

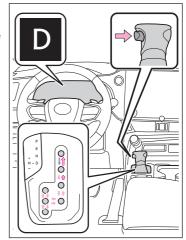

*1: For the vehicle be able to be shifted from P, the brake pedal must be depressed before the shift release button is pushed. If the shift release button is pushed first, the shift lock will not be released.

☐ INFORMATION

Function and operation of the shift lock system

The shift lock system is a system to prevent accidental operation of the shift lever in starting. The shift lever can be changed from P only when the engine switch is in ON and the brake pedal is being depressed.

Releasing the shift lock

WARNING


Before pressing the shift lock override button, make sure to set the parking brake and depress the brake pedal. If the accelerator pedal is accidentally depressed when the shift lock override button is pressed and the shift lever is shifted out of P, the vehicle may suddenly start off.

First, check whether the brake pedal is being depressed. If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.


- 1 Set the parking brake.
- 2 Turn the engine switch off.
- 3 Depress the brake pedal.
- 4 Pry the cover up with a flathead screwdriver or equivalent tool.

To prevent damage to the cover, cover the tip of the screwdriver with a rag.

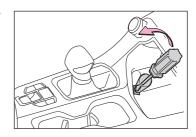

5 Press and hold the shift lock override button and then push the button on the shift knob.

The shift lever can be shifted while the button is pressed.

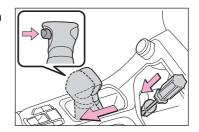

Starting off

1 With the brake pedal depressed, shift the shift position to D.

Check that the shift position indicator shows D.

WARNING

Always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

- 2 If the parking brake is set, release the parking brake.
- 3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

Related Links

Manual applying/releasing of the parking brake (manual mode)(P. 167)

Starting off on an incline

1 Firmly depress the brake pedal and shift the shift position to D.

The hill-start assist control will be activated.

WARNING

Always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

- 2 Set the parking brake.
- 3 Release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.
- 4 Release the parking brake.


Related Links

Manual applying/releasing of the parking brake (manual mode)(P. 167)

Operations when turning left or right or changing lanes

By operating the turn signal lever, the intent of the driver can be shown as follows.

- The turn signal lights can be operated when the engine switch is in ON.
- If the indicator flashes faster than usual, check that a light bulb in the front or rear turn signal lights has not burned out.

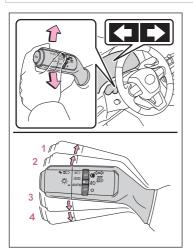

- Move the lever to position 1.
 The right turn signal lights will blink.
- 2 Move the lever to position 2 and release it. The right hand signals will flash 3 times.
- 3 Move the lever to position 3 and release it. The left hand signals will flash 3 times.
- 4 Move the lever to position 4. The left turn signal lights will blink.

Changing the shift range (Automatic transmission)

The shift range can be changed by operating the paddle shift switches. Changing the shift range allows restriction of the highest gear, preventing unnecessary upshifting and enabling the level of engine braking force to be selected.

Selecting shift ranges in the D position

To drive using temporary shift range selection, operate the [-] paddle shift switch with the shift position in D.

The shift range can then be selected by operating the [-] and [+] paddle shift switches.



- 1 Upshift
- 2 Downshift

The selected shift range, from D1 to D8, will be displayed on the multi-information display.

To return to normal D position driving, hold the [+] paddle shift switch for a certain amount of time.

- When D2 D8 is displayed on the multi-information display, the shift range will automatically be changed within the range of 1 and the selected shift range, according to the vehicle speed and driving conditions.
- When D1 is displayed on the multi-information display, the shift range will be held in 1.

A lower shift range will provide greater engine braking forces than a higher shift range.

☐ INFORMATION

■ Automatic deactivation of shift range selection in the D position

Shift range selection in the D position will be deactivated in the following situations:

- When the vehicle comes to a stop
- If the accelerator pedal is depressed for more than a certain period of time
- When the shift position is shifted to a position other than D

■ Downshifting restriction warning buzzer

To help ensure safety and driving performance, downshift operations may be restricted. In some circumstances, downshifting may not be possible even when the paddle shift switch is operated. (A buzzer will sound twice.)


Changing the shift range (Multidrive)

The gear step can be changed by operating the shift lever or paddle shift switches. Changing the gear step enables the level of engine braking force to be selected.

Selecting gear steps in the D position

To drive using temporary gear step selection, operate either paddle shift switch with the shift position in D.

The gear step can then be selected by operating the [-] and [+] paddle shift switches.

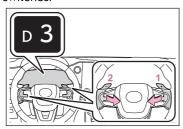

- 1 Upshift
- 2 Downshift

The selected gear step, from D1 to D10, will be displayed on the multi-information display.

To return to normal D position driving, hold the [+] paddle shift switch for a certain amount of time.

- Gear steps and their functions
 - You can choose from 10 levels of engine braking force.
 - A lower gear step will provide greater engine braking force than a higher gear step. As a result, the engine speed will increase.

☐ INFORMATION

Automatic deactivation of gear step selection in the D position

Gear step selection in the D position will be deactivated in the following situations:

- When the vehicle comes to a stop
- If the accelerator pedal is depressed for more than a certain period of time
- When the shift position is shifted to a position other than D
- When the engine speed becomes excessively high for the selected gear step

■ Downshifting restriction warning buzzer

To help ensure safety and driving performance, downshift operations may be restricted. In some circumstances, downshifting may not be possible even when the paddle shift switch is operated. (A buzzer will sound twice.)

Changing the gear step (Automatic transmission)

To enter M mode, shift the shift position to M. A desired gear step can be selected by operating the paddle shift switches.

Changing gear steps in the M position

Gears can be selected by operating the [-] and [+] paddle shift switches.



- 1 Upshift
- 2 Downshift

The gear changes once every time a paddle shift switch is operated.

The selected gear, from M1 to M8, will be held and displayed on the multi-information display.

When the shift position is in the M, the gear will not change unless a paddle shift switch is operated.

However, even when in the M position, the gears will be automatically changed in the following situations:

- When the vehicle speed drops (downshift only)
- When the automatic transmission fluid or engine coolant temperature is low.
- When automatic transmission fluid temperature is high (upshift only).
- When the needle of the tachometer approaches the red zone (a range which exceeds the allowable engine speed).

In the following situation, the gear will not shift even if the paddle shift switch is operated.

• The vehicle speed is low (upshift only).

☐ INFORMATION

■ Downshift restriction warning buzzer

To help ensure safety and driving performance, downshift operations may be restricted. In some circumstances, downshifting may not be possible even when the paddle shift switch is operated. (A buzzer will sound twice.)

■ If the "M" indicator does not come on or the "D" indicator remains displayed after changing the shift position to M


This may indicate a malfunction in the automatic transmission system. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. (In this situation, the transmission will operate in the same manner as when the shift position is in D.)

Changing the gear step (Multidrive)

To enter 10-speed sport sequential shiftmatic mode, shift the shift position to M. Gear steps can be selected by operating the shift lever or paddle shift switches.

Changing gear steps in the M position

The gear step can be selected by operating the shift lever or the [-] and [+] paddle shift switches.

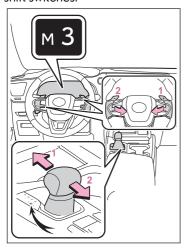

- 1 Upshift
- 2 Downshift

The gear changes once every time the shift lever or a paddle shift switch is operated.

The selected gear, from M1 to M10, will be held and displayed on the multi-information display.

When the shift lever is in the M position, the gear will not change unless the shift lever or a paddle shift switch is operated.

However, even when the shift lever is in the M position, the gear may change automatically depending on the engine speed.

☐ INFORMATION

- When the vehicle comes to a stop with the shift lever in the M position
- \bullet The transmission will automatically downshift to M1 once the vehicle is stopped.
- After a stop, the vehicle will start off in M1.
- When the vehicle is stopped, the transmission is set at M1.

Downshifting restriction warning buzzer

To help ensure safety and driving performance, downshift operations may be restricted. In some circumstances, downshifting may not be possible even when the shift lever or paddle shift switch is operated. (A buzzer will sound twice.)

■ If the "M" indicator does not come on or the "D" indicator remains displayed after changing the shift position to M

This may indicate a malfunction in the automatic transmission system. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. (In this situation, the transmission will operate in the same manner as when the shift position is in D.)

When parking the vehicle

Precautions for when the vehicle is stopped or parked

WARNING

When the vehicle is parked

- Always apply the parking brake, shift the shift position to P, stop the engine and lock
 the vehicle. Do not leave the vehicle unattended while the engine is running.
 If the vehicle is parked with the shift position in P but the parking brake is not set, the
 vehicle may start to move, possibly leading to an accident.
- Never leave a child unattended in the vehicle. A child may accidentally release the parking brake and the vehicle may move, possibly leading to an accident.
- Do not leave glasses, cigarette lighters, spray cans or carbonated drink cans in the vehicle when it is parked in the sun. If left in the vehicle, the following may occur:
 - Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
 - The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
 - Soft drink cans may explode, dirtying the interior and possibly causing a short in electronic components.
- Do not store cigarette lighters in the vehicle storage features or leave them inside the vehicle.
 - When luggage is loaded or a seat is adjusted, a lighter may be unintentionally lit, possibly leading to a fire.
- Do not attach suction cups to the glass parts of the vehicle. Also, do not place air
 fresheners or other clear containers on the instrument panel or dashboard. Suction
 cups and clear containers may act as a lens, possibly leading to a fire inside the vehicle.
- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one.
 - Reflected sunlight may cause the glass to act as a lens, causing a fire.
- Do not touch the exhaust pipes while the engine is running or immediately after turning the engine off. Doing so may cause burns.

When taking a nap in the vehicle

Always turn the engine off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to engine overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may accumulate and enter the vehicle.

Exhaust gas precautions

Harmful substance to the human body is contained in exhaust gases if inhaled.

WARNING

Exhaust gases contain harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions.

Failure to do so may cause exhaust gases to enter the vehicle. This may cause light-headedness, possibly leading to an accident, death or a serious health hazard.

- Keep the back door closed while driving.
 If you smell exhaust gases in the vehicle even when the back door is closed, open the windows and have the vehicle inspected at any authorized Lexus retailer or Lexus
- If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the
 engine.

authorized repairer, or any reliable repairer as soon as possible.

- Do not leave the vehicle with the engine running for a long time. If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.
- Do not leave the engine running in an area with snow build-up, or where it is snowing.
 If snowbanks build up around the vehicle while the engine is running, exhaust gases may collect and enter the vehicle.
- The exhaust system needs to be checked periodically. Check for the following. If any are found, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
 - Holes or cracks in the exhaust pipes due to corrosion
 - Damage at the joining parts of the exhaust pipes
 - Abnormal noise from the exhaust

Stopping

Depress the brake pedal.

WARNING

- Drive more carefully than normal when the brakes are wet. When the brakes are
 wet, the braking distance will increase. Also, the brakes will be difficult to apply
 and, depending on the situation, braking performance may differ between the left
 and right sides. Additionally, the parking brake may not be able to be securely
 applied.
- If the brake booster device does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking. In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase. Have your brakes fixed immediately.
- Do not pump the brake pedal if the engine stalls. Each push on the brake pedal uses up the reserve for the power-assisted brakes.
- If the brake hydraulic system malfunctions, have it repaired immediately. The brake system consists of 2 independent systems and if a hydraulic system fails, the other system will operate. In this situation, it will be necessary to depress the brake pedal more than normal and braking distance will be increased.

⚠ NOTICE

Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

2 If necessary, set the parking brake.

If the vehicle is to be stopped for an extended period of time, shift the shift position to P.

WARNING

When the vehicle is stopped

- Do not race the engine.
 - If the vehicle is in any gear other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.
- In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while the engine is running, and apply the parking brake as necessary.
- If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.

WARNING

Avoid revving or racing the engine. Running the engine at high speed while the
vehicle is stopped may cause the exhaust system to overheat, which could result
in a fire if combustible material is nearby.

Related Links –

Shift position display and how to change the shift position (P. 143)

Shifting the shift lever(P. 148)

Parking the vehicle

- 1 Depress the brake pedal to stop the vehicle completely.
- 2 If the parking brake is released, set the parking brake.
- 3 Shift the shift position to P.

Check that the shift position indicator shows P and the parking brake indicator is illuminated.

▲ WARNING

Always set the parking brake, and shift the shift position to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

- 4 Press the engine switch to stop the engine.
- 5 Slowly release the brake pedal.
- 6 Lock the door, making sure that you have the electronic key on your person.
 If parking on a hill, block the wheels as needed.

– Related Links -

Manual applying/releasing of the parking brake (manual mode)(P. 167)

Changing the shift position (Automatic transmission)(P. 142)

Changing the shift position (Multidrive)(P. 148)

Parking brake operation

The parking brake can be applied or released automatically (automatic mode) or manually (manual mode). In automatic mode, the parking brake is applied or released automatically according to the operation of the shift lever. Also, in automatic mode the parking brake can be applied or released manually.

WARNING

When parking the vehicle

Do not leave a child in the vehicle alone. The parking brake may be released unintentionally by a child and there is the danger of the vehicle moving that may lead to an accident resulting in death or serious injury.

Parking brake switch

Do not set any objects near the parking brake switch. Objects may interfere with the switch and may lead the parking brake to unexpectedly operate.

M NOTICE

When the vehicle is parked

Always apply the parking brake, shift the shift position to P, stop the engine and lock
the vehicle. Do not leave the vehicle unattended while the engine is running.
 If the vehicle is parked with the shift position in P but the parking brake is not set, the
vehicle may start to move, possibly leading to an accident.

When the system malfunctions

Stop the vehicle in a safe place and check the warning messages.

When the vehicle battery is discharged

The parking brake system cannot be activated.

When the parking brake cannot be released due to a malfunction

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer a immediately if this occurs.

■ Parking brake automatic release function

When all of the following conditions are met, the parking brake can be released by depressing the accelerator pedal.

- The driver's door is closed.
- The driver is wearing the seat belt
- The shift lever is in a forward driving position or reverse driving position
- The malfunction indicator lamp and brake system warning light are not illuminated

When depressing the accelerator pedal, depress it slowly. If the parking brake is not released when the accelerator pedal is depressed, release the parking brake manually.

Automatic mode: When the shift position is shifted from P, the parking brake will be released automatically.

Parking brake operation sound

When the parking brake operates, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ Parking brake indicator light

 Depending on the engine switch mode, the parking brake indicator light will turn on and stay on as described below: ON: Comes on until the parking brake is released.

Not in ON: Stays on for approximately 15 seconds.

 When the engine switch is turned off with the parking brake set, the parking brake indicator light will stay on for about 15 seconds. This does not indicate a malfunction.

■ When the parking brake switch malfunctions

Automatic mode (automatic brake setting and releasing) will be turned on automatically.

■ Parking brake engaged warning buzzer

A buzzer will sound if the vehicle is driven with the parking brake engaged. **"Parking Brake ON"** is displayed on the multi-information display (with the vehicle reaching a speed of $5 \, \text{km/h} \, [3 \, \text{mph}]$).

Automatic applying/releasing of the parking brake (auto mode)

While the vehicle is stopped, pull and hold the parking brake switch until "EPB Shift Interlock Function Activated" will be displayed on the multi-information display.

When the automatic mode is turned on, the parking brake operates as follows.

- When the shift position is shifted from P: The parking brake will be released, and the parking brake indicator light will turn off.
- When the shift position is shifted to P: The parking brake will be set, and the parking brake indicator light will turn on.

Operate the shift lever with the brake pedal depressed.

The auto function may not operate if the shift lever is moved extremely quickly. In this situation, apply the parking brake manually.

With the vehicle stopped, press and hold the parking brake switch until a buzzer sounds and "EPB Shift Interlock Function Deactivated" is displayed. Automatic mode will be turned off.

INFORMATION

Parking brake operation

- When the engine switch is not in ON, the parking brake cannot be released using the parking brake switch.
- When the engine switch is not in ON, automatic mode (automatic brake setting and releasing) is not available.

Manual applying/releasing of the parking brake (manual mode)

The parking brake can be set and released manually.



1 Pull the switch to set the parking brake.

The parking brake indicator light will turn on.

Pull and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.

- 2 Press the switch to release the parking brake.
 - Operate the parking brake switch while depressing the brake pedal.
 - The parking brake can be released by depressing the accelerator pedal, through the parking brake automatic release function.

Parking brake automatic release function

Make sure that the parking brake indicator light and the parking brake switch indicator turn off.


If the parking brake indicator light flash, operate the switch again.

Refueling


Opening the fuel tank cap

1 Press the opener to open the fuel filler door.

The fuel filler door will open.

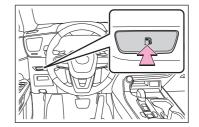

2 Turn the fuel tank cap slowly and remove it, then put it into the holder on the fuel filler door.

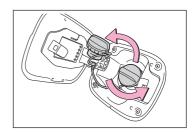

WARNING

Always hold the grips on the fuel tank cap and turn it slowly to remove it. A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out the filler neck and cause injury.

Precautions for refueling

Make sure to select a compatible type of fuel and refuel safely.

WARNING

Observe the following precautions while refueling the vehicle.

- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity.
 - Also, do not allow anyone that has not discharged static electricity from their body to come close to the fuel filler door.
 - Sparks resulting from static electricity discharge may cause fuel vapors to ignite while refueling.
- Do not inhale vaporized fuel. Fuel contains substances that are harmful if inhaled.

WARNING

- Do not smoke while refueling the vehicle. Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged.
 This may cause static electricity to build up, resulting in a possible ignition hazard.
- Securely insert the fuel nozzle into the fuel filler neck.
- Stop filling the tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.

⚠ NOTICE

Do not spill fuel during refueling. Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.


■ Fuel tank opening for unleaded gasoline

To help prevent refueling with the incorrect fuel, your vehicle has a fuel tank opening designed to only accommodate the special nozzle on unleaded fuel pumps.

Close the fuel tank cap

After refueling, turn the fuel tank cap until you hear a click.

Once the cap is released, it will turn slightly in the opposite direction.

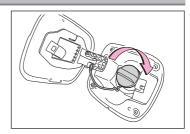

WARNING

If replacing the fuel tank cap, do not use anything but a genuine Lexus fuel tank cap designed for your vehicle. Doing so may cause a fire.

Driving according to the conditions

is dark
Using the headlights <mark>172</mark>
Automatically changing between the low beam headlights and high beam headlights176
3-2. Driving when the sun or head- lights of other vehicles are bright
Using the sun visors
Inside rear view mirror antiglare function (vehicles with auto anti-glare inside rear view mirror)185
Digital Rearview Mirror antiglare function (optical mirror mode)186
3-3. Driving in the rain
Precautions for driving in the rain187 Ensuring visibility in the rain188
3-4. Driving when the windows or mirrors are fogged up
Defog the windshield193
Defog the rear window195
Defog the outside rear view mirrors196
3-5. Driving when it is cold
Preparing for cold weather197
Cold weather driving tips200

3-6. Driving when in the fog or on a
mountain road and visibility is
poor
Fog light illumination202
Sounding the horn204
3-7. Utility vehicle precautions
Utility vehicle precautions 205
3-8. Changing the driving characteristics
Driving modes208
Changing the driving mode 210
Trail Mode (AWD vehicles)212
DAC (Downhill assist control system)214
3-9. Brake hold system
Brake hold system216

Using the headlights

The headlights can be operated manually or automatically.


Related Links -

Customizable features (P. 650)

Turning the headlights on/off

Do not leave the lights on longer than necessary with the engine off. Doing so may lead to discharge of the battery.

Operating the $- \ \ \ \ \ \ \ \ \ \ \$ switch turns on the lights as follows:

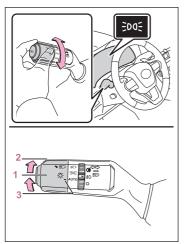

- 1 For The front position, tail, license plate and instrument panel lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 AUTO The headlights, daytime running lights and all the lights listed above turn on and off automatically.

☐ INFORMATION

AUTO mode can be used when

The engine switch is in ON.


■ Daytime running light system

To make your vehicle more visible to other drivers during daytime driving, the daytime running lights turn on automatically whenever the engine is started and the parking brake is released with the headlight switch in AUTO position. (Illuminate brighter than the front position lights.) Daytime running lights are not designed for use at night.

■ Headlight control sensor

The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield. Doing so interferes with the sensor

detecting the level of ambient light and may cause the automatic headlight system to malfunction.

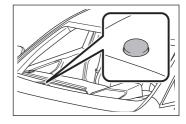

Automatic light off system

- When the light switch is in the position:
 The headlights and front fog lights turn off automatically if the engine switch is turned to OFF.
- When the light switch is in the AUTO position:
 The headlights and all lights turn off automatically if the engine switch is turned to OFF.

 To turn the lights on again, turn the engine switch to ON, or turn the light switch to the
 AUTO position once and then back to ₱0€ or ■○.

■ Light reminder buzzer

A buzzer sounds when the engine switch is turned off or turned to ACC and the driver's door is opened while the lights are turned on.

■ Battery-saving function

In order to prevent the battery of the vehicle from discharging, if the light switch is in the


or AUTO position when the engine switch is turned off the battery saving function will operate and automatically turn off all the lights after approximately 20 minutes. When the engine switch is turned to ON, the battery-saving function will be disabled.

When any of the following are performed, the battery-saving function is canceled once and then reactivated. All the lights will turn off automatically 20 minutes after the battery-saving function has been reactivated:

- When the headlight switch is operated
- When a door or the back door is opened or closed

^{*:} If equipped

Turning on the high beam headlights

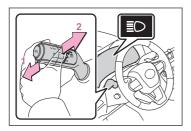

1 With the headlights on, push the lever forward.

The high beam headlights will turn on.

Pull the lever to its original position to turn the high beam headlights off.

2 Pull the lever rearward and release it.

The high beams will flash once.


The high beam headlights can be illuminated this way even with the headlights off.

Extended Headlight Lighting system

The Headlight Lighting system is a system which allows the headlights to be turned on for 30 seconds with the engine switch off.

After turning the engine switch off, with the light switch in AUTO, pull the lever rearward and release it.

Pull the lever rearward and release it again to turn off the lights.

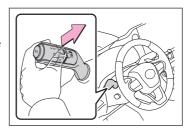

Operation of the cornering lights (vehicles with front fog lights)

When any of the following conditions are met, while the headlights (low beam) are on, the cornering lights will turn on and light up the direction of movement of the vehicle. The cornering lights are designed to ensure excellent visibility when turning at intersections or parking at night.

- The steering wheel is being operated
- The turn signal lever is being operated
- The shift position is in R

■ Cornering light control

- When vehicle speed is approximately 35 km/h (22 mph) or higher, the cornering lights will not turn on.
- The lights will automatically turn off if they remain illuminated for 30 minutes.

Operation of the automatic headlight leveling system

The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road users.

Automatically changing between the low beam headlights and high beam headlights

AHS (Adaptive High-beam System)

The Adaptive High-beam System uses a front camera located on the upper portion of the windshield to detect the brightness of the lights of vehicles ahead, streetlights, etc., and automatically controls the light distribution of the headlights.

WARNING

For safe use

Do not overly rely on the Adaptive High-beam System. Always drive safely, taking care to observe your surroundings and turning the high beams on or off manually if necessary.


■ To prevent unintentional operation of the Adaptive High-beam System

When it is necessary to disable the system: $\rightarrow P.316$

System controls

- According to the vehicle speed, the brightness and illuminated area of the high beams are adjusted.
- When driving around a curve, the system uses the high beams to brightly illuminate the direction of travel of the vehicle.
- The high beams are illuminated so that the area around a vehicle ahead is shaded. (Shaded high beam)

The shaded high beam helps ensure forward visibility while reducing the dazzling effect on the drivers of vehicles ahead.

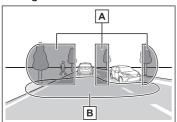


- A Area illuminated by the high beams
- B Area illuminated by the low beams


 According to the distance to a preceding vehicle, the illuminated area of the low beams is adjusted.

Using the Adaptive High-beam System

Press the Adaptive High-beam System switch.

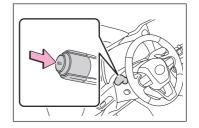

When the headlight switch lever is in the low beam position, the AHS system will be enabled and the AHS indicator will illuminate.

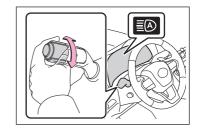

■ System operating conditions

- When all of the following conditions are met, the high beams will illuminate and the system will operate:
 - The vehicle speed is approximately 15 km/h (9 mph) or more*.*1
 - The area ahead of the vehicle is dark.
- When all of the following conditions are met, the headlights will change to the shaded high beams according to the position of vehicles ahead:
 - The vehicle speed is approximately 15 km/h (9 mph) or more.
 - The area ahead of the vehicle is dark.
 - There is a vehicle ahead with lights on.
 - $\bullet\,$ There are few streetlights or other lights on the road ahead.
- If any of the following conditions are met, the system will change to the low beams:
 - The vehicle speed is approximately 12 km/h (7.5 mph) or lower.
 - The area ahead of the vehicle is not dark.
 - There are many vehicles ahead.

^{*1:} When driving around a curve at a vehicle speed of approximately 30 km/h (19 mph) or more, the direction of travel of the vehicle will be brightly illuminated.

• There are many streetlights or other lights on the road ahead.

Front camera detection

- In the following situations, the high beams may not be automatically changed to the shaded high beams:
 - When a vehicle cuts in front of your vehicle
 - When another vehicle crosses in front of the vehicle
 - When vehicles ahead are repeatedly detected and then hidden due to repeated curves, road dividers or roadside trees
 - When a vehicle ahead approaches from a far lane
 - When a vehicle ahead is far away
 - When a vehicle ahead has no lights
 - When the lights of a vehicle ahead are dim
 - When a vehicle ahead is reflecting strong light, such as the headlights of your vehicle
 - Situations in which the sensors may not operate properly: \rightarrow P.321
- The high beams may change to the shaded high beams if a vehicle ahead that is using
 fog lights without its headlights turned on is detected.
- House lights, street lights, traffic signals, and illuminated billboards or signs and other
 reflective objects may cause the high beams to change to the shaded high beams,
 cause the high beams not to change to the shaded high beams, or change the area
 that is not illuminated.
- The following may change the speed at which the shaded areas change or the timing at which the headlights change to the low beams:
 - The brightness of lights of vehicles ahead
 - The movement and direction of vehicles ahead
 - The distance between the vehicle and a vehicle ahead
 - When a vehicle ahead only has lights illuminated on one side
 - When a vehicle ahead is a two-wheeled vehicle
 - The condition of the road (gradient, curve, condition of the road surface, etc.)
 - The number of passengers and amount of luggage
- The light distribution control of the headlights may not match the driver's expectations
- Bicycles and other small vehicles may not be detected.
- In the following situations, the system may not be able to correctly detect the brightness of the surroundings. This may cause the low beams to remain on or the high

beams to flash or dazzle pedestrians or vehicles ahead. In such a case, it is necessary to manually change between the high beams and low beams.

- When there are lights similar to headlights or tail lights in the surrounding area
- When headlights or tail lights of vehicles ahead are turned off, dirty, changing color, or not aimed properly
- When the headlights are repeatedly changing between the high beams and low beams.
- When use of the high beams is inappropriate or when the high beams may be flashing or dazzling pedestrians or other drivers.
- When the vehicle is used in an area in which vehicles travel on the opposite side of the road of the country for which the vehicle was designed, for example using a vehicle designed for right-hand traffic in a left-hand traffic area, or vice versa
- When it is necessary to disable the system: $\rightarrow P.316$
- Situations in which the sensors may not operate properly: \rightarrow P.321

Customization

The settings of some functions can be changed. $\rightarrow P.658$


Turning the high beams on/off manually

■ Changing to the high beams

Push the lever forward.

The AHS indicator will turn off and the high beam indicator will turn on.

Pull the lever to its original position to enable the Adaptive High-beam System again.

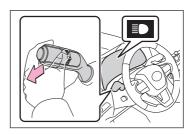


■ Changing to the low beams

Press the Adaptive High-beam System switch.

The AHS indicator will turn off.

Press the switch to enable the Adaptive Highbeam System again.

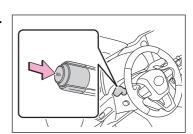


Temporarily changing to the low beams

It is recommended to switch to the low beams when use of the high beams is inappropriate or when the high beams may cause problems or distress to other drivers or pedestrians nearby.

 Pull the lever rearward and then return it to its original position.

The high beams will illuminate while the lever is pulled, however, after the lever is returned to its original position, the low beams will remain on for a certain amount of time. After this, the Adaptive High-beam System will operate.

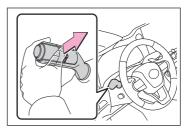

AHB (Automatic High Beam)

The Automatic High Beam uses a front camera located on the upper portion of the windshield to detect the brightness of the lights of vehicles ahead, streetlights, etc., and automatically changes the head lights between the high beams and low beams.

WARNING

For safe use


Do not overly rely on the Automatic High Beam. Always drive safely, taking care to observe your surroundings and turning the high beams on or off manually if necessary.

■ To prevent unintentional operation of the Adaptive High-beam System


When it is necessary to disable the system: \rightarrow P.316

Using the Automatic High Beam system

1 Press the Automatic High Beam switch.

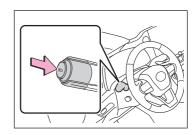

When the headlight switch lever is in the low beam position, the AHS system will be enabled and the AHB indicator will illuminate.

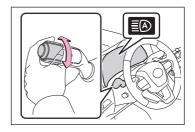

☐ INFORMATION

Automatic operating conditions of the high beams

- When all of the following conditions are met, the high beams will illuminate automatically:
 - The vehicle speed is approximately 30 km/h (19 mph) or more
 - The area ahead of the vehicle is dark.
 - There are no vehicles ahead with lights on.
 - There are few streetlights or other lights on the road ahead.
- If any of the following conditions are met, the headlights will change to the low beams:
 - Vehicle speed drops below approximately 25 km/h (16 mph).
 - The area ahead of the vehicle is not dark.
 - There is a vehicle ahead with lights on.
 - There are many streetlights or other lights on the road ahead.

■ Front camera detection

- In the following situations, the high beams may not be automatically changed to the low beams:
 - When a vehicle cuts in front of your vehicle
 - When another vehicle crosses in front of the vehicle
 - When vehicles ahead are repeatedly detected and then hidden due to repeated curves, road dividers or roadside trees
 - When a vehicle ahead approaches from a far lane
 - When a vehicle ahead is far away
 - When a vehicle ahead has no lights
 - When the lights of a vehicle ahead are dim
 - When a vehicle ahead is reflecting strong light, such as own headlights
 - Situations in which the sensors may not operate properly: \rightarrow P.321


- The headlights may change to the low beams if a vehicle ahead that is using fog lights without its headlights turned on is detected.
- House lights, street lights, traffic signals, and illuminated billboards or signs may cause
 the high beams to change to the low beams, or the low beams to remain on.
- he following may change the the timing at which the headlights change to the low beams:
 - The brightness of lights of vehicles ahead
 - The movement and direction of vehicles ahead
 - The distance between the vehicle and a vehicle ahead
 - When a vehicle ahead only has lights illuminated on one side
 - When a vehicle ahead is a two-wheeled vehicle
 - The condition of the road (gradient, curve, condition of the road surface, etc.)
 - The number of passengers and amount of luggage
- The headlights may change between the high beams and low beams unexpectedly.
- Bicycles and other small vehicles may not be detected.
- In the following situations, the system may not be able to correctly detect the brightness of the surroundings. This may cause the low beams to remain on or the high beams to flash or dazzle pedestrians or vehicles ahead. In such a case, it is necessary to manually change between the high beams and low beams.
 - When there are lights similar to headlights or tail lights in the surrounding area
 - When headlights or tail lights of vehicles ahead are turned off, dirty, changing color, or not aimed properly
 - When the headlights are repeatedly changing between the high beams and low beams.
 - When use of the high beams is inappropriate or when the high beams may be flashing or dazzling pedestrians or other drivers.
 - When the vehicle is used in an area in which vehicles travel on the opposite side of the road of the country for which the vehicle was designed, for example using a vehicle designed for right-hand traffic in a left-hand traffic area, or vice versa
 - When it is necessary to disable the system: \rightarrow P.316
 - Situations in which the sensors may not operate properly: \rightarrow P.321

Turning the high beams on/off manually

- Changing to the high beams
- Push the lever forward.


The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Pull the lever to its original position to enable the Automatic High Beam system again.

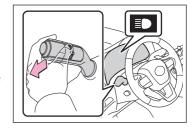

- Changing to the low beams
- Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off. Press the switch to enable the Automatic High Beam system again.

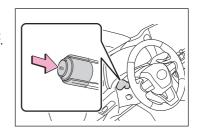


Temporarily changing to the low beams


It is recommended to switch to the low beams when use of the high beams is inappropriate or when the high beams may cause problems or distress to other drivers or pedestrians nearby.

 Pull the lever rearward and then return it to its original position.

The high beams will illuminate while the lever is pulled, however, after the lever is returned to its original position, the low beams will remain on for a certain amount of time. After this, the Automatic High Beam system will operate.

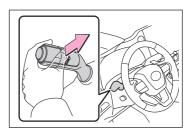

Using the sun visors

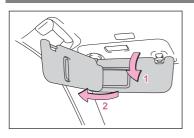

- 1 To set the visor in the forward position, flip it down.
- 2 To set the visor in the side position, flip down, unhook, and swing it to the side.

Inside rear view mirror anti-glare function (vehicles with auto anti-glare inside rear view mirror)

Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.


This function turns on each time the engine switch is turned to ON.

When the anti-glare function of the inside rear view mirror is set to automatic mode, the outside rear view mirrors will activate in conjunction with the anti-glare inside rear view mirror to reduce reflected light.

Push the switch to turn the automatic anti-glare function on/off

When the automatic anti-glare function is on, the indicator A will be illuminated.


Pressing the switch again will turn the function off. (The indicator A will also turn off.)

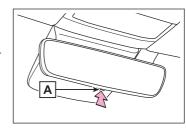

INFORMATION

■ To prevent sensor malfunction

 Do not touch or cover the sensors. Doing so may cause the sensor to malfunction.



Digital Rearview Mirror anti-glare function (optical mirror mode)

The automatic anti-glare function in the optical mirror mode can be enabled/disabled.


The automatic anti-glare function is enabled each time the engine switch is changed to ON.

1 Press the menu button.

The setting display will be displayed.

2 Press the menu button repeatedly and select

The setting display will be displayed.

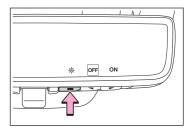

3 Press [] or [] to enable (ON)/disable (OFF) the automatic anti-glare function.

The icons will disappear if a button is not operated for approximately 5 seconds or more.

Precautions for driving in the rain

Observe the following precautions when driving in the rain.

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, as there
 is a risk of a layer of water forming between the tires and the road surface,
 preventing the steering and brakes from operating properly.

Ensuring visibility in the rain

Operate the wiper lever to change the operation of wipers between manual and automatic operation or to operate the washers.

Using the front wipers

WARNING

Take care that your fingers, etc. do not become caught in the windshield wipers.


The windshield wipers may operate unexpectedly in AUTO mode if the sensor is touched or the windshield is subject to vibration.

⚠ NOTICE

Observe the following precautions when using the front wipers.

- Do not leave the front wipers on longer than necessary with the engine off. Doing so may lead to discharge of the battery.
- Do not use the front wipers when the windshield is dry, as they may damage the windshield.

Operating the ∇ lever operates the wipers or washer as follows.

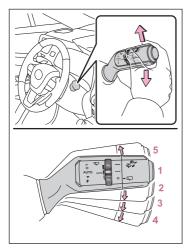

- 1 ° Off
- 2 AUTO Rain-sensing operation

The wipers operate automatically if the sensor detects rain. The system automatically adjusts the speed of the wipers in accordance with rain volume and vehicle speed.

- 3 ▼ Low speed operation
- 4 ¥ High speed operation
- 5 \triangle Temporary operation

■ The front window wiper and washer can be operated when

The engine switch is in ON.

Using the voice control system*

The front wipers can be operated one sweep using the voice control system.

For details, refer to the "Multimedia owner's manual".

Changing the speed of the wipers

When ^{AUTO} is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.



- 1 Increases the sensitivity
- 2 Decreases the sensitivity

☐ INFORMATION


■ Effects of vehicle speed on wiper operation

Vehicle speed affects the intermittent wiper speed.

Raindrop sensor

• The raindrop sensor determines the amount of raindrops that contact the windshield.

As an optical sensor is used, it may not operate properly when sunlight from the rising or setting of the sun intermittently strikes the windshield, or if bugs, etc. are present on the windshield.

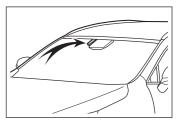

 If the temperature of the raindrop sensor is 90°C (194°F) or higher, or -15°C (5°F) or lower, automatic operation may not occur.

In this case, operate the wipers in any mode other than AUTO mode.

^{*:} If equipped

Using the front washers

WARNING

When it is cold, do not use the washer fluid until the windshield is warm.

The fluid may freeze on the windshield, decreasing visibility, possibly leading to an accident.

⚠ NOTICE

If a washer nozzle is blocked, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Do not try to clear it with a pin or other object. The nozzle will be damaged.

Pull the lever.

The front wipers and washers will operate.

The front wipers will automatically operate a couple of times after the front washers operate.

Vehicles with headlight cleaners: When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After

this, the headlight cleaners will operate every 5th time the lever is pulled.



If washer fluid does not spray, do not operate the switch continuously as doing so may damage the washer fluid pump.

■ The windshield wipers and washer can be operated when

The engine switch is in ON.


■ Drip prevention wiper sweep

After the washers have operated and the wipers operate several times, they will operate one more time after a short delay to prevent drips.

However, this function will not operate while driving.

If no windshield washer fluid sprays

If there is washer fluid in the washer fluid tank, check if the washer nozzles are blocked.

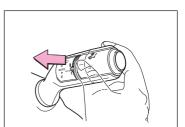

Using the voice control system*

The front washer can be operated using the voice control system. (Operation is possible only when the vehicle is stopped.)

For details, refer to the "Multimedia owner's manual".

Using the rear wipers

⚠ NOTICE

Observe the following precautions when using the rear wipers.

- Do not leave the rear wiper on longer than necessary with the engine off. Doing so may lead to discharge of the battery.
- When the rear window is dry, do not use the wiper, as it may damage the rear window.

☐ INFORMATION

■ The rear window wiper and washer can be operated when

The engine switch is in ON.

Using the voice control system^{*}

The rear wiper can be operated one sweep using the voice control system.

For details, refer to the "Multimedia owner's manual".



Operating the switch operates the rear wiper as follows:



- Off
- --- Intermittent operation
- Normal operation

^{*:} If equipped

Using the rear washer

⚠ NOTICE

If a washer nozzle is blocked, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Do not try to clear it with a pin or other object. The nozzle will be damaged.




Dush the lever.

The rear wiper and washer will operate.

The washer will automatically operate and clean the camera for Lexus parking assist monitor.

The rear wiper will automatically operate a couple of times after the rear washer operates.

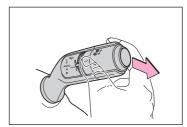

∧ NOTICE

If washer fluid does not spray, do not operate the switch continuously as doing so may damage the rear washer fluid pump.

INFORMATION

■ The rear window wiper and washer can be operated when

The engine switch is in ON.

If no windshield washer fluid sprays

If there is washer fluid in the washer fluid tank, check if the washer nozzles are blocked.

Using the voice control system*

The rear washer can be operated using the voice control system. (Operation is possible only when the vehicle is stopped.)

For details, refer to the "Multimedia owner's manual".

^{*:} If equipped


Defog the windshield

Defoggers are used to defog the windshield and front side windows.

WARNING

- Do not use the windshield defogger in extremely humid areas when the air conditioning system is set to a low temperature.
 - The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.
- Do not place anything on the instrument panel which may cover the air outlets.
 Otherwise, air flow may be obstructed, preventing the windshield defoggers from defogging.



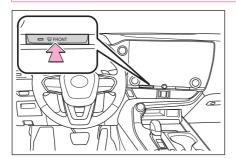

Press the windshield defogger switch.

The dehumidification function will operate and the air flow will increase.

Set the outside/recirculated air mode switch to outside air mode if the recirculated air mode is used. (It may switch automatically.)

To defog the windshield and the side windows quickly, turn the air flow and temperature up.


To return to the previous mode, press the front windshield defogger switch again when the windshield is defogged.

☐ INFORMATION

■ Fogging up of the windows

- The windows will easily fog up when the humidity in the vehicle is high.
 Pressing "A/C" button or selecting "A/C" will dehumidify the air from the outlets and defog the windshield effectively.
- If you turn "A/C" off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

Defog the rear window

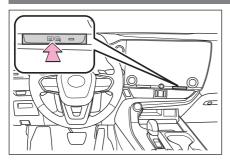

Press the rear windshield and outside rear view mirror defogger switch.


The rear window defogger and outside rear view mirror defoggers will operate and defog the rear window and outside rear view mirrors.

The defoggers will automatically turn off after a period of time.

WARNING

Do not touch the surface of the outside rear view mirrors when the rear window defogger and outside rear view mirror defoggers are operating, as the surface of the mirrors will become extremely hot and may cause burns.

Defog the outside rear view mirrors

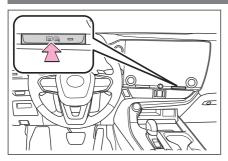

Press the rear windshield and outside rear view mirror defogger switch.

The rear window defogger and outside rear view mirror defoggers will operate and defog the rear window and outside rear view mirrors.

The defoggers will automatically turn off after a period of time.

WARNING

Do not touch the surface of the outside rear view mirrors when the rear window defogger and outside rear view mirror defoggers are operating, as the surface of the mirrors will become extremely hot and may cause burns.

Preparing for cold weather

Carry out the necessary preparations and inspections before driving the vehicle in cold weather. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

Necessary inspection items

- Use fluids that are appropriate to the prevailing outside temperatures.
 - Engine oil
 - Engine coolant
 - Washer fluid
- Have a service technician inspect the condition of the battery.

Mounting winter tires

Have the vehicle fitted with four winter tires.

Ensure that all of the tires are the same size and brand.

WARNING

Observe the following precautions when winter tires are mounted to the vehicle.

Failure to do so may lead to loss of control of the vehicle.

- Use tires of the specified size.
- Maintain the recommended level of air pressure.
- Do not drive at speeds in excess of the speed limit or the speed limit specified for the winter tires mounted.
- When using winter tires, mount them to all four wheels.

M NOTICE

When having winter tires repaired or replaced, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer or legitimate tire retailer.

This is because the removal and mounting of winter tires affects the operation of the tire pressure warning valves and transmitters.

When using tire chains

Install the tire chains to the front two tires.*1

Make sure to use tire chains which match the tire size.

☐ INFORMATION

Observe the following precautions when installing, removing, and handling tire chains:

- Install and remove tire chains in a safe location.
- Install tire chains to the front tires only.

Do not install tire chains to the rear tires.

- Install tire chains following the instructions provided with the tire chains.
- Install tire chains to the front tires as tightly as possible. Retighten the chains after driving 0.5 - 1.0 km (1/4 - 1/2 mile).

WARNING

Observe the following precautions when tire chains are installed to the vehicle.

Failure to do so may lead to the vehicle not being able to be driven safely.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 50 km/h (30 mph), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.
- Do not use LTA (Lane Tracing Assist).
- Do not use LDA (Lane Departure Alert).

⚠ NOTICE

Fitting tire chains


The tire pressure warning valves and transmitters may not function correctly when tire chains are fitted.

Selecting tire chains

Use the correct tire chain size when mounting the tire chains. Chain size is regulated for each tire size.

Vehicles with 235/60R18 tires

^{*1:} Tire chains cannot be mounted on 235/50R20 tires.

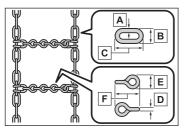

- A Side chain (3 mm [0.12 in.] in diameter)
- B Side chain (10 mm [0.39 in.] in width)
- C Side chain (25 mm [0.98 in.] in length)
- D Cross chain (4 mm [0.16 in.] in diameter)
- E Cross chain (14 mm [0.55 in.] in width)
- F Cross chain (25 mm [0.98 in.] in length)
- Vehicles with 235/50R20 tires.

Tire chains cannot be mounted on the 235/50R20 tires.

Snow tires should be used instead.

■ Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

Cold weather driving tips

Things to check before driving in cold weather

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

Precautions for driving in cold weather

Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions.

Precautions for parking in cold weather

- Turn automatic mode of the parking brake off. Otherwise, the parking brake may freeze and not be able to be released automatically.
 - Also, avoid using the following as the parking brake may operate automatically, even if automatic mode is off.
 - Brake hold system
- Park the vehicle and shift the shift position to P without setting the parking brake. The parking brake may freeze up, preventing it from being released. If the vehicle is parked without setting the parking brake, make sure to block the wheels.
 - Failure to do so may be dangerous because it may cause the vehicle to move unexpectedly, possibly leading to an accident.
- When the parking brake is in automatic mode, release the parking brake after change the shift position to P.
- If the vehicle is parked without setting the parking brake, confirm that the shift lever cannot be moved out of P.
- Park the vehicle and change the shift podition to P without setting the parking brake.

If the vehicle is parked without setting the parking brake, make sure to block the wheels. Failure to do so may be dangerous because it may cause the vehicle to move unexpectedly, possibly leading to an accident.

• If the vehicle is left parked with the brakes damp in cold temperatures, there is a possibility of the brakes freezing.

Linked mirror function when reversing

When used in cold weather during reverse driving, the door mirror could be frozen and may not automatically point the mirror surface downward. In this event, remove any ice and snow from the mirror surface.

Warming the windshield to allow frozen wipers to be moved*

Vehicles with Heated Windshield Defroster:

Use the Heated Windshield Defroster to help prevent the windshield wiper blades from freezing to the windshield.

Select the [Deicer]switch.

The Heated Windshield Defroster will not operate if the outside temperature is 5° C (41°F) or higher.

The Heated Windshield Defroster will automatically turn off in 4 minutes.

Vehicles with windshield wiper de-icer:

Use the windshield wiper de-icer to help prevent the windshield wiper blades from freezing to the windshield.

Select the [Deicer] switch on the option screen.

The windshield wiper de-icer will automatically turn off after a period of time.

WARNING

Vehicles with windshield wiper de-icer: Do not touch the lower part of the windshield or parts along the front pillars when the windshield wiper de-icer is on, as they will be hot and may cause burns.

^{*:} If equipped

Fog light illumination


When driving in inclement weather, such as in rain and fog, turn on the front fog lights to ensure forward visibility and turn on the rear fog lights to make your vehicle more visible to following vehicles.

Using the fog lights

⚠ NOTICE

To prevent battery discharge, do not leave the lights on longer than necessary with the engine stopped.

▶ Rear fog light switch

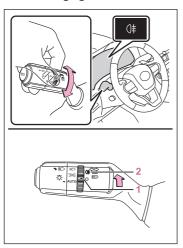


- 1 O Turns the rear fog light off
- 2 Itrns the rear fog light on

Releasing the switch ring returns it to $\,^{\circ}$. Operating the switch ring again turns the rear fog light off.

Fog lights can be used when

The headlights are on.

► Front and rear fog light switch

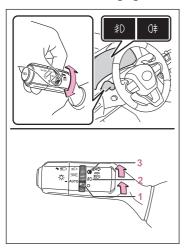

- 1 O Turns the front and rear fog lights off
- 2 邦 Turns the front fog lights on
- 3 O‡ Turns both the front fog lights and the rear fog light on

Releasing the switch ring returns it to \$\frac{1}{2}\$D.

Operating the switch ring again turns only the rear fog light off.

☐ INFORMATION


Fog lights can be used when

Front fog lights: The front position lights are turned on.

Rear fog light: The front fog lights are turned on.

Sounding the horn

Press on or close to the mark.

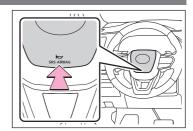

Utility vehicle precautions

This vehicle belongs to the utility vehicle class, which has higher ground clearance and narrower tread in relation to the height of its center of gravity.

Utility vehicle feature

- Specific design characteristics give it a higher center of gravity than ordinary
 passenger cars. This vehicle design feature causes this type of vehicle to be
 more likely to rollover. Utility vehicles have a significantly higher rollover rate
 than other types of vehicles.
- An advantage of the higher ground clearance is a better view of the road allowing you to anticipate problems.
- It is not designed for cornering at the same speeds as ordinary passenger cars any more than low-slung sports cars designed to perform satisfactorily under off-road conditions. Therefore, sharp turns at excessive speeds may cause rollover.

WARNING

Utility vehicle precautions

Always observe the following precautions to minimize the risk of death or serious injury or damage to your vehicle:

- In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. Therefore, the driver and all passengers should always fasten their seat belts.
- Avoid sharp turns or abrupt maneuvers, if at all possible. Failure to operate this vehicle correctly may result in loss of control or vehicle rollover causing death or serious injury.
- Loading cargo on the roof luggage carrier (if equipped) will make the center of the
 vehicle gravity higher. Avoid high speeds, sudden starts, sharp turns, sudden braking
 or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due
 to failure to operate this vehicle correctly.
- Always slow down in gusty crosswinds. Because of its profile and higher center of gravity, your vehicle is more sensitive to side winds than an ordinary passenger car. Slowing down will allow you to have better control.
- Do not drive horizontally across steep slopes. Driving straight up or straight down is preferred. Your vehicle (or any similar off-road vehicle) can tip over sideways much more easily than forward or backward.

Off-road driving

Your vehicle is not designed to be driven off-road. However, in the event that off-road driving cannot be avoided, please observe the following precautions to help avoid the areas prohibited to vehicles.

- Drive your vehicle only in areas where off-road vehicles are permitted to travel.
- Respect private property. Get owner's permission before entering private property.
- Do not enter areas that are closed. Honor gates, barriers and signs that restrict travel.
- Stay on established roads. When conditions are wet, driving techniques should be changed or travel delayed to prevent damage to roads.

WARNING

Off-road driving precautions

Always observe the following precautions to minimize the risk of death or serious injury or damage to your vehicle:

- Drive carefully when off the road. Do not take unnecessary risks by driving in dangerous places.
- Do not grip the steering wheel spokes when driving off-road. A bad bump could jerk
 the wheel and injure your hands. Keep both hands and especially your thumbs on the
 outside of the rim.
- Always check your brakes for effectiveness immediately after driving in sand, mud, water or snow.
- After driving through tall grass, mud, rock, sand, water, etc., check that there is no
 grass, bush, paper, rags, stone, sand, etc. adhering or trapped to the underbody. Clear
 off any such matter from the underbody. If the vehicle is used with these materials
 trapped or adhering to the underbody, a breakdown or fire could occur.
- When driving off-road or in rugged terrain, do not drive at excessive speeds, jump, make sharp turns, strike objects, etc. This may cause loss of control or vehicle rollover causing death or serious injury. You are also risking expensive damage to your vehicle's suspension and chassis.

M NOTICE

To prevent water damage

Take all necessary safety measures to ensure that water damage to the engine or other components does not occur.

⚠ NOTICE

- Water entering the engine air intake will cause severe engine damage.
- Water entering the transmission will cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage.
- Water can wash the grease from wheel bearings, causing rusting and premature failure, and may also enter the differentials, transmission and transfer case, reducing the gear oil's lubricating qualities.

When you drive through water

If driving through water, such as when crossing shallow streams, first check the depth of the water and the bottom of the riverbed for firmness. Drive slowly and avoid deep water.

Inspection after off-road driving

- Sand and mud that has accumulated around brake discs may affect braking efficiency and may damage brake system components.
- Always perform a maintenance inspection after each day of off-road driving that has taken you through rough terrain, sand, mud, or water.

Driving modes

The following driving modes can be used according to the driving/usage conditions.

Characteristics of each driving mode

Vehicles without Adaptive Variable Suspension System:

■ Normal mode

Suitable when driving in the city, for good fuel consumption efficiency, silence, and drive-ability.

■ Eco mode

In contrast with Normal mode, torque generation is slower when stepping on the accelerator pedal, air conditioning operations (heating/cooling) are restrained, and driving becomes suited for improved fuel consumption.

■ Sport mode

Helps to ensure steering feel and accelerator response by controlling the engine and transmission. Suitable for sporty, fun driving, such as when driving on mountain roads.

Vehicles with Adaptive Variable Suspension System:

■ Normal/Custom mode

Normal mode

Suitable when driving in the city, for good fuel consumption efficiency, silence, and drive-ability.

Custom mode

Driving is possible by setting the desired function for power train control, chassis control or air conditioning operations. Custom mode settings can only be changed on the drive mode customization display of the center display.

■ Eco mode

In contrast to Normal mode when stepping on the accelerator pedal, torque generation becomes slower, air conditioning operations (heating/cooling) are restrained, and driving is suited for improved fuel consumption.

Sport mode

Sport S mode

Through control of the engine and transmission, the generated torque when the accelerator pedal is depressed is increased. Making this mode suitable for when powerful acceleration is desired.

Sport S+ mode


Through control of the engine and transmission, the generated torque when the accelerator pedal is depressed is further increased, and excellent stability is provided through comprehensive control of the steering and suspension. Making this mode suitable for sporty driving.

Operation of the air conditioning system in Eco mode

- In the Eco mode, the air conditioning system is controlled as follows to prioritize fuel efficiency.
 - Engine speed and compressor operation controlled to restrict heating/cooling capacity
 - Fan speed restricted when automatic mode is selected
- To improve air conditioning performance, perform the following operations.
 - · Adjust the fan speed
 - Adjust the temperature setting
 - Turn off Eco mode
- When the driving mode is set to Eco mode, the air conditioning system may automatically change to Eco mode. To cancel eco mode, press [Eco heat/cool].

Changing the driving mode

▶ Vehicles without Adaptive Variable Suspension System

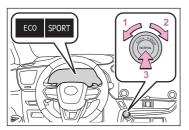

1 Eco mode

When not in Eco mode, turn the driving mode select switch to the left to change the driving mode to Eco mode. The Eco drive mode indicator will be displayed on the multi-information display.


2 Sport mode

When not in Sport mode, turn the driving mode select switch to the right to change the driving mode to Sport mode. The Sport mode indicator will be displayed on the multi-information display.

3 Normal mode

Press the driving mode select switch to change the driving mode to Normal mode when Eco mode or Sport mode is selected.

▶ Vehicles with Adaptive Variable Suspension System

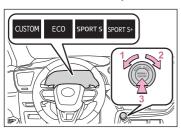

1 Eco mode

When not in Eco mode, turn the driving mode select switch to the left to change the driving mode to Eco mode. The Eco drive mode indicator will be displayed on the multi-information display.

2 Sport mode

Sport S mode

When not in Sport S mode, turn the driving mode select switch to the right to change the driving mode to Sport S mode. The Sport S mode indicator will be displayed on the multi-information display.

Sport S+ mode

When Sport S mode, turn the driving mode select switch to the right to change

the driving mode to Sport S+ mode. The Sport S+ mode indicator will be displayed on the multi-information display.

3 Normal/Custom mode

Press the switch to select Normal mode or Custom mode. Each time the switch is pressed, the system changes between Normal mode and Custom mode.

When Custom mode is selected, the Custom mode indicator will be displayed on the multi-information display.

If the switch is pressed when in Eco mode or Sport mode, the system will return to Normal mode.

INFORMATION

■ Canceling Sport/Custom mode

- Select another driving mode. Sport mode and Custom mode will be canceled automatically when the engine switch is turned off.
- Normal mode and Eco mode will not be canceled automatically until another driving mode is selected, even if the engine switch is turned off.

■ Display of the multi-information display according to selected driving mode

According to the driving mode selected, the gauges displayed on the multi-information display may change.

Related Links

Customizable features (P. 650)

Trail Mode (AWD vehicles)

Trail Mode is designed to control the spinning of the drive wheels by integradely controlling 4WD, brake and drive force control systems. Use the Trail Mode when driving bumpy roads, etc.

Press the Trail Mode switch.

Press the Trail Mode switch, to turn the Trail Mode on. The Trail Mode indicator light will come on the multi-information display. To turn the system off, press the Trail Mode switch again.

If the tires are spinning, the slip indicator flashes to indicate that the Trail Mode is controlling the spinning of the tires.





■ Trail Mode

- Trail Mode controls the vehicle so that it can use the maximum amount of drive force when driving on rough roads. As a result, fuel efficiency may diminish when compared to driving with Trail Mode off.
- If Trail Mode is continuously used for a long period of time, depending on the driving conditions, the load on related parts increases and the system may not function correctly. In this case, "Traction Control Turned OFF" will be shown on the multi-information display but the vehicle can be driven normally. The "Traction Control Turned OFF" on the multi-information display will turn off after a short while and the system will operate properly.

■ When Trail Mode is canceled

In the following situations, Trail Mode is automatically canceled even if it is selected:

- When the driving mode is changed.
- When the engine is restarted.

Sounds and vibrations when driving in Trail Mode

Any of the following conditions may occur when Trail Mode is operating. None of these indicates that a malfunction has occurred:

- Vibrations may be felt throughout the vehicle or steering
- Sounds may be heard from the engine compartment

■ When the Trail Mode indicator does not illuminate

When the Trail Mode indicator does not illuminate even thourgh the Trail Mode switch is pressed, the system may be malfunctioning.

Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

WARNING

Before using Trail Mode

Make sure to observe the following precautions. Failure to observe these precautions may result in an unexpected accident.

- Trail mode is intended for use when driving on rough roads.
- Check that the Trail Mode indicator is illuminated before driving.
- Trail Mode is not intended to expand the limits of the vehicle. Thoroughly check the road conditions and drive with caution.

⚠ NOTICE

In order to ensure that Trail Mode operates properly

Do not continuously use the Trail Mode for a long period of time. Depending on the driving conditions, the load on related parts increases and the system may not operate properly.

- Related Links

Changing the driving mode (P. 210)

DAC (Downhill assist control system)

The downhill assist control system helps to prevent excessive speed on steep downhill slopes. The system will operate when the vehicle is traveling under $30 \, \text{km/h}$ ($18 \, \text{mph}$) with the accelerator and brake pedals released.

Press the "DAC" switch.

The downhill assist control system indicator will comes on and the system will operate. When the system is in operation, the slip indicator will flash, and the stop lights/high mounted stop lights will be lit. A sound may also occur during the operation. This does not indicated a malfunction.



Press the "DAC" switch while the system is in operation.

The downhill assist control system indicator will flash as the system gradually ceases operation, and will turn off when the system is fully off. Press the "DAC" switch while the downhill assist control system indicator is flashing to start the system again.

Operating tips

The system will operate when the shift position is in a 1 range of S mode or R.

If the downhill assist control system indicator flashes

- In the following situations, the indicator flashes and the system will not operate:
 - The shift position is in a position other 1 range of S mode or R.
 - The vehicle speed exceeds approximately 25 km/h (15 mph).
 - The brake system overheats.
- In the following situation, the indicator flashes to alert the driver, but the system will operate:
 - The "DAC" switch is turned off while the system is operating.
 The system will gradually ceases operation. The indicator will flash during operation, and then go off when the system is fully off.

■ When the downhill assist control system is operated continuously

This may cause the brake actuator to overheat. In this case, the downhill assist control system will stop operating, a buzzer will sound and the downhill assist control system indicator will start flashing, and the "Traction Control Turned OFF" will be shown on the multi-information display. Refrain from using the system until the downhill assist control

system indicator stays on and the "Traction Control Turned OFF" goes off. (The vehicle can be driven normally during this time.)

Sounds and vibrations caused by the downhill assist control system

- A sound may be heard from the engine compartment when the engine is started or
 just after the vehicle begins to move. This sound does not indicate that a malfunction
 has occurred in downhill assist control system.
- Either of the following conditions may occur when the downhill assist control system is operating. None of these are indicators that a malfunction has occurred.
 - Vibrations may be felt through the vehicle body and steering.
 - A motor sound may be heard after the vehicle comes to a stop.

■ System malfunction

In the following cases, have your vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer dealer.

- The downhill assist control system indicator does not come on when the engine switch is turned to ON.
- The downhill assist control system indicator does not come on when the "DAC" switch is pressed.
- The slip indicator comes on.

WARNING

When using downhill assist control system

Do not rely overmuch on the downhill assist control system. This function does not extend the vehicle's performance limitations. Always thoroughly check the road conditions, and drive safely.

■ Situations in which the system may not operate properly

The system may not operate on the following surfaces, which may lead to an accident causing death or serious injury.

- Slippery surfaces such as wet or muddy roads
- lcy surface
- Unpaved roads

Brake hold system

WARNING

When the vehicle is on a steep incline

When using the brake hold system on a steep incline, exercise caution. The brake hold function may not hold the vehicle in such a situation.

When stopped on a slippery road

The system cannot stop the vehicle when the gripping ability of the tires has been exceeded. Do not use the system when stopped on a slippery road.

⚠ NOTICE

When parking the vehicle

The brake hold system is not designed for use when parking the vehicle for a long period of time. Turning the engine switch off while the system is holding the brake may release the brake, which would cause the vehicle to move. When operating the engine switch, depress the brake pedal, shift the shift position to P and set the parking brake.

- Related Links

Parking brake operation(P. 165)

Brake hold operated indicator (warning buzzer)(P. 536)

Turns the brake hold system on

The brake hold system keeps the brake applied when the shift lever is in D, M or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or M to allow smooth start off.

The brake hold system keeps the brake applied when the shift position is in D, M or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift position in D or M to allow smooth start off.

Turns the brake hold system on

The brake hold standby indicator (green) comes on. While the system is holding the brake, the brake hold operated indicator (yellow) comes on.



☐ INFORMATION

Brake hold system operating conditions

The brake hold system cannot be turned on in the following conditions:

- The driver's door is not closed.
- The driver is not wearing the seat belt.
- The parking brake is engaged.

If any of the conditions above are detected when the brake hold system is enabled, the system will turn off and the brake hold standby indicator light will go off. In addition, if any of the conditions are detected while the system is holding the brake, a warning buzzer will sound and a message will be shown on the multi-information display. The parking brake will then be set automatically.

Brake hold function

- If the brake pedal is left released for a period of about 3 minutes after the system has started holding the brake, the parking brake will be set automatically. In this case, a warning buzzer sounds and a message is shown on the multi-information display.
- The brake hold function may not hold the vehicle when the vehicle is on a steep incline. In this situation, it may be necessary for the driver to apply the brakes. A warning buzzer will sound and the multi-information display will inform the driver of this situation. If a warning message is shown on the multi-information display, read the message and follow the instructions.
- To turn the system off while the system is holding the brake, firmly depress the brake pedal and press the button again.
- When do not wish for the parking brake to operate automatically, press and hold the brake hold switch until the standby indicator (green) turns off, and then turn the engine switch off.

■ When the parking brake is set automatically while the system is holding the brakes

Perform any of the following operations to release the parking brake.

- Depress the accelerator pedal. (The parking brake will not be released automatically if the seat belt is not fastened.)
- Operate the parking brake switch with the brake pedal depressed.

Make sure that the parking brake indicator light goes off.

When an inspection at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer is necessary

When the brake hold standby indicator (green) does not illuminate even when the brake hold switch is pressed with the brake hold system operating conditions met, the system may be malfunctioning.

3-9. Brake hold system

Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

■ If "Brake Hold Malfunction" is displayed on the multiinformation display

The system may be malfunctioning.

Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

■ Warning messages and buzzers

Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution. If a warning message is shown on the multi-information display, read the message and follow the instructions.

Interior features

4

4-i. ravorite settings
My Settings220
4-2. Adjusting the preferred driving position
Enabling easier driver entry and exit (Power easy access system)22
Driving position registration/recall/deletion223
4-3. Adjusting the temperature/environment inside the vehicle
Comfortable condition to be maintained without adjusting each system (Lexus Climate Concierge)227
Air conditioning controls229
Heated steering wheel237
Seat heaters238
Seat ventilators240
Using the moon roof241
Using the panoramic moon roof 244
Opening and closing the electronic sunshade247
4-4. Illuminating the interior
Using the interior lights249
4-5. Using the interior features
Location of the storage features253
Convenient interior features 259

4-6. Using the luggage compartment

Using the cargo hooks270
Using the cargo net hooks271
Using the grocery bag hooks 272
Deck board 273
Stowing the luggage cover 275

My Settings

By recognizing an individual through a device, such as an electronic key, the driving position and vehicle settings recorded for that driver can be recalled when the vehicle is entered. By assigning an authentication device to a driver in advance, the driver can enter the vehicle with their preferred settings. Settings for up to 3 drivers can be recorded by My Settings. For details on how to assign/delete electronic keys, set driver names, perform initialization, change drivers manually, or delete a driver, refer to the "Multimedia owner's manual".

■ Types of assigned authentication devices

An individual can be identified using the following authentication devices.

• Electronic key

An individual is identified when the smart entry & start system detects their electronic key.

Bluetooth devices

An individual can be detected if the same Bluetooth device that was used as a handsfree phone the last time the vehicle was entered is connected to the audio system.

Recalled functions

When an individual is identified from an authentication device, settings for the following functions are recalled.

Driving position (memory recall function)*

After an individual is identified, the driving position that was set when driving was last completed is recalled when the following operation is performed.

The door is unlocked and opened using the smart entry & start system or wireless remote control.

- Meter displays, head-up display* and multimedia information*1
 When an individual is identified, the vehicle settings used when the engine switch was last turned off are recalled.
- Vehicle settings that can be set using the center display*1
 When an individual is identified, the vehicle settings used when the engine switch was last turned off are recalled.
- Safe driving support function*1

^{*:} If equipped

^{*1:} Some settings are excluded


When an individual is identified, the vehicle settings used when the engine switch was last turned off are recalled.

Enabling easier driver entry and exit (Power easy access system)

WARNING

Never use any part of your body to intentionally activate the jam protection function.

When all of the following have been performed, the driver's seat and steering wheel are automatically adjusted to a position that allows driver to enter and exit the vehicle easily.

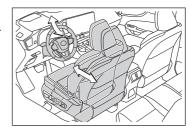

- The shift position has been shifted to P.
- The engine switch has been turned to ACC or ON.
- The driver's seat belt has been unfastened.

When any of the following has been performed, the driver's seat and steering wheel automatically return to their original positions.

- The engine switch has been turned to ACC mode or ON.
- The driver's seat belt has been fastened.

Operation of the power easy access system

When exiting the vehicle, the power easy access system may not operate if the seat is already close to the rearmost position, etc.

■ Jam protection function

While the power easy access system is operating, if an object is stuck behind the front seat, the front seat will stop and then slightly move forward. When the jam protection function operates, the seat stops at a position other than the set seat position. Check the seat position.

– Related Links [.]

Customizable features (P. 650)

^{*:} If equipped

Driving position registration/recall/deletion

This feature automatically adjusts the positions of the driver's seat, steering wheel, outside rear view mirrors and head-up display* to make entering and exiting the vehicle easier or to suit your preferences.

Up to 3 different driving positions can be recorded for each the driver and guest that have been registered for My Settings. When electronic key (including a card key) assignment is registered for My Settings, the driving position for each driver can be recalled (memory recall function).

☐ INFORMATION

Using the voice control system*

The following operations can be performed using the voice control system:


- Driving position registration
- Driving position recall (only when the shift position is in P)

For details, refer to the "Multimedia owner's manual".

Registering a driving position into memory (position memory function)

- 1 Check that the shift position is in P.
- 2 Turn the engine switch to ON.
- Adjust the driver's seat, steering wheel, outside rear view mirrors and head-up display to the desired positions.
- 4 While pressing the "SET" button, or within 3 seconds after the "SET" button is pressed, press button "1", "2" or "3" until the buzzer sounds.

If a driving position has already been registered to the selected button, the previously registered position will be overwritten.

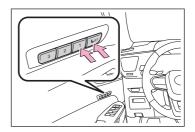

Seat positions that can be memorized

The adjusted positions other than the position adjusted by lumbar support switch can be recorded.

^{*:} If equipped

In order to correctly use the driving position memory function

If a seat position is already in the furthest possible position and the seat is operated in the same direction, the registered position may be slightly different when it is recalled.

WARNING


Take care during seat adjustment so that the seat does not contact a rear passenger or squeeze your body against the steering wheel.

Recalling a driving position (position memory function)

WARNING

Never use any part of your body to intentionally activate the jam protection function.

- 1 Check that the shift position is in P.
- 2 Turn the engine switch to ON.
- 3 Press one of the buttons for the driving position you want to recall until the buzzer sounds.

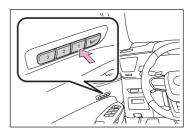

☐ INFORMATION

■ To stop the position recall operation part-way through

Perform any of the following:

- Press the "SET" button.
- Press button "1", "2" or "3".
- Operate any of the seat adjustment switches (only cancels seat position recall).
- Operate the tilt and telescopic steering control switch (only cancels steering wheel position recall).
- Operating the driving position memory after turning the engine switch off

Registered seat positions can be recalled up to 180 seconds after the driver's door is opened and another 61 seconds after it is closed again.

■ When the recorded seat position cannot be recalled

The seat position may not be recalled in some situations when the seat position is recorded in a certain range.

For details, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

■ Jam protection function

While the driving position is recalled or the power easy access system is operating, if an object is stuck behind the front seat, the front seat will stop and then slightly move forward. When the jam protection function operates, the seat stops at a position other than the set seat position. Check the seat position.

Recalling a driving position

Take care so that a head restraint does not contact the ceiling or a sun visor.

Registering a driving position to an electronic key (memory recall function)

The driving positions can be automatically recalled for each registered driver by registering electronic key assignments in My Settings.

When the shift position is changed to P after driving the vehicle, the current driving position will be recorded.

Clearing the registered driving position from an electronic key (memory recall function)

The driving positions can be automatically recalled for each registered driver by registering electronic key assignments in My Settings.

Initialize the driver registered settings in My Settings.

Recalling the registered driving position from an electronic key (memory recall function)

The driving positions can be automatically recalled for each registered driver by registering electronic key assignments in My Settings.

WARNING

Never use any part of your body to intentionally activate the jam protection function.

1 Carry only the key that has been assigned and registered in My Settings, and then unlock and open the driver's door using the smart entry & start system or wireless remote control.

The driving position other than the steering wheel will move to the recorded position. However, the seat will move to a position slightly behind the recorded position in order to make entering the vehicle easier.

If the driving position is in a position that has already been recorded, the driving position will not move.

2 Turn the engine switch to ACC or ON.

The seat and steering wheel (only when the engine switch is in ON) will move to the recorded position.

Jam protection function

While the driving position is recalled or the power easy access system is operating, if an object is stuck behind the front seat, the front seat will stop and then slightly move forward. When the jam protection function operates, the seat stops at a position other than the set seat position. Check the seat position.

■ Recalling a driving position

Take care so that a head restraint does not contact the ceiling or a sun visor.

Comfortable condition to be maintained without adjusting each system (Lexus Climate Concierge)

Operation of the seat heaters and seat ventilators of the front seats and the heated steering wheel is performed automatically according to the temperature setting of the air conditioning system, outside temperature, temperature inside the vehicle, etc.*

Lexus Climate Concierge

Lexus Climate Concierge operates in conjunction with [AUTO] of the air conditioning system.

- 1 Select the option screen switch. \rightarrow P.230
- 2 Select the [Climate concierge] switch.
- 3 Turn the [AUTO] switch on.

Automatically controllable functions

Automatic air conditioning system→ P.229

Operation of the air conditioning system is performed automatically according to the temperature setting for the driver's side/front passenger's side.

Seat heaters → P.238

Operation of the seat heaters is performed automatically according to the temperature setting for the driver's side/front passenger's side.

Operation will automatically change between the seat heaters and seat ventilators according to the temperature setting of the air conditioning system, outside temperature, etc.

Seat ventilators → P.240

Operation of the seat ventilators is performed automatically according to the temperature setting for the driver's side/front passenger's side.

Operation will automatically change between the seat heaters and seat ventilators according to the temperature setting of the air conditioning system, outside temperature, etc.

Heated steering wheel→ P.237

Operation of the heated steering wheel is performed automatically according to the temperature setting of the air conditioning system, outside temperature, etc.

^{*:} If equipped

4-3. Adjusting the temperature/environment inside the vehicle

☐ INFORMATION

Passenger detection functions

- When a passenger is detected in the front passenger seat, the seat heater and ventilator will operate automatically.
- When the seat heater/seat ventilator switch is set to AUTO, the passenger detection function will not operate.
- Rear seat heater operation (vehicles with rear seat heaters)

The rear seat heaters are not controlled by the Lexus Climate Concierge.

Air conditioning controls

When the [AUTO] switch is on, the air outlets and fan speed will automatically be changed according to the set temperature. The button positions and shapes will differ for right-hand drive vehicles. Also, the display and button positions will differ depending on the type of the system.

⚠ NOTICE

Do not leave the air conditioning system on longer than necessary when the engine is off.

When driving on dusty roads

Close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake mode be set to outside air mode and the fan speed to any setting except off.

■ When the outside temperature is low

The dehumidification function may not operate even when [A/C] is selected.

Ventilation and air conditioning odors

- To let fresh air in, set the air conditioning system to the outside air mode.
- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
 - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
 - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.
- When parking, the system automatically switches to outside air mode to encouragebetter air circulation throughout the vehicle, helping to reduce odors that occur when starting the vehicle.

Using the voice command system

Air conditioning system can be operated using voice commands. For details, refer to "Multimedia owner's manual"

Customization


Functions that are linked to automatic mode (when the [AUTO] switch is on) can be set through [Vehicle customise] on the center display.

Related Links

Customizable features(P. 650)


Option screen switch

▶ 14-inch center display model

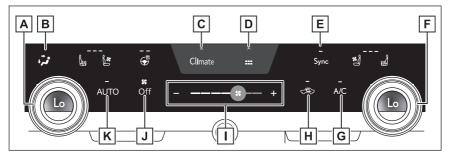

- A Left-hand side temperature control switch
- B Airflow mode control switch
- C Option screen switch
- D Shortcut screen switch
 Select to display shortcut icons for various functions.
- E [Sync] switch
- F | Right-hand side temperature control switch
- G [A/C] switch
- H Outside/recirculated air mode switch
- Fan speed control switch
- J [OFF] switch
- K [AUTO] switch

▶ 9.8-inch center display model

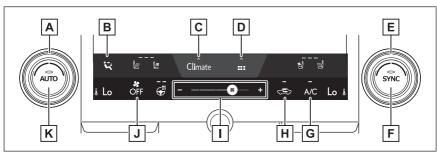

A Left-hand side temperature control switch

- B Airflow mode control switch
- C Option screen switch
- D Shortcut screen switch

Select to display shortcut icons for various functions.

- E Right-hand side temperature control switch
- F [SYNC] switch
- G [A/C] switch
- H Outside/recirculated air mode switch
- I Fan speed control switch
- J [OFF] switch
- K [AUTO] switch

Adjusting the temperature

Turn temperature control dial clockwise to increases the temperature and turn the dial counterclockwise to decreases the temperature.

When the indicator on the [Sync] switch is illuminated, the temperature setting for the front passenger's side will match the setting for the driver's side.

When the indicator on the [Sync] switch is off, turning the [Sync] switch on will illuminate the [Sync] switch indicator and the temperature setting for the front passenger's side will become the same as that for the driver's side.

When the front passenger's side temperature adjustment switch is operated, the indicator on the [Sync] switch will turn off and the temperature setting for the front passenger's side will be able to be adjusted.

When the indicator on the [A/C] switch is off, the blower and heater can be used.

Setting the fan speed

To increase the fan speed, select the [+] fan speed adjustment switch or slide the icon of the fan speed adjustment switch right. To decrease the fan speed, select the [-] fan speed adjustment switch or slide the icon of the fan speed adjustment switch left.

Select the [Off] switch to turn the fan off.

Changing the air flow mode

Select the airflow mode control switch

The airflow mode changes each time the switch is selected.

The air outlets and air volume changes according to the selected air flow mode.

4-3. Adjusting the temperature/environment inside the vehicle



: Air flows to the upper body



: Air flows to the upper body and feet



Air flows to the feet



Air flows to the feet and the windshield defogger operates

Location of air outlets



Switching between outside air mode and recirculated air mode

Temporarily changing the air mode to recirculated air mode is recommended to prevent dirty air from entering the vehicle, such as when in a tunnel or heavy traffic, and to help cool the interior when the outside air temperature is high.

Select the outside/recirculated air mode switch.

The air mode changes between outside air mode and recirculated air mode each time the switch is selected. When recirculated air mode is selected, the indicator will illuminate.

The air mode may change automatically depending on the temperature setting, temperature inside the vehicle, etc.

Front seat concentrated airflow mode (S-Flow)

This function automatically controls the airflow of the air conditioning system to prioritize airflow to the front seats. Fuel economy can be enhanced by reducing unnecessary cooling.

Front seat concentrated airflow mode operates in the following situations.

- No passengers are detected in the rear seats
- The windshield defogger is not operating

In front seat concentrated airflow mode, directing airflow to the front seats only and to all seats can be switched via switch operation. When the mode has been switched manually, automatic airflow control stops operating.

- 1 Select the option screen switch.
- 2 Select the [S-Flow] switch.
 - Indicator illuminated: Airflow to the front seats only
 - Indicator off: Airflow to all the seats

INFORMATION

■ Operation of automatic airflow control

- In order to maintain a comfortable interior, airflow may be directed to seats without passengers immediately after the engine is started and at other times depending on the outside temperature.
- After the engine is started, if passengers move around inside or enter/exit the vehicle, the system cannot accurately detect the presence of passengers and automatic airflow control will not operate.

■ Operation of manual airflow control

Even if the function is manually switched to directing airflow to only the front seats, when a rear seat is occupied, it may automatically direct airflow to all seats.

Setting the fan speed in auto mode

When the [AUTO] switch is on, the automatically adjusted fan speed can be adjusted to suit your preference.

- 1 Select the air conditioning system options switch.
- 2 Select the [FAST/ECO].
 - [FAST]: Use when the effects of the air conditioning system want to be felt quickly
 - [NORMAL]: Normal control
 - [ECO]: Use to enhance fuel economy during air conditioning system operation

Warming the interior quickly (Max heat)

When [Max heat] is turned on, in order to warm the interior quickly, the settings of the air conditioning system will be changed immediately.

Select the shortcut screen switch.

2 Select the [Max heat] switch.

- The temperature setting of the air conditioning system will be set to [Hi] and the [AUTO] switch will be turned on.
- Seat heaters will be set to Hi.
- Heated steering wheel will be set to Hi. (vehicles with heated steering wheel)
- In the following situations, the front passenger's side seat heater will be set to [AUTO].
 - When [Climate concierge] is on
 - When the system determines that a passenger is in the front passenger seat
- When the indicator on the [Sync] switch is illuminated, the temperature setting for the front passenger's side will also be set to [Hi].

☐ INFORMATION

■ [Max heat]

- The [Max heat] switch cannot be used to turn the setting off.
- After the [Max heat] switch has been operated, the temperature setting can be
 adjusted using the temperature control switches of the air conditioning system.
- When [Climate concierge] is on, if the [AUTO] switch is turned on, the seat
 heaters and seat ventilators of the front seats, and the heated steering wheel will
 be operated automatically according to the temperature setting.*
- Each function can also be adjusted to the desired setting.

Cooling the interior quickly (Max cool)

When [Max cool] is turned on, in order to cool the interior quickly, the settings of the air conditioning system will be changed immediately.

- Select the shortcut screen switch.
- 2 Select the [Max cool] switch.
 - The temperature setting of the air conditioning system will be set to [Lo] and the [AUTO] switch will be turned on.
 - Seat ventilators will be set to Hi. (vehicles with seat ventilators)
 - In the following situation, the heated steering wheel will be set to [AUTO]. (vehicles with heated steering wheel)
 - When [Climate concierge] is on

^{*:} If equipped

- In the following situations, the front passenger's side seat heater will be set to [AUTO].
 - When [Climate concierge] is on
 - When the system determines that a passenger is in the front passenger seat
- When the indicator on the

[Sync] switch is illuminated, the temperature setting for the front passenger's side will also be set to [Lo].

■ INFORMATION


■ [Max cool]

- The [Max cool] switch cannot be used to turn the setting off.
- After the [Max cool] switch has been operated, the temperature setting can be
 adjusted using the temperature control switches of the air conditioning system.
- When [Climate concierge] is on, if the [AUTO] switch is turned on, the seat
 heaters and seat ventilators of the front seats, and the heated steering wheel will
 be operated automatically according to the temperature setting.*
- Each function can also be adjusted to the desired setting.

Adjusting the position of and opening and closing the air outlets

To adjust the position of and opening and closing the air outlets, perform the following operations:


▶ Front center

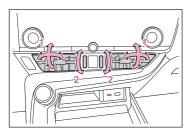

- Direct air flow to the left or right, up or down
- 2 Turn the knob to open or close the vent


^{*:} If equipped

▶ Front side

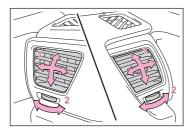

- Direct air flow to the left or right, up or down
- 2 Turn the knob to open or close the vent

▶ Rear

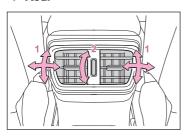

- 1 Direct air flow to the left or right, up or down
- 2 Turn the knob to open or close the vent

Heated steering wheel*

Warm up the grip of the steering wheel.

WARNING

Care should be taken if anyone in the following categories comes in contact with the steering wheel when the heater is on:

- Babies, small children, the elderly, the sick and the physically challenged
- Persons with sensitive skin.
- Persons who are fatigued
- Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)

⚠ NOTICE

Do not use the functions when the engine is off.

☐ INFORMATION

Operating conditions

When the engine switch is ON.

Turn the steering heater ON/OFF

Select \bigcirc on the center display.

Each time the switch is selected, the operation condition changes as follows.

 $AUTO \rightarrow Hi$ (2 segments lit) $\rightarrow Lo$ (1 segment lit) $\rightarrow Off$

The level indicator (red) lights up during operation. [AUTO] indicator lights up during automatic operation.

Customization

The temperature setting of the heated steering wheel can be set through [Vehicle customise] on the center display.

^{*:} If equipped

Seat heaters

Warm up the seat upholstery.

WARNING

To prevent minor burn injuries

Care should be taken if anyone in the following categories comes in contact with the seats when the heater is on:

- Babies, small children, the elderly, the sick and the physically challenged
- Persons with sensitive skin.
- Persons who are fatigued
- Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)

■ To prevent causes of overheating and minor burn injuries

Observe the following precautions when using a seat heater:

- Do not cover the seat with a blanket or cushion when using the seat heater.
- Do not use seat heater more than necessary.

⚠ NOTICE

■ To prevent damage to the seat heaters

Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.

■ To prevent battery discharge

Do not use the functions when the engine is off.

Operating conditions

The engine switch is in ON.

Turn the front seat heaters ON/OFF

Select on on the center display.

Each time the switch is selected, the operation condition changes as follows.

 $AUTO \rightarrow Hi$ (3 segments lit) $\rightarrow Mid$ (2 segments lit) $\rightarrow Lo$ (1 segment lit) $\rightarrow Off$

Vehicles with seat ventilators: The level indicator (yellow) lights up during operation.

The level indicator (red) lights up during operation. [AUTO] indicator lights up during automatic operation.

☐ INFORMATION

■ Customization

The temperature setting of the seat heaters of the front seats can be set through [Vehicle customise] on the center display.


Turns the rear seat heaters on/off*

Press the switch.

Each time the switch is pressed, the operation condition changes as follows.

Hi (3 segments lit) \rightarrow Mid (2 segments lit) \rightarrow Lo (1 segment lit) \rightarrow Off

The level indicators (yellow) light up during operation.

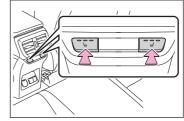

Seat ventilators

Using fans inside the seats, improved ventilation can be provided at the surface of the seats.

M NOTICE

To prevent damage to the seat ventilators

Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.

■ To prevent battery discharge

Do not use the functions when the engine is off.

Operating conditions

The engine switch is in ON.

Turn the seat ventilators (front) ON/OFF

Select 😉 or 🛂 on the center display.

Each time the switch is selected, the operation condition changes as follows.

 $Hi(3 \text{ segments lit}) \rightarrow Mid(2 \text{ segments lit}) \rightarrow Lo(1 \text{ segment lit}) \rightarrow Off$

The level indicator (blue) lights up during operation. [AUTO] indicator lights up during automatic operation.

☐ INFORMATION

Air conditioning system-linked control mode

When a seat ventilator is set to Hi, the fan speed of the seat ventilator may increase according to the fan speed of the air conditioning system.

Customization

The fan speed setting of the seat ventilators can be set through [Vehicle customise] on the center display.

^{*:} If equipped

Using the moon roof

For comfortable cabin experience, the moon roof can be opened or tilted up.

WARNING

Observe the following precautions.

- Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.
- Do not sit on top of the moon roof.
- The driver is responsible for moon roof opening and closing operations. In order to
 prevent accidental operation, especially by a child, do not let a child operate the moon
 roof. It is possible for children and other passengers to have body parts caught in the
 moon roof.
- Make sure that all passengers do not have any part of their body in a position where it
 could be caught when the moon roof is being operated.
- When using the wireless remote control or mechanical key to operate the moon roof, operate the moon roof after making sure that there is no possibility of any passenger having any of their body parts caught in the moon roof.
 - Also, do not let a child operate moon roof with the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the moon roof.
- If a child is riding in the vehicle, when exiting the vehicle, turn the engine switch off, carry the key and exit the vehicle along with the child. If a child is left in the vehicle, they may accidentally operate the moon roof, due to mischief, etc., possibly leading to an accident.

Operating conditions of the moon roof

The engine switch is in ON.

Operating the moon roof after turning the engine off

The moon roof can be operated for approximately 45 seconds after the engine switch is turned to ACC or OFF.

They cannot, however, be operated once either front door is opened.

Using the voice control system*

The moon roof can be opened/closed using the voice control system.

For details, refer to the "Multimedia owner's manual".

^{*:} If equipped

Sunshade

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

— Related Links -

Customizable features(P. 650)

Functions which aid in safe opening and closing of the moon roof

The following functions aid in safe opening and closing of the moon roof.

- Jam protection function
 - If an object is detected between the moon roof and the frame while the moon roof is closing or tilting down, travel is stopped and the moon roof opens slightly.
- Moon roof open warning buzzer

The buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the engine switch is turned off and the driver's door is opened with the moon roof open.

WARNING

Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not operate if something gets caught just before the moon roof is fully closed.


Also, the jam protection function is not designed to operate while the moon roof switch is being pressed.

Take care so that your fingers, etc. do not get caught.

Opening the moon roof

Press the <→ switch.*1


The moon roof stops slightly before the fully open position to reduce wind noise.

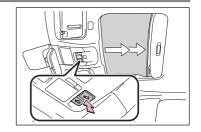

^{*1:} Lightly press either end of the moon roof <5 switch to stop the moon roof while it is operating.

Closing the moon roof

Press the ⇔ switch.*2

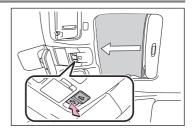


Tilting up the moon roof

Press the ⇔switch.*3



Tilting down the moon roof

Press the ⇔switch.*4

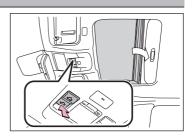

^{*2:} Lightly press either end of the moon roof switch to stop the moon roof while it is operating.

^{*3:} Lightly press either end of the moon roof witch to stop the moon roof while it is operating.

^{*4:} Lightly press either end of the moon roof switch to stop the moon roof while it is operating.

Using the panoramic moon roof

For comfortable cabin experience, the panoramic panoramic moon roof can be opened or tilted up.

WARNING

Observe the following precautions when opening and closing the panoramic moon roof.

- The driver is responsible for panoramic moon roof opening and closing operations. In order to prevent accidental operation, especially by a child, do not let a child operate the panoramic moon roof. It is possible for children and other passengers to have body parts caught in the panoramic moon roof.
- Make sure that all passengers do not have any part of their body in a position where it
 could be caught when the panoramic moon roof is being operated.
- When using the wireless remote control or mechanical key to operate the panoramic moon roof, operate the panoramic moon roof after making sure that there is no possibility of any passenger having any of their body parts caught in the panoramic moon roof.
 - Also, do not let a child operate panoramic moon roof with the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the panoramic moon roof.
- If a child is riding in the vehicle, when exiting the vehicle, turn the engine switch off, carry the key and exit the vehicle along with the child. If a child is left in the vehicle, they may accidentally operate the panoramic moon roof, due to mischief, etc., possibly leading to an accident.

☐ INFORMATION

Operating conditions of the panoramic moon roof

The engine switch is in ON.

Operating the panoramic moon roof after turning the engine off

The panoramic moon roof can be operated for approximately 45 seconds after the engine switch is turned to ACC or OFF.

They cannot, however, be operated once either front door is opened.

■ Using the voice control system*

The panoramic moon roof can be opened/closed using the voice control system.

For details, refer to the "Multimedia owner's manual".

^{*:} If equipped

- Related Links -

Customizable features (P. 650)

Functions which aid in safe opening and closing of the panoramic moon roof

The following functions aid in safe opening and closing of the panoramic moon roof.

Jam protection function

If an object is detected between the panoramic moon roof and the frame while the panoramic moon roof is closing or tilting down, travel is stopped and the panoramic moon roof opens slightly.

• panoramic moon roof open warning buzzer

The buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the engine switch is turned off and the driver's door is opened with the panoramic moon roof open.

WARNING

Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not operate if something gets caught just before the panoramic moon roof is fully closed.


Also, the jam protection function is not designed to operate while the moon roof switch is being pressed.

Take care so that your fingers, etc. do not get caught.

Opening the panoramic moon roof

Press the <→ switch.*1

Lightly press either end of the panoramic moon roof switch to stop the panoramic moon roof while it is operating.

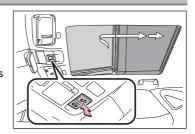


^{*1:} Press the <-> The panoramic moon roof and electronic sunshade will open automatically.

Closing the panoramic moon roof

Press the ⇔ switch.*2

The panoramic moon roof can be opened from the tilt-up position.

Press the switch forward. The panoramic moon roof will fully close automatically.

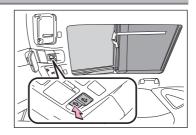

Tilting up the panoramic moon roof

Press the ⇔ switch.*3

When the panoramic moon roof is tilted up, the electronic sunshade will open to the half-open position of the roof.



Tilting down the panoramic moon roof

Press and hold the switch.

The panoramic moon roof can be tilted down only when it is in the tilt-up position.



^{*2:} Lightly press either end of the panoramic moon roof switch to stop the panoramic moon roof while it is operating.

^{*3:} Lightly press either end of the panoramic moon roof switch to stop the panoramic moon roof while it is operating.

Opening and closing the electronic sunshade

For comfortable cabin experience, the electronic sunshade can be opened.

WARNING

Observe the following precautions when opening and closing the electronic sunshade.

- Make sure that all passengers do not have any part of their body in a position where it
 could be caught when the electronic sunshade is being operated.
- Do not allow children to operate the electronic sunshade. Closing the electronic sunshade on someone can cause death or serious injury.
- Keep fingers free of the gaps between the underside of the roof and the electronic sunshade.

Otherwise a hand may become pinched, possibly causing injury. Also, if the vehicle is left in direct sunlight for a long time, the underside of the roof could be very hot and possibly cause burns.

Operating conditions of the electronic sunshade

The engine switch is in ON.

Operating the electronic sunshade after turning the engine off

The electronic sunshade can be operated for approximately 45 seconds after the engine switch is turned to ACC or OFF.

They cannot, however, be operated once either front door is opened.

Functions which aid in safe opening and closing of the electronic sunshade

The following function aid in safe opening and closing of the electronic sunshade.

Jam protection function

If an object is detected between the electronic sunshade and the frame while the electronic sunshade is closing, travel is stopped and the electronic sunshade opens slightly.

When the jam protection function has operated, even if the switch is pressed again, the electronic sunshade will not move in the close direction until the reverse operation has stopped completely.

Depending on the driving conditions and the surroundings, the electronic sunshade may collide with something and operate in reverse.

^{*:} If equipped

WARNING

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the electronic sunshade fully closes.

Also, the jam protection function is not designed to operate while the moon roof switch is being pressed.


Take care so that your fingers, etc. do not get caught.

Opening the electronic sunshade

Press the | switch.

The electronic sunshade will open.

If the switch is pressed and held, the electronic sunshade will fully open automatically.*1

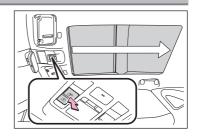


Closing the electronic sunshade

Press the 🔁 switch.

The electronic sunshade will close.

If the $\ \ \ \ \ \$ switch is pressed and held, the electronic sunshade will fully close automatically. *2

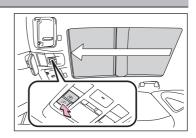


^{*1:} Lightly press either end of the switch to stop the electronic sunshade while it is operating.

^{*2:} Lightly press either end of the switch to stop the electronic sunshade while it is operating.

Using the interior lights

Location of the interior lights

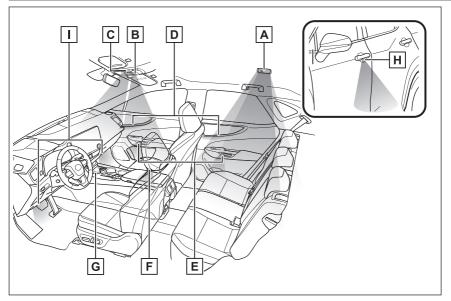

- A Rear interior light
- B Front interior light
- C Personal lights
- Door trim ornament lights*
- E Inside door handle lights*1
- F Door courtesy lights*
- G Center console light**1
- H Outer foot lights
- Footwell lights*1
 - When the engine switch is in ON, the door trim ornament lights, inside door handle lights, center console light, footwell lights will turn on. However, if the instrument panel light control switch is turned to minimum, the footwell lights will turn off.
 - When the shift position is in a position other than P, the brightness of the door trim ornament lights, inside door handle lights, center console light, footwell lights will reduce intensity.

^{*:} If equipped

☐ INFORMATION

■ Each lights automatic on/off

- Illuminated entry system: The lights automatically turn on/off according to engine switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are opened/closed.
- If the interior lights remain on when the engine switch is turned off, the lights will go off automatically after 20 minutes.

Automatic illumination of the interior lights

If any of the SRS airbags deploy (inflate) or in the event of a strong rear impact, the interior lights will turn on automatically. The interior lights will turn off automatically after approximately 20 minutes.

The interior lights can be turned off manually. However, in order to help prevent further collisions, it is recommended that they be left on until safety can be ensured. (The interior lights may not turn on automatically depending on the force of the impact and conditions of the collision.)

Using the voice control system*

The following operations can be performed using the voice control system:

- Turning interior light on/off
- Changing color of each lights

For details, refer to the "Multimedia owner's manual".

⚠ NOTICE

Removing light lenses

Never remove the lens for the front interior light and personal lights. Otherwise, the lights will be damaged. If the lens need to remove, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

■ To prevent battery discharge

Do not leave the lights on longer than necessary when the engine is off.

- Related Links -

Customizable features (P. 650)

^{*1:} The illumination color can also be changed.*Refer to the "Multimedia owner's manual" to change the settings.

Interior lights

■ The front interior lights may not operate normally when

The front interior lights may not operate normally in the following situations:

- When water, dirt, etc., have adhered to the lens surface
- When operated with a wet hand
- When wearing gloves, etc.


Turning the interior lights on/off

Touch the light.

The front interior light will turn on/off each time it is touched.

The rear interior light will also turn on/off.

However, when the rear interior light has already been turned on, it will not be controlled by front interior light operations.

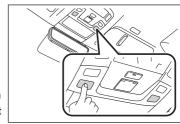

Linking the opening/closing of the doors to the front interior light operation

Press the DOOR switch.

The link between the front interior light operation and doors will change between ON/OFF each time the DOOR switch is pressed.

The operation of the rear interior lights will also be linked to the opening/closing of the doors.

When the door link is turned on, the indicator A will illuminate.




Turning the rear interior light on/off

Press the 🖄 switch.

The rear interior light will turn on/off each time the switch is pressed.

Operation of the rear interior light is linked to the turning on/off of the front interior light.

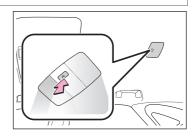

4-4. Illuminating the interior

When the rear interior light has been turned on by front interior light operation, the rear interior light cannot be turned off by pressing the switch.

Personal lights

■ The personal lights may not operate normally when


The personal lights may not operate normally in the following situations:

- When water, dirt, etc., have adhered to the lens surface
- When operated with a wet hand
- When wearing gloves, etc.

Using the personal lights

Touch the light.

The personal lights will turn on/off each time they are touched.

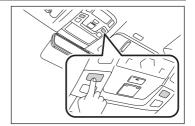


Location of the storage features

WARNING

Do not leave eyeglasses, lighters or spray cans in the storage spaces, as the following may occur when cabin temperature becomes high:

- Eyeglasses may be deformed by heat or cracked if they come into contact with other stored items.
- Lighters or spray cans may explode. If they come into contact with other stored items, a lighter may catch fire or a spray can may release gas, causing a fire hazard.

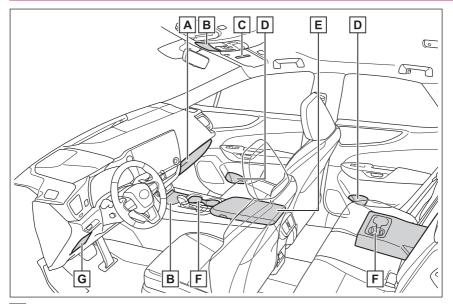

- A Glove box
- B Auxiliary boxes
- C Card holders
- D Bottle holders
- E Console box
- F Cup holders
- G Coin box

☐ INFORMATION


■ Glove box light and console box light

The glove box light and the console box light turn on when the tail lights are on.

Using the auxiliary boxes

Press in the lid.

► Type A

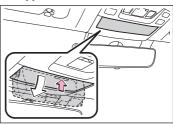


WARNING

- Do not store items heavier than 200 g (0.44 lb.). Doing so may cause the auxiliary box to open and the items inside may fall out, resulting in an accident.
- When driving or when the auxiliary box is not in use, keep the lid closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the items stored inside.

Push the lid.

To close, press in and release the lid.


▶ Type B

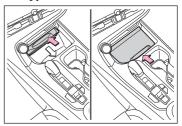

WARNING

When driving or when the auxiliary box is not in use, keep the lid closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the items stored inside.

Location of the card holders

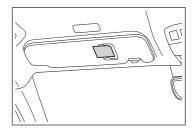


Using the glove box

WARNING

When driving or when the glove box is not in use, keep it closed.

If left open, in the event of sudden braking or swerving, the front passenger may strike the glove box lid or stowed items may fly out, possibly leading to an accident.

To open the glove box, pull the lever. The glove box can be locked and unlocked using the mechanical key.

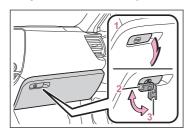

- 1 To open the glove box, pull the lever.
- 2 Lock with the mechanical key.
- 3 Unlock with the mechanical key.

INFORMATION

Glove box light

The glove box light turns on when the tail lights are on.

Use the cup holders


▲ WARNING

Do not place anything other than cups or aluminum cans in the cup holders.


Other items may be thrown out of the holders in the event of an accident or sudden braking, causing injury.

If possible, cover hot drinks to prevent burns.

▶ Front

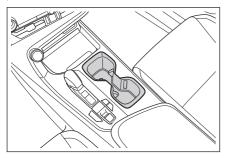

▶ Rear

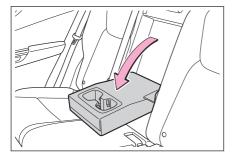

Pull down the armrest.

Locations of the bottle holders

⚠ NOTICE


When using a bottle holder, observe the following precautions.

 Do not place open bottles, glass cups, or paper cups containing liquid in the bottle holders.


The liquid may spill out and glass cups may break.

• When storing a bottle, close the cap.

▶ Front

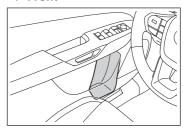

▶ Rear

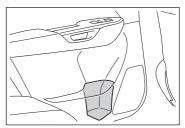

■ Bottle holders

A bottle may not be able to be stored depending on its size or shape.

Using the console box


A WARNING

When driving or when the console box is not in use, keep it closed.

If left open, in the event of sudden braking or swerving, an occupant may strike the console box lid or stowed items may fly out, possibly leading to an accident.

To open the console box, lift the lid while pushing the button.


The console box can be opened from either side.

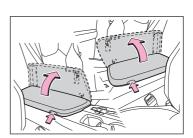

■ Console box light

The console box light turns on when the tail lights are on.

Using the coin box

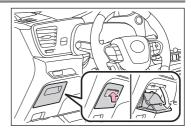

Push the knob up to open the lid.

WARNING

When driving or when the coin box is not in use, keep it closed.

If left open, in the event of sudden braking or sudden swerving, the driver may strike the coin box lid or stowed items may fly out, possibly leading to an accident.

Convenient interior features

Function and operation of the USB charging port

⚠ NOTICE

■ To prevent damage to the USB charging ports

- Do not insert foreign objects into the ports.
- Do not spill water or other liquids into the ports.
- Rear console: When the USB charging ports are not in use, close the lids. If a foreign object or liquid enters a port may cause a short circuit.
- Do not apply excessive force to or impact the USB charging ports.
- Do not disassemble or modify the USB charging ports.

■ To prevent damage to external devices

- Do not leave external devices in the vehicle. The temperature inside the vehicle may become high, resulting in damage to an external device.
- Do not push down on or apply unnecessary force to an external device or the cable of an external device while it is connected.

To prevent battery discharge

Do not use the USB charging ports for a long period of time with the engine stopped.

The USB charging ports are used to supply 3.0~A of electricity at 5~V to external devices.

The USB charging ports are for charging only. They are not designed for data transfer or other purposes.

Depending on the external device, it may not charge properly. Refer to the manual included with the device before using a USB charging port.

INFORMATION

■ The USB charging ports can be used when

The engine switch is in ACC or ON mode.

■ Situations in which the USB charging ports may not operate correctly

- lacksquare If a device which consumes more than 3.0 A at 5 V is connected.
- If a device designed to communicate with a personal computer, such as a USB memory device, is connected
- If the connected external device is turned off (depending on device)

4-5. Using the interior features


 If the temperature inside the vehicle is high, such as after the vehicle has been parked in the sun

About connected external devices


Depending on the connected external device, charging may occasionally be suspended and then start again. This is not a malfunction.

Use the USB charging port

▶ Instrument panel

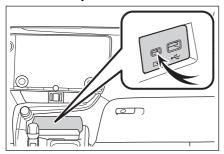

▶ On the rear console

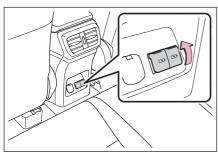

Open the lid.

Function and operation of the power outlet (12 VDC)

M NOTICE

■ To prevent damage to the power outlet (12 VDC)

- Do not insert foreign objects into the ports.
- Do not spill water or other liquids into the ports.
- When the power outlets (12 VDC) are not in use, close the lids. If a foreign object or liquid enters a port may cause a short circuit.
- Do not apply excessive force to or impact the power outlets (12 VDC) ports.

⚠ NOTICE

■ To prevent battery discharge

Do not use the power outlets (12 VDC) for a long period of time with the engine stopped.

The power outlet can be used to supply power for devices which operate on 12 VDC at less than 10A (power consumption of 120 W).

When connecting multiple devices, make sure that the total power consumption of all the connected devices is less than 120 W.

■ The power outlet can be used when

The engine switch is in ACC or ON.


■ When turning the engine switch off

Disconnect electrical devices with charging functions, such as mobile battery packs.


If such devices are left connected, the engine switch may not be turned off normally.

Using the accessory sockets (12 VDC)

▶ On the instrument panel (left-hand drive vehicles)

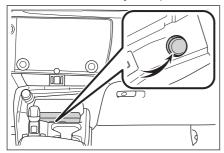


▶ On the rear console

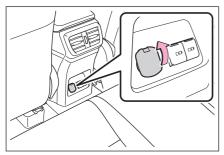

Open the lid.

▶ In the luggage compartment

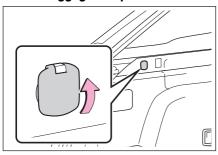

Open the lid.

Function and operation of the wireless charger

A portable device, such as a smartphone or mobile battery, can be charged by just placing it on the charging area, provided the device is compatible with the Qi wireless charging standard created by the Wireless Power Consortium.

WARNING

Caution while driving

When charging a portable device while driving, for safety reasons, the driver should not operate the portable device.

Precautions for when driving

Do not charge small, lightweight portable devices, such as wireless earbuds, while driving. Lightweight devices may fly off of the charging tray, possibly leading to an accident.

Caution regarding interference with electronic devices

People with implantable cardiac pacemakers, cardiac resynchronization therapy pacemakers or implantable cardioverter defibrillators, as well as any other electrical medical device, should consult their physician about the usage of the wireless charger.

Operations of the wireless charger may have an affect on medical devices.

To prevent damage or burns

Observe the following precautions.

- Do not put any metallic objects between the charging area and the portable device while charging.
- Do not attach metallic objects, such as aluminum stickers, to the charging area.
- Do not charge portable devices with aluminum stickers or other metallic objects attached to the side which touches the charging area.
- Do not store items on the wireless charger instead of in an auxiliary box.

WARNING

- Do not apply force or impact to the wireless charger.
- Do not disassemble, modify or remove the wireless charger.
- Do not attempt to charge portable devices which are not compatible with the Qi
 wireless charging standard.
- Do not allow magnetic objects to come near the wireless charge
- Do not perform charging if the charging area is dirty
- When not using the wireless charger, to prevent foreign matter or liquids from contacting it, make sure to close the lid.
- Do not cover the wireless charger with a cloth or other object while charging.

⚠ NOTICE

Preventing malfunction and corruption of data

- Do not bring magnetic cards, such as credit cards, or magnetic recording media, etc., close to the charger while charging, otherwise, data may be erased.
 - Additionally, do not bring precision instruments such as wrist watches, close to the wireless charger, as such objects may malfunction.
- Do not perform charging with a contactless smart card, such as a credit card, between the charging surface of a portable device and the charging area. The IC chip in the card may become extremely hot, possibly damaging the portable device or smart card. Failure to do so may result in the possibility of fire, equipment failure or damage, or burns due to heat.
 - Be extra careful to not charge a portable device with a case or cover which a contactless smart card can be inserted.
- Do not leave portable devices in the vehicle. The temperature inside the vehicle may become high, when in direct sunlight, possibly damaging the device.

To prevent battery discharge

When the engine is stopped, do not use the wireless charger for longer than necessary.

■ The wireless charger can be operated when

The engine switch is in ACC or ON.

About connected portable devices

4-5. Using the interior features

- Portable devices compatible with the Qi wireless charging standard can be charged by the wireless charger. However, compatibility with all devices which meet the Qi wireless charging standard is not guaranteed.
- The wireless charger is designed to supply low power electricity (5 W or less) to a cellular phone, smartphone, or other portable device.
- Failure to do so may result in the possibility of fire, However, portable devices, such as the following, can be charged with more than 5 W.
 - 7.5 W charging compatible iPhones can be charged at 7.5 W or less.
 - Portable devices which conform to WPC Ver 1.2.4 (Extended Power profile) can be charged at 10 W or less.

■ Using the smart entry & start system

During charging, when the smart entry & start system searches for an electronic key, charging may be temporarily suspended.

If a cover or accessory is attached to the portable device

Do not charge a portable device if a cover or accessory which is not Qi compatible is attached

Even if a device is "Qi" compatible, charging may not be possible if a cover or accessories are attached. $(\rightarrow P.266)$

■ Charging precautions

While charging, the wireless charger and the portable device will become warm. This is not a malfunction.

If a portable device becomes warm while charging and charging stops due to the protection function of the portable device, wait until the portable device cools down and charge it again.

Also, to decrease the temperature inside the wireless charger, a fan may operate. This does not indicate a malfunction.

■ Sound generated during operation


Operation sounds may be heard when the engine switch is pressed to change to ACC or ON, or when a portable device is being detected. This does not indicate a malfunction.

■ "Qi" symbol

The "Qi" logo is a trademark of the Wireless Power Consortium.



Names of the parts of the wireless charger

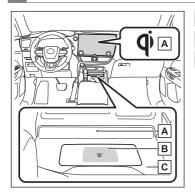



- A Operation indicator light
- B Charging area
- C Charging tray

Use the wireless charger

• Place a portable device on the charging tray.

  Depending on the portable device, its charging coil may not be in the center of the device. In this case, place the portable device so that its charging coil is centered in the charging area.





When charging is complete, the operation indicator light on the charging tray (green) will illuminate.



■ Recharging function

- If a certain amount of time has elapsed since charging completed and the portable device has not been moved, the wireless charger will restart charging.
- If a portable device is moved significantly within the charging area, the charging coil may disconnect and charging may temporarily be stopped. However, if a charging coil is detected within the charging area, the charging coil inside the wireless charger will move near the other coil and charging will resume.

■ Rapid charging function

Portable devices, such as the following, can be rapidly charged.

 Rapid charging capable devices which conform to WPC Ver1.2.4 EPP (Extended Power profile)

- 7.5 W charging capable iPhones (iPhone 8 and later)
- Situations in which the wireless charger may not operate correctly

In the following situations, the wireless charger may not operate correctly:

- When a portable device is fully charged
- When a portable device is being charged by a wired connection.
- When there is foreign matter between the charging area and portable device
- When the temperature of a portable device becomes high while charging
- When the temperature near the charging tray is 35°C (95°F) or more due to being in direct sunlight, etc.
- When a portable device is placed with its charging surface facing up
- When a portable device is not centered on the charging area
- When a portable device is larger than the charging tray
- When a foldable portable device is placed outside of the charging area
- When the vehicle is near a TV tower, electric power plant, fuel station, radio station, large display, airport, or other facility that generates strong radio waves or electrical noise
- When the any of the following objects are between or attached to a portable device and cause a gap of 2 mm (0.08 in.) or more between the charging surface of a portable device and the charging area:
 - Thick cases or covers
 - Thick decorations
 - Cases or covers which the charging surface is not flat, but is grooved or changes in thickness
 - Accessories, such as finger rings, straps, etc.
- When the portable device is in contact with, or is covered by any of the following metallic objects:
 - Cards covered with metal, such as aluminum foil
 - Cigarette boxes that have aluminum foil inside
 - Metallic wallets or bags
 - Coins
 - Heat packs
 - Recorded media such as CDs and DVDs
 - Metallic decorations
 - Metallic cases or covers

- When wireless keys (that emit radio waves) other than those of your vehicle are being used nearby
- When 2 or more portable devices are placed on the charging tray at the same time In situations other than above, if the wireless charger does not operate properly or the operation indicator light blinks continuously, the wireless charger may be malfunctioning.

Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Wireless charger operation indicator light status

The operation indicator light of the wireless charger indicates the operating state of the wireless charger as follows:

Operation indicator light		
Charging tray	Center dis- play	State
Off	Off	The Wireless charger is off
Green (illumi- nated) Gray	Standby (charging is possible) ⁽¹⁾	
	Charging is complete ⁽²⁾	
Orange (illu- minated)	Blue	A portable device has been placed on the charging area (identifying the portable device)
		A portable device, such as the following, is being rapidly charged
		Rapid charging capable devices which conform to WPC Ver 1.2.4.
		● 7.5 W charging capable iPhone (iPhone 8 and later)


- (1) While in standby, charging power is not output. If a metal object is placed on the charging tray in this state, the object will not heat up.
- (2) Depending on the portable device, the operation indicator light may stay illuminated (orange) after charging has completed.

Using the armrest



⚠ NOTICE

Do not apply excessive load to the armrest. Doing so may damage the armrest.

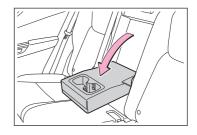

Fold down the armrest for use.

Assist grip functions and operation


WARNING

Do not use the assist grip when getting in or out of the vehicle or rising from your seat.

⚠ NOTICE

Do not hang any heavy object or put a heavy load on the assist grip.

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.

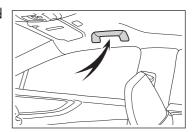


Locations of coat hooks

WARNING

Do not hang coat hangers or other hard or sharp objects on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles, causing death or serious injury.


The coat hooks are provided with the rear assist grips.

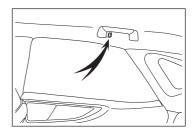

Using the vanity mirrors

• Slide the cover to open.

The vanity light turns on when the cover is opened.

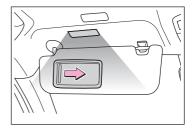

M NOTICE

Do not leave the vanity lights on longer than necessary with the engine stopped. Doing so may lead to the battery becoming discharged.

☐ INFORMATION

Automatic light off function

When the engine switch is off, if the vanity lights are turned on, they will be turned off automatically after 20 minutes.

Using the cargo hooks

The cargo hooks are provided for securing loose items.

• Raise the hook to use.




WARNING

To avoid injury, when the cargo hooks are not in use, make sure to return them to their stowed position.

Using the cargo net hooks

The cargo net can be hung using the cargo net hooks.

• Raise the hook to use.

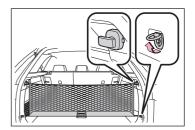


WARNING

To avoid injury, when the cargo net hooks are not in use, make sure to return them to their stowed position.

Using the grocery bag hooks

• Push the grocery back hook to use.

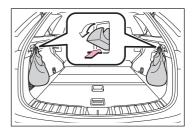

⚠ NOTICE

Do not hang objects heavier than $4\,\mathrm{kg}$ (8.8 lb.) on the grocery bag hooks.

Doing so may damage the grocery bag hook.


Deck board

Opening the deck board

WARNING


If a deck board has been opened or removed, return it to its original position before driving. Otherwise, in the event of sudden braking or an accident, a deck board or stored items may fly out and strike an occupant.

1 Open the back door.

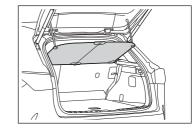


2 Open the deck board.


▶ Pattern A

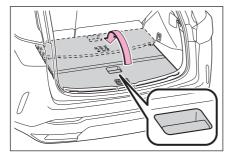

▶ Pattern B

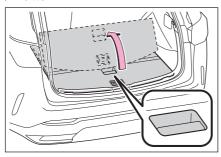


▶ Pattern C

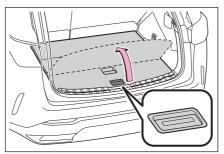


Storing items in the deck under tray

The following items can be stowed.

Accessories

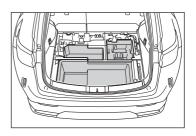


Warning reflector*1

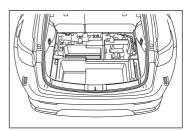


 $^{^{\}star 1:}$ A warning reflector itself is not included as an original equipment.

Stowing the luggage cover

1 Unhook each cord.

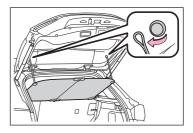


2 Pull the lever upwards and fold the deck board.

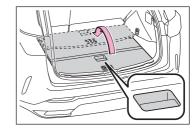


3 Remove the luggage cover.


If a rear seat seatback is reclined, remove the luggage cover after moving the seatback to the upright position.

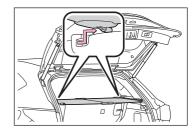

4 Fold the luggage cover.

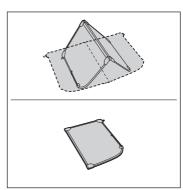

5 Lift the deck board and stow the luggage cover in the deck under tray.

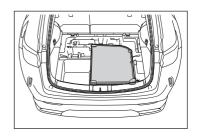

WARNING

- Do not stow items on the luggage cover. In the event of sudden braking or swerving, the items may fly about and strike an occupant.
- Do not allow children to climb on the luggage cover. Doing so may damage the luggage cover.

Vehicle status information and indicators


5-1. Functions and displays of the mo	e-
Warning lights and indicators	278
Gauges and meters (except F SPORT models)2	285
Gauges and meters (F SPORT models)2	290
5-2. Functions of the displays	
Multi-information display (ve- hicles without a head-up dis- play)	295
Multi-information display (ve- hicles with a head-up dis- play)	297
Head-up display	<u> 2</u> 99
Displayed content	301
5-3. Changing the settings of the di plays	s-
Changing the instrument panel light brightness	312
Changing settings for the head-up display	313

Warning lights and indicators


The warning lights and indicators on the instrument cluster and outside rear view mirrors inform the driver of the status of the vehicle's various systems.

For the purpose of explanation, the following illustrations display all warning lights and indicators illuminated.

▶ Vehicles without a head-up display

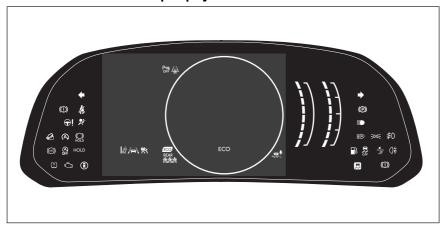

▶ Vehicles with a head-up display

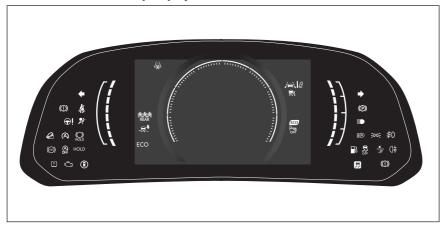

List of warning lights

Warning lights inform the driver of malfunctions in the indicated vehicle's systems.

(red)	Brake system warning light ⁽¹⁾
(yellow)	Brake system warning light ⁽¹⁾
_ <u>_</u>	High coolant temperature warning light ⁽²⁾
= +	Charging system warning light ⁽²⁾
عتر.	Low engine oil pressure warning light ⁽²⁾
	Malfunction indicator lamp ⁽¹⁾
*	SRS warning light ⁽¹⁾
	ABS warning light ⁽¹⁾
••	Inappropriate pedal operation warning light ⁽²⁾
(red)	Electric power steering system warning light ⁽¹⁾
(yellow)	Electric power steering system warning light ⁽¹⁾
	Low fuel level warning light
*	Driver's and front passenger's seat belt reminder light
REAR	Rear passengers' seat belt reminder lights (vehicles without a head-up display)

5-1. Functions and displays of the meter

REAR	Rear passengers' seat belt reminder lights (vehicles with a head-up display)
<u>(!)</u>	Tire pressure warning light ⁽¹⁾
	LDA indicator
(orange)	
	LTA indicator
(orange)	
(A) OFF	Stop & Start cancel indicator ^{(1)*}
(flashes)	
(A)	Stop & Start indicator*(1)
(flashes)	
P//≜ OFF	Lexus parking assist-sensor OFF indicator* ⁽¹⁾
(orange)	Cruise control indicator
	Dynamic radar cruise control indicator
M I	
	Driving assist infomation indicator ⁽¹⁾
→ ⊃ off	PCS warning light ⁽¹⁾
(flashes or illuminates)	
3	Slip indicator ⁽¹⁾

^{*}: If equipped

(flashes)	Parking brake indicator
HOLD	Brake hold operated indicator ⁽¹⁾
(flashes)	

- (1) These lights come on when the engine switch is turned to ON to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if the lights do not come on, or turn off. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- (2) This light illuminates on the multi-information display.

WARNING

Should a safety system light such as the ABS and SRS warning light not come on when you start the engine, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately if this occurs.

- Related Links -

If a warning light turns on/flashes(P. 525)

List of indicators

The indicators inform the driver of the operating state of the vehicle's various systems.

+ +	Turn signal indicator
EDOE	Tail light indicator
	Headlight high beam indicator
≣ A	AHS indicator ^{*(1)} AHB indicator ^{*(1)}

^{*:} If equipped

5-1. Functions and displays of the meter

却	Front fog light indicator*
() ‡	Rear fog light indicator
⇒ OFF	PCS warning light ⁽¹⁾⁽³⁾
め	Cruise control indicator
*	Dynamic radar cruise control indicator
	LDA indicator
A	LTA indicator
_⊢ ″ [©]	BSM outside rear view mirror indicators *(2)
P///≜ OFF	Lexus parking assist-sensor OFF indicator*(3)(1)
	Driving assist infomation indicator ⁽¹⁾⁽³⁾
A	Stop & Start indicator*(1)
(A) OFF	Stop & Start cancel indicator ^{(1)(3)*}
3	Slip indicator ⁽¹⁾
(flashes)	
₽	VSC OFF indicator ⁽¹⁾⁽³⁾
(P)	Parking brake indicator ⁽¹⁾
HOLD	Brake hold standby indicator ⁽¹⁾

HOLD	Brake hold operated indicator ⁽¹⁾
ECO	Eco driving indicator light ⁽¹⁾
/ <u>*</u> \	Low outside temperature indicator ⁽⁴⁾
PASSENGER ARBAG OFF 2 cm	[PASSENGER AIR BAG] indicator ⁽⁵⁾
Ø.	Downhill assist control system indicator*
ECO	Eco drive mode indicator
SPORT	Sport mode indicator ⁽⁶⁾
SPORT S	Sport S mode indicator ⁽⁷⁾
SPORT S+	Sport S+ mode indicator ⁽⁷⁾
CUSTOM	Custom mode indicator ⁽⁷⁾
A	Trail Mode indicator*


- (1) These lights come on when the engine switch is turned to ON to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if the lights do not come on, or turn off. Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- (2) This light illuminates on the outside rear view mirrors.
- (3) This light comes on when the system is turned off.
- (4) When the outside temperature is approximately $3^{\circ}C$ ($37^{\circ}F$) or lower, this indicator will flash for approximately 10 seconds, then stay on.
- (5) This light illuminates on the front interior/personal lights.
- (6) Except F SPORT models
- (7) F SPORT models

---- Related Links -

Customizable features(P. 650)

Gauges and meters (except F SPORT models)

▶ Vehicles without a head-up display

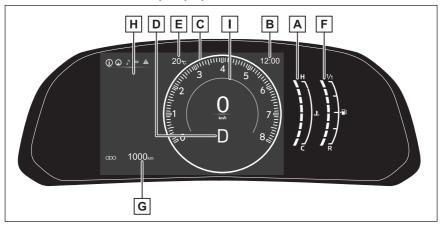

A Engine coolant temperature gauge

Displays the engine coolant temperature

B Clock

Automatically adjusts the time by using the GPS time information (GPS clock). For details, refer to "Multimedia owner's manual".

C Tachometer

Displays the engine speed in revolutions per minute

Speedometer

Depending on the certain settings, the display will change.

- D Shift position/shift range/gear position
- E Outside temperature

Displays the ambient temperature within the range of -40° C (-40° F) to 50° C (122° F).

F Fuel gauge

Displays the quantity of fuel remaining in the tank.


- G Odometer and trip meter display
- H Multi-information display

Presents the driver with a variety of vehicle data and displays warning messages if a malfunction occurs .

I Background color of driving mode

Background color changes according to the driving mode.

▶ Vehicles with a head-up display

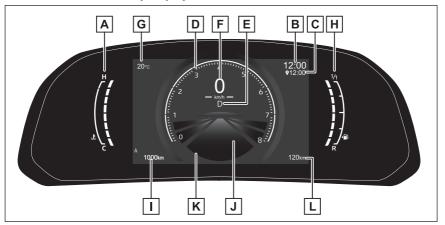

A Engine coolant temperature gauge

Displays the engine coolant temperature

B Clock

Automatically adjusts the time by using the GPS time information (GPS clock). For details, refer to "Multimedia owner's manual".

C Navigation system estimated time of arrival display*

Displays the estimated time of arrival according to the navigation system.

D Tachometer

Displays the engine speed in revolutions per minute

Analog speedometer

Depending on the certain settings, the display will change.

- E Shift position/shift range/gear position
- F Digital speedometer
- G Outside temperature

Displays the ambient temperature within the range of -40°C (-40°F) to 50°C (122°F).

H Fuel gauge

Displays the quantity of fuel remaining in the tank.

- Odometer and trip meter display
- J Multi-information display

Presents the driver with a variety of vehicle data and displays warning messages if a malfunction occurs .

^{*:} If equipped

- K Background color of driving mode
 - Background color changes according to the driving mode.
- L Distance to empty

Displays the driving range with remaining fuel.

☐ INFORMATION

■ The meters and display illuminate when

The engine switch is in ON.

Outside temperature display

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change:
 - When stopped, or driving at low speeds (less than 20 km/h [12 mph])
 - When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When "--" or "E" is displayed, the system may be malfunctioning.

Take your vehicle to any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Distance to empty*

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated. When refueling, turn the engine switch off. If the vehicle is refueled without turning the engine switch off, the display may not be updated.

Liquid crystal display

Small spots or light spots may appear on the display.

This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

■ Free/Open Source Software Information

This product contains Free/Open Source Software (FOSS). The license information and/or the source code of such FOSS can be found at the following URL.

https://www.denso.com/global/en/opensource/meter/toyota/

WARNING

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

⚠ NOTICE

To prevent the engine or components from being damaged, observe the following precautions.

- Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
- The engine may be overheating if the engine coolant temperature gauge is in the red zone (H); or "Engine Coolant Temp High Stop in a Safe Place See Owner's Manual" is shown on the multiinformation display. In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely.

– Related Links -

Customizable features (P. 650)

Changing between the tachometer/speedometer displays

Depending on the current drive mode or settings, the displays will change as follows. Settings can be changed on the center display.

■ Vehicles without a head-up display

Tachometer

Displayed when the meter display type setting is set to display type 1 or display type 3.

Speedometer

Always displayed.

The display will change between a digital speedometer and/or analog speedometer depending on the meter display type setting.

■ Vehicles with a head-up display

Tachometer

Displayed when the meter display type setting is set to display type 1.

F SPORT models: Also displayed when set to display type 3.

Speedometer

A digital speedometer is always displayed.

When the meter display type setting is set to display type 2, an analog speedometer will also be displayed.

– Related Links

Customizable features (P. 650)

Changing the distance driven display/resetting the distance driven

The display can be changed between the following items.

Odometer

Displays the total distance the vehicle has been driven.


• Trip meter A/trip meter B

Displays the distance the vehicle has been driven since the meter was last reset. Trip meters A and B can be used to record and display different distances independently.

Distance until next engine oil change
 Displays the distance the vehicle can be driven until an oil change is necessary.

Each time the switch is pressed, the displayed item will be changed.


When the trip meter is displayed, pressing and holding the switch will reset the trip meter.

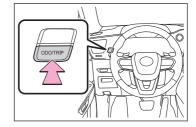

Gauges and meters (FSPORT models)

Depending on the shift position or current drive mode, the meter displays or position of some gauges will change.

► Ring display state

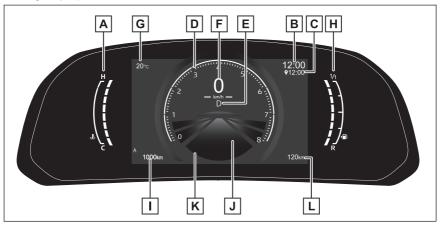

A Engine coolant temperature gauge

Displays the engine coolant temperature

B Clock

Automatically adjusts the time by using the GPS time information (GPS clock). For details, refer to "Multimedia owner's manual".

C Navigation system estimated time of arrival display*

Displays the estimated time of arrival according to the navigation system.

D Tachometer

Displays the engine speed in revolutions per minute

- Rev indicator
- Rev peak

Analog speedometer

Depending on the selected drive mode or certain settings, the display will change.

- E Shift position/shift range/gear position
- F Digital speedometer
- G Outside temperature

Displays the ambient temperature within the range of -40° C (-40° F) to 50° C (122° F).

^{*:} If equipped

H Fuel gauge

Displays the quantity of fuel remaining in the tank.

- Odometer and trip meter display
- J Multi-information display

Presents the driver with a variety of vehicle data and displays warning messages if a malfunction occurs.


K Background color of driving mode

Background color changes according to the driving mode.

L Distance to empty

Displays the driving range with remaining fuel.

▶ Bar display state

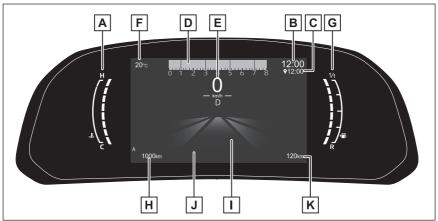

A Engine coolant temperature gauge

Displays the engine coolant temperature

B Clock

Automatically adjusts the time by using the GPS time information (GPS clock). For details, refer to "Multimedia owner's manual".

C Navigation system estimated time of arrival display*

Displays the estimated time of arrival according to the navigation system.

D Tachometer

Displays the engine speed in revolutions per minute

- Rev indicator
- Rev peak
- E Shift position/shift range/gear position/digital speedometer

5-1. Functions and displays of the meter

F Outside temperature

Displays the ambient temperature within the range of -40°C (-40°F) to 50°C (122°F).

G Fuel gauge

Displays the quantity of fuel remaining in the tank.

- H Odometer and trip meter display
- I Multi-information display

Presents the driver with a variety of vehicle data and displays warning messages if a malfunction occurs .

J Background color of driving mode

Background color changes according to the driving mode.

K Distance to empty

Displays the driving range with remaining fuel.

☐ INFORMATION

■ The meters and display illuminate when

The engine switch is in ON.

Outside temperature display

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change:
 - When stopped, or driving at low speeds (less than 20 km/h [12 mph])
 - When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When "--" or "E" is displayed, the system may be malfunctioning.

Take your vehicle to any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

■ Distance to empty

- This distance is computed based on your average fuel consumption. As a result, the
 actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated. When refueling, turn the engine switch off. If the vehicle is refueled without turning the engine switch off, the display may not be updated.

Liquid crystal display

Small spots or light spots may appear on the display.

This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

■ Free/Open Source Software Information

This product contains Free/Open Source Software (FOSS). The license information and/or the source code of such FOSS can be found at the following URL. https://www.denso.com/global/en/opensource/meter/toyota/

WARNING

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

M NOTICE

To prevent the engine or components from being damaged, observe the following precautions.

- Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
- The engine may be overheating if the engine coolant temperature gauge is in the red zone (H); or "Engine Coolant Temp High Stop in a Safe Place See Owner's Manual" is shown on the multiinformation display. In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely.

Related Links

Changing between the tachometer/speedometer displays(P. 288)

Changing the distance driven display/resetting the distance driven(P. 289)

Customizable features (P. 650)

Rev indicator/Rev peak display

■ Rev indicator

When the engine speed reaches a set speed or the red zone, the tachometer will be highlighted.

The indicators will be displayed in amber when the engine speed reaches a set speed, and in red when the engine speed reaches the red zone.

5-1. Functions and displays of the meter

The engine speed at which the Rev indicator is displayed can be changed on the center display.

■ Rev peak

When the engine speed reaches or exceeds 5000 r/min, an afterimage of the tachometer will be displayed at the highest engine speed for approximately 1 second.


— Related Links –

Customizable features (P. 650)

Multi-information display (vehicles without a head-up display)

A variety of driving-related information can be displayed. Depending on the situation, warning or advice pop-up displays will also be displayed.

■ Display area

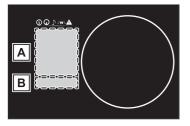

- A Content display area
- B Driving support system information display area

When a menu icon other than is selected, if the driving support system operates, the system operating state will be displayed.

■ Items displayed in the content display area

By selecting menu icons on the multi-information display, the following items can be displayed.



Driving information display

Navigation system-linked display*

•

Audio system-linked display

/A\

Driving support system information display

•

Warning message

^{*:} If equipped

Liquid crystal display

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

WARNING

Caution for use while driving

- When operating the multi-information display while driving, pay extra attention to the safety of the area around the vehicle.
- Do not look continuously at the multi-information display while driving as you may fail
 to see pedestrians, objects on the road, etc. ahead of the vehicle.

The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

Cautions during setting up the display

As the engine needs to be running during setting up the display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

⚠ NOTICE

To prevent battery discharge, ensure that the engine is running while setting up the display features.

- Related Links -


Displayed content(P. 301)

Changing the instrument panel light brightness (P. 312)

Multi-information display (vehicles with a head-up display)

A variety of driving-related information can be displayed. Depending on the situation, warning or advice pop-up displays will also be displayed.

■ Display area

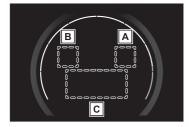

A Driving support system information display area

When driving support system information is not displayed in the content display area, if the driving support system operates, the system operating state will be displayed.

B Navigation system-linked display area*

If the navigation system linked-display is not displayed in the content display area, route guidance will be displayed.

C Content display area

■ Items displayed in the content display area

The following items can be displayed.

- Drive information 1
- Drive information 2
- Eco Driving Indicator
- Audio system-linked display
- Navigation system-linked display**1
- Boost gauge/engine oil temperature gauge/engine oil pressure gauge*
- G-force
- Gear Position
- Driving support system information display*1
- Blank (No items)

^{*:} If equipped

^{*1:} Displayed on the head-up display when the display mode is set to display the maximum.

Liquid crystal display

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

WARNING

Caution for use while driving

- When operating the multi-information display while driving, pay extra attention to the safety of the area around the vehicle.
- Do not look continuously at the multi-information display while driving as you may fail
 to see pedestrians, objects on the road, etc. ahead of the vehicle.

The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

Cautions during setting up the display

As the engine needs to be running during setting up the display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

M NOTICE

To prevent battery discharge, ensure that the engine is running while setting up the display features.

- Related Links -


Displayed content(P. 301)

Changing the instrument panel light brightness (P. 312)

Head-up display

The head-up display projects a variety of driving-related information and the operating state of the driving support systems on the windshield.

The content displayed will differ according to the driving conditions and display mode of the head-up display. Depending on the situation, pop-up displays will also be displayed.

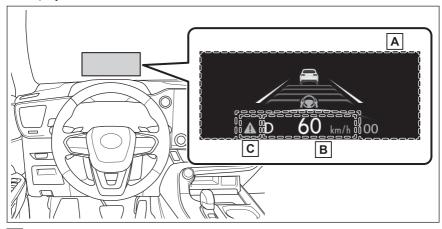

A Main display area

Displays the following items:

- Driving support system information display
- Tachometer/Eco Driving Indicator
- Compass*
- B Driving information display area

Displays the following items:

- Speedometer
- Shift position/shift range/gear position
- C 1 : Master warning icon

Displayed when a warning message is displayed.

■ Head-up display will operate when

The engine switch is in ON.

^{*:} If equipped

■ When using the head-up display

The head-up display may seem dark or hard to see when viewed through sunglasses, especially polarized sunglasses. Adjust the brightness of the head-up display or remove your sunglasses.


WARNING

Do not continuously look at the head-up display while driving as you may fail to see pedestrians, objects on the road, etc. ahead of the vehicle.

⚠ NOTICE

Observe the following precautions.

 Do not place any drinks near the head-up display projector. If the projector gets wet, electrical malfunctions may result.

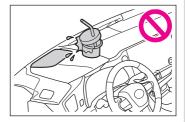

- Do not place anything on or put stickers onto the head-up display projector.
 Doing so could interrupt head-up display indications.
- Do not touch the inside of the head-up display projector or thrust sharp edges or the like into the projector.

Doing so could cause mechanical malfunctions.

- Related Links -

Changing between the tachometer/speedometer displays(P. 288)

Displayed content(P. 301)


Changing settings for the head-up display(P. 313)

Customizable features (P. 650)

Displayed content

Operating the meters/displays


► Vehicles without a head-up display

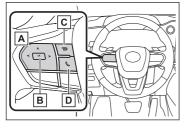

- A < / > : Select menu icons
 - $^{\wedge}$ / $^{\vee}$: Change displayed content, scroll up/down the screen and move the cursor up/down
- B Enter/Set
- C Return to the previous screen
- D Start/receive call

Linked with the hands-free system, sending or receiving call is displayed. For details regarding the hands-free system, refer to the "Multimedia owner's manual".

► Vehicles with a head-up display

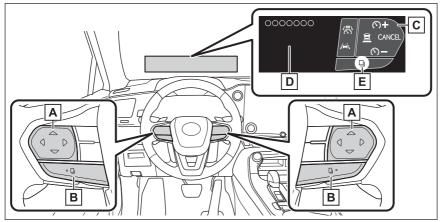

A The function of each switch differs depending on the conditions and settings.

When a switch is touched, the function of each switch is displayed on the head-up display. If the head-up display is off, the functions will be displayed on the multi-information display.

Also, preferred functions for each switch can be set on the center display.

- B Each time this switch is pressed, the functions will change.
- C Switch icon display

The icon of each switch will be displayed. The touched switch will be highlighted. (E)

5-2. Functions of the displays

D Switch function guide display

The function guide for the touched switch will be displayed.

- If the steering wheel switches do not respond when touched
- It is easier to make the steering wheel switches respond by moving your thumb while touching them.
- If the surface of a steering wheel switch is dirty, turn the engine switch off and then clean the switches.
- By turning winter glove mode on, the sensitivity of the switch sensors can be increased.

– Related Links ·

Customizable features(P. 650)

Switching the display of the multi-information display (vehicles without a head-up display)

Press < or > of the meter control switch.

Switching driving information (vehicles without a head-up display)

Press the ≺ or ➤ meter control switch to select ① . Then press ^ or ∀ .

Switching the display of the multi-information display (vehicles with a headup display)

Switching with the steering wheel switches

If OISP DISP is set as a favorite steering wheel switch function, the display can be switched by pushing OISP or DISP.

- 1 Select 🌣 on the center display.
- 2 Select [Vehicle customise].
- 3 Select [Meter].
- 4 Select < or > of "Display switching".

The display changes each time the switch is selected.

Display of drive information

Driving related information is displayed on the following displays.

- Multi-information display
- Head-up display
- Center display

The items displayed will differ depending on the display.

Drive information 1

The following items can be displayed on the multi-information display.

Use the displayed values as a reference only.

Current fuel consumption
 Displays instantaneous current fuel consumption

Average fuel consumption

Drive information 2

The following items can be displayed on the multi-information display.

- Average vehicle speed
- Total driving time

Drive information 3 (vehicles without a head-up display)

The following items can be displayed on the multi-information display.

Distance to empty

Displays the driving range with remaining fuel.

Average fuel economy since starting

Displays the average fuel consumption since starting.

INFORMATION

Distance to empty


- This distance is computed based on your average fuel consumption. As a result, the
 actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated. When refueling, turn the engine switch off. If the vehicle is refueled without turning the engine switch off, the display may not be updated.

^{*:} If equipped

Eco Driving Indicator

Eco Driving Indicator can be displayed on the multi-information display and the head-up display.

This illustration is for explanation only and may differ depending on the specifications of the vehicle.

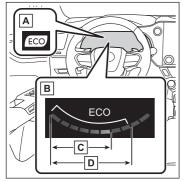

- A Eco Driving Indicator Light
 - During Eco-friendly acceleration (Eco driving), the Eco Driving Indicator Light will turn on. When the acceleration exceeds the Zone of Eco driving, or when the vehicle is stopped, the light turns off.
- B Eco Driving Indicator Zone Display
 Suggests the Zone of Eco driving with current
 Eco driving ratio based on acceleration.
- C Eco driving ratio based on acceleration

 If the acceleration exceeds the Zone of Eco

driving, the right side of the Eco Driving Indicator Zone Display will illuminate.

At this time, the Eco Driving Indicator Light will turn off.

D Zone of Eco driving

☐ INFORMATION

Eco Driving Indicator will not operate under the following conditions:

- The shift position is in any position other than D.
- A paddle shift switch is operated.
- The driving mode is set to sport mode.
- The driving mode is set to custom mode and the powertrain control is set to power.
- The vehicle speed is approximately 130 km/h (80 mph) or higher.

Boost gauge/engine oil temperature gauge/engine oil pressure gauge*

The following items can be displayed on the multi-information display.

Boost gauge

^{*:} If equipped


Displays the boost pressure. The display will change color if the specified pressure is exceeded.

- Engine oil temperature gauge
 Displays the engine oil temperature. The display will flash if the engine oil temperature exceeds 140 °C (284 °F).
- Engine oil pressure gauge
 Displays the engine oil pressure. A buzzer will sound and warning message will be displayed if the engine oil pressure becomes low.

G-force

Displays lateral G-forces on the vehicle on the multi-information display.

Displays around the periphery of the G-force display, the left and right steering amount, accelerator pedal input, and brake fluid pressure.

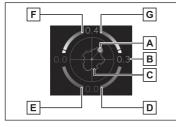

- A Acceleration G-force on the vehicle
- B Current G-force value (analyzed value of front/rear and left/right G-forces)
- Record of the maximum G-forces

 The display is reset each time the engine is started.
- D Accelerator pedal input
- E Brake fluid pressure
- F Left steering amount
- G Right steering amount

If lateral G-forces of 0.5 G or greater are generated, the G-force value display will turn amber and be held for 2 seconds. (Peak hold function)

This display is intended for use as a guideline. Depending on factors such as the road surface condition, temperature and vehicle speed, the display may not show the actual condition of the vehicle.

INFORMATION

- The G-force values may not be zero even when the vehicle is parked, such as when it is parked on an incline.
- Depending on the vehicle usage conditions, the brake fluid pressure display may not reach its maximum reading even though the brake pedal is fully depressed.

5-2. Functions of the displays

 If a battery terminal is disconnected and reconnected, the steering amount display may be disabled temporarily. After driving the vehicle for a while, the display will be enabled.

Gear Position

Displays the current shift range or gear position when the shift position is in D or M.

 
Blank (No items)

Displays no drive information contents on the multi-information display.

Current fuel consumption/history screen

Fuel consumption information can be displayed on the center display.


■ Current fuel consumption screen



- A Resetting the history data
- B Fuel consumption in the past 15 minutes
- C Current fuel consumption
- D Average vehicle speed since the engine was started.
- E Trip range
- F Elapsed time since the engine was started.

Use the displayed average fuel consumption as a reference. The image is an example only, and may vary slightly from actual conditions.

 ■ History fuel cunsumption screen



- A Latest fuel consumption
- B Best recorded fuel consumption
- C Previous fuel consumption record
- D Resetting the history data
- E Updating the latest fuel consumption data

Use the displayed average fuel consumption as a reference. The image is an example only, and may vary slightly from actual conditions.

Updating the history data

Update the latest fuel consumption by selecting [**Update**] to measure the current fuel consumption again.

■ Resetting the data

The fuel consumption data can be deleted by selecting [Clear data].

■ Trip range

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining. This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.


Displaying fuel consumption/history screen on the center display

- 1 Select a on the main menu.
- 2 Select [Trip information].
- 3 Select [Current] or [History].

AWD operation status display (AWD models)

AWD operation status display can be displayed on the center display.

The illustration used is intended as an example, and may differ from the image that is actually displayed on the center display.

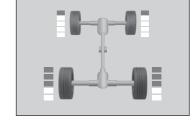

Torque distribution display:

Displays the drive status of each wheel in 6 steps from 0 to 5.

Displaying AWD operation status display on the center display

- 1 Select a on the main menu.
- 2 Select [All wheel drive].

Tire pressure

The tire pressure detected by the tire pressure warning system can be displayed on the center display.

Displaying the tire pressure on the center display

- 1 Select 🖨 on the main menu.
- 2 Select [Tyre pressure].

Driving support system information display

The operating state of the following systems can be displayed on the multi-information display or head-up display.*

- Dynamic radar cruise control
- LTA (Lane Tracing Assist)
- LDA (Lane Departure Alert)
- LCA (Lane Change Assist)*
- RSA (Road Sign Assist)*
- Proactive Driving Assist*
- PCS (Pre-Collision System)

☐ INFORMATION

Display position (vehicles with a head-up display)

When the display mode of the head-up display is set to display the maximum, driving support system information will be displayed on the head-up display and not in the content display area of the multi-information display.

Audio system-linked display

The audio system-linked display displays the operating state of the audio system on the multi-information display.

Operations such as selecting the audio source or track, etc. can be performed.

Navigation system-linked display*

The following information is displayed on the multi-information display.

- Route guidance to destination
- Street name
- Compass

^{*:} If equipped

Display position (vehicles with a head-up display)

Depending on the display settings of the head-up display, some content may be displayed on the head-up display and not in the content display area of the multi-information display.

Pop-up display information

Pop-up displays will be displayed on the multi-information display or the head-up display* when necessary.

When a pop-up display is displayed, a current display may no longer be displayed. In this case, the display will return after the pop-up display disappears.

Driving support systems

Displays a warning/suggestion/advice message or the operating state of a relevant system.

- Dynamic radar cruise control
- LTA (Lane Tracing Assist)
- LDA (Lane Departure Alert)
- LCA (Lane Change Assist)*
- Proactive Driving Assist*
- PCS (Pre-Collision System)
- RSA (Road Sign Assist)
- Safe Exit Assist (with door opening control)
- FCTA (Front Cross Traffic Alert)

Warning message

Some warning messages are displayed when necessary, according to certain conditions.

Hands-free system status

Displayed when the hands-free system is operated.

^{*:} If equipped

Suggestion function

Displays suggestions to the driver in the following situations. To select a response to a displayed suggestion, use the steering switches.

Suggestion to enable the power back door*

If the power back door system is disabled (setting on the center display set to off) and the power back door switch on the instrument panel is operated, a suggestion message will be displayed asking if you wish to enable the power back door system.

To enable the power back door system, select [Yes].

After enabling the power back door system, press the power back door switch again to open or close the power back door.

■ Suggestion to close the power windows (linked to windshield wiper operation)

If the windshield wipers are operated with a power window open, a suggestion message will be displayed asking if you wish to close the power windows.

To close all of the power windows, select [Yes].

— Related Links

Customizable features (P. 650)

Steering wheel switch operation display

■ Vehicles without a head-up display

Displayed when an audio remote control switch on the steering wheel is operated.

■ Vehicles with a head-up display

When a steering wheel switch is touched, the icon of each switch and a function guide is displayed.

— Related Links -

Operating the meters/displays(P. 301)

Navigation system-linked information*

In certain situations, the following items which are linked to the navigation system will be displayed:

- Route guidance to destination
- Map display (displayed on the head-up display*)

^{*:} If equipped

Items displayed when the engine switch is turned off

The following items will be displayed on the multi-information display when the engine switch is turned off.

- Average fuel consumption since starting^{*1}
- Distance driven since starting*1
- Driving time since starting*1


^{*1:} It is reset each time the engine stops.

Changing the instrument panel light brightness

The brightness of the instrument panel lights can be adjusted.

The instrument panel brightness levels when the tail lights are on and off can be adjusted individually.

However, when the surroundings are bright (daytime, etc.), turning on the tail lights will not change the instrument panel brightness.

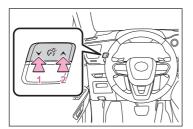

- 1 Darker
- 2 Brighter

Changing settings for the head-up display

WARNING

- Check that the position and brightness of the head-up display image does not interfere with safe driving.
 - Incorrect adjustment of the image's position or brightness may obstruct the driver's view and lead to an accident, resulting in death or serious injury.
- As the engine needs to be running while changing the settings of the head-up display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

⚠ NOTICE

To prevent battery discharge, ensure that the engine is running while the changing the settings of the head-up display.

☐ INFORMATION

Changing settings with the steering wheel switches

If any of the following items have been set as as a favorite steering wheel switch function, settings of the head-up display can be changed using the steering wheel switches.

- ON/OFF : Display on/off
- MODE : Display mode
- 🗘 / 🖫 : Heigh
- **+** / - ***** : Brightness

Enabling/disabling of the head-up display

If the head-up display is disabled, it will remain disabled when the engine switch is turned off then back to ON.

Display brightness

In addition to the brightness setting, the brightness of the display will change automatically according to the ambient brightness.

■ Head-up display automatic position adjustment (vehicles with driving position memory)

If the display position is recorded into memory, the head-up display will be automatically adjusted to the desired position.

- Select on the center display.
- 2 Select [Vehicle customise].
- 3 Select [Head-up display].

The following settings for the head-up display can be changed.

- Display on/off
- Display mode
- Height
- Brightness
- Angle

– Related Links -

Customizable features (P. 650)

6

Driving support system

5-1. Features of the safe driving sup- port functions	Brake operation when an object is detected while ap-
Lexus Safety System +316	proaching at low speed398
Driving assist systems325	Road Sign Assist410
5-2. Using the safe driving support	Dynamic radar cruise control416
functions	Cruise Control429
Pre-Collision System 334	Emergency Driving Stop System434
Lane Tracing Assist347	
Lane Change Assist 352	Engine output restriction when the accelerator pedal and brake pedal are depressed at the same time437
Lane Departure Alert	
Front crossing traffic alert362	
Assistance in detecting vehi-	Sudden start restraint control 438
cles behind when changing lanes365	6-3. Reducing impact to the occupants in a collision
Supporting safe exit by detecting detectable objects at the rear of the vehicle by outputting sounds, displaying screens as a warning or cancelling opening of the doors 371	Reducing impact to passengers in a collision439
Buzzer and screen notifications when approaching an object at low speed	
Buzzer and screen notifications when traveling at a low speed and an approaching vehicle is detected at the rear	
Buzzer and screen notifica- tions when traveling at a low speed and a pedestrian is	

Lexus Safety System +

Lexus Safety System + consists of the driving assist systems and contributes to a safe and comfortable driving experience.

WARNING

Lexus Safety System +

Lexus Safety System + operates under the assumption that the driver will drive safely, and is designed to help reduce the impact to the occupants in a collision and assist the driver under normal driving conditions.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is solely responsible for paying attention to the vehicle's surroundings and driving safely.

For safe use

- Do not overly rely on this system. The driver is solely responsible for paying attention to the vehicle's surroundings and driving safely. This system may not operate in all situations and provided assistance is limited. Over-reliance on this system to drive the vehicle safely may lead to an accident resulting in death or serious injury.
- Do not attempt to test the operation of the system, as it may not operate properly, possibly leading to an accident.
- If attention is necessary while performing driving operations or a system malfunction occurs, a warning message or warning buzzer will be operated. If a warning message is displayed on the display, follow the instructions displayed.
- Depending on external noise, the volume of the audio system, etc. it may be difficult to hear the warning buzzer. Also, depending on the road conditions, it may be difficult to recognize the operation of the system.

When it is necessary to disable the system

In the following situations, make sure to disable the system.

Failure to do so may lead to the system not operating properly, possibly leading to an accident resulting in death or serious injury.

- When the vehicle is tilted due to being overloaded or having a flat tire
- When driving at extremely high speeds
- When towing another vehicle
- When the vehicle is being transported by a truck, ship, train, etc.
- When the vehicle is raised on a lift and the tires are allowed to rotate freely
- When inspecting the vehicle using a drum tester such as a chassis dynamometer or speedometer tester, or when using an on vehicle wheel balancer

- When the vehicle is driven in a sporty manner or off-road
- When using an automatic car wash
- When a sensor is misaligned or deformed due to a strong impact being applied to the sensor or the area around the sensor
- When accessories which obstruct a sensor or light are temporarily installed to the vehicle
- When a compact spare tire or tire chains are installed to the vehicle or an emergency tire puncture repair kit has been used
- When the tires are excessively worn or the inflation pressure of the tires is low
- When tires other than the manufacturer specified size are installed
- When the vehicle cannot be driven stably, due to a collision, malfunction, etc.

■ Driving assist systems

- AHS (Adaptive High-beam System)
 - \rightarrow P.176
- AHB (Automatic High Beam)
 - \rightarrow P.180
- PCS (Pre-Collision System)
 - \rightarrow P.334
- LTA (Lane Tracing Assist)
 - \rightarrow P.347
- ullet LCA (Lane Change Assist)
 - \rightarrow P.352
- LDA (Lane Departure Alert)
 - \rightarrow P.356
- FCTA (Front Crossing Traffic Alert)*
 - \rightarrow P.362
- RSA (Road Sign Assist)*
 - \rightarrow P.410


^{*:} If equipped

- Dynamic radar cruise control
 - \rightarrow P.416
- Emergency Driving Stop System
 - $\rightarrow P.434$

Sensors used by Lexus Safety System +


Various sensors are used to obtain the necessary information for system operation.

■ Front

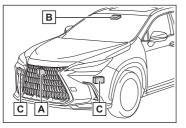

- A Front radar sensor
- B Front camera
- C Front side radar sensors*

■ Rear

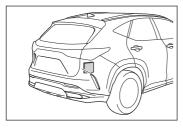

Rear side radar sensors

WARNING

■ To prevent malfunction of the radar sensors


Observe the following precautions. Failure to do so may lead to a radar sensor not operating properly, possibly leading to an accident resulting in death or serious injury.

• Keep the radar sensors and radar sensor covers clean at all times.

Clean the front of a radar sensor or the front or back of a radar sensor cover if it is dirty or covered with water droplets, snow, etc.

Clean the radar sensor and radar sensor cover with a soft cloth so as to not mark or damage them.

^{*:} If equipped

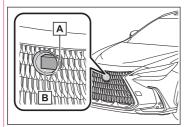


- A Radar sensor
- B Radar sensor cover

- Do not attach accessories, stickers (including transparent stickers), aluminum tape, etc. to a radar sensor or radar sensor cover and their surrounding area.
- Do not subject a radar sensor or its surrounding area to impact.
- If a radar sensor, the front grille, or front bumper has been subjected to a impact, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- Do not disassemble the radar sensors.
- Do not modify or paint the radar sensors or radar sensor cover, or replace them with anything other than Lexus genuine parts.
- In the following situations, recalibration of the radar sensors will be necessary.
 Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details.
 - When a radar sensor is removed and installed, or replaced
 - When the front bumper or the front grille has been replaced

■ To prevent malfunction of the front camera

Observe the following precautions. Failure to do so may lead to the front camera not operating properly, possibly leading to an accident resulting in death or serious injury.

- Always keep the windshield clean.
 - If the windshield is dirty or covered with an oily film, water droplets, snow, etc., clean the windshield.
 - Even if a glass coating agent is applied to the windshield, it will still be necessary to use the windshield wipers to remove water droplets, etc. from the area of the windshield in front of the front camera.
 - If the inner side of the windshield where the front camera is installed is dirty, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details.
- Do not attach stickers (including transparent stickers) or other items to the area of the windshield in front of the front camera (shaded area in the illustration).

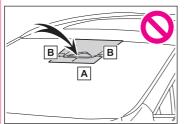

- A Approximately 4cm (1.6 in.)
- B Approximately 4cm (1.6 in.)

- If the part of the windshield in front of the front camera is fogged up or covered with condensation or ice, use the windshield defogger to remove the fog, condensation, or ice.
- If water droplets cannot be properly removed from the area of the windshield in front
 of the front camera by the windshield wipers, replace the wiper insert or wiper blade.
- Do not attach window tint to the windshield.
- Replace the windshield if it is damaged or cracked.

If the windshield has been replaced, recalibration of the front camera will be necessary.

Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details.

- Do not allow liquids to contact the front camera.
- Do not allow bright lights to shine into the front camera.
- Do not damage the lens of the front camera or allow it to become dirty.

When cleaning the inside of the windshield, do not allow glass cleaner to contact the lens of the front camera. Do not touch the lens of the front camera.

If the lens of the front camera is dirty or damaged, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details.

- Do not subject the front camera to a strong impact.
- Do not change the position or orientation of the front camera or remove it.
- Do not disassemble the front camera.
- Do not modify any parts around the front camera, such as the inside rear view mirror or ceiling.
- Do not attach accessories which may obstruct the front camera to the hood, front grille, or front bumper.

Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details.

- If a surfboard or other long object is to be mounted on the roof, make sure that it will not obstruct the front camera.
- Do not modify or change the headlights and other lights.

Front camera installation area on the windshield

If the system determines that the windshield may be fogged up, it will automatically operate the heater to defog the part of the windshield around the front camera. When cleaning, etc., be careful not to touch the area around the front camera until the windshield has cooled sufficiently, as touching it may cause burns.


☐ INFORMATION

■ Situations in which the sensors may not operate properly


- When the height or inclination of the vehicle has been changed due to modifications
- When the windshield is dirty, fogged up, cracked or damaged
- When a sensor is extremely hot
- When mud, water, snow, dead insects, foreign matter, etc., is attached to the front of the sensor
- When in inclement weather such as heavy rain, fog, snow, or a sandstorm
- When water, snow, dust, etc. is thrown up in front of the vehicle, or when driving through mist or smoke
- When the headlights are not illuminated while driving in the dark, such as at night or when in a tunnel
- When the lens of a headlight is dirty and illumination is weak
- When the headlights are misaligned
- When a headlight is malfunctioning
- When a the headlights of another vehicle, sunlight, or reflected light shines directly into the front camera
- When the brightness of the surrounding area changes suddenly
- When driving near a TV tower, broadcasting station, electric power plant, radar equipped vehicles, etc., or other location where strong radio waves or electrical noise may be present
- When a wiper blade is blocking the front camera
- When in a location or near objects which strongly reflect radio waves, such as the following:
 - Tunnels

6-1. Features of the safe driving support functions

- Truss bridges
- Gravel roads
- Rutted, snow-covered roads
- Walls
- Large trucks
- Manhole covers
- Metal plates
- Guardrail
- When near a step or protrusion
- When a detectable vehicle is narrow, such as a small mobility vehicle
- When a detectable vehicle has a small front or rear end, such as an unloaded truck
- When a detectable vehicle has a low front or rear end, such as a low bed trailer

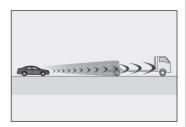

When a detectable vehicle has extremely high ground clearance

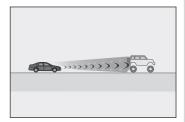

- When a detectable vehicle is carrying a load which protrudes from its cargo area
- When a detectable vehicle has little exposed metal, such as a vehicle which is partially covered with cloth, etc.
- When a detectable vehicle is irregularly shaped, such as a tractor, sidecar, etc.
- When the distance between the vehicle and a detectable vehicle has become extremely short
- When a detectable vehicle is at an angle
- When a large amount of snow, mud, etc. is attached to a detectable vehicle
- When driving on the following kinds of roads:

- Roads with sharp curves or winding roads
- Roads with changes in grade, such as sudden inclines or declines
- Roads which is sloped to the left or right
- Roads with deep ruts
- Roads which are rough and unmaintained
- Roads which frequently undulate or are bumpy
- When the steering wheel is being operated frequently or suddenly
- When the vehicle is not in a constant position within a lane
- When parts related to this system, the brakes, etc. are extremely hot or cold, wet, etc.
- When the wheels are misaligned
- When driving on slick road surfaces, such as when it is covered with ice, snow, gravel, etc.
- When the course of the vehicle differs from the shape of a curve
- When the vehicle speed is excessively high when entering a curve
- When entering/exiting a parking lot, garage, car elevator, etc.
- When driving in a parking lot
- When driving through an area where there are obstructions which may contact your vehicle, such as tall grass, tree branches, a curtain, etc.

■ Situations in which the lane may not be detected

- When the lane is extremely wide or narrow
- Immediately after changing lanes or passing through an intersection
- When driving in a temporary lane or lane regulated by construction
- When there are structures, patterns, shadows which are similar to lane lines in the surrounding
- When the lane lines are not clear or driving on a wet road surface
- When a lane line is on a curb.
- When driving on a bright, reflective road surface, such as concrete

■ Situations in which some or all of the functions of the system cannot operate

- When a malfunction is detected in this system or a related system, such as the brakes, steering, etc.
- When the VSC, TRC, or other safety related system is operating
- When the VSC, TRC, or other safety related system is off

■ Changes in brake operation sound and pedal response

- When the brakes have been operated, brake operation sounds may be heard and the brake pedal response may change, but this does not indicate a malfunction.
- When the system is operating, the brake pedal may feel stiffer than expected or sink.
 In either situation the brake pedal can be depressed further. Further depress the brake pedal as necessary.

Driving assist systems

To keep driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

■ ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface.

■ Brake assist

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation.

■ VSC (Vehicle Stability Control)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces.

■ VSC+ (Vehicle Stability Control+)

Provides cooperative control of the ABS, TRC, VSC and EPS.

Helps to maintain directional stability when swerving on slippery road surfaces by controlling steering performance.

■ Trailer Sway Control

Helps the driver to control trailer sway by selectively applying brake pressure for individual wheels and reducing driving torque when trailer sway is detected.

■ TRC (Traction Control)

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

■ Active Cornering Assist (ACA)

Helps to prevent the vehicle from drifting to the outer side by performing inner wheel brake control when attempting to accelerate while turning.

■ Hill-start assist control

Helps to reduce the backward movement of the vehicle when starting on an uphill.

■ VGRS (Variable Gear Ratio Steering)

Adjusts the front wheel turning angle in accordance with the vehicle speed and steering wheel movement.

■ EPS (Electric Power Steering)

Employs an electric motor to reduce the amount of effort needed to turn the steering wheel.

■ Dynamic Torque Control AWD system (NX250: AWD models)

Automatically controls the drive system such as to front-wheel drive or AWD (all wheel drive) according to various running conditions including normal driving, during cornering, on a uphill, when starting off, during acceleration, on a slippery roads due to snow or rain, thus contributing to stable operability and driving stability.

Automatic Rear Flashing Hazard Lights*

The rear side radar sensors detect following vehicles driving in the same lane. If the system determines that the possibility of a rear-end collision is high, the emergency flashers will flash rapidly to warn the driver of the following vehicle. Simultaneously, a message will be displayed on the multi-information display to notify the driver of the approach of the following vehicle.

Adaptive Variable Suspension System*

By independently controlling the damping force of the shock absorbers for each of the 4 wheels according to the road and driving conditions, this system helps riding comfort with superior vehicle stability, and helps good vehicle posture.

Also, the damping force changes depending on the selected driving mode.

■ Emergency brake signal

When the brakes are applied suddenly, the stop lights automatically flash to alert the vehicle behind.


■ The Secondary Collision Brake

When the SRS airbag sensor detects a collision and the system operates, the brakes and brake lights are automatically controlled to reduce the vehicle speed and help reduce the possibility of further damage due to a secondary collision.

^{*:} If equipped


■ When the TRC/VSC/Trailer Sway Control systems are operating

The slip indicator light will flash while the TRC/VSC/ Trailer Sway Control systems are operating.

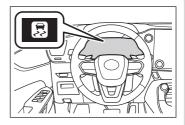

■ Disabling the TRC system

 If the vehicle gets stuck in mud, dirt or snow, the TRC system may reduce power from the




To turn the TRC system off, quickly press and release [



The "Traction Control Turned OFF" will be shown on the multi-information display. Press



again to turn the system back on.

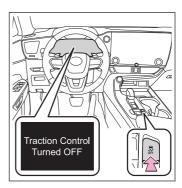

■ Turning off both TRC, VSC and Trailer Sway Control systems



] for

To turn the TRC, VSC and Trailer Sway Control systems off, press and hold [more than 3 seconds while the vehicle is stopped.

The VSC OFF indicator light will come on and the "Traction Control Turned OFF" will be



shown on the multi-information display. Press

again to turn the system back on.

■ When the message is displayed on the multi-information display showing that TRC



has been disabled even if [OFF] has not been pressed

TRC is temporary deactivated.

If the indicator light continues to remain on, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Operating conditions of hill-start assist control

When the following four conditions are met, the hill-start assist control will operate:

- The shift position is in a position other than P or N (when starting off forward/backward on an upward incline)
- The vehicle is stopped
- The accelerator pedal is not depressed
- The parking brake is not engaged
- Engine switch is turned to ON

Automatic system cancelation of hill-start assist control

The hill-start assist control will turn off in any of the following situations:

- The shift position is shifted to P or N
- The accelerator pedal is depressed
- The parking brake is engaged
- 2 seconds at maximum elapsed after the brake pedal is released
- Engine switch is turned to OFF

■ VGRS is disabled when

VGRS may stop operating in the following situations. In this event, the steering wheel may move from its straight forward position, but it will return when the system restarts.

- When the steering wheel is operated for an extended period of time while the vehicle is stopped or is moving very slowly
- When the steering wheel has been held fully to the left or right

The center position of the steering wheel may change when VGRS is disabled. However, the position will return to normal after VGRS is reactivated.

Sounds and vibrations caused by the ABS, brake assist, VSC, Trailer Sway Control, TRC and hill-start assist control systems

- A sound may be heard from the engine compartment when the brake pedal is depressed repeatedly, when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- Any of the following conditions may occur when the above systems are operating.
 None of these indicates that a malfunction has occurred.
 - Vibrations may be felt through the vehicle body and steering.
 - A motor sound may be heard also after the vehicle comes to a stop.
 - The brake pedal may pulsate slightly after the ABS is activated.
 - The brake pedal may move down slightly after the ABS is activated.

Active Cornering Assist operation sounds and vibrations

When the Active Cornering Assist is operated, operation sounds and vibrations may be generated from the brake system, but this is not a malfunction.

■ EPS and VGRS operation sound

When the steering wheel is operated, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ Automatic reactivation of TRC, Trailer Sway Control and VSC systems

After turning the TRC, Trailer Sway Control and VSC systems off, the systems will be automatically re-enabled in the following situations:

- When the engine switch is turned off
- If only the TRC system is turned off, the TRC will turn on when vehicle speed increases
 If both the TRC and VSC systems are turned off, automatic re-enabling will not occur when vehicle speed increases.

■ Operating conditions of Active Cornering Assist

The system operates when the following occurs.

- TRC/VSC can operate
- The driver is attempting to accelerate while turning
- The system detects that the vehicle is drifting to the outer side
- The brake pedal is released

■ Reduced effectiveness of the EPS system

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result.

Should this occur, refrain from excessive steering input or stop the vehicle and turn the engine off. The EPS system should return to normal within 10 minutes.

Operating conditions of Automatic Rear Flashing Hazard Lights

When the following two conditions are met, the Automatic Rear Flashing Hazard Lights will operate:

- The relative speed between your vehicle and the following vehicle is between approximately 30 and 100 km/h (19 and 62 mph).
- Your vehicle is being driven at approximately 10 km/h (7 mph) or less or at any speed with the brake pedal depressed.

Situations in which the Automatic Rear Flashing Hazard Lights may not operate properly

- In the following situations, the system may not detect a following vehicle properly:
 - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
 - When mud, snow, ice, a sticker, etc. is covering the sensor or surrounding area on the rear bumper
 - When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
 - When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
 - When the following vehicle is not approaching from straight behind your vehicle
 - When the following vehicle is approaching from an angle
 - If a vehicle suddenly cuts behind your vehicle
 - When the following vehicle is surrounded by other vehicles
 - When a bicycle carrier or other accessory is installed to the rear of your vehicle
- In the following situations, the system may operate even though there is no possibility of a collision
 - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
 - When your vehicle is surrounded by other vehicles
 - When your vehicle is stopped to make a turn at an intersection, etc. and a vehicle passes your vehicle from straight behind
 - When your vehicle is stopped on the roadside, etc. and a vehicle passes close to the side of your vehicle
 - When a following vehicle closely approaches your vehicle before overtaking

• When a following vehicle suddenly approaches to close to your vehicle

■ Operating conditions of emergency brake signal

When the following conditions are met, the emergency brake signal will operates:

- The emergency flashers are off.
- Actual vehicle speed is over 55 km/h (35 mph).
- The system judges from the vehicle deceleration that it is a sudden braking operation.

Automatic system cancelation of emergency brake signal

The emergency brake signal will be canceled in any of the following situations:

- The emergency flashers are turned on.
- The system judges from the vehicle deceleration that is not a sudden braking operation.

Secondary Collision Brake operating conditions

The system operates when the SRS airbag sensor detects a collision while the vehicle is in motion. However, the system does not operate in any of the following situations.

Secondary Collision Brake automatic cancelation

The system is automatically canceled in any of the following situations.

- lacktriangle The vehicle speed drops to approximately 0 km/h(0 mph).
- A certain amount of time elapses during operation
- The accelerator pedal is depressed a large amount

WARNING

■ The ABS does not operate effectively when

- The limits of tire gripping performance have been exceeded (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on wet or slick roads.

Stopping distance when the ABS is operating may exceed that of normal conditions

The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations:

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains
- When driving over bumps in the road
- When driving over roads with potholes or uneven surfaces

WARNING

■ TRC/VSC may not operate effectively when

Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRC/VSC system is operating. Drive the vehicle carefully in conditions where stability and power may be lost.

Active Cornering Assist does not operate effectively when

- Do not overly rely on Active Cornering Assist. Active Cornering Assist may not operate effectively when accelerating down slopes or driving on slippery road surfaces.
- When Active Cornering Assist frequently operates, Active Cornering Assist may temporarily stop operating to ensure proper operation of the brakes, TRC and VSC.

Hill-start assist control does not operate effectively when

- Do not overly rely on hill-start assist control. Hill-start assist control may not operate
 effectively on steep inclines and roads covered with ice.
- Unlike the parking brake, hill-start assist control is not intended to hold the vehicle stationary for an extended period of time. Do not attempt to use hill-start assist control to hold the vehicle on an incline, as doing so may lead to an accident.

■ When the TRC/VSC/Trailer Sway Control is activated

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.

■ When the TRC/VSC/Trailer Sway Control systems are turned off

Be especially careful and drive at a speed appropriate to the road conditions.

As these are the systems to help ensure vehicle stability and driving force, do not turn the TRC/VSC/Trailer Sway Control systems off unless necessary.

Trailer Sway Control is part of the VSC system and will not operate if VSC is turned off or experiences a malfunction.

Replacing tires

Make sure that all tires are of the specified size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The ABS, TRC, Trailer Sway Control and VSC systems will not function correctly if different tires are installed on the vehicle.

Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for further information when replacing tires or wheels.

Handling of tires and the suspension

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system to malfunction.

WARNING

Trailer Sway Control precaution

The Trailer Sway Control system is not able to reduce trailer sway in all situations. Depending on many factors such as the conditions of the vehicle, trailer, road surface and driving environment, the Trailer Sway Control system may not be effective. Refer to your trailer owner's manual for information on how to tow your trailer properly.

If trailer sway occurs

Observe the following precautions. Failing to do so may cause death or serious injury.

- Firmly grip the steering wheel. Steer straight ahead. Do not try to control trailer sway by turning the steering wheel.
- Begin releasing the accelerator pedal immediately but very gradually to reduce speed.
 Do not increase speed. Do not apply vehicle brakes.

If you make no extreme correction with the steering or brakes, your vehicle and trailer should stabilize.

Secondary Collision Brake

Do not rely solely upon the Secondary Collision Brake. This system is designed to help reduce the possibility of further damage due to a secondary collision, however, that effect changes according to various conditions. Overly relying on the system may result in death or serious injury.

- Related Links -

Trailer towing (vehicles with towing package)(P. 86)

Tires and wheels(P. 644)

Pre-Collision System

PCS (Pre-Collision System)

The pre-collision system uses sensors to detect objects (\rightarrow P.334) in the path of the vehicle. When the system determines that the possibility of a frontal collision with a detectable object is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a collision is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

The pre-collision system can be disabled/enabled and the warning timing can be changed. $(\rightarrow$ P.346)

WARNING

For safe use

- Driving safely is solely the responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving. Never use the pre-collision system in place of normal braking operations. This system cannot help avoid or reduce the impact of a collision in every situation. Over-reliance on this system to drive the vehicle safely may lead to an accident resulting in death or serious injury.
- Although the pre-collision system is designed to help avoid or help reduce the impact
 of a collision, its effectiveness may change according to various conditions. Therefore,
 it may not always be able to achieve the same level of performance. Read the following
 items carefully. Do not overly rely on this system and always drive carefully.
 - For safe use: → P.316

When to disable the pre-collision system

• When it is necessary to disable the system: \rightarrow P.316

Detectable objects

The system can detect the following as detectable objects. (Detectable objects differ depending on the function.)

- Vehicles
- Bicycles*1
- Pedestrians
- Motorcycles^{*1}

^{*1:} Detected as a detectable object only when being ridden.


System functions


Pre-collision warning

When the system determines that the possibility of a collision is high, a buzzer will sound and an icon and warning message will be displayed on the multi-information display to urge the driver to take evasive action.

If the detectable object is a vehicle, moderate braking will be performed with the warning.

If the system determines that the accelerator pedal is strongly depressed, the following icon and message will be displayed on the multi-information display.

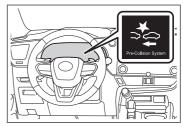

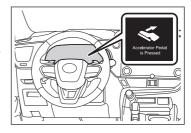

Pre-collision brake assist

If the system determines that the possibility of a collision is high and the brake operation by the driver is insufficient, the braking power will be increased.

Pre-collision brake control

If the system determines that the possibility of a collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the impact of the collision.

If the vehicle is stopped by pre-collision brake control, it will remain stopped until the brake pedal is depressed.

■ Emergency steering assist

If the system determines that the following conditions are met, assistance will be provided to help enhance vehicle stability and prevent lane departure. During assistance, in addition to the pre-collision warning, the following icon will be displayed on the multi-information display.



- The possibility of a collision is high
- There is sufficient space within the lane to perform evasive steering maneuvers
- The driver is operating the steering wheel

6-2. Using the safe driving support functions

Vehicles with active steering function: The brakes and steering are controlled to help avoid a collision or reduce the impact of a collision, regardless of the evasive steering maneuvers performed by the driver.

During assistance, the pre-collision warning will operate and a message will be displayed to warn the driver.


■ Intersection collision avoidance support (left/right turn)

In situations such as the following, if the system determines that the possibility of a collision is high, the pre-collision warning and pre-collision braking will operate. Depending on the intersection, assistance may not operate correctly.

 When turning left/right at an intersection and crossing the path of an oncoming vehicle




 When turning left/right and an oncoming pedestrian or bicycle is detected

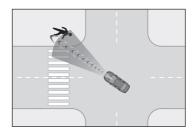

■ Intersection collision avoidance support (crossing vehicles)

At an intersection, etc., if the system determines that the possibility of a collision with an approaching vehicle or motorcycle is high, the pre-collision warning and pre-collision braking will operate. Depending on the intersection, assistance may not operate correctly.

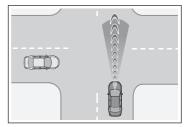

■ Acceleration Suppression at Low Speed

When driving at a low speed, if the accelerator pedal is strongly depressed and the system determines that there is a possibility of a collision, engine output will be restrained or the brakes will be applied weakly to restrict acceleration. During operation, a buzzer will sound and a warning indicator and message will be displayed on the multi-information display.



Suspension control

When the system determines that the possibility of a collision is high, the Adaptive Variable Suspension system (\rightarrow P.326) controls the damping force of the shock absorbers to help maintain an appropriate vehicle posture.

WARNING

Pre-collision braking

- When the pre-collision braking function is operating, a large amount of braking force will be applied.
- If the vehicle is stopped by pre-collision braking function, the driver should operate the brakes as necessary.
- In the following situations, brake hold will not operate after the pre-collision braking function has operated. Depending on the situation, the driver should operate the brake pedal immediately.
 - When the accelerator pedal is depressed
 - When the vehicle is stopped by intersection collision avoidance support
 - When the vehicle is stopped on a steep slope
- The pre-collision braking function may not operate if certain operations are performed by the driver. If the accelerator pedal is being depressed strongly or the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the pre-collision braking function from operating.
- If the brake pedal is being depressed, the system may determine that the driver is taking evasive action and possibly delay the operation timing of the pre-collision brake control.

Acceleration Suppression at Low Speed function

If the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the Acceleration Suppression at Low Speed function from operating.

WARNING

Emergency steering assist

- The emergency steering assist will be canceled when the system determines that lane departure prevention control has completed.
- Depending on operations performed by the driver, emergency steering assist may not operate or operation may be canceled.
 - If the accelerator pedal is depressed strongly, the steering wheel is turned heavily, the brake pedal is depressed, or the turn signal lever is operated, the system may determine that the driver is taking evasive action and the emergency steering assist may not operate.
 - While the emergency steering assist is operating, if the accelerator pedal is depressed strongly, the steering wheel is turned heavily, or the brake pedal is depressed, the system may determine that the driver is taking evasive action and emergency steering assist operation may be canceled.
 - While the emergency steering assist is operating, if the steering wheel is held or turned in the opposite direction of system operation, emergency steering assist operation will be canceled.

■ Operating conditions of each function of the pre-collision system

The pre-collision system is enabled and the system determines that the possibility of a frontal collision with a detected object is high.

However, the system will not operate in the following situations:

- When the vehicle has not been driven a certain amount after a terminal of the battery
 has been disconnected and reconnected
- When the shift lever is in R
 When the shift position is in R
- When the VSC OFF indicator is illuminated (only the pre-collision warning function will be operational)

The following are the operational speeds and cancelation conditions of each function:

Pre-collision warning

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehi- cles, stopped ve- hicles	Approximately 5 to 180 km/h (3 to 110 mph)	Approximately 5 to 180 km/h (3 to 110 mph)

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Oncoming vehicles	Approximately 30 to 180 km/h (20 to 110 mph)	Approximately 80 to 220 km/h (50 to 130 mph)
Bicycles	Approximately 5 to 80 km/h (3 to 50 mph)	Approximately 5 to 80 km/h (3 to 50 mph)
Pedestrians	Approximately 5 to 80 km/h (3 to 50 mph)	Approximately 5 to 80 km/h (3 to 50 mph)
Preceding motor- cycles, stopped motorcycles	Approximately 5 to 180 km/h (3 to 110 mph)	Approximately 5 to 80 km/h (3 to 50 mph)
Oncoming motor-cycles	Approximately 30 to 180 km/h (20 to 110 mph)	Approximately 30 to 180 km/h (20 to 110 mph)

While the pre-collision warning is operating, if the steering wheel is operated heavily or suddenly, the pre-collision warning may be cancelled.

Pre-collision brake assist

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehicles, stopped vehicles	Approximately 30 to 180 km/h (20 to 110 mph)	Approximately 10 to 180 km/h (7 to 110 mph)
Bicycles	Approximately 30 to 80 km/h (20 to 50 mph)	Approximately 30 to 80 km/h (20 to 50 mph)
Pedestrians	Approximately 30 to 80 km/h (20 to 50 mph)	Approximately 30 to 80 km/h (20 to 50 mph)
Preceding motor- cycles, stopped motorcycles	Approximately 30 to 180 km/h (20 to 110 mph)	Approximately 10 to 80 km/h (7 to 50 mph)

Pre-collision braking

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehi- cles, stopped ve- hicles	Approximately 5 to 180 km/h (3 to 110 mph)	Approximately 5 to 180 km/h (3 to 110 mph)

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Oncoming vehicles	Approximately 30 to 180 km/h (20 to 110 mph)	Approximately 80 to 220 km/h (50 to 130 mph)
Bicycles	Approximately 5 to 80 km/h (3 to 50 mph)	Approximately 5 to 80 km/h (3 to 50 mph)
Pedestrians	Approximately 5 to 80 km/h (3 to 50 mph)	Approximately 5 to 80 km/h (3 to 50 mph)
Preceding motor- cycles, stopped motorcycles	Approximately 5 to 180 km/h (3 to 110 mph)	Approximately 5 to 80 km/h (3 to 50 mph)
Oncoming motor- cycles	Approximately 30 to 180 km/h (20 to 110 mph)	Approximately 30 to 180 km/h (20 to 110 mph)

If either of the following occur while the pre-collision braking function is operating, it will be canceled:

- The accelerator pedal is strongly depressed
- The steering wheel is operated heavily or suddenly
- Emergency steering assist

The emergency steering assist will not operate when the turn signal lights are flashing.

Detectable objects	Vehicle speed	Relative speed between your vehicle and object	
Preceding vehicles, stopped vehicles, bicy-	Approximately 40 to 80 km/h (25 to 50 mph)	Approximately 40 to 80 km/h (25 to 50 mph)	
cles, pedestrians, mo- torcycles	Active steering function: * to 80 km/h (* to 50 mph)	Active steering function: * to 80 km/h (* to 50 mph)	
*Minimum vehicle speed: Vehicle speed at which evasion using pre-collision brake			

^{*}Minimum vehicle speed: Vehicle speed at which evasion using pre-collision brake control is difficult

While the emergency steering assist is operating, if any of the following are performed, emergency steering assist operation may be cancelled:

- The accelerator pedal is strongly depressed
- The steering wheel is operated heavily or suddenly
- The brake pedal is depressed
- Intersection collision avoidance support (left/right turn)

The intersection collision avoidance support (for left/right turning vehicles) will not operate when the turn signal lights are not flashing.

Detectable objects	Vehicle speed	Oncoming vehi- cle speed	Relative speed between your vehicle and object
Oncoming vehicles	Approximately 5 to 40 km/h (3 to 25 mph)	Approximately 5 to 75 km/h (3 to 45 mph)	Approximately 10 to 115 km/h (7 to 70 mph)
Pedestrians	Approximately 5 to 30 km/h (3 to 20 mph)	-	Approximately 5 to 40 km/h (3 to 25 mph)
Bicycles	Approximately 5 to 30 km/h (3 to 20 mph)	-	Approximately 5 to 50 km/h (3 to 30 mph)
Oncoming motorcycles	Approximately 5 to 40 km/h (3 to 25 mph)	Approximately 5 to 75 km/h (3 to 45 mph)	Approximately 10 to 115 km/h (7 to 70 mph)

Intersection collision avoidance support (crossing vehicles)

Detecta- ble objects	Vehicle speed	Crossing vehicle speed	Relative speed be- tween your vehicle and object
Vehicles (side)	Approximately 5 to 60 km/h (3 to 38 mph) • Your vehicle speed or less • Approximately 40 km/h or less (25 mph or less)		Approximately 5 to 60 km/h (3 to 38 mph)
Motorcy- cles (side)	Approximately 5 to 60 km/h (3 to 38 mph)	 Your vehicle speed or less Approximately 40 km/h or less (25 mph or less) 	Approximately 5 to 60 km/h (3 to 38 mph)

Acceleration Suppression at Low Speed

The Acceleration Suppression at Low Speed function will not operate when the turn signal lights are flashing.

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehi- cles, stopped ve- hicles	Approximately 0 to 15 km/h (0 to 9 mph)	Approximately 0 to 15 km/h (0 to 9 mph)

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Bicycles	Approximately 0 to 15 km/h (0 to 9 mph)	Approximately 0 to 15 km/h (0 to 9 mph)
Pedestrians Approximately 0 to 15 km/h (0 to 9 mph)		Approximately 0 to 15 km/h (0 to 9 mph)

While the Acceleration Suppression at Low Speed function is operating, if any of the following are performed, the low speed sudden acceleration suppression function operation will be cancelled:

- The accelerator pedal is released.
- The steering wheel is operated heavily or suddenly


Detection of detectable objects

Objects are detected based on their size, shape, and movement. Depending on the ambient brightness, movement, posture and direction of a detectable object, it may not be detected and the system may not operate properly. The system detects shapes, such as the following, as detectable objects.




Situations in which the system may operate even though the possibility of a collision is not high


- In certain situations, such as the following, the system may determine that the possibility of a collision is high and operate:
 - When passing a detectable object
 - When changing lanes while overtaking a detectable object
 - When suddenly approaching a detectable object
 - When approaching a detectable object or other object on the roadside, such as guardrails, utility poles, trees, walls, etc.
 - When there is a detectable object or other object by the roadside at the entrance of a curve

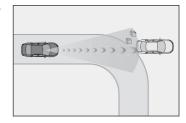


- When there are patterns or a painting ahead of the vehicle that may be mistaken for a detectable object
- When passing a detectable object that is changing lanes or turning left/right

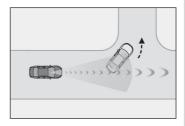

 When passing a detectable object which is stopped to make a left/right turn

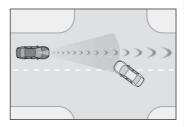


- When a detectable object stops immediately before entering the path of the vehicle
- When passing through a location with a structure above the road (traffic sign, billboard, etc.)

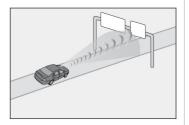

- When approaching an electric toll gate barrier, parking lot barrier, or other barrier that opens and closes
- When turning left/right and an oncoming vehicle or pedestrian crosses in front of the vehicle
- When attempting to turn left/right in front of an oncoming vehicle or pedestrian
- When turning left/right and an oncoming vehicle or pedestrian stops immediately before entering the path of the vehicle

 When turning left/right and an oncoming vehicle turns left/right in front of the vehicle

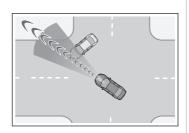


• When the steering wheel is operated toward the path of an oncoming vehicle


Situations in which the system may not operate properly

- In certain situations, such as the following, a detectable object may not be detected by the front sensors, and the system may not operate properly:
 - When a detectable object is approaching your vehicle
 - When your vehicle or a detectable object is wandering
 - When a detectable object makes an abrupt maneuver (such as sudden swerving, acceleration or deceleration)
 - When suddenly approaching a detectable object
 - When the detectable object is near a wall, fence, guardrail, manhole cover, steel plate on the road surface, or another vehicle
 - When there is a structure above a detectable object
 - When part of a detectable object is hidden by another object (large luggage, umbrella, guardrail, etc.)
 - When multiple detectable objects are overlapping
 - When a bright light, such as the sun, is reflecting off of a detectable object
 - When a detectable object is white and looks extremely bright
 - When the color or brightness of a detectable object causes it to blend in with its surroundings
 - When a detectable object cuts in front of or suddenly emerges in front of your vehicle
 - When approaching a vehicle which is diagonal
 - If a vehicle ahead is a child sized bicycle, is carrying a large load, is carrying an extra
 passenger, or has an unusual shape (bicycles equipped with a child seat, tandem
 bicycles, etc.)
 - If a pedestrian or bicycle is shorter than approximately 1 m (3.2 ft.) or taller than approximately 2 m (6.5 ft.).

 - When the silhouette of a pedestrian or bicycle is unclear (such as when they are wearing a raincoat, long skirt, etc.)
- When a pedestrian or bicycle is bending forward or squatting
- When a pedestrian or bicycle is moving at high speed
- When a pedestrian is pushing a stroller, wheelchair, bicycle or other vehicle
- When a detectable object blends in with the surrounding area, such as when it is dim (at dawn or dusk) or dark (at night or in a tunnel)
- When the vehicle has not been driven for a certain amount of time after the engine was started
- While turning left/right or a few seconds after turning left/right
- While driving around a curve and a few seconds after driving around a curve
- When turning left/right and an oncoming vehicle is driving in a lane 3 or more lanes from the vehicle
- When turning left/right and the direction of the vehicle differs greatly from the direction traffic flows in the oncoming lane



 When turning left/right and approaching a pedestrian which was traveling in the same direction as the vehicle and continues straight

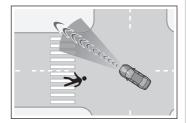

- In addition to the preceding, in certain situations, such as the following, the emergency steering assist may not operate properly:
 - When a detectable object is too close to the vehicle
 - When there is insufficient space to perform evasive steering maneuvers or an obstruction exists in the evasion direction
 - When there is an oncoming vehicle

Changing the pre-collision setting

ullet The pre-collision system can be enabled/disabled through a customize setting. ullet P.660

The system is enabled each time the engine switch is turned to ON.

- When the system is disabled, the PCS warning light will illuminate and a message will be displayed on the multi-information display.
- \bullet The pre-collision settings can be changed on the customize settings. \rightarrow P.660
- When the pre-collision warning timing is changed, the emergency steering
 assist (excluding the active steering function) timing will also be changed. When
 [Later] is selected, the emergency steering assist (excluding the active steering
 function) will not operate in most cases.

When the dynamic radar cruise control is operating, the pre-collision warning will operate at the [Earlier] timing, regardless of the user setting.

Lane Tracing Assist

LTA (Lane Tracing Assist)


LTA functions

• When driving on a road with clear lane lines with the dynamic radar cruise control operating, lane lines and preceding and surrounding vehicles are detected using the front camera and radar sensor, and the steering wheel is operated to maintain the vehicle's lane position.

Use the this function only on highways and expressways.

If the dynamic radar cruise control is not operating, the function will not operate.

In situations where the lane lines are difficult to see or are not visible, such as when in a traffic jam, support will be provided using the path of preceding and surrounding vehicles.

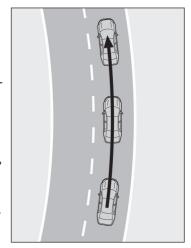


If the system determines that the steering wheel has not been operated for a certain amount of time or the steering wheel is not being firmly gripped, the driver will be alerted via a display and this function will be temporarily canceled.

If the steering wheel is firmly gripped, the function will begin operating again.

 When the function is operating, if the vehicle is likely to depart from its lane, the driver will be alerted via a display and buzzer.

When the buzzer sounds, check the area around the vehicle and carefully operate the steering wheel to move the vehicle back to the center of the lane.

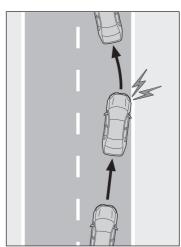

WARNING

Before using the LTA system

- Do not overly rely on the LTA system. The LTA system is a system which provides automated assistance in driving. However, as it is not a system which reduces the amount of attention necessary for safe driving. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety. Also, the driver is responsible for taking adequate breaks when fatigued, such as when driving for a long time.
 - Failure to perform appropriate driving operations and pay careful attention may lead to an accident.
- When not using the LTA system, turn it off using the LTA switch.

☐ INFORMATION

Operating conditions of function

- This function is operable when all of the following conditions are met:
 - The LTA system detects lane lines or the path of preceding or surrounding vehicles (except when the preceding vehicle is small, such as a motorcycle).
 - The dynamic radar cruise control is operating.
 - The lane width is approximately 3 to 4 m (10 to 13 ft.).
 - The turn signal lever is not being operated.
 - The vehicle is not being driven around a sharp curve.
 - The vehicle is not accelerating or decelerating more than a certain amount.
 - The steering wheel is not being turned with a large force.
 - The hands off steering wheel warning (\rightarrow P.349) is not operating.
 - The vehicle is being driven in the center of a lane.

■ Temporary cancelation of functions

- When the operating conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function will automatically be restored. (→ P.348)
- If the operating conditions of a function are no longer met while the function is operating, a buzzer may sound to indicate that the function has been temporarily canceled.
- The steering assist operation of the function can be overridden by the steering wheel operation of the driver.

Lane departure warning function when the LTA is operating

- Even if the LDA warning method is changed to vibration of the steering wheel, if the
 vehicle deviates from the lane while the LTA is operating, the warning buzzer will
 sound to alert the driver.
- If steering wheel operation equivalent to that necessary for a lane change is detected, the system will determine the vehicle is not deviating from the lane and the warning will not operate.

■ Hands off steering wheel warning operation

In the following situations, a message urging the driver to grip the steering wheel and the icon shown in the illustration will be displayed on the multi-information display to warn the driver. If the system detects that the steering wheel is held, the warning will be canceled. When using the system, make sure to grip the steering wheel firmly, regardless of whether the warning is operating or not.



- When the system determines the driver is not holding the steering wheel while the function is operating
 - If no operations are detected for a certain amount of time, a buzzer will sound, the warning will operate, and the function will be temporarily canceled. This warning may also operate if the driver only operates steering wheel a small amount continuously.
- Depending on the condition of the vehicle, handle control condition and road surface, the warning function may not operate.

Vehicles with LCA:In the following situations, the system may not be able to detect when the driver's hands are off the steering wheel.

- When a steering wheel cover is installed
- When the driver is wearing gloves
- When foreign matter is attached to the steering wheel
- When the driver is gripping the wood trim, seam of the leather, spokes, or other part of the steering wheel that does not have sensors

Vehicles with LCA: In the following situations, the hands off steering wheel warning may not operate and the LTA function may continue operating even though the driver's hands are off the steering wheel:


- When something other than a hand is contacting the steering wheel
- When a wide object or arms are held across the steering wheel

Enabling/disabling the system

The LTA will change between enabled/disabled each time the LTA switch is pressed.

When the LTA is enabled, the LTA indicator will illuminate.

► Vehicles without a head-up display

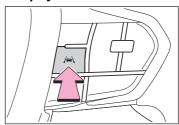

▶ Vehicles with a head-up display






WARNING

■ Situations in which the functions may not operate properly

In the following situations, the functions may not operate properly and the vehicle may depart from its lane. Do not overly rely on these functions. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety.

 When a preceding or surrounding vehicle changes lanes (Your vehicle may follow the preceding or surrounding vehicle and also change lanes)

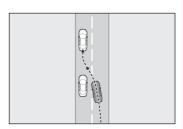

- When a preceding or surrounding vehicle is swaying (Your vehicle may sway accordingly and depart from the lane)
- When a preceding or surrounding vehicle departs from a lane (Your vehicle may follow the preceding or surrounding vehicle and also depart from the lane)
- When a preceding or surrounding vehicle is being driven extremely close to the left/right lane line (Your vehicle may follow the preceding or surrounding vehicle accordingly and depart from the lane)

WARNING

- When there are moving objects or structures in the surrounding area (Depending on the position of the moving object or structure relative to your vehicle, your vehicle may sway)
- When the vehicle is struck by a crosswind or the turbulence of other nearby vehicles
- Situations in which the sensors may not operate properly: \rightarrow P.321
- Situations in which the lane may not be detected: \rightarrow P.323
- When it is necessary to disable the system: \rightarrow P.316

Operation display of steering wheel operation support

The operating state of the LTA system is indicated.

Indicator	Lane display	Steering icon	Situation
White	Gray	Grey	LTA is on standby
Green	Green	Green	LTA is operating
Orange Flashing	Orange Flashing	Green	The vehicle is departing the lane toward the side which the lane display is flashing

Lane Change Assist*

LCA (Lane Change Assist)

LCA functions

This function is linked to the LTA and provides assistance in performing lane changes through steering wheel operations when the turn signal lever is held partway

When not using the LCA system, turn it off using the LCA switch.

Use the this function only on highways and expressways.

The steering assist operation can be overridden by the steering wheel operation of the driver.

The lane change assist function is not designed to operate when changing lanes at a junction.

WARNING

Before using the LCA system

Do not overly rely on the LCA system.

The LCA system is a system which provides automated assistance in driving. However, as it is not a system which reduces the need for checking an adjacent lane for other vehicles, approaching vehicles, etc. when changing lanes. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety.

Also, do not use the LCA to change lanes into which a lane change should not be performed (oncoming lanes, road shoulders, etc.).

 Failure to perform appropriate driving operations and pay careful attention may lead to an accident.

☐ INFORMATION

Operating conditions of function

- This function is operable when all of the following conditions are met:
 - The LTA is operating.
 - The lane change assist function is enabled by a customize setting.
 - $\bullet\,$ The vehicle speed is between approximately 100 and 140 km/h (60 and 85 mph).
 - The system recognizes the current road as a highway or expressway.

^{*:} If equipped

- The system detects a broken white line on the side which the lane change is to be performed.
- A vehicle is not detected in the lane toward which the turn signal is operated.
- The navigation system map data is current.
- The steering wheel is not being turned with a large force.
- The hands off steering wheel warning $(\rightarrow P.353)$ is not operating.
- The system has detected a moving object behind the vehicle at least once since the engine was started.

■ Cancelation of functions

• If the operating conditions are no longer met while the LCA is operating, a message may be displayed and buzzer may sound to indicate that the LCA has been canceled.→ P.352

In the following situations, operation of the LCA may be canceled:

- When the system can no longer detect lane lines
- When the turn signal lever is operated to the left/right turn position
- When the LTA system detects operation of the steering wheel, brake pedal or accelerator pedal by the driver
- When the system determines the driver is not holding the steering wheel while the function is operating

If the system detects that a vehicle is quickly approaching in the lane toward which the turn signal is operated, a buzzer will sound, the steering wheel will vibrate, and a message will be displayed to alert the driver. At the same time the steering wheel may be slightly operated to help keep the vehicle away from the approaching vehicle.

Hands off steering wheel warning operation


In the following situations, a message urging the driver to grip the steering wheel and the icon shown in the illustration will be displayed on the multi-information display to warn the driver. If the system detects that the steering wheel is held, the warning will be canceled. When using the system, make sure to grip the steering wheel firmly, regardless of whether the warning is operating or not.



 When the system determines the driver is not holding the steering wheel while LCA is operating

Operating the LCA

If the turn signal lever is held in the lane change position, the lane change direction will be displayed and the function will operate.

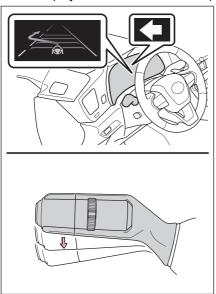

WARNING

- Situations in which the LCA should not be used
- When driving on a one lane road
- When there is no broken white line between the current lane and the lane to be changed to

Enabling/disabling the system

ullet LCA can be enabled/disabled through a customize setting. ullet P.660

Operation display of steering wheel operation support

The operating state of the LCA system is indicated.

LCA display	Steering icon	Condition
Blue arrow and white line		LCA on standby

LCA display	Steering icon	Condition
Blue arrow and white line	Green	LCA is operating
	Grey	Approaching vehicle detected while LCA is operating

Lane Departure Alert

LDA (Lane Departure Alert)

Basic functions

The LDA system warns the driver if the vehicle may deviate from the current lane or course *1, and also can slightly operate the steering wheel to help avoid deviation from the lane or course *1.


The front camera is used to detect lane lines or a course *1.

■ Lane departure alert function

When the system determines that the vehicle might depart from its lane or course*1, a warning is displayed on a display, and either a warning buzzer will sound or the steering wheel will vibrate to alert the driver.

Check the area around your vehicle and carefully operate the steering wheel to move the vehicle back to the center of the lane or course *1.

Vehicles with BSM: If the system determines that the vehicle may collide with a vehicle in an adjacent lane, the lane departure alert will operate even if the turn signals are operating.

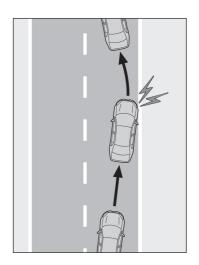


^{*1:} Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.

■ Lane departure prevention function

If the system determines that the vehicle is likely to depart from its lane or course^{*1}, it provides assistance through steering wheel operations to help avoid deviation from the lane or course.


If the system determines that the steering wheel has not been operated for a certain amount of time or the steering wheel is not being firmly gripped, a warning message may be displayed and a warning buzzer may sound to alert the driver.

Vehicles with BSM: If the system determines that the vehicle may collide with a vehicle in an adjacent lane, the lane departure prevention function will operate even if the turn signals are operating.

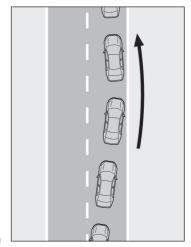

■ Break suggestion function

If the vehicle is swaying, a message will be displayed and a warning buzzer will sound to urge the driver to take a break.

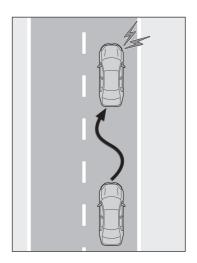

WARNING

Before using the LDA system

Do not overly rely on the LDA system. The LDA system is a system which provides automated assistance in driving. However, as it is not a system which reduces the amount of attention necessary for safe driving. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary

WARNING

to ensure safety. Also, the driver is responsible for taking adequate breaks when fatigued, such as when driving for a long time.

 Failure to perform appropriate driving operations and pay careful attention may lead to an accident.

■ Operating conditions of each function

Lane departure alert/prevention function

This function is operable when all of the following conditions are met:

- The vehicle speed is approximately 50 km/h (30 mph) or more.
 - Operation may be possible when the vehicle speed is approximately 40 km/h (25 mph) or more if vehicles, motorcycles, bicycles, or pedestrians are detected near the lane.
- The system recognizes a lane or course *2. (When recognized on only one side *2, the system will operate only for the recognized side.)
- The lane width is approximately 3 m (9.8 ft.) or more.
- The turn signal lever is not being operated.
 (Vehicles with BSM: Except when a vehicle is detected in the direction that the turn signal lever is operated.)
- The vehicle is not being driven around a sharp curve.
- The vehicle is not accelerating or decelerating more than a certain amount.
- The steering wheel is not being turned sufficiently to perform a lane change.
- Break suggestion function

This function is operable when all of the following conditions are met:

- The vehicle speed is approximately $50 \, \text{km/h} (30 \, \text{mph})$ or more.
- $\bullet\,$ The lane width is approximately 3 m (9.8 ft.) or more.

■ Temporary cancellation of functions

When the operating conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function will automatically be restored. $(\rightarrow P.358)$

 
^{*2:} Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.

Operation of the lane departure alert function/lane departure prevention function

- Depending on the vehicle speed, road conditions, lane departure angle, etc., operation of the lane departure prevention function may not be felt or the function may not operate.
- Depending on the conditions, the warning buzzer may operate even if vibration is selected through a customize setting.
- If a course*2 is not clear or straight, the lane departure alert function or lane departure prevention function may not operate.
- The lane departure alert function or lane departure prevention function may not operate if the system judges that the vehicle is intentionally being steered to avoid a pedestrian or parked vehicle.
- Vehicles with BSM: It may not be possible for the system to judge if there is danger of a collision with a vehicle in an adjacent lane.
- The steering assist operation of the lane departure prevention function can be overridden by the steering wheel operation of the driver.

■ Hands off steering wheel warning operation

In the following situations, a message urging the driver to operate the steering wheel and an icon will be displayed and a buzzer will sound to warn the driver. When using the system, make sure to grip the steering wheel firmly, regardless of whether the warning is operating or not.



When the system determines that the driver is not securely holding the steering wheel, or the steering wheel is not being operated when the steering assist operation of the lane departure prevention function is operating

The length of time that the warning buzzer operates will become longer as the frequency of the steering assist operating increases. Even if the system judges that the steering wheel has been operated, the warning buzzer will sound for a certain amount of time.

■ Break suggestion function

If the vehicle is swaying, a message will be displayed and a warning buzzer will sound to urge the driver to take a break.

Depending on the condition of the vehicle and road surface, the break suggestion function may not operate.



Displays and system operation

The operating state of the lane departure alert function and steering assist operation of the lane departure prevention function are indicated.

Indicator	Lane display	Steering icon	Situation
Orange Illuminated	Not illuminated	Not illuminated	System disabled
Not illuminated	Gray	Not illuminated	Lane lines are not detected by the system
Not illuminated	White	Not illuminated	Lane lines are detected by the system
Orange Flashing	Orange Flashing	Not illuminated	Lane departure alert function is operating for the side which the lane display is flashing
Green	Green	Green	Lane departure prevention function is operating for the side which the lane display is illuminated
Orange Flashing	Orange Flashing	Green	Lane departure alert function/lane departure prevention function is op- erating for the side which the lane display is flashing

Changing LDA settings

- \bullet The LDA system can be enabled/disabled through a customize setting. \rightarrow P.660
- The following settings of the LDA can be changed through customize settings. → P.660

WARNING

Situations in which the LDA should not be used

In the following situations, disable the LDA system. Failure to do so may lead to an accident.

- When it is necessary to disable the system: \rightarrow P.316
- Situations in which the system may not operate properly

In the following situations, the system may not operate properly and the vehicle may depart from its lane. Do not overly rely on these functions. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety.

- When the boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc. is not clear or straight
- When the vehicle is struck by a crosswind or the turbulence of other nearby vehicles
- Situations in which the lane may not be detected: \rightarrow P.323
- ullet Situations in which the sensors may not operate properly: ightarrow P.321
- Situations in which some or all of the functions of the system cannot operate: \rightarrow P.323


Front crossing traffic alert

FCTA (Front crossing traffic alert)

When approaching an intersection, etc., at a low speed, vehicles approaching from the left and right of the front of the vehicle can be detected and the driver informed of these vehicles.

FCTA system control

 When the system detects a vehicle approaching from the left or right in front of your vehicle when approaching an intersection, a notification will be displayed.

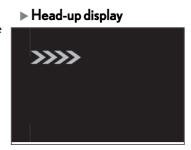

When the system determines that your vehicle may be about to enter an intersection even though a vehicle is approaching from the left or right in front of your vehicle, a buzzer will sound and a message will be displayed to urge you to depress the brake pedal.





WARNING

For safe use

Driving safely is solely the responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving. The FCTA system is a supplementary system that informs the driver of vehicles approaching from the left and right of the front of the vehicle. Over-reliance on this system may lead to an accident resulting in death or serious injury. The details of the warning display may differ from the actual traffic conditions. Although the warning display will stop being displayed after a certain amount of time, this does not necessarily indicate that there are no longer any vehicles or pedestrians around your vehicle.

^{*:} If equipped

■ FCTA system operating conditions

The system will operate when all of the following conditions are met:

- A shift position other than P or R is selected
- The vehicle speed is approximately 15 km/h (10 mph) or less
- A vehicle is approaching from the left or right in front of your vehicle at a speed between approximately 10 to 60 km/h (7 to 37 mph)
- There are no vehicles in front of your vehicle
- The accelerator pedal is not being strongly depressed
- The brake pedal is not being strongly depressed
- Situations in which the system may operate even though no vehicles are approaching

In certain situations, such as the following, the system may operate even though no vehicles are approaching:


- When approaching objects on the roadside, such as guardrails, traffic signs, utility
 poles, street lights, trees, tall grass, walls, etc.
- When passing an object on the side of the road, such as a parked vehicle
- When a vehicle or pedestrian is approaching from the left or right in front of your vehicle in the distance
- When a vehicle or pedestrian is moving within a parking spot, etc., next to the lane your vehicle is in
- When a pedestrian or bicyclist is approaching on a sidewalk
- When a vehicle or pedestrian is moving away from your vehicle
- When an approaching vehicle is decelerating or stops
- When an approaching vehicle makes a left/right turn immediately in front of your vehicle
- When a pedestrian is approaching your vehicle
- When an oncoming vehicle makes a right/left turn
- When your vehicle enters an intersection before a vehicle approaching from the left or right in front of your vehicle
- When stopped at traffic light and a vehicle approaches from the left or right in front of your vehicle

6-2. Using the safe driving support functions

- When making a left/right turn in front of an approaching vehicle
- When an oncoming vehicle approaches and passes
- When being overtaken by another vehicle
- When driving next to another vehicle or a pedestrian
- When a vehicle or pedestrian approaches the side of your vehicle

■ Situations in which the system may not operate properly

In situations such as the following, a vehicle may not be detected by a front side radar sensor and the system may not operate properly:

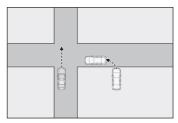

- If an approaching vehicle moves suddenly (sudden steering, acceleration, deceleration, etc.)
- If a vehicle is approaching from the left or right of the front of your vehicle diagonally
- When a vehicle is approaching from the left or right in front of your vehicle in the distance
- When there is an object between your vehicle and an approaching vehicle
- When several vehicles are approaching with little space between them
- \bullet Situations in which the sensors may not operate properly: \rightarrow P.321
- Situations in which some or all of the functions of the system cannot operate: \rightarrow P.323

Changing FCTA system settings

- ullet The FCTA can be enabled/disabled through a customize setting. ightarrow P.659
- ullet The following settings of the FCTA can be changed through customize settings. \rightarrow P.659

Assistance in detecting vehicles behind when changing lanes

The Blind Spot Monitor is a system that uses rear side radar sensors installed on the inner side of the rear bumper on the left and right side to assist the driver in confirming safety when changing lanes.

WARNING

Cautions regarding the use of the system

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The Blind Spot Monitor is a supplementary function which alerts the driver that a vehicle is in a blind spot of the outside rear view mirrors or is approaching rapidly from behind into a blind spot. Do not overly rely on the Blind Spot Monitor. As the function cannot judge if it is safe to change lanes, over reliance could lead to an accident resulting in death or serious injury.

As the system may not function correctly under certain conditions, the driver's own visual confirmation of safety is necessary.

- Related Links -

Customizable features (P. 650)

Purpose of the Blind Spot Monitor

INFORMATION

Conditions under which the system will not detect a vehicle


The Blind Spot Monitor is not designed to detect the following types of vehicles and/or objects:

- Small motorcycles, bicycles, pedestrians, etc.*1
- Vehicles traveling in the opposite direction
- Guardrails, walls, signs, parked vehicles and similar stationary objects*1
- Following vehicles that are in the same lane*1
- Vehicles traveling 2 lanes away from your vehicle*1
- Vehicles which are being overtaken rapidly by your vehicle*1

^{*:} If equipped

^{*1:} Depending on the conditions, detection of a vehicle and/or object may occur.

System components

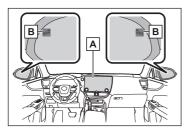

A Center display

Turning the Blind Spot Monitor on/off.

B Outside rear view mirror indicators

When a vehicle is detected in a blind spot of the outside rear view mirrors or approaching rapidly from behind into a blind spot, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator flashes.

■ Outside rear view mirror indicator visibility

In strong sunlight, the outside rear view mirror indicator may be difficult to see.


WARNING

■ To ensure the system can operate properly

Blind Spot Monitor sensors are installed behind the left and right sides of the rear bumper respectively. Observe the following to ensure the Blind Spot Monitor can operate correctly.

 Keep the sensors and the surrounding areas on the rear bumper clean at all times.

If a sensor or its surrounding area on the rear bumper is dirty or covered with snow, the Blind Spot Monitor may not operate and a warning message will be displayed. In this situation, clear off the dirt or snow and drive the vehicle with the operation conditions of the BSM function satisfied

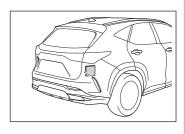

for approximately 10 minutes. If the warning message does not disappear, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

- Do not attach accessories, stickers (including transparent stickers), aluminum tape, etc., to a sensor or its surrounding area on the rear bumper.
- Do not subject a sensor or its surrounding area on the rear bumper to a strong impact.


WARNING

If a sensor is moved even slightly off position, the system may malfunction and vehicles may not be detected correctly. In the following situations, have your vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

- A sensor or its surrounding area is subject to a strong impact.
- If the surrounding area of a sensor is scratched or dented, or part of them has become disconnected.
- Do not disassemble the sensor.
- Do not modify the sensor or surrounding area on the rear bumper.
- If a sensor or the rear bumper needs to be removed/installed or replaced, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- Do not paint the rear bumper any color other than an official Lexus color.

Vehicles that can be detected by the Blind Spot Monitor


The Blind Spot Monitor uses rear side radar sensors to detect the following vehicles traveling in adjacent lanes and advises the driver of the presence of such vehicles via the indicators on the outside rear view mirrors.

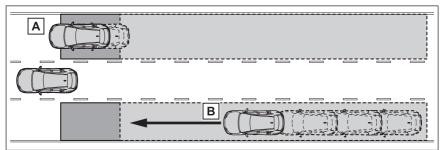

- A Vehicles that are traveling in areas that are not visible using the outside rear view mirrors (the blind spots)
- B Vehicles that are approaching rapidly from behind in areas that are not visible using the outside rear view mirrors (the blind spots)

The Blind Spot Monitor detection areas

The areas that vehicles can be detected in are outlined below.

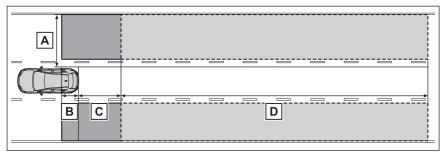

The range of each detection area is:

- \triangle Approximately 0.5 m (1.6 ft.) to 3.5 m (11.5 ft.) from either side of the vehicle *2
- B Approximately 1 m (3.3 ft.) forward of the rear bumper
- C Approximately 3 m (9.8 ft.) from the rear bumper
- \square Approximately 3 m (9.8 ft.) to 60 m (197 ft.) from the rear bumper $^{\star 3}$

Turning the Blind Spot Monitor system ON/OFF

The Blind Spot Monitor system can be changed between ON and OFF on the center display

- 1 Select 🛱 .
- 2 Select [Driving assist].
- 3 Select [Blind spot monitor].

When the BSM function is disabled, the driving assist infomation indicator illuminates.

Each time the engine switch is turned off then changed to ON, the Blind Spot Monitor will be enabled automatically.

■ The Blind Spot Monitor is operational when

The Blind Spot Monitor is operational when all of the following conditions are met:

- The Blind Spot Monitor is on.
- The vehicle speed is greater than approximately 10 km/h (7 mph).
- The shift position is in a position other than R.
- *2 : The area between the side of the vehicle and 0.5 m (1.6 ft.) from the side of the vehicle cannot be detected.
- *3: The greater the difference in speed between your vehicle and the detected vehicle is, the farther away the vehicle will be detected, causing the outside rear view mirror indicator to illuminate or flash.

■ The Blind Spot Monitor will detect a vehicle when

The Blind Spot Monitor will detect a vehicle present in the detection area in the following situations:

- A vehicle in an adjacent lane overtakes your vehicle.
- You overtake a vehicle in an adjacent lane slowly.
- Another vehicle enters the detection area when it changes lanes.

■ Conditions under which the system may not function correctly

- The Blind Spot Monitor may not detect vehicles correctly in the following situations:
 - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
 - When mud, snow, ice, a sticker, etc., is covering the sensor or surrounding area on the rear bumper
 - When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
 - When multiple vehicles are approaching with only a small gap between each vehicle
 - When the distance between your vehicle and a following vehicle is short
 - When there is a significant difference in speed between your vehicle and the vehicle that enters the detection area
 - When the difference in speed between your vehicle and another vehicle is changing
 - When a vehicle enters a detection area traveling at about the same speed as your vehicle
 - As your vehicle starts from a stop, a vehicle remains in the detection area
 - When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
 - When driving on roads with sharp bends, consecutive curves, or uneven surfaces
 - When vehicle lanes are wide, or when driving on the edge of a lane, and the vehicle in an adjacent lane is far away from your vehicle
 - When an accessory (such as a bicycle carrier) is installed to the rear of the vehicle
 - When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
 - Immediately after the Blind Spot Monitor is turned on
- Instances of the Blind Spot Monitor unnecessarily detecting a vehicle and/or object may increase in the following situations:

6-2. Using the safe driving support functions

- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
- When the distance between your vehicle and a guardrail, wall, etc., that enters the detection area is short
- When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
- When vehicle lanes are narrow, or when driving on the edge of a lane, and a vehicle traveling in a lane other than the adjacent lanes enters the detection area
- When driving on roads with sharp bends, consecutive curves, or uneven surfaces
- When the tires are slipping or spinning
- When the distance between your vehicle and a following vehicle is short
- When an accessory (such as a bicycle carrier) is installed to the rear of the vehicle

Supporting safe exit by detecting detectable objects at the rear of the vehicle by outputting sounds, displaying screens as a warning or cancelling opening of the doors.

The Safe exit assist (with door opening control) is a system that uses radar sensors installed on the inner side of the rear bumper to help occupants judge if an approaching vehicle or bicycle may collide with a door when opening it or cancel opening of a door, to reduce the possibility of a collision.

WARNING

Cautions regarding the use of the system

- The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.
- Safe exit assist is a supplementary system that, when the vehicle is stopped, informs
 occupants of the existence of approaching vehicles and bicycles. As this system alone
 cannot used to judge safety, over-reliance on this system may lead to an accident
 resulting in death or serious injury.

As the system may not function correctly under certain conditions, the driver's own visual confirmation of safety is necessary.

– Related Links -

Customizable features (P. 650)

Purpose of the Safe exit assist


Conditions under which the system will not detect a vehicle

- Safe exit assist does not detect the following objects, vehicles, and bicycles:
 - Vehicles or bicycles which are approaching slowly
 - Vehicles or bicycles which are determined to have a low possibility of colliding with a door (other than the back door) when opened
 - Vehicles or bicycles which are approaching from directly behind
 - Vehicles or bicycles which are approaching from the front
 - Guardrails, walls, signs, parked vehicles, and other stationary objects
 - Animals, etc.

^{*:} If equipped

- In situations such as the following, safe exit assist will not operate:
 - When 3 minutes or more have elapsed since the engine off (the time which operation is possible may be extended if a door is opened and closed)
 - When your vehicle is not completely stopped

System components

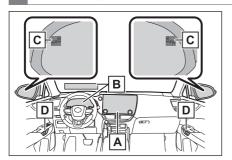

A Center display

Turning the safe exit assist on/off. When opening of a door is canceled, the driver is informed through voice guidance that the system has operated.

B Multi-information display/Head-up display*/Buzzer

If collision with a door is likely and opening of the door is canceled, the door will be displayed on the multi-information display and head-up display. Also, if a door is opened when an outside rear view mirror indicator is illuminated, a buzzer will sound as a warning.

C Outside rear view mirror indicators

When a vehicle or bicycle which may collide with a door (other than the back door) when opened is detected, the outside rear view mirror indicator on the detected side will illuminate. If the door on the detected side is open, or opening of the door is canceled, the outside rear view mirror indicator will blink.

D Door opener switch (manual release handle)

If a door opener switch is operated to open a door while the outside rear view mirror indicator on that side is illuminated, opening of the door will be canceled.

INFORMATION

Outside rear view mirror indicator visibility

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

^{*:} If equipped

Buzzer

If the volume setting of the audio system is high or the surrounding area is loud, it may be difficult to hear the buzzer.

■ Voice notifications

In the following situations, voice notifications will not be output:


- After opening a door and entering the vehicle, until the engine is started
- When 3 minutes or more have elapsed since the engine was stopped
- When the language setting of the center display has been set to a language that does not support voice notifications
- When all of the doors have been locked from outside the vehicle
- When a door remains open for 1 minute or more after the engine is stopped
- When ACC mode has been enabled through a customize setting on the center display and the engine has been stopped
- When the parking assist volume setting on the center display has been set to off

WARNING

■ To ensure the system can operate properly

Safe exit assist sensors are installed behind the left and right sides of the rear bumper respectively. Observe the following to ensure the safe exit assist can operate correctly.

• Keep the sensors and the surrounding areas on the rear bumper clean at all times. If a sensor or its surrounding area on the rear bumper is dirty or covered with snow, the Safe Exit Assist may not operate and a warning message will be displayed. In this situation, clear off the dirt or snow and drive the vehicle with the operation conditions of the SEA function satisfied for approximately 10 minutes. If the warning message does not disappear, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

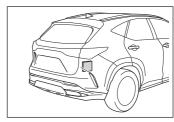

- Do not attach accessories, stickers (including transparent stickers), aluminum tape, etc., to a sensor or its surrounding area on the rear bumper.
- Do not subject a sensor or its surrounding area on the rear bumper to a strong impact.


WARNING

If a sensor is moved even slightly off position, the system may malfunction and vehicles may not be detected correctly. In the following situations, have your vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

- A sensor or its surrounding area is subject to a strong impact.
- If the surrounding area of a sensor is scratched or dented, or part of them has become disconnected.
- Do not disassemble the sensor.
- Do not modify the sensor or surrounding area on the rear bumper.
- If a sensor or the rear bumper needs to be removed/installed or replaced, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- Do not paint the rear bumper any color other than an official Lexus color.

Vehicles that can be detected by the Safe exit assist


When the safe exit assist detects the following vehicles or bicycles using a rear side radar sensor, the occupants of the vehicle are informed through an outside rear view mirror indicator, buzzer, display on the meter, display on the head up display, and voice notification.

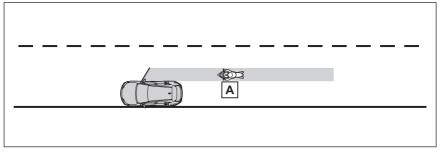

A Vehicle or bicycle which has a high possibility of colliding with a door (other than the back door) when opened

The Safe exit assist detection areas

The areas that vehicles can be detected in are outlined below.

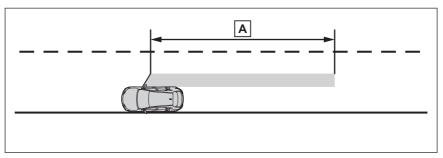

 $oxed{\mathsf{A}}$ Approximately 45 m rearward from the front door *1

Turning the Safe exit assist system ON/OFF

The Safe exit assist system can be changed between ON and OFF on the center display

- 1 Select 🛱 .
- Select [Driving assist].
- 3 Select [Safe exit assist].

When the Safe exit assist function is disabled, the driving assist infomation indicator illuminates.

Each time the engine switch is turned off then changed to ON, the Safe exit assist will be enabled automatically.

■ The Safe exit assist is operational when

The Safe exit assist is operational when all of the following conditions are met:

- When the engine switch is ON, less than 3 minutes have elapsed since the engine was
 off, or less than 3 minutes have elapsed since a door was opened and someone has
 entered the vehicle (the time which operation is possible may be extended if a door is
 opened and closed)
- Safe exit assist is on
- The vehicle is stopped.
- The shift position is in a position other than R.

^{*1:} The faster a vehicle or bicycle is approaching, the distance at which an outside rear view mirror indicator will illuminate or blink will become further.

■ The Safe exit assist will detect a vehicle when

The Safe exit assist will detect a vehicle present in the detection area in the following situations:

When the vehicle is stopped and a vehicle or bicycle, which is traveling parallel to the vehicle, is approaching within the area that a door opens (other than the back door)

Opening the doors when opening is canceled by the system

Perform the following operation to open a door.

After the approaching vehicle or bicycle passes or changes direction, check the surrounding area and press the door opener switch again.

- lacktriangle Press and hold an inside door opener switch for approximately 3 seconds or more ightarrow P.372
- Press an inside door opener switch quickly 3 times or more
- Pull a manual release handle.

■ Conditions under which the system may not function correctly

- The Safe exit assist may not detect vehicles correctly in the following situations:
 - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
 - When mud, snow, ice, a sticker, etc., is covering the sensor or surrounding area on the rear bumper
 - When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
 - When a vehicle or bicycle approaches from behind a nearby parked vehicle
 - When an approaching vehicle or bicycle suddenly changes direction
 - Immediately after a vehicle or bicycle starts moving
 - When the back door is open
 - When a bicycle carrier, ramp, or other accessory is installed to the back of the vehicle
 - When a parked vehicle, wall, sign, person or other stationary object is behind the vehicle
 - When the vehicle is stopped at an angle to the road
 - When a vehicle is traveling near an approaching vehicle or bicycle
 - When an approaching vehicle or bicycle is traveling along a stationary object, such a wall or sign
 - When a vehicle or bicycle is approaching at high speed
 - When towing with the vehicle

- When stopped on a steep slope
- When stopped on a curve or at the exit of a curve
- Instances of the Safe exit assist unnecessarily detecting a vehicle and/or object may increase in the following situations:
 - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
 - When a vehicle or bicycle approaches from behind your vehicle at an angle
 - When the vehicle is stopped at an angle to the road
 - When a vehicle or bicycle approaches from behind a parked vehicle at an angle
 - When a parked vehicle, wall, sign, person or other stationary object is behind the vehicle
 - When an approaching vehicle or bicycle suddenly changes direction
 - When an approaching vehicle or bicycle is traveling along a stationary object, such a wall or sign
 - When the back door is open
 - When a bicycle carrier, ramp, or other accessory is installed to the back of the vehicle
 - When a vehicle or bicycle is approaching at high speed
 - When towing with the vehicle
 - When stopped on a steep slope
 - When stopped on a curve or at the exit of a curve

Buzzer and screen notifications when approaching an object at low speed

Purpose of the Lexus parking assist-sensor

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the displays and a buzzer. Always check the surrounding area when using this system.

WARNING

Cautions regarding the use of the system

There is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle' surroundings and driving safely.

■ To ensure the system can operate properly

Observe the following precautions. Failing to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.

- Do not damage the sensors, and always keep them clean.
- Do not attach a sticker or install an electronic component, such as a backlit license plate (especially fluorescent type), fog lights, fender pole or wireless antenna near a radar sensor.
- Do not subject the surrounding area of the sensor to a strong impact. If subjected to an impact, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. If the front or rear bumper needs to be emoved/installed or replaced, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- Do not modify, disassemble or paint the sensors.
- Do not attach a license plate cover.
- Keep your tires properly inflated.

When to disable the function

In the following situations, disable the function as it may operate even though there is no possibility of a collision.

- Failing to observe the warnings above.
- A non-genuine Lexus suspension (lowered suspension, etc.) is installed.

^{*:} If equipped

■ The Lexus parking assist-sensor can be operated when

- The engine switch is in ON.
- The Lexus parking assist-sensor is on.
- The vehicle speed is less than about 10 km/h (6 mph).
- A shift position other than P is selected.

Objects which the system may not be properly detected


The shape of the object may prevent the sensor from detecting it. Pay particular attention to the following objects:

- Wires, fences, ropes, etc.
- Cotton, snow and other materials that absorb sound waves
- Sharply-angled objects
- Low objects
- Tall objects with upper sections projecting outwards in the direction of your vehicle
 People may not be detected if they are wearing certain types of clothing.

Situations in which the system may not operate properly

Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect objects. Particular instances where this may occur are listed below.

- There is dirt, snow, water drops or ice on a sensor. (Cleaning the sensors will resolve this problem.)
- A sensor is frozen. (Thawing the area will resolve this problem.)
 In especially cold weather, if a sensor is frozen the sensor display may be displayed abnormally, or objects, such as a wall, may not be detected.
- When a sensor or the area around a sensor is extremely hot or cold.

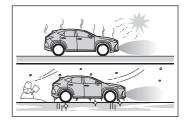


- On an extremely bumpy road, on an incline, on gravel, or on grass.
- When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle

- A sensor is coated with a sheet of spray or heavy rain
- If objects draw too close to the sensor.
- When a pedestrian is wearing clothing that does not reflect ultrasonic waves (ex. skirts with gathers or frills).
- When objects that are not perpendicular to the ground, not perpendicular to the vehicle traveling direction, uneven, or waving are in the detection range.
- When strong winds are blowing
- When driving in inclement weather such as fog, snow or a sandstorm
- When an object that cannot be detected is between the vehicle and a detected object
- If an object such as a vehicle, motorcycle, bicycle or pedestrian cuts in front of the vehicle or runs out from the side of the vehicle
- If the orientation of a sensor has been changed due to a collision or other impact
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- If the front of the vehicle is raised or lowered due to the carried load
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When a tire chains, compact spare tire or an emergency tire puncture repair kit is used

Situations in which the system may operate even if there is no possibility of a collision


In some situations, such as the following, the system may operate even though there is no possibility of a collision.

When driving on a narrow road

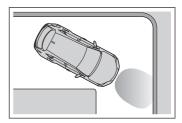

- When driving toward a banner, flag, low-hanging branch or boom barrier (such as those used at railroad crossings, toll gates and parking lots)
- When there is a rut or hole in the surface of the road
- When driving on a metal cover (grating), such as those used for drainage ditches
- When driving up or down a steep slope

- If a sensor is hit by a large amount of water, such as when driving on a flooded road
- There is dirt, snow, water drops or ice on a sensor. (Cleaning the sensors will resolve this problem.)
- A sensor is coated with a sheet of spray or heavy rain
- When driving in inclement weather such as fog, snow or a sandstorm
- When strong winds are blowing

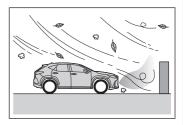

- When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle
- If the front of the vehicle is raised or lowered due to the carried load
- If the orientation of a sensor has been changed due to a collision or other impact
- The vehicle is approaching a tall or curved curb
- Driving close to columns (H-shaped steel beams, etc.) in multi-story parking garages, construction sites, etc.
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- On an extremely bumpy road, on an incline, on gravel, or on grass




 When a tire chains, compact spare tire or an emergency tire puncture repair kit is used


Lexus parking assist-sensor display

When an object is detected by a sensor, the following displays inform the driver of the position and distance to the obstacle.


► Lexus parking assist monitor

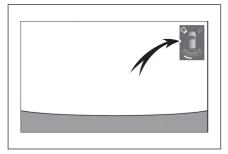

▶ Panoramic view monitor

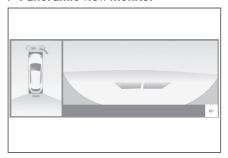

Position of the sensors of the Lexus parking assist-sensor

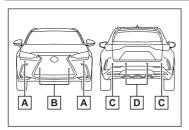

- A Front corner sensors
- B Front center sensors
- C Rear corner sensors
- D Rear center sensors

WARNING

■ Notes when washing the vehicle

Do not apply intensive bursts of water or steam to the sensor area.

Doing so may result in the sensor malfunctioning.

- When using a high pressure washer to wash the vehicle, do not spray the sensors directly, as doing so may cause a sensor to malfunction.
- When using steam to clean the vehicle, do not direct steam too close to the sensors, as
 doing so may cause a sensor to malfunction.

^{*:} If equipped

Turning the Lexus parking assist-sensor function ON/OFF

The Lexus parking assist-sensor can be enabled/disabled on the center display as follows:

- 1 Select 🛱 .
- 2 Select [Driving assist].
- 3 Select [Parking assist-sensor] to change ON (enable)/OFF (disabled).


When ON (enable) is selected, the Lexus parking assist-sensor indicator comes on.

When turned OFF (disabled), the Lexus parking assist-sensor will be disabled and will not be enabled until the setting is changed to ON again in center display.

(The system will not be reenabled by operating the engine switch.)

Detection range of the Lexus parking assist-sensor

Detection range of the sensors

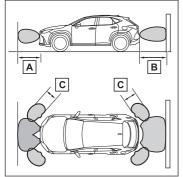

- A Approximately 100 cm (3.3 ft.)
- B Approximately 150 cm (4.9 ft.)
- C Approximately 60 cm (2.0 ft.)

The diagram shows the detection range of the sensors.

Note that the sensors cannot detect objects that are extremely close to the vehicle.

The range of the sensors may change depending on the shape of the object, etc.

Sensor detection information

- The detection range of the sensors is limited to the areas around the vehicle's bumpers.
- Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect an object.
- Objects may not be detected if they are too close to the sensor.

- There is a short delay between when an object is detected and when the display and buzzer operate. Even at slow speeds, there is a possibility that an object will come within the detection range before the display is shown and the buzzer sounds.
- It might be difficult to hear the buzzer due to the volume of the audio system or air flow noise of the air conditioning system.
- It may be difficult to hear the sound of this system due to the buzzers of other systems.

■ The distance and buzzer

Approximate distance to obstacle	Buzzer	
Rear center sensor: Approximately 150 cm (4.9 ft.) to 60 cm (2.0 ft.) ⁽¹⁾	Slow	
Front center sensor: Approximately 100 cm (3.3 ft.) to 60 cm (2.0 ft.) ⁽¹⁾		
Approximately 60 cm (2.0 ft.) to 45 cm (1.5 ft.) ⁽¹⁾	Medium	
Approximately 45 cm (1.5 ft.) to 30 cm (1.0 ft.) ⁽¹⁾	Fast	
Less than approximately 30 cm (1.0 ft.), Less than approximately 15 cm (0.5 ft.) ⁽¹⁾	Continuous	

⁽¹⁾ Automatic buzzer mute function is enabled.

Lexus parking assist-sensor buzzer operation and range

A buzzer sounds when objects are detected.

- A buzzer sounds when the sensors are operating.
- The buzzer beeps faster as thevehicle approaches an object. When the vehicle comes within the approximately 30 cm (1.0 ft.) of the object, the buzzer will sound continuously.
- When 2 or more sensors simultaneously detect a static object, the buzzer sounds for the nearest object.
- Even when the sensors are operating, the buzzer will be muted in some situations. (automatic buzzer mute function)

Changing the Lexus parking assist-sensor buzzer volume

The buzzer volume can be adjusted on the center display.

- 1 Select 🌣.
- 2 Select [Driving assist].
- 3 Select [Collision mitigation].
- 4 Select [Parking assist volume].

Temporarily muting the Lexus parking assist-sensor buzzer

A mute button will be displayed on the center display when an object is detected. To mute the buzzer, select $\, \stackrel{\P^n}{\longrightarrow} \, .$

To mute the buzzer, select . The buzzers for the Lexus parking assist-sensor, RCTA and RCD function will be muted simultaneously.

Mute will be canceled automatically in the following situations:

- When the shift position is changed.
- When the vehicle speed exceeds a certain speed.
- When there is a malfunction in a sensor or the system is temporarily unavailable.
- When the operating function is disabled manually.
- When the engine switch is turned off.

Buzzer and screen notifications when traveling at a low speed and an approaching vehicle is detected at the rear.

Purpose of the RCTA (Rear crossing traffic alert) function

The RCTA function uses the BSM rear side radar sensors installed behind the rear bumper. This function is intended to assist the driver in checking areas that are not easily visible when backing up.

WARNING

Cautions regarding the use of the system

There is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

☐ INFORMATION

■ The RCTA function is operational when

 
The RCTA function operates when all of the following conditions are met:

- The engine switch is in ON.
- The shift position is in R.
- lacktriangle The vehicle speed is approximately 15 km/h (9 mph) or less.
- The approaching vehicle speed is between approximately 8 km/h (5 mph) and 56 km/h (35 mph).

■ Conditions under which the system will not detect a vehicle

The RCTA function is not designed to detect the following types of vehicles and/or objects:

- Vehicles approaching from directly behind
- Vehicles backing up in a parking space next to your vehicle
- Vehicles that the sensors cannot detect due to obstructions




^{*:} If equipped

- Guardrails, walls, signs, parked vehicles and similar stationary objects*1
- Small motorcycles, bicycles, pedestrians, etc.*1
- Vehicles moving away from your vehicle
- Vehicles approaching from the parking spaces next to your vehicle*1
- The distance between the sensor and approaching vehicle gets too close
- Situations in which the system may not operate properly


The RCTA function may not detect vehicles correctly in the following situations:

- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
- When mud, snow, ice, a sticker, etc., is covering the sensor or surrounding area on the position above the rear bumper
- When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
- When multiple vehicles are approaching with only a small gap between each vehicle
- When a vehicle is approaching at high speed
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- When backing up on a slope with a sharp change in grade

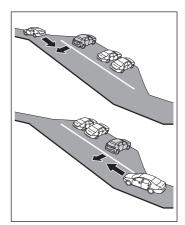


^{*1:} Depending on the conditions, detection of a vehicle and/or object may occur.


When backing out of a sharp angle parking spot

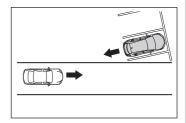

- When towing a trailer
- When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
- When a sensor or the area around a sensor is extremely hot or cold.
- If the suspension has been modified or tires of a size other than specified are installed
- If the front of the vehicle is raised or lowered due to the carried load
- When turning while backing up

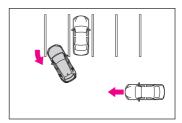


When a vehicle turns into the detection area

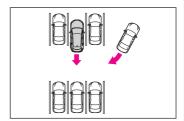


■ Situations in which the system may operate even if there is no possibility of a collision

Instances of the RCTA function unnecessary detecting a vehicle and/or object may increase in the following situations:


 When the parking space faces a street and vehicles are being driven on the street

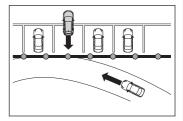

 
 When the distance between your vehicle and metal objects, such as a guardrail, wall, sigh, or parked vehicle, which may reflect electrical waves toward the rear of the vehicle, is short



 - When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- When a vehicle passes by the side of your vehicle




 When a detected vehicle turns while approaching the vehicle

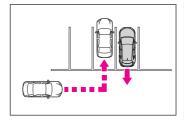

- When there are spinning objects near your vehicle such as the fan of an air conditioning unit
- When water is splashed or sprayed toward the rear bumper, such as from a sprinkler
- Moving objects (flags, exhaust fumes, large rain droplets or snowflakes, rain water on the road surface, etc.)
- When the distance between your vehicle and a guardrail, wall, etc., that enters the
 detection area is short

- Gratings and gutters
- When a sensor or the area around a sensor is extremely hot or cold.
- If the suspension has been modified or tires of a size other than specified are installed
- If the front of the vehicle is raised or lowered due to the carried load.

System components

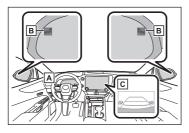

A Meter

If a vehicle approaching from the right or left at the rear of the vehicle is detected, a buzzer will sound.

B Outside rear view mirror indicators

When a vehicle approaching from the right or left at the rear of the vehicle is detected, both outside rear view mirror indicators will flash

C Center display

If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA icon for the detected side will be displayed on the center display. Turning the RCTA function on/off on the center display.

This illustration shows an example of a vehicle approaching from both sides of the vehicle.

☐ INFORMATION

Outside rear view mirror indicator visibility

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

■ Hearing the RCTA buzzer

The RCTA buzzer may be difficult to hear over loud noises, such as if the audio system volume is high.


■ Rear side radar sensors

 \rightarrow P.366

RCTA function

The RCTA function is operational when

The RCTA function uses rear side radar sensors to detect vehicles approaching from the right or left at the rear of the vehicle and alerts the driver of the presence of such vehicles by flashing the outside rear view mirror indicators and sounding a buzzer.

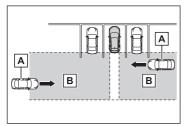


- A Approaching vehicles
- B Detection areas of approaching vehicles

RCTA icon display

When a vehicle approaching from the right or left at the rear of the vehicle is detected, the following will be displayed on the center display.

Example: Vehicles are approaching from both sides of the vehicle (Example: Vehicles with a Lexus parking assist monitor)

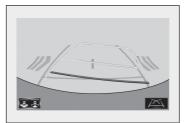


RCTA function detection areas

The areas that vehicles can be detected in are outlined below.

The buzzer can alert the driver of faster vehicles approaching from farther away.

Example:

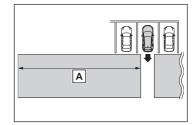

- Approaching vehicle speed: 56 km/h (35 mph) (fast)
 - Approximate alert distance: 25 m (82 ft.)

• Approaching vehicle speed: 8 km/h (5 mph) (slow)

Approximate alert distance: 5.5 m (18 ft.)

Changing the RCTA settings

Turning the RCTA function ON/OFF

The RCTA function can be enabled/disabled on the center display as follows:

- 1 Select 🛱 .
- 2 Select [Driving assist].
- 3 Select [Rear crossing traffic alert].

When the RCTA function is disabled, the driving assist infomation indicator illuminates on the multi-information display.

(Each time the engine switch is turned off then changed to ON, the RCTA function will be enabled automatically.)

Changing the RCTA buzzer volume

The buzzer volume can be adjusted on the center display.

- 1 Select 🌣.
- 2 Select [Driving assist].
- 3 Select [Collision mitigation].
- 4 Select [Parking assist volume].

Temporarily muting the RCTA buzzer

A mute button will be displayed on the center display when an object is detected.

To mute the buzzer, select . To mute the buzzer, select . The buzzers for the Lexus parking assist-sensor, RCTA and RCD function will be muted simultaneously.

Mute will be canceled automatically in the following situations:

- When the shift position is changed.
- When the vehicle speed exceeds a certain speed.
- When there is a malfunction in a sensor or the system is temporarily unavailable.
- When the operating function is disabled manually.
- When the engine switch is turned off.

Buzzer and screen notifications when traveling at a low speed and a pedestrian is detected at the rear*

Purpose of the RCD (Rear Camera Detection)

When the vehicle is backing up, the rear camera detection function can detect pedestrians in the detection area behind the vehicle. If a pedestrian is detected, a buzzer will sound and an icon will be displayed on the center display to inform the driver of the pedestrian.

WARNING

Cautions regarding the use of the system

The recognition and control capabilities for this system are limited.

The driver should always drive safely by always being responsible without over relying on the system and have a understanding of the surrounding situations.

■ To ensure the system can operate properly

Observe the following, otherwise there is the danger that could lead to an accident.

- Always clean the camera with damaging it.
- Do not install market electronic parts (such as Illuminated license plate, fog lamps, etc.) in the camera vicinity.
- Do not subject the camera vicinity to strong impacts. If the vicinity is subjected to a strong impact, have the vehicle inspected at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- Do not disassemble, remodel or paint the camera.
- Do not attach accessories or stickers to the camera.
- Do not install market protection parts (bumper trim, etc.) to the rear bumper.
- Maintain suitable tire air pressure.
- Make sure the back door is completely closed.

RCD function is turned off

In the following situations the system turns off. The RCD function may not operate properly and thus there is the danger that an accident may occur.

- The contents mentioned above are not observed.
- Suspensions other than Lexus genuine parts are installed.

^{*:} If equipped

■ The rear camera detection function is operational when

- The engine switch is in ON.
- RCD function is on.
- The shift position is in R.

Situations in which the system may not operate properly

- Some pedestrians, such as the following, may not be detected by the rear camera detection function, preventing the function from operating properly:
 - Pedestrians who are bending forward or squatting
 - Pedestrians who are lying down
 - Pedestrians who are running
 - Pedestrians who suddenly enter the detection area
 - People riding a bicycle, skateboard, or other light vehicle
 - Pedestrians wearing oversized clothing such as a rain coat, long skirt, etc., making their silhouette obscure
 - Pedestrians whose body is partially hidden by an object, such as a cart or umbrella
 - Pedestrians which are obscured by darkness, such as at night
- In some situations, such as the following, pedestrians may not be detected by the rear camera detection function, preventing the function from operating properly:
 - When backing up in inclement weather (rain, snow, fog, etc.)
 - When the rear camera is obscured (dirt, snow, ice, etc. are attached) or scratched
 - When a very bright light, such as the sun, or the headlights of another vehicle, shines directly into the rear camera
 - When backing up in a place where the surrounding brightness changes suddenly, such as at the entrance or exit of a garage or underground parking lot
 - When backing up in a dim environment such as during dusk or in an underground parking lot
 - When the camera position and direction are deviated
 - When a towing hook is attached
 - When water droplets are flowing on the camera lens
 - When the rear washer is operating
 - When the vehicle height is extremely changed (nose up, nose down)
 - When tire chains or an emergency tire puncture repair kit is used

- If the suspension has been modified or tires of a size other than specified are installed
- When install market electronic parts (such as Illuminated license plate, fog lamps, etc.) in the camera vicinity
- When install market protection parts (bumper trim, etc.) to the rear bumper


Situations in which the system may operate unexpectedly

- Even though there are no pedestrians in the detection area, some objects, such as the following, may be detected, possibly causing the rear camera detection function to operate.
 - Three dimensional objects, such as a pole, traffic cone, fence, or parked vehicle
 - Moving objects, such as a car or motorcycle
 - Objects moving toward your vehicle when backing up, such as flags or puddles (or airborne matter, such as smoke, steam, rain, or snow)
 - Cobblestone or gravel roads, tram rails, road repairs, white lines, pedestrian crossings or fallen leaves on the road
 - Metal covers (gratings), such as those used for drainage ditches
 - Objects reflected in a puddle or on a wet road surface
 - Shadows on the road
- In some situations, such as the following, the rear camera detection function may operate even though there are no pedestrians in the detection area.
 - When backing up toward the roadside or a bump on the road
 - When backing up toward an incline/decline
 - If the rear of the vehicle is raised or lowered due to the carried load
 - $\bullet\,$ If a bumper protector, such as an additional trim strip, is installed to the rear bumper
 - If the orientation of the rear camera has been changed
 - If a towing eyelet is installed to the rear of the vehicle
 - When water is flowing over the rear camera lens
 - When the rear camera is obscured (dirt, snow, ice, etc., are attached) or scratched
 - If there is a flashing light in the detection area, such as the emergency flashers of another vehicle
 - When a tire chains or an emergency tire puncture repair kit is used
- Situations in which the rear camera detection function may be difficult to notice
 - The buzzer may be difficult to hear if the surrounding area is noisy, the volume of the audio system volume is high, the air conditioning system is being used, etc.

• If the temperature in the cabin is extremely high or low, the audio system screen may not operate correctly.

RCD function

Center Display

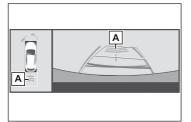


A Pedestrian detection icon

Displayed automatically when a pedestrian is detected.

(Each time the engine switch is turned off then changed to ON, the RCD function will be enabled automatically.)

When a pedestrian is detected

If the rear camera detection function detects a pedestrian in the detection area, the buzzer and pedestrian detection will operate as follows:

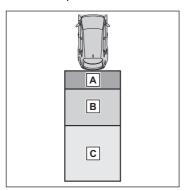

 $oxed{\mathsf{A}}$ If a pedestrian is detected in area $oxed{\mathsf{A}}$

Buzzer: Sounds repeatedly

Pedestrian detection icon: Blinks

B If a pedestrian is detected in area B

Buzzer (When the vehicle is stationary): Sounds 3 times

Buzzer (When the vehicle is backing up, when a pedestrian approaches the rear of the vehicle): Sounds repeatedly

Pedestrian detection icon: Blinks

C If the system determines that your vehicle may collide with a pedestrian in area C

Buzzer: Sounds repeatedly

Pedestrian detection icon: Blinks

Changing the RCD settings

Turning the RCD function ON/OFF

The RCD function can be enabled/disabled on the center display as follows:

- 1 Select 🛱 .
- 2 Select [Driving assist].
- 3 Select [Rear camera detection].

When the RCD function is disabled, the driving assist infomation indicator illuminates on the multi-information display.

Changing the RCD buzzer volume

The buzzer volume can be adjusted on the center display.

- 1 Select 🌼.
- Select [Driving assist].
- 3 Select [Collision mitigation].
- 4 Select [Parking assist volume].

Temporarily muting the RCD buzzer

A mute button will be displayed on the center display when an object is detected. To mute the buzzer, select of .To mute the buzzer, select of .The buzzers for the Lexus parking assist-sensor, RCTA and RCD function will be muted simultaneously.

Mute will be canceled automatically in the following situations:

- When the shift position is changed.
- When the vehicle speed exceeds a certain speed.
- When there is a malfunction in a sensor or the system is temporarily unavailable.
- When the operating function is disabled manually.
- When the engine switch is turned off.

Brake operation when an object is detected while approaching at low speed *

Purpose of the PKSB (Parking Support Brake) system*

The PKSB (Parking Support Brake) system consists of the following functions that operate when driving at a low speed or backing up, such as when parking. When the system determines that the probability of a collision with a detected object is high, a warning operates to urge the driver to take evasive action.

■ Parking assist function

The system can detect the following as detectable objects. (Detectable objects differ depending on the function.)

- Static Objects Front and Rear of the vehicle
- Moving Vehicles Rear of the Vehicle
- Pedestrians Rear of the Vehicle

PKSB (Parking Support Brake) system

WARNING

Cautions regarding the use of the system

Do not overly rely on the system, as doing so may lead to an accident. Always drive while checking the safety of the surroundings of the vehicle.

Depending on the vehicle and road conditions, weather, etc., the system may not operate. The detection capabilities of sensors and radars are limited. Always drive while checking the safety of the surroundings of the vehicle.

- The driver is solely responsible for safe driving. Always drive carefully, taking care to observe your surroundings. The PKSB (Parking Support Brake) system is designed to provide support to lessen the severity of collisions. However, it may not operate in some situations.
- The PKSB (Parking Support Brake) system is not designed to stop the vehicle completely. Additionally, even if the system has stopped the vehicle, it is necessary to depress the brake pedal immediately as brake control will be canceled after approximately 2 seconds.
- It is extremely dangerous to check the system operations by intentionally driving the vehicle into the direction of a wall, etc. Never attempt such actions.

^{*:} If equipped

WARNING

■ When to disable the PKSB (Parking Support Brake) system

In the following situations, disable the PKSB (Parking Support Brake) as the system may operate even though there is no possibility of a collision.

- When inspecting the vehicle using a chassis roller, chassis dynamo or free roller
- When loading the vehicle onto a boat, truck or other transport vessel
- If the suspension has been modified or tires of a size other than specified are installed
- If the front of the vehicle is raised or lowered due to the carried load
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- When using automatic car washing devices
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When the vehicle is driven in a sporty manner or off-road
- When the tires are not properly inflated
- When the tires are very worn
- When a tire chains, compact spare tire or an emergency tire puncture repair kit is used

Precautions for the suspension


Do not modify the suspension of the vehicle. If the height or tilt of the vehicle is changed, the sensors may not be able to detect detectable objects and the system may not operate correctly, possibly leading to an accident.

System overview


If the PKSB (Parking Support Brake) determines that a collision with a detected object or pedestrian is possible, the engine output will be restricted to restrain any increase in the vehicle speed. (Engine output restriction control: See figure 2.) Additionally, if the accelerator pedal continues to be depressed, the brakes will be applied automatically to reduce the vehicle speed. (Brake control: See figure 3.)

• Figure 1 When the PKSB (Parking Support Brake) is not operating


6-2. Using the safe driving support functions

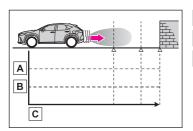

- A Engine output
- B Braking force
- C Time
- Figure 2 When engine output restriction control operates

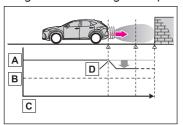

- A Engine output
- B Braking force
- C Time
- D Engine output restriction control begins operating (System determines that possibility of collision with detected object is high)
- Figure 3 When engine output restriction control and brake control operates

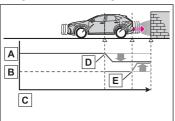

- A Engine output
- B Braking force
- C Time
- D Engine output restriction control begins operating (System determines that possibility of collision with detected object is high)
- E Brake control begins operating (System determines that possibility of collision with detected object is extremely high)

☐ INFORMATION

■ If the PKSB (Parking Support Brake) system has operated

If the vehicle is stopped due to operation of the PKSB (Parking Support Brake), the PKSB (Parking Support Brake) will be disabled and the driving assist infomation indicator will illuminate.

If the PKSB (Parking Support Brake) system operates unnecessarily, brake control can be canceled by depressing the brake pedal or waiting approximately 2 seconds for it to automatically be canceled. Then, the vehicle can be operated by depressing the accelerator pedal.

■ Re-enabling the PKSB (Parking Support Brake) system

To re-enable the PKSB (Parking Support Brake) when it has been disabled due to operation of the PKSB (Parking Support Brake), either enable the system again, or turn the engine switch off and then back to ON.

Additionally, if any of the following conditions are met, the system will be re-enabled automatically and the driving assist infomation indicator will turn off:

- The P shift position is selected
- The object is no longer detected in the traveling direction of the vehicle
- The traveling direction of the vehicle changes^{*1}

Turning the PKSB (Parking Support Brake) system ON/OFF

The PKSB (Parking Support Brake) system can be changed between ON (enabled) and OFF (disabled) on the center display.

- 1 Select 🛱 .
- 2 Select [Driving assist].
- 3 Select [Parking support brake] to change ON (enable)/OFF (disabled).

When the PKSB (Parking Support Brake) is disabled, the driving assist infomation indicator illuminates.

When turned OFF (disabled), the PKSB (Parking Support Brake) will be disabled and will not be enabled until the setting is changed to ON again in center display.

(The function will not be reenabled by operating the engine switch.)

PKSB (Parking Support Brake) function displays and buzzers

When the engine output restriction control or brake control operates, a buzzer sounds and a message is displayed on the multi-information display, head-up display* and center display to alert the driver.

Depending on the situation, output restriction control operates to either limit acceleration or restrict output as much as possible.

■ Engine output restriction control is operating (acceleration restriction)

- Acceleration greater than a certain amount is restricted by the system.
- Multi-information display: "Object Detected Ahead Speed Reduced"
- Head-up display*: "Object Detected Acceleration Reduced"

^{*1:} Except when the Pedestrians Rear of the Vehicle operated.

^{*:} If equipped

- Center display: No warning displayed
- Driving assist infomation indicator: Not illuminated
- Buzzer: Does not sound
- Engine output restriction control is operating (output restricted as much as possible)
- The system has determined that stronger-than-normal brake operation is necessary.
- Multi-information display and head-up display*: "BRAKE!"
- Center display: "BRAKE!"
- Driving assist infomation indicator: Not illuminated
- Buzzer: Short beep
- Brake control is operating
- The system determined that emergency braking is necessary.
- Multi-information display and head-up display*: "BRAKEI"
- Center display: "BRAKE!"
- Driving assist infomation indicator: Not illuminated
- Buzzer: Short beep
- Vehicle stopped by system operation
- The vehicle has been stopped by brake control operation.
- Multi-information display: "Accelerator Pedal is Pressed Press Brake Pedal" (If
 the accelerator pedal is not depressed, "Press Brake Pedal" will be displayed.)
- Head-up display*: "Accelerator Pedal is Pressed Press Brake Pedal" (If the accelerator pedal is not depressed, "Press Brake Pedal" will be displayed.)
- Center display: "Press Brake Pedal"
- Driving assist infomation indicator: Illuminated
- Buzzer: Sounds repeatedly

Static Objects Front and Rear of the vehicle *

If the sensors detect a static object, such as a wall, in the travelling direction of the vehicle and the system determines that a collision may occur due to the vehicle suddenly moving forward due to an accidental accelerator pedal operation, the

^{*:} If equipped

vehicle moving the unintended direction due to the wrong shift position, or while parking or traveling at low speeds, the system will operate to lessen the impact with the detected static object and reduce the resulting damage.

INFORMATION

■ The system will operate when

The function will operate when the driving assist infomation indicator is not illuminated or flashing and all of the following conditions are met:

- Engine output restriction control
 - PKSB (Parking Support Brake) system is enabled.
 - The vehicle speed is approximately 15 km/h (9 mph) or less.
 - There is a static object in the traveling direction of the vehicle (approximately 2 to 4 m [6 to 13 ft.] ahead).
 - The Parking Support Brake determines that a stronger-than-normal brake operation is necessary to avoid a collision.
- Brake control
 - Engine output restriction control is operating.
 - The Parking Support Brake determines that an immediate brake operation is necessary to avoid a collision.

■ The system will stop operating when

The function will stop operating if any of the following conditions are met:

- Engine output restriction control
 - PKSB (Parking Support Brake) system is disabled.
 - The system determines that the collision has become avoidable with normal brake operation.
 - The static object is no longer in the traveling direction of the vehicle or approximately 2 to 4 m (6 to 13 ft.) away from the vehicle.
- Brake control
 - PKSB (Parking Support Brake) system is disabled.
 - Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
 - The brake pedal is depressed after the vehicle is stopped by brake control.
 - The static object is no longer in the traveling direction of the vehicle or approximately 2 to 4 m (6 to 13 ft.) away from the vehicle.

Detection range

The detection range of the system differs from the detection range of the Lexus parking assist-sensor.

Therefore, even if the Lexus parking assist-sensor detects a static object and provides a warning, the PKSB (Parking Support Brake) system may not start operating.

Lexus parking assist-sensor buzzer

Regardless of whether the Lexus parking assist-sensor buzzer is enabled or not, if the PKSB (Parking Support Brake) system is enabled, the front or rear sensors detect an object and brake control is performed, the Lexus parking assist-sensor buzzer will sound to notify the driver of the approximate distance to the object.

- Situations in which the system may not operate properly
- $\rightarrow P.379$
- Situations in which the system may operate even if there is no possibility of a collision
- $\rightarrow P.378$

WARNING

If the PKSB (Parking Support Brake) system operates unnecessarily, such as at a railroad crossing

 $\rightarrow P.398$

Static Objects Front and Rear of the vehicle sensors

 \rightarrow P.382


WARNING

- To ensure the system can operate properly
- \rightarrow P.378
- Notes when washing the vehicle
- \rightarrow P.382


Static Objects Front and Rear of the vehicle operation examples

The system operates in the following situations when a static object is detected in the traveling direction of the vehicle.


 When the vehicle is traveling at a low speed and the brake pedal is not depressed, or is depressed late

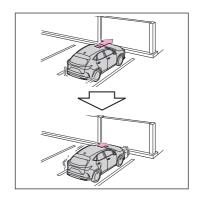

When the accelerator pedal is depressed excessively

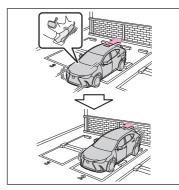

• When the moves forward due to the incorrect shift position being selected

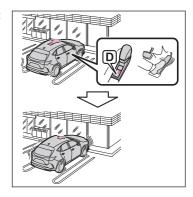

Moving Vehicles Rear of the Vehicle *

If a rear radar sensor detects a vehicle approaching from the right or left at the rear of the vehicle and the system determines that the possibility of a collision is high,

^{*:} If equipped

this function will perform brake control to reduce the likelihood of an impact with the approaching vehicle.

INFORMATION

■ The system will operate when

The function will operate when the driving assist infomation indicator is not illuminated or flashing and all of the following conditions are met:

- Engine output restriction control
 - PKSB (Parking Support Brake) system is enabled.
 - The vehicle speed is 15 km/h (9 mph) or less.
 - Vehicles are approaching from the right or left at the rear of the vehicle at a traveling speed of approximately 8 km/h (5 mph) or more.
 - The shift position is in R.
 - The PKSB (Parking Support Brake) determines that a stronger than normal brake operation is necessary to avoid a collision with an approaching vehicle.
- Brake control
 - Engine output restriction control is operating.
 - The PKSB (Parking Support Brake) determines that an emergency brake operation is necessary to avoid a collision with an approaching vehicle.

■ The system will stop operating when

The function will stop operating if any of the following conditions are met:

- Engine output restriction control
 - PKSB (Parking Support Brake) system is disabled.
 - The collision becomes avoidable with normal brake operation.
 - A vehicle is no longer approaching from the right or left at the rear of the vehicle.
- Brake control
 - PKSB (Parking Support Brake) system is disabled.
 - Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
 - The brake pedal is depressed after the vehicle is stopped by brake control.
 - A vehicle is no longer approaching from the right or left at the rear of the vehicle.

■ Detection range

The detection range of the system differs from the detection area of the RCTA function. \rightarrow P.391 Therefore, even if the RCTA function detects a vehicle and provides an alert, the PKSB (Parking Support Brake) system may not start operating.

■ RCTA buzzer


Regardless of whether the RCTA function is on or off, if the PKSB (Parking Support Brake) system is not disabled, when the brake control operates, the buzzer will sound to alert the driver.

- Situations in which the system may not operate properly
- \rightarrow P.386
- Situations in which the system may operate even if there is no possibility of a collision
- \rightarrow P.386

Examples of the Moving Vehicles Rear of the Vehicle operation

This function will operate in situations such as the following if a vehicle is detected in the traveling direction of the vehicle.

When reversing, a vehicle is approaching and the brake pedal is not depressed, or is depressed late

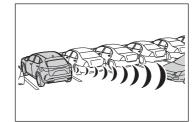

Moving Vehicles Rear of the Vehicle sensors

 \rightarrow P.365

WARNING

- To ensure the system can operate properly
- \rightarrow P.365

Pedestrians Rear of the Vehicle*

If the rear camera sensor detects a pedestrian behind the vehicle while backing up and the system determines that the possibility of colliding with the detected pedestrian is high, a buzzer will sound. If the system determines that the possibility

^{*:} If equipped

of colliding with the detected pedestrian is extremely high, the brakes will be applied automatically to help reduce the impact of the collision.

■ The system will operate when

- The function will operate when the driving assist infomation indicator is not illuminated or flashing and all of the following conditions are met:
 - Engine output restriction control
 - PKSB (Parking Support Brake) system is enabled.
 - The vehicle speed is approximately 15 km/h (9 mph) or less.
 - The shift position is in R.
 - The rear camera sensor detects a pedestrian behind the vehicle while backing up and the system determines that the possibility of colliding with the detected pedestrian is high.
 - The PKSB (Parking Support Brake) determines that a stronger-than-normal brake operation is necessary to avoid a collision.
- Brake control
 - Engine output restriction control is operating.
 - The PKSB (Parking Support Brake) determines that an emergency brake operation is necessary to avoid a collision with a pedestrians.

■ The system will stop operating when

The function will stop operating if any of the following conditions are met:

- Engine output restriction control
 - PKSB (Parking Support Brake) system is disabled.
 - The collision becomes avoidable with normal brake operation.
 - The pedestrian is no longer detected behind your vehicle.
- Brake control
 - PKSB (Parking Support Brake) system is disabled.
 - Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
 - The brake pedal is depressed after the vehicle is stopped by brake control.
- The pedestrian is no longer detected behind your vehicle.


Detection range

The detection area of the system differs from the detection area of the RCD function. \rightarrow P.396 Therefore, even if the RCD function detects a pedestrian and provides an alert, the PKSB (Parking Support Brake) may not start operating.

- Situations in which the system may not operate properly
- $\rightarrow P.393$
- Situations in which the system may operate unexpectedly
- \rightarrow P.393


When a vehicle is detected behind the vehicle

When a pedestrian is detected behind the vehicle while backing up, the brake pedal is not depressed or is depressed late.

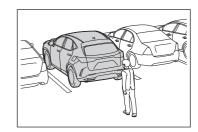

Pedestrians Rear of the Vehicle display

Displays a message to urge the driver to take evasive action when a pedestrian is detected in the detection area behind the vehicle. (A message will also be displayed on the center display.)

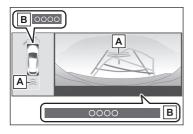

- A Pedestrian detection icon
- B Brake reminder

Road Sign Assist

RSA (Road Sign Assist)

The RSA system detects specific road signs using the front camera and/or navigation system* (when speed limit information is available) and warns the driver via displays and buzzers.

The RSA system detects specific road signs using the front camera and warns the driver via displays and buzzers.

WARNING

For safe use

Do not rely solely upon the RSA. The RSA assists the driver by providing road sign information, but it is not a replacement for the driver's own vision and awareness. Driving safely is solely the responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving.

- Situations in which the RSA should not be used
- When it is necessary to disable the system: \rightarrow P.316
- Situations in which the system may not operate properly
- ullet Situations in which the sensors may not operate properly: ightarrow P.321

Displays on the display

When the front camera detects a sign or information of a sign is available from the navigation system*, the sign will be displayed on the display.

When the front camera detects a sign, the sign will be displayed on the display.

Multiple signs can be displayed.

Depending on the specifications of the vehicle, the number of displayed signs may be limited.

Display function operating conditions

Signs will be displayed when the following conditions are met:

The system has detected a sign

In the following situations, a displayed sign may stop being displayed:

^{*:} If equipped

- When a new sign has not been detected for a certain distance
- When the system determines that a sign is no longer valid
- When the system determines that the road being driven on has changed, such as after a left or right turn

■ Situations in which the display function may not operate properly

In the following situations, the RSA system may not operate properly and may not detect signs or may display the incorrect sign. However, this does not indicate a malfunction.

- When a sign is dirty, faded, tilted or bent
- When the contrast of an electronic sign is low
- When all or part of a sign is hidden by a tree, utility pole, etc.
- When a sign is detected by the front camera for a short amount of time
- When the driving state (turning, changing lanes, etc.) is judged incorrectly
- When a sign is immediately after a freeway junction or in an adjacent lane just before merging
- When stickers are attached to the rear of a preceding vehicle
- When a sign similar to a system compatible sign is detected as a system compatible sign
- When a speed limit sign for a frontage road is within detection range of the front camera
- When driving around a roundabout
- When a sign intended for trucks, etc. is detected
- When the vehicle is driven in a country with a different direction of traffic
- When the navigation system map data is out of date
- When the navigation system cannot be used
 In this case, the speed limit signs displayed on the multi-information display and navigation system display may differ.

Customize settings

The settings of the RSA system can be changed through customize settings.

Notification function


In the following situations, the RSA system will output a warning to notify the driver.

 If the vehicle speed exceeds the speed warning threshold of the speed limit sign displayed on the multi-information display, the sign display will be emphasized and a buzzer will sound. When the RSA system detects a no-entry sign and determines that the vehicle
has entered the no-entry area based on the map information of the navigation
system, the no-entry sign displayed on the multi-information display will flash
and a buzzer will sound. (Vehicles with a navigation system)

Types of road signs supported

The following types of road signs can be displayed.
 However, non-standard or recently introduced traffic signs may not be displayed.

► Speed limit road signs⁽¹⁾

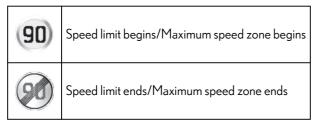

(1) is displayed when neither speed limit road signs nor speed limit related information is available.

► Speed limit related information⁽¹⁾⁽²⁾

A	Motorway	
X	Motorway exit	
	Expressway	
9 4	Expressway exit	
14	Urban area beginning	

M	Urban area ending
•	Residential area beginning
	Residential area ending
∱ .*	Residential area beginning
	Residential area ending


- (1) Displayed when a sign is detected but speed limit information for the road is not available from the navigation system.
- (2) is displayed when neither speed limit road signs nor speed limit related information is available.

No overtaking road signs




▶ Other road signs

No-entry ⁽¹⁾
End of prohibition

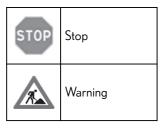

(1) For vehicles with a navigation system

► Speed limit with supplemental mark⁽¹⁾

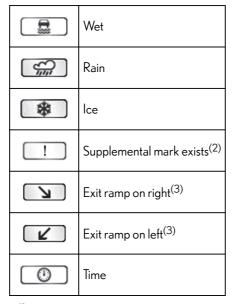

- (1) Displayed simultaneously with a speed limit sign.
- (2) Content not recognized.
- (3) If the turn signal indicators are not operated when changing lanes, this mark will not be displayed.
- Depending on the specifications of the vehicle, signs may be displayed overlapping.



Changing RSA settings

The following settings of the RSA can be changed through customize settings.

 \rightarrow P.661

Dynamic radar cruise control

Dynamic radar cruise control

This dynamic radar cruise control uses radar to detect the presence of vehicles ahead, determines the current vehicle-to-vehicle distance, and operates to maintain a suitable distance from the vehicle ahead. The desired vehicle-to-vehicle distance can be set by operating the vehicle-to-vehicle distance switch.

Use the dynamic radar cruise control only on highways and expressways.

WARNING

For safe use

- Driving safely is solely the responsibility of the driver. Do not overly rely on this system, and pay careful attention to the surrounding conditions in order to ensure safe driving.
- The dynamic radar cruise control provides driving assistance to reduce the driver's burden. However, there are limitations to the assistance provided.
 - Read the following items carefully. Do not overly rely on this system and always drive carefully.
 - Conditions under which the system may not operate correctly: \rightarrow P.420
- Set the speed appropriately according to the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for confirming the set speed.
- Even if the system is operating correctly, the condition of a preceding vehicle as recognized by the driver and detected by the system may differ. Therefore, it is necessary for the driver to pay attention, assess risks, and ensure safety. Over-reliance on this system to drive the vehicle safely may lead to an accident resulting in death or serious injury.

Precautions for the driving assist systems

Observe the following precautions, as there are limitations to the assistance provided by the system. Over-reliance on this system may lead to an accident resulting in death or serious injury.

- Details of support provided for the driver's vision
 - The dynamic radar cruise control is only intended to help the driver in determining the distance between the driver's own vehicle and a designated preceding vehicle. It is not a system which allows for careless or inattentive driving, and is not a system which assists in poor visibility conditions.
 - The driver must pay attention to their surroundings.
- Details of support provided for the driver's judgement

WARNING

The dynamic radar cruise control determines whether the distance between the driver's own vehicle and a designated preceding vehicle is within a set range. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger.

Details of support provided for the driver's operation


The dynamic radar cruise control does not include functions which will prevent or avoid collisions with vehicles ahead of your vehicle. Therefore, if there is ever any possibility of danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure safety.

Situations in which the dynamic radar cruise control should not be used

Do not use the dynamic radar cruise control in the following situations. As the system will not be able to provide appropriate control, using it may lead to an accident resulting in death or serious injury.

- When driving on a highway or expressway entrance or exit
- When the approach warning sounds frequently
- Situations in which the sensors may not operate properly: \rightarrow P.321
- Situations in which the lane may not be detected: \rightarrow P.316

Basic functions

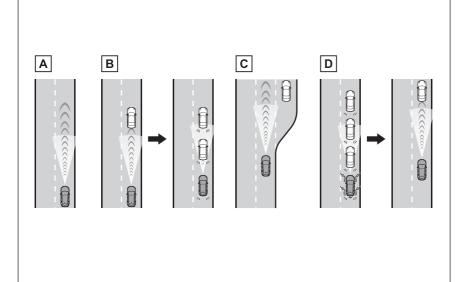

6-2. Using the safe driving support functions

A Constant speed cruising:

When there are no vehicles ahead

The vehicle drives at the speed set by the driver.

If the set vehicle speed is exceeded while driving down a hill, the set vehicle speed display will blink and a buzzer will sound.

B Deceleration and follow-up cruising

When a preceding vehicle driving slower than the set vehicle speed is detected

When a vehicle is detected driving ahead of your vehicle, the vehicle automatically decelerates and if a greater reduction in vehicle speed is necessary, the brakes are applied (the stop lights will come on at this time). The vehicle is controlled to maintain the vehicle-to-vehicle distance set by the driver, in accordance with changes in the speed of the preceding vehicle. If vehicle deceleration is not sufficient and the vehicle approaches the vehicle ahead, the approach warning will sound.

C Acceleration

When there are no longer any preceding vehicles driving slower than the set vehicle speed

The vehicle accelerates until the set vehicle speed is reached and then resumes constant speed cruising.

D Starting off:

Vehicles without a head-up display: If a preceding vehicle stops, the vehicle will also stop (controlled stop). After the preceding vehicle starts off, pressing the [+RES] switch or depressing the accelerator pedal will resume follow-up cruising (start off operation). If a start off operation is not performed, the controlled stop will continue.

Vehicles with a head-up display: If a preceding vehicle stops, the vehicle will also stop (controlled stop). After the preceding vehicle starts off, pressing the [+] switch or depressing the accelerator pedal will resume follow-up cruising (start off operation). If a start off operation is not performed, the controlled stop will continue.

Operating conditions

The shift lever is in D.

The shift position is in D.

 The desired set speed can be set when the vehicle speed is approximately 30 km/h (20 mph) or more.

(If the vehicle speed is set while driving at below approximately 30 km/h [20 mph], the set speed will be set to approximately 30 km/h [20 mph].)

Accelerating after setting the vehicle speed

As with normal driving, acceleration can be performed by depressing the accelerator pedal. After accelerating, the vehicle will return to the set vehicle speed. However, while in vehicle-to-vehicle distance control mode, the vehicle speed may decrease to below the set vehicle speed in order to maintain the distance from the preceding vehicle.

■ When the vehicle is stopped by system control during follow-up cruising

- Vehicles without a head-up display: When the [+RES] switch is pressed while the
 vehicle is stopped by system control, if the preceding vehicle starts off within approximately 3 seconds, follow-up cruising will resume.
 - Vehicles with a head-up display: When the [RES] switch is pressed while the vehicle is stopped by system control, if the preceding vehicle starts off within approximately 3 seconds, follow-up cruising will resume.
- If the preceding vehicle starts off within approximately 3 seconds of the vehicle being stopped by system control, follow-up cruising will resume.

Automatic cancellation of vehicle-to-vehicle distance control mode

In the following situations, vehicle-to-vehicle distance control mode will be canceled automatically:

- When the brake control or output restriction control of a driving support system operates (For example: Pre-Collision System, drive-start control)
- When the parking brake has been operated
- When the vehicle is stopped by system control on a steep incline
- When any of the following are detected while the vehicle is stopped by system control:
 - The driver's seat belt is unfastened
 - The driver's door is opened
 - Approximately 3 minutes have elapsed since the vehicle was stopped
- lacktriangle Situations in which some or all of the functions of the system cannot operate: ightarrow P.323

Dynamic radar cruise control system warning messages and buzzers

For safe use: \rightarrow P.316

■ Preceding vehicles that the sensor may not detect correctly

In the following situations, depending on the conditions, if the system cannot provide sufficient deceleration or acceleration is necessary, operate the brake pedal or accelerator pedal.

As the sensor may not be able to correctly detect these types of vehicles, the approach warning $(\rightarrow P.425)$ may not operate.

 When a vehicle cuts in front of your vehicle or changes lanes away from your vehicle extremely slowly or quickly

6-2. Using the safe driving support functions

- When changing lanes
- When a preceding vehicle is driving at a low speed
- When a vehicle is stopped in the same lane as the vehicle
- When a motorcycle is traveling in the same lane as the vehicle

■ Conditions under which the system may not operate correctly


In the following situations, operate the brake pedal (or accelerator pedal, depending on the situation) as necessary.

As the sensor may not be able to correctly detect a vehicle, the system may not operate properly.

- When a preceding vehicle brakes suddenly
- When changing lanes at low speeds, such as in a traffic jam

System components


■ Meter display

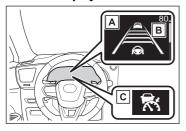

- A Multi-information display
- B Set vehicle speed
- C Indicators


■ Switches

▶ Vehicles without a head-up display

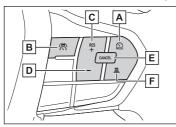

- A Driving assist mode select switch
- B Driving assist switch
- C [+RES] switch
- D [-] switch
- E Cancel switch
- F Vehicle-to-vehicle distance switch

▶ Vehicles with a head-up display

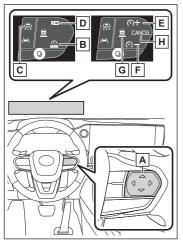

- A The function of each switch differs depending on the conditions and settings.
 - When a switch is touched, the function of each switch is displayed on the head-up display. If the head-up display is off, the functions will be displayed on the multi-information display.
- B Driving assist mode select switch
- C Driving assist switch
- D [RES] switch
- E [+]switch
- F [-]switch
- G Vehicle-to-vehicle distance switch
- H Cancel switch

Using the dynamic radar cruise control

Setting the vehicle speed

Press the driving assist mode select switch to select dynamic radar cruise control.

The dynamic radar cruise control indicator will illuminate.

▶ Vehicles without a head-up display



➤ Vehicles with a head-up display




Using the accelerator pedal, accelerate or decelerate to the desired vehicle speed (approximately 30 km/h [20 mph] or more), and press the driving assist switch to set the set vehicle speed.

The set vehicle speed will be displayed on the multi-information display.

The vehicle speed at the moment the switch is released will be the set vehicle speed.

► Vehicles without a head-up display

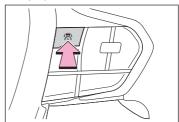


► Vehicles with a head display




Adjusting the set vehicle speed

- Adjusting the set vehicle speed using the switches
- Vehicles without a head-up display: To change the set vehicle speed, press the
 [+RES]or [] switch until the desired speed is displayed. Vehicles with a head-up
 display: To change the set vehicle speed, press the[+] or [] switch until the
 desired speed is displayed.
 - ► Vehicles without a head-up display:

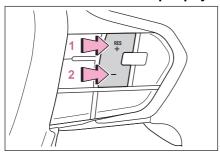

▶ Vehicles with a head-up display:

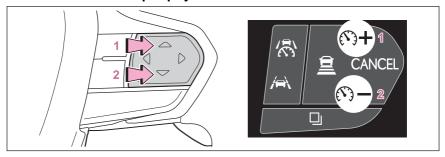

- 1 Increase set vehicle speed
- 2 Decrease set vehicle speed

Short press adjustment (IN DISPUTE): Press the switch

Press and hold adjustment (IN DISPUTE): Press and hold the switch until the desired set vehicle speed is reached.

The set vehicle speed will increase or decrease as follows:

Short press adjustment (IN DISPUTE): By 1 km/h (0.6 mph) or 1 mph (1.6 km/h) each time the switch is pressed

Press and hold adjustment (IN DISPUTE): Increases or decreases in $5\,\mathrm{km/h}$ ($3.1\,\mathrm{mph}$) or $5\,\mathrm{mph}$ ($8\,\mathrm{km/h}$) increments continuously while the switch is pressed and held

The set vehicle speed adjustment increment can be changed through a customize setting.

■ Increasing the set vehicle speed using the accelerator pedal

- Depress the accelerator pedal to accelerate the vehicle to the desired vehicle speed.
- 2 Vehicles without a head-up display: Press the [+RES] switch. Vehicles with a head-up display: Press the [+] switch.


Canceling/resuming control

Press the cancel switch or driving assist switch to cancel control.

Control will also be canceled if the brake pedal is depressed.

(If the vehicle has been stopped by system control, depressing the brake pedal will not cancel control.)

Vehicles without a head-up display

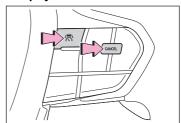

Vehicles with a head-up display





Vehicles without a head-up display: Press the [+RES] switch to resume control. Vehicles with a head-up display: Press the [RES] switch to resume control.


Changing the vehicle-to-vehicle distance

• Each time the switch is pressed, the vehicle-tovehicle distance setting will change as follows:

If a preceding vehicle is detected, the preceding vehicle mark will be displayed.

Illustra- tion Number	Vehicle-to- vehicle dis- tance	Approximate Distance (Vehicle Speed: 100 km/h [60 mph])
1	Long	Approximately 60 m (200 ft)
2	Medium (Long)	Approximately 45 m (145 ft)
3	Medium (Short)	Approximately 30 m (100 ft)
4	Short	Approximately 25 m (85 ft)

► Vehicles without a head-up display

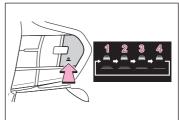

▶ Vehicles with a head-up display







The actual vehicle-to-vehicle distance varies in accordance with the vehicle speed. Also, when the vehicle is stopped by system control, it will be stopped at a certain distance from the preceding vehicle, depending on the situation, regardless of the setting.

Approach warning

In situations where the vehicle approaches a preceding vehicle and the system cannot provide sufficient deceleration, such as if a vehicle cuts in front of the vehicle, a warning display will flash and a buzzer will sound to alert the driver. Depress the brake pedal to ensure appropriate vehicle-to-vehicle distance.

■ Warnings may not occur when

In the following situations, the warning may not operate even though the vehicleto-vehicle distance is short.


- When the preceding vehicle is traveling at the same speed or faster than your vehicle
- When the preceding vehicle is traveling at an extremely low speed
- Immediately after the vehicle speed has been set
- When the accelerator pedal is depressed

Curve speed reduction function

When a curve is detected, the vehicle speed will begin being reduced. When the curve ends, the vehicle speed reduction will end.

Depending on the situation, the vehicle speed will then return to the set vehicle speed.

In situations where vehicle-to-vehicle distance control needs to operate, such as when a preceding vehicle cuts in front of your vehicle, the curve speed reduction function will be canceled.

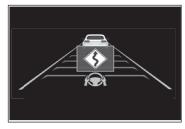

■ Situations in which the curve speed reduction function may not operate

In situations such as the following, the curve speed reduction function may not operate:

- When the vehicle is being driven around a gentle curve
- When the accelerator pedal is being depressed
- When the vehicle is being driven around an extremely short curve

■ Changing the settings of the curve speed reduction function

Various settings of the curve speed reduction function can be changed through customize settings. $(\rightarrow P.661)$

Overtaking prevention function

If a detected vehicle in the passing lane is traveling slower than your vehicle, overtaking will be suppressed.

The overtaking prevention function will not operate if the passing lane is congested or vehicles are traveling at low speeds. This function is not available for vehicles without a DCM.

Support for lane change

If your vehicle is being driven at approximately $80 \, \text{km/h} (50 \, \text{mph})$ or more and a lane change to the passing lane is performed, when the turn signal lever is operated and the lane is changed, the vehicle will accelerate up to the set speed to assist in overtaking.

For vehicles with a DCM: The system's recognition of which lane is the passing lane is determined by location information and the driving condition of surrounding vehicles. The support for lane change function and overtaking prevention function may not operate if it is difficult to obtain location information or there are few surrounding vehicles.

For vehicles without a DCM: The system's recognition of which lane is the passing lane may be based solely on the location of the steering wheel in the vehicle (left-hand drive/right-hand drive). If the vehicle is driven in a location where the passing lane is on the opposite side of that where the vehicle was originally sold, the vehicle may accelerate when the turn signal lever is operated away from the passing lane. (e.g. The vehicle was manufactured for a right-hand traffic location, but is being driven in a left-hand traffic location. The vehicle may accelerate when the turn signal lever is operated to the right.)

If your vehicle is being driven at approximately 80 km/h (50 mph) or more and the lane is changed to that with a vehicle traveling slower than your vehicle, when the turn signal lever is operated the vehicle will gradually decelerate to assist in changing lanes.

Dynamic Radar Cruise Control with Road Sign Assist*

Vehicles without a head-up display: When RSA function is enabled and the dynamic radar cruise control system is operating, if a speed limit sign is detected, the detected speed limit will be displayed with an up/down arrow. The set speed can be increased/reduced to the detected speed limit by pressing and holding the [+RES] switch or [-] switch.

^{*:} If equipped


Vehicles with a head-up display: When RSA function is enabled and the dynamic radar cruise control system is operating, if a speed limit sign is detected, the detected speed limit will be displayed with an up/down arrow. The set speed can be increased/reduced to the detected speed limit by pressing and holding the [+] switch or [-] switch.

- When the set speed is lower than the detected speed limit
- ▶ Vehicles without a head-up display

Press and hold the [+RES] switch.

▶ Vehicles with a head-up display:

Press and hold the [+] switch.

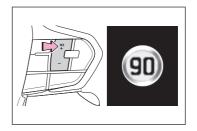






■ When the set speed is higher than the detected speed limit

Press and hold the [-] switch.

▶ Vehicles without a head-up display

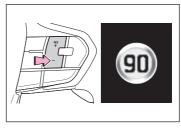

► Vehicles with a head-up display



■ Enabling/disabling the dynamic radar cruise control with road sign assist

The dynamic radar cruise control with road sign assist can be enabled/disabled through a customize setting.(\rightarrow P.661)

☐ INFORMATION

■ The dynamic radar cruise control with road sign assist may not operate properly when

As the dynamic radar cruise control with road sign assist may not operate properly in situations where the RSA may not operate or cannot detect signs correctly (\rightarrow P.410), when using this function, make sure to confirm the actual speed limit.

Vehicles without a head-up display: In the following situations, the set speed may not change to the detected speed limit by pressing and holding the [+RES] switch or [-] switch:

Vehicles with a head-up display: In the following situations, the set speed may not change to the detected speed limit by pressing and holding the [+] switch or [-] switch:

- When speed limit information is not available
- When the detected speed limit is the same as the set speed
- When the detected speed limit is outside of the speed range which the dynamic radar cruise control system can operate

Cruise Control

Cruise control

The vehicle can be driven at a set speed even if the accelerator pedal is not depressed.

Use the cruise control only on highways and expressways

WARNING

For safe use

- Driving safely is solely the responsibility of the driver. Therefore, do not overly rely
 on this system. The driver is solely responsible for paying attention to the vehicle's
 surroundings and driving safely.
- Set the speed appropriately according to the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for confirming the set speed.

Situations in which cruise control should not be used

Do not use the cruise control in the following situations. As the system will not be able to provide appropriate control, using it may lead to an accident resulting in death or serious injury.


- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhills, or where there are sudden changes between sharp up and down gradients

Vehicle speed may exceed the set speed when driving down a steep hill.

• When it is necessary to disable the system: \rightarrow P.316

System Components


■ Meter display

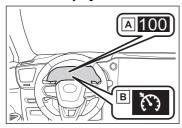

- A Set vehicle speed
- B Cruise control indicator


Switches

▶ Vehicles without a head-up display:

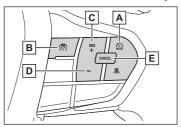

- A Driving assist mode select switch
- B Driving assist switch
- C [+RES]switch
- D []switch
- E Cancel switch

▶ Vehicles with a head-up display:

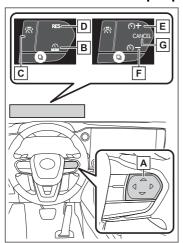

A The function of each switch differs depending on the conditions and settings.

When a switch is touched, the function of each switch is displayed on the head-up display. If the head-up display is off, the functions will be displayed on the multi-information display.

- B Driving assist mode select switch
- C Driving assist switch
- D [RES]switch
- E [+]switch
- F [-]switch
- G Cancel switch


Using the cruise control

Setting the vehicle speed

Press the driving assist mode select switch to select cruise control.

The cruise control indicator will illuminate.

► Vehicles without a head-up display

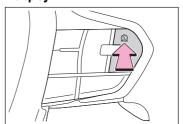


► Vehicles with a head-up display



Using the accelerator pedal, accelerate to the desired vehicle speed (approximately 30 km/h [20 mph] or more), and press the driving assist switch to set the set vehicle speed.

The vehicle speed at the moment the switch is released will be the set vehicle speed.

► Vehicles without a head-up display

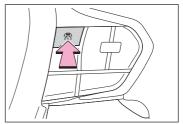


► Vehicles with a head-up display




Adjusting the set vehicle speed

- Adjusting the set vehicle speed using the switches
- Vehicles without a head-up display: To change the set vehicle speed, press the [+RES] or [-] switch until the desired speed is displayed. Vehicles with a head-up display: To change the set vehicle speed, press the [+] or [-] switch until the desired speed is displayed.
 - ► Vehicles without a head-up display

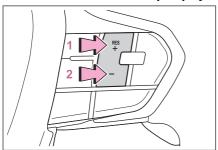

▶ Vehicles with a head-up display

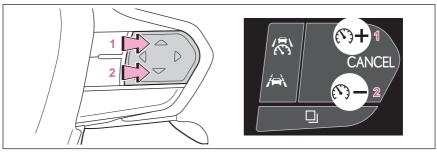

- 1 Increase set vehicle speed
- 2 Decrease set vehicle speed

The set vehicle speed will increase or decrease as follows:

Fine adjustment: By 1 km/h (0.6 mph) or 1 mph (1.6 km/h) each time the switch is pressed

Large adjustment: Increases continuously while the switch is pressed and held


- Increasing the set vehicle speed using the accelerator pedal
- Depress the accelerator pedal to accelerate the vehicle to the desired vehicle speed.
- Vehicles without a head-up display: Press the [+RES] switch. Vehicles with a head-up display: Press the [+] switch

Canceling/resuming control

 Press the cancel switch or driving assist switch to cancel control.

Control will also be canceled if the brake pedal is depressed.

► Vehicles without a head-up display

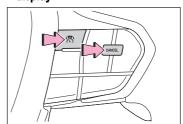

► Vehicles with a head-up display



Vehicles without a head-up display: Press the [+RES] switch to resume control. Vehicles with a head-up display: Press the [RES] switch to resume control.

Automatic cancellation of the cruise control

In the following situations, the cruise control will be canceled automatically:

- When the vehicle speed drops approximately 16 km/h (10 mph) or more below the set vehicle speed
- When the vehicle speed drops below approximately 30 km/h (20 mph)
- When the brake control or output restriction control of a driving support system operates (For example: PCS, drive-start control)
- When the parking brake has been operated
- Situations in which some or all of the functions of the system cannot operate: → P.323

Emergency Driving Stop System

Emergency Driving Stop System

The emergency driving stop system is a system which automatically decelerates and stops the vehicle within its lane if the driver becomes unable to continue driving the vehicle, such as if they have suffered a medical emergency, etc.

During LTA (Lane Tracing Assist) control, if the system does not detect driving operations, such as if the driver is not holding the steering wheel, and determines the driver is not responsive, the vehicle will be decelerated and stopped within its current lane to help avoid a collision or reduce the impact of a collision.

WARNING

For safe use

- Driving safely is solely the responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving. The emergency driving stop system is designed to provide support in an emergency where it is difficult for the driver to continue driving, such as if they have had a medical emergency. It is not designed to support driving while drowsy or in poor physical health, or inattentive driving.
- Although the emergency driving stop system is designed to decelerate the vehicle within its lane to help avoid or help reduce the impact of a collision if the system determines that it is difficult for the driver to continue driving, its effectiveness may change according to various conditions. Therefore, it may not always be able to achieve the same level of performance. Also, if the operating conditions are not met, this function will not operate.
- After the emergency driving stop system operates, if driving becomes possible again, immediately begin driving again or, if necessary, park the vehicle on the shoulder of the road and set a warning reflector and flare to warn other drivers of your stopped vehicle.
- After this system operates, passengers should attend to the driver as necessary and take appropriate hazard prevention measures, such as moving to a place where safety can be ensured, such as the shoulder of the road or behind a guardrail.
- This system detects the condition of the driver through the operation of the steering wheel. This system may operate if the driver is aware but intentionally and continuously does not operate the vehicle. Also, the system may not operate if it cannot determine that the driver is not responsive, such as if they are leaning on the steering wheel.

Summary of the system

Operation of this system is separated into 4 control states. Through control state "warning phase 1" and "warning phase 2", the system determines if the driver is aware and responsive while outputting a warning and controlling the vehicle speed. If the system determines the driver is not responsive, it will operate in control state "deceleration stop phase" and "stop hold phase" and decelerate and stop the vehicle. It will then operate continuously in "stop hold phase".

Operating conditions

This system operates when all of the following conditions are met:

- When the LTA is on.
- When the vehicle speed is approximately 30 mph (50 km/h) or more

■ Operation cancelation conditions

In the following situations, system operation will be canceled:

- When LTA control has been canceled (the LTA switch has been pressed, etc.)
- When the dynamic radar cruise control has been canceled
- When driver operations are detected (the steering wheel is held, the brake pedal, accelerator pedal, parking brake, hazard light switch, or turn signal lever is operated)
- When the driving assist switch is pressed while in the stop and hold phase
- When the engine switch has been turned from ON to OFF
- lacksquare Situations in which some or all of the functions of the system cannot operate: ightarrow P.323

LTA control when operation is canceled

When emergency driving stop system operation is canceled, LTA control may also be canceled.

Warning phase 1

If driving operations are not detected after the hands off steering wheel warning operates, a buzzer will sound intermittently and a message will be displayed to warn the driver, and the system will judge if the driver is responsive or not. If driving operations, such as holding the steering wheel, are not performed within a certain amount of time, the system will enter warning phase 2.

Warning phase 2

After entering warning phase 2, a buzzer will sound in short intervals and a message will be displayed to warn the driver, and the vehicle will slowly decelerate to approximately $50 \, \text{km/h} (30 \, \text{mph})$.

If driving operations, such as holding the steering wheel, are not performed within a certain amount of time, the system will determine that the driver is not responsive and enter the deceleration stop phase.

The audio system will be muted until the driver becomes responsive.

When the vehicle is decelerating, the brake lights may illuminate, depending on the road conditions, etc.

After the vehicle has decelerated a certain amount, the emergency flashers (hazard lights) will flash.

Deceleration stop phase

After the driver is judged as being not responsive, a buzzer will sound continuously and a message will be displayed to warn the driver, and the vehicle will slowly decelerate and stop. While the vehicle is decelerating, the emergency flashers (hazard lights) will flash to warn other drivers of the emergency.

Stop hold phase

After the vehicle is stopped, the parking brake will be applied automatically. After entering the stop and hold phase, the buzzer will continue sounding continuously, the emergency flashers (hazard lights) will flash to warn other drivers of the emergency, and the doors will unlock.

Engine output restriction when the accelerator pedal and brake pedal are depressed at the same time

Purpose of the brake override system

If the accelerator pedal and brake pedal are depressed at the same time, the brake override system may operate and restrain the engine output. A warning message is displayed on the multi-information display while the system is operating.

WARNING

To avoid depressing the wrong pedal, become familiar with the location of the brake pedal and accelerator pedal before driving the vehicle.

If the accelerator pedal is mistaken for the brake pedal and depressed, the vehicle may suddenly start off.

⚠ NOTICE

Do not depress the accelerator pedal and brake pedal at the same time while driving, as this may cause the engine output to be restrained.

Sudden start restraint control

Sudden start restraint control (Drive-Start Control [DSC])

When the following unusual operation is performed with the accelerator pedal depressed, the engine output may be restrained.

- When the shift lever is shifted to R¹
- \bullet When the shift lever is shifted from P or R to forward drive shift positon such as D^1

When the system operates, a message appears on the multi-information display. Read the message and follow the instruction.

A warning light comes on while the system is operating.

■ Drive-Start Control (DSC)

When the TRC is turned off, sudden start restraint control also does not operate. If your vehicle have trouble escaping from the mud or fresh snow due to sudden start restraint control operation, deactivate TRC so that the vehicle may become able to escape from the mud or fresh snow.

Also, sudden start restraint control will not operate in the following conditions:

When Trail Mode is turned on

Related Links

Driving assist systems(P. 325)


^{*1:} Depending on the situation, the shift position may not be changed.

Reducing impact to passengers in a collision

Seat belt pretensioners

When the vehicle is subjected to a severe frontal or side impact, the pretensioners retract the seat belts of the front seats and rear outer seats to securely restrain the occupants.

The pretensioners will not operate in minor frontal or side impacts, rear impacts, or vehicle rollovers.

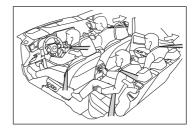

Replacing the belt after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

PCS-linked control

If the PCS (Pre-Collision System) determines that the possibility of a collision with a vehicle is high, the seat belt pretensioners will be prepared to operate.

WARNING

Seat belt pretensioners


If a pretensioner has operated, the SRS warning light will illuminate.

In this situation, the seat belt cannot be used and must be replaced by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Failure to do so may result in death or serious injury.

SRS airbags

The SRS airbags deploy when the vehicle is subjected to certain types of severe impact that may cause significant injury to the occupants. The airbags work together with the seat belts to help reduce the risk of death or serious injury.

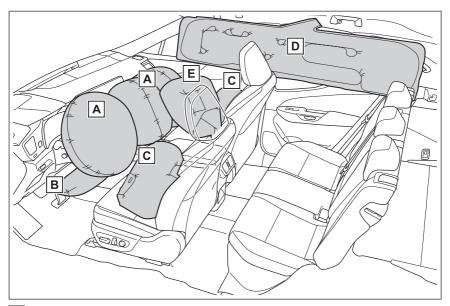

A SRS driver airbag/front passenger airbag

Help reduce impact to the head and chest of the driver and front passenger

B SRS knee airbags

Help reduce impact to the driver and front passenger

- C SRS side airbags
 - Help reduce impact to the chest of the occupants of the front seats
- D SRS curtain shield airbags

Help reduce impact to the heads of the occupants of the front and rear outer seats

E SRS front center airbags

Help reduce impact to the head and neck of the occupants of the front seats

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

■ If the SRS airbags deploy (inflate)

- Slight abrasions, burns, bruising, etc., may be sustained from SRS airbags, due to the
 extremely high speed of deployment (inflation) by hot gases.
- A loud noise and white powder will be emitted.

- Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as
 the parts around the airbags may be hot for several minutes. The airbag itself may also
 be hot.
- The windshield may crack.
- All of the doors will be unlocked.
- The brakes and stop lights will be controlled automatically.
- The interior lights will turn on automatically.
- The emergency flashers will turn on automatically.
- Fuel supply to the engine will be stopped.
- Vehicles with ERA-GLONASS/EVAK: If any of the following situations occur, the system is designed to send an emergency call** to the ERA-GLONASS/EVAK control center, notifying them of the vehicle's location (without needing to push the [SOS] button) and an agent will attempt to speak with the occupants to ascertain the level of emergency and assistance required. If the occupants are unable to communicate, the agent automatically treats the call as an emergency and helps to dispatch the necessary emergency services.
 - When an SRS airbag has been deployed
 - When a seat belt pretensioner has operated
 - When the vehicle has been involved in a severe rear-end collision
 - When the vehicle has been involved in a rollover

■ The SRS airbags deploy in a frontal impact when

- The following SRS airbags will deploy in the event of an impact that exceeds a
 threshold level (level of force corresponding to an approximately 20 30 km/h [12 18 mph] frontal collision with a fixed wall that does not move or deform):
 - SRS front airbags
 - SRS knee airbags
- The threshold level at which the SRS airbags will deploy will be higher than normal in the in the following situations:
 - When the vehicle collides with an object, such as a parked vehicle or sign pole, which moves or deforms on impact
 - If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle "underrides", or goes under, the bed of a truck
- Depending on the type of collision, only the following may deploy:
 - Seat belt pretensioners

^{*1:} In some cases, the call cannot be made.

- The SRS airbags for the front passenger's seat will not deploy if there is no passenger
 in the front passenger seat. However, the SRS airbags for the front passenger's seat
 may deploy, even if the seat is unoccupied, if luggage is put on the seat.
- In the event of an especially severe frontal collision, the left and right SRS curtain shield airbags may also deploy.

■ The SRS airbags deploy in a side impact when


- The following SRS airbags will deploy in the event of an impact that exceeds the set threshold level (level of force corresponding to the impact force produced by an approximately 1500 kg [3300 lb.] vehicle colliding with the passenger compartment at a perpendicular angle at an approximate speed of 20 30 km/h [12 18 mph]):
 - SRS side airbags
 - SRS curtain shield airbags
 - SRS front center airbags
- In the event of a side collision, regardless of the impacted side, both the left and right SRS curtain shield airbags will deploy.

 
■ The SRS airbags deploy in an underside impact when

- The following airbags may deploy if the underside of the vehicle collides with a hard object:
 - SRS front airbags
 - SRS knee airbags
 - SRS side airbags
 - SRS curtain shield airbags


■ The SRS side airbags will not deploy when


- The following SRS airbags will not normally deploy in side or rear collisions, vehicle rollovers, or low speed frontal collisions. However, if such a collision causes sufficient sudden deceleration, the SRS airbags may deploy.
 - SRS front airbags
 - SRS knee airbags

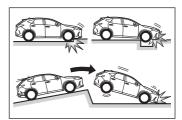




- The following SRS airbags may not deploy if the vehicle is collided with at a certain angle or in a side collision where an area of the vehicle other than the passenger compartment is collided with:
 - SRS side airbags
 - SRS curtain shield airbags
 - SRS front center airbags
- The following SRS airbags will not normally deploy in front or rear collisions, vehicle rollovers, or low speed side collisions:
 - SRS side airbags
 - SRS front center airbags

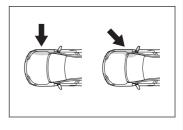

 

 
- The following SRS airbags will not normally deploy in rear collisions, vehicle rollovers, or low speed front or side collisions:
 - SRS curtain shield airbags




■ When to contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer

In the following situations, the vehicle will require inspection and/or repair. Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer as soon as possible.

 - When any of the SRS airbags have been deployed
- When the front of the vehicle is damaged or deformed, or was involved in a collision that was not severe enough to cause any of the following SRS airbags to deploy:
 - SRS front airbags
 - SRS knee airbags



 - When a door or its surrounding area is damaged, deformed or has had a hole made in it, or was involved in a collision that was not severe enough to cause any of the following SRS airbags to deploy:
 - SRS side airbags
 - SRS curtain shield airbags
 - SRS front center airbags




- When the surface of a seat with an SRS side airbag or SRS front center airbag is scratched, cracked, or otherwise damaged.
- When the part of a front pillar, rear pillar or roof side rail garnish (padding) which covers a SRS curtain shield airbag is scratched, cracked, or otherwise damaged.

SRS airbag precautions


Observe the following precautions. Failure to do so may result in death or serious injury.

- The driver and all passengers must wear their seat belts correctly.
 The SRS airbags are supplemental devices to be used with the seat belts.
- The SRS driver airbag deploys with considerable force, and can cause death or serious injury, especially if the driver is very close to the airbag.
 - Since the risk zone for the driver's airbag is the first 50-75 mm (2-3 in.) of inflation, placing yourself 250 mm (10 in.) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If your current driving position places you less than 250 mm (10 in.) away from the driver airbag, you can change your driving position in several ways:
 - Move your seat to the rear as far as possible while still being able to reach the pedals comfortably.
 - Slightly recline the seatback. Although vehicle designs vary, many drivers can
 achieve the 250 mm (11 in.) distance, even with the driver seat all the way forward,
 simply by reclining the seatback somewhat. If reclining the seatback makes it hard
 to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat
 if your vehicle has that feature.
 - If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck. The seat should be adjusted as recom-

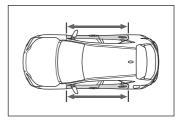


mended above, while still being able to control the vehicle with the pedals and steering wheel, and maintaining your view of the instrument panel controls.

- The SRS front passenger airbag deploys with considerable force, and can cause death
 or serious injury, especially if the front passenger is very close to the airbag. The front
 passenger seat should be positioned as far possible from the airbag with the seatback
 adjusted so that the passenger is sat upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Lexus strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat.
- Do not sit on the edge of the seat or lean against the dashboard.

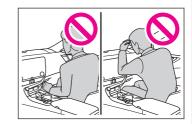

- Do not allow a child to stand in front of the SRS front passenger airbag or sit on the lap of a front passenger.
- Front seat occupants should never hold items on their lap.

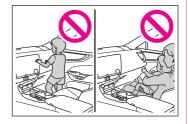


 Do not lean against the door, roof side rail, or front, side, or rear pillar.



 Do not allow anyone to kneel on a seat toward the door or put their head or hands outside the vehicle.



 Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad and lower portion of the instrument panel.

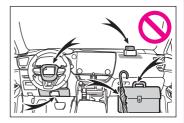

 Do not attach anything to areas such as the doors, windshield, side windows, front or rear pillars, roof side rails and assist grips.



- Do not hang coat hangers or other hard objects on the coat hooks. These items could become projectiles if the SRS curtain shield airbags deploy, possibly leading to death or serious injury.
- If a vinyl cover is attached to the area where the SRS knee airbag deploys, be sure to remove it.
- Do not use seat accessories which cover the parts from which the SRS airbags deploy, as they may interfere with inflation of the SRS airbags. Such accessories may prevent the SRS airbags from deploying correctly, may disable the system or cause the SRS airbags to inflate unintentionally, possibly resulting in death or serious injury.
- Do not strike or apply significant force to the SRS airbag system components, front doors or their surrounding area. Doing so may cause the SRS airbags to malfunction.
- Do not touch any components of the SRS airbags immediately after the SRS airbags have deployed (inflated) as they may be hot.

- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- If a part where an SRS airbag is stored is damaged or cracked, have it replaced by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Modification and disposal of SRS airbag system components

Do not dispose of your vehicle or perform any of the following modifications without consulting any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

The SRS airbags may malfunction or deploy unintentionally, possibly leading to death or serious injury.

- Removal, installation, disassembly or repair of the SRS airbags
- Repair, removal or modification of the following parts or their surrounding
 - Steering wheel
 - Instrument panel
 - Dashboard
 - Seats
 - Seat upholstery
 - Front pillars
 - Side pillars
 - Rear pillars
 - Roof side rails
 - Front door panels
 - Front door trim
 - Front door speakers
- Modifications to the front door panels (such as making holes in them)
- Repair or modification of the following parts or their surrounding
 - Front fender
 - Front bumper
 - Sides of the vehicle interior
- Installation of the following parts or accessories
 - Bull bars or kangaroo bars

- Snow plows
- Winches
- Modifications to the vehicle's suspension
- Installation of electronic devices such as mobile two-way radios (RF-transmitter) and CD players

– Related Links –

Operation of the fuel pump shut off system(P. 523)

Locking/unlocking the doors using smart entry & start system(P. 57)

Driving assist systems(P. 325)

Location of the interior lights(P. 249)

Using the emergency flashers to warn other drivers(P. 521)

Emergency assistance(P. 450)

Riding with children(P. 24)


7-1. Emergency assistance

ERA-GLONASS/EVAK450

ERA-GLONASS/EVAK1*2**

The Emergency Call system is a device installed on a vehicle to determine its location and movement direction (using GLONASS [Global Navigation Satellite System] and GPS [Global Positioning System] signals), and ensure the generation and transmission of vehicle information (in a nonadjustable form) in case of traffic accidents or other incidents on motor roads in the countries offering emergency notification services. In addition, it ensures two-way voice communication between the vehicle and an ERA-GLONASS/EVAK system operator through cellular networks (GSM). Automatic Emergency Calls (via Automatic Collision Notification) and manual Emergency Calls (by pressing the [SOS] button) can be made to the ERA-GLONASS/EVAK control center. This service is mandatory according to the technical regulations of the Customs Union.

System components

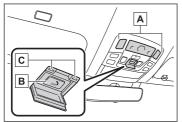

- A Microphone
- B [SOS] button*3
- C Indicator lights

Emergency Notification Services

Automatic Emergency Calls

If any airbag deploys, the system is designed to automatically call the ERA-GLO-NASS/EVAK control center.*4 The answering operator receives the vehicle's location, the time of the incident and the vehicle VIN, and attempts to speak with the vehicle occupants to assess the situation. If the occupants are unable to communicate, the operator automatically treats the call as an emergency and

- *: If equipped
- *1: Operates within regions offering emergency notification services. Ask any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details.
- *2: The system name differs depending on the country.
- *3: This button is intended for communication with the ERA-GLONASS/EVAK system operator. Other SOS buttons available in other systems of a motor vehicle do not relate to the device and are not intended for communication with the ERA-GLO-NASS/EVAK system operator.

contacts the nearest emergency services provider (112 system etc.) to describe the situation and request that assistance be sent to the location.

■ Manual Emergency Calls

In the event of an emergency, press the [SOS] button to call the ERA-GLO-NASS/EVAK control center. *4 The answering operator will determine your vehicle's location, assess the situation, and dispatch the necessary assistance required.

If you accidentally press the [SOS] button, tell the operator that you are not experiencing an emergency.

Indicator lights

When the engine switch is turned to ON, the red indicator light will illuminate for 10 seconds and then the green indicator light will illuminate, indicating that the system is enabled. The indicator lights indicate the following:

- If the green indicator light illuminates and stays on, the system is enabled.
- If the green indicator light flashes twice per second, an automatic or manual Emergency Call is being made.
- If no indicator lights illuminate, the system is not enabled.
- If the red indicator light illuminates at any time other than immediately after the engine switch is turned to ON, the system may be malfunctioning or the backup battery may be depleted. Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- If the red indicator light blinks for approximately 30 seconds during an Emergency Call, the call has been disconnected or the cellular network signal is weak.

The backup battery has lifespan of at least 3 years.

Device test mode

A test mode is provided for to check the performance of the Emergency Call system. To test the device, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

■ Free/Open Source Software Information

This product contains Free/Open Source Software (FOSS). The license information and/or the source code of such FOSS can be found at the following URL.

^{*4:} In some cases, the call cannot be made.

http://www.opensourceautomotive.com/dcm/lexus/19MC/

WARNING

When the Emergency Call may not be made

- It may not be possible to make Emergency Calls in any of the following situations. In such cases, report to emergency services provider (112 system etc.) by other means such as nearby public phones.
 - Even when the vehicle is in the cellular phone service area, it may be difficult to
 connect to the ERA-GLONASS/EVAK control center if the reception is poor or
 the line is busy. In such cases, even though the system attempts to connect to
 the ERA-GLONASS/EVAK control center, you may not be able to connect to
 the ERA-GLONASS/EVAK control center to make Emergency Calls and contact
 emergency services.
 - When the vehicle is out of the cellular phone service area, the Emergency Calls cannot be made.
 - When any related equipment (such as the [SOS] button panel, indicator lights, microphone, speaker, DCM, antenna, or any wires connecting the equipment) is malfunctioning, damaged or broken, the Emergency Call cannot be made.
 - During an Emergency Call, the system makes repeated attempts to connect to
 the ERA-GLONASS/EVAK control center. However, if it cannot connect to the
 ERA-GLONASS/EVAK control center due to poor radio wave reception, the
 system may not be able to connect to the cellular network and the call may finish
 without connecting. The red indicator light will blink for approximately 30 seconds
 to indicate this disconnection.
 - This device may not function if a shock is applied to it.
- If the battery's voltage decreases or there is a disconnection, the system may not be able to connect to the ERA-GLONASS/EVAK control center.

■ When the Emergency Call system is replaced with a new one

The Emergency Call system should be registered. Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

For your safety

- Please drive safely. The function of this system is to assist you in making the Emergency
 Call in case of accidents such as traffic accidents or sudden medical emergencies, and
 it does not protect the driver or passengers in any way. Please drive safely and fasten
 your seatbelts at all times for your safety.
- In case of an emergency, make lives the top priority.
- If you smell anything burning or other unusual smells, leave the vehicle and evacuate to a safe area immediately.

- Since the system detects shocks, the automatic reporting may not always occur synchronized with the operation of the airbag system. (If the vehicle is struck from behind, etc.)
- For safety, do not make the Emergency Call while driving. Making calls during
 driving may cause mishandling of the steering wheel, which may lead to unexpected
 accidents. Stop the vehicle and confirm the safety of your surroundings before making
 the Emergency Call.
- When changing fuses, please use the specified fuses. Using other fuses may cause ignition or smoke in the circuit and lead to a fire.
- Using the system while there is smoke or an unusual smell may cause a fire. Stop using
 the system immediately and consult any authorized Lexus retailer or Lexus authorized
 repairer, or any reliable repairer.

⚠ NOTICE

To prevent damage

Do not pour any liquids onto the [SOS] button panel, etc. and do not impact it.

■ If the [SOS] button panel, speaker or microphone malfunctions during an Emergency Call or manual maintenance check

It may not be possible to make Emergency Calls, confirm the system status, or communicate with the ERA-GLONASS/EVAK control center operator. If any of the above equipment is damaged, please consult any authorized Lexus retailer, Lexus authorized repairer, or any reliable repairer.

8-1. Exterior maintenance and care	Adding washer fluid494
Washing the vehicle456	Air conditioning filter mainte-
8-2. Cleaning and protecting the vehi-	nance495
cle interior	8-5. Tire maintenance
Cleaning the vehicle interior462	Tire maintenance497
Cleaning the areas with satin-	Tire inspection items498
finish metal accents464	Run-flat tire features500
Cleaning the leather areas 465	Operation of the tire pressure
Cleaning the synthetic leather	warning system501
areas	Checking tire inflation pres-
8-3. Maintenance	sure513
Maintenance requirements (except for Azerbaijan, Ar-	Lifting the vehicle with a floor jack515
menia and Russia) 467	Rotating the tires516
Scheduled maintenance out- line (except for Azerbaijan, Armenia and Russia)468	Wheels517
Maintenance requirements (for Azerbaijan, Armenia and Russia)469	
Scheduled maintenance outline (for Azerbaijan, Armenia and Russia)470	
Do-it-yourself maintenance471	
Scheduled maintenance (for Azerbaijan, Armenia and Russia)472	
8-4. Inspection of consumables	
Do-it-yourself service precautions478	
Opening the hood	
Engine compartment482	

Washing the vehicle

WARNING

When washing the vehicle, do not apply water to the inside of the engine compartment.

If water contacts electrical components, it may cause the vehicle to catch fire.

Exhaust gasses cause the exhaust pipes to become guite hot.

⚠ NOTICE

To prevent paint deterioration and corrosion of the body and components (wheels, etc.)

- Wash the vehicle immediately in the following cases:
 - After driving near the sea coast
 - After driving on salted roads
 - If coal tar or tree sap is present on the paint surface
 - If dead insects, insect droppings or bird droppings are present on the paint surface
 - After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
 - If the vehicle becomes heavily soiled with dust or mud
 - If liquids such as benzine or gasoline are spilled on the paint surface
- If the paint is chipped or scratched, have it repaired immediately.
- To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.

To prevent damage to the windshield wiper arms

When lifting the wiper arms away from the windshield, pull the driver side wiper arm upward first, and repeat for the passenger side. When returning the wipers to their original position, do so from the passenger side first.

Perform cleaning in a manner appropriate to each component and its material.

- Working from top to bottom, liberally apply water to the vehicle body, wheel
 wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.

☐ INFORMATION

■ Self-restoring coat

The vehicle body has a self-restoring coating that is resistant to small surface scratches caused by a car wash, etc.

- The coating lasts for 5 to 8 years from when the vehicle is delivered from the plant.
- The restoration time differs depending on the depth of the scratch and outside temperature.

The restoration time may become shorter when the coating is warmed by applying warm water.

- Deep scratches caused by keys, coins, etc., cannot be restored.
- Do not use waxes that contain abrasives.

■ When using a car wash (vehicles with a smart entry & start system)

If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:

 Place the key in a position 2 m (6 ft.) or more separate from the vehicle while the vehicle is being washed.

Take care to ensure that the key is not stolen.

 Set the electronic key to battery-saving mode to disable the smart entry & start system.

Brake pads and calipers

Rust may form if the vehicle is parked with wet brake pads or disc rotors, causing them to stick. Before parking the vehicle after it is washed, drive slowly and apply the brakes several times to dry the parts.

Using an automatic car wash

⚠ NOTICE

When using an automatic car wash, move the wiper lever to the off position.

If the wiper lever is in the AUTO position, the wipers may operate unintentionally and the wiper blades may be damaged.

- Perform the following before washing your vehicle:
 - Fold the mirrors.
 - Vehicles with power back door:

Turn off the power back door.

Start washing from the front of the vehicle.

Extend the mirrors before driving.

- Brushes used in automatic car washes may scratch the vehicle surface, parts (wheel, etc.) and harm your vehicle's paint.
- Depending on the automatic car wash, the rear spoiler may become caught, preventing it from being washed or causing damage to it.
- When it is necessary to set the engine switch to ACC with the shift position held in N, refer to P.146.

Using a high pressure washer to wash the vehicle

⚠ NOTICE

- When washing the vehicle, do not spray any of the cameras or their surrounding area directly. The shock from high pressure water may cause a camera to malfunction.
- Do not bring the tip of the nozzle close to connectors or the boots (rubber or resin cover) of the following parts.

The parts may be damaged if sprayed by high-pressure water.

- Drivetrain related parts
- Steering parts
- Suspension parts
- Brake parts
- Keep the tip of the nozzle at least 30 cm (11.9 in.) away from the vehicle body.
 Otherwise resin parts, such as the moldings, bumpers, etc., may be deformed and damaged. Also, do not continuously spray water on the same place.
- Do not spray the lower part of the windshield continuously. If water enters the air conditioning system intake located near the lower part of the windshield, the air conditioning system may not operate correctly.
- Do not wash the underside of the vehicle using a high pressure washer.

When using a high pressure washer, as water may enter the cabin, do not bring the tip of the nozzle near the gaps around the doors or perimeter of the windows, or spray these areas continuously.

Cleaning the wheels and wheel ornaments

Perform the following:

Remove any dirt immediately using a neutral cleaning agent.

- Wash detergent off with water immediately after use.
- To protect the finish from damage, make sure to observe the following precautions.
 - Do not use acidic, alkaline or abrasive cleaners
 - Do not use hard brushes
 - Do not use detergent on the wheels when they are hot, such as after driving or parking in hot weather

Cleaning the bumpers

WARNING

If the paint of the rear bumper is chipped or scratched, the following systems may not function correctly. If this occurs, consult any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

- Lexus Safety System +
- BSM*
- ARFHL (Automatic Rear Flashing Hazard Lights)*
- Safe Exit Assist (with door opening control)*
- RCTA*
- PKSB*

Do not scrub with abrasive cleaners.

Cleaning and protecting the plated portions

If dirt cannot be removed, clean the parts as follows:


- Use a soft cloth dampened with an approximately 5 % solution of neutral detergent and water to clean the dirt off.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture.
- To remove oily deposits, use alcohol wet wipes or a similar product.

■ Black stainless steel window moldings*

The stainless steel window moldings are made of black oxide coated stainless steel.

^{*:} If equipped

When cleaning the vehicle, do not scrub the moldings with an abrasive cleaner as their finish may be damaged or the color may change.

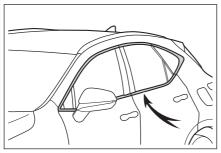

Cleaning the exterior lights

⚠ NOTICE


- Wash carefully. Do not use organic substances or scrub with a hard brush.
 Doing so may damage the surface of the lights.
- Do not apply wax to the lights.
 Wax may damage the lenses.

Cleaning the windshield

WARNING

Move the wiper lever to the off position.

If the wiper lever is in the AUTO position, the wipers may operate unexpectedly in the following situations, possibly leading serious injury from a hand being caught, or damage to the wiper blades.

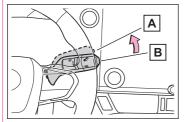



- When the upper part of the windshield where the raindrop sensor is located is touched by hand
- When a wet rag or similar is held close to the raindrop sensor

- If something bumps against the windshield
- If you directly touch the raindrop sensor body or if something bumps into the raindrop sensor

■ Front side windows water-repellent coating (vehicles with water-repellent coating)

- The effectiveness of the water-repellent coating can be extended by paying attention to the following.
 - Remove any dirt, etc., from the front side windows regularly.
 - Do not allow dirt and dust to accumulate on the windows.
 If dirty, clean the windows with a soft, damp cloth as soon as possible.
 - Do not use wax or glass cleaners that contain abrasives when cleaning the windows.
 - Do not use any metallic objects to remove condensation build up.
- When the water-repellent performance has become insufficient, the coating can be repaired.

Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details.

Waxing the vehicle

Wax the vehicle when the waterproof coating has deteriorated.

If water does not bead on a clean surface, apply wax when the vehicle body is cool.

Cleaning the vehicle interior

WARNING

Water in the vehicle

- Do not splash or spill liquid in the vehicle. Doing so may cause electrical components, etc., to malfunction or catch fire.
- Do not get any of the SRS components or wiring in the vehicle interior wet.
 An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.

Cleaning the interior (especially instrument panel)

Do not use wax polish or a polishing cleaner on the instrument panel. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.

∧ NOTICE

Cleaning solvents

- Do not use the following cleaning solvents, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
 - Areas other than the seats: Organic substances such as benzine or gasoline, alkaline or acidic solutions, dye, and bleach
 - Seats: thinner, benzine, alcohol, or alkaline or acidic solutions
- Do not use wax polish or a polishing cleaner. The painted surfaces of the instrument panel or other interior parts may be damaged.

■ Water on the floor

Do not wash the vehicle floor with water.

If water contacts audio system or other electrical components under the floor carpet, it may cause the vehicle to malfunction. Water may also cause the body to rust.

When cleaning the inside of the windshield

Do not allow glass cleaner to contact the lens of the front camera. Also, do not touch the lens.

Cleaning the inside of the windshield and rear window

 Do not use glass cleaners to clean the rear window, as this may cause damage to the rear window defogger heater wires or antenna. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires or antenna.

⚠ NOTICE

• Be careful not to scratch or damage the heater wires or antenna.

Perform cleaning in a manner appropriate to each component and its material.

- Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.
- If dirt cannot be removed, wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.

Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

☐ INFORMATION

Shampooing the carpets

Excellent results can be obtained by keeping the carpet as dry as possible. When cleaning, use a commercially available foaming-type cleaner.

Use a sponge or brush to apply the foam and rub it in overlapping circles. Do not use water. Wipe the surface to remove the cleaner and dirt and let it dry.

Handling the seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.

Cleaning the areas with satin-finish metal accents

- Remove dirt using a water-dampened soft cloth or synthetic chamois.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture.

■ Cleaning the areas with satin-finish metal accents

The metal areas use a layer of real metal for the surface. It is necessary to clean them regularly. If dirty areas are left uncleaned for long periods of time, they may be difficult to clean.

Cleaning the leather areas

⚠ NOTICE

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

- Remove any dust or dirt from leather surfaces immediately.
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or containing wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.
- Remove dirt and dust using a vacuum cleaner.
- Wipe off any excess dirt and dust with a soft cloth dampened with diluted deteraent.

Use a diluted water solution of approximately 5% neutral wool detergent.

- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded and ventilated area.

☐ INFORMATION

Caring for leather areas

Lexus recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

Cleaning the synthetic leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
- Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

Maintenance requirements (except for Azerbaijan, Armenia and Russia)

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. Lexus recommends the following maintenance:

WARNING

If your vehicle is not properly maintained

Improper maintenance could result in serious damage to the vehicle and possible death or serious injury.

Handling of the battery

Battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling.

☐ INFORMATION

■ Where to go for maintenance service?

In order to maintain your vehicle in the best possible condition, Lexus recommends that maintenance service operations as well as other inspections and repairs be carried out by authorized Lexus retailers or Lexus authorized repairers, or any reliable repairers. For repairs and services covered by your warranty, please visit an authorized Lexus retailer or repairer, who will use genuine Lexus parts in repairing any difficulties you may encounter. There can also be advantages in utilizing authorized Lexus retailer or repairers for non-warranty repairs and services, as members of the Lexus network will be able to expertly assist you with any difficulties you may encounter.

Your Lexus retailer or Lexus authorized repairer, or any reliable repairer will perform all of the scheduled maintenance on your vehicle reliably and economically due to their experience with Lexus vehicles.

Scheduled maintenance outline (except for Azerbaijan, Armenia and Russia)

Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For full details of your maintenance schedule, refer to the "Lexus Service Booklet" or "Lexus Warranty Booklet".

Resetting the engine oil change message

After the engine oil has been replaced, the engine oil maintenance data should be reset. Peform the following procedure:

- 1 Select the 🌣 on the center display.
- 2 Select [Vehicle customise].
- 3 Select [Utility].
- 4 Select [Oil maintenance].
- 5 Select [Reset].

"The data has been reset." will be displayed on the center display when the reset procedure has been completed.

Maintenance requirements (for Azerbaijan, Armenia and Russia)

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. Lexus recommends the following maintenance:

WARNING

If your vehicle is not properly maintained

Improper maintenance could result in serious damage to the vehicle and possible death or serious injury.

■ Handling of the 12-volt battery

12-volt battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling.

Scheduled maintenance outline (for Azerbaijan, Armenia and Russia)

 Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

The interval for scheduled maintenance is determined by the odometer reading or the time interval, whichever comes first, shown in the schedule.

Maintenance beyond the last period should be performed at the same intervals.

• Where to go for the maintenance service?

It makes good sense to take your vehicle to your local Lexus dealer for the maintenance service as well as other inspections and repairs.

Lexus technicians are well-trained specialists receiving the latest service information through technical bulletins, service tips and in-dealership training programs. They learn to work on all Lexus models before they work on your vehicle, rather than while they are working on it. Doesn't that seem like the best way?

Your Lexus dealer has invested a lot of money in special Lexus tools and service equipment. It helps them to do the job better and at less cost.

Your Lexus dealer's service department will perform all of the scheduled maintenance on your vehicle reliably and economically.

Rubber hoses, such as for the cooling and heater system, brake system, and fuel system, should be inspected by a qualified technician according to the Lexus maintenance schedule.

Rubber hoses are particularly important maintenance items. Have any deteriorated or damaged hoses replaced immediately. Note that rubber hoses will deteriorate with age, resulting in swelling, chafing or cracking.

Resetting the engine oil change message

After the engine oil has been replaced, the engine oil maintenance data should be reset. Peform the following procedure:

- 1 Select the 🌣 on the center display.
- 2 Select [Vehicle customise].
- 3 Select [Utility].
- 4 Select [Oil maintenance].
- 5 Select [Reset].

"The data has been reset." will be displayed on the center display when the reset procedure has been completed.

Do-it-yourself maintenance

What about do-it-yourself maintenance?

Many maintenance items are easy to do yourself if you have a little mechanical ability and a few basic automotive tools.

Note, however, that some maintenance tasks require special tools and skills. These are best performed by qualified technicians. Even if you're an experienced do-it-yourself mechanic, we recommend that repairs and maintenance be conducted by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. Any authorized Lexus retailer or repairer will keep a record of maintenance, which could be useful should you ever require Warranty Service. Should you choose to select a qualified and equipped professional other than an authorized Lexus repairer to service or maintain your vehicle, we recommend that you request that a record of maintenance be kept.

Does your vehicle need repairs?

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine misfire (or misses), stumbling or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle
 However, water dripping from the air conditioning system after use is normal.
- Change in exhaust sound
 This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driven straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches the floor, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal

If you notice any of these clues, take your vehicle to any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer as soon as possible. Your vehicle may need adjustment or repair.

Scheduled maintenance (for Azerbaijan, Armenia and Russia)

Maintenance schedule requirements

Perform maintenance by the schedule as follows:

Your vehicle needs to be serviced according to the normal maintenance schedule. (See \rightarrow P.472)

If you mainly operate your vehicle under one or more of the special operating conditions below, some of the maintenance schedule items need to be serviced more frequently in order to keep your vehicle in good condition. (See \rightarrow P.475)

A. Road Conditions

- 1. Operating on rough or muddy roads, or roads with melted snow or waterlogged roads.
- 2. Operating on dusty roads. (Roads in areas where their pavement rate is low, or a cloud of dust often arises and the air is dry.)
- 3. Operating on road which has road salt applied. (NX250/NX350 only)

B. Driving Conditions

- 1. Heavily loaded vehicle. (For example, using a car top carrier and so forth.)
- 2. Extensive idling and/or low speed driving for a long distance such as police, professional/private use like taxi or door-to-door delivery use.
- 3. Continuous high speed driving (80% or more of maximum vehicle speed) for over 2 hours.

Maintenance schedule

Maintenance operations:

I = Inspect, correct or replace as necessary

R = Replace, change or lubricate

T = Tighten to specified torque

SERVICE INTERVAL:	ODOMETER	ODOMETER READING								
(Odometer reading or months, whichever	x1000 km	10	2 0	3	4 0	5 0	6	70	8	MONTH S
comes first.)	x1000 miles	6	12	18	24	3 0	3 6	42	4 8	
BASIC ENGINE COMPONENTS										

SERVI	CE INTERVAL: ODOMETER READING										
	(Odometer reading or months, whichever	x1000 km	10	2 0	3	4 0	5 0	6	70	8	MONTH S
comes		x1000 miles	6	12	18	24	3	3 6	42	4 8	3
1	Drive belts			I		ı		ı		I	24
2	Engine oil		Replace when the maintenance reminder appears. ⁽¹⁾								
3	Engine oil filter			lace rs. ⁽¹⁾	whe	n the	mair	ntena	nce	remi	nder ap-
4	Cooling and hea	ater system ⁽²⁾									24
5	Engine coolant (Including interco					I				1	-
6	6 Exhaust pipes and mountings			ı				-			12
IGNIT	ION SYSTEM										
7	Spark plugs	NX200/ NX250 Replace every 100000 km (60000					miles)				
		NX350						R			-
8	Battery							12			
FUEL /	AND EMISSION	CONTROL SY	/STE	MS							
9	Fuel filter ⁽⁴⁾									R	96
10	Fuel injection sys	Add injector cleaner to the fuel tank every 10000 km (6000 miles)					-				
11	Air cleaner filter			I		R		I		R	l: 24 R:48
12	Fuel tank cap, fu nections and fue valve ⁽²⁾					I				I	24
13	Charcoal canist	er								I	24
CHAS	SIS AND BODY										

SERVI	ICE INTERVAL: ODOMETER READING										
	(Odometer reading or months, whichever	x1000 km	10	2 0	3	4 0	5 0	6	70	8	MONTH S
comes			6	12	18	24	3 0	3 6	42	4 8	
14	Brake pedal and parking brake ⁽⁷⁾			I	I	1	I	I	1	1	6
15	Brake pads and	discs	ı	I	I	ı	ı	ı	ı	ı	6
16	Brake fluid			I	I	R	I	I	I	R	l: 6 R:24
17	Brake pipes and	hoses		I		I		I		1	12
18	Vacuum pump for brake boos- ter ⁽⁸⁾ Inspect every 200000 km (120000 miles)							-			
19	Steering wheel, steering gear bo	-		I		I		ı		I	12
20	Drive shaft boots			I		I		I		I	24
21	Suspension ball covers	joints and dust		I		I		I		-	12
22	Automatic trans (including front o					1				1	24
23	Transfer oil ⁽⁹⁾			ı		R		I		R	l:12 R:48
24	Rear differential	oil ⁽⁹⁾		ı		R		I		R	l: 12 R:48
25	Propeller shaft ⁽⁹))		T		T		Т		T	12
26	Front and rear s	uspension		I		I		ı		I	12
27	Tires and inflatio	n pressure	ı		I	ı	I	I	I	I	6
28	Lights, horns, wi ers	pers and wash-	ı	ı	I	I	ı	I	ı	-	6
29	Air conditioner	filter	R	R	R	R	R	R	R	R	12

⁽¹⁾ Replace both the engine oil and oil filter, even when the maintenance reminder does not appear, after 12 months have passed, or when driven over $10000 \ km \ (6000$

miles) since the last oil change. This may cause the maintenance reminder appear even when driven less than 10000 km (6000 miles).

Replace both engine oil and oil filter every $5000 \, \mathrm{km} \, (3000 \, \mathrm{miles})$ or $6 \, \mathrm{months}$, in which the vehicle is mainly driven in dirt or dusty roads, when the maintenance reminder does not appear.

- $\ensuremath{^{(2)}}$ After 80000 km (48000 miles) or 48 months inspection, inspect every 20000 km (12000 miles) or 12 months.
- $^{(3)}$ First replace at 160000 km (100000 miles), then replace every 80000 km (50000 miles).
- (4) Including the filter in fuel tank.
- (5) Toyota genuine fuel injector cleaner or equivalent.
- (6) For Azerbaijan and Armenia only.
- (7) Parking brake inspection is not necessary.
- (8) Replace the vacuum pump vane and the vacuum pump vane caps with new ones and never reuse the vacuum pump vane and the vacuum pump vane caps.
- (9) NX250/NX350 only

Additional maintenance schedule

Refer to the following table for normal maintenance schedule items requiring more frequent service specific to the type of severe conditions. (For outline, see \rightarrow P.472)

A-1: Operating on rough or muddy roads, or roads with melted snow or waterlogged roads.						
Inspection ⁽¹⁾ of brake pads and discs	Every 5000 km (3000 miles) or 3 months					
Inspection ⁽¹⁾ of brake pipes and hoses	Every 10000 km (6000 miles) or 6 months					
Inspection ⁽¹⁾ of suspension ball joints and dust covers	Every 10000 km (6000 miles) or 6 months					
Inspection ⁽¹⁾ of drive shaft boots	Every 10000 km (6000 miles) or 12 months					
Tightening of bolts of propeller shaft	Every 10000 km (6000 miles) or 6 months					
Inspection ⁽¹⁾ of steering wheel, linkage and steering gear box	Every 5000 km (3000 miles) or 3 months					
Inspection ⁽¹⁾ of front and rear suspension	Every 10000 km (6000 miles) or 6 months					

A-1: Operating on rough or muddy roads, or roads with melted snow or waterlogged roads.					
Tightening of bolts and nuts on chassis and $\operatorname{body}^{(2)}$	Every 10000 km (6000 miles) or 6 months				

- (1) Perform correction or replacement as necessary.
- $\hbox{\ensuremath{$(2)$} For seat mounting bolts, front and rear suspension member retaining bolts.}}\\$

A-2: Operating on dusty roads. (Roads in areas where their pavement rate is low, or a cloud of dust often arises and the air is dry.)						
Inspection ⁽¹⁾ or replacement of air cleaner filter	l: Every 2500 km (1500 miles) or 3 months R: Every 40000 km (24000 miles) or 48 months					
Inspection ⁽¹⁾ of brake pads and discs	Every 5000 km (3000 miles) or 3 months					
Tightening of bolts of propeller shaft	Every 10000 km (6000 miles) or 6 months					

(1) Perform correction or replacement as necessary.

A-3. Operating on road which has road salt applied. (NX250/NX350 only)						
Tightening of bolts of propeller shaft	Every 10000 km (6000 miles) or 6 months					

B-1: Heavily loaded vehicle. (For example, using a car top carrier and so forth.)						
Inspection ⁽¹⁾ of brake pads and discs	Every 5000 km (3000 miles) or 3 months					
Inspection ⁽¹⁾ or replacement of Automatic transmission fluid (including front differential)	I: Every 40000 km (24000 miles) or 24 months R: Every 80000 km (48000 miles) or 48 months					
Replacement of transfer oil (NX250/ NX350 only)	Every 20000 km (12000 miles) or 24 months					
Replacement of rear differential oil (NX250/NX350 only)	Every 20000 km (12000 miles) or 24 months					
Tightening of bolts of propeller shaft	Every 10000 km (6000 miles) or 6 months					

B-1: Heavily loaded vehicle. (For example, using a car top carrier and so forth.)					
Inspection ⁽¹⁾ of front and rear suspension	Every 10000 km (6000 miles) or 6 months				
Tightening of bolts and nuts on chassis and $\operatorname{body}^{(2)}$	Every 10000 km (6000 miles) or 6 months				

- (1) Perform correction or replacement as necessary.
- (2) For seat mounting bolts, front and rear suspension member retaining bolts.

B-2: Extensive idling and/or low speed driving for a long distance such as police, professional/private use like taxi or door-to-door delivery use.						
Inspection ⁽¹⁾ of brake pads and discs	Every 5000 km (3000 miles) or 3 months					
Inspection ⁽¹⁾ or replacement of Automatic transmission fluid (including front differential)	l: Every 40000 km (24000 miles) or 24 months R: Every 80000 km (48000 miles) or 48 months					

(1) Perform correction or replacement as necessary.

B-3: Continuous high speed driving (80% or more of maximum vehicle speed) for over 2 hours.							
Inspection ⁽¹⁾ or replacement of Automatic transmission fluid (including front differential)	l: Every 40000 km (24000 miles) or 24 months R: Every 80000 km (48000 miles) or 48 months						
Replacement of transfer oil (NX250/ NX350 only)	Every 20000 km (12000 miles) or 24 months						
Replacement of rear differential oil (NX250/NX350 only)	Every 20000 km (12000 miles) or 24 months						

(1) Perform correction or replacement as necessary.

Do-it-yourself service precautions

If you perform maintenance by yourself, be sure to follow the correct procedure as given in the section for each part.

WARNING

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically charged. Observe the following precautions.

When working on the engine compartment

- Keep hands, clothing and tools away from the moving fan and engine drive belt.
- Be careful not to touch the engine, radiator, exhaust manifold, etc., right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
- Do not smoke, cause sparks or expose an open flame to fuel or the battery. Fuel and battery fumes are flammable.
- Be extremely cautious when working on the battery. It contains poisonous and corrosive sulfuric acid.
- Take care because brake fluid can harm your hands or eyes and damage painted surfaces. If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately. If you still experience discomfort, consult a doctor.

■ When working near the electric cooling fan or radiator grille

Be sure the engine switch is OFF.

With the engine switch in ON, the electric cooling fan may automatically start to run if the air conditioning is on or the coolant temperature is high.

Safety glasses

Wear safety glasses to prevent flying or falling material, fluid spray, etc., from getting in your eyes.

⚠ NOTICE

If you remove the air cleaner filter

Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.

If the fluid level is low or high

It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.

⚠ NOTICE

If the reservoir needs frequent refilling, it may indicate a serious problem.

Maintenance

Items which require maintenance and the necessary parts and tools to perform maintenance on those items are as follows:

■ Battery condition

- Warm water
- Baking soda
- Grease
- Conventional wrench (for terminal clamp bolts)
- Distilled water

■ Engine/intercooler coolant level

• "Toyota Super Long Life Coolant" or a similar high quality ethylene glycol-based non-silicate, non-amine, nonnitrite and non-borate coolant with long-life hybrid organic acid technology

"Toyota Super Long Life Coolant" is pre-mixed with 50% coolant and 50% deionized water.

• Funnel (used only for adding coolant)

■ Engine oil level

- "Toyota Genuine Motor Oil" or equivalent
- Rag or paper towel
- Funnel (used only for adding engine oil)
- **■** Fuses

Fuse with same amperage rating as original

Light bulbs

Bulb with same number and wattage rating as original

■ NX350: Radiator, condenser and intercooler radiator

NX200/NX250: Radiator and condenser


■ Tire inflation pressure

- Tire pressure gauge
- Compressed air source
- Washer fluid
- Water or washer fluid containing antifreeze (for winter use)
- Funnel (used only for adding water or washer fluid)


Opening the hood

1 Pull the hood lock release lever.

The hood will pop up slightly.

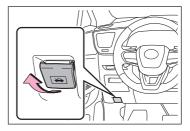

2 Push the auxiliary catch lever to the left and lift the hood.

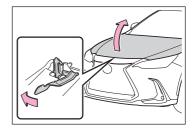

☐ INFORMATION

■ Closing the hood

When closing the hood, make sure to release it from a slightly high position (approximately $20\ cm$) to close it.

If the hood is pushed by hand to close it, it may not lock on both sides.

WARNING

■ Pre-driving check


Check that the hood is fully closed and locked.

If the hood is not locked properly, the hood may suddenly open while driving.

Engine compartment


Engine compartment components

NX200/NX250

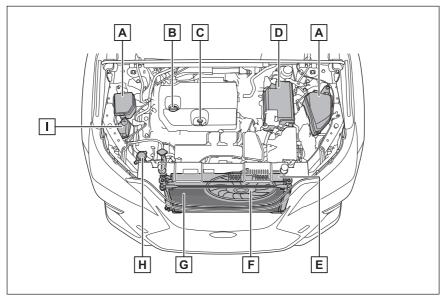

- A Fuse boxes \rightarrow P.625
- B Engine oil filler cap \rightarrow P.486
- \square Engine oil level dipstick \rightarrow P.484
- D Battery \rightarrow P.489
- E Radiator \rightarrow P.489
- F Electric cooling fan
- G Condenser \rightarrow P.489
- H Washer fluid tank \rightarrow P.494
- I Engine coolant reservoir \rightarrow P.487

▶ NX350

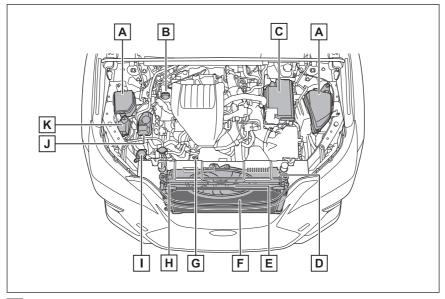

- A Fuse boxes \rightarrow P.625
- B Engine oil filler cap \rightarrow P.486
- $\mid C \mid Battery \rightarrow P.489$
- D Radiator \rightarrow P.489
- E Electric cooling fan
- F Condenser \rightarrow P.489
- G Engine oil level dipstick \rightarrow P.484
- H Intercooler radiator \rightarrow P.489
- \square Washer fluid tank \rightarrow P.494
- J Intercooler coolant reservoir \rightarrow P.487
- K Engine coolant reservoir $\rightarrow P.487$

Checking and adding the engine oil

☐ INFORMATION

■ Engine oil consumption

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be added in between oil maintenance intervals.

8-4. Inspection of consumables

- When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- If low quality oil or oil of an inappropriate viscosity is used
- When driving at high engine speeds or with a heavy load, when towing (vehicles with towing package only), or when driving while accelerating or decelerating frequently
- When leaving the engine idling for a long time, or when driving frequently through heavy traffic

WARNING

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation and skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose
 of used oil and filters in household trash, in sewers or onto the ground. Call any
 authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer, service
 station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

⚠ NOTICE

When replacing the engine oil

When replacing the engine oil, observe the following precautions.

- Be careful not to spill engine oil on the vehicle components.
- Avoid overfilling, or the engine could be damaged.
- Check the oil level on the dipstick every time you refill the vehicle.
- Be sure the engine oil filler cap is properly tightened.

If oil is spilled on the engine cover

To prevent the engine cover from being damaged, remove any engine oil from the engine cover as soon as possible using a neutral detergent. Do not use an organic solvent such as brake cleaner.

Checking the engine oil


With the engine at operating temperature and turned off, check the oil level on the dipstick.

⚠ NOTICE


To prevent serious engine damage, check the oil level on a regular basis.

- Park the vehicle on level ground. After warming up the engine and turning off the engine, wait more than 5 minutes for the oil to drain back into the bottom of the engine.
- Holding a rag under the end, pull the dipstick out.


► NX200/NX250

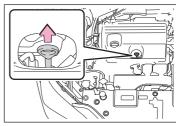

► NX350

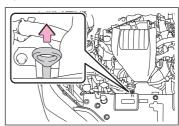

- 3 Wipe the dipstick clean.
- Reinsert the dipstick fully. 4
- Holding a rag under the end, pull the dipstick out and check the oil level.

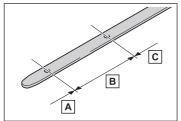

- A Low
- B Normal
- C | Excessive

The shape of the dipstick may differ depending on the type of vehicle or engine.

Wipe the dipstick and reinsert it fully.

Checking the oil type and preparing the items needed

Make sure to check the oil type and prepare the items needed before adding oil.

8-4. Inspection of consumables

- Engine oil selection
- Oil quantity (Low → Full)
 1.5 L (1.6 qt., 1.3 lmp.qt.)
- Items

Clean funnel

– Related Links -

Lubrication system (NX350)(P. 636)


Lubrication system (NX250)(P. 637)

Lubrication system (NX200)(P. 639)


Adding engine oil

If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.


▶ NX250

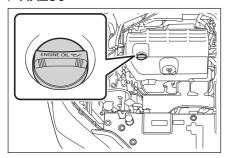

► NX200

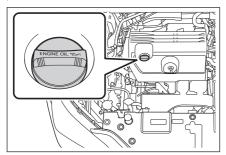

▶ NX350

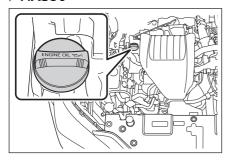


- 1 Remove the oil filler cap by turning it counterclockwise.
- 2 Add engine oil slowly, checking the dipstick.
- 3 Install the oil filler cap by turning it clockwise.

Checking the coolant

The coolant level is satisfactory if it is between the [FULL] and [LOW] lines on the reservoir when the engine is cold.


■ Engine coolant reservoir

► NX200/NX250

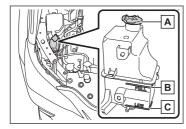

- A Reservoir cap
- B [FULL] line
- C [LOW] line


► NX350

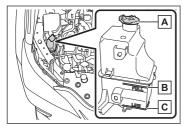

- A Reservoir cap
- B [FULL] line
- C [LOW] line

If the level is on or below the [LOW] line, add coolant up to the [FULL] line.

■ Intercooler coolant reservoir (NX350 only)

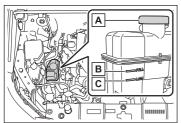

- A Reservoir cap
- B [FULL] line
- C [LOW] line

If the level is on or below the [LOW] line, add coolant up to the [FULL] line.

■ Coolant selection

Only use "Toyota Super Long Life Coolant" or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

"Toyota Super Long Life Coolant" is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: -35° C [-31°F])

For more details about coolant, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

If the coolant level drops within a short time of replenishing

Visually check the radiator, hoses, engine coolant reservoir cap, drain cock and water pump.

If you cannot find a leak, have any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer, test the cap and check for leaks in the cooling system.

WARNING

When the engine is hot, do not remove the engine coolant reservoir cap or intercooler coolant reservoir cap (NX350 only).

The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.

⚠ NOTICE

When adding coolant

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

If you spill coolant

Be sure to wash it off with water to prevent it from damaging parts or paint.

Checking the radiator, condenser and intercooler radiator*

Check the radiator, condenser and intercooler and clear away any foreign objects.

If either of the above parts is extremely dirty or you are not sure of their condition, have your vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

WARNING

When the engine is hot

Do not touch the radiator, condenser or intercooler as they may be hot and cause serious injuries, such as burns.

When the electric cooling fan are operating

Vehicles without smart entry & start system: Do not touch the engine compartment. The electric cooling fan may keep rotating for about 3 minutes even after the engine switch is OFF. With the engine switch in ON, the electric cooling fan may automatically start to run if the air conditioning is on or the coolant temperature is high. Be sure the engine switch is OFF when working near the electric cooling fan or radiator grille.

Vehicles with smart entry & start system: Do not touch the engine compartment. With the engine switch in ON, the electric cooling fan may automatically start to run if the air conditioning is on or the coolant temperature is high. Be sure the engine switch is OFF when working near the electric cooling fan or radiator grille.

Battery

WARNING

Chemicals in the battery

Batteries contain poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the battery:

- Do not cause sparks by touching the battery terminals with tools.
- Do not smoke or light a match near the battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the battery.
- Keep children away from the battery.

^{*:} If equipped

WARNING

Where to safely charge the battery

Always charge the battery in an open area. Do not charge the battery in a garage or closed room where there is insufficient ventilation.

Emergency measures regarding electrolyte

- If electrolyte gets in your eyes, flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin, wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes, it may soak through your clothing on to your skin.
 Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte, drink a large quantity of water or milk and get emergency medical attention immediately.

When there is insufficient battery fluid


Do not use if there is insufficient fluid in the battery. There is a possible danger that the battery may explode.

Checking the battery

Battery exterior


Make sure that the battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

► NX200/NX250

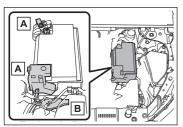

- A Terminals
- B Hold-down clamp

▶ NX350

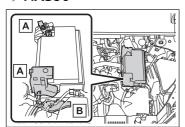

- A Terminals
- B Hold-down clamp

Before recharging

When recharging, the battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following precautions before recharging:

- If recharging with the battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the battery.

⚠ NOTICE

When recharging the battery, make sure that the engine is not running and all accessories are off.

After recharging or reconnecting the battery(vehicles with the smart entry & start system)

The engine may not start. Follow the procedure below to initialize the system.

- 1 Change the shift position to P.
- 2 Open and close any of the doors.
- 3 Restart the engine.

$\ \ \square$ Information

- Unlocking the doors using the smart entry & start system may not be possible immediately after reconnecting the battery. If this happens, use the wireless remote control or the mechanical key to lock/unlock the doors.
- Start the engine with the engine switch in ACC. The engine may not start with the engine switch turned off. However, the engine will operate normally from the second attempt.


• The engine switch mode is recorded by the vehicle. If the battery is disconnected and reconnected, the vehicle will return the engine switch mode to the status it was in before the battery was disconnected. Make sure to turn off the engine switch before disconnecting the battery. Take extra care when connecting the battery if the engine switch mode prior to the battery being disconnected is unknown.

If the system will not start even after multiple attempts at all the methods above, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Checking battery fluid

Check that the level is between the [UPPER LEVEL] and [LOWER LEVEL] lines.


▶ NX250

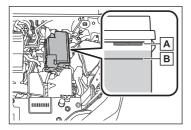

- A [UPPER LEVEL] line
- B [LOWER LEVEL] line

If the battery fluid level is at or below the [LOWER LEVEL] line, add distilled water.


▶ NX350

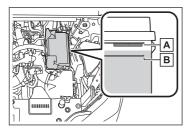

- A [UPPER LEVEL] line
- B [LOWER LEVEL] line

 If the battery fluid level is at or below the
 [LOWER LEVEL] line, add distilled water.

▶ NX200

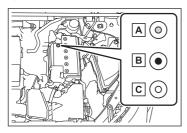

- A Blue: Good condition
- B Red: Charging is necessary.

 Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- C Clear: Not working properly.

 Not working properly. Add distilled water.


Adding distilled water

⚠ NOTICE

When adding distilled water, avoid overfilling the battery. Spilled battery fluid may cause corrosion.

- 1 Remove the vent plug.
- 2 Add distilled water.

If the [UPPER LEVEL] line cannot be seen, check the battery fluid level by looking directly at the cell.

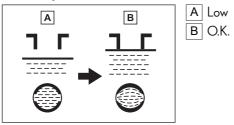


Put the vent plug back on and close it securely.


Adding washer fluid

If washer fluid does not spray from any of the washers or "Windshield Washer Fluid Low" is displayed on the multi-information display, the washer fluid bottle may be empty. Add washer fluid.

▶ NX200/NX250

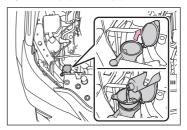

▶ NX350

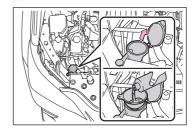

WARNING

Do not add washer fluid when the engine is hot or running.

As washer fluid contains alcohol, it may catch fire if spilled on the engine, etc.

⚠ NOTICE

Do not use any fluid other than washer fluid

Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces, as well as damaging the pump leading to problems of the washer fluid not spraying.

Diluting washer fluid

Dilute washer fluid with water as necessary. Refer to the freezing temperatures listed on the label of the washer fluid bottle.

Air conditioning filter maintenance

The air conditioning filter must be changed regularly to maintain air conditioning efficiency.

Checking interval

Inspect and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, early replacement may be required.

- If air flow from the vents decreases dramatically, the air conditioning filter may be clogged. Check the filter and replace it if necessary.
 - (Except for Azerbaijan, Armenia and Russia: For scheduled maintenance information, please refer to the "Lexus Service Booklet" or "Lexus Warranty Booklet".)
- If air fresheners, etc. are used inside the vehicle, the service life of the deodorizing function of the air conditioning filter with deodorizing function may be reduced significantly. If odors from the air conditioning system become a concern, replace the filter.

Replacing the air conditioning filter




⚠ NOTICE

Observe the following precautions when using the air conditioning system.

Make sure that a filter is always installed. Using the air conditioning system without a filter may cause damage to the system.

- Turn the engine switch off.
- Open the glove box and disconnect the damper stay from the pin.

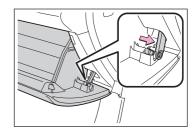


8-4. Inspection of consumables


3 Push both the sides of the glove box inward and disengage each claw on the upper side. Then, pull the glove box to disengage the claws on the lower side and remove the glove box.



4 Unlock the filter cover (A), pull the filter cover out of the claws (B), and remove the filter cover.

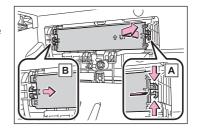


5 Remove the filter case.

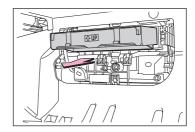

6 Remove the air conditioning filter from the filter case and replace it with a new one.

The [\mathcal{L} **UP**] marks shown on the filter should be pointing up.

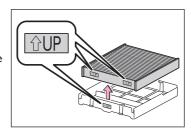

Tire maintenance

Replace or rotate tires in accordance with maintenance schedules and treadwear.



M NOTICE

Take particular care when driving on uneven rough roads with cracks and potholes.

These conditions may cause loss of tire inflation pressure, reducing the cushioning ability of the tires. Driving on rough roads may also cause damage to the tires themselves, as well as the vehicle's wheels and body.

Tire inspection items

WARNING

When inspecting or replacing the tires

Observe the following precautions.

Failure to do so may lead to damage to the drivetrain or unstable handling.


- Do not mix tires of different makes, models or tread patterns. Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Lexus.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle.
 Do not use tires if you do not know how they were used previously.
- Vehicles with a compact spare tire: Do not tow if your vehicle has a compact spare tire
 installed.

⚠ NOTICE

If tire inflation pressure becomes low while driving, do not continue driving. Otherwise the tire or wheel may be damaged.

Check if the treadwear indicators are showing on the tires. Also check the tires for uneven wear, such as excessive wear on one side of the tread.

Check the spare tire condition and pressure if not rotated.

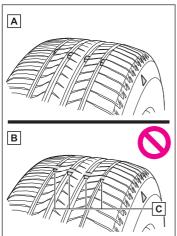

- A New tread
- B Worn tread
- C Treadwear indicator

The location of treadwear indicators is shown by a [TWI] or \triangle mark, etc., molded into the sidewall of each tire.

Replace the tires if the treadwear indicators are showing on a tire.

■ When to replace your vehicle's tires

Tires should be replaced if:

- The treadwear indicators are showing on a tire.
- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage.
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage.

If you are not sure, consult with any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

■ Tire life

Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used or damage is not obvious.

■ If the tread on snow tires wears down below 4 mm (0.16 in.)


The effectiveness of the tires as snow tires is lost.

Run-flat tire features

When run-flat tires are installed, the vehicle can be driven for a maximum of $80\,\mathrm{km}$ ($50\,\mathrm{miles}$) at a speed below $80\,\mathrm{km/h}$ ($50\,\mathrm{mph}$) after any tire goes flat. (However, the vehicle speed may not increase to near $80\,\mathrm{km/h}$ [$50\,\mathrm{mph}$] depending on weather or driving conditions.)

Make sure to replace the flat tire before the vehicle has been driven for near $80 \, \text{km}$ ($50 \, \text{miles}$). Also, do not use a repaired tire.

A run-flat tire has a R mark on the side wall.

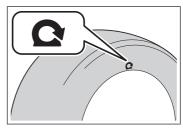

Precautions for run-flat tires

- The run-flat tires are for only this vehicle. Do not use the tires on other vehicles.
- Do not mix run-flat tires and normal tires.
- If non-genuine Lexus wheels are used, it may be impossible to sufficiently demonstrate the performance of run-flat tires.


^{*:} If equipped

Operation of the tire pressure warning system


Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

The tire pressure warning system of this vehicle adopts a 2-type warning system.


▶ Multi-information display (vehicles without a head-up display)

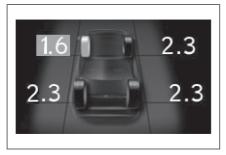

▶ Multi-information display (vehicles with a head-up display)

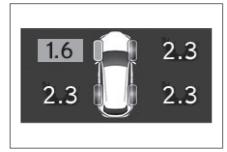

► Center display

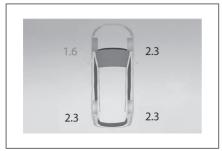

• When "Adjust Pressure" is displayed (Normal Warning)

A warning with the tire pressure warning light and warning buzzer when there is an unknown level of low tire pressure with the appearance of the tire due

to natural air leakage as well as the pressure lowering due to changes in the pressure according to the outside temperature.

• When "Immediately Check tyre when Safe" is displayed (Emergency Warning)

A warning with the tire pressure warning light and warning buzzer when there is a known level of low tire pressure with the appearance of the tire due to pressure suddenly lowering.

However, the system may not be able to detect sudden tire ruptures (bursting, etc.).

• The tire pressure detected by the tire pressure warning system can be displayed on the center display.

☐ INFORMATION

■ Routine tire inflation pressure checks

The tire pressure warning system does not replace routine tire inflation pressure checks.

Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

■ Tire inflation pressure

 It may take a few minutes to display the tire inflation pressure after the engine switch is turned to ON.

It may also take a few minutes to display the tire inflation pressure after inflation pressure has been adjusted.

- Tire inflation pressure changes with temperature. The displayed values may also be different from the values measured using a tire pressure gauge.
- Situations in which the tire pressure warning system may not operate properly
- In the following cases, the tire pressure warning system may not operate properly.
 - If non-genuine Lexus wheels are used.
 - A tire has been replaced with a tire that is not an OE (Original Equipment) tire.
 - A tire has been replaced with a tire that is not of the specified size.
 - Tire chains, etc. are equipped.
 - If a window tint that affects the radio wave signals is installed.
 - If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings
 - If the tire inflation pressure is extremely higher than the specified level.
 - If tires not equipped with tire pressure warning valves and transmitters are used.

- If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer.
- Performance may be affected in the following situations.
 - Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise.
 - When carrying a portable radio, cellular phone, cordless phone or other wireless communication device.

If tire position information is not correctly displayed due to the radio wave conditions, the display may be corrected by changing the location of the vehicle as the radio wave conditions may change.

- When the vehicle is parked, the time taken for the warning to start or go off could be extended.
- When tire inflation pressure declines rapidly for example when a tire has burst, the not to able detect.

Related Links -

Tire pressure(P. 307)

Tire pressure warning light (warning buzzer)(P. 531)

Installing tire pressure warning valves and transmitters

M NOTICE

- Repairing or replacing tires, wheels, tire pressure warning valves, transmitters and tire valve caps
- When removing or fitting the wheels, tires or the tire pressure warning valves and transmitters, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer as the tire pressure warning valves and transmitters may be damaged if not handled correctly.
- Make sure to install the tire valve caps. If the tire valve caps are not installed, water could enter the tire pressure warning valves, corrode the valve, and cause sticking and air leaks.
- When replacing tire valve caps, do not use tire valve caps other than those specified.
 The cap may become stuck.

When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.

When new tire pressure warning valves and transmitters are installed, new ID codes must be registered in the tire pressure warning computer

☐ INFORMATION

When replacing the tires and wheels

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly.

In this case, after driving for about 10 minutes, the tire pressure warning light blinks for 1 minute and stays on to indicate a system malfunction.

Registration of the position of each wheel after performing a tire rotation

It is necessary to register the position of each wheel after performing a tire rotation.

Wheel position registration can be performed by oneself. Wheel position registration is performed by driving forward with moderate left and right turns. However, depending on the driving conditions and driving environment, registration may take some time to complete.

- 1 Park the vehicle in a safe place, turn the engine switch off and wait 15 minutes or more.
- 2 Start the engine.

The wheel position registration procedure cannot be performed while the vehicle is moving.

- 3 Select Property on the center display.
- 4 Select [Vehicle customise].
- 5 Select [Tyre pressure].
- 6 Select [Tyre rotation].
- 7 Select [Continue].

A message indicating that wheel position registration is being performed will be displayed on the multi-information display. "---" will be displayed for the tire inflation pressure of each tire and wheel position registration will begin.

8 Drive straight (with occasional left and right turns) at approximately 40 km/h (25 mph) or more for approximately 10 to 30 minutes.

When wheel position registration is complete, a message indicating that registration has been completed and the inflation pressure of each tire will be displayed on the multi-information display.

Even if it is not possible to drive continuously at approximately 40 km/h (25 mph) or more, registration can be completed by driving for a long time. However, if registration does not complete after driving for 1 hour or more, park the vehicle in a safe place and leave it with the engine switch in ON for approximately 15 minutes or more, and then perform the driving procedure again.

■ When performing wheel position registration

- Normally, wheel position registration can be completed within approximately 30 minutes.
- Wheel position registration is performed while driving at a vehicle speed of approximately 40 km/h (25 mph) or more.

■ Wheel position registration procedure

- If the engine switch is turned off while registering the wheel position, the next time
 the engine switch is turned to ON, the wheel position registration will resume and
 it will not be necessary to restart the procedure.
- While the position of each wheel is being determined and the inflation pressures are not being displayed, if the inflation pressure of a tire drops, the tire pressure warning light will come on.

If the wheel position cannot be registered easily

- In the following situations, wheel position registration may take longer than usual to be completed or may not be possible.
 - Vehicle is not driven at approximately 40 km/h (25 mph) or more
 - Vehicle is driven on unpaved roads
 - If wheel position registration does not complete after driving for 1 hour or more, park the vehicle in a safe place for approximately 15 minutes and then drive the vehicle again.
- If the vehicle is reversed during wheel position registration, all data collected until then will be cleared. Perform driving again.

Setting the tire pressure

In the following situations, it will be necessary to perform the tire inflation pressure setting procedure of the tire pressure warning system.

- When the specified tire inflation pressure has changed, such as due to carried load, etc.
- When the tire inflation pressure is changed such as when the tire size is changed.

If the tire inflation pressure has been adjusted to the specified level, perform the tire inflation setting procedure by selecting specified inflation pressure on the center display.

When the tire inflation pressure is to be other than specified, such as when tires other than the specified size are used, etc., set the tire inflation pressure using the current pressure. Make sure to adjust the tire inflation pressure of each tire to the appropriate level before performing tire pressure setting. The tire pressure warning system operates based on this tire inflation pressure.

- Related Links

Setting by selecting a specified tire inflation pressure(P. 506)

Setting using the current tire inflation pressure (P. 507)

Setting by selecting a specified tire inflation pressure


1 Start the engine.

The tire inflation pressure cannot be set while the vehicle is moving.

- 2 Select point on the center display.
- 3 Select [Vehicle customise].
- 4 Select [Tyre pressure].
- 5 Select [Set indicated air pressure] and then select the desired front and rear tire pressures.
- 6 Select [OK].

The tire pressure warning light will slowly blink ${\bf 3}$ times.

After setting the tire inflation pressure, a message indicating that setting has been completed will be displayed on the multi-information display.

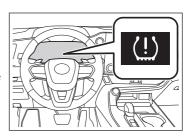

☐ INFORMATION

If the tire inflation pressure cannot be set easily

If the tire pressure warning light does not blink 3 times when starting the tire
inflation pressure setting procedure, the procedure may not have started. Perform
the procedure again from the beginning.

 If tire inflation pressure setting procedure cannot be completed after performing the above procedure, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Setting using the current tire inflation pressure

WARNING

Make sure to adjust the tire inflation pressure of each tire to the appropriate level before performing tire pressure setting. Otherwise, the tire pressure warning light may not illuminate even if the tire inflation pressure drops or may illuminate even though the tire inflation pressure is normal.

INFORMATION

■ Warning performance of the tire pressure warning system

- When performing the tire pressure setting using the current tire inflation pressure, the warning timing of the tire pressure warning system will vary according to the conditions under which tire pressure setting was performed. Therefore, a warning may be output even if the tire inflation pressure drops slightly or if the tire inflation pressure increases above that when the tire inflation pressure was set.
- Make sure to perform the tire pressure setting procedure after adjusting the tire
 inflation pressure. Also, make sure the tires are cold before performing the tire
 pressure setting procedure or adjusting the tire inflation pressure.
- 1 Adjust the tire inflation pressure of each tire to the appropriate level.

Make sure to adjust the tire inflation pressure with the tires cold.

2 Start the engine.


The tire inflation pressure cannot be set while the vehicle is moving.

- 3 Select 🌣 on the center display.
- 4 Select [Vehicle customise].
- 5 Select [Tyre pressure].
- 6 Select [Set current air pressure].

7 Select [Continue].

The tire pressure warning light will slowly blink 3 times and a message indicating that tire inflation pressure is being set will be displayed on the multi-information display.

After setting the tire inflation pressure, a message indicating that setting has been completed will be displayed on the multi-information display.

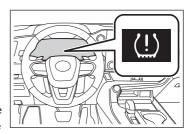

☐ INFORMATION

■ Tire inflation pressure setting procedure

- If the engine switch is turned off while setting the tire inflation pressure, the next time the engine switch is turned to ON, the setting procedure will resume and it will not be necessary to restart the procedure.
- If the tire inflation pressure setting procedure is started unnecessarily, adjust the tire inflation pressure to the specified level with the tires cold and then perform setting by selecting a specified tire inflation pressure, or perform the tire inflation pressure setting procedure with the current tire inflation pressure.

If the tire inflation pressure cannot be set easily

- Normally, the tire inflation pressure setting procedure can be completed in 2 or 3 minutes.
- If the tire pressure warning light does not blink 3 times when starting the tire
 inflation pressure setting procedure, the procedure may not have started. Perform
 the procedure again from the beginning.
- If tire inflation pressure setting procedure cannot be completed after performing the above procedure, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Registering ID codes

The tire pressure warning valve and transmitter is equipped with a unique ID code. When new tire pressure warning valves and transmitters are installed, new ID codes must be registered in the tire pressure warning computer.

☐ INFORMATION

- ID codes can be registered by yourself, but depending on the driving conditions and driving environment, registration may take some time to complete.
- When using a wheel set which all of the ID codes have already been registered, the wheel set can be changed in a short amount of time.

Before performing ID code registration, make sure that no wheels with tire pressure warning valve and transmitters installed are near the vehicle.


- 1 Park the vehicle in a safe place, turn the engine switch off and wait 15 minutes or more.
- 2 Start the engine.

The ID code registration procedure cannot be performed while the vehicle is moving.

- 3 Select 🌣 on the center display.
- 4 Select [Vehicle customise].
- 5 Select [Tyre pressure].
- 6 Check if the desired wheel set ([Set 1] or [Set 2]) is displayed.

ID codes will be registered to the displayed wheel set.

To change the wheel set to be registered, select the displayed set, and then select the wheel set you wish to register.

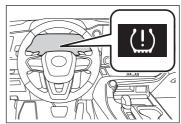

If ID codes have already been registered for that wheel set, the tire pressure warning light will slowly blink 3 times, and a message indicating that change is occurring will be displayed on the multi-information display.

- 7 Select [New tyre registration].
- 8 Select [Continue].

The tire pressure warning light will slowly blink 3 times and a message indicating that ID code registration is being performed will be displayed on the multi-information display. Wheel set changing will be canceled and registration will begin.

When registration is being performed, the tire pressure warning light will blink for approximately



1 minute then illuminate and "---" will be displayed for the inflation pressure of each tire on the multi-information display.

If the tire pressure warning light does not blink 3 times when starting ID code registration procedure, the procedure may not have started. Perform the procedure again from the beginning.

9 Drive straight (with occasional left and right turns) at approximately 40 km/h (25 mph) or more for approximately 10 to 30 minutes.

When registration is complete, the tire pressure warning light will turn off and a message indicating that registration has been completed will be displayed on the multi-information display.

Registration may take longer than normal to complete if the vehicle speed cannot be maintained at approximately $40 \, \text{km/h} (25 \, \text{mph})$ or more. If registration cannot be completed after driving for 1 hour or more, perform the registration procedure again from the beginning.

☐ INFORMATION

■ When registering ID codes

- Normally, wheel position registration can be completed within approximately 30
 minutes.
- ID code registration is performed while driving at a vehicle speed of approximately 40 km/h (25 mph) or more.

■ If ID codes are not registered easily

- In the following situations, ID code registration may take longer than usual to be completed or may not be possible.
 - When the vehicle has not been parked for approximately 15 minutes or more before being driven
 - Vehicle is not driven at approximately 40 km/h (25 mph) or more
 - Vehicle is driven on unpaved roads
 - Vehicle is driven near other vehicles and system cannot recognize tire pressure warning valve and transmitters of your vehicle over those of other vehicles
 - Wheel with tire pressure warning valve and transmitter installed is inside or near the vehicle
- If the vehicle is reversed during registration, all data collected until then will be cleared. Perform driving again.
- If registration does not complete after driving for 1 hour or more, perform the ID code registration procedure again from the beginning.
- If the ID codes cannot be registered even when performing the above procedure, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- 10 If the tire inflation pressure of the wheel set installed differs from that of the previous set, it will be necessary to perform the tire inflation pressure setting procedure of the tire pressure warning system.

If the specified tire inflation pressure is the same, it will not be necessary to perform the tire inflation pressure setting procedure.

- Related Links -

Setting the tire pressure (P. 505)

Canceling ID code registration

To cancel ID code registration after it has been started, select [New tyre registration] again on the center display.

If ID code registration has been canceled, the tire pressure warning light will turn off.

If the warning light does not turn off, ID code registration may not have been cancelled correctly. To cancel registration, select [New tyre registration] again on the center display.

Selecting wheel set

Your vehicle is equipped with a tire pressure warning system with a function to register two sets of ID codes. This allows for registration of a second wheel set, for example a winter set.

- The wheel set can be changed only if a second wheel set has been registered to the system. If a second wheel set has not been registered, "Set 2(Unregistered)" will be displayed and it will not be possible to change to the selected wheel set. ID codes can be registered by yourself.
- Only a change between both registered wheel set is possible, mixing between these wheel sets is not supported.
- While registering ID codes, it may not be possible to change between wheel sets normally. Cancel registration before changing between wheel sets.
- 1 Install the desired wheel set.
- 2 Select on the center display.
- 3 Select [Vehicle customise].
- 4 Select [Tyre pressure].
- 5 Select the wheel set ([Set 1] or [Set 2]) displayed for the set selection setting.
- 6 Select the wheel set you wish to register, and then select [OK].

The tire pressure warning light will slowly blink 3 times, a message indicating that change is occurring will be displayed, and the wheel set change will begin.


Wheel set change will begin and the tire pressure warning light will blink for 1 minute and then illuminate. Also, while the change is being performed, "---" will be displayed for the tire inflation pressure of each tire on the multi-information display.

8-5. Tire maintenance

After approximately 2 minutes, the wheel set change will complete, the tire pressure warning light will turn off, and a completion message will be displayed on the multi-information display.

If changing does not complete after approximately 4 minutes, a message indicating that the change could not be completed will be displayed.

Check which wheel set is installed and perform the change procedure again from the beginning.

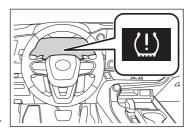

If the specified tire inflation pressure of the wheel set installed differs from that of the previous set, it will be necessary to perform the tire inflation pressure setting procedure of the tire pressure warning system.

If the specified tire inflation pressure is the same, it will not be necessary to perform the tire inflation pressure setting procedure.

8 Register the position of each wheel.

Related Links

Registration of the position of each wheel after performing a tire rotation (P. 504)

Checking tire inflation pressure

Make sure to maintain proper tire inflation pressure. Tire inflation pressure should be checked at least once per month. However, Lexus recommends that tire inflation pressure be checked once every two weeks.

WARNING

In order to ensure the performance of the tires, maintain proper tire inflation pressure.

If the tires are not properly inflated, the following may occur:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Air leaking from between tire and wheel
- Wheel deformation and/or tire damage
- Greater possibility of tire damage while driving (due to road hazards, expansion joints, sharp edges in the road, etc.)

M NOTICE

After inspecting and adjusting tire inflation pressure, make sure to install the tire valve caps.

If a valve cap is not installed, dirt or moisture may get into the valve and cause an air leak, resulting in decreased tire inflation pressure.

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel economy
- Reduced driving comfort and poor handling
- Reduced tire life due to wear
- Reduced safety
- Damage to the drive train

If a tire needs frequent inflating, have it checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

■ Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

• Check only when the tires are cold.

If your vehicle has been parked for at least 3 hours or has not been driven for more than $1.5\,\mathrm{km}$ or $1\,\mathrm{mile}$, you will get an accurate cold tire inflation pressure reading.

- Always use a tire pressure gauge.
 It is difficult to judge if a tire is properly inflated based only on its appearance.
- It is normal for the tire inflation pressure to be higher after driving as heat is generated in the tire. Do not reduce tire inflation pressure after driving.
- Passengers and luggage weight should be placed so that the vehicle is balanced.

Checking the specified tire inflation pressure

The recommended cold tire inflation pressure and tire size are displayed on the tire and loading information label.




Lifting the vehicle with a floor jack

When using a floor jack, follow the instructions in the manual provided with the jack and perform the operation safely. When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.

Front jack point position



Rear jack point position

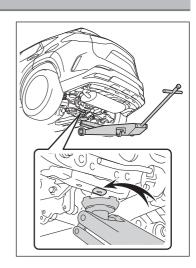

Rotating the tires


To equalize tire wear and help extend tire life, Lexus recommends that you rotate your tires approximately at the following intervals:

2WD models: Rotate the tires every 10000 km (6000 miles)

AWD models: Rotate the tires every 5000 km (3000 miles)

Rotate the tires as shown in the illustration.

Make sure to perform wheel position registration procedure after rotating the tires.

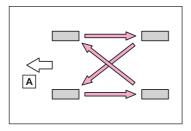

A Front

- Related Links

Registration of the position of each wheel after performing a tire rotation (P. 504)

Wheels

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel, causing a loss of handling control.

Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width and inset*1.

Replacement wheels are available at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Lexus does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

When replacing wheels

The wheels of your vehicle are equipped with tire pressure warning valves and transmitters that allow the tire pressure warning system to provide advance warning in the event of a loss in tire inflation pressure.

Whenever wheels are replaced, tire pressure warning valves and transmitters must be installed.

WARNING

When replacing wheels

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in a loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.
- Use the correct wheel bolts for the wheels to be installed.
 For details, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Wheel bolts

Observe the following precautions to reduce the risk of death or serious injury:

^{*1:} Conventionally referred to as offset.

WARNING

- Do not over tighten.
- Never use oil or grease on the wheel bolts. Oil and grease may cause the wheel bolts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel bolts to loosen and the wheel may fall off, causing a serious accident. Remove any oil or grease from the wheel bolts.
- If there are any cracks or deformations in the wheel bolts, or if the surface treatment becomes worn, have the wheel bolts replaced at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. Failure to follow these precautions could cause the wheel bolts to loosen and the tire to fall off, resulting in death or serious injury.

Use of defective wheels prohibited

Do not use cracked or deformed wheels.

Doing so could cause the tire to leak air during driving, possibly causing an accident.

M NOTICE

Replacing tire pressure warning valves and transmitters

- Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer or other qualified service shop. In addition, make sure to purchase your tire pressure warning valves and transmitters at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- Ensure that only genuine Lexus wheels are used on your vehicle.
 Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.

Aluminum wheel precautions

Observe the following precautions when handling the aluminum wheels.

- Use only Lexus wheel bolts and wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel bolts are still tight after driving 1000 km (621 miles).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Lexus genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.

9-1. What to do if a problem occurs while driving What to do if a problem oc-	When the horn does not sound and the engine cannot be started564
curs while driving 521	9-4. If a tire is flat
9-2. If a warning light illuminates/flash- es or a warning message is dis- played on the meter	Replacing a tire with a spare tire (vehicles with a spare tire)565
If a warning light turns on/ flashes525 If a warning message is dis-	If you get a flat front tire on a snowy or icy road (vehicles with a spare tire)
played537 9-3. If the engine will not start	Precautions for when you have a flat tire (vehicles with run-flat tires)577
When the engine will not start even though the starter operates	9-5. If a door cannot be opened or locked
When the starter operates slowly and the engine cannot be started552 When the starter does not op-	If a key has been lost578 When the doors/windows/ moon roof cannot be operated using an electronic key579
erate and the engine cannot be started553	If a door cannot be opened using the door opener switch
When the interior lights or headlights are dim and the engine cannot be started 556	If the rear doors cannot be opened from the inside
When the interior lights or headlights do not illuminate and the engine cannot be	If the back door cannot be opened593 9-6. If the moon roof or electronic
started562 When the horn sounds at a low volume and the engine cannot be started563	sunshade does not operate correctly If the moon roof does not operate correctly

If the panoramic moon root/ electronic sunshade does
not operate correctly597
9-7. If refueling cannot be performed
If the fuel filler door cannot be opened598
9-8. If an indicator on an interior fea- ture illuminates or flashes
When the wireless charger operation indicator light (on the charging tray) flashes 599
9-9. If the vehicle cannot move
When the engine can be start- ed but the vehicle does not move601
If the transmission makes ab- normal sounds602
Towing with a tow truck603
Using a flatbed truck607
Towing with another vehicle608
Getting unstuck from mud, sand, or snow612
9-10. If you think something is wrong
If a vehicle abnormality is found613
If abnormal sounds are emit- ted from the vehicle
If the vehicle behaves abnor- mally615
9-11. Items to check before contacting a dealership
The steering wheel cannot be turned after the engine is stopped

If the windows do not open or close by operating the power window switches617
The engine switch is turned off automatically619
f your vehicle overheats 620
f electrical components can- not be used or do not oper- ate when a switch is operat- ed624
f a light does not illuminate625


What to do if a problem occurs while driving

Using the emergency flashers to warn other drivers

Use the emergency flashers to inform other drivers of the presence of your vehicle when it is stopped on the road, such as if the vehicle has broke down.

Press the switch.

All the turn signal lights will flash. To turn them off, press the switch once again.

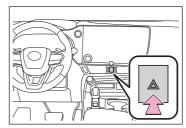

INFORMATION

Emergency flashers

- If the emergency flashers are used for a long time with the engine stopped, the battery may become discharged.
- If any of the SRS airbags deploy (inflate) or in the event of a strong rear impact, the emergency flashers will turn on automatically.

The emergency flashers will turn off automatically after operating for approximately 20 minutes. To manually turn the emergency flashers off, press the switch twice. (The emergency flashers may not turn on automatically depending on the force of the impact and conditions of the collision.)

Stopping the vehicle in an emergency

Stop the vehicle using the following procedure only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way:

WARNING


If the engine has to be stopped while driving

Power assist for the brakes and steering wheel will be lost, making the brake pedal harder to depress and the steering wheel heavier to turn. Decelerate as much as possible before stopping the engine.

Steadily step on the brake pedal with both feet and firmly depress it.

Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.

2 Change the shift position to N.

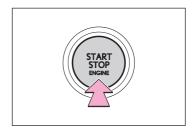

- If the shift position is changed to N:
 After slowing down, stop the vehicle in a safe place by the road.
 Stop the engine.
- ullet If the shift position cannnot be changed to N:

Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.

To stop the engine, press and hold the engine switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

3 Stop the vehicle in a safe place by the road.

WARNING

To restart the engine after performing an emergency shutdown, change the shift position to N and then press the engine switch.

If the vehicle is submerged or water on the road is rising

This vehicle is not designed to be able to drive on roads that are deeply flooded with water. Do not drive on roads where the roads may be submerged or the water may be rising. It is dangerous to remain in the vehicle, if it anticipated that the vehicle will be flooded or set a drift.

Remain calm and follow the following.

- If the door can be opened, open the door and exit the vehicle.
- If the door cannot be opened, open the window using the power window switch and ensure an escape route.
- If the window can be opened, exit the vehicle through the window.
- If the door and window cannot be opened due to the rising water, remain calm, wait until the water level inside the vehicle rises to the point that the water pressure inside of the vehicle equals the water pressure outside of the vehicle and then open the door after waiting for the rising water to enter the vehicle, and exit the vehicle.

When the outside water level exceeds half the height of the door, the door cannot be opened from the inside due to water pressure.

■ Water level exceeds the floor

 
When the water level exceeds the floor and time has passed, the electrical equipment will get damaged, the power windows will not operate, the engine stop, and the vehicle may not be able to get moving.

■ Using an emergency escape hammer*1

Laminated glass^{*} is used in the windshield and the windows on this vehicle. Laminated glass cannot be shattered with an emergency hammer^{*1}.

■ How to distinguish laminated glass

When looking from the cross-sectional view point, laminated glass is two sheets of glass pasted together.



A Laminated glass

B Tempered glass

WARNING

Caution while driving

Do not drive on roads where the roads may be submerged or the water may be rising. Otherwise the vehicle may be damaged and cannot move, as well as become flooded and set a drift, which may lead to death.

Operation of the fuel pump shut off system

When a certain level of impact is detected by an impact sensor due to a collision and an airbag deploys or the engine is stopped, the fuel pump shut off system operates to stop the supply of fuel and minimize the risk of fuel leakage.

^{*:} If equipped

^{*1:} Contact your Lexus dealer or aftermarket accessory manufacturer for further information about an emergency hammer.

Restarting the engine

⚠ NOTICE

Before starting the engine, make sure to thoroughly check the area under the vehicle. If leaked fuel is found on the ground, the fuel system is damaged and needs to be repaired. In this situation, do not restart the engine.

Perform the following procedure to restart the engine after the fuel pump shut off system has operated.

- Turn the engine switch to ACC or OFF.
- 2 Restart the engine.

If a warning light turns on/flashes

Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

INFORMATION

■ Warning buzzer

In some cases, the buzzer may not be heard due to being in a noisy location or audio sound.

Brake system warning light (warning buzzer)

Condition	Cause / Remedy
	Indicates that:
	● The brake fluid level is low; or
	The brake system is malfunctioning
(red)	Immediately stop the vehicle in a safe place and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.

WARNING

If both the ABS and the brake system warning lights remain on, stop your vehicle in a safe place immediately and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

The vehicle will become extremely unstable during braking, and the ABS system may fail, which could cause an accident resulting in death or serious injury.

Brake system warning light (warning buzzer)

Condition	Cause / Remedy
(())	Indicates a malfunction in the electric parking brake Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

WARNING

If both the ABS and the brake system warning lights remain on, stop your vehicle in a safe place immediately and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

The vehicle will become extremely unstable during braking, and the ABS system may fail, which could cause an accident resulting in death or serious injury.

High coolant temperature warning light (warning buzzer)

Condition	Cause / Remedy
<u>.</u>	Indicates that the engine coolant temperature is too high
	Immediately stop the vehicle in a safe take the corrective actions for overheating.

— Related Links

If your vehicle overheats(P. 620)

Charging system warning light (warning buzzer)

Condition	Cause / Remedy
This light illuminates on the multi-information display.	Indicates a malfunction in the vehicle's charging system Immediately stop the vehicle in a safe place and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Low engine oil pressure warning light (warning buzzer)

Condition	Cause / Remedy
This light illuminates on the multi-information display.	Indicates that the engine oil pressure is too low Immediately stop the vehicle in a safe place and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Malfunction indicator lamp

Condition	Cause / Remedy	
	Indicates a malfunction in:	
	● The emission control system (on some models);	
● The electronic engine control system;		
الم	● The electronic throttle control system; or	
The electronic transmission control system		
	Immediately stop the vehicle in a safe place and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.	

☐ INFORMATION

If the malfunction indicator lamp comes on while driving

For some models, the malfunction indicator lamp will come on if the fuel tank becomes completely empty. If the fuel tank is empty, refuel the vehicle immediately. The malfunction indicator lamp will go off after several trips.

If the malfunction indicator lamp does not go off, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer as soon as possible.

SRS warning light

Warning light	Details / Actions
*	 The SRS airbag system is malfunctioning The seat belt pretensioner system is malfunctioning Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

ABS warning light (warning buzzer)

Condition	Cause / Remedy	
	Indicates a malfunction in:	
	● The ABS; or	
(ABS)	● The brake assist system	
	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.	

WARNING

If both the ABS and the brake system warning lights remain on, stop your vehicle in a safe place immediately and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

The vehicle will become extremely unstable during braking, and the ABS system may fail, which could cause an accident resulting in death or serious injury.

Inappropriate pedal operation warning light (warning buzzer)

Condition	Cause / Remedy
	When a buzzer sounds:
	Indicates a malfunction in:
	● The Brake Override System
	● The Drive-Start Control
This light illuminates on the multi-information	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.
display.	When a buzzer sounds:
	Indicates that the shift position was changed and Drive- Start Control was operated while depressing the accel- erator pedal.
	Momentarily release the accelerator pedal.

Condition	Cause / Remedy
•	When a buzzer sounds: PKSB (Parking Support Brake) has operated Follow the instructions displayed on the multi-information display.
This light illuminates on the multi-information display.	When a buzzer does not sound: Indicates that the accelerator and brake pedals are being depressed simultaneously, and the Brake Override System is operating. Release the accelerator pedal and depress the brake
	pedal.

Electric power steering system warning light (warning buzzer)

Condition	Cause / Remedy
ellow)	Indicates a malfunction in the EPS (Electric Power Steering) system Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

■ Electric power steering system warning light (warning buzzer)

When the battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on and the warning buzzer may sound.

▲ WARNING

When the electric power steering system warning light comes on yellow, the assist to the power steering is restricted. When the light comes on red, the assist to the power steering is lost and handling operations of the steering wheel become extremely heavy.

When steering wheel operations are heavier than usual, grip the steering wheel firmly and operate it using more force than usual.

Low fuel level warning light

Condition	Cause / Remedy
	Indicates that remaining fuel is approximately 8.5 L (2.3 gal., 1.9 lmp. gal.) or less Refuel the vehicle.

Driver's and front passenger's seat belt reminder light (warning buzzer)

Condition	Cause / Remedy
*	Warns the driver and/or front passenger to fasten their seat belts Fasten the seat belt. If the front passenger's seat is occupied, the front passenger's seat belt also needs to be fastened to make the warning light (warning buzzer) turn off.

☐ INFORMATION

Driver's and front passenger's seat belt warning buzzer

The driver's and front passenger's seat belt warning buzzer sounds to alert the driver and front passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.

■ Front passenger detection sensor, seat belt reminder and warning buzzer

- If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

Rear passengers' seat belt reminder lights (warning buzzer)

Condition	Cause / Remedy
REAR (Vehicles without a head-up display) REAR (Vehicles with a head-up display)	Warns the rear passengers to fasten their seat belts Fasten the seat belt.

☐ INFORMATION

■ Rear passengers' seat belt warning buzzer

The rear passengers' seat belt warning buzzer sounds to alert the rear passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.

Tire pressure warning light (warning buzzer)

Condition	Cause / Remedy
	When the light comes on after blinking for approximately 1 minute (a buzzer does not sounds):
	Malfunction in the tire pressure warning system
	Have the system checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
	When the light comes on (a buzzer sounds):
(!)	Low tire inflation pressure from natural causes
	After the temperature of the tires has lowered sufficiently, check the inflation pressure of each tire and adjust them to the specified level.
	When the light comes on (a buzzer sounds):
	Low tire inflation pressure from flat tire
	Immediately stop the vehicle in a safe place and perform the necessary actions

■ If the tire pressure warning light comes on

Inspect the tires to check if a tire is punctured.

- If a tire is punctured: $\rightarrow P.565$
- If none of the tires are punctured: Turn the engine switch off then turn it to ON. Check
 if the tire pressure warning light comes on or blinks.
 - If the tire pressure warning light blinks for approximately 1 minute then stays on
 There may be a malfunction in the tire pressure warning system. Have the vehicle
 inspected by any authorized Lexus retailer or Lexus authorized repairer, or any
 reliable repairer immediately.
 - If the tire pressure warning light comes on

After the temperature of the tires has lowered sufficiently, check the inflation pressure of each tire and adjust them to the specified level.

If the warning light does not turn off even after several minutes have elapsed, check that the inflation pressure of each tire is at the specified level and perform the tire inflation pressure setting procedure.

If the warning light does not turn off even after several minutes have elapsed since performing the tire inflation pressure setting procedure, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer as soon as possible.

■ The tire pressure warning light may come on due to natural causes

The tire pressure warning light may come on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

■ When a tire is replaced with a spare tire (vehicles with a compact spare tire)

The spare tire is not equipped with a tire pressure warning valve and transmitter. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire has been replaced with the spare tire. Replace the spare tire with the repaired tire and adjust the tire inflation pressure. The tire pressure warning light will go off after a few minutes.

WARNING

If the tire pressure warning light comes on

Be sure to observe the following precautions. Failure to do so could cause a loss of vehicle control and result in death or serious injury.

Vehicles with run-flat tires:

WARNING

Decelerate to the lowest appropriate speed as soon as possible. Do not drive over $80 \, \text{km/h} (50 \, \text{mph})$.

- Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.
- If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Have the flat tire replaced by the nearest any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.
- If a blowout or sudden air leakage should occur

The tire pressure warning system may not activate immediately.

⚠ NOTICE

■ To ensure the tire pressure warning system operates properly

Do not install tires with different specifications or makers, as the tire pressure warning system may not operate properly.

Stop & Start cancel indicator (warning buzzer)

Condition	Cause / Remedy
(~)	The Stop & Start system may be malfunctioning.
	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

Stop & Start system indicator (warning buzzer)

Condition	Cause / Remedy
(flashes)	If the driver's door is opened when the engine is stopped by the Stop & Start system and the shift lever is in D, a buzzer will sound and the Stop & Start system indicator will flash. To stop the buzzer, close the driver's door.

Lexus parking assist-sensor OFF indicator (warning buzzer)

Condition	Cause / Remedy
₽₩	Indicates a malfunction in the Lexus parking assist-sensor function Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.
P <i>w</i> <u>≜</u> off	Indicates that the system is temporarily unavailable, possibly due to a sensor being dirty or covered with ice, etc. Follow the instructions displayed on the multi-information display.

PCS warning light (warning buzzer)

Co	ondition	Cause / Remedy
		Indicates a malfunction in the PCS (Pre-Collision System).
**************************************	**************************************	Follow the instructions displayed on the multiinformation display.
ľ	OFF	 Illuminates when the PCS (Pre-Collision System) or VSC (Vehicle Stability Control) system is disabled.

LTA indicator (warning buzzer)

Condition	Cause / Remedy
/≘\ (Or-	Indicates a malfunction in the LTA (Lane Tracing Assist).
ange)	 Follow the instructions displayed on the multiinformation display.

LDA indicator (warning buzzer)

Condition	Cause / Remedy
	Indicates a malfunction in the LDA (Lane Departure Alert). • Follow the instructions displayed on the multiinformation display.

Dynamic radar cruise control indicator (warning buzzer)

Condition	Cause / Remedy
(Or-	Indicates a malfunction in the dynamic radar cruise control system. • Follow the instructions displayed on the multiinformation display.

Cruise control indicator (warning buzzer)

Condition	Cause / Remedy
6 	Indicates a malfunction in the cruise control system. • Follow the instructions displayed on the multiinformation display.

Driving assist infomation indicator

Indicates one of the following systems is malfunctioning or disabled.
 PCS (Pre-Collision System) LDA (Lane Departure Alert) PKSB (Parking Support Brake)*
 RCD (Rear Camera Detection)* BSM (Blind Spot Monitor)* RCTA(Rear crossing traffic alert)* Safe Exit Assist (with door opening control)* Automatic Rear Flashing Hazard Lights* Follow the instructions displayed on the multiinformation display.

^{*:} If equipped

Slip indicator

Condition	Cause / Remedy
	Indicates a malfunction in:
	● The VSC system;
	● The Trailer Sway Control system;
(illu-	● The TRC system;
minates)	● The Trail Mode function*; or
	● The hill-start assist control system
	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

Parking brake indicator

Condition	Cause / Remedy
	It is possible that the parking brake is not fully engaged or released
	Operate the parking brake switch once again.
(flashes)	This light comes on when the parking brake is not released. If the light turns off after the parking brake is fully released, the system is operating normally.
()	Indicates a malfunction in the parking brake system
	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

Brake hold operated indicator (warning buzzer)

Condition	Cause / Remedy
HOLD	Indicates a malfunction in the brake hold system Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

^{*:} If equipped

If a warning message is displayed

The multi-information display shows warnings for system malfunctions and incorrectly performed operations, and messages that indicate a need for maintenance. When a message is displayed, perform the appropriate corrective action for the message.

If a warning message is displayed again after the appropriate actions have been performed, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Additionally, if a warning light comes on or flashes at the same time that a warning message is displayed, take the appropriate corrective action for the warning light.

☐ INFORMATION

■ Warning messages

The warning messages explained below may differ from the actual messages according to operation conditions and vehicle specifications.

■ Warning buzzer

In some cases, the buzzer may not be heard due to being in a noisy location or audio sound.

"Engine Oil Level Low Add or Replace"

Cause	Remedy
The engine oil level may be low.	Check the level of the engine oil, and add engine oil if necessary. This message may be displayed if the vehicle is stopped on a slope. Move the vehicle to a level surface and check if the message disappears.

- Related Links -

Checking and adding the engine oil (P. 483)

"Engine Stopped Steering Power Low"

Cause	Remedy
This message is displayed if the engine is stopped while driving.	When steering wheel operations are heavier than usual, grip the steering wheel firmly and operate it using more force than usual.

"Auto Power OFF to Conserve Battery"

Cause	Remedy
	Next time when starting the engine, increase the engine speed slightly and maintain that level for approximately 5 minutes to recharge the battery.

— Related Links -

Changing the engine switch mode(P. 123)

"12-Volt Battery Charging System Malfunction Stop in a Safe Place See Owner's Manual"

Cause	Remedy
It may indicate a malfunction.	Immediately stop the vehicle and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.

"Tyre Set Switching Incomplete Retry Tyre Set Registration See Owner's Manual"

Cause	Remedy
The wheel set change could not be completed.	Check which wheel set is installed and perform the change procedure again from the beginning.

— Related Links -

Selecting wheel set(P. 511)

"Headlight System Malfunction Visit Your Dealer"

Cause	Remedy
1 -	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

"AWD System Overheated 2WD Mode Engaged"*

Cause	Remedy
This message may be displayed when driving under ex- tremely high load conditions.	 Drive the vehicle at low speeds or stop the vehicle in a safe place with the engine running until the message is cleared. If the message is not cleared, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

"Engine Coolant Temp High Stop in a Safe Place See Owner's Manual"

Remedy
Take the corrective actions for overheating.

– Related Links -

If your vehicle overheats(P. 620)

"Smart Entry & Start System Malfunction See Owner's Manual"

Cause	Remedy
It may indicate a	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

"Braking Power Low Stop in a Safe Place See Manual"

Cause	Remedy
It may indicate a malfunction.	Immediately stop the vehicle in a safe place and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.

^{*:} If equipped

"Braking power low Stop in a safe place See Owner's Manual"

Cause	Remedy
	Immediately stop the vehicle in a safe place and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.

"Oil Pressure Low Stop in a Safe Place See Owner's Manual"

Cause	Remedy
It may indicate a malfunction.	Immediately stop the vehicle in a safe place and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.

"High Power Consumption Power to Climate Temporarily Limited"

Cause	Remedy
1	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

A message that indicates the need for visiting your Lexus dealer

Cause	Remedy
	Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

"New Key Registered Contact Your Dealer if You Did Not Register a New Key"

Cause	Remedy
This message will be displayed each time the driver's door is opened when the doors are unlocked from the outside for approximately 10 days after a new electronic key has been registered.	If this message is displayed but you have not had a new electronic key registered, ask any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer to check if an unknown electronic key (other than those in your possession) has been registered.

"Parking Brake Temporarily Unavailable"

Cause	Remedy
If the parking brake is operated repeatedly over a short period of time, the system may restrict operation to prevent overheating.	

"EPB Activation Stopped Incompletely"

Cause	Remedy
Operate the parking brake switch. If the message does not disappear after operating the switch several times, the system may be malfunctioning.	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

"Parking Brake Unavailable"

Cause	Remedy
Operate the parking brake switch. If the message does not disappear after operating the switch several times, the system may be malfunctioning.	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

"Brake Hold Malfunction Press Brake to Deactivate Visit Your Dealer"

Cause	Remedy
The system may be malfunctioning.	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

"Transmission Oil Temp High Stop in a Safe Place and See Owner's Manual"

Cause	Remedy
Transmission will automatically shift up.	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

"Shift System Malfunction Shifting Unavailable Drive to a Safe Place and Stop"

Cause	Remedy
	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

"Shift System Malfunction Driving Unavailable"

Cause	Remedy
1	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

^{*:} If equipped

If a message that indicates the need for the shift lever operation is $\mathbf{displayed}^{\star}$

Cause	Remedy
To prevent the shift lever from being operated incorrectly or the vehicle from moving unexpectedly, a message that requires shifting the shift position may be displayed on the multi-information display.	Follow the instruction of the message and shift the shift position.

"Shift System Malfunction Apply Parking Brake Securely When Parking See Owner's Manual"

Cause	Remedy
It may indicate a malfunction.	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

"P Switch Malfunction Apply Parking Brake Securely When Parking See Owner's Manual"*

Cause	Remedy
It may indicate a	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

Cause	Remedy
	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

^{*:} If equipped

"Shift System Malfunction See Owner's Manual" *

Cause	Remedy
It may indicate a malfunction.	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

"Shift System Malfunction Stop in a Safe Place See Owner's Manual"

Cause	Remedy
	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

"Battery Low Shifting Unavailable See Owner's Manual"

Cause	Remedy
It may indicate a	Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

"Key Battery Low Replace Key Battery"

Cause	Remedy	
The electronic key has a low battery.	Replace the electronic key battery.	

^{*:} If equipped

"System Malfunction Visit Your Dealer"

Cause	Remedy
Indicates one of the following systems is disabled. PCS (Pre-Collision System) LDA (Lane Departure Alert) LTA (Lane Tracing Assist) AHB (Automatic High Beam) AHS (Adaptive High-beam System) Dynamic radar cruise control system RSA (Road Sign Assist)* SM BSM (Blind Spot Monitor)* RCTA (Rear Crossing Traffic Alert)* Automatic Rear Flashing Hazard Lights* Automatic Rear Flashing Hazard Lights* PKSB (Parking Support Brake)* RCD (Rear camera detection)*	Have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

^{*:} If equipped

"System Stopped See Owner's Manual"

Cause	Remedy
Indicates one of the following systems is disabled. PCS (Pre-Collision System) LDA (Lane Departure Alert) LTA (Lane Tracing Assist) AHB (Automatic High Beam) AHS (Adaptive High-beam System) Dynamic radar cruise control system RSA (Road Sign Assist)* RCTA (Rear Crossing Traffic Alert)* Automatic Rear Flashing Hazard Lights* RSA (Road Sign Assist) Lexus parking assist-sensor* RCD (Rear camera detection)*	 Follow the following correction methods. Check the voltage of the battery Remove any dirt or foreign matter from the front/rear side radar sensors

^{*:} If equipped

"System Stopped Front Camera Low Visibility See Owner's Manual"

Cause	Remedy
Indicates one of the following systems is disabled. PCS (Pre-Collision System) LDA (Lane Departure Alert) LTA (Lane Tracing Assist) LCA (Lane Change Assist) AHB (Automatic High Beam) AHS (Adaptive High-beam System) Dynamic radar cruise control system RSA (Road Sign Assist)*	 Follow the following correction methods. Using the windshield wipers, remove the dirt or foreign matter from the windshield. Using the air conditioning system, defog the windshield. Close the hood, remove any stickers, etc. to clear the obstruction in front of the front camera.

"System Stopped Front Camera Out of Temp. Range Wait until Normal Temperature"

Cause	Remedy
Indicates one of the following systems is disabled. PCS (Pre-Collision System) LDA (Lane Departure Alert) LTA (Lane Tracing Assist) LCA (Lane Change Assist) AHB (Automatic High Beam) AHS (Adaptive High-beam System) Dynamic radar cruise control system RSA (Road Sign Assist)*	 Follow the following correction methods. If the front camera is hot, such as after the vehicle is parked in the sun, use the air conditioning system to decrease the temperature around the front camera If a sunshade was used when the vehicle was parked, depending on its type, the sunlight reflected from the surface of the sunshade may cause the temperature of the front camera to become excessively high If the front camera is cold, such after the vehicle is parked in an extremely cold environment, use the air conditioning system to increase the temperature around the front camera

^{*:} If equipped

"System Stopped Front Radar Sensor Blocked Clean Radar Sensor"

Cause	Remedy
Indicates one of the following systems is disabled. PCS (Pre-Collision System) LDA (Lane Departure Alert) LTA (Lane Tracing Assist) LCA (Lane Change Assist)* AHB (Automatic High Beam) AHS (Adaptive High-beam System) Dynamic radar cruise control system	 Follow the following correction methods. Check if there is any foreign matter attached to the radar sensor or radar sensor cover and clean them if necessary. → P.318 This message may be displayed when driving in an open area with few nearby vehicles or structures, such as a desert, grasslands, suburbs, etc. The message may be cleared by driving the vehicle in an area with structures, vehicles, etc. nearby.

"System Stopped Front Radar Sensor Out of Temp. Range Wait until Normal Temperature"

Cause	Remedy
Indicates one of the following systems is disabled. • PCS (Pre-Collision System)	
LDA (Lane Departure Alert)	● The temperature of the ra-
LTA (Lane Tracing Assist)	dar sensor is outside of the operating range. Wait for
● 🔼 LCA (Lane Change Assist) [*]	the temperature to become
AHB (Automatic High Beam)	appropriate.
AHS (Adaptive High-beam System)	
Dynamic radar cruise control system	

^{*:} If equipped

"System Stopped Front Radar In Self Calibration See Owner's Manual"

Cause	Remedy
Indicates one of the following systems is disabled. PCS (Pre-Collision System) LDA (Lane Departure Alert) LTA (Lane Tracing Assist) LCA (Lane Change Assist)* AHB (Automatic High Beam) AHS (Adaptive High-beam System) Dynamic radar cruise control system	 Follow the following correction methods. Check if there is any foreign matter attached to the radar sensor or radar sensor cover and clean them if necessary. → P.318 The radar sensor may be misaligned and will be adjusted automatically while driving. Continue driving for a while.

"Parking Assist Unavailable Low Visibility See Owner's Manual"

Cause	Remedy
Indicates one of the following systems is disabled. • RCD (Rear camera detection)* • PKSB (Parking Support Brake)*	Remove any dirt or foreign matter from the front/rear cameras.

"Unavailable Activ. Cond.not Satisfied See Owner's Manual"

Cause	Remedy
The LCA function cannot be used as the operating conditions have not been met. → P.352	 Operate the turn signal lever again after all of the operating conditions are met.

^{*:} If equipped

"Cruise Control Unavailable See Owner's Manual"

Cause	Remedy
Indicates one of the following systems is disabled.	
Dynamic radar cruise control	 Press the driving as-
Cruise control	sist switch quickly
A message is displayed when the driving assist switch is pushed repeatedly.	and firmly.

When the engine will not start even though the starter operates

Cause	Remedy
There may not be sufficient fuel in the vehicle's tank.	Refuel the vehicle.
The engine may be flooded.	Try to restart the engine again following correct starting procedures.
There may be a malfunction in the engine immobilizer system.	 If the key is touching or is covered by a metallic object, move the key away from the object. If the key is near to or touching a key to the security system (key with a built-in transponder chip) of another vehicle, move the key away from the other key.

— Related Links -

Refueling(P. 169)

Starting the engine (P. 122)

If a warning message is displayed(P. 537)

When a malfunction of the shift control system is suspected

If any of the following situations occurs, shift control system malfunctions are possible.

Immediately stop the vehicle in a safe place on level ground, apply the parking brake, and then contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

- 1. When the warning message indicating the shift control system appears on the multi-information display.
- 2. The display indicates that no shift position is selected for more than a few seconds.

When the starter operates slowly and the engine cannot be started

Cause	Remedy
The battery may be discharged.	Restarting the engine using jumper (or booster) cables.
A battery terminal may be loose or corroded.	Check if a battery terminal is loose or corroded.

– Related Links -

If the vehicle battery is discharged (P. 556)

Restarting the engine when the battery is discharged (P. 584)

If the vehicle battery is discharged (P. 556)

When the starter does not operate and the engine cannot be started

Cause	Remedy
Vehicles with a smart entry & start system: The engine starting system may be malfunctioning due to an electrical problem such as electronic key battery depletion or a blown fuse.	A temporary measure is available to start the engine.
One or both of the battery terminals may be disconnected.	Check if a battery terminal is disconnected.
The battery may be discharged.	Restarting the engine using jumper (or booster) cables.
There may be a malfunction in the steering lock system.	Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer if the problem cannot be repaired, or if repair procedures are unknown.

Related Links

Starting the engine in an emergency (P. 553)

Starting the engine when the electronic key is not operating normally (P. 554)

If the vehicle battery is discharged (P. 556)

Restarting the engine when the battery is discharged (P. 584)

If the vehicle battery is discharged (P. 556)

Starting the engine in an emergency

When the engine cannot be started, the following steps can be used as an temporary measure to start the engine if the engine switch is functioning normally.

Do not use this starting procedure except in cases of emergency.

- Pull the parking brake switch to check that the parking brake is set.

 Parking brake indicator will come on.
- 2 Check that the shift position is in P.

- 3 Change the engine switch to ACC.
- 4 Press and hold the engine switch for about 15 seconds while depressing the brake pedal firmly.

Even if the engine can be started using the above steps, the system may be malfunctioning.


Have the vehicle checked by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately.

Starting the engine when the electronic key is not operating normally

- 1 Ensure that the shift position is in P and depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the engine switch.

When the electronic key is detected, a buzzer will sound and the engine switch will change to ON.

If the smart entry & start system has been disabled by a customization setting, the engine switch will change to ACC.

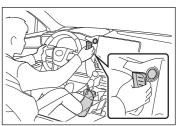

- 3 Firmly depress the brake pedal and check that a message is shown on the multi-information display.
- 4 Press the engine switch.

In the event that the engine still cannot be started, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

☐ INFORMATION

Stopping the engine

Shift the shift position to P, set the parking brake and press the engine switch as you normally do when stopping the engine.

■ Electronic key battery

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted.

■ Changing engine switch modes

Release the brake pedal and press the engine switch in step 4 above. The engine will not start and the mode will be changed each time the switch is pressed.

– Related Links -

Replace the electronic key battery(P. 579)

When the interior lights or headlights are dim and the engine cannot be started

Cause	Remedy
The battery may be discharged.	Restarting the engine using the jumper (or booster) cables.
The battery terminals may be loose or corroded.	Check if a battery terminal is loose or corroded.

- Related Links

Restarting the engine when the battery is discharged (P. 584)

If the vehicle battery is discharged (P. 556)

If the vehicle battery is discharged (P. 556)

Key types(P. 44)

Opening/closing the doors(P. 53)

Using the mechanical key(P. 582)

If a door cannot be opened using the door opener switch(P. 589)

When removing the battery terminals (P. 559)

Items to initialize (P. 669)

If the vehicle battery is discharged

WARNING

When replacing the battery

- When the vent plug and indicator are close to the hold down clamp, the battery fluid (sulfuric acid) may leak.
- For information regarding battery replacement, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

If the battery discharges, it may not be possible to shift the shift position to other positions.

In this case, the vehicle cannnot be towed without lifting both front wheels because the front wheels will be locked.

■ When the battery is removed or discharged

 In some cases, it may not be possible to unlock the doors using the smart entry & start system after the battery has been replaced.

Use the wireless remote control or the mechanical key to lock or unlock the doors.

- If the engine cannot be started the first time the engine switch is pressed after removing and installing the battery, touch the Lexus emblem side of the electronic key to the engine switch to start the engine.
- The engine switch mode is memorized by the vehicle.

After the battery has been recharged or replaced, the engine switch will return to the mode it was in before it was discharged or removed.

Before disconnecting the battery, turn the engine switch off.

If you are unsure what mode the engine switch was in before the battery was discharged, be especially careful when reconnecting the battery.

- Some systems may require initialization.
- Vehicles with a Stop & Start system:
 The Stop & Start system may not automatically stop the engine for up to an hour.

■ To prevent battery discharge

- Turn off the headlights and the audio system while the engine is off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

■ If the vehicle battery is discharged

- The doors cannot be locked or unlocked using the smart entry & start system or wireless remote control, and the door opener switches will not operate. Use the mechanical key to enable/disable manual release handle operation. By enabling manual release handle operation, the door can be opened.
- Information recorded by various computers will be cleared.
 When the battery is depleted, have the vehicle inspected at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- Some systems may require initialization.

■ Charging the battery

The electricity stored in the battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances.

If the vehicle is left for a long time, the battery may discharge, and the engine may be unable to start.

(The battery recharges automatically during driving.)

Replacing the battery

- Vehicles with Stop & Start system: Use a genuine battery specifically designed for use with the Stop & Start system or a battery with equivalent specifications to a genuine battery. If an unsupported battery is used, Stop & Start system functions may be restricted to protect the battery. Also, battery performance may decrease and the engine may not be able to restart. Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details.
- Vehicles with Stop & Start system: Use a battery that the case size is same as the
 previous one (LN3), 20 hour rate capacity (20HR) is equivalent (65Ah) or greater,
 and performance rating (CCA) is equivalent (603A) or greater.

Vehicles without Stop & Start system: Use a battery that the case size is same as the previous one (LN3), 20 hour rate capacity (20HR) is equivalent (70Ah) or greater, and performance rating (CCA) is equivalent (592A) or greater.

- If the sizes differ, the battery cannot be properly secured.
- If the 20 hour rate capacity of the replacement battery is low, even if the vehicle is used frequently, the battery may discharge and engine may not be able to start.

Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for details.


When the doors cannot be locked from outside the vehicle after the battery was discharged

The doors cannot be locked using the smart entry & start system or wireless remote control.


Disabling the operation of the driver's door

Insert a plastic card, etc. into the gap in the door handle and remove the cover.

To avoid damage, do not apply excessive force to the cover.

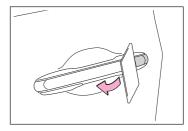

2 Using the mechanical key, turn the door lock to the lock side to disable the door.

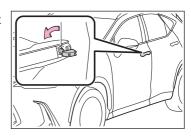


3 Check that the door cannot be opened.


Disabling the operation of doors other than the driver's door

Open the door. Using the mechanical key, slide the cover as shown in the illustration.


To avoid damage, do not apply excessive force to the cover.

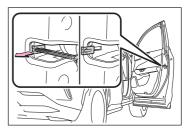

2 Insert the mechanical key into the opening.

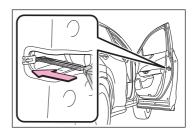

3 Remove the mechanical key and slide the emergency lock cover back to its original position.

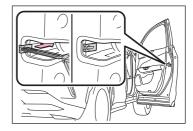

4 Check that all of the doors cannot be opened.


When removing the battery terminals

When disconnecting a battery terminal, contact your Lexus dealer.


When disconnecting a battery terminal, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

9-3. If the engine will not start

To prevent the electronic key (mechanical key) from being locked inside the vehicle, make sure to remove it from the vehicle before disconnecting a battery terminal.

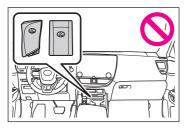

If the electronic key (mechanical key) is to be left in the vehicle, make sure to open a window so an inside manual release handle can be operated.

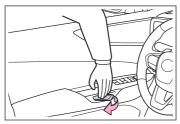

WARNING

■ When removing the battery terminals

Always remove the negative (-) terminal first. If the positive (+) terminal contacts any metal in the surrounding area when the positive (+) terminal is removed, a spark may occur, leading to a fire in addition to electrical shocks and death or serious injury.

Avoiding battery fires or explosions

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the battery:

Do not smoke, use matches, cigarette lighters or allow open flame near the battery.

Battery precautions

The battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the battery:

- When working with the battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately
 wash the affected area with water and seek medical attention.

WARNING

Place a wet sponge or cloth over the affected area until medical attention can be received.

- Always wash your hands after handling the battery support, terminals, and other battery-related parts.
- Do not allow children near the battery.

If a battery terminal has been disconnected

 If a battery terminal has been disconnected, the doors cannot be locked or unlocked using the smart entry & start system or wireless remote control, and the door opener switches will not operate.

Make sure to remove the electronic key (mechanical key) from the vehicle before disconnecting a battery terminal.

If the electronic key (mechanical key) is to be left in the vehicle, open a window so an inside manual release handle can be operated.

- The doors may not be able to be unlocked using the smart entry & start system immediately after a battery terminal is disconnected and reconnected.
 - If the doors cannot be unlocked, use the wireless remote control or mechanical key to lock and unlock the doors.
- When a battery terminal is disconnected, information recorded by various computers will be cleared.
- Some systems may require initialization.

When the interior lights or headlights do not illuminate and the engine cannot be started

Cause	Remedy
	Restarting the engine using the jumper (or booster) cables.
The battery may be discharged.	Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer if the problem cannot be repaired, or if repair procedures are unknown.
One or both of the battery terminals may be disconnected.	Check if a battery terminal is disconnected.
	Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer if the problem cannot be repaired, or if repair procedures are unknown.
The steering lock system may be malfunctioning.	Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

- Related Links -

If the vehicle battery is discharged (P. 556)

Restarting the engine when the battery is discharged (P. 584)

If the vehicle battery is discharged (P. 556)

Key types(P. 44)

Locking/unlocking the doors(P. 57)

Opening/closing the doors(P. 53)

Using the mechanical key(P. 582)

If a door cannot be opened using the door opener switch(P. 589)

When removing the battery terminals (P. 559)

Items to initialize (P. 669)

When the horn sounds at a low volume and the engine cannot be started

Cause	Remedy
The battery may be discharged.	Restarting the engine using the jumper (or booster) cables.
The battery terminal connections may be loose or corroded.	The battery terminals may be loose or corroded.

– Related Links -

If the vehicle battery is discharged (P. 556)

Restarting the engine when the battery is discharged (P. 584)

If the vehicle battery is discharged (P. 556)

When the horn does not sound and the engine cannot be started

Cause	Remedy
The battery may be discharged.	Restarting the engine using the jumper (or booster) cables.
	Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer if the problem cannot be repaired, or if repair procedures are unknown.
One or both of the battery terminals may be disconnected.	Check if a battery terminal is loose.
	Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer if the problem cannot be repaired, or if repair procedures are unknown.
The steering lock system may be malfunctioning.	Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

---- Related Links --

If the vehicle battery is discharged (P. 556)

Restarting the engine when the battery is discharged (P. 584)

If the vehicle battery is discharged(P. 556)

Replacing a tire with a spare tire (vehicles with a spare tire)

Your vehicle is equipped with a spare tire. The flat tire can be replaced with the spare tire.

WARNING

Do not continue driving with a flat tire.


Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

Preparation for lifting the vehicle with a jack

Before lifting the vehicle with a jack, perform the following.

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Change the shift position to P.
- Stop the engine.
- Turn on the emergency flashers.

Storage position of the spare tire/tools/jack

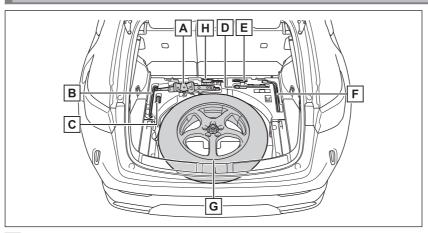

A Jack

WARNING


Improper use of the tire jack may cause the vehicle to fall. Therefore, observe the following precatutions.

WARNING


- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not
 use it on other vehicles, and do not use other tire jacks for replacing tires on this
 vehicle.
- B Jack handle
- C Wheel bolt socket
- D Towing eyelet
- E Guide pin
- F Wheel bolt wrench
- G Spare tire
- H Screwdriver

Taking out the jack

Remove the deck board.

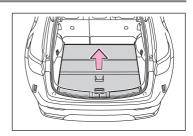

2 Take out the jack.

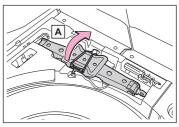


A Remove the rubber band.

Taking out the spare tire


WARNING

When storing the spare tire, be careful so that fingers, etc. do not get caught between the vehicle body and spare tire.

1 Remove the deck board.

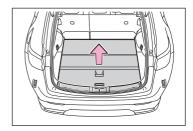

2 Loosen the center fastener that secures the spare tire.

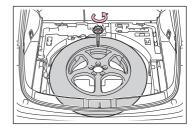

Removing a flat tire

WARNING

Precautions for replacing a flat tire

- Do not try to remove the wheel ornament by hand.
 Take due care in handling the ornament to avoid unexpected personal injury.
- Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven.


After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc., may result in burns.

Setting the power back door when replacing the tires

When replacing a flat tire, make sure to disable the power back door. If not disabled, the power back door may operate unintentionally, and hands or fingers may be caught and injured.

1 Chock the tires.

Wheel chock position

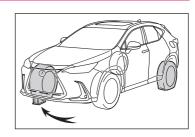

9-4. If a tire is flat

• Flat tire: Front left

Place the wheel chock behind the rear right tire.

• Flat tire: Front right

Place the wheel chock behind the rear left tire.


• Flat tire: Rear left

Place the wheel chock in front of the front right tire.


• Flat tire: Rear right

Place the wheel chock in front of the front left tire.

2 Using a wheel bolt wrench, slightly loosen the wheel bolts (approximately one turn).

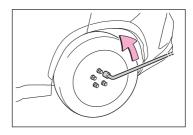


3 Turn the tire jack portion A by hand until the notch of the jack is in contact with the jack point.

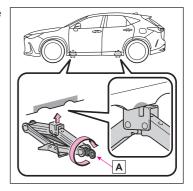


WARNING

Make sure the jack is positioned properly in the jack point.

4 Install the wheel bolt wrench to the jack handle.

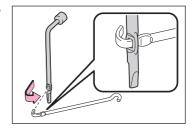

5 Raise the vehicle until the tire is slightly raised off the ground.

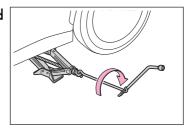


WARNING

Observe the following precautions when using the jack.

- Do not put any part of your body under the vehicle while it is supported by the jack.
- Do not start the engine or drive the vehicle while the vehicle is supported by the jack.
- Do not raise the vehicle while someone is inside.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.
- 6 Remove the uppermost wheel bolt and install the guide pin A by hand.


Turn the guide pin clockwise to tighten it until it stops.

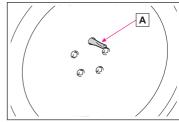

WARNING


When removing or installing a tire, make sure to use the guide pin.

Also, the guide pin is made of resin. It may be damaged if the wheel is placed anywhere other than $\boxed{\mathbf{A}}$ or if a large amount of force is applied to the guide pin.

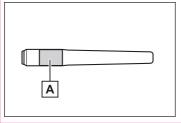

7 Remove the remaining wheel bolts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up, to avoid scratching the wheel surface.

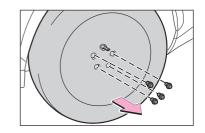

Installing the spare tire

☐ INFORMATION

■ The compact spare tire

Observe the following precautions when installing a spare tire.

 The compact spare tire is identified by the label "TEMPORARY USE ONLY" on the tire sidewall.

Use the compact spare tire temporarily, and only in an emergency.

• Make sure to check the tire inflation pressure of the compact spare tire.


WARNING

Observe the following precautions when using a spare tire.

- Remember that the compact spare tire provided is specifically designed for use with your vehicle. Do not use your spare tire on another vehicle.
- Do not use more than one compact spare tire simultaneously.


1 Remove any dirt or foreign matter from the wheel contact surfaces and wheel bolts.

If foreign matter is not removed, the wheel bolts may loosen while the vehicle is in motion, and the wheel may come off.

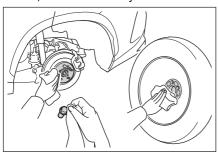

2 Align a wheel bolt hole on the spare tire with the guide pin, and set the spare tire on the guide pin.


Securely set the spare tire so that its wheel is touching the contact surface.

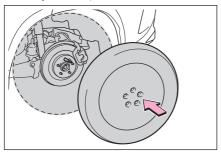

WARNING

When removing or installing a tire, make sure to use the guide pin.


Also, the guide pin is made of resin. It may be damaged if the wheel is placed anywhere other than $\overline{\mathbf{A}}$ or if a large amount of force is applied to the guide pin.

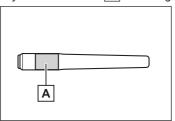

3 Loosely tighten each wheel bolt by hand or using a wheel bolt socket A.

Push the spare tire to prevent it from falling.

Do not use the wheel bolt socket for anything other than loosely tightening the wheel bolts by hand.

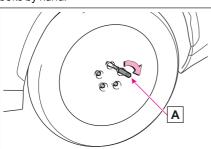

WARNING


Observe the following precautions. Failure to do so may lead to the wheel bolts loosening and the tire falling off.

Never apply oil or grease to the wheel bolts or their contact surface on the wheel
 A


Doing so may cause the wheel bolts to be tightened excessively, leading to damage to the wheel bolts, the threaded portion the wheel bolts install to ${\bf B}$, or the wheel.

Also, the wheel bolts may come loose, possibly leading to the wheel coming off, causing a serious accident.


If oil or grease is attached to either of these parts, remove it.

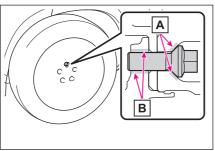

- When installing a wheel, use the same wheel bolts that were removed with the wheel. Also, do not use any wheel bolts other than Lexus Genuine wheel bolts.
- If a wheel bolt hole in a wheel or the threads of a wheel bolt or the wheel hub are deformed, cracked, rusty or otherwise damaged, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- Do not install the wheel ornament if it is damaged, as it may fly off the wheel while the vehicle is being driven.
- 4 Remove the guide pin and loosely tighten the wheel bolt as in step 3.

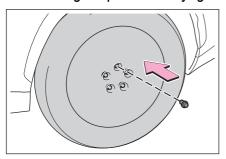

5 Lower the vehicle.

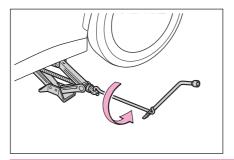


WARNING

When lowering the vehicle, make sure that no one is near the vehicle. If there are people nearby, warn them vocally before lowering the vehicle.

6 Firmly tighten each wheel bolt in the order shown in the illustration two or three times.

Tightening torque: 140 N·m (14.3 kgf·m, 103 ft·lbf)

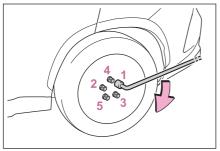

WARNING

- When tightening the wheel bolts, do not tighten them excessively. Doing so may cause the wheel bolts, the threads of the wheel hub, or the wheel to be damaged.
- Have the wheel bolts tightened with a torque wrench to 140 N•m (14.3 kgf•m, 103 ft•lbf) as soon as possible after changing wheels.
- 7 Stow the flat tire, tire jack and all tools.

■ When using the compact spare tire

As the compact spare tire is not equipped with a tire pressure warning valve and transmitter, low inflation pressure of the spare tire will not be indicated by the tire

pressure warning system. Also, if you replace the compact spare tire after the tire pressure warning light comes on, the light remains on.

■ When a compact spare tire is installed

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires.

WARNING

When using the compact spare tire

- Replace the compact spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

When the compact spare tire is attached

The vehicle speed may not be correctly detected, and the following systems may not operate correctly:

- ABS & Brake assist
- VSC
- TRC.
- Trailer Sway Control
- EPS
- Dynamic radar cruise control
- PCS (Pre-Collision System)
- LTA (Lane Tracing Assist)
- LDA (Lane Departure Alert)
- Lexus parking assist monitor*
- RSA (Road Sign Assist)*
- Panoramic view monitor*
- Lexus parking assist-sensor*
- PKSB (Parking Support Brake)*
- Navigation system*
- BSM (Blind Spot Monitor)*
- Automatic High Beam*

^{*:} If equipped

WARNING

- AHS (Adaptive High-beam System)*
- AFS (Adaptive Front-lighting System)*
- Tire pressure warning system

Also, not only can the following system not be utilized fully, but it may even negatively affect the drive-train components:

- AWD system (AWD models)
- Speed limit when using the compact spare tire

Do not drive at speeds in excess of 80 km/h (50 mph) when a compact spare tire is installed on the vehicle.

The compact spare tire is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.

After using the tools and jack

After using the tools and jack, before driving, make sure that the tools and jack are securely stored. Failure to do so may result in injury during a collision or sudden braking.

⚠ NOTICE

Be careful when driving over bumps with the compact spare tire installed on the vehicle

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires. Be careful when driving over uneven road surfaces.

When replacing the tires

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

If you get a flat front tire on a snowy or icy road (vehicles with a spare tire)

⚠ NOTICE

Do not install tire chains to a compact spare tire.

Tire chains may damage the vehicle body and adversely affect driving performance.

Install the compact spare tire on the rear of the vehicle. Perform the following steps and install tire chains to the front tires:

- 1 Replace a rear tire with the compact spare tire.
- 2 Replace the flat front tire with the tire removed from the rear of the vehicle.
- 3 Install tire chains to the front tires.

– Related Links –

Replacing a tire with a spare tire (vehicles with a spare tire)(P. 565)


Precautions for when you have a flat tire (vehicles with run-flat tires)

Your vehicle is not equipped with a spare tire, but instead you can continue driving the vehicle with run-flat tires even if any tire goes flat. In this case, slow down and drive with extra caution.

Take your vehicle to the nearest authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer, or authorized tire dealer as soon as possible if any tire goes flat.

The vehicle can be driven for a maximum of $80 \, \text{km} (50 \, \text{miles})$ at a speed below $80 \, \text{km/h} (50 \, \text{mph})$ after the tire pressure warning light comes on.

A run-flat tire has a mark on the side wall.

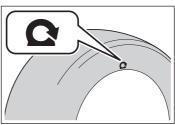

In some conditions (such as at high temperatures)

You cannot continue driving for up to 80 km (50 miles).

⚠ NOTICE

When replacing the tires

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

When driving over bumps

If a vehicle has a flat tire, the vehicle height will be lower than usual. Ensure that nothing strikes the bottom of the vehicle.

■ To avoid damage to the tire pressure warning valves and transmitters

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire.

If a key has been lost

New genuine mechanical keys can be made by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer using another mechanical key and the key number stamped on your key number plate.

Keep the plate in a safe place such as your wallet, not in the vehicle.



If the electronic key remains lost, the risk of vehicle theft increases significantly. Visit any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer immediately with all remaining electronic keys and the card key * that were provided with your vehicle.

^{*:} If equipped

When the doors/windows/moon roof cannot be operated using an electronic key

If communication between the electronic key and vehicle is interrupted or the electronic key cannot be used because the battery is depleted, the smart entry & start system and wireless remote control cannot be used.

The smart entry & start system may have been disabled by a customize setting. In this case, change the customize setting to enable the smart entry & start system.



When taking the vehicle to any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer due to a malfunction of the smart entry & start system, make sure to bring all registered electronic keys (including the card key).

The electronic key may have been set to battery saving mode.

battery saving mode has been set, cancel it.

The battery of the electronic key may be discharged.

- Replace the battery.
- Using the mechanical key.

The battery may be discharged.

Restarting the engine using the jumper (or booster) cables.

Replace the electronic key battery

Replace the battery with a new one if it is depleted.

The battery for the card key is available only at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. Your Lexus retailer or Lexus authorized repairer, or any reliable repairer can replace the battery for you.

Prepare the following before replacing the battery:

- Flathead screwdriver
- Small flathead screwdriver
- Lithium battery CR2032

☐ INFORMATION

■ Use a CR2032 lithium battery


Batteries can be purchased at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer, local electrical appliance shops or camera stores.

■ If the electronic key battery is depleted

The following symptoms may occur:


- The smart entry & start system and wireless remote control will not function properly.
- The operational range will be reduced.

1 Take out the mechanical key.

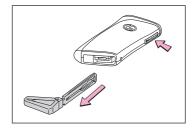


2 Remove the cover.

To prevent damage to the key, cover the tip of the flathead screwdriver with a tape.

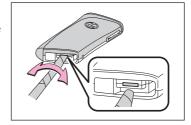

3 Remove the depleted battery.

Insert a new battery with the "+" terminal facing up.

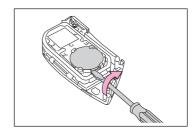

▲ WARNING

Battery precautions

Observe the following precautions. Failure to do so may result in death or serious injury.

WARNING

- Do not swallow the battery. Doing so may cause chemical burns.
- A coin battery or button battery is used in the electronic key. If a battery is swallowed, it may cause severe chemical burns in as little as 2 hours and may result in death or serious injury.
- Keep away new and removed batteries from children.
- If the cover cannot be firmly closed, stop using the electronic key and stow the key in the place where children cannot reach, and then contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- If you accidentally swallow a battery or put a battery into a part of your body, get emergency medical attention immediately.

■ To prevent battery explosion or leakage of flammable liquid or gas

- Replace the battery with a new battery of the same type. If a wrong type of battery is used, it may explode.
- Do not expose batteries to extremely low pressure due to high altitude or extremely high temperatures.
- Do not burn, break or cut a battery.
- Lithium battery precautions

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS



When replacing the battery

Use a flathead screwdriver of appropriate size. Applying excessive force may deform or damage the cover.

For normal operation after replacing the battery


Observe the following precautions to prevent accidents:

- Always work with dry hands.
 Moisture may cause the battery to rust.
- Do not touch or move any other component inside the remote control.
- Do not bend either of the battery terminals.

Using the mechanical key

To take out the mechanical key, push the release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has a groove on one side. If the key cannot be inserted in a lock cylinder, turn it over and attempt to insert it again. After using the mechanical key, return it to its original position and carry it with the electronic key. If the electronic key battery is depleted, the entry function is not operating properly, or the vehicle battery is discharged, you will need the mechanical key.

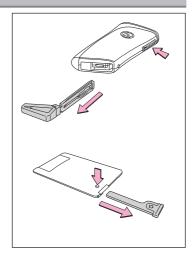

⚠ NOTICE


Do not apply excess force when inserting the mechanical key into the card key. Doing so may damage the card key.

If the incorrect key is used

The key cylinder rotates freely to isolate inside mechanism.

■ Card key

- If it is difficult to take out the mechanical key, push down the release button using a pen tip, etc. If it is still difficult to pull it out, use a coin, etc.
- To store the mechanical key in the card key, insert it while pressing the release button.

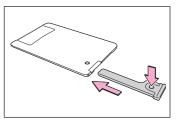


■ Alarm*

Using the mechanical key to lock the doors will not set the alarm system. If a door is unlocked using the mechanical key when the alarm system is set, the alarm may be triggered.


Locking/unlocking the doors

Insert a plastic card, etc. into the gap in the door handle and remove the cover.

To avoid damage, do not apply excessive force to the cover.

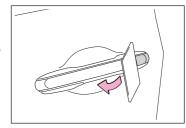


2 Use the mechanical key in order to perform the following operations:

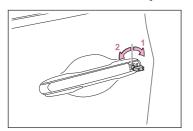

- 1 Unlocks all the doors
- 2 Locks all the doors

■ Key linked functions

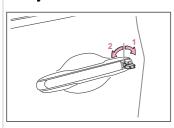

- 1 Opens the windows and the moon roof or panoramic moon roof (turn and hold) 1
- 2 Closes the windows and the moon roof or panoramic moon roof (turn and hold) 1

^{*:} If equipped

^{*1:} These settings must be customized at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

WARNING

Operate the power window and moon roof or panoramic moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window or moon roof or panoramic moon roof. Also, do not allow children to operate the mechanical key. It is possible for children and other passengers to get caught in the power window or moon roof or panoramic moon roof.

Restarting the engine when the battery is discharged

If you have a set of jumper (or booster) cables and a second vehicle with a battery, you can jump start your vehicle by following the steps below.

The engine cannot be started by push-starting.

WARNING

Avoiding battery fires or explosions

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the + and clamps of the jumper cables to come into contact with each other
- Do not allow the other end of the jumper cable connected to the "+" terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not smoke, use matches, cigarette lighters or allow open flame near the battery.

Battery precautions


The battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the battery:

- When working with the battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately
 wash the affected area with water and seek medical attention. Place a wet sponge or
 cloth over the affected area until medical attention can be received.

WARNING


- Always wash your hands after handling the battery support, terminals, and other battery-related parts.
- Do not allow children near the battery.
- Confirm that the electronic key is being carried.

When connecting the jumper (or booster) cables, depending on the situation, the alarm may activate and the doors may lock.

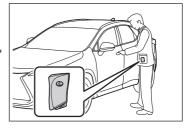


- Open the hood.
- 3 Remove the positive (+) battery terminal cover.


► NX250

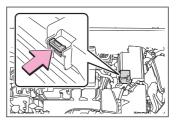

▶ NX350

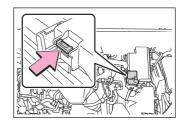


► NX200

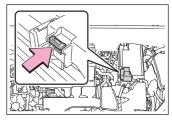

4 Connect a positive jumper cable clamp to A on your vehicle and connect the clamp on the other end of the positive cable to B on the second vehicle. Then, connect a negative cable clamp to C on the second vehicle and connect the clamp at the other end of the negative cable to D

► NX200

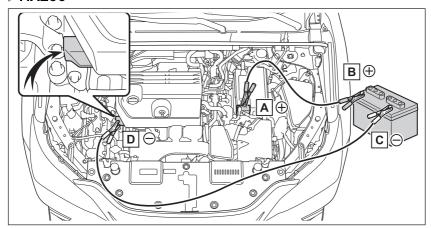


- A Exclusive jump starting terminal (your vehicle)
- B Positive (+) battery terminal (second vehicle)
- C Negative (-) battery terminal (second vehicle)
- D Solid, stationary, unpainted metallic point away from the exclusive jump starting terminal and any moving parts as shown in the illustration

⚠ NOTICE

When handling jumper cables

When connecting the jumper cables, ensure that they do not become entangled in the cooling fan or belt.

▶ NX250

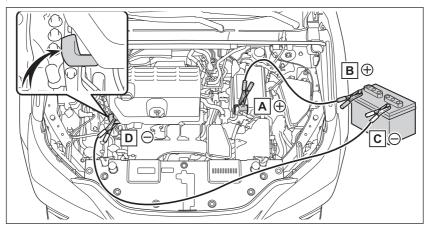


- A Exclusive jump starting terminal (your vehicle)
- B Positive (+) battery terminal (second vehicle)
- C Negative (-) battery terminal (second vehicle)
- D Solid, stationary, unpainted metallic point away from the exclusive jump starting terminal and any moving parts as shown in the illustration

⚠ NOTICE

When handling jumper cables

When connecting the jumper cables, ensure that they do not become entangled in the cooling fan or belt.

► NX350

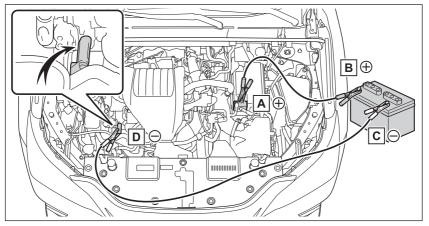

A Exclusive jump starting terminal (your vehicle)

9-5. If a door cannot be opened or locked

- B Positive (+) battery terminal (second vehicle)
- C Negative (-) battery terminal (second vehicle)
- D Solid, stationary, unpainted metallic point away from the exclusive jump starting terminal and any moving parts as shown in the illustration

⚠ NOTICE

■ When handling jumper cables

When connecting the jumper cables, ensure that they do not become entangled in the cooling fan or belt.

- 5 Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the battery of your vehicle.
- 6 Open and close any of the doors of your vehicle with the engine switch off.
- 7 Maintain the engine speed of the second vehicle and start the engine of your vehicle by turning the engine switch to ON.
- 8 Once the vehicle's engine has started, remove the jumper cables in the exact reverse order from which they were connected.

Once the engine starts, have the vehicle inspected at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer as soon as possible.

If a door cannot be opened using the door opener switch

If a door cannot be opened using the door opener switch, it can be opened using a manual release handle.


Operating a manual release handle



⚠ NOTICE

Normally, the manual release handles cannot be used to open the doors. To enable manual release handle operation, perform the following. If the following is not performed and/or a manual release handle is operated with force, it may deform or be damaged.

Outside the vehicle

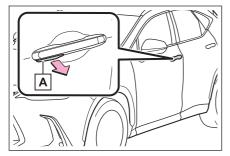


Pull the manual release handle **A** to open the door.

Normally, the manual release handles cannot be used to open the doors.

To open a door, enable manual release handle operation. \rightarrow P.591

▶ Inside the vehicle

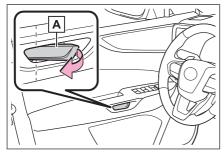

Pull the manual release handle **A** twice to open the door.


Pulling the handle once will enable operation. Pulling the handle again will open the door.

Manual release handle operating conditions


 If the vehicle is involved in a severe frontal or rear collision, manual release handle operation will be enabled for all of the doors.

However, the manual release handle may not become operable depending on the force of the impact and conditions of the collision.

- When the battery voltage drops slowly while a door was unlocked It may not work depending on how it is lowered.
- When manual release handle operation is enabled from inside the vehicle

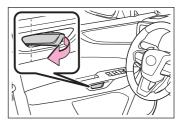

 When manual release handle operation is enabled from outside the vehicle using a mechanical key

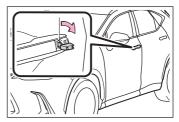

■ Conditions which manual release handle operation is disabled

- Normally, operation of the outside manual release handles is disabled, and they cannot be used to open the doors.
 - When operation is enabled by operating a manual release handle or using a mechanical key, operation will be disabled automatically if the door is opened using the door opener switch or locked.
- Operation of the inside manual release handles is disabled when the engine switch is in ON, and they cannot be used to open the doors.
 - When operation is enabled by operating a manual release handle or using a mechanical key, operation will be disabled automatically if the door is opened using the door opener switch or locked.

To prevent a door from being opened accidentally, when the engine switch is in ON, after an inside manual release handle is operated once, operation will automatically be disabled after approximately 1 second.

- Related Links


Using the mechanical key(P. 582)

Enabling outside manual release handle operation using a mechanical key

Operation of a manual release handle can be enabled by unlocking a door with the mechanical key.


Insert a plastic card, etc. into the gap in the door handle and remove the cover.

To avoid damage, do not apply excessive force to the cover.

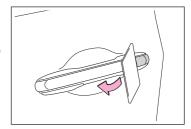


Using the mechanical key, turn the lock cylinder to the unlock side to enable the manual release handle.

 The mechanical key can only be inserted in one direction, as the key only has a groove on one side.



 Operation of the manual release handle will be enabled.



If the rear doors cannot be opened from the inside

The child-protector lock may be engaged.

Open the door from outside the vehicle and disengage the child-protector lock.

- Related Links -


Preventing the rear doors from being opened from the inside of the vehicle (child-protector lock) (P. 26)

If the back door cannot be opened

The back door can be unlocked from the inside.


Using a flathead screwdriver, remove the cover.

To protect the cover, place a rag between the flathead screwdriver and the cover as shown in the illustration.

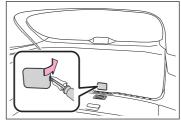


Vehicles without a power back door:

2 Turn the cover.

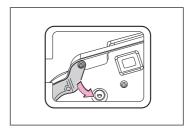


3 Using a screwdriver, push the lever.

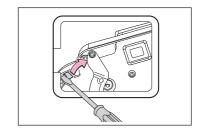


Vehicles with a power back door:

4 Loosen the screw and turn back the cover.

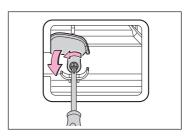

5 Using a screwdriver, push the lever.

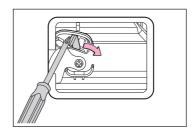

If the moon roof does not operate correctly

If the moon roof closes but then re-opens slightly

- 1 Stop the vehicle.
- 2 Press and hold the ⇔switch.*1

The moon roof will close, reopen and pause for approximately 10 seconds. \star2

Then it will close again, tilt up and pause for approximately 1 second. Finally, it will tilt down, open and close.

3 Check to make sure that the moon roof completely stops and then release the switch.

If the moon roof reverses and does not fully close even after performing the previous procedure, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

If the moon roof tilts down but then tilts back up

- 1 Stop the vehicle.
- 2 Press and hold the switch until the moon roof moves into the tilt up position and stops.*3
- Release the switch once and then press and hold the switch again.*

 The moon roof will pause for approximately 10 seconds in the tilt up position.*4
- 4 Check to make sure that the moon roof is completely closed and then release the switch.
- *1: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.
- *2: If the switch is released after the above mentioned 10 second pause, automatic operation will be disabled. In that case, press and hold the or switch, and the moon roof will tilt up and pause for approximately 1 second. Then it will tilt down, open and close. Check to make sure that the moon roof is completely closed and then release the switch.
- *3: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.
- *4: If the switch is released after the above mentioned 10 second pause, automatic operation will be disabled. In that case, press and hold the concept switch, and the moon roof will tilt up and pause for approximately 1 second. Then it will tilt down, open and close. Check to make sure that the moon roof is completely closed and then release the switch.

9-6. If the moon roof or electronic sunshade does not operate correctly

If the moon roof reverses and does not fully close even after performing the previous procedure, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

If the panoramic moon roof/electronic sunshade does not operate correctly

Initialize panoramic moon roof / electronic sunshade

- 1 Stop the vehicle.
- 2 Turn the engine switch to ON.
- 3 Slide and hold the switch or switch forward. Continue pressing the switch for approximately 10 seconds after the panoramic moon roof or electronic sunshade closes and reopens. The panoramic moon roof and electronic sunshade will start to close.*1
- 4 Check that the panoramic moon roof and electronic sunshade are fully closed and release the switch.

If the moon roof reverses and does not fully close even after performing the previous procedure, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.


^{*1:} If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.

If the fuel filler door cannot be opened


If the fuel filler door opener switch cannot be operated, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer to service the vehicle. In case where refueling is urgently necessary, the following procedure can be used to open the fuel filler door.

 Remove the cover inside the luggage compartment by inserting a screwdriver.

When removing the cover, to prevent damage, cover the tip of the screwdriver with a rag.

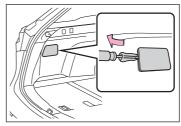

2 Pull the lever.

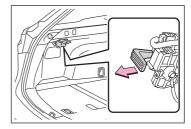

When the wireless charger operation indicator light (on the charging tray) flashes*

When the wireless charger indicator light continuously flashes once per second (orange / green)

Cause	Remedy
Poor communication between the vehicle and wireless charger.	If the engine is running, stop the engine and then restart it. When the wireless charger operation indicator light (on the charging tray)continuously flashes Also, if a case or cover is installed to the portable device, remove it.

When the wireless charger indicator light continuously flashes 3 times quickly (orange)

Cause	Remedy
 The following causes are possible. Foreign matter detected: If a metallic foreign object is detected in the charge area, the overheat prevention function of the charging coil will operate Portable device not aligned correctly: If the charging coil of a portable device is not properly positioned on the charging area, the overheat prevention function of the charging coil will operate 	 Remove the foreign object from the charge area. Remove the portable device from the charging tray, check that the operation indicator light changes back to green, and then place the portable device so that it is near the center of the charging tray. Also, if a case or cover is installed to the portable device, remove it.

^{*:} If equipped

When the wireless charger indicator light continuously flashes 4 times quickly (orange)

Cause	Remedy
The temperature inside the wireless charger may have become too high.	Stop charging, remove the portable device from the charging tray, and wait for the temperature to decrease before attempting to begin charging again.

When the engine can be started but the vehicle does not move

There may be a problem with the drivetrain.

Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer or commercial towing service before towing.

If the transmission makes abnormal sounds

There may be a problem with the drivetrain.

Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer or commercial towing service before towing.

Towing with a tow truck

⚠ NOTICE

■ To prevent damage to the vehicle when towing using a wheel-lift type truck

 
- Do not tow the vehicle from the rear when the engine switch is off. The steering lock mechanism is not strong enough to hold the front wheels straight.
- When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

Towing a front-wheel drive vehicle with a tow truck

If towing is necessary, we recommend having your vehicle towed by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer or commercial towing service, using a wheel-lift type truck or flatbed truck. Use a safety chain system for all towing, and abide by all state/provincial and local laws.

WARNING

Be sure to transport the vehicle with the front wheels raised or with all four wheels raised off the ground. If the vehicle is towed with the front wheels contacting the ground, the drivetrain and related parts may be damaged.




⚠ NOTICE

Towing with a sling-type truck

Do not tow with a sling-type truck to prevent body damage.




▶ From the front

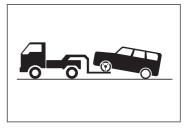

Release the parking brake.

Turn automatic mode off.

▶ From the rear

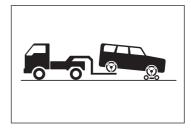


Use a towing dolly under the front wheels.

Towing an all-wheel drive vehicle with a tow truck

If towing is necessary, we recommend having your vehicle towed by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer or commercial towing service, using a wheel-lift type truck or flatbed truck. Use a safety chain system for all towing, and abide by all state/provincial and local laws.

WARNING

Be sure to transport the vehicle with all four wheels raised off the ground. If the vehicle is towed with the tires contacting the ground, the drivetrain or related parts may be damaged, the vehicle may fly off the truck.

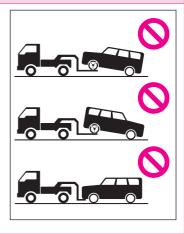


⚠ NOTICE

■ Towing with a sling-type truck

Do not tow with a sling-type truck to prevent body damage.




▶ From the front

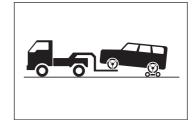

Use a towing dolly under the rear wheels.

▶ From the rear

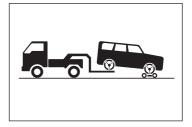

Use a towing dolly under the front wheels.

Using a flatbed truck

When using a flat-bed truck to transport the vehicle, use tire strapping belts. Refer to the owner's manual of the flat-bed truck for the tire strapping method.

In order to suppress vehicle movement during transportation, set the parking brake and turn the engine switch off.

Towing with another vehicle

If towing is necessary, we recommend having your vehicle towed by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer or commercial towing service, using a wheel-lift type truck or flatbed truck. Use a safety chain system for all towing, and abide by all state/provincial and local laws.

⚠ NOTICE

■ When towing a vehicle equipped with a Stop & Start system

If it is necessary to tow the vehicle with all 4 wheels on the ground, perform the following procedure before towing the vehicle, in order to protect the system. Turn the engine switch off and then start the engine or turn the engine switch to ON.

Emergency towing

Automatic transmission: If a tow truck is not available in an emergency, your vehicle may be temporarily towed using cables or chains secured to the emergency towing eyelets. This should only be attempted on hard surfaced roads for short distances at under 30 km/h (18 mph).

Multidrive: If a tow truck is not available in an emergency, your vehicle may be temporarily towed using cables or chains secured to the emergency towing eyelets. This should only be attempted on hard surfaced roads for at most 80 km (50 miles) at under 30 km/h (18 mph).

A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

Situations when it is not possible to be towed by another vehicle (Automatic transmission)

In the following situations, it is not possible to be towed by another vehicle using cables or chains, as the front wheels may be locked due to the parking lock.

Contact any authorized Lexus retailer or Lexus authorized repairer or any reliable repairer, or commercial towing service.

- There is a malfunction in the shift control system.
- There is a malfunction in the engine immobilizer system.
- ullet There is a malfunction in the smart entry & start system.(\rightarrow P.554)
- The battery is discharged.

- Related Links

Changing the engine switch mode(P. 123)

If a warning message is displayed (P. 537)

Enable the engine immobilizer system(P. 63)

If the vehicle battery is discharged (P. 556)

Emergency towing procedure

To have your vehicle towed by another vehicle, the towing eyelet must be installed to your vehicle. Install the towing eyelet using the following procedure.


WARNING

For vehicles with an automatic transmission:


Do not perform any of the following as doing so may cause the parking lock mechanism to engage, locking the front wheels and possibly leading to an accident resulting in death or serious injury:

- Unfasten the driver's seat belt and open the driver's door.
- Turn the engine switch off.
- 1 Take out the flathead screwdriver and towing eyelet.
- 2 Remove the eyelet cover using a flathead screwdriver.


To protect the bodywork, place a rag between the screwdriver and the vehicle body as shown in the illustration.

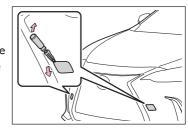

Insert the towing eyelet into the hole and tighten partially by hand.

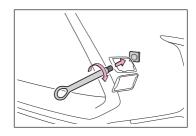

4 Tighten down the towing eyelet securely using a wheel bolt wrench or hard metal bar.

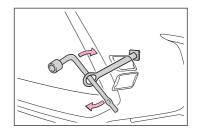

☐ INFORMATION

■ Wheel bolt wrench

Vehicles without wheel bolt wrench: Wheel bolt wrench can be purchased at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Vehicles with wheel bolt wrench: Wheel bolt wrench is installed in luggage compartment.

WARNING

When installing towing eyelets to the vehicle, make sure to securely install them to the specified positions.

If not securely installed, towing eyelets may come loose during towing.

5 Securely attach cables or chains to the towing eyelet.

Take care not to damage the vehicle body.

⚠ NOTICE

To prevent damage to the vehicle during emergency towing, do not secure cables or chains to the suspension components.

6 Enter the vehicle being towed and start the engine.

If the engine does not start, turn the engine switch to ON.

■ While towing

If the engine is not running, the power assist for the brakes and steering will not function, making steering and braking more difficult.

▲ WARNING

For vehicles with an automatic transmission: Do not turn the engine switch off. This may lead to an accident as the front wheels will be locked by the parking lock.

WARNING

For vehicles with a multidrive: Do not turn the engine switch off. There is a possibility that the steering wheel is locked and cannot be operated.

7 Shift the shift position to N and release the parking brake.

Turn auto mode of the parking brake off.

Multidrive: When the shift lever cannot be shifted: \rightarrow P.149

WARNING

When towing, avoid sudden starts, etc., which place excessive stress on the towing eyelets, cables or chains. The towing eyelets, cables or chains may become damaged, broken debris may hit people, and cause serious damage.

Getting unstuck from mud, sand, or snow

- 1 Stop the engine. Set the parking brake and shift the shift position to P.
- 2 Remove the mud, snow or sand from around the front wheels.
- 3 Place wood, stones or some other material under the front wheels to help provide traction.
- 4 Restart the engine.
- 5 Shift the shift position to D or R and release the parking brake. Then, while exercising caution, depress the accelerator pedal.

WARNING

- When shifting the shift lever, do not shift it with the accelerator pedal depressed.
 Doing so may lead to unexpected rapid acceleration of the vehicle that may cause an accident.
- If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people.
 The vehicle may also lunge forward or lunge back suddenly as it becomes free.
 Use extreme caution.

M NOTICE

Avoid spinning the front wheels and depressing the accelerator pedal more than necessary.

Doing so may damage the transmission and other components.

6 If it is difficult to free the vehicle, press the switch and turn the TRC off.

If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.

If a vehicle abnormality is found

The following symptoms are abnormal.

- Fluid leaks under the vehicle
 Water dripping from the air conditioning after use is normal.
- Flat-looking tires or uneven tire wear
- Engine coolant temperature gauge continually points higher than normal.
 Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer as soon as possible. Your vehicle probably needs adjustment or repair.

If abnormal sounds are emitted from the vehicle

Condition	Remedy
The following sounds are abnormal sounds.	
Changes in exhaust sound	Contact any authorized Lexus re-
Excessive tire squeal when cornering	tailer or Lexus authorized repairer,
Strange noises related to the suspension system	or any reliable repairer as soon as possible. Your vehicle probably
Pinging or other noises related to the engine	needs adjustment or repair.

If the vehicle behaves abnormally


The following symptoms are abnormal.

- Engine misfiring or misses, stumbling or running roughly
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor
 Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer as soon as possible. Your vehicle probably needs adjustment or repair.

The steering wheel cannot be turned after the engine is stopped

It is locked automatically to prevent theft of the vehicle.

• When the steering lock cannot be released, "Push ENGINE Switch while Turning The Steering Wheel in Either Direction" will be displayed on the multi-information display. Check that the shift position is in P. Press the engine switch while turning the steering wheel left and right.

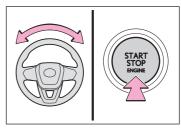

 To prevent the steering lock motor from overheating, operation of the motor may be suspended if the engine is turned on and off repeatedly in a short period of time. In this case, refrain from running the engine. After about 10 seconds, the steering lock motor will resume functioning.

Related Links

Changing the engine switch mode(P. 123)

If the windows do not open or close by operating the power window switches

Check if the window lock switch is on.

If the window lock switch is on, the power windows other than that for the driver's seat cannot be operated.

Turn the window lock switch off.

- When the jam protection function or catch protection function operates unusually and the side window cannot be opened or closed, perform the following operations with the power window switch of that door.
 - Stop the vehicle. With the engine switch in ON, within 4 seconds of the jam
 protection function or catch protection function activating, continuously operate
 the power window switch in the one-touch closing direction or one-touch opening
 direction so that the door window can be opened and closed.
 - If the door window cannot be opened and closed even when performing the above operations, perform the procedure for function initialization.

- Related Links -

Functions which aid in safe opening and closing of the windows(P. 94)

Operations using the power window switches (P. 95)

Prevent accidental operation of the windows (P. 97)

Initializing the jam protection function/catch protection function

- 1 Turn the engine switch to ON.
- 2 Pull and hold the power window switch in the one-touch closing direction and completely close the side window.
- 3 Release the power window switch for a moment, resume pulling the switch in the one-touch closing direction, and hold it there for approximately 6 seconds or more.
- 4 Press and hold the power window switch in the one-touch opening direction. After the side window is completely opened, continue holding the switch for an additional 1 second or more.
- 5 Release the power window switch for a moment, resume pushing the switch in the one-touch opening direction, and hold it there for approximately 4 seconds or more.

6 Pull and hold the power window switch in the one-touch closing direction again. After the side window is completely closed, continue holding the switch for a further 1 second or more.

If you release the switch while the window is moving, start again from the beginning. If the window reverses and cannot be fully closed or opened, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

– Related Links

Functions which aid in safe opening and closing of the windows (P. 94)

Operations using the power window switches(P. 95)

The engine switch is turned off automatically

In the following situations, power will be turned off due to the automatic power off function.

- The vehicle is left in ACC or ON (the engine is not running) for more than 20 minutes with the shift position in P.
- The battery is low with the shift position is in P and the engine switch is in ACC or ON (the engine is not running).

Next time when starting the engine, increase the engine speed slightly and maintain that level for approximately 5 minutes to recharge the battery.

Do not leave the vehicle with the engine switch in ACC or ON for long periods of time when the engine is not running.

If your vehicle overheats

The following may indicate that your vehicle is overheating.

- The engine coolant temperature gauge is in the red zone.
- A loss of engine power is experienced. (For example, the vehicle speed does not increase.)
- "Engine Coolant Temp High Stop in a Safe Place See Owner's Manual" is displayed on the multi-information display.
- Steam comes out from under the hood.

If the needle of the engine coolant temperature gauge is in the red zone or "Engine Coolant Temp High Stop in a Safe Place See Owner's Manual" is displayed on the multi-information display

Stop the vehicle in a safe place, turn off the air conditioning system, and stop the engine.

WARNING

Do not touch or approach parts in the engine compartment while the cooling fan is operating.

Do not touch or approach rotating parts such as the fan, which may lead to fingers or clothing (especially a tie, a scarf or a muffler) getting caught, resulting in serious injury.

The cooling fan operates automatically when the air conditioning system is operating and when the coolant temperature is high.

Also, it may operate for several minutes even after the engine switch is turned off.

2 If you do not see steam, carefully lift the hood.


If you see steam, carefully lift the hood after the steam subsides.

WARNING

When opening the hood, observe the following precautions.

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.
- Do not loosen the radiator cap and the coolant reservoir caps while the engine and radiator are hot. High temperature steam or coolant could spray out.
- 3 After the engine has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.


If a large amount of coolant has leaked, immediately contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

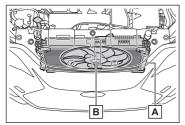

- A Radiator
- B Cooling fan


4 Check that the coolant level is between the [FULL] and [LOW] lines on the reservoir.

▶ Engine

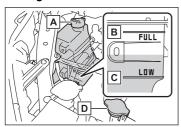

- A Reservoir
- B [FULL] line
- C [LOW] line
- D Radiator cap

► Intercooler (NX350 only)

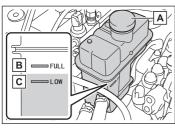


- A Reservoir
- B [FULL] line
- C [LOW] line


5 Add coolant if necessary.

Water can be used in an emergency if coolant is unavailable.

▶ Engine

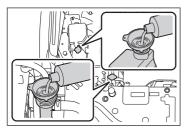

▶ Intercooler (NX350 only)

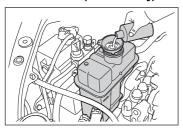

⚠ NOTICE

When adding engine coolant

Add coolant slowly after the engine has cooled down sufficiently.

Adding cool coolant to a hot engine too quickly can cause damage to the engine.

■ To prevent damage to the cooling system

Observe the following precautions:

- Avoid contaminating the coolant with foreign matter (such as sand, dust, etc.).
- Do not use coolant additives.
- 6 Start the engine and turn the air conditioning system on to check that the radiator cooling fan operate and to check for coolant leaks from the radiator or hoses.

The fan operates when the air conditioning system is turned on immediately after a cold start.

Confirm that the fan is operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly. (The fan may not operate in freezing temperatures.)

7 If the fan is not operating: Stop the engine immediately and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. If the fan is operating: Have the vehicle inspected at the nearest any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

8 Check if "Engine Coolant Temp High Stop in a Safe Place See Owner's Manual" is displayed on the multi-information display.

If the message does not disappear: Stop the engine and contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

If the message is not displayed: Have the vehicle inspected at the nearest authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

If electrical components cannot be used or do not operate when a switch is operated

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.

— Related Links —

Checking and replacing fuses(P. 625)

If a light does not illuminate

The following may be the cause:

- The battery may be discharged.
- One or both of the battery terminals may be disconnected.
- The steering lock system may be malfunctioning.
- A fuse may have blown. Check the fuses.

Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer if the problem cannot be repaired, or if repair procedures are unknown.

☐ INFORMATION

■ Condensation build-up on the inside of a lens

Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction. Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for more information in the following situations:

- Large drops of water have built up on the inside of the lens.
- Water has built up inside the headlight.

Checking and replacing fuses

▲ WARNING

Observe the following precautions. Failure to do so may cause damage to the vehicle, possibly leading to a fire or injury.

- Never use a fuse of a higher amperage rating than specified, or use any other object in place of a fuse.
- Always use a genuine Lexus fuse or equivalent. Never replace a fuse with a wire, even as a temporary fix.
- Do not modify the fuses or fuse boxes.


M NOTICE

Have the cause of electrical overload determined and repaired by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer as soon as possible.

- 1 Turn the engine switch off.
- 2 Open the fuse box cover.


► Engine compartment (Type A)

Push in the claw and remove the lid.

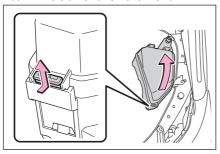


► Engine compartment (Type B)

Push in the claw and remove the lid.

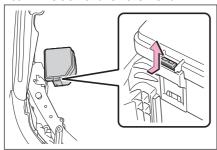


▶ Left side instrument panel

Remove the lid.

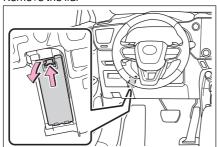


3 Remove the fuse.

Only some fuses can be removed using the pullout tool.

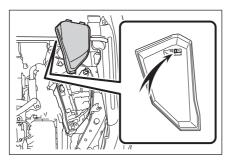

4 Check if the fuse is blown.

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

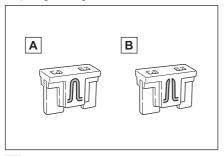

- A Normal fuse
- B Blown fuse

☐ INFORMATION

■ After a fuse is replaced

- When installing the lid, make sure to engage the claw securely.
- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement.
- If the replaced fuse blows again, have the vehicle inspected by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

If a circuit is overloaded

The fuses are designed to blow, protecting the wiring harness from damage.

■ When replacing light bulbs

Lexus recommends that you use genuine Lexus products designed for this vehicle.

Because certain bulbs are connected to circuits designed to prevent overload, non-genuine parts or parts not designed for this vehicle may be unusable.

Light bulbs

The difficulty level of replacement varies depending on the bulb. If necessary bulb replacement seems difficult to perform, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer. For more information about replacing other light bulbs, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

■ Replacing the following bulbs

If any of the lights listed below has burnt out, have it replaced by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

- Headlight
- Front position lights and daytime running lights
- Front turn signal lights (LED type)
- Side turn signal lights
- Front fog lights*
- Cornering lights*
- Rear fog lights
- Stop/tail lights
- Back-up light
- Rear turn signal light
- High mounted stoplight
- License plate lights

☐ INFORMATION

■ LED Lights

The lights other than the front turn signal lights (bulb type) each consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer to have the light replaced.

WARNING

Observe the following precautions related to replacing the bulbs.


 Turn off the lights. Do not attempt to replace the bulb immediately after turning off the lights. The bulbs become very hot and may cause burns.

^{*:} If equipped

WARNING

- Do not touch the glass portion of the light bulb with bare hands. When it is unavoidable
 to hold the glass portion, use and hold with a clean dry cloth to avoid getting moisture
 and oils on the bulb. Also, if the bulb is scratched or dropped, it may blow out or crack.
- Fully install light bulbs and any parts used to secure them. Failure to do so may
 result in heat damage, fire, or water entering the headlight unit. This may damage the
 headlights or cause condensation to build up on the lens.
- Do not attempt to repair or disassemble the light bulbs, connectors, electric circuits or related parts.
 - Doing so may result in electric shock leading to death or serious injury.
- To prevent damage or fire, make sure the bulbs are fully installed and securely locked into each light unit.
- Check the wattage of the bulb before installing it to prevent heat damage.

Bulb locations

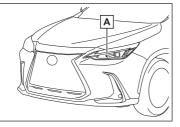


A Front turn signal light (bulb type)


Replacing the front turn signal lights (bulb type)

Before replacing, check the wattage of the light bulb to be replaced.

Turn the bulb base counterclockwise.

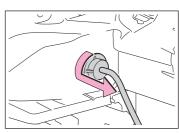


2 Remove the light bulb.

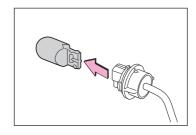

Install a new light bulb then install the bulb base to the light unit by inserting it and turning the bulb base clockwise.

After installing the light bulb, turn on the front turn signal light to visually check that there is no light leaking from the bulb base.

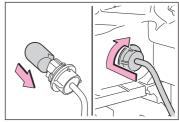

10-1. Specifications	
Maintenance data (fuel, oil level, etc.)	632
Fuel information	.646
10-2. Customizable features	
User customization function outline	.648
Method to change settings	649
Customizable features	.650
10-3. Initialization	
Items to initialize	669

Maintenance data (fuel, oil level, etc.)

Dimensions and weight

Overall length		4660 mm (183.5 in.)
Overall width		1865 mm (73.4 in.)
Overall height ⁽¹⁾		1660 mm (65.4 in.) ⁽²⁾
		1670 mm (65.7 in.) ⁽³⁾
Wheelbase		2690 mm (105.9 in.)
Tread	Front	1605 mm (63.2 in.)
iread	Rear	1625 mm (64.0 in.)
		2205 kg (4861 lb.) ⁽⁴⁾
Gross vehicle mass		2265 kg (4993 lb.) ⁽⁵⁾
		2370 kg (5225 lb.) ⁽⁶⁾
		2160 kg (4762 lb.) ⁽⁷⁾
Maximum permissible axle	Front	1270 kg (2800 lb.)
capacity	Rear	1270 kg (2800 lb.)
Drawbar load ⁽⁹⁾		60 kg (132 lb.)
(0)	Without brake	750 kg (1653 lb.)
Towing capacity ⁽⁹⁾	With brake	1500 kg (3307 lb.)


- (1) Unladen vehicle
- (2) Vehicles with 235/60R18 tires
- (3) Vehicles with 235/50R20 tires
- (4) For AAZA20L-AWZLBW models(8)
- (5) For AAZA25L-AWZLBW models(8)
- (6) For TAZA25L-AWZLTW models(8)
- (7) For MAZA20L-AWXLBW models(8)
- (8) The model code is indicated on the manufacturer's label.
- $^{(9)}$ Vehicles with towing package

Vehicle identification


■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Lexus. It is used in registering the ownership of your vehicle.


 This number is stamped on the top left of the instrument panel.

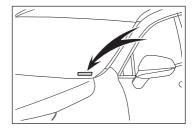

• This number is also on the manufacturer's label.

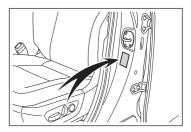


 This number is also stamped under the righthand front seat.

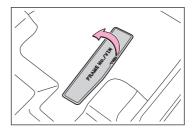


■ Engine number


► NX350

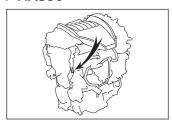

▶ NX250

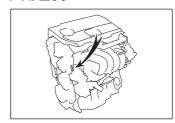

► NX200

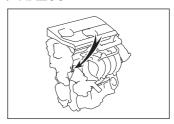

Engine

► NX350

Model	T24A-FTS	
Туре	4-cylinder in line, 4-cycle, gasoline (with turbocharger)	
Bore and stroke	87.5 × 99.5 mm (3.44 × 3.91 in.)	
Displacement	2393 cm ³ (146.0 cu. in.)	
Valve clearance (engine cold)	Automatic adjustment	
Drive belt tension	Automatic adjustment	

▶ NX250

Model	A25A-FKS	
Туре	4-cylinder in line, 4-cycle, gasoline	
Bore and stroke	87.5 × 103.4 mm (3.44 × 4.07 in.)	
Displacement	2487 cm ³ (151.8 cu. in.)	
Valve clearance (engine cold)	Automatic adjustment	
Drive belt tension	Automatic adjustment	

▶ NX200

Model	M20A-FKS	
Туре	4-cylinder in line, 4-cycle, gasoline	
Bore and stroke	80.5 × 97.6 mm (3.17 × 3.84 in)	
Displacement	1987 cm ³ (121.3 cu. in.)	
Valve clearance (engine cold)	Automatic adjustment	
Drive belt tension	Automatic adjustment	

Fuel

Fuel type	When you find these types of fuel label at the gas station, use only the fuel with one of the following labels.
	E5 E10
	EU area: Unleaded gasoline conforming to European standard EN228 only
	Except EU area: Unleaded gasoline only
Research Octane Number	NX350: 95 or higher
	NX250/NX200: 91 or higher

Fuel tank capacity (Reference)	55.0 L (14.5 gal., 12.1 lmp. gal.)
ruei tank capacity (Reference)	33.0 L (14.3 gai., 12.1 imp. gai.)

Lubrication system (NX350)

■ Oil capacity (Drain and refill) (Reference)*1

With filter	5.3 L (5.6 qt., 4.6 lmp.qt.)
Without filter	5.0 L (5.3 qt., 4.4 Imp.qt.)

■ Engine oil selection


Gasoline Engine -

"Toyota Genuine Motor Oil" is used in your Lexus vehicle. Lexus recommends the use of approved "Toyota Genuine Motor Oil". Another motor oil of matching quality can also be used.

• Oil grade:

OW-20 and 5W-30: API grade SM "Energy-Conserving", SN "Resource-Conserving", SN PLUS "Resource-Conserving" or SP "Resource-Conserving"; or ILSAC GF-6A multigrade engine oil

Recommended viscosity (SAE):

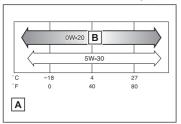


- A Temperature range anticipated before next oil change
- B Preferred

SAE OW-20 is filled into your Lexus vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather. If SAE OW-20 oil is not available, SAE 5W-30 oil may be used. However, it should be repliced with SAE OW-20 at the next oil change.

■ How to read oil container label

Either or both API registered marks are added to some oil containers to help you select the ol you should use.

^{*1:} The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up and turn off the engine, wait more than 5 minutes, and check the oil level on the dipstick.

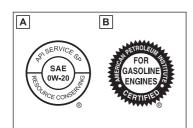

A PI Service Symbol:

Top portion: "API SERVICE SP" means the oil quality designation by American Petroleum Institute (API).

Center portion: "SAE OW-20" means the SAE viscosity grade.

Lower portion: "Resource-Conserving" means that the oil has fuel-saving and environmental protection capabilities.

B ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

Oil viscosity (OW-20 is explained here as an example):

 The OW in OW-20 indicates the characteristic of the oil which allows cold startability.

Oils with a lower value before the W allow for easier starting of the engine in cold weather.

 The 20 in OW-20 indicates the viscosity characteristic of the oil when the oil is at high temperature.

An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

Lubrication system (NX250)

■ Oil capacity (Drain and refill) (Reference)*2

With filter	4.5 L (4.8 qt., 4.0 Imp.qt.)
Without filter	4.2 L (4.4 qt., 3.7 lmp.qt.)

■ Engine oil selection

Gasoline Engine -

^{*2:} The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up and turn off the engine, wait more than 5 minutes, and check the oil level on the dipstick.

 
"Toyota Genuine Motor Oil" is used in your Lexus vehicle. Lexus recommends the use of approved "Toyota Genuine Motor Oil". Another motor oil of matching quality can also be used.

Oil grade:

OW-16: API grade SN "Resource-Conserving", SN PLUS "Resource -Conserving" or SP "Resource-Conserving"; or ILSAC GF-6B multigrade engine oil

0W-20 and 5W-30: API grade SM "Energy-Conserving", SN "Resource-Conserving", SN PLUS "Resource-Conserving" or SP "Resource-Conserving"; or ILSAC GF-6A multigrade engine oil

Recommended viscosity (SAE):



- A Temperature range anticipated before next oil change
- B Preferred

SAE OW-16 is filled into your Lexus vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather. If SAE OW-16 oil is not available, SAE OW-20 oil

may be used. However, it should be repliced with SAE OW-16 at the next oil change.

■ How to read oil container label

Either or both API registered marks are added to some oil containers to help you select the ol you should use.



A PI Service Symbol:

Top portion: "API SERVICE SP" means the oil quality designation by American Petroleum Institute (API).

Center portion: "SAE OW-16" means the SAE viscosity grade.

Lower portion: "Resource-Conserving" means that the oil has fuel-saving and environmental protection capabilities.

B ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

Oil viscosity (OW-16 is explained here as an example):

 The OW in OW-16 indicates the characteristic of the oil which allows cold startability.

Oils with a lower value before the W allow for easier starting of the engine in cold weather.

 The 16 in OW-16 indicates the viscosity characteristic of the oil when the oil is at high temperature.

An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

Lubrication system (NX200)

■ Oil capacity (Drain and refill) (Reference)*3

With filter	4.3 L (4.5 qt., 3.8 lmp.qt.)
Without filter	3.9 L (4.1 qt., 3.4 Imp.qt.)

■ Engine oil selection

Gasoline Engine -

"Toyota Genuine Motor Oil" is used in your Lexus vehicle. Lexus recommends the use of approved "Toyota Genuine Motor Oil". Another motor oil of matching quality can also be used.


Oil grade:

OW-16: API grade SN "Resource-Conserving", SN PLUS "Resource -Conserving" or SP "Resource-Conserving"; or ILSAC GF-6B multigrade engine oil

OW-20 and 5W-30: API grade SM "Energy-Conserving", SN "Resource-Conserving", SN PLUS "Resource-Conserving" or SP "Resource-Conserving"; or ILSAC GF-6A multigrade engine oil

Recommended viscosity (SAE):

^{*3:} The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up and turn off the engine, wait more than 5 minutes, and check the oil level on the dipstick.

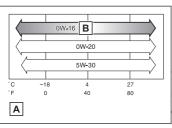

A Temperature range anticipated before next oil change

B Preferred

SAE OW-16 is filled into your Lexus vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather. If SAE OW-16 oil is not available, SAE OW-20 oil

may be used. However, it should be repliced with SAE OW-16 at the next oil change.

■ How to read oil container label

Either or both API registered marks are added to some oil containers to help you select the ol you should use.



A PI Service Symbol:

Top portion: "API SERVICE SP" means the oil quality designation by American Petroleum Institute (API).

Center portion: "SAE OW-16" means the SAE viscosity grade.

Lower portion: "Resource-Conserving" means that the oil has fuel-saving and environmental protection capabilities.

B ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

Oil viscosity (OW-16 is explained here as an example):

• The OW in OW-16 indicates the characteristic of the oil which allows cold startability.

Oils with a lower value before the W allow for easier starting of the engine in cold weather.

• The 16 in OW-16 indicates the viscosity characteristic of the oil when the oil is at high temperature.

An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

Cooling system

Capacity ⁽¹⁾	NX350	Gasoline engine: 8.7 L (9.2 qt., 7.7 lmp.qt.) Intercooler: 2.7L (2.9 qt., 2.4 lmp.qt.)
	NX250	7.0 L (7.4 qt., 6.2 lmp.qt.)
	NX200	6.9 L (7.3 qt., 6.1 lmp.qt.)
NX200 Coolant type		Use either of the following: "Toyota Super Long Life Coolant" Similar high-quality ethylene glycol-based nonsilicate, non-amine, nonnitrite, and non-borate coolant with long-life hybrid organic acid technology
		Do not use plain water alone.

⁽¹⁾ The coolant capacity is the quantity of reference. If replacement is necessary, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Ignition system (spark plug)

	NX350:
	NGK DILZKAR8E7H
M	NX250:
Make	DENSO FC16HR-Q8
	NX200:
	DENSO FC20HR-Q8

10-1. Specifications

	NX350:
	0.7 mm (0.03 in.)
	NX250:
Gap	0.8 mm (0.03 in.)
	NX200:
	0.8 mm (0.03 in.)

⚠ NOTICE

Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust the spark plug gap.

Electrical system

■ Battery

	12.3 V or higher
Open voltage at 20°C (68°F):	(Turn the engine switch off and turn on the high beam headlights for 30 seconds.)
	1.25 or more
Specific gravity reading at 20°C (68°F):	If the specific gravity is lower than the standard value, charge the battery.

■ Charging rates

Quick charge	15 A max.
Slow charge	5 A max.

Automatic transmission (NX350/NX250)

Fluid capacity ⁽¹⁾	NX350:
	7.1 L (7.5 qt., 6.2 lmp.qt.)
	NX250:
	7.3 L (7.7 qt., 6.4 Imp.qt.)
Fluid type	"Toyota Genuine ATF WS"

⁽¹⁾ The fluid capacity is the quantity of reference. If replacement is necessary, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

⚠ NOTICE

Transmission fluid type

Using transmission fluid other than the above type may cause abnormal noise or vibration, or damage the transmission of your vehicle.

Multidrive (NX200)

Fluid capacity ⁽¹⁾	8.7 L (9.2 qt., 7.7 Imp.qt.)
Fluid type	"Toyota Genuine CVT Fluid FE"

(1) The fluid capacity is the quantity of reference. If replacement is necessary, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

⚠ NOTICE

Multidrive fluid type

Using Multidrive fluid other than the above type may cause abnormal noise or vibration, or damage the Multidrive of your vehicle.

Transfer (AWD)

Oil capacity ⁽¹⁾	0.45 L (0.48 qt., 0.40 lmp. qt.)
	"Toyota Genuine Differential gear oil LT 75W-85 or equivalent"

(1) The fluid capacity is the quantity of reference. If replacement is necessary, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Your Lexus vehicle is filled with "Toyota Genuine Differential Gear Oil" at the factory.

Use Lexus approved "Toyota Genuine Differential Gear Oil" or an equivalent of matching quality to satisfy the above specification. Please contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for further details.

Rear differential (AWD)

Oil capacity ⁽¹⁾	0.50 L (0.53 qt., 0.44 lmp. qt.)

10-1. Specifications

I ()il type and viscosity	"Toyota Genuine Differential gear oil LT 75W-85 or equivalent"
----------------------------	---

(1) The fluid capacity is the quantity of reference.

If replacement is necessary, contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Your Lexus vehicle is filled with "Toyota Genuine Differential Gear Oil" at the factory.

Use Lexus approved "Toyota Genuine Differential Gear Oil" or an equivalent of matching quality to satisfy the above specification. Please contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for further details.

Brakes

Pedal clearance (1)	127 mm (5.0 in.)
Brake pad wear limit	1.0 mm (0.04 in.)
Pedal free play	1-6 mm (0.04 - 0.25 in.)
Fluid type	 SAE J1703 or FMVSS No. 116 DOT 3 SAE J1704 or FMVSS No. 116 DOT 4

 $^{^{(1)}}$ Minimum pedal clearance when depressed with a force of 300 N (30.6 kgf, 67.5 lbf) while the engine is running.

Steering

Free play	Less than 30 mm (1.2 in.)
-----------	---------------------------

Tires and wheels

▶ 18-inch tires

Tire size	235/60R18103H
Tire inflation pressure (Recommended cold tire inflation pressure)	Front: 230 kPa (2.3 kgf/cm ² or bar, 33 psi) Rear: 230 kPa (2.3 kgf/cm ² or bar, 33 psi)
Wheel size	18 × 7 1/2 J
Wheel bolt torque	140 N•m (14.3 kgf•m, 103 ft•lbf)

▶ 20-inch tires

Tire size		235/50R20100V	
Tire inflation pressure (Recommended cold tire inflation pressure)	Vehicle speed	Front wheel kPa (kgf/cm ² or bar, psi)	Rear wheel kPa (kgf/cm ² or bar, psi)
	More than 160 km/h (100 mph)	250 (2.5, 36)	250 (2.5, 36)
	160 km/h (100 mph) or less	230 (2.3, 33)	230 (2.3, 33)
Wheel size		20×71/2 J	
Wheel bolt torque		140 N•m (14.3 kgf•m, 103 ft•lbf)	

► Compact spare tire^{*}

Tire size	T165/90D18 107M (spare)
Tire inflation pressure (Recommended cold tire inflation pressure)	420 kPa (4.2 kgf/cm ² or bar, 60 psi)
Wheel size	18 × 4T
Wheel bolt torque	140 N·m (14.3 kgf·m, 103 ft·lbf)

■ When towing a trailer (vehicles with towing package)

Add 20.0 kPa (0.2 kgf/cm 2 or bar, 3 psi) to the recommended tire inflation pressure, and drive at speeds below 100 km/h (62 mph).

■ When installing a compact spare tire (if equipped)

Do not tow if your vehicle has a compact spare tire installed.

Light bulbs

	Light bulbs	W	Туре
Exterior	Front turn signal lights (bulb type)	21	A

A: Wedge base bulbs (amber)

^{*:} If equipped

Fuel information

When you find these types of fuel label at the gas station, use only the fuel with one of the following labels.

NX350:

EU area: You must only use unleaded gasoline conforming to European standard EN228.

Select unleaded gasoline with a Research Oc-

tane Number of 95 or higher for optimum engine performance.

Except EU area: You must only use unleaded gasoline.

Select unleaded gasoline with a Research Octane Number of 95 or higher for optimum engine performance.

NX250/NX200:

You must only use unleaded gasoline.

Select unleaded gasoline with a Research Octane Number of 91 or higher for optimum engine performance.

■ Use of ethanol blended gasoline in a gasoline engine

Lexus allows the use of ethanol blended gasoline where the ethanol content is up to 10%. Make sure that the ethanol blended gasoline to be used has a Research Octane Number that follows the above.

■ If your engine knocks

- Consult any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.

⚠ NOTICE

Notice on fuel quality

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use gasoline with metallic additives, for example manganese, iron or lead, otherwise it may cause damage on your engine or emission control system
- Do not add aftermarket fuel additives which contain metallic additives.



M NOTICE

- EU area: Bioethanol fuel sold under names such as [E50] or [E85] and fuel containing a large amount of ethanol should not be used. The use of these fuels will damage the vehicle's fuel system. In case of any doubt, ask any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
 - Except EU area: Bioethanol fuel sold under names such as [E50] or [E85] and fuel containing a large amount of ethanol should not be used. Your vehicle can use gasoline mixed with 10% max ethanol. The use of fuel with more than 10% ethanol content (E10) will damage the vehicle's fuel system. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, ask any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.
- Do not use the methanol blended gasoline such as M15, M85, M100.
 The use of gasoline containing methanol may cause engine damage or failure.

User customization function outline

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. The settings of these features can be changed using the center display or at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

WARNING

As the engine needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases, including harmful carbon monoxide (CO), may collect and enter the vehicle. Possibly leading to death or a serious health hazard.

⚠ NOTICE

While performing customization, make sure that the engine is running, in order to prevent the battery from becoming discharged.

Method to change settings

Changing using the center display

Stop the vehicle in a place where operations can be performed safely, engage the parking brake, and change the shift position to P.

- 1 Select 🌣 on the center display.
- 2 Select [Vehicle customise] or [Driving assist].
- 3 Select the item to change the settings of from the list.

Various setting can be changed. Refer to the list of settings that can be changed for details.

For functions that can be turned on/off, select



Some function settings are changed simultaneously with other functions being customized. Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for further details.

- A Settings that can be changed using the center display
- B Settings that can be changed by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer

Definition of symbols: O = Available, - = Not available

Gauges, meters and multi-information display

The language, units of measure, etc. of some items displayed on the meter or multi-information display will be changed according to settings on the center display. Refer to "Multimedia owner's manual".

Function	Default setting	Customized setting	A	В
Meter display	Туре 1	Туре 2	0	
type ⁽¹⁾	туре т	Type 3		_
Eco Driving Indicator Light ⁽¹⁾	On	Off	0	-
		2000 - 6800 r/min ⁽³⁾		
Rev indicator ⁽²⁾	5000 r/min	2000 - 6200 r/min ⁽⁴⁾	0	_
		Off		
Rev peak ⁽²⁾	On	Off	0	_
Suggestion function ⁽¹⁾	On	On (when the vehicle is stopped)	0	0
		Off		
Rear seat re- minder func- tion ⁽¹⁾	On	Off	0	_

⁽¹⁾ This setting changes in accordance with My Settings.

- (2) F SPORT models
- (3) NX200/NX250
- (4) NX350

Head-up Display*

Function	Default setting	Customized setting	Α	В
Display ⁽¹⁾	On	Off	0	_
D:l	Maximum	Normal		
Display mode ⁽¹⁾	i riaxiiiiuM	Minimum		_

⁽¹⁾ This setting changes in accordance with My Settings.

Steering wheel switches (vehicles with a head-up display)

Function	Default setting	Customized setting	A	В
Right steering wheel switch fa- vorite func- tions ⁽¹⁾	Display control	Custom	0	_
Left steering		Climate		
wheel switch fa- vorite func- tions ⁽¹⁾	Audio	Custom	0	_
Switch sensor high sensitivity mode (winter glove mode) ⁽¹⁾	Off	On	0	_

⁽¹⁾ This setting changes in accordance with My Settings.

Door lock

 $^{^*}$: If equipped

Function	Default setting	Customized setting	Α	В
Door lock		60 seconds		
switch indicator	30 seconds	600 seconds	_	0
illumination time		1200 seconds		
Inside door		Mid		
opener switch operation ad- justment (door opening func- tion adjustment)	Short	Long	_	0
Multi-informa- tion display/ buzzer opera- tion when a door opener switch inside the vehicle is oper- ated	On	Off	_	0
		0.6 Seconds		
		Operating from inside the cabin:		
		0.6 Seconds		
		Operating from outside:		
Inside/outside door opener switch operat- ing method	Unlatch while Pushing switch	Unlatch while Pushing switch	_	0
		Operating from inside the cabin:		
		Unlatch while Pushing switch		
		Operating from outside:		
		0.6 Seconds		

Function	Default setting	Customized setting	Α	В
Unlocking using a mechanical key	All doors un- locked in one step	Driver's door unlocked in one step, all doors unlocked in two step	_	0
Shift position linked door locking func- tion ⁽¹⁾	Off	On	0	0
Shift position linked door un- locking func- tion ⁽¹⁾	Off	On	0	0
Driver's door linked door un- locking func- tion ⁽¹⁾	On	Off	0	0

 $\hbox{\scriptsize (1)} \quad This setting changes in accordance with My Settings.}$

Power back door*

Function	Default setting	Customized setting	Α	В
Back door auto- matic open and stop position	5	Stop at the desired position (height) ⁽¹⁾	0	I
stop position		1to 5		
Power back door operations	On	Off	0	-
Operation buz- zer volume	3	2	0	_
Kick Sensor *(2)	On	Off	0	_

Function	Default setting	Customized setting	Α	В
Kick operation buzzer *(2)	On	Off	_	0
The function that validates the switch of the wireless remote control when locking the door	Off	On	_	0
Close & lock (walk away) function	On	Off	_	0
Hands free close & lock (walk away) function	Off	On	_	0

⁽¹⁾ Configured by operating the switch of the lower back door.

Smart entry & start system and wireless remote control

Function	Default setting	Customized setting	A	В
Operation signal (Emergency flashers) ⁽¹⁾	On	Off	0	0
Time elapsed before automat- ic door lock function is acti- vated if door is	30 seconds	60 seconds	_	0

^{*}: If equipped

⁽²⁾ When the towing hitch is installed, the kick sensor does not work

Function	Default setting	Customized setting	Α	В
not opened af- ter being un- locked ⁽¹⁾	30 seconds	120 seconds	_	0
Open door warning buzzer	On	Off	_	0

⁽¹⁾ This setting changes in accordance with My Settings.

Smart entry & start system

Function	Default setting	Customized setting	A	В
Smart entry & start system	On	Off	0	0
Smart door unlocking ⁽¹⁾	All the doors	Driver's door	0	0
Number of consecutive door lock operations	2 times	As many as desired	_	0
Time elapsed		Off		
before unlock- ing all the door		1.5 seconds		
when gripping and holding the driver's door handle	2 seconds	2.5 seconds	_	0

 $[\]hbox{\scriptsize (1)} \quad \hbox{This setting changes in accordance with My Settings.}$

Wireless remote control

Function	Default setting	Customized setting	A	В
Unlocking operation ⁽¹⁾	All doors un- locked in one step	Driver's door unlocked in one step, all doors unlocked in two step	0	0
		One short press		
Power back	Press and hold	Push twice		
door unlocking operation	(short)	Press and hold (long)	_	0
		Off		

⁽¹⁾ This setting changes in accordance with My Settings

Security

Function	Default setting	Customized setting	A	В
Intrusion sensor and tilt sensor	ON	OFF	0	_

Driving position memory*

Function	Default setting	Customized setting	Α	В
Driver's seat		Off		
movement when exiting the vehicle ⁽¹⁾	Standard	Partial	О	О
		Telescopic only		
Steering wheel movement ⁽¹⁾	Tilt only	Tilt and tele- scopic	0	_
		Off		

⁽¹⁾ This setting changes in accordance with My Settings.

^{*}: If equipped

Outside rear view mirrors

Function	Default setting	Customized setting	A	В
Automatic mir-	Linked to the	Off		
ror folding and extending operation	locking/unlock- ing of the doors	Linked to oper- ation of the en- gine switch	_	0

Power windows, and moon roof* or panoramic moon roof*

Function	Default setting	Customized setting	A	В
Mechanical key linked operation	Off	On	_	0
Wireless re- mote control linked operation	Off	On	_	0

Moon roof*

Function	Default setting	Customized setting	A	В
Linked opera- tion of compo- nents when me- chanical key is used (open on- ly)	Slide only	Tilt only	_	0
Linked opera- tion of compo- nents when wireless remote control is used (open only)	Slide only	Tilt only	_	0

Automatic light control system

 $^{^*}$: If equipped

Function	Default setting	Customized setting	A	В
Light sensor sensitivity ⁽¹⁾	Standard	-2 to 2	0	0
Extended Headlight light- ing system (time		60 seconds		
		90 seconds		
elapsed before headlights auto- matically turn off)	30 seconds	120 seconds	_	0

⁽¹⁾ This setting changes in accordance with My Settings.

Lights

Function	Default setting	Customized setting	A	В
Welcome light- ing	On	Off	_	0

Adaptive High-beam System

Function	Customized sette- ings	A	В
Adaptive High- beam System	ON/OFF	_	0
Brightness and illu- minated area adjust- ment of the high beams according to the vehicle speed	15 km/h (9 mph) / 30 km/h (19 mph) / 80 km/h (50 mph)	-	0
Intensity adjustment of the high beams when driving around a curve (illuminates the area in the direc- tion vehicle is turn- ing more brightly)	ON/OFF	_	0

Function	Customized sette- ings	A	В
Projection distance adjustment of the low beams accord- ing to the distance to a preceding vehicle	ON/OFF	-	0
Illumination of the cornering lights when starting off	ON/OFF	_	0
High beam light dis- tribution control for rain	ON/OFF	_	0
Light distribution control for urban areas	ON/OFF	_	0

Pre-Collision System

Function	Customized setting	Α	В
Pre-Collision Sys- tem	ON/OFF	0	-
Warning timing ⁽¹⁾	Later / Default / Earlier	0	_

⁽¹⁾ This setting changes in accordance with My Settings.

Front crossing traffic alert *

Function	Customized setting	Α	В
Front crossing traffic aletr	ON/OFF	0	_
Alert timing ⁽¹⁾	Later / Default / Earlier	0	_

⁽¹⁾ This setting changes in accordance with My Settings

 $^{^*}$: If equipped

Function	Customized sette- ings	A	В
Lane Departure Alert system	ON/OFF	0	_
Alert timing ⁽¹⁾	Default/Earlier	0	_
Alert options ⁽¹⁾	Vibration/Beep	0	_

⁽¹⁾ This setting changes in accordance with My Settings.

Lane Change Assist*

Function	Customized setting	Α	В
Lane Change Assist ⁽¹⁾	ON/OFF	0	_

⁽¹⁾ This setting changes in accordance with My Setting

Driver break suggestion

Function	Customized setting	A	В
Driver break sug- gestion	ON/OFF	0	_

Curve speed reduction

Function	Customized setting	A B	
Curve speed reduction ⁽¹⁾	OFF / High / Mid / Low	0	_

 $[\]hbox{(1)} \quad This setting changes in accordance with My Settings.$

 $^{^*}$: If equipped

Dynamic Radar Cruise Control

Function	Customized setting	Α	В
Overtake prevention	ON/OFF	0	_
Acceleration setting ⁽¹⁾	High / Mid / Low	0	_
Speed setting (short press) ⁽¹⁾	1 km/h / 5 km/h / 10 km/h or 1 mph / 5 mph / 10 mph	0	_
Speed setting (long press) ⁽¹⁾	1 km/h / 5 km/h / 10 km/h or 1 mph / 5 mph / 10 mph	0	_
DRCC (RSA)	ON/OFF	0	_
Speed limit offset	-5 to +5	0	_
Guide message ⁽¹⁾	ON/OFF	0	_

⁽¹⁾ This setting changes in accordance with My Settings

Road Sign Assist*

Function	Customized setting	Α	В
Road Sign Assist	ON/OFF	0	_
Excess speed notification method ⁽¹⁾	None / Visual / Visual&Audible	0	_
Other notifications method ⁽¹⁾⁽²⁾	None / Visual / Visual&Audible	0	_
Excess speed notification level→ P.661	10 km/h (5 mph) / 5 km/h (3 mph) / 2 km/h (1 mph)	0	_

- $\hbox{\scriptsize (1)} \quad This setting changes in accordance with My Settings.}$
- (2) Vehicles with a navigation system

^{*}: If equipped

Lexus parking assist-sensor*

Function	Default setting	Customized setting	A	В
Lexus parking assist-sensor ⁽¹⁾	On	Off	0	_

⁽¹⁾ This setting changes in accordance with My Settings.

Parking assist volume*

Function	Default setting	Customized setting	A	В
Parking assist	Mid	Low		
volume ⁽¹⁾	i i iid	High		_

⁽¹⁾ This setting changes in accordance with My Settings.

BSM (Blind Spot Monitor)*

Function	Default setting	Customized setting	A	В
Blind spot monitor	On	Off	0	ı
Alert timing for		Early		
presence of approaching vehicle (sensitivity)	Intermediate	Late	0	-
Outside rear view mirror indi- cator brightness (1)	Bright	Dim	0	_

 $[\]hbox{\scriptsize (1)} \quad \hbox{This setting changes in accordance with My Settings.}$

 $^{^*}$: If equipped

Safe Exit Assist*

Function	Default setting	Customized setting	A	В
Safe Exit Assist	On	Off	0	_
Outside rear view mirrors display ⁽¹⁾	On	Off	0	_
Detection sensitivity ⁽¹⁾	Middle	High Low	0	_

⁽¹⁾ This setting changes in accordance with My Settings.

RCTA (Rear Crossing Traffic Alert)*

Function	Default setting	Customized setting	A	В
RCTA (Rear Crossing Traffic Alert) ⁽¹⁾	On	Off	0	_

⁽¹⁾ This setting changes in accordance with My Settings.

RCD (Rear camera detection)*

Function	Default setting	Customized setting	A	В
RCD (Rear camera detection) ⁽¹⁾	On	Off	0	_

 $[\]hbox{\scriptsize (1)} \quad This setting changes in accordance with My Settings.}$

 $^{^*}$: If equipped

PKSB (Parking Support Brake)*

Function	Default setting	Customized setting	A	В
PKSB (Parking Support Brake)	On	Off	0	_

⁽¹⁾ This setting changes in accordance with My Settings.

Stop & Start system*

Function	Default setting	Customized setting	A	В
Change the Stop & Start system duration when the A/C is on		Extended	0	_

Driving mode select switch

Function	Default setting	Customized setting	A	В
Powertrain con-		Power		
trol in custom mode [*]	Normal	Eco	0	_
Suspention in custom mode*	Normal	Sport	0	
Steering in custom mode*	Normal	Sport	0	-
Air conditioning operation in customized mode*	Normal	Eco	0	-

 $^{^*}$: If equipped

Automatic air conditioning system

Function	Default setting	Customized setting	Α	В
Automatic swithcing be- tween outside air mode and recirculated air mode when the "AUTO" switch is on (AUTO switch linked air mode chang- ing) ⁽¹⁾	On	Off	Ο	Ο
Automatic turning on of the A/C switch when the AU-TO switch is turned on (AU-TO switch linked A/C switch) (1)	On	Off	Ο	Ο
Steering wheel heater tempera- ture adjustment in AUTO mode ⁽¹⁾	Standard	-2 (cooler) to 2 (warmer)	0	0
Driver's seat seat heater tem- perature adjust- ment in AUTO mode ⁽¹⁾	Standard	-2 (cooler) to 2 (warmer)	0	Ο

Function	Default setting	Customized setting	A	В
Front passeng- er's seat seat heater tempera- ture adjustment in AUTO mode ⁽¹⁾	Standard	-2 (cooler) to 2 (warmer)	0	0

 $[\]hbox{\scriptsize (1)} \quad \text{This setting changes in accordance with My Settings.}$

Illumination

Function	Default setting	Customized setting	A	В
Time elapsed		Off		
before the lights	15 seconds	7.5 seconds	0	0
turn off ⁽¹⁾		30 seconds		
Operation after the engine switch is turned off	On	Off	_	0
Operation when you approach the vehicle with the electronic key on your person	On	Off	_	0
Operation when the doors are unlocked	On	Off	_	0
Footwell lights	On	Off	_	0

Function	Default setting	Customized setting	Α	В
Door-trim orna- ment lights *, in- side handle lights and ceenter console light *	On	Off	_	0
Time elapsed		Off		
before the outer foot lights turn	15 seconds	7.5 seconds	0	0
off ⁽¹⁾		30 seconds		
Operation of the outer foot lights when you approach the vehicle with the electoronic key on your person	On	Off	_	0
Operation of the outer foot lights when the doors are un- locked	On	Off	_	0
Operation of the outer foot lights when a door is opened	On	Off	_	0
Fading out of the outer foot lights when they turn off	Long	Short	_	0
Operation of in- terior lights and outer foot lights after the doors are locked	On	Off	_	0

 $^{^*}$: If equipped

Function	Default setting	Customized setting	A	В
Color selection ⁽¹⁾	Silky white	(2)	0	-
Brightness control ⁽¹⁾	Maximum	(2)	0	_

- $\hbox{(1)} \quad This setting changes in accordance with My Settings.}$
- (2) Refer to "Multimedia owner's manual".

Engine switch

Function	Default setting	Customized setting	A	В
ACC mode	On	Off	0	ı

Items to initialize

Must be initialized for normal system operation after such cases as the battery being reconnected, or maintenance being performed on the vehicle:

ltem	When to initialize	Reference
Power back door*	After reconnecting or changing the battery	→ P.69
Lexus parking assist-monitor	After reconnecting or changing the battery	Refer to "Multimedia own- er's manual".
Panoramic view monitor*	After reconnecting or changing the battery	Refer to "Multimedia own- er's manual".
Oil maintenance	After maintenance is per- formed	→ P.468
Tire pressure warning system	 When the specified tire inflation pressure has changed, such as due to carried load, etc. When the tire inflation pressure is changed such as when the tire size is changed. 	→ P.501

^{*}: If equipped

Supplement

Supplementary information about unauthorized modifications, recorded vehicle data, etc.

Accessories, spare parts and modification of your Lexus

Both genuine Lexus and a wide variety of other spare parts and accessories for Lexus vehicles are currently available in the market. Should it be determined that any of the genuine Lexus parts or accessories supplied with the vehicle need to be replaced, Lexus recommends that genuine Lexus parts or accessories, be used to replace them. Other parts or accessories of matching quality can also be used.

Lexus cannot accept any liability or guarantee spare parts and accessories which are not genuine Lexus products, nor for replacement or installation involving such parts. In addition, damage or performance problems resulting from the use of non-genuine Lexus spare parts or accessories may not be covered under warranty.

Vehicle data recording

This vehicle is equipped with sophisticated computers that record certain data regarding vehicle controls and operations.

■ Data recorded by the computers

Certain data, such as the following, is recorded depending on the operation timing and status of each function.

- Engine speed/Electric motor speed (traction motor speed)
- Accelerator status
- Brake status
- Vehicle speed
- Operation status of the driving assist systems
- Images from the cameras

Your vehicle is equipped with cameras. Contact any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for the location of recording cameras.

The recorded data varies according to the vehicle grade level, options and destinations with which it is equipped.

These computers do not record conversations or sounds, and only record images outside of the vehicle in certain situations.

■ Data usage

Lexus may use the data recorded in this computer to diagnose malfunctions, conduct research and development, and improve quality.

Lexus will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- For use by Lexus in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner

Recorded image information can be erased by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

The image recording function can be disabled. However, if the function is disabled, data from when the system operates will not be available.

Precautions for installation of an RF-transmitter system

The installation of an RF-transmitter system in your vehicle could affect electronic systems such as:

- Multiport fuel injection system/sequential multiport fuel injection system
- Lexus Safety System +
- Anti-lock brake system
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer for precautionary measures or special instructions regarding installation of an RF-transmitter system.

Further information regarding frequency bands, power levels, antenna positions and installation provisions for the installation of RF-transmitters, is available on request at any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer.

Precautions for scrapping your Lexus

The SRS airbag and seat belt pretensioner devices in your Lexus contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by any authorized Lexus retailer or Lexus authorized repairer, or any reliable repairer before you scrap your vehicle.

A	Battery checking489
A/C	Brake
Air conditioning filter495	Brake system warning light525
ACCESSORY mode123	Fluid644
Adaptive High-beam System176	Brake hold
АНВ	Brake hold operated indicator536
See Automatic High Beam	Brake Hold
AHS	Warning messages542
See Adaptive High-beam System	BSM (Blind Spot Monitor)365
Air conditioning filter495	Buzzers
Air conditioning system229	Open window warning94
Air conditioning filter495	С
Defogger193	Card key44
Alarm62	Care
Warning buzzer525	Exterior456
Antennas (smart entry & start system)48	
Anti-lock Brake System (ABS)	Interior462 Seat belts462
ABS warning light528	
Automatic headlight leveling system175	Wheels and wheel ornaments458
Automatic headlight leveling system	Catch protection function
(Headlight)	Child restraint system24,25
Function175	Child safety
Automatic High Beam180	Battery precautions
Automatic light control system172	Power window lock switch97
В	
Back door69	Child seat24
If the back door cannot be opened. 593	Child-protector lock24,26
Back-up light	Cleaning
Replacing light bulbs628	Exterior456
Battery489	Interior462
Datter y407	Seat belts462
	Wheels and wheel ornaments458
	01 1 00 0

Condenser	Impact detection door lock release sys-
Cooling system487	tem57
Cornering lights174	Double locking system63
Lights174	Drive-Start Control (DSC)
Replacing light bulbs628	Sudden start restraint control438
Courtesy lights	Driver's and front passenger's seat belt reminder light530
Location249	Driving position memory222
Cruise control	Memory recall function223
Customizable features648	Position memory223
D	Driving time303,311
Daytime running light system172	Dynamic radar cruise control416
Defogger	
Outside rear view mirrors196	E
Rear window defogger195	EDSS
Windshield193	See Emergency Driving Stop System
Defogger (Rear window defogger) 195	Electric power steering system
Differential	Electric power steering system warning light529
Rear differential oil643	Electronic key44
Digital Rear-view Mirror109	Battery-saving function44
Dimension	If the electronic key does not operate
Distance to empty285,290,303	properly554,579
Do-it-yourself maintenance471	Replacing the battery 579
Door	Emergency Driving Stop System 434
Child-protector lock26	Emergency flashers
If a door cannot be opened589	Switches521
Smart entry & start system48	Emergency towing608
Door courtesy lights	Emergency, in case of
Location249	A warning light turns on/flashes 525
Door trim ornament lights249	If a warning message is displayed537
Doors	If the battery is discharged556,579
Close & lock (walk away) function 59 Door lock switches59	If the electronic key does not operate properly554,579

If the engine will not start	Engine immobilizer system62
551-553,556,562-564	Engine oil483
If the vehicle is submerged or water on the road is rising522	Capacity636,637,639
	Checking483
If you have a flat tire565,577	Low engine oil pressure warning light
If your vehicle overheats	526
Stopping the vehicle in an emergency 521	Engine oil maintenance data468,470
Towing with a tow truck603	Engine switch
Towing with another vehicle608	Auto power off function123
Using a flatbed truck607	Changing the engine switch modes. 123
engine	How to start the engine122
If the engine will not start562	Engine switch (ignition switch)
Engine	Stopping the vehicle in an emergency
Compartment482	521
Engine immobilizer system62	ERA-GLONASS/EVAK450
Engine switch122	Extended Headlight Lighting system 174
Hood481	Headlights174
Identification number	F
	FCTA362
If the engine will not start551-553,556,563,564	Flat tire
Ignition switch (engine switch)122	Run-flat tires577
Immobilizer system62	Spare tire565
Malfunction indicator lamp527	Floor mats22
Overheating620	Fluid
Starting the engine122	Automatic transmission642
Engine compartment	Brake644
Steam comes out from under the hood	Continuously Variable transmission 643
620	Washer494
Engine coolant487	Fog lights202
Capacity641	Switch202
Checking487	Footwell lights249
Engine coolant temperature gauge	Front automatic air conditioning system
205,270	229

Front Cross Traffic Alert362	G
Front fog lights202	Gauges285,290
Replacing light bulbs628	Changing the instrument panel light
Switch202	brightness312
Front position lights	Displayed content301
Light switches172	Head-up display299
Front seats	Indicators281
Adjustment98	Multi-information display295,297
Cleaning462	Warning lights278
Head restraints99	Н
Memory recall function223	Hands Free Power Back Door81
Position memory222	Head restraints
Power easy access system222	Head-up display299
Front turn signal lights (bulb type)	Headlight
Replacing light bulbs628	Cleaner190
Wattage645	Replacing light bulbs628
Fuel	Headlight switch
Capacity635	Light switches
Information646	Headlights
Low fuel level warning light530	Extended Headlight Lighting system 174
Refueling169	Heated steering wheel237
Туре635	Heaters
Fuel consumption303,306,311	Outside rear view mirrors196
Fuel filler door169	High coolant temperature warning light
If the fuel filler door cannot be opened	526
598	High mounted stoplight
Refueling169	Replacing light bulbs628
Fuel gauge285,290	Hood481
Fuel pump shut off system523	Open481
Function397,401	Hooks
Fuses	Retaining hooks (floor mat)22
Replacing625	Horn204

I	Jack handle565
Identification	Jam protection function94
Engine633	Power back door 69
Vehicle633	Junior seat24
If the battery is discharged579	K
If you think something is wrong613	Key
Ignition switch (engine switch)	If a key has been lost578
Auto power off function123	Keyless entry48
Changing the engine switch modes. 123	Keyless entry Keyless entry
How to start the engine122	Smart entry & start system48
Immobilizer system62	Keys44
Impact detection door lock release sys-	Battery-saving function44
tem57	Card key44
Indicators281	Electronic key44
Initialization	If the electronic key does not operate
Items to initialize	properly554,579
Maintenance468,470	Key number plate44
Inside door handle lights249	Mechanical key44
Inside rear view mirror	
Inspection	
Installing a child restraint system35 Intercooler489	Lane Change Assist
Intercooler coolant 487	Lane Departure Alert
	Lane Tracing Assist
Classity	LDA)
Checking	Lever
Interior lights251	Auxiliary catch lever481
Intrusion sensor (alarm)65	
Intuitive parking assist	Hood lock release lever481
Operation383	Tilt and telescopic steering control lever
J	Wiper lever188,191
Jack	Lexus Climate Concierge227
Lifting the vehicle with a floor jack 515	Lexus Enform229
Vehicle-equipped jack565	

Lexus parking assist-sensor378	Changing the instrument panel light brightness312
Lexus parking assist-sensor OFF indi- cator534	Displayed content301
Lexus Safety System +316	Head-up display299
License plate lights	Indicators281
Headlight switch172	Multi-information display295,297
Replacing light bulbs628	Warning lights278
	Mirror
Light bulbs	
Replacing628	Digital Rear-view Mirror109
Lights	Inside rear view mirror108
Emergency flashers	Mirrors
Fog light202	Outside rear view mirrors117
Front fog lights202	Moon roof
Headlight switch172	If the moon roof closes but then reopens slightly595
Rear fog lights202	If the moon roof tilts down but then tilts
Wattage	back up595
Linked mirror function when reversing. 117	Moving Vehicles Rear of the Vehicle 405
Lock	Multi-information display295,297
Smart entry & start system48	Operating301
Window lock switch97	Warning messages537
LTA347	My Settings220
M	0
Maintenance	
Do-it-yourself maintenance478	Odometer
Maintenance data632	Changing/resetting289
Maintenance requirements 467,469	Function285,290
Scheduled maintenance472	Oil
Malfunction indicator lamp527	Engine oil
Max cool234	Rear differential oil643
Max heat233	Opener
Memory recall function223	Fuel filler door169
Meter285,290	Hood481
, · · · ·	Option screen switch230

Outer foot lights	249	Adjusting the open position of the back
Outside rear view mirrors	117	door83
Adjustment	117	Hands Free Power Back Door81
BSM (Blind Spot Monitor)	.365	Jam protection function69
Folding/extending	119	Power control unit coolant
Heaters	196	Capacity641
Linked mirror function when revers	sing	Power windows
	117	Catch protection function94
Mirror position memory	222	Door lock linked window operation 96
RCTA function	.386	Jam protection function94
Safe exit assist	371	Operation95
Outside temperature285	,290	Window lock switch97
Outside/recirculated air mode	232	Pre-Collision System334
Overheating	620	R
Р		
	7.450	Radiator
Paddle shift switches 153,155,15		Overheating
Panoramic moon roof or electronic so shade	un-	Rain-sensing windshield wipers188
When the panoramic moon ro	of or	RCD (Rear camera detection)393,397
electronic sunshade does not		RCTA function
normally	. 597	Rear doors
Parking brake	165	If the rear doors cannot be opened from the inside592
Parking brake engaged warning bu	ızzer	ITOTTI THE ITISIAE
	44.5	Post for lights 202
		Rear fog lights
Parking brake indicator	.536	Replacing light bulbs628
Parking brake indicator	.536	Replacing light bulbs628 Switch202
Parking brake indicator PCS PCS (Pre-Collision System)	.536 . 334	Replacing light bulbs
Parking brake indicator PCS PCS (Pre-Collision System) PCS warning light	.536 . 334 534	Replacing light bulbs
Parking brake indicator PCS PCS (Pre-Collision System)	.536 . 334 534	Replacing light bulbs
Parking brake indicator PCS PCS (Pre-Collision System) PCS warning light	.536 . 334 534 . 407	Replacing light bulbs
Parking brake indicator PCS PCS (Pre-Collision System) PCS warning light Pedestrians Rear of the Vehicle	.536 . 334 .534 . 407 . 252	Replacing light bulbs
Parking brake indicator PCS	.536 .334 .534 .407 .252 3,401	Replacing light bulbs
Parking brake indicator	.536 .334 .534 .407 .252 3,401	Replacing light bulbs

Head restraints99	Seat belt reminder lights531
Rear turn signal light	Seat belts
Replacing light bulbs628	Adjusting the height106
Rear view mirror	Care462
Inside rear view mirror108	Emergency Locking Retractor105
Rear window defogger	Fastening and releasing105
Windows195	How to wear your seat belt103
Refueling	Pregnant women, proper seat belt use
Capacity635	103
Fuel types635	Seat belt reminder light530
If the fuel filler door cannot be opened	Seat belt reminder lights531
598	Seat heaters238
Replacement	Seat position memory222
tire565	Seat ventilators240
Replacing	Seats98,102
Fuses625	Adjustment98
Light bulbs628	Cleaning462
Replacing the battery579	Driving position memory222
Riding with children24,25,35	Head restraints99
12-volt battery precautions584	Memory recall function223
Battery precautions584	Power easy access system222
Child restraint system25	Security indicator62
Child-protector lock26	Sensor
Seating positions for children25	Automatic headlight system172
Road Sign Assist410	Inside rear view mirror185
RSA410	Intrusion sensor and tilt sensor65
Run-flat tire500	Raindrop sensor189
S	Shift lever139,141
	Shift lock system149
S-Flow	Shift position
Safe exit assist	Changing the gear step157,159
Seat	Changing the shift position142,148
Child restraint system24 Sort holt reminder light 530	Changing the shift range153,155
Seat neit reminder light 530	

Intended use of each shift position	Front fog lights202
139,141	Horn204
Side turn signal lights	Position memory222
Replacing light bulbs628	Rear fog lights202
Smart entry & start system48	Seat position memory222
Affects influenced by the radio wave.48	Switches
Antenna location48	Adjustment98
Battery-saving function44	Door lock59
Entry functions57,75	Emergency flashers521
If the electronic key does not operate properly579	Engine switch122
Starting the engine122	Ignition switch122
Spare tire	Light switches172
Spark plug641	Meter control301
Specifications	Outside rear view mirrors117
•	Paddle shift switches153,155,157,159
Speedometer	Power windows95
	Stop & Start cancel switch131
Static Objects Front and Rear of the vehi- cle402	Tilt and telescopic steering control
Steering wheel108	switch108
Adjustment107,108	Washer190,192
Electric power steering system warning light529	Window lock switch97
Power easy access system222	Т
Steering wheel position memory222	Tachometer285,290
Stop & Start system127	Tail lights
-	Light switch172
Stop & Start cancel indicator	Theft deterrent system63
Stop & Start system indicator	Alarm62
Stop/tail lights	Engine immobilizer system62
Replacing light bulbs628	lmmobilizer system62
Stopping the vehicle in an emergency. 521	Tilt sensor (alarm)65
Sun visors	Tire497
Switch	If you have a flat tire565,577
Fog lights202	Rotating the tires516

Run-flat tire500	V
Run-flat tires577	Vehicle data recording670
Spare tire565	Vehicle identification number
Tire inflation pressure513	W
Tire inflation pressure	
Maintenance data644	Warning buzzer525
Tire pressure warning system501	Warning buzzers
Registering ID codes508	Open door53
Registration of the position of each wheel504	Open window94 Warning lights278,525
Selecting wheel set511	ABS warning light528
Setting the tire pressure505	Brake system warning light525
Tire pressure warning light531	Charging system warning light526
Valves and transmitters503	Driver's and front passenger's seat belt reminder light530
Warning messages538 Tires	Driving assist infomation indicator 535
Size	Dynamic radar cruise control indicator
Tools	535
Towing	Electric power steering system warning light529
Towing with a tow truck603	High coolant temperature warning light
Towing with another vehicle608	526
Trailer towing86,93	LDA indicator534
Using a flatbed truck607	Lexus parking assist-sensor OFF indi-
Trailer towing86,93	cator534
Transmission	Low engine oil pressure warning light 526
Downshifting restriction warning buzzer153,155,157,159	Low fuel level warning light530
Operation139,141	LTA indicator534
Transmitters	Malfunction indicator lamp 527
Trip meter	Parking brake indicator536
Changing/resetting289	PCS warning light534
Function285,290	Rear passengers' seat belt reminder lights531
	Slip indicator536

Stop & Start cancel indicator	533
Stop & Start system indicator	533
Tire pressure warning light	53
Warning messages	537
Washer	190,192
Adding	494
Switches	190,192
Washing and waxing	456
Weight	
Weight	632
Wheel bolt wrench	565
Wheels	
Size	644
Window lock switch	97
Windows	
If the windows do not open or c	lose617
Rear window defogger	195
Washer	.190,192
Windshield wiper and washer 188,	
Wireless remote control	
Battery-saving function	
Open door warning buzzer	
Operation signals	
Replacing the hattery	

Certification

Toyota Motor Europe NV/SA, Avenue du Bourget 60 - 1140 Brussels, Belgium www.toyota-europe.com

Toyota (GB) PLC, Great Burgh, Burgh Heath, Epsom, Surrey, KT18 5UX, UK

Millimeter wave radar sensor

Transmitter: Model: DNMWR011

Operation frequency: 76.5 GHz

Maximum output power: 676 mW or less

Manufacturer:

DENSO CORPORATION

Address:

1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661

Japan

Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://www.denso.com/global/en/contact-us/doc/

-

DENSO CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

https://www.denso.com/global/en/contact-us/doc/

Ĺ

Hierbij verklaar ik, DENSO CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

https://www.denso.com/global/en/contact-us/doc/

C

Le soussigné, DENSO CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

https://www.denso.com/global/en/contact-us/doc/

Härmed försäkrar DENSO CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

https://www.denso.com/global/en/contact-us/doc/

0

Hermed erklærer DENSO CORPORATION, at radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

https://www.denso.com/global/en/contact-us/doc/

(

Hiermit erklärt DENSO CORPORATION, dass der Funkanlagentyp der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

https://www.denso.com/global/en/contact-us/doc/

Ĺ

Με την παρούσα ο/η DENSO CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

https://www.denso.com/global/en/contact-us/doc/

C

Il fabbricante, DENSO CORPORATION, dichiara che il tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

https://www.denso.com/global/en/contact-us/doc/

Por la presente, DENSO CORPORATION declara que el tipo de equipo radioeléctrico es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.denso.com/global/en/contact-us/doc/

10

O(a) abaixo assinado(a) DENSO CORPORATION declara que o presente tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

https://www.denso.com/global/en/contact-us/doc/

1

B'dan, DENSO CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li gej:

https://www.denso.com/global/en/contact-us/doc/

_ !

Käesolevaga deklareerib DENSO CORPORATION, et käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel

internetiaadressil: https://www.denso.com/global/en/contact-us/doc/

13

DENSO CORPORATION igazolja, hogy a típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

https://www.denso.com/global/en/contact-us/doc/

1.

DENSO CORPORATION týmto vyhlasuje, že rádiové zariadenie typu je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

https://www.denso.com/global/en/contact-us/doc/

1

Tímto DENSO CORPORATION prohlašuje, že typ rádiového zařízení je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

https://www.denso.com/global/en/contact-us/doc/

1

DENSO CORPORATION potrjuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

https://www.denso.com/global/en/contact-us/doc/

_

Aš, DENSO CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

https://www.denso.com/global/en/contact-us/doc/

1

Ar šo DENSO CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywa 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

https://www.denso.com/global/en/contact-us/doc/

20

Hér með lýsir DENSO CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/

21

DENSO CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU.

Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:

https://www.denso.com/global/en/contact-us/doc/

2

С настоящото DENSO CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/

23

Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

https://www.denso.com/global/en/contact-us/doc/

25

Овиме, DENSO CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU.

Цео текст ЕУ декларације о усаглашености доступам је на следећој интернет адреси:

https://www.denso.com/global/en/contact-us/doc/

2

Amb aquest document, DENSO CORPORATION declara que el tipus d'equipament radioelèctric es conforme a la Directiva 2014/53/UE. El text complet de la declaració UE de conformitat està disponible en la següent adreça d'Internet:

https://www.denso.com/global/en/contact-us/doc/

27

İşbu belge; DENSO CORPORATION telsiz ekipmanı tipinin 2014/53/AB sayılı Direktif'e uygun olduğunu beyan eder. AB uygunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur:

https://www.denso.com/global/en/contact-us/doc/

Transmitter: Model: DNMWR011

Operation frequency: 76.5 GHz

Maximum output power: 676 mW or less

Manufacturer: DENS

DENSO CORPORATION

Address: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661

Japan



Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with the relevant statutory requirements.

The full text of the UK declaration of conformity is available at the following internet address:

https://www.denso.com/global/en/contact-us/doc/

Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://www.denso.com/giobai/en/contact-us/doc/



UA RF: 3DENS FR11

модель: DNMWR011

смуга радіочастот: 76-77 ГГц

максимальна вихідна потужність: 676 мВт або менше

виробник: DENSO CORPORATION

адреса: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661 Japan

справжнім DENSO CORPORATION заявляє, що тип радіообладнання відповідає Технічному регламенту

радіообладнання;

повний текст декларації про відповідність доступний на веб-сайті

за такою адресою:

https://www.denso.com/global/en/contact-us/doc/

Transmitter: Model: DNMWR011

Operation frequency: 76.5 GHz

Maximum output power: 676 mW or less

Manufacturer:

DENSO CORPORATION

Address:

1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661

Japan

Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio".

Textul integral al declarației de conformitate este disponibil la

următoarea adresă de Internet:

https://www.denso.com/global/en/contact-us/doc/

טויוטה מוטור אירופה מו/סא, שדרות דו בורגט 60-1140 בריסל,

www.toyota-europe.com בלגיה

מוצר: מכ"מ התראה

סימן רשום: DENSO

ארץ ייצור: יפן \ ארה"ב

דגם: DNMWR011

שנת ייצור: ראה מוצר

Smart entry & start system/Advanced Park (Remote Controlled)

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BJ2KV is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BJ2KV on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

http://www.tokai-rika.co.jp/pc

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BJ2KV conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

http://www.tokai-rika.co.jp/pc

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BJ2KV est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

http://www.tokai-rika.co.jp/pc

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BJ2KV överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BJ2KV er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

http://www.tokai-rika.co.jp/pc

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BJ2KV der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

http://www.tokai-rika.co.jp/pc

Με την παρούσα ο/η ΤΟΚΑΙ RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός ΒJ2KV πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

http://www.tokai-rika.co.jp/pc

Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BJ2KV è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

http://www.tokai-rika.co.jp/pc

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BJ2KV es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BJ2KV está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

http://www.tokai-rika.co.jp/pc

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BJ2KV huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li gej:

http://www.tokai-rika.co.jp/pc

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BJ2KV vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. igazolja, hogy a BJ2KV típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BJ2KV je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BJ2KV je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme BJ2KV skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

http://www.tokai-rika.co.jp/pc

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BJ2KV atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

http://www.tokai-rika.co.jp/pc

Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta BJ2KV atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BJ2KV jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BJ2KV er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen BJ2KV er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:

http://www.tokai-rika.co.jp/pc

С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BJ2KV е в съответствие с Директива 2014/53/EC.

Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес:

http://www.tokai-rika.co.jp/pc

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BJ2KV este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

http://www.tokai-rika.co.jp/pc

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BJ2KV u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BJ2KV është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BJ2KV u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

http://www.tokai-rika.co.jp/pc

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BJ2KV u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BJ2KV 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

http://www.tokai-rika.co.jp/pc



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Receiver Category (EN300 220): 2

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BJ2KV is in compliance with Radio Equipment Regulations 2017.

The full text of the UK declaration of conformity is available at the following internet address:

http://www.tokai-rika.co.jp/pc



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Receiver Category (EN300 220): 2

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BJ2KV este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio".

Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet: http://www.tokai-rika.co.jp/pc



Abordare: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Categoria receptorului (SM EN300 220): 2

Справжнім ТОКАІ RIKA CO., LTD. заявляє, що тип радіообладнання BJ2KV відповідає Технічному регламенту радіообладнання;

КАБІНЕТ МІНІСТРІВ УКРАЇНИ ПОСТАНОВА №.355

Повний текст декларації про відповідність доступний на веб-сайті за такою адресою: http://www.tokai-rika.co.jp/pc

Категорія приймача: 2



Адреса: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type B3T2K2R is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

http://www.tokai-rika.co.jp/pc

Frequency band: 433.050 - 434.790 MHz

Maximum radio-frequency power: 10mW(ERP)

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi B3T2K2R on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

http://www.tokai-rika.co.jp/pc

Radiotaajuus: 433.050 - 434.790 MHz

suurin mahdollinen lähetysteho: 10mW(ERP)

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur B3T2K2R conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

http://www.tokai-rika.co.jp/pc

Frequentieband: 433.050 - 434.790 MHz

Maximaal radiofrequentievermogen: 10mW(ERP)

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type B3T2K2R est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

http://www.tokai-rika.co.jp/pc

Bande de fréquences: 433.050 - 434.790 MHz

Puissance de radiofréquence maximale: 10mW(ERP)

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning B3T2K2R överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tokai-rika.co.jp/pc

Frekvensband: 433.050 - 434.790 MHz Maximal radiofrekvenseffekt: 10mW(ERP)

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen B3T2K2R er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc

Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP) Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp B3T2K2R der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

http://www.tokai-rika.co.jp/pc

Frequenzband: 433.050 - 434.790 MHz

Abgestrahlte maximale Sendeleistung: 10mW(ERP)

Με την παρούσα ο/η ΤΟΚΑΙ RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός B3T2K2R πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

http://www.tokai-rika.co.jp/pc

Ζώνη συχνοτήτων: 433.050 - 434.790 MHz Μέγιστη ισχύς ραδιοσυχνότητας: 10mW(ERP)

Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio B3T2K2R è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

http://www.tokai-rika.co.jp/pc

Banda di frequenza: 433.050 - 434.790 MHz Potenza massima radiofrequenza: 10mW(ERP) Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico B3T2K2R es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

http://www.tokai-rika.co.jp/pc

Banda de frecuencia: 433.050 - 434.790 MHz Potencia máxima de radiofrecuencia: 10mW(ERP)

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio B3T2K2R está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

http://www.tokai-rika.co.jp/pc

Banda de frequência: 433.050 - 434.790 MHz

Potência máxima de radiofrequências: 10mW(ERP)

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju B3T2K2R huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tokai-rika.co.jp/pc

Tíðnisvið: 433.050 - 434.790 MHz

Hámarks útvarpsbylgjutíðni: 10mW(ERP)

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp B3T2K2R vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

http://www.tokai-rika.co.jp/pc

Sagedusriba: 433.050 - 434.790 MHz Maksimaalne saatevõimsus: 10mW(ERP)

TOKAI RIKA CO., LTD. igazolja, hogy a B3T2K2R típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

http://www.tokai-rika.co.jp/pc

Frekvenciasáv: 433.050 - 434.790 MHz Maximális jelerősség: 10mW(ERP)

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu B3T2K2R je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

http://www.tokai-rika.co.jp/pc

Frekvenčné pásmo: 433.050 - 434.790 MHz Maximálny rádiofrekvenčný výkon: 10mW(ERP) Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení B3T2K2R je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

http://www.tokai-rika.co.jp/pc

Kmitočtové pásmo: 433.050 - 434.790 MHz Maximální radiofrekvenční výkon: 10mW(ERP)

TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme B3T2K2R skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

http://www.tokai-rika.co.jp/pc

Frekvenčni pas: 433.050 - 434.790 MHz

Največja moč radijske frekvence: 10mW(ERP)

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas B3T2K2R atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

http://www.tokai-rika.co.jp/pc

Dažnių juosta: 433.050 - 434.790 MHz Didžiausia radijo dažnių galia: 10mW(ERP) Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta B3T2K2R atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

http://www.tokai-rika.co.jp/pc

Frekvenču josla: 433.050 - 434.790 MHz

Maksimālā radiofrekvenču jauda: 10mW(ERP)

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego B3T2K2R jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

http://www.tokai-rika.co.jp/pc

Zakres częstotliwości: 433.050 - 434.790 MHz

Maksymalna moc częstotliwości radiowej: 10mW(ERP)

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð B3T2K2R er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc

Tíðnisvið: 433.050 - 434.790 MHz

Hámarks útvarpsbylgjutíðni: 10mW(ERP)

TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen B3T2K2R er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:

http://www.tokai-rika.co.jp/pc

Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP)

С настоящото ТОКАІ RIKA CO., LTD. декларира, че този тип радиосъоръжение B3T2K2R е в съответствие с Директива 2014/53/EC.

Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес:

http://www.tokai-rika.co.jp/pc

Радиочестотна лента: 433.050 - 434.790 MHz Максимална радиочестотна мощност: 10mW(ERP)

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio B3T2K2R este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

http://www.tokai-rika.co.jp/pc

Banda de frecvență: 433.050 - 434.790 MHz Puterea maximă de radiofrecventă: 10mW(ERP) Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa B3T2K2R u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:

http://www.tokai-rika.co.jp/pc

Frekvencijski opseg: 433.050 - 434.790 MHz

Maksimalna radio-frekvencijska snaga: 10mW(ERP)

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes B3T2K2R është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc

Brezi i frekuencës: 433.050 - 434.790 MHz Fuqia maksimale e radiofrekuencës: 10mW(ERP)

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa B3T2K2R u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

http://www.tokai-rika.co.jp/pc

Frekvencijski pojas: 433.050 - 434.790 MHz

Maksimalna RF snaga: 10mW(ERP)

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa B3T2K2R u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

http://www.tokai-rika.co.jp/pc

Frekventni opseg: 433.050 - 434.790 MHz

Maksimalna radio-frekventna snaga: 10mW(ERP)

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün B3T2K2R 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

http://www.tokai-rika.co.jp/pc

Frekans bandı: 433.050 - 434.790 MHz Maksimum radyo frekans gücü: 10mW(ERP)



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

- \triangle : This mark is a safety/warning mark.
- Do not ingest battery.

Chemical Burn Hazard

- This product contains a coin / button cell battery.
- If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- · Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION

- Risk of explosion if the battery is replaced by an incorrect type.
- · Replace battery with the same type.

CAUTION

- · Risk of explosion or the leakage of flammable liquid or gas.
- Do not use in /store in /bring into environment of extremely high temperature or extremely low pressure due to the very high altitude.
- · Do not attempt to burn, crush, or cut used battery.
- 1 : Tämä on turva-/varoitusmerkki.
- ·Paristoa ei saa laittaa suuhun.

Kemiallisen palovamman vaara

- Laitteessa on kolikko-/nappiparisto.
- Elimistöön joutunut kolikko-/nappiparisto voi aiheuttaa vakavia sisäisiä palovammoja vain 2 tunnissa, jolloin seurauksena voi olla hengen menetys.
- · Uudet ja käytetyt paristot on pidettävä poissa lasten ulottuvilta.
- •Jos paristolokero ei sulkeudu kunnolla, laitteen käyttö on lopetettava, ja laite on pidettävä poissa lasten ulottuvilta.
- •Jos on syytä epäillä, että paristo on nielaistu tai muuten päässyt elimistöön, ota välittömästi yhteyttä lääkäriin.

TÄRKEÄ HUOMAUTUS

- •Käytetyn pariston vaihtaminen tyypiltään väärään voi aiheuttaa räjähdysvaaran.
- ·Vaihda paristo tyypiltään samanlaiseen.

TÄRKEÄ HUOMAUTUS

- -Räjähdysvaara tai syttyvän nesteen tai kaasun vuotovaara.
- •Ei saa käyttää/säilyttää/tuoda lämpötilaltaan tai merenpinnasta mitattuna erittäin korkeaan ympäristöön, jossa ilmanpaine on erittäin alhainen.
- Käytettyä paristoa ei saa polttaa, murskata tai halkaista.

- ·Slik de batterij niet in.

Risico op chemische brandwonden

- Dit product bevat een munt-/knoopcelbatterij.
- •Als de munt-/knoopcelbatterij wordt ingeslikt, kan het al binnen 2 uur ernstige interne brandwonden veroorzaken en de dood tot gevolg hebben.
- ·Houd nieuwe en gebruikte batterijen buiten bereik van kinderen.
- •Als het batterijcompartiment niet goed sluit, stop dan met het gebruik van het product en houd het buiten bereik van kinderen.
- •Als u denkt dat batterijen zijn ingeslikt of in enig deel van het lichaam zijn gestopt, roep dan onmiddellijk medische hulp in.

VOORZICHTIG

- •Er bestaat een risico op ontploffing als de batterij wordt vervangen door een verkeerd type.
- · Vervang de batterij door een van hetzelfde type.

VOORZICHTIG

- •Er bestaat een risico op ontploffing of lekkage van brandbare vloeistof of gas.
- •Niet gebruiken in/bewaren in/meenemen naar een omgeving met extreem hoge temperatuur of met extreem lage druk als gevolg van zeer grote hoogte.
- •Een gebruikte batterij niet verbranden, platdrukken, of doorsnijden.
- Δ : Ce pictogramme est une marque de sécurité/avertissement.
- •Ne pas ingérer la pile.

Risques de brûlure chimique

- •Ce produit contient une pile bouton.
- •Si la pile bouton est avalée, elle peut causer de graves brûlures internes en seulement 2 heures et peut entraîner la mort.
- ·Conservez les piles neuves et usagées hors de portée des enfants.
- •Si le compartiment de la pile ne ferme pas correctement, cessez d'utiliser le produit et conservez-le hors de portée des enfants.
- •Si vous pensez que des piles ont pu être avalées ou placées à l'intérieur d'une partie du corps, consultez immédiatement un médecin.

AVERTISSEMENT

- •Risque d'explosion si la pile est remplacée par un type incorrect.
- ·Remplacez la pile par une pile du même type.

AVERTISSEMENT

- •Risque d'explosion ou de fuite de liquide ou de gaz inflammable.
- •Ne jamais utiliser, stocker, placer dans un environnement à la température extrêmement élevée ou à la pression extrêmement basse en raison d'une très haute altitude.
- Ne jamais essayer de brûler, écraser ou couper des piles usagées.

- ⚠: Det här märket är ett säkerhets-/varningsmärke.
- · Förtär inte batteriet.

Risk för kemisk brännskada

- •Den här produkten innehåller ett mynt-/knappbatteri.
- •Om mynt-/knappbatteriet sväljs kan det orsaka allvarliga interna brännskador på bara två timmar, vilket kan leda till dödsfall.
- ·Håll nya och använda batterier borta från barn.
- •Om batterifacket inte stängs ordentligt, sluta använda produkten och håll den undan från barn.
- •Om du misstänker att batterier har svalts eller placerats inuti någon del av kroppen, sök omedelbart läkarvård.

VARNING

- ·Risk för explosion om batteriet byts ut mot ett av fel typ.
- •Byt ut batteriet mot ett av samma typ.

VARNING

- •Risk för explosion eller läckage av brandfarliga vätskor och gaser.
- •Använd inte, förvara inte och ta inte in i miljö med extremt hög temperatur eller extremt lågt tryck p.g.a. hög höjd.
- · Försök inte bränna, krossa eller skära använt batteri.
- 1 : Dette mærke er et sikkerheds-/advarselsmærke.
- Batteriet må ikke indtages.

Fare for kemisk forbrænding

- •Dette produkt indeholder et mønt-/knapcellebatteri.
- •Hvis mønt-/knapcellebatteriet sluges, kan det medføre alvorlige indre forbrændinger i løbet af kun 2 timer og kan føre til dødsfald.
- Opbevar nye og brugte batterier utilgængeligt for børn.
- •Hvis batterirummet ikke kan lukkes ordentligt, skal du indstille brugen af produktet og opbevare det utilgængeligt for børn.
- •Hvis du har mistanke om, at der måske er blevet slugt batterier, eller batterier på anden måde er kommet ind i kroppen, skal du øjeblikkeligt søge lægehjælp.

FORSIGTIG

- •Risiko for eksplosion, hvis batteriet udskiftes med en forkert type.
- Udskift batteriet med et batteri af samme type.

FORSIGTIG

- ·Risiko for eksplosion eller lækage af brændbar væske eller gas.
- •Må ikke anvendes på/opbevares på/tages med til meget varme steder eller steder med meget lavt tryk som følge af ekstreme høider.
- ·Forsøg ikke at brænde, knuse eller adskille brugte batterier.

- 1: Dieses Symbol ist ein Sicherheits-/Warnsymbol.
- · Verschlucken Sie die Batterie nicht.

Verätzungsgefahr

- •Dieses Produkt enthält eine Knopfzellenbatterie.
- •Falls die Knopfzellenbatterie verschluckt wird, kann dies innerhalb von nur 2 Stunden schwere innere Verätzungen verursachen und zum Tode führen.
- · Halten Sie neue und gebrauchte Batterien von Kindern fern.
- •Falls sich das Batteriefach nicht sicher schließen lässt, stellen Sie die Verwendung des Produkts ein und halten Sie es von Kindern fern.
- Falls Sie glauben, dass Batterien eventuell verschluckt oder in einen Teil des Körpers eingeführt worden sind, begeben Sie sich sofort in ärztliche Behandlung.

ACHTUNG

- Es besteht Explosionsgefahr, falls die Batterie durch eine Batterie der falschen Art ersetzt wird.
- ·Ersetzen Sie Batterien nur durch die gleiche Art.

ACHTUNG

- •Es besteht Explosionsgefahr oder die Gefahr eines Austritts von brennbarer Flüssigkeit oder entzündlichem Gas.
- •Das Produkt darf nicht in Umgebungen mit hohen Temperaturen oder extrem niedrigem Luftdruck aufgrund von extremen Höhenlagen verwendet / aufbewahrt / gebracht werden.
- · Versuchen Sie nicht, gebrauchte Batterien zu verbrennen, zu zerstoßen oder zu schneiden.

- Το σήμα αυτό είναι ένα σήμα ασφαλείας/προειδοποίησης.
- Μην καταπίνετε την μπαταρία.

Κίνδυνος χημικού εγκαύματος

- Αυτό το προϊόν περιέχει μια μπαταρία σχήματος νομίσματος / κουμπιού.
- Αν η μπαταρία σχήματος νομίσματος / κουμπιού καταποθεί, μπορεί να προκαλέσει σοβαρά εσωτερικά εγκαύματα σε μόλις 2 ώρες και μπορεί να επέλθει θάνατος.
- Διατηρείτε τις καινούργιες και τις χρησιμοποιημένες μπαταρίες μακριά από παιδιά.
- Εάν το διαμέρισμα της μπαταρίας δεν κλείνει καλά, σταματήστε τη χρήση του προϊόντος και κρατήστε το μακριά από παιδιά.
- Αν νομίζετε ότι οι μπαταρίες ενδέχεται να έχουν καταποθεί ή τοποθετηθεί μέσα σε οποιοδήποτε μέρος του σώματος, ζητήστε αμέσως ιατρική φροντίδα.

ΠΡΟΣΟΧΗ

- Υπάρχει κίνδυνος έκρηξης εάν η μπαταρία αντικατασταθεί με μπαταρία εσφαλμένου τύπου.
- Αντικαταστήστε την μπαταρία με μπαταρία του ίδιου τύπου.

ΠΡΟΣΟΧΗ

- Υπάρχει κίνδυνος έκρηξης ή διαρροής εύφλεκτων υγρών ή αερίων.
- Μη χρησιμοποιείτε / αποθηκεύετε / μεταφέρετε το προϊόν σε περιβάλλον με εξαιρετικά υψηλή θερμοκρασία ή εξαιρετικά χαμηλή πίεση λόγω πολύ μεγάλου υψομέτρου.
- Μην επιχειρήσετε να κάψετε, να συνθλίψετε ή να κόψετε μια χρησιμοποιημένη μπαταρία.
- 1 : Questo è un simbolo di sicurezza/avvertenza.
- · Non ingerire la batteria.

Pericolo di ustioni chimiche

- · Questo prodotto contiene una batteria a bottone/moneta.
- Se la batteria a bottone/moneta viene ingerita, può causare gravi ustioni interne in sole 2 ore e provocare la morte.
- · Tenere le batterie nuove e usate lontano dalla portata dei bambini.
- Se il vano batteria non si chiude in modo saldo, interrompere l'utilizzo del prodotto e tenerlo lontano dalla portata dei bambini.
- Se si ritiene che le batterie siano state ingerite o inserite in qualsiasi parte del corpo, consultare immediatamente un medico.

ATTENZIONE

- · Rischio di esplosione in caso di sostituzione della batteria con una di tipo errato.
- · Sostituire la batteria con una dello stesso tipo.

ATTENZIONE

- · Rischio di esplosione o di perdita di liquidi o gas infiammabili.
- Non utilizzare / immagazzinare / portare in ambienti con temperatura estremamente alta o pressione estremamente a causa dell'elevata altitudine.
- · Non provare a bruciare, schiacciare o tagliare la batteria usata.

- ∴ Este símbolo es un símbolo de seguridad/precaución.
- No ingerir la batería.

Peligro de quemadura química

- ·Este producto contiene una batería de pila de botón.
- •Si se ingiere la batería de pila de botón, esta puede causar graves quemaduras internas en solo 2 horas y puede provocar la muerte.
- · Mantenga las baterías nuevas y usadas alejadas de los niños.
- Si el compartimento de la batería no se cierra correctamente, deje de usar el producto y manténgalo alejado de los niños.
- ·Si cree que las baterías hayan podido ser ingeridas o introducidas en alguna parte del cuerpo, busque inmediatamente atención médica.

ATENCIÓN

- •Riesgo de explosión si la batería es reemplazada por una del tipo incorrecto.
- ·Reemplace la batería por una del mismo tipo.

ATENCIÓN

- ·Riesgo de explosión o escape de líquido o gas inflamable.
- •No usar / almacenar / introducir en un ambiente de temperatura extremadamente alta o de presión extremadamente baja a causa de la alta altitud.
- · No intente quemar, aplastar, o cortar la batería usada.
- ⚠: Esta marca é uma marca de segurança/aviso.
- ·Não ingerir a pilha.

Perigo de Queimadura Química

- ·Este produto contém uma pilha de tipo moeda/botão.
- •Se a pilha de tipo moeda/botão for engolida, poderá causar queimaduras internas graves em apenas 2 horas e levar à morte.
- · Manter as pilhas novas e usadas longe de crianças.
- •Se o compartimento da pilha não se fechar completamente, cessar a utilização do produto e manter fora do alcance das crianças.
- •Caso seja possível que as pilhas tenham sido engolidas ou colocadas dentro de qualquer parte do corpo, procurar cuidados médicos imediatamente.

CUIDADO

- •Risco de explosão se a pilha for substituída por uma de tipo incorreto.
- Substituir a pilha por uma do mesmo tipo.

CUIDADO

- ·Risco de explosão ou fuga de líquidos ou gases inflamáveis.
- Não utilizar/armazenar/colocar em ambiente de temperatura extremamente alta, ou pressão extremamente baixa devido a altitude muito alta.
- Não tentar queimar, esmagar ou cortar a pilha usada.

- ⚠: Din il-marka hija marka ta' sigurtá/twissija.
- ·Tiblax il-batterija.

Periklu ta' Ħruq Kimiku

- •Dan il-prodott fih batterija munita / button cell.
- Jekk tinbela' I-batterija munita / button cell, tista' tikkawża ħruq intern sever ftemp ta' sagħtejn biss u tista' twassal għall-mewt.
- ·Żomm il-batteriji godda u użati 'l boghod mit-tfal.
- Jekk il-kompartiment tal-batterija ma jagħlaqx sew, waqqaf l-użu tal-prodott u żommu 'l bogħod mit-tfal.
- Jekk taħseb li l-batteriji setgħu nbelgħu jew tpoġġew ġewwa xi parti tal-ġisem, fittex attenzjoni medika immedjata.

ATTENZJONI

- ·Riskju ta' splużjoni jekk il-batterija tiġi ssostitwita b'tip inkorrett.
- · Ibdel il-batterija bl-istess tip.

ATTENZJONI

- ·Riskju ta' splużjoni jew tnixxija ta' likwidu jew gass fjammabbli.
- •Tużahx / taħżnux / iġġibux f'ambjent ta' temperatura estremament għolja jew pressjoni estremament baxxa minħabba l-altitudni għolja ħafna.
- •Tippruvax taħraq, tfarrak jew tqatta' l-batteriji użati.

⚠: See märk on ohutus-/hoiatusmärk.

·Ärge patareid alla neelake.

Keemilise põletuse oht

- See toode sisaldab mündi/nööbi tüüpi elemendiga patareid.
- •Mündi/nööbi tüüpi elemendiga patarei allaneelamine võib põhjustada raskeid sisemisi põletusi juba 2 tunni jooksul ning võib lõppeda surmaga.
- · Hoidke uued ja kasutatud patareid lastele kättesaamatus kohas.
- •Kui patareipesa ei sulgu kindlalt, lõpetage toote kasutamine ja hoidke seda lastele kättesaamatus kohas.
- •Kui te arvate, et patareid võivad olla alla neelatud või mistahes kehaossa sattunud, pöörduge viivitamatult arsti poole.

ETTEVAATUST

- •Plahvatusoht vahetamisel vale tüüpi patareiga.
- Vahetage sama tüüpi patareiga.

ETTEVAATUST

- Plahvatuse või tuleohtliku vedeliku või gaasi lekke oht.
- Ärge kasutage, hoidke ega tooge keskkonda eriti kõrge temperatuuriga või eriti madala rõhuga väga suure kõrguse tõttu merepinnast.
- Ärge üritage põletada, purustada ega lõigata kasutatud patareid.

- 🗥 : Ez a jelzés biztonsági/figyelmeztető jelzés.
- ·Ne nyelje le az elemet.

Vegyi anyag okozta égésisérülés-veszély

- ·Ez a termék gombelemet tartalmaz.
- · Amennyiben a gombelemet lenyeli, az mindössze 2 órán belül komoly belső égési sérüléseket okozhat és halálhoz vezethet.
- Az új és használt elemeket tartsa távol a gyermekektől.
- Amennyiben az elemtartó rekesz nem zárható biztonságosan, függessze fel a termék használatát és tartsa gyermekektől távol.
- · Amennyiben úgy véli, hogy az elemet lenyelték vagy bármely testrészbe helyezték, haladéktalanul forduljon orvoshoz.

VIGYÁZAT

- ·Nem megfelelő típusú csereelem használata robbanásveszélyes.
- ·Az elemcseréhez azonos típusú elemet használjon.

VIGYÁZAT

- Robbanásveszély vagy gyúlékony folyadékok vagy gázok szivárgása.
- Ne használja/ne tárolja/ne helyezze szélsőségesen magas hőmérsékletű környezetbe, és ne tegye ki a nagy magasságokban kialakuló rendkívül alacsony nyomásnak.
- · A használt elemet ne kísérelje meg elégetni, összezúzni vagy szétvágni.

- 1 : Toto je bezpečnostná/výstražná značka.
- ·Dbajte na to, aby nedošlo k prehltnutiu batérie.

Nebezpečenstvo poleptania chemikáliou

- Tento výrobok obsahuje mincovú/gombíkovú batériu.
- •Ak dôjde k prehltnutiu mincovej/gombíkovej batérie, už v priebehu 2 hodín môže spôsobiť vážne vnútorné poleptanie a viesť k usmrteniu.
- ·Nové a použité batérie uchovávajte mimo dosahu detí.
- Ak sa priestor pre batériu nezatvorí bezpečne, prestaňte používať výrobok a uchovávajte ho mimo dosahu detí.
- •Ak si myslíte, že mohlo dôjsť k prehltnutiu batérií alebo ich umiestneniu do ktorejkoľvek časti tela, okamžite vyhľadajte lekársku pomoc.

UPOZORNENIE

- · Hrozí nebezpečenstvo výbuchu, ak sa batéria vymení za nesprávny typ.
- Vymeňte batériu za rovnaký typ.

UPOZORNENIE

- · Nebezpečenstvo výbuchu alebo úniku horľavej kvapaliny alebo horľavého plynu.
- Nepoužívajte/neskladujte v prostredí/neprinášajte do prostredia s mimoriadne vysokou teplotou, alebo mimoriadne nízkym tlakom v dôsledku veľmi vysokej nadmorskej výšky.
- · Nepokúšajte sa spáliť, rozdrviť ani rozrezať použitú batériu.

- ⚠ : Tento symbol je bezpečnostním/výstražným symbolem.
- Baterii nepolykeite.

Nebezpečí chemických popálenin

- Tento výrobek obsahuje mincovou/knoflíkovou baterii.
- Pokud dojde ke spolknutí mincové/knoflíkové baterie, může za pouhé 2 hodiny způsobit závažné vnitřní popáleniny a v jejich důsledku případně i smrt.
- ·Použité a nové baterie udržujte mimo dosah dětí.
- •Pokud nelze prostor pro baterii pevně uzavřít, přestaňte výrobek používat a udržuite jej mimo dosah dětí.
- •Pokud si myslíte, že mohlo dojít ke spolknutí baterie nebo jejímu vsunutí dovnitř kterékoliv části těla, okamžitě vyhledejte lékařskou pomoc.

UPOZORNĚNÍ

- •Nebezpečí výbuchu v případě výměny baterie za nesprávný druh baterie.
- Proto baterii vždy vyměňte za jinou stejného typu.

UPOZORNĚNÍ

- ·Nebezpečí výbuchu nebo úniku hořlavé kapaliny či plynu.
- Nepoužívejte/neskladujte/nepřinášejte je do prostředí s nesmírně vysokou teplotou nebo nesmírně nízkým tlakem zapříčiněným vysokou nadmořskou výškou.
- Nesnažte se baterii spálit, rozdrtit či rozříznout.
- ⚠: Ta oznaka je varnostna/opozorilna oznaka.
- ·Ne zaužijte baterije.

Nevarnost kemijske opekline

- ·Ta izdelek vsebuje gumbasto baterijo.
- •Če se gumbasto baterijo zaužije, lahko to povzroči hude notranje opekline v le 2 urah in lahko vodi v smrt.
- Nove in rabljene baterije hranite izven dosega otrok.
- •Če se predalček za baterijo ne zapira pravilno, prenehajte z uporabo izdelka in ga hranite izven dosega otrok.
- •Če sumite, da je morda nekdo zaužil baterijo ali jo dal v kateri koli del telesa, takoj poiščite zdravniško pomoč.

POZOR

- •Nevarnost eksplozije, če baterijo zamenjate z baterijo napačne vrste.
- Zamenjajte baterijo z istim tipom.

POZOR

- •Tveganje za eksplozijo ali puščanje vnetljivih tekočin ali plinov.
- •Ne uporabljajte/shranjujte/prinašajte v okolje izredno visoke temperature ali izredno nizkega tlaka zaradi zelo visoke nadmorske višine.
- ·Ne poskušajte zažigati, uničiti, ali rezati rabljene baterije.

- ⚠: Šis ženklas yra saugos/įspėjamasis ženklas.
- ·Neprarykite baterijos.

Cheminio nudegimo pavojus

- •Šiame gaminyje yra monetos/sagos formos baterija.
- Prarijęs monetos/sagos formos bateriją, asmuo per 2 valandas gali patirti sunkius vidinius nudegimus ir netgi mirti.
- ·Naujas ir panaudotas baterijas laikykite vaikams nepasiekiamoje vietoje.
- Jei baterijų skyrelio nepavyksta tvirtai uždaryti, nebenaudokite gaminio ir laikykite jį vaikams nepasiekiamoje vietoje.
- Jei manote, kad baterijos buvo prarytos arba pateko į kūną, nedelsdami kreipkitės į gydytoją.

PERSPĖJIMAS

- ·Baterija pakeitus netinkamo tipo baterija, kyla sprogimo pavojus.
- Pakeiskite sena baterija tik to paties tipo nauja baterija.

PERSPĖJIMAS

- Sprogimo arba degių skysčių ar dujų nuotėkio pavojus.
- •Negalima naudoti/laikyti/turėti labai aukštos temperatūros arba labai dideliame aukštyje esančioje itin žemo slėgio aplinkoje.
- ·Naudotos baterijos nebandykite deginti, ardyti ar perpjauti.
- 1: Šī zīme ir drošības/brīdinājuma zīme.
- ·Nenorijiet bateriju.

Ķīmisku apdegumu briesmas

- Šis izstrādājums satur tabletes tipa bateriju.
- Ja ir norīta tabletes tipa baterija, tā 2 stundu laikā var radīt smagus apdegumus un izraisīt nāvi.
- •Jaunas un lietotas baterijas uzglabājiet bērniem nepieejamā vietā.
- Ja bateriju nodalījumu nevar droši aizvērt, pārtrauciet lietot izstrādājumu un novietojiet to bērniem nepieejamā vietā.
- Ja jūsuprāt baterijas ir norītas vai ievietotas kādā ķermeņa daļā, nekavējoties vērsieties pēc medicīniskās palīdzības.

UZMANĪBU!

- •Eksplozijas risks, ja baterija tiek nomainīta ar nepareiza tipa bateriju.
- ·Bateriju nomainiet pret tāda paša tipa bateriju.

UZMANĪBU!

- •Eksplozijas vai uzliesmojoša šķidruma vai gāzes noplūdes risks.
- Nelietojiet, neuzglabājiet un neievietojiet vidē ar ļoti augstu temperatūru, kā arī vidē, kur loti lielā augstuma virs jūras līmeņa dēļ ir ļoti zems spiediens.
- ·Nemēģiniet sadedzināt, sagraut vai sagriezt nolietoto bateriju.

- 1 : ten symbol oznacza niebezpieczeństwo/ostrzeżenie.
- ·Nie połykać baterii.

Ryzyko oparzenia chemicznego

- ·Ten produkt zawiera baterię guzikową.
- Połknięta bateria guzikowa może spowodować poważne oparzenia wewnętrzne w czasie jedynie 2 godzin i prowadzić do śmierci.
- ·Przechowywać nowe i zużyte baterie z dala od dzieci.
- Jeśli solidne zamknięcie komory baterii jest niemożliwe, zaprzestać użytkowania produktu i przechowywać go w miejscu niedostępnym dla dzieci.
- •W przypadku podejrzenia, że mogło dojść do połknięcia baterii lub ich umieszczenia w dowolnym otworze ciała, niezwłocznie uzyskać pomoc lekarską.

PRZESTROGA

- · Istnieje ryzyko wybuchu, jeśli bateria zostanie zastąpiona baterią niewłaściwego typu.
- ·Wymieniać baterię na baterię tego samego typu.

PRZESTROGA

- ·Ryzyko wybuchu lub wycieku łatwopalnego płynu lub gazu.
- Nie używać i nie przechowywać w otoczeniu o skrajnie wysokiej temperaturze lub skrajnie niskim ciśnieniu wynikającym z bardzo dużej wysokości ani nie wnosić do takiego otoczenia.
- ·Nie podejmować prób spalenia, zgniecenia lub przecięcia zużytej baterii.

- 🗥 : Този знак е знак за безопасност/предупреждение.
- •Не поглъщайте батерията.

Опасност от химическо изгаряне

- •Този продукт съдържа плоска/бутонна батерия.
- •Ако плоската/бутонна батерия бъде погълната, тя може да причини тежки вътрешни изгаряния само за 2 часа и може да доведе до смърт.
- •Пазете новите и използваните батерии далеч от деца.
- •Ако отделението за батериите не се затваря добре, спрете да използвате продукта и го дръжте далеч от деца.
- Ако смятате, че батериите може да са били погълнати или поставени в някоя част на тялото, незабавно потърсете медицинска помощ.

ВНИМАНИЕ

- •Опасност от експлозия, ако батерията бъде сменена с неправилен тип.
- •Сменете батерията със същия вид.

ВНИМАНИЕ

- •Опасност от експлозия или изтичане на запалими течности или газове.
- •Не използвайте/съхранявайте/носете в среда с изключително висока температура или изключително ниско налягане, причинено от голямата височина.
- •Не се опитвайте да изгаряте, смачквате или режете използваната батерия.
- ⚠ : Acest marcaj este un marcaj de securitate/avertizare.
- ·Nu ingerati bateria.

Pericol de arsuri chimice

- ·Acest produs conține o baterie tip pastilă.
- •Dacă bateria tip pastilă este înghițită, aceasta poate cauza arsuri interne grave în numai 2 ore si poate duce la deces.
- Nu lăsați bateriile noi și bateriile uzate la îndemâna copiilor.
- •În cazul în care compartimentul bateriei nu se închide bine, încetați utilizarea produsului și nu îl lăsați la îndemâna copiilor.
- •Dacă bănuiți că este posibil ca bateriile să fi fost înghițite sau introduse în orice parte a corpului, consultati imediat medicul.

ATENTIE

- •Risc de explozie dacă bateria este înlocuită cu un tip incorect.
- ·Înlocuiti bateria cu una de acelasi tip.

ATENTIE

- •Risc de explozie sau de scurgeri de lichide sau gaze inflamabile.
- •Nu utilizați/depozitați într-un mediu cu temperatură extrem de înaltă sau cu presiune extrem de joasă din cauza altitudinii foarte mari.
- •Nu încercați să ardeți, să spargeți sau să tăiați bateriile uzate.

- 1 : Ova oznaka je oznaka sigurnosti/upozorenja.
- Nemojte gutati bateriju.

Opasnost od kemijskih opeklina

- ·Ovaj proizvod sadrži novčić/gumb bateriju.
- Ako se novčić/gumb baterija proguta, može uzrokovati ozbiljne unutarnje opekline u samo 2 sata i može dovesti do smrti.
- Držite nove i rabljene baterije izvan dohvata djece.
- •Ako se pretinac za baterije ne zatvara sigurno, prestanite koristiti proizvod i držite ga dalje od djece.
- Ako smatrate da su baterije možda progutane ili smještene unutar bilo kojeg dijela tijela, zatražite hitnu medicinsku pomoć.

OPREZ

- •Ako je baterija zamijenjena pogrešnim tipom, postoji rizik od eksplozije.
- ·Zamijenite bateriju s baterijama iste vrste.

OPREZ

- ·Rizik od eksplozije ili istjecanja zapaljive tekućine ili plina.
- Nemojte koristiti u /pohranjivati u /unijeti u prostoru izuzetno visoke temperature ili izuzetno niskog tlaka zbog visoke nadmorske visine.
- •Ne pokušavajte spaliti, lomiti ili rezati istrošenu bateriju.
- ⚠ : Þetta tákn er öryggis-/aðvörunartákn.
- ·Gleypið ekki rafhlöðuna.

Hætta á efnabruna

- Þessi vara inniheldur flata rafhlöðu.
- •Ef rafhlaðan er gleypt getur hún valdið alvarlegum innvortis bruna á innan við 2 klukkustundum sem getur leitt til dauða.
- ·Geymið nýjar og notaðar rafhlöður þar sem börn ná ekki til.
- •Ef rafhlöðuhólfið lokast ekki örugglega skal hætta notkun vörunnar og geyma hana bar sem börn ná ekki til.
- •Ef þú telur að rafhlöður hafi verið gleyptar eða settar inn í eitthvert líkamsop, skaltu hafa samband við lækni tafarlaust.

VARÚĐ

- ·Hætta á sprengingu ef rafhlöðunni er skipt út fyrir ranga tegund.
- ·Skiptið rafhlöðunni ávallt út fyrir sömu tegund.

VARÚĐ

- ·Hætta á sprengingu eða leka á eldfimum vökva eða lofttegundum.
- •Má ekki nota/geyma/setja í umhverfi þar sem er afar hár hiti, eða afar lágur þrýstingur vegna mikillar hæðar.
- Ekki reyna að brenna, kremja eða skera notaða rafhlöðu.

- 1 : Dette merket er et sikkerhets-/advarselsmerke.
- Ikke svelg batteriet.

Kjemisk brannfare

- Dette produktet inneholder et mynt-/knappecellebatteri.
- •Dersom mynt-/knappecellebatteriet svelges, kan det frembringe alvorlige indre forbrenninger i løpet av kun to timer, og kan være dødelig.
- ·Hold nye og brukte batterier borte fra barn.
- ·Lukkes ikke batterirommet sikkert må du stanse å bruke produktet og holde det utenfor barns rekkevidde.
- Oppsøk medisinsk hjelp umiddelbart hvis du tror at batterier kan være svelget eller plassert inne i kroppen.

FORSIKTIG

- •Eksplosjonsfare hvis batteriet erstattes med feil type.
- •Bytt batteri med samme type.

FORSIKTIG

- Fare for eksplosjon eller lekkasje av brannfarlig væske eller gass.
- •lkke bruk i/oppbevar i/ta med inn i miljø med ekstremt høy temperatur eller ekstremt lavt trykk på grunn av den svært store høyden.
- Ikke forsøk å brenne, knuse eller skjære opp et brukt batteri.
- ⚠ : Ova oznaka je sigurnosna/upozoravajuća oznaka.
- ·Nemojte gutati bateriju.

Opasnost od hemijskih opekotina

- Ovaj proizvod sadrži bateriju veličine kovanice/dugmeta.
- ·Ako se baterija veličine kovanice/dugmeta proguta, može izazvati ozbiljne unutrašnje opekotine za samo 2 sata i može dovjesti do smrti.
- Čuvajte nove i korišćene baterije dalje od djece.
- •Ako se prostor za baterije ne zatvori dobro, prestanite sa korišćenjem proizvoda i držite ga dalje od djece.
- •Ako mislite da su baterije možda progutane ili stavljene u unutrašnjost bilo kog dijela tijela, potražite hitnu medicinsku pomoć.

OPREZ

- •Opasnost od eksplozije ako se baterija zamijeni s baterijom pogrešnog tipa.
- ·Zamijenite bateriju sa baterijom istog tipa.

OPREZ

- ·Opasnost od eksplozije ili curenja zapaljive tečnosti ili gasa.
- •Nemojte koristiti /skladištiti /unositi u okruženje izuzetno visoke temperature ili izuzetno niskog pritiska usljed veoma velike visine.
- Ne pokušavajte da spalite, lomite ili isječete iskorišćenu bateriju.

- 1 : Kjo është shenjë sigurie/paralajmërimi.
- Mos e gëlltisni baterinë.

Rrezik djegieje kimike

- Ky produkt përmban një bateri të hollë në formë monedhe/kopse.
- Nëse bateria e hollë në formë monedhe/kopse gëlltitet, ajo mund të shkaktojë djegje të rënda të brendshme brenda vetëm 2 orëve dhe mund të sjellë vdekjen.
- Mbajini bateritë e reja dhe të përdorura larg nga fëmijët.
- Nëse foleja e baterisë nuk mbyllet mirë, ndaloni përdorimin e produktit dhe mbajeni larg nga fëmijët.
- •Nëse mendoni se bateritë mund të jenë gëlltitur ose futur brenda ndonjë pjese trupi, kërkoni menjëherë vëmendjen e mjekut.

KUJDES

- Rrezik shpërthimi nëse bateria zëvendësohet me një lloj të pasaktë.
- Zëvendësojeni baterinë me të njëjtin lloj.

KUJDES

- •Rrezik shpërthimi nga rrjedhja e lëngut apo gazit të ndezshëm.
- •Mos e përdorni / ruani / sillni në mjedise me temperaturë jashtëzakonisht të lartë ose presion jashtëzakonisht të ulët në lartësi shumë të mëdha.
- •Mos u përpigni të digjni, shtypni ose prisni baterinë e përdorur.
- ⚠ : Ova oznaka je oznaka za bezbednost/upozorenje.
- ·Nemojte gutati bateriju.

Opasnost od hemijskih opekotina

- Ovaj proizvod sadrži bateriju u obliku novčića/dugmeta.
- ·Ako se baterija u obliku novčića/gumba proguta, može da izazove ozbiljne interne opekotine za samo 2 sada i može da dovede do smrti.
- Nove i korišćene baterije čuvajte van domašaja dece.
- Ako se odeljak za bateriju ne zatvori dobro, prestanite da koristite proizvod i čuvajte ga van domašaja dece.
- •Ako mislite da su baterije možda progutane ili stavljene unutar bilo kog dela tela, odmah zatražite medicinsku pomoć.

OPREZ

- •Rizik od eksplozije ako je baterija zamenjena nepravilnim tipom.
- ·Zamenite bateriju sa istim tipom.

OPREZ

- Rizik od eksplozije ili curenja zapaljive tečnosti ili gasa.
- •Ne koristite/ne čuvajte/ne donosite u sredinu izuzetno visoke temperature ili izuzetno niskog pritiska usled vrlo visoke visine.
- Ne pokušavajte da zapalite, smrvite ili isečete korišćenu bateriju.

1 : Bu işaret bir güvenlik/uyarı işaretidir.

·Pili yutmayın.

Kimyasal Yanma Tehlikesi

- ·Bu üründe bir düğme pil bulunmaktadır.
- Düğme pil yutulursa, sadece 2 saat içinde ağır iç yanıklara neden olabilir ve ölüme yol açabilir.
- ·Yeni ve kullanılmış pilleri çocuklardan uzak tutun.
- •Pil yuvası emniyetli bir şekilde kapanmıyorsa, ürünü kullanmayı bırakın ve çocuklardan uzak tutun.
- •Pillerin yutulduğunu veya vücudun herhangi bir parçasının içine yerleştirildiğini düşünüyorsanız, derhal tıbbi yardım alın.

DİKKAT

- •Pil yanlış tür bir pille değiştirilirse patlama riski vardır.
- •Pili aynı tür pillerle değiştirin.

DİKKAT

- ·Patlama ya da yanıcı sıvı veya gaz sızıntısı riski vardır.
- Aşırı derecede yüksek sıcaklıktaki veya çok yüksek rakımdan dolayı aşırı derecede düşük basınca sahip ortamlarda kullanmayın /saklamayın veya bu ortamlara götürmeyin.
- ·Kullanılmış pili yakmaya, ezmeye veya kesmeye çalışmayın.

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio B3T2K2R este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio".

Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet:

http://www.tokai-rika.co.jp/pc

Banda de frecvență: 433.050 - 434.790 MHz Puterea maximă de radiofrecvență: 10mW(ERP)



Abordare: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

1 : Acest marcaj este un marcaj de securitate/avertizare.

·Nu ingerați bateria.

Pericol de arsuri chimice

- ·Acest produs conține o baterie tip pastilă.
- Dacă bateria tip pastilă este înghițită, aceasta poate cauza arsuri interne grave în numai 2 ore și poate duce la deces.
- •Nu lăsati bateriile noi si bateriile uzate la îndemâna copiilor.
- ·În cazul în care compartimentul bateriei nu se închide bine, încetați utilizarea produsului și nu îl lăsați la îndemâna copiilor.
- Dacă bănuiți că este posibil ca bateriile să fi fost înghițite sau introduse în orice parte a corpului, consultați imediat medicul.

ATENȚIE

- ·Risc de explozie dacă bateria este înlocuită cu un tip incorect.
- ·Înlocuiți bateria cu una de același tip.

ATENȚIE

- •Risc de explozie sau de scurgeri de lichide sau gaze inflamabile.
- •Nu utilizați/depozitați într-un mediu cu temperatură extrem de înaltă sau cu presiune extrem de joasă din cauza altitudinii foarte mari.
- Nu încercați să ardeți, să spargeți sau să tăiați bateriile uzate.

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type B3T2K2R is in compliance with Radio Equipment Regulations 2017.

The full text of the UK declaration of conformity is available at the following internet address:

http://www.tokai-rika.co.jp/pc

Frequency band: 433.050 - 434.790 MHz

Maximum radio-frequency power: 10mW(ERP)



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

- ⚠: This mark is a safety/warning mark.
- Do not ingest battery.

Chemical Burn Hazard

- · This product contains a coin / button cell battery.
- If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- · Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION

- · Risk of explosion if the battery is replaced by an incorrect type.
- · Replace battery with the same type.

CAUTION

- · Risk of explosion or the leakage of flammable liquid or gas.
- Do not use in /store in /bring into environment of extremely high temperature or extremely low pressure due to the very high altitude.
- Do not attempt to burn, crush, or cut used battery.

Справжнім ТОКАІ RIKA CO., LTD. заявляє, що тип радіообладнання B3T2K2R відповідає Технічному регламенту радіообладнання;

КАБІНЕТ МІНІСТРІВ УКРАЇНИ ПОСТАНОВА №.355

Повний текст декларації про відповідність доступний на веб-сайті за такою адресою:

http://www.tokai-rika.co.jp/pc

Діапазон частот : 433.050 - 434.790 MHz

Максимальна потужність радіочастотного випромінювання : 10 mW(ERP)



Адреса: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Ця позначка являє собою позначку про необхідність дотримання правил безпеки/застереження.

·Не допускайте проковтування батарейки.

Небезпека хімічного опіку

- · Цей виріб містить батарейку монетного / таблеткового типу.
- •Проковтування батарейки монетного / таблеткового типу може спричинити тяжкі внутрішні опіки всього лише за 2 години і може призвести до смерті.
- ·Зберігайте нові та використані батарейки подалі від дітей.
- Якщо кришка батарейного відсіку надійно не закривається, припиніть користуватися виробом і зберігайте його подалі від дітей.
- Якщо існує ймовірність проковтування батарейки або її розміщення всередині будь-якої частини тіла, негайно зверніться за медичною допомогою.

ОБЕРЕЖНО

- •Ризик вибуху в разі заміни на батарейку неналежного типу.
- •Замінюйте батарейку на батарейку такого ж самого типу.

ОБЕРЕЖНО

- •Ризик вибуху або витоку горючої рідини або газу.
- · Не використовуйте /не зберігайте /не розміщуйте в умовах надзвичайно високої температури або надзвичайно низького тиску через дуже велику висоту над рівнем моря.
- ·Не намагайтеся спалити, розбити або розрізати використану батарейку.

ΕU

Transmitter: Model: 14CCP

Operation frequency:

433.58/434.42 MHz

Maximum output power(ERP):

0.01 mW

Manufacturer: DENSO CORPORATION

Address: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661

Japan

00

Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the

following internet address:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

https://www.denso.com/global/en/contact-us/doc/

Hierbij verklaar ik, DENSO CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

https://www.denso.com/global/en/contact-us/doc/

Le soussigné, DENSO CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

https://www.denso.com/global/en/contact-us/doc/

Härmed försäkrar DENSO CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

https://www.denso.com/global/en/contact-us/doc/

Hermed erklærer DENSO CORPORATION, at

radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

https://www.denso.com/global/en/contact-us/doc/

Hiermit erklärt DENSO CORPORATION, dass der

Funkanlagentyp der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

https://www.denso.com/global/en/contact-us/doc/

Με την παρούσα ο/η DENSO CORPORATION, δηλώνει

ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

https://www.denso.com/global/en/contact-us/doc/

Il fabbricante, DENSO CORPORATION, dichiara che il tipo

di apparecchiatura radio è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

https://www.denso.com/global/en/contact-us/doc/

Por la presente, DENSO CORPORATION declara que el

tipo de equipo radioeléctrico es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

https://www.denso.com/global/en/contact-us/doc/

O(a) abaixo assinado(a) DENSO CORPORATION declara que o presente tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereco de Internet:

https://www.denso.com/global/en/contact-us/doc/

B'dan, DENSO CORPORATION, niddikjara li dan it-tip ta'

tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li gej:

https://www.denso.com/global/en/contact-us/doc/

Käesolevaga deklareerib DENSO CORPORATION, et

käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION igazolja, hogy a típusú

rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION týmto vyhlasuje, že rádiové

zariadenie typu je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

https://www.denso.com/global/en/contact-us/doc/

Tímto DENSO CORPORATION prohlašuje, že typ

rádiového zařízení je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION potrjuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

https://www.denso.com/global/en/contact-us/doc/

Aš, DENSO CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

https://www.denso.com/global/en/contact-us/doc/

Ar šo DENSO CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION niniejszym oświadcza, że typ

urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

https://www.denso.com/global/en/contact-us/doc/

Hér með lýsir DENSO CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.

Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU.

Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:

https://www.denso.com/global/en/contact-us/doc/

С настоящото DENSO CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC.

Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес:

https://www.denso.com/global/en/contact-us/doc/

Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

https://www.denso.com/global/en/contact-us/doc/

Овиме, DENSO CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU.

Цео текст ЕУ декларације о усаглашености доступам је на следећој интернет адреси:

https://www.denso.com/global/en/contact-us/doc/

Amb aquest document, DENSO CORPORATION declara que el tipus d'equipament radioelèctric es conforme a la Directiva 2014/53/UE.

El text complet de la declaració UE de conformitat està disponible en la següent adreça d'Internet:

https://www.denso.com/global/en/contact-us/doc/

İşbu belge; DENSO CORPORATION telsiz ekipmanı tipinin 2014/53/AB sayılı Direktif'e uygun olduğunu beyan eder.

AB uygunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur:

https://www.denso.com/global/en/contact-us/doc/

Me anë të kësaj deklaratë, subjekti DENSO CORPORATION deklaron se pajisjet radio është në përputhje me këtë rregull teknik për pajisjet radio dhe fundore të komunikimeve elektronike.

Teksti i plotë i Deklaratës së Konformitetit është i disponueshëm në adresën e mëposhtme të internetit:

https://www.denso.com/global/en/contact-us/doc/

Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio".

Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet:

https://www.denso.com/global/en/contact-us/doc/



This mark is a safety/warning mark.

Do not ingest battery.

Chemical Burn Hazard

This product contains a coin / button cell battery.

If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION

Risk of explosion if the battery is replaced by an incorrect type.

Replace battery with the same type.

CAUTION

Risk of explosion or the leakage of flammable liquid or gas.

Do not use in /store in /bring into environment of extremely high temperature or extremely low pressure due to the very high altitude.

Do not attempt to burn, crush, or cut used battery.



Tämä merkki on turvallisuus/varoitusmerkki.

Älä nielaise paristoa.

Syövyttävää!

Tuote sisältää nappipariston.

Jos nappiparisto joutuu nieluun, voi se aiheuttaa vakavia sisäisiä palovammoja kahden tunnin kuluessa ja aiheuttaa kuoleman.

Pidä uudet ja käytetyt paristot poissa lasten ulottuvilta.

Jos paristolokero ei sulkeudu kunnolla, lopeta tuotteen käyttö ja pidä se poissa lasten ulottuvilta.

Hakeudu välittömästi lääkärin hoitoon, jos epäilet, että paristoja on joutunut jonkun nieluun tai muun kehonosan sisään.

VARO

Vääräntyyppinen paristo voi räiähtää.

Vaihda aina paristo samantyyppiseen.

VARO

Räjähdyksen tai syttyvien nesteiden tai kaasujen vuodon riski.

Älä käytä/säilytä tuotetta olosuhteissa, jossa se altistuu hyvin korkealle lämpötilalle tai paineelle tai suurten korkeuksien voimakkaalle alipaineelle.

Älä yritä polttaa, murskata tai leikata käytettyjä paristoja.



Dit is een veiligheids-/waarschuwingsteken.

Slik de batterij niet in.

Gevaar voor chemische brandwonden

Dit product bevat een knoopcelbatterij.

Bij inslikken kan de knoopcelbatterij binnen slechts 2 uur ernstige inwendige brandwonden veroorzaken, wat de dood tot gevolg kan hebben.

Houd nieuwe en gebruikte batterijen buiten het bereik van kinderen.

Stop met het gebruik van het product als het batterijvak niet goed sluit en houd het product buiten het bereik van Rinderen.

Raadpleeg onmiddellijk een arts als u vermoedt dat een batterij is ingeslikt of in het lichaam is gestopt.

WAARSCHUWING

Er bestaat explosiegevaar als u de batterij vervangt door de verkeerde soort batterij. Vervang de batterij door dezelfde soort batterij.

WAARSCHUWING

Explosiegevaar of gevaar voor lekken van brandbare vloeistof of brandbaar gas.

Niet gebruiken in/bewaren in/brengen naar een omgeving met extreem hoge temperatuur of extreem lage druk door zeer grote hoogte. Verbrand en verpletter de gebruikte batterij niet en snijd deze niet open.



Ce marquage est un marquage de sécurité/d'avertissement.

Ne pas ingérer la pile.

Risque de brûlure chimique

Ce produit contient une pile bouton.

Si la pile bouton est avalée, elle peut provoquer de graves brûlures internes en seulement 2 heures et entraîner la mort.

Gardez les piles neuves et usagées hors de la portée des enfants.

Si le compartiment de pile ne se ferme pas correctement, arrêtez d'utiliser le produit et gardez-le à l'écart des enfants.

Si vous croyez que des piles ont été avalées ou placées dans n'importe quelle partie du corps, consultez immédiatement un médecin.

MISE EN GARDE

Risque d'explosion si la pile est remplacée par un type incorrect. Remplacez la pile par le même type.

MISE EN GARDE

Risque d'explosion ou de fuite de liquide ou de gaz inflammable.

Ne pas utiliser / stocker / mettre dans un environnement de température extrêmement élevée ou de pression extrêmement basse en raison de l'altitude très élevée. N'essayez pas de brûler, écraser ou couper la pile usagée.



Denna etikett är en säkerhets-/varningsetikett.

Svälj inte batteriet (eller stoppa det i munnen).

Risk för kemisk brännskada

Denna produkt innehåller ett mynt-/knappbatteri.

Om mynt-/knappbatteriet sväljs ned kan det på bara 2 timmar orsaka allvarliga inre brännskador och kan leda till dödsfall.

Förvara nya och använda batterier utom räckhåll för barn.

Om batterifacket inte kan stängas säkert, sluta använda produkten och håll den borta från barn.

Om du tror att batterier har svalts ner eller kommit in i någon del av kroppen, sök omedelbart medicinsk hjälp.

OBSERVERA!

Explosionsrisk föreligger om batteriet ersätts med en felaktig typ.

Ersätt batteriet med ett batteri av samma typ.

OBSERVERA!

Risk för explosion eller läckage av brandfarlig vätska eller gas.

Använd inte i/förvara inte i/för inte i omedelbar närhet av extremt hög temperatur eller extremt lågt tryck beroende på mycket hög höjd.

Försök inte bränna, krossa eller skära sönder ett använt batteri.



Dette mærke er et sikkerheds-/ advarselsmærke.

Indsæt ikke batteri.

Kemisk forbrændingsfare

Dette produkt indeholder et mønt-/knapcellebatteri.

Hvis mønt-/knapcellebatteriet sluges, kan det forårsage alvorlige indre

forbrændinger på kun 2 timer og kan føre til døden.

Hold nye og brugte batterier væk fra børn.

Hvis batterirummet ikke lukker sikkert, skal du holde op med at bruge produktet og holde det væk fra børn.

Hvis du tror, at batterier kan være blevet slugt eller være blevet placeret i nogen del af kroppen, skal du straks søge lægehjælp.

ADVARSEL

Fare for eksplosion, hvis batteriet udskiftes med en forkert type.

Udskift batteri med samme type.

ADVARSEL

Risiko for eksplosion eller lækage af brandfarlig væske eller gas.

Må ikke anvendes i/opbevares i/indbringes i omgivelser med ekstremt høj temperatur eller ekstremt lavt tryk på grund af den meget høje højde.

Forsøg ikke at brænde, knuse eller skære brugt batteri.



Dieses Zeichen ist ein Sicherheits-/Warnzeichen.

Nehmen Sie keine Batterien zu sich.

Chemische Verbrennungsgefahr

Dieses Produkt enthält eine Knopfzellenbatterie.

Wird die Knopfzellenbatterie verschluckt, kann sie innerhalb von nur 2 Stunden schwere innere Verbrennungen verursachen und zum Tode führen.

Halten Sie neue und gebrauchte Batterien von Kindern fern.

Wenn das Batteriefach nicht sicher schließt, stellen Sie die Verwendung des Geräts ein und halten Sie es von Kindern fern.

Wenn Sie der Meinung sind, dass Batterien verschluckt oder in irgendeinen Teil des Körpers platziert wurden, suchen Sie sofort einen Arzt auf.

WARNUNG

Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird. Ersetzen Sie die Batterie durch den gleichen Typ.

WARNUNG

Gefahr von Explosion oder Austreten von brennbaren Flüssigkeiten oder Gasen.

Verwenden/lagern/bringen Sie das Gerät nicht in Umgebungen mit extrem hoher Temperatur oder extrem niedrigem Druck aufgrund von sehr großer Höhe. Versuchen Sie nicht, verbrauchte Batterien zu verbrennen, zu zerquetschen oder zu zerschneiden



Σήμα για την ασφάλεια/προειδοποιητικό σήμα.

Μην καταπίνετε την μπαταρία.

Κίνδυνος χημικού εγκαύματος

Αυτό το προϊόν περιέχει επίπεδη μπαταρία.

Σε περίπτωση κατάποσης της επίπεδης μπαταρίας μπορούν να προκληθούν σοβαρά εσωτερικά εγκαύματα σε διάστημα μόλις 2 ωρών και να επέλθει θάνατος. Φυλάσσετε τις καινούριες και τις χρησιμοποιημένες μπαταρίες μακριά από τα παιδιά.

Εάν η θήκη της μπαταρίας δεν κλείνει καλά, σταματήστε να χρησιμοποιείτε το προϊόν και φυλάξτε το μακριά από τα παιδιά.

Εάν πιστεύετε ότι υπάρχει περίπτωση να έχει γίνει κατάποση μπαταρίας ή εισχώρησή της σε κάποιο μέρος του σώματος, ζητήστε αμέσως ιατρική συμβουλή.

ΠΡΟΣΟΧΗ

Υπάρχει κίνδυνος έκρηξης εάν τοποθετηθεί λάθος τύπος μπαταρίας. Αντικαταστήστε την μπαταρία με τον ίδιο τύπο μπαταρίας

ΠΡΟΣΟΧΗ

Υπάρχει κίνδυνος έκρηξης ή διαρροής εύφλεκτου υγρού ή αερίου.

Μην χρησιμοποιείτε/αποθηκεύετε/μεταφέρετε την μπαταρία σε περιβάλλον με υπερβολικά υψηλή θερμοκρασία ή υπερβολικά χαμηλή πίεση που οφείλεται σε πολύ υψηλό υψόμετρο. Μην επιχειρήσετε να κάψετε, να συνθλίψετε ή να κόψετε την χρησιμοποιημένη μπαταρία.



Questo simbolo è un simbolo di sicurezza / avvertenza.

Non ingerire la batteria.

Pericolo di ustione chimica

Il prodotto contiene una batteria a cella a moneta / bottone.

Se la batteria a cella a moneta / bottone viene inghiottita può causare delle gravi ustioni interne in sole due ore e provocare il decesso.

Tenere le batterie nuove e quelle usate fuori dalla portata dei bambini.

Se il vano batterie non si chiude in modo sicuro, smettere di usare il prodotto e tenerlo fuori dalla portata dei bambini.

Se si ritiene che delle batterie possano essere state inghiottite o essere state introdotte all'interno di qualsivoglia parte del corpo consultare immediatamente un medico.

ATTENZIONE

Se la batteria è sostituita con una di tipo scorretto c'è rischio che esploda. Sostituire la batteria con una del medesimo tipo.

ATTENZIONE

Rischio di esplosione o di perdita di liquidi o gas infiammabili.

Non usare / custodire / mettere in ambienti con temperature estremamente alte o una pressione estremamente bassa dovuta a una notevole altitudine. Non cercare di bruciare, frantumare o tagliare delle batterie usate.



Esta marca es una marca de seguridad/advertencia.

No ingiera la pila.

Riesgo de Quemadura Química

Este producto contiene una pila tipo moneda/botón.

Si la pila de moneda/botón se traga, puede provocar quemaduras internas graves en solo 2 horas y puede causar la muerte.

Mantenga las pilas nuevas y las usadas lejos de los niños.

Si el compartimiento de la pila no se cierra de forma segura, deje de usar el producto y manténgalo alejado de los niños.

Si cree que las pilas pueden haberse tragado o colocado dentro de cualquier parte del cuerpo, busque atención médica inmediata.

PRECAUCIÓN

Riesgo de explosión si la batería es reemplazada por una de tipo incorrecto. Reemplace la batería con una del mismo tipo.

PRECAUCIÓN

Riesgo de explosión o fuga de líquido o gas inflamables.

No use/almacene/lleve a un entorno de temperatura extremadamente alta o extremadamente baja, debido a la gran altitud.

No intente quemar, aplastar o cortar la batería usada.



Esta marca é uma marca de segurança/alerta.

Não ingerir a pilha.

Perigo de queimaduras químicas

Este produto contém uma pilha de tipo moeda/botão.

Se a pilha de moeda/botão for engolida, pode causar queimaduras internas graves em apenas 2 horas e conduzir à morte.

Mantenha as pilhas novas e usadas longe das crianças.

Se o compartimento da pilha não se fechar de forma segura, pare de usar o produto e mantenha-o afastado das crianças.

Se achar que as pilhas podem ter sido engolidas ou colocadas dentro de qualquer parte do corpo, procure imediatamente um médico.

CUIDADO

Risco de explosão se a pilha for substituída por um tipo incorreto. Substitua a pilha pelo mesmo tipo.

CUIDADO

Risco de explosão ou de vazamento de líquido ou gás inflamável.

Não use/armazene/coloque num ambiente com temperaturas extremamente altas ou pressões extremamente baixas devido a altitude elevada.

Não tente queimar, esmagar ou cortar a pilha usada.



Din il-marka hija marka ta' sigurtà/avviż.

Tiblax il-batterija.

Periklu ta' ħrug kimiku

Dan il-prodott fih batterija catta qisha buttuna zghira.

Jekk din İl-batterija catta tinbelha, tista' tikkawża ħruq intern sever ftemm sagħtejn u tista' twassal għall-mewt.

Żomm il-batteriji godda u ħżiena 'I bogħod minn fejn jistgħu jilħquhom it-tfal. Jekk il-kompartiment tal-batterija ma jistax jingħalaq b'mod sigur, tużax aktar il-prodott u żommu 'I bogħod minn fejn jistgħu jilħquh it-tfal.

Jekk ikollok xi suspett li l-batteriji nbelgħu jew ġew imdeffsa f'xi parti tal-ġisem, fittex għajnuna medika minnufih.

ATTENZJONI

Riskju ta' splużjoni jekk il-batterija jekk il-batterija tinbidel ma' waħda tat-tip skorrett. Il-batterija għandha tinbidel ma' waħda tal-istess tip.

ATTENZJONI

Riskju ta' splużjoni jew ħruġ ta' likwidu jew gass fjammabbli.

Tużax/taħżinx f'ambjent b'temperatura għolja ħafna jew pressjoni estremament baxxa minħabba f'altitudni għolja ħafna.

Tipprovax taħraq, tgħaffeġ jew taqta' l-batterija ħażina.



See tähis on ohutus-/hoiatustähis.

Ärge neelake patareid alla.

Keemilise põletuse oht

See toode sisaldab kella-/nööppatareid.

Allaneelamisel võib kella-/nööppatarei juba kahe tunniga põhjustada raskeid sisemisi põletusi ning viia surmani.

Hoidke uusi ja kasutatud patareisid lastele kättesaamatus kohas.

Kui patareipesa ei sulgu kindlalt, lõpetage toote kasutamine ja paigutage see lastele kättesaamatusse kohta.

Kui kahtlustate patareide allaneelamist võl kehasse sattumist, pöörduge viivitamata arsti poole.

ETTEVAATUST!

Patarei asendamine vale tüüpi patareiga põhjustab plahvatusohtu.

Asendage patarei sama tüüpi patareiga.

ETTEVAATUST!

Plahvatuse või tuleohtliku vedeliku või gaasi lekkimise oht.

Ärge kasutage/hoidke toodet keskkonnas ega viige keskkonda, kus on äärmiselt kõrge temperatuur või väga suurest kõrgusest tingitud äärmiselt madal õhurõhk. Ärge üritage kasutatud patareid põletada, purustada ega lõigata.



Ez egy biztonsági/figyelmeztető jelzés.

Ne nyelje le az elemeket.

Vegyi égés veszély

Ez a termék gombelemeket tartalmaz.

Ha lenyeli a gombelemeket, akkor alig 2 órán belül halálos következményű, komoly égést szenvedhet.

Az új és lemerült elemeket gyermekektől tartsa távol.

Ha az elemrekesz nem zár biztonságosan, akkor ne használja tovább a terméket és gyermekektől tartsa távol.

Ha úgy gondolja, hogy az elemeket lenyelték vagy más testrészbe dugták, akkor azonnal hívja fel a háziorvosát.

VIGYÁZAT

Robbanásveszély áll fenn, ha nem megfelelő típusúra cseréli ki az elemet. Az elemet mindig azonos típusúra cserélje.

VIGYÁZAT

Robbanásveszély, illetve éghető folyadék-, vagy gázszivárgás-veszély áll fenn.

Ne használja, tárolja vagy vigye nagyon magas hőmérsékletű vagy nagy magasságok miatti nagyon alacsony nyomású környezetbe.

A lemerült elemeket ne próbálja meg elégetni, széttörni vagy felvágni.



Táto značka je bezpečnostná značka/značka upozornenia.

Batériu nekonzumujte.

Nebezpečenstvo chemického popálenia

Tento výrobok obsahuje mincovú/gombíkovú článkovú batériu.

Ak dôjde k požitiu mincovej/gombíkovej článkovej batérie, v priebehu len 2 hodín môže dôisť k vážnym vnútorným popáleninám a k smrti.

Nové a použité batérie uchovávaite mimo dosahu detí.

Ak priehradku na batérie nemožno bezpečne uzavrieť, prestaňte výrobok používať a uschovajte ho mimo dosahu detí.

Ak si myslíte, že došlo k požitiu batérií alebo k ich vloženiu do ktorejkoľvek časti tela, okamžite vyhľadajte zdravotnícku pomoc.

UPOZORNENIE

Ak batériu vymeníte za nesprávny typ, môže dôjsť k výbuchu. Batériu nahraďte rovnakým typom.

UPOZORNENIE

Riziko výbuchu alebo unikania horľavej kvapaliny alebo plynu.

Nepoužívajte/neskladujte/neprinášajte do prostredia s extrémne vysokou teplotou alebo extrémne nízkym tlakom vo veľmi vysokej nadmorskej výške. Použitú batériu sa nepokúšajte spaľovať, drviť ani prerezať.



Tato značka je bezpečnostní varovnou značkou.

Baterii nepolykeite.

Nebezpečí poleptání žíravinou.

Tento výrobek obsahuje knoflíkovou elektrickou baterii.

Pokud byste knoflíkovou elektrickou baterii spolkli, může to i jen do 2 hodin způsobit těžké vnitřní poleptání a vést to až k úmrtí.

Nové i použité baterie držte mimo dosah dětí.

Pokud by schránka baterie nebyla bezpečně uzavřena, pak takový výrobek přestaňte používat a držte jej mimo dosah dětí.

Pokud byste si mysleli, že mohlo dojít ke spolknutí baterie nebo k jejímu umístění do nějaké části těla, vyhledejte okamžitou lékařskou pomoc.

UPOZORNĚNÍ

Pokud by byla baterie vyměněna za nesprávný typ, hrozí riziko exploze. Baterii vyměňujte za stejný typ.

UPOZORNĚNÍ

Hrozí exploze nebo únik hořlavých kapalin nebo plynů.

V prostředí s extrémně vysokou teplotou nebo extrémně nízkým tlakem kvůli hodně vysoké nadmořské výšce to nepoužívejte, neskladujte to v něm, ani to do něj nepřinášejte. Baterii se nepokoušejte spálit, rozbít nebo rozřezat.



Ta oznaka je varnostna/opozorilna oznaka.

Baterij ne zaužijte.

Nevanost kemiičnih opeklin.

Ta izdelek vsebuje baterijo v obliki kovanca / gumbasto celico.

V primeru zaužitja baterije v obliki kovanca / gumbaste celice, le ta lahko povzroči resne notranje opekline v samo 2 urah in celo smrt.

Nove in uporabljene baterije hranite izven dosega otrok.

Če razdelka za baterijo ne morete zaprete, prenehajte uporabljati izdelek in ga hranite izven dosega otrok.

Če menite, da je bila baterija zaužita ali pa se nahaja v notranjosti kateregakoli dela telesa, nemudoma poiščite zdravniško pomoč.

POZOR

Če baterijo zamenjate z nepravilno vrsto baterije, obstaja tveganje eksplozije. Baterijo zamenjajte z njej enako baterijo.

POZOR

Tveganje eksplozije ali uhajanja gorljive tekočine ali plina.

Ne uporabljajte / skladiščite / hranite baterije v okolju z izredno visoko temperaturo ali z izredno nizkim tlakom zaradi visoke nadmorske višine.

Uporabljene baterije ne poskušajte zažgati, zdrobiti ali rezati.



Šis ženklas – tai saugos / įspėjamasis ženklas.

Neprarykite elemento.

Cheminio nudegimo pavojus

Šiame gaminyje yra monetos / sagos formos elementas.

Prarijus monetos / sagos formos elementą, vos per 2 valandas galima patirti sunkių vidiniu nudegimu ir mirti.

Naujus ir naudotus elementus laikykite vaikams nepasiekiamoje vietoje.

Jei elementų skyrius tvirtai neužsidaro, nenaudokite gaminio ir laikykite jį vaikams nepasiekiamoje vietoje.

Jei manote, kad elementai galėjo būti praryti arba įkišti į bet kurią kūno dalį, nedelsdami kreipkitės į medicinos įstaigą.

DĖMESIO

Elementą pakeitus netinkamo tipo gaminiu kyla sprogimo pavojus.

Elementą pakeiskite tokio paties tipo gaminiu.

DĖMESIO

Sprogimo arba degaus skysčio ar dujų nuotėkio pavojus.

Nenaudokite / nelaikykite / neatneškite į itin aukštos temperatūros aplinką ar aplinką, kurioje slėgis itin žemas dėl labai didelio aukščio.

Nemėginkite naudotą elementą deginti, traiškyti ar pjaustyti.



Šī ir drošības/brīdinājuma atzīme.

Nenoriiiet akumulatoru.

Kīmiska apdeguma risks

Šis produkts satur monētas/pogas elementa akumulatoru.

Monētas/pogas elementa akumulatora norīšanas gadījumā tas var izraisīt nopietnus iekšējus apdegumus 2 stundu laikā un, iespējams, nāvi.

Jaunus un lietotus akumulatorus sargājiet no bērniem.

Ja akumulatora nodalījumu nevar stingri aizvērt, pārtrauciet produkta lietošanu un sarqājiet to no bērniem.

Ja domājat, ka akumulators ir norīts vai ievietots kādā ķermeņa atverē, nekavējoties nepieciešama medicīniska palīdzība.

UZMANĪBU

levietojot nepareiza veida akumulatoru, pastāv sprādziena risks. Nomainiet tikai ar tāda paša veida akumulatoriem.

UZMANĪBU

Sprādziena vai uzliesmojoša šķidruma vai gāzes noplūdes risks.

Nelietojiet/neglabājiet/neienesiet vidē, kurā ir ļoti augsta temperatūra vai ārkārtīgi zems spiediens loti liela augstuma ietekmē.

Izlietoto akumulatoru nemēģiniet dedzināt, sasmalcināt vai sagriezt.



Niniejszy znak jest znakiem bezpieczeństwa/ostrzeżenia.

Nie wolno połykać baterii.

Istnieje zagrożenie poparzeniem chemicznym.

Produkt ten zawiera baterię typu guzikowego.

W przypadku połknięcia może ona spowodować poważne poparzenia wewnętrzne w ciaqu zaledwie 2 godzin i doprowadzić do śmierci.

Nowe i zużyte baterie należy przechowywać z dala od dzieci.

Jeśli komora baterii nie zamyka się prawidłowo, należy zaprzestać używania produktu i przechowywać go z dala od dzieci.

Jeśli istnieje prawdopodobieństwo, że bateria została połknieta albo znalazła się w inny sposób wewnątrz ciała, należy natychmiast zgłosić się do lekarza.

UWAGA

W przypadku wymiany baterii na baterie nieprawidłowego typu istnieje zagrożenie wybuchem. Wymieniać wyłącznie na baterię takiego samego typu.

UWAGA

Zagrożenie wybuchem lub wyciekiem łatwopalnej cieczy lub gazu.

Nie stosować, nie przechowywać ani nie wprowadzać do środowiska o skrajnie wysokiej temperaturze lub skrajnie niskim ciśnieniu związanym z bardzo duża wysokością nad poziomem morza. Nie próbować palić, miażdżyć ani ciąć baterii.



Þetta merki er öryggis-/viðvörunarmerki.

Glevpið ekki rafhlöðuna.

Hætta á efnabruna

Þessi vara inniheldur flata rafhlöðu.

Ef rafhlaðan er gleypt getur það valdið alvarlegum innvortis brunasárum á innan við 2 klukkutímum, sem getur leitt til dauða.

Geymið nýjar og notaðar rafhlöður þar sem börn ná ekki til.

Ef rafhlöðuhólfið lokast ekki örugglega, skal hætta notkun vörunnar og geyma hana bar sem börn ná ekki til.

Ef grunur leikur á að rafhlöður hafi verið gleyptar eða settar inn í eitthvert líkamsop, skal leita læknishjálpar tafarlaust.

VARÚĐ

Hætta á sprengingu ef rafhlöðunni er skipt út fyrir ranga gerð.

Notið sömu gerð af rafhlöðu þegar skipt er um hana.

VARÚĐ

Hætta á sprengingu eða leka á eldfimum vökva eða gasi.

Má ekki nota/geyma/flytja í umhverfi þar sem er afar hár hiti eða afar lágur loftþrýstingur vegna mikillar hæðar yfir sjávarmáli.

Ekki má reyna að brenna, kremja eða skera í notaða rafhlöðu.



Dette merket er sikkerhets-/advarselsmerke.

Du må ikke spise batterier.

Fare for kjemisk forbrenning

Dette produktet inneholder et cellebatteri.

Hvis cellebatteriet svelges, kan det forårsake alvorlige interne forbrenninger bare på 2 timer, og kan føre til døden.

Hold nye og brukte batterier utenfor barnas rekkevidde.

Hvis batterirommet ikke lukkes riktig, stopp bruken av produktet og hold det på avstand fra barn.

Hvis du har mistanke om at batteriene er blitt svelget eller kommet inn i kroppen, oppsøk lege umiddelbart.

FORSIKTIG!

Fare for eksplosjon hvis batteriet byttes ut med et feil batteri.

Skift ut batteriet med ett av samme type.

FORSIKTIG!

Fare for eksplosjon eller lekkasje av antennelig væske eller gass.

Bruk ikke/oppbevar ikke under ekstrem temperatur eller ekstremt trykk på grunn av betraktelig høyde over havet.

Forsøk ikke å brenne, knuse eller kappe batteriet.



Този знак представлява знак за безопасност/предупреждение.

Не поглъщайте батерията.

Опасност от изгаряне на химикали

Този продукт съдържа кръгла плоска батерия.

Ако кръглата плоска батерия е погълната, тя може да причини тежки вътрешни изгаряния само за 2 часа и може да доведе до смърт.

Пазете новите и използвани батерии далеч от деца.

Ако отделението за батериите не се затваря добре, спрете да използвате продукта и го дръжте далеч от деца.

Ако смятате, че батериите биха могли да бъдат погълнати или поставени в някоя част на тялото, потърсете незабавно медицинска помощ.

ВНИМАНИЕ

Опасност от експлозия, ако батерията е заменена от неправилен тип. Сменете батерията със същия тип.

ВНИМАНИЕ

Опасност от експлозия или изтичане на запалима течност или газ.

Не използвайте/съхранявайте/въвеждайте в среда с изключително висока температура или изключително ниско налягане поради много високата височина. Не се опитвайте да изгаряте, смачквате или отрязвате използваната батерия.



Acest marcaj este un marcaj de siguranță/avertizare.

A nu se ingera bateria.

Pericol de arsură chimică

Acest produs conține o baterie tip monedă / nasture.

În cazul înghițirii bateriei tip monedă / nasture, în doar 2 ore se pot produce arsuri interne grave, care pot provoca decesul persoanei.

A nu se lăsa la îndemâna copiilor bateriile noi, precum nici cele uzate.

În cazul în care un compartiment pentru baterii nu se închide corect, întrerupeți utilizarea produsului și nu îl lăsati la îndemâna copiilor.

În cazul înghițirii sau al introducerii bateriei în orice parte a corpului, solicitați imediat îngrijire medicală.

ATENTIE!

Risc de explozie în cazul înlocuirii bateriei cu una de alt tip. Înlocuiți bateria cu una de același tip.

ATENTIE!

Risc de explozie sau de scurgeri de lichide sau gaze inflamabile.

A nu se folosi / depozita / amplasa în medii cu temperaturi extrem de ridicate sau cu presiuni extrem de scăzute generate de altitudinii foarte mari.

A nu se arde, zdrobi sau tăia bateriile uzate.



Ovo je sigurnosna oznaka / oznaka upozorenja.

Nemojte gutati bateriju.

Opasnost od kemijskih opeklina

Ovaj proizvod sadržava kovanica-baterije ili gumb-baterije.

Ako se kovanica-baterija ili gumb-baterija proguta, to u roku od samo dva sata može uzrokovati ozbiljne unutarnje opekline te rezultirati smrću.

Nove i upotrijebljene baterije držite dalje od djece.

Ako utor za bateriju nije sigurno zatvoren, prestanite upotrebljavati proizvod i držite ga dalje od djece.

Ako mislite da su baterije možda progutane ili stavljene u bilo koji dio tijela, zatražite hitnu medicinsku pomoć.

OPREZ

Rizik od eksplozije ako se baterija zamijeni neispravnim tipom baterije. Bateriju zamijenite istim tipom.

OPRF7

Rizik od eksplozije ili istjecanja zapaljive tekućine ili plina.

Nemojte upotrebljavati / pohranjivati / unositi u okruženje iznimno visokih temperatura ili iznimno niskog tlaka zbog vrlo visoke nadmorske visine. Nemojte pokušavati spaljivati, drobiti ili rezati iskorištenu bateriju.



Ovo je oznaka za bezbednost/oznaka upozorenja.

Ne gutajte baterije.

Rizik od hemijskih opekotina

Ovaj proizvod sadrži baterije u obliku novčića / dugmeta.

U slučaju gutanja baterije u obliku novčića / dugmeta, može doći do ozbiljnih unutrašnjih opekotina u roku od samo 2 sata, što može dovesti do smrtnog ishoda. Držite i nove i stare (korišćene) baterije van domašaja dece.

U slučaju da pregrada za baterije ne može da se zatvori na bezbedan način, prestanite da koristite proizvod i odložite ga van domašaja dece.

Ukoliko mislite da je došlo do gutanja baterija ili do njihovog umetanja u bilo koji deo tela, momentalno se obratite lekaru.

OPREZ

Rizik od eksplozije u slučaju zamene baterije drugom baterijom neodgovarajućeg tipa. Zamenite bateriju drugom baterijom istog tipa.

OPREZ

Rizik od eksplozije ili curenja zapaljive tečnosti ili gasa.

Ne koristite / ne odlažite / ne unosite u okruženje sa izuzetno visokim temperaturama ili u okruženje sa izuzetno niskim pritiskom zbog velike nadmorske visine. Ne pokušavajte da zapalite, da zgnječite ili da presečete korišćenu bateriju.



Aquesta marca és una marca de seguretat/advertència.

No ingeriu la pila.

Perill de cremades químiques

Aquest producte conté una pila de botó.

Si s'empasseu la pila de botó, aquesta pot causar greus cremades internes en només 2 hores i provocar la mort.

Mantingueu les piles noves i usades lluny de l'abast dels nens.

Si el compartiment de la pila no es tanca de manera segura, deixeu d'utilitzar el producte i allunyeu-lo dels nens.

Si creieu que les piles podrien haver estat empassades o col·locades dins de qualsevol part del cos, busqueu atenció mèdica immediata.

PRECAUCIÓ

Risc d'explosió si la pila se substitueix per una altra d'un tipus incorrecte. Substituïu la pila per una altra del mateix tipus.

PRECAUCIÓ

Risc d'explosió o fuga de líquids o gasos inflamables.

No la utilitzeu/guardeu/porteu a un entorn de temperatura extremadament alta o amb una pressió extremadament baixa a causa de l'altitud molt elevada. No intenteu cremar, aixafar o tallar la pila usada.



Bu bir güvenlik uyarısı/damgasıdır.

Pili yutmayınız.

Kimvasal Yanık Tehlikesi

Bu ürün, düğme / hücre pil içermektedir.

Düğme / hücre pil yutulduğu takdirde, sadece 2 saat içerisinde tehlikeli iç yanıklara neden olabilir ve ölüme yol açabilir.

Yeni ve kullanılmış pilleri çocuklardan uzak tutunuz.

Pil bölmesi güvenli bir şekilde kapanmıyorsa, ürünü kullanmayınız ve çocuklardan uzak tutunuz.

Pillerin yutulmuş veya vücudun içinde herhangi bir yere yerleştirilmiş olduğundan şüphelenirseniz, derhal tıbbi müdahale başvurusunda bulununuz.

DİKKAT

Pil yanlış bir türle değiştirildiği takdirde patlama riski ortaya çıkabilir. Aynı türde bir pille değiştiriniz.

DİKKAT

Patlama veya yanıcı sıvı ya da gaz sızıntısı riski.

Aşırı yüksek ısı veya çok yüksek rakım sebebiyle aşırı düşük basınç olan ortamlarda kullanmayınız / saklamayınız / bulundurmayınız.

Kullanılmış pilleri yakma, ezme veya kesme girişiminde bulunmayınız.



Kjo shenjë është simbol sigurie/paralajmërimi.

Mos e përtypni baterinë.

Rrezik për Djegie Kimike

Ky produkt përmban pole/butona baterie.

Nëse poli/butoni gëlltitet, mund të shkaktojë djegie të brendshme të rënda në vetëm dy orë dhe mund të çojë drejt vdekjes.

Mbani bateritë e reja dhe të përdorura larg fëmijëve.

Nëse ndarja e baterisë nuk mbyllet mirë,, ndërpritni përdorimin e produktit dhe mbajeni larg fëmijëve.

Nëse mendoni se bateritë mund të jenë gëlltitur ose vendosur brenda çdo pjese të trupit, kërkoni kujdes të menjëhershëm mjekësor.

KUJDES

Rrezik shpërthimi nëse bateria zëvendësohet nga një tip tjetër i pasaktë. Zëvendësoni baterinë me të njëjtin tip baterie.

KUJDES

Rrezik shpërthimi ose rrjedhje të lëngut apo gazit.

Mos e përdorni apo ta ruani në mjedis me temperaturë jashtëzakonisht të lartë ose presion jashtëzakonisht të ulët për shkak të lartësisë gjeografike shumë të lartë. Mos u përpiqni të digjni, shtypni ose prisni me mjete baterinë e përdorur.

Dispose of used batteries according to the local laws.

Käytetyt paristot hävitetään paikallisten säännösten ja määräysten mukaisesti.

Gebruikte batterijen gerecycled in overeenstemming met de plaatselijke voorschriften.

Les batteries utilisées doivent être recyclées selon les lois locales.

Förbrukade batterier återvinns i enlighet med lokala föreskrifter.

De brugte batterier genbruges i overensstemmelse med lokale regler.

Verbrauchte Batterien werden entsprechend den lokalen Rechtsvorschriften entsorgt.

Οι χρησιμοποιημένες μπαταρίες απορρίπτονται σύμφωνα με τους τοπικούς κανονισμούς.

Smaltire le batterie esauste in base alle normative locali vigenti.

Deseche las baterías usadas de acuerdo con la ley local.

As baterias usadas são descartadas de acordo com as leis locais.

Armi I-batteriji godma skont il-ligijiet lokali.

Kasutatud patareide utiliseerimine toimub vastavalt kohalikule seadusele.

A használt elemek megsemmisétése a helyi jogszabályok értelmében történik.

Použité batérie sa likvidujú podľa miestnych zákonov.

Použité baterie zlikvidujte v souladu s místními předpisy.

Uporabljene baterije odstranite v skladu z lokalnimi predpisi.

Naudotas baterijas utilizuokite pagal vietinius įstatymus.

Izmantotās baterijas utilizē saskaņā ar vietējo likumdošanu.

Zużyte baterie należy utylizować zgodnie z prawem lokalnym.

Fargaðu notuðum rafhlöðum samkvæmt innlendum lögum.

Brukte batterier resirkuleres i henhold til lokale bestemmelser.

Използваните батерии се рециклират в съответствие с местните разпоредби.

Aruncați bateriile uzate în conformitate cu legile locale.

Iskorištene baterije reciklirati u skladu s lokalnim propisima.

Искоришћене батерије одлажите у складу са локалним прописима.

Eliminació de bateries utilitzades d'acord amb les lleis locals.

Kullanılmış piller yerel mevzuata uygun olarak bertaraf edilecektir.

Hidhni bateritë e përdorura sipas ligjeve lokale.

UA

передавач: модель:

14CCP

смугу радіочастот:

433.58/434.42 МГЦ

максимальну потужність випромінювання (ERP):

0.01 мВт

виробник: DENSO CORPORATION

адреса:

1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661, Japan

справжнім DENSO CORPORATION заявляє, що тип радіообладнання відповідає Технічному регламенту радіообладнання;

повний текст декларації про відповідність доступний на веб-сайті за такою адресою: https://www.denso.com/global/en/contact-us/doc/



00





Мадэль:

14CCP

Частата працы:

433.58/434.42 Мгц

Максімальная выходная магутнасць: 0.01 мВт

Месяц і год вытворчасці: Глядзі Прадукт

Вытворца: DENSO CORPORATION

Адрас: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661 Japan

00

IL

טויוטה מוטור אירופה נו\סא, שדרות דו בורגט 60-1140 בריסל, בלגיה www.toyota-europe.com

,	סימן רשום	DENSO:		
00	שנת ייצור	ראה מוצר:		
IL	מוצר:כרטים ו	וכם		ж.
	דגם	14CCP:		
05	ארץ ייצור	: יפן	,	

Transmitter: Model: TMLF19D-2 Operation frequency: 134.2kHz Maximum output power (ERP): 0.41mW Manufacturer: TOYOTA MOTOR CORPORATION Address:1, Toyota-Cho, Toyota, Aichi, 471-8572, Japan	92
Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.denso.com/global/en/contact-us/doc/	01
TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: https://www.denso.com/global/en/contact-us/doc/	02
Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: https://www.denso.com/global/en/contact-us/doc/	03
Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: https://www.denso.com/global/en/contact-us/doc/	04
Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: https://www.denso.com/global/en/contact-us/doc/	05

Hermed erklærer TOYOTA MOTOR CORPORATION, at	06
radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU.	
EU-overensstemmelseserklæringens fulde tekst kan findes på	
følgende internetadresse:	
https://www.denso.com/global/en/contact-us/doc/	
	81
Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der	07
Funkanlagentyp der Richtlinie 2014/53/EU entspricht.	
Der vollständige Text der EU-Konformitätserklärung ist unter der	
folgenden Internetadresse verfügbar:	
https://www.denso.com/global/en/contact-us/doc/	81
Με την παρούσα ο/η ΤΟΥΟΤΑ MOTOR CORPORATION, δηλώνει	08
ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ.	
Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην	
ακόλουθη ιστοσελίδα στο διαδίκτυο:	
https://www.denso.com/global/en/contact-us/doc/	
J. T. T. T. T. T. T. T. T. T. T. T. T. T.	81
Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il	09
tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE.	
Il testo completo della dichiarazione di conformità UE è disponibile	
al seguente indirizzo Internet:	
https://www.denso.com/global/en/contact-us/doc/	81
Por la presente, TOYOTA MOTOR CORPORATION declara que el	10
tipo de equipo radioeléctrico es conforme con la Directiva	
2014/53/UE.	
El texto completo de la declaración UE de conformidad está	
disponible en la dirección Internet siguiente:	
https://www.denso.com/global/en/contact-us/doc/	81
O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION	11
declara que o presente tipo de equipamento de rádio está em	
conformidade com a Diretiva 2014/53/UE.	
O texto integral da declaração de conformidade está disponível	
no seguinte endereço de Internet:	
https://www.denso.com/global/en/contact-us/doc/	04
	81

B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: https://www.denso.com/global/en/contact-us/doc/	12
Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: https://www.denso.com/global/en/contact-us/doc/	13
TOYOTA MOTOR CORPORATION igazolja, hogy a típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: https://www.denso.com/global/en/contact-us/doc/	14
TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: https://www.denso.com/global/en/contact-us/doc/	81 15
Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: https://www.denso.com/global/en/contact-us/doc/	16
TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: https://www.denso.com/global/en/contact-us/doc/	17

Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.denso.com/global/en/contact-us/doc/ Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pelny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото ТОУОТА MOTOR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/		
Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.denso.com/global/en/contact-us/doc/ Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото ТОYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/ Lysлостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/		18
Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото ТОУОТА МОТОR CORPORATION декларира, че 23 този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto	
atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото ТОУОТА МОТОR CORPORATION декларира, че 23 този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	https://www.denso.com/global/en/contact-us/doc/	81
https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото ТОУОТА МОТОR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta	19
TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото ТОУОТА МОТОR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	1,104,104	
urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ С настоящото ТОУОТА МОТОR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	https://www.denso.com/global/en/contact-us/doc/	
adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/		20
Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i 22 overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото TOYOTA MOTOR CORPORATION декларира, че 23 този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/		
samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i 22 overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото TOYOTA MOTOR CORPORATION декларира, че 23 този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	https://www.denso.com/global/en/contact-us/doc/	81
https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ С настоящото ТОУОТА МОТОК СОКРОКАТІОМ декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.	21
TOYOTA MOTOR CORPORATION erklærer at er i 22 overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ 81 С настоящото TOYOTA MOTOR CORPORATION декларира, че 23 този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/		
overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ С настоящото ТОУОТА МОТОК СОКРОКАТІОМ декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:	· · · · · · · · · · · · · · · · · · ·	
Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ С настоящото ТОУОТА МОТОК СОКРОКАТІОМ декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/		22
https://www.denso.com/global/en/contact-us/doc/ С настоящото ТОУОТА MOTOR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	Samsvarserklæringen i fulltekst er tilgjengelig på følgende	
С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:		81
2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:	С настоящото TOYOTA MOTOR CORPORATION декларира, че	
може да се намери на следния интернет адрес:		
https://www.denso.com/global/en/contact_us/doc/	Цялостният текст на ЕС декларацията за съответствие	
https://www.denso.com/global/en/contact-us/doc/		
	https://www.denso.com/global/en/contact-us/doc/	81

Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: https://www.denso.com/global/en/contact-us/doc/	24
Thtps://www.denso.com/global/en/contact-ds/doc/	81
TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: https://www.denso.com/global/en/contact-us/doc/	25 81
Овиме, TOYOTA MOTOR CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU. Цео текст ЕУ декларације о усаглашености доступам је на следећој интернет адреси: https://www.denso.com/global/en/contact-us/doc/	26 81
Amb aquest document, TOYOTA MOTOR CORPORATION declara que el tipus d'equipament radioelèctric es conforme a la Directiva 2014/53/UE. El text complet de la declaració UE de conformitat està disponible en la següent adreça d'Internet: https://www.denso.com/global/en/contact-us/doc/	27
İşbu belge; TOYOTA MOTOR CORPORATION telsiz ekipmanı tipinin 2014/53/AB sayılı Direktif'e uygun olduğunu beyan eder. AB uygunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur: https://www.denso.com/global/en/contact-us/doc/	28
Me anë të kësaj deklaratë, subjekti TOYOTA MOTOR CORPORATION deklaron se pajisjet radio është në përputhje me këtë rregull teknik për pajisjet radio dhe fundore të komunikimeve elektronike. Teksti i plotë i Deklaratës së Konformitetit është i disponueshëm në adresën e mëposhtme të internetit: https://www.denso.com/global/en/contact-us/doc/	29 811

передавач: модель: TMLF19D-2

смугу радіочастот: 134.2 кГц

максимальну потужність

випромінювання (ERP): 0.41мВт

виробник: TOYOTA MOTOR CORPORATION

1, Toyota-Cho, Toyota, Aichi, 471-8572, Japan адреса:

92 UA

UA

справжнім TOYOTA MOTOR CORPORATION заявляє, що тип

радіообладнання відповідає Технічному регламенту

радіообладнання;

повний текст декларації про відповідність доступний на

веб-сайті за такою адресою:

https://www.denso.com/global/en/contact-us/doc/



92

MD

Transmitter: Model: TMLF19D-2

Operation frequency: 134.2kHz

Maximum output power (ERP): 0.41mW

Manufacturer: TOYOTA MOTOR CORPORATION Address:1, Toyota-Cho, Toyota, Aichi, 471-8572, Japan

Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio este în conformitate cu Reglementarea tehnică "Punerea la dispozitie pe piată a echipamentelor radio". Textul integral al declaratiei de conformitate este disponibil la

următoarea adresă de Internet: https://www.denso.com/global/en/contact-us/doc/

92

Transmitter: Model: TMLF19D-2 Operation frequency: 134.2kHz

Maximum output power (ERP): 0.41mW

Manufacturer: TOYOTA MOTOR CORPORATION Address:1, Toyota-Cho, Toyota, Aichi, 471-8572, Japan

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the

following internet address:

https://www.denso.com/global/en/contact-us/doc/

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type is in compliance with the relevant statutory requirements.

The full text of the UK declaration of conformity is available at the following internet address:

https://www.denso.com/global/en/contact-us/doc/



92

IL

טויוטה מוטור אירופה נו\סא, שדרות דו בורגט 60-1140 בריסל, בלגיה www.toyota-europe.com

מוצר : מתנד חכם LF

סימן רשום : סימן רשום ארץ ייצור : ראה מוצר TMLF19D-2 : דגם

שנת ייצור : ראה מוצר

92

Engine immobilizer system

	00
Transmitter: Model: TMLF19D-2	
Operation frequency: 134.2kHz Maximum output power (ERP): 0.41mW	
Manufacturer: TOYOTA MOTOR CORPORATION	
Address:1, Toyota-Cho, Toyota, Aichi, 471-8572, Japan	
	92
Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU.	01
The full text of the EU declaration of conformity is available at the following internet address:	
https://www.denso.com/global/en/contact-us/doc/	81
TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen.	02
EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti	
on saatavilla seuraavassa internetosoitteessa:	
https://www.denso.com/global/en/contact-us/doc/	81
Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type	03
radioapparatuur conform is met Richtlijn 2014/53/EU.	
De volledige tekst van de EU-conformiteitsverklaring kan worden	
geraadpleegd op het volgende internetadres:	
https://www.denso.com/global/en/contact-us/doc/	81
Le soussigné, TOYOTA MOTOR CORPORATION, déclare que	04
l'équipement radioélectrique du type est conforme à la directive 2014/53/UE.	
Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:	
https://www.denso.com/global/en/contact-us/doc/	81
Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ	05
av radioutrustning överensstämmer med direktiv 2014/53/EU.	
Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:	
https://www.denso.com/global/en/contact-us/doc/	81
L	UI

Hermed erklærer TOYOTA MOTOR CORPORATION, at	06
radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU.	
EU-overensstemmelseserklæringens fulde tekst kan findes på	
følgende internetadresse:	
https://www.denso.com/global/en/contact-us/doc/	
	81
Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der	07
Funkanlagentyp der Richtlinie 2014/53/EU entspricht.	
Der vollständige Text der EU-Konformitätserklärung ist unter der	
folgenden Internetadresse verfügbar:	
https://www.denso.com/global/en/contact-us/doc/	
	81
Με την παρούσα ο/η ΤΟΥΟΤΑ MOTOR CORPORATION, δηλώνει	80
ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ.	
Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην	
ακόλουθη ιστοσελίδα στο διαδίκτυο:	
https://www.denso.com/global/en/contact-us/doc/	81
Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il	09
tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE.	
Il testo completo della dichiarazione di conformità UE è disponibile	
al seguente indirizzo Internet:	
https://www.denso.com/global/en/contact-us/doc/	81
Por la presente, TOYOTA MOTOR CORPORATION declara que el	10
tipo de equipo radioeléctrico es conforme con la Directiva	10
2014/53/UE.	
El texto completo de la declaración UE de conformidad está	
disponible en la dirección Internet siguiente:	
https://www.denso.com/global/en/contact-us/doc/	81
O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION	11
declara que o presente tipo de equipamento de rádio está em	
conformidade com a Diretiva 2014/53/UE.	
O texto integral da declaração de conformidade está disponível	
no seguinte endereço de Internet:	
https://www.denso.com/global/en/contact-us/doc/	81

B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa	12
disponibbli f'dan l-indirizz tal-Internet li gej:	
https://www.denso.com/global/en/contact-us/doc/	
maps.//www.denso.com/global/en/contact-ds/doc/	81
Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et	13
käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele.	
ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel	
internetiaadressil:	
https://www.denso.com/global/en/contact-us/doc/	81
TOYOTA MOTOR CORPORATION igazolja, hogy a típusú	14
rádióberendezés megfelel a 2014/53/EU irányelvnek.	
Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:	i i
https://www.denso.com/global/en/contact-us/doc/	
	81
TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové	15
zariadenie typu je v súlade so smernicou 2014/53/EÚ.	
Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:	
https://www.denso.com/global/en/contact-us/doc/	0.4
	81 16
Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ	10
rádiového zařízení je v souladu se směrnicí 2014/53/EU.	
Úplné znění EU prohlášení o shodě je k dispozici na této	
internetové adrese:	
https://www.denso.com/global/en/contact-us/doc/	81
TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske	17
opreme skladen z Direktivo 2014/53/EU.	
Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:	
https://www.denso.com/global/en/contact-us/doc/	81
1 400	01

Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.denso.com/global/en/contact-us/doc/ Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pelny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото ТОУОТА MOTOR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/		
Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.denso.com/global/en/contact-us/doc/ Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото ТОYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/ Lysлостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/		18
Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото ТОУОТА МОТОR CORPORATION декларира, че 23 този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto	
atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото ТОУОТА МОТОR CORPORATION декларира, че 23 този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	https://www.denso.com/global/en/contact-us/doc/	81
https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото ТОУОТА МОТОR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta	19
TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото ТОУОТА МОТОR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	1,104,104	
urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ С настоящото ТОУОТА МОТОR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	https://www.denso.com/global/en/contact-us/doc/	
adresem internetowym: https://www.denso.com/global/en/contact-us/doc/ Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/		20
Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i 22 overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото TOYOTA MOTOR CORPORATION декларира, че 23 този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/		
samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i 22 overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ C настоящото TOYOTA MOTOR CORPORATION декларира, че 23 този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	https://www.denso.com/global/en/contact-us/doc/	81
https://www.denso.com/global/en/contact-us/doc/ TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ С настоящото ТОУОТА МОТОК СОКРОКАТІОМ декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.	21
TOYOTA MOTOR CORPORATION erklærer at er i 22 overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ 81 С настоящото TOYOTA MOTOR CORPORATION декларира, че 23 този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/		
overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ С настоящото ТОУОТА МОТОК СОКРОКАТІОМ декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:	· · · · · · · · · · · · · · · · · · ·	
Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse: https://www.denso.com/global/en/contact-us/doc/ С настоящото ТОУОТА МОТОК СОКРОКАТІОМ декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/		22
https://www.denso.com/global/en/contact-us/doc/ С настоящото ТОУОТА MOTOR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	Samsvarserklæringen i fulltekst er tilgjengelig på følgende	
С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:		81
2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:	С настоящото TOYOTA MOTOR CORPORATION декларира, че	
може да се намери на следния интернет адрес:		
https://www.denso.com/global/en/contact_us/doc/	Цялостният текст на ЕС декларацията за съответствие	
https://www.denso.com/global/en/contact-us/doc/		
	https://www.denso.com/global/en/contact-us/doc/	81

Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: https://www.denso.com/global/en/contact-us/doc/	24
TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: https://www.denso.com/global/en/contact-us/doc/	25
Овиме, TOYOTA MOTOR CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU. Цео текст ЕУ декларације о усаглашености доступам је на следећој интернет адреси: https://www.denso.com/global/en/contact-us/doc/	26
Amb aquest document, TOYOTA MOTOR CORPORATION declara que el tipus d'equipament radioelèctric es conforme a la Directiva 2014/53/UE. El text complet de la declaració UE de conformitat està disponible en la següent adreça d'Internet: https://www.denso.com/global/en/contact-us/doc/	27
İşbu belge; TOYOTA MOTOR CORPORATION telsiz ekipmanı tipinin 2014/53/AB sayılı Direktif'e uygun olduğunu beyan eder. AB uygunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur: https://www.denso.com/global/en/contact-us/doc/	28
Me anë të kësaj deklaratë, subjekti TOYOTA MOTOR CORPORATION deklaron se pajisjet radio është në përputhje me këtë rregull teknik për pajisjet radio dhe fundore të komunikimeve elektronike. Teksti i plotë i Deklaratës së Konformitetit është i disponueshëm në adresën e mëposhtme të internetit: https://www.denso.com/global/en/contact-us/doc/	29 811

92 UA

передавач: модель: TMLF19D-2

смугу радіочастот: 134.2 кГц

максимальну потужність

випромінювання (ERP): 0.41мВт

виробник: TOYOTA MOTOR CORPORATION

адреса: 1, Toyota-Cho, Toyota, Aichi, 471-8572, Japan

справжнім TOYOTA MOTOR CORPORATION заявляє, що тип

радіообладнання відповідає Технічному регламенту

радіообладнання;

повний текст декларації про відповідність доступний на

веб-сайті за такою адресою:

https://www.denso.com/global/en/contact-us/doc/



92

MD

Transmitter: Model: TMLF19D-2

Operation frequency: 134.2kHz

Maximum output power (ERP): 0.41mW

Manufacturer: TOYOTA MOTOR CORPORATION Address:1, Toyota-Cho, Toyota, Aichi, 471-8572, Japan

Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio".

Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet:

https://www.denso.com/global/en/contact-us/doc/

92

Transmitter: Model: TMLF19D-2 Operation frequency: 134.2kHz

Maximum output power (ERP): 0.41mW

Manufacturer: TOYOTA MOTOR CORPORATION Address:1, Toyota-Cho, Toyota, Aichi, 471-8572, Japan

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

https://www.denso.com/global/en/contact-us/doc/

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type is in compliance with the relevant statutory requirements.

The full text of the UK declaration of conformity is available at the following internet address:

https://www.denso.com/global/en/contact-us/doc/



92

IL

UK

טויוטה מוטור אירופה נו\סא, שדרות דו בורגט 60-1140 בריסל, בלגיה www.toyota-europe.com

מוצר : מתנד חכם TOYOTA : סימן רשום

ארץ ייצור : ראה מוצר TMLF19D-2 : דגם שנת ייצור : ראה מוצר

92

Jack (vehicles with spare tire)





DECLARATION OF "CE" CONFORMANCE

EC Declaration of Conformity

- The undersigned, Mr. Tony Fabiano, representing the manufacturer, herewith declares that the machinery described below fulfils all the relevant provisions of:
 - Directive 2006/42/EC, on Machinery
- 2. Description of the machinery

a) Part Name: Jack Assembly

b) Part Number: 09111-0W150 (FNG P/N 0300336)

c) Function: lifting motor vehicle

d) Model: 800B e) OEM: Toyota

3. Manufacturer:

Flex-N-Gate / Seeburn Tottenham, 65 Industrial Road, Tottenham, ON, Canada L0G 1W0

4. Applicable Harmonizing Standards:

Not Applicable

5. Other Standards or Specifications:

Toyota Test Specification: TSF 9501G, Test Method for Car Jack Strength, Class C1, Rev. 6, April 2008

6. Done at:7. Date:

Bradford, Ontario Canada

Apr-08-21

Tony Fabiano

Director of Engineering Flex-N-Gate/Ventra

Bradford Product Development Centre

Tire pressure warning system

•Manufacturer's name: PACIFIC INDUSTRIAL CO., LTD.



This trademark is registered in the following countries: UK, Italy, Austria, Greece, Germany, France, Belgium, the Netherlands, Luxembourg, Portugal:

- ·Manufacturer's address: 1300-1 Yokoi, Godo-cho, Anpachi-gun, Gifu, 503-2397 JAPAN
- •Operating frequency band: 433.05 434.79MHz
- Maximum radio-frequency power: 100dBµV/m@3m(Radiated)

Hereby, PACIFIC INDUSTRIAL CO., LTD. declares that the radio equipment type PMV-E100 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. vakuuttaa, että radiolaitetyyppi PMV-E100 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hierbij verklaar ik, PACIFIC INDUSTRIAL CO., LTD., dat het type radioapparatuur PMV-E100 conform is met Richtliin 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

Le soussigné, PACIFIC INDUSTRIAL CO., LTD., déclare que l'équipement radioélectrique du type PMV-E100 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Härmed försäkrar PACIFIC INDUSTRIAL CO., LTD. att denna typ av radioutrustning PMV-E100

överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstä mmelse finns på följande webbadress:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hermed erklærer PACIFIC INDUSTRIAL CO., LTD., at radioudstyrstypen PMV-E100 er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hiermit erklärt PACIFIC INDUSTRIAL CO., LTD., dass der Funkanlagentyp PMV-E100 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Με την παρούσα ο/η PACIFIC INDUSTRIAL CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός PMV-E100 πληροίτην οδηγία 2014/53/ΕΕ.Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

Il fabbricante, PACIFIC INDUSTRIAL CO., LTD., dichiara che il tipo di apparecchiatura radio PMV-E100 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Por la presente, PACIFIC INDUSTRIAL CO., LTD. declara que el tipo de equipo radioeléctrico PMV-E100 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

O(a) abaixo assinado(a) PACIFIC INDUSTRIAL CO., LTD. declara que o presente tipo de equipamento de rádio PMV-E100 está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponí vel no seguinte endereço de Internet:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

B'dan, PACIFIC INDUSTRIAL CO., LTD., niddikjara li dan ittip ta' taghmir tar-radju PMV-E100 huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li gej:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Käesolevaga deklareerib PACIFIC INDUSTRIAL CO., LTD., et käesolev raadioseadme tüüp PMV-E100 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav jä rgmisel internetiaadressil:

PACIFIC INDUSTRIAL CO., LTD. igazolja, hogy a PMV-E100 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu PMV-E100 je

v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Tímto PACIFIC INDUSTRIAL CO., LTD. prohlašuje, že typ rá diového zařízení PMV-E100 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. potrjuje, da je tip radijske opreme PMV-E100 skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Aš, PACIFIC INDUSTRIAL CO., LTD., patvirtinu, kad radijo į renginių tipas PMV-E100 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

Ar šo PACIFIC INDUSTRIAL CO., LTD. deklarē, ka radioiekā rta PMV-E100 atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego PMV-E100 jest zgodny z dyrektyw a 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod nastę pującym adresem internetowym:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hér með lýsir PACIFIC INDUSTRIAL CO., LTD. yfir því að PMV-£100 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.

Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. erklærer at PMV-E100 er i overensstemmelse med direktiv 2014/53/EU.

Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

С настоящото PACIFIC INDUSTRIAL CO., LTD. дек ларира, че този тип радиосъоръже ниеPMV-E100 е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларац ията за съответствие може да се н амери на следния интернет адрес: https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/ Prin prezenta, PACIFIC INDUSTRIAL CO., LTD. declară că tipul de echipamente radio PMV-E100 este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

U ovom dokumentu, PACIFIC INDUSTRIAL CO., LTD. deklariše da je radio oprema model PMV-E100 usklađena sa Directive 2014/53/EU.

Cio tekst EU deklaracije usklađenosti dostupan je na slijedećoj interent adresi:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Овим, PACIFIC INDUSTRIAL CO., LTD. изјављује да је радио опрема типа PMV-E100 усклађена са Directive 2014/53/EU.

Комплетан текст декларације ЕУ за усаглашеност доступан је на следећој веб адреси:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. ovime izjavljuje da je radijska oprema tipa PMV-E100 u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedeć oj internetskoj adresi:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Këtu, PACIFIC INDUSTRIAL CO., LTD. deklaron se pajisja radio PMV-E100 është në përputhje me Directive 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të BE-së gjendet në adresën e mëposhtme të internetit: https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/



• Модель: PMV-E100

•Виробник: Pacific Industrial Co., Ltd.

• Найменування та адреса виробника або його уповноваженого представника

Pacific Industrial Co., Ltd. 1300-1 Yokoi, Godo-cho, Anpachi-Gun, Gifu-Pref., 503-2397 Јарап/Японія.

•Діапазон частот, МГц: 433,05 - 434,79

 Максимальна вихідна потужність передавача, мВт (дБм): 1,0 (0);

•Справжнім Pacific Industrial Co., Ltd. заявляє, що радіопередавач системи контролю тиску та температури в шинах автомобіля відповідає Технічному регламенту радіообладнання; повний текст декларації про відповідність доступний на веб-сайті за такою адресою: https://www.pacific-ind.co.jp//eng/products/car/tpms/doc/ukr/



ERA-GLONASS/EVAK

Подтверждение соответствия Минкомсвязи России: Декларация соответствия № Д-МДРТ-13127 от 03.12.2020 года, действительна до 03.12.2025 года, зарегистрирована в Федеральном агенстве связи 14.12.2020 года.

BSM (Blind Spot Monitor)

Manufacturer Postal Address

ADC Automotive Distance Control Systems GmbH Peter-Dornier-Strasse 10, 88131 Lindau, Germany

C3-009

ОПРОСТЕНА ЕС ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ

С настоящото ADC Automotive Distance Control Systems GmbH декларира, че този тип радиосъоръжение SRR3-A е в съответствие с Директива 2014/53/EC. Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес:http://continental.automotive-approvals.com/

радиочестотната лента или ленти, в която или които работи радиосъоръжението:24.05–24.25 GHz

максималната радиочестотна мощност, излъчвана в радиочестотната лента или ленти, в която или които работи радиосъоръжението.:100mW (20 dBm) Peak EIRP

C3-010

DECLARACIÓN UE DE CONFORMIDAD SIMPLIFICADA

Por la presente, ADC Automotive Distance Control Systems GmbH declara que el tipo de equipo radioeléctrico SRR3-A es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://continental.automotive-approvals.com/

Banda o bandas de frecuencia en las que opera el equipo radioeléctrico:24.05–24.25 GHz

Potencia máxima de radiofrecuencia transmitida en la banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 100mW (20 dBm) Peak EIRP

ZJEDNODUŠENÉ EU PROHLÁŠENÍ O SHODĚ

Tímto ADC Automotive Distance Control Systems GmbH prohlašuje, že typ rádio-vého zařízení SRR3-A je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

http://continental.automotive-approvals.com/

Kmitočtové pásmo (kmitočtová pásma), v němž (v nichž) rádiové zařízení pracuje:24.05–24.25 GHz

Maximální radiofrekvenční výkon vysílaný v kmitočtovém pásmu (v kmitočtových pásmech), v němž (v nichž) je rádiové zařízení provozováno:100mW (20 dBm) Peak EIRP

C3-012

FORENKLET EU-OVERENSSTEMMELSESERKLÆRING

Hermed erklærer ADC Automotive Distance Control Systems GmbH, at ra-dioudstyrstypen SRR3-A er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

http://continental.automotive-approvals.com/

Frekvensbånd, som radioudstyret fungerer på:24.05-24.25 GHz

Maksimal radiofrekvenseffekt, der udsendes i de frekvensbånd, som radioudstyret fungerer på:100mW (20 dBm) Peak EIRP

VEREINFACHTE EU-KONFORMITÄTSERKLÄRUNG

Hiermit erklärt ADC Automotive Distance Control Systems GmbH, dass der Funkanlagentyp SRR3-A der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

http://continental.automotive-approvals.com/

Das Frequenzband oder die Frequenzbänder, in dem bzw. denen die Funkanlage betrieben wird:24.05–24.25 GHz

Die in dem Frequenzband oder den Frequenzbändern, in dem bzw. denen die Funkanlage betrieben wird, abgestrahlte maximale Sendeleistung:100mW (20 dBm) Peak EIRP

C3-014

LIHTSUSTATUD ELI VASTAVUSDEKLARATSIOON

Käesolevaga deklareerib ADC Automotive Distance Control Systems GmbH, et käesolev raadioseadme tüüp SRR3-A vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

http://continental.automotive-approvals.com/

Sagedusriba(d), millel raadioseade töötab:24.05–24.25 GHz

Raadioseadme töösagedus(t)el edastatav maksimaalne saatevõimsus:100mW (20 dBm) Peak EIRP

C3-015

ΑΠΛΟΥΣΤΕΥΜΕΝΗ ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ

Με την παρούσα ο/η ADC Automotive Distance Control Systems GmbH, δηλώνει ότι ο ραδιοεξοπλισμός SRR3-A πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

http://continental.automotive-approvals.com/

Οι ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός: 24.05–24.25 GHz

η μέγιστη ραδιοηλεκτρική ισχύς στις ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός:100mW (20 dBm) Peak EIRP

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, ADC Automotive Distance Control Systems GmbH declares that the radio equipment type SRR3-A is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

http://continental.automotive-approvals.com/

Frequency band(s) in which the radio equipment operates: 24.05–24.25 GHz

Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates: 100mW (20 dBm) Peak EIRP

C3-017

DECLARATION UE DE CONFORMITE SIMPLIFIEE

Le soussigné, ADC Automotive Distance Control Systems GmbH, déclare que l'équipement radioélectrique du type SRR3-A est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://continental.automotive-approvals.com/

Bandes de fréquences utilisées par l'équipement radioélectrique: 24.05–24.25 GHz

Puissance de radiofréquence maximale transmise sur les bandes de fréquences utilisées par l'équipement radioélectrique: 100mW (20 dBm) Peak EIRP

POJEDNOSTAVLJENA EU IZJAVA O SUKLADNOSTI

ADC Automotive Distance Control Systems GmbH ovime izjavljuje da je radijska oprema tipa SRR3-A u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi::

http://continental.automotive-approvals.com/

Frekvencijski pojas (frekvencijski pojasi) u kojem (kojima) radijska oprema radi: 24.05–24.25 GHz

Najveća radiofrekvencijska snaga koja se prenosi u frekvencijskom pojasu (frekvencijskim pojasima) u kojem (kojima) radijska oprema radi: 100mW (20 dBm) Peak EIRP

DICHIARAZIONE DI CONFORMITÀ UE SEMPLIFICATA

Il fabbricante, ADC Automotive Distance Control Systems GmbH, dichiara che il tipo di apparecchiatura radio SRR3-A è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

http://continental.automotive-approvals.com/

Bande di frequenza di funzionamento dell'apparecchiatura radio: 24.05–24.25 GHz

Massima potenza a radiofrequenza trasmessa nelle bande di frequenza in cui opera l'apparecchiatura radio: 100mW (20 dBm) Peak EIRP

C3-020

VIENKĀRŠOTA ES ATBILSTĪBAS DEKLARĀCIJA

Ar šo ADC Automotive Distance Control Systems GmbH deklarē, ka radioiekārta SRR3-A atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

http://continental.automotive-approvals.com/

Frekvenču joslu(-as), kurā(-ās) radioiekārtas darbojas: 24.05–24.25 GHz

Frekvenču joslā(-ās), kurā(-ās) darbojas radioiekārtas, maksimālo pārraidītā signāla jaudu.: 100mW (20 dBm) Peak EIRP

SUPAPRASTINTA ES ATITIKTIES DEKLARACIJA

Aš, ADC Automotive Distance Control Systems GmbH, patvirtinu, kad radijo įrenginių tipas SRR3-A atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://continental.automotive-approvals.com/

Dažnių juosta (-os), kurioje (-iose) veikia radijo įrenginiai: 24.05–24.25 GHz

Didžiausia radijo dažnių galia, perduodama toje (tose) dažnių juostoje (-ose), kurioje (-iose) veikia radijo įrenginiai: 100mW (20 dBm) Peak EIRP

C3-022

EGYSZERŰSÍTETT EU-MEGFELELŐSÉGI NYILATKOZAT

ADC Automotive Distance Control Systems GmbH igazolja, hogy a SRR3-A típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen::

http://continental.automotive-approvals.com/

Az(ok) a frekvenciasáv(ok), amely(ek)en a rádióberendezés működik: 24.05–24.25 GHz

Az abban a frekvenciasávban vagy azokban a frekvenciasávokban továbbított maximális jelerősség, amely(ek)ben a rádióberendezés üzemel: 100mW (20 dBm) Peak EIRP

DIKJARAZZJONI SSIMPLIFIKATA TA' KONFORMITÀ TAL-UE

B'dan, ADC Automotive Distance Control Systems GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju SRR3-A huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan I-indirizz tal-Internet li ġej:

http://continental.automotive-approvals.com/

II-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar-radju: 24.05–24.25 GHz

II-potenza massima tal-frekwenza tar-radju trażmessa fil-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar- radju: 100mW (20 dBm)
Peak EIRP

C3-024

VEREENVOUDIGDE EU-CONFORMITEITSVERKLARING

Hierbij verklaar ik, ADC Automotive Distance Control Systems GmbH, dat het type radioapparatuur SRR3-A conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://continental.automotive-approvals.com/

Frequentieband(en) waarin de radioapparatuur functioneert: 24.05–24.25 GHz

Maximaal radiofrequent vermogen uitgezonden in de frequentieband(en) waarin de radioapparatuur functioneert: 100mW (20 dBm) Peak EIRP

UPROSZCZONA DEKLARACJA ZGODNOŚCI UE

ADC Automotive Distance Control Systems GmbH niniejszym oświadcza, że typ urządzenia radiowego SRR3-A jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://continental.automotive-approvals.com/

Zakresu(-ów) częstotliwości, w którym (których) pracuje urządzenie radiowe: 24.05–24.25 GHz

Maksymalnej mocy częstotliwości radiowej emitowanej w zakresie(-ach) częstotliwości, w którym (których) pracuje urządzenie radiowe: 100mW (20 dBm) Peak EIRP

C3-026

DECLARAÇÃO UE DE CONFORMIDADE SIMPLIFICADA

O(a) abaixo assinado(a) ADC Automotive Distance Control Systems GmbH declara que o presente tipo de equipamento de rádio SRR3-A está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

http://continental.automotive-approvals.com/

A(s) banda(s) de frequências em que o equipamento de rádio funciona: 24.05–24.25 GHz

A potência máxima de radiofrequências transmitida na(s) banda(s) de frequências em que o equipamento de rádio funciona: 100mW (20 dBm) Peak EIRP

DECLARAȚIA UE DE CONFORMITATE SIMPLIFICATĂ

Prin prezenta, ADC Automotive Distance Control Systems GmbH declară că tipul de echipamente radio SRR3-A este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă in-ternet:

http://continental.automotive-approvals.com/

Banda (benzile) de frecvențe în care funcționează echipamentul radio: 24.05–24.25 GHz

Puterea maximă de radiofrecvență transmisă în banda (benzile) de frecvențe în care funcționează echipamentul radio: 100mW (20 dBm) Peak EIRP

C3-028

ZJEDNODUŠENÉ EÚ VYHLÁSENIE O ZHODE

ADC Automotive Distance Control Systems GmbH týmto vyhlasuje, že rádiové zariadenie typu SRR3-A je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://continental.automotive-approvals.com/

Frekvenčné pásmo resp. pásma, v ktorých rádiové zariadenie pracuje: 24.05–24.25 GHz

Maximálny vysokofrekvenčný výkon prenášaný vo frekvenčnom pásme, resp. pásmach, v ktorých rádiové zariadenie pracuje: 100mW (20 dBm) Peak EIRP

POENOSTAVLJENA IZJAVA EU O SKLADNOSTI

ADC Automotive Distance Control Systems GmbH potrjuje, da je tip radijske opreme SRR3-A skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

http://continental.automotive-approvals.com/

Frekvenčni pas ali pasovi, na katerih deluje radijska oprema: 24.05–24.25 GHz

Največja energija za radijsko frekvenco, preneseno po frekvenčnem pasu ali pasovih, na katerih radijska oprema deluje: 100mW (20 dBm) Peak EIRP C3-030

YKSINKERTAISTETTU EU-VAATIMUSTENMUKAISUUSVAKUUTUS

ADC Automotive Distance Control Systems GmbH vakuuttaa, että radiolaitetyyppi SRR3-A on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

http://continental.automotive-approvals.com/

Radiotaajuudet, joilla radiolaite toimii: 24.05-24.25 GHz

Suurin mahdollinen lähetysteho radiotaajuuksilla, joilla radiolaite toimii: 100mW (20 dBm) Peak EIRP

FÖRENKLAD EU-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE

Härmed försäkrar ADC Automotive Distance Control Systems GmbH att denna typ av radioutrustning SRR3-A överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

http://continental.automotive-approvals.com/

Det eller de frekvensband där radioutrustningen arbetar: 24.05–24.25 GHz

Den maximala radiofrekvenseffekt som överförs inom det eller de frekvensband där radioutrustningen arbetar: 100mW (20 dBm) Peak EIRP

EINFÖLDUÐ ESB SAMRÆMISYFIRLÝSING

Hér með lýsir ADC Automotive Distance Control Systems GmbH því yfir, að fjarskiptabúnaðurinn að gerð SRR3-A er í samræmi við tilskipun 2014/53/ ESB. Textinn í fullri lengd um Samræmisyfirlýsingu ESB er aðgengilegur á eftirfarandi veffangi:

http://continental.automotive-approvals.com/

Bandbreidd(ir), sem fjarskiptabúnaðurinn starfar í: 24.05–24.25 GHz

Hámarks fjarskiptatíðni sendistyrkleika í bandbreiddinni/bandbreiddunum sem fjarskiptabúnaðurinn starfar í: 100mW (20 dBm) Peak EIRP

C3-033

BASİTLEŞTİRİLMİŞ AB UYGUNLUK BEYANI

Işbu belge ile, ADC Automotive Distance Control Systems GmbH şirketi SRR3-A tipi radyo ekipmanının 2014/53/AB sayılı direktife uygun olduğunu beyan eder. AB uygunluk beyanının tam metni aşağıdaki İnternet adresinde mevcuttur:

http://continental.automotive-approvals.com/

Radyo cihazının çalıştığı frekans bandı/bantları: 24.05-24.25 GHz

Radyo ekipmanının çalıştığı frekans bandında/bantlarında iletilen maksimum radyo frekansı gücü: 100mW (20 dBm) Peak EIRP



СПРОЩЕНА ДЕКЛАРАЦІЯ про відповідність

справжнім (найменування виробника ADC Automotive Distance Control Systems GmbH) заявляє, що тип радіообладнання (позначення типу радіообладнання SRR3-A) відповідає Технічному регламенту радіообладнання;

повний текст декларації про відповідність доступний на веб-сайті за такою адресою: http://continental.automotive-approvals.com/

найменування та адресу виробника

АДС Автомотів Дістанс Контрол Сістемс ГмбХ Пітер-Дорніер-Штрассе 10, 88131, Ліндау, Німеччина (ADC Automotive Distance Control Systems GmbH Peter-Dornier-Strasse 10, 88131, Lindau, Germany)

СПРОЩЕНА ДЕКЛАРАЦІЯ ЄС ПРО ВІДПОВІДНІСТЬ

Цим ADC Automotive Distance Control Systems GmbH заявляє, що радіообладнання типу SRR3-A відповідає вимогам Директиви 2014/53/EU. Повний текст декларації ЄС про відповідність доступний за наступною адресою в мережі Інтернет: http://continental.automotive-approvals.com/

Частотний діапазон(-и), в якому працює радіообладнання: 24.05–24.25 ГГц

Максимальна потужність радіочастотного сигналу, що передається у частотному діапазоні(-ах), в якому працює радіообладнання: 100 мВт (20 дБм) Пікова ефективна потужність випромінювання

SRR3-A has been registered with: UA RF: 1CONT 0006

C3-035



Adresa poștală a producătorului

ADC Automotive Distance Control Systems GmbH Peter-DornierStrasse 10, 88131 Lindau, Germania

Declarația de conformitate simplificată

Prin prezenta, ADC Automotive Distance Control Systems GmbH declară că tipul de echipamente radio SRR3-A este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio". Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet:

http://continental.automotive-approvals.com/

Banda (benzile) de frecvențe în care funcționează echipamentul radio: 24.05–24.25 GHz

Puterea maximă de radiofrecvență transmisă în banda (benzile) de frecvențe în care funcționează echipamentul radio: 100mW (20dBm) Peak EIRP



Manufacturer Postal Address

ADC Automotive Distance Control Systems GmbH Peter-Dornier-Strasse 10, 88131 Lindau, Germany

SIMPLIFIED UK DECLARATION OF CONFORMITY

Hereby, ADC Automotive Distance Control Systems GmbH declares that the radio equipment type SRR3-A is in compliance with Radio Equipment Regulations of the United Kingdom. The full text of the UK declaration of conformity is available at the following internet address: http://continental.automotive-approvals.com/

Frequency band(s) in which the radio equipment operates: 24.05–24.25 GHz

Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates: 100mW (20 dBm) Peak EIRP

C3-057

Wireless charger

Manufacturer

·Name: Panasonic Corporation

· Address: 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Specifications of Wireless charger Frequency band: 120.3-128.549kHz Maximum output power: 10W Max

Model No.[*] CA-QL5BJ04D CA-QL5BJ14D



Hereby, Panasonic Corporation declares that the radio equipment type [*] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://www.ptc.panasonic.eu/

С настоящото Panasonic Corporation декларира, че този тип радиосъоръжение [*] е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

https://www.ptc.panasonic.eu/

Tímto Panasonic Corporation prohlašuje, že typ rádiového zařízení [*] je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: https://www.ptc.panasonic.eu/

Hermed erklærer Panasonic Corporation, at radioudstyrstypen [*] er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

https://www.ptc.panasonic.eu/

Hiermit erklärt Panasonic Corporation, dass der Funkanlagentyp [*] der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

https://www.ptc.panasonic.eu/

Käesolevaga deklareerib Panasonic Corporation, et käesolev raadioseadme tüüp [*] vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

https://www.ptc.panasonic.eu/

Με την παρούσα ο/η Panasonic Corporation, δηλώνει ότι ο ραδιοεξοπλισμός [*] πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

https://www.ptc.panasonic.eu/

Por la presente, Panasonic Corporation declara que el tipo de equipo radioeléctrico [*] es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

https://www.ptc.panasonic.eu/

Le soussigné, Panasonic Corporation, déclare que l'équipement radioélectrique du type [*] est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

https://www.ptc.panasonic.eu/

Il fabbricante, Panasonic Corporation, dichiara che il tipo di apparecchiatura radio [*] è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

https://www.ptc.panasonic.eu/

Ar šo Panasonic Corporation deklarē, ka radioiekārta [*] atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.ptc.panasonic.eu/

Aš, Panasonic Corporation, patvirtinu, kad radijo įrenginių tipas [*] atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.ptc.panasonic.eu/

Panasonic Corporation ovime izjavljuje da je radijska oprema tipa [*] u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: https://www.ptc.panasonic.eu/

Panasonic Corporation igazolja, hogy a [*] típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

https://www.ptc.panasonic.eu/

B'dan, Panasonic Corporation, niddikjara li dan it-tip ta' tagħmir tar-radju [*] huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li gej:

https://www.ptc.panasonic.eu/

Hierbij verklaar ik, Panasonic Corporation, dat het type radioapparatuur [*] conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

https://www.ptc.panasonic.eu/

Panasonic Corporation niniejszym oświadcza, że typ urządzenia radiowego [*] jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

https://www.ptc.panasonic.eu/

O(a) abaixo assinado(a) Panasonic Corporation declara que o presente tipo de equipamento de rádio [*] está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

https://www.ptc.panasonic.eu/

Prin prezenta, Panasonic Corporation declară că tipul de echipamente radio [*] este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

https://www.ptc.panasonic.eu/

Panasonic Corporation týmto vyhlasuje, že rádiové zariadenie typu [*] je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: https://www.ptc.panasonic.eu/

Panasonic Corporation potrjuje, da je tip radijske opreme [*] skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

https://www.ptc.panasonic.eu/

Panasonic Corporation vakuuttaa, että radiolaitetyyppi [*] on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

https://www.ptc.panasonic.eu/

Härmed försäkrar Panasonic Corporation att denna typ av radioutrustning [*] överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

https://www.ptc.panasonic.eu/

Manufacturer

- ·Name: Panasonic Corporation
- · Address: 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Specifications of Wireless charger Frequency band: 120.3-128.549kHz Maximum output power: 10W Max

Model No.[*] CA-QL5BJ14D



Hereby, Panasonic Corporation declares that the radio equipment type [*] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://www.ptc.panasonic.eu/

Бездротовий зарядний пристрій

смугу радіочастот, в якій працює радіообладнання; 119.3-128.6kHz максимальну потужність випромінювання в смузі радіочастот, в якій працює радіообладнання; 10W

моделі №.[*] CA-QL5BJ04D

такою адресою:

справжнім Panasonic Corporation заявляє, що тип радіообладнання [*] відповідає Технічному регламенту радіообладнання; повний текст декларації про відповідність доступний на веб-сайті за

https://service.panasonic.ua/ (розділ «Технічне регулювання»)

Producător

Nume: Panasonic Corporation

Adresa: 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-

8520, Japonia

încărcător wireless

Banda de frecvență : 120.3-128.549kHz Puterea maximă a frecvenței radio : 10W

Numarul modelului.[*] CA-QL5BJ04D



Prin prezenta, Panasonic corporație declară că tipul de echipamente radio [*] este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio".

Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet:https://service.panasonic.ua

Üretici firma

· Isim : Panasonic Corporation

· Adres: 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-

8520, Japonya

kablosuz şarj cihazı

Frekans bandı: 120.3-128.549kHz Maksimum radyo frekansı gücü: 10W



Panasonic Corporation, [*] tipi radyo ekipmanının 2014/53 / AB Yönetmeliğine uygun olduğunu beyan eder.

Yönetmeliğine uygun olduğunu beyan eder.
Uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşılabilir:

https://www.ptc.panasonic.eu/

Model No.[*] CA-QL5BJ04D

מספר אישור התאמה מטעם משרד התקשורת:55-09057

חל איסור לבצע פעולות במכשיר שיש בהן כדי לשנות את תכונותיו האלחוטיות של המכשיר, ובכלל זה שינויי תוכנה, החלפת אנטנה מקורית או הוספת אפשרות לחיבור לאנטנה חיצונית, בלא קבלת אישור משרד התקשורת, בשל החשש להפרעות אלחוטיות.