

Owner's Manual 2013 Audi Q5

2013 Audi Q5 2013 Audi Q5 hybrid quattro

#### Foreword

Thank you for choosing an Audi - we value your trust in us.

Your new Audi will allow you to experience the best in groundbreaking technology and premium quality equipment a vehicle has to offer. We recommend that you read your Owner's Manual thoroughly so that you quickly become acquainted with your Audi and make use of all of its features.

In addition to explaining how the different features work, we provide many useful tips and information concerning your safety, how to care for your vehicle and how to maintain your vehicle's value. We also give you useful tips and information on how to drive your vehicle more efficiently and in an environmentally friendly manner.

In the Owner's Manual packet, you will also find a quick reference guide, an Owner's Manual for your Infotainment system and the vehicle maintenance schedule.

We hope you enjoy driving your Audi and we wish you safe and pleasant motoring.

**AUDI AG** 



1325618RB23

| Vehicle literature                     | 5  | Roof rack                         | 70  |
|--|----|-----------------------------------|-----|
|  | _  | Beverage holders                  | 73  |
| About this Owner's Manual              | 6  | Climatized cupholders             | 74  |
|  |    | Cupholders in the door pockets    | 74  |
| Controls and equipment                 | 8  | Ashtray                           | 75  |
| Instruments and controls               | 8  | Cigarette lighter/Socket          | 75  |
| General illustration                   | 8  | Storage                           | 76  |
| Instruments and warning/               |    | Warm and cold                     | 79  |
| indicator lights                       | 10 | Climate control                   | 79  |
| Instruments                            | 10 |                                   |     |
| Warning/indicator lights               | 14 | On the road                       | 83  |
|  |    | Steering                          | 83  |
| Driver information display             | 20 | Ignition lock                     | 83  |
| Introduction                           | 20 | Convenience key                   | 86  |
| Trip computer                          | 23 | Driver messages                   | 88  |
| Efficiency program                     | 25 | Electromechanical parking brake   | 88  |
| On-Board Diagnostic system (OBD)       | 26 | Start-Stop-System                 | 91  |
| Electronic speed limiter               | 27 | Speed warning system              | 93  |
| Auto Check Control                     | 27 | Cruise control                    | 95  |
| Opening and closing                    | 36 | Hybrid                            | 97  |
| Keys                                   | 36 | Hybrid drive                      | 97  |
| Power locking system                   | 38 |                                   |     |
| Opening and closing rear lid           | 43 | Audi adaptive cruise control      |     |
| Automatic rear lid/trunk lid operation | 44 | and braking guard                 | 107 |
| Emergency unlocking of the luggage     |    | Introduction                      | 107 |
| compartment lid                        | 45 | General information               | 107 |
| Child safety locks                     | 46 | Audi adaptive cruise control      | 109 |
| Power windows                          | 46 | Audi braking guard                | 113 |
| Panoramic sliding sunroof              | 47 | Messages                          | 114 |
| Clear vision                           | 49 | Audi side assist                  | 116 |
| Lights                                 | 49 | Lane change assistant             | 116 |
| Interior lights                        | 53 |                                   |     |
| Vision                                 | 54 | Audi drive select                 | 120 |
| Wiper and washer system                | 54 | Driving settings                  | 120 |
| Mirrors                                | 57 |                                   |     |
| Digital compass                        | 59 | Automatic transmission            | 123 |
|  |    | tiptronic                         | 123 |
| Seats and storage                      | 61 |                                   |     |
| General recommendations                | 61 | Parking system                    | 129 |
| Front seats                            | 62 | Audi parking system plus with     |     |
| Seat memory                            | 63 | rearview camera                   | 129 |
| Rear seats                             | 64 | Adjusting the display and warning |     |
| Head restraints                        | 65 | tones                             | 133 |
| Center armrest                         | 66 |                                   |     |
| Luggage compartment                    | 67 |                                   |     |

| Trailer hitch                            | 134 | Driving and environment                     | 205  |
|--|-----|---|------|
| Error messages                           | 134 | The first 1,000 miles (1,500 km) and        |      |
|  |     | afterwards                                  | 205  |
| HomeLink®                                | 135 | Catalytic converter                         | 206  |
| Universal remote control                 | 135 | Avoid damaging the vehicle                  | 206  |
|  |     | Operate your vehicle economically and       |      |
| Safety first                             | 139 | minimize pollution                          | 207  |
| Driving Safely                           | 139 | •   |      |
| General notes                            | 139 | Driving off road                            | 209  |
| Proper occupant seating positions        | 140 | Driving in difficult road conditions and    |      |
| Pedal area                               | 144 | offroad                                     | 209  |
| Stowing luggage                          | 145 |   | 200  |
| Reporting Safety Defects                 | 146 | Trailer towing                              | 212  |
| Reporting Sarety Derects                 | 140 | Driving with a trailer                      | 212  |
| Safety belts                             | 149 | Trailer towing tips                         | 214  |
| General notes                            | 149 | marter towning tips                         | 214  |
|  | 150 | Vehicle care                                | 216  |
| Why safety belts?                        | 152 |   | 216  |
| Safety belts                             |     | Cleaning and protection                     |      |
| Safety belt pretensioners                | 155 | General information                         | 216  |
| ***                                      | 157 | Care of exterior                            | 216  |
| Airbag system                            | 157 | Care of interior                            | 223  |
| Important things to know                 | 157 |   |      |
| Front airbags                            | 161 | Fuel supply and filling your                |      |
| Monitoring the Advanced Airbag           |     | fuel tank                                   | 228  |
| System                                   | 168 | Gasoline                                    | 228  |
| Side airbags                             | 172 | Fuel tank                                   | 230  |
| Side curtain airbags                     | 175 |   |      |
|  |     | Checking and filling                        | 233  |
| Child Safety                             | 178 | Engine hood                                 | 233  |
| Important things to know                 | 178 | Engine compartment                          | 235  |
| Child safety seats                       | 184 | Engine oil                                  | 235  |
| Installing a child safety seat           | 188 | Engine cooling system                       | 240  |
| LATCH Lower anchorages and tethers       |     | Brake fluid                                 | 242  |
| for children                             | 191 | Battery                                     | 243  |
| Additional Information                   | 196 | Windshield/headlight washer                 |      |
|  |     | container                                   | 247  |
| Vehicle operation                        | 197 |   |      |
| Intelligent technology                   | 197 | Tires and wheels                            | 248  |
| Notice about data recorded by vehicle    |     | Tires                                       | 248  |
| control modules                          | 197 | Tire pressure monitoring system             | 266  |
| Electronic Stabilization Control (ESC) . | 197 |   |      |
| Brake system                             | 200 | Do-it-yourself service                      | 269  |
| Electromechanical power assist,          | 100 | What do I do now?                           | 269  |
| Dynamic steering                         | 201 | Jack, tools and inflatable spare tire       | 269  |
| Driving with your quattro®               |     | Tire repair                                 | 272  |
| Energy management                        | 203 | Changing a wheel                            | 274  |
|  | _00 | 5.15.15.15 a milest 11.11.11.11.11.11.11.11 | -, - |

## 4 Table of contents

| Francis and builting                  | 200 |
|---------------------------------------|-----|
| Fuses and bulbs                       | 280 |
| Electrical fuses                      | 280 |
| Bulbs                                 | 283 |
| Emergency situations                  | 284 |
| General                               | 284 |
| Starting by pushing or towing         | 284 |
| Starting with jumper cables           | 284 |
| Use of jumper cables                  | 285 |
| Emergency towing with commercial      |     |
| tow truck                             | 286 |
| Lifting vehicle                       | 288 |
| Technical data                        | 290 |
| General information                   | 290 |
| Explanation of technical data         | 290 |
| Vehicle identification                | 290 |
| Weights                               | 290 |
| Dimensions                            | 291 |
| Data                                  | 292 |
| 211 hp, 4-cylinder engine, quattro    | 292 |
| 211 hp, 4-cylinder engine, hybrid     |     |
| quattro                               | 293 |
| 272 hp, 6-cylinder engine, quattro    | 294 |
| Consumer Information                  | 295 |
| Warranty coverages                    | 295 |
| Operating your vehicle outside the    |     |
| U.S.A. or Canada                      | 295 |
| Audi Service Repair Manuals and       |     |
| Literature                            | 295 |
| Maintenance                           | 295 |
| Additional accessories, modifications |     |
| and parts replacement                 | 297 |
| Declaration of Compliance,            |     |
| Telecommunications and Electronic     |     |
| Systems                               | 298 |
| Index                                 | 300 |

In addition to this Owner's Manual, your Audi comes with a Warranty & Maintenance booklet.

Moreover, depending on the model and the equipment, there may be additional instruction booklets delivered with your vehicle (for example, Operating Instructions for your Sound System, Navigation System etc.).

If you are missing one of these publications, or if you believe that the information is not complete, contact your authorized Audi dealer for assistance.

### The Warranty & Maintenance booklet

explains how you can keep your Audi in top driving condition by having it serviced regularly and contains detailed information about the warranties covering your Audi. Always have the booklet with you when you take your vehicle to an authorized Audi dealer for service. Your Audi Service Adviser will record each scheduled service and can answer any questions you may have regarding how to maintain your vehicle.

#### In Canada,

the vehicle literature is also available in French. To obtain a copy, contact your dealer or write to:

Au Canada, on peut se procurer un exemplaire en français de ce document auprès du concessionnaire ou de:

Volkswagen Canada, Inc. Client Assistance Assistance a la Clientele 777 Bayly Street, West, Ajax, Ontario L1S 7G7

#### If you sell your Audi

all literature should be left in the vehicle to make the Warranty terms as well as all operating, safety and maintenance information available to the next owner.

# If you change your address or if you bought this Audi used

be sure to send in a "Notice of Address Change" / "Notice of Used Car Purchase" post card. This card can be found in the Warranty & Maintenance booklet or obtained from your authorized Audi dealer.

It is in your own interest that we are able to contact you should the need arise.

This owner's manual contains important information, tips, suggestions, and warnings for the use of your vehicle.

Make sure that this owner's manual is always located in the vehicle. This is especially important if you allow other people to drive the vehicle, or if you sell it.

This owner's manual describes the **equipment range** specified for this model at the editorial deadline date. Some of the equipment described here will only be available at a later date, or only in specific markets.

Some sections in this owner's manual do not apply to all vehicles. In that case, the **range of applicability** is given at the beginning of the section, e. g., "Applies to vehicles: with adaptive light". In addition, optional or vehicle-specific equipment is indicated by an asterisk "\*".

**Illustrations** may be different from those in your vehicle, and are intended to be viewed as a basic guide.

You will find a **table of contents** at the beginning of this book, which displays all topics described in this manual in order of appearance. You will find an alphabetical **index** at the end of this book.

All **directions**, such as "left", "right", "front", "back", are relative to the direction of travel.

- Optional or vehicle-specific equipment
- This section continues on the next page.
- ® Registered trademarks are identified with a ®. If this symbol is missing, it is no guarantee that the terms can be used freely.



#### WARNING

Text with this symbol contains important information on safety and how to reduce the risk of personal injury or death.



#### Note

Text with this symbol draws your attention to potential sources of damage to your vehicle.



## For the sake of the environment

Text with this symbol contains information about the environment and how you can help protect it.



## **Tips**

Text with this symbol contains special tips and other information about getting the most out of your vehicle and its features.

## Instruments and controls

# General illustration

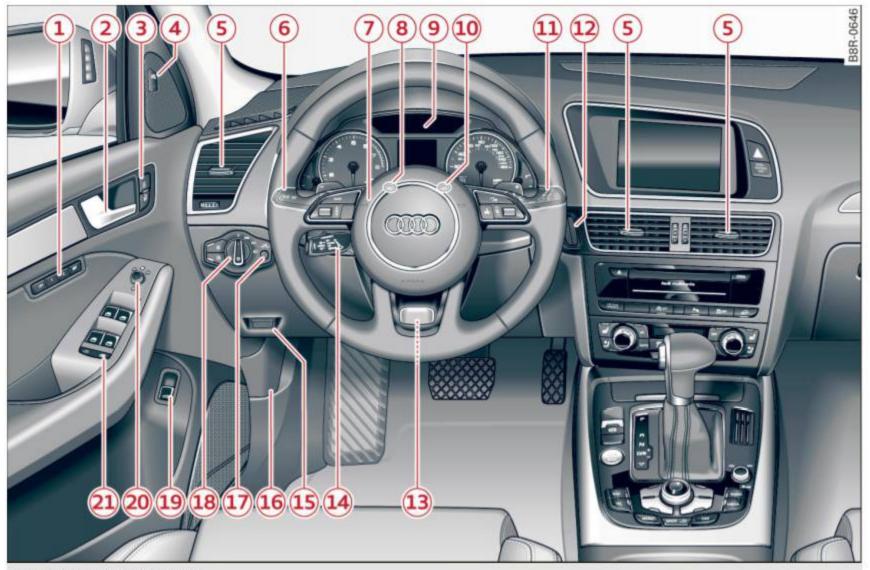


Fig. 1 Cockpit: left section

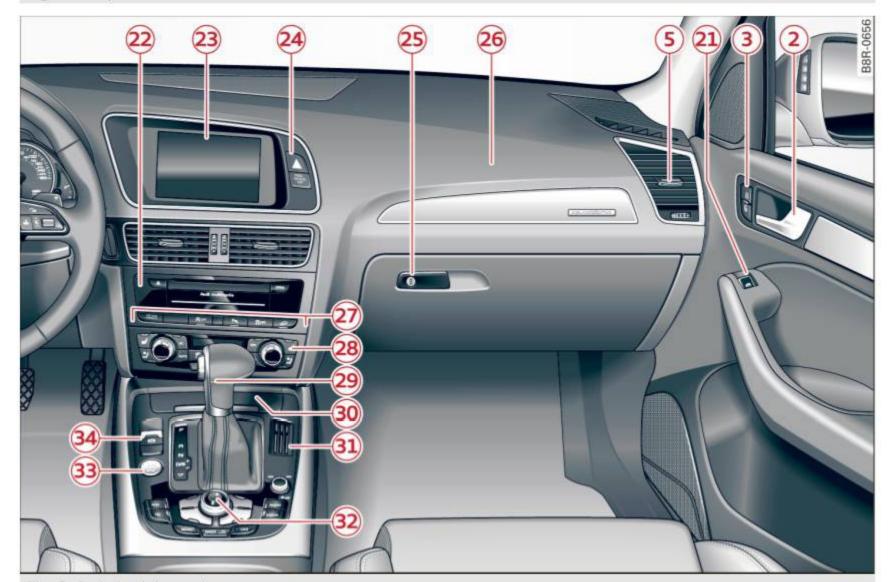


Fig. 2 Cockpit: right section

75, 75

Instruments and controls

| 1   | Memory buttons (driver's seat)                    | 63        | 25   | Glove compartment (lockable) .   | 7     |
|-----|---|-----------|------|--|-------|
| 2   | Door handle                                       |           | 20   | Front passenger's airbag   | 16    |
| 3   | Power locking switch                              | 42        | 27   | Depending on options:  |       |
| 4   | Side assist button                                | 116       |      | – Audi drive select button   | 12    |
| 5   | Air outlets                                       | 80        |      | <ul> <li>Start-Stop-System button or .</li> </ul>  | 9     |
| 6   | Turn signal and high beam                         | 52        |      | −  button (hybrid drive)   | 10    |
| 7   | Multifunction steering wheel                      |           |      | <ul><li>Parking system button</li></ul>  | 12    |
|     | with:   |           |      | <ul> <li>Electronic Stabilization Con-</li> </ul>  |       |
|     | – Horn  |           |      | trol (ESC) button  | 19    |
|     | – Driver's airbag                                 | 161       |      | <ul> <li>Hill descent assist button</li> </ul>   | 19    |
|     | <ul> <li>Audio/video, telephone, navi-</li> </ul> |           | 28)  | Climate control  | 7     |
|     | gation and voice recognition                      |           | 29   | Shift lever for automatic trans-   |       |
|     | buttons   |           |      | mission  | 12    |
|     | Rocker switches for tiptronic                     | 127       | 30   |  | 75, 7 |
|     | operation   | 127       | (31) | Coin storage   |       |
| 3   | SET button  | 11        | (32) | Depending on options:  |       |
| 9   | Instrument cluster                                | 10        |      | – MMI control console or   |       |
| 10  | Reset button for trip odometer .                  | 13        |      | - Parking system button  | 12    |
| 11) | Switches for:                                     |           |      | <ul> <li>Electronic Stabilization Control (ESC) button</li></ul>                                 | 19    |
|     | – Windshield wiper/washer                         | 54        |      | - Hill descent assist button   | 19    |
|     | - Trip computer                                   | 23        |      | Audi drive select button   | 12    |
| 12  | Ignition lock                                     | 83        |      | <ul> <li>Start-Stop-System button</li> </ul>   | 9     |
| 13  | Adjustable steering column                        | 83        | (33) | START ENGINE STOP button .   | 8     |
| 14) | Control lever for:                                | 0.5       | 34)  | Electromechanical parking brake  | . 8   |
|     | <ul><li>Cruise control</li></ul>                  | 95<br>107 |      |  |       |
| 15) | Data Link Connector for On                        | 107       | (i   | Tips   |       |
| 19  | Board Diagnostics (OBD II)                        | 26        | S    | ome of the equipment or features sh  | own   |
| 16  | Release lever for the engine                      | 1000      |      | the general illustration may be stan   |       |
| 0   | hood  | 233       |      | quipment on your vehicle or may be o   | . 3/  |
| 17) | Instrument lighting                               | 51        |      | onal equipment depending on your n   |       |
| 18  | Light switch                                      | 49        |      | <ol> <li>Always ask your authorized Audi de<br/>you have a question about your vehice</li> </ol> |       |
| 19  | Switch for unlocking the trunk                    |           |      | you have a question about your vern  | ctc.  |
|     | lid   | 43        |      |  |       |
| 20  | Adjuster control for outside mir-                 |           |      |  |       |
|     | rors  | 57        |      |  |       |
| 21) | Power window switches                             | 46        |      |  |       |
| 22  | Radio system or Audi multime-                     |           |      |  |       |
|     | dia (see separate manual)                         |           |      |  |       |
| 23  | Radio or MMI display (see sepa-                   |           |      |  |       |
|     | rate manual)                                      |           |      |  |       |
| 24) | Button/Indicator light for:                       |           |      |  |       |
|     | – Emergency flasher                               | 52        |      |  |       |
|     | <ul> <li>PASSENGER AIR BAG OFF</li> </ul>         |           |      |  |       |

## Instruments and warning/indicator lights

## Instruments

#### Instrument cluster and controls

The instrument cluster is your central source of information.

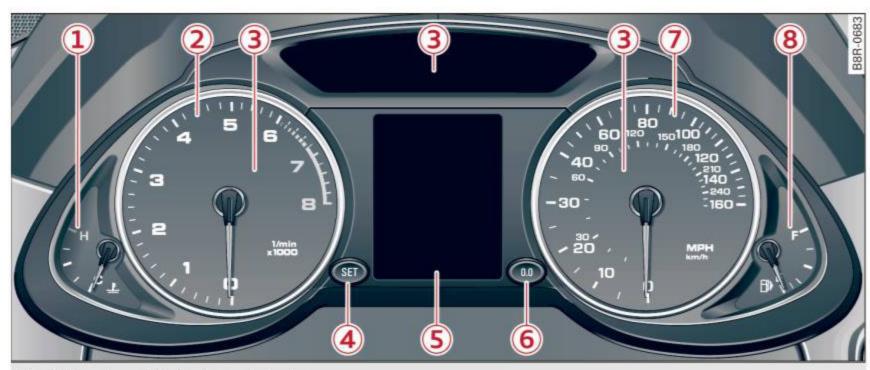


Fig. 3 Overview of the instrument cluster

Hybrid drive\*: the instrument cluster varies ⇒ page 98.

| Coolant temperature gauge        | 10         |  |  |
|----------------------------------|------------|--|--|
| Tachometer                       | 11         |  |  |
| Warning/indicator lights         | 14         |  |  |
| SET button                       | 11         |  |  |
| Display                          |            |  |  |
| – Driver information system      | 20         |  |  |
| – Time and date display          | 12         |  |  |
| – Odometer                       | 13         |  |  |
| Reset button for trip odometer . | 13         |  |  |
| Speedometer                      |            |  |  |
| Fuel gauge                       | 12         |  |  |
|                                  | Tachometer |  |  |

# (i) Tips

The illumination for the instrument cluster lights up whenever you switch on the ignition with the **vehicle headlights off**. As the daylight fades, the instrument cluster illumination likewise dims automatically and will go out completely when the outside light is very low. This feature is meant to remind you to switch on the headlights when outside light conditions become poor.

## Engine coolant temperature gauge

The engine coolant gauge ⇒ page 10, fig. 3 ① only works when the ignition is on. To prevent damage to your engine, please note the following important points:

#### Engine cold

If the needle is at or close to the bottom of the gauge, the engine has not yet reached its operating temperature. Avoid high engine speeds, heavy engine loads, and heavy throttle applications.

#### Normal temperature

When the engine has reached its operating temperature, the needle will move to the middle of the gauge and remain there. If the engine is working hard at high outside temperatures, the needle may move higher on the gauge. This is not a cause for concern as long as the warning light in the instrument cluster display does not illuminate.

# Warning light in the instrument cluster display

If the warning light in the instrument cluster display flashes, this can mean one of two things: either the coolant *temperature* is too high, or the coolant *level* is too low ⇒ page 30.

If the needle is well in the upper area of the gauge, the coolant temperature is too high.

Stop the vehicle, switch the engine off, and allow it to cool. If the warning light comes on again after driving a short distance, contact an authorized Audi dealer or other qualified workshop.



#### WARNING

- Always observe the warning in
   ⇒ page 226, Engine compartment, before opening the hood and checking the engine coolant level.
- Never open the engine hood if you see or hear steam, or if you see engine coolant dripping from the engine compartment.
   You could burn yourself. Let the engine cool off first so that you cannot hear or see any steam or engine coolant.

# (!)

#### Note

- Mounting additional lights or accessories in front of the air inlets reduces the cooling effect of the radiator. At high outside temperatures or high engine load, the engine could overheat.
- The front spoiler has been designed to properly distribute the cooling air when the vehicle is moving. If the spoiler is damaged, this could reduce the cooling effect and the engine could then overheat. Ask your authorized Audi dealer for assistance.

## Tachometer (engine rev counter)

The tachometer indicates the engine RPM (revolutions per minutes).

If engine RPM drops below 1,500, you should downshift to the next lower gear. The red area

at the end of the scale indicates maximum permissible engine RPM after the break-in period. Before reaching this area, move the selector lever to position D/S or ease your foot off the accelerator pedal.

# (!)

#### Note

The tachometer needle ② ⇒ page 10, fig. 3 should only briefly be in the red zone: you could damage your engine! The beginning of the red zone varies depending on the engine.

# •

#### For the sake of the environment

Upshifting early saves fuel and reduces engine noise.

## SET button

You can perform different functions with this button.



Fig. 4 SET button in the instrument cluster

The SET button performs the following functions:

# Switching on time, date, temperature display, and odometer

The display appears for approximately 30 seconds when you press the  $\boxed{\text{SET}}$  button  $\Rightarrow$  fig. 4 with the ignition off.

#### Starting the Auto-Check sequence

The Auto-Check system ⇒ page 27 constantly monitors certain individual functions and components of the vehicle when the ignition is turned on and when the vehicle is moving.

With the ignition turned on, you can start the "Auto-Check sequence" by pressing the SET



12

button. You can perform an Auto-Check sequence when the vehicle is stationary and the ignition is turned on or when the vehicle is moving slower than 3 mph (5 km/h).

The number of keys programmed to the vehicle is also displayed. The display **L2 3/3** indicates that three keys have been programmed. This allows you to make sure you have received all of the keys when you purchase a used vehicle.

For example, if you only receive two keys, you should take those keys to your authorized Audi dealer to have the missing key deactivated so it cannot be used. You should also report the missing key to your insurance company.

### Calling up the driver information

A yellow or red symbol appears in the instrument cluster display, usually with a driver message. The driver message display disappears after about 5 seconds. The driver message can be displayed again by briefly pressing the SET button.

#### Setting the speed warning

By pressing the SET button briefly, you can set threshold 1 of the speed warning while you are driving ⇒ page 94. By maintaining pressure on the SET button, you delete the warning threshold.

## Digital clock with date display



Fig. 5 Instrument cluster: time and date

Depending on the vehicle equipment level, you may choose between the quartz clock or the GPS controlled clock\* in the radio or in the MMI\*. You can learn more about this in the MMI manual or in the radio user's manual.



#### **Tips**

- When you switch off the ignition or open the driver door, the time, date, odometer and temperature are displayed for an additional 30 seconds.
- You can also call up the display with the SET button ⇒ page 11 while the ignition is switched off.

## Fuel gauge

The fuel gauge works only when the ignition is

When the needle reaches the reserve mark, the ⇒ page 33 symbol appears in the instrument cluster display as well as the message Please refuel. This message is meant to remind you to refuel.

The total tank capacity of your vehicle is listed in  $\Rightarrow$  page 292.



#### Note

Never run the tank completely dry! An irregular supply of fuel can cause engine misfiring and fuel could enter into the exhaust system. The catalytic converter could then overheat and be damaged.

#### **Odometer**

The odometer indicates the distance driven.



Fig. 6 Instrument cluster: odometer



The display of distance driven is shown in kilometers "km" or in "miles".

- USA models Miles
- Canada models Kilometers

You can switch from kilometers to miles or vise versa in the radio or in the MMI\*. You can

learn more about this in the MMI manual or in the radio user's manual.

## Odometer/trip odometer

The odometer shows the total number of kilometers or miles that have been driven on the vehicle.

The trip odometer shows the distance driven since it was last reset. It can be used to measure short distances. The last digit shows distances of 100 meters or 1/10 of a mile.

The trip odometer can be reset to zero by pressing the reset button  $\boxed{0.0} \Rightarrow fig. 7$ .

## Malfunction message

If there is a malfunction somewhere in the instrument cluster, **dEF** will appear in the trip odometer and will stay on. Contact your authorized Audi dealer to have the problem corrected.



**Tips** 

- When you switch off the ignition or open the driver door, the time, date, odometer and temperature are displayed for an additional 30 seconds.
- You can also call up the display with the SET button ⇒ page 11 while the ignition is switched off.

#### 14

# Warning/indicator lights

## Overview

The warning/indicator lights indicate different functions or a possible malfunction.




Fig. 8 Instrument cluster with warning/indicator lights

Your vehicle is equipped with several important warning and indicator lights to help you monitor the continued reliable operation of your vehicle  $\Rightarrow \triangle$ .



Left turn signal

⇒ page 16

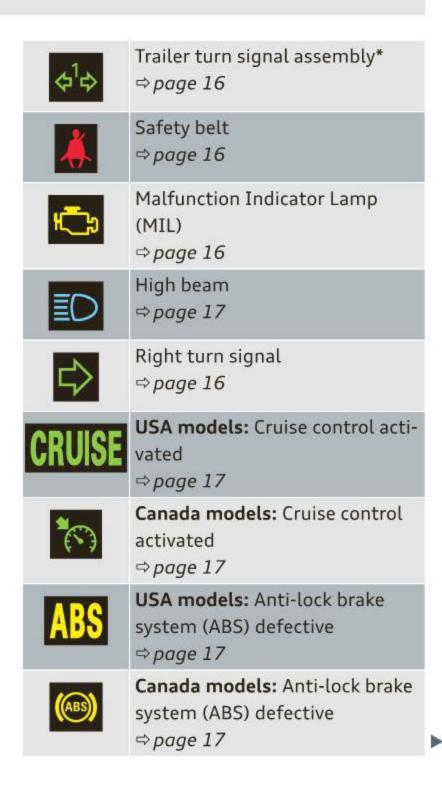



**USA models:** Parking brake

⇒page 18



Canada models: Parking brake

⇒page 18



**USA models:** Brake malfunction

⇒ page 18



Canada models: Brake malfunc-

tion

⇒ page 18

In vehicles with adaptive cruise control\* additional indicator lights are displayed ⇒ page 109.



#### WARNING

- Failure to heed warning lights and other important vehicle information may result in serious personal injury or vehicle damage.
- Whenever stalled or stopped for repair, move the vehicle a safe distance off the road, stop the engine, and turn on the emergency flasher ⇒ page 52.
- The engine compartment of any motor vehicle is a potentially hazardous area.
   Before you check anything in the engine compartment, stop the engine and let it cool down. Always exercise extreme caution when working under the hood ⇒ page 226, Engine compartment



## Tips

Many functions are monitored by the Auto-Check system ⇒ page 27. Malfunctions or faults will be identified either with a red symbol (priority 1 – Danger!) or with a yellow symbol (priority 2 – Warning).

## **EPC** Electronic power control

This warning/indicator light monitors the electronic power control.

The warning/indicator light (Electronic Power Control) illuminates when you turn on the ignition as a function check.



## **Tips**

If this warning/indicator light illuminates while you are driving, then there is a malfunction in the engine electronics. Have the malfunction corrected as soon as possible by your authorized Audi dealer or qualified workshop.

# 見/品 Electronic Stabilization Control (ESC)

If the similar indicator lamp blinks while driving, the ESC or ASR (Anti-Slip Regulation) is actively regulating.

If the sysitched the ESC off. In this case, you can switch the ignition off and then on to switch the ESC on again. The system is functioning completely when the indicator lamp switches off.

If the an indicator lamp illuminates, the ESC was switched off with the SOFF button.

# Stabilization control (ESC/ABS): Fault! See owner's manual

If the indicator lamp and the ABS indicator lamp illuminate and the driver message appears, the ABS or electronic differential lock is malfunctioning. This also interrupts the ESC. The brakes still function with their normal power, but ABS is not active.

Drive to your authorized Audi dealer immediately to have the malfunction corrected.

For more information about the ESC ⇒ page 197.

## 檙/棠 Safety systems

The (USA models) / (Canada models) indicator light monitors the safety systems (e.g. airbags, pretensioners) and illuminates for a few seconds each time you switch the ignition on.

If the (USA models) / (Canada models) indicator light does not go out, or if it illuminates while you are driving, or if it starts to



blink, then there is a malfunction somewhere in the system. If the light does not illuminate when you switch the ignition on, this also means there is a malfunction.



#### WARNING

If you have a malfunction in the safety systems, contact your authorized Audi dealer immediately. Otherwise the safety systems may not work properly in an accident.

# (!) Tire pressure monitoring system - telltale indicator lamp

Applies to vehicles: with tire pressure monitoring system

The warning/indicator light appears in the event of a significant loss of tire pressure or if there is a malfunction.

The indicator light !!! illuminates to check the function when you switch on the ignition.

If the symbol remains on or blinks after you switch on the ignition, there is a loss of tire pressure or a system malfunction. If there is a system malfunction, see your authorized Audi dealer as soon as possible.

Detailed information on the tire pressure monitoring system can be found in ⇒ page 266.

## ⇔ Turn signals

The indicator light blinks when you use either turn signal.

Whenever you use the left or the right turn signal, the indicator light blinks. When you use the emergency flashers, both indicator lights flash.

If one of the turn signal light bulbs burn out, the turn signal will blink twice as fast as normal.

This does not apply, however, in towing mode. The indicator light does not flash if a turn signal is out on the trailer or the towing vehicle. Additional information on the turn signals ⇒ page 52.

### & Trailer turn signal assembly

Applies to vehicles: with towing hitch

The indicator light also blinks if the turn signal is operated when towing a trailer.

The indicator light blinks when the turn signal is used, if a trailer has been properly connected to the vehicle.

If one of the turn signal bulbs on the trailer is burned out or defective, the indicator light will not blink when you use the turn signals.



### **Tips**

For vehicles with a factory installed towing hitch or a trailer hitch that was installed later according to factory specifications, the trailer turn signal assembly is actuated.

## Å Safety belts

This warning/indicator light reminds you to put on your safety belt.

The warning/indicator light illuminates when the ignition is switched on to remind the driver and (on USA models only) any front passenger to put on the safety belt. Additionally, an audible warning tone will also sound.

For more Information  $\Rightarrow$  page 149, Safety belt warning light.

## Malfunction Indicator Lamp (MIL)

The Malfunction Indicator Lamp (MIL) is part of the On-Board Diagnostic (OBD II) system. The symbol lights up when the ignition is turned on and will turn off after the engine has started and has settled at a constant idle speed. This indicates that the MIL is working properly.

The warning light illuminates when there is a malfunction in the engine electronic system. Contact your authorized Audi dealer and have the malfunction corrected.

An improperly closed fuel filler cap may also cause the MIL light to illuminate 

⇒ page 231.

For more information  $\Rightarrow$  page 26.

## **ID** High beam

The warning/indicator light illuminates when the high beams are on or when you use the headlight flasher. For more information about using the high beams, see ⇒ page 52.

## CRUISE/ \* Cruise control

The **CRUISE** (USA models) / (Canada models) warning/indicator light illuminates when the cruise control is activated.

## ABS/(@) Anti-lock brake system (ABS)

This warning/indicator light monitors the ABS and the electronic differential lock (EDL).

The ABS (USA models) / (Canada models) warning/indicator light will come on for a few seconds when the ignition is switched on. The light will go out after an automatic check sequence is completed.

#### There is a malfunction in the ABS when:

- The warning/indicator light does not illuminate when you switch on the ignition.
- The warning/indicator light does not go out after a few seconds.
- The warning/indicator light illuminates while driving.

The brake system will still respond even without the assistance of the ABS system.

See your authorized Audi dealer as soon as possible to restore full braking performance.

For more information regarding the ABS 

⇒ page 197.

The ABS warning light and the brake warning light come on together. The ABS will not work and you will notice a change in braking response and performance.

#### Malfunction in the brake system

If the brake warning light  $\Rightarrow$  page 18 and the ABS warning illuminate together there may be a malfunction in the ABS, and there may also be a malfunction in the brake system itself  $\Rightarrow$   $\land$ .

In the event of a malfunction in the brake system the warning/indicator light BRAKE (USA models)/ (Canada models) in the instrument cluster flashes. By pressing the SET button, you can bring up a driver message which explains the malfunction in more detail. Please note ⇒ page 29.

# Malfunction in the electronic differential lock (EDL)

The EDL works together with the ABS. The ABS warning light will come on if there is a malfunction in the EDL system ⇒ page 197. See your authorized Audi dealer as soon as possible.

# WARNING

- If the ABS (USA models)/ (Canada models) warning light does not go out, or if it comes on while driving, the ABS system is not working properly. The vehicle can then be stopped only with the standard brakes (without ABS). You will not have the protection ABS provides. Contact your authorized Audi dealer as soon as possible.
- USA models: If the BRACE warning light and the ABS warning light come on together, the rear wheels could lock up first under hard braking. Rear wheel lockup can cause loss of vehicle control and an accident. Have your vehicle repaired immediately by your authorized Audi dealer or a qualified workshop. Drive slowly and avoid sudden, hard brake applications.
- Canada models: If the brake warning light and the ABS warning light come on together, the rear wheels could lock up first under hard braking. Rear

wheel lock-up can cause loss of vehicle control and an accident. Have your vehicle repaired immediately by your authorized Audi dealer or a qualified workshop. Drive slowly and avoid sudden, hard brake applications.

### MAKE / (P) Electromechanical parking brake

The warning/indicator light monitors the electromechanical parking brake.

With the parking brake applied and the ignition turned on, the (USA models) (Canada models) warning/indicator light illuminates. After the ignition has been turned off, the warning/indicator light continues to illuminate for about 30 seconds. If the parking brake is applied with the ignition turned off, the warning/indicator light illuminates for about 30 seconds.

The warning/indicator light will go out when the parking brake is released.

If the warning/indicator light flashes continuously **after applying** the parking brake, braking force is not sufficient to prevent the vehicle from rolling unintentionally. Please note the following:

- If the slope of the ground is too steep to park the vehicle, the additional drive message appears Caution: Vehicle parked too steep.
- In the event of a parking brake malfunction, the yellow symbol appears in the instrument cluster display and the driver message Parking brake malfunction! is displayed. Have the malfunction repaired as soon as possible by an authorized Audi dealer or any other qualified workshop.

## BRAKE/(1) Brake system

The warning/indicator light flashes if brake fluid level is low, if there is an ABS system malfunction or a parking brake malfunction.

The **BRAKE** (USA models) / (Canada models) light illuminates when the ignition is turned

on. It goes out after the engine has been started. This indicates that the brake warning light is functioning properly.

If the brake warning light does not light up when the engine is cranking, there may be a malfunction in the electrical system. In this case, contact an authorized Audi dealer.

If the brake system warning/indicator light flashes, there is a brake system malfunction. By pressing the SET button, you can bring up a driver message which explains the malfunction in more detail ⇒ page 29.

If the ABS fails, the ABS warning/indicator light  $\triangle$  (USA models)/ (Canada models) flashes together with the brake system warning/indicator light  $\Rightarrow$   $\triangle$ .

(USA models): If the warning light BRAKE and the warning light illuminate together, immediately contact your authorized Audi dealer or qualified workshop to have all brake pads inspected ⇒ page 33.

When the light comes on, an audible warning signal is also given.

#### WARNING

- USA models: If the BRAKE warning light and the ABS warning light come on together, the rear wheels could lock up first under hard braking. Rear wheel lockup can cause loss of vehicle control and an accident. Have your vehicle repaired immediately by your authorized Audi dealer or a qualified workshop. Drive slowly and avoid sudden, hard brake applications.
- Canada models: If the brake warning light and the ABS warning light come on together, the rear wheels could lock up first under hard braking. Rear wheel lock-up can cause loss of vehicle control and an accident. Have your vehicle repaired immediately by your authorized Audi dealer or a qualified workshop. Drive slowly and avoid sudden, hard brake applications.

- If the brake warning/indicator light does not go out after a few seconds and the parking brake is released, or lights up while you are driving, the fluid level in the brake fluid reservoir is too low. If you believe that it is safe to do so, proceed immediately at low speed to the nearest authorized Audi dealer or qualified repair facility and have the brake system inspected.
- Always keep in mind that after several brake applications, you will need greater pressure on the brake pedal to stop your vehicle. Do not rely on strained brakes to respond with maximum stopping power in critical situations. You must allow for increased braking distances. The extra distance used up by fading brakes could lead to an accident.

# Driver information display

## Introduction

#### General notes

The driver information display inside the instrument cluster provides you, the driver, with much useful information.



Fig. 9 Instrument cluster: center display

Information from the driver information system is shown in the display in the center of the instrument cluster.

When you turn on the ignition and while you are driving, some functions and vehicle components are scanned for their operating status. Malfunctions or required service procedures are signaled audibly and shown by red and yellow lighted symbols and reminders to the driver in the display.

The driver is also shown information about radio and CD operation and directions for the navigation system\*. You can find additional information on these subjects in the radio or MMI\* manual.

The illustrations in the instrument panel display differ in some of the vehicles.

The driver information system provides the following functions:

| Sound system display                       | ⇒page 20  |
|--|-----------|
| Outside air temperature                    | ⇒ page 21 |
| Digital speedometer                        | ⇒page 21  |
| Open door- and luggage compartment warning | ⇒page 21  |
| Service interval display                   | ⇒page 22  |

| Auto Check system                | ⇒page 27   |
|----------------------------------|------------|
| Driver information               | ⇒page 27   |
| Speed warning                    | ⇒ page 93  |
| Trip computer                    | ⇒ page 23  |
| Tire pressure monitoring system* | ⇒ page 266 |
| Digital clock with date display  | ⇒page 12   |
| Odometer and trip odometer       | ⇒page 13   |
| Selector lever position          | ⇒page 123  |
| Cruise control                   | ⇒page 95   |
| Adaptive cruise control*         | ⇒page 107  |
| Energy flow display*             | ⇒page 103  |

# (i)

## **Tips**

In the event of a malfunction either a red or yellow icon appears in the display. Red symbols indicate **Danger** ⇒ page 28. Yellow symbols indicate a **Warning** ⇒ page 31.

## Sound system display

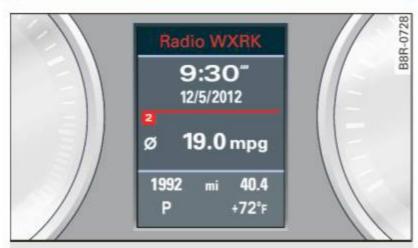


Fig. 10 Display: sound system

If priority 1 or priority 2 faults are not shown by the Auto Check Control, the name of the radio station you are tuned to or the frequency and the reception range are shown in the upper area of the display.

When the CD is in use, the title of the track being played is shown. The CD changer displays the number of the current CD (CD1 to CD6).

## Outside temperature display



Fig. 11 Display: outside temperature

At temperatures below 39 °F (+4 °C), a snowflake symbol appears in front of the temperature display. It is intended to remind the driver to pay special attention to **ice on the road**.

If the vehicle is stationary, or if you are driving at a very low speed, the temperature shown in the display might be slightly higher than the actual outside temperature. This is caused by the heat being radiated from the engine.

The unit of measurement for the temperature can be set in either °F or in °C on the MMI\* or on the radio control unit. The outside temperature display automatically shows the unit of measurement that has been set. For additional information, see the MMI\* or the radio instruction manual.

# Λ

#### WARNING

- Never use the outside temperature display to determine if a road surface is icy or not. Keep in mind that road surfaces, especially bridges and overpasses, could be ice covered and slippery even at an outside temperature above 39 °F (+4 °C).
- Always remember, even if the "snowflake" symbol (ice warning) does not appear in the display, black ice could be on the road.
- Always reduce your speed and drive with special care in cold weather conditions when the chance of encountering icy road surfaces increases.

## Digital speedometer



Fig. 12 Display: Digital speedometer

Current speed appears in the display. Speed is shown in 1 mph increments (USA models) or 1 km/h increments (Canada models).

You can switch the display from miles to kilometers and vice versa via the radio or MMI\*.

## Open door or trunk lid warning

The pictogram alerts you when doors or the trunk lid have been left open.



Fig. 13 Display: Open door- and trunk lid warning

The Open Door/Trunk Lid warning displays if even *one* door, the hood or the trunk lid is open. This symbol also shows *which* door or lid has not been closed ⇒ *fig. 13*.

As soon as the door, the hood and the trunk lid are closed properly, the door and trunk lid warning turns off and the selected driver information system functions are displayed again.

## Service interval display

The service interval display reminds you when your next service is due.



Fig. 14 Instrument cluster: Service interval display

The schedule for the next oil change or inspection is calculated automatically and displayed accordingly. The display works in two stages:

#### Service reminder

30 days before the next service is due, a service reminder appears in the display when you turn on the ignition  $\Rightarrow$  *fig. 14*.

After about 5 seconds the display switches back to normal. The distance and time remaining are updated each time the ignition is turned on until the date due for service is reached.

#### Service due

When the due date for service is reached, the message **Service due!** appears in the instrument cluster immediately after you turn on the ignition. Additionally, a warning tone sounds. After about 5 seconds the display switches back to normal.

### Calling up the service schedules

If or when an oil change or inspection is due, can be shown in the radio or MMI\* display by selecting the service interval display in the car menu. Select CAR function button > Service interval display or CAR function button > Car systems\* control button > Servicing & checks > Service intervals.

#### Resetting the service interval display

Your authorized Audi dealer will reset the corresponding service schedule after performing the appropriate service on your vehicle. You also have the possibility to reset the oil change schedule after having performed an oil change according to Audi specifications. Select CAR function button > Service interval display > Reset oil change interval or CAR function button > Car systems\* control button > Servicing & checks > Service intervals > Reset oil change interval.

## (!)

#### Note

If you disconnect the battery terminals, no calculations can be made for the service interval display during this time and no service reminder will appear. Remember that observing the proper service intervals is vitally important to extending the life of your vehicle, particularly the engine, and maintaining its value. Do not exceed the time interval for the next service, even if the vehicle mileage is low.



#### **Tips**

- Do not reset the display between oil changes, otherwise the display will be incorrect.
- The information in the Service Reminder remains stored even when the vehicle battery is disconnected.

## Trip computer

#### Introduction

The trip computer gives you information on current and average fuel mileage, average speed, fuel range and driving time.



Fig. 15 Trip computer display: Average fuel mileage

The following information is continuously evaluated by the trip computer and can be displayed sequentially in the instrument cluster display:

#### Fuel range

The estimated cruising range in miles (km) appears in the display. This tells you how far your vehicle will be able to travel on the current tank of fuel and with the same driving style. The display changes in increments of 6 miles (10 km).

#### Average fuel mileage

The average fuel economy in MPG (l/100 km) since you last cleared the memory appears in this display. You can use this display to adjust your driving technique to achieve a desired mileage.

#### Current fuel mileage

The instantaneous fuel consumption in miles per gallon (l/100 km) is shown in this display. You can use this display to adjust your driving technique to achieve a desired mileage.

Fuel consumption is recalculated at intervals of 33 yards (30 meters). This display switches to gallons/hour (liters/hour) when the vehicle is not moving.

#### Average speed

The average speed in mph (km/h) since the last time the display was reset appears in the display.

### Elapsed time

The length of time that you have been driving since you last reset the memory appears in this display.

#### Distance

The distance that has been covered since the last time the memory was cleared appears in the display.



### **Tips**

- Fuel consumptions (average and current), range and speed are displayed in metric units on Canadian models.
- All stored values will be lost if the vehicle battery is disconnected.

#### **Memories**

The trip computer is equipped with two fully automatic memories as well as an efficiency program\*.

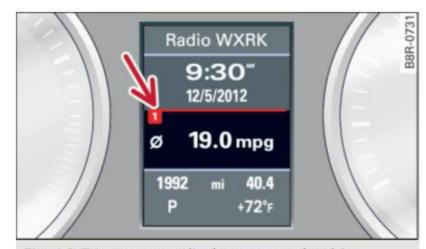


Fig. 16 Trip computer display: memory level 1

You can switch between the trip computer 1 and 2 and the efficiency program\* by pressing the  $\boxed{\text{RESET}}$  button  $\boxed{\text{B}} \Rightarrow page 24$ , fig. 17.

You can tell which memory level is currently active by the number or the sign in the display ⇒ fig. 16. The data from the single-trip memory (memory level 1) is being displayed if a 1 appears in the display. If a 2 is shown, then the data from the total-trip memory is being displayed (memory level 2). The fuel pump

nozzle indicates the efficiency program\* ⇒ page 25.

#### Single-trip memory (Trip computer 1)

The single-trip memory stores the trip information from the time the ignition is turned on until it is turned off. If the trip is continued within 2 hours from the time the ignition was turned off, the new data will be included in the calculation of the current trip information. If the trip is interrupted for more than 2 hours the memory is reset automatically.

### Total-trip memory (Trip computer 2)


Unlike the single-trip memory, the total-trip memory is not reset automatically. This permits you to evaluate your driving data for the entire period between manual resets.

#### Efficiency program\*

The efficiency program can help you to use less fuel  $\Rightarrow$  page 25.

## Operation

The trip computer is controlled by two switches on the windshield wiper lever.

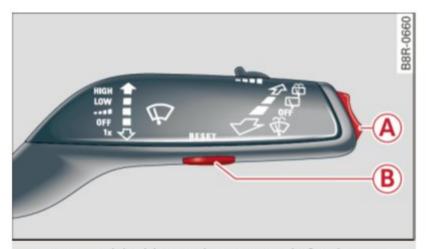

**Fig. 17** Windshield wiper lever: controls for the trip computer

- ► To display trip information within a memory level, press the top or bottom part of the function selection switch (A).

The trip computer will not operate unless the ignition is on. When you turn on the ignition,

the function that was in use when you last turned the ignition off will be displayed.

In addition to information on the trip computer (trip computer 1, 2 and efficiency program\*, the digital speedometer and information regarding the navigation system\* can also be displayed. To switch the display between the different information, tap the RESET button (B) briefly.

#### Setting values to zero

To delete **one** current value from the trip computer, select the desired function and press the RESET button **B** for at least one second. The following values can be set to zero **individually**:

- Average fuel mileage
- Average speed
- Elapsed time
- Distance

All currently displayed values are deleted in the efficiency program\*.

In addition, **all** the values in the single-trip or the total-trip memory can be deleted simultaneously ⇒ page 24.



#### **Tips**

All stored values will be lost if the vehicle battery is disconnected.

## Basic Settings for the trip computer

The MMI\* or the radio operating unit is used for setting the trip computer's basic settings.

 Select: CAR function button > Instrument cluster > On-board computer 1 or On-board computer 2.

The values in the single-trip or the total-trip memory can all be reset to zero at the same time under **Reset** in the menu.

In addition, you can determine what information from the trip computer should be shown in the instrument cluster display. If one of the pieces of driver information is turned **Off**, that driver information will not be shown in the

display. The information will continue to be calculated by the trip computer and can be turned back **On** at any time.

# (i)

**Tips** 

- This function is not available on all vehicles.
- The driving information in the efficiency program\* is also reset to zero with the single-trip memory.

# Efficiency program

#### Description

Applies to vehicles: with efficiency program

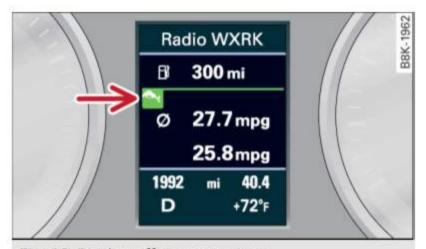


Fig. 18 Display: efficiency program

Press the RESET button B ⇒ page 24, fig. 17 repeatedly until the efficiency program appears in the display.

The efficiency program can help you to use less fuel. It evaluates driving information in reference to fuel consumption and shows other equipment influencing consumption. Fuel economy messages ⇒ page 25 provide tips for efficient driving.

The efficiency program uses distance and consumption data from trip computer 1. If the data are deleted in the efficiency program, those values are also reset in trip computer 1.

#### Other equipment

Applies to vehicles: with efficiency program

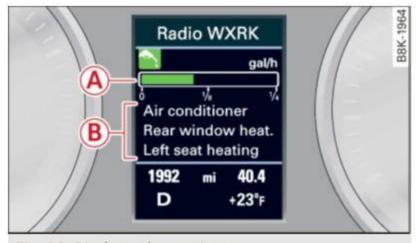


Fig. 19 Display: other equipment

In the efficiency program, press the function selection switch ⇒ page 24, fig. 17 (A) repeatedly until the other equipment appears in the display.

Other equipment that is currently affecting fuel consumption is listed in the efficiency program. The display shows up to three other items of equipment (B). The equipment using the most fuel is listed first. If more than three items using fuel are switched on, the equipment that is currently using the most fuel is displayed.

A scale (A) also shows the current total consumption of all other equipment.

#### Fuel economy messages

Applies to vehicles: with efficiency program



Fig. 20 Display: fuel economy message

Fuel economy messages are displayed when fuel consumption is increased by certain conditions. If you follow these fuel economy messages, you can reduce your vehicle's consumption of fuel. The messages appear automatically and are only displayed in the efficiency program. The fuel economy messages turn off automatically after a certain period of time.

- ► To turn a fuel economy message off immediately after it appears, press the RESET button ⇒ page 24, fig. 17 (B), or
- ▶ Press the function selection switch ⇒ page 24, fig. 17 (A).



## **Tips**

- Once you have turned a fuel economy message off, it will only appear again after you turn the ignition on again.
- The fuel economy messages are not displayed in every instance, but rather in intervals over a period of time.

# On-Board Diagnostic system (OBD)

## Malfunction Indicator Lamp (MIL)

The Malfunction Indicator Lamp (MIL) in the instrument cluster ⇒ page 14, fig. 8 is part of the On-Board Diagnostic (OBD II) system.

The warning/indicator light illuminates when the ignition is switched on and goes out after the engine starts and the idle has stabilized. This indicates that the MIL is working properly.

If the light does not go out after the engine is started, or illuminates while you are driving, a malfunction may exist in the engine system. If the light illuminates, the catalytic converter could be damaged.

Continue driving with reduced power (avoiding sustained high speeds and/or rapid accelerations) and have the condition corrected. Contact your authorized Audi dealer.

If the light illuminates, the electronic speed limiter may also be malfunctioning. For more information ⇒ page 27, Electronic speed limiter.

An improperly closed fuel filler cap may also cause the MIL light to illuminate 

⇒ page 231.

## **On-Board Diagnostics**

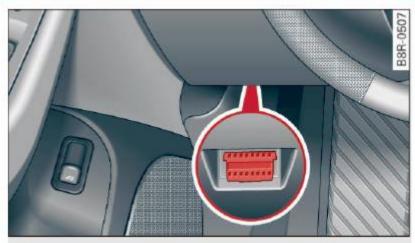


Fig. 21 Location of Data Link Connector (DLC)

On-Board Diagnostics monitors the components of your emission control system. Each monitored component in your engine system has been assigned a code. In case of a malfunction, the component will be identified and the fault stored as a code in the control module memory.

The MIL light may also illuminate if there is a leak in the on-board fuel vapor recovery system. If the light illuminates after a refueling, stop the vehicle and make sure the fuel filler cap is properly closed ⇒ page 231.

In order to make an accurate diagnosis, the stored data can only be displayed using special diagnostic equipment (generic scan tool for OBD).

In order to connect the special diagnostic equipment, push the plug into the Data Link Connector (DLC). The DLC is located to the right of the hood release ⇒ fig. 21.

Your authorized Audi dealer or qualified workshop can interpret the code and perform the necessary repair.



#### WARNING

Do not use the diagnostic connector for personal use. Incorrect usage can cause malfunctions, which can increase the risk of a collision!

## Electronic speed limiter

Your vehicle may be factory equipped with tires that are rated for a maximum speed of 130 mph (210 km/h). This is less than the maximum speed of your vehicle. To reduce the risk of sudden tire failure and loss of control if the vehicle is operated at excessive speeds, your vehicle also has an electronic speed limiter. The electronic speed limiter prevents your vehicle from going faster than the tire speed rating. For more information ⇒ page 259.

If the engine control unit receives faulty vehicle road speed signals, the Malfunction Indicator Lamp (MIL) will illuminate. If this occurs, contact the nearest authorized Audi dealer for assistance.



#### WARNING

Always observe the posted speed limits and adjust your speed to suit prevailing road, traffic and weather conditions. Never drive your vehicle faster than the maximum speed rating of the tires installed.

## **Auto Check Control**

### Introduction

The Auto-Check control monitors the function of certain vehicle features and components. It simply makes sure these features and components are working properly. The Auto-Check control works as long as the ignition is on, as well as whenever the vehicle is driven.

If a component is malfunctioning or if the need for an urgent repair has been detected, this will appear in the instrument cluster display. You will also hear an audible warning tone. The displays are color coded in either red or yellow depending on their level of priority.

A red symbol means **Danger**, a yellow symbol indicates **Warning**. In certain situations, information message for the driver appear in addition to the red and yellow symbols.

#### Note about automatic transmission

The Auto-Check Control will automatically perform a test each time you switch on the ignition. With the selector lever in P or N, the following message appears in the display:

## When stationary apply brake pedal while selecting gear

When you select a different gear (for example: R, D, etc.), the message will disappear and the Auto-Check function is displayed.

If there is a malfunction, then the malfunction message will appear about 15 seconds after you start the vehicle. At the same time you will hear a warning tone.

## **Driver information messages**

Driver information messages are shown in the instrument cluster display in addition to symbols.

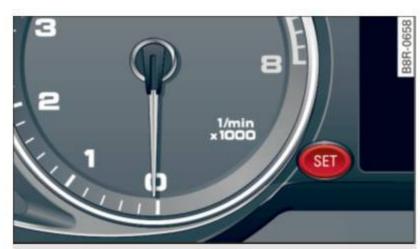


Fig. 22 Instrument cluster: SET button

For example, if the transmission selector lever is not in the P position when the engine is turned off, the following message appears:

# Shift to P otherwise vehicle can roll away. Doors do not lock if lever is not in P.

The ignition key can only be removed with the selector in this position. This and other messages are brought up if a function cannot be carried out.

#### Driver messages and red symbols

If a red symbol appears in the display, a driver message is also displayed automatically.

For example, the symbol for a problem with engine oil pressure appears in the display. The following message appears:

#### Turn off engine! Oil pressure too low

The driver message in the display goes out after about 5 seconds. The driver message can be displayed again by briefly pressing the  $\square$  button  $\square$  fig. 22.

#### Driver messages and yellow symbols

If a yellow symbol appears in the display, a driver message is also displayed automatically.

For example, the symbol appears in the display, indicating low windshield washer fluid level. The following message also appears:

#### Please refill washer fluid

The driver message disappears after a few seconds. The driver message can be displayed again by briefly pressing the SET button.

## Red symbols

A red symbol means DANGER.



Fig. 23 Display: Danger symbol

- Pull off the road.
- Stop the vehicle.
- Turn off the engine.
- Check the malfunctioning system. Contact your authorized Audi dealer or a qualified workshop for assistance.


Red symbols indicate a priority 1 malfunction - Danger!

With a priority 1 malfunction, a red symbol appears in the upper center area of the dis-

play ⇒ fig. 23. A driver message appears as well to explain the malfunction in more detail. When this symbol appears, three warning tones sound in succession. The symbol continues to flash until the fault has been corrected.

If several priority 1 malfunctions are present, the symbols appear in succession and remain for about 2 seconds.

The driver warning goes out after about 5 seconds, but it can be brought up again at any time by pressing the SET button ⇒ page 27.

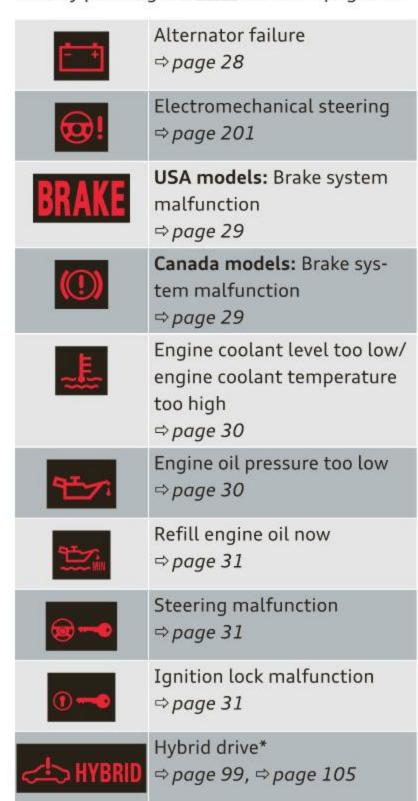

#### Alternator malfunction

If the symbol in the instrument panel display flashes, then there is a malfunction in the alternator or the vehicle electronics. A warning to the driver will appear, too. The driver

warning goes out after about 5 seconds, but it can be brought up at any time by pressing the SET button again.

Usually, you can still drive to the next dealership. Turn off all but the most necessary electrical consumers, since these drain the vehicle's battery.

# ! Note

If the warning symbol (coolant system malfunction) also lights up on the instrument panel during the trip  $\Rightarrow$  page 30, then you have to stop immediately and turn off the engine. The coolant pump is not working anymore - danger of damage to the engine!

## BRAKE/(1) Brake system malfunction

A malfunction in the brake system must be repaired as soon as possible.

If the warning/indicator light RAKE (USA models)/ (Canada models) in the instrument cluster flashes, there is a brake system malfunction. A driver message appears as well to explain the malfunction in more detail. The driver warning goes out after about 5 seconds, but it can be brought up at any time by pressing the SET button again.

#### Stop vehicle and check brake fluid level

- Stop the vehicle.
- ► Check the brake fluid level ⇒ page 242.
- Seek professional assistance if necessary.

# Warning! Fault in brake system. Contact workshop

# Parking brake system fault! See owner's manual

► If this symbol appears when the vehicle is stationary or after the ignition is turned on, check to see if the parking brake can be released. Drive to an authorized Audi dealer or other qualified workshop as soon as possi-

- ble and have the malfunction corrected. If the parking brake cannot be opened, then take it to an expert at an authorized Audi dealer.
- ▶ If the symbol appears while you are driving, it is possible that the traction control or the emergency brake has malfunctioned. It is possible that the parking brake cannot be applied. It is also possible that the parking brake cannot be released after it has been applied. Drive to an authorized Audi dealer or other qualified workshop to have the malfunction corrected.

If the ABS system malfunctions, the ABS warning/indicator light illuminates together with the brake system malfunction warning/indicator light  $\Rightarrow \triangle$ .

# $\Lambda$

## WARNING

- Always observe the warnings in
   ⇒ page 226, Engine compartment, before opening the hood and checking the brake fluid.
- Driving with low brake fluid is a safety hazard. Stop the car and get professional assistance.
- USA models: If the BRAKE warning light and the ABS warning light come on together, the rear wheels could lock up first under hard braking. Rear wheel lock-up can cause loss of vehicle control and an accident. Have your vehicle repaired immediately by your authorized Audi dealer or a qualified workshop. Drive slowly and avoid sudden, hard brake applications.
- Canada models: If the brake warning light and the ABS warning light come on together, the rear wheels could lock up first under hard braking. Rear wheel lock-up can cause loss of vehicle control and an accident. Have your vehicle repaired immediately by your authorized Audi dealer or a qualified workshop. Drive slowly and avoid sudden, hard brake applications.

## **L** Engine cooling system malfunction

A malfunction in the engine cooling system must be repaired as soon as possible.

If the symbol flashes in the display, either the engine coolant temperature is too high or the engine coolant level is too low. A driver message appears as well to explain the malfunction in more detail. The driver warning goes out after about 5 seconds, but it can be brought up at any time by pressing the SET button again.

#### Turn off engine and check coolant level

- ▶ Pull off the road.
- ► Stop the vehicle.
- ► Turn off the engine.
- ► Check coolant level ⇒ page 240.
- ▶ Add coolant if necessary ⇒ page 241.
- Continue driving only after the engine coolant warning/indicator light goes out.
- Contact your authorized Audi dealer for assistance if necessary.

If the engine coolant level is correct, then the radiator fan may be the cause of the malfunction.

# $\Lambda$

#### WARNING

- If your vehicle should break down for mechanical or other reasons, park at a safe distance from moving traffic, turn off the engine and turn on the hazard warning lights ⇒ page 52, Emergency flashers.
- Never open the hood if you see or hear steam or coolant escaping from the engine compartment - you risk being scalded. Wait until you can no longer see or hear steam or coolant escaping.
- The engine compartment of any vehicle is a dangerous area. Before you perform any work in the engine compartment, turn of the engine and allow it to cool. Follow the warning stickers ⇒ page 226, Engine compartment.



#### Note

Do not continue driving if the symbol illuminates. There is a malfunction in the engine cooling system – you could damage your engine.

## Engine oil pressure malfunction

The red engine oil pressure warning symbol requires immediate service or repair. Driving with a low oil pressure indication is likely to cause severe engine damage.

If the symbol on the display flashes, the engine oil pressure is too low. A driver message appears as well to explain the malfunction in more detail. The driver warning goes out after about 5 seconds, but it can be brought up at any time by pressing the SET button again.

#### Turn off engine! Oil pressure too low

- ► Stop the vehicle.
- ► Turn the engine off.
- ► Check the engine oil level ⇒ page 238.
- Contact your authorized Audi dealer for assistance if necessary.

#### Engine oil level too low

If the engine oil level is too low, add engine oil ⇒ page 238.

#### Engine oil level correct

If the symbol flashes even though the engine oil level is correct, please contact your nearest authorized Audi Dealer for assistance. Do not continue driving. Do not leave the engine running idle, either.



#### Tips

The engine oil pressure symbol is not an indicator for a low engine oil level. Do not rely on it. Instead, check the oil level in your engine at regular intervals, preferably each time you refuel, and always before going on a long trip. The yellow oil level warning indication requires oil refill or workshop service without delay. Do not wait until the red oil pressure warning starts to flash before you respond to the low oil level warning. By then, your engine may already have suffered serious damage.

## Fill engine oil now

### WARNING: Please add oil immediately

If the symbol lights up, then the oil has to be replenished right now ⇒ page 238.

## Steering malfunction

If there is a malfunction in the electronic steering column lock, the steering cannot be unlocked.

If the symbol in the display blinks, there is a malfunction in the electronic steering column lock. A driver message appears as well to explain the malfunction in more detail. The driver warning goes out after about 5 seconds, but it can be brought up at any time by pressing the SET button again.

#### Steering defective! Do not drive vehicle!

- Contact your nearest authorized Audi dealer.
- ► Do **not** tow your vehicle.

# $\Lambda$

#### WARNING

Your vehicle must not be towed in the event of a malfunction in the electronic steering column lock because it cannot be steered due to the locked steering. If it is towed with the steering locked, there is the risk of an accident.

## 

A malfunction in the ignition lock must be repaired immediately.

If the symbol in the display blinks, there is a malfunction in the electronic ignition lock.

A driver message appears as well to explain the malfunction in more detail. The driver warning goes out after about 5 seconds, but it can be brought up at any time by pressing the SET button again.

### Ignition lock defective. Contact dealer!

- Do not turn the engine off.
- Drive immediately to an authorized Audi dealer to have the malfunction corrected.

If there is a malfunction in the electronic ignition lock, the ignition cannot be turned off.

Drive immediately to an authorized service facility to have the cause of the malfunction corrected.

On vehicles with Convenience key\*, the engine should not be switched off using the Start/
Stop button because the engine cannot be started again after the ignition has been switched off.

## Yellow symbols

A yellow symbol means WARNING.



Fig. 24 Display: Yellow warning symbol


Yellow symbols indicate a priority 2 malfunction - Warning!

When a yellow warning symbol appears, one warning tone sounds. A driver message appears as well to explain the malfunction in more detail. The driver warning goes out after about 5 seconds, but it can be brought up at any time by pressing the SET button again.

Check the function displayed as soon as possible. The yellow symbol will not go out again until the reason for the malfunction has been corrected.

If several priority 2 malfunctions are present, the symbols appear in succession and remain for about 2 seconds.

|             | 371,031  |
|-------------|--|
| <b>⊕!</b>   | Electromechanical steering, Dynamic steering* ⇒ page 201 |
|             | Worn brake pads  ⇒ page 33                               |
| ==          | Battery voltage ⇒ page 34                                |
| 8           | Defective light bulb  ⇒ page 33                          |
| 却           | Fog lights<br>⇒ page 33                                  |
| <b>()</b> ‡ | Rear fog lights ⇒ page 33                                |
| T MIN       | Check engine oil level ⇒ page 34                         |
| SENSOR      | Engine oil sensor malfunction ⇒ page 34                  |
| -E          | Engine temperature*  ⇒ page 229                          |
|             | Low fuel level<br>⇒ page 33                              |
|             | Windshield washer fluid level<br>low<br>⇒ page 33        |
| 2           | Convenience key* Key not in vehicle  ⇒ page 32           |
|             | Light/rain sensor defective ⇒ page 33                    |
|             | Dynamic headlight range control defective ⇒ page 34      |
|             | Battery in remote control key<br>⇒ page 37               |

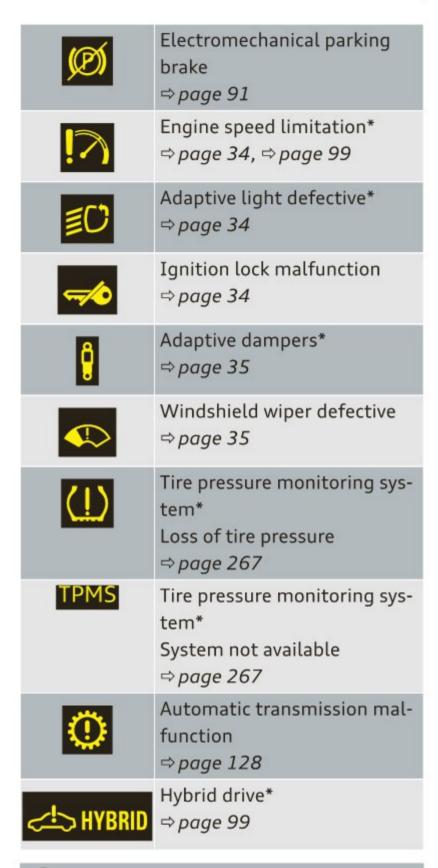

# (i) Tips

The speed warnings warning threshold 1

and warning threshold 2 are also
yellow symbols in some models. The warning is always shown as a small symbol in
the upper area of the display ⇒ page 93.

#### 🚣 Key not in vehicle

Applies to vehicles: with Convenience key

## Is the key in the vehicle?

This reminder appears along with the symbol if the master key is removed from the vehicle with the engine running. It is intended to remind you (e.g. when changing drivers)

not to continue the journey without the master key.

If the master key is no longer in the vehicle, you cannot switch off the ignition after stopping the engine and you also cannot start the engine again. You also cannot lock the vehicle from the outside.

## Light/rain sensor defective

# Automatic headlights / automatic wipers defective

If the symbol illuminates, the light sensor has failed. For safety reasons the low beams are turned on permanently with the switch in **AU-TO**. However, you can continue to turn the lights on and off using the light switch. In the case of a defect in the rain sensor, the windshield wiper lever functions are still available. Have the light/rain sensor checked as soon as possible by an authorized Audi dealer.

## (C) Worn brake pads

# Brake pads!

If the warning light illuminates, immediately contact your authorized Audi dealer or qualified workshop to have all brake pads inspected. On USA models the warning light comes on together with the warning light BRAKE. Both sets of brake pads on an axle must always be replaced at the same time.

# 1

### WARNING

Driving with bad brakes can cause a collision and serious personal injury.

— If the warning light and the warning light BRAKE<sup>1)</sup> with the message Brake pads! comes on in the instrument cluster display, immediately contact your authorized Audi dealer or qualified workshop to have all brake pads checked or replaced if necessary.

## &/約/0 Defective light bulb warning

- If the indicator light turns on, a bulb has failed. The message indicates the location of the bulb.

- If a front fog lamp has failed, the indicator light turns on to indicate the location on the vehicle.

- If a rear fog lamp has failed, the indicator light turns on to indicate the location on the vehicle.

## Vehicle lights: System fault!

If the message appears, there is a malfunction in the headlights or light switch.

Drive to your authorized Audi dealer immediately to have the malfunction corrected.

# $\Lambda$

#### WARNING

- Light bulbs are pressurized and could explode while they are being changed causing serious personal injury.
- Work with due care when handling the high-voltage section of gas discharge (xenon) lights\*. Failure to do so could result in death or serious injury.



## **Tips**

Have the bulb replaced or the connection repaired by your authorized Audi Service department.

# Windshield washer fluid level too low

## Please refill washer fluid

If the symbol illuminates, add windshield washer fluid to the washer system and also to the headlight washer system ⇒ page 247.

# ☐ Fuel supply too low

When the symbol illuminates, this means there are about 2.6 gallons (10 liters) of fuel

left in the fuel tank. Time to refuel! 
⇒ page 230.

If the symbol lights up, even when there is ample fuel in the tank, and the text Fuel tank system malfunction! Contact dealer appears in the display, there is a fault in the system. Contact an authorized Audi dealer to have the fault rectified.

## 🗀 Battery voltage

If battery power drops into the range where it can limit the ability of the engine to start, this the symbol appears in the instrument cluster display with the following driver message Low battery: Battery will be charged while driving.

While this driver notification is displayed, you have to be prepared for limited starting capability.

# Driver message appears and goes out again

If this driver message appears after the ignition is turned on or while driving and it goes out again after a while, the battery has been adequately recharged.

# Driver message appears and does not go out again

If this driver notification appears after the ignition is turned on or while driving and does not go out again, the battery's state of charge is not in the optimal range. Starting capability is restricted. Have the battery checked at an authorized Audi dealer or other qualified workshop as soon as possible.

## 🗠 Check engine oil

## 🔀 Add oil, max x qt (l). You may cont. driv.

When the symbol and driver message appear, add the amount of oil appearing in the display at the next opportunity ⇒ page 238.

## **Engine** oil sensor defective

端 Oil level! Sensor defective

If the symbol illuminates, contact your authorized Audi dealer and have the oil sensor inspected. Until you have this done, check the oil level each time you refuel just to be on the safe side ⇒ page 238.

## ! Engine speed limitation

Applies to vehicles: with engine speed limitation

# Do not exceed max. engine speed of XXXX rpm

The symbol illuminates when there is an engine control malfunction. The indicator light control in the instrument cluster also illuminates. The engine speed is limited to the speed displayed in the driver information system. Keep in mind that the engine speed will not exceed the value displayed in the driver information system, for example when downshifting.

Please go to an authorized Audi dealer or other qualified workshop to have the malfunction repaired.

## **№** Headlight range control defective

# Headlight range control defective!

If the symbol illuminates, the dynamic headlight range control is no longer working properly. Have the system checked and repaired at your authorized Audi dealer.

#### **ID** Adaptive light defective

Applies to vehicles: with adaptive light

## Audi adaptive light: defective

When this symbol illuminates, it means that adaptive light is defective. Go to an authorized Audi dealer to have the headlights or the control unit for the adaptive light repaired.

## **→ Ignition lock malfunction**

Ignition lock defective

If the symbol in the display comes on, there is a malfunction in the electronic ignition lock. Please go to an authorized Audi dealer or other qualified workshop to have the malfunction repaired.

#### Adaptive dampers

Applies to vehicles: with Audi drive select

### Suspension: System fault!

If the symbol in the display comes on, there is a malfunction in the adaptive dampers. Please go to an authorized Audi dealer or other qualified workshop to have the malfunction repaired.

#### Windshield wipers faulty

# Windshield wipers defective

When this symbol illuminates, it means that the electronics for the windshield wipers are defective. Please go to an authorized Audi dealer or qualified workshop to have the windshield wiper system repaired.

# Opening and closing

# Keys

#### Key set



Fig. 25 Key set

# A Master key with remote control and integrated mechanical key

You can centrally lock and unlock your vehicle and start the engine with the master key with remote control. A mechanical key is integrated in the master key ⇒ page 37.

#### **B** Emergency key

The emergency key is not intended for constant use. It should only be used in an emergency. Keep it in a safe place and do not carry it on your key ring.

#### Key replacement

If you lose a key, contact your authorized Audi dealer immediately to have the *lost* key disabled. Be sure to bring all your keys with you.

#### Number of keys

You can inquire about the number of assigned keys to your vehicle ⇒ page 11. This allows you to make sure you have received all of the keys when you purchase a used vehicle. Depending on the vehicle equipment level, this function may also be performed in the MMI\*. To do this, select: CAR function button > Car systems\* control button > Servicing & checks > Programmed keys.

#### Data in the master key

During driving, service and maintenance-relevant data is continuously stored on your master key. Your Audi service adviser can read out

this data and tell you about the work your vehicle needs. This applies also to vehicles with Convenience key\*.

#### Personal comfort settings

If two people use one vehicle, it is recommended that each person always uses "their own" master key. When the ignition is turned off or when the vehicle is locked, personal convenience settings for the following systems are stored and assigned to the remote master key.

- Climate control
- Central locking system
- Seat memory\*
- Parking system\*
- Adaptive cruise control\*
- Audi side assist\*
- Audi drive select\*

The stored settings are automatically recalled when you unlock the vehicle, when you open the doors or when you turn on the ignition.

# $\triangle$

#### WARNING

- Do not leave your vehicle unattended with the key in the ignition lock. Entry by unauthorized persons could endanger you or result in theft or damage the vehicle. Always lock all doors and take the key.
- Do not leave children unattended in the vehicle, especially with access to vehicle keys. Unguarded access to the keys provides children the opportunity to start the engine and/or activate vehicle systems such as the power windows etc. Unsupervised operation of any vehicle system by children can result in serious injury.
- Do not remove the key from the ignition lock until the vehicle has come to a complete stop. Otherwise the steering column lock could suddenly engage - causing the risk of an accident.

# (i) Tips

- The operation of the remote control key can be temporarily disrupted by interference from transmitters in the vicinity of the vehicle working in the same frequency range (e.g. a cell phone, radio equipment).
- If you open the driver's door with the key left in the ignition lock, a chime will sound. This is your reminder to remove the key and lock the door.
- For security reasons, replacement keys are only available from Audi dealers.
- For Declaration of Compliance to United States FCC and Industry Canada regulations ⇒ page 298.

#### Check light and battery in the master key

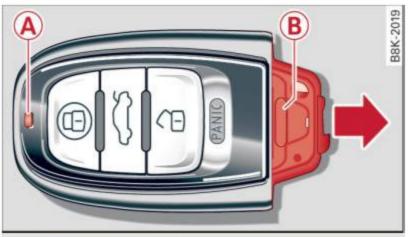


Fig. 26 Remote master key

#### Check light in the master key

The check light  $\triangle \Rightarrow fig$ . 26 in the master key provides information about different conditions.

- The check light comes on briefly once when a button is pressed, and during an "inquiry" by the convenience key system.
- ▶ If the check light does not come on, the battery is dead and has to be replaced. In addition, when the battery is dead the symbol appears in the instrument cluster display as well as the message: Please change key battery.

#### Master key battery replacement

Pull the mechanical key out of the master key ⇒ page 37.

- Press the release button (B) ⇒ fig. 26 on the battery holder and at the same time pull the battery holder out of the master key in the direction of the arrow.
- ► Install the new battery CR 2032 with the "+" sign facing down.
- Push the battery holder carefully into the master key.
- ► Install the mechanical key.

#### For the sake of the environment

Dispose of dead batteries properly so as not to pollute the environment.



#### **Tips**

The replacement battery must be the same specification as the original.

### Removing the mechanical key

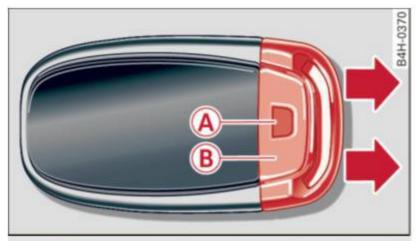


Fig. 27 Remote master key: Removing the mechanical key

- Press the release button (A) ⇒ fig. 27.
- ► Pull the mechanical key (B) out of the master key.

Using the mechanical key, you can:

- lock and unlock the glove compartment
   ⇒ page 76.
- lock and unlock the vehicle manually
   ⇒ page 41 if this should not be possible with the master key.

#### Emergency unlocking of the ignition key

In the event of malfunctions in the electrical system, it may happen that you cannot remove the ignition key.

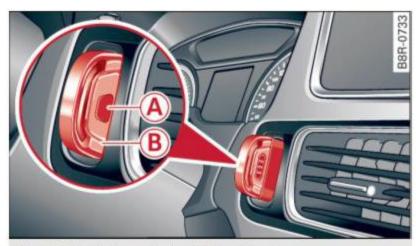


Fig. 28 Ignition switch with ignition key

If you are unable to remove the ignition key, for example because the vehicle battery is discharged, proceed as follows:

- Press the release button (A) ⇒ fig. 28 and pull the mechanical key (B) out of the master key.
- ▶ Lock the vehicle using the mechanical key
  ⇒ page 41.
- Have the electrical system inspected by an authorized Audi dealership.

#### Electronic immobilizer

The immobilizer helps to prevent unauthorized use of your vehicle.

Inside the key there is a computer chip. This chip automatically deactivates the electronic immobilizer when you insert the key in the ignition lock. When you remove the key from the ignition lock, the electronic immobilizer is automatically activated once again.



#### **Tips**

- The vehicle cannot be started if an unauthorized key is used. The vehicle may not start if another radio device such as a key for another vehicle or a transponder is located on the key ring.
- For Declaration of Compliance to United States FCC and Industry Canada regulations ⇒ page 298.

### Power locking system

#### General description

The power locking system locks or unlocks all doors and the rear lid simultaneously.

You can lock and unlock the vehicle centrally. You have the following choices:

- Remote master key ⇒ page 40
- Door handles with Convenience key\*
   ⇒ page 40,
- Lock cylinder at the driver's door
   ⇒ page 41, or
- Power locking switch inside ⇒ page 42.

#### Selective unlocking

When you lock the vehicle, the power locking system will lock the doors and the rear lid. When unlocking, you can set in the radio or in the MMI\* whether *only* the driver's door or the entire vehicle should be unlocked ⇒ page 39.

#### Automatic locking

The automatic locking feature locks all the vehicle doors and the rear lid when you drive faster than 9 mph (15 km/h).

The car is unlocked again once the ignition key is removed. In addition, the vehicle can be unlocked if the opening function in the power locking system switch or at one of the door levers is actuated.

Additionally, in the event of a crash with airbag deployment the doors are automatically unlocked to allow access to the vehicle.

#### Anti-theft alarm warning system

If the anti-theft alarm warning system detects a break-in into the vehicle, acoustic and visual warning signals are triggered.

The anti-theft warning system is activated automatically when you lock the vehicle. It is deactivated when unlocking using the **remote key**, with the **mechanical key**, and when you switch on the ignition.

The alarm also turns off when the alarm cycle has expired.

#### Turn signals

When you unlock the vehicle, the turn signals flash twice. When you lock the vehicle, the turn signals flash once. If they do not flash, one of the doors, the rear lid or the hood is not locked.

#### Unintentionally locking yourself out

In the following cases there safeguards to prevent you locking your remote master key in the vehicle:

- The vehicle does not lock with the power locking switch ⇒ page 42 if the driver's door is open.
- On vehicles with Convenience key\*, if the most recently used master key is in the luggage compartment, the rear lid is automatically unlocked again after it is closed.

Do not lock your vehicle with the **remote master key** or **Convenience key\*** until all doors and the rear lid are closed. In this way you avoid locking yourself out accidentally.

# $\Lambda$

#### WARNING

- When you leave the vehicle, always remove the ignition key and take it with you. This will prevent passengers (children, for example) from accidentally being locked in the vehicle should they accidentally press the power locking switch in the front doors.
- Do not leave children inside the vehicle unsupervised. In an emergency it would be impossible to open the doors from the outside without the key.

# i

# Tips

- In the event of a crash with airbag deployment all locked doors will be automatically unlocked to give access to the vehicle occupants from the outside.
- If the power locking system should malfunction, you can lock the driver's door using the mechanical key ⇒ page 42.

- If the power locking system should fail, you can still open the fuel tank flap in an emergency ⇒ page 232.
- You are well advised not to keep valuables inside an unattended vehicle, visible or not. Even a properly locked vehicle cannot provide the security of a safe.
- If the LED in the upper edge of the driver's door panel comes on for about 30 seconds after the vehicle is locked, there is a malfunction in the power locking or the anti-theft warning system. Have the malfunction corrected by an authorized Audi dealership or qualified repair facility.

#### Setting power locking

The driver can determine the functions for power locking in the radio or in the MMI\*.

- Select: CAR function button > Central locking. Or
- Select: CAR function button > Car systems\* control button > Vehicle settings > (Central locking)\*.

**Unlocking single door/Unlock doors** - you can specify which doors unlock when you open the vehicle.

- Selecting Off/All and pressing the button on the remote control key unlocks the entire vehicle.
- Selecting On/Driver and pressing the button on the remote control key once unlocks only the driver's door. In vehicles with a convenience key\*, only the door whose handle you pull will unlock. If you press the button twice, the entire vehicle will unlock. If you press the button, the entire vehicle will always lock.

#### Trunk lid/tailgate/Lock exterior trunk handle

- if you select **On**, the rear lid handle locks ⇒ page 43, fig. 35. In this case, the rear lid can be opened with the 🖾 button on the master key ⇒ page 40, fig. 29 or with the 🖾 button in the driver's door ⇒ page 43, fig. 34.

Fold mirrors\* - if you select On, the outside mirrors will fold in automatically when you press the □ button on the remote control key ⇒ page 57.

**Confirmation tone/Tone when locking** - if you select **On**, a tone will sound when you lock the vehicle.

# Unlocking and locking the vehicle with the remote control

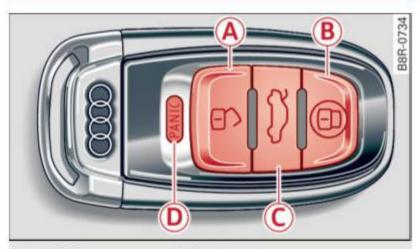


Fig. 29 Remote control: function buttons

Either the driver's door only or the entire vehicle will unlock when the unlock button (A) is pressed once, depending on the settings in the radio or MMI\* Central locking menu ⇒ page 39.

- Press button (a) (A) to unlock the vehicle ⇒ fig. 29.
- Press button (B) to lock the vehicle ⇒ Λ in General description on page 39.
- ▶ Press the button 

  (○) for at least one second to open the rear lid.
- ▶ Push the red PANIC button ((D)) to activate the panic function. The horn sounds and the turn signals flash. Push the red PANIC button again to deactivate the panic function.

If the vehicle is unlocked and no door, the rear lid or the hood is opened within 60 seconds, the vehicle locks itself again automatically. This feature prevents the vehicle from being accidentally left unlocked over a long period of time.

It depends on the settings in the radio or in the MMI\* whether the entire vehicle is unlocked or only certain doors ⇒ page 39. On vehicles with Convenience key\*, the selector lever must be in the P position, otherwise the vehicle cannot be locked.



#### WARNING

Read and follow all WARNINGS  $\Rightarrow \Lambda$  in General description on page 39.



#### **Tips**

- In order to make sure the locking function is working, you should always keep your eye on the vehicle to make sure it is properly locked.
- Do not use the remote control if you are inside the car, otherwise you may unintentionally lock the vehicle, and then you would set off the anti-theft alarm when you try to start the engine or open a door. In case this happens anyhow, push the unlock button ①.
- Use the panic function only if you are in an emergency situation.

# Locking and unlocking with Convenience key

Applies to vehicles: with Convenience key

The doors and the rear lid can be unlocked and locked without operating the master key.

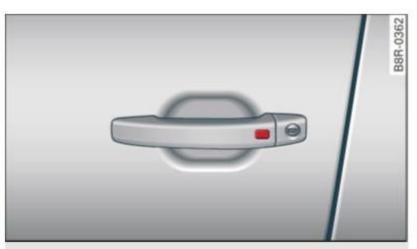


Fig. 30 Door handle: Locking the vehicle

#### Unlocking vehicle

- Take hold of the door handle. The door is unlocked automatically.
- ▶ Pull the handle to open the door.

#### Locking vehicle

- Move the selector lever to the P position (automatic transmission), otherwise the vehicle cannot be locked.
- ► Touch the sensor at the door handle
  ⇒ fig. 30 to lock the vehicle ⇒ in General description on page 39. Do not reach inside the door handle.

The vehicle can be locked and unlocked at any door. It depends on the settings in the radio or in the MMI\* whether the entire vehicle is unlocked or one of the doors ⇒ page 39. The master key must be within a range of about 5 feet (1.5 meters) from the appropriate door or the rear lid. It makes no difference whether the master key is in your jacket pocket or in your brief case.

If you grip the door handle while locking, this can adversely affect the locking function.

It is not possible to re-open the door for a brief period directly after closing it. This allows you to ensure that the doors are properly locked.



#### WARNING

Read and follow all WARNINGS  $\Rightarrow \land \land$  in General description on page 39.



#### **Tips**

If your vehicle has been standing for an extended period, please note the following:

- The proximity sensors are deactivated after a few days to save power. You then have to pull on the door handle once to unlock the vehicle and a second time to open the vehicle.
- To prevent the battery from being discharged and to preserve your vehicle's ability to start for as long as possible, the energy management system gradually switches off unnecessary convenience functions. It is possible that you will not be able to unlock your vehicle using these convenience functions.

 For Declaration of Compliance to United States FCC and Industry Canada regulations ⇒ page 298.

#### Operating locks with the mechanical key

In the event of a failure of the power locking system, the driver's door can locked and unlocked with the mechanical key at the lock cylinder.

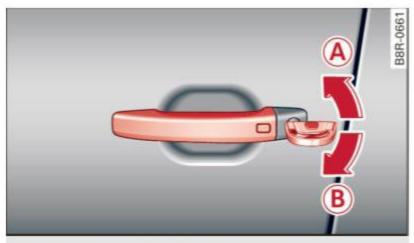


Fig. 31 Key turns for opening and closing

#### To unlock the vehicle

- Insert the mechanical key into the lock of the driver's door.
- ► Turn the mechanical key to position (A)
  ⇒ fig. 31.

#### To lock the vehicle

- Move the selector lever to the P position (automatic transmission).
- Close all windows and doors properly.

If the power locking system fails, there is emergency locking for the passenger's door and the rear doors ⇒ page 42.



#### WARNING

Read and follow all WARNINGS  $\Rightarrow \Lambda$  in General description on page 39.



#### Tips

 After the ignition is switched on, the power locking system switch and the unlocking button for the rear lid 

 in the door are enabled.

# Locking and unlocking the vehicle from inside



Fig. 32 Driver's door: power locking switch

- Press the button to unlock the vehicle ⇒ fig. 32.
- Press the button 

  to lock the vehicle 

  ∧.

You will find a power locking switch in each door. You can **lock** and **unlock** the vehicle using the switches in the driver's or passenger's door ⇒ fig. 32. You can only **lock** the vehicle using the switches in the rear doors. If you lock the vehicle using the power locking switch, please note the following:

- You cannot open the doors or the rear lid from the *outside* (increased security, for example when you are stopped at a red light).
- The diodes in the power locking switches illuminate when all the doors are closed and locked.
- Front doors: you can unlock and open the doors from the inside by pulling on the door handle.
- Rear doors: pull the door handle once to release the lock. Pull the handle again to open the door.
- If you have a crash and the airbag is activated, the doors automatically unlock.

# ♠ WARNING

- The power locking switch works with the ignition off and automatically locks the entire vehicle when it is actuated.
- On a vehicle locked from the outside the power locking system switch is inoperative.
- Locked doors make it more difficult for emergency workers to get into the vehi-

cle, which puts lives at risk. Do not leave anyone behind in the vehicle, especially children.



#### Tips

Your vehicle is locked automatically at a speed of 9 mph (15 km/h) (Auto locking) ⇒ page 38. You can unlock the vehicle again using the opening function in the power locking system switch.

#### **Emergency locking of the doors**

Each door must be locked separately if the power locking system fails.



Fig. 33 Door: Emergency locking

An emergency lock is located on the front end of the passenger's door and the rear doors (only visible when door is open).

- ► Take the mechanical key out of the master key ⇒ page 37.
- ▶ Pull the cover cap out of the opening ⇒ fig. 33.
- ► Insert the key in the inside slot and turn it all the way to the right (right door) or left (left door).

Once the door has been closed, it can no longer be opened from the outside. The door can be opened from the inside by pulling the door handle. If the child safety lock in a rear door is activated, you must first pull the door handle on the inside. Then you can open the door from the outside.

# Opening and closing rear lid



Fig. 34 Driver's door: remote rear lid release



Fig. 35 Position of handle in the rear lid

#### Opening the luggage compartment lid

- Press the button 
   on the master key for at least one second, or
- Pull the release button 

  in the driver's door 

  fig. 34, or
- Press the handle in the luggage compartment lid ⇒ fig. 35.
- ► The luggage compartment lid unlocks.

#### Closing the luggage compartment lid

► Use the inside grip to pull the rear lid down and allow it to drop gently to close it ⇒ .

# $\Lambda$

#### WARNING

- After closing the rear lid, always pull up on it to make sure that it is properly closed. Otherwise it could open suddenly when the vehicle is moving.
- To help prevent poisonous exhaust gas from being drawn into the vehicle, always keep the rear lid closed while driving. Never transport objects larger than those which fit completely into the lug-

- gage area, because then the rear lid cannot be fully closed.
- Never leave your vehicle unattended especially with the rear lid left open. A child could crawl into the car through the luggage compartment and pull the lid shut, becoming trapped and unable to get out. To reduce the risk of personal injury, never let children play in or around your vehicle. Always keep the rear lid as well as the vehicle doors closed when not in use.
- Always ensure that no one is within range of the rear lid when it is moving, in particular close to the hinges - fingers or hands can be pinched.



#### Tips

When the vehicle is locked, the luggage compartment lid can be unlocked separately by pressing the button  $\Leftrightarrow$  on the master key. When the luggage compartment lid is closed again, it locks automatically.

# Automatic rear lid/ trunk lid operation

Applies to vehicles: with automatic rear lid/trunk lid operation

The trunk lid can be opened and closed automatically.



Fig. 36 Driver's door: Unlocking the rear lid



Fig. 37 Locking switch in the rear lid

#### Opening the luggage compartment lid

- Pull the release button 

  in the driver's door 

  fig. 36, or
- Press the handle in the luggage compartment lid ⇒ page 43, fig. 35.

#### Closing the luggage compartment lid

Press the button in the luggage compartment lid ⇒ fig. 37. The lid will automatically close and lock ⇒ .

# Setting the luggage compartment lid open position

- Bring the luggage compartment lid into the desired open position. The position can be stored at only one specific height.
- Press and hold the ⇒ fig. 37 button for at least four seconds until the lights blink to store the desired open position.

- Push the luggage compartment lid by hand against the resistance if you want to set a higher open position.
- Press and hold the ⇒ fig. 37 button again for at least four seconds and this will store the new open position.

#### Opening will be stopped immediately when:

- You press the 
   ⇔ button on the remote key
  for at least of one second, or
- press the unlock button 
   ⇔ in the driver door, or
- press the lock button the in the luggage compartment lid, or
- push the handle in the luggage compartment lid, or
- when something blocks the rear lid or makes it difficult for the lid to move.

By pressing one of the button  $\Leftrightarrow$  repeatedly, you can stop or continue the opening process. The pressing the lock button or the handle repeatedly, you can open/stop the lid  $\Rightarrow \land$ .

#### Opening will be stopped immediately when:

- press the lock button the in the luggage compartment lid, or
- push the handle in the luggage compartment lid, or
- when something blocks the rear lid or makes it difficult for the lid to move.

The pressing the lock button or the handle repeatedly, you can open/stop the lid  $\Rightarrow \triangle$ .

You can manually stop the automatic opening/closing of the luggage compartment lid. In this situation, the lid can be manually opened. Press down on the lid and the automatic closing will resume once again.



#### WARNING

 Never close the rear lid inattentively or without checking first. Although the closing force of the rear lid is limited, you can still seriously injure yourself or others.

- Always ensure that no one is within range of the rear lid when it is moving, in particular close to the hinges and the upper and lower edges - fingers or hands can be pinched.
- To help prevent poisonous exhaust gas from being drawn into the vehicle, always keep the rear lid closed while driving. Never transport objects larger than those which fit completely into the luggage area, because then the rear lid cannot be fully closed.
- Never leave your vehicle unattended especially with the rear lid left open. A child could crawl into the car through the luggage compartment and pull the lid shut, becoming trapped and unable to get out. To reduce the risk of personal injury, never let children play in or around your vehicle. Always keep the rear lid as well as the vehicle doors closed when not in use.
- If there is a luggage rack or bicycle rack mounted on the rear lid, it may not be able to open completely or an opened rear lid may close by itself because of the added weight. So the open rear lid must be supported or the weight must be removed from the luggage rack first.

# i Tips

- As soon as the electrical connection to the trailer socket is completed on vehicles with a factory installed towing hitch, or a trailer hitch that was installed later according to factory specifications, the automatic rear lid function can only be operated via the handle in the rear lid.
- If the vehicle battery charge drops below a certain level, you can still open or close the rear lid manually, however, you will need to apply more force to close it.
- If the rear lid on a locked vehicle is unlocked with the middle button 
   on the remote key, the rear lid is automatically locked again immediately after closing.
   This is indicated by the turn signals blinking.

- The following applies to vehicles equipped with the Convenience key\* feature: if the remote control key is left in the luggage compartment, luggage compartment will automatically unlock itself after you lock the vehicle. This prevents you from unintentionally locking your key in the luggage compartment.

# Emergency unlocking of the luggage compartment lid

The luggage compartment lid can be released in an emergency from the inside.

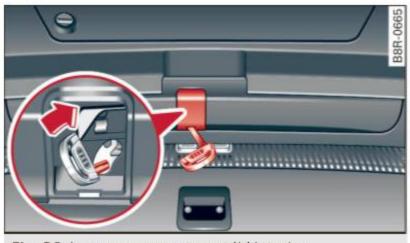


Fig. 38 Luggage compartment lid interior

The luggage compartment lid can be released in an emergency from inside the luggage compartment.

- ► Remove the cover from the luggage compartment lid.
- Press the lever in the direction of the arrow until the luggage compartment lid releases.

# Child safety locks

#### Child safety locks in the rear doors

The child safety locks  $\uparrow$  prevent the rear doors from opening from the inside.



Fig. 39 Child safety locks on the rear doors

The rear doors are equipped with child safety locks. The lock is only visible when the door is open. Take the mechanical key out of the master key ⇒ page 37.

#### Switching the child safety locks on

► Turn the key in the direction of the arrow ⇒ fig. 39.

#### Switching the child safety locks off

► Turn the key in the opposite direction of the arrow .

When the child safety locks are activated, the inside door handles do not work and the doors can only be opened from the outside.

#### Power windows

#### Controls

The driver can control all power windows.

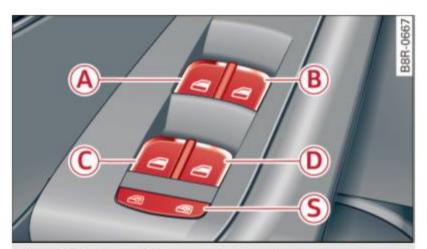


Fig. 40 Section of the driver's door: Controls

All power window switches are provided with a **two-position function**:

#### Opening the windows

- Press the switch to the first stop and hold it until the window reaches the desired position.
- Press the switch briefly to the second stop to automatically open the window.

#### Closing the windows

- Pull the switch to the first stop and hold it until the window reaches the desired position.
- Pull the switch briefly to the second stop to automatically close the window.

#### Power window switches

- (A) Driver's door
- B Passenger's door
- C Left rear door
- Right rear door
- Safety button

#### Child safety locks

When the safety button  $\bigcirc$   $\Rightarrow$  fig. 40 is pressed, the  $\bigcirc$  symbol in the button lights up. The power window switches in the rear doors are switched off.

# **WARNING**

- When you leave your vehicle even if only briefly always remove the ignition key. This applies particularly when children remain in the vehicle. Otherwise the children could start the engine or operate electrical equipment (e.g. power windows). The power windows are functional until the driver's door or passenger's door has been opened.
- Pay close attention when closing the windows to prevent pinching of hands or limbs.
- When locking the vehicle from outside, the vehicle must be unoccupied since the windows can no longer be opened in an emergency.



**Tips** 

After the ignition has been switched off, the windows can still be opened or closed for about 10 minutes. The power windows are not switched off until the driver's door or passenger's door has been opened.

#### Convenience opening/closing

The windows and the Panoramic sliding sunroof\* can be opened and closed with the mechanical key or the emergency key.

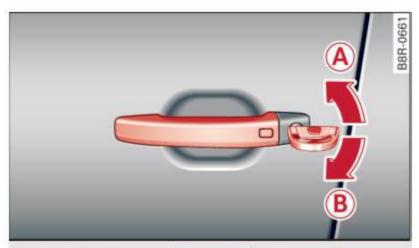


Fig. 41 Key turns for opening and closing

#### Convenience opening feature

- ► Use the emergency key or pull the mechanical key out of the master key ⇒ page 37.
- Insert the key into the lock of the driver's door.
- Turn the key to position ⇒ fig. 41 (A) until all the windows have reached the desired position and the Panoramic sliding sunroof\* is tilted.

#### Convenience closing feature

- Use the emergency key or pull the mechanical key out of the master key ⇒ page 37.
- Turn the key in the lock of the driver's door to the lock position <sup>B</sup> until the windows and the Panoramic sliding sunroof\* are closed ⇒ Λ.

When you open or close the Panoramic sliding sunroof\*, the power sunshade will also open or close.

### WARNING

- Never close the windows and the Panoramic sliding sunroof\* inattentively and without checking - there is risk of injury.
- You must always watch when the windows are being raised so that no one can be trapped. If you release the key, the closing action is immediately canceled.

# Correcting window regulator malfunction

After disconnecting the vehicle battery, the one-touch up and down feature must be activated again.

- Pull and hold the power window switch until the window is completely closed.
- Release the switch.
- Pull the switch again for one second. The automatic closing/opening is now reactivated.

# Panoramic sliding sunroof

#### Operation

Applies to vehicles: with Panoramic sliding sunroof



**Fig. 42** Section from headliner: Knob for Panoramic sliding sunroof

#### Tilting

- ► The sunroof can be tilted or closed only in switch position ① ⇒ fig. 42
- ► To tilt it, briefly press the switch ⇒ fig. 42.
- To close it, briefly pull the switch ⇒ Λ.

► To set an intermediate position, press/pull the switch until the sunroof reaches the desired position.

#### Opening

- ➤ To move the sunroof to the position for reduced wind noise, turn the switch to position (1) until resistance can be felt.
- ➤ To open the sunroof completely, turn and hold the switch against the resistance in position ②.
- To close the sunroof, turn the switch to position (a) ⇒ .
- Turn the switch to the desired position to select an intermediate position.

#### Opening and closing the sunshade

- ➤ To automatically open the sunshade completely, briefly press the switch ③ in the desired arrow direction.
- To stop the sunshade in an intermediate position, press the switch again, or
- Press and hold the switch in the desired arrow direction.
- Release the switch when sunshade is at desired position.

After the ignition is switched off, you can still operate the Panoramic sliding sunroof for about 10 minutes. As soon as the driver's or passenger's door is opened, the switch is inoperative.

The power sunshade can also be closed when the Panoramic sliding sunroof is open.



#### WARNING

Pay careful attention when closing the Panoramic sliding sunroof - otherwise serious injury could result! For this reason, always remove the ignition key when leaving the vehicle.



#### Note

Always close your Panoramic sliding sunroof when leaving your vehicle. Sudden rain can cause damage to the interior equipment of your vehicle, particularly the electronic equipment.



#### **Tips**

Information regarding convenience opening/closing  $\Rightarrow$  page 47.

# Emergency closing of the Panoramic sliding sunroof

Applies to vehicles: with Panoramic sliding sunroof

If the Panoramic sliding sunroof detects an object in its path when it is closing, it will open again automatically. In this case, you can close the roof with the power emergency closing function.

 Within five seconds after the sunroof opens automatically, pull the switch until the roof closes.

#### Clear vision

# Lights

#### Switching the lights on and off



Fig. 43 Instrument panel: light switch

# Switching on AUTO - Automatic headlight controls

► Turn the light switch to **AUTO** ⇒ fig. 43.

#### Switching on the side marker lights

► Turn the light switch to ୬.ፍ.

#### Switching on low beams

► Turn the light switch to 

O.

#### Switching off the lights

► Turn the light switch to **O**.

The low beams only illuminate with the ignition turned on.

With the side marker lights or headlights switched on, the symbol next to the light switch illuminates ୬.€.

#### AUTO - Automatic headlight control

With the switch in the **AUTO** position, the low beams are switched on automatically depending on the ambient light, for example in a tunnel, at dusk and when it is raining or snowing. When the low beams are switched on, the symbol comes on. The low beams remain switched on regardless of the ambient light when you turn on the fog lights.

When you turn off the ignition, the low beams are automatically switched off.

With automatic headlight control, you also have the high-beam function available. How-

ever, if you have not switched high beams back to low beams while driving with automatic headlight control, only the low beams come on the next time you turn on automatic headlight control. In order to return to high beams again, you first have to pull the high beam lever back to the normal position and then push the lever forward.

#### Light sensor malfunction

In the event of a light sensor malfunction, the driver is notified in the instrument cluster display:

# Automatic headlights / automatic wipers defective

For safety reasons, the low beams are turned on permanently with the switch in **AUTO**. However, you can continue to turn the lights on and off using the light switch. Have the light sensor checked as soon as possible at an authorized Audi dealer or other qualified workshop.



#### WARNING

- Automatic headlights are only intended to assist the driver. They do not relieve the driver of his responsibility to check the headlights and to turn them on manually according to the current light and visibility conditions. For example, fog cannot be detected by the light sensors. So always switch on the headlights 

  Output

  Under these weather conditions and when driving in the dark.
- Crashes can happen when you cannot see the road ahead and when you cannot be seen by other motorists. Always turn on the headlights so that you can see ahead and so that others can see your car from the back.
- Please obey all laws when using the lighting systems described here.



#### Tips

 The light sensor for headlight control is located in the rear view mirror mount.
 You should therefore not apply any

- stickers to the windshield in this area in order to prevent malfunctions or failures.
- Some exterior lighting functions can be adjusted ⇒ page 50.
- When you remove your key from the ignition while the vehicle's lights are turned on, a buzzer sounds as long as the driver's door is open.
- In cool or damp weather, the inside of the headlights, turn signals and tail lights can fog over due to the temperature difference between the inside and outside. They will clear shortly after switching them on. This does not affect the service life of the lighting.
- In the event of a light sensor malfunction, the driver is notified in the instrument cluster display ⇒ page 33.

### Fog lights

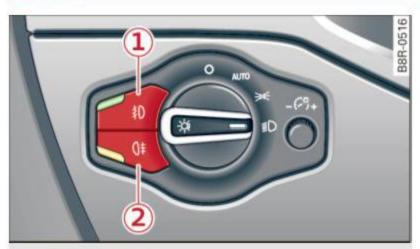


Fig. 44 Fog light switch

- ► To turn on the fog lights \$\mathcal{1}\$, press button (1)
  \$\int fig. 44\$.
- ► To turn on the rear fog lights ()‡, press button (2).

#### Fog lights

The side marker lights or low beams must be switched on. When the fog lights are switched on, the green check light at the edge of the switch comes on.

If automatic driving light control AUTO is activated, the low beams are switched on when the fog lights are turned on.

#### Rear fog lights

Low beams or side marker lights with fog lights must be turned on.

When the rear fog lights are turned on, the yellow check light at the edge of the switch comes on.



#### Note

The rear fog lights should only be turned on in accordance with traffic regulation, as the lights are bright for following traffic.

### Adjusting exterior lighting

The functions are selected in the radio or in the MMI\*.

- Select: CAR function button > Exterior lighting. Or
- Select: CAR function button > Car systems\* control button > Vehicle settings > Exterior lighting.

#### Coming home (Lights when leaving car), Leaving home (Lights when unlocking car)

The coming home function illuminates the area outside the vehicle when you turn the ignition off and open the driver's door. Depending on vehicle equipment, the function can be switched on and off or the length of time the lights remain on\* can be adjusted.

The leaving home illuminates the area outside the vehicle when you unlock the vehicle. This function can be switched on and off.

The Coming home and Leaving home functions only operate when it is dark and the light switch is in the **AUTO** position.

#### Auto headlights

When the light switch is in the AUTO

⇒ page 49 position, the switch-on point of the lights can be changed in the automatic driving light function.

#### Daytime running lights

**USA models:** You can switch the daytime running lights **On** and **Off**.

**Canada models:** The function cannot be turned off. It is activated automatically each time the ignition is switched on.

#### Travel mode (Canada models)\*

The headlight beam is asymmetrical. This provides stronger illumination on the side of the road on which you are driving. If you are driving in a country that drives on the opposite side of the road from your own country, this will cause glare for oncoming drivers. To prevent glare:

- Travel mode must be selected in vehicles with Xenon headlights\*.
- In vehicles with halogen headlights, certain areas of the headlight lenses must be covered with waterproof adhesive covers that prevent light from passing through. For more information, please see your authorized Audi dealer or authorized repair facility.



#### **Tips**

When travel mode\* is activated, a display in the driver information system indicates this each time you switch the ignition on.

#### Instrument lighting

The basic brightness of the illumination for the instruments, the center console and the display can be adjusted.



Fig. 45 Instrument lighting

- Press the knob to release it.
- Rotating the knob to the right "+" will increase the basic brightness when it is dark.
- Rotating the knob to the left "-" will decrease the basic brightness when it is dark.

 Pressing the knob will prevent unintentional changes.



#### Tips

The illumination for the instrument cluster lights up whenever you switch on the ignition with the vehicle headlights off. As the daylight fades, the instrument cluster illumination likewise dims automatically and will go out completely when the outside light is very low. This feature is meant to remind you to switch on the headlights when outside light conditions become poor.

#### Adaptive light

Applies to vehicles: with adaptive light

When driving around bends, the relevant area of the road is better illuminated.

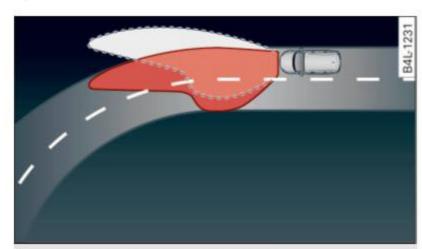


Fig. 46 Adaptive light when driving

#### Switching on adaptive light

Turn the light switch to AUTO ⇒ page 49, fig. 43.

The adaptive light system is a combination of the dynamic and the static cornering lights. With the lights switched on, the dynamic cornering light adapts to driving on curves. This is dependent upon the vehicle speed and steering angle. This provides better lighting through the curve. The system operates in a speed range from approximately 6 mph (10 km/h) to 68 mph (110 km/h).

The static cornering light switches on at speeds of up to approximately 25 mph

(40 km/h) when a certain steering wheel angle is reached or when a turn signal is activated. The area to the side of the vehicle is illuminated better when turning.

#### **Emergency flashers**

The emergency flashers makes other motorists aware that you or your vehicle are in an emergency situation.



Fig. 47 Emergency flasher switch

Press the switch △ ⇒ fig. 47 to turn the emergency flashers on or off.

The emergency flashers will turn on automatically if you are in an accident where the airbag has deployed.



#### **Tips**

You should turn on the emergency flashers when:

- you are the last vehicle standing in a traffic jam so that any other vehicles coming can see you, or when
- your vehicle has broken down or you are in an emergency situation, or when
- your vehicle is being towed by a tow truck or if you are towing another vehicle behind you.

#### Turn signal and high beam lever

The lever on the left side of the steering column is used to operate the turn signals and the high beam as well as the headlight flasher.

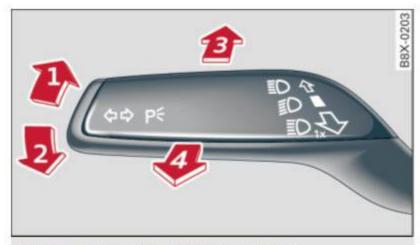


Fig. 48 Turn signal and high beam lever

The turn signal and high beam lever has the following functions:

#### Turn signals <□ <>

Lift the lever up all the way ⇒ fig. 48 1 to use the right turn signals, or push the lever down all the way 2 to use the left turn signals.

#### Auto-blink

- Move the lever (up or down) just to the point of resistance to use the turn signals for as long as you need them, for example when changing lanes.
- Move the lever (up or down) just to the point of resistance and then release it right away to make the turn signals blink three times. You can use this feature for example when changing lanes on highways.

#### High beam ■D

- Push the lever forward 3 to switch on the high beam.
- Pull the lever back towards you to switch off the high beam.

### Headlight flasher ≣○

Pull the lever toward the steering wheel 4
 to use the headlight flasher.

53

#### Notes on these features

- The turn signals only work with the ignition turned on. The indicator lights or in the instrument cluster ⇒ page 14 also blink.
- After you have turned a corner, the turn signal switches off automatically.
- The high beam works only when the headlights are on. The indicator light in the instrument cluster illuminates when the high beams are on.
- The headlight flasher works only as long as you hold the lever - even if there are no lights turned on. The indicator light in the instrument cluster illuminates when you use the headlight flasher.



#### WARNING

Do not use the high beam or headlight flasher if you know that these could blind oncoming traffic.

# Interior lights

#### Front interior lights

The front interior lights also contain reading lights for the driver and passenger.



Fig. 49 Headliner: Front interior/reading lights

The rocker switch  $\bigcirc$   $\Rightarrow$  *fig.* 49 for operating the interior lighting has the following functions:

#### Door contact switch

Place the switch (A) in the middle position.

#### Interior light switched on

► Place the switch (A) in position I.

#### Interior light switched off

Place the switch (A) in position 0.

#### Front reading lights 🐨

Press one of the switches (B) to turn the right or left reading light on or off.

With the door contact switch turned on, the interior lights turn on as soon as you unlock the vehicle or open the doors. The lighting is also turned on when the ignition key is removed. The lights go out about 30 seconds after the doors are closed. When the vehicle is locked or when the ignition is turned on, the interior lights are turned off.

When a door is open, the interior lights are turned off after about 10 minutes to prevent draining of the battery.

The brightness of the lights is controlled automatically by a dimmer when they are switched on and off.

#### Rear interior lights

There are reading lights in the rear for the passengers.

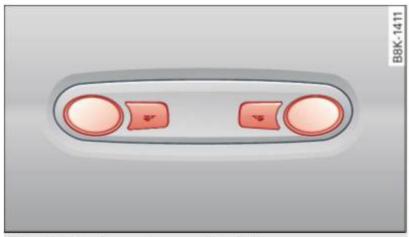


Fig. 50 Headliner: Rear reading lights

The reading lights are switched on and off using the buttons ▼.

Depending on your model, the appearance and the location of the reading lights may be different.

#### Vision

#### Sun visors

Using the sun visors makes driving safer.



Fig. 51 Sun visor

The sun visors for the driver and passenger can be pulled out of their brackets in the center of the vehicle and turned towards the doors ⇒ fig. 51 ①. After the sun visor has been turned to the door, it can be extended\* lengthwise.

#### Vanity mirror

The vanity mirrors on the sun visors are covered. When the lid is opened ②, the mirror light in the headliner turns on automatically. It turns off when the lid is closed and the visor is folded up again.

#### Sun shade

Applies to vehicles: with sun shade



Fig. 52 Sun shade pulled up on a rear window

Pull the shade out and hang it in the bracket on the upper door frame ⇒ fig. 52.

# Wiper and washer system

### Switching the windshield wipers on

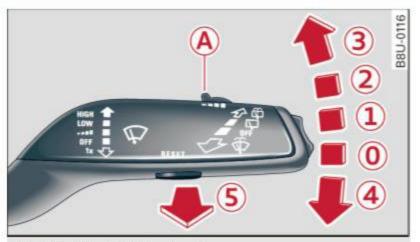


Fig. 53 Windshield wiper lever



Fig. 54 Rear wiper actuation

Move the windshield wiper lever to the corresponding position:

0 - Windshield wiper off

1 - Interval mode. The windshield wiper automatically activates when you drive 2 mph (4 km/h). The higher the sensitivity of the rain sensor is set (switch (A) to the right), the earlier the windshield wipers react to moisture on the windshield. In some models, you can switch rain sensor mode off and switch intermittent mode on in the MMI\*. Select: CAR function button > Car systems\* control button > Driver assist > Rain sensor. In intermittent mode, you can adjust the interval time using the (A) switch.

- 2 Slow wiping
- 3 Fast wiping
- 4 Single wipe
- S Clean the windshield. To eliminate water droplets, the windshield wiper performs one afterwipe operation after several seconds

while driving. You can switch this function off by moving the lever to position (5) within 10 seconds of the afterwipe operation. The afterwipe function is reactivated the next time the ignition is switched on.

The rear wiper automatically switches on when the reverse gear is engaged and the front windshield wipers are on and in operation.

Cleaning the headlights\*. The headlight washer system\* operates only when the headlights are on. If you move the lever to position (5), the headlights are washed in intervals.

- 6 Wipe the rear window. The rear wiper moves about every 4 seconds.
- 7 Clean the rear window. The number of wiping operations depends on how long the lever is held in position 7.



#### WARNING

- The rain sensor is only intended to assist the driver. The driver is still responsible for manually switching the wipers on according to the visibility conditions.
- The windshield may not be treated with water-repelling windshield coating agents. Unfavorable conditions, such as wetness, darkness, low sun, can result in increased glare. Wiper blade chatter is also possible.
- Properly functioning windshield wiper blades are required for a clear view and safe driving.

# 1

#### Note

- In the case of frost, check whether the windshield wiper blades are frozen to the windshield. Switching on the windshield wipers can damage the wiper blades!
- Prior to using a car wash, the windshield wiper system must be switched off (lever in position 0). This helps to prevent unintentional switching on and damage to the windshield wiper system.



#### **Tips**

- The windshield wipers are switched off when the ignition is turned off. Activate the windshield wipers after the ignition is switched back on by moving the windshield wiper lever to any position.
- Worn or dirty windshield wiper blades result in streaking. This can affect the rain sensor function. Check your windshield wiper blades regularly.
- The washer fluid nozzles of the windshield washer system are heated at low temperatures when the ignition is on.
- When stopping temporarily, e.g. at a traffic light, the set speed of the windshield wipers is automatically reduced by one speed.

#### Service position

The windshield wiper blades are replaced in the service position.

- If the wiper blades are not frozen to the windshield, bring the windshield wiper lever to the basic position (0) ⇒ page 54, fig. 53.
- ▶ Select: CAR function button > Windshield wipers > Service position. Or
- ➤ Select: CAR function button > Car systems\* control button > Servicing & checks > Wiper service position. Or
- Switch the ignition off and move the windshield wiper lever to position (4) ⇒ page 54, fig. 53.
- On changing the windshield wiper blades can only be done if you bring the wiper arms to the service position. You will also avoid paint damage to the hood when working on the wipers in this position.
- Off the windshield wipers are moved to their initial position again.



#### Note

Never maneuver your vehicle with the front windshield wiper arms raised since they will automatically be moved back to their basic position above a speed of 3 mph (6 km/h) and can scratch the hood.

# (i)

#### **Tips**

- You can also use the service position, for example, if you want to protect the windshield from icing by using a cover.
- The service position automatically switches to Off when you operate the windshield wiper lever, or speed exceeds 3 mph (6 km/h).

#### Replacing windshield wiper blades

Wiper blades in good condition help keep the windshield clear.

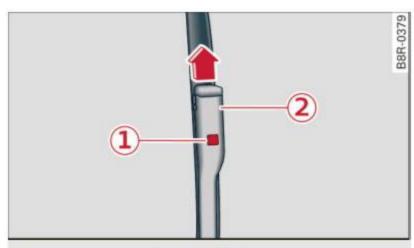


Fig. 55 Removing the wiper blade

#### Removing the wiper blade

- ▶ Bring the windshield wipers to the service position ⇒ page 55.
- Fold the windshield wiper arm away from the windshield.
- Press the locking knob ① ⇒ fig. 55 on the wiper blade. Hold the wiper blade firmly.
- Remove the wiper blade in the direction of the arrow.

#### Attaching the wiper blade

- Insert the new wiper blade into the mount on the wiper arm 2 until you hear it latch into place.
- Place the wiper arm back on the windshield.

# Λ

#### WARNING

 Clean your wiper blades regularly with a windshield washer solution to prevent streaking. If the wiper blades are very dirty, for example with insects, carefully

- clean the wiper blades with a sponge or a soft brush.
- For your safety, you should replace the wiper blades once or twice a year. See your authorized Audi dealer for replacement blades.

# (!)

#### Note

- The windshield wiper blades must only be replaced when in the service position
   ⇒ page 55! Otherwise, you risk damaging the paint on the hood or the windshield wiper motor.
- To help prevent damage to the wiper system, always loosen blades which are frozen to the windshield before operating wipers.
- To help prevent damage to wiper blades, do not use gasoline, kerosene, paint thinner, or other solvents on or near the wiper blades.
- To help prevent damage to the wiper arms or other components, do not attempt to move the wipers by hand.



#### **Tips**

Commercial hot waxes applied by automatic car washes affect the how easily the glass surface can be cleaned.

#### Replacing the rear wiper blade

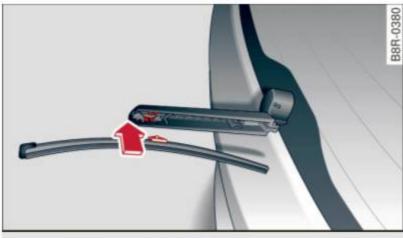


Fig. 56 Rear wiper: Removing the wiper blade

#### Removing the wiper blade

- Fold the windshield wiper arm away from the windshield.
- Pull the wiper blade and holder out of the mount.

57

#### Attaching the wiper blade

- Press the wiper blade holder in the arrow direction ⇒ fig. 56 into the mount.
- Fold the windshield wiper arm back onto the windshield.

# $\Lambda$

#### WARNING

- To prevent streaking, clean the wiper blades regularly with a glass cleaner. In the case of significant contamination, e.g. from insect remains, the wiper blades can be cleaned with a sponge or cloth.
- For safety reasons, the windshield wiper blades should be replaced once or twice each year.

#### Mirrors

#### Adjusting the exterior mirrors

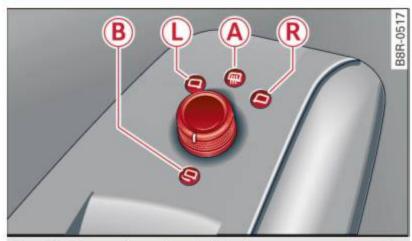


Fig. 57 Forward section of driver's armrest: power mirror controls

#### Adjusting exterior mirrors

- Rotate the knob to the position (driver's exterior mirror) or to the position (passenger's exterior mirror) ⇒ fig. 57.
- Rotate the knob and the mirror so that you have a clear view to the rear.

#### Heated mirrors

Rotate the knob to position (A).

#### Folding both exterior mirrors\*

► Turn the knob to position B.

Depending on the outside temperature, the mirror surfaces are heated until the ignition is

switched off - even if the knob is no longer in position (A).

You are well-advised to fold the exterior mirrors in when maneuvering in tight spaces or when leaving the car parked close to other vehicles.

#### Memory for exterior mirrors\*

On vehicles with memory for the driver's seat, the current setting for the exterior mirrors is automatically stored along with the seat position  $\Rightarrow$  page 63.

# Tilt function for the passenger's mirror\* (only with memory for exterior mirrors)

When the reverse gear is engaged, the mirror surface tilts downward slightly if the setting is for the passenger's mirror (knob in position  $\mathbb{R} \Rightarrow fig. 57$ ). This allows you to see the curb during parallel parking.

The mirror returns to its initial position as soon as reverse gear is disengaged and vehicle speed is above about 9 mph (15 km/h). The mirror also returns to its initial position if the switch is moved to the driver's exterior mirror ① or the ignition is switched off.

If the position of the mirror surface is changed on a tilted mirror, this new position will be automatically assigned to the remote key when the vehicle is taken out of reverse gear.

# (!)

#### Note

- Curved mirror surfaces (convex or spherical\*) increase your field of view. Remember that vehicles or other objects will appear smaller and farther away than when seen in a flat mirror. If you use this mirror to estimate distances of following vehicles when changing lanes, you could estimate incorrectly and cause an accident.
- If the mirror housing is moved unintentionally (for example, while parking your

- vehicle), then you must first fold the mirror electrically. Do not readjust the mirror housing manually. You could damage the motor which controls the mirror.
- If you wash the vehicle in an automatic car wash, you must fold the exterior mirrors in to reduce the risk of damage to the mirrors. Never fold power folding exterior mirrors\* by hand. Only fold them in and out using the power controls.



#### **Tips**

If there should be a malfunction in the electrical system, you can still adjust the exterior mirrors by pressing the edge of the mirror.

#### Dimming the mirrors

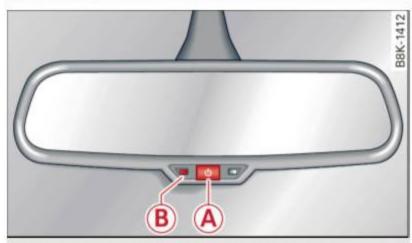


Fig. 58 Automatic dimming rearview mirror\*

#### Manual anti-glare adjustment

 Move the small lever (located on the bottom edge of the mirror) to the rear.

#### Automatically dimming mirrors\*

➤ To dim the rearview mirror and both exterior mirrors\*, press the (A) button. The diode (B) turns on. The rearview and exterior mirrors\* dim automatically when light shines on them, for example from headlights on a vehicle to the rear.



#### WARNING

Electrolyte fluid can leak from automatic dimming mirrors if the glass is broken. Electrolyte fluid can irritate skin, eyes and respiratory system.

- Repeated or prolonged exposure to electrolyte can cause irritation to the respiratory system, especially among people with asthma or other respiratory conditions. Get fresh air immediately by leaving the vehicle or, if that is not possible, open windows and doors all the way.
- If electrolyte gets into the eyes, flush them thoroughly with large amounts of clean water for at least 15 minutes; medical attention is recommended.
- If electrolyte contacts skin, flush affected area with clean water for at least 15 minutes and then wash affected area with soap and water; medical attention is recommended. Thoroughly wash affected clothing and shoes before reuse.
- If swallowed and person is conscious, rinse mouth with water for at least 15 minutes. Do not induce vomiting unless instructed to do so by medical professional. Get medical attention immediately.



#### Note

Liquid electrolyte leaking from broken mirror glass will damage any plastic surfaces it comes in contact with. Clean up spilled electrolyte immediately with clean water and a sponge.



#### **Tips**

- Switching off the dimming function of the inside rear view mirror also deactivates the automatic dimming function of the exterior mirrors\*.
- The automatic dimming mirrors do not dim when the interior lighting is turned on or the reverse gear is selected.
- Automatic dimming for the mirror only operates properly if the light striking the inside mirror is not hindered by other objects.

# Digital compass

#### Activating or deactivating the compass

Applies to vehicles: with digital compass

The direction is displayed on the interior rear view mirror.



Fig. 59 Inside rear view mirror: digital compass activated

To activate or deactivate, hold the button down until the red display appears or disappears.

The digital compass only works with the ignition turned on. The directions are displayed as initials: **N** (North), **NE** (Northeast), **E** (East), **SE** (Southeast), **S** (South), **SW** (Southwest), **W** (West), **NW** (Northwest).



**Tips** 

To avoid inaccurate directions, do not allow any remote controls, electrical systems, or metal parts close to the mirror.

#### Setting the magnetic deflection zone

Applies to vehicles: with digital compass

The correct magnetic deflection zone must be set in order to display the directions correctly.

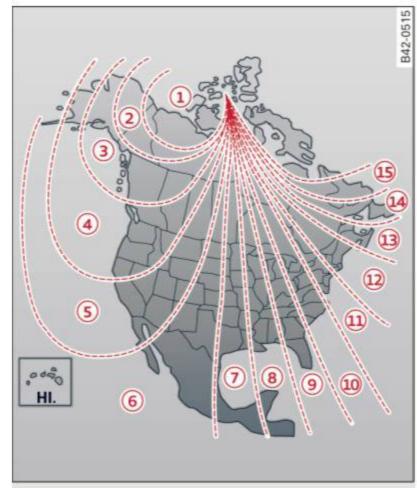


Fig. 60 North America: magnetic deflection zone boundaries

- ► Hold the (A) ⇒ page 59, fig. 59 button down until the number of the set magnetic deflection zone appears on the interior rear view mirror.
- Adjust the magnetic deflection zone by repeatedly pressing on the button. The set mode automatically deactivates after a few seconds.

#### Calibrating the compass

Applies to vehicles: with digital compass

The compass has to be recalibrated if the display is wrong or inaccurate.

- ► Hold the (A) button down until the letter C is displayed on the interior rear view mirror.
- Drive in a circle at a speed of about 6 mph (10 km/h) until a direction is shown on the interior rear view mirror.



# WARNING

The digital compass is to be used as a directional aid only. Even though you may want to look at it while you are driving, you must still pay attention to traffic, road and weather conditions as well as other possible hazards.

# Seats and storage

# General recommendations

# Why is your seat adjustment so important?

The safety belts and the airbag system can only provide maximum protection if the front seats are correctly adjusted.

There are various ways of adjusting the front seats to provide safe and comfortable support for the driver and the front passenger. Adjust your seat properly so that:

- you can easily and quickly reach all the switches and controls in the instrument panel
- your body is properly supported thus reducing physical stress and fatigue
- the safety belts and airbag system can offer maximum protection ⇒ page 157.

In the following sections, you will see exactly how you can best adjust your seats.

There are special regulations and instructions for installing a child safety seat on the front passenger's seat. Always follow the information regarding child safety provided in 

⇒ page 178, Child Safety.



#### WARNING

Incorrect seating position of the driver and all other passengers can result in serious personal injury.

- Always keep your feet on the floor when the vehicle is in motion — never put your feet on top of the instrument panel, out of the window or on top of the seat cushion. This applies especially to the passengers. If your seating position is incorrect, you increase the risk of injury in the case of sudden braking or an accident. If the airbag inflates and the seating position is incorrect, this could result in personal injury or even death.
- It is important for both the driver and front passenger to keep a distance of at

least 10 inches (25 cm) between themselves and the steering wheel and/or instrument panel. If you're sitting any closer than this, the airbag system cannot protect you properly. In addition, the front seats and head restraints must be adjusted to your body height so that they can give you maximum protection.

- Always try to keep as much distance as possible between yourself and the steering wheel or instrument panel.
- Do not adjust the driver's or front passenger's seat while the vehicle is moving.
   Your seat may move unexpectedly, causing sudden loss of vehicle control and personal injury. If you adjust your seat while the vehicle is moving, you are out of position.

#### Driver's seat

The correct seat position is important for safe and relaxed driving.

We recommend that you adjust the driver's seat in the following manner:

- ► Adjust the seat in fore and aft direction so that you can easily push the pedals to the floor while keeping your knees slightly bent ⇒ ⚠ in Why is your seat adjustment so important? on page 61.
- Adjust the seatback so that when you sit with your back against the seatback, you can still grasp the top of the steering wheel.
- Adjust the head restraint so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible ⇒ page 65.



#### WARNING

Never place any objects in the driver's footwell. An object could get into the pedal area and interfere with pedal function. In case of sudden braking or an accident, you would not be able to brake or accelerate.

#### Front passenger's seat

Always move the front passenger seat into the rearmost position.

To avoid contact with the airbag while it is deploying, do not sit any closer to the instrument panel than necessary and always wear the three-point safety belt provided adjusted correctly. We recommend that you adjust the passenger's seat in the following manner:

- Move the front passenger seat into the rearmost position of the fore and aft adjustment range ⇒ in Why is your seat adjustment so important? on page 61.
- Bring the backrest up to an (almost) upright position. Do not ride with the seat reclined.
- Adjust the head restraint so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible ⇒ page 65.
- Place your feet on the floor in front of the passenger's seat.

### Front seats

#### Power seat adjustment

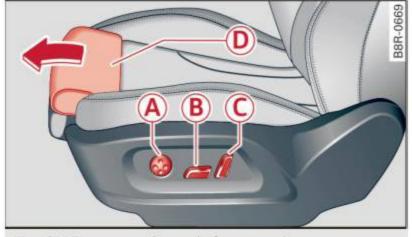


Fig. 61 Front seat: Controls for seat adjustment

#### Controls

- $\bigcirc$  Adjusting the lumbar support: press the button in the corresponding position  $\Rightarrow$   $\triangle$ .
- (B) Moving the seat up/down: press the button up/down. To adjust the front seat cushion, press the front button up/down. To adjust the rear seat cushion, press the rear button up/down ⇒ ▲.

- B Moving the seat forward/back: press the button forward/back  $\Rightarrow$  ∧.
- C Adjusting the backrest angle: press the button forward/back ⇒ Λ.
- D Lengthening/shortening the upper thigh support\*: lift the handle ⇒ ▲.

# 

- Never adjust the driver's or front passenger's seat while the vehicle is moving.
   If you do this while the vehicle is moving, you will be out of position. Always adjust the driver's or front passenger's seat when the vehicle is not moving.
- Be careful when adjusting the seat height. Check to see that no one is in the way, or serious injury could result!
- Because the seats can be electrically adjusted with the ignition off or with the ignition key removed, never leave children unattended in the vehicle. Unsupervised use of the electric seat adjustments may cause serious injury.
- To reduce the risk of injury in the case of sudden braking or accident, front passengers must never ride in a moving vehicle with the backrest reclined. Safety belts and the airbag system only offer maximum protection when the backrest is upright and the safety belts are properly positioned on the body. The more the backrest is reclined, the greater the risk of personal injury from an incorrect seating position and improperly positioned safety belts.

#### Seat memory

#### Memory for driver's seat

Applies to vehicles: with seat memory

The seat adjustment settings for two drivers can be stored using the memory buttons in the driver's door.



Fig. 62 Driver's door: Seat memory

In addition to the setting for the driver's seat, the exterior rear view mirror setting can be stored and recalled through seat memory if the vehicle is properly equipped.

#### Storing and recalling settings

With the help of the memory buttons 1 and 2  $\Rightarrow$  fig. 62 the settings for two different drivers can be stored and recalled  $\Rightarrow$  page 63.

The current settings are also automatically assigned to the remote control key being used when the vehicle is locked. When the vehicle is unlocked, the settings assigned to the remote control key being used are automatically recalled.

#### Turning seat memory on and off

If the OFF switch is depressed, the seat memory is inoperative. When the Memory function is off, the LED in the button lights up.

All the stored settings are retained. We recommend using the OFF switch and deactivating the seat memory if the vehicle is only going to be used *temporarily* by a driver whose settings are not going to be stored.

#### Storing and recalling settings

Applies to vehicles: with seat memory

#### Storing settings

- Adjust the driver's seat.
- Adjust the two exterior mirrors.
- ► Press the SET button. The light in the button will come on.
- Now press a memory button (1 or 2). If the storing procedure is correct, a confirmation tone will sound.

#### Recalling settings

- If the driver's door is open, tap the corresponding memory button briefly.
- If the driver's door is closed, press the appropriate memory button until the stored position is reached.

Successful storage is confirmed audibly and by the light in the SET button illuminating ⇒ page 63, fig. 62.

When the vehicle is **locked**, the current settings are stored and assigned to the remote control key. But the settings stored on memory buttons 1 to 2 are not deleted. They can be recalled at any time. When the vehicle is **unlocked**, the settings assigned to the remote control key are restored.

If your vehicle is driven by other persons using your remote control key, you should save your individual seat position on one of the memory buttons. You can recall your settings again simply and conveniently by pressing the corresponding memory button. When the vehicle is locked, these settings are automatically re-assigned to the remote control key and stored.



#### WARNING

- For safety reasons, the seat setting can only be recalled when the vehicle is stationary - otherwise you risk having an accident.
- In an emergency the recall procedure can be cancelled by pressing the OFF switch or by tapping of the memory buttons.

#### Activating remote control key memory

Applies to vehicles: with seat memory

To assign the driver's seat settings to the remote control key when locking the vehicle, the function must be activated in the radio or MMI\*.

- Select: CAR function button > Seat adjustment > Driver's seat > Key mem. profile > On. Or
- Select: CAR function button > Car systems\* control button > Vehicle settings >
   Seats > Driver's seat > Remote control key > On.



#### **Tips**

If you do not want another driver's settings to be assigned to the remote control key, switch off the memory function using the radio or MMI\* or the OFF button ⇒ page 63.

#### Rear seats

#### **General information**

Safe transportation of passengers on the rear seats requires proper safety precautions.

All passengers on the rear seats must be seated in compliance with the safety guidelines explained in ⇒ page 149 and ⇒ page 157. The correct seating position is critical for the safety of front and rear seat passengers alike ⇒ page 142.

# $\Lambda$

#### WARNING

- Occupants in the front and rear seats must always be properly restrained.
- Do not let anyone ride in the vehicle without the head restraints provided.
   Head restraints help to reduce injuries.
- Loose items inside the passenger compartment, can fly forward in a crash or sudden maneuver and injure occupants.
   Always store articles in the luggage compartment and use the fastening eyes, especially when the rear seatbacks have been folded down.

Read and heed all WARNINGS
 ⇒ page 142, Proper seating positions
 for passengers in rear seats.

#### Adjusting seat

The fore-and-aft adjustment of the seat cushion and the seatback angle can be adjusted.



Fig. 63 Adjusting seatback angle

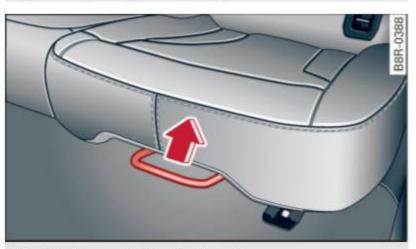


Fig. 64 Fore-and-aft adjustment

#### Adjusting seatback angle

- ▶ Pull the lever up and push the seatback toward the rear to the desired position
  ⇒ fig. 63. Release the lever.
- ▶ Pull the lever up so that the seatback pivots forward. Release the lever and push the seatback to the rear to return the seatback to the normal position.

#### Fore-and-aft adjustment

- Pull the handle up and push the seat forward or back ⇒ fig. 64.
- Release the handle and continue to push the seat until the seat latch engages.




#### WARNING

 For safety reasons, the seat must only be adjusted when the vehicle is stationary danger of accident! Exercise caution when adjusting the seat.
 Adjusting the seat without checking or paying attention can pinch fingers or limbs - danger of injury!

#### Head restraints

#### Front head restraints

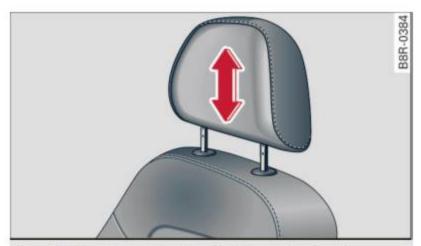

**Fig. 65** Front seats head restraints: adjusting the height

The head restraints on the *front* seats can be adjusted to provide safe support to head and neck at the optimum height. When optimally adjusted, the top of the restraint should be level with the top of the head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible ⇒ page 142, Proper adjustment of head restraints.

► Grasp the sides of the head restraint with both hands and slide it upward/downward until you feel it click into place ⇒ fig. 65.

Refer to ⇒ page 142, Proper adjustment of head restraints for guidelines on how to adjust the height of the front head restraints to suit the occupant's body size.

# Λ

#### WARNING

- Driving without head restraints or with head restraints that are not properly adjusted increases the risk of serious or fatal neck injury dramatically.
- Read and heed all WARNINGS
   ⇒ page 142.



#### **Tips**

Correctly adjusted head restraints and safety belts are an extremely effective combination of safety features.

#### Rear head restraints

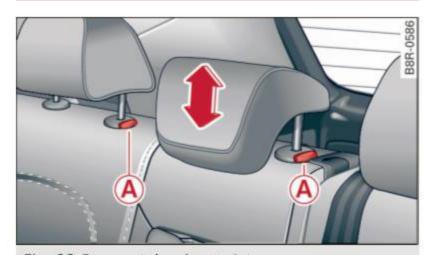


Fig. 66 Rear seat: head restraints

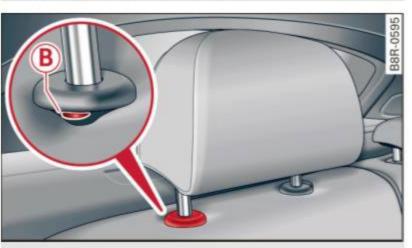


Fig. 67 Rear seat: outer head restraint

If there is a passenger on the rear center seating position, slide the center head restraint upward at least to the next notch  $\Rightarrow \bigwedge$ .

#### Adjusting the head restraints

- To move the head restraint up, hold it at the sides with both hands and slide it upward until you feel it click into place.
- ► To move the head restraint down, press the button (A) and slide the head restraint downward.

#### Removing the outer head restraints

- ► Fold the backrest forward ⇒ page 67.
- Move the head restraint upward as far as it can go.
- Press the release B ⇒ fig. 67 with the mechanical key ⇒ page 37 and the button A ⇒ fig. 66. Pull the head restraint out of the backrest at the same time ⇒ Λ.

#### Installing the outer head restraints

- Slide the posts on the head restraint down into the guides until you feel the posts click into place.
- Press the button (A) ⇒ fig. 66 and slide the head restraint all the way down. You should not be able to pull the head restraint out of the backrest.

#### Removing the center head restraint

- Move the head restraint upward as far as it can go.
- Press the button (A) ⇒ fig. 66 and pull the head restraint out of the backrest  $\Rightarrow \Lambda$ .

#### Installing the center head restraint

- Slide the posts on the head restraint down into the guides until you feel the posts click into place.
- ▶ Press the button (A) ⇒ fig. 66 and slide the head restraint all the way down. You should not be able to pull the head restraint out of the backrest.

So that the driver can have a better view to the rear, the head restraints should be pushed down completely when the rear seats are not occupied.



#### WARNING

- Only remove the rear seat head restraints when necessary in order to install a child seat. Install the head restraint again immediately once the child seat is removed. Driving without head restraints or with head restraints that are not properly adjusted increases the risk of serious or fatal neck injury dramatically.
- Read and heed all WARNINGS ⇒ page 142.



Correctly adjusted head restraints and safety belts are an extremely effective combination of safety features.

#### Center armrest

The armrest is adjustable in several stages and can be moved forward and back.



Fig. 68 Armrest between driver's and passenger's seat

#### Adjusting the armrest

- To adjust the armrest angle, pivot the armrest fully down.
- Lift the armrest detent by detent until the desired position is reached.

#### Moving the armrest

 You can move the armrest forward or back ⇒ fig. 68.

There is a storage compartment under the armrest.

# Luggage compartment

#### **Expanding the passenger compartment**

The rear seat backrests can be folded forward separately or together.

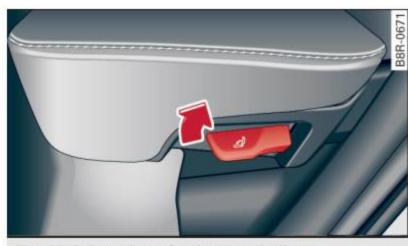


Fig. 69 Release lever for the outer backrest

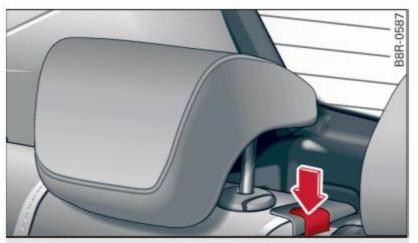


Fig. 70 Release button for the center backrest

#### Folding the backrest forward

- Pull the lever up ⇒ fig. 69. The backrest will swing forward.
- Let the backrest latch into the lowest position.

#### Raising the backrest

#### Folding the center backrest forward

- Press the release button 

  fig. 70. The red marking on the release button will be visible.
- ► Fold the backrest forward.

#### Folding the center backrest up

The center backrest can be folded down separately. This makes is possible to transport long objects (for example, skis) inside the vehicle.



#### WARNING

- The backrest must always be securely latched so that the safety belt of the center seating position can work properly to help protect the occupant.
- The backrest must be securely latched in position so that no items contained in the luggage compartment can slide forward upon sudden braking.
- Always check whether the latch is fully engaged by pulling the seatback forward.
- Never allow safety belts to become damaged by being caught in door or seat hardware.
- Torn or frayed safety belts can tear and damaged belt hardware can break in a crash. Inspect the belts periodically.
   Belts showing damage to webbing, bindings, buckles, or retractors must be replaced.



#### WARNING

Always read and heed WARNINGS  $\Rightarrow \bigwedge$  in Loading the luggage compartment on page 145.

# 1

#### Note

- If you move the front seat back when the rear seat backrest is folded forward, you could damage the head restraints on the rear seat.
- Slide the belt guide on the outside safety belt all the way up before folding the backrest back forward. Make sure the seat belt is not pinched or damaged when the rear seat backrest if folded back.

#### Expanding the luggage compartment

The rear seat backrests can be folded forward separately or together.

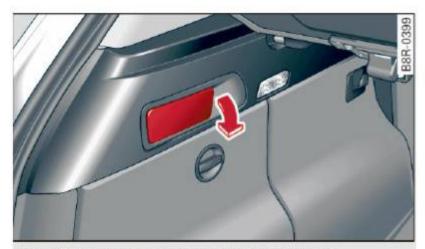


Fig. 71 Luggage compartment: release lever

#### Folding the backrest forward

- Pull the release lever ⇒ fig. 71 in direction of the arrow. The backrest will swing forward.
- Let the backrest latch into the lowest position.

#### Folding the backrest up

Pull the lever up ⇒ page 67, fig. 69 and fold the backrest back up again until it securely latches ⇒ .

# Λ

#### WARNING

- The backrest must always be securely latched so that the safety belt of the center seating position can work properly to help protect the occupant.
- The backrest must be securely latched in position so that no items contained in the luggage compartment can slide forward upon sudden braking.
- Always check whether the latch is fully engaged by pulling the seatback forward.
- Never allow safety belts to become damaged by being caught in door or seat hardware.
- Torn or frayed safety belts can tear and damaged belt hardware can break in a crash. Inspect the belts periodically.
   Belts showing damage to webbing, bindings, buckles, or retractors must be replaced.



#### Note

- If you move the front seat back when the rear seat backrest is folded forward, you could damage the head restraints on the rear seat.
- Slide the belt guide on the outside safety belt all the way up before folding the backrest back forward. Make sure the seat belt is not pinched or damaged when the rear seat backrest if folded back. Other objects should be removed from the rear seat bench to protect the seatback from damage.

#### Tie-down rings

There are four tie-down rings in the luggage compartment for securing luggage items.

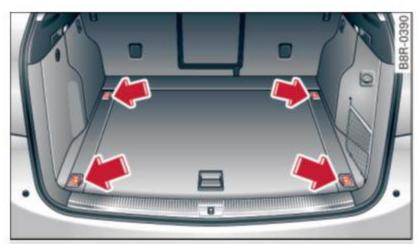


Fig. 72 Location of the tie-down rings in the luggage compartment

- Secure the cargo to the tie-down rings ⇒ fig. 72.
- ► Observe the safety notes ⇒ page 146.

In a collision, the laws of physics mean that even smaller items that are loose in the vehicle will turn into heavy missiles that can cause serious injury. Items in the vehicle pick up kinetic energy which varies with the vehicle and the weight of the item. Vehicle speed is the most significant factor.

For example, in a frontal collision at a speed of 30 mph (48 km/h), the forces acting on a 10-lb (5 kg) object are about 20 times the normal weight of the item. This means that the weight of the item would suddenly be the equivalent of about 200 lbs (90 kg). One can easily imagine the injuries that an item of that

weight flying freely through the passenger compartment can cause in a collision at a speed considered relatively low.

# $\Lambda$

#### WARNING

Weak, damaged or improper straps used to secure items to tie-downs can fail during hard braking or in a collision and cause serious personal injury.

- Always use suitable retaining straps and properly secure items to the tie-downs in the luggage compartment to help prevent items from shifting or flying forward.
- When the rear seat backrest is folded down, always use suitable retaining straps and properly secure items to the tie-downs in the luggage compartment to help prevent items from flying forward into the passenger compartment.
- Never attach a child safety seat tether strap to a tie-down.

#### Luggage compartment cover

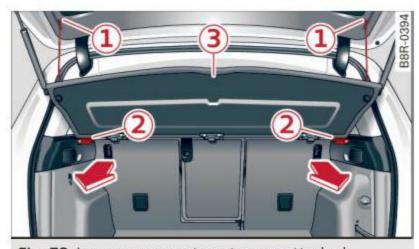


Fig. 73 Luggage compartment: cover attached



Fig. 74 Luggage compartment: storing the cover

#### Removing

► Unhook the straps ① ⇒ fig. 73.

▶ Pull the cover ③ out of the retainers ② in the direction of the arrow.

#### Installing

- Slide the cover into the retainers 2.
- Attach the straps ① ⇒ ▲.

#### Storing

- Slide the rear seat forward ⇒ page 64.
- Fold the cover together and store it behind the rear seat ⇒ fig. 74.



#### WARNING

- To prevent accidents, never install the luggage compartment cover unsecured.
- Whenever driving, never place any hard or heavy objects on the luggage compartment or allow pets to sit on the luggage compartment cover. They could become a hazard to vehicle occupants in the event of sudden braking or in an accident.



#### Note

You could damaged a stored luggage compartment cover when you move the rear seat or rear seat backrest.

# i

#### **Tips**

- You can use the luggage compartment cover to store light weight clothing or articles but do not leave any heavy or sharp objects in the pockets of the clothing.
- Remember that placing clothing or articles on the luggage compartment cover can block the driver's vision in the rear view mirror. This also applies especially when you have to transport large objects.
- So that stale air can escape from the vehicle be sure not to cover the ventilation slot between the rear lid and the luggage compartment cover.

#### Double cargo floor

You can store dirty or wet objects under the cargo floor.

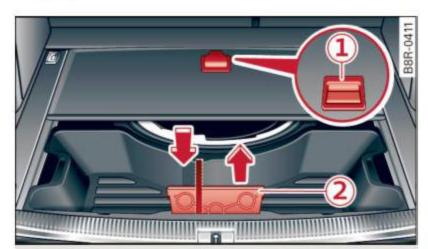


Fig. 75 Luggage compartment: cargo floor folded together with protective tray

#### Folding the cargo floor together

- ► Lift the cargo floor by the handle ⇒ fig. 75 1 and fold it up.
- ▶ Place your item in the protective tray.

#### Removing the cargo floor, installing

- ➤ To remove, lift the cargo floor folded together and pull it toward the rear lid.
- To install, place the folded cargo floor into both retainers and unfold it.

Grab the protective tray on the handles and pull it out. You can also install a divider to divide 2 the storage area. Depending on the vehicle equipment level, the protective tray can have different sizes and shapes.

#### Cargo net and storage hooks

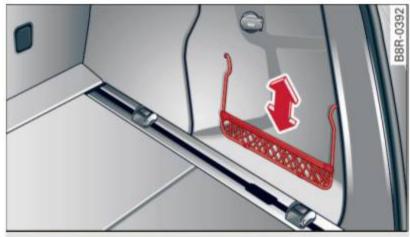


Fig. 76 Luggage compartment:



Fig. 77 Luggage compartment: Storage hooks

#### Storage net

The storage net on the right side trim can be moved lower on the side guides, if needed ⇒ fig. 76.

#### Storage hooks

The storage hooks can be used to secure shopping bags from falling over  $\Rightarrow$  *fig. 77*.



#### WARNING

Do not use the storage hooks to secure heavy objects. Heavier objects are not adequately secured. There is risk of personal injury.

### Roof rack

#### Description

Additional cargo can be carried with a roof luggage rack.

If luggage or cargo is to be carried on the roof, you must observe the following:

- Only a specially designed roof rack may be used on your vehicle roof. This is provided with your vehicle.
- These roof racks are the basis for a complete roof rack system. Additional attachments are necessary if you want to transport luggage, bicycles, surf boards and skis. All these components are available at your authorized Audi dealer.



#### Note

If you use other roof luggage rack systems or do not install the racks as intended, any damage to the vehicle is not covered by the warranty. Always read the manufacturer installation instructions that came with your roof rack system when you install the attachments.



When installing a factory-supplied roof rack system on the roof railing, the ESC will adapt itself to a different center of gravity.

### Attachment points

**Tips** 

The roof rack can only be attached at the marked locations.

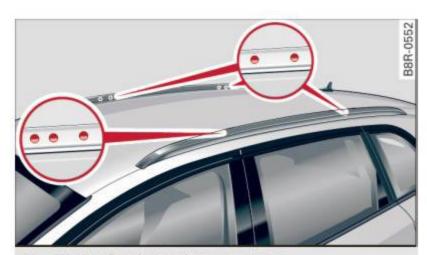


Fig. 78 Roof rack attachment points

Attach the roof rack only at the attachment points on the roof railing. On the inside of the roof railing there are two holes for attaching the rear end of the roof rack. To prevent confusing the front and rear roof rack attachments, there are three holes on the left and two holes on the right for mounting the front part of the roof rack  $\Rightarrow$  fig. 78.

The roof racks have a sticker on the left side underneath to identify front and rear.



### WARNING

When installing the roof rack, make sure the sticker is on the left side of the vehicle and faces the stamped arrow in the drive direction.

### Installing a roof rack

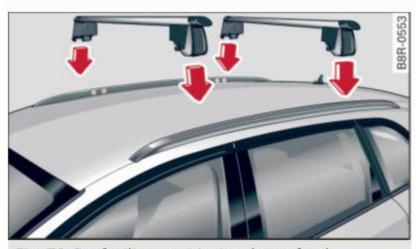


Fig. 79 Roof railing: positioning the roof rack

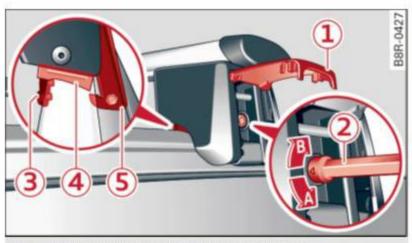


Fig. 80 Roof railing: installing a roof rack

The roof rack set consists of a front and rear roof rack, the cover profile and a socket wrench.

- ▶ Open the cap ① ⇒ fig. 80.
- Before mounting the roof rack, use the socket wrench 2 and loosen the left and right screw in the direction of A.
- Clean the attachment points on the roof railing as well as the roof rack rubber washers 4.
- Carefully place the roof rack over the holes in the roof railing ⇒ fig. 79.
- ▶ Place the pins 3 into the holes. The claw 5 must engage into the edge of the roof railing.
- ► Make sure the rubber washer ④ lays flat on the roof railing.
- ► Tighten the left and right screws using the socket wrench ② in direction ③.
- To reach the 4 ft lb (6 Nm) tightening specification needed, both arrows on the socket wrench must align.
- Repeat this procedure on the second roof rack.

## Λ

### WARNING

Check all the roof rack connections each time before each trip and re-tighten or readjust if necessary. If you are going to be driving or rough terrain, you will have to check the attachments more often. If you do not do this, the risk of your luggage coming loose and falling off is greater.

## 1

### Note

The pins and the roof rack claws must engage securely into the holes and into the edge of the roof railing when you tighten the screws!



### **Tips**

You can adjust the width of the roof rack by using a hexagon wrench and turning the screws on the top. Let your authorized Audi dealer help you with this.

### Installing the attachments

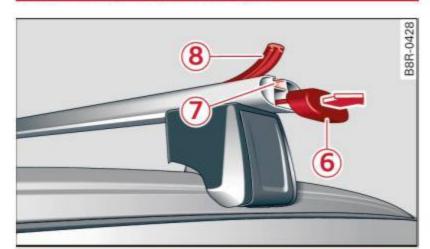


Fig. 81 Roof railing: installing cover profile into the roof rack

### Installing the attachments

- Remove the cap 6 ⇒ fig. 81.
- Slide the attachment into the T-groove 7.
- Tighten the attachment according to the roof rack installation instructions.
- Close the cap.

### Installing the cover profile

➤ Seal the openings in the T-groove ⑦ with the cover profile ⑧ after having installing the attachments.

- ► If you not want to use the attachment, seal the whole T-groove ⑦ with the cover profile ⑧.
- Cut the cover profile to the length needed, if necessary.

### Roof load

The cargo on the roof must be securely attached. Handling characteristics change when cargo is transported.

The permissible roof load for your vehicle is **165 lbs (75 kg)**. The roof load is the total of the weight of the roof rack, the attachments and the cargo you are carrying.

## $\Lambda$

### WARNING

- The cargo must be securely attached on the roof rack, otherwise you risk an accident.
- Distribute the load as evenly as possible and do not make the roof rack wider than the maximum permitted.
- You must under no circumstances exceed the permissible roof load, the permissible axle loads and the permissible overall weight of your vehicle - risk of an accident.
- Mount the attachments to the roof rack only after you have placed the roof rack on the vehicle.
- Consider that when transporting heavy objects or one with a large surface, the handling characteristics change due to shift in the center of gravity or the greater surface exposed to the wind. So adapt your driving and your speed to prevailing conditions. We recommend that you do not drive faster than 80 mph (130 km/ h).
- Mounting a roof rack changes the height of your vehicle. Keep this in mind when parking your vehicle in your garage, or when driving through a tunnel or under an overpass.

## Note

- Make sure the rear lid does not hit the cargo on the roof rack when you open it. On vehicles with automatic rear lid/trunk lid operation\* you may have to adjust the open position of the rear lid ⇒ page 44.
- Remove the roof rack and attachment before taking your vehicle through an automatic car wash to avoid damage.

## **(**

### For the sake of the environment

As a result of the increased wind resistance created by a roof rack, your vehicle is using fuel unnecessarily. So remove the roof rack after using it.

## Beverage holders



Fig. 82 Center console: Front cupholders

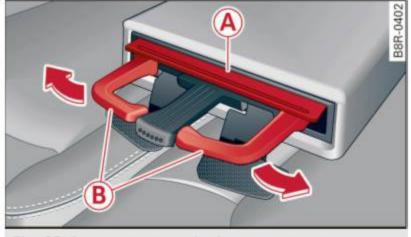


Fig. 83 Beverage storage in the rear armrest

### Front cupholders

You can accommodate two beverages in this storage ⇒ fig. 82.

### Opening rear beverage holders

### Holding beverages at the rear

- To adjust the arm (B), swing it in the direction of the arrow.
- Place the beverage in the holder and release the arm. The arm swings back by itself and automatically secures the beverage.

### Closing the rear cupholders

➤ To close the rear cupholder, press on the center section between the two arms and push the cupholder in the slot as far as it will go.

The holding arm must be adjusted such that it lies closely against the cupholder.

A maximum of two beverages can be placed in the center armrest.



### WARNING

Spilled hot liquid can cause an accident and personal injury.

- Never carry any beverage containers with hot liquids, such as hot coffee or hot tea, in the vehicle while it is moving. In case of an accident, sudden braking or other vehicle movement, hot liquid could spill, causing scalding burns. Spilled hot liquid can also cause an accident and personal injury.
- Use only soft cups in the cupholder. Hard cups and glasses can cause injury in an accident.
- Never use the cupholder or adapter as an ashtray - risk of fire.



#### Note

Only drink containers with lids should be carried in the cupholder. Liquid could spill out and damage your vehicle's electronic equipment or stain the upholstery, etc.

## Climatized cupholders

Applies to vehicles: with climatized beverage holders

The driver side beverage holder can keep your beverage warm or cold.

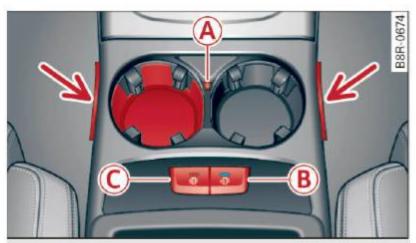


Fig. 84 Center console: climatized cupholder

- Press button (B) ⇒ fig. 84 to keep your beverage cold. The button will light up blue.
- ➤ To switch between the two functions, press the appropriate button.
- ▶ Press B or C to switch off these feature.
  The light in the button will go out.

When cooling, the temperature of the beverage holder base will go down to approximately 41 °F (5 °C). When warming, the temperature will be approximately 136 °F (58 °C). At 104 °F (40 °C) the warming display will come on (A). This is reminder not to touch the base because it is hot. The display goes out if the temperature falls below this value.

## $\Lambda$

### WARNING

- Never touch the beverage holder base when the warming display is on. You can burn yourself!
- Do not use breakable beverage containers (for example made out of glass or porcelain). You could be injured by them in case of an accident.



#### Note

Make sure your beverage holder has a lid. If not, your beverage could spill out and cause damage to the vehicle electronic or stain the seat covers.



### **Tips**

Do not cover the ventilation grille -arrowbecause that could prevent the beverage holder from functioning correctly.

# Cupholders in the door pockets

There is a cupholder in all four doors.

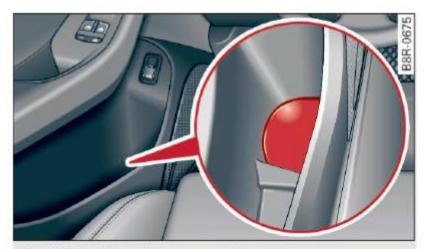


Fig. 85 Section of door panel: Cupholder

The cupholders in the door pockets are suitable for 1 to 1.5-liter bottles.



#### WARNING

Spilled hot liquid can cause an accident and personal injury.

- Never carry any beverage containers with hot liquids, such as hot coffee or hot tea, in the vehicle while it is moving. In case of an accident, sudden braking or other vehicle movement, hot liquid could spill, causing scalding burns. Spilled hot liquid can also cause an accident and personal injury.
- Use only soft cups in the cupholder. Hard cups and glasses can cause injury in an accident.



#### Note

Only drink containers with lids should be carried in the cupholder. Liquid could spill out and damage your vehicle's electronic equipment or stain the upholstery, etc.

## **Ashtray**



Fig. 86 Center console: front ashtray

### Opening the ashtray

Slide the cover open.

### Closing the ashtray

 Tap the lid to close the ashtray automatically.

### Removing ashtray insert

- Release the ashtray insert by sliding the switch (A) ⇒ fig. 86 to the right.
- Remove the ashtray insert (B) ⇒ fig. 86.

### Reinstalling ashtray insert

Press the ashtray insert into its holder.

## Λ

### WARNING

Never put waste paper in the ashtray. Hot ashes or other hot objects in the ashtray could set waste paper on fire.

## Cigarette lighter/ Socket

### Cigarette lighter



Fig. 87 Center console: cigarette lighter

- Press the cigarette lighter in.
- Remove the cigarette lighter when it pops out.

The cigarette lighter should only be used as a power source for the compressor from the inflatable spare tire/tire repair kit\* when absolutely necessary.

### $\Lambda$

### WARNING

The cigarette lighter only works when the ignition is switched on. Incorrect usage can lead to serious injuries or burns. For this reason, children should never be left unattended in the vehicle because this increases the risk of injury.

### 12-volt sockets

Electrical accessories can be connected to every 12-volt socket.



Fig. 88 Section of the trim panel of the luggage compartment: 12-volt socket

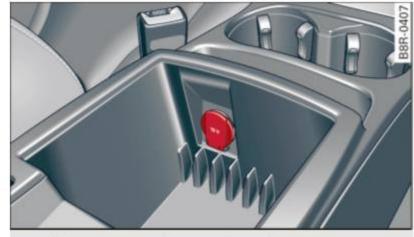


Fig. 89 Center console: 12-volt socket

- ▶ Open the socket cover ⇒ fig. 88 or ⇒ fig. 89.
- Insert the plug of the electrical device into the socket.

The 12-volt sockets can be used for electrical accessories. The power input must not exceed 120 watts.

There is an additional 12-volt socket in the center console.

Before you purchase any accessories, always read and follow the information in ⇒ page 297, Additional accessories and parts replacement.



### WARNING

The power outlets and therefore the electrical accessories connected to them operate only with the ignition on. Improper use of the outlets or of electrical accessories can lead to serious injuries or cause a fire. For this reason, children should never be left unattended in the vehicle – they could be injured!



### Note

To avoid damaging the socket, only use plugs that fit properly.



#### **Tips**

When the engine is off and accessories are still plugged in and are on, the vehicle battery can still be drained.

## Storage

### **General overview**

There are numerous places to store items in your vehicle.

| Glove compartment                     | ⇒page 76 |
|---------------------------------------|----------|
| Cooling box in glove compart-<br>ment | ⇒page 77 |
| Storage compartment in the roof       | ⇔page 77 |
| Multi-use attachment                  | ⇒page 77 |
| Coat hooks                            | ⇒page 78 |
| Storage in the door panels            |          |
| Storage net in footwell               |          |

| Storage net in the front seat-<br>backs |  |
|---|--|
| Storage net in luggage com-             |  |
| partment                                |  |

## $\Lambda$

### WARNING

- Always remove objects from the instrument panel. Any items not put away could slide around inside the vehicle while driving or when accelerating or when applying the brakes or when driving around a corner.
- When you are driving make sure that anything you may have placed in the center console or other storage locations cannot fall out into the footwells. In case of sudden braking you would not be able to brake or accelerate.
- Any pieces of clothing that you have hung up must not interfere with the driver's view. The coat hooks are designed only for lightweight clothing. Never hang any clothing with hard, pointed or heavy objects in the pockets on the coat hooks. During sudden braking or in an accident especially if the airbag is deployed these objects could injure any passengers inside the vehicle.

### Glove compartment

The glove compartment is illuminated and can be locked.



Fig. 90 Glove compartment

### To open glove compartment

Pull the handle in the direction of the arrow
 ⇒ fig. 90 and swing the cover down to open.

### To close glove compartment

 Push the glove compartment lid upward until the lock engages.

There are holders for a pen and a pad of paper in the glove compartment lid.

On the right side in the glove compartment is a holder with the key body into which the emergency key must be clipped to be able to start the vehicle.



### WARNING

To reduce the risk of personal injury in an accident or sudden stop, always keep the glove compartment closed while driving.

### Cooling box in glove compartment

The cooling box works only when the air-conditioning is in cooling mode.

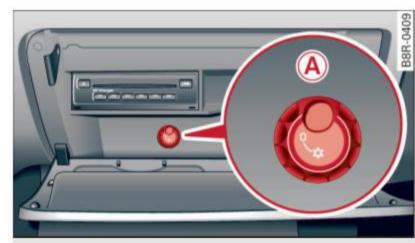


Fig. 91 Glove box with cooling box open and switched on

- Open the glove compartment ⇒ page 76, fig. 90.
- Turn the rotary switch (A) counter-clockwise to switch the cooling on. The symbols on the rotary switch must be displayed ⇒ fig. 91 accordingly.
- ► Turn the rotary switch (A) clockwise to switch the cooling off.

The cooling box works only in the cooling mode. If the climate control is in the heating mode, we recommend switching the cooling box off.

### Storage compartment in the roof



Fig. 92 Storage pocket in the roof

- ➤ To open the lid you have to touch the bar ⇒ fig. 92 (Arrow). The lid opens automatically.
- To close the lid, push it up until it engages.



### WARNING

Always keep the lid closed while driving to reduce the risk of injury during a sudden braking maneuver or in the event of an accident.

### Multi-use attachment

Light objects can be secured on the multi-use attachment.



Fig. 93 Passenger footwell: multi-use attachment

Unfold the hook in the direction of the arrow  $\Rightarrow$  fig. 93.



### WARNING

Maximum load on the multi-use attachment: 22 lbs (10 kg). Heavier objects are not adequately secured. There is risk of personal injury.



### **Tips**

Other accessories or objects such as an umbrella from the Audi accessories programs can be secured on the multi-use attachment.

### Coat hooks



Fig. 94 Coat hooks at rear doors



### WARNING

- Hang clothes in such a way that they do not impair the driver's vision.
- The coat hooks must only be used for lightweight clothing. Do not leave any heavy or sharp edged objects in the pockets which may interfere with the side curtain airbag deployment and can cause personal injury in a crash.
- Do not use coat hangers for hanging clothing on the coat hooks as this can interfere with proper deployment of the side curtain airbags in an accident.
- Do not hang heavy objects on the coat hooks, as they could cause personal injury in a sudden stop.

### Warm and cold

### Climate control

### Description

The climate control system warms, cools and adds humidity to the air in the vehicle interior. It is the most effective when the windows and panoramic sliding sunroof\* are closed. If there is a build-up of heat inside the vehicle, ventilation can help to speed up the cooling process.

In all heating mode functions except *defrost*, the blower only switches to a higher speed once the engine coolant has reached a certain temperature.

Condensation from the cooling system can drip and form a puddle of water under the vehicle. This is normal and does not mean there is a leak.

### Pollutant filter

The pollutant filter removes pollutants such as dust and pollen from the air.

The air pollutants filter must be changed at the intervals specified in your Warranty & Maintenance booklet, so that the air conditioner can properly work.

If you drive your vehicle in an area with high air pollution, the filter may need to be changed more frequently than specified in your Audi Warranty & Maintenance booklet. If in doubt, ask your authorized Audi Service Advisor for advice.

### Key coded settings

The climate control settings are automatically stored and assigned to the remote control key that is in use.



### WARNING

Reduced visibility is dangerous and can cause accidents.

- For safe driving it is very important that all windows be free of ice, snow and condensation.
- Completely familiarize yourself with the proper use and function of the heating and ventilation system and especially how to defog and defrost the windows.
- Never use the windshield wiper/washer system in freezing weather until you have warmed the windshield first, using the heating and ventilation system. The washer solution may freeze on the windshield and reduce visibility.



### Note

- If you suspect that the air conditioner has been damaged, switch the system off to avoid further damage and have it inspected by a qualified dealership.
- Repairs to the Audi air conditioner require special technical knowledge and special tools. Contact an authorized Audi dealer for assistance.



### For the sake of the environment

By reducing the amount of fuel you use, you also reduce the amount of pollutants emitted into the air.

## (i)

### **Tips**

- Keep the air intake slots (in front of the windshield) free from ice, snow and debris in order to maintain the proper function of the climate control system.
- The energy management system may switch the seat heating\* or rear window defroster off temporarily. These systems are available again as soon as the energy balance has been restored.
- The air flowing out of the vents and throughout the vehicle's entire interior is discharged at the rear of the vehicle.
   Make sure that the outlet slots are not covered by clothing, etc.

### Operation

We recommend pressing the AUTO button and setting the temperature to 72 °F (22 °C).



Fig. 95 3-zone deluxe automatic climate control: controls

Press the buttons to turn the functions on or off. Use the dials to adjust the temperature, the blower speed and the air distribution. The LED in a button will light up when the function is switched on. The settings are displayed for a few seconds in the radio or MMI\* display.

The driver and front passenger side can be adjusted separately. The settings are also displayed in the climate control system display.

# OFF Switching the climate control system on/off

The OFF button switches the climate control system on or off. It also switches on when you press the knob. Airflow from outside is blocked when the climate control system is switched off.

### AC Switching cooling mode on/off

The air is not cooled and humidity is not removed when cooling mode is switched off.

This can cause fog on the windows. Cooling mode switches off automatically when the outside temperature is below zero.

## Switching recirculation mode on/off

In recirculation mode, the air inside the vehicle is circulated and filtered. This prevents the unfiltered air outside the vehicle from entering the vehicle interior. We recommend switching recirculation mode on when driving through a tunnel or when sitting in traffic  $\Rightarrow \triangle$ .

The AUTO button or FRONT button switches recirculation mode off.

### AUTO Switching automatic mode on

Automatic mode maintains a constant temperature inside the vehicle. Air temperature, airflow and air distribution are controlled automatically.

### Adjusting the temperature

Temperatures between 60 °F (+16 °C) and 84 °F (+28 °C) can be set. Outside of this range, **low** or **high** will appear in the radio or MMI\* display. At both of these settings, the climate control system runs continuously at maximum cooling or heating power. There is no temperature regulation.

### Adjusting the airflow

You can adjust the airflow manually to suit your needs. To have the airflow regulated automatically, press the AUTO button.

### Adjusting the air distribution

You can manually select the vents where the air will flow. To have the air distribution regulated automatically, press the AUTO button.

### Adjusting seat heating\*

Pressing the button switches the seat heating on at the highest setting (level 3). The LEDs indicate the temperature level. To reduce the temperature, press the button again. To switch the seat heating off, press the button repeatedly until the LED turns off.

After 10 minutes, the seat heating automatically switches from level 3 to level 2.

### Adjusting seat ventilation\*

Pressing the button switches the seat ventilation on at the highest setting (level 3). The LEDs indicate the ventilation level. To reduce the ventilation level, press the button again. To switch the seat ventilation off, press the button repeatedly until the LED turns off.

### FRONT Switch the defroster on/off

The windshield and side windows are defrosted or cleared of condensation as quickly as possible. The maximum amount of air flows mainly from the vents below the windshield. Recirculation mode switches off. The temperature is controlled automatically.

The AUTO button switches the defroster off.

## REAR Switching rear window heater on/off

The rear window heater only operates when the engine is running. It switches off automatically after a few minutes, depending on the outside temperature.

To prevent the rear window heater from switching off automatically, press and hold the REAR button for more than 2 seconds. This remains stored until the ignition is switched off.

### Air vents

You can open and close the center and rear air vents using the thumbwheels. The levers adjust the direction of the airflow from the vents.

You can adjust the air temperature in the rear by turning the thumbwheel toward the red

side to make it warmer or toward the blue side to make it cooler.

### WARNING

- Do not use the recirculation for extended periods of time. The windows could fog up since no fresh air can enter the vehicle. If the windows fog up, press the air recirculation button again immediately to switch off the air recirculation function or select defrost.
- Individuals with reduced sensitivity to pain or temperature could develop burns when using the seat heating\* function.
   To reduce the risk of injury, these individuals should not use seat heating.



### Note

To avoid damage to the heating elements\* in the seats, do not kneel on the seats or place heavy loads on a small area of the seat.



### Tips

The seat heating\* only works when the seat detects body weight on it. Placing objects on the seat could create enough weight to switch seat heating on.

### Setup

The basic climate control settings can be adjusted in the radio or MMI\*.

- ▶ Select: CAR function button > A/C control button. Or
- Select: CAR function button > Car systems\* control button > AC.

### Automatic recirculation

When switched on, automatic recirculation controls the recirculation mode automatically. If the windows fog up, press the FRONT button.

### Synchronization

When synchronization is switched on, the same settings are applied to both the driver



### 82 Warm and cold

and front passenger, except for the seat heating/ventilation\*. Synchronization switches off when you adjust the settings on the front passenger's side.

You can also switch synchronization on by pressing and holding the knob on the driver's side.

### Supplementary heater\*

The supplementary heater warms the interior of vehicles with flexible fuel engines\* or hybrid drive\* more quickly. The supplementary heater is controlled automatically in the **Auto** setting.

### On the road

## Steering

### Manually adjustable steering wheel

The height and reach of the steering wheel can be adjusted.

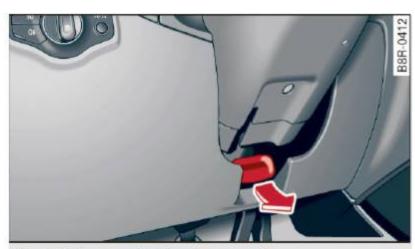


Fig. 96 Lever under the steering column

First, adjust the driver's seat correctly.

- Pull the lever ⇒ fig. 96 -Arrow- ⇒ Λ.
- Move the steering wheel to the desired position.
- Push the lever against the steering column until it locks.

There must be at least 10 inches (25 cm) between your chest and the center of the steering wheel. If you cannot sit more than 10 inches (25 cm) from the steering wheel, see if adaptive equipment is available to help you reach the pedals and increase the distance from the steering wheel.

For detailed information on how to adjust the driver's seat, see  $\Rightarrow$  page 62.

## $\Lambda$

### WARNING

Improper use of steering wheel adjustment and improper seating position can cause serious personal injury.

- Adjust the steering wheel column only when the vehicle is not moving to prevent loss of vehicle control.
- Adjust the driver's seat or steering wheel so that there is a minimum of 10 inches (25 cm) between your chest and the steering wheel ⇒ page 140, fig. 152. If you cannot maintain this minimum dis-

- tance, the airbag system cannot protect you properly.
- If physical limitations prevent you from sitting 10 inches (25 cm) or more from the steering wheel, check with your authorized Audi dealer to see if adaptive equipment is available.
- If the steering wheel is aligned with your face, the supplemental driver's airbag cannot provide as much protection in an accident. Always make sure that the steering wheel is aligned with your chest.
- Always hold the steering wheel with your hands at the 9 o'clock and 3 o'clock positions to reduce the risk of personal injury if the driver's airbag deploys.
- Never hold the steering wheel at the 12 o'clock position or with your hands inside the steering wheel rim or on the steering wheel hub. Holding the steering wheel the wrong way can cause serious injuries to the hands, arms and head if the driver's airbag deploys.

## **Ignition lock**

### Starting engine with the key

The ignition is switched on and the engine started with the ignition key.



Fig. 97 Ignition key

### Starting the engine

- Insert the key into the ignition lock.
- ► Hybrid drive\*: refer to the information for starting the vehicle under ⇒ page 98.
- Step on the brake pedal and move the selector lever to the P or N position.

Press the key ⇒ fig. 97 - the engine will start.

### Switching the ignition on/off

If you would like to switch the ignition on without starting the engine, follow these steps:

- Insert the key into the ignition lock.
- Press the key briefly without press the brake pedal.
- ▶ To switch the ignition off, press the key again.

When starting the engine, major electrical loads are switched off temporarily.

You can only remove the key with the ignition switched off. To do this, you have to press on the key again.

If the engine should not start immediately, the starting process is automatically stopped after a short time. Repeat starting procedure.

### Switching the ignition/engine off automatically\*

The following applies to vehicles with Start-Stop-System\*/Hybrid drive\*: to prevent the battery from draining, the ignition and the engine will switch off automatically under the following conditions:

- The vehicle has already been driven.
- The driver's door is opened.
- The driver's seat belt is removed.
- The brake pedal is not pressed down.
- The vehicle is stationary.

In this case, the activated low beam will be replaced by the side marker lights. The side marker lights will switch off after a certain period of time or when you lock the vehicle.

## **⚠** WARNING

- Never allow the engine to run in confined spaces - danger of asphyxiation.
- Never remove the ignition key from the ignition lock while the vehicle is moving. Otherwise, the steering lock could sud-

- denly engage and you would not be able to steer the vehicle.
- Always take the key with you whenever you leave your vehicle. Otherwise, the engine could be started or electrical equipment such as the power windows could be operated. This can lead to serious injury.
- Never leave children or persons requiring assistance unattended in the vehicle. The doors can be locked using the remote transmitter, preventing people from escaping from the vehicle on their own in the event of an emergency. Depending on the time of year, people inside the vehicle can be exposed to very high or very low temperatures.



### Note

Avoid high engine rpm, full throttle and heavy engine loads until the engine has reached operating temperature - otherwise you risk engine damage.



### For the sake of the environment

Do not let the engine run while parked to warm up. Begin driving immediately. This reduces unnecessary emissions.



### **Tips**

- If the key cannot be removed from the ignition lock, you have to pull the mechanical key out of the master key in order to be able to lock the vehicle  $\Rightarrow$  page 38.
- After starting a cold engine, there may be a brief period of increased noise because the oil pressure must first build up in the hydraulic valve adjusters. This is normal and not a cause for concern.
- If you leave the vehicle with the ignition switched on, the ignition will switch off after a certain period of time. Please note that electrical equipment such as exterior lights will switch off as well when that happens.

## Starting the vehicle with the emergency key

You can use the emergency key as an ignition key in an emergency.



**Fig. 98** Glove compartment: Adapter for emergency key

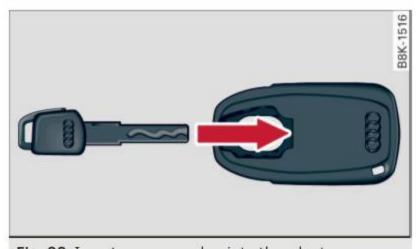


Fig. 99 Insert emergency key into the adapter

- Take the adapter for the emergency key out of the glove compartment ⇒ fig. 98.
- Push the emergency key ⇒ fig. 99 fully into the adapter. Make sure that the Audi rings are facing up.
- Press the emergency key in the adapter down until it latches audibly.
- Insert the adapter with the emergency key forward into the ignition switch. The engine can now be started as usual.

### Stopping the engine

- Bring the vehicle to a full stop.
- Move the selector lever to the P or N position.
- Press on the ignition key. The engine is turned off.
- You can now remove the key.

### Steering lock

The steering locks when you remove the ignition key. The locked steering helps prevent vehicle theft.

### **Emergency off**

If it is necessary in unusual circumstances, the engine can be switched off while the vehicle is moving. The engine will be switched off if you press on the key for an extended period.

## $\Lambda$

### WARNING

- Never turn off the engine before the vehicle has come to a complete stop. The full function of the brake booster and the power steering is not guaranteed. You must use more force to turn or brake if necessary. Because you cannot steer and brake as you usually would, this could lead to crashes and serious injuries.
- For safety reasons, you should always park your vehicle with the selector lever in P. Otherwise, the vehicle could inadvertently roll away.
- The radiator fan can continue to run for up to 10 minutes even after you have turned off the engine and removed the ignition key. The radiator fan can also turn on again if the engine coolant heats up because of intense sunlight or heat build-up in the engine compartment.
- Always take the key with you whenever you leave your vehicle. Otherwise, the engine could be started or electrical equipment such as the power windows could be operated. This can lead to serious injury.
- Never leave children or persons requiring assistance unattended in the vehicle. The doors can be locked using the remote transmitter, preventing people from escaping from the vehicle on their own in the event of an emergency. Depending on the time of year, people inside the vehicle can be exposed to very high or very low temperatures.

## (!)

### Note

If the engine has been under heavy load for an extended period, heat builds up in the engine compartment after the engine is switched off - there is a risk of damaging the engine. Allow the engine to run at idle for about two minutes before switching it off.

## Convenience key

### Starting the engine

Applies to vehicles: with Convenience key

The START ENGINE STOP button switches the ignition on and starts the engine.



Fig. 100 Center console: START ENGINE STOP button

### Starting the engine

- ► Hybrid drive\*: refer to the information for starting the vehicle under ⇒ page 98.
- Step on the brake pedal and move the selector lever to P or N ⇒ Λ.
- ▶ Press on the START ENGINE STOP button
  ⇒ fig. 100 the engine will start.

### Switching the ignition on/off

If you would like to switch the ignition on without starting the engine, follow these steps:

- ▶ Press the START ENGINE STOP button without pressing the brake pedal.
- ► To switch the ignition off, press the button again.

When starting the engine, major electrical loads are switched off temporarily.

If the engine should not start immediately, the starting process is automatically stopped after a short time. Repeat starting procedure.

### Start-Stop-System\*:

If the vehicle stalls and the Start-Stop-System\* for the engine shuts down, the ignition still remains switched on.

- If you press the START ENGINE STOP button now, the ignition will be switched off.
   The engine will not start ⇒ page 93.
- Make sure that the ignition is switched off before exiting the vehicle.

### Switching the ignition/engine off automatically\*

The following applies to vehicles with Start-Stop-System\*/Hybrid drive\*: to prevent the battery from draining, the ignition and the engine will switch off automatically under the following conditions:

- The vehicle has already been driven.
- The driver's door is opened.
- The driver's seat belt is removed.
- The brake pedal is not pressed down.
- The vehicle is stationary.

In this case, the activated low beam will be replaced by the side marker lights. The side marker lights will switch off after a certain period of time or when you lock the vehicle.

## A

#### WARNING

- Never allow the engine to run in confined spaces - danger of asphyxiation.
- Always take the key with you whenever you leave your vehicle. Otherwise, the engine could be started or electrical equipment such as the power windows could be operated. This can lead to serious injury.
- Never leave children or persons requiring assistance unattended in the vehicle. The doors can be locked using the remote transmitter, preventing people from escaping from the vehicle on their own in the event of an emergency. Depending

on the time of year, people inside the vehicle can be exposed to very high or very low temperatures.



### Note

Avoid high engine rpm, full throttle and heavy engine loads until the engine has reached operating temperature - otherwise you risk engine damage.



### For the sake of the environment

Do not let the engine run while parked to warm up. Begin driving immediately. This reduces unnecessary emissions.



### **Tips**

- After starting a cold engine, there may be a brief period of increased noise because the oil pressure must first build up in the hydraulic valve adjusters. This is normal and not a cause for concern.
- If you leave the vehicle with the ignition switched on, the ignition will switch off after a certain period of time. Please note that electrical equipment such as exterior lights will switch off as well when that happens.

### Switching engine off

Applies to vehicles: with Convenience key

- Bring your vehicle to a complete stop.
- Move the selector lever to the P or N position.
- ► Press the START ENGINE STOP button ⇒ page 86, fig. 100.

### Steering lock

The steering locks when you turn the engine off using the START ENGINE STOP button and open the driver's door. The locked steering helps prevent vehicle theft.

### **Emergency off**

If necessary, the engine can be switched off with the selector lever in the R or D/S positions. To do so, step on the brake pedal and press and hold the START ENGINE STOP but-

ton. The vehicle speed must be less than 6 mph / 10 km/h.



### WARNING

- Never turn off the engine before the vehicle has come to a complete stop. The full function of the brake booster and the power steering is not guaranteed. You must use more force to turn or brake if necessary. Because you cannot steer and brake as you usually would, this could lead to crashes and serious injuries.
- For safety reasons, you should always park your vehicle with the selector lever in P. Otherwise, the vehicle could inadvertently roll away.
- The radiator fan can continue to run for up to 10 minutes even after you have turned off the engine and removed the ignition key. The radiator fan can also turn on again if the engine coolant heats up because of intense sunlight or heat build-up in the engine compartment.
- Always take the key with you whenever you leave your vehicle. Otherwise, the engine could be started or electrical equipment such as the power windows could be operated. This can lead to serious injury.
- Never leave children or persons requiring assistance unattended in the vehicle. The doors can be locked using the remote transmitter, preventing people from escaping from the vehicle on their own in the event of an emergency. Depending on the time of year, people inside the vehicle can be exposed to very high or very low temperatures.



#### Note

If the engine has been under heavy load for an extended period, heat builds up in the engine compartment after the engine is switched off - there is a risk of damaging the engine. Allow the engine to run at idle for about two minutes before switching it off.

## **Driver messages**

### Ignition is on

This message appears and a warning tone sounds if you open the driver's door when the ignition is switched on.

### No key identified

This message appears when the START ENGINE STOP \* button is pressed if there is no master key inside the vehicle or if the system does not recognize it. For example, the master key cannot be recognized if it is covered by an object (e.g. aluminum brief case) which screens the radio signal. Electronic devices such as cell phones can also interfere with the radio signal.

### Press brake pedal to start engine

This message appears if you do not press the brake pedal to start the engine.

### Shift to N or P to start engine

This message appears when attempting to start the engine if the selector lever for the automatic transmission is not in the P or N position. The engine can only be started with the selector in these positions.

## Is the key in the vehicle?

This message appears in a vehicle with Convenience key\* if the master key is removed from the vehicle with the engine running. If the master key is no longer in the vehicle, you cannot switch on the ignition after stopping the engine and you also cannot start the engine again. Moreover, you cannot lock the vehicle from the outside with the key.

## Shift to P otherwise vehicle can roll away. Doors do not lock if lever is not in P.

This message appears for safety reasons along with a warning signal. It appears if the selector lever for the automatic transmission is not in the P position when switching off the ignition. Move the selector lever to the P position, otherwise the vehicle is not secured against rolling away. You also cannot lock the

vehicle using the locking button\* on the door handle or using the remote key.

### Turn off ignition before leaving car

This message appears if the driver's door is opened while the ignition is switched on. Always switch off the ignition if you are leaving the vehicle. See also ⇒ page 84 or ⇒ page 86.

## Shift to P and turn off ignition, otherwise vehicle can roll away

This message appears if the driver's door is opened while the ignition is switched on and the selector lever is not in the P position. Shift the selector lever into the P position and switch off the ignition when you exit the vehicle. Otherwise the vehicle could roll. See also ⇒ page 84 or ⇒ page 86.

### Convenience key defective! Use ignition lock

This message appears if the engine must be started or stopped using the ignition key and not the START ENGINE STOP\* button.

## Electromechanical parking brake

### Operation

The electromechanical parking brake replaces the hand brake.



Fig. 101 Center console: Parking brake

- Pull on the switch ⇒ fig. 101 to apply the parking brake. The indicator light in the switch illuminates.
- Step on the brake pedal or the accelerator pedal and press the switch at the same time to release the parking brake. The indicator light in the switch goes out.

Your vehicle is equipped with an electromechanical parking brake. The parking brake is designed to prevent the vehicle from rolling unintentionally and replaces the hand brake.

In addition to the normal functions of a traditional hand brake, the electromechanical parking brake provides various convenience and safety functions.

### When starting from rest

- The integral starting assist helps you when driving by automatically releasing the parking brake ⇒ page 90, Starting from rest.
- When starting on inclines, the starting assist prevents the vehicle from unintentionally rolling back. The braking force of the parking brake is not released until sufficient driving force has been built up at the wheels.

### Emergency brake function

An emergency brake ensures that the vehicle can be slowed down even if the *normal* brakes fail ⇒ *page 90*, *Emergency braking*.

### **Indicator lights**

- If the parking brake is closed with the ignition switched on the indicator lights come on (USA models)/((Canada models)) in the instrument cluster and the switch.
- If the parking brake is closed with the ignition switched off the indicator lights come on (USA models)/((Canada models)) in the instrument cluster and the switch for about 20 seconds.



#### WARNING

If a drive range is engaged with the vehicle stationary and the engine running, you must in no instance accelerate carelessly. Otherwise the vehicle will start to move immediately - risk of an accident.



### Note

If the symbol in the display or the indicator light **BRAKE** (USA models)/ (Canada models) in the instrument cluster flash-

es, there is a malfunction in the brake system. By pressing the SET button, you can bring up a driver message which explains the malfunction in more detail. If the driver message Parking brake system fault!

See owner's manual appears, there is an operating malfunction in the parking brake which you should have repaired immediately by an authorized Audi dealer or other qualified workshop  $\Rightarrow$  page 29.



### Tips

- You can apply the parking brake at any time - even with the ignition turned off.
   The ignition must be turned on in order to release the parking brake.
- Occasional noises when the parking brake is applied and released are normal and are not a cause for concern.
- When the vehicle is parked, the parking brake goes through a self-test cycle at regular intervals. Any associated noises are normal.

### **Parking**

### **Parking**

- ▶ Stop the vehicle with the foot brake.
- ► Pull the switch to apply the parking brake.
- ► Move the selector lever to P.
- ► Turn the engine off ⇒ Λ.

### In addition on inclines and grades

Turn the steering wheel so that your vehicle will roll against the curb in case it should start to move.



### WARNING

– When you leave your vehicle - even if only briefly - always remove the ignition key. This applies particularly when children remain in the vehicle. Otherwise the children could start the engine, release the parking brake or operate electrical equipment (e.g. power windows). There is the risk of an accident.

When the vehicle is locked, no one - particularly not children should remain in the vehicle. Locked doors make it more difficult for emergency workers to get into the vehicle - putting lives at risk.

### Starting from rest

The starting assist function ensures that the parking brake is released automatically upon starting.

### Stopping and applying parking brake

▶ Pull the switch to apply the parking brake.

## Starting and automatically releasing the parking brake

When you start to drive as usual, the parking brake is automatically released and your vehicle begins to move.

When stopping at a traffic signal or stopping in city traffic on vehicles with an automatic transmission, the parking brake can be applied. The vehicle does not have to be held with the footbrake. The parking brake eliminates the tendency to creep with a drive range engaged. As soon as you drive off as usual, the parking brake is released automatically and the vehicle starts to move.

#### Starting on slopes

When starting on inclines, the starting assist prevents the vehicle from unintentionally rolling back. The braking force of the parking brake is not released until sufficient driving force has been built up at the wheels.



### **Tips**

For safety reasons, the parking brake is released automatically only when the driver's safety belt is engaged in the buckle.

### Starting off with a trailer

To prevent rolling back unintentionally on an incline, do the following:

- Keep the switch pulled and depress the accelerator. The parking brake stays applied and prevents the vehicle from rolling backward.
- You can release the switch once you are sure that you are developing enough driving force at the wheels by depressing the accelerator.

Depending on the weight of the rig (vehicle and trailer) and the severity of the incline, you may roll backwards as you start. You can prevent rolling backwards by holding the parking brake switch pulled out and accelerating - just as you would when starting on a hill with a conventional hand brake.

### **Emergency braking**

In the event that the conventional brake system fails or locks.

- In an emergency, pull the switch and continue to pull it to slow your vehicle down with the parking brake.
- As soon as you release the switch or accelerate, the braking process stops.

If you pull the switch and hold it above a speed of about 5 mph (8 km/h), the emergency braking function is initiated. The vehicle is braked at all four wheels by activating the hydraulic brake system. The brake performance is similar to making an emergency stop ⇒ Λ.

In order not to activate the emergency braking by mistake, an audible warning tone (buzzer) sounds when the switch is pulled. As soon as the switch is released, or the accelerator pedal is depressed, emergency braking stops.



### WARNING

Emergency braking should only be used in an emergency, when the normal foot brake has failed or the brake pedal is obstructed. Using the parking brake to perform emergency braking will slow your vehicle down as if you had made a full brake application. The laws of physics cannot be suspended even with ESC and its associated components (ABS, ASR, EDS). In corners and when road or weather conditions are bad, a full brake application can cause the vehicle to skid or the rear end to break away risking an accident.

## Driver messages in the instrument cluster

### Caution: Vehicle parked too steep

This message appears when the parking brake is applied on an incline that exceeds about 30%.

In this case the braking power of the parking brake may **not be adequate** to prevent the vehicle from rolling unintentionally.

### Press brake pedal to release parking brake

This driver message appears when the switch to release the parking brake was pressed. The parking brake can only be released if you step on the brake pedal and at the same time press the switch or you automatically release the parking brake with the starting assist ⇒ page 90.

## Parking brake malfunction!

This driver message appears together with the yellow symbol when there is a parking brake malfunction.

## Start-Stop-System

### Description

Applies to vehicles: with Start-Stop-System

The Start-Stop-System can help increase fuel economy and reduce  ${\rm CO_2}$  emissions.

In the Start-Stop-mode, the engine shuts off automatically when the vehicle is stopped, such as at a traffic light. The ignition remains switched on during this stop phase. The engine will be automatically restarted when needed.

The last Start-Stop-System setting (on/off using the button (A) will be restored when the ignition is turned on. The LED in the (A) button turns on when the Start-Stop-System is switched off manually.

## Basic requirements for the Start-Stop mode

- The driver's door is closed.
- The driver's seat belt is latched.
- The hood is closed.
- The vehicle must have been driven faster than 2.5 mph (4 km/h) since the last stop.
- A trailer is not hitched to the vehicle.

## ⚠ WARNING

- Never turn off the engine before the vehicle has come to a complete stop. The full function of the brake booster and the power steering is not guaranteed. You must use more force to turn or brake if necessary. Because you cannot steer and brake as you usually would, this could lead to crashes and serious injuries.
- To reduce the risk of injuries, make sure that the Start-Stop-System is turned off when working in the engine compartment ⇒ page 93.




### Note

Always switch off the Start-Stop-System when driving through water  $\Rightarrow$  page 93.

### Starting/stopping the engine

Applies to vehicles: with Start-Stop-System

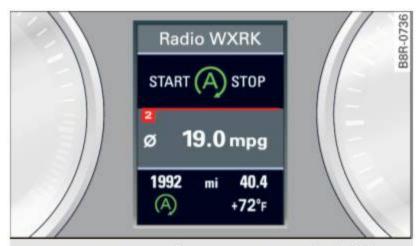

**Fig. 102** Instrument cluster: Engine switched off (stop phase)

- ► Slow the vehicle to a stop using the brake and keep pressing the brake pedal. The engine will switch off. The indicator light appears in the instrument cluster display and START (A) STOP also appears in the trip computer.
- When you take your foot off the brake pedal, the engine restarts. The indicator light turns off.

#### Additional information

The engine will switch off in the P, D/S and N positions as well as in manual mode. In the P position, the engine will also remain off if you take your foot off the brake pedal. The engine starts again when you select another selector lever position and take your foot off the brake pedal.

If you select the R position during a Stop phase, the engine will start again.

Shift from D/S to P quickly to prevent the engine from starting unintentionally when shifting through R.

You can determine for yourself if the engine will stop or not by reducing or increasing the amount of force you use to press the brake pedal. For example, if you only lightly press on the brake pedal in stop-and and-go traffic or when turning, the engine will not switch off when the vehicle is stationary. As soon as you press the brake down harder, the engine will switch off.




### **Tips**

- Press the brake pedal during a stop phase to keep the vehicle from rolling.
- When you stop and the start-stop-system turns the engine off, the ignition remains on. Make sure that the ignition is switched off before exiting the vehicle.
- The ignition will turn off if you press the START ENGINE STOP \* button during a stop phase.
- The image in the display is slightly different in some models.

### General information

Applies to vehicles: with Start-Stop-System

The standard Start-Stop-mode can be cancelled for different system-related reasons.

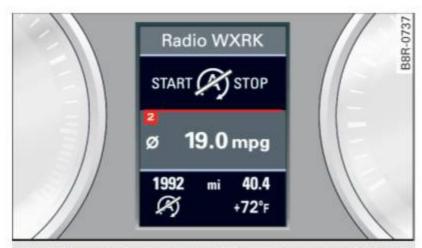

**Fig. 103** Instrument cluster: Engine-Stop temporarily unavailable

### Engine will not switch off

Before each stop phase, the system checks if certain conditions have been met. For example, the engine will **not** be switched off in the following situations:

- The engine has not reached the minimum required temperature for Start-Stop-mode.
- The interior temperature selected by the A/C system has not been reached.
- The outside temperature is extremely high/ low.
- The windshield is being defrosted⇒ page 81.
- The parking system\* is switched on.
- The battery charge level is too low.
- The steering wheel is sharply turned or there is a steering movement.

- After engaging the reverse gear.
- On sharp inclines.

appears in the instrument cluster display and START (STOP) also appears in the trip computer.

### Engine automatically restarts

The stop phase is interrupted in the following situations, for example. The engine restarts without any action by the driver.

- The interior temperature varies from the temperature selected in the A/C system.
- The windshield is beeing defrosted
   ⇒ page 81.
- The brake pedal is pressed several times in a row.
- The battery charge level becomes too low.
- High power consumption.

appears in the instrument cluster display and START (STOP) also appears in the trip computer.



### Tips

If you shift into the D/S or N positions after shifting into reverse, the vehicle must be driven faster than 6 mph (10 km/h) in order for the engine to switch off again.

## Switching the Start-Stop-System on/off manually

Applies to vehicles: with Start-Stop-System

If you do not wish to use the system, you can switch it off manually.



Fig. 104 Center console: Start-Stop-System button

► To switch the Start-Stop-System on/off manually, press the 🖭 button. The LED in

the button turns on when the system is switched off.

In vehicles without the MMI\*, the method button is found underneath the selector lever.



### **Tips**

If you switch the system off during a stop phase, the engine will start again automatically.

## Messages in the instrument cluster display

Applies to vehicles: with Start-Stop-System

## Start-stop system: deactivated. Please restart engine manually

This message appears when specific conditions are not met during a stop phase and the Start-Stop-System will **not** be able to restart the engine. The engine must be started with the key or with the START ENGINE STOP\* button.

## Start-stop system: system fault. Function unavailable

There is a malfunction in the Start-Stop-System. Drive the vehicle to an authorized repair facility for servicing as soon as possible to correct the malfunction.

### Transmission: Car may roll! Shift to park!

This message appears if the selector lever is not in the P position when the driver's door is opened. You will also hear a warning tone. Shift the selector lever to the P position. Otherwise, the vehicle could roll.

## Speed warning system

### Overview

The speed warning system helps you to keep your driving speed below a set speed limit.

The speed warning system warns if the driver exceeds a previously stored maximum speed.

A warning tone will sound as soon as the vehicle speed exceeds the set speed by about

3 mph (3 km/h). At the same time, a warning

symbol appears in the display. The symbol's appearance might be different in some models.

The speed warning system has **two warning thresholds** that function independently of each other and that have somewhat different purposes:

### Speed warning 1

You can use speed warning 1 to set the maximum speed while you are driving. This setting will remain in effect until you turn off the ignition, assuming that you have not changed or reset the setting.

The speed warning symbol (USA models)/
(Canada models) in the warning 1 display appears when you exceed the maximum speed. It goes out when the speed falls below the stored maximum speed.

The speed warning symbol will also go out if the speed exceeds the stored maximum speed by more than about 25 mph (40 km/h) for at least 10 seconds. The stored maximum speed is deleted.

Setting speed warning  $1 \Rightarrow page 94$ .

### Speed warning 2

Storing warning 2 is recommended if you always want to be reminded of a certain speed, for example when you are traveling in a country that has a general maximum speed limit, or if you do not want to exceed a specified speed for winter tires.

The speed warning 2 symbol, (USA models) (Canada models) appears in the display when you exceed the stored speed limit. Unlike warning 1, it will not go out until the vehicle speed drops below the stored speed limit.

Setting speed warning 2 ⇒ page 94.



### **Tips**

Even though your vehicle is equipped with a speed warning system, you should still watch the speedometer to make sure you are not driving faster than the speed limit.

### Speed warning 1: setting a speed limit

Warning threshold 1 is set by the SET button.



Fig. 105 SET button in the instrument cluster

### Storing the maximum speed

- Drive at the desired maximum speed.
- Press the SET button in the instrument panel display ⇒ fig. 105 for 1 second.

### Resetting the maximum speed

- ▶ Drive the vehicle at a speed of at least 3 mph (5 km/h)
- Press the SET button for more than 2 seconds.

The speed warning symbol (USA models)/
(Canada models) will appear briefly in the display when you release the SET button to indicate that the maximum speed has been stored successfully.

The maximum speed remains stored until it is changed by pressing the SET button again briefly or until it is deleted by a lengthy push on the button.

### Speed warning 2: setting a speed limit

The MMI\* or the radio control unit is used to set, change or delete warning threshold 2.

- Select: CAR function button > Instrument cluster > Speed warning. Or
- Select: CAR function button > Car systems\* control button > Driver assist >
   Speed warning.

Warning threshold 2 can be set in the speed range starting from 20 mph to 150 mph

(30 km/h to 240 km/h). Settings can each be adjusted in intervals of 5 mph (10 km/h).

### Cruise control

### Switching on

The cruise control system makes it possible to drive at a constant speed starting at 20 mph (30 km/h).



Fig. 106 Control lever with push-button

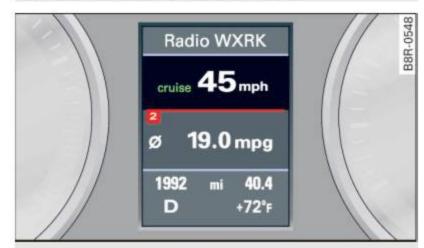


Fig. 107 Display: Selected speed

- Pull the lever to position ① ⇒ fig. 106 to switch the system on.
- Drive at the speed to be controlled.
- Press button (A) to set that speed.

The stored speed and the indicator light **CRUISE** (US model)/ (Canadian model) appear in the instrument cluster display  $\Rightarrow$  fig. 107. The display may vary, depending on the type of display in your vehicle.

The speed is kept constant by modifying engine power or through an active brake intervention.



### WARNING

 Always pay attention to the traffic around you when the cruise control is in operation. You are always responsible for

- your speed and the distance between your vehicle and other vehicles.
- For reasons of safety, cruise control should not be used in the city, in stopand-go traffic, on twisting roads and when road conditions are poor (such as ice, fog, gravel, heavy rain and hydroplaning) - you could have an accident.
- Switch the cruise control off temporarily when driving in turning lanes, highway exits or in construction zones.
- Please note that unconsciously "resting" your foot on the accelerator pedal causes cruise control not to brake. This is due to the control system being overridden by the driver's acceleration.
- Never use the cruise control when driving off-road or on unpaved roads. The cruise control is intended for use only when the vehicle is being operated on paved roads, and is not suitable for use off-road or on unpaved roads.
- If a brake system malfunction such as overheating occurs when the cruise control system is switched on, the braking function in the system may be switched off. The other cruise control functions remain active as long as the indicator light CRUISE (US model)/ (Canadian model) is on.



### **Tips**

The brake lights illuminate as soon as the brakes apply automatically.

### Changing speed

- ► To increase/decrease the speed in increments, tap the lever in the (+)/(-) direction ⇒ page 95, fig. 106.
- ► To increase/decrease the speed quickly, hold the lever in the +/- direction until the desired speed is displayed.

You can also press the accelerator pedal down to increase your speed, e.g. if you want to pass someone. The speed you saved earlier

will resume as soon as you let off of the accelerator pedal.

If, however, you exceed your saved speed by 5 mph (10 km/h) for longer than 5 minutes, the cruise control will be turned off temporarily. The green symbol in the display turns white, the saved speed is retained.

### Pre-selecting speed

You can pre-select your desired speed while the vehicle is not moving.

- Turn on the ignition.
- Pull lever into position ① ⇒ page 95, fig. 106.
- ► Press the lever in the → or → direction to increase or decrease your speed.
- ▶ Let go of the lever to save that speed.

This function makes it possible, for example, to save the speed you want before driving on the highway. Once on the highway, activate the cruise control by pulling the lever toward ①.

### Switching off

### Temporary deactivation

- Step on the brake pedal, or
- Press the lever into position ② (not clicked into place) ⇒ page 95, fig. 106, or
- Drive for longer than 5 minutes at more than 5 mph (10 km/h) above the stored speed.

### Switching off completely

- Press lever into position (2) (clicked into place), or
- Switch the ignition off.

The speed you saved will be retained if the cruise control has been switched off temporarily. To resume the saved speed, let up on the brake and pull the lever to position (1).

The saved speed will be erased after turning the ignition off.



### WARNING

You should only resume the saved speed if it is not too high for existing traffic conditions. Otherwise you risk an accident.

97

## Hybrid

## Hybrid drive

### Introduction

Applies to vehicles: with hybrid drive

### General information

The hybrid drive is a combined drive concept that automatically switches between combustion engine and electric drive types or combines them.

All work on high voltage systems is intended only for high voltage technicians and may only be performed by authorized service facilities in accordance with Audi regulations.

The high voltage system is composed of the following high voltage components: the high voltage battery, the power electronics, the electric motor, the high voltage A/C compressor and the orange high voltage wiring.

### High voltage battery

The high voltage battery is located in the luggage compartment underneath the cargo floor. You do not need to perform any maintenance work on the high voltage battery. Additional information about the high voltage battery can be found under ⇒ page 105.

The high voltage battery service plug is also found underneath an orange cover under the cargo floor. The service plug is provided only for use by service personnel and must not be removed by others who are not trained to use it.

## $\Lambda$

### WARNING

The voltage in the high voltage system is life-threatening. Touching a damaged high voltage component can result in a fatal electric shock. The components in the high voltage system are marked with a warning label which warns against the high voltage.

Never perform work on orange high voltage cables or on high voltage components. Only authorized repair facilities

- that are certified may perform work on the high voltage system.
- Never open or remove the service plug cover in the center of the cargo floor.
- Never damage, alter or remove the orange high voltage cable or disconnect it from the high voltage system.
- Audi regulations must be followed during all work performed on the high voltage system and high voltage components.



### WARNING

While in electric drive mode, the vehicle produces considerably less idling, driving and operating noise than when the combustion engine is running. This may make it difficult or impossible for others such as pedestrians and children to hear and notice the vehicle when it is in electrical drive mode. This can lead to collisions and injuries, for example in low traffic areas, when maneuvering or when driving in reverse.



### WARNING

Never leave the vehicle unattended while in the drive ready mode. The vehicle could begin moving if the accelerator pedal is pressed, even if the combustion engine is switched off. This may cause collisions and severe or fatal injuries. When the vehicle enters drive ready mode, the status message hybrid ready appears briefly in the instrument cluster display and the needle in the power meter points to READY 

⇒ page 98.

 When exiting the vehicle, make sure the selector lever is in the P position, the ignition is switched off and the hybrid system is deactivated.



### Note

 The high voltage system can be damaged if the vehicle underbody comes into contact with the ground. Immediately drive your vehicle to an authorized repair facility and have it inspected. Do not transport fluids in open containers in the luggage compartment. Spilled fluids can seep underneath the cargo floor. This can damage the high voltage system.

### Starting the vehicle

Applies to vehicles: with hybrid drive

The vehicle is started and turned off either with the ignition key ⇒ page 83 or with the START ENGINE STOP button\* ⇒ page 86 in the same way as a conventional vehicle.

When starting the vehicle, the needles in the instrument cluster move upward briefly. When the vehicle enters drive ready mode, the status message hybrid ready appears briefly in the instrument cluster display and the needle in the power meter points to READY ⇒ page 98.

Depending on the operation mode of the hybrid system, there are two possible drive ready modes after the vehicle has been started:

### Drive ready mode with combustion engine

If the operating requirements ⇒ page 100 for electric drive mode are **not** met, the combustion engine starts the vehicle as usual. You can start driving as usual.

### Drive ready mode with the electric motor

If the operating requirements ⇒ page 100 for the electric drive mode are met, the combustion engine remains off after starting the vehicle.



**Tips** 

To prevent the 12 volt battery from discharging, never leave the vehicle parked in the drive ready mode. Remove the key from the ignition or press the <a href="START ENGINE STOP">START ENGINE STOP</a> button\*. When leaving the vehicle always take the key with you.

#### Power meter overview

Applies to vehicles: with hybrid drive

The power meter shows the hybrid drive condition and the availability of the hybrid system.



Fig. 108 Power meter overview

An economical driving and recuperation range is shown in green. A driving range that is not economical is shown in orange. In addition, the battery status provides information about the high voltage battery charge status.

- Fuel efficient driving within the combustion engine's partial load range
- System limits for electric driving in the EV mode
- 3 Electric driving or driving with the combustion engine (EFFI-CIENCY)
- (4) Vehicle drive ready (READY)
- S High voltage battery charge status
- 6 Recuperation (CHARGE)
- Oriving within the combustion engine's full load range
- 8 100% combustion engine
- Boosting the electric engine assists the combustion engine (BOOST)
- Engaging the conventional brakes with recuperation
- Vehicle not drive ready (OFF)
- EV mode active

The needle remains at **OFF** when the ignition is turned on. When the vehicle enters drive ready mode, the status message **hybrid ready** appears briefly in the instrument cluster display and the needle in the power meter points to **READY**.

#### Indicator lights and messages

Applies to vehicles: with hybrid drive

The indicator lights in the instrument cluster blink or turn on. They indicate functions or malfunctions.

With some indicator lights, messages may appear and a warning tone may sound. Also note the indicator lights in  $\Rightarrow$  page 27.

### Press brake pedal to start vehicle

This message appears if you do not press the brake pedal when starting the vehicle.

### Shift to N or P to start vehicle

This message appears if the selector lever for the automatic transmission is not in the N or P positions when starting the vehicle.

# Hybrid drive: System fault! Power brakes, steering malfunction possible

If the indicator light turns on and this message appears, there is a malfunction in the hybrid system. The brake booster and the power steering may stop working. Stop the vehicle in a safe location as soon as possible.

You may continue driving if the indicator light turns off after starting the vehicle several times. Drive to an authorized repair facility immediately to have the malfunction corrected.

## HYBRID Hybrid drive: System fault! Contact dealer

If the indicator light turns on and this message appears, there is a malfunction in the hybrid system. Drive to an authorized repair facility immediately to have the malfunction corrected.

## Hybrid system: Performance restricted. Please contact dealer

If the indicator light turns on and this message appears, there is an engine control malfunction. The conditional indicator light in the instrument cluster also turns on. The engine output is reduced. Drive to your authorized Audi dealer or qualified repair facility immediately to have the malfunction corrected.

## Hybrid drive deactivated. Please restart engine manually.

This message appears if the high voltage battery charge level has fallen below a certain range or if the ignition key is no longer inside the vehicle for vehicles with the convenience key\*.

Start the engine with either the ignition key  $\Rightarrow$  page 83 or with the START ENGINE STOP button\*  $\Rightarrow$  page 86.

### Hybrid battery: Low battery charge. Battery will be charged while driving.

This message appears if the high voltage battery charge level has fallen below a certain range. If this message turns off after a little while, the high voltage battery charged enough while driving.

If the message does not turn off, have an authorized repair facility correct the malfunction as soon as possible.

### EV mode is currently unavailable.

This message appears if the conditions ⇒ page 100 for enhanced electric driving are not met. Try again at a later time.

### Hybrid functions and operating modes

Applies to vehicles: with hybrid drive



► To turn on EV mode, press the button. The indicator light in the button will turn on. The indicator light also turns on in the instrument cluster display.

The functions and operating modes described below are selected automatically by the vehicle control system, depending on the vehicle operating status. This ensures that the vehicle is always in the correct operating mode. One exception is the enhanced electric driving mode (EV mode), which is activated by the driver ⇒ page 100.

### Driving with the combustion engine

The vehicle is powered by the combustion engine. The high voltage battery is charged simultaneously, if needed.

### Full acceleration (boost)

In full acceleration, the vehicle is powered by both the combustion engine and the electric motor. This operating mode is called *Boost* and is only available for a short amount of time because it uses so much energy. Availability depends on the high voltage battery charge level.

The boost operating mode is activated by pressing the accelerator pedal all the way down.

### **Electric driving**

The vehicle can be driven completely electrically depending on the high voltage battery charge level and the driving resistance. The combustion engine turns off at that time.

The combustion engine starts when accelerating or when the high voltage battery charge level drops below a certain threshold. The vehicle resumes electric driving once the acceleration and the high voltage battery charge level permit.

## Enhanced electric driving mode (EV mode)

Pressing the  $\[ \Rightarrow \]$  button  $\[ \Rightarrow \]$  fig. 109 can extend the usual limits on electric driving so that you can always drive in electric mode, if the condition of the electrical system permits. The operating mode is then set to maximum electric drive  $\[ (3), (2) \Rightarrow \]$  page 98, fig. 108. It can be driven completely electrically for up to 1.8 miles  $\[ (3 \text{ km}) \]$  at a constant 37 mph  $\[ (60 \text{ km/h}) \]$ .

The following conditions must be met to activate the enhanced electric drive:

- The high voltage battery must be sufficiently charged.
- The temperature of the 12 volt batteries and the high voltage battery must be sufficient.
- The vehicle speed must not be higher than
   62 mph (100 km/h).
- The transmission must not be in tiptronic mode.

 ESC offroad mode and hill descent assist must not be turned on ⇒ page 198.

The combustion engine turns on and interrupts the enhanced electric drive mode when
the vehicle is accelerated. The gray indicator
light so turns on in the display. The enhanced electric drive mode resumes automatically once acceleration stops.

The enhanced electric drive mode is **deactivated** if at least one of the following conditions is met:

- The ignition is turned off.
- The substant button is pressed again.
- The high voltage battery charge level is low.
- The vehicle speed is higher than approximately 62 mph (100 km/h).
- The S selector lever position or tiptronic mode is selected.
- ESC offroad mode or hill descent assist is switched on.

The button must be pressed to reactivate it.

### Start-Stop function

The combustion engine is operated only as needed. Generally, the combustion engine turns off when the vehicle is stationary and the high voltage battery powers the electrical vehicle systems.

The purpose of automatically shutting the combustion engine off in hybrid drive mode is to save fuel. All of the important vehicle systems, such as steering, brakes and the A/C system, continue to remain active. In some cases, systems may require the combustion engine to continue running when the vehicle is stationary. When driving in congested traffic for long periods of time, the combustion engine will cycle on when the vehicle is stationary to keep the high voltage battery charged.

### Gliding

If the gas pedal is not pressed and the D position is selected, the combustion engine re-

mains turned off up to speeds of approximately 99 mph (160 km/h). Driving conservatively like this can reduce fuel consumption.

### Energy recovery (recuperation)

When braking, the electric motor will act as a generator creating electric energy that is then stored in the high voltage battery. This also occurs when the vehicle is coasting or driving downhill. The combustion engine is automatically turned off in this case.

The vehicle is braked with the electric motor by applying early and even pressure to the brakes and using short pedal movements ⇒ page 98, fig. 108 ⑥. By doing this, a large amount of the kinetic energy is recovered and may be stored as electric energy in the high voltage battery. During heavy braking, the conventional brakes are also activated ⇒ page 98, fig. 108 ⑩.

The energy recovery is shown in the MMI display  $\Rightarrow$  page 104.

### Automatic start of the combustion engine

Various operating conditions cause the combustion engine to start automatically:

- The high voltage battery charge level is low.
- The temperature of the combustion engine is low.
- The temperature of the catalytic converter is low
- The power output needed for the A/C system is high.
- The vehicle speed is high.
- The vehicle acceleration is high.
- The incline is steep.
- High charge level for the high voltage battery when coasting. In this case, the high voltage battery cannot absorb any more energy and so the electric motor cannot slow down the vehicle. The combustion engine turns on (engine brake). In this situation the high voltage battery will show a Max charge.

## Tips for Driving Efficiently with your Hybrid

Applies to vehicles: with hybrid drive

| Driving situa-<br>tions                         | Conditions   | Vehicle behavior   |
|---|--|--|
| Starting from a stop                            | <ul> <li>Shift into the D position.</li> <li>Release the brake pedal.</li> <li>Only press moderately on the accelerator pedal.</li> </ul>  | In the D position, the hybrid system adapts to the driving situation by automatically switching between the combustion engine and electric drive types or by combining them.   |
| Constant driv-<br>ing and coasting<br>(gliding) | <ul> <li>Cautious driving and reserved acceleration.</li> <li>Release the accelerator pedal early and entirely.</li> </ul>   | The kinetic energy of the vehicle is used to move the vehicle.  When you release the accelerator pedal entirely, the combustion engine turns off automatically and is disengaged. The vehicle glides without being propelled.  |
| Energy recovery<br>(recuperation)               | – Brake early and evenly with short pedal movements.   | The electric motor brakes the vehicle. By doing this, a large amount of the kinetic energy is recovered and may be stored in the high voltage battery in the form of electric energy.  |
| Driving in city<br>traffic                      | <ul> <li>Reserved acceleration and early and even braking with short pedal movements.</li> <li>Use the  button sparingly.</li> </ul>   | The kinetic energy of the vehicle is used to move the vehicle.  The battery drains quickly when the button is turned on, which can increase fuel consumption because electric driving is given priority, even if driving with the combustion engine on would be more efficient.                |
| Driving on high-<br>ways and ex-<br>pressways   | <ul> <li>Intentionally take your foot off of the gas pedal to allow for lengthy coasting.</li> <li>Reduce the vehicle speed by releasing the accelerator pedal and not by braking.</li> <li>Avoid vehicle speeds above approximately 99 mph (160 km/h).</li> </ul> | When you release the accelerator pedal entirely, the combustion engine turns off automatically and is disengaged. The vehicle glides without being propelled.  Fuel consumption can be reduced by coasting.  It is possible to coast up to a vehicle speed of approximately 99 mph (160 km/h). |
|   | <ul> <li>Use the S selector lever position<br/>and tiptronic mode sparingly.</li> </ul>  | A sporty driving style increases fuel consumption.   |

103

| Driving situa-<br>tions    | Conditions  | Vehicle behavior   |
|----------------------------|---|--|
| Driving in cold<br>weather | - Do not run the combustion engine while the vehicle is parked to warm the engine.                          | The temperature of the combustion engine rises very slowly and the fuel consumption increases considerably.  |
|                            | <ul> <li>Use the rear window/exterior<br/>mirror defroster and the seat heat-<br/>ing sparingly.</li> </ul> | This conserves the energy in the high voltage battery so that it is available to run the vehicle in electric mode.   |
|                            | – Park the vehicle in a garage over-<br>night.  | This reduces exposure of the high voltage battery to cold temperatures. The required temperature range for the high voltage battery will then be reached more quickly after you start driving. |

### **Energy flow display**

Applies to vehicles: with hybrid drive

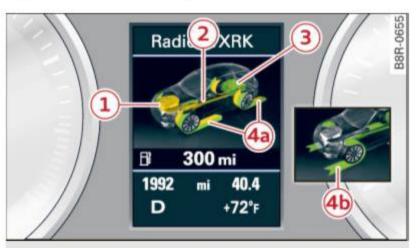


Fig. 110 Instrument cluster: energy flow display

The energy flow of the hybrid system is shown in the instrument cluster display and in the MMI display. The image is animated in the MMI display.

### Image in the instrument cluster display

Press the RESET button in the windshield wiper lever repeatedly until the energy flow display ⇒ fig. 110 appears.

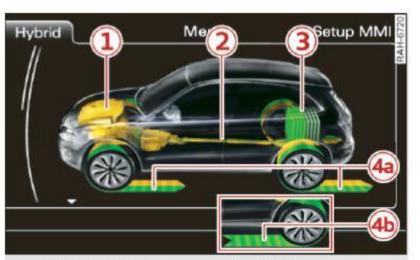


Fig. 111 MMI display: energy flow display

### Image in the MMI display

Select: MENU function button > Hybrid control button ⇒ fig. 111.

| Component           | Color        | Meaning   |
|---------------------|--------------|---|
| 1 Combustion engine | orange       | The combustion engine is running                              |
|                     | gray         | The combustion engine is off                                  |
| 2 Propshaft         | green        | Electric driving/recuperating                                 |
|                     | orange       | Driving with the combustion engine                            |
|                     | green-orange | Driving with the combustion engine and electric motor (boost) |
|                     | gray         | Vehicle stationary/rolling in the N selector lever position   |

| 3 High voltage battery | green                   | High voltage battery charge level                             |
|------------------------|-------------------------|---|
|                        | green (animated in MMI) | High voltage battery is charging                              |
|                        | gray                    | Vehicle is not in drive ready mode                            |
| (4) Movement arrow     | green                   | Electric driving  |
|                        | orange                  | Driving with the combustion engine                            |
|                        | green-orange            | Driving with the combustion engine and electric motor (boost) |
| (4) Movement arrow     | green                   | Recuperating  |

## (i)

### **Tips**

The Energy flow display will not shown in the MMI display when the reverse gear is engaged, due to safety reasons.

### Consumption display

Applies to vehicles: with hybrid drive

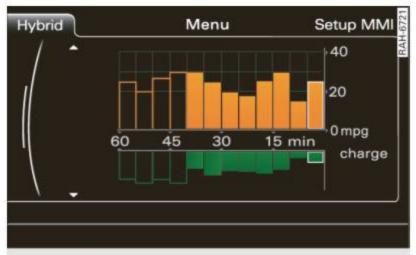


Fig. 112 MMI display: consumption display

The consumption display shows the average energy consumption and the recuperation quantity in 5 minute intervals.

### Calling up the consumption display

- Select: MENU function button > Hybrid control button.
- ► Turn the control knob counter-clockwise.

### Resetting the consumption display

- Select: MENU function button > Hybrid control button.
- Turn the control knob to Reset consumption statistics.

The orange bars show the average consumption and the green bars show the recuperation quantity. Each bar represents a measured 5

minute interval. The display covers a 60 minute time period.

The bar with the white border on the outer right shows the current average consumption or the current recuperation quantity. After 5 minutes, this bar travels a step to the left and a new bar appears in the outer right.

The filled bars show the values for the current drive cycle. Once the ignition is switched off and on again, all of the previous bars are displayed as not filled and new filled bars appear on the right. This is so that the values from the previous trips and the current trip can be compared visually.

### Vehicle tool kit and tire repair set

Applies to vehicles: with hybrid drive



Fig. 113 Luggage compartment: vehicle tool bag and tire repair set

The vehicle tool kit is found under a cover in the cargo floor  $\Rightarrow$  fig. 113 (A). The tire repair set (Tire Mobility System) is found in the storage compartment in the right side trim panel (B).

105

Additional information about the vehicle tool kit may be found under ⇒ page 269 and about the tire repair set under  $\Rightarrow$  page 272.



### Tips

The right storage compartment in the luggage compartment and its contents must always be kept in the vehicle. The vehicle must not be operated without the tire repair set.

### Charging the batteries

Applies to vehicles: with hybrid drive

The vehicle is equipped with two 12 volt batteries and a high voltage battery.

If the 12 volt batteries are dead, they may be charged with a charger or the vehicle may be jump started with assistance from another vehicle in the same way as a conventional vehicle.

The same applies to the high voltage battery if it is discharged. However, in this case, the charging process is accompanied with messages in the instrument cluster display. The ignition must be switched on and all unnecessary electric components must be turned off.

The connections in the engine compartment are used for both charging and jump starting  $\Rightarrow$  page 245 or  $\Rightarrow$  page 284.

### Vehicle not ready to start. See owner's manual

This message appears if the high voltage battery charge level is too low. The vehicle can no longer be started with its own power. The high voltage battery must be charged with a charger or the vehicle must be jump started with the aid of another vehicle.

After the connecting the charger or jumper cables, the ignition must be turned off for approximately two minutes and then turned on again. After no more than one minute, one of the following indicator lights turns on in the instrument cluster display.

### Charging battery. Please wait...

If the indicator light turns on and this message appears, the high voltage battery is charging or the vehicle is being jump started with assistance from another vehicle.

If the 12 volt batteries are dead, the WBRII indicator light turns on. The charging procedure takes longer in this case because the 12 volt batteries are charged first. The procedure goes faster with the ignition switched off.

### Vehicle ready to start.

This message appears if the charging procedure was successful. The vehicle may be started again.

### Battery could not be charged enough to start vehicle.

This message appears if the charging procedure was not successful or it was interrupted. This may happen if the charger or the battery in the vehicle that is assisting is too weak. If the vehicle cannot be started, see an authorized repair facility for assistance.



### **Tips**

- The charger should deliver a current of at least 30 A. Otherwise charging the high voltage battery will take considerably longer. A current between 50 A and 70 A is ideal.
- The vehicle that is assisting should be somewhat within the same vehicle class when jump starting a vehicle. A smaller vehicle's battery may be drained.
- After approximately 30 minutes, the charging procedure ends because the ignition is automatically turned off. If you would like to continue to charge the battery, turn the ignition on again.

### Vehicle transport

Applies to vehicles: with hybrid drive

The following contains information you should know about transporting your vehicle.

The lithium ion battery (SANYO 72 UF 121 285) installed in your vehicle has passed test 38.3 in accordance with UN handbook tests and criteria. The vehicle may be transported with the battery installed as conventional class 9 hazardous materials without additional official consent for air and sea transportation (current law ICAO-TI and IMDG-Code 01.01.2012).

### Audi adaptive cruise control and braking guard

### Introduction

Applies to vehicles: with Audi adaptive cruise control

The adaptive cruise control system assists the driver by regulating vehicle speed and helping to maintain a set distance to the vehicle ahead, within the limits of the system. If the system detects a moving vehicle up ahead, adaptive cruise control can brake and then accelerate your vehicle. This helps to make driving more comfortable on long highway stretches.

The braking guard system can warn you about an impending collision and initiate braking maneuvers ⇒ page 113.

Adaptive cruise control and braking guard have technical limitations that you must know, so please read this section carefully, understand how the system works and use them properly at all times.

### General information

### **General information**

Applies to vehicles: with Audi adaptive cruise control



Fig. 114 Front of the vehicle: Position of radar sensor

The area that contains the radar sensor ⇒ fig. 114 must never be covered by stickers or other objects or obstructed with dirt, insects, snow or ice that will interfere with the adaptive cruise control system and braking guard. For information on cleaning, refer to ⇒ page 219. The same applies for any modifications made in the front area. The function of the adaptive cruise control system and braking guard is limited under some conditions:

- Objects can only be detected when they are within sensor range ⇒ page 109, fig. 117.
- The system has a limited ability to detect objects that are a short distance ahead, off to the side of your vehicle or moving into your lane.
- Some kinds of vehicles are hard to detect; for example motorcycles, vehicles with high ground clearance or overhanging loads may be detected when it is too late or they may not be detected at all.
- When driving through curves ⇒ page 108.
- Stationary objects ⇒ page 108.

### WARNING

Always pay attention to traffic when adaptive cruise control is switched on and braking guard is active. As the driver, you are still responsible for starting and for maintaining speed and distance to other objects. Braking guard is used to assist you. The driver must always take action to avoid a collision. The driver is always responsible for braking at the correct time.

- Improper use of adaptive cruise control can cause collisions, other accidents and serious personal injury.
- Never let the comfort and convenience that adaptive cruise control and braking guard offer distract you from the need to be alert to traffic conditions and the need to remain in full control of your vehicle at all times,
- Always remember that the adaptive cruise control and braking guard have limits – they will not slow the vehicle down or maintain the set distance when you drive towards an obstacle or something on or near the road that is not moving, such as vehicles stopped in a traffic jam, a stalled or disabled vehicle. If registered by the radar sensor, vehicles or obstacles that are not moving can trigger a collision warning and if

- confirmed by the video camera, an acute collision warning.
- For safety reasons, do not use adaptive cruise control when driving on roads with many curves, when the road surface is in poor condition and/or in bad weather (such as ice, fog, gravel, heavy rain and hydroplaning). Using the system under these conditions could result in a collision.
- Switch adaptive cruise control off temporarily when driving in turning lanes, on expressway exits or in construction zones. This prevents the vehicle from accelerating to the set speed when in these situations.
- The adaptive cruise control system will not brake by itself if you put your foot on the accelerator pedal. Doing so can override the speed and distance regulation.
- When approaching stationary objects such as stopped traffic, adaptive cruise control will not respond and braking guard will have limited function.
- The adaptive cruise control system and braking guard do not react to people, animals, objects crossing the road or oncoming objects.
- The function of the radar sensor can be affected by reflective objects such as guard rails, the entrance to a tunnel, heavy rain or ice.
- Never follow a vehicle so closely that you cannot stop your vehicle safely. The adaptive cruise control cannot slow or brake the vehicle safely when you follow another vehicle too closely. Always remember that the automatic braking function cannot bring the vehicle to a sudden or emergency stop under these conditions.
- To prevent unintended operation, always switch adaptive cruise control off when it is not being used.

### (!)

### Note

The sensor can be displaced by impacts or damage to the bumper, wheel housing and

underbody. That could affect the adaptive cruise control system and braking guard. Have your authorized Audi dealer or authorized Audi Service Facility check their function.

#### In curves

Applies to vehicles: with Audi adaptive cruise control

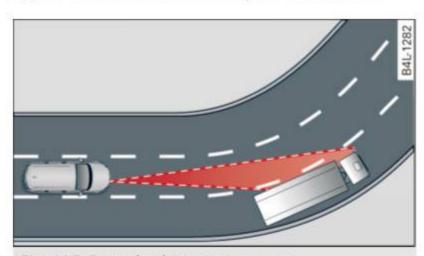


Fig. 115 Example: driving into a curve

When driving into a curve ⇒ fig. 115 and out of a curve, the adaptive cruise control may react to a vehicle in the next lane and apply the brakes. You can override or prevent the braking by pressing the accelerator pedal briefly.

### Stationary objects

Applies to vehicles: with Audi adaptive cruise control

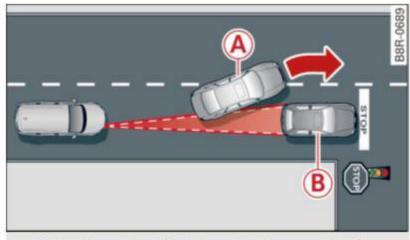


Fig. 116 Example: object changing lanes and stationary object

The adaptive cruise control system only reacts to objects that are moving or that the system has already detected as moving. For example, if a vehicle (A), which has already been detected by the adaptive cruise control, turns or changes lanes and another stationary vehicle (B) is located in front of that vehicle, the system will not react to the stationary vehicle.

# Audi adaptive cruise control

#### Description

Applies to vehicles: with Audi adaptive cruise control

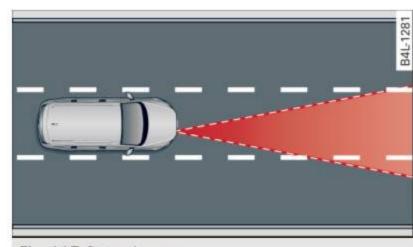


Fig. 117 Detection range

### What can adaptive cruise control do?

The adaptive cruise control works in conjunction with a radar sensor installed in the front of the vehicle ⇒ page 107, fig. 114, which is subject to designated system limits ⇒ page 109. Stationary objects are disregarded.

On open roads with no traffic, adaptive cruise control works like a regular cruise control system. The stored speed is maintained. When approaching a moving vehicle detected up ahead, the adaptive cruise control system automatically slows down to match that vehicle's speed and then maintains the distance that the driver previously stored. As soon as the system does not detect a vehicle up ahead, adaptive cruise control accelerates back up to the stored speed.

#### Which functions can be controlled?

When you switch adaptive cruise control on, you can set the current speed as the "control speed" ⇒ page 109, Switching on and off.

When driving, you can stop cruise control ⇒ page 111 or change the speed ⇒ page 110 at any time.

You can also set the distance to the object ahead and set the adaptive cruise control driving program ⇒ page 111.

### Switching on and off

Applies to vehicles: with Audi adaptive cruise control

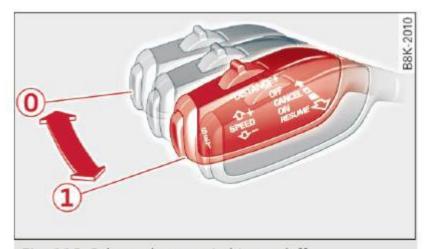


Fig. 118 Selector lever: switching on/off



Fig. 119 Instrument cluster: adaptive cruise control

You can set any speed between 20 mph and 95 mph (30 and 150 km/h).

Indicator lamps and messages in the instrument cluster display inform you about the current system status and settings.

### Switching adaptive cruise control on

▶ Pull the lever toward you into position ①
⇒ fig. 118. ACC: Standby appears in the instrument cluster display.

# Setting the speed and activating regulation

▶ To set the current speed, press the SET button ⇒ fig. 118. The set speed is shown in the tachometer (A) and is also shown briefly in the display (D) ⇒ fig. 119.

### Switching adaptive cruise control off

Push the lever away from you into position
 until it clicks into place. The message
 ACC: Off appears.



### (B) Indicator lights

- Adaptive cruise control is switched on. No vehicles are detected up ahead. The stored speed is maintained.

A moving vehicle is detected up ahead.

The adaptive cruise control system regulates the speed and distance to the moving vehicle ahead and accelerates/brakes automatically.

■ - When automatic braking is not able to keep enough distance to a previously detected moving vehicle up ahead, you must take control and brake ⇒ page 112, Request for driver intervention.

### (C) Display

If adaptive cruise control is not shown in the display, you can call it up with the RESET button ⇒ page 20.

Based on the symbols in the display, you can determine if the system is maintaining a distance to the vehicle ahead and what that distance is.

No vehicle - No vehicle ahead was detected.

White vehicle - A vehicle ahead was detected.

**Red vehicle** - Prompt for the driver to take action  $\Rightarrow$  page 112.

Both **arrows** on the **scale** (c) indicate the distance to the vehicle ahead. No arrow appears when the vehicle is on an open road and there is no object ahead. If an object is detected ahead, the arrow moves on the scale.

The green zone on the scale shows the stored distance. For information on changing the stored distance, refer to ⇒ page 111. If the distance selected is too close or may soon become too close, the arrows move into the red zone on the scale.

### A

### WARNING

Improper use of the adaptive cruise control can cause collisions, other accidents and serious personal injuries.

 Pressing the SET button when driving at speeds below 20 mph (30 km/h), will automatically accelerate the vehicle to 20 mph (30 km/h), which is the minimum speed that can be set.



### **Tips**

- If you switch the ignition or the adaptive cruise control off, the set speed is erased from the system memory.
- The Electronic Stabilization Control (ESC) is automatically turned on when the adaptive cruise control is turned on. You cannot switch the ESC into ESC Offroad mode while the adaptive cruise control is turned on ⇒ page 198.

### Changing the speed

Applies to vehicles: with Audi adaptive cruise control



Fig. 120 Selector lever: changing the speed

- To increase or reduce the speed in increments, tap the lever up or down.
- To increase or reduce the speed quickly, hold the lever up or down until the red LED (A) reaches the desired speed ⇒ page 109, fig. 119.

Following any changes, the new stored speed will be displayed briefly in the display 

⇒ page 109, fig. 119.

### Interrupting cruise control

Applies to vehicles: with Audi adaptive cruise control

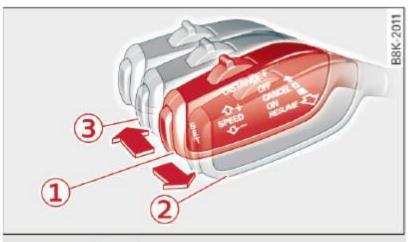


Fig. 121 Selector lever

Requirement: adaptive cruise control must be switched on  $\Rightarrow$  fig. 121 (1).

### Overriding cruise control

- To accelerate manually, press the accelerator pedal. The message ACC: override appears.
- ➤ To resume adaptive cruise control, remove your foot from the gas pedal. The system returns again to the speed that was saved before.
- You can save a new speed at any time by pressing the SET button ⇒ fig. 121.

### Canceling cruise control while driving

- Move the lever into position 3. The message ACC: Standby appears. Or
- press the brake pedal.
- To resume the stored speed, move the lever into position 2.



### WARNING

Never resume the stored speed if the speed is too high for prevailing road, traffic or weather conditions.

### Setting the distance

Applies to vehicles: with Audi adaptive cruise control



Fig. 122 Selector lever: setting the distance

- Tap the switch to display the current set distance ⇒ fig. 122.
- ➤ To increase or reduce the distance by increments, tap the switch again to the left or right. The distance between the two vehicles will change in the instrument cluster display.

When approaching a moving vehicle up ahead, the adaptive cruise control system brakes to match that object's speed and then maintains the stored distance. If the vehicle ahead accelerates, adaptive cruise control will also accelerate up to the stored speed.

The higher the speed, the greater the distance in yards (meters)  $\Rightarrow \triangle$ . The **Distance 3** setting is recommended.

The distances provided are specified values. Depending on the driving situation and the how the vehicle ahead is driving, the actual distance may be more or less than these target distances.

The various symbols for the time increments appear briefly in the information line 

⇒ page 109, fig. 119 when you change the settings.

⇒\_\_⇒\_\_ **Distance 2:** This setting corresponds to a distance of 118 feet/36 meters when traveling at 62 mph (100 km/h), or a time interval of 1.3 seconds.



⇔\_\_\_⇔\_ **Distance 3:** This setting corresponds to a distance of 164 feet/50 meters when traveling at 62 mph (100 km/h), or a time interval of 1.8 seconds.

⇔\_\_\_\_⇔ **Distance 4:** This setting corresponds to a distance of 210 feet/64 meters when traveling at 62 mph (100 km/h), or a time interval of 2.3 seconds.

### $\Lambda$

### WARNING

Following other vehicles too closely increases the risk of collisions and serious personal injury.

- Setting short distances to the traffic ahead reduces the time and distance available to bring your vehicle to a safe stop and makes it even more necessary to pay close attention to traffic.
- Always obey applicable traffic laws, use good judgment, and select a safe following distance for the traffic, road and weather conditions.

### (i)

### **Tips**

- Distance 3 is set automatically each time you switch the ignition on.
- Your standard settings are automatically stored and assigned to the remote control key being used ⇒ page 36.

### Setting the driving program

Applies to vehicles: with Audi adaptive cruise control

Depending on the selected driving program and distance, driving behavior when accelerating will vary from dynamic to comfortable.

### Setting the driving program for vehicles without Audi drive select\*

- In the radio/MMI\*, select: CAR function button > adaptive cruise control > Driving program > Comfort, Standard or Dynamic. Or
- Select: CAR function button > Car systems\* control button > Driver assist > Adaptive cruise control > Driving program > Comfort, Standard or Dynamic.

### Setting the driving mode for vehicles with Audi drive select\*

Refer to  $\Rightarrow$  page 121.



### **Tips**

Your settings are automatically stored and assigned to the remote control key being used ⇒ page 36.

### Request for driver intervention

Applies to vehicles: with Audi adaptive cruise control



Fig. 123 Instrument cluster: request for driver intervention

In certain situations, the system will prompt you to take action. This could happen, for example, if braking by the adaptive cruise control system is not enough to maintain enough distance to the vehicle ahead.

The instrument cluster will warn you about the danger ⇒ fig. 123:

- A red vehicle is pictured in the display.
- The text DISTANCE! appears in the status bar.
- The red indicator light blinks.
- In addition, a warning tone sounds.

### Audi braking guard

### Description

Applies to vehicles: with Audi adaptive cruise control



Fig. 124 Instrument cluster: approach warning

Braking guard uses a radar sensor. It also functions within the limits of the system when adaptive cruise control is switched off.

### What can braking guard do?

When detected in time, the system can assess situations when a vehicle ahead brakes suddenly or if your own vehicle is traveling at a high speed and approaching a vehicle up ahead that is moving more slowly. Braking guard does not react if it cannot detect the situation.

The system advises you of various situations:

- The distance warning is given if you are too close to the vehicle ahead for a long time. If the vehicle ahead brakes sharply, you will not be able to avoid a collision. The indicator light in the display comes on.
- The approach warning is given when a detected vehicle up ahead in your lane is moving much more slowly than you are or if it brakes sharply. When this warning is given, it may only be possible to avoid a collision by swerving or braking sharply. The indicator light and indicator in the display will warn you about the danger ⇒ fig. 124. You will also hear an acoustic signal.

If you do not react fast enough or do not react at all to the situation, braking guard will inter-

vene by braking and the message **Braking** guard: Activated will appear.

- If a collision is imminent, the system will first provide an acute warning by briefly and sharply applying the brakes.
- If you do not react to the acute warning, braking guard can brake within the limits of the system. This reduces the vehicle speed in the event of a collision.
- At speeds under 20 mph (30 km/h), the system can initiate a complete deceleration shortly before a collision<sup>1)</sup>.
- If the braking guard senses that you are not braking hard enough when a collision is imminent, it can increase the braking force.

#### Which functions can be controlled?

You can switch braking guard and the distance/approach warning on or off in the radio/ MMI\* ⇒ page 114, Settings in the radio/ MMI\*.



### WARNING

Lack of attention can cause collisions, other accidents and serious personal injuries. The braking guard is an assist system and cannot prevent a collision by itself. The driver must always intervene. The driver is always responsible for braking at the correct time.

- Always pay close attention to traffic, even when the braking guard is switched on. Be ready to intervene and be ready to take complete control whenever necessary. Always keep the safe and legal distance between your vehicle and vehicles up ahead.
- Braking guard works within limits and will not respond outside the system limits, for example when approaching a stopped vehicle or stationary obstacle (end of a traffic jam or vehicle that has broken down in traffic).

- Always remember that the radar sensor for the braking guard works only within defined detection and range limits that may prevent the proper detection of other vehicles.
- The radar sensor's function and range can be reduced by rain, snow and heavy spray. Moving vehicles up ahead may not be promptly detected or may not be detected at all.
- Reflective surfaces including crash barriers or tunnel entrances may impair the function of the radar sensor.

### (i)

### **Tips**

- You can cancel the braking that is initiated by the system by braking yourself, by accelerating noticeably or by swerving.
- Braking guard error messages
   ⇒ page 114.
- Keep in mind that braking guard can brake unexpectedly. Always secure any cargo or objects that you are transporting to reduce the risk of damage or injury.

### Settings in the radio/MMI\*

Applies to vehicles: with Audi adaptive cruise control

- ► Select: CAR function button > Audi braking guard. Or
- Select: CAR function button > Car systems\* control button > Driver assist > Audi braking guard.

**System** - Switch braking guard **On** and **Off**. When you switch the ignition on, the message **Braking guard: Off** appears if the system is switched off.

Early warning - The distance and approach warnings in the display can be switched On/Off.



### **Tips**

 Your settings are automatically stored and assigned to the remote control key being used at the times the settings are made ⇒ page 36.

- If you switch the ESC to ESC Offroad mode, the braking guard switches off automatically 

  page 198.
- Switch braking guard off when you are loading the vehicle onto a vehicle carrier, train, ship or other type of transportation. This can prevent undesired warnings from the braking guard system.

### Messages

Applies to vehicles: with Audi adaptive cruise control

### Braking guard: Off

This driver message appears if the system is turned off via the radio/MMI\*. Otherwise, if the system is turned off, the information appears every time shortly after the start of the trip.

This driver's information also appears when the system is not available because of a malfunction or if ESC is switched to the Offroad mode ⇒ page 198. In this state the system no longer warns of a pending collision.

#### Braking guard: Activated

This driver message appears if sharp brake pressure was applied due to an acute warning.

• • •

Three white dots appear if a setting cannot be selected with the operating lever. For example, this happens if you want to raise/lower the speed even though there was no previously saved speed.

#### ACC: Sensor blocked

This message appears if the sensor view is obstructed, for example by leaves, snow, heavy spray or dirt. Clean the sensor ⇒ page 107, fig. 114.

#### ACC: Unavailable

The driver message appears if, for example, the brake temperature is too high. The adaptive cruise control is temporarily unavailable. A chime sounds as a reminder.

#### ACC: Not available

The driver message appears if there is a malfunction. The adaptive cruise control turns off. A chime sounds as a reminder. Have the system checked by an authorized Audi dealer or authorized Audi Service Facility.

### Shift lever position!

The driver message appears if the selector lever is shifted to the N position. The adaptive cruise control is not available while in this position.

#### Stabilization control (ESC)

This message appears if the Electronic Stabilization Control (ESC) is taking action to stabilize the vehicle. The adaptive cruise control turns off. A chime sounds as a reminder.

### Speed too low

This message appears if the current speed is too low **to set** or **to maintain** the desired speed.

The speed being saved must be at least 20 mph (30 km/h). The cruise control is turned off for speeds lower than 12 mph (20 km/h). The adaptive cruise control remains turned on for speeds above 95 mph (150 km/h) (override). It will stabilize again at 95 mph (150 km/h) when the driver takes his foot off of the gas pedal.

### Parking brake!

The driver message appears when the parking brake is activated. Adaptive cruise control is turned off. A chime sounds as a reminder.

### Audi side assist

### Lane change assistant

### Description

Applies to vehicles: with Audi side assist

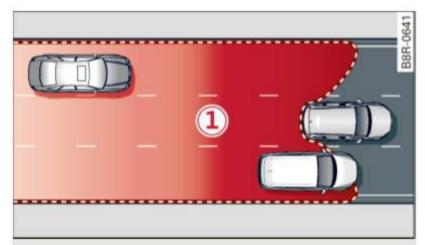


Fig. 125 Sensor detection range



Fig. 126 Display on the exterior mirror

Side assist helps you monitor your blind spot and traffic behind your vehicle. Within the limits of the system, it warns you about vehicles that are coming closer or that are traveling with you within sensor range ①  $\Rightarrow$  fig. 125. If a lane change is classified as critical, the display ② in the exterior mirror  $\Rightarrow$  fig. 126 turns on.

The display in the left exterior mirror provides assistance when making a lane change to the left, while the display in the right exterior mirror provides assistance when making a lane change to the right.

### Information stage

As long as you do not activate the turn signal, side assist *informs* you about vehicles that are detected and classified as critical. The display in the respective mirror turns on, but is dim.

The display remains dim intentionally in the information stage so that your view toward the front is not disturbed.

### Warning stage

If you activate the turn signal, side assist warns you about vehicles that are detected and classified as critical. The display in the respective mirror blinks brightly. If this happens, check traffic by glancing in the rearview mirror and over your shoulder  $\Rightarrow \land$  in General information on page 117.



### **Tips**

- Please refer to the instructions for towing a trailer located in ⇒ page 117.

### **General information**

Applies to vehicles: with Audi side assist

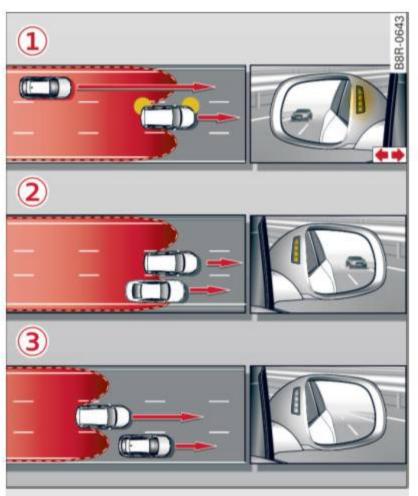


Fig. 127 Driving situations



Fig. 128 Rear of the vehicle: Position of the sensors

Side assist functions at speeds above approximately 19 mph (30 km/h).

### Vehicles that are approaching

In certain cases, a vehicle will be classified as critical for a lane change even if it is still somewhat far away. The faster a vehicle approaches, the sooner the display in the exterior mirror will turn on.

### 2 Vehicles traveling with you

Vehicles traveling with you are indicated in the exterior mirror if they are classified as critical for a lane change. All vehicles detected by side assist are indicated by the time they enter your "blind spot", at the latest.

### ③ Vehicles left behind

If you slowly pass a vehicle that side assist has detected (the difference in speed between the vehicle and your vehicle is less than 9 mph or 15 km/h), the display in the exterior mirror turns on as soon as the vehicle enters your blind spot.

The display will not turn on if you quickly pass a vehicle that side assist has detected (the difference in speed between the vehicle and your vehicle is greater than 9 mph or 15 km/h).

#### **Functional limitations**

The radar sensors are designed to detect the left and right adjacent lanes when the road lanes are the normal width. In certain situations, the display in the exterior mirror may turn on even though there is no vehicle located in the area that is critical for a lane change. For example:

- if the lanes are narrow or if your are driving on the edge of your lane. If this is the case, the system may have detected the vehicle in another lane that is not adjacent to your current lane.
- if you are driving through a curve. Side assist may react to a vehicle that is one lane over from the adjacent lane.
- if side assist reacts to other objects (such as high or displaced guard rails).
- In poor weather conditions. The side assist functions are limited.

Do not cover the radar sensors  $\Rightarrow$  fig. 128 with stickers, deposits, bicycle wheels or other objects, because this will affect the function. Do not use side assist when towing a trailer. For information on cleaning, refer to  $\Rightarrow$  page 219.



### WARNING

 Always pay attention to traffic and to the area around your vehicle. Side assist cannot replace a driver's attention. The driver alone is always responsible for lane changes and similar driving maneuvers.

- Improper reliance on the side assist system can cause collisions and serious personal injury:
  - Never rely only on side assist when changing lanes.
  - Always check rear view mirrors to make sure that it is safe to change lanes.
- Side assist cannot detect all vehicles under all conditions - danger of accident!
- Please note that side assist indicates there are approaching vehicles, or vehicles in your blind spot, only after your vehicle has reached a driving speed of at least 19 mph (30 km/h).
- In certain situations, the system may not function or its function may be limited. For example:
  - if vehicles are approaching or being left behind very quickly. The display may not turn on in time.
  - in poor weather conditions such as heavy rain, snow or heavy mist.
  - on very wide lanes, in tight curves or if there is a rise in the road surface. Vehicles in the adjacent lane may not be detected because they are outside of the sensor range.

#### Note

The sensors can be displaced by impacts or damage to the bumper, wheel housing and underbody. This can affect the system. Have your authorized Audi dealer or authorized Audi Service Facility check their function.



### **Tips**

- If the window glass in the driver's door or front passenger's door has been tinted, the display in the exterior mirror may be misinterpreted.
- For Declaration of Compliance to United States FCC and Industry Canada regulations  $\Rightarrow$  page 298.

### Activating and deactivating

Applies to vehicles: with Audi side assist



Fig. 129 Driver's door: Side assist button

Press the button ⇒ in General information on page 117 to switch the system on/ off. The LED in the button turns on when side assist is switched on.

### Adjusting the display brightness

Applies to vehicles: with Audi side assist

The signal brightness can be set in the radio or MMI\*.

- ► Select: CAR function button > Audi side assist. Or
- ► Select: CAR function button > Car systems\* control button > Driver assist > Audi side assist.

The display brightness adjusts automatically to the brightness of the surroundings, both in the information and in the warning stage. In very dark or very bright surroundings, the display is already set to the minimum or maximum level by the automatic adjustment. In such cases, you may notice no change when adjusting the brightness, or the change may only be noticeable once the surroundings change.

Adjust the brightness to a level where the display in the information stage will not disrupt your view forward. If you change the brightness, the display in the exterior mirror will briefly show the brightness level in the information stage. The brightness of the warning stage is linked to the brightness in the information stage and is adjusted along with the information stage adjustment.



**Tips** 

- Side assist is not active while you are making the adjustment.
- Your settings are automatically stored and assigned to the remote control key being used.

### **Driver messages**

Applies to vehicles: with Audi side assist

If side assist switches off by itself, the LED in the button turns off and a message will appear in the instrument cluster display:

## Audi side assist unavailable: Sensors blocked

The radar sensors' vision is affected. Do not cover the area in front of the sensors with bike wheels, stickers, dirt or other objects. Clean the area in front of the sensors, if necessary ⇒ page 117, fig. 128.

### Audi side assist: Currently unavailable

Side assist cannot be switched on temporarily because there is a malfunction (for example, the battery charge level may be too low).

#### Audi side assist: System fault!

The system cannot guarantee that it will detect vehicles correctly and it is switched off.
The sensors have been displaced or are faulty.
Have the system checked by an authorized
Audi dealer or authorized Audi Service Facility soon.

### Audi side assist: Unavailable when towing

Side assist switches off automatically when a factory-installed trailer hitch is connected to the electrical connector on the trailer. There is no guarantee the system will switch off when using a retrofitted trailer hitch. Do not use side assist when towing a trailer.

### Audi drive select

### **Driving settings**

#### Introduction

Applies to vehicles: with Audi drive select

Drive select provides the possibility to experience different types of vehicle settings in one vehicle. For instance, using the three **Comfort, Auto** and **Dynamic** modes, the driver can switch from a sporty to a comfortable driving mode with the press of a button.

Additionally, in vehicles with MMI\*, the vehicle setup for **Individual**\* mode can be customized by you. This makes it possible to combine settings such as a sporty engine tuning with comfortable steering.



### WARNING

Improper use of the drive select can cause collisions, other accidents and serious personal injury.

### Description

Applies to vehicles: with Audi drive select

The vehicle setup in each mode depends on the vehicle's features. However, the engine, automatic transmission and steering are always involved.

#### Engine and automatic transmission

Depending on the mode, the engine and the automatic transmission respond quicker or in a more balanced manner to accelerator pedal movements. In the sporty dynamic mode, the automatic transmission shifts at higher RPMs.

#### Steering

The steering adapts in terms of steering effort and steering ratios. Indirect steering that moves easily, like the steering in comfort mode, is best suited to long drives on a highway. In contrast, dynamic mode provides sporty, direct steering.

The following applies to vehicles with dynamic steering\*: the steering ratio changes based on vehicle speed in order to maintain optimum

steering effort for the driver at all times. This sets the steering to be less sensitive at higher speeds in order to provide improved vehicle control. At reduced speeds, however, steering is more direct in order to keep the steering effort as minimal as possible when the driver is maneuvering the vehicle. At low and average speeds, dynamic steering additionally provides more responsive steering performance.

### Adaptive dampers\*

The adaptive dampers\* use sensors to record information regarding steering movements, braking and acceleration operations by the driver, road surface, driving speed, and load. This makes it possible to adapt damping to the driving situation virtually in real time. Drive select also makes it possible to satisfy the desire for sporty suspension (Dynamic) and comfortable suspension (Comfort) without giving up balanced tuning (Auto).

### Adaptive cruise control\*

The behavior when accelerating can be adjusted from comfortable to sporty, depending on the drive select mode. Adaptive cruise control also responds to the driving behavior of the vehicle ahead in a more conservative or sporty manner.



### **Tips**

- In some models, the maximum vehicle speed can only be reached in the Auto and Dynamic modes.
- Selecting the **Dynamic** mode results in sporty shifting characteristics. The S gear position engages automatically.
- In vehicles that have dynamic steering\*, operating noise is heard when starting or stopping the engine. This does not indicate a problem.

### Selecting the driving mode

Applies to vehicles: with Audi drive select

You can choose between Comfort, Auto, Dynamic and Individual\* modes.



Fig. 130 Center console: Control for drive select

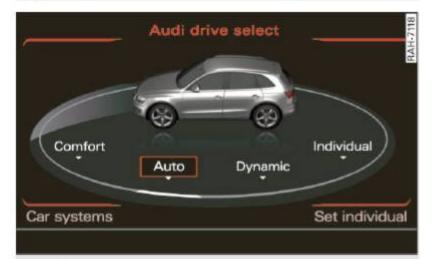


Fig. 131 MMI\*: Audi drive select

➤ To set the mode, press the size button

⇒ fig. 130 multiple times until the desired mode is displayed in the instrument cluster.

Or

► In the MMI\*, select: CAR function button > Comfort, Auto, Dynamic or Individual\*.

In vehicles without MMI\*, the sike button is found underneath the selector lever.

You can change the driving mode when the vehicle is stationary or while driving. If traffic permits, after changing modes, briefly take your foot off the accelerator pedal so that the recently selected mode is also activated for the engine and transmission.

**Comfort** - provides a comfort-oriented vehicle setup and is suited for long drives on highways.

**Auto** - provides an overall comfortable yet dynamic driving feel and is suited for every day use.

**Dynamic** - gives the vehicle a sporty driving feel and is suited to a sporty driving style.

Individual\* - ⇒ page 121.



#### WARNING

Pay attention to traffic when operating drive select to prevent potential risk of an accident.

#### Adjusting the Individual mode

Applies to vehicles: with Audi drive select and MMI

You can personally specify the vehicle setup in the MMI\*.

► Select: CAR function button > Set individual control button. Once you select the menu, you will automatically drive in the individual mode. The equipment in your vehicle will determine which settings you can adjust. The following table provides an overview of the characteristics of each driving mode.

| Systems                  | Comfort              | Auto            | Dynamic       |         |
|--------------------------|----------------------|-----------------|---------------|---------|
| Engine/transmission      | balanced             | balanced        | sporty        |         |
| Steering                 | comfortable          | balanced        | sporty        |         |
| Dynamic steering*        | comfortable/indirect | balanced/direct | sporty/direct |         |
| Adaptive dampers*        | comfortable          | balanced        | sporty        |         |
| Adaptive cruise control* | comfortable          | balanced        | sporty        | <b></b> |

### 122 Audi drive select



### Tips

Your **Individual** mode settings are automatically stored and assigned to the remote control key being used.

# Automatic transmission

### tiptronic

### Introduction


The automatic transmission is controlled electronically. The transmission upshifts or downshifts automatically depending on which drive program is selected. The power is transferred by a torque converter.

When a **moderate driving style** is used, the transmission selects the most economical driving mode. It will then change up early and delay the downshifts to give better fuel economy.

The transmission switches to a sporty mode after a kick-down or when the driver uses a **sporty driving style** characterized by quick accelerator pedal movements, heavy acceleration, frequent changes in speed and traveling at the maximum speed.

If desired, the driver can also select the gears manually (tiptronic mode)  $\Rightarrow$  page 127.

### Selector lever positions

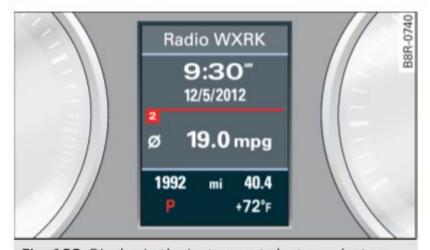

**Fig. 132** Display in the instrument cluster: selector lever in position P

The selector lever position engaged appears next to the selector lever as well as in the instrument cluster display.

#### P - Park

In this selector lever position the transmission is mechanically locked. Engage P only when the vehicle is *completely stopped*  $\Rightarrow \land$ 

in Driving the automatic transmission on page 126.

To shift in or out of position P, you must *first* press and hold the brake pedal *and then* press the release button in the selector lever handle while moving the selector lever to or from P. You can shift out of this position only with the ignition on.

#### R - Reverse

Select R only when the vehicle is at a *full stop* and the engine is running at idle speed  $\Rightarrow \land$  in Driving the automatic transmission on page 126.

Before you move the selector lever to R, press both the button in the handle of the selector lever and the brake pedal at the same time.

When the ignition is on, the backup lights illuminate when the selector lever is moved into R.

#### N - Neutral

The transmission is in neutral in this position. Shift to this position for standing with the brakes applied  $\Rightarrow \land in Driving the automatic transmission on page 126. The vehicle can also roll when the engine is stopped.$ 

When the vehicle is stationary or at speeds below 1 mph (2 km/h), you must always apply the footbrake before and while moving the lever out of N.

### D/S - Normal position for driving forward

In the D/S position, the transmission can be operated either in the normal mode D or in the sport mode S. To select the sport mode S, pull the selector lever back briefly. Pulling the lever back again will select the normal mode D. The instrument cluster display shows the selected driving mode.

In the **normal mode** D, the transmission automatically selects the suitable gear ratio. It depends on engine load, vehicle speed and driving style.

Select the **sport mode** S for sporty driving. The vehicle makes full use of the engine's



power. Shifting may become noticeable when accelerating. Hybrid drive\*: electric driving is not possible.

When the vehicle is stationary or at speeds below 1 mph (2 km/h), you must always apply the foot brake before and while moving the lever to D/S out of N.



### WARNING

Read and follow all WARNINGS  $\Rightarrow \Lambda$  in Driving the automatic transmission on page 126.



#### Note

Coasting downhill with the transmission in N and the engine not running will result in damage to the automatic transmission and possibly the catalytic converter.



### **Tips**

- On vehicles with Audi drive select\*, you
  can adjust the sporty shift characteristics
  in the **Dynamic** driving mode. S will appear in the instrument cluster display instead of D.
- If you accidentally select N while driving, take your foot off the accelerator pedal immediately and wait for the engine to slow down to idle before selecting D/S.
- If there is a power failure, the selector lever will not move out of the P position.
   The emergency release can be used if this happens ⇒ page 128.

### Automatic Shift Lock (ASL)

The Automatic Shift Lock safeguards you against accidentally shifting into a forward or the reverse gear and causing the vehicle to move unintentionally.



Fig. 133 Shift gate: selector lever lock positions and release button highlighted

The selector lever lock is released as follows:

- ► Turn the ignition on.
- Step on the brake pedal. At the same time press and hold the release button on the side of the gear selector knob 

  fig. 133 with your thumb until you have moved the selector lever to the desired position.

#### Automatic selector lever lock

The selector lever is locked in the P and N positions when the ignition is turned on. You must press the brake pedal and the release button to select another position. As a reminder to the driver, the following warning appears in the instrument cluster display when the selector is in P and N:

### When stationary apply brake pedal while selecting gear

The Automatic Shift Lock only functions when the vehicle is stationary or at speeds below 1 mph (2 km/h).

At speeds above about 1 mph (2 km/h) the Automatic Shift Lock is automatically deactivated in the N position.

A time delay element prevents the selector lever from locking when it is moved through the N position (going from R to D/S). The locking element will lock the selector lever if the

lever is left in N (Neutral) for more than approximately 1 second, without the brake pedal being pressed.

#### Release button

The release button on the selector lever prevents the lever from being accidentally shifted into certain positions. Pressing this button deactivates the selector lever lock. Depending on the direction of the shift, the selector lever locks at different positions. The positions are highlighted in the illustration  $\Rightarrow$  fig. 133.

### Ignition key safety interlock

The key cannot be removed from the ignition unless the selector lever is in the P park position. When the ignition key is removed, the selector lever will be locked in the P position.

### Driving the automatic transmission



**Fig. 134** Shift gate on the center console: selector lever with release button

### Starting the engine

► The selector lever must be in P or N.

### Starting off

- Press and hold the brake pedal.
- Press and hold the release button in the selector lever handle, select the desired selector lever position such as D/S and release the button.
- Wait briefly until the transmission has shifted (you will feel a slight movement).
- Remove your foot from the brake pedal and accelerate.

### Stopping temporarily

- Keep the vehicle stationary using the braking pedal, for example at traffic lights.
- Do not press the accelerator pedal when doing this.
- ➤ To prevent the vehicle from rolling when you start driving, set the parking brake when stopping on steep inclines 

  ⚠.

The parking brake will release automatically and the vehicle will start moving once you press the accelerator pedal.

### Stopping/parking

If the selector lever is not in the P position when you open the driver's door, the vehicle could roll. The message **Transmission: Car may roll! Shift to park!** appears.

- Press and hold the brake pedal until the vehicle has come to a complete stop.
- Apply the parking brake ⇒ page 89, Parking.
- Select the P selector lever position ⇒ Λ.

### Stopping on an incline

► Always press the brake pedal to hold the vehicle in place and prevent it from "rolling back" 

↑. Do not try to prevent the vehicle from "rolling back" when a gear is engaged by increasing the engine speed 

!.

### Starting on an incline

- ► Activate the parking brake.
- With the driving gear selected, press the accelerator pedal carefully. The parking brake will release automatically if your seat belt is fastened.

Under certain circumstances, such as driving in the mountains, it may be useful to switch temporarily to the manual shift program in order to adjust the gears to the driving conditions by hand ⇒ page 127.

On slopes, activate the parking brake first and then move the selector lever to the P position. This prevents too much stress from being placed on the locking mechanism.

### **↑** WARNING

- Unintended vehicle movement can cause serious injury.
- Never leave your vehicle with the engine running while in gear. If you must leave your vehicle when the engine is running, activate the parking brake and move the selector lever to P.
- Power is still transmitted to the wheels when the engine is running at idle. To prevent the vehicle from "creeping", you must keep your foot on the brake when the engine is running and the selector lever is in D/S or R or "tiptronic" mode is selected.
- Do not press the accelerator pedal when changing the selector lever position while the vehicle is stationary and the engine is running.
- Never shift into R or P while driving.
- Before driving down a steep slope, reduce your speed and shift into a lower gear with "tiptronic".
- Do not ride the brakes or press the brake pedal too often or too long when driving down a hill. Constant braking causes the brakes to overheat and substantially reduces braking performance, increases braking distance or causes complete failure of the brake system.
- To prevent the vehicle from rolling back when stopping on inclines, always hold it in place with the brake pedal or parking brake.
- Never hold the vehicle on an incline with a slipping clutch. The clutch opens automatically when it becomes too hot from the overload. An indicator lamp illuminates and a driver message appears ⇒ page 128 when the clutch is overloaded.
- If the engine must remain running, never have any driving position engaged when checking under the hood. Make sure the selector lever has securely engaged and is locked in P with the parking brake set ⇒ page 226, Engine compartment. Oth-

erwise, any increase in engine speed may set the vehicle in motion, even with the parking brake applied.

### 1

### Note

- When stopping on an incline, do not try to hold the vehicle in place by pressing the accelerator pedal while a driving gear is selected. This can cause the transmission to overheat and can damage it. Activate the parking brake or press the brake pedal to prevent the vehicle from rolling.
- Allowing the vehicle to roll when the engine is stopped and the selector lever is in N will damage the transmission because it is not lubricated under those circumstances.



### **Tips**

For safety reasons, the parking brake is released automatically only when the driver's safety belt is engaged in the buckle.

#### Hill descent control

The hill descent control system assists the driver when driving down declines.

Hill descent control is activated when the selector lever is in D/S and you press the brake pedal. The transmission automatically selects a gear that is suitable for the incline. Hill descent control tries to maintain the speed achieved at the time of braking, within physical and technical limitations. If may still be necessary to adjust the speed with the brakes.

Hill descent control switches off once the decline levels out or you press the accelerator pedal.

When the speed is set in the cruise control system ⇒ page 95, hill descent control is also activated.



#### WARNING

Hill descent control cannot overcome physical limitations, so it may not be able to maintain a constant speed under all conditions. Always be ready to apply the brakes.

### Manual shift program

Using the manual shift program you can manually select gears.



Fig. 135 Center console: shifting the gears manually

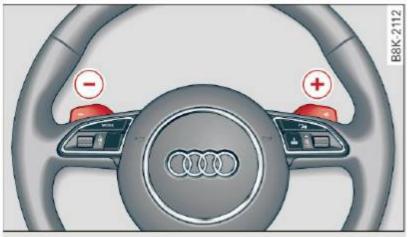


Fig. 136 Steering wheel: Shift buttons\*

#### Gear selection with selector lever

The tiptronic mode can be selected either with the vehicle stationary or on the move.

- Push the selector lever to the right from D/S. An M appears in the instrument cluster display as soon as the transmission has shifted.
- To upshift, push the selector lever forward to the plus position ⊕ ⇒ fig. 135.
- ► To downshift, push the lever to the minus position —.

### Gear selection with paddle levers\*

The shift buttons are activated when the selector lever is in D/S or the tiptronic manual shift program.

► To upshift, touch the button on the right ⊕
⇒ fig. 136.

- ► To downshift, touch the button on the left (-).
- ▶ If you do not press a shift button within a short time while in the D/S position, the transmission will return to automatic mode. To keep shifting using the shift buttons, move the selector lever to the right out of the D/S position.

The transmission automatically shifts up or down before critical engine speed is reached.

The transmission only allows manual shifting when the engine speed is within the permitted range.



### Tips

- When you shift into the next lower gear, the transmission will downshift only when there is no possibility of over-revving the engine.
- When the kick-down comes on, the transmission will shift down to a lower gear, depending on vehicle and engine speeds.
- Tiptronic is inoperative when the transmission is in the fail-safe mode.
- Hybrid drive\*: electric driving is not possible in tiptronic mode.

### Kick-down

Kick-down enables maximum acceleration.

When you depress the accelerator pedal beyond the resistance point, the automatic transmission downshifts into a lower gear, depending on vehicle speed and engine speed. The upshift into the next higher gear takes place once the maximum specified engine speed is reached.



### WARNING

Please note that the drive wheels can spin if kick-down is used on a smooth slippery road - there is a risk of skidding.

### Transmission malfunction

### Transmission: Press brake pedal and select gear again.

Press the brake pedal and select the desired selector lever position again. You can then continue driving.

# Transmission overheating: Please drive conservatively.

The transmission temperature has increased significantly due to the sporty driving manner. Drive in a less sporty manner until the temperature returns to the normal range and the indicator light switches of.

# Transmission malfunction: You can continue driving

There is a system malfunction in the transmission. You may continue driving. Drive to your authorized Audi dealer or qualified repair facility soon to have the malfunction corrected.

# Transmission malfunction: Limited driving functionality

There is a system malfunction in the transmission. The transmission is switching to emergency mode. This mode only shifts into certain gears or will no longer shift at all. The engine may stall. Drive to your authorized Audi dealer or qualified repair facility immediately to have the malfunction corrected.

# Transmission malfunction: Stop vehicle and shift to park.

Do not continue driving. Select the P selector lever position and see your authorized Audi dealer or qualified repair facility for assistance.



#### Note

If the transmission switches to emergency mode, you should take the vehicle to an authorized Audi dealership as soon as possible to have the condition corrected.

### Selector lever emergency release

If the vehicle's power supply fails, the selector lever can be released in an emergency.

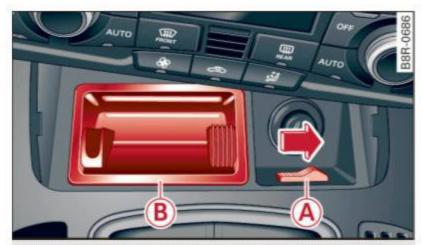


Fig. 137 Front center console: Removing the ashtray insert



Fig. 138 Selector lever emergency release

- To access the emergency release mechanism, remove the ashtray insert 

  B using the release switch 

  A 

  ightharpoonup fig. 137.
- Loosen and remove the cap in the ashtray mount ⇒ fig. 138.
- You now have access to a pin. Using a screwdriver or similar object, press the pin down and hold it in that position.
- Now press the release button and move the selector lever to the N position.

The selector lever can only be moved from the P position if the key is in the lock and the ignition is switched on. If the power supply fails (for example, the battery is discharged) and the vehicle must be pushed or towed, move the selector lever to the N position first using the emergency release.

### Parking system

# Audi parking system plus with rearview camera

#### Introduction

Applies to vehicles: with Audi parking system plus with rearview camera

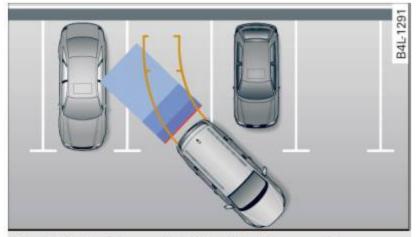


Fig. 139 Parking mode 1: Backing into a parking space

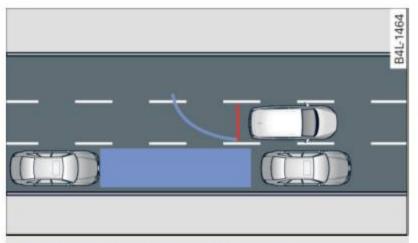


Fig. 140 Parking mode 2: parallel parking

Vehicles with the Audi parking system plus with rearview camera are equipped with a rearview camera in addition to the acoustic and visual parking system.

You can choose between parking modes to help you when parking your vehicle. Use "parking mode 1" when parking in a parking space or garage ⇒ fig. 139. If you are going to be parallel parking, use "parking mode 2" ⇒ fig. 140.

### General Information

Applies to vehicles: with Audi parking system plus with rearview camera



**Fig. 141** Area covered **1** and area not covered **2** by the rearview camera.



Fig. 142 Rear lid: Location of the rearview camera

### Sensors in the bumper

Sensors are located in the front and rear bumpers. If these detect an obstacle, audible and visual signals warn you. The range at which the sensors begin to measure is approximately:

| front | side   | 3 ft (0.90 m)   |  |
|-------|--------|-----------------|--|
|       | center | 4 ft (1.20 m)   |  |
| rear  | side   | 2 ft (0.60 m)   |  |
|       | center | 5.2 ft (1.60 m) |  |

The closer you get to the obstacle, the shorter the interval between the audible signals. A continuous tone sounds when the obstacle is less than approximately 1 foot (0.30 meters) away. Do not continue driving farther.

If the distance to an obstacle remains constant, the volume of the distance warning gradually drops after about four seconds (this does not apply in the continuous tone range).

### Rearview camera coverage area

The MMI display shows the area covered by the rearview camera  $\Rightarrow$  fig. 141 ①. Objects that are not in the area covered ② are not shown on the MMI display.

We recommend that you practice parking with the rearview camera in a traffic-free location or parking lot to become familiar with the system, the orientation lines, and their function. When doing this, there should be good light and weather conditions.

In the MMI display, objects or vehicles appear closer or further away if:

- you are driving in reverse gear from a level surface onto an incline, or a downward slope,
- you are driving in reverse gear toward protruding objects,
- the vehicle is carrying too much load in the rear.

The accuracy of the orientation lines and blue surfaces diminishes if:

- the rearview camera does not provide a reliable image, for example, in poor visibility conditions or if the lens is dirty,
- the image on the screen is not visible due to sun glare and reflection.

#### Caring for the rearview camera lens

The rearview camera is located above the rear license plate bracket. For the parking system to operate, the lens  $\Rightarrow$  fig. 142 must be kept clean:

- Remove snow with a hand brush and ice preferably with a de-icing spray ⇒ ①.

### $\Lambda$

### WARNING

 The parking system cannot replace the driver's attention. The driver alone is responsible for parking and similar driving maneuvers.

- Sensors have blind spots in which objects cannot be detected. Pay special attention to small children and animals because the sensors cannot always detect them.
- Always keep your eyes on the vehicle's surroundings, using the rearview mirror as well.
- Do not allow yourself to be distracted from traffic by the rearview camera pictures.
- If the position and the installation angle of the camera has changed, for example, after a rear end collision, do not continue to use the system for safety reasons.
   Have it checked by a qualified dealership.

### (!)

### Note

- Low obstacles already signaled by a warning can disappear from the system's detection range as they are approached and will not continue to be signaled. Objects such as barrier chains, trailer draw bars, thin painted vertical poles or fences may not be detected by the system, posing risk of damage.
- Never use warm or hot water to remove snow or ice from the rearview camera lens - this could cause the lens to crack!
- When cleaning the lens, never use products that are abrasive.

### Switching on and off

Applies to vehicles: with Audi parking system plus with rearview camera

The rearview camera switches on automatically together with the acoustic and visual park assist when you put the vehicle in reverse.



Fig. 143 Center console: Parking system switch



Fig. 144 MMI display: visual distance display

### Switching on

- Switch the MMI on and select reverse gear.
- To use the front parking system, press the switch P<sup>™</sup> in the center console ⇒ fig. 143. A short confirmation tone sounds and the indicator light in the switch lights up.

### Switching between the rearview camera and visual display

- ▶ Press the Graphic control button ⇒ page 132, fig. 145 (5) to see the visual display.
- Press the Rear view control button to see the rearview camera image ⇒ fig. 144.

### Switching off

- Drive faster than 6 mph (10 km/h), or
- ▶ press the switch P<sub>™</sub> or
- ▶ switch off the ignition.

### Segments in the visual display

The red segments in front of and behind the vehicle  $\Rightarrow$  fig. 144 help you to determine the distance between you and an obstacle. As your vehicle comes closer to the obstacle, the segments move closer to the vehicle. The collision area has been reached when the next to last segment is displayed. Do not continue driving farther  $\Rightarrow$   $\land$  in General Information on page 130!

### WARNING

- The MMI display cannot show, or cannot adequately show, certain objects (such as small posts or grating), recesses in the ground and protruding parts on another car.
- Only use the rearview camera to assist you if it shows a good, clear picture. For example, the image may be affected by the sun shining into the lens, dirt on the lens or if there is a defect.
- Use the rearview camera only with the rear lid completely closed. Make sure any objects you may have mounted on the rear lid do not block the rearview camera.



### Tips

- The sensors must be kept clean and free of snow and ice for the park assist to operate.
- The visual display is shown in the illustration of the rearview camera. This display shows where the sensors have detected an obstacle.
- You can change the volume and pitch of the signals as well as the display
   ⇒ page 133.
- Please follow the instructions for towing a trailer ⇒ page 134.
- What appears in the display is time-delayed.

### Reverse Parking

Applies to vehicles: with Audi parking system plus with rearview camera

Parking mode 1 can be used when parking in a garage or into a parking space.

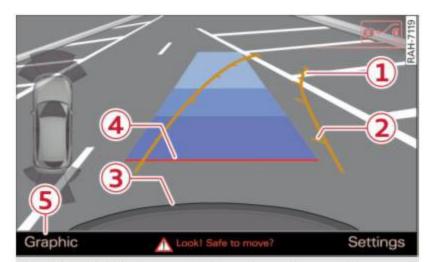


Fig. 145 MMI display: aiming at a parking spot

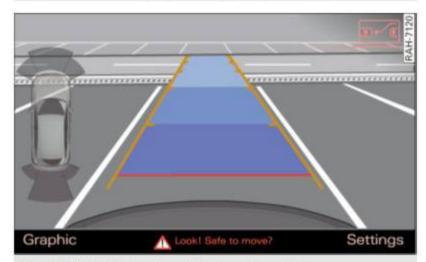


Fig. 146 MMI display: aligning the vehicle

- Switch the MMI on and select reverse gear.
- Turn the steering wheel until the orange orientation lines ① appear in the parking spot ⇒ fig. 145. Use the markings ② to help you estimate the distance from an obstacle. Each marking represents 3 ft (1 meter). The blue area represents an extension of the vehicle's outline by approximately 16 ft (5 meters) to the rear.
- While driving in reverse gear, adjust the steering wheel angle to fit the parking space with the aid of the orange orientation lines ⇒ 1. 3 marks the rear bumper. Stop the vehicle when the red orientation line 4 borders an object ⇒ .

### **↑** WARNING

 The rearview camera does not show the entire area behind the vehicle
 ⇒ page 129, fig. 141. Watch out especially for small children and animals. The

- rearview camera cannot always detect them, posing risk of an accident!
- Please note that objects not touching the ground can appear to be further away than they really are (for example, the bumper of a parked vehicle, a trailer hitch, or the rear of a truck). In this case, you should not use the help lines to help with parking, which poses danger of an accident!



#### Note

In the MMI display, the direction of travel of the vehicle rear is represented depending on the steering wheel angle. The vehicle front swings out more than the vehicle rear. Maintain plenty of distance so that your outside mirror or a corner of your vehicle does not collide with any obstacles. This can damage to your vehicle.

### Parallel Parking

Applies to vehicles: with Audi parking system plus with rearview camera

Use parking mode 2 to help you parallel park along the side of a street.

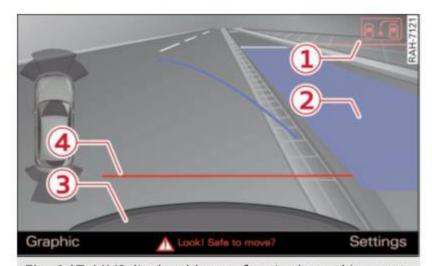


Fig. 147 MMI display: blue surface in the parking spot

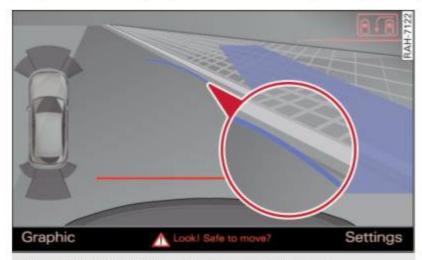


Fig. 148 MMI display: Blue curve on the curb

The following steps apply only when there is no obstacle such as a wall near the parking spot. Otherwise, please read the information provided in the "Parking Next to Obstacles" section.

- Activate the turn signal.
- ▶ Position your vehicle parallel to the edge of the street, approximately 3 ft (1 meter) from a parked vehicle.
- Switch the MMI on and select reverse gear. The parking aid turns on and parking mode 1 appears on the display.
- Press the control button ① ⇒ fig. 147 on the MMI control console. Parking mode 2 appears.
- ▶ Back up and align your vehicle so the blue area ② borders on the rear end of the vehicle or on the parking spot line. The blue area represents an extension of the vehicle's outline by approximately 16 ft (5 meters) to the rear. The long side of the blue area should be on the curb. The entire blue area must fit into the parking spot.
- With the vehicle stopped, turn the steering wheel to the right as far as it will go.
- ▶ Back into the parking spot until the blue curve touches the curb ⇒ fig. 148. Stop the vehicle.
- ► With the vehicle stopped, turn the steering wheel to the left as far as it will go.
- ► Continue to back into the parking spot until the vehicle is parked parallel to the curb. ③ marks the rear bumper. Stop the vehicle when the red orientation line ④ borders an object ⇒ ⚠. Keep an eye on the front of your vehicle while doing this ⇒ ①.

#### Parking next to obstacles

When there is an obstacle (such as a wall) next to the parking spot, choose a spot with more space on the sides. Position the long side of the blue area so that there is sufficient space from the curb. The area must not be on the curb. You will also need to start turning the steering wheel much earlier. There should be a sufficient amount of space between the curb and the blue curve, and the blue curve  $\Rightarrow$  fig. 148 must **not** touch the curb.

### WARNING

- The rearview camera does not show the entire area behind the vehicle
   ⇒ page 129, fig. 141. Watch out especially for small children and animals. The rearview camera cannot always detect them, posing risk of an accident!
- Please note that objects not touching the ground can appear to be further away than they really are (for example, the bumper of a parked vehicle, a trailer hitch, or the rear of a truck). In this case, you should not use the help lines to help with parking, which poses danger of an accident!

### ! Note

In the MMI display, the direction of travel of the vehicle rear is represented depending on the steering wheel angle. The vehicle front swings out more than the vehicle rear. Maintain plenty of distance so that your outside mirror or a corner of your vehicle does not collide with any obstacles. This can damage to your vehicle.

### (i) ·

### Tips

The left or right orientation lines and surfaces will be displayed, depending on the turn signal being used.

# Adjusting the display and warning tones

Applies to vehicles: with Audi parking system plus with rearview camera

The display and warning tones can be adjusted in the MMI.

- Select: CAR function button > Parking system. Or
- ► Select: CAR function button > Car systems\* control button > Driver assist > Parking aid.

### Display

 Off - when the parking system is switched off, only audible signals are given.



 On - when the parking system is switched on, either the visual display or the picture from the rearview camera is displayed.

### Warning tones

- Front volume front sensor volume
- Front frequency front sensor frequency
- Rear volume rear sensor volume
- Rear frequency rear sensor frequency
- In-car entertainment fader/Music volume while parking - when the parking system is switched on, the volume of the active audio source is lowered.

The newly adjusted value is briefly heard from the signal generator.



### **Tips**

- The warning tones can also be adjusted directly by the visual display or the picture from the rearview camera. Simply press the **Settings** control button.
- Changed settings are activated when parking system is switched on again.
- The settings are automatically stored and assigned to the remote control key.

### Trailer hitch

Applies to vehicles: with Audi parking system plus with rearview camera and trailer hitch

For vehicles with a factory installed trailer hitch, or a trailer hitch installed according to factory specifications, the parking system rear sensors do not come on whenever you shift into reverse gear or when you press the PML switch. Remember, there is no warning for distances to the rear. The front sensors remain activated. The visual display switches to the trailer towing mode. The picture from the rearview camera will not show the orientation lines nor the blue surfaces.

If you install a hitch yourself, this function may not work.

### **Error messages**

Applies to vehicles: with Audi parking system plus with rearview camera

There is an error in the system if the LED on the P<sup>ML</sup> switch is blinking and you hear a continuous alarm for a few seconds after switching on the parking system or when the parking system is already activated. Have your authorized Audi dealer correct the error.



### **Tips**

If the error is not corrected before you switch off the ignition, when you switch on the parking system again, the LED in the P<sup>MA</sup> switch will blink.

135

### HomeLink<sup>®</sup>

# Universal remote control

### Description

Applies to vehicles: with HomeLink

The HomeLink universal remote control can be programmed with the remote control for devices that are already present.

With HomeLink, you can control devices such as the garage door, security systems, house lights, etc. comfortably from the inside of you vehicle.

HomeLink makes it possible for you to replace three different remote controls from devices in your home with one universal remote. This feature works for most garage door and exterior door motor signals. Programming the individual remote control for your remote control takes place near the center of the radiator grille. There is a control module attached at this location.

A one-time programming of the sensor must be performed before you are able to use systems with HomeLink. If the system does not activate after performing the one-time programming, check whether the system uses a rolling code  $\Rightarrow$  page 138 for vehicles without the MMI\*.

### $\Lambda$

#### WARNING

- Never use the HomeLink® transmitter with any garage door opener that does have not the safety stop and reverse feature as required by federal safety standards. This includes any garage door opener model manufactured before April 1, 1982.
- A garage door opener which cannot detect an object, signaling the door to stop and reverse does not meet current federal safety standards. Using a garage door opener without these features increases risk of serious injury or death.

- For safety reasons never release the parking brake or start the engine while anyone is standing in front of the vehicle.
- A garage door or an estate gate may sometimes be set in motion when the HomeLink® remote control is being programmed. If the device is repeatedly activated, this can overstrain motor and damage its electrical components - an overheated motor is a fire hazard!
- To avoid possible injuries or property damage, please always make absolutely certain that no persons or objects are located in the range of motion of any equipment being operated.

### i

### **Tips**

- If you would like more information on HomeLink<sup>®</sup>, where to purchase the HomeLink<sup>®</sup> compatible products, or would like to purchase the HomeLink<sup>®</sup> Home Lighting Package, please call tollfree: 1-800-355-3515.
- For Declaration of Compliance to United States FCC and Industry Canada regulations ⇒ page 298.
- For security reasons, we recommend that you clear the programmed buttons before selling the vehicle.

### Operation

Applies to vehicles: with HomeLink



Fig. 149 Headliner: controls

Requirement: The buttons must be programmed  $\Rightarrow$  page 136 or  $\Rightarrow$  page 137.

- ➤ To open the garage door, press the programmed button. The LED (A) will light up or flash.
- To close the garage door, press the button again.



### **Tips**

To open the garage door, press the button, but do not press it for longer ten seconds or the HomeLink module will switch to programming mode.

# Programming the transmitter (version A)

Applies to vehicles: with HomeLink



Fig. 150 Distance between the radiator grille and the hand transmitter

You can program the fixed code and rolling code systems using the described procedure.

#### Programming the button

- Turn the ignition on.
- There are two ways to program the button: Press the button ⇒ page 135, fig. 149 that you would like to program. Use the instructions that appear in the MMI\* to perform the programming. Or
- Select: CAR function button > Car systems\* control button > Vehicle settings > Garage door opener > Program garage door opener.
- Select the button that you would like to program.
- Follow the instructions in the MMI\*.
- If the garage door opening must also be synchronized with the HomeLink module, refer to the owner's manual for the garage door opener.

Remote control units for garage door openers in Canada are set to stop transmitting radio frequency signals after two seconds. This time may not be sufficient for the HomeLink system to learn the radio frequency signal. Perform all other steps as described above.

# Erasing/Clearing the programmed button settings

- ➤ To erase all of the programmed buttons at the same time, select: CAR function button > Car systems\* control button > Vehicle settings > Garage door opener > Clear program settings > Yes. The programmed buttons can not be erased individually. Reprogram the buttons if necessary.
- Reprogram an individual button in the same manner that you would for the one-time programming.

# Displaying the version/status/country code

► Select: CAR function button > Car systems\* control button > Vehicle settings > Garage door opener > Version information.



### **Tips**

- Programming using the MMI\* is not available for all vehicle versions.
- The required distance between the hand transmitter and the HomeLink module in the radiator grille ⇒ fig. 150 depends on the system that you are programming.
- Depending on the model of the garage door opener, you may need to release the button on the remote and press it again when programming. When programming a new device, keep the button pressed for at least 15 seconds before trying again with the transmitter in a different position.

# Programming the transmitter (version B)

Applies to vehicles: with HomeLink



Fig. 151 Distance between the radiator grille and the hand transmitter

### Programming: phase 1 on the control unit

- Switch on the ignition (do not start the engine).
- Press and hold both of the outer Home-Link buttons ⇒ page 135, fig. 149 until the LED (A) turns off completely (about 20 seconds). This procedure clears the standard codes that were set at the factory and does not need to be repeated again to program the other buttons.
- Briefly press the HomeLink button that you would like to program.
- Wait until the LED (A) begins to blink quickly. The HomeLink module will now remain in learning mode for 5 minutes.
- Now stand in front of your vehicle with the original hand transmitter for the garage door opener or for the device that you would like to allocate to the Home-Link button.

# Programming: phase 2 on the radiator grille

- Hold the original hand transmitter somewhat towards the center of your vehicle's radiator grille 

  fig. 151.
- Now activate (press) the hand transmitter.
- Pay attention to the turn signals for your vehicle when activating the hand transmitter. If the emergency flashers blink three times, the programming was successful. If the emergency flasher only blinks one time, the 5 minute time limit

- for the adaptation has expired or the programming was unsuccessful. Repeat the programming from step 3 on the controls or select another distance from the radiator grille.
- 9. If the garage door or other devices still fail to be activated with the HomeLink control buttons after programming is completed, it is possible that these systems might be working with a rolling code instead of the normal fixed code. A Rolling code programming must be performed ⇒ page 138.

Program the remaining two buttons according to the instructions mentioned above. Begin similarly with the 3rd step if the programming connection was successful for the first button.

Remote control units for garage door openers in Canada are set to stop transmitting radio frequency signals after two seconds. This time may not be sufficient for the HomeLink system to learn the radio frequency signal. Perform all other steps as described above.

### Erasing the buttons

- Switch on the ignition (do not start the engine).
- Press and hold both of the outer buttons until the LED (A) turns off completely (about 20 seconds) to erase all of the buttons simultaneously.
- Programmed buttons cannot be erased individually. Reprogram the buttons if necessary.

### Reprogramming the buttons

- Switch on the ignition (do not start the engine).
- ➤ To reprogram an individual button, press and hold the button until the LED (A) starts to flash quickly (after about ten seconds). Release the button immediately. The Home-Link module will now remain in learning mode for 5 minutes.
- ► Continue with step 5.

138

### Tips

- The required distance between the hand transmitter and the HomeLink module in the radiator grille ⇒ fig. 151 depends on the system that you are programming.
- Depending on the model of the garage door opener, you may need to release the button on the remote and press it again when programming. When programming a new device, keep the button pressed for at least 15 seconds before trying again with the transmitter in a different position. Watch out for the emergency flasher during that time.

### Programming the rolling code

Applies to vehicles: with HomeLink

Additionally, a rolling code programming for the HomeLink universal remote control is required for some systems.

### Identifying the rolling code

- Press the previously programmed HomeLink button again and hold it down.
- Look at the LED A ⇒ page 135, fig. 149. If the LED blinks quickly, the features, such as the garage door opener, are equipped with the rolling code.
- Program the rolling code as follows:

# Activating the garage door opener motor unit

- ► Locate the setting button on the garage door opener motor unit. The exact location and color of the button may vary depending on the garage door opener manufacturer.
- Press the setting button on the garage door opener motor unit (usually this will activate a "setting light display" on the motor unit). Now you will have about 30 seconds time to perform the HomeLink button programming on the controls.

#### Programming on the controls

Press the HomeLink button that was already programmed and hold for two seconds.

- To end rolling code programming, press and hold the HomeLink button for two seconds again.
- ► The HomeLink button may need to be pressed a third time to end the adjustment procedure for some garage door openers.

After the controls have been programmed, the garage door opener should recognize the HomeLink signal and operate when the HomeLink button is pressed. Now you may program the other buttons as needed.



### **Tips**

- Programming the rolling code can be performed quicker and more easily with the help of a second person.
- If difficulties should arise when programming the rolling code, consult the operating instructions for the garage door opener or other devices for possible solutions.

### **Driving Safely**

### General notes

### Safe driving habits

Please remember - safety first!

This chapter contains important information, tips, instructions and warnings that you need to read and observe for your own safety, the safety of your passengers and others. We have summarized here what you need to know about safety belts, airbags, child restraints as well as child safety. Your safety is for us *priority number 1*. Always observe the information and warnings in this section - for your own safety as well as that of your passengers.

The information in this section applies to all model versions of your vehicle. Some of the features described in this sections may be standard equipment on some models, or may be optional equipment on others. If you are not sure, ask your authorized Audi dealer.

### $\Lambda$

#### WARNING

- Always make sure that you follow the instructions and heed the WARNINGS in this Manual. It is in your interest and in the interest of your passengers.
- Always keep the complete Owner's Literature in your Audi when you lend or sell your vehicle so that this important information will always be available to the driver and passengers.
- Always keep the Owner's literature handy so that you can find it easily if you have questions.

### Safety equipment

The safety features are part of the occupant restraint system and work together to help reduce the risk of injury in a wide variety of accident situations.

Your safety and the safety of your passengers should not be left to chance. Advances in technology have made a variety of features available to help reduce the risk of injury in an

accident. The following is a list of just a few of the safety features in your Audi:

- sophisticated safety belts for driver and all passenger seating positions,
- belt force limiters for the front seats,
- belt pretensioners for the seats,
- belt height adjustment for the front seats,
- head restraints for each seating position,
- front airbags,
- side airbags in the front seats and outer rear seats\*,
- side curtain airbags,
- special LATCH anchorages for child restraints,
- adjustable steering column.

These individual safety features, can work together as a system to help protect you and your passengers in a wide range of accidents. These features cannot work as a system if they are not always correctly adjusted and correctly used.

Safety is everybody's responsibility!

### Important things to do before driving

Safety is everybody's job! Vehicle and occupant safety always depends on the informed and careful driver.

For your safety and the safety of your passengers, **before driving always:** 

- Make sure that all lights and signals are operating correctly.
- ▶ Make sure that the tire pressure is correct.
- Make sure that all windows are clean and afford good visibility to the outside.
- ► Secure all luggage and other items carefully ⇒ page 76.
- Make sure that nothing can interfere with the pedals.
- Adjust front seat, head restraint and mirrors correctly for your height.
- Instruct passengers to adjust the head restraints according to their height.
- Make sure to use the right child restraint correctly to protect children ⇒ page 178, Child Safety.



- Sit properly in your seat and make sure that your passengers do the same ⇒ page 61, General recommendations.
- Fasten your safety belt and wear it properly. Also instruct your passengers to fasten their safety belts properly ⇒ page 149.

### What impairs driving safety?

Safe driving is directly related to the condition of the vehicle, the driver as well as the driver's ability to concentrate on the road without being distracted.

The driver is responsible for the safety of the vehicle and all of its occupants. If your ability to drive is impaired, safety risks for everybody in the vehicle increase and you also become a hazard to everyone else on the road ⇒ Λ. Therefore:

- Do not let yourself be distracted by passengers or by using a cellular telephone.
- NEVER drive when your driving ability is impaired (by medications, alcohol, drugs, etc.).
- Observe all traffic laws, rules of the road and speed limits and plain common sense.
- ALWAYS adjust your speed to road, traffic and weather conditions.
- ► Take frequent breaks on long trips. Do not drive for more than two hours at a stretch.
- Do NOT drive when you are tired, under pressure or when you are stressed.



### WARNING

Impaired driving safety increases the risk of serious personal injury and death whenever a vehicle is being used.

### Proper occupant seating positions

### Proper seating position for the driver

The proper driver seating position is important for safe, relaxed driving.

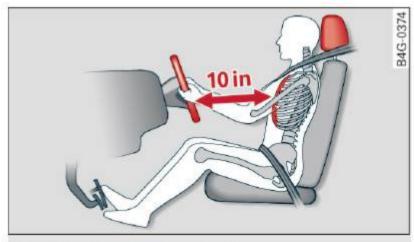


Fig. 152 Correct seating position

For your own safety and to reduce the risk of injury in the event of an accident, we recommend that you adjust the driver's seat to the following position:

- Adjust the driver's seat so that you can easily push the pedals all the way to the floor while keeping your knee(s) slightly bent ⇒ Λ.
- Adjust the angle of the seatback so that it is in an upright position so that your back comes in full contact with it when you drive.
- Adjust the steering wheel so that there is a distance of at least 10 inches (25 cm) between the steering wheel and your breast bone ⇒ fig. 152. If not possible, see your authorized Audi dealer about adaptive equipment.
- Adjust the steering wheel so that the steering wheel and airbag cover points at your chest and not at your face.
- Grasp the top of the steering wheel with your elbow(s) slightly bent.
- Adjust the head restraint so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible.
- ► Fasten and wear safety belts correctly ⇒ page 152.

 Always keep both feet in the footwell so that you are in control of the vehicle at all times.

For detailed information on how to adjust the driver's seat, see  $\Rightarrow$  page 62.

### $\Lambda$

### WARNING

Drivers who are unbelted, out of position or too close to the airbag can be seriously injured by an airbag as it unfolds. To help reduce the risk of serious personal injury:

- Always adjust the driver's seat and the steering wheel so that there are at least 10 inches (25 cm) between your breastbone and the steering wheel.
- Always hold the steering wheel on the outside of the steering wheel rim with your hands at the 9 o'clock and 3 o'clock positions to help reduce the risk of personal injury if the driver's airbag inflates.
- Never hold the steering wheel at the 12 o'clock position or with your hands at other positions inside the steering wheel rim or on the steering wheel hub. Holding the steering wheel the wrong way can cause serious injuries to the hands, arms and head if the driver's airbag deploys.
- Pointing the steering wheel toward your face decreases the ability of the supplemental driver's airbag to protect you in a collision.
- Always sit in an upright position and never lean against or place any part of your body too close to the area where the airbags are located.
- Before driving, always adjust the front seats and head restraints properly and make sure that all passengers are properly restrained.
- Never adjust the seats while the vehicle is moving. Your seat may move unexpectedly and you could lose control of the vehicle.
- Never drive with the backrest reclined or tilted far back! The farther the backrests are tilted back, the greater the risk of in-

- jury due to incorrect positioning of the safety belt and improper seating position.
- Children must always ride in child safety seats 
   ⇒ page 178. Special precautions apply when installing a child safety seat on the front passenger seat 
   ⇒ page 157.

# Proper seating position for the front passenger

The proper front passenger seating position is important for safe, relaxed driving.

For your own safety and to reduce the risk of injury in the event of an accident, we recommend that you adjust the seat for the front passenger to the following position:

- Adjust the angle of the seatback so that it is in an upright position and your back comes in full contact with it whenever the vehicle is moving.
- Adjust the head restraint so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible ⇒ page 142.
- Keep both feet flat on the floor in front of the front passenger seat.
- ► Fasten and wear safety belts correctly ⇒ page 152.

For detailed information on how to adjust the front passenger's seat, see  $\Rightarrow$  page 61.



#### WARNING

Front seat passengers who are unbelted, out of position or too close to the airbag can be seriously injured or killed by the airbag as it unfolds. To help reduce the risk of serious personal injury:

- Passengers must always sit in an upright position and never lean against or place any part of their body too close to the area where the airbags are located.
- Passengers who are unbelted, out of position or too close to the airbag can be seriously injured by an airbag as it

- Always make sure that there are at least 10 inches (25 cm) between the front passenger's breastbone and the instrument panel.
- Each passenger must always sit on a seat of their own and properly fasten and wear the safety belt belonging to that seat.
- Before driving, always adjust the front passenger seat and head restraint properly.
- Always keep your feet on the floor in front of the seat. Never rest them on the seat, instrument panel, out of the window, etc. The airbag system and safety belt will not be able to protect you properly and can even increase the risk of injury in a crash.
- Never drive with the backrest reclined or tilted far back! The farther the backrests are tilted back, the greater the risk of injury due to incorrect positioning of the safety belt and improper seating position.
- Children must always ride in child safety seats ⇒ page 178. Special precautions apply when installing a child safety seat on the front passenger seat ⇒ page 157.

# Proper seating positions for passengers in rear seats

Rear seat passengers must sit upright with both feet on the floor consistent with their physical size and be properly restrained whenever the vehicle is in use.

To reduce the risk of injury caused by an incorrect seating position in the event of a sudden braking maneuver or an accident, your passengers on the rear bench seat must always observe the following:

If there is a passenger on the rear center seating position, slide the center head restraint upward at least to the next notch ⇒ page 65.

- Make sure that the seatback is securely latched in the upright position ⇒ page 67.
- Keep both feet flat in the footwell in front of the rear seat.
- ► Fasten and wear safety belts properly ⇒ page 152.
- Make sure that children are always properly restrained in a child restraint that is appropriate for their size and age ⇒ page 178.

### $\Lambda$

### WARNING

Passengers who are improperly seated on the rear seat can be seriously injured in a crash.

- Each passenger must always sit on a seat of their own and properly fasten and wear the safety belt belonging to that seat.
- Safety belts only offer maximum protection when the seatback is securely latched in the upright position and the safety belts are properly positioned on the body. By not sitting upright, a rear seat passenger increases the risk of personal injury from improperly positioned safety belts!
- Always adjust the head restraint properly so that it can give maximum protection.

### Proper adjustment of head restraints

Correctly adjusted head restraints are an important part of your vehicle's occupant restraint system and can help to reduce the risk of injuries in accident situations.

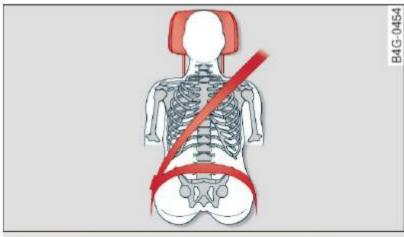


Fig. 153 Head restraint: viewed from the front

The head restraints must be correctly adjusted to achieve the best protection.

- Adjust the head restraints so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible ⇒ fig. 153.
- ► If there is a passenger on the rear center seating position, slide the center head restraint upward at least to the next notch.

Adjusting head restraints ⇒ page 65.



#### WARNING

All seats are equipped with head restraints. Driving without head restraints or with head restraints that are not properly adjusted increases the risk of serious or fatal neck injury dramatically. To help reduce the risk of injury:

- Always drive with the head restraints in place and properly adjusted.
- Every person in the vehicle must have a properly adjusted head restraint.
- Always make sure each person in the vehicle properly adjusts their head restraint. Adjust the head restraints so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible.
- Never attempt to adjust head restraint while driving. If you have driven off and must adjust the driver headrest for any reason, first stop the vehicle safely before attempting to adjust the head restraint.
- Children must always be properly restrained in a child restraint that is appropriate for their age and size ⇒ page 178.

#### Examples of improper seating positions

The occupant restraint system can only reduce the risk of injury if vehicle occupants are properly seated.

Improper seating positions can cause serious injury or death. Safety belts can only work when they are properly positioned on the

body. Improper seating positions reduce the effectiveness of safety belts and will even increase the risk of injury and death by moving the safety belt to critical areas of the body. Improper seating positions also increase the risk of serious injury and death when an airbag deploys and strikes an occupant who is not in the proper seating position. A driver is responsible for the safety of all vehicle occupants and especially for children. Therefore:

Never allow anyone to assume an incorrect seating position when the vehicle is being used ⇒ .

The following bulletins list only some sample positions that will increase the risk of serious injury and death. Our hope is that these examples will make you more aware of seating positions that are dangerous.

# Therefore, whenever the vehicle is moving:

- never stand up in the vehicle
- never stand on the seats
- never kneel on the seats
- never ride with the seatback reclined
- never lie down on the rear seat
- never lean up against the instrument panel
- never sit on the edge of the seat
- never sit sideways
- never lean out the window
- never put your feet out the window
- never put your feet on the instrument panel
- never rest your feet on the seat cushion or back of the seat
- never ride in the footwell
- never ride in the cargo area



#### WARNING

Improper seating positions increase the risk of serious personal injury and death whenever a vehicle is being used.

 Always make sure that all vehicle occupants stay in a proper seating position and are properly restrained whenever the vehicle is being used.

# Pedal area

#### **Pedals**

The pedals must always be free to move and must never be interfered with by a floor mat or any other object.

Make sure that all pedals move freely without interference and that nothing prevents them from returning to their original positions.

Only use floor mats that leave the pedal area free and can be secured with floor mat fasteners.

If a brake circuit fails, increased brake pedal travel is required to bring the vehicle to a full stop.

## $\Lambda$

#### WARNING

Pedals that cannot move freely can cause loss of vehicle control and increase the risk of serious injury.

- Never place any objects in the driver's footwell. An object could get into the pedal area and interfere with pedal function. In case of sudden braking or an accident, you would not be able to brake or accelerate!
- Always make sure that nothing can fall or move into the driver's footwell.

#### Floor mats on the driver side

Always use floor mats that can be securely attached to the floor mat fasteners and do not interfere with the free movement of the pedals.

Make sure that the floor mats are properly secured and cannot move and interfere with the pedals ⇒ .

Use only floor mats that leave the pedal area unobstructed and that are firmly secured so that they cannot slip out of position. You can obtain suitable floor mats from your authorized Audi dealer.

Floor mat fasteners are installed in your Audi.

Floor mats used in your vehicle must be attached to these fasteners. Properly securing the floor mats will prevent them from sliding into positions that could interfere with the pedals or impair safe operation of your vehicle in other ways.

# $\Lambda$

#### WARNING


Pedals that cannot move freely can result in a loss of vehicle control and increase the risk of serious personal injury.

- Always make sure that floor mats are properly secured.
- Never place or install floor mats or other floor coverings in the vehicle that cannot be properly secured in place to prevent them from slipping and interfering with the pedals or the ability to control the vehicle.
- Never place or install floor mats or other floor coverings on top of already installed floor mats. Additional floor mats and other coverings will reduce the size of the pedal area and interfere with the pedals.
- Always properly reinstall and secure floor mats that have been taken out for cleaning.
- Always make sure that objects cannot fall into the driver footwell while the vehicle is moving. Objects can become trapped under the brake pedal and accelerator pedal causing a loss of vehicle control.

### Stowing luggage

#### Loading the luggage compartment

All luggage and other objects must be properly stowed and secured in the luggage compartment.

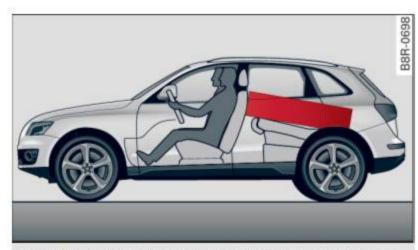

**Fig. 154** Safe load positioning: place heavy objects as low and as far forward as possible.

Loose items in the luggage compartment can shift suddenly, changing vehicle handling characteristics. Loose items can also increase the risk of serious personal injury in a sudden vehicle maneuver or in a collision.

- Distribute the load evenly in the luggage compartment.
- Always place and properly secure heavy items in the luggage compartment as low and as far forward as possible ⇒ fig. 154.
- Secure luggage using the tie-downs provided
   ed ⇒ page 68.
- Make sure that the rear seatback is securely latched in place.

# Λ

#### WARNING

Improperly stored luggage or other items can fly through the vehicle causing serious personal injury in the event of hard braking or an accident. To help reduce the risk of serious personal injury:

- Always put objects, for example, luggage or other heavy items in the luggage compartment.
- Always secure objects in the luggage compartment using the tie-down eyelets and suitable straps.

## $\Lambda$

#### WARNING

Heavy loads will influence the way your vehicle handles. To help reduce the risk of a loss of control leading to serious personal injury:

- Always keep in mind when transporting heavy objects, that a change in the center of gravity can also cause changes in vehicle handling:
  - Always distribute the load as evenly as possible.
- Place heavy objects as far forward in the luggage compartment as possible.
- Never exceed the Gross Axle Weight Rating ing or the Gross Vehicle Weight Rating specified on the safety compliance sticker on the left door jamb. Exceeding permissible weight standards can cause the vehicle to slide and handle differently.
- Please observe information on safe driving ⇒ page 139.



#### WARNING

To help prevent poisonous exhaust gas from being drawn into the vehicle, always keep the rear lid closed while driving.

- Never transport objects larger than those fitting completely into the luggage area because the rear lid cannot be fully closed.
- If you absolutely must drive with the rear lid open, observe the following notes to reduce the risk of poisoning:
  - Close all windows,
  - Close the Panoramic sliding sunroof\*,
  - Open all air outlets in the instrument panel,
  - Switch off the air recirculation,
  - Set the fresh air fan to the highest speed.



#### WARNING

Always make sure that the doors, all windows, the Panoramic sliding sunroof\* and the rear lid are securely closed and locked to reduce the risk of injury when the vehicle is not being used.

- After closing the rear lid, always make sure that it is properly closed and locked.
- Never leave your vehicle unattended especially with the rear lid left open. A child could crawl into the vehicle through the luggage compartment and close the rear lid becoming trapped and unable to get out. Being trapped in a vehicle can lead to serious personal injury.
- Never let children play in or around the vehicle.
- Never let passengers ride in the luggage compartment. Vehicle occupants must always be properly restrained in one of the vehicle's seating positions.

# (i)

#### Tips

- Air circulation helps to reduce window fogging. Stale air escapes to the outside through vents in the trim panel. Be sure to keep these slots free and open.
- The tire pressure must correspond to the load. The tire pressure is shown on the tire pressure label. The tire pressure label is located on the driver's side B-pillar. The tire pressure label lists the recommended cold tire inflation pressures for the vehicle at its maximum capacity weight and the tires that were on your vehicle at the time it was manufactured. For recommended tire pressures for normal load conditions, please see chapter ⇒ page 252.

#### Tie-downs

The luggage compartment is equipped with four tie-downs to secure luggage and other items.

Use the tie-downs to secure your cargo properly ⇒ page 145, Loading the luggage compartment.

In a collision, the laws of physics mean that even smaller items that are loose in the vehicle will become heavy missiles that can cause serious injury. Items in the vehicle possess energy which vary with vehicle speed and the weight of the item. Vehicle speed is the most significant factor.

For example, in a frontal collision at a speed of 30 mph (48 km/h), the forces acting on a 10-lb (5 kg) object are about 20 times the normal weight of the item. This means that the weight of the item would suddenly be about 200 lbs. (90 kg). You can imagine the injuries that a 200 lbs. (90 kg) item flying freely through the passenger compartment could cause in a collision like this.

# $\Lambda$

#### WARNING

Weak, damaged or improper straps used to secure items to tie-downs can fail during hard braking or in a collision and cause serious personal injury.

- Always use suitable mounting straps and properly secure items to the tie-downs in the luggage compartment to help prevent items from shifting or flying forward as dangerous missiles.
- When the rear seat backrest is folded down, always use suitable mounting straps and properly secure items to the tie-downs in the luggage compartment to help prevent items from flying forward as dangerous missiles into the passenger compartment.
- Never attach a child safety seat tether strap to a tie-down.

### Reporting Safety Defects

## Applicable to U.S.A.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration



(NHTSA) in addition to notifying Audi of America, Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defects exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Audi of America, Inc.

To contact the NHTSA, you may either call:

Tel.: 1-888-327-4236 (TTY:

1-800-424-9153) or

1-800-424-9393

or you may write to:

**NHTSA** 

U.S. Department of Transportation

1200 New Jersey Ave., S.E. West Building Washington, DC 20590

You can also obtain other information about motor vehicle safety from:

http://www.safercar.gov

## Applicable to Canada

If you live in Canada and you believe that your vehicle has a defect that could cause a crash, injury or death, you should immediately inform Transport Canada, Defect Investigations and Recalls. You should also notify Volkswagen Group Canada, Inc.

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls, may either call Transport Canada toll-free at:

Tel.: 1-800-333-0510 or

Tel.: 1-819-994-3328 (Ottawa region and from other countries)

TTY for hearing impaired: 1-888-675-6863

or contact Transport Canada by mail at:

Transport Canada Motor Vehicle Safety Investigations Laboratory 80 Noel Street Gatineau, QC J8Z 0A1

#### 148 Driving Safely

For additional road safety information, please visit the Road Safety website at:

http://www.tc.gc.ca/eng/ roadsafety/menu.htm

# Safety belts

### General notes

#### Always wear safety belts!

Wearing safety belts correctly saves lives!

This chapter explains why safety belts are necessary, how they work and how to adjust and wear them correctly.

 Read all the information that follows and heed all of the instructions and WARNINGS.



#### WARNING

Not wearing safety belts or wearing them improperly increases the risk of serious personal injury and death.

- Safety belts are the single most effective means available to reduce the risk of serious injury and death in automobile accidents. For your protection and that of your passengers, always correctly wear safety belts when the vehicle is moving.
- Pregnant women, injured, or physically impaired persons must also use safety belts. Like all vehicle occupants, they are more likely to be seriously injured if they do not wear safety belts. The best way to protect a fetus is to protect the mother throughout the entire pregnancy.

#### Number of seats

Your Audi has a total of five seating positions: two in the front and three in the rear. Each seating position has a safety belt.



#### WARNING

Not wearing safety belts or wearing them improperly increases the risk of serious personal injury and death.

- Never strap more than one person, including small children, into any belt. It is especially dangerous to place a safety belt over a child sitting on your lap.
- Never let more people ride in the vehicle than there are safety belts available.

 Be sure everyone riding in the vehicle is properly restrained with a separate safety belt or child restraint.

#### Safety belt warning light

Your vehicle has a warning system for the driver and (on USA models only) front seat passenger to remind you about the importance of buckling-up.



**Fig. 155** Safety belt warning light in the instrument cluster - enlarged

#### Before driving off, always:

- Fasten your safety belt and make sure you are wearing it properly.
- Make sure that your passengers also buckle up and properly wear their safety belts.
- Protect your children with a child restraint system appropriate for the size and age of the children.

The warning light in the instrument cluster lights up when the ignition is switched on as a reminder to fasten the safety belts. In addition, you will hear a warning tone for a certain period of time.

Fasten your safety belt now and make sure that your passengers also properly put on their safety belts.



#### WARNING

 Safety belts are the single most effective means available to reduce the risk of serious injury and death in automobile accidents. For your protection and that of your passengers, always correctly wear safety belts when the vehicle is moving.  Failure to pay attention to the warning light that come on, could lead to personal injury.

## Why safety belts?

### Frontal collisions and the law of physics

Frontal crashes create very strong forces for people riding in vehicles.



Fig. 156 Unbelted occupants in a vehicle heading for a wall



Fig. 157 The vehicle crashes into the wall

The physical principles are simple. Both the vehicle and the passengers possess energy which varies with vehicle speed and body weight. Engineers call this energy "kinetic energy."

The higher the speed of the vehicle and the greater the vehicle's weight, the more energy that has to be "absorbed" in the crash.

Vehicle speed is the most significant factor. If the speed doubles from 15 to 30 mph (25 to 50 km/h), the energy increases 4 times!

Because the passengers of this vehicle are not using safety belts  $\Rightarrow$  fig. 156, they will keep moving at the same speed the vehicle was moving just before the crash, until something stops them - here, the wall  $\Rightarrow$  fig. 157.

The same principles apply to people sitting in a vehicle that is involved in a frontal collision. Even at city speeds of 20 to 30 mph (30 to 50 km/h), the forces acting on the body can reach one ton (2,000 lbs. or 1,000 kg) or more. At greater speeds, these forces are even higher.

People who do not use safety belts are also not attached to their vehicle. In a frontal collision they will also keep moving forward at the speed their vehicle was travelling just before the crash. Of course, the laws of physics don't just apply to frontal collisions, they determine what happens in all kinds of accidents and collisions.

# What happens to occupants not wearing safety belts?

In crashes unbelted occupants cannot stop themselves from flying forward and being injured or killed. Always wear your safety belts!



**Fig. 158** A driver not wearing a safety belt is violently thrown forward



**Fig. 159** A rear passenger not wearing a safety belt will fly forward and strike the driver

Unbelted occupants are not able to resist the tremendous forces of impact by holding tight or bracing themselves. Without the benefit of safety restraint systems, the unrestrained

occupant will slam violently into the steering wheel, instrument panel, windshield, or whatever else is in the way ⇒ fig. 158. This impact with the vehicle interior has all the energy they had just before the crash.

Never rely on airbags alone for protection. Even when they deploy, airbags provide only additional protection. Airbags are not supposed to deploy in all kinds of accidents. Although your Audi is equipped with airbags, all vehicle occupants, including the driver, must wear safety belts correctly in order to minimize the risk of severe injury or death in a crash.

Remember too, that airbags will deploy only once and that your safety belts are always there to offer protection in those accidents in which airbags are not supposed to deploy or when they have already deployed. Unbelted occupants can also be thrown out of the vehicle where even more severe or fatal injuries can occur.

It is also important for the rear passengers to wear safety belts correctly. Unbelted passengers in the rear seats endanger not only themselves but also the driver and other passengers  $\Rightarrow$  fig. 159. In a frontal collision they will be thrown forward violently, where they can hit and injure the driver and/or front seat passenger.

### Safety belts protect

People think it's possible to use the hands to brace the body in a minor collision. It's simply not true!



Fig. 160 Driver is correctly restrained in a sudden braking maneuver

Safety belts used properly can make a big difference. Safety belts help to keep passengers in their seats, gradually reduce energy levels applied to the body in an accident, and help prevent the uncontrolled movement that can cause serious injuries. In addition, safety belts reduce the danger of being thrown out of the vehicle.

Safety belts attach passengers to the car and give them the benefit of being slowed down more gently or "softly" through the "give" in the safety belts, crush zones and other safety features engineered into today's vehicles. By "absorbing" the kinetic energy over a longer period of time, the safety belts make the forces on the body more "tolerable" and less likely to cause injury.

Although these examples are based on a frontal collision, safety belts can also substantially reduce the risk of injury in other kinds of crashes. So, whether you're on a long trip or just going to the corner store, always buckle up and make sure others do, too. Accident statistics show that vehicle occupants properly wearing safety belts have a lower risk of being injured and a much better chance of surviving an accident. Properly using safety belts also greatly increases the ability of the supplemental airbags to do their job in a collision. For this reason, wearing a safety belt is legally required in most countries including much of the United States and Canada.

Although your Audi is equipped with airbags, you still have to wear the safety belts provided. Front airbags, for example, are activated only in some frontal collisions. The front airbags are not activated in all frontal collisions, in side and rear collisions, in roll overs or in cases where there is not enough deceleration through impact to the front of the vehicle. The same goes for the other airbag systems in your Audi. So, always wear your safety belt and make sure everybody in your vehicle is properly restrained!

# Important safety instructions about safety belts

Safety belts must always be correctly positioned across the strongest bones of your body.

- Always wear safety belts as illustrated and described in this chapter.
- Make sure that your safety belts are always ready for use and are not damaged.

# $\Lambda$

#### WARNING

Not wearing safety belts or wearing them improperly increases the risk of serious personal injury and death. Safety belts can work only when used correctly.

- Always fasten your safety belts correctly before driving off and make sure all passengers are correctly restrained.
- For maximum protection, safety belts must always be positioned properly on the body.
- Never strap more than one person, including small children, into any belt.
- Never place a safety belt over a child sitting on your lap.
- Always keep feet in the footwell in front of the seat while the vehicle is being driven.
- Never let any person ride with their feet on the instrument panel or sticking out the window or on the seat.
- Never remove a safety belt while the vehicle is moving. Doing so will increase your risk of being injured or killed.
- Never wear belts twisted.
- Never wear belts over rigid or breakable objects in or on your clothing, such as eye glasses, pens, keys, etc., as these may cause injury.
- Never allow safety belts to become damaged by being caught in door or seat hardware.
- Do not wear the shoulder part of the belt under your arm or otherwise out of position.

- Several layers of heavy clothing may interfere with correct positioning of belts and reduce the overall effectiveness of the system.
- Always keep belt buckles free of anything that may prevent the buckle from latching securely.
- Never use comfort clips or devices that create slack in the shoulder belt. However, special clips may be required for the proper use of some child restraint systems.
- Torn or frayed safety belts can tear, and damaged belt hardware can break in an accident. Inspect belts regularly. If webbing, bindings, buckles, or retractors are damaged, have belts replaced by an authorized Audi dealer or qualified workshop.
- Safety belts that have been worn and loaded in an accident must be replaced with the correct replacement safety belt by an authorized Audi dealer. Replacement may be necessary even if damage cannot be clearly seen. Anchorages that were loaded must also be inspected.
- Never remove, modify, disassemble, or try to repair the safety belts yourself.
- Always keep the belts clean. Dirty belts may not work properly and can impair the function of the inertia reel
   ⇒ page 226, Safety belts.

# Safety belts

#### Fastening safety belts

Safety first - everybody buckle up!



Fig. 161 Belt buckle and tongue on the driver's seat

To provide maximum protection, safety belts must always be positioned correctly on the wearer's body.

- ► Adjust the front seat and head restraint properly ⇒ page 61, General recommendations.
- Make sure the seatback of the rear seat bench is in an upright position and securely latched in place before using the belt ⇒ Λ.
- ► Hold the belt by the tongue and pull it evenly across the chest and pelvis ⇒ .
- ► Insert the tongue into the correct buckle of your seat until you hear it latch securely ⇒ fig. 161.
- Pull on the belt to make sure that it is securely latched in the buckle.

#### Automatic safety belt retractors

Every safety belt is equipped with an automatic belt retractor on the shoulder belt. This feature locks the belt when the belt is pulled out fast, during hard braking and in an accident. The belt may also lock when you drive up or down a steep hill or through a sharp curve. During normal driving the belt lets you move freely.

#### Safety belt pretensioners

The safety belts are equipped with a belt pretensioner that helps to tighten the safety belt and remove slack when the pretensioner is activated. The function of the pretensioner is monitored by a warning light ⇒ page 15.

#### Switchable locking feature

Every safety belt except the one on the driver seat is equipped with a switchable locking feature that **must** be used when the safety belt is used to attach a child safety seat. Be sure to read the important information about this feature  $\Rightarrow$  page 188.



#### WARNING

Improperly positioned safety belts can cause serious injury in an accident ⇒ page 153, Safety belt position.

 Safety belts offer optimum protection only when the seatback is upright and

- belts are properly positioned on the body.
- Always make sure that the rear seat backrest to which the center rear safety belt is attached is securely latched whenever the rear center safety belt is being used. If the backrest is not securely latched, the passenger will move forward with the backrest during sudden braking, in a sudden maneuver and especially in a crash.
- Never attach the safety belt to the buckle for another seat. Attaching the belt to the wrong buckle will reduce safety belt effectiveness and can cause serious personal injury.
- A passenger who is not properly restrained can be seriously injured by the safety belt itself when it moves from the stronger parts of the body into critical areas like the abdomen.
- Always lock the convertible locking retractor when you are securing a child safety seat in the vehicle ⇒ page 190.

#### Safety belt position

Correct belt position is the key to getting maximum protection from safety belts.

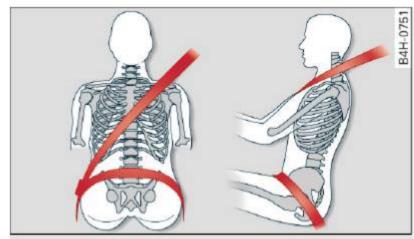


Fig. 162 Safety belt position

Standard features on your vehicle help you adjust the position of the safety belt to match your body size.

- belt height adjustment for the front seats,
- height-adjustable front seats.

# ♠ WARNING

Improperly positioned safety belts can cause serious personal injury in an accident.

- The shoulder belt should lie as close to the center of the collar bone as possible and should fit well on the body. Hold the belt above the latch tongue and pull it evenly across the chest so that it sits as low as possible on the pelvis and there is no pressure on the abdomen. The belt should always fit snugly ⇒ fig. 162. Pull on the belt to tighten if necessary.
- The lap belt portion of the safety belt must be positioned as low as possible across pelvis and never over the abdomen. Make sure the belt lies flat and snug ⇒ fig. 162. Pull on the belt to tighten if necessary.
- A loose-fitting safety belt can cause serious injuries by shifting its position on your body from the strong bones to more vulnerable, soft tissue and cause serious injury.
- Always read and heed all WARNINGS and other important information
   ⇒ page 152.

# Pregnant women must also be correctly restrained

The best way to protect the fetus is to make sure that expectant mothers always wear safety belts correctly - throughout the pregnancy.



Fig. 163 Safety belt position during pregnancy

To provide maximum protection, safety belts must always be positioned correctly on the wearer's body ⇒ page 153.

- Adjust the front seat and head restraint correctly ⇒ page 61, General recommendations.
- Make sure the seatback of the rear seat bench is in an upright position and securely latched in place before using the belt.
- Insert the tongue into the correct buckle of your seat until you hear it latch securely ⇒ page 152, fig. 161.
- Pull on the belt to make sure that it is securely latched in the buckle.

## WARNING

Improperly positioned safety belts can cause serious personal injury in an accident.

- Expectant mothers must always wear the lap portion of the safety belt as low as possible across the pelvis and below the rounding of the abdomen.

#### Unfastening safety belts

Unbuckle the safety belt with the red release button only after the vehicle has stopped.



Fig. 164 Releasing the tongue from the buckle

Push the red release button on the buckle ⇒ fig. 164. The belt tongue will spring out of the buckle ⇒ Λ. ► Let the belt wind up on the retractor as you guide the belt tongue to its stowed position.




#### WARNING

Never unfasten safety belt while the vehicle is moving. Doing so will increase your risk of being injured or killed.

#### Adjusting safety belt height

With the aid of the safety belt height adjustment, the three point safety belt strap routing can be fitted to the shoulder area, according to body size.

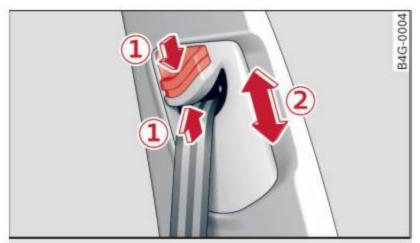

**Fig. 165** Safety belt height adjustment for the front seats – loop-around fittings

The shoulder belt should lie as close to the center of the collar bone as possible and should fit well on the body  $\Rightarrow \bigwedge$  in Safety belt position on page 154.

- Push the loop-around fittings up ⇒ fig. 165
   ②, or
- squeeze together the 1 button, and push the loop-around fittings down 2.
- Pull the belt to make sure that the upper attachment is properly engaged.



#### WARNING

Always read and heed all WARNINGS and other important information ⇒ page 152.



#### **Tips**

With the front seats, the height adjustment of the seat can also be used to adjust the position of the safety belts.

#### Improperly worn safety belts

Incorrectly positioned safety belts can cause severe injuries.

Wearing safety belts improperly can cause serious injury or death. Safety belts can only work when they are correctly positioned on the body. Improper seating positions reduce the effectiveness of safety belts and will even increase the risk of injury and death by moving the safety belt to critical areas of the body. Improper seating positions also increase the risk of serious injury and death when an airbag deploys and strikes an occupant who is not in the correct seating position. A driver is responsible for the safety of all vehicle occupants and especially for children. Therefore:



#### WARNING

Improperly worn safety belts increase the risk of serious personal injury and death whenever a vehicle is being used.

- Always make sure that all vehicle occupants are correctly restrained and stay in a correct seating position whenever the vehicle is being used.
- Always read and heed all WARNINGS and other important information
   ⇒ page 152.

## Safety belt pretensioners

#### How safety belt pretensioners work

In front, side and rear-end collisions above a particular severity and in a rollover, safety belts are tensioned automatically.

The safety belts are equipped with safety belt pretensioners. The system is activated by sensors in front, side and rear-end collisions of great severity and in a rollover. This tightens the belt and takes up belt slack ⇒ ♠ in Service ▶

and disposal of safety belt pretensioner on page 156. Taking up the slack helps to reduce forward occupant movement during a collision.



#### Note

Never let the belt remain over a rear seatback that has been folded forward.



#### **Tips**

The safety belt pretensioner can only be activated once.

- In minor frontal and side collisions, in rear-end collisions and in accidents involving very little impact force, the safety belt pretensioner are not activated.
- When the safety belt pretensioners are activated, a fine dust is released. This is normal and is not caused by a fire in the vehicle.
- The relevant safety requirements must be observed when the vehicle or components of the system are scrapped. An authorized Audi dealer or qualified workshop is familiar with these regulations and will be pleased to pass on the information to you.
- Be sure to observe all safety, environmental and other regulations if the vehicle or individual parts of the system, particularly the safety belt or airbag, are to be disposed. We recommend you have your authorized Audi dealer perform this service for you.

# Service and disposal of safety belt pretensioner

The safety belt pretensioners are parts of the safety belts on your Audi. Installing, removing, servicing or repairing of belt pretensioners can damage the safety belt system and prevent it from working correctly in a collision.

There are some important things you have to know to make sure that the effectiveness of the system will not be impaired and that discarded components do not cause injury or pollute the environment.



#### WARNING

Improper care, servicing and repair procedures can increase the risk of personal injury and death by preventing a safety belt pretensioner from activating when needed or activating it unexpectedly:

- The belt pretensioner system can be activated only once. If belt pretensioners have been activated, the system must be replaced.
- Never repair, adjust, or change any parts of the safety belt system.
- Safety belt systems including safety belt pretensioners cannot be repaired. Special procedures are required for removal, installation and disposal of this system.
- For any work on the safety belt system, we strongly recommend that you see your authorized Audi dealer or qualified technician who has an Audi approved repair manual, training and special equipment necessary.



#### For the sake of the environment

Undeployed airbag modules and pretensioners might be classified as Perchlorate Material -special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate. When the vehicle or parts of the restraint system including airbag modules safety belts with pretensioners are scrapped, all applicable laws and regulations must be observed. Your authorized Audi dealer is familiar with these requirements and we recommend that you have your dealer perform this service for you.

157

## Airbag system

# Important things to know

# Importance of wearing safety belts and sitting properly

Airbags are only supplemental restraints. For airbags to do their job, occupants must always properly wear their safety belts and be in a proper seating position.

For your safety and the safety of your passengers, before driving off, always:

- Adjust the driver's seat and steering wheel properly ⇒ page 140,
- Adjust the front passenger's seat properly
   ⇒ page 62,
- ► Wear safety belts properly ⇒ page 152,
- Always properly use the proper child restraint to protect children ⇒ page 178.

In a collision airbags must inflate within the blink of an eye and with considerable force. The supplemental airbags can cause injuries if the driver or the front seat passenger is not seated properly. Therefore in order to help the airbag to do its job, it is important, both as a driver and as a passenger to sit properly at all times.

By keeping room between your body and the steering wheel and the front of the passenger compartment, the airbag can inflate fully and completely and provide supplemental protection in certain frontal collisions  $\Rightarrow$  page 140, Proper occupant seating positions. For details on the operation of the seat adjustment controls  $\Rightarrow$  page 62.

It's especially important that children are properly restrained  $\Rightarrow$  page 178.

There is a lot that the driver and the passengers can and must do to help the individual safety features installed in your Audi work together as a system.

Proper seating position is important so that the front airbag on the driver side can do its job. If you have a physical impairment or condition that prevents you from sitting properly on the driver seat with the safety belt properly fastened and reaching the pedals, special modifications to your vehicle may be necessary.

Contact your authorized Audi dealer, or call Audi Customer Relations at 1-800-822-2834.

When the airbag system deploys, a gas generator will fill the airbags, break open the padded covers, and inflate between the steering wheel and the driver and between the instrument panel and the front passenger. The airbags will deflate immediately after deployment so that the front occupants can see through the windshield again without interruption.

All of this takes place in the blink of an eye, so fast that many people don't even realize that the airbags have deployed. The airbags also inflate with a great deal of force and nothing should be in their way when they deploy. Front airbags in combination with properly worn safety belts slow down and limit the occupant's forward movement. Together they help to prevent the driver and front seat passenger from hitting parts of the inside the vehicle while reducing the forces acting on the occupant during the crash. In this way they help to reduce the risk of injury to the head and upper body in the crash. Airbags do not protect the arms or the lower parts of the body.

Both front airbags will not inflate in all frontal collisions. The triggering of the airbag system depends on the vehicle deceleration rate caused by the collision and registered by the electronic control unit. If this rate is below the reference value programmed into the control unit, the airbags will not be triggered, even though the car may be badly damaged as a result of the collision. Vehicle damage, repair costs or even the lack of vehicle damage is not necessarily an indication of whether an airbag should inflate or not.

It is not possible to define a range of vehicle speeds that will cover every possible kind and

angle of impact that will always trigger the airbags, since the circumstances will vary considerably between one collision and another. Important factors include, for example, the nature (hard or soft) of the object which the car hits, the angle of impact, vehicle speed, etc. The front airbags will also not inflate in side or rear collisions, or in roll-overs.

Always remember: Airbags will deploy only once, and only in certain kinds of collisions. Your safety belts are always there to offer protection in those situations in which airbags are not supposed to deploy, or when they have already deployed; for example, when your vehicle strikes or is struck by another after the first collision.

This is just one of the reasons why an airbag is a supplementary restraint and is not a substitute for a safety belt. The airbag system works most effectively when used with the safety belts. Therefore, always properly wear your safety belts  $\Rightarrow$  page 149.

#### /!\ WARNING

Sitting too close to the steering wheel or instrument panel will decrease the effectiveness of the airbags and will increase the risk of personal injury in a collision.

- Never sit closer than 10 inches (25 cm) to the steering wheel or instrument panel.
- If you cannot sit more than 10 inches (25 cm) from the steering wheel, investigate whether adaptive equipment may be available to help you reach the pedals and increase your seating distance from the steering wheel.
- If you are unrestrained, leaning forward, sitting sideways or out of position in any way, your risk of injury is much higher.
- You will also receive serious injuries and could even be killed if you are up against the airbag or too close to it when it inflates - even with an Advanced Airbag.
- To reduce the risk of injury when an airbag inflates, always wear safety belts properly ⇒ page 152, Safety belts.

- Always make certain that children age 12 or younger always ride in the rear seat. If children are not properly restrained, they may be severely injured or killed when an airbag inflates.
- Never let children ride unrestrained or improperly restrained in the vehicle. Adjust the front seats properly.
- Never ride with the backrest reclined.
- Always sit as far as possible from the steering wheel or the instrument panel *⇒* page 140.
- Always sit upright with your back against the backrest of your seat.
- Never place your feet on the instrument panel or on the seat. Always keep both feet on the floor in front of the seat to help prevent serious injuries to the legs and hips if the airbag inflates.
- Never recline the front passenger's seat to transport objects. Items can also move into the area of the side airbag or the front airbag during braking or in a sudden maneuver. Objects near the airbags can become projectiles and cause injury when an airbag inflates.



#### WARNING

Airbags that have deployed in a crash must be replaced.

- Use only original equipment airbags approved by Audi and installed by a trained technician who has the necessary tools and diagnostic equipment to properly replace any airbag in your vehicle and assure system effectiveness in a crash.
- Never permit salvaged or recycled airbags to be installed in your vehicle.

#### Child restraints on the front seat - some important things to know

Be sure to read the important information and head the WARNINGS for important details about children and Advanced Airbags *⇒* page 178.

Even though your vehicle is equipped with an Advanced Airbag System, make certain that all children, especially those 12 years and younger, always ride in the back seat properly restrained for their age and size. The airbag on the passenger side makes the front seat a potentially dangerous place for a child to ride. The front seat is not the safest place for a child in a forward-facing child safety seat. It can be a very dangerous place for an infant or a child in a rearward-facing seat.

The Advanced Airbag System in your vehicle has been certified to comply with the Requirements of United States Federal Motor Vehicle Safety Standard 208 as applicable at the time your vehicle was manufactured.

The Standard requires the front airbag on the passenger side to be turned off ("suppressed") if a child up to about one year of age restrained in one of the rear-facing or forward-facing infant restraints listed in Federal Motor Vehicle Safety Standard 208 with which the Advanced Airbag System in your vehicle was certified has been installed on the front passenger seat. For a listing of the child restraints that were used to certify compliance with the US Safety Standard ⇒ page 180.

The **PASSENGER AIR BAG OFF** light in the instrument panel tells you when the front Advanced Airbag on the passenger side has been turned off by the electronic control unit.

Each time you turn on the ignition, the PAS-SENGER AIR BAG OFF light will come on for a few seconds and:

- will stay on if the front passenger seat is not occupied,
- will stay on if there is a small child or child restraint on the front passenger seat,
- will go off if the front passenger seat is occupied by an adult as registered by the weight-sensing mat ⇒ page 168, Monitoring the Advanced Airbag System.

The **PASSENGER AIR BAG OFF** light comes on when the control unit detects a total weight on the front passenger seat that requires the front airbag to be turned off.

If the total weight on the front passenger seat is more than that of a typical 1 year-old child but less than the weight of a small adult, the front airbag on the passenger side can deploy (the PASSENGER AIR BAG OFF light does not come on). If the PASSENGER AIR BAG OFF light does not come on, the front airbag on the passenger side has not been turned off by the electronic control unit and can deploy if the control unit senses an impact that meets the conditions stored in its memory.

#### For example, the airbag may deploy if:

- a small child that is heavier than a typical 1 year-old child is on the front passenger seat (regardless of whether the child is in one of the child safety seats listed ⇒ page 180), or
- a child who has outgrown child restraints is on the front passenger seat.

If the front passenger airbag is turned off, the **PASSENGER AIR BAG OFF** light comes on in the instrument cluster and stays on.

The front airbag on the passenger side may not deploy (the PASSENGER AIR BAG OFF light does not illuminate and stay lit) even if a small adult or teenager, or a passenger who is not sitting upright with their back against a non-reclined backrest with their feet on the vehicle floor in front of the seat is on the front passenger seat ⇒ page 140, Proper seating position for the driver.

If the front passenger airbag deploys, the Federal Standard requires the airbag to meet the "low risk" deployment criteria to reduce the risk of injury through interaction with the airbag. "Low risk" deployment occurs in those crashes that take place at lower decelerations as defined in the electronic control unit  $\Rightarrow$  page 168, PASSENGER AIR BAG OFF light.

Always remember, a child safety seat or infant carrier installed on the front seat may be struck and knocked out of position by the rapidly inflating passenger's airbag in a frontal collision. The airbag could greatly reduce the effectiveness of the child restraint and even seriously injure the child during inflation.



For this reason, and because the back seat is the safest place for children - when properly restrained according to their age and size - we strongly recommend that children always sit in the back seat  $\Rightarrow$  page 178, Child Safety.

#### WARNING

A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates - even with an Advanced Airbag System.

- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door or roof.
- Always install rear-facing child safety seats on the rear seat.
- If you must install a rearward facing child safety seat on the front passenger seat because of exceptional circumstances and the PASSENGER AIR BAG OFF light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your authorized Audi dealer.
- Forward-facing child safety seats installed on the front passenger's seat may interfere with the deployment of the airbag and cause serious personal injury to the child.

#### WARNING

If, in exceptional circumstances, you must install a forward-facing child restraint on the front passenger's seat:

- Always make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
- Never put the forward-facing child restraint up against or very near the instrument panel.
- Always move the passenger seat into its rearmost position in the seat's fore and

aft adjustment range, as far away from the airbag as possible before installing the forward-facing child restraint. The backrest must be adjusted to an upright position.

 Make sure that the PASSENGER AIR BAG OFF light comes on and stays on all the time whenever the ignition is switched on.



### WARNING

To reduce the risk of serious injury, make sure that the PASSENGER AIR BAG OFF light will be displayed whenever a child restraint is installed on the front passenger seat and the ignition is switched on.

- If the PASSENGER AIR BAG OFF light does not stay on, perform the checks described ⇒ page 168, Monitoring the Advanced Airbag System.
- Take the child restraint off the front passenger seat and install it properly at one of the rear seat positions if the PASSEN-GER AIR BAG OFF light does not stay on.
- Have the airbag system inspected by your authorized Audi dealer immediately.
- Always carefully follow instructions from child restraint manufacturers when installing child restraints.

#### WARNING

If, in exceptional circumstances, you must install a forward or rearward-facing child restraint on the front passenger's seat:

- Improper installation of child restraints can reduce their effectiveness or even prevent them from providing any protection.
- An improperly installed child restraint can interfere with the airbag as it deploys and seriously injure or even kill the child - even with an Advanced Airbag System.
- Always carefully follow the manufacturer's instructions provided with the child safety seat or carrier.

 Never place additional items on the seat that can increase the total weight registered by the weight-sensing mat and can cause injury in a crash.

## Front airbags

#### Description of front airbags

The airbag system can provide supplemental protection to properly restrained front seat occupants.



Fig. 166 Location of driver airbag: in steering wheel



**Fig. 167** Location of front passenger's airbag: in the instrument panel

Your vehicle is equipped with an "Advanced Airbag System" in compliance with United States Federal Motor Vehicle Safety Standard (FMVSS) 208 as applicable at the time your vehicle was manufactured. The system senses the position of the front seats and controls front airbag inflation with a valve, depending on the distance between the respective seat and the steering wheel or instrument panel. The safety belts for the seats have "pretensioners" that help to take slack out of the belt system. The pretensioners are also activated by the electronic control unit for the airbag system.

The front safety belts also have load limiters to help reduce the forces applied to the body in a crash.

The airbag for the driver is in the steering wheel hub  $\Rightarrow$  fig. 166 and the airbag for the front passenger is in the instrument panel  $\Rightarrow$  fig. 167. The general location of the airbags is marked "AIRBAG".

There is a lot you need to know about the air-bags in your vehicle. We urge you to read the detailed information about airbags, safety belts and child safety in this and the other chapters that make up the owner's literature. Please be sure to heed the WARNINGS - they are extremely important for your safety and the safety of your passengers, especially infants and small children.

### $\Lambda$

#### WARNING

Never rely on airbags alone for protection.

- Even when they deploy, airbags provide only supplemental protection.
- Airbag work most effectively when used with properly worn safety belts.
- Therefore, always wear your safety belts and make sure that everybody in your vehicle is properly restrained.



#### WARNING

A person on the front passenger seat, especially infants and small children, will receive serious injuries and can even be killed by being too close to the airbag when it inflates.

- Although the Advanced Airbag System in your vehicle is designed to turn off the front passenger airbag if an infant or a small child is on the front passenger seat, nobody can absolutely guarantee that deployment under these special conditions is impossible in all conceivable situations that may happen during the useful life of your vehicle.
- The Advanced Airbag System can deploy in accordance with the "low risk" option under the U.S. Federal Standard if a child that is heavier than the typical one-year

- old child is on the front passenger seat and the other conditions for airbag deployment are met.
- Accident statistics have shown that children are generally safer in the rear seat area than in the front seating position.
- For their own safety, all children, especially 12 years and younger, should always ride in the back properly restrained for their age and size.

### Advanced front airbag system

Your vehicle is equipped with a front Advanced Airbag System in compliance with United States Federal Motor Vehicle Safety Standard 208 as applicable at the time your vehicle was manufactured.

The front Advanced Airbag System supplements the safety belts to provide additional protection for the driver's and front passenger's heads and upper bodies in frontal crashes. The airbags inflate only in frontal impacts when the vehicle deceleration is high enough.

The front Advanced Airbag System for the front seat occupants is not a substitute for your safety belts. Rather, it is part of the overall occupant restraint system in your vehicle. Always remember that the airbag system can only help to protect you, if you are sitting upright, wearing your safety belt and wearing it properly. This is why you and your passengers must always be properly restrained, not just because the law requires you to be.

The Advanced Airbag System in your vehicle has been certified to meet the "low risk" requirements for 3 and 6 year-old children on the passenger side and very small adults on the driver side. The low risk deployment criteria are intended to help reduce the risk of injury through interaction with the front airbag that can occur, for example, by being too close to the steering wheel and instrument panel when the airbag inflates.

In addition, the system has been certified to comply with the "suppression" requirements

of the Safety Standard, to turn off the front airbag for infants 12 months old and younger who are restrained on the front passenger seat in child restraints that are listed in the Standard ⇒ page 180, Child restraints and Advanced Airbags.

"Suppression" requires the front airbag on the passenger side to be turned off if:

- a child up to about one year of age is restrained on the front passenger seat in one of the rear-facing or forward-facing infant restraints listed in Federal Motor Vehicle Safety Standard 208 with which the Advanced Airbag System in your vehicle was certified. For a listing of the child restraints that were used to certify your vehicle's compliance with the US Safety Standard ⇒ page 180,
- weight less than a threshold level stored in the control unit is detected on the front passenger seat.

When a person is detected on the front passenger seat, weighing more than the total weight of a child that is about 1 year old restrained in one of the rear-facing or forward-facing infant restraints (listed in Federal Motor Vehicle Safety Standard 208 with which the Advanced Airbag System in your vehicle was certified), the front airbag on the passenger side may or may not deploy.

The PASSENGER AIR BAG OFF light comes on when the electronic control unit detects a total weight on the front passenger seat that requires the front airbag to be turned off. If the PASSENGER AIR BAG OFF light does not come on, the front airbag on the passenger side has not been turned off by the control unit and can deploy if the control unit senses an impact that meets the conditions stored in its memory.

If the total weight on the front passenger seat is more than that of a typical 1 year-old, but less than the weight of a small adult, the front airbag on the passenger side may deploy (the PASSENGER AIR BAG OFF light does not come on).

#### For example, the airbag may deploy if:

- a small child that is heavier than a typical 1 year-old child is on the front passenger seat (regardless of whether the child is in one of the child safety seats listed ⇒ page 180),
- a child who has outgrown child restraints is on the front passenger seat.

If the front passenger airbag is turned off, the **PASSENGER AIR BAG OFF** light in the center of the instrument panel will come on and stay on.

The front airbag on the passenger side may not deploy (the **PASSENGER AIR BAG OFF** light does not illuminate and stay lit) if:

- a small adult or teenager is on the front passenger seat
- a passenger who is not sitting upright with their back against a non-reclined backrest with their feet on the vehicle floor in front of the seat is on the front passenger seat.

If the front passenger airbag deploys, the Federal Standard requires the airbag to meet the "low risk" deployment criteria to help reduce the risk of injury through interaction with the airbag. "Low risk" deployment occurs in those crashes that take place at lower decelerations as defined in the electronic control unit. ⇒ page 168

Always remember: Even though your vehicle is equipped with Advanced Airbags, the safest place for children is properly restrained on the back seat. Please be sure to read the important information in the sections that follow and be sure to heed all of the WARNINGS.



#### WARNING

To reduce the risk of injury when an airbag inflates, always wear safety belts properly.

- If you are unrestrained, leaning forward, sitting sideways or out of position in any way, your risk of injury is much higher.
- You will also receive serious injuries and could even be killed if you are up against the airbag or too close to it when it in-

flates - even with an Advanced Airbag ⇒ page 157.



#### WARNING

A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates - even with an Advanced Airbag System.

- Although the Advanced Airbag System in your vehicle is designed to turn off the front airbag when a rearward-facing child restraint has been installed on the front passenger seat, nobody can absolutely guarantee that deployment is impossible in all conceivable situations that may happen during the useful life of your vehicle.
- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door, or roof.
- Always install rearward-facing child restraints in the back seat.
- If you must install a rearward facing child safety seat on the front passenger seat because of exceptional circumstances and the PASSENGER AIR BAG OFF light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your authorized Audi dealer.



#### WARNING

If, in exceptional circumstances, you must install a forward-facing child restraint on the front passenger's seat:

- Always make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
- Never put the forward-facing child restraint up against or very near the instrument panel.

- Always move the passenger seat into its rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible, before installing the forward-facing child restraint. The backrest must be adjusted to an upright position.
- Make sure that the PASSENGER AIR BAG **OFF** light comes on and stays on all the time whenever the ignition is switched on.

#### Advanced Airbag System components

The front passenger seat in your vehicle has a lot of very important parts of the Advanced Airbag System in it. These parts include the weight-sensing mat, sensors, wiring, brackets, and more. The function of the system in the front passenger seat is checked by the electronic control unit when the ignition is on. The control unit monitors the Advanced Airbag System and turns the airbag indicator light on when a malfunction in the system components is detected. The function of the airbag indicator light is described in greater detail below. Because the front passenger seat contains important parts of the Advanced Airbag System, you must take care to prevent it from being damaged. Damage to the seat may prevent the Advanced Airbag for the front passenger seat from doing its job in a crash.

### The front Advanced Airbag System consists of the following:

- Crash sensors in the front of the vehicle that measure vehicle acceleration/deceleration to provide information to the Advanced Airbag System about the severity of the crash.
- An electronic control unit, with integrated crash sensors for front and side impacts. The control unit "decides" whether to fire the front airbags based on the information received from the crash sensors. The control unit also "decides" whether the safety belt pretensioners should be activated.

- An Advanced Airbag with gas generator and control valve for the driver inside the steering wheel hub.
- An Advanced Airbag with gas generator and control valve inside the instrument panel for the front passenger.
- A weight-sensing mat under the upholstery padding of the front passenger seat cushion that measures the total weight on the seat. The information registered is sent continuously to the electronic control unit to regulate deployment of the front Advanced Airbag on the passenger side.
- An airbag monitoring system and indicator light in the instrument cluster  $\Rightarrow$  page 168.
- A sensor in each front seat registers the distance between the respective seat and the steering wheel or instrument panel. The information registered is sent continuously to the electronic control unit to regulate deployment of the front Advanced Airbags.
- The PASSENGER AIR BAG OFF light comes on and stays on in the center of the instrument panel ⇒ page 168, fig. 169 and tells you when the front Advanced Airbag on the passenger side has been turned off.
- A sensor below the safety belt latch for the front seat passenger to measure the tension on the safety belt. The tension on the safety belt and the weight registered by the weight-sensing mat help the control unit "decide" whether the front airbag for the front passenger seat should be turned off or not  $\Rightarrow$  page 158, Child restraints on the front seat – some important things to know.
- A sensor in the safety belt latch for the driver and for the front seat passenger that senses whether that safety belt is latched or not and transmits this information to the electronic control unit.

#### WARNING

Damage to the front passenger seat can prevent the front airbag from working properly.

- Improper repair or disassembly of the front passenger and driver seat will prevent the Advanced Airbag System from functioning properly.
- Repairs to the front passenger seat must be performed by qualified and properly trained workshop personnel.
- Never remove the front passenger or driver seat from the vehicle.
- Never remove the upholstery from the front passenger seat.
- Never disassemble or remove parts from the seat or disconnect wires from it.
- Never carry sharp objects in your pockets or place them on the seat. If the weightsensing mat in the passenger seat is punctured it cannot work properly.
- Never carry things on your lap or carry objects on the passenger seat. Such items can increase the weight registered by the weight-sensing mat and send the wrong information to the airbag control unit.
- Never store items under the front passenger seat. Parts of the Advanced Airbag System under the passenger seat could be damaged, preventing them and the airbag system from working properly.
- Never place seat covers or replacement upholstery that have not been specifically approved by Audi on the front seats.
- Seat covers can prevent the Advanced
   Airbag System from recognizing child re straints or occupants on the front pas senger seat and prevent the side airbag
   in the seat backrest from deploying prop erly.
- Never use cushions, pillows, blankets or similar items on the front passenger seat. The additional padding will prevent the weight-sensing mat in the seat from accurately registering the child restraint or person on the seat and prevent the Advanced Airbag System from functioning properly.
- If you must use a child restraint on the front passenger seat and the child re-

- straint manufacturer's instructions require the use of a towel, foam cushion or something else to properly position the child restraint, make certain that the **PASSENGER AIR BAG OFF** light comes on and stays on whenever the child restraint is installed on the front passenger seat.
- If the PASSENGER AIR BAG OFF light does not come on and stay on, immediately install child restraint in a rear seating position and have the airbag system inspected by your authorized Audi dealer.

# How the Advanced Airbag System components work together

The front Advanced Airbag System and the side airbags supplement the protection offered by the front three-point safety belts with pretensioners and load limiters and the adjustable head restraints to help reduce the risk of injury in a wide range of accident and crash situations. Be sure to read the important information about safety and heed the WARNINGS in this chapter.

Deployment of the Advanced Airbag System and the activation of the safety belt pretensioners depend on the deceleration measured by the crash sensors and registered by the electronic control unit. The amount of inflation of the front airbags can also be adapted to the front seat position, depending on the distance between the respective front seat and the steering wheel or instrument panel as registered by sensors in the seats. Crash severity depends on speed and deceleration as well as the mass and stiffness of the vehicle or object involved in the crash.

On the passenger side, regardless of safety belt use, the airbag will be turned off if the weight on the passenger seat is less than the amount programmed in the electronic control unit. The front airbag on the passenger side will also be turned off if one of the child safety seats that has been certified under Federal Motor Vehicle Safety Standard 208 has been recognized on the seat. The PASSENGER AIR

BAG OFF light comes on and stays on to tell you when the front Advanced Airbag on the passenger side has been turned off ⇒ page 158, Child restraints on the front seat – some important things to know.



#### WARNING

To reduce the risk of injury when an airbag inflates, always wear safety belts properly.

- If you are unrestrained, leaning forward, sitting sideways or out of position in any way, your risk of injury is much higher.
- You will also receive serious injuries and could even be killed if you are up against the airbag or too close to it when it inflates - even with an Advanced Airbag
   ⇒ page 157.

# More important things to know about front airbags



Fig. 168 Inflated front airbags

Safety belts are important to help keep front seat occupants in the proper seated position so that airbags can unfold properly and provide supplemental protection in a frontal collision.

The front airbags are designed to provide additional protection for the chest and face of the driver and the front seat passenger when:

- safety belts are worn properly,
- the seats have been positioned so that the occupant is properly seated as far as possible from the airbag,
- and the head restraints have been properly adjusted.

Because airbags inflate in the blink of an eye with great force, things you have on your lap

or have placed on the seat could become dangerous projectiles, and be pushed into you if the airbag inflates.

When an airbag deploys, fine dust is released. This is normal and is not caused by a fire in the vehicle. This dust is made up mostly of a powder used to lubricate the airbags as they deploy. It could irritate skin.

It is important to remember that while the supplemental airbag system is designed to reduce the likelihood of serious injuries, other injuries, for example swelling, bruising and minor abrasions, can also happen when airbags inflate. Airbags do not protect the arms or the lower parts of the body. Front airbags only supplement the three point safety belts in some frontal collisions in which the vehicle deceleration is high enough to deploy the airbags.

#### Front airbags will not deploy:

- if the ignition is switched off when a crash occurs,
- in side collisions,
- in rear-end collisions,
- in rollovers,
- when the crash deceleration measured by the airbag system is less than the minimum threshold needed for airbag deployment as registered by the electronic control unit.

# The front passenger airbag will also not deploy:

- when the front passenger seat is not occupied,
- when the weight on the front passenger seat as sensed by the Advanced Airbag System indicates that the front airbag on the passenger side has to be turned off by the electronic control unit (the PASSENGER AIR BAG OFF light comes on and stays on).



#### WARNING

Sitting in the wrong position can increase the risk of serious injury in crashes.

 To reduce the risk of injury when the airbags inflate, the driver and passengers must always sit in an upright position, must not lean against or place any part of their body too close to the area where the airbags are located.

Occupants who are unbelted, out of position or too close to the airbag can be seriously injured by an airbag as it unfolds with great force in the blink of an eye ⇒ page 158.



#### WARNING

A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates - even with an Advanced Airbag System.

- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door or roof.
- Always install rear-facing child safety seats on the rear seat.
- If you must install a rearward facing child safety seat on the front passenger seat because of exceptional circumstances and the PASSENGER AIR BAG OFF light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your authorized Audi dealer.



#### WARNING

Objects between you and the airbag will increase the risk of injury in a crash by interfering with the way the airbag unfolds or by being pushed into you as the airbag inflates.

- Never hold things in your hands or on your lap when the vehicle is in use.
- Never transport items on or in the area of the front passenger seat. Objects could move into the area of the front airbags during braking or other sudden maneuver and become dangerous projec-

- tiles that can cause serious personal injury if the airbags inflate.
- Never place or attach accessories or other objects (such as cupholders, telephone brackets, large, heavy or bulky objects) on the doors, over or near the area marked "AIRBAG" on the steering wheel, instrument panel, seat backrests or between those areas and yourself. These objects could cause injury in a crash, especially when the airbags inflate.
- Never recline the front passenger's seat to transport objects. Items can also move into the area of the side airbag or the front airbag during braking or in a sudden maneuver. Objects near the airbags can become projectiles and cause injury, particularly when the seat is reclined.



#### WARNING

The fine dust created when airbags deploy can cause breathing problems for people with a history of asthma or other breathing conditions.

- To reduce the risk of breathing problems, those with asthma or other respiratory conditions should get fresh air right away by getting out of the vehicle or opening windows or doors.
- If you are in a collision in which airbags deploy, wash your hands and face with mild soap and water before eating.
- Be careful not to get the dust into your eyes, or into any cuts or scratches.
- If the residue should get into your eyes, flush them with water.

# Monitoring the Advanced Airbag System

#### Airbag monitoring indicator light

Two separate indicators monitor the function of the Advanced Airbag System: the airbag monitoring indicator light and the PASSEN-GER AIR BAG OFF light.

The Advanced Airbag System (including the electronic control unit, sensor circuits and system wiring) is monitored continuously to make sure that it is functioning properly whenever the ignition is on. Each time you turn on the ignition, the airbag monitoring indicator light will come on for a few seconds (self diagnostics).

# The system must be inspected when the indicator light ::

- does not come on when the ignition is switched on,
- does not go out a few seconds after you have switched on the ignition, or
- comes on while driving.

If an airbag system malfunction is detected, the indicator light will first start flashing to catch the driver's attention and then stay on continuously to serve as a constant reminder to have the system inspected immediately.

If a malfunction occurs that turns the front airbag on the passenger side off, the PASSEN-GER AIR BAG OFF light will come on and stay on whenever the ignition is on.

# Λ

#### WARNING

An airbag system that is not functioning properly cannot provide supplemental protection in a frontal crash.

– If the airbag indicator light ⇒ page 15 comes when the vehicle is being used, have the system inspected immediately by your authorized Audi dealer. It is possible that the airbag will inflate when it is not supposed to, or will not inflate when it should.

### PASSENGER AIR BAG OFF light



Fig. 169 Section from the instrument panel: PASSEN-GER AIR BAG OFF light

The **PASSENGER AIR BAG OFF** light is located in the center of the instrument panel ⇒ *fig.* 169.

The PASSENGER AIR BAG OFF light will come on and stay on to tell you when the front Advanced Airbag on the passenger side has been turned off by the electronic control unit. Each time you turn on the ignition, the PASSENGER AIR BAG OFF light will flash for a few seconds and:

- will stay on if the front passenger seat is not occupied,
- will stay on if there is a small child or child restraint on the front passenger seat,
- will go out if the front passenger seat is occupied by an adult as registered by the weight-sensing mat.

# The PASSENGER AIR BAG OFF light must come on and stay on if the ignition is on and

- a car bed has been installed on the front seat, or
- a rearward-facing child restraint has been installed on the front passenger seat, or
- a forward-facing child restraint has been installed on the front passenger seat, or
- the weight registered on the front passenger seat is equal to or less than the combined weight of a typical 1 year-old restrained in one of the rear-facing or forward-facing infant restraints listed in Federal Motor Vehicle Safety Standard 208 with which the Advanced Airbag System in your vehicle was certified.

If the front passenger seat is not occupied, the front airbag will not deploy, and the PAS-SENGER AIR BAG OFF light will stay on. Never install a rearward-facing child restraint on the front passenger seat, the safest place for a child in any kind of child restraint is at one of the seating positions on the rear seat ⇒ page 158, Child restraints on the front seat – some important things to know and ⇒ page 178, Child Safety.

on when one of the conditions listed above is met, be sure to check the light regularly to make certain that the PASSENGER AIR BAG OFF light stays on continuously whenever the ignition is on. If the PASSENGER AIR BAG OFF light does not appear and not stay on all the time, stop as soon as it is safe to do so and

- reactivate the system by turning the ignition off and then turning it on again;
- remove and reinstall the child restraint.
   Make sure that the child restraint is properly installed and that the safety belt for the front passenger seat has been correctly routed around the child restraint as described in the child restraint manufacturer's instructions;
- make sure that the convertible locking feature on the safety belt for the front passenger seat has been activated and that the safety belt has been pulled tight. The belt must not be loose or have loops of slack so that the sensor below the safety belt latch on the seat can do its job ⇒ page 188.
- make sure that things that may increase the weight of the child and child safety seat are not being transported on the front passenger seat;
- make sure that the safety belt tension sensor is not blocked. Shake the safety belt latch on the front passenger seatback and forth:
- If a strap or tether is being used to tie the child safety seat to the front passenger seat, make sure that it is not so tight that it

causes the weight-sensing mat to measure more weight than is actually on the seat.

If the PASSENGER AIR BAG OFF light still does not come on and does not stay on continuously (when the ignition is switched on),

- take the child restraint off the front passenger seat and install it properly at one of the rear seat positions. Have the airbag system inspected by your authorized Audi dealer immediately.
- move the child to a rear seat position and make sure that the child is properly restrained ed in a child restraint that is appropriate for its size and age.

The PASSENGER AIR BAG OFF light should NOT come on when the ignition is on and an adult is sitting in a proper seating position on the front passenger seat. If the PASSENGER AIR BAG OFF light comes on and stays on or flashes for about 5 seconds while driving, under these circumstances, make sure that:

- the adult on the front passenger seat is properly seated on the center of the seat cushion with his or her back up against the backrest and the backrest is not reclined
   ⇒ page 140, Proper occupant seating positions,
- the adult is not taking weight off the seat by holding on to the passenger assist handle above the front passenger door or supporting their weight on the armrest,
- the safety belt is being properly worn and that there is not a lot of slack in the safety belt webbing,
- accessory seat covers or cushions or other things that may cause an incorrect reading or impression on the weight-sensing mat under the upholstery of the seat have been removed from the front passenger seat,
- a safety belt extender has not been left in the safety belt latch for the front passenger seat.

In addition to the PASSENGER AIR BAG OFF light in the center of the instrument panel, the message PASSENGER AIR BAG OFF or PASSENGER AIR BAG ON will briefly appear



in the instrument cluster display. This is to inform the driver of the current front passenger airbag status.

# Important safety instructions on monitoring the Advanced Airbag System

# $\Lambda$

#### WARNING

An airbag system that is not functioning properly cannot provide supplemental protection in a frontal crash.

— If the airbag indicator light ⇒ page 15 comes when the vehicle is being used, have the system inspected immediately by your authorized Audi dealer. It is possible that the airbag will inflate when it is not supposed to, or will not inflate when it should.

# A

#### WARNING

If the front airbag inflates, a child without a child restraint, in a rearward-facing child safety seat or in a forward-facing child restraint that has not been properly installed will be seriously injured and can be killed.

- Even though your vehicle is equipped with an Advanced Airbag System, make certain that all children, especially 12 years and younger, always ride on the back seat properly restrained for their age and size.
- Always install forward or rear-facing child safety seats on the rear seat – even with an Advanced Airbag System.
- If you must install a rearward-facing child safety seat on the front passenger seat because of exceptional circumstances and the PASSENGER AIR BAG OFF light does not appear and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your authorized Audi dealer.
- A tight tether or other strap on a rearward-facing child restraint attached to the front passenger seat can put too much pressure on the weight-sensing

mat in the seat and register more weight than is actually on the seat. The heavier weight registered can make the system work as though an adult were on the seat and deploy the Advanced Airbag when it must be suppressed causing serious or even fatal injury to the child.

– If, in exceptional circumstances, you must install a forward-facing child restraint on the front passenger seat, always move the seat into its rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible. The backrest must be adjusted to an upright position. Make sure that the PASSENGER AIR BAG OFF light comes on and stays on all the time whenever the ignition is switched on.

# $\Lambda$

#### WARNING

- If the PASSENGER AIR BAG OFF light does not go out when an adult is sitting on the front passenger seat after taking the steps described above, make sure the adult is properly seated and restrained at one of the rear seating positions.
- Have the airbag system inspected by your authorized Audi dealer before transporting anyone on the front passenger seat.



#### **Tips**

If the weight-sensing mat in the front passenger seat detects an empty seat, the front airbag on the passenger side will be turned off, and **PASSENGER AIR BAG OFF** will stay on.

#### Repair, care and disposal of the airbags

Parts of the airbag system are installed at many different places on your Audi. Installing, removing, servicing or repairing a part in an area of the vehicle can damage a part of an airbag system and prevent that system from working properly in a collision. There are some important things you have to know to make sure that the effectiveness of the system will not be impaired and that discarded components do not cause injury or pollute the environment.

# 1

#### WARNING

Improper care, servicing and repair procedures can increase the risk of personal injury and death by preventing an airbag from deploying when needed or deploying an airbag unexpectedly:

- Never cover, obstruct, or change the steering wheel horn pad or airbag cover or the instrument panel or modify them in any way.
- Never attach any objects such as cupholders or telephone mountings to the surfaces covering the airbag units.
- For cleaning the horn pad or instrument panel, use only a soft, dry cloth or one moistened with plain water. Solvents or cleaners could damage the airbag cover or change the stiffness or strength of the material so that the airbag cannot deploy and protect properly.
- Never repair, adjust, or change any parts of the airbag system.
- All work on the steering wheel, instrument panel, front seats or electrical system (including the installation of audio equipment, cellular telephones and CB radios, etc.) must be performed by a qualified technician who has the training and special equipment necessary.
- For any work on the airbag system, we strongly recommend that you see your authorized Audi dealer or qualified workshop.
- Never modify the front bumper or parts of the vehicle body.
- Always make sure that the side airbag can inflate without interference:
  - Never install seat covers or replacement upholstery over the front seat-backs that have not been specifically approved by Audi.

- Never use additional seat cushions that cover the areas where the side airbags inflate.
- Damage to the original seat covers or to the seam in the area of the side airbag module must always be repaired immediately by an authorized Audi dealer.
- The airbag system can be activated only once. After an airbag has inflated, it must be replaced by an authorized Audi dealer or qualified technician who has the technical information, training and special equipment necessary.
- The airbag system can be deployed only once. After an airbag has been deployed, it must be replaced with new replacement parts designed and approved especially for your Audi model version. Replacement of complete airbag systems or airbag components must be performed by qualified workshops only. Make sure that any airbag service action is entered in your Audi Warranty & Maintenance booklet under AIRBAG REPLACEMENT RECORD.
- In accidents when an airbag is deployed, the vehicle battery separates the alternator and the starter from the vehicle electrical system for safety reasons with a pyrotechnic circuit interrupter.
  - Work on the pyrotechnic circuit interrupter must only be performed by a qualified dealer - risk of an accident!
  - If the vehicle or the circuit interrupter is scrapped, all applicable safety precautions must be followed.



#### For the sake of the environment

Undeployed airbag modules and pretensioners might be classified as Perchlorate Material -special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate. When the vehicle or parts of the restraint system including airbag modules safety belts with pretensioners are scrapped, all applicable laws and regulations must be observed. Your authorized Audi

dealer is familiar with these requirements and we recommend that you have your dealer perform this service for you.

#### Other things that can affect Advanced Airbag performance

Changing the vehicle's suspension system can change the way that the Advanced Airbag System performs in a crash. For example, using tire-rim combinations not approved by Audi, lowering the vehicle, changing the stiffness of the suspension, including the springs, suspension struts, shock absorbers etc. can change the forces that are measured by the airbag sensors and sent to the electronic control unit. Some suspension changes can, for example, increase the force levels measured by the sensors and make the airbag system deploy in crashes in which it would not deploy if the changes had not been made. Other kinds of changes may reduce the force levels measured by the sensors and prevent the airbag from deploying when it should.

The sensors in the safety belt buckle for the driver and front passenger seat tell the electronic control module if the safety belt is latched or not. If the safety belt is being used, the front airbag will deploy at a slightly higher rate of vehicle deceleration than if the safety belt is not being used. Therefore, in a particular collision, it is possible that an airbag will not deploy at a seating position where the safety belt is being used but will inflate at the position where the safety belt is not being used. It is important that nothing interfere with the safety belt buckles so that the sensors can send the correct information about safety belt use to the electronic control unit.

# A

#### WARNING

Changing the vehicle's suspension including use of unapproved tire-rim combinations can change Advanced Airbag performance and increase the risk of serious personal injury in a crash.

 Never install suspension components that do not have the same performance

- characteristics as the components originally installed on your vehicle.
- Never use tire-rim combinations that have not been approved by Audi.

# $\Lambda$

#### WARNING

Items stored between the safety belt buckle and the center console can cause the sensors in the buckle to send the wrong information to the electronic control module and prevent the Advanced Airbag System from working properly.

 Always make sure that nothing can interfere with the safety belt buckles and that they are not obstructed.

### Side airbags

#### Description of side airbags

The airbag system can provide supplemental protection to properly restrained occupants.



Fig. 170 Side airbag location in the driver's seat

The side airbags are located in the sides of the front seat backrests ⇒ fig. 170 and the rear backrest\* facing the doors. They are identified by the word "AIRBAG".

#### The side airbag system basically consists of:

- the electronic control module and external side impact sensors
- the two airbags located in the sides of the front backrests and the two airbags\* located in the rear backrest
- the airbag warning light in the instrument cluster.

The airbag system is monitored electronically to make certain that it is functioning properly >

at all times. Each time you turn on the ignition, the airbag system indicator light will come on for a few seconds (self diagnostics).

The side airbag system supplements the safety belts and can help to reduce the risk of injury to the driver's and front passenger's upper torso on the side of the vehicle that is struck in a side collision. The airbag deploys only in side impacts and only when the vehicle acceleration registered by the control unit is high enough. If this rate is below the reference value programmed into the control unit, the side airbags will not be triggered, even though the car may be badly damaged as a result of the collision. It is not possible to define an airbag triggering range that will cover every possible angle of impact, since the circumstances will vary considerably between one collision and another. Important factors include, for example, the nature (hard or soft) of the impacting object, the angle of impact, vehicle speed, etc. ⇒ page 174, Important safety instructions on the side airbag system.

Aside from their normal safety function, safety belts work to help keep the driver or front passenger in position in the event of a side collision so that the side airbags can provide protection.

The airbag system is *not* a substitute for your safety belt. Rather, it is part of the overall occupant restraint system in your vehicle. Always remember that the side airbag system can only help to protect you if you are wearing your safety belt and wearing it properly. This is another reason why you should always wear your safety belts, not just because the law requires you to do so ⇒ *page 149*, *General notes*.

It is important to remember that while the supplemental side airbag system is designed to reduce the likelihood of serious injuries, other injuries, for example, swelling, bruising, and minor abrasions can also be associated with deployed side airbags. Remember too, side airbags will deploy only once and only in certain kinds of accidents - your safety belts are always there to offer protection.

Vehicle damage, repair costs or even the lack of vehicle damage are not necessarily an indication of over-sensitive or failed airbag activation. In some collisions, both front and side airbags may inflate. Remember too, that airbags will deploy only once and only in certain kinds of collisions – your safety belts are always there to offer protection in those accidents in which airbags are not supposed to deploy or when they have already deployed.

### The side airbag system will not deploy:

- when the ignition is turned off
- in side collisions when the acceleration measured by the sensor is too low
- in front-end collisions
- in rear-end collisions
- in rollovers.

In some types of accidents the front airbags, side curtain airbags and side airbags may be triggered together.



#### WARNING

- Safety belts and the airbag system will only provide protection when occupants are in the proper seating position
   ⇒ page 174.
- If the airbag indicator light ⇒ page 15 comes when the vehicle is being used, have the system inspected immediately by your authorized Audi dealer. It is possible that the airbag will inflate when it is not supposed to, or will not inflate when it should.

#### How supplemental side airbags work

Side airbags deploy instantly and can help reduce the risk of upper torso injuries for occupants who are properly restrained.

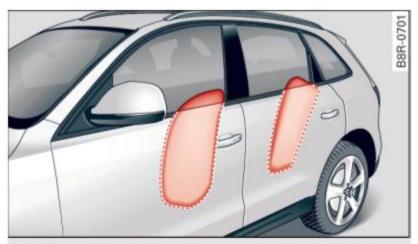


Fig. 171 Inflated side airbags on left side of vehicle

When the system is triggered, the airbag is filled with propellant gas and breaks through a seam in the seat surface area marked "AIR-BAG". It expands between the side trim panel and the passenger. In order to help provide this additional protection, the side airbag must inflate within a fraction of a second at very high speed and with great force. The supplemental side airbag could injure you if your seating position is not proper or upright or if items are located in the area where the supplemental side airbag expands. This applies especially to children ⇒ page 178, Child Safety. Supplemental side airbags inflate between the occupant and the door panel on the side of the vehicle that is struck in certain side collision  $\Rightarrow$  fig. 171.

Although they are not a soft pillow, they can "cushion" the impact and in this way they can help to reduce the risk of injury to the upper part of the body.

A fine dust may develop when the airbag deploys. This is normal and does not mean there is a fire in the vehicle.

# Important safety instructions on the side airbag system

Airbags are only supplemental restraints. Always properly wear safety belts and ride in a proper seating position.

There is a lot that you and your passengers must know and act accordingly to help the safety belts and airbags do their job to provide supplemental protection.

## WARNING

An inflating side airbag can cause serious or fatal injury. Improperly wearing safety belts and improper seating positions increase the risk of serious personal injury and death whenever a vehicle is being used.

- In order to reduce the risk of injury when the supplemental side airbag inflates:
  - Always sit in an upright position and never lean against the area where the supplemental side airbag is located.
  - Never let a child or anyone else rest their head against the side trim panel in the area where the supplemental side airbag inflates.
  - Always make sure that safety belts are worn correctly,
  - Do not let anyone sitting in the front seat put their hand or any other parts of their body out of the window.
- Always make sure that the side airbag can inflate without interference.
  - Never install seat covers or replacement upholstery over the front seatbacks that have not been specifically approved by Audi.
  - Never use additional seat cushions that cover the areas where the side airbags deploy.
  - Damage to the original seat covers or to the seam in the area of the side airbag module must always be repaired immediately by an authorized Audi dealer.

- Objects between you and the airbag can increase the risk of injury in an accident by interfering with the way the airbag unfolds or by being pushed into you as the airbag inflates.
  - Never place or attach accessories or other objects (such as cupholders, telephone brackets, or even large, bulky objects) on the doors, over or near the area marked "AIRBAG" on the seat backrests.
  - Such objects and accessories can become dangerous projectiles and cause injury when the supplemental side airbag deploys.
  - Never carry any objects or pets in the deployment space between them and the airbags or allow children or other passengers to travel in this position.
- Always use the built-in coat hooks only for lightweight clothing. Never leave any heavy or sharp-edged objects in the pockets that may interfere with side airbag deployment and can cause personal injury in an accident.
- Always prevent the side airbags from being damaged by heavy objects knocking against or hitting the sides of the seatbacks.
- The airbag system can only be triggered once. If the airbag has been triggered, the system must be replaced by an authorized Audi dealership.
- Damage (cracks, deep scratches etc.) to the original seat covers or to the seam in the area of the side airbag module must always be repaired immediately by an authorized Audi dealer.
- If children are seated improperly, their risk of injury increases in the case of an accident ⇒ page 178, Child Safety.
- Never attempt to modify any components of the airbag system in any way.
- In a side collision, side airbags will not function properly if sensors cannot correctly measure increasing air pressure inside the doors when air escapes through

larger, unclosed openings in the door panel.

- Never drive with interior door trim panels removed.
- Never drive when parts have been removed from the inside door panel and the openings they leave have not been properly closed.
- Never drive when loudspeakers in the doors have been removed unless the speaker holes have been properly closed.
- Always make certain that openings are covered or filled if additional speakers or other equipment is installed in the inside door panels.
- Always have work on the doors done by an authorized Audi dealer or qualified workshop.

## Side curtain airbags

#### Description of side curtain airbags

The side curtain airbag system can provide supplemental protection to properly restrained occupants.



Fig. 172 Side curtain system, driver's side: side curtain airbag location

The side curtain airbags are located on both sides of the interior above the front and rear side windows ⇒ fig. 172. They are identified by the word "AIRBAG" on the windshield frame and the center roof pillar.

The side curtain airbag system supplements the safety belts and can help to reduce the risk of injury for occupants' heads and upper torso on the side of the vehicle that is struck in a side collision. The side curtain airbag inflates in side impacts and only when the vehicle acceleration registered by the control unit is high enough. If this rate is below the reference value programmed into the control unit, the side airbags will not be triggered, even though the car may be badly damaged as a result of the collision. It is not possible to define an airbag triggering range that will cover every possible angle of impact, since the circumstances will vary considerably between one collision and another. Important factors include, for example, the nature (hard or soft) of the impacting object, the angle of impact, vehicle speed, etc. ⇒ page 176, How side curtain airbags work.

Aside from their normal safety function, safety belts work to help keep the driver or front passenger in position in the event of a collision so that the side curtain airbags can provide protection.

The airbag system is not a substitute for your safety belt. Rather, it is part of the overall occupant restraint system in your vehicle. Always remember that the airbag system can only help to protect you if you are wearing your safety belt and wearing it properly. This is another reason why you should always wear your safety belts, not just because the law requires you to do so ⇒ page 149, General notes.

It is important to remember that while the side curtain airbag system is designed to help reduce the likelihood of serious injuries, other injuries, for example, swelling, bruising, and minor abrasions can also be associated with these airbags. Remember too, these airbags will deploy only once and only in certain kinds of accidents - your safety belts are always there to offer protection.

# The side curtain airbag system basically consists of:

- The electronic control module and external side impact sensors
- The side curtain airbags above the front and rear side windows

The airbag indicator light in the instrument panel

The airbag system is monitored electronically to make certain it is functioning properly at all times. Each time you turn on the ignition, the airbag system indicator light will come on for a few seconds (self diagnostics).

#### The side curtain airbag is not activated:

- if the ignition is turned off,
- in side collisions when the acceleration measured by the sensor is too low,
- in rear-end collisions.

## WARNING

- Safety belts and the airbag system will only provide protection when occupants are in the proper seating position
   ⇒ page 61, General recommendations.
- If the airbag indicator light ⇒ page 15 comes when the vehicle is being used, have the system inspected immediately by your authorized Audi dealer. It is possible that the airbag will inflate when it is not supposed to, or will not inflate when it should.

### How side curtain airbags work

Side curtain airbags can work together with side airbags to help reduce the risk of head and upper torso injuries for occupants who are properly restrained.



Fig. 173 Illustration of principle: Inflated side curtain airbags on the left side

The side curtain airbags inflate between the occupant and the windows on the side of the

vehicle that is struck in a side collision ⇒ fig. 173.

When the system is triggered, the side curtain airbag is filled with propellant gas and breaks through a seam above the front and rear side windows identified by the AIRBAG label. In order to help provide this additional protection, the side curtain airbag must inflate within the blink of an eye at very high speed and with great force. The side curtain airbag could injure you if your seating position is not proper or upright or if items are located in the area where the supplemental side curtain airbag inflates. This applies especially to children ⇒ page 178.

Although they are not a soft pillow, side curtain airbags can "cushion" the impact and in this way they can help to reduce the risk of injury to the head and the upper part of the body.

A fine dust may develop when the airbag deploys. This is quite normal and does not mean there is a fire in the vehicle.

# Important safety instructions on the side curtain airbag system

Airbags are only supplemental restraints. Always properly wear safety belts and ride in a proper seating position.

There is a lot that you and your passengers must know and do to help the safety belts and airbags do their job to provide supplemental protection.

# $\Lambda$

#### WARNING

Improperly wearing safety belts and improper seating positions increase the risk of serious personal injury and death whenever a vehicle is being used.

- Never let occupants place any parts of their bodies in the area from which the side curtain airbags inflate.
- Always make sure that the side curtain airbags can inflate without interference.
   Unsuitable accessories fitted inside the

- expansion range of a head airbag can dangerously interfere with its function. A deploying head airbag develops enough force to catapult any piece of add-on component out of its path of inflation and into the passenger compartment. An occupant hit by such a projectile can suffer serious injury or death ⇒ page 298, Technical Modifications.
- Do not swivel the sun visors to the side if you have any objects clipped onto them (for example pens). If the airbag should deploy, you could be injured by these objects.
- Use the built-in coat hooks only for lightweight clothing. Never leave any heavy or sharp-edged objects in the pockets that may interfere with airbag deployment and can cause personal injury in an accident.
- Never use hangers to hang clothing from the hooks.
- Only use factory-installed sun shades or, in the case of shades installed after the vehicle leaves the factory, only Audi rollup sunscreens may be used ⇒ page 297, Additional accessories and parts replacement.
- Always sit in proper seating position and wear safety belts while traveling so that the side curtain airbags can help provide protection.
- The airbag system can only be triggered once. If the airbag has been triggered, the system must be replaced by an authorized Audi dealer or qualified workshop.
- Always have work involving the side curtain airbag system, removal and installation of the airbag components, or other repairs performed by an authorized Audi dealer or qualified workshop. Otherwise the airbag system may not work correctly.
- Never attempt to modify any components of the airbag system in any way.

# **Child Safety**

# Important things to know

#### Introduction

The rear seat is generally the safest place in a collision.

The physical principles of what happens when your vehicle is in a crash apply also to children ⇒ page 150, What happens to occupants not wearing safety belts? But unlike adults and teenagers, their muscles and bones are not fully developed. In many respects children are at greater risk of serious injury in crashes than adults.

Because children's bodies are not fully developed, they require restraint systems especially designed for their size, weight, and body structure. Many countries and all states of the United States and provinces of Canada have laws requiring the use of approved child restraint systems for infants and small children.

In a frontal crash at a speed of 20-35 mph (30-56 km/h) the forces acting on a 13-pound (6 kg) infant will be more than 20 times the weight of the child. This means the weight of the child would suddenly be more than 260 pounds (120 kg). Under these conditions, only an appropriate child restraint properly used can reduce the risk of serious injury. Child restraints, like adult safety belts, must be used properly to be effective. Used improperly, they can increase the risk of serious injury in an accident.

Consult the child safety seat manufacturer's instructions in order to be sure the seat is right for your child's size ⇒ page 181, Important safety instructions for using child safety seats. Please be sure to read and heed all of the important information and WARNINGS about child safety, Advanced Airbags, and the installation of child restraints in this chapter.

There is a lot you need to know about the Advanced Airbags in your vehicle and how they work when infants and children in child re-

straints are on the front passenger seat. Because of the large amount of important information, we cannot repeat it all here. We urge you to read the detailed information in this owner's manual about airbags and the Advanced Airbag System in your vehicle and the very important information about transporting children on the front passenger seat. Please be sure to heed the WARNINGS - they are extremely important for your safety and the safety of your passengers, especially infants and small children.

# $\Lambda$

#### WARNING

- Accident statistics have shown that children are generally safer in the rear seat area than in the front seating position.
   Always restrain any child age 12 and under in the rear.
- All vehicle occupants and especially children must be restrained properly whenever riding in a vehicle. An unrestrained or improperly restrained child could be injured by striking the interior or by being ejected from the vehicle during a sudden maneuver or impact. An unrestrained or improperly restrained child is also at greater risk of injury or death through contact with an inflating airbag.
- A suitable child restraint properly installed and used at one of the rear seating positions provides the highest degree of protection for infants and small children in most accident situations.

# $\Lambda$

#### WARNING

Children on the front seat of any car even with Advanced Airbags can be seriously injured or even killed when an airbag inflates. A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates.

 The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, or door.

- Always install rear-facing child safety seats on the rear seat.
- If you must install a rearward facing child safety seat on the front passenger seat in exceptional circumstances and the PASSENGER AIR BAG OFF light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected immediately by your Audi dealer.



#### WARNING

If, in exceptional circumstances, you must install a forward-facing child restraint on the front passenger's seat:

- Always make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
- Always follow the manufacturer's instructions provided with the child safety seat or carrier.
- Always move the passenger seat into its rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible before installing the child restraint. The backrest must be adjusted to an upright position.
- Always make sure that the PASSENGER
   AIR BAG OFF light comes on and stays on all the time whenever the ignition is switched on.



#### **Tips**

Always replace child restraints that were installed in a vehicle during a crash. Damage to a child restraint that is not visible could cause it to fail in another collision situation.

## Advanced front airbag system and children

Your vehicle is equipped with a front "Advanced Airbag System" in compliance with United States Federal Motor Vehicle Safety Standard (FMVSS) 208 as applicable at the time your vehicle was manufactured.

The Advanced Airbag system in your vehicle has been certified to meet the "low-risk" requirements for 3- and 6-year old children on the passenger side and small adults on the driver side. The low risk deployment criteria are intended to reduce the risk of injury through interaction with the airbag that can occur, for example, by being too close to the steering wheel and instrument panel when the airbag inflates. In addition, the system has been certified to comply with the "suppression" requirements of the Safety Standard, to turn off the front airbag for infants up to 12 months who are restrained on the front passenger seat in child restraints that are listed in the Standard.

Even though your vehicle is equipped with an Advanced Airbag system, all children, especially those 12 years and younger, should always ride in the back seat properly restrained for their age and size. The airbag on the passenger side makes the front seat a potentially dangerous place for a child to ride. The front seat is not the safest place for a child in a forward-facing child safety seat. It can be a very dangerous place for an infant or a larger child in a rearward-facing seat.

#### Advanced Airbags and the weightsensing mat in the front seat

The Advanced Airbag System in your vehicle detects the presence of an infant or child in a child restraint on the front passenger seat using the weight-sensing mat in the seat cushion and the sensor below the safety belt latch on the front passenger seat that measures the tension on the safety belt.

The weight-sensing mat measures total weight of the child and the child safety seat and a child blanket on the front passenger seat. The weight on the front passenger seat is related to the design of the child restraint and its "footprint", the size and shape of the bottom of the child restraint as it sits on the

seat. The weight of a child restraint and its "footprint" vary for different kinds of child restraints and for the different models of the same kind of child restraint offered by child restraint manufacturers.

The weight ranges for the individual types, makes and models of child restraints that the NHTSA has specified in the Safety Standard together with the weight ranges of typical infants and typical 1 year-old child have been stored in the control unit of the Advanced Airbag System. When a child restraint is being used on the front passenger seat with a typical 1 year-old child, the Advanced Airbag System compares the weight measured by the weight sensing mat with the information stored in the electronic control unit.

The electronic control unit also registers the tension on the front passenger safety belt. The tension on the safety belt for the front passenger seat will be different for an adult who is properly using the safety belt as compared to the tension on the belt when it is used to attach a child restraint to the seat. The sensor below the latch for the safety belt for the front seat passenger measures the tension on the belt. The input from this sensor is then used with the weight to "decide", whether there is a child restraint with a typical 1 year-old child on the front passenger seat and whether or not the airbag must be turned off.

#### Child restraints and Advanced Airbags

Regardless of the child restraint that you use, make sure that it has been certified to meet United States Federal Motor Vehicle Safety Standards and has been certified by its manufacturer for use with an airbag. Always be sure that the child restraint is properly installed at one of the rear seating positions. If in exceptional circumstances you must use it on the front passenger seat, carefully read all of the information on child safety and Advanced Airbags and heed all of the applicable WARN-INGS. Make certain that the child restraint is correctly recognized by the weight-sensing

mat inside the front passenger seat, that the front passenger airbag is turned off and that the airbag status is always correctly signaled by the **PASSENGER AIR BAG OFF** light.

Many types and models of child restraints have been available over the years, new models are introduced regularly incorporating new and improved designs and older models are taken out of production. Child restraints are not standardized. Child restraints of the same type typically have different weights and sizes and different 'footprints,' the size and shape of the bottom of the child restraint that sits on the seat, when they are installed on a vehicle seat. These differences make it virtually impossible to certify compliance with the requirements for advanced airbags with each and every child restraint that has ever been sold in the past or will be sold over the course of the useful life of your vehicle.

For this reason, the United States National Highway Traffic Safety Administration has published a list of specific type, makes and models of child restraints that must be used to certify compliance of the Advanced Airbag System in your vehicle with the suppression requirements of Federal Motor Vehicle Safety Standard 208. These child restraints are:

#### Subpart A - Car bed child restraints

| Model                               | Manufactured on or after |
|-------------------------------------|--------------------------|
| Angel Guard Angel<br>Ride AA2403FOF | September 25, 2007       |

#### Subpart B - Rear-facing child restraints

| Model   | Manufactured on or after |
|---|--------------------------|
| Century SmartFit<br>4543                        | December 1, 1999         |
| Cosco Arriva<br>22-013PAW and base<br>22-999WHO | September 25, 2007       |
| Evenflo Discovery Adjust Right 212              | December 1, 1999         |

| Model                                 | Manufactured on or after |
|---------------------------------------|--------------------------|
| Evenflo First Choice<br>204           | December 1, 1999         |
| Graco Infant 8457                     | December 1, 1999         |
| Graco Snugride                        | September 25, 2007       |
| Peg Perego Primo Viaggio SIP IMUN00US | September 25, 2007       |

## Subpart C – Forward-facing and convertible child restraints

| Model  | Manufactured on or after |
|--|--------------------------|
| Britax Roundabout<br>E9L02xx                       | September 25, 2007       |
| Cosco Touriva 02519                                | December 1, 1999         |
| Cosco Summit Deluxe<br>High Back Booster<br>22-262 | September 25, 2007       |
| Cosco High Back<br>Booster 22-209                  | September 25, 2007       |
| Evenflo Tribute V<br>379xxxx                       | September 25, 2007       |
| Evenflo Medallion<br>254                           | December 1, 1999         |
| Evenflo Generations<br>352xxxx                     | September 25, 2007       |
| Graco ComfortSport                                 | September 25, 2007       |
| Graco Toddler Safety<br>Seat Step 2                | September 25, 2007       |
| Graco Platinum Cargo                               | September 25, 2007       |

## $\Lambda$

#### WARNING

To reduce the risk of serious injury, make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on whenever a child restraint is installed on the front passenger seat and the ignition is switched on.

Take the child restraint off the front passenger seat and install it properly at one of the rear seat positions if the PASSENGER AIR BAG OFF light does not stay on.

 Have the airbag system inspected by your authorized Audi dealer immediately.



#### Tips

The child seats listed in categories A to C have been statically tested by Audi only for the Advanced Airbag function.

## Important safety instructions for using child safety seats

Correct use of child safety seats substantially reduces the risk of injury in an accident!

As the driver, you are responsible for the safety of everybody in the vehicle, especially children:

- ► Always use the right child safety seat for each child and always use it properly ⇒ page 184.
- Always carefully follow the child safety seat manufacturer's instructions on how to route the safety belt properly through the child safety seat.
- When using the vehicle safety belt to install a child safety seat, you must first activate the convertible locking retractor on the safety belt to prevent the child safety seat from moving ⇒ page 188.
- ▶ Push the child safety seat down with your full weight to get the safety belt really tight so that the seat cannot move forward or sideways more than one inch (2.5 cm).
- ► If a strap or tether is being used to tie the child safety seat to the front passenger seat, make sure that it is not so tight that it causes the weight-sensing mat to measure more weight than is actually on the seat.
- ▶ Secure unused safety belts on the rear seat ⇒ page 183.

Always remember: Even though your vehicle is equipped with an Advanced Airbag system, all children, especially those 12 years and younger, should always ride in the back seat properly restrained for their age and size.

## ♠ WARNING

Not using a child safety seat, using the wrong child safety seat or improperly installing a child restraint increases the risk of serious personal injury and death.

- All vehicle occupants and especially children must always be restrained properly whenever riding in a vehicle.
  - An unrestrained or improperly restrained child can be injured or killed by being thrown against the inside of the vehicle or by being ejected from it during a sudden maneuver or impact.
  - An unrestrained or improperly restrained child is at much greater risk of injury or death by being struck by an inflating airbag.
- Commercially available child safety seats are required to comply with U.S. Federal Motor Vehicle Safety Standard (FMVSS) 213 (in Canada CMVSS 213).
  - When buying a child restraint, select one that fits your child and the vehicle.
  - Only use child restraint systems that fully contact the flat portion of the seat cushion. The child restraint must not tip or lean to either side. Audi does not recommend using child safety seats that rest on legs or tube-like frames. They do not provide adequate contact with the seat.
  - Always heed all legal requirements pertaining to the installation and use of child safety seats and carefully follow the instructions provided by the manufacturer of the seat you are using.
- Never allow children under 57 inches
   (1.45 meters) to wear a normal safety
   belt. They must always be restrained by a
   proper child restraint system. Otherwise,
   they could sustain injuries to the abdomen and neck areas during sudden braking maneuvers or accidents.
- Never let more than one child occupy a child safety seat.

- Never let babies or older children ride in a vehicle while sitting on the lap of another passenger.
  - Holding a child in your arms is never a substitute for a child restraint system.
  - The strongest person could not hold the child with the forces that exist in an accident. The child will strike the interior of the vehicle and can also be struck by the passenger.
  - The child and the passenger can also injure each other in an accident.
- Never install rear-facing child safety seats or infant carriers on the front passenger seat. A child will be seriously injured and can be killed when the passenger airbag inflates – even with an Advanced Airbag System.
- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door or roof.
- Always install rear-facing child safety seats or infant carriers on the rear seat.
- Forward-facing child safety seats installed on the front passenger's seat can interfere with the airbag when it inflates and cause serious injury to the child. Always install forward-facing child safety seats on the rear seat.
- If exceptional circumstances require the use of a forward-facing child restraint on the front passenger's seat, the child's safety and well-being require that the following special precautions be taken:
  - Make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
  - Always carefully follow the manufacturer's instructions provided with the child safety seat or carrier.
  - Always move the front passenger seat into the rearmost position of the passenger seat's fore and aft adjustment range, and as far away from the airbag

- as possible before installing the child restraint.
- Always make sure that nothing prevents the front passenger's seat from being moved to the rearmost position in its fore and aft adjustment range.
- Always make sure that the backrest is in the upright position.
- Always buckle the child safety seat firmly in place even if a child is not sitting in it.
   A loose child safety seat can fly around during a sudden stop or in a collision.
- Always read and heed all WARNINGS
   whenever using a child restrained in a vehicle is being used ⇒ page 149, Safety
   belts, ⇒ page 157, Airbag system and
   ⇒ page 178, Child Safety.

## $\Lambda$

#### WARNING

To reduce the risk of serious injury, make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on whenever a child restraint is installed on the front passenger seat and the ignition is switched on.

- Take the child restraint off the front passenger seat and install it properly at one of the rear seat positions if the PASSENGER AIR BAG OFF light does not stay on.
- Have the airbag system inspected by your authorized Audi dealer immediately.

#### Secure unused safety belts on the rear seat

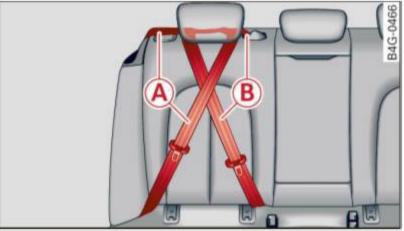


Fig. 174 Schematic overview: keep unused safety belts away from children in child safety seats. (A) - outer rear safety belt, (B) - center rear safety belt

If a child safety seat is used on the rear bench, especially with LATCH universal lower anchorages, the unused safety belts **must** be secured so that the child in the child restraint cannot reach them  $\Rightarrow \triangle$ .

- Guide the safety belt webbings (A) and (B) behind the head restraint of the seat where the child restraint is installed ⇒ fig. 174. When doing so, do not engage the switchable locking retractor! You should not hear a "clicking" sound when winding up the safety belt.
- Let the belt retractor wind up the safety belt webbing.

### $\Lambda$

#### WARNING

A child in a child safety seat installed with the LATCH lower anchorages or with the standard safety belt or a child in a booster seat on the rear seat could play with unused rear seat safety belts and become entangled. This could cause the child serious personal injury and even death.

- Always secure unused rear seat safety belts out of reach of children in child seats such as by properly routing them around the head restraint of the seat where the child restraint is installed.
- Never activate the switchable locking retractor when routing the safety belts around the head restraints.
- Never let anyone sit at the center rear seating position if the center rear safety belt has been routed around a rear head restraint.

### Child safety seats

#### Infant seats

Babies and infants up to about one year old and 20 lbs. or 9 kg need special rearward-facing child restraints that support the back, neck and head in a crash.



Fig. 175 Schematic overview: rearward-facing infant seat, properly installed on the rear seat

- When using the vehicle safety belt to install a child safety seat, you must first activate the convertible locking retractor on the safety belt to prevent the child safety seat from moving ⇒ page 188 or install the seat using the LATCH attachments.
- Push the child safety seat down with your full weight to get the safety belt really tight so that the seat cannot move forward or sideways more than one inch (2.5 cm).
- ► Secure unused safety belts on the rear seat ⇒ page 183.

Infants up to about one year (20 lbs. or 9 kg) are best protected in special infant carriers and child safety seats designed for their age group. Many experts believe that infants and small children should ride only in special restraints in which the child faces the back of the vehicle. These infant seats support the baby's back, neck and head in a crash ⇒ fig. 175.

The airbag on the passenger side makes the front seat a potentially dangerous place for a child to ride. The front seat is not the safest place for a child in a forward-facing child seat. It is a very dangerous place for an infant or a larger child in a rearward-facing seat.

## Λ

#### WARNING


Not using a child safety seat, using the wrong child safety seat or improperly installing a child restraint increases the risk of serious personal injury and death in a crash.

- Never install rear-facing child safety seats or infant carriers on the front passenger seat - even with an Advanced Airbag System. A child will be seriously injured and can be killed when the inflating airbag hits the child safety seat or infant carrier with great force and smashes the child safety seat and child against the backrest, center armrest, door or roof ⇒ page 158, Child restraints on the front seat - some important things to know.
- Always install rear-facing child safety seats or infant carriers on the rear seat.
- Never install a rear-facing child restraint in the forward-facing direction. Such restraints are designed for the special needs of infants and very small children and cannot protect them properly if the seat is forward-facing.
- If you must install a rearward facing child safety seat on the front passenger seat because of exceptional circumstances and the PASSENGER AIR BAG OFF light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your Audi dealer.
- Always read and heed all WARNINGS
   whenever using a child restrained in a vehicle is being used ⇒ page 149, Safety
   belts, ⇒ page 157, Airbag system and
   ⇒ page 178, Important things to know.

185

#### Convertible child safety seats

Properly used convertible child safety seats can help protect toddlers and children over age one who weigh between 20 and 40 lbs. (9 and 18 kg) in a crash.

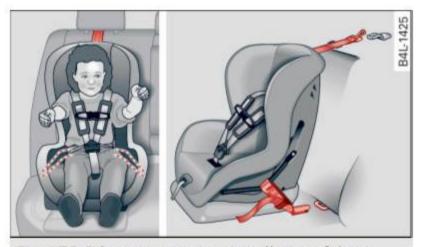

**Fig. 176** Schematic overview: installation of the attachments applicable to a LATCH seat

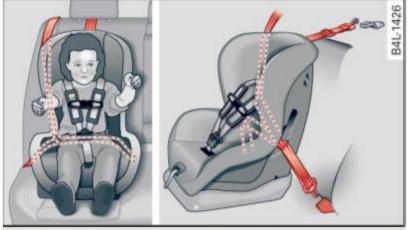


Fig. 177 Schematic overview: installation of the seat using the vehicle's safety belt system

- When using the vehicle safety belt to install a child safety seat, you must first activate the convertible locking feature on the safety belt to prevent the child safety seat from moving ⇒ page 188 or install the seat using the LATCH attachments.
- Push the child safety seat down with your full weight to get the safety belt really tight so that the seat cannot move forward or sideways more than one inch (2.5 cm) ⇒ page 188.
- ► If the child safety seat is equipped with a tether strap, attach it to the tether anchors ⇒ page 194.
- ► Secure unused safety belts on the rear seat ⇒ page 183.

A toddler or child is usually too large for an infant restraint if it is more than one year old and weighs more than 20 lbs. (9 kg).

Toddlers and children who are older than one year up to about 4 years old and weigh more than 20 lbs. (9 kg) up to 40 lbs. (18 kg) must always be properly restrained in a child safety seat certified for their size and weight  $\Rightarrow$  fig. 176 and  $\Rightarrow$  fig. 177.

The airbag on the passenger side makes the front seat a potentially dangerous place for a child to ride. The front seat is not the safest place for a child in a forward-facing child safety seat. It is a very dangerous place for an infant or a larger child in a rearward-facing seat.

#### WARNING

Not using a child safety seat, using the wrong child safety seat or improperly installing a child restraint increases the risk of serious personal injury and death in a collision or other emergency situation.

- Children on the front seat of any car, even with Advanced Airbags, can be seriously injured or even killed when an airbag inflates. A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates – even with an Advanced Airbag System.
- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door or roof.
- Always install rear-facing child safety seats on the rear seat.
- If you must install a rearward facing child safety seat on the front passenger seat because of exceptional circumstances and the PASSENGER AIR BAG OFF light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your Audi dealer.
- The rear side of the child safety seat should be positioned as close as possible

to the backrest on the vehicle seat. Adjust or remove the rear seat head restraint if it is difficult to install the child seat with the head restraint in place ⇒ page 65. Install the head restraint again immediately once the child seat is removed. Driving without head restraints or with head restraints that are not properly adjusted increases the risk of serious or fatal neck injury dramatically.

- Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇒ page 149, Safety belts, ⇒ page 157, Airbag system and ⇒ page 178, Important things to know.

#### / WARNING

If exceptional circumstances require the use of a forward-facing child restraint on the front passenger's seat, the child's safety and well-being require that the following special precautions be taken:

- Make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
- Always follow the manufacturer's instructions provided with the child safety seat or infant carrier.
- Always move the front passenger seat into the rearmost position of the passenger seat's fore and aft adjustment range, and as far away from the airbag as possible before installing the child restraint.
- Always make sure that nothing prevents the front passenger's seat from being moved to the rearmost position in its fore and aft adjustment range.
- Always make sure the backrest is in an upright position.
- Make sure that the PASSENGER AIR BAG **OFF** light comes on and stays on all the time whenever the ignition is switched on.
- If the light does not stay on, perform the checks ⇒ page 168, Monitoring the Advanced Airbag System.

 Take the child restraint off the front passenger seat and install it properly at one of the rear seat positions if the PASSEN-GER AIR BAG OFF light does not stay on whenever the ignition is switched on.

#### Booster seats and safety belts

Properly used booster seats can help protect children weighing between about 40 lbs. and 80 lbs. (18 kg and 36 kg) who are less than 4 ft. 9 in. (57 inches/1.45 meters) tall.



Fig. 178 Rear seat: child properly restrained in a booster seat

The vehicle's safety belts alone will not fit most children until they are at least 4 ft. 9 in. (57 inches/1.45 meters) tall and weigh about 80 lbs. (36 kg). Booster seats raise these children up so that the safety belt will pass properly over the stronger parts of their bodies and the safety belt can help protect them in a crash.

- Do not use the convertible locking retractor when using the vehicle's safety belt to restrain a child on a booster seat.
- The shoulder belt must lie as close to the center of the child's collar bone as possible and must lie flat and snug on the upper body. It must never lie across the throat or neck. The lap belt must lie across the pelvis and never across the stomach or abdomen. Make sure the belt lies flat and snug. Pull on the belt to tighten if necessary.
- ▶ If you must transport an older child in a booster seat on the front passenger seat, you can use the safety belt height adjustment to help adjust the shoulder portion properly.

► Secure unused safety belts on the rear seat ⇒ page 183.

Children up to at least 8 years old (over 40 lbs. or 18 kg) are best protected in child safety seats designed for their age and weight. Experts say that the skeletal structure, particularly the pelvis, of these children is not fully developed, and they must not use the vehicle safety belts without a suitable child restraint.

It is usually best to put these children in appropriate booster seats. Be sure the booster seat meets all applicable safety standards.

Booster seats raise the seating position of the child and reposition both the lap and shoulder parts of the safety belt so that they pass across the child's body in the right places. The routing of the belt over the child's body is very important for the child's protection, whether or not a booster seat is used. Children age 12 and under must always ride in the rear seat.

Children who are at least 4 ft. 9 in. (57 inches/1.45 meters) tall can generally use the vehicle's three point lap and shoulder belts. Never use the lap belt portion of the vehicle's safety belt alone to restrain any child, regardless of how big the child is. Always remember that children do not have the pronounced pelvic structure required for the proper function of lap belt portion of the vehicle's three point lap and shoulder belts. The child's safety absolutely requires that a lap belt portion of the safety belt be fastened snugly and as low as possible around the pelvis. Never let the lap belt portion of the safety belt pass over the child's stomach or abdomen.

In a crash, airbags must inflate within a blink of an eye and with considerable force. In order to do its job, the airbag needs room to inflate so that it will be there to protect the occupant as the occupant moves forward into the airbag.

A vehicle occupant who is out of position and too close to the airbag gets in the way of an inflating airbag. When an occupant is too close, he or she will be struck violently and will receive serious or possibly even fatal injury.

In order for the airbag to offer protection, it is important that all vehicle occupants, especially any children, who must be in the front seat because of exceptional circumstances, be properly restrained and as far away from the airbag as possible. By keeping room between the child's body and the front of the passenger compartment, the airbag can inflate completely and provide supplemental protection in certain frontal collisions.



#### WARNING

Not using a booster seat, using the booster seat improperly, incorrectly installing a booster seat or using the vehicle safety belt improperly increases the risk of serious personal injury and death in a collision or other emergency situation. To help reduce the risk of serious personal injury and/or death:

- The shoulder belt must lie as close to the center of the child's collar bone as possible and must lie flat and snug on the upper body. It must never lie across the throat or neck. The lap belt must lie across the pelvis and never across the stomach or abdomen. Make sure the belt lies flat and snug. Pull on the belt to tighten if necessary.
- Failure to properly route safety belts over a child's body will cause severe injuries in an accident or other emergency situation ⇒ page 149.
- The rear side of the child safety seat should be positioned as close as possible to the backrest on the vehicle seat. Adjust or remove the rear seat head restraint if it is difficult to install the child seat with the head restraint in place ⇒ page 65. Install the head restraint again immediately once the child seat is removed. Driving without head restraints or with head restraints that are not properly adjusted increases the risk of serious or fatal neck injury dramatically.

- Children on the front seat of any car, even with Advanced Airbags, can be seriously injured or even killed when an airbag inflates.
- Never let a child stand or kneel on any seat, for example the front seat.
- Never let a child ride in the cargo area of your vehicle.
- Always remember that a child leaning forward, sitting sideways or out of position in any way during an accident can be struck by a deploying airbag. This will result in serious personal injury or death.
- If you must install a booster seat on the front passenger seat because of exceptional circumstances the PASSENGER AIR BAG OFF light must come on and stay on, whenever the ignition is switched on.
- If the PASSENGER AIR BAG OFF light does not come on and stay on, perform the checks described ⇒ page 168, Monitoring the Advanced Airbag System.
- Take the child restraint off the front passenger seat and install it properly at one of the rear seat positions if the PASSENGER AIR BAG OFF light does not stay on whenever the ignition is switched on.
- Always read and heed all WARNINGS
   whenever using a child restrained in a vehicle is being used ⇒ page 149, Safety
   belts, ⇒ page 157, Airbag system and
   ⇒ page 178, Important things to know.

### Installing a child safety seat

#### Securing a child safety seat using a safety belt

Safety belts for the rear seats and the front passenger can be locked with the convertible locking retractor to properly secure child safety seats.

The safety belts emergency locking retractors for the rear seats safety belts and for the front passenger's seat safety belt have a convertible locking retractor for child restraints. The safety belt must be locked so that belt webbing cannot unreel. The retractor can be activated to lock the safety belt and prevent the safety belt webbing from loosening up during normal driving. A child safety seat can only be properly installed when the safety belt is locked so that the child and child safety seat will stay in place.

Always remember: Even though your vehicle is equipped with an Advanced Airbag system, all children, especially those 12 years and younger, should always ride in the back seat properly restrained for their age and size.



#### WARNING

Improperly installed child safety seats increase the risk of serious personal injury and death in a collision.

- Always make sure that the safety belt retractor is locked when installing a child safety seat. An unlocked safety belt retractor cannot hold the child safety seat in place during normal driving or in a crash.
- Always buckle the child safety seat firmly in place even if a child is not sitting in it.
   A loose child safety seat can fly around during a sudden stop or in a collision.
- Always make sure that the rear seat backrest to which the center rear safety belt is attached is securely latched whenever the rear center safety belt is being used to secure a child restraint.
- If the backrest is not securely latched, the child and the child restraint will be thrown forward together with the backrest and will strike parts of the vehicle interior. The child can be seriously injured or killed.
- Never install rear-facing child safety seats or infant carriers on the front passenger seat. A child will be seriously injured and can be killed when the passenger airbag inflates.
- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat

- and child against the backrest, center armrest, door or roof.
- Always install rear-facing child safety seats or infant carriers on the rear seat.
- Forward-facing child safety seats or infant carriers installed on the front passenger's seat may interfere with the deployment of the airbag and cause serious injury to the child.
- It is safer to install a forward-facing child safety seat on the rear seat.
- Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇒ page 178. Special precautions apply when installing a child safety seat on the front passenger seat ⇒ page 158, Child restraints on the front seat – some important things to know.

## $\triangle$

#### WARNING

Always take special precautions if you must install a forward or rearward-facing child restraint on the front passenger's seat in exceptional situations:

- Whenever a forward or rearward-facing child restraint is installed on the front passenger seat, the PASSENGER AIR BAG OFF light must come on and stay on whenever the ignition is switched on.
- If the PASSENGER AIR BAG OFF light does not come on and stay on, perform the checks described ⇒ page 168, Monitoring the Advanced Airbag System.
- Take the child restraint off the front passenger seat and install it properly at one of the rear seat positions if the PASSENGER AIR BAG OFF light does not stay on whenever the ignition is switched on.
- Improper installation of child restraints can reduce their effectiveness or even prevent them from providing any protection.
- An improperly installed child restraint can interfere with the airbag as it deploys and seriously injure or even kill the child.

- Always carefully follow the manufacturer's instructions provided with the child safety seat or carrier.
- Never place additional items on the seat that can increase the total weight registered by the weight-sensing mat and can cause injury in a crash.



#### WARNING

Forward-facing child restraints:

- Always make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
- Never put the forward-facing child restraint up, against or very near the instrument panel.
- Always move the passenger seat into its rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible before installing the forward-facing child restraint. The backrest must be adjusted to an upright position.
- Make sure that the PASSENGER AIR BAG
   OFF light comes on and stays on all the time whenever the ignition is switched on.



#### WARNING

Rearward-facing child restraints:

- A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates - even with an Advanced Airbag System.
- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door or roof.
- Always be especially careful if you must install a rearward facing child safety seat on the front passenger seat in exceptional circumstances.

- A tight tether strap on a rearward-facing child restraint attached to the front passenger seat can put too much pressure on the weight-mat in the seat and register a heavier weight in the Advanced Airbag System. The heavier weight registered can make the system work as though an adult were on the seat and deploy the Advanced Airbag when it must be suppressed causing serious or even fatal injury to the child.
- Make sure that the PASSENGER AIR BAG
   OFF light comes on and stays on all the time whenever the ignition is switched on.
- If the PASSENGER AIR BAG OFF light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your Audi dealer.

## Activating the convertible locking retractor

Use the convertible locking retractor to secure a child restraint.

Always heed the child safety seat manufacturer's instructions when installing a child restraint in your vehicle. To activate the convertible locking retractor:

- Place the child restraint on a seat, preferably on the rear seat.
- Slowly pull the belt all the way out.
- Route it around or through the child restraint belt path ⇒ Λ.
- Push the child safety seat down with your full weight to get the safety belt really tight.
- Insert the belt tongue into the buckle for that seating position.
- Guide the safety belt back into the retractor until the belt lies flat and snug on the child safety seat.
- ► You should hear a "clicking" noise as the belt winds back into the inertia reel. Test the convertible locking retractor by pulling on the belt. You should no longer be able to

- pull the belt out of the retractor. The convertible locking retractor is now activated.
- Make sure that the red release button is facing away from the child restraint so that it can be unbuckled quickly.
- ▶ Pull on the belt to make sure the safety belt is properly tight and fastened so that the seat cannot move forward or sideways more than one inch (2.5 cm).

## $\Lambda$

#### WARNING

Using the wrong child restraint or an improperly installed child restraint can cause serious personal injury or death in a crash.

- Always make sure that the safety belt retractor is locked when installing a child safety seat. An unlocked safety belt retractor cannot hold the child safety seat in place during normal driving or in a crash.
- Always buckle the child safety seat firmly in place even if a child is not sitting in it.
   A loose child safety seat can fly around during a sudden stop or in a crash.
- Always make sure the seat backrest to which the child restraint is installed is in an upright position and securely latched into place and cannot fold forward. Otherwise, the seatback with the child safety seat attached to it could fly forward in the event of an accident or other emergency situation.
- Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇒ page 178. Special precautions apply when installing a child safety seat on the front passenger seat ⇒ page 158, Child restraints on the front seat – some important things to know.

#### Deactivating the convertible locking retractor

The convertible locking retractor for child restraints will be deactivated automatically when the belt is wound all the way back into the retractor.

- Press the red button on the safety belt buckle. The belt tongue will pop out of the buckle.
- ► Guide the safety belt all the way back into its stowed position.

Always let the safety belt retract completely into its stowed position. The safety belt can now be used as an ordinary safety belt without the convertible locking retractor for child restraints.

If the convertible locking retractor should be activated inadvertently, the safety belt must be unfastened and guided completely back into its stowed position to deactivate this feature. If the convertible locking retractor is not deactivated, the safety belt will gradually become tighter and uncomfortable to wear.



#### WARNING

Improperly installed child safety seats increase the risk of serious personal injury and death in a collision.

- Never unfasten the safety belt to deactivate the convertible locking retractor for child restraints while the vehicle is moving. You would not be restrained and could be seriously injured in an accident.
- Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇒ page 178. Special precautions apply when installing a child safety seat on the front passenger seat ⇒ page 158, Child restraints on the front seat - some important things to know.

## **LATCH Lower** anchorages and tethers for children

Child Restraint System anchors and how are they related to child safety

To provide a simpler and more practicable way to attach the child restraint on the vehicle seat, Federal regulations require special lower anchorages in vehicles and devices on new child restraints to attach to the vehicle anchorages.

The combination of the tether anchorages and the lower anchorages is now generally called the LATCH system for "Lower Anchorages and Tethers for Children."

Forward-facing child restraints manufactured after September 1, 1999, are required by U.S. federal regulations to comply with new child head movement performance requirements. These new performance requirements make a tether necessary on most new child seats.

Installing a child restraint that requires a top tether without one can seriously impair the performance of the child restraint and its ability to protect the child in a collision. Installing a child restraint that requires a top tether without the top tether may be a violation of state law.

Child restraint manufacturers offer LATCH lower anchorages on their child seats with hook-on or push-on connectors attached to adjustable straps.

In addition to the LATCH lower anchorages, these child restraint systems usually require the use of tether straps to help keep the child restraint firmly in place.



### / WARNING

Improper installation of child restraints will increase the risk of injury and death in a crash.

- Always follow the instructions provided by the manufacturer of the child restraint you intend to install in your vehicle.
- Never install a child restraint without a properly attached top tether strap if the child restraint manufacturer's instructions require the top tether strap to be used.
- Improper use of child restraint LATCH lower anchorage points can lead to injury in a collision. The LATCH lower anchorage points are designed to withstand only those loads imposed by correctly fitted child restraints.
- Never mount two child restraint systems on one LATCH lower anchorage point.
- Never secure or attach any luggage or other item to the LATCH lower anchorages.

## i Tips

- In Canada, the terms "top tether" with "lower universal anchorages" (or "lower universal anchorage bars") are used to describe the system.
- In other countries, the term "ISOFIX" is used to describe the lower anchorages.

#### Location

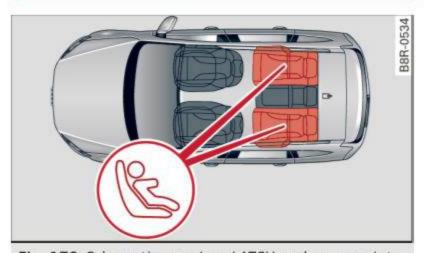


Fig. 179 Schematic overview: LATCH anchorage point locations

The illustration shows the seating locations in your vehicle which are equipped with the lower anchorages system.

#### Description

The lower anchorage positions are marked for quick locating.



Fig. 180 Lower anchorages, covers marked



Fig. 181 Rear seats: lower anchorage bracket locations

#### Lower anchorages

The lower anchorage attachment points are located between the rear seatback and rear seat cushion.

Remove the covers  $\Rightarrow$  fig. 180 to access the lower anchorage attachment points.

The lower anchorage attachment points are visible  $\Rightarrow$  fig. 181.

Lower anchorages secure the child restraint in the seat without using the vehicle's safety belts. Anchorages provide a secure and easyto-use attachment and minimize the possibility of improper child restraint installation.

All child restraints manufactured after September 1, 2002, must have lower anchorage attachments for the *LATCH* system.

Remember that the lower anchorage points are only intended for installation and attachment of child restraints specifically certified for use with *LATCH* lower anchorages. Child

restraints that are not equipped with the lower anchorage attachments can still be installed in compliance with the child restraint manufacturer's instructions on using vehicle safety belts.

## $\Lambda$

#### WARNING

Improper use of LATCH lower anchorages can cause serious personal injury in an accident.

- Always carefully follow the child restraints manufacturer's instructions for proper installation of the child restraint and proper use of the lower anchorages or safety belts in your vehicle.
- Never secure or attach any luggage or other items to the LATCH lower anchorages.

## Installing a child restraint with LATCH lower anchorages

Whenever you install a child restraint always follow the child restraint manufacturer's instructions.



Fig. 182 Lower anchorages: proper mounting

#### Mounting

- Make sure the seatback of the rear seat bench is in the upright position and securely latched in place.
- Attach both hook-on connectors with the spring catch release on the child safety seat onto the LATCH lower anchorage so that the connectors lock into place ⇒ fig. 182.

- Pull on the connector attachments to make sure they are properly attached to the LATCH lower anchorage.
- Pull straps tight following the child restraint manufacturer's instructions.

#### Releasing

- Loosen the tension on the straps following the child restraint manufacturer's instructions.
- Depress the spring catches to release the anchorage hooks from the lower anchorages.

Remember: Use tether straps to help keep the child restraint firmly in place.



#### WARNING

Improper use of the LATCH system can increase the risk of serious personal injury and death in an accident.

- These anchors were developed only for child safety seats using the "LATCH" system.
- Never attach other child safety seats,
   belts or other objects to these anchors.
- Always make sure that you hear a click when latching the seat in place. If you do not hear a click the seat is not secure and could fly forward and hit the interior of the vehicle, or be ejected from the vehicle.



#### WARNING

Improper installation of child restraints will increase the risk of injury in an accident

- Always follow the child restraint system manufacturer's instructions for proper installation of the child restraint system and proper use of tether straps as well as the lower anchorages or safety belts in your vehicle.
- Always read and heed the important information and WARNINGS about child safety and the installation of child restraint systems ⇒ page 178, Child Safety.

#### Tether anchors and tether straps



Fig. 183 Tether anchors: attachment hook locations behind the rear seatbacks

The tether anchors for the rear seating positions are located on the backside of the rear seatbacks  $\Rightarrow$  *fig.* 183.

A tether is a straight or V-shaped strap that attaches the top part of a child restraint to special anchorage points in the vehicle.

The purpose of the tether is to reduce the forward movement of the child restraint in a crash, in order to help reduce the risk of head injury that could be caused by striking the vehicle interior.

Forward facing child restraints manufactured after September 1, 1999, are required by U.S. federal regulations to comply with new child head movement performance requirements. These new performance requirements make a tether necessary on most new child safety seats.

## Λ

#### WARNING

Improper installation of child restraints will increase the risk of injury and death in a crash.

- Always follow the instructions provided by the manufacturer of the child restraint you intend to install in your Audi.
- Improper use of child restraint anchors (including tether anchors) can lead to injury in a collision. The anchors are designed to withstand only those loads imposed by correctly fitted child restraints.
- Never mount two child restraint systems on one LATCH lower anchor point.

- Never attach two child restraint systems to one tether strap or tether anchorage.
- Never attach a tether strap to a tie-down hook in the luggage compartment.
- Never use child restraint tether anchorages to secure safety belts or other kinds of occupant restraints.
- Never secure or attach any luggage or other items to the LATCH lower anchorages or to the tether anchors.
- If a tether or other strap is used to attach a child restraint to the front passenger seat, make sure that it is not so tight, that it causes the weight-sensing mat to measure more weight than is actually on the seat.
- The heavier weight registered can make the Advanced Airbag System work as though an adult were on the seat and deploy the Advanced Airbag when it must be suppressed causing serious or even fatal injury to the child.
- If you must install a rearward facing child safety seat on the front passenger seat because of exceptional circumstances and the PASSENGER AIR BAG OFF light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your Audi dealer.

## Installing the upper tether strap on the anchorage

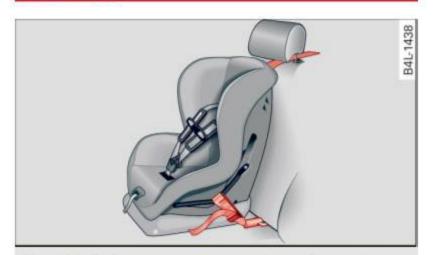


Fig. 184 Tether strap: proper routing and mounting



Fig. 185 Tether strap: proper routing and mounting

#### Installing the tether strap

- Release or deploy the tether strap on the child restraint according to the child restraint manufacturer's instructions.
- ► Guide the upper tether strap under the rear head restraint and into the rear cargo area ⇒ fig. 185 (raise the head restraint if necessary).
- Slide the tether strap hook over the anchor bracket.
- Pull on the tether strap hook so that the spring catch of the hook engages.
- Tighten the tether strap firmly following the child restraint manufacturer's instructions.

#### Attaching to the center seating position

- Slide the rear seat forward ⇒ page 64.
- Pull the anchor bracket forward and connect the tether strap hook.
- ► Tighten the tether strap and move the seat backward.

#### Releasing the tether strap

- Loosen the tension following the child restraint manufacturer's instructions.
- Depress the spring catch on the hook and release it from the anchorage.



#### Note

If you leave the child restraint with the tether strap firmly installed for several days, this could leave a mark on the upholstery on the seat cushion and backrest in the area where the tether strap was installed. The upholstery would also be permanently stretched around the tether strap. This applies especially to leather seats.

## Using tether straps on rearward-facing child restraints

Currently, few rear-facing child restraint systems come with a tether. Please read and heed the child restraint system manufacturer's instructions carefully to determine how to properly install the tether.



#### WARNING

A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates - even with an Advanced Airbag System.

- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, or door.
- A tight tether or other strap on a rearward-facing child restraint attached to the front passenger seat can put too much pressure on the weight-mat in the seat and register a heavier weight in the Advanced Airbag System. The heavier weight registered can make the system work as though an adult were on the seat and deploy the Advanced Airbag when it

- must be suppressed causing serious or even fatal injury to the child.
- If you must install a rearward facing child safety seat on the front passenger seat because of exceptional circumstances and the PASSENGER AIR BAG OFF light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your Audi dealer.

#### **Additional Information**

## Sources of information about child restraints and their use

There are a number of sources of additional information about child restraint selection, installation and use:

NHTSA advises that the best child safety seat is the one that fits your child and fits in your vehicle, and that you will use correctly and consistently.

Try before you buy!

#### U.S National Highway Traffic Safety Administration

Tel.: 1-888-327-4236 (TTY: 1-800-424-9153)

http://www.nhtsa.gov

#### National SAFE KIDS Campaign

Tel.: (202) 662-0600 http://www.safekids.org

#### Safety BeltSafe U.S.A

Tel.: (800) 745-SAFE (English) Tel.: (800) 747-SANO (Spanish)

http://www.carseat.org

#### Transport Canada Information Centre

Tel.: 1-800-333-0371 or call

1-613-998-8616 if you are in the Ottawa area

http://www.tc.gc.ca/eng/roadsafety/

menu.htm

#### **Audi Customer Relations**

Tel.: (800) 822-2834

### Intelligent technology

# Notice about data recorded by vehicle control modules

Your vehicle is not equipped with an Event Data Recorder (EDR), installed by some manufacturers for the express purpose of capturing data for retrieval after an accident or crash event. EDR's are sometimes called "crash recorders".

Some state laws restrict the retrieval or downloading of data stored by EDR's that were installed in a vehicle for the express purpose of retrieving data after an accident or crash event without the owner's consent.

Although your vehicle is not equipped with an EDR, it is equipped with a number of electronic control modules for various vehicle systems such as, for example, engine function, emission control, as well as for the airbags and safety belts.

These electronic control modules also record vehicle-related data during normal vehicle operation for diagnostic and repair purposes. The recording capacity of the electronic control modules is limited to data (no sound is recorded) and only a small amount of data is actually recorded over a very limited period of time and stored when a system fault or other condition is sensed by a control unit. Some of the data then stored may relate to vehicle speed, direction, braking as well as restraint system use and performance in the event of a crash or other condition. Stored data can only be read and downloaded with special equipment.

## Electronic Stabilization Control (ESC)

#### Description

The Electronic Stabilization Control (ESC) reinforces driver safety. It reduces the risk of slipping and improves driving stability. ESC detects critical situations such as the vehicle

oversteering and understeering or the wheels spinning. The vehicle is stabilized by applying the brakes or reducing engine torque. Once the ESC is active, the indicator light splinks in the instrument cluster.

ESC includes the anti-lock brake system (ABS), brake assist system, anti-slip regulation (ASR), electronic differential lock (EDL), dynamic steering\*, hill descent assist and selective wheel torque control.

#### Anti-lock braking system (ABS)

ABS prevents the wheels from locking up when braking. The vehicle can still be steered even during hard braking. Apply steady pressure to the brake pedal. Do not pump the pedal. A pulsing in the brake pedal indicates that the system is helping you to brake the vehicle.

#### Brake assist system

The brake assist system can decrease braking distance. It increases braking power when the driver presses the brake pedal quickly in emergency situations. You must press and hold the brake pedal until the situation is over. In vehicles with adaptive cruise control\*, the brake assist system is more sensitive if the distance detected to the vehicle ahead is too small.

#### Anti-slip regulation (ASR)

ASR reduces engine power when the drive wheels begin to spin and adapts the force to the road conditions. This makes it easier to start, accelerate and drive up hills.

#### Electronic differential lock (EDL)

The EDL brakes wheels that are spinning and transfers the drive power to the other wheels. This function is available up to about 78 mph (125 km/h).

In extreme cases, EDL automatically switches off to help keep the brake on the braked wheel from overheating. EDL will switch on again automatically when conditions have returned to normal.

#### Dynamic steering\*

On vehicles with dynamic steering\*, ESC helps stabilize the steering in critical situations.

#### Selective wheel torque control

The selective wheel torque control operates when driving through curves. The front wheel on the inside of the curve or both wheels on the inside of the curve are braked selectively as needed. This minimizes sliding in the front wheels and allows for more precise driving through curves. The system may not activate when driving in wet or snowy conditions.

## **MARNING**

- ESC, ABS, ASR, EDL dynamic steering\*
   and the selective wheel torque control
   cannot overcome the laws of physics.
   This is especially important on slippery
   or wet roads. If the systems begin acting
   to stabilize your vehicle, you should immediately change your speed to match
   the road and traffic conditions. Do not
   let the increased safety provided by
   these systems tempt you to take risks.
   Doing so will increase the risk of a loss of
   vehicle control, collision and serious personal injuries.
- Always adapt your speed to road, traffic and weather conditions. The risk of losing control of the vehicle increases when driving too fast, especially through curves and on slippery or wet roads, and when driving too close to vehicles up ahead. ESC, ABS, the brake assist system, ASR, EDL, dynamic steering\* and the selective wheel torque control cannot prevent collisions.
- Always accelerate with special care on even, smooth surfaces such as those that are wet or covered with ice and snow.
   The drive wheels can spin even with these assistance systems that cannot always help to reduce the risk of loss of vehicle control.

## (i)

#### **Tips**

- ABS and ASR only work correctly when all four wheels are equipped with identical tires. Different tire sizes can lead to a reduction in engine power.
- You may hear noises when the systems described are working.
- If the indicator light or ABS (USA models)/ (Canada models) appears, there may be a malfunction ⇒ page 15, ⇒ page 17.
- When installing a factory-supplied roof rack system on the roof railing, the ESC will adapt itself to a different center of gravity.

#### Switching on/off

ESC turns on automatically when you start the engine.





Fig. 187 Version B: upper center console, button 🛱 OFF

#### ESC Offroad mode

The ESC Offroad mode was developed especially for offroad driving. In order to maintain maximum traction and optimal braking when driving offroad, the conditions for the ESC to

work are reduced to such a degree, that the vehicle wheels could start to spin. The stabilizing effects start to work later which results in limited vehicle stability.

The ESC Offroad mode should then be used under the following situations:

- rocking the vehicle when it is stuck
- driving in deep snow or on loose ground
- driving on uneven roads with the wheel heavily loaded (axle limitation)
- driving with snow chains
- driving downhill while braking on loose ground

For your safety, switch off the ESC offroad mode in advance.

#### Switching on the ESC Offroad mode

Press the ☐ OFF button ⇒ fig. 186 or ⇒ fig. 187. The indicator light ☐ illuminates and Stabilization control (ESC): Offroad.

Warning! Restricted stability appears in the driver information system display.

#### Switching off the ESC Offroad mode

Press OFF button again to switch the ESC back on. The indicator light agoes out and Stabilization control (ESC): On appears in the driver information system display.

## $\Lambda$

#### WARNING

- You should switch on the ESC Offroad mode only when you are driving offroad or when driving with snow chains.
- Please note that the driving wheels can spin and the vehicle can swerve when ESC Offroad mode is switched on.
- Driving stability is reduced in the ESC
   Offroad mode.

#### Hill descent assist

The hill descent assist makes it possible to drive down an incline at a constant speed.



Fig. 188 Top of the center console: hill descent assist button



Fig. 189 Display: hill descent assist

- ▶ Press the button in the center console
  ⇒ fig. 188 or on the shift gate. The button will illuminate.
- Press the button again to switch it off. The diode in the button will go out.

Hill descent assist brakes all four wheels automatically in order to limit speed when driving either forward or reverse on hills with a grade up to approximately 50%.

When the hill descent assist is on, the current driving speed, when your vehicle entered the incline is maintained. It is only possible to switch on the assist when driving slower than 37 mph (60 km/h). The assist works between approximately 2 and 19 mph (4 and 30 km/h). The driver can increase or decrease the vehicle speed within these limits by depressing the accelerator or brake pedal In addition, vehicle steerability is increased due to the braking distribution when driving in reverse.

There must be however sufficient ground adhesion. The hill descent assist can **not** do its



job if the incline is icy or if the incline ground is loose  $\Rightarrow \Lambda$ .

The system does not work at speeds between 19 and 37 mph (30 and 60 km/h). The system is then in the ready-mode. The diode in the button will come on. The system automatically switched off when you drive faster than 37 mph (60 km/h). The diode will go out in this case.

Active control at a specific speed up to approximately 19 mph (30 km/h) will appear in the instrument cluster display ⇒ fig. 189. Two dashes "--" will appear in the ready mode.

Hill descent assist is automatically activated under the following conditions:

- the diode in the button illuminates,
- vehicle speed is below approximately19 mph (30 km/h)
- the incline is 10%.

### $\Lambda$

#### WARNING

- Always adapt your speed to the weather, road and traffic conditions. Do not let the increased safety provided tempt you into taking risks.
- The hill descent assist system cannot overcome the laws of physics. Your driving style must always be adapted to the current road and traffic conditions.
- The hill descent assist may not be able to hold your vehicle at a constant speed under all conditions while driving on an incline (for example if ground under the vehicle is loose).

## Brake system

#### Operating conditions and driving habits

The brakes on today's automobiles are still subject to wear, depending largely on operating conditions and driving habits ⇒ ⚠. On vehicles that are either driven mostly in stopand-go city traffic or are driven hard, the brake pads should be checked by your authorized Audi dealer more often than specified in the Warranty & Maintenance booklet. Failure

to have your brake pads inspected can result in reduced brake performance.

On steep slopes, you should use the braking effect of the engine. This way, you prevent unnecessary wear on the brake system. If you must use your brakes, do not hold the brakes down continuously. Pump the brakes at intervals.

Noises may occur when braking depending on the speed, braking force and outside conditions such as temperature and humidity.

#### Moisture or road salt

Under certain conditions, for example, when driving through water or very heavy rain, or even after washing your vehicle, the braking effect can be reduced due to moisture (or in freezing conditions ice) on the brake pads. A few careful brake applications should dry off the brake pads or remove any ice coatings.

When you are driving at higher speeds with the windshield wipers on, the brake pads will briefly touch the brake discs in regular intervals so as to improve reaction time when braking on wet surfaces. You, the driver, will not notice anything.

The effectiveness of the brakes can be reduced when the vehicle is driven on a salt-covered road and the brakes are not used. Here too, you should clean off accumulated salt coating from brake discs and pads with a few careful applications of the brake  $\Rightarrow \land$ .

#### Corrosion

There may be a tendency for dirt to build up on the brake pads and corrosion to form on the discs if the car is not driven regularly or only for short trips with little use of the brakes.

If the brakes are not used frequently, or if corrosion has formed on the discs, it is advisable to clean off the pads and discs by braking firmly a few times from a moderately high speed  $\Rightarrow \triangle$ .

#### Faults in the brake system

If you should notice a *sudden* increase in brake pedal travel, then one of the two brake circuits may have failed  $\Rightarrow \triangle$ .

#### Low brake fluid level

Malfunctions can occur in the brake system if the brake fluid level is too low. The brake fluid level is monitored electronically.

#### Brake booster

The brake booster increases the pressure that you generate with the brake pedal. It only operates while the engine is running or with the ignition switched on (hybrid drive\*)  $\Rightarrow \land$ .

#### Brake lining wear status

Brake lining wear may be checked by visual inspection of the condition of the brake pads through the openings in the wheel. If necessary, the wheel may be removed for this inspection ⇒ page 274, Changing a wheel.

## 1

#### WARNING

- You should perform braking maneuvers for the purpose of cleaning the brake system only if road conditions permit.
   Other road users must not be put at risk you may cause an accident!
- Before descending a steep grade, reduce speed and shift transmission into a lower gear or lower driving range. Do not ride the brakes or hold the pedal down too long or too often. This could cause the brakes to get hot and diminish braking efficiency.
- Do not "ride the brakes" by resting your foot on the pedal when you do not intend to brake. This may cause the brakes to overheat, premature wear and increased stopping distance.
- Under certain climatic and operating conditions such as passing through water, driving in heavy rain or after washing the vehicle, the effectiveness of the brakes can be reduced. In winter, ice can accumulate on the brake pads, linings, discs and drums. Carefully apply brakes

- for a test. Brakes will dry and ice coatings will be cleaned off after a few careful brake applications.
- Driving for an extended period of time on salt-covered roads without using your brakes can also affect braking efficiency.
   Clean off accumulated salt coating from brake discs and pads with a few careful brake applications.
- If you damage the front spoiler, or if you install a different spoiler, be sure the air flow to the front brakes is not obstructed. Otherwise the brake system could overheat reducing the effectiveness of the entire brake system.
- Failure of one brake circuit will impair the braking capability resulting in an increased stopping distance. Avoid driving the vehicle and have it towed to the nearest authorized Audi dealer or qualified workshop.
- Never let the vehicle roll to a stop with the engine shut off.
- If the brake booster is not working, for example when towing your vehicle, or because the brake booster has somehow been damaged, the brake pedal must be pressed considerably harder to make up for the lack of booster assistance.

# Electromechanical power assist, Dynamic steering

The electromechanical power assist helps the driver when steering.

Power steering adapts *electronically* based on the vehicle speed.

#### Indicator lights and messages

### Steering defective! Do not drive vehicle!

If this indicator light turns on and stays on and this message appears, the power steering may have failed.

Stop the vehicle in a safe location as soon as possible. Do **not** continue driving. See your



authorized Audi dealer or other qualified repair facility for assistance.

## Dynamic steering: System fault! You can continue driving

If the indicator light turns on and the message appears, the steering may be more difficult to move or more sensitive than usual. The steering may also be at an angle when driving straight.

Drive slowly to your authorized Audi dealer or qualified workshop to have the malfunction corrected.

#### **6!** Dynamic steering: Initializing

Audi drive select\*: if the indicator light blinks and the driver message appears, the dynamic steering\* is reinitialized. Once you start the engine after this is finished, the steering wheel will be easy to move. Re-initialization might be necessary if the steering wheel was moved hard to the left and right while the vehicle was not moving. The display turns off if the initialization was successful.

## i Tips

- If the or or indicator light only stays on for a short time, you may continue driving.
- The dynamic steering\* stability systems
   ⇒ page 197 are not available in the event of a system malfunction.
- For additional information on dynamic steering\* ⇒ page 120.

## Driving with your quattro<sup>®</sup>

With all-wheel drive, all four wheels are driven.

#### General information

With all-wheel drive, power is distributed to all four wheels. This happens automatically depending on your driving style and the road conditions at the time. See also ⇒ page 197.

A center differential distributes the driving power variably to the front and rear axle. It

works together with selective wheel torque control, which activates when driving through curves ⇒ page 198.

The all-wheel drive concept is designed for high engine power. Your vehicle is exceptionally powerful and has excellent driving characteristics both under normal driving conditions and on snow and ice. Always read and follow safety precautions  $\Rightarrow \triangle$ .

#### Winter tires

When driving in the winter, your vehicle with all-wheel drive has an advantage, even with regular tires. In winter road conditions it may be advisable to mount winter tires (or all-season tires) for improved driveability and braking: these tires must be mounted on all four wheels. See also ⇒ page 263, Winter tires.

#### Tire chains

Where tire chains are mandatory on certain roads, this normally also applies to vehicles with all-wheel drive ⇒ page 264, Snow chains.

#### Replacing wheels/tires

Vehicles with all-wheel drive must always have tires of the same size. Also avoid tires with different tread depths. For details see page ⇒ page 259, New tires and replacing tires and wheels.

### $\Lambda$

#### WARNING

Always adjust your driving to road and traffic conditions. Do not let the extra safety afforded by all-wheel drive tempt you into taking extra risks.

- Although the all-wheel drive is very effective, always remember that braking capacity is limited by tire traction. You should therefore not drive at excessive speeds on icy or slippery road surfaces.
- On wet road surfaces, be careful not to drive too fast because the front wheels could begin to slide on top of the water (aquaplaning). If this should occur, you

will have no warning from a sudden increase in engine speed as with a front-wheel drive vehicle. Always drive at speeds which are suited to the road conditions – risk of crash.

### **Energy management**

#### Starting ability is optimized

Energy management controls the distribution of electrical energy and thus optimizes the availability of electrical energy for starting the engine.

If a vehicle with a conventional energy system is not driven for a long period of time, the battery is discharged by idling current consumers (e.g. immobilizer). In certain circumstances it can result in there being insufficient energy available to start the engine.

Intelligent energy management in your vehicle handles the distribution of electrical energy. Starting ability is markedly improved and the life of the battery is extended.

Basically, energy management consists of battery diagnosis, idling current management and dynamic energy management.

#### **Battery diagnosis**

Battery diagnosis continuously determines the state of the battery. Sensors determine battery voltage, battery current and battery temperature. This determines the current state of charge and the power of the battery.

#### Idling current management

Idling current management reduces energy consumption while the vehicle is standing. With the ignition switched off, it controls the energy supply to the various electrical components. Data from battery diagnosis is considered.

Depending on the battery's state of charge, individual consumers are gradually turned off to prevent excessive discharge of the battery and thus maintain starting capability.

#### Dynamic energy management

While the vehicle is being driven, dynamic energy management distributes the energy generated according to the needs of the individual components. It regulates consumption, so that more electrical energy is not being used than is being generated and ensures an optimal state of charge for the battery.

## (i)

#### **Tips**

- But even energy management cannot negate the limits of physics. Consider that the power and life of a battery are limited.
- If starting ability is threatened, the indicator light appears ⇒ page 34.

#### What you should know

The highest priority is given to maintaining starting capability.

The battery is severely taxed in short-distance driving, in city traffic and during the cold time of year. Abundant electrical energy is required, but only a little is generated. It is also critical if the engine is not running and electrical components are turned on. In this instance energy is being consumed but none is being generated.

It is in precisely these situations that you will notice energy management actively regulating the distribution of energy.

#### Vehicle stands for an extended period

If you do not drive your vehicle over a period of several days or weeks, electrical components are gradually cut back or switched off. This reduces energy consumption and maintains starting capability over a longer period. Some of the convenience functions may not operate, such as the interior lights or the power seat adjustment. The convenience functions will be available again when you switch on the ignition and start the engine.

#### With the engine turned off

If you listen to the radio, for example, with the engine turned off or use other MMI\* functions, the battery is being discharged.

If starting capability is jeopardized due to energy consumption, the following warning appears in the radio or MMI\* display:

## Please start engine, otherwise system will switch off in 3 minutes.

The warning indicates that the system will be turned off automatically after 3 minutes. If you wish to continue using the functions, you have to start the engine.

#### With the engine running

Although electrical energy is generated when the vehicle is being driven, the battery can become discharged. This happens mostly when little energy is being generated and a great deal consumed and the battery's state of charge is not optimal.

To bring the energy balance back into equilibrium, consumers which require especially large amounts of energy are temporarily cut back or switched off. Heating systems in particular require a great deal of energy. If you notice, for example, that the heated seats\* or the heated rear window are not heating, they have been temporarily cut back or switched off. These systems will be available again as soon as the energy balance has been restored.

You will also notice that engine idle speed has been increased slightly. This is normal and not a cause for concern. By increasing engine idle speed the additional energy required is generated and the battery is charged.

## Driving and environment

# The first 1,000 miles (1,500 km) and afterwards

#### New engine

The engine needs to be run-in during the first 1,000 miles (1,500 km).

## For the first 600 miles (1,000 kilometers):

- ▶ Do not use full throttle.
- ▶ Do not drive at engine speeds that are more than 2/3 of the maximum permitted RPM.

## From 600 to 1,000 miles (1,000 to 1,500 kilometers):

 Speeds can gradually be increased to the maximum permissible road or engine speed.

#### During and after break-in period

▶ Do not rev the engine up to high speeds when it is cold. This applies whether the transmission is in N (Neutral) or in gear.

#### After the break-in period

- Do not exceed maximum engine speed under any circumstances.
- ► Upshift into the next higher gear before reaching the red area at the end of the tachometer scale ⇒ page 10.

During the first few hours of driving, the engine's internal friction is higher than later when all the moving parts have been broken in. How well this break-in process is done depends to a considerable extent on the way the vehicle is driven during the first 1,000 miles (1,500 kilometers).



#### Note

Extremely high engine speeds are automatically reduced. However, these rpm limits are programmed for an engine well run-in, not a new engine.



#### For the sake of the environment

Do not drive with unnecessarily high engine speeds - upshifting early saves fuel, reduces noise and protects the environment.

#### **New tires**

If your vehicle is running on new tires, drive very carefully for the first 350 miles (500 kilometers) after fitting.



#### WARNING

New tires tend to be slippery and must also be "broken-in". Be sure to remember this during the first 350 miles (500 kilometers). Brake gently. Avoid following closely behind other vehicles or other situations that might require sudden, hard braking.

#### New brake pads

Remember that new brake pads do not have a full braking effect during the first 250 miles (400 kilometers) after they are installed.

New brake pads have to be "burnished in" before they have optimal grab  $\Rightarrow \Lambda$ .

During the break-in period, you should avoid putting severe loads on the brakes. Severe loads include, for example, sudden hard braking, in particular at very high speeds or, for example, on mountain passes.



#### WARNING

New brake pads don't have the best stopping power and must be "broken-in" during the initial 100 to 150 miles (150 to 200 kilometers) of normal city driving. You can compensate for this by pressing the brake pedal more firmly. This also applies later when new pads are installed.

### Catalytic converter

It is very important that your emission control system (catalytic converter) is functioning properly to ensure that your vehicle is running in an environmentally sound manner.

- ► Always use lead-free gasoline ⇒ page 228, Fuel supply.
- Never run the tank down all the way to empty.
- Never put too much motor oil in your engine ⇒ page 238, Adding engine oil
- Never try to push- or tow-start your vehicle.

The catalytic converter is an efficient "cleanup" device built into the exhaust system of the vehicle. The catalytic converter burns many of the pollutants in the exhaust gas before they are released into the atmosphere.

The exclusive use of unleaded fuel is critically important for the life of the catalytic converter and proper functioning of the engine.

## $\Lambda$

#### WARNING

- Do not park or operate the vehicle in areas where the hot exhaust system may come in contact with dry grass, brush, fuel spill or other material which can cause a fire.
- Do not apply additional undercoating or rustproofing on or near the exhaust manifold, exhaust pipes, catalytic converter or heat shields. During driving, the substance used for undercoating could overheat and cause a fire.

## (!)

#### Note

- Be aware that just one tank filling with leaded fuel will already seriously degrade the performance of the catalytic converter.
- Do not exceed the correct engine oil level
   ⇒ page 238.
- Do not drive until the fuel tank becomes completely empty. The engine could misfire. Unburned fuel could also get into

- the exhaust system and this could cause the catalytic converter to overheat.
- Do not turn off the ignition while the vehicle is moving.
- Do not continue to operate your vehicle under these conditions, as otherwise fuel can reach the catalytic converter. This could result in overheating of the converter, requiring its replacement.
- To assure efficient operation of the Emission Control System:
  - Have your vehicle maintained properly and in accordance with the service recommendations in your Warranty & Maintenance booklet.
  - Lack of proper maintenance as well as improper use of the vehicle will impair the function of the emission control system and could lead to damage.



#### For the sake of the environment

Even when the Emission Control System is operating properly, the exhaust gas can have a sulfur-like exhaust gas smell under some operating states. This depends on the sulfur content of the fuel being used. Using a different brand of fuel may help, or filling the tank with lead-free super grade gasoline.

## Avoid damaging the vehicle

When you are driving on poor roads, or over curbs, steep ramps, etc., make certain that low-lying parts such as spoilers and exhaust system parts do not bottom out and get damaged.

This is especially true for vehicles with lowslung chassis (sports chassis)\* and fully loaded vehicles.

## Operate your vehicle economically and minimize pollution

#### General

Your personal style of driving will determine the economy of your vehicle, as well as exhaust and noise levels.

Fuel economy, environmental impact, and wear on your engine, brakes and tires largely depend on three factors:

- your personal driving style
- operating conditions
- technical limitations

If you anticipate what you need to do next and drive economically, you can easily cut your fuel consumption by 10-15 percent. This section will give you some tips on how you can help the environment and your pocketbook.



#### Tips

The consumption estimates as published by ENVIRONMENTAL PROTECTION AGENCY (EPA) and Transport Canada may not correspond to your actual consumption on the road, which will vary depending upon vehicle load and speed, road and weather conditions, trip length, etc.

## Drive smoothly and keep a lookout ahead

Vehicles use the most fuel when they are accelerating.

Avoid unnecessary accelerating and braking.

Vehicles use the most fuel when they are accelerating. If you anticipate what is going to happen next, you will need to brake less and, thus, accelerate less. Let the vehicle coast whenever possible - for example when you see that the next traffic light is red.

#### Avoid full throttle

Driving at moderate speeds saves fuel and improves your mileage.

Try and keep well below your car's maximum speed.

Accelerating gently reduces fuel consumption, engine wear, and does not disturb the environment.

Fuel consumption, exhaust emissions and engine noise increase disproportionately at high speeds. If you drive at approximately three quarters of top speed, fuel consumption will be reduced by one half. Never drive faster than the posted speed limit and weather conditions permit.

#### Reducing unnecessary idling

Even when your car is just idling it burns up fuel.

- Shut the engine off when you are not driving the vehicle.
- ▶ Do not warm up the vehicle by letting the engine run at idle.

The idling phase is automatically reduced for vehicles with the Start-Stop-System\*. It is efficient to switch off the engine in vehicles without the Start-Stop-System\* when stopped at railroad crossings and long red lights. Turning the engine off for just 30-40 seconds saves more fuel than is burned by starting the engine again.

It takes a long time for the engine to warm up fully when it is running at idle. However, wear and noxious emissions are especially high when the engine is warming up. So you should drive away as soon as you start the engine and avoid running at high rpms while the engine is still warming up.



#### Note

Do not leave engine idling unattended after starting. If warning lights should come on to indicate improper operation, they

would go unheeded. Extended idling also produces heat, which could result in overheating or other damage to the vehicle or other property.

#### Regular maintenance

A badly tuned engine unnecessarily wastes a lot of fuel.

► Have your vehicle serviced at regular intervals

By having your vehicle regularly serviced by an authorized Audi dealer helps to ensure that it runs properly and economically. The condition of your vehicle not only affects its safety and ability to hold its value, it also affects **fuel consumption**.

#### Check your oil each time you fill your tank.

The amount of oil used is related to engine load and speed.

It is normal for the oil consumption of a new engine to reach its lowest value after a certain mileage has been driven.

You must drive your vehicle about 3,000 miles (5,000 kilometers) before you can properly assess oil consumption.

This also applies to fuel consumption and engine output.

## 1

#### Note

- Have your vehicle maintained properly and in accordance with the service recommendations in your Warranty & Maintenance booklet. Lack of proper maintenance as well as improper use of the vehicle will impair the function of the emission control system and could lead to damage.
- Do not alter or remove any component of the Emission Control System unless approved by the manufacturer.
- Do not alter or remove any device, such as heat shields, switches, ignition wires, valves, which are designed to protect your vehicle's Emission Control System

and other important vehicle components.

#### Fewer short trips

Fuel consumption will always be relatively high on short trips.

Try to avoid driving short distances with a cold engine.

The engine and catalytic converter have to reach their optimal **operating temperature** to reduce fuel consumption and noxious emissions effectively.

Just after starting, a cold engine in a mid-size car only achieves a fuel economy of 6-8 miles per gallon (30-40 l/100 km). After about a half a mile, fuel economy climbs to 12 mpg (20 l/100 km). After about 2.5 miles (4 km), the engine is at its proper operating temperature and fuel economy has reached a normal level. So you can see that you should avoid short trips whenever possible.

The **outside temperature** is also critical in this regard. Your car consumes more fuel in the winter than in the summer.

### **Driving off road**

## Driving in difficult road conditions and offroad

#### **General information**

The operation of the Electronic Stabilization Control (ESC) is expanded for operation away from paved roads. In situations where slip or a differential locking function is required, the ESC offroad mode can be activated ⇒ page 197. Your Audi also has permanent all-wheel drive in addition.

However, your Audi is not a pure offroad vehicle. It was not built for driving under extreme conditions, e.g. for trips that are in the nature of an expedition.

Drive only on roads and offroad sections which match the design of your vehicle and your abilities as a driver. Never take risks!

#### Before driving offroad

- Check the engine oil level, tire pressure, coolant level, and the fluid level in the windshield washer reservoir.
- Stow luggage items and other objects in the luggage compartment, and secure them against sliding around.

#### After driving offroad

- After trips offroad, remove any twigs and other foreign objects from the grill, the underbody and the wheels. Pay special attention to foreign objects (stones) which have become lodged in the tire tread.
- Clean the body and the vehicle underside,
   and inspect the vehicle for possible damage.
- Clean dirty windows, headlamp lenses, rear lights, and license plates.
- Perform a brake check (particularly after travelling through water).

## Λ

#### WARNING

 Drive especially attentively and plan ahead in difficult road conditions and when offroad. Excessive speed or incor-

- rect maneuvers can cause injuries and damage to the vehicle.
- Always adapt your speed and driving style to road, offroad, traffic, and weather conditions. Drive especially slowly offroad when your view is restricted.
- Please be aware that in ESC offroad mode, particularly on a smooth and slippery road, the wheels may have an increased tendency to spin and the vehicle may break away - danger of skidding!
- Stability is limited in the ESC offroad mode.



#### For the sake of the environment

Avoid damage to the environment and respect nature.



#### Tips

Only drive where it is permitted and stay on marked roads and paths.

#### Explanation of some technical terms

The following data refer to ideal conditions. Depending on vehicle load and ground conditions and the environment, the numbers may vary. It is the driver's responsibility to decide whether a vehicle can overcome a specific situation  $\Rightarrow \bigwedge$ .

#### Gradient angle

The number of meters in altitude gained over a distance of 109.4 yards or 100 meters (grade) are given as a percentage or degrees. Information about the gradient the vehicle can climb under its own power (depends in part on the road surface and engine power). Maximum permitted grade: 31°

#### Lateral angle (slope of vehicle)

Indicates the angle up to which the vehicle can be driven diagonally or across the fall line on a slope without the vehicle tipping over sideways (depends on center of gravity). Maximum permitted lateral angle: 25°

#### Breakover angle

Indicates the angle up to which the vehicle can drive over a ramp at low speed without the underside of the vehicle hitting the edge of the ramp. Maximum permitted breakover angle: 17°

#### Approach/departure angle

Transition from the horizontal plane to a gradient or from a grade back to level ground. Indicates the angle up to which the vehicle can drive onto or off a slope at low speed without striking the bumper or the underbody. Maximum permitted approach/departure angle: 25° (front), 20° (rear)

#### Ground clearance

The distance between the road surface and the lowest point of the vehicle underbody. Ground clearance 7.9 in (200 mm)



#### WARNING

Exceeding the stated maximum figures can result in severe injuries or vehicle damage.

- All the information was gathered on level, firm and non-slippery road surfaces, and under dry weather conditions.
- Ideal conditions do not prevail offroad.
   Never utilize the maximum readings to their fullest, always leave a safety reserve.

#### **Driving tips**

On poor road and offroad, there is always only one motto: Plan ahead and drive slowly!

Please observe the following when driving away from paved roads:

- Drive only on roads and offroad sections which match the design of your vehicle and your abilities as a driver. Never take risks!
- ► Drive slowly and plan ahead!
- Take into consideration the ground clearance of your vehicle.
- Activate the ESC offroad mode ⇒ page 197 as needed.

► Use the hill descent assist ⇒ page 199 when driving down steep sections on hills.

#### Unpaved roads and offroad

Drive slowly on unfamiliar roads and unknown offroad sections, and look out for unexpected obstacles (e.g. potholes, rocks, tree stumps, etc.).

To prevent the vehicle from bottoming and avoid damage to the underbody, you should drive straight across severe bumps in the ground with only one side of the vehicle so that only two of your wheels cross the bumps.

Drive briskly through sandy or marshy offroad sections and do not stop, if at all possible.

#### Driving through water

Note the following to avoid vehicle damage when driving through water, for example on flooded roads:

- The water must not be any higher than the bottom of the vehicle body.
- Do not drive faster than walking speed.

#### Driving on a slope

If you ever find yourself **not** able to climb a slope, do not try to turn around, drive back down in **reverse**. Otherwise, you run the risk of tipping over.

If the vehicle threatens to tip over when driving across a slope, you must immediately steer downhill in the direction of the slope.

Do **not** park your vehicle on steep slopes or grades.

To reduce the risk of tipping over, drive on slopes in the direction of the downward slope (fall line) - **not crosswise**.



#### WARNING

After driving through water, mud, slush, etc., the brakes may be slow to take effect because of wet brake rotors and pads. Dry the brakes first by braking carefully to restore the full braking effect.

211

## (!)

Note

- Vehicle components such as the engine, transmission, suspension or electrical system can be severely damaged by driving through water.
- Always switch off the Start-Stop-System\*
   when driving through water ⇒ page 93.

## i Tips

- Check the depth of the water before driving through it.
- Do not stop the vehicle, drive in reverse or switch the engine off when driving through water.
- Keep in mind that oncoming vehicles may create waves that raise the water level and make it too deep for your vehicle to drive through safely.
- Avoid driving through salt water because it can cause corrosion.

### **Trailer towing**

### Driving with a trailer

#### **General information**

Your Audi was designed primarily for passenger transportation.

If you plan to tow a trailer, please remember that the additional load will affect durability, economy and performance.

Trailer towing not only places more stress on the vehicle, it also calls for more concentration from the driver.

For this reason, always follow the operating and driving instructions provided and use common sense.

#### **Technical requirements**

#### Trailer hitch

Use a weight-carrying hitch conforming to the gross trailer weight. The hitch must be suitable for your vehicle and trailer and must be mounted securely on the vehicle's chassis at a technically sound location. Use only a trailer hitch with a removable ball mount. Always check with the trailer hitch manufacturer to make sure that you are using the correct hitch.

#### Do not use a bumper hitch.

The hitch must be installed in such a way that it does not interfere with the impact-absorbing bumper system. No modifications should be made to the vehicle exhaust and brake systems. From time to time, check that all hitch mounting bolts remain securely fastened.

When you are not towing a trailer, remove the trailer hitch ball mount. This prevents the hitch from causing damage should your vehicle be struck from behind  $\Rightarrow \Lambda$ .

#### Trailer brakes

If your trailer is equipped with a braking system, check to be sure that it conforms to all regulations.

The trailer hydraulic brake system must not be directly connected to the vehicle's hydraulic brake system  $\Rightarrow \land$ .

#### Safety chains

Always use safety chains between your vehicle and the trailer.

#### Trailer lights

Trailer lights must meet all regulations. Be sure to check with your authorized Audi dealer for correct wiring, switches, and relays.

#### Mirrors

If you are unable to see the traffic behind you using the regular outside mirrors, then you must install extended mirrors. It is important that you always have clear vision to the rear.

## Λ

#### WARNING

- If a trailer has electrical brakes please note that these brakes are not activated by the factory-fitted control unit - risk of accident!
- After removing the trailer hitch, do not store it in your vehicle. In case of sudden braking, the hitch could fly forward and injure you or your passengers.
- Never install a "weight distributing" or "load equalizing" trailer hitch on your vehicle. The vehicle was not designed for these kinds of trailer hitches. The hitch attachment can fail, causing the trailer to tear loose from the vehicle.
- The Gross Vehicle Weight Rating for your vehicle, found on the safety compliance label on the driver's side B-pillar, must never be exceeded under any circumstances. Exceeding the Gross Vehicle Weight Rating of your vehicle is likely to damage your vehicle, and such damage will not be covered by your Limited New Vehicle Warranty. Exceeding the Gross Vehicle Weight Rating will also change the performance and handling characteristics of your vehicle, which could cause a crash resulting in serious injury or death.

#### **Operating instructions**

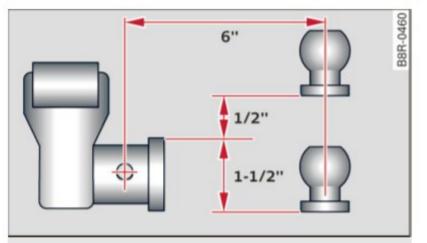


Fig. 190 Permitted ball position of the trailer hitch

#### Trailer towing weights

With a **factory-installed** or an **aftermarket** trailer hitch, the maximum permissible trailer weight is 4,400 lbs (2,000 kg). The maximum permissible unbraked trailer weight is 1,650 lbs (750 kg). These specifications apply when driving on roads having an incline of less than 12%.

#### Permissible tongue load

For best vehicle handling under these changed conditions, adjust the trailer load so that the tongue load is at the maximum allowable or slightly lower. You can get an approximation of the tongue load with a bathroom scale or you can measure the load at a trucking company or weighing station.

With a **factory-installed** or an **aftermarket** trailer hitch, the maximum permissible load on the ball hitch may not exceed 440 lbs (200 kg). It is recommended to use the maximum permissible load.

#### Trailer load distribution

Be sure the load in the trailer is held securely in place to prevent it from shifting forward, backward or sideways.

Never allow a passenger to ride in a trailer ⇒ in Driving instructions on page 214.

#### **Ball mount**

The trailer hitch may only be used with suitable ball mount and ball  $\Rightarrow$  fig. 190. Installation of the hitch ball must be carried out in ac-

cordance with the manufacturer's instructions.

#### Engine cooling system

Towing a trailer makes the engine work harder. It is important that the cooling system's performance is up to the additional load. Make sure that the cooling system has enough fluid.

#### Tire pressure

When towing a trailer, inflate the tires of your vehicle to the cold tire pressure listed under "Full load" on the tire pressure label. The tire pressure label is located on the driver's side B-pillar. Inflate trailer tires to trailer and tire manufacturers' specifications.

#### Lights

The headlight settings should be checked with the trailer attached before driving off. Check to make sure both vehicle and trailer lights are working properly.

#### Safety chains

Be sure trailer safety chains are properly connected from the trailer to the hitch on the vehicle. Leave enough slack in the chains to permit turning corners. When you install safety chains, make sure they will not drag on the road when you are driving.

The chains should cross under the trailer tongue to prevent it from dropping in case of separation from the hitch.

### **Driving instructions**

Driving with a trailer always requires extra care and consideration.

To obtain the best possible handling of vehicle and trailer, please note the following:

- ▶ Do not tow a loaded trailer when your car itself is not loaded.
- ► Be especially careful when passing other vehicles.
- Observe speed limits.

- Do not drive at the maximum permissible speed.
- ► Always apply brakes early.
- ▶ Monitor the temperature gauge.

#### Weight distribution

Towing a loaded trailer with an empty car results in a highly unstable distribution of weight. If this cannot be avoided, drive at very low speeds only to avoid the risk of losing steering control.

A "balanced" rig is easier to operate and control. This means that the tow vehicle should be loaded to the extent possible and permissible, while keeping the trailer as light as possible under the circumstances. Whenever possible, transfer some cargo to the luggage compartment of the tow vehicle while observing tongue load requirements and vehicle loading considerations.

#### Speed

The higher the speed, the more difficult it becomes for the driver to control the rig. Do not drive at the maximum permissible speed. Reduce your speed even more if load, weather or wind conditions are unfavorable - particularly when going downhill.

Reduce vehicle speed **immediately** if the trailer shows the slightest sign of swaying. **Do not try to stop the swaying by accelerating.** 

Observe speed limits. In some areas, speeds for vehicles towing trailers are lower than for regular vehicles.

Always apply brakes early. When driving downhill, shift into a lower gear to use the engine braking effect to slow the vehicle. Use of the brakes alone can cause them to overheat and fail.

#### Coolant temperature

The coolant temperature gauge ⇒ page 10 must be observed carefully. If the needle moves close to the upper end of the scale, reduce speed immediately and/or turn off the air conditioner.

If the coolant temperature warning light in the instrument cluster starts flashing ..., pull off the road, stop and let the engine *idle* for about two minutes to prevent heat build-up.



#### WARNING

Anyone not properly restrained in a moving vehicle is at a much greater risk in an accident. Never let anyone ride in your car who is not properly wearing the restraints provided by Audi.

### Trailer towing tips

#### Important to know

Your vehicle handles differently when towing a trailer because of the additional weight and different weight distribution. Safety, performance and economy will greatly depend on how carefully you load your trailer and operate your rig.

Before you actually tow your trailer, practice turning, stopping and backing up in an area away from traffic. Keep practicing until you have become completely familiar with the way your vehicle-trailer combination behaves and responds.

Backing up is difficult and requires practice.

Backing up with a trailer generally requires
steering action opposite to that when backing
up your vehicle without a trailer.

Maintain a greater distance between your vehicle and the one in front of you. You will need more room to stop. To compensate for the trailer, you will need a larger than normal turning radius.

When passing, remember that you cannot accelerate as fast as you normally would because of the added load. Make sure you have enough room to pass. After passing, allow plenty of room for your trailer before changing lanes again.

Avoid jerky starts, sharp turns or rapid lane changes.



# **Tips**

- Do not tow a trailer during the break-in period of your vehicle.
- If you tow a trailer, your Audi may require more frequent maintenance due to the extra load ⇒ page 295.

# Parking on a slope

Do not park on a slope with a trailer. If it cannot be avoided, do so only after doing the following:

# When parking:

- ► Apply the foot brake.
- Have someone place chocks under both the vehicle and the trailer wheels.
- With chocks in place, slowly release the brakes until the wheel chocks absorb the load.
- ► Turn the wheels towards the curb.
- Apply the parking brake.
- ► Move the selector lever to P.

# When restarting after parking:

- Apply the foot brake.
- Start the engine.
- ▶ Move the selector lever to D/S.
- Release the parking brake and slowly pull out and away from the wheel chocks.
- Stop and have someone retrieve the wheel chocks.



# **Tips**

If you move the selector lever of the automatic transmission to P before applying the parking brake and before blocking the wheels, you may have to use more force later to move the lever out of the P position.

# Cleaning and protection

# General information

Regular care preserves vehicle value.

Any automobile is exposed to industrial fumes, corrosive road salt, etc. A well cared for Audi can look like new many years after purchase. Regular and correct care will contribute to maintaining the beauty and value of your Audi.

Furthermore, good care may be a condition for substantiating a warranty claim should corrosion damage or paint defects occur.

Your authorized Audi dealer has a variety of **dedicated vehicle-care products** and can advise which ones to use for cleaning the exterior and interior of your vehicle.

Whether you use products recommended by Audi or other commercially available cleaning agents, please make sure you apply them correctly.

# $\Lambda$

### WARNING

- Cleaning agents may be poisonous. Keep them out of the reach of children.
- Heed all caution labels.
- Always read directions on the container before using any product. Follow the directions carefully.
- Most chemical cleaners are concentrated and have to be diluted.
- Use spot removing fluids only in well ventilated areas.
- Do not use gasoline, kerosene, diesel fuel, nail polish remover or other volatile fluids. They may be toxic, flammable or hazardous in other ways. Do not wash, wax or dry the vehicle with the ignition on or the engine running.
- Do not clean the undersides of chassis, fenders, wheel covers, etc. without protecting your hands and arms. You may cut yourself on sharp-edged metal parts.

 Moisture and ice on brakes may impair braking efficiency ⇒ page 200, Brake system. Test the brakes carefully each time you wash the vehicle.



### For the sake of the environment

Select only environmentally friendly cleaning products. Leftover cleaning products should not disposed of in the household waste.

# Care of exterior

## Washing

Frequent washing protects the vehicle.

The best protection against environmental influences is *frequent* washing and waxing. How often this is required depends on:

- How much the vehicle is used
- Where the vehicle is parked (garage, in the open under trees, etc.)
- The seasonal and weather conditions
- Environmental influences

The longer bird droppings, insects, tree resin, road and industrial grime, tar, soot, road salt and other materials remain on the vehicle body, the more lasting their destructive effects will be. High temperatures caused by exposure to intense sunlight intensify the corrosive effect, particularly when humidity is high as well.

Under certain circumstances, **weekly** washing may be necessary. Under other conditions, a monthly washing and waxing may be adequate.

After the winter, the underside of the vehicle should be thoroughly washed, preferably in a professional car wash.

Vehicles with matte finish paint\*  $\Rightarrow$  page 219.



### WARNING

Always read and heed all WARNINGS and other information ⇒ page 216.

# Automatic car wash

The vehicle can be washed in almost any modern automatic car wash.

The vehicle paint is so durable that the vehicle can normally be washed without problems in an automatic car wash. However, the effect on the paint depends to a large extent on the design of the facility, the filtering of the wash water, the type of wash and care material, etc. If the paint has a dull appearance after going through the car wash or is scratched, bring this to the attention of the operator immediately. If necessary, use a different car wash.

Before going through a car wash, be sure to take the usual precautions such as closing the windows and the roof. Factory installed antennas must not be removed.

If you have installed additional accessories on the vehicle - such as spoilers, roof rack, etc. it is best to ask the car wash operator if these should be removed.

# $\Lambda$

#### WARNING

Please take note of the following points before going through an automatic car wash with your vehicle, so that you can avoid damage to your vehicle.

- Compare the track of your vehicle with the distance between the guide rails of the facility - there is a risk of damage to the wheels and tires.
- Compare the height and width of your vehicle with the height and width of the tunnel at the facility.
- Fold the exterior mirrors flat there is a risk of damaging the exterior mirrors. Power folding exterior mirrors\* must not be folded in or out by hand. Use the power function!
- Do not allow the wiper blade to fall onto the windshield after the vehicle is dried there is a risk of damaging the paint on the hood.
- Always read and heed all WARNINGS and other information ⇒ page 216.

# Washing the vehicle by hand

A lot of water is needed when washing a vehicle by hand.

- ▶ Before you start washing, make sure you have read and understood the WARNINGS
   ⇒ in General information on page 216.
- First soak all dried dirt until it is soft, then rinse it off.
- As you clean your vehicle, start with the roof and work your way down to the bottom, using a sponge, a sponge glove or a clean brush.
- Rinse the sponge or the sponge glove often, flushing it clean each time.
- Use special car shampoo only for very persistent dirt.
- Rinse the car thoroughly with water.
- Use a chamois leather to gently wipe the exterior dry.

Use a separate sponge for cleaning the wheels, door sills and other regions exposed to road dirt. In this way, you will not scratch the paint with coarse particles imbedded in the sponge the next time you wash the car.



### WARNING

- Wash your vehicle only when the ignition is switched off to reduce the risk of a crash.
- Always read and heed all WARNINGS and other information ⇒ page 216.



### Note

- Never try to remove dirt, mud or dust if the surface of the vehicle is dry. Never use a dry cloth or sponge, since this could scratch your vehicle's paint or windows.
- Never wash your car in bright sunlight.
   Drops of water act as magnifying lenses and may damage your paint.
- When you wash your car in the winter: if you rinse your vehicle with a hose, be careful not to aim the stream of water directly at locks, or at door or hatch openings - they can freeze shut.

- Never use a dry cloth or sponge to clean the headlights. Only use wet cloths or sponges to prevent scratches. It is best to use soapy water.
- You should remove debris (such as insects) from the headlight lenses on a regular basis, for example when refueling your vehicle. Never clean the headlights with a dry cloth or sponge. Use a wet cloth or sponge. It is best to use soapy water.



# For the sake of the environment

Only wash the vehicle in facilities specially designed for that purpose. This will reduce the risk of dirty water contaminated with oil from entering the sewer system. In some areas, washing vehicles outside of these facilities is prohibited.

# Washing your vehicle with a power washer

Cleaning the exterior of your car with a highpressure power washer is safe as long as you observe a few simple rules.

- ▶ Before using the power washer, make sure you have read and understood the WARN-INGS ⇒ in General information on page 216.
- Always follow the operating instructions for the power washer.
- Make sure that the jet on the spray hose produces a "fan shaped spray".
- Do not hold the spray nozzle too close to soft materials.

Keep a distance from soft materials such as rubber hoses or insulating material as well as sensors and camera lenses.

When cleaning the vehicle with a power washer *always* follow the operating instructions. This applies particularly to the operating pressure and the spraying distance. Do not point

the spray directly at the seals around the side windows, around the doors, on the rear lid or on the Panoramic sliding sunroof\*. Likewise, do not point it directly at tires, rubber hoses, insulation material or sensors ⇒ page 219. Hold the spray nozzle at least 1.3 ft (0.4 m) away from the vehicle.

Do not use a high-pressure power washer to remove snow and ice.

Do not use a jet which sprays water in a direct stream or one that has a rotating jet.

Water temperature should not exceed 140 °F (60 °C).



# WARNING

Never wash tires with a jet that sprays water in a direct stream. This could cause invisible damage to the tires and weaken them, even if the spray is from a relatively long distance and for a short time. Damaged and weakened tires can fail and cause accidents and personal injury.



## Note

To avoid damaging your vehicle, always make sure that there is sufficient distance between the spray head and soft materials like rubber hoses, plastic parts and sound-deadening materials as well as sensors and camera lenses. Never aim the spray head at the same point for a long time. This also applies to cleaning headlights and painted bumpers. Remember: the closer the nozzle is to the surface of the material, the greater the stress on the material.

# Caring for vehicles with matte finish paint

Applies to vehicles: with matte finish paint

Vehicles with matte finish paint require special care due to the characteristics of the paint.

# Washing by hand

To avoid damaging the paint when washing, first remove dust and large particles from your vehicle. Insects, grease spots and finger-prints are best removed with a special cleaner for matte finish paint.

Apply the product using a **microfiber cloth**. To avoid damaging the paint surface, do not use too much pressure.

Rinse the vehicle thoroughly with water. Clean the vehicle starting at the top and working toward the bottom using a **neutral shampoo** and a soft **microfiber cloth**. Stop frequently to rinse the cloth thoroughly.

Clean the wheels and sill panels last. Use a clean **sponge** on these areas.

Rinse the vehicle thoroughly again and let it air dry. If there are any water spots, they can be removed using a **leather cloth**.

Clean again with the **special cleaner for matte finish paint** if necessary.

### Removing stubborn dirt

**Bird droppings** or **tree sap** are best removed with plenty of water and a microfiber cloth.

You should rinse off **gasoline residue** immediately with plenty of water.



### WARNING

- Wash your vehicle only when the ignition is switched off to reduce the risk of a crash.
- Always read and heed all WARNINGS and other information ⇒ page 216.



# Note

 Do not treat vehicle parts painted with matte finish paint using polishing mate-

- rials or hard wax. These products could cause damage to the appearance or surface that cannot be repaired.
- Never use protective wax. It can destroy the matte finish effect.
- Do not place any stickers or magnetic signs on vehicle parts painted with matte finish paint. The paint could be damaged when the stickers or magnets are removed.
- To prevent paint damage, do not wash the vehicle in direct sunlight.
- To prevent damage to the paint surface, do not use insect removal sponges, rough kitchen sponges or similar items.
- You should remove debris (such as insects) from the headlight lenses on a regular basis, for example when refueling your vehicle. Only clean the headlights using a wet cloth or sponge, never a dry one. Cleaning with soapy water is recommended.



# **Tips**

For more information on special cleaning products designed for matte finish paint, see your Audi dealer.

### Sensors and camera lenses

- Remove snow with a hand brush and remove ice with a de-icing spray that does not contain solvents.
- Clean the sensors (adaptive cruise control\*, parking system\*) with a cleaning solution that does not contain solvents and a soft cloth.
- Dampen the camera lens with a household alcohol-based glass cleaner, and then wipe the lens clean with a dry cloth.



### Note

- If you wash your vehicle with a pressure washer,
  - make sure there is enough distance to sensors in the rear bumper.

- do not clean the camera lenses and the area around them with the pressure washer.
- Never use warm or hot water to remove snow or ice from the camera lens. This could cause the lens to crack.
- Never clean the camera lens with abrasive products.

# Waxing and Polishing

# Waxing

A good wax coating protects the vehicle paint to a large extent against the environmental factors listed under ⇒ page 216, Washing and even against slight scratches.

You can use a liquid car wax to protect your paint as soon as one week after your vehicle has been delivered.

Even if you regularly use a waxing process in automatic car washes, we recommend that you manually apply a coat of wax to give the paint extra protection, particularly if water no longer beads on the clean paint.

Protect plastic body parts with car wax in the same way as the vehicle body.

During warm weather dead insects tend to collect on the front bumper and on the forward area of the hood. They are much easier to remove from paint that is waxed often.

### Polishing

Polish your vehicle only if the paint has lost its shine and the gloss cannot be brought back with wax.

If the polish used does not contain preservative compounds, the paint must be waxed afterwards.



# / WARNING

Always read and heed all WARNINGS and other information  $\Rightarrow$  page 216.



#### Note

Do not use car wax on

- matte or anodized metal trim
- rubber or rubber-like trim.

# Trim strips

Metal trim needs special care.

For environmental reasons, Audi fabricates the bright trim strips and trim pieces from pure chromium-free aluminum.

Dirt and marks on the trim strips should be removed with a pH-balanced cleaning agent (do not use a chrome cleaner). Authorized Audi dealers carry cleaning products which have been tested for use on your vehicle and are not harmful to the environment.

To avoid corrosion on the exterior trim strips, only a pH-balanced solution should be used for the windshield washer.



# WARNING

Always read and heed all WARNINGS and other information  $\Rightarrow$  page 216.

# Plastic and vinyl

Plastic needs special care.

Use a clean, damp cloth or sponge to remove dust and light surface dirt. For other soil, use a lukewarm all-purpose cleaning solution or a mild saddle soap for vinyl trim. Remove water spots and traces of soap with a clean, damp cloth or sponge. Use a clean, soft cloth to rub dry.

Grease, tar or oil stains can be removed with a clean cloth or sponge soaked with all-purpose cleaner or with a solvent designed especially to clean vinyl.

Occasionally apply a colorless vinyl or leather preservative to retain the material's luster and pliability.



# WARNING

Always read and heed all WARNINGS and other information  $\Rightarrow$  page 216.

## **Aluminum trim**

Use only **neutral-pH** products to remove spots and deposits from aluminum surfaces. Chrome care products and alkaline cleaners will attack aluminum surfaces and can damage them over time.



### WARNING

Always read and heed all WARNINGS and other information ⇒ page 216.

# Touch-up paint

Minor paint damages should be touched up immediately.

Use either a touch-up paint stick or spray paint to cover minor scratches and nicks.

Your authorized Audi dealer has touch-up paint for minor scratches and stone chips. Scratches should be touched up soon after they occur to prevent corrosion.

If a spot starts to rust, however, a simple touch-up job will not be enough. The affected surface must be sanded smooth and coated with an anti-rust primer before the painted finish can be restored.

The number for the original vehicle paint can be found on the vehicle identification label ⇒ page 290.



# WARNING

Always read and heed all WARNINGS and other information ⇒ page 216.

### Windows

Clear vision to all sides.

Clean all windows regularly to remove road film and car wash wax buildup.

- Remove snow from windows using a brush.
- Use a plastic ice scraper to remove ice from windows and mirrors.
- Remove other residue on the windows with a spray-on glass cleaner.

Wipe the windows dry with a clean piece of cloth or kitchen paper towel.

The best way to remove snow from windows and mirrors is to use a brush. Use a non-abrasive **plastic ice scraper** - better still, a spray deicer - to remove **ice** from windows and mirrors.

The windows must not be cleaned with insect remover or wax since these can interfere with the function of the windshield wiper blades (chatter).

Oil, grease, or silicone residue can be removed with glass cleaner or silicone remover. However, wax residue requires the use of a specially formulated solvent. Please contact your authorized Audi dealer for advice on safe products for wax removal.

Windows should also be cleaned on the inside at regular intervals.

Never dry windows with the same chamois that you use to dry painted surfaces. Wax residue on the chamois can impair vision through the windows.



### WARNING

- Always read and heed all WARNINGS and other information ⇒ page 216.
- The windshield must not be treated with water-repellent materials. They can increase glare under poor visibility conditions such as wetness, darkness, or when the sun is low on the horizon. In addition, they can cause the windshield wipers to chatter.



### Note

- Never use warm or hot water to remove snow and ice from windows and mirrors.
   This could cause the glass to crack.
- To prevent damage to the wires of the rear defogger, do not place any adhesive stickers on the inside of the rear window over the wires.

- To help prevent dirt from scratching the window, always scrape in a forward direction - pushing the scraper away from you - never back and forth.
- Water leaking from the inside of the rear windows may damage sensitive electrical components located either under the rear parcel shelf or in the rear trunk area. Always ensure that water never leaks through the body section of the vehicle. You can do this by using waterproof protection over the vehicle's electrical components (e.g., when installing window tinting).
- Damage or malfunction of electrical components due to water damage or any other outside influence is not covered by the Audi New Vehicle Limited Warranty.
   See your Warranty & Maintenance booklet for additional details about your warranty.

# Cast (light) alloy wheels

Cast (light) alloy wheels require special care.

- Wash the wheels with a sponge or hose brush every other week.
- For deep cleaning afterwards, use only a dedicated acid-free cast alloy wheel cleaner.
- ► Rub a coat of **liquid wax** onto the rims every three month. Be sure to reach and treat all parts of the rim.

To preserve the decorative appearance of the cast alloy wheels, some special care is necessary. In addition to road dirt and salt, brake dust is also corrosive. If left on for too long, brake dust can cause pitting.

Use only special acid-free cleaners formulated for alloy rims. Safe products are available at your authorized Audi dealer. Never leave the cleaner on the rims longer than specified on the label. If not rinsed off promptly, the acid contained in some cleaners can attack the threads on the wheel bolts.

Never use abrasive or metal polishing cleaning agents. If the protective coating has been chipped, e.g. by kicked up road dirt, touch it up as soon as possible.



# WARNING

- Moisture and ice on brakes may affect braking efficiency 
   ⇒ page 200, Brake system. Test the brakes carefully each time you wash the vehicle.
- Always read and heed all WARNINGS and other information ⇒ page 216.

# **Body cavity sealing**

The body cavity sealing does not need to be checked.

All body cavities which could be affected by corrosion have been thoroughly protected at the factory.

This sealing does not require any inspection or additional treatment. If any wax should seep out of the cavity when the ambient temperature is high, it can be removed with a plastic scraper and a suitable solvent.



### WARNING

Solvents can be dangerous.

- Benzine is flammable and toxic. If you use benzine for removing the wax, keep sparks, flame and lighted cigarettes away. Never dump benzine on the ground, into open streams or down sewage drains.
- Be sure to observe all safety and environmental regulations. Follow all instructions on the container.
- Always read and heed all WARNINGS and other information ⇒ page 216.

#### Chassis

Have the undercoating checked for damage from time to time.

The lower body shell of your Audi is also thoroughly protected against corrosion.

Any damage to the undercoating caused by road hazards should be repaired promptly.

 $\Lambda$ 

### WARNING

Too much undercoating in the wrong places can cause a fire.

- Do not apply additional undercoating or rustproofing on or near the exhaust manifold, exhaust pipes, catalytic converter or heat shields. While driving, the substance used for undercoating could overheat and cause a fire.
- Always read and heed all WARNINGS and other information ⇒ page 216.

# **Exhaust tail pipes**

Road salt and other corrosive materials will damage the material in the exhaust tail pipes if they are not cleaned regularly. Do not clean the tail pipes with wheel cleaner, paint polish, chrome polish or other abrasive cleaners. Clean the tail pipes with car care products that are suitable for stainless steel.

Your authorized Audi dealer can provide cleaning products that have been tested and approved for your vehicle.

# Care of interior

# Radio and MMI\* display

 Clean the display with a soft clean cloth and an LCD cleaner.

The display can be cleaned with a professionally available "LCD cleaner". The cloth should be slightly dampened with the cleaning fluid to clean the display.



### Note

To avoid scratching the display, you should never clean it dry.

### MMI control console

Applies to vehicles: with MMI

- ► First clean the MMI control console with a brush to remove dust from the housing.
- Then wipe the MMI control console with a clean, soft, slightly damp cloth.

The MMI control console should be cleaned with a brush first so that no dirt is trapped between the buttons and the housing. We recommend giving the MMI control console a final wipe with a cloth moistened with water and dish washing detergent.



### Note

To prevent damage, make sure that no fluid ever gets into the MMI control console.

### **Aluminum trim**

Use only **neutral-pH** products to remove spots and deposits from aluminum surfaces. Chrome care products and alkaline cleaners will attack aluminum surfaces and can damage them over time.



### WARNING

Always read and heed all WARNINGS and other information  $\Rightarrow$  page 216.

# Fabrics and fabric coverings

Fabrics and fabric coverings (e.g. seats, door trim panels, etc.) should be cleaned at regular intervals with a vacuum cleaner. This removes surface dirt particles which could become embedded in the fabric through use. Steam cleaners should not be used, because the steam tends to push the dirt deeper into the fabric and lock it there.

### Normal cleaning

Generally, we recommend using a soft sponge or a lint-free microfiber cloth to the clean fabric. Brushes should only be used for carpets and floor mats, since other fabric surfaces could be harmed by brushes.

Normal surface stains can be cleaned using a commercially available foam cleaner. Spread the foam on the surface of the fabric with a soft sponge and work it in gently. Do not saturate the fabric. Then pat the foam dry using absorbent, dry cloths (e.g. microfiber cloth) and vacuum it after it has dried completely.



# Cleaning stains

Stains caused by beverages (e.g. coffee, fruit juice, etc.) can be treated with a mild detergent solution. Apply the detergent solution with a sponge. In the case of stubborn stains, a detergent paste can be applied directly to the stain and worked into the fabric. Afterwards, use copious amounts of clean water to remove the remaining detergent. Apply the water with a damp cloth or sponge and pat the fabric dry with an absorbent, dry cloth.

Stains from chocolate or makeup should have detergent paste rubbed into them. Afterwards, remove the soap with water (damp sponge).

Alcohol can be used to treat stains from grease, oil, lipstick or a ballpoint pen. Melted grease or dye must be patted off using absorbent material. It may be necessary to retreat the areas with detergent paste and water.

In the case of general soiling of the upholstery and cover material, we recommend hiring a specialist that has the equipment to clean the seat covers and other fabric surfaces by shampooing and spray extraction.



### WARNING

Always read and heed all WARNINGS and the information ⇒ page 216.



### Tips

Open Velcro fasteners on your clothing can damage the seat cover. Please make sure that Velcro fasteners are closed.

# Plastic parts and instrument panel

Always use a clean cloth moistened in clear water to clean these areas. For persistent dirt use an Audi approved **solvent-free** plastic cleaner/protectant.

# A

### WARNING

Solvents can change the properties of some plastics and make it harder for the airbag to deploy.

- Never clean the instrument panel or the surface of airbag modules with cleaning products that contain solvents.
- Products containing solvents will make the surface of this part porous.
- Serious injuries can result if plastic parts come loose when the airbag is deployed.
- Always read and heed all WARNINGS and other information ⇒ page 216.



#### Note

Cleaning agents containing solvents will attack the material and can change the way it behaves.

### Natural leather

Applies to vehicles: with natural leather

Audi makes great efforts to maintain the properties, natural look and feel of interior leather.

#### General

We offer many different types of leather on our vehicles. Most are different types of nappa leather, which has a smooth surface and comes in various colors.

The intensity of the color determines the visual characteristics and appearance. If the surface of the leather has a typical natural look, then the leather is a nappa leather that has been left in a relatively natural condition. This leather offers particularly good comfort and breathes well. Fine veins, closed grains, insect bites, skin folds, and subtle variations in color remain visible. These characteristics demonstrate that the material is natural.

Natural nappa leather is not covered by a color finish. It is therefore more sensitive to soiling and wear, which is something you need to consider if children, animals or other factors might prove to be particularly hard on the leather.

By contrast, leather types that are covered by a colored finish layer are more durable. This has a positive effect on the leather's resistance to wear and soiling in daily use. On the other hand, the typical characteristics of natural leather are barely or not apparent. However, this does not mean that the leather itself is of inferior quality.

# Care and handling

Because of the exclusive nature of the types of leather that Audi uses and their unique properties (such as sensitivity to oils, grease, soiling, etc.), you will need to be somewhat careful with these leathers, and a certain type of care is required. For example, dark clothing materials can discolor leather seats (especially if such clothing is damp and was not dyed correctly). Dust and dirt particles in pores, folds, and seams can have an abrasive effect and can damage the leather surface as well as weaken seams.

The leather should be cleaned regularly as needed. After having been used for a relatively long time, your leather seats will acquire a rich aged finish. This is a characteristic of natural leather and a sign of true quality.

In order to maintain the value of this natural product over the life of your vehicle, you should follow the recommendations below:

# (!)

### Note

- To keep your leather from bleaching out, do not allow it to be exposed to bright sunlight for long periods of time. If you have to leave the vehicle parked outside for long periods, cover the leather to protect it from direct exposure to sunlight.
- Sharp objects on clothing, such as zippers, rivets or sharp pieces on belts can leave permanent scratches or scrape marks on the surface of the leather.

# (i)

# **Tips**

 After each time you clean the leather and at regular intervals, use a leather preser-

- vative cream that contains UV-blockers and that works into the leather. This cream will nourish and moisturize the leather, helping it to breathe and stay supple. It also helps to build up a protective coating on the surface.
- Clean the leather every 2 3 months,
   and clean any areas that get soiled.
- Remove fresh marks made by ballpoint pens, ink, lipstick, shoe polish, etc. as soon as possible.
- Preserve the color of the leather as needed by using a special colored leather care cream to touch up areas of uneven color.

# Cleaning and caring for leather upholstery and trim

Applies to vehicles: with natural leather

Natural leather requires special care and attention.

# Normal cleaning

 Clean soiled areas with a slightly moistened cotton or woolen cloth.

# More stubborn dirt

- More stubborn dirt can be removed using a cloth saturated with a mild soap solution (2 tablespoons mild liquid soap).
- Never allow the soap solution to saturate the leather, and make certain that no water soaks into the seams.
- Wipe off the soap solution with a soft, dry cloth.

# Cleaning spots

- Remove fresh water-based spots (such as coffee, tea, juices, blood) with an absorbent cloth or paper towel.
- ▶ Remove fresh grease or oil-based spots (such as butter, mayonnaise, chocolate) with an absorbent cloth or paper towel, or use the cleaner from the leather care kit if the spot has not yet penetrated into the surface of the leather.
- Use an oil/grease dissolving spray, if oil/ grease spots have dried on.

Remove specific kinds of spots (ballpoint pen, felt marker, fingernail polish, waterbased paint, shoe polish, etc.) with a spot remover specifically formulated for leather.

#### Leather care

- Every half year use an approved leather care product (available from your authorized Audi dealer) to care for the leather.
- ► Apply the product very sparingly.
- Wipe it off with a damp cloth.

If you have any questions about cleaning and caring for the leather in your vehicle, it is best to contact your authorized Audi dealer, who will be glad to help you and tell you about our full range of leather care products, such as:

- Leather cleaning and care kit
- Creams to care for colored leather
- Spot removers for ballpoint pens, shoe polish, etc.
- Oil/grease dissolving spray
- New and upcoming products.



### WARNING

Always read and heed all WARNINGS and other information  $\Rightarrow$  page 216.



### Note

- Never use chemical solvents (e.g. lighter fluid, turpentine), waxes, shoe polish or similar products on the leather surfaces in your Audi.
- To avoid damage, have stubborn stains removed by a commercial cleaning specialist.

### Safety belts

Only well-maintained safety belts work reliably when needed.

- Keep belts clean.
- For cleaning, use a mild soap and water solution. Let belts dry thoroughly and away from direct sunlight.
- ► Do not allow inertia reel safety belts to retract before they are completely dry.

 Check the condition of your safety belts regularly.

Heavily soiled safety belts may not retract properly.



### WARNING

Damaged safety belts can break in a crash.

- Anything that might damage your safety belts could mean that you and your passengers would not be adequately protected in an accident.
- Safety belt performance depends on correct installation. Never remove belts from the vehicle to clean them.
- Do not use chemical cleaning agents,
   bleach or dyes. They have corrosive properties which weaken the webbing.
- When cleaning your safety belts, inspect them for damage. If you discover damage, see your authorized Audi dealer.
- Always read and heed all WARNINGS and other information ⇒ page 216.

# **Engine compartment**

Be especially careful when cleaning the engine compartment.

Always switch off the ignition before cleaning the engine  $\Rightarrow \triangle$ .

# Plenum panel

Remove leaves from the plenum panel in front of the windshield under the engine hood. This prevents the water drain holes from becoming blocked, and it prevents debris from entering the vehicle interior through the heating and ventilation ducts.

### Corrosion protection

The engine compartment and transmission have been corrosion-protected at the factory.

Good anti-corrosion treatment is very important, particularly in the winter. If the vehicle is frequently driven on salt treated roads, the entire engine compartment and plenum panel should be thoroughly cleaned at the end of winter and retreated to prevent salt damage.

At the same time, the underside of the vehicle should be washed as well.

If the engine compartment is cleaned at any time with grease removing solutions<sup>1)</sup>, or if you have the engine washed, the anti-corrosion treatment is almost always removed as well. It is therefore essential to have a long-lasting corrosion protection reapplied to all surfaces, seams, joints and components in the engine compartment.



### WARNING

Be aware: The engine compartment of any motor vehicle is a potentially hazardous area.

- Before working in the engine compartment, be sure to read the information
   ⇒ page 233.
- Before reaching into the front plenum panel, always remove the ignition key.
   Otherwise, the windshield wiper system could unintentionally be switched on, possibly causing personal injury from the moving wiper linkage.
- Never reach into the area around or touch the radiator fan. The auxiliary fan is temperature controlled and can switch on suddenly - even when the ignition is off.
- Do not wash, wax or dry the engine with the engine running. Moving or hot parts could injure you.
- Do not clean the underside of the chassis, fenders, wheel covers, or other hard to reach parts without protecting your hands and arms. You may cut yourself on sharp-edged metal parts.
- Always read and heed all WARNINGS and other information ⇒ page 216.

Use only the correct cleaning solutions. Never use gasoline or diesel fuel.

# Fuel supply and filling your fuel tank

# Gasoline

# **Fuel supply**

Using the right fuel helps keep the environment clean and prevents engine damage.

#### Fuel recommendation

The fuel recommended for your vehicle is **un-leaded premium** grade gasoline. See also ⇒ page 292, Data. Audi recommends using TOP TIER Detergent Gasoline with a minimum octane rating of 91 AKI (95 RON). For more information on TOP TIER Detergent Gasoline, please go to the official website (www.toptiergas.com).

The recommended gasoline octane rating for your engine can also be found on a label located on the inside of the fuel filler flap. This rating may be specified as AKI or RON.

Your vehicle may also be operated using unleaded regular gasoline with a minimum octane rating of 87 AKI/91 RON. However, using 87 AKI/91 RON octane fuel will slightly reduce engine performance.

Use unleaded gasoline only. Unleaded gasoline is available throughout the USA, Canada, and in most European countries. We recommend that you do not take your vehicle to areas or countries where unleaded gasoline may not be available.

For more information on refueling your vehicle, see  $\Rightarrow$  page 230.

### Octane rating

Octane rating indicates a gasoline's ability to resist engine damaging "knock" caused by premature ignition and detonation. Therefore, buying the correct grade of gasoline is very important to help prevent possible engine damage and a loss of engine performance.

Gasoline most commonly used in the United States and Canada has the following octane

ratings that can usually be found on the filler pump:

- Premium Grade: 91 - 96 AKI

- Regular Grade: 87 - 90 AKI

Explanation of the abbreviations:

AKI = Anti Knock Index = (R+M)/2 = (RON + MON)/2

RON = Research Octane Number

MON = Motor Octane Number.

# (!)

### Note

- Do not use any fuel with octane ratings lower than 87 AKI or 91 RON otherwise expensive engine damage will occur.
- Do not use leaded gasoline. The use of leaded gasoline will severely damage your vehicle's catalytic converter and its ability to control exhaust emissions.

# Blended gasoline

# Use of gasoline containing alcohol or MTBE (methyl tertiary butyl ether)

You may use unleaded gasoline blended with alcohol or MTBE (commonly referred to as oxygenates) if the blended mixture meets the following criteria:

# Blend of gasoline methanol (wood alcohol or methyl alcohol)

- Anti-knock index must be 87 AKI or higher.
- Blend must contain no more than 3% methanol.
- Blend must contain more than 2% co-solvents.

# Blend of gasoline and ethanol (grain alcohol or ethyl alcohol)

- Anti-knock index must be 87 AKI or higher.
- Blend must not contain more than 10% ethanol.
- Vehicles with flexible fuel\* engine: blend must not contain more than 85% ethanol.

### Blend of gasoline and MTBE

- Anti-knock index must be 87 AKI or higher.
- Blend must contain not more than 15%
   MTBE.

### Seasonally adjusted gasoline

Many gasoline grades are blended to perform especially well for winter or summer driving. During seasonal change-over, we suggest that you fill up at busy gas stations where the seasonal adjustment is more likely to be made in time.

# (!)

Note

- Fuels containing a high percentage of ethanol such as E50 and E85 may only be used in vehicles with flexible fuel\* engines. Using high ethanol fuel in vehicles not equipped with flexible fuel\* engines can cause severe engine damage.
- Methanol fuels which do not meet these requirements may cause corrosion and damage to plastic and rubber components in the fuel system.
- Do not use fuels that fail to meet the specified criteria in this chapter.
- If you are unable to determine whether or not a particular fuel blend meets the specifications, ask your service station or its fuel supplier.
- Do not use fuel for which the contents cannot be identified.
- Fuel system damage and performance problems resulting from the use of fuels different from those specified are not the responsibility of Audi and are not covered under the New Vehicle or the Emission Control System Warranties.
- If you experience a loss of fuel economy or driveability and performance problems due to the use of one of these fuel blends, we recommend that you switch to unblended fuel.

### Ethanol fuel (Bio-ethanol)

Applies to vehicles: with flexible fuel engine

You can recognize vehicles with a flexible fuel engine by looking at the label on the inside of the fuel filler flap.

Vehicles with flexible fuel engines may be operated with bio-ethanol fuels such as E85 (85% ethanol and 15% gasoline) or with unleaded gasoline (91 AKI/ROZ 95). The vehicle may also be operated with a mixture of these fuels.

Your fuel consumption will increase when using bio-ethanol fuels due to the lower amount of energy contained per unit volume in ethanol.

# Warming up the flexible fuel engine in low temperatures

Due to the chemical composition of bio-ethanol, a certain amount of fuel ends up in the engine oil when driving short distances in very low temperatures. This fuel evaporates again when the engine is warmed up.

# 🎩 Please warm up engine.

If the driver message appears in the instrument cluster display, drive with a warm engine to reduce the oil level.

# (!)

#### Note

- Never fill with methanol or with a higher percentage of bio-ethanol than 85% (E85). A higher percentage of bio-ethanol in the fuel can cause damage to the engine or to the fuel system.
- If you use only E85, it is recommended to fill the fuel tank completely with unleaded premium grade gasoline every 5,000 miles.
- If you experience starting, rough idle or hesitation driveability problems, fill the fuel tank completely with unleaded premium grade gasoline and drive it normally until the gasoline is used. See your authorized Audi dealer if the problem persists.

- Inform your authorized Audi dealer that you are operating or have operated the vehicle with E85.
- Read and follow the information and tips about gasoline ⇒ page 228.



# **Tips**

It may take longer to start the engine when the outside temperature is very cold. If possible, use winterized fuel if temperatures are below freezing.

# Gasoline additives

A major concern among many auto manufacturers is carbon deposit build-up caused by the type of gasoline you use.

Although gasoline grades differ from one manufacturer to another, they have certain things in common. All gasoline grades contain substances that can cause deposits to collect on vital engine parts, such as fuel injectors and intake valves. Although most gasoline brands include additives to keep engine and fuel systems clean, they are not equally effective.

Audi recommends using TOP TIER Detergent Gasoline. For more information on TOP TIER Detergent Gasoline, please go to the official website (www.toptiergas.com).

After an extended period of using inadequate fuels, built-up carbon deposits can rob your engine of peak performance.



#### Note

- Damage or malfunction due to poor fuel quality is not covered by the Audi New Vehicle Limited Warranty.
- Do not add aftermarket fuel additive products to your fuel tank.

# Fuel tank

### Fuel filler neck

The fuel filler neck is located on the right rear side panel behind the fuel filler flap.

If the power locking system should fail, you can still open the flap manually - for detailed instructions see ⇒ page 232.

You can find the fuel tank capacity of your vehicle in **Technical Data** ⇒ page 292.

The label on the inside of the fuel filler flap tells you the correct fuel for your vehicle. For more information about fuel specifications, see ⇒ page 228.

Your vehicle fuel tank has an on-board refuelling vapor recovery system. This feature helps to prevent fuel vapors from escaping from the tank and polluting the environment while you refuel your vehicle. In order to fill the tank properly while protecting the environment, please follow this refueling procedure carefully.



### WARNING

Under normal operating conditions, never carry additional fuel containers in your car. Gas canisters and other containers used to transport fuel can be dangerous. Such containers, full or empty, may leak and could cause a fire in a collision. If you must transport fuel to use for your lawn mower, snow blower, etc., be very careful and always observe local and state laws regarding the use, transportation and storage of such fuel containers. Make certain the container meets industry standards (ANSI/ASTM F852 - 86).



#### Note

Never drive your vehicle until the fuel tank is completely empty. The irregular supply of fuel can cause misfiring. Gasoline could enter the exhaust system and damage the catalytic converter.

# Refuelling

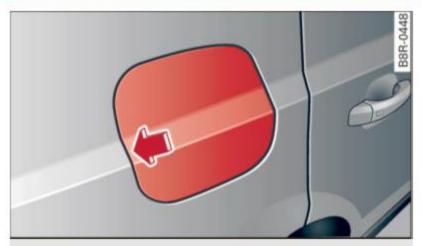


Fig. 191 Right rear vehicle side: Opening the fuel filler flap



Fig. 192 Fuel filler flap with attached fuel cap

When activating the central locking, the fuel filler flap is automatically unlocked or locked. Refuel the vehicle with the ignition turned off.

# Taking the fuel cap off

- Press the left side of the fuel filler flap to open it ⇒ fig. 191 -arrow-.
- ► Unscrew fuel cap counter-clockwise and hang it on the fuel filler flap  $\Rightarrow$  fig. 192.

# Refuelling procedure

- Insert the fuel nozzle from the gasoline pump into the fuel filler neck as far as it will go.
- Select a medium refuelling rate so that the nozzle switches off automatically when the tank is full.

### Putting the fuel cap back on

- After filling your tank, twist the fuel cap clockwise as far as it will go.
- Close the fuel filler flap.

To avoid fuel spilling or evaporating from the fuel tank always close fuel cap properly and completely. An improperly closed fuel filler

cap may also cause the MIL lamp ⇒ page 26 to come on.

### WARNING

Improper refueling or handling of fuel can cause fire, explosion and severe burns.

- Fuel is highly flammable and can cause severe burns and other injuries.
- Failure to shut the engine off while refueling and/or to insert the pump nozzle fully into the fuel filler neck could cause fuel to spray out of filler neck or to overflow. Fuel spray and overflowing fuel can cause a fire.
- Never use a cellular telephone while refueling. The electromagnetic radiation can cause sparks that can ignite fuel vapors and cause a fire.
- Never get back into your vehicle while refueling. If in exceptional circumstances you must get back in your vehicle while refueling, make certain that you close the door and touch metal to discharge static electricity before touching the filler nozzle again. Static electricity can cause sparks that can ignite fuel vapors released during refueling.
- Never smoke or have an open flame anywhere in or near your vehicle when refueling or filling a portable fuel container.
- For your safety, we strongly recommend that you do not travel with a portable fuel container in your vehicle. The container, full or empty may leak and could cause a fire, especially in a crash.
- If, under exceptional circumstances, you must transport a portable fuel container, please observe the following:
  - Never fill a portable fuel container while it is anywhere in or on the vehicle (for example, in the luggage compartment, or on the trunk). Static electricity can build up while filling and can ignite fuel vapors causing a fire.
- Always place a portable fuel container on the ground before filling.

- Always keep the filler nozzle completely inside the portable container before and during filling.
- If filling a portable container made of metal, the filler nozzle must always be in contact with the container. This will help prevent static electricity from discharging and cause a fire.
- Never spill fuel inside the vehicle or luggage compartment. Fuel vapors are highly flammable.
- Always observe local and state/provincial laws regarding the use, storage and transportation of fuel containers.
- Make certain the fuel container meets industry standards (ANSI / ASTM F852-86).



### Note

If any fuel has spilled onto the car, it should be removed immediately to prevent damage to the paint.



### For the sake of the environment

As soon as the correctly operated nozzle switches off automatically for the first time, the tank is full. Do not try to add more fuel because fuel may spill out. In addition, the expansion space in the fuel tank will be filled - causing the fuel to overflow when it becomes warm and pollute the environment.



### **Tips**

- Running your engine while refuelling may cause vapors to escape or even cause fuel to spill out of the tank. This would then shut off the fuel nozzle before the tank is full.
- Do not refuel your vehicle with the ignition turned on. The fuel gauge may otherwise not indicate the correct fuel level after refuelling.
- The fuel filler flap of your vehicle is not locked when you lock the vehicle from the inside.

# Unlocking the fuel filler flap by hand

You can open the fuel filler flap by hand if the power locking system should fail.

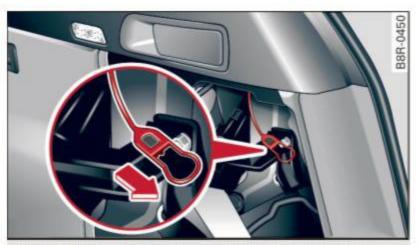


Fig. 193 Luggage compartment: Emergency opening of fuel filler flap

The emergency opening mechanism is located behind the right side trim panel in the luggage compartment.

- Open the right side trim panel.
- Loosen the strap from its bracket and pull on it ⇒ fig. 193. Now you can open the fuel filler flap as usual.

# Checking and filling

# **Engine hood**

# Releasing the engine hood

The engine hood is released from inside the vehicle.



Fig. 194 Driver's side footwell: engine hood release lever

- Open the driver's door.
- Pull the release lever on the left under the instrument panel ⇒ fig. 194 in the direction of the arrow.

The hood pops up slightly under spring pressure.

# Opening the engine hood



Fig. 195 Release lever under the engine hood

Before opening the engine hood, make sure that the windshield wipers are flat against the windshield. Otherwise, they could damage the paint on the hood.

- ▶ Pull up on the release under the hood ⇒ fig. 195. This releases the catch.
- Open the hood all the way ⇒ <u>∧</u>.

# WARNING

Hot engine coolant can burn you.

 To reduce the risk of being burned, never open the hood if you see or hear steam or coolant escaping from the engine compartment. Wait until no steam or coolant can be seen or heard before carefully opening the hood.

# Closing the engine hood

- Pull the hood down until the pressure from the struts is reduced.
- Let the hood drop down and latch in place. Do not try to push it shut; it may fail to engage ⇒ .

# WARNING

A hood that is not completely latched could fly up and block your view while driving.

- When you close the engine hood, check it to make sure the safety catch has properly engaged. The hood should be flush with the surrounding vehicle body parts.
- If you notice while driving that the hood is not secured properly, stop at once and close it.

# Working in the engine compartment

Be especially careful whenever you work in the engine compartment.

Whenever you must perform any work in the engine compartment, for example checking and filling different fluids, there is a risk of injury, burns and accidents. To prevent personal injury always observe the following WARNINGS. The engine compartment of any vehicle is a hazardous area 

. ⚠.



#### WARNING

To help avoid injury, before you check anything under the hood:

- Turn off the engine.
- Remove the ignition key.

- Apply the parking brake.
- Move selector lever of automatic transmission to P (Park).
- Always let the engine cool down. Hot components will burn skin on contact.
- To reduce the risk of being burned, never open the hood if you see or hear steam or coolant escaping from the engine compartment. Wait until no steam or coolant can be seen or heard before carefully opening the hood.
- Keep children away from the engine compartment.
- Never spill fluids on hot engine components. They can cause a fire.
- Never touch the radiator fan. The auxiliary electric fan is temperature controlled and can switch on suddenly.
- Never open the coolant reservoir cap when the engine is still warm. The coolant system is pressurized and hot coolant could spray out.
- Protect your face, hands and arm from steam or hot engine coolant by placing a thick rag over the cap when you open the coolant reservoir.
- Do not remove the engine cover under any circumstances. This increases the risk of burns.
- If work on the fuel system or the electrical system is necessary:
  - Always disconnect the battery.
  - Never smoke or work near heaters or open flames. Fluids in the engine compartment could start a fire.
  - Keep an approved fire extinguisher immediately available.
- To avoid electrical shock and personal injury while the engine is running or being started, never touch:
  - Ignition cables
  - Other components of the high voltage electronic ignition system.
- If you must perform a check or repair with the engine running:

- First, fully apply the parking brake, move selector lever of automatic transmission to P (Park).
- Always use extreme caution to prevent clothing, jewelry, or long hair from getting caught in the radiator fan, V-belts or other moving parts, or from contacting hot parts. Tie back hair before starting, and do not wear clothing that will hang or droop into the engine.
- Minimize exposure to emission and chemical hazards ⇒ ▲.

# $\Lambda$

# WARNING

California Proposition 65 Warning:

- Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harms. Wash hands after handling.



#### Note

When adding fluids, always make sure that they are poured into the proper container or filler opening, otherwise serious damage to vehicle systems will occur.



#### For the sake of the environment

To detect leaks in time, inspect the vehicle floor pan from underneath regularly. If you see spots from oil or other vehicle fluids, have your vehicle inspected by an authorized Audi dealer.

# **Engine compartment**

# Engine compartment

These are the most important items that you can check.

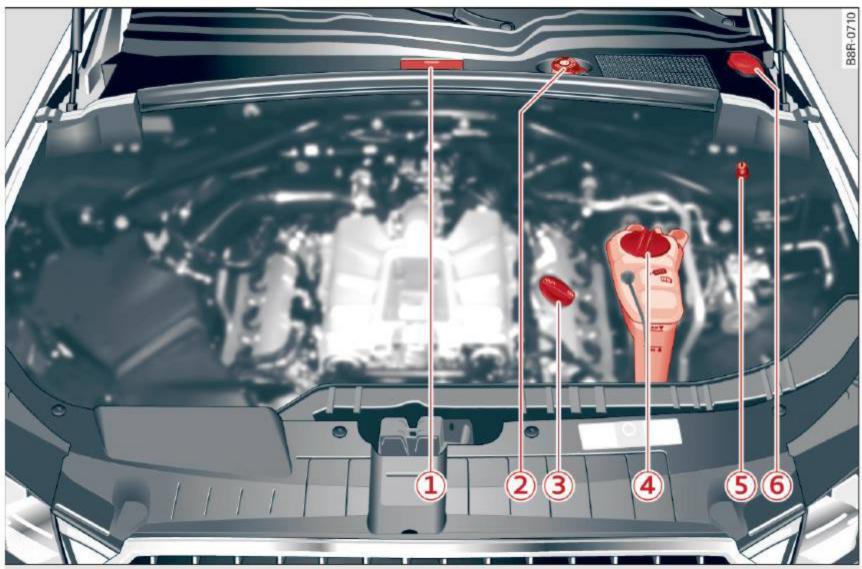


Fig. 196 Typical layout for containers and engine oil filler cap

| 1   | Jump start point (+) under a cov- |     |
|-----|-----------------------------------|-----|
|     | er                                | 285 |
| 2   | Brake fluid reservoir (©)         | 242 |
| 3   | Engine oil filler cap (🔄)         | 238 |
| 4   | Coolant expansion tank ( )        | 240 |
| (5) | Jump start point (-) with hex     |     |
|     | head screw 245,                   | 285 |
| 6   | Windshield/headlight washer       |     |
|     | container (🌣)                     | 247 |

The position of the engine oil filling hole ⇒ fig. 196 (item ③) can differ depending on the engine design.

# Λ

# WARNING

Before you check anything in the engine compartment, always read and heed all WARNINGS ⇒ ↑ in Working in the engine compartment on page 233.

# **Engine oil**

# **Engine oil specifications**

The engine oil used in your Audi needs the right kind of oil.

The engine in your Audi is a sophisticated power plant that was built to exacting specifications. This engine needs the right kind of engine oil that meets specifications regarding quality and viscosity so that it can run smoothly and reliably. Choosing the right oil and changing oil within the time and mileage intervals printed in your vehicle's Warranty & Maintenance booklet matters a lot more today than it did years ago. Audi has developed a special quality standard for engine oil that will help assure that your vehicle's engine will get the lubrication it needs for proper operation.

Modern engine lubrication has taken a quantum leap in the last few years. Many synthetic oils available today provide better engine lubrication that can outlast traditional petroleum-based oils, making them a smart choice for use throughout the life of your Audi.

Whether you use synthetic or petroleum-based engine oil, the oil that you use must conform to Audi's oil quality standard VW 502 00 to help keep your vehicle's engine running smoothly and help prevent the formation of harmful deposits, sometimes called "sludge", that over time can lead to expensive repairs.

At the time of printing, engine oils available in the U.S. and Canada that meet the exacting specifications of Audi oil standard VW 502 00 are synthetic engine oils. This does not mean, however, that every synthetic engine oil will meet Audi oil standard VW 502 00. So always be sure that you use an approved oil.

To help prevent the formation of harmful deposits use only oil with the following specifications printed on the oil container:

### Audi oil standard VW 502 00

Oil container labels may carry the specification singly or in combination with other designations and oil quality standards.

### Viscosity

Engine oils are graded according to their viscosity. The proper viscosity grade oil for your engine depends on climactic or seasonal conditions where you drive. You can use oil with a viscosity grade of SAE 5W40 across all temperature ranges for normal driving conditions.

However, if engine oil viscosity grade SAE 5W40 is not available, you can also use viscosity grade SAE 5W-30 or SAE 0W-40 as long as it meets Audi oil quality standard VW 502 00 specifications.

Because engine oil that meets the Audi oil standard may not be available everywhere when you need it, we strongly recommend that you always carry with you an extra quart (liter) of oil that expressly conforms to the VW 502 00 specification, in case you have to top off the oil while on the road.

Only if the bar of the oil level indicator is near "Min" - and no oil that expressly conforms to Audi oil standard VW 502 00 specifications is available - may you top off with a high quality engine oil, preferably synthetic-based, that meets ACEA A3 or API SM specifications, but even then, only in viscosity grades SAE 5W-40, SAE 5W-30, or SAE 0W-40. However, during the entire time between oil change intervals, never top off with more than a total of 0.5 qt/liter engine oil that does not conform to Audi oil specification VW 502 00.

For more information about engine oil that has been approved for your vehicle, please contact either your authorized Audi dealer or Audi Customer Relations at 1 (800) 822-2834 or visit our web site at www.audiusa.com or www.audicanada.ca. Here you will also find a current list of oils (manufacturers, brand names etc.) that conform to Audi oil standard VW 502 00.

# Changing the engine oil

The engine oil and oil filter must be changed according to the mileage (kilometers) and time intervals specified in your vehicle's Warranty & Maintenance booklet. Do not exceed these intervals – harmful deposits from old engine oil can reduce engine performance and can lead to expensive engine repairs.

Changing the oil at the recommended intervals is so very important because the lubricating properties of oil decrease gradually during normal vehicle use. If you are not sure when you have your oil changed, ask your authorized Audi Service Advisor.

Under some circumstances the engine oil should even be changed more frequently. Change oil more often if you drive mostly short distances, operate the vehicle in dusty areas or mostly under stop-and-go traffic conditions, or when you use your vehicle where temperatures stay below freezing point for long periods.

Detergent additives in the oil will make fresh oil look dark after the engine has been running for a short time. This is normal and is not a reason to change the oil more often than recommended.

# Damage or malfunctions due to lack of maintenance

It is essential that you change your oil at the recommended intervals using only engine oil that complies with Audi oil standard VW 502 00. Your Limited New Vehicle Warranty does not cover damage or malfunctions due to failure to follow recommended maintenance and use requirements as set forth in the Audi Owner's Manual and Warranty & Maintenance booklet. Your dealer will have to deny warranty coverage unless you present to the dealer proof in the form of Service or Repair Orders that all scheduled maintenance was performed in a timely manner.

# **Engine oil consumption**

The engine in your vehicle depends on an adequate amount of oil to lubricate and cool all of its moving parts.

In order to provide effective lubrication and cooling of internal engine components, all internal combustion engines consume a certain amount of oil. Oil consumption varies from engine to engine and may change significantly over the life of the engine. Typically, engines with a specified break-in period (see ⇒ page 205) consume more oil during the break-in period than they consume after oil consumption has stabilized.

Under normal conditions, the rate of oil consumption depends on the quality and viscosity of the oil, the RPM (revolutions per minute) at which the engine is operated, the ambient temperature and road conditions. Further factors are the amount of oil dilution from water condensation or fuel residue and the oxidation level of the oil. As any engine is subject to wear as mileage builds up, the oil consumption may increase over time until replacement of worn components may become necessary.

With all these variables coming into play, no standard rate of oil consumption can be established or specified. There is no alternative to regular and frequent checking of the oil level, see **Note**.

If the yellow engine oil level warning symbol in the instrument cluster lights up, you should check the oil level as soon as possible ⇒ page 238. Top off the oil at your earliest convenience ⇒ page 238.



### WARNING

Before you check anything in the engine compartment, always read and heed all WARNINGS ⇒ ⚠ in Working in the engine compartment on page 233.



### Note

Driving with an insufficient oil level is likely to cause severe damage to the engine.



# **Tips**

- The oil pressure warning display is not an indicator of the oil level. Do not rely on it. Instead, check the oil level in your engine at regular intervals, preferably each time you refuel, and always before going on a long trip.
- If you have the impression your engine consumes excessive amounts of oil, we recommend that you consult an authorized Audi dealer to have the cause of your concern properly diagnosed. Keep in mind that the accurate measurement of oil consumption requires great care and may take some time. An authorized Audi dealer has instructions about how to measure oil consumption accurately.

# Checking the engine oil level



Fig. 197 Display: Oil level indicator

#### Read oil level

- Park your vehicle so that it is horizontally level.
- Shut the engine off when it is at operating temperature.
- Switch only the ignition back on.
- ► Wait approx. two minutes.
- ► Select: CAR function button > Oil level. Or
- ► Select: CAR function button > Car systems\* control button > Servicing & checks > Oil level.
- ▶ Read the oil level in the radio or MMI\* Display ⇒ fig. 197. Add engine oil if the bar of the oil level indicator is near "Min" ⇒ page 238.

The oil level needs to be checked at regular intervals. The best times to do this are whenever you refuel and prior to long trips.

Depending on the way the vehicle is driven and the operating conditions, oil consumption can be up to a 1/2 quart per 600 miles (0.5 liter per 1,000 km). Consumption may be higher within the first 3,000 miles (5,000 km).

# (i)

## **Tips**

The oil level indicator in the radio or MMI\* Display is only an information display. If the oil level is too low, a minimum oil warning appears in the instrument cluster. Add oil ⇒ page 238. If the hood has been opened, the current oil level is shown in the instrument cluster the next time the ignition is switched on.

# Adding engine oil



Fig. 198 Engine compartment: cover on the engine oil filler neck

Before you check anything in the engine compartment, always read and heed all WARN-INGS 

in Working in the engine compartment on page 233.

- ► Unscrew the cap ★ to the engine oil filling hole ⇒ fig. 198, ⇒ page 235, fig. 196.
- Carefully top off with the appropriate oil in 0.5 liter doses.
- ► Check the oil level again after two minutes
  ⇒ page 238.
- ► Top off the oil, if necessary.
- Screw the cap back on the filling hole.

# $\Lambda$

### WARNING

- While topping off, the oil must not come in contact with hot engine parts - fire hazard!
- The oil filler cap must be properly secured to prevent oil from being sprayed on the hot engine and exhaust system when the engine is running fire hazard!
- If your skin has come in contact with the engine oil, you must subsequently cleanse it thoroughly.

# (!)

### Note

- Check the oil level using the radio or the MMI\*. If the message Please reduce oil level appears, contact your authorized Audi dealer or other qualified workshop to have excess oil extracted if necessary.
- Audi does not recommend the use of oil additives. They may damage the engine

and adversely affect your New Vehicle Warranty.



### For the sake of the environment

- Under no circumstances can the oil come in contact with the sewage network or the soil.
- Observe and follow legal regulations when disposing of empty oil containers.

# Changing the engine oil

We recommend that have your oil changed by an authorized Audi dealer or a qualified service station.

The engine oil must be changed according to the intervals specified in your Warranty & Maintenance booklet. This is very important because the lubricating properties of oil diminish gradually during normal vehicle use.

Under some circumstances the engine oil should be changed more frequently. Change oil more often if you drive mostly short distances, operate the vehicle in dusty areas or under predominantly stop-and-go traffic conditions, or have your vehicle where temperatures remain below freezing for extended periods.

Detergent additives in the oil will make fresh oil look dark after the engine has been running for a short time. This is normal and is not a reason to change the oil more often than recommended.

Because of the problem of proper disposal, along with the special tools and necessary expertise required, we strongly recommend that you have your oil changed by an authorized **Audi dealer** or a qualified service station.

If you choose to change your oil yourself, please note the following important information:

## WARNING

To reduce the risk of personal injury if you must change the engine oil in your vehicle yourself:

- Wear eye protection.
- To reduce the risk of burns from hot engine oil, let the engine cool down to the touch.
- When removing the oil drain plug with your fingers, stay as far away as possible.
   Always keep your forearm parallel to the ground to help prevent hot oil from running down your arm.
- Drain the oil into a container designed for this purpose, one large enough to hold at least the total amount of oil in your engine.
- Engine oil is poisonous. Keep it well out of the reach of children.
- Continuous contact with used engine oil is harmful to your skin. Always protect your skin by washing oil off thoroughly with soap and water.



### Note

Never mix oil additives with your engine oil. These additives can damage your engine and adversely affect your Audi Limited New Vehicle Warranty.

# **(**

# For the sake of the environment

- Before changing your oil, first make sure you know where you can properly dispose of the used oil.
- Always dispose of used engine oil properly. Do not dump it on garden soil, wooded areas, into open streams or down sewage drains.
- Recycle used engine oil by taking it to a used engine oil collection facility in your area, or contact a service station.

# Engine cooling system

### Coolant

The engine coolant performs two functions: it keeps the engine from overheating and it protects the engine from freezing in the winter.

The cooling system is sealed and generally requires little attention.

The cooling system has been filled at the factory with a permanent coolant which does not need to be changed. The coolant consists of a mixture of water and the manufacturer's glycol-based coolant additive G13 antifreeze with anticorrosion additives (50% for USA models; 60% for Canadian models). This mixture both assures the necessary frost protection and protects metal components in the engine's cooling system from corrosion and scaling. It also raises the boiling point of the coolant.

Do not reduce the concentration of the coolant in the summer by adding plain water. The proportion of coolant additive must be at least 50% but not more than 60% to maintain antifreeze protection and cooling efficiency. If the coolant frost protection is too low, the coolant could freeze and damage the vehicle heating and engine cooling system.

For year-round driving, antifreeze is added at the factory for temperatures down to:

- -- 31°F (- 35°C) USA
- - 40°F ( 40°C) Canada.



### WARNING

Before you check anything in the engine compartment, always read and heed all WARNINGS ⇒ ↑ in Working in the engine compartment on page 233.

# 1

### Note

 Before winter sets in, have the coolant checked to see if the coolant additive in your vehicle is sufficient to meet the climate conditions. This is especially important if you live in a region where the win-

- ter is extremely cold. If necessary, increase the proportion of coolant additive to 60%.
- When adding coolant additive to your cooling system, remember:
  - We recommend using only coolant additive G12++ or G13 for your vehicle.
     This coolant additive is available at authorized Audi dealers. Other types of antifreeze can significantly reduce corrosion protection. The resulting corrosion can cause a loss of coolant and serious engine damage.
- Do not add any type of radiator leak sealant to your vehicle's engine coolant.
   Adding radiator repair fluid may adversely affect the function and performance of your cooling system and could result in damage not covered by your New Vehicle Limited Warranty.

# Checking the engine coolant level

The engine coolant level can be checked with a quick glance.



**Fig. 199** Engine compartment: cover on the coolant expansion tank

Before you check anything in the engine compartment, always read and heed all WARN-INGS 

in Working in the engine compartment on page 233.

- Park your vehicle on a level surface.
- ► Turn off the ignition.
- ▶ Read the engine coolant level from the coolant expansion tank ⇒ fig. 199,
  ⇒ page 235, fig. 196. With a cold engine, the coolant level should be between the "MIN" and "MAX" markings. When the

engine is warm, the level may be slightly above the "MAX" marking.

The location of the coolant expansion tank can be seen in the engine compartment illustration  $\Rightarrow$  page 235.

To obtain an accurate reading, the engine must be switched off.

The expansion tank in your vehicle is equipped with an electric coolant level sensor.

When the coolant level is too low, the warning light in the Auto-Check System ⇒ page 30 will blink until you add coolant and the level has been restored to normal. Even though there is an electric coolant level sensor, we still recommend you check the coolant level from time to time.

### Coolant loss

Coolant loss may indicate a **leak** in the cooling system. In the event of coolant loss, the cooling system should be inspected immediately by your authorized Audi dealer. It is not enough merely to add coolant.

In a **sealed** system, losses can occur only if the boiling point of the coolant is exceeded as a result of overheating.



#### Note

Do not add any type of radiator leak sealant to your vehicle's engine coolant. Adding radiator repair fluid may adversely affect the function and performance of your cooling system and could result in damage not covered by your New Vehicle Limited Warranty.

## Adding coolant

Be very careful when adding engine coolant.

Before you check anything in the engine compartment, always read and heed all WARN-INGS 

in Working in the engine compartment on page 233.

- ► Turn off the engine.
- ► Let the engine cool down.

- Place a thick rag over the coolant expansion tank ⇒ page 240, fig. 199 and carefully turn the cap counter-clockwise ⇒ .
- ► Add coolant.
- ► Twist the cap on again *tightly*.

Replacement engine coolant must conform to exact specifications ⇒ page 240, Coolant. We recommend using only coolant additive G12++, G13 or in an emergency G12+. Do **not** use a different additive. In an emergency use plain water until you can get the correct additive and can restore the correct ratio. This should be done as soon as possible.

If you have lost a considerable amount of coolant, then you should add cold antifreeze and cold water only when the engine is cold.

Always use new engine coolant when refilling.

Do not fill coolant above the "MAX" mark. Excess coolant will be forced out through the pressure relief valve in the cap when the engine becomes hot.



### WARNING

- The cooling system is under pressure and can get very hot. Reduce the risk of scalding from hot coolant by following these steps.
  - Turn off the engine and allow it to cool down.
  - Protect your face, hands and arms from escaping fluid and steam by covering the cap with a large, thick rag.
  - Turn the cap slowly and very carefully in a counter-clockwise direction while applying light, downward pressure on the top of the cap.
  - To avoid being burned, do not spill antifreeze or coolant on the exhaust system or hot engine parts. Under certain conditions, the ethylene glycol in engine coolant can catch fire.
- Antifreeze is poisonous. Always store antifreeze in its original container and well out of the reach of children.

 If you drain the coolant, it must be caught and safely stored in a proper container clearly marked "poison".

# 1

# Note

- Coolant pollutes the environment and could cause an engine fire. Excess coolant will be forced out through the pressure relief valve in the cap when the engine becomes hot.
- If, in an emergency, only water can be added, the correct ratio between water and antifreeze 
   page 240 must be restored as soon as possible.



# For the sake of the environment

Drained coolant should not be reused. Always dispose of used coolant while observing all environmental regulations.

# Radiator fan

The radiator fan switches on automatically by itself.

The radiator fan is driven by the engine via the V-belt. The viscous clutch regulates the speed of the fan according to the temperature of the coolant.

An auxiliary electric radiator fan\* switches on and off depending on coolant temperature and other vehicle operating conditions.

After you switch the engine off, the auxiliary fan can continue running for up to 10 minutes - even with the ignition off. It can even switch on again later by itself 

♠ ♠, if

- the temperature of the engine coolant rises due to the heat build-up from the engine in the engine compartment, or
- the engine compartment heats up because the vehicle is parked in intense sunlight.

# $\Lambda$

# WARNING

To reduce the risk of personal injury never touch the radiator fan.

- The auxiliary electric fan is temperature controlled and can switch on suddenly even when the engine is not running.
- The auxiliary radiator fan switches on automatically when the engine coolant reaches a certain temperature and will continue to run until the coolant temperature drops.

# Brake fluid

# Checking brake fluid level

The brake fluid level can be checked with a quick glance.



Fig. 200 Engine compartment: cover on the brake fluid reservoir

Before you check anything in the engine compartment, always read and heed all WARN-INGS 

in Working in the engine compartment on page 233.

Read the brake fluid level from the brake fluid reservoir ⇒ fig. 200, ⇒ page 235, fig. 196. The brake fluid level must be between the "MIN" and "MAX" markings.

The brake fluid reservoir is located at the rear partition of the engine compartment on the left side ⇒ page 235.

The fluid level may drop *slightly* after some time due to the automatic adjustment of the brake pads. This is not cause for alarm.

If the brake fluid level falls *considerably* below the "MIN" mark, the brake warning/indicator light (U.S. models: BRAKE, Canadian models: (I) will come on ⇒ page 18 and ⇒ page 29. Do not continue to operate the vehicle. The complete brake system should be

thoroughly checked by an authorized Audi dealer or qualified workshop and the cause corrected. If the brake fluid level is too low, the brake warning/indicator light will illuminate. Contact an authorized Audi dealer immediately.

# Changing brake fluid

Have the brake fluid changed by an experienced technician.

Brake fluid absorbs moisture from the air. If the water content in the brake fluid is too high, corrosion in the brake system may result after a period of time. The boiling point of the brake fluid will also decrease considerably and decrease braking performance.

Therefore, the brake fluid must be changed every two years. Always use new brake fluid which conforms to Federal Motor Vehicle Standard "FMVSS 116 DOT 4".

The brake fluid reservoir can be difficult to reach, therefore, we recommend that you have the brake fluid changed by your authorized Audi dealer. Your dealer has the correct tools, the right brake fluid and the know-how to do this for you.

### /!\ WARNING

- Brake fluid is poisonous. It must be stored only in the closed original container out of the reach of children!
- Brake failure can result from old or inappropriate brake fluid. Observe these precautions:
  - Use only brake fluid that meets SAE specification J 1703 and conforms to Federal Motor Vehicle Standard 116. Always check with your authorized Audi dealer to make sure you are using the correct brake fluid. The correct type of brake fluid is also indicated on the brake fluid reservoir.
  - The brake fluid must be new. Heavy use of the brakes can cause a vapor lock if the brake fluid is left in the system too long. This can seriously affect the effi-

ciency of the brakes as well as your safety. This could result in an accident.



# Note

Brake fluid will damage the paint of your vehicle.



# For the sake of the environment

Because of the problem of proper disposal of brake fluid as well as the special tools required and the necessary expertise, we recommend that you have the brake fluid changed by your authorized Audi dealer.

# Battery

# **General information**

Under **normal** operating conditions, the battery in your Audi does not need any maintenance. With high outside temperatures or long daily drives we recommend that you have the electrolyte level checked by an authorized Audi dealer or qualified workshop. The electrolyte level should also be checked each time the battery is charged  $\Rightarrow$  page 245.

Have the battery checked when you take your vehicle in for service. You are well advised to replace a battery that is older than 5 years.

With certain types of airbag deployment, the battery is disconnected from the vehicle elec-pair, care and disposal of the airbags on page 171.

Hybrid drive\*: you can find important information about the high voltage battery under *⇒* page 97.

### Disconnecting the battery terminals

Some vehicle functions (power window regulators, for example) are lost if the battery terminals are disconnected. These functions have to be relearned after the battery terminals are connected again. To prevent this, the battery should only be disconnected from the vehicle electrical system when absolutely necessary for repairs.



# Vehicles not driven for long periods

If you do not drive your vehicle over a period of several days or weeks, electrical components are gradually cut back or switched off. This reduces energy consumption and maintains starting capability over a longer period *⇒* page 203.

Take into consideration that when you unlock your vehicle, some convenience functions, such as the interior lights or the power seat adjustment, may not be available. The convenience functions will be available again when you turn on the ignition and start the engine.

# Winter operation

During the winter months, battery capacity tends to decrease as temperatures drop. This is because more power is also consumed while starting, and the headlights, rear window defogger, etc., are used more often.

Avoid unnecessary power consumption, particularly in city traffic or when traveling only short distances. Let your authorized Audi dealer check the capacity of the vehicle battery before winter sets in ⇒ page 245. A well charged battery will not only prevent starting problems when the weather is cold, but will also last longer.

### Working on the battery

Be especially careful when working on or near the battery.

The battery is located in the luggage compartment under the floor. Before you check anything in the luggage compartment, read and 

Hybrid drive\*: you can find important information about the high voltage battery under *⇒* page 97.

Always heed the **safety warnings**, when working on the vehicle battery or the vehicle electrical system to prevent injury.

The following WARNINGS are very important when working on the battery:

Always heed the following WARNING SYM-BOLS and safety precautions when working on the battery.



Always wear eye protection.



Battery acid contains sulfuric acid. Always wear gloves and eye protection.



#### No

- sparks
- flames
- smoking.



When a battery is charged, it produces hydrogen gas which is explosive and could cause personal injury.



Always keep the battery well out of reach of children.



### WARNING

Whenever working on the battery or on the electrical system, there is the risk of injury, accident and even fire. Read and heed the following WARNINGS:

- Always wear eye protection. Do not let battery acid or any lead particles get on your skin or clothing. Shield your eyes. Explosive gases can cause blindness or other injury.
- Battery acid contains sulfuric acid. Sulfuric acid can cause blindness and severe burns.
  - Always wear gloves and eye protection. Do not tilt the battery because acid could leak out of the ventilation openings.
  - If you get battery acid in your eyes or on your skin, immediately rinse with cold water for several minutes and get medical attention.
  - If you should ingest any battery acid, seek medical attention immediately.
- Do not expose the battery to an open flame, electric sparks or an open light.
- Do not smoke.

- Do not interchange the positive and negative cables.
- When working on the battery, be sure not to short-circuit the terminals with tools or other metal objects. This would cause the battery to heat up very quickly, which could lead to damage or explosion and personal injury.
- When a battery is charged, it produces hydrogen gas which is explosive and could cause personal injury.
- Always keep the battery well out of the reach of children.
- Before work is done on the electrical system, disconnect the negative ground cable.
- Before performing any work on the electrical system, switch off the engine and ignition as well as any electrical equipment. The negative cable on the battery must be disconnected. If you are just going to replace a light bulb, then it is enough to switch off the lights.
- Before disconnecting the battery, switch off the anti-theft alarm system! Otherwise you will set off the alarm.
- When disconnecting the battery, first disconnect the negative cable and then the positive cable.
- Before reconnecting the battery, make sure all electrical consumers are switched off. Reconnect the positive cable first and then the negative cable. Never interchange the cables - this could start a fire!
- Never charge a frozen or a thawed-out battery. It could explode! If a battery has frozen, then it must be replaced. A discharged battery can freeze over at 32°F (0°C).
- Make sure the vent hose is always attached to the opening on the side of the battery.
- Never use batteries which are damaged.
   There is the danger of an explosion! Always replace a damaged battery.

# WARNING

California Proposition 65 Warning:

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive problems. Wash hands after handling.

# 1

### Note

- Do not disconnect the vehicle battery
   when the ignition is switched on or when
   the engine is running, otherwise, you will
   damage electronic components in the
   electrical system.
- If your vehicle is going to stand for a long period of time without being driven, protect the battery from "freezing", otherwise it will be damaged and will then have to be replaced.

# **Battery charging**

Starting the engine requires a well charged battery.

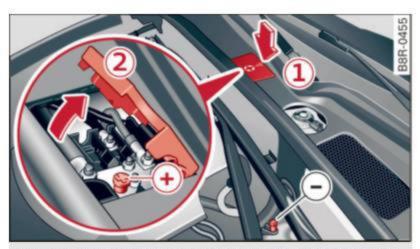


Fig. 201 Engine compartment: Connectors for charger and jumper cables

Always read and heed all WARNINGS below 

⇒ 

 and 

 in Working on the battery on page 244.

- ► Hybrid drive\*: read the important information concerning a dead high voltage battery under ⇒ page 105.
- Turn off the ignition and all electrical consumers.
- Make sure the area is well ventilated when you charge the battery.

- ▶ Open the engine hood ⇒ page 233.
- Remove the cover 1 by pressing on the arrow ⇒ fig. 201.
- ▶ Open the cover ② on the positive terminal.
- Connect the charger connectors according to the instructions to the jump start bolts. (Bolts under the cover = "positive", Bolts with hex head = "negative").
- Only now plug the mains lead for the charging equipment into the wall outlet and turn it on ⇒ .
- Make sure the charging rate is not over 30 amps/14.8 Volt.
- ► When the battery is fully charged: Turn the charging equipment off and remove the mains lead from the wall outlet.
- Now remove the clamps for the charging equipment.
- ► Close the cover ② on the positive terminal and re-install the cover ①.
- Close the hood ⇒ page 233.

A discharged battery can **freeze** at temperatures of only 32 °F (0 °C). Allow a frozen battery to thaw completely before attempting to charge it  $\Rightarrow \triangle$ . However, we recommend not using a thawed battery again because the battery casing can be cracked due to ice formation and can leak battery acid.

# Battery charging (Maximum charging rate of 30 amps/14.8 Volt)

When charging at *low* voltages (e.g. with a **trickle charger**), the battery cables do not have to be disconnected first. The battery caps should *not* be opened when charging a battery.

It is not necessary to remove the battery from the luggage compartment.

# Fast charging the battery (charging rate above 14.8 Volts)

For technical reasons do not use a battery charger that uses voltage greater than 14.8 Volts to charge your vehicle's battery.



# WARNING

Charging a battery can be dangerous.

- Always follow the operating instructions provided by the battery charger manufacturer when charging your battery.
- Never charge a frozen battery. It may explode because of gas trapped in the ice.
   Allow a frozen battery to thaw out first.
- Do not reuse batteries which were frozen. The battery housing may have cracked and weakened when the battery froze.
- Charge the battery in a well ventilated area. Keep away from open flame or electrical spark. Do not smoke. Hydrogen gas generated by the battery is explosive.
- To reduce the danger of explosion, never connect or disconnect charger cables while the charger is operating.
- Fast charging a battery is dangerous and should only be attempted by a competent technician with the proper equipment.
- Battery acid that may spill during charging should be washed off with a solution of warm water and baking soda to neutralize the acid.



### Note

Never use a fast charger as a booster to start the engine. This will seriously damage sensitive electronic components, such as control units, relays, radio, etc., as well as the battery charger.

# **Battery replacement**

The new battery must have the same specifications and dimensions as the original equipment battery.

Intelligent energy management in your vehicle is responsible for distributing the electrical energy throughout your vehicle ⇒ page 203. The intelligent energy management system will keep the engine battery charged better then vehicles without this system. To make sure the additional electrical energy is available once again after you have changed the battery, we recommend that you ▶

install batteries of the same type and manufacture only (the same as those installed at the time your vehicle was delivered). Specifications are listed on the battery housing. Your authorized dealer must code the battery in the energy management system to enable you to use the energy management functions correctly after replacing the battery.

If it is not possible to use a battery of this type, the new battery must have the same capacity, voltage (12 volts), amperage, construction and plug sealing.

When installing the battery, make sure the ignition and all electrical consumers are turned off.

# (!)

#### Note

- Make sure the ventilation hose on the side of the battery is connected, otherwise fumes or battery acid can leak out.
- Vehicles with the Start-Stop-System\* are equipped with a special cycle-proof AGM battery. Installing a different type of battery can cause problems in the vehicle electrical system. When replacing the vehicle battery, always install one with the same specifications as the original battery.

# **(**

### For the sake of the environment

Because of the problem of proper disposal of a battery, we recommend your authorized Audi dealer change the battery for you. Batteries contain sulfuric acid and lead and must always be disposed of properly in compliance with all environmental regulations. Disposing of vehicle batteries improperly is very dangerous to the environment.

# Windshield/headlight washer container



Fig. 202 Engine compartment: cover on the windshield and headlight\* washer fluid reservoir

The washer fluid container is marked with the symbol a on its cap  $\Rightarrow$  fig. 202,  $\Rightarrow$  page 235, fig. 196.

- ▶ Before you check anything in the engine compartment, always read and heed all WARNINGS ⇒ in Working in the engine compartment on page 233.
- Lift the filler cap tongue to add washer fluid. You can fill the container to the top.
- Press the cap back onto the filler neck after filling the container.

You can find the reservoir **capacity** in the table in ⇒ page 292.

Clean water should be used when filling up. If possible, use soft water to prevent scaling on the washer jets. Always add a glass cleaner solution (with frost protection in the winter).



#### Note

Do not mix engine coolant antifreeze or any other additives to fill up the windshield washer reservoir.

# Tires and wheels

# **Tires**

### **General notes**

Tires may be the least appreciated and most abused parts of a motor vehicle.

Tires may be the least appreciated and most abused parts of a motor vehicle. Tires are, however, one of the most important parts of a vehicle, particularly considering the comparatively small patch of rubber on each tire that assures that all-important contact between you, your vehicle and the road.

Maintaining the correct tire pressure, making sure that your vehicle and its tires do not have to carry more weight than they can safely handle, avoiding damage from road hazards and regularly inspecting tires for damage including cuts, slashes irregular wear and overall condition are the most important things that you can do to help avoid sudden tire failure including tread separation and blowouts.

# Avoiding damage

If you have to drive over a curb or similar obstacle, drive very slowly and as close as possible at a right angle to the curb.

Always keep chemicals including grease, oil, gasoline and brake fluid off the tires.

Inspect the tires regularly for damage (cuts, cracks or blisters, etc.). Remove any foreign bodies embedded in the treads.

## Storing tires

Mark tires when you remove them to indicate the direction of rotation. This ensures you to be able to mount them correctly when you reinstall them.

When removed, the wheels or tires should be stored in a cool, dry and preferably dark place.

Store tires in a vertical position if they are not mounted on rims, in a horizontal position if they are mounted on rims.

#### New tires

New tires have to be broken in  $\Rightarrow \triangle$ .

The tread depth of new tires may vary, according to the type and make of tire and the tread pattern.

### Hidden damage

Damage to tires and rims is often not readily visible. If you notice unusual vibration or the vehicle pulls to one side, this may indicate that one of the tires has been damaged. The tires must be checked immediately by an authorized Audi dealer or qualified workshop.

#### Unidirectional tires

A unidirectional tire can be identified by arrows on the sidewall, that point in the direction the tire is designed to rotate. You must follow the specified direction of rotation. This is necessary so that these tires can develop their optimum characteristics regarding grip, road noise, wear and hydroplaning resistance. For more information  $\Rightarrow$  page 278.



### WARNING

New tires or tires that are old, worn or damaged cannot provide maximum control and braking ability.

- New tires tend to be slippery and must also be broken-in. To reduce the risk of losing control, a collision and serious personal injuries, drive with special care for the first 350 miles (560 km).
- Driving with worn or damaged tires can lead to loss of control, sudden tire failure, including a blowout and sudden deflation, crashes and serious personal injuries. Have worn or damaged tires replaced immediately.
- Tires age even if they are not being used and can fail suddenly, especially at high speeds. Tires that are more than 6 years old can only be used in an emergency and then with special care and at low speed.

- Never mount used tires on your vehicle if you are not sure of their "previous history." Old used tires may have been damaged even though the damage cannot be seen that can lead to sudden tire failure and loss of vehicle control.
- If you notice unusual vibration or if the vehicle pulls to one side when driving, always stop as soon as it is safe to do so and check the wheels and tires for damage.



# Note

Please note that summer and winter tires are designed for the conditions that are

typical in those seasons. Audi recommends using winter tires during the winter months. Low temperatures significantly decrease the elasticity of summer tires, which affects traction and braking ability. If summer tires are used in very cold temperatures, cracks can form on the tread bars, resulting in permanent tire damage that can cause loud driving noise and unbalanced tires. Audi is not responsible for this type of damage.

# Glossary of tire and loading terminology

# Accessory weight

means the combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio, and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

### Aspect ratio

means the ratio of the height to the width of the tire in percent. Numbers of 55 or lower indicate a low sidewall for improved steering response and better overall handling on dry pavement.

#### Bead

means the part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim.

### Bead separation

means a breakdown of the bond between components in the bead.

#### Cord

means the strands forming the plies in the tire.

# Cold tire inflation pressure

means the tire pressure recommended by the vehicle manufacturer for a tire of a designated size that has not been driven for more than a couple of miles (kilometers) at low speeds in the three hour period before the tire pressure is measured or adjusted.

### Curb weight

means the weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, air conditioning and additional weight of optional equipment.

### Extra load tire

means a tire design to operate at higher loads and at higher inflation pressures than the corresponding standard tire. Extra load tires may be identified as "XL", "xl", "EXTRA LOAD", or "RF" on the sidewall.

# Gross Axle Weight Rating ("GAWR")

means the load-carrying capacity of a single axle system, measured at the tire-ground interfaces.

# Gross Vehicle Weight Rating ("GVWR")

means the maximum total loaded weight of the vehicle.



#### Groove

means the space between two adjacent tread ribs.

### Load rating (code)

means the maximum load that a tire is rated to carry for a given inflation pressure. You may not find this information on all tires because it is not required by law.

# Maximum load rating

means the load rating for a tire at the maximum permissible inflation pressure for that tire.

## Maximum loaded vehicle weight

means the sum of:

- (a) Curb weight
- (b) Accessory weight
- (c) Vehicle capacity weight, and
- (d) Production options weight

### Maximum (permissible) inflation pressure

means the maximum cold inflation pressure to which a tire may be inflated. Also called "maximum inflation pressure."

## Normal occupant weight

means 150 lbs. (68 kilograms) times the number of occupants seated in the vehicle up to the total seating capacity of your vehicle.

### Occupant distribution

means distribution of occupants in a vehicle.

### Outer diameter

means the overall diameter of an inflated new tire.

#### Overall width

means the linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs.

### Ply

means a layer of rubber-coated parallel cords.

# Production options weight

means the combined weight of those installed regular production options weighing over 5 lbs. (2.3 kg) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim.

### Radial ply tire

means a pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread.

### Recommended inflation pressure

see ⇒ page 249, Cold tire inflation pressure.

### Reinforced tire

means a tire design to operate at higher loads and at higher inflation pressures than the corresponding standard tire. Reinforced tires may be identified as "XL", "xl", "EXTRA LOAD", or "RF" on the sidewall.

#### Rim

means a metal support for a tire or a tire and tube assembly upon which the tire beads are seated.

## Rim diameter

means nominal diameter of the bead seat. If you change your wheel size, you will have to purchase new tires to match the new rim diameter.

### Rim size designation

means rim diameter and width.

### Rim width

means nominal distance between rim flanges.

### Sidewall

means that portion of a tire between the tread and bead.

#### Speed rating (letter code)

means the speed at which a tire is designed to be driven for extended periods of time. The ratings range from 93 mph (150 km/h) to 186 mph (298 km/h) ⇒ page 260. You may not find this information on all tires because it is not required by law.

#### Tire pressure monitoring system\*

means a system that detects when one or more of a vehicle's tires are underinflated and illuminates a low tire pressure warning telltale.

#### Tread

means that portion of a tire that comes into contact with the road.

#### Tread separation

means pulling away of the tread from the tire carcass.

#### Treadwear indicators (TWI)

means the projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread. See ⇒ page 258, Tread Wear Indicator (TWI) for more information on measuring tire wear.

#### **Uniform Tire Quality Grading**

is a tire information system developed by the United States National Highway Traffic Safety Administration (NHTSA) that is designed to help buyers make relative comparisons among tires. The UTQG is not a safety rating and not a guarantee that a tire will last for a prescribed number of miles (kilometers) or perform in a certain way. It simply gives tire buyers additional information to combine with other con-

siderations, such as price, brand loyalty and dealer recommendations. Under UTQG, tires are graded by the tire manufacturers in three areas: treadwear, traction, and temperature resistance. The UTQG information on the tires, molded into the sidewalls.

#### U.S. DOT Tire Identification Number (TIN)

This is the tire's "serial number". It begins with the letters "DOT" and indicates that the tire meets all federal standards. The next two numbers or letters indicate the plant where it was manufactured, and the last four numbers represent the week and year of manufacture. For example,

#### DOT ... 2212 ...

means that the tire was produced in the 22nd week of 2012. The other numbers are marketing codes that may or may not be used by the tire manufacturer. This information is used to contact consumers if a tire defect requires a recall.

#### Vehicle capacity weight

means the rated cargo and luggage load plus 150 lbs. (68 kilograms) times the vehicle's total seating capacity as listed on the label located on the driver's side B-pillar.

#### Vehicle maximum load on the tire

means that load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight and dividing by two.

#### Vehicle normal load on the tire

means that load on an individual tire that is determined by distributing to each axle its share of the curb weight, accessory weight, and normal occupant weight (distributed in accordance with table below ⇒ page 252) and dividing by two.

## Occupant loading and distribution for vehicle normal load for various designated seating capacities

| Designated seating capacity, number of occupants | Vehicle normal load, number of occupants | Occupant distribution in a nor-<br>mally loaded vehicle |
|--|--|---|
| 5  | 3  | 2 in front, 1 in back seat                              |

#### Cold tire inflation pressure

Tire pressure affects the overall handling, performance and safety of a vehicle.



Fig. 203 Tire pressure label: located on driver's side Bpillar

Tire pressure generally refers to the amount of air in a tire that it needs it to do its job and safely carry the combined load of the entire vehicle and its contents. Tire pressure is measured in kilopascals (kPa), the international measuring unit and in pounds per square inch (PSI). Tire pressure is based in part on the vehicle's design and load limit the greatest amount of weight that the vehicle can carry safely and the tire size. The proper tire pressure is frequently referred to as the "recommended cold tire inflation pressure." Air in the tires expands when the tire heats up because of internal friction when it flexes in use. The tire pressure is higher when the tire has warmed up than when it is "cold." It is the inflation pressure in a "cold" tire that counts. Therefore, you should never let air out of a warm tire to match "cold tire inflation pressure" recommendations. The tires would then be underinflated and could fail suddenly.

Maintaining proper tire pressure is one of the most important things you can do to help avoid sudden tire failure. Underinflated tires are a major cause of sudden tire failure. Keeping tires at the right pressure is also important for safe and responsive vehicle handling,

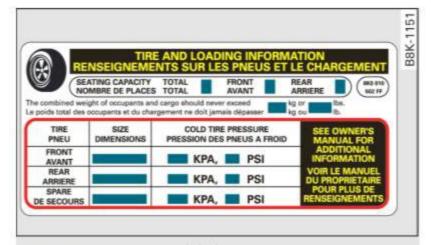


Fig. 204 Tire pressure label

traction, braking and load carrying. Tire pressures are particularly important when the vehicle is being driven at higher speeds, and then especially when heavily loaded even within the permissible load-carrying capacities approved for your vehicle.

The recommended tire pressures for your Audi depend on the kind of tires on your vehicle and the number of passengers and/or amount of luggage you will be transporting.

The tire pressure label is located on the driver's side B-pillar. The tire pressure label lists the recommended cold tire inflation pressures for the vehicle at its maximum capacity weight and tires that were on your vehicle at the time it was manufactured.

If you wish to improve comfort when operating the vehicle at normal load (up to 3 occupants), you can adjust tire pressures to those specified for normal vehicle load. Before operating the vehicle at maximum load, you must increase the tire pressures to those specified for maximum vehicle load 

...

Bear in mind that the tire pressure monitoring system\* can only monitor the tire pressures

you have stored. The system does not recognize the load condition of your vehicle.

The effectiveness of the tire pressure monitoring system\* will be impaired if you store normal load pressures but then operate the vehicle at its maximum load  $\Rightarrow \triangle$ .

See the illustration  $\Rightarrow$  fig. 203 for the location of the label on driver's side B-pillar (color of the actual label and exact location on the vehicle will vary slightly).

Note that the following table is accurate at the time of going to press and is subject to change. In the event of discrepancies, the tire pressure label located on the driver's side B-pillar always takes precedence.

The table below lists the recommended cold tire inflation pressures for the Audi model covered by your Owner's Literature at the vehicle's capacity weight and the tire sizes installed on the respective models as original equipment, or as a factory option.

| Model/  | Tire designation                    | Tire pressure         |     |     |                     |     |     |     |     |
|---|-------------------------------------|-----------------------|-----|-----|---------------------|-----|-----|-----|-----|
| Engine  |                                     | normal load condition |     |     | full load condition |     |     |     |     |
|   |                                     | fro                   | nt  | re  | ar                  | fro | nt  | re  | ar  |
|   |                                     | PSI                   | kPA | PSI | kPA                 | PSI | kPA | PSI | kPA |
| Q5: 2.0 liter 4-cylinder and Q5: 3.0 liter 6-cylinder | 235/60 R18 103H<br>All Season       | 29                    | 200 | 29  | 200                 | 32  | 220 | 32  | 220 |
|   | 235/55 R19 101H<br>All Season       | 30                    | 210 | 30  | 210                 | 33  | 230 | 33  | 230 |
|   | 235/55 R19 101W<br>High Performance | 29                    | 200 | 29  | 200                 | 33  | 230 | 33  | 230 |
|   | 255/45 R20 101W<br>High Performance | 29                    | 200 | 29  | 200                 | 33  | 230 | 33  | 230 |
|   | 255/40 R21 102Y<br>High Performance | 35                    | 240 | 36  | 250                 | 36  | 250 | 39  | 270 |

XL = reinforced or extra load tire. It may also appear as xl, EXTRA LOAD, or RF on the tire sidewall.

The correct tire pressure for the *spare wheel* is located on a label on the driver's side B-pillar.

Because technical changes may be made to vehicle equipment during the model year, always compare the tire size designation on the tire pressure label on your vehicle with the tires on your vehicle. Make sure that the tire size information on the vehicle label is the same as the size of the tires on the vehicle. This is especially important if the vehicle belongs to someone else or you bought the vehicle with different rims/tires or you bought the vehicle as a previously owned vehicle.

Remember, your safety and that of your passengers also depends on making sure that load limits are not exceeded. Vehicle load includes everybody and everything in and on the vehicle. These load limits are technically referred to as the vehicle's Gross Vehicle Weight Rating ("GVWR"). The Gross Axle Weight Rating ("GAWR") is the maximum load that can be applied at each of the vehicle's two axles. The Gross Vehicle Weight Rating and the Gross Axle Weight Rating are listed on the safety compliance sticker label located on the driver's side B-pillar. The tire pressure label on your Audi lists the maximum combined weight of all of the occupants and luggage or other cargo that the vehicle can carry. For the location of the tire pressure label ⇒ fig. 203. ▶

## $\Lambda$

#### WARNING

Overloading a vehicle can cause loss of vehicle control, a crash or other accident, serious personal injury, and even death.

- Carrying more weight than your vehicle was designed to carry will prevent the vehicle from handling properly and increase the risk of a loss of vehicle control.
- The brakes on a vehicle that has been overloaded may not be able to stop the vehicle within a safe distance.
- Tires on a vehicle that has been overloaded ed can fail suddenly causing loss of control and a crash.
- Always make sure that the total load being transported including the weight of a trailer hitch and the tongue weight of a loaded trailer does not make the vehicle heavier than the vehicle's Gross Vehicle Weight Rating.

## A

#### WARNING

- Incorrect tire pressures and/or underinflation can lead to a serious or fatal accident.
- Incorrect tire pressures and/or underinflation cause increased tire wear and can affect the handling of the vehicle.
- Incorrect tire pressures and/or underinflation can also lead to sudden tire failure, including a blowout and sudden deflation, causing loss of vehicle control.

#### Checking tire pressure

The correct tire pressure for the tires originally installed on your vehicle is listed on the tire pressure label located on driver's side B-pillar.

The recommended tire pressures are on the tire pressure label and in the table ⇒ page 252, Cold tire inflation pressure. This means that the pressure must be checked and adjusted when the tire has not been driven for more than a couple of miles (kilometers) at low speeds during the previous three hours.

Air in the tires expands when the tire heats up as a result of internal friction as it flexes in use. The tire pressure is higher when the tire has warmed up than when it is "cold."

It is the inflation pressure in a "cold" tire that counts. Therefore, you should never let air out of a warm tire to match "Cold tire inflation pressure" recommendations ⇒ page 252. The tires would then be underinflated and could fail suddenly.

The tire pressure label on your Audi lists the recommended cold tire inflation pressures at maximum capacity for the new, original equipment tires that were on your vehicle at the time it was manufactured. For the location of the label ⇒ page 252, fig. 203.

Most tires lose air naturally over time. They can also lose some air if you drive over a pothole or hit a curb while parking. It is usually not possible to see whether the radial tires used today are underinflated just by looking at them.

Therefore, be sure to check tire pressures at least once a month and always before going on a long trip. Make sure to take the number of people and the amount of luggage into account when adjusting tire pressure for a trip – even one that you would not consider to be "long." See ⇒ page 256, Tires and vehicle load limits for more important information.

Always use an accurate tire pressure gauge when checking and adjusting inflation pressures. Check all of the tires and be sure not to forget the spare tire. If the pressure in any tire is too high when the tire is "cold," let air out of the tire slowly with the edge of the tire gauge and keep checking the pressure until you reach the pressure that is correct for the load (passengers and luggage) and kind of driving you plan to do.

If the pressure in any tire is too low, note the difference between the pressure in the cold tire and the pressure you need and add the air that you need to reach the correct pressure for the vehicle load (passengers and luggage) for the tires on your vehicle as listed on the on

your vehicle and in this manual and the kind of driving you plan to do.

#### Never exceed the maximum inflation pressure listed on the tire sidewall for any reason.

Remember that the vehicle manufacturer, not the tire manufacturer, determines the correct tire pressure for the tires on your vehicle.

It is important to check the tire pressure when the tires are cold.

- Read the required tire pressure from the tire pressure label. The tire pressure label is located on the driver's side B-pillar. The tire pressure label lists the recommended cold tire inflation pressures for the vehicle at its maximum capacity weight and the tires that were on your vehicle at the time it was manufactured. For recommended tire pressures for normal load conditions, please see chapter ⇒ page 252.
- Turn the valve stem cap counter-clockwise to remove it from the tire valve.
- Place the air pressure gauge on the valve.
- The tire pressures should only be checked and adjusted when the tires are cold. The slightly raised pressures of warm tires must not be reduced.
- Adjust the tire pressure to the load you are carrying.
- Reinstall the valve stem cap on the valve.

#### When should I check the tire pressure?

The correct tire pressure is especially important at high speeds. The pressure should therefore be checked at least once a month and always before starting a journey. Do not forget to check the tire pressure for the spare wheel.

#### When should I adjust the tire pressures?

Adjust the tire pressure to the load you are carrying. After changing a wheel **or** replacing wheels you have to adjust the tire pressures on all wheels. In addition, you must then store the new tire pressures in the tire pressure monitoring system\*  $\Rightarrow$  page 268.

## $\Lambda$

#### WARNING

Incorrect tire pressures and/or underinflation can lead sudden tire failure, loss of control, collision, serious personal injury or even death.

- When the warning symbol appears in the instrument cluster, stop and inspect the tires.
- Incorrect tire pressure and/or underinflation can cause increased tire wear and can affect the handling of the vehicle and stopping ability.
- Incorrect tire pressures and/or underinflation can also lead to sudden tire failure, including a blowout and sudden deflation, causing loss of vehicle control.
- The driver is responsible for the correct tire pressures for all tires on the vehicle.
   The applicable pressure values are located on a sticker on the driver's side B-pillar.
- Only when all tires on the vehicle are filled to the correct pressure, the tire pressure monitoring system\* can work correctly.
- The use of incorrect tire pressure values
   can lead to accidents or other damage.
   Therefore it is essential that the driver
   observe the specified tire pressure values
   for the tires and the correct pressures for
   the function of the tire pressure monitor ing system\*.
- Always inflate tires to the recommended and correct tire pressure before driving off.
- Driving with underinflated tires bend more, letting them get too hot resulting in tread separation, sudden tire failure and loss of control.
- Excessive speed and/overloading can cause heat build-up, sudden tire failure and loss of control.
- If the tire pressure is too low or too high, the tires will wear prematurely and the vehicle will not handle well.

 If the tire is not flat and you do not have to change a wheel immediately, drive at reduced speed to the nearest service station to check the tire pressure and add air as required.



#### Note

Driving without valve stem caps can cause damage to the tire valves. To prevent this, always make sure that factory installed valve stem caps on all wheels are securely mounted on the valve.



#### For the sake of the environment

Underinflated tires will also increase the fuel consumption.

### Tires and vehicle load limits

There are limits to the amount of load or weight that any vehicle and any tire can carry. A vehicle that is overloaded will not handle well and is more difficult to stop. Overloading can not only lead to loss of vehicle control, but can also damage important parts of the vehicle and can lead to sudden tire failure, including a blowout and sudden deflation that can cause the vehicle to crash.

Your safety and that of your passengers also depends on making sure that load limits are not exceeded. Vehicle load includes everybody and everything in and on the vehicle. These load limits are technically referred to as the vehicle's **Gross Vehicle Weight Rating** ("GVWR").

The "GVWR" includes the weight of the basic vehicle, all factory installed accessories, a full tank of fuel, oil, coolant and other fluids plus maximum load. The maximum load includes the number of passengers that the vehicle is intended to carry ("seating capacity") with an assumed weight of 150 lbs (68 kg) for each passenger at a designated seating position and the total weight of any luggage in the vehicle. If you tow a trailer, the weight of the trailer hitch and the tongue weight of the

loaded trailer must be included as part of the vehicle load.

The **Gross Axle Weight Rating** ("GAWR") is the maximum load that can be applied at each of the vehicle's two axles.

The Gross Vehicle Weight Rating and the Gross Axle Weight Rating are listed on the safety compliance sticker label located on the driver's side B-pillar. Your Audi has 5 seating positions, 2 in the front and 3 in the rear for total seating capacity of 5. Each seating position has a seat belt ⇒ page 149, Safety belts.

The fact that there is an upper limit to your vehicle's Gross Vehicle Weight Rating means that the total weight of whatever is being carried in the vehicle (including the weight of a trailer hitch and the tongue weight of the loaded trailer) is limited. The more passengers in the vehicle or passengers who are heavier than the standard weights assumed mean that less weight can be carried as luggage.

The tire pressure label on your Audi also lists the maximum combined weight of all of the occupants and luggage or other cargo that the vehicle can carry. For the location of the label ⇒ page 252, fig. 203.



#### WARNING

Overloading a vehicle can cause loss of vehicle control, a crash or other accident, serious personal injury, and even death.

- Carrying more weight than your vehicle was designed to carry will prevent the vehicle from handling properly and increase the risk of the loss of vehicle control.
- The brakes on a vehicle that has been overloaded may not be able to stop the vehicle within a safe distance.
- Tires on a vehicle that has been overloaded ed can fail suddenly, including a blowout and sudden deflation, causing loss of control and a crash.

Always make sure that the total load being transported – including the weight of a trailer hitch and the tongue weight of a loaded trailer – does not make the vehicle heavier than the vehicle's Gross Vehicle Weight Rating.

#### Determining correct load limit

Use the example below to calculate the total weight of the passengers and luggage or other things that you plan to transport so that you can make sure that your vehicle will not be overloaded.

## Steps for Determining Correct Load Limit

- Locate the statement "THE COMBINED WEIGHT OF OC-CUPANTS AND CARGO SHOULD NEVER EXCEED XXX KG OR XXX LBS" on your vehicle's placard (tire inflation pressure label) ⇒ page 252, fig. 203.
- Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- Subtract the combined weight of the driver and passengers from "XXX" kilograms or "XXX" pounds

- shown on the sticker ⇒ page 252, fig. 203.
- 4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1400 lbs. and there will be five 150 lbs. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1400-750 (5 x 150) = 650 lbs.)
- 5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
- 6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.
- ► Check the tire sidewall (⇒ page 259, fig. 207) to determine the designated load rating for a specific tire.

#### Tire service life

The service life of tires depends on a lot of different things including proper installation and balancing, correct tire pressure and driving style.

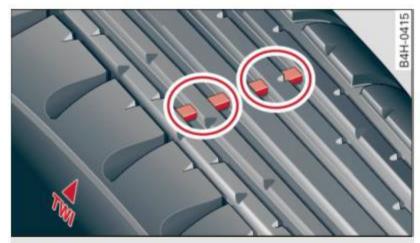


Fig. 205 Tire tread: tread wear indicators (TWI)

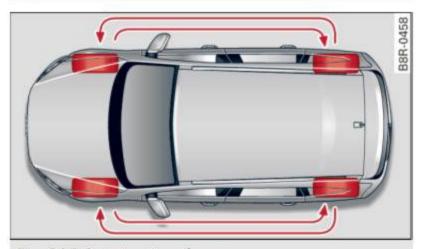


Fig. 206 Rotating tires for more even wear

#### Tread Wear Indicator (TWI)

The original tires on your vehicle have 1/16 inch (1.6 mm) high "wear indicators" ⇒ fig. 205 running across the tread. Depending on the make, there will be six to eight of them evenly placed around the tire. Marks on the tire sidewall (for example "TWI" or other symbols) indicate the positions of the tread wear indicators. Worn tires must be replaced. Different figures may apply in other countries ⇒ ⚠.

#### Tire pressure

Incorrect tire pressure causes premature wear and can cause sudden tire blow-out. For this reason, tire pressure must be checked at least once a month ⇒ page 254.

#### **Driving style**

Driving fast around curves, heavy acceleration and hard braking increase tire wear.

#### Rotating tires for more even wear

For all four tires on your vehicle to have the same service life, we recommend that the front and rear tires are rotated according to the tire manufacturer's suggested tire rotation intervals. Please remember the following:

- Tire rotation intervals may differ from the vehicle service intervals outlined in your Maintenance and Warranty Booklet.
- The longer one tire is used in one location on the vehicle, the more it wears at certain points; therefore, we recommend that you follow the tire manufacturer's suggested tire rotation intervals.
- Vehicles with front-wheel drive experience more tread wear on the front wheels compared to all-wheel drive (quattro<sup>®</sup>).
- Please rotate tires as shown ⇒ fig. 206.
- Extra care must be taken when rotating direction-specific tires ⇒ page 278.

#### Wheel balancing

The wheels on new vehicles are balanced. However, various situations during everyday driving can cause them to become unbalanced, resulting in vibrations you can usually feel through the steering wheel.

Unbalanced wheels must be rebalanced to avoid excessive wear on steering, suspension and tires. A wheel must also be rebalanced when a new tire is installed.

#### Incorrect wheel alignment

Incorrect wheel alignment can cause excessive tire wear, impairing the safety of the vehicle. If tires show excessive wear, have the wheel alignment checked by an authorized Audi dealer or qualified workshop.

#### All-wheel drive

Vehicles with quattro<sup>®</sup> must always have tires of the same size, construction and tread type. For details see ⇒ page 202.

## Λ

#### WARNING

Sudden tire failure can lead to loss of control, a crash and serious personal injury!

- Never drive a vehicle when the tread on any tire is worn down to the wear indicators.
- Worn tires are a safety hazard, they do not grip well on wet roads and increase your risk of "hydroplaning" and loss of control.
- Always keep chemicals that can cause tire damage, such as grease, oil, gasoline and brake fluid away from tires.
- Tires age even if they are not being used and can fail suddenly, especially at high speeds. Tires that are more than 6 years old can only be used in an emergency and then with special care and at lower speeds.
- Never mount used tires on your vehicle if you are not sure of their "previous history." Old used tires may have been damaged even though the damage cannot be seen that can lead to sudden tire failure and loss of vehicle control.

### New tires and replacing tires and wheels

New tires and wheels have to be broken in.

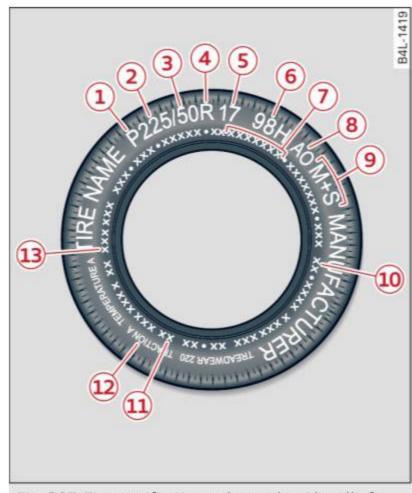


Fig. 207 Tire specification codes on the sidewall of a tire

| No. | Description                                |
|-----|--|
| 1   | Passenger car tire (where applicable)      |
| 2   | Nominal width of tire in millimeters       |
| 3   | Ratio of height to width (aspect ratio)    |
| 4   | Radial                                     |
| (5) | Rim diameter code                          |
| 6   | Load index and speed rating                |
| 7   | U.S. DOT tire identification number        |
| 8   | Audi Original tire                         |
| 9   | Sever snow conditions                      |
| 10  | Tire ply composition and materials used    |
| 11  | Maximum load rating                        |
| 12  | Treadwear, traction and temperature grades |
| 13  | Maximum permissible inflation pressure     |

The tires and rims are essential parts of the vehicle's design. The tires and rims approved by Audi are specially matched to the characteristics of the vehicle and can make a major



contribution to good road holding and safe handling when in good condition and properly inflated  $\Rightarrow \Lambda$ .

We recommend that all work on tires and wheels be performed by an authorized Audi dealer. They are familiar with recommended procedures and have the necessary special tools and spare parts as well as the proper facilities for disposing of the old tires.

Authorized Audi dealers have the necessary information about technical requirements for installing or changing tires and rims.

#### Replacing tires and wheels

Tires should be replaced at least in pairs and not individually (for example both front tires or both rear tires together).

Be sure to read and heed the information to the tire pressure monitoring system\* ⇒ page 266.

Always buy replacement radial tires that have the same specifications as the tires approved for your vehicle by Audi. Replacement tires must always have the same load rating specification as the original equipment or approved optional tires listed in the table ⇒ page 252.

Audi-approved specification tires are specially matched to your vehicle and its load limits, and can contribute to the important roadholding, driving characteristics, and safety of the vehicle. The table (⇒ page 252) lists specifications of the tires approved for the Audi models covered by your Owner's Literature.

The tire pressure label located on the driver's side B-pillar ⇒ page 252, fig. 204 lists the specifications of the original equipment tires installed on your vehicle at the time it was manufactured.

Federal law requires tire manufacturers to place standardized information on the sidewall of all tires ⇒ fig. 207. This information identifies and describes the fundamental characteristics, the quality grade of the tire and also provides a tire identification number

for safety standard certification and in case of a recall.

### Tire specifications

Knowledge of tire specifications makes it easier to choose the correct tires. Radial tires have the tire specifications marked on the sidewall, for example:

#### P235 / 60 R 18 103 H

This contains the following information:

- P Indicates the tire is for passenger cars (where applicable)
- 235 Nominal tire width in mm of the tire from sidewall edge to sidewall edge. In general, the larger the number, the wider the tire
- 60 Height/width ratio in percent (aspect ratio)
- R Tire construction: Radial
- 18 Rim diameter code (in inches)
- 103 Load rating code
- H Speed rating letter code
- XL (or "xl", "EXTRA LOAD", or "RF" Indicates that the tire is a "Reinforced" or an "Extra Load" tire
- M+S (or "M/S") Indicates that the tire has some mud and snow capability

The tires could also have the information of direction of rotation  $\Rightarrow$  page 248.

#### Tire manufacturing date

The manufacturing date is also indicated on the tire sidewall (possibly only on the *inner* side of the wheel):

"DOT ... 2212..." means, for example, that the tire was produced in the 22nd week of 2012.

#### Speed rating (letter code)

The speed rating letter code on the wheels indicates the maximum permissible road speeds  $\Rightarrow \land$  in Winter tires on page 264.

- P up to 93 mph (150 km/h)
- Q up to 99 mph (158 km/h)
- R up to 106 mph (170 km/h)
- S up to 110 mph (180 km/h)

up to 118 mph (190 km/h) T

U up to 124 mph (200 km/h)

up to 130 mph (210 km/h) Н

up to 149 mph  $(240 \text{ km/h})^{1)}$ V

over 149 mph (240 km/h)1) Z

W up to 168 mph  $(270 \text{ km/h})^{1)}$ 

up to 186 mph (298 km/h)1) Y

Your vehicle is normally factory equipped with tires, which possess excellent driving characteristics and give your Audi optimum driving comfort. An electronic speed limiter ⇒ page 27 will normally prevent your vehicle from going faster than the tire speed rating  $\Rightarrow \Lambda$ .

#### U.S. DOT Tire Identification Number (TIN) and tire manufacture date

This is the tire's "serial number". It begins with the letters "DOT" and indicates that the tire meets all federal standards. The next two numbers or letters indicate the plant where it was manufactured, and the last four numbers represent the week and year of manufacture. For example, the numbers 2212 mean that the tire was produced in the 22nd week of 2012. The other numbers are marketing codes that may or may not be used by the tire manufacturer. This information is used to contact consumers if a tire defect requires a recall.

#### Audi Original tire

Tires with the identification "AO" or "RO" have been specially matched with your Audi. We recommend using only these tires because they meet the highest standards regarding safety and driving characteristics when used correctly. Your authorized Audi dealer will gladly provide you with more information.

#### Tire ply composition and materials used

The number of plies indicates the number of layers of rubber-coated fabric in the tire. In general, the greater the number of plies, the turers also must indicate the materials in the tire, which include steel, nylon, polyester, and others. Maximum Load Rating

more weight a tire can support. Tire manufac-

This number indicates the maximum load in kilograms and pounds that can be carried by the tire.

#### Tire quality grading for treadwear, traction, and temperature resistance

Tread wear, traction and temperature grades ⇒ page 262.

#### Maximum Permissible Inflation Pressure

This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.



#### WARNING

- Using incorrect or unmatched tires and / or wheels or improper tire and wheel combinations can lead to loss of control, collision and serious personal injury.
- Always use tires, rims and wheel bolts that meet the specifications of original factory-installed tires or other combinations that have been specifically approved by the vehicle manufacturer.
- Tires age even if they are not being used and can fail suddenly, especially at high speeds. Tires that are more than 6 years old can only be used in an emergency and then with special care and at lower speeds.
- Never mount used tires on your vehicle if you are not sure of their "previous history." Old used tires may have been damaged even though the damage cannot be seen that can lead to sudden tire failure and loss of vehicle control.

<sup>1)</sup> For tires with a maximum speed capability over 149 mph (240 km/h), tire manufacturers sometimes use the letters "ZR."

- All four wheels must be fitted with radial tires of the same type, size (rolling circumference) and the same tread pattern.
   Driving with different tires reduces vehicle handling and can lead to a loss of control.
- If the spare tire is not the same as the tires that are mounted on the vehicle for example with winter tires - only use the spare tire for a short period of time and drive with extra care. Refit the normal road wheel as soon as safely possible.
- Never drive faster than the maximum speed for which the tires on your vehicle are rated because tires that are driven faster than their rated speed can fail suddenly.
- Overloading tires cause heat build-up, sudden tire failure, including a blowout and sudden deflation and loss of control.
- Temperature grades apply to tires that are properly inflated and not over or underinflated.
- For technical reasons it is not always possible to use wheels from other vehicles – in some cases not even wheels from the same vehicle model.
- If you install wheel trim discs on the vehicle wheels, make sure that the air flow to the brakes is not blocked. Reduced airflow to the brakes can them to overheat, increasing stopping distances and causing a collision.
- Run flat tires may only be used on vehicles that were equipped with them at the factory. The vehicle must have a chassis designed for run flat tires. Incorrect use of run flat tires can lead to vehicle damage or accidents. Check with an authorized Audi dealer or tire specialist to see if your vehicle can be equipped with run flat tires. If run flat tires are used, they must be installed on all four wheels. Mixing tire types is not permitted.

## (!)

#### Note

- For technical reasons, it is not generally possible to use the wheel rims from other vehicles. This can hold true for wheels of the same vehicle type.
- If the spare tire is different from the tires that you have mounted on your vehicle (for example winter tires or wide profile tires), then use the spare tire for a short period of time only and drive with extra care. Replace the flat tire with the tire matching the others on your vehicle as soon as possible.
- Never drive without the valve stem cap.
   The valves could get damaged.



#### For the sake of the environment

Dispose of old tires in accordance with the local requirements.

#### Uniform tire quality grading

- Tread wear
- Traction AA A B C
- Temperature A B C

Quality grades can be found where applicable on the tire side wall between tread shoulder and maximum section width ⇒ page 259, fig. 207.

**For example:** Tread wear **200**, Traction **AA**, Temperature **A**.

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

#### Tread wear

The *tread wear* grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and one half (1 1/2) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

#### Traction

The *traction* grades, from highest to lowest, are AA, A, B and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance ⇒ ⚠.

#### Temperature

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure  $\Rightarrow \triangle$ .

The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.



#### WARNING

The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning or peak traction characteristics.



#### WARNING

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either

separately or in combination, can cause heat buildup and possible tire failure.

#### Winter tires

Winter tires can improve vehicle handling on snow and ice. At temperatures below 45 °F (7 °C) we recommend changing to winter tires.

In some heavy snow areas, local governments may require true winter or "snow" tires, those with very deeply cut tread. These tires should only be used in pairs and be installed on all four wheels. Make sure you purchase snow tires that are the same size and construction type as the other tires on your vehicle.

Your vehicle is equipped with all-wheel drive, this will improve traction during winter driving, even with the standard tires. However, we strongly recommend that you always equip all four wheels on your vehicle with correctly fitted winter tires or all-season tires, when winter road conditions are expected. This also improves the vehicle's braking performance and reduces stopping distances.

Summer tires provide less grip on ice and snow.

Winter tires (snow tires) must always be fitted on all four wheels.

Ask your authorized Audi dealer or qualified workshop for permitted winter tire sizes. Use only radial winter tires.

Winter tires lose their effectiveness when the tread is worn down to a depth of 0.157 inch (4 mm).

Only drive with winter tires under winter conditions. Summer tires handle better when there is no snow or ice on the roads and the temperature is above 45 °F (7 °C).

If you have a flat tire, see notes on spare wheel  $\Rightarrow$  page 259.

Please always remember that winter tires may have a lower speed rating than the tires originally installed on your vehicle at the time it



was manufactured. Please see ⇒ page 260, Speed rating (letter code) for a listing of the speed rating letter codes and the maximum speed at which the tires can be driven.

The speed rating letter code ( $\Rightarrow$  page 251) is on the side wall of the tire  $\Rightarrow$  page 259.



#### WARNING

Winter tires have maximum speed limits that may be lower than your vehicle's maximum speed. Always know the maximum speed before driving off. Never drive faster than the speed permitted for your specific winter tires. This will cause damage to the tires leading to an accident and serious personal injury to you and your passengers.



#### WARNING

Driving faster than the maximum speed for which the winter tires on your vehicle were designed can cause tire failure including a blowout and sudden deflation, loss of control, crashes and serious personal injuries. Have worn or damaged tires replaced immediately.

- Winter tires have maximum speed rating that may be lower than your vehicle's maximum speed.
- Never drive faster than the speed for which the winter or other tires installed on your vehicle are rated.

## A

#### /! WARNING

Always adjust your driving to the road and traffic conditions. Never let the good acceleration of the winter tires and all-wheel drive tempt you into taking extra risks. Always remember:

- When braking, an all-wheel drive vehicle handles in the same way as a front drive vehicle.
- Drive carefully and reduce your speed on icy and slippery roads, even winter tires cannot help under black ice conditions.



#### For the sake of the environment

Use summer tires when weather conditions permit. They are quieter, do not wear as quickly and reduce fuel consumption.

#### **Snow chains**

Snow chains may be fitted only to the rear wheels, and only to certain tire sizes. Ask your authorized Audi dealer on which tire sizes snow chains can be used.

The snow chains must have low-profile links and must not be thicker than 0.53 inch (13.5 mm), including the lock.

Remove wheel center covers and trim discs before putting snow chains on your vehicle 

□. For safety reasons cover caps must then be fitted over the wheel bolts. These are available from authorized Audi dealers.



#### !\ WARNING

Using the wrong snow chains for your vehicle or installing them incorrectly can increase the risk of loss of control leading to serious personal injury.

- Snow chains are available in different sizes. Always make sure to follow the instructions provided by the snow chain manufacturer.
- When driving with snow chains never drive faster than the speed permitted for your specific snow chains.
- Always observe local regulations.

## (!)

#### Note

- Remove snow chains before driving on roads not covered with snow to avoid damaging tires and wearing the snow chains down unnecessarily.
- Snow chains, which come into direct contact with the wheel rim, can scratch or damage it. Therefore, make sure that the snow chains are suitably covered. Check the position of the snow chains after

driving a few yards and correct if necessary. Follow the instructions from the snow chain manufacturer when doing so.



#### **Tips**

Where snow chains are mandatory on certain roads, this normally also applies to vehicles with all-wheel drive.

#### Wheel bolts

Wheel bolts must always be tightened to the correct torque.

The design of wheel bolts is matched to the factory installed rims. If different rims are fitted, the correct wheel bolts with the right length and correctly shaped bolt heads must be used. This ensures that wheels are fitted securely and that the brake system functions correctly.

In certain circumstances, you may not use wheel bolts from a different vehicle – even if it is the same model ⇒ page 297.



#### WARNING

Improperly tightened or maintained wheel bolts can become loose causing loss of control, a collision and serious personal injury.

- Always keep the wheel bolts and the threads in the wheel hubs clean so the wheel bolts can turn easily and be properly tightened.
- Never grease or oil the wheel bolts and the threads in the wheel hubs. They can become loose while driving if greased or oiled, even if tightened to the specified torque.
- Only use wheel bolts that belong to the rim being installed.
- Never use different wheels bolts on your vehicle.
- Always maintain the correct tightening torque for the wheel bolts to reduce the risk of a wheel loss. If the tightening torque of the wheel bolts is too low, they can loosen and come out when the vehi-

cle is moving. If the tightening torque is too high, the wheel bolts and threads can be damaged and the wheel can become loose.



#### Note

The specified torque for the wheel bolts is 105 ft lb (140 Nm) with a tolerance of ± 7,4 ft lb (± 10 Nm). Torque wheel bolts diagonally. After changing a wheel, the torque must be checked as soon as possible with a torque wrench – preferably by an authorized Audi dealer or qualified workshop.

#### Low aspect ratio tires

Your Audi is factory-equipped with low aspect ratio tires. These tires have been thoroughly tested and been selected specifically for your model for their superb performance, road feel and handling under a variety of driving conditions. Ask your authorized Audi dealer for more details.

The low aspect ratio of these tires is indicated by a numeral of **55** or less in the tire's size designation. The numeral represents the ratio of the tire's sidewall height in relation to its tread width expressed in percentage. Conventional tires have a height/width ratio of 60 or more.

The performance of low-aspect-ratio tires is particularly sensitive to improper inflation pressure. It is therefore important that low aspect ratio tires are inflated to the specified pressure and that the inflation pressure is regularly checked and maintained. Tire pressures should be checked at least once a month and always before a long trip 

⇒ page 254, Checking tire pressure.

## What you can do to avoid tire and rim damage

Low aspect ratio tires can be damaged more easily by impact with potholes, curbs, gullies or ridges on the road, particularly if the tire is underinflated.



In order to minimize the occurrence of impact damage to the tires of your vehicle, we recommend that you observe the following precautions:

- Always maintain recommended inflation pressures. Check your tire pressure every 2,000 miles (3,000 km) and add air if necessary.
- Drive carefully on roads with potholes, deep gullies or ridges. The impact from driving through or over such obstacles can damage your tires. Impact with a curb may also cause damage to your tires.
- After any impact, immediately inspect your tires or have them inspected by the nearest authorized Audi dealer. Replace a damaged tire as soon as possible.
- Inspect your tires every 2,000 miles (3,000 km) for damage and wear. Damage is not always easy to see. Damage can lead to loss of air and underinflation, which could eventually cause tire failure. If you believe that a tire may have been damaged, replace the tire as soon as possible.
- These tires may wear more quickly than others.
- Please also remember that, while these tires deliver responsive handling, they may ride less comfortably and make more noise than other choices.

## Reduced performance in winter/cold season conditions

All tires are designed for certain purposes. The low aspect ratio, ultra high performance tires originally installed on your vehicle are intended for maximum dry and wet road performance and handling. They are not suitable for cold, snowy or icy weather conditions. If you drive under those circumstances, you should equip your vehicle with all-season or winter tires, which offer better traction under those conditions. We suggest you use the recommended snow or all-season tires specified for your vehicle, or their equivalent.

Refer to ⇒ page 263 for more detailed information regarding winter tires.

## Tire pressure monitoring system

#### (!) General notes

Applies to vehicles: with tire pressure monitoring system

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires).

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

#### Tire pressure indicator appears

Applies to vehicles: with tire pressure monitoring system

The tire pressure indicator in the instrument cluster informs you if the tire pressure is too low or if there is a system malfunction.

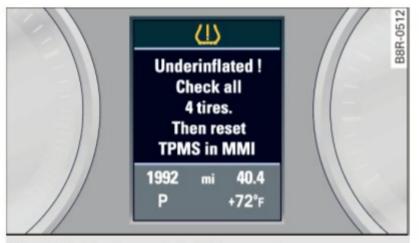


Fig. 208 Display: underinflation warning

Using the ABS sensors, the tire pressure monitoring system compares the tire tread circumference and vibration characteristics of the individual tires. If the pressure decreases in one or more tires, this is indicated in the instrument cluster with a warning symbol and a message  $\Rightarrow$  fig. 208. The driver message in the display goes out after 5 seconds. The driver message can be displayed again by pressing the SET button. If only one tire is affected, the display will indicate its position.

The tire pressure monitoring system must be reset via radio or MMI\* each time the pressures are adjusted (e. g. when switching between partial and full load pressure) or after changing or replacing a tire on your vehicle ⇒ page 268. The TPMS indicator only monitors the tire pressure that you have previously

stored. You can find the recommended tire pressures for your vehicle on the label on driver's side B-pillar ⇒ page 252.

Tire tread circumference and vibration characteristics can change and cause a tire pressure warning if:

- the tire pressure in one or more tires is too low.
- the tire has structural damage,
- the tire pressure was changed, wheels rotated or replaced but the TPMS was not reset
   ⇒ page 268.

#### Warning symbols

Loss of pressure in at least one tire 

↑.

Check the tire or tires and replace or repair if necessary. The indicator light in the instrument cluster also illuminates 

page 14.

Check/correct the pressures of all four tires and reset TPMS via radio or MMI\*.

TPMS (Tire Pressure Monitoring System) Tire pressure: System malfunction!.

If **TPMS** appears after switching the ignition on or while driving and the indicator light in the instrument cluster blinks for approximately one minute and then stays on, there is a system malfunction.

Attempt to store the correct tire pressure  $\Rightarrow$  page 268. If the indicator light does not turn off or if it turns on shortly thereafter, immediately drive your vehicle to an authorized Audi dealer or authorized repair facility to have the malfunction corrected.

## $\Lambda$

#### WARNING

— If the tire pressure indicator appears in the instrument cluster display, one or more of your tires is significantly underinflated. Reduce your speed immediately and avoid any hard steering or braking maneuvers. Stop as soon as possible and check the tires and their pressures. Inflate the tire pressure to the proper pressure as indicated on the vehicle's tire pressure label ⇒ page 252. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also is likely to impair the vehicle's handling and stopping ability.

- The driver is responsible for maintaining the correct tire pressures. You must check the tire pressures regularly.
- Under certain conditions (such as a sporty driving style, winter conditions or unpaved roads), the pressure monitor indicator may be delayed.
- Ask your authorized Audi dealer if runflat tires may be used on your vehicle.
   Your vehicle registration becomes invalid if you use these tires when not permitted. Damage to your vehicle or accidents could also result.

## i

#### Tips

- The tire pressure monitoring system stops working when there is an ESC/ABS malfunction.
- Using snow chains may result in a system malfunction.
- The tire pressure monitoring system on your Audi was developed using tires with the "AO" or "RO" identification on the tire sidewall ⇒ page 259. We recommend using these tires.

#### Reset tire pressure monitoring system

Applies to vehicles: with tire pressure monitoring system

If the tire pressure is adjusted, wheels are rotated or changed, the TPMS must be reset via radio or MMI\*.

- ▶ Before resetting the TPMS, the current pressures of all four tires must correspond to the specified values. Adjust the tire pressure and reset the pressure in the tire pressure monitoring system according to the load you are carrying ⇒ page 252.
- ► Turn on the ignition.
- ► Select: CAR function button > Tire pressure monitoring > Store now. Or
- ▶ Select: CAR function button > Car systems\* control button > Servicing & checks >

Tire pressure monitoring > Store tire pressures.



#### **Tips**

Do not store the tire pressure if there are snow chains on the tire.

#### What do I do now?

## Jack, tools and inflatable spare tire

#### Onboard tool kit and vehicle jack

The vehicle tools and vehicle jack\* are stored in the luggage compartment under the floor cover.



Fig. 209 Luggage compartment: onboard tool kit and vehicle jack

The vehicle jack\* is stored under the onboard tool kit  $\Rightarrow$  fig. 209.

Hybrid drive\*: the storage location of the onboard tool kit varies ⇒ page 104.

The onboard tool kit includes:

- Hook for removing wheel covers\*
- Plastic hook to remove wheel bolt covers\*
- Alignment pin for changing wheels
- Wheel bolt wrench
- Folding chocks
- Screwdriver with reversible blade
- Socket (removable Torx socket)\*
- 10 x 13 open ended wrench (for disconnecting the battery cables)
- Towing eye

Before storing the jack\*, make sure it is wound back down as far as it will go.



#### / WARNING

Improper use of the vehicle jack\* can cause serious personal injuries.

 Never use the jack\* supplied with your
 Audi on another vehicle, particularly on a heavier one. The jack\* is only suitable for use on the vehicle it came with.

- Using a bumper jack to raise the vehicle will damage the bumper system. The jack may slip, causing injury.
- Never support your vehicle on cinder blocks, bricks or other objects. These may not be able to support the load and could cause injury when they fail.
- Never start or run the engine while the vehicle is supported by the jack\*.
- If you must work under the vehicle, always use safety stands specifically designed for this purpose.
- Never use the hexagonal socket in the handle of the screwdriver to loosen or tighten the wheel bolts.
- Always make sure the inflatable spare tire\* and even a flat tire are secured in place and not loose, otherwise they could fly forward, causing personal injury to passengers in the vehicle in an accident or sudden maneuver.



### **Tips**

Some of the onboard items listed above are provided on certain models only or are optional extras.

#### Folding chocks

The folding chocks are part of the onboard tool kit.

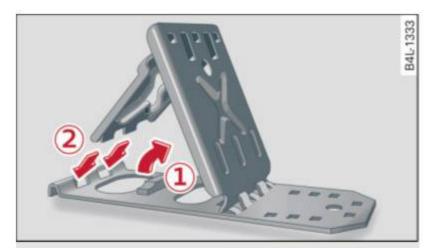


Fig. 210 Opening folding chocks

To use the chocks, you first have to raise the support plate  $\Rightarrow$  fig. 210 1 and then insert the locking plate with the two "tabs" into the elongated holes in the base plate 2  $\Rightarrow$   $\triangle$ .

### **WARNING**

- The chock cannot fulfil its function and may lose its stability if the "tabs" on the support plate are not inserted correctly into the elongated holes in the base plate. If this happens, the vehicle may start to move while a wheel is being changed.
- Never use the folding chocks if they are damaged or if they have not been assembled correctly.

#### Removing bass box

Applies to vehicles: with bass box

Before the inflatable spare tire\* can be taken out, the bass box must be removed.

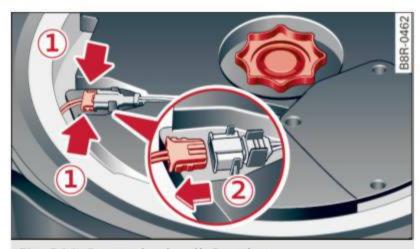


Fig. 211 Spare wheel well: Bass box

#### Removing bass box

- Lift up the cargo floor using the handle.
- Squeeze the locking tabs ⇒ fig. 211 1 of the connector.
- Disconnect the connector 2 and place the lead to one side.
- Turn the large screw counter-clockwise.
- Carefully remove the bass box.

#### Installing bass box

- Carefully place the bass box in the wheel. The inscription "FRONT" on the bass box must face forward.
- Reconnect the connector that was removed.
- Secure the bass box with the large screw.
- Fold the cargo floor back down.

#### Inflatable spare tire

Applies to vehicles: with inflatable spare tire

The inflatable spare tire expands to its full diameter when it is inflated.



Fig. 212 Inflatable spare tire with compressor

#### Removing inflatable spare tire

- ▶ Lift up the cargo floor using the handle.
- Remove the dirt tray.
- Turn the large screw ⇒ fig. 212 counterclockwise.
- ▶ Remove the bass box as required ⇒ page 270.
- ► Take out the inflatable spare tire.
- Always store the vehicle tool kit, the jack\* and the replaced tire in the luggage compartment ⇒ page 145.

#### Stowing the inflatable spare tire

- Release the air by unscrewing the valve stem.
- Screw the valve stem back in afterwards.
- Wait a few hours before placing the wheel in the spare wheel well ⇒ Λ.
- Install the bass box as required ⇒ page 270.
- Secure the wheel with the large screw.
- Place the dirt tray back in.
- Fold the cargo floor back down.

#### After using the inflatable spare wheel

The inflatable spare tire can be re-used as long as it is not damaged and is not worn down to the tread wear indicators  $\Rightarrow \triangle$ .

When you let the air out of the inflatable spare tire, it does not assume its folded shape again for several hours. Until then, it cannot be placed back in the spare wheel well and stowed securely.

## $\Lambda$

#### WARNING

- Never use the spare tire if it is damaged or if it is worn down to the tread wear indicators.
- If the inflatable spare tire is more than 6 years old, use it only in an emergency and with extreme caution and careful driving.
- The inflatable spare tire is intended only for temporary and short-term use. It should be replaced as soon as possible with the normal wheel and tire.
- The tire pressure value for the inflatable spare tire is located on the driver's side B-pillar ⇒ page 252, fig. 204.
- Maximum permissible speed is 50 mph (80 km/h).
- Avoid full-throttle acceleration, heavy braking, and fast cornering.
- When the air is let out of the inflatable spare wheel, it does not assume its folded shape for several hours. Until then, it cannot be placed back in the spare wheel well and stowed securely.
- Never drive with more than one inflatable spare tire.
- For technical reasons, the use of tire chains on the inflatable spare tire is not permitted. If it is necessary to drive with tire chains, the inflatable spare wheel must be mounted on the front axle in the event of a flat in a rear tire. The newly available front wheel must then be installed in place of the rear wheel with the flat tire. Installing the tire chain before mounting the wheel and tire is recommended.
- Loose items in the passenger compartment can cause serious personal injury during hard braking or in an accident.
   Never store the inflatable spare tire or jack\* and tools in the passenger compartment.

## (!)

#### Note

 The inflatable spare tire has been developed specifically for this vehicle model.

- It must not be exchanged or used for other vehicle models. Similarly, inflatable tires from other vehicle models must not be used.
- Normal summer or winter tires must not be installed on the inflatable tire rim.

#### Inflating inflatable spare tire

Applies to vehicles: with inflatable spare tire



Fig. 213 Luggage compartment left side: compressor

- Remove the left trim panel in the luggage compartment.
- Open the Velcro strap and remove the compressor ⇒ fig. 213.
- Unscrew the valve stem from the spare tire.
- Screw the tire filler hose from the compressor firmly onto the valve of the spare tire.
- Insert the plug from the compressor into a socket of the vehicle ⇒ page 75.
- Switch the compressor on.
- ► Let the compressor run until the value specified on the tire pressure label is reached ⇒ page 252, fig. 204. Switch the compressor off after running for 12 minutes at the most - danger of overheating!



#### WARNING

The compressor and the tire filler hose can become extremely hot while they are running - danger of burns!



#### Note

Switch the compressor off after running for 12 minutes at the most - danger of overheating! Allow the compressor to cool down for a few minutes before you use it again.

## Tire repair

## General information and safety precautions

Applies to vehicles: with tire repair kit

The tire repair is only meant for temporary use.



Fig. 214 Tire damage, for which the tire repair kit is not suitable

Your vehicle is equipped with a tire repair kit (Tire Mobility System).

In the event of a flat tire, the tire repair kit is found in the luggage compartment behind the right side trim panel, and is made up of tire sealant and a compressor ⇒ page 104, fig. 113.

Only tire damage caused by foreign objects up to approximately 0.16 in (4 mm) in diameter can be safely sealed with the tire repair kit.

The foreign object can stay in the tire.

#### The tire sealant may not be used:

- If the tire has cuts or punctures that are larger than 0.16 in (4 mm) 

   ig. 214 1.
- If the rim is damaged ②.
- If you drove with very low tire pressure or without air in the tire (3).

Tire repair kit usage is described in **Perform- ing the repair** ⇒ page 273 and in the instructions with the sealant bottle.

The tire repair kit is able to be used at temperatures as low as – 4 °F (– 20 °C).



#### WARNING

Pay attention to the following after repairing the tire:

- Do not drive faster than 50 mph (80 km/h).
- Avoid hard acceleration, braking sharply, and fast cornering.
- The vehicle may become more difficult to control.
- Tires sealed with the tire repair kit are only meant to be used temporarily.
   Damaged tires must be replaced.
- The tire repair kit may NOT be used
  - If the tire has cuts or punctures that are larger than 0.16 in (4 mm).
  - If the rim is damaged.
  - If you drove with very low tire pressure or without air in the tire.
- Obtain qualified help if it is not possible to perform the repair with the tire sealant.
- The tire sealant must not come in contact with skin, eyes, or clothes.
- If tire sealant gets in your eyes or on your skin, thoroughly rinse the affected area immediately with clean water.
- Change your clothes immediately if they get tire sealant on them.
- Do not inhale the fumes.
- If the tire sealant is swallowed, thoroughly rinse out your mouth and drink lots of water.
- Do not induce vomiting. Seek medical attention immediately.
- If an allergic reaction occurs, seek immediate medical attention.
- Keep the tire sealant away from children.

## (4)

#### For the sake of the environment

Used sealant bottles may be returned to your authorized Audi dealer for disposal.



#### Tips

- If sealant has spilled out, let it dry and then you can remove it by peeling it away like a foil.
- Note the expiration date on the sealant bottle. Replace the tire sealant at an authorized Audi dealership.

#### Performing the repair

Applies to vehicles: with tire repair kit



Fig. 215 Performing the repair

#### **Preparations**

- Park the vehicle as far as possible from moving traffic in the event of a flat tire.
- Set the parking brake to prevent the vehicle from rolling unintentionally.
- Shift the selector lever into the P position.
- Determine whether a repair with the tire repair kit is possible or not ⇒ page 272.
- Let all of the passengers exit the vehicle and move a safe distance away ⇒ .
- ► Take the sealant bottle and the compressor out of the luggage compartment ⇒ page 104, fig. 113.
- Affix the label "max. 50 mph (80 km/h)", found on the sealant bottle, to the instrument cluster where it can be seen by the driver.

#### Filling a tire

- Shake the bottle thoroughly before filling.
- Screw the accompanying filling hose completely onto the bottle. This breaks through the foil seal automatically at the connection.
- Remove the valve cap from the tire valve and unscrew the valve insert using the accompanying valve insert tool ⇒ fig. 215.
- Lay the valve insert on a clean surface.
- Remove the sealing plug from the filling hose and connect the hose to the tire valve.
- Hold the bottle with the bottom facing upward and empty the entire contents into the tire.
- Then pull out the hose and screw the valve insert tightly back into the tire valve.

#### Inflating a tire

- Screw the filling hose for the compressor onto the tire valve and insert the connector into the cigarette lighter.
- ▶ Inflate the tire to between 29 PSI (200 kPA) and 36 PSI (250 kPA) and read the pressure on the gauge.
- ▶ If this tire pressure is not reached, drive your vehicle approximately 33 ft (10 meters) forward or backward so that the sealant can be redistributed inside the tire. If at this time the required air pressure still cannot be reached, the tire is too badly damaged and cannot be repaired with the tire sealant.

#### Final inspection

- Stop the vehicle after driving for about 10 minutes and check the tire pressure.
- ► If the tire pressure is lower than 19 PSI (130 kPA), then the tire is too severely damaged. Do not continue driving. Please seek professional assistance.



#### / WARNING

- Turn on the emergency flashers if you have a flat tire while in moving traffic.
   This is for your protection and the for the safety of other drivers.
- Take care to move all of the passengers to a safe place (behind a guard rail for example).
- Read and follow the manufacturer's safety precautions on the compressor and in the instructions on the bottle of sealant!
- If a tire pressure of 29 PSI (200 kPA)
   cannot reached after inflating for 12 minutes, then the tire is too severely damaged. Do not continue driving.
- Obtain qualified help if it is not possible to perform the repair with the tire sealant.
- If the tire pressure is less than 19 PSI
   (130 kPA) after 10 minutes of driving,
   then the tire is too severely damaged. Do
   not continue driving. Seek professional
   assistance.

#### Note

Special care is required if you are repairing the tire on a steep incline.

## (i)

#### **Tips**

- Do not operate the compressor for more than 12 minutes continuously, otherwise it can overheat. Once the compressor has cooled, you can continue to use it.
- If sealant has spilled out, let it dry and then you can remove it by peeling it away like a foil.
- Remember to obtain a new bottle of sealant from your authorized Audi dealer after repairing a tire. After this, the functionality of the tire repair set is restored.
- Obey all laws.

## Changing a wheel

#### Before changing a wheel

Observe the following precautions for your own and your passenger's safety when changing a wheel.

- After you experience a tire failure, pull the car well away from moving traffic and try to reach **level** ground before you stop  $\Rightarrow \Lambda$ .
- All passengers should leave the car and move to a safe location (for instance, behind the guardrail)  $\Rightarrow \Lambda$ .
- Engage the parking brake to prevent your vehicle from rolling unintentionally  $\Rightarrow \Lambda$ .
- Move selector lever to position P ⇒ Λ.
- If you are towing a trailer: unhitch the trailer from your vehicle.
- Block the diagonally opposite wheel with the folding chocks or other objects.
- Take the jack\* and the inflatable spare tire\* out of the luggage compartment ⇒ page 269.



#### WARNING

You or your passengers could be injured while changing a wheel if you do not follow these safety precautions:

- If you have a flat tire, move a safe distance off the road. Turn off the engine, turn the emergency flashers on and use other warning devices to alert other motorists.
- Make sure that passengers wait in a safe place away from the vehicle and well away from the road and traffic.
- To help prevent the vehicle from moving suddenly and possibly slipping off the jack\*, always fully set the parking brake and block the wheel diagonally opposite the wheel being changed with the folding chocks or other objects. When one front wheel is lifted off the ground, placing the Automatic Transmission in P (Park) will not prevent the vehicle from moving.
- Before you change a wheel, be sure the ground is level and firm. If necessary, use a sturdy board under the jack\*.
- Always store the vehicle tool kit, the jack\* and the replaced tire in the luggage compartment ⇒ page 145.

#### Changing a wheel

When you change a wheel, follow the sequence described below step-by-step and in exactly that order.

- Remove the decorative wheel cover\*. For more details see also ⇒ page 275, Decorative wheel covers or  $\Rightarrow$  page 275, Wheels with wheel bolt caps.
- Loosen the wheel bolts ⇒ page 276.
- 3. Locate the proper mounting point for the jack\* and align the jack\* below that point *⇒* page 276.
- 4. **Lift** the car with the jack\* ⇒ page 276.
- Remove the wheel with the flat tire and then install the inflatable spare tire\* *⇒* page 277.
- 6. Tighten all wheel bolts lightly.
- 7. **Lower** the vehicle with the jack\*.
- 8. Use the wheel bolt wrench and firmly tighten all wheel bolts ⇒ page 276.
- Replace the decorative wheel cover\*.

 $\Lambda$ 

#### WARNING

Always read and follow all WARNINGS and information  $\Rightarrow \land$  in Raising the vehicle on page 277 and  $\Rightarrow$  page 278.

#### After changing a wheel

A wheel change is not complete without the doing the following.

- Always store the vehicle tool kit, the jack\* and the replaced tire in the luggage compartment ⇒ page 145.
- As soon as possible, have the tightening torques on all wheel bolts checked with a torque wrench. The correct tightening torque is 105 ft lb (140 Nm).
- Have the flat tire replaced as soon as possible.



#### **Tips**

- If you notice that the wheel bolts are corroded and difficult to turn while changing a tire, they should be replaced before you check the tightening torque.
- Drive at reduced speed until you have the tightening torques checked.

#### Decorative wheel covers

Applies to vehicles: with decorative wheel covers

The decorative wheel covers must be removed first to access the wheel bolts.

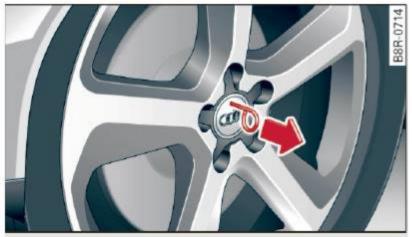


Fig. 216 Changing a wheel: Removing the wheel cover

#### Removing

 Insert the hook provided with the vehicle tool kit in the hole in the hub. ▶ Pull off the decorative wheel cover ⇒ fig. 216.

#### Wheels with wheel bolt caps

Applies to vehicles: with wheel bolts with caps

The caps must be removed first from the wheel bolts before the bolts can be unscrewed.



Fig. 217 Changing a wheel: removing the wheel bolt caps

#### Removing

- Push the plastic clip provided with the vehicle tool kit over the wheel bolt cap until it engages.
- ▶ Pull on the plastic clip to remove the cap ⇒ fig. 217.

#### Refitting

Place the caps over the wheel bolts and push them back on.

The caps are to protect and keep the wheel bolts clean.

## Loosening and tightening the wheel bolts

The wheel bolts must be loosened before raising the vehicle.



Fig. 218 Changing a wheel: loosening the wheel bolts

#### Loosening

- Install the wheel bolt wrench over the wheel bolt and push it down as far as it will go.
- Take tight hold of the end of the wrench handle and turn the wheel bolts counterclockwise about one single turn in the direction of arrow ⇒ fig. 218.

#### **Tightening**

- Install the wheel bolt wrench over the wheel bolt and push it down as far as it will go.
- Take tight hold of the end of the wrench handle and turn each wheel bolt clockwise until it is seated.

## ♠ WARNING

- Do not use force or hurry when changing a wheel - you can cause the vehicle to slip off the jack\* and cause serious personal injuries.
- Do not loosen the wheel bolts more than one turn before you raise the vehicle with the jack\*. - You risk an injury.

## i Tips

If a wheel bolt is very tight, you may find it easier to loosen by carefully pushing down on the end of the wheel bolt wrench with one foot only. As you do so, hold on to the car to keep your balance and take care not to slip.

### Raising the vehicle

The vehicle must be lifted with the jack\* first before the wheel can be removed.

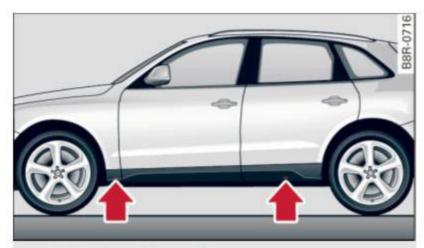


Fig. 219 Sill panels: markings

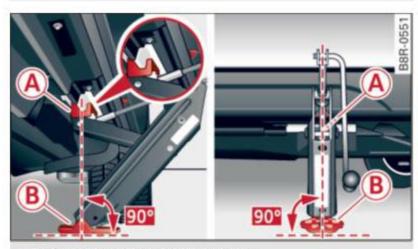


Fig. 220 Sill: positioning the jack

- Engage the parking brake to prevent your vehicle from rolling unintentionally
- Move the selector lever to position P.
- ► Find the marking (imprint) on the sill that is nearest the wheel that will be changed ⇒ fig. 219. Behind the marking, there is a lifting point on the sill for the jack\*.
- Turn the jack\* located under the lifting point on the sill to raise the jack until its arm (A) ⇒ fig. 220 is located under the designated plastic mount ⇒ ↑ ⇒ !).
- Align the jack\* so that its arm (A) ⇒ fig. 220 engages in the designated lifting point in the door sill and the movable base (B) lies flat on the ground. The base (B) must be vertical under the lifting point (A).
- Wind the jack\* up further until the flat tire comes off the ground ⇒ ▲.

Position the jack\* **only** under the designated lifting points on the sill  $\Rightarrow$  *fig. 219*. There is

exactly *one* location for each wheel. The jack\* must not be positioned at any other location  $\Rightarrow \land \Rightarrow \bigcirc$ .

An **unstable surface** under the jack\* can cause the vehicle to slip off the jack\*. Always provide a firm base for the jack\* on the ground. If necessary place a sturdy board or similar support under the jack\*. On **hard, slippery surfaces** (such as tiles) use a rubber mat or similar to prevent the jack\* from slipping ⇒ ▲.

## $\Lambda$

#### WARNING

- You or your passengers could be injured while changing a wheel if you do not follow these safety precautions:
  - Position the jack\* only at the designated lifting points and align the jack\*.
     Otherwise, the jack\* could slip and cause an injury if it does not have sufficient hold on the vehicle.
  - A soft or unstable surface under the jack\* may cause the vehicle to slip off the jack\*. Always provide a firm base for the jack\* on the ground. If necessary, use a sturdy board under the jack\*.
  - On hard, slippery surface (such as tiles)
     use a rubber mat or similar to prevent
     the jack\* from slipping.
- To help prevent injury to yourself and your passengers:
  - Do not raise the vehicle until you are sure the jack\* is securely engaged.
  - Passengers must not remain in the vehicle when it is jacked up.
  - Make sure that passengers wait in a safe place away from the vehicle and well away from the road and traffic.
  - Make sure jack position is correct, adjust as necessary and then continue to raise the jack\*.



#### Note

Do not lift the vehicle by the sill. Position the jack\* only at the designated lifting points on the sill. Otherwise, your vehicle will be damaged.

## Taking the wheel off/installing the inflatable spare tire

Follow these instructions step-by-step for changing the wheel


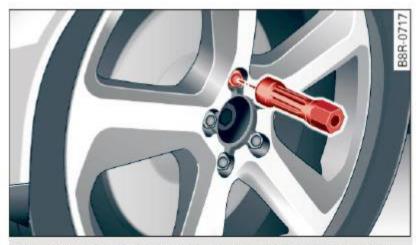


Fig. 221 Changing a wheel: using the screwdriver handle (with the blade removed) to turn the bolts

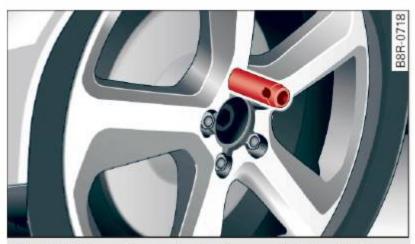

**Fig. 222** Changing a wheel: alignment pin inside the top hole

After you have loosened all wheel bolts and raised the vehicle off the ground, remove and replace the wheel as follows:

#### Removing the wheel

- ► Use the hexagonal socket in the screwdriver handle to completely remove the topmost wheel bolt and set it aside on a clean surface ⇒ fig. 221.
- Screw the threaded end of the alignment pin from the tool kit hand-tight into the empty bolt hole ⇒ fig. 222.
- Then remove the other wheel bolts as described above.
- ► Take off the wheel leaving the alignment pin in the bolt hole ⇒ ①.

#### Putting on the inflatable spare tire\*

Inflate the inflatable spare tire\*
⇒ page 271 and push the wheel over the alignment pin.



- Use the hexagonal socket in the screwdriver handle to screw in and tighten all wheel bolts slightly.
- Remove the alignment pin and insert and tighten the remaining wheel bolt slightly like the rest.
- Turn the jack handle\* counter-clockwise to lower the vehicle until the jack\* is fully released.
- ► Use the wheel bolt wrench to tighten all wheel bolts firmly ⇒ page 276. Tighten them crosswise, from one bolt to the (approximately) opposite one, to keep the wheel centered.

## (!)

#### Note

When removing or installing the wheel, the rim could hit the brake rotor and damage the rotor. Work carefully and have a second person help you.

## (i)

#### **Tips**

Never use the hexagonal socket in the handle of the screwdriver to loosen or tighten the wheel bolts.

- Pull the reversible blade from the screwdriver before you use the hexagonal socket in the handle to turn the wheel bolts.
- When mounting tires with unidirectional tread design make sure the tread pattern is pointed the right way
   ⇒ page 278.
- The wheel bolts should be clean and easy to turn. Check for dirt and corrosion on the mating surfaces of both the wheel and the hub. Remove all dirt from these surfaces before remounting the wheel.

#### Tires with unidirectional tread design

Tires with unidirectional tread design must be mounted with their tread pattern pointed in the right direction.

## Using a spare tire with a tread pattern intended for use in a specific direction

When using a spare tire with a tread pattern intended for use in a specific direction, please note the following:

- The direction of rotation is marked by an arrow on the side of the tire.
- If the spare tire has to be installed in the incorrect direction, use the spare tire only temporarily since the tire will not be able to achieve its optimum performance characteristics with regard to aquaplaning, noise and wear.
- We recommend that you pay particular attention to this fact during wet weather and that you adjust your speed to match road conditions.
- Replace the flat tire with a new one and have it installed on your vehicle as soon as possible to restore the handling advantages of a unidirectional tire.

#### Notes on wheel changing

Please read the information ⇒ page 259, New tires and replacing tires and wheels if you are going to use a spare tire which is different from the tires on your vehicle.

After you change a tire:

- Check the tire pressure on the spare immediately after installation.
- Have the wheel bolt tightening torque checked with a torque wrench as soon as possible by your authorized Audi dealer or a qualified workshop.
- With steel and alloy wheel rims, the wheel bolts are correctly tightened at a torque of 105 ft lb (140 Nm).
- If you notice that the wheel bolts are corroded and difficult to turn while changing a tire, they should be replaced before you check the tightening torque.

 Replace the flat tire with a new one and have it installed on your vehicle as soon as possible. Remount the wheel cover.

Until then, drive with extra care and at reduced speeds.



#### WARNING

- If you are going to equip your vehicle with tires or rims which differ from those which were factory installed, then be sure to read the information ⇒ page 259, New tires and replacing tires and wheels.
- Always make sure the damaged wheel or even a flat tire and the jack\* and tool kit are properly secured in the luggage compartment and are not loose in the passenger compartment.
- In an accident or sudden maneuver they could fly forward, injuring anyone in the vehicle.
- Always store damaged wheel, jack\* and tools securely in the luggage compartment. Otherwise, in an accident or sudden maneuver they could fly forward, causing injury to passengers in the vehicle.

### Fuses and bulbs

### Electrical fuses

#### Replacing fuses

Fuses that have blown will have metal strips that have burned through.

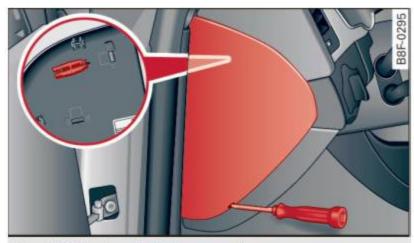


Fig. 223 Left cockpit: fuse panel cover

The fuses are located at the front left and right of the cockpit and behind the trim on the right side of the luggage compartment.

- Turn off the ignition and the affected electrical consumers.
- Check the following table to see which fuse belongs to the consumer.
- Remove the appropriate cover.
- To remove the purple plastic clip if necessary 1), hold onto it at the small side and pull it out of the fuse panel ⇒ page 280, fig. 224.
- Remove the clamp from the rear side of the fuse cover ⇒ fig. 223.
- Remove the fuse using the clamp and replace the blown fuse with an identical new one.

## $\Lambda$

#### WARNING

Do not repair fuses and never replace a blown fuse with one that has a higher amp rating. This can cause damage to the electrical system and a fire.



#### Note

If a new fuse burns out again after shortly have you have installed it, have the electri-

cal system checked by your authorized Audi dealer.



#### **Tips**

- The following table does not list fuse locations that are not used.
- Some of the equipment items listed are optional or only available on certain model configurations.

#### Left cockpit fuse assignment

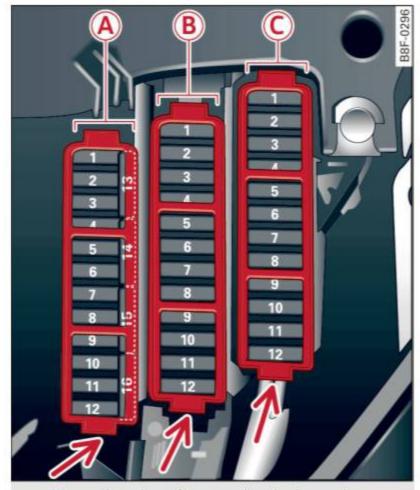


Fig. 224 Left cockpit: fuse panel with plastic clip

| No.  | Consumer   | Amps |
|------|--|------|
| Fuse | panel (A) (black)  |      |
| 1    | Dynamic steering   | 5    |
| 2    | ESC control module   | 5    |
| 3    | A/C system pressure sensor,<br>electromechanical parking<br>brake, HomeLink, automatic<br>dimming interior rearview mir-<br>ror, air quality/outside air sen-<br>sor, ESC button | 5    |
| 5    | Sound actuator/exhaust sound tuning  | 15   |

<sup>1)</sup> You can dispose of the plastic clip after removing it.

| No.  | Consumer   | Amps  |  |  |  |  |
|------|--|-------|--|--|--|--|
| 6    | Headlights range control system/Cornering light  | 5/7,5 |  |  |  |  |
| 7    | Headlight (cornering light)  | 7,5   |  |  |  |  |
| 8    | Control modules (electrome-<br>chanical parking brake, shock<br>absorber, quattro Sport, trailer<br>hitch), DCDC converter | 5     |  |  |  |  |
| 9    | Adaptive cruise control or high voltage battery (hybrid drive)   | 5/7,5 |  |  |  |  |
| 11   | Side assist  | 5     |  |  |  |  |
| 12   | Headlight range control, park-<br>ing system   | 5     |  |  |  |  |
| 13   | Airbag   | 5     |  |  |  |  |
| 14   | Rear wiper   | 15    |  |  |  |  |
| 15   | Auxiliary fuse (instrument panel)  | 10    |  |  |  |  |
| 16   | Auxiliary fuse terminal 15 (engine area)   | 40    |  |  |  |  |
| Fuse | Fuse panel (B) (brown)   |       |  |  |  |  |
| 1    | Electric exhaust door  | 5/10  |  |  |  |  |
| 2    | Brake light sensor or brake ped-<br>al movement sensor (hybrid<br>drive)   | 5     |  |  |  |  |
| 3    | Fuel pump  | 25    |  |  |  |  |
| 4    | Brake booster (hybrid drive)   | 25    |  |  |  |  |
| 5    | Left seat heating with/without seat ventilation  | 15/30 |  |  |  |  |
| 6    | ESC  | 5     |  |  |  |  |
| 7    | Horn   | 15    |  |  |  |  |
| 8    | Left front door (window regula-<br>tor, central locking, mirror,<br>switch, lighting)                                      | 30    |  |  |  |  |
| 9    | Wiper motor  | 30    |  |  |  |  |
| 10   | ESC  | 25    |  |  |  |  |
| 11   | Left rear door (window regulator, switch, lighting)  | 30    |  |  |  |  |
| 12   | Rain and light sensor  | 5     |  |  |  |  |
| Fuse | panel (C) (red)  |       |  |  |  |  |
| 3    | Lumbar support   | 10    |  |  |  |  |
| 4    | Dynamic steering   | 35    |  |  |  |  |
| 5    | Climatized cupholder   | 10    |  |  |  |  |

| No. | Consumer  | Amps |
|-----|---|------|
| 6   | Windshield washer system,<br>headlamp washer system | 35   |
| 7   | Vehicle electrical system control module 1          | 20   |
| 8   | Vehicle electrical system control module 1          | 30   |
| 9   | Panorama sunroof                                    | 20   |
| 10  | Vehicle electrical system control module 1          | 30   |
| 11  | Sun shade (panorama sunroof)                        | 20   |
| 12  | Anti-theft alarm warning sys-<br>tem                | 5    |

## Right cockpit fuse assignment

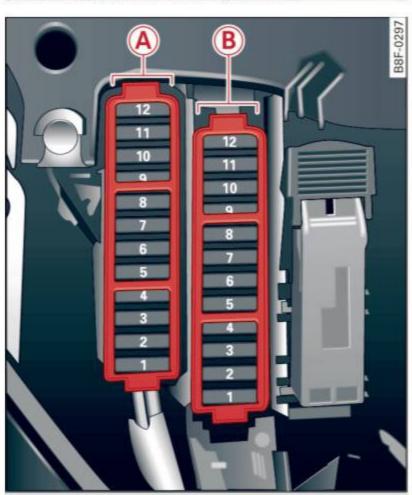


Fig. 225 Right cockpit: fuse panel with plastic clip

| No.                    | Consumer                               | Amps |  |  |
|------------------------|--|------|--|--|
| Fuse                   | Fuse panel (A) (black)                 |      |  |  |
| 5                      | Steering column switch module          | 5    |  |  |
| 7                      | Terminal 15 diagnostic connector       | 5    |  |  |
| 8                      | Gateway (Databus diagnostic interface) | 5    |  |  |
| 9                      | Supplementary heater                   | 5    |  |  |
| Fuse panel (B) (brown) |  |      |  |  |
| 1                      | CD /DVD player                         | 5    |  |  |

| No. | Consumer                                    | Amps |
|-----|---|------|
| 2   | Wi-Fi                                       | 5    |
| 3   | MMI/Radio                                   | 5/20 |
| 4   | Instrument cluster                          | 5    |
| 5   | Gateway (instrument cluster control module) | 5    |
| 6   | Ignition lock                               | 5    |
| 7   | Light switch                                | 5    |
| 8   | Climate control system blower               | 40   |
| 9   | Steering column lock                        | 5    |
| 10  | Climate control system                      | 10   |
| 11  | Terminal 30 diagnostic connector            | 10   |
| 12  | Steering column switch module               | 5    |

### Right luggage compartment fuse assignment

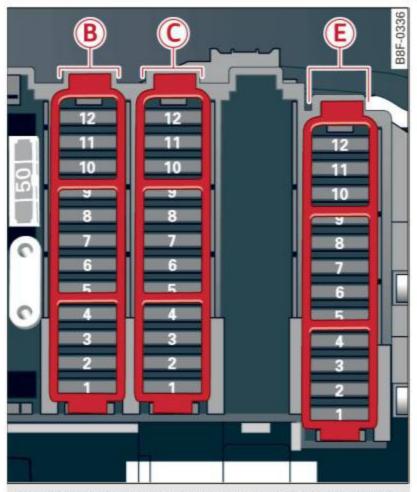


Fig. 226 Right luggage compartment: fuse panel with plastic clip

| No.  | Consumer                               | Amps |  |  |
|------|--|------|--|--|
| Fuse | Fuse panel (B) (black)                 |      |  |  |
| 1    | Luggage compartment lid control module | 30   |  |  |
| 2    | Trailer control module                 | 15   |  |  |
| 3    | Trailer control module                 | 20   |  |  |
| 4    | Trailer control module                 | 20   |  |  |

| Electromechanical parking brake  Electronic damping control  Electromechanical parking brake  Rear exterior lighting  quattro Sport  Rear exterior lighting  Vehicle electrical system control module  Terminal 30  Fuse panel (brown)  Luggage compartment lid control module  12 Terminal 30  Fuse panel (brown)  Luggage compartment lid control module  2 12-volt socket, cigarette lighter  DCDC converter path 1 or high voltage battery blower (hybrid drive)  A DCDC converter path 2, DSP amplifier, radio  Electromechanical parking brake  Right front door (window regulator, central locking, mirror, switch, lighting)  Rear right door (window regulator, switch, lighting)  Rear right door (window regulator, switch, lighting)  Rear right door (window regulator, switch, lighting)  Rear light front seat heating  Automatic dimming rearview mirror  Instrument panel terminal 30  MMI  Rear window heater  Rear window heater  Rear window heater  Rear Seat Entertainment  High voltage battery (hybrid | No.  | Consumer                          | Amps |
|--|------|-----------------------------------|------|
| 8 Rear exterior lighting 30 9 quattro Sport 35 10 Rear exterior lighting 30 11 Vehicle electrical system control module 20 12 Terminal 30 5  Fuse panel © (brown) 1 Luggage compartment lid control module 2 12-volt socket, cigarette lighter 20 DCDC converter path 1 or high voltage battery blower (hybrid drive) 40 4 DCDC converter path 2, DSP amplifier, radio 7 Electromechanical parking brake 30 Right front door (window regulator, central locking, mirror, switch, lighting) 30 11 Rear right door (window regulator, switch, lighting) 30 12 Cell phone prep 5 Fuse panel © (black) 1 1 Right front seat heating 15 2 Automatic dimming rearview mirror 5 3 Instrument panel terminal 30 30 4 MMI 7,5 5 Radio 5 6 Rearview camera 5 7 Rear window heater 30 8 Rear Seat Entertainment 5   | 5    |                                   | 5    |
| 8 Rear exterior lighting 9 quattro Sport 10 Rear exterior lighting 30 11 Vehicle electrical system control module 12 Terminal 30 5 Fuse panel © (brown) 1 Luggage compartment lid control module 2 12-volt socket, cigarette lighter 20 DCDC converter path 1 or high voltage battery blower (hybrid drive) 4 DCDC converter path 2, DSP amplifier, radio 7 Electromechanical parking brake 8 Right front door (window regulator, central locking, mirror, switch, lighting) 11 Rear right door (window regulator, switch, lighting) 12 Cell phone prep 5 Fuse panel © (black) 1 Right front seat heating 1 Right front seat heating 2 Automatic dimming rearview mirror 3 Instrument panel terminal 30 4 MMI 5 Radio 6 Rearview camera 7 Rear window heater 8 Rear Seat Entertainment 5 High voltage battery (hybrid)   | 6    | Electronic damping control        | 15   |
| 9 quattro Sport 35 10 Rear exterior lighting 30 11 Vehicle electrical system control module 5 12 Terminal 30 5  Fuse panel © (brown) 1 Luggage compartment lid control module 2 12-volt socket, cigarette lighter DCDC converter path 1 or high voltage battery blower (hybrid drive) 40 4 DCDC converter path 2, DSP amplifier, radio 7 Electromechanical parking brake 30 Right front door (window regulator, central locking, mirror, switch, lighting) 30 11 Rear right door (window regulator, switch, lighting) 30 12 Cell phone prep 5  Fuse panel © (black) 1 Right front seat heating 15 2 Automatic dimming rearview mirror 5 3 Instrument panel terminal 30 30 4 MMI 7,5 5 Radio 5 6 Rearview camera 5 7 Rear window heater 30 8 Rear Seat Entertainment 5  | 7    |                                   | 30   |
| 10 Rear exterior lighting  11 Vehicle electrical system control module  12 Terminal 30  5 Fuse panel © (brown)  1 Luggage compartment lid control module  2 12-volt socket, cigarette lighter  DCDC converter path 1 or high 3 voltage battery blower (hybrid drive)  4 DCDC converter path 2, DSP amplifier, radio  7 Electromechanical parking brake  Right front door (window regulator, central locking, mirror, switch, lighting)  11 Rear right door (window regulator, switch, lighting)  12 Cell phone prep  5 Fuse panel © (black)  1 Right front seat heating  2 Automatic dimming rearview mirror  3 Instrument panel terminal 30  4 MMI  7,5  Radio  6 Rearview camera  7 Rear window heater  8 Rear Seat Entertainment  5 High voltage battery (bybrid)   | 8    | Rear exterior lighting            | 30   |
| Vehicle electrical system control module  12 Terminal 30   | 9    | quattro Sport                     | 35   |
| module  12 Terminal 30  Fuse panel (brown)  1 Luggage compartment lid control module  2 12-volt socket, cigarette lighter  DCDC converter path 1 or high  voltage battery blower (hybrid drive)  4 DCDC converter path 2, DSP amplifier, radio  7 Electromechanical parking brake  Right front door (window regulator, central locking, mirror, switch, lighting)  11 Rear right door (window regulator, switch, lighting)  12 Cell phone prep  Fuse panel (black)  1 Right front seat heating  2 Automatic dimming rearview mirror  3 Instrument panel terminal 30  4 MMI  5 Radio  6 Rearview camera  7 Rear window heater  8 Rear Seat Entertainment  5 High voltage battery (hybrid)   | 10   | Rear exterior lighting            | 30   |
| Fuse panel © (brown)  1 Luggage compartment lid control module  2 12-volt socket, cigarette lighter  DCDC converter path 1 or high  3 voltage battery blower (hybrid drive)  4 DCDC converter path 2, DSP amplifier, radio  7 Electromechanical parking brake  Right front door (window regulator, central locking, mirror, switch, lighting)  11 Rear right door (window regulator, switch, lighting)  12 Cell phone prep  5 Fuse panel © (black)  1 Right front seat heating  2 Automatic dimming rearview mirror  3 Instrument panel terminal 30  4 MMI  5 Radio  6 Rearview camera  7 Rear window heater  8 Rear Seat Entertainment  5 High voltage battery (bybrid)   | 11   |                                   | 20   |
| Luggage compartment lid control module  2 12-volt socket, cigarette lighter  DCDC converter path 1 or high  voltage battery blower (hybrid drive)  4 DCDC converter path 2, DSP amplifier, radio  Flectromechanical parking brake  Right front door (window regulator, central locking, mirror, switch, lighting)  Rear right door (window regulator, switch, lighting)  Rear right door (window regulator, switch, lighting)  Cell phone prep  Fuse panel (E) (black)  Right front seat heating  Automatic dimming rearview mirror  Instrument panel terminal 30  MMI  MMI  7,5  Radio  Rear window heater  Rear window heater  Rear Seat Entertainment  5  | 12   | Terminal 30                       | 5    |
| trol module  2 12-volt socket, cigarette lighter 20 DCDC converter path 1 or high voltage battery blower (hybrid drive)  4 DCDC converter path 2, DSP amplifier, radio  7 Electromechanical parking brake  Right front door (window regulator, central locking, mirror, switch, lighting)  11 Rear right door (window regulator, switch, lighting)  12 Cell phone prep  5 Fuse panel (E) (black)  1 Right front seat heating  1 Automatic dimming rearview mirror  3 Instrument panel terminal 30  4 MMI  7,5  5 Radio  6 Rearview camera  7 Rear window heater  8 Rear Seat Entertainment  5  | Fuse | panel 🕜 (brown)                   |      |
| DCDC converter path 1 or high voltage battery blower (hybrid drive)  4 DCDC converter path 2, DSP amplifier, radio  5 Electromechanical parking brake  Right front door (window regulator, central locking, mirror, switch, lighting)  11 Rear right door (window regulator, switch, lighting)  12 Cell phone prep  5 Fuse panel (E) (black)  1 Right front seat heating  2 Automatic dimming rearview mirror  3 Instrument panel terminal 30  4 MMI  5 Radio  6 Rearview camera  7 Rear window heater  8 Rear Seat Entertainment  5 High voltage battery (hybrid  | 1    |                                   | 30   |
| voltage battery blower (hybrid drive)  4 DCDC converter path 2, DSP amplifier, radio  7 Electromechanical parking brake  8 Right front door (window regulator, central locking, mirror, switch, lighting)  11 Rear right door (window regulator, switch, lighting)  12 Cell phone prep  5 Fuse panel (E) (black)  1 Right front seat heating  2 Automatic dimming rearview mirror  3 Instrument panel terminal 30  4 MMI  7,5  5 Radio  6 Rearview camera  7 Rear window heater  8 Rear Seat Entertainment  5 High voltage battery (hybrid)  | 2    | 12-volt socket, cigarette lighter | 20   |
| amplifier, radio  Electromechanical parking brake  Right front door (window regulator, central locking, mirror, switch, lighting)  Rear right door (window regulator, switch, lighting)  Cell phone prep  Fuse panel (E) (black)  Right front seat heating  Automatic dimming rearview mirror  Instrument panel terminal 30  MMI  AMMI  7,5  Radio  Rearview camera  Rear window heater  Rear Seat Entertainment  High voltage battery (bybrid)  | 3    | voltage battery blower (hybrid    | 40   |
| Right front door (window regu- lator, central locking, mirror, switch, lighting)  Rear right door (window regulator, switch, lighting)  Cell phone prep  Fuse panel (E) (black)  Right front seat heating  Automatic dimming rearview mirror  Instrument panel terminal 30  MMI  MMI  Rear window heater  Rear window heater  Rear Seat Entertainment  High voltage battery (bybrid)   | 4    |                                   | 30   |
| 9 lator, central locking, mirror, switch, lighting)  11 Rear right door (window regulator, switch, lighting)  12 Cell phone prep  5 Fuse panel (E) (black)  1 Right front seat heating  2 Automatic dimming rearview mirror  3 Instrument panel terminal 30  4 MMI  7,5  5 Radio  6 Rearview camera  7 Rear window heater  8 Rear Seat Entertainment  5 High voltage battery (bybrid)  | 7    |                                   | 30   |
| tor, switch, lighting)  12 Cell phone prep 5  Fuse panel (E) (black)  1 Right front seat heating 15  2 Automatic dimming rearview mirror 5  3 Instrument panel terminal 30 30  4 MMI 7,5  5 Radio 5  6 Rearview camera 5  7 Rear window heater 30  8 Rear Seat Entertainment 5  High voltage battery (bybrid)  | 9    | lator, central locking, mirror,   | 30   |
| Fuse panel (E) (black)  1 Right front seat heating 15  2 Automatic dimming rearview mirror 5  3 Instrument panel terminal 30 30  4 MMI 7,5  5 Radio 5  6 Rearview camera 5  7 Rear window heater 30  8 Rear Seat Entertainment 5  High voltage battery (bybrid   | 11   |                                   | 30   |
| 1 Right front seat heating 15 2 Automatic dimming rearview mirror 5 3 Instrument panel terminal 30 30 4 MMI 7,5 5 Radio 5 6 Rearview camera 5 7 Rear window heater 30 8 Rear Seat Entertainment 5 High voltage battery (bybrid)  | 12   | Cell phone prep                   | 5    |
| Automatic dimming rearview mirror  Instrument panel terminal 30 30  MMI 7,5  Radio 5  Rearview camera 5  Rear window heater 30  Rear Seat Entertainment 5  High voltage battery (bybrid  | Fuse | panel (E) (black)                 |      |
| mirror  Instrument panel terminal 30 30  MMI 7,5  Radio 5  Rearview camera 5  Rear window heater 30  Rear Seat Entertainment 5  High voltage battery (bybrid)  | 1    | Right front seat heating          | 15   |
| 4 MMI 7,5 5 Radio 5 6 Rearview camera 5 7 Rear window heater 30 8 Rear Seat Entertainment 5 High voltage battery (bybrid   | 2    |                                   | 5    |
| 5 Radio 5 6 Rearview camera 5 7 Rear window heater 30 8 Rear Seat Entertainment 5 High voltage battery (bybrid   | 3    | Instrument panel terminal 30      | 30   |
| 6 Rearview camera 5 7 Rear window heater 30 8 Rear Seat Entertainment 5 High voltage battery (bybrid   | 4    | MMI                               | 7,5  |
| 7 Rear window heater 30 8 Rear Seat Entertainment 5 High voltage battery (bybrid   | 5    | Radio                             | 5    |
| 8 Rear Seat Entertainment 5 High voltage battery (bybrid   | 6    | Rearview camera                   | 5    |
| High voltage battery (hybrid   | 7    | Rear window heater                | 30   |
| High voltage battery (hybrid   | 8    | Rear Seat Entertainment           | 5    |
| 12 drive) 15   | 12   |                                   | 15   |

### **Bulbs**

#### Replacing light bulbs

For your safety, we recommend that you have your authorized Audi dealer replace burned out bulbs for you.

It is becoming increasingly more and more difficult to replace vehicle light bulbs since in many cases, other parts of the car must first be removed before you are able to get to the bulb. This applies especially to the light bulbs in the front of your car which you can only reach through the engine compartment.

Sheet metal and bulb holders can have sharp edges that can cause serious cuts, and parts must be correctly taken apart and then properly put back together to help prevent breakage of parts and long term damage from water that can enter housings that have not been properly resealed.

For your safety, we recommend that you have your authorized Audi dealer replace any bulbs for you, since your dealer has the proper tools, the correct bulbs and the expertise.

#### Gas discharge lamps (Xenon lights)\*:

Due to the high electrical voltage, have the bulbs replaced by a qualified technician. Headlights with Xenon light can be identified by the high voltage sticker.



#### WARNING

Contact with high-voltage components of the electrical system and improper replacement of gas discharge (Xenon) headlight bulbs can cause serious personal injury and death.

- Xenon bulbs are pressurized and can explode when being changed.
- Changing Xenon lamps requires the special training, instructions and equipment.
- Only an authorized Audi dealer or other qualified workshop should change the bulbs in gas discharge lamps.

## $\Lambda$

#### WARNING

There are parts with sharp edges on the openings and on the bulb holders that can cause serious cuts.

 If you are uncertain about what to do, have the work performed by an authorized Audi dealer or other qualified workshop. Serious personal injury may result from improperly performed work.



#### Tips

- If you must replace the light bulbs yourself, always remember that the engine compartment of any vehicle is a hazardous area to work in. Always read and heed all WARNINGS ⇒ page 226, Engine compartment ⇒ .
- It is best to ask your authorized Audi dealer whenever you need to change a bulb.

## **Emergency situations**

#### General

This chapter is intended for trained emergency crews and working personnel who have the necessary tools and equipment to perform these operations.

## Starting by pushing or towing



#### Note

Vehicles with an automatic transmission cannot be started by pushing or towing.

## Starting with jumper cables

If necessary, the engine can be started by connecting it to the battery of another vehicle.

If the engine should fail to start because of a discharged or weak battery, the battery can be connected to the battery of *another* vehicle, using a **pair of jumper cables** to start the engine.

#### Jumper cables

Use *only* jumper cables of sufficiently large **cross section** to carry the starter current safely. Refer to the manufacturer's specifications.

Use only jumper cables with *insulated* terminal clamps which are distinctly marked:

plus (+) cable in most cases colored red minus (-) cable in most cases colored black.



#### WARNING

Batteries contain electricity, acid, and gas. Any of these can cause very serious or fatal injury. Follow the instructions below for safe handling of your vehicle's battery.

- Always shield your eyes and avoid leaning over the battery whenever possible.
- A discharged battery can freeze at temperatures just below 32 °F (0 °C). Before

- connecting a jumper cable, you must thaw the frozen battery completely, otherwise it could explode.
- Do not allow battery acid to contact eyes or skin. Flush any contacted area with water immediately.
- Improper use of a booster battery to start a vehicle may cause an explosion.
- Vehicle batteries generate explosive gases. Keep sparks, flame and lighted cigarettes away from batteries.
- Do not try to jump start any vehicle with a low acid level in the battery.
- The voltage of the booster battery must also have a 12-Volt rating. The capacity (Ah) of the booster battery should not be lower than that of the discharged battery. Use of batteries of different voltage or substantially different "Ah" rating may cause an explosion and personal injury.
- Never charge a frozen battery. Gas trapped in the ice may cause an explosion.
- Never charge or use a battery that has been frozen. The battery case may have be weakened.
- Use of batteries of different voltage or substantially different capacity (Ah) rating may cause an explosion and injury.
   The capacity (Ah) of the booster battery should not be lower than that of the discharged battery.
- Before you check anything in the engine compartment, always read and heed all WARNINGS ⇒ page 226, Engine compartment.

## (!)

#### Note

- Applying a higher voltage booster battery will cause expensive damage to sensitive electronic components, such as control units, relays, radio, etc.
- There must be no electrical contact between the vehicles as otherwise current could already start to flow as soon as the positive (+) terminals are connected.



The discharged battery must be properly connected to the vehicle's electrical system. When jump starting or charging the battery, never connect the negative ground cable to the battery negative post because the battery manager system must be able to detect the battery's state of charge. Always connect the negative ground cable to the negative ground post of the battery manager control unit.

## Use of jumper cables

Make sure to connect the jumper cable clamps in exactly the order described below!

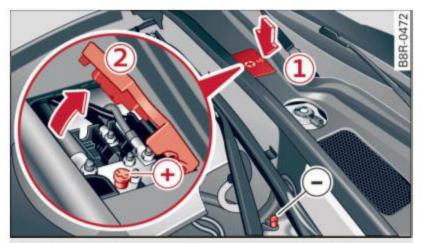


Fig. 227 Engine compartment: Connectors for jumper cables and charger

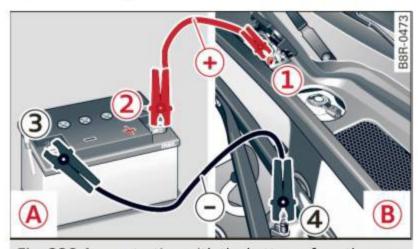


Fig. 228 Jump starting with the battery of another vehicle: (A) booster battery, (B) discharged vehicle battery

The procedure described below for connecting jumper cables is intended to provide a jump start for your vehicle.

Hybrid drive\*: read the important information concerning a dead high voltage battery under ⇒ page 105.

#### Vehicle with discharged battery:

Turn off lights and accessories, move lever of automatic transmission to N (Neutral) or P (Park) and set parking brake.

## Connect POSITIVE (+) to POSITIVE (+) (red)

- Remove the cover 1 by pressing on the arrow ⇒ fig. 227.
- ▶ Open the cover ② on the positive terminal.
- Connect one end of the red positive cable on the jump start bolt ⇒ fig. 228 (1)
   (Bolts under cover = "positive") of the vehicle to be started (B).
- Connect the other end to the positive terminal (2) of the booster battery (A).

## Connect NEGATIVE (-) to NEGATIVE (-) (black)

- Connect one end of the black negative cable to the negative terminal (3) of the booster battery (A).
- Connect the other end of the black negative cable to the jump start bolt 4 (Bolts with hex head = "negative") of the vehicle to be started B.

#### Starting the engine

- Start the engine of the vehicle with the booster battery (A). Run the engine at a moderate speed.
- Start engine with discharged vehicle battery
   B in the usual manner.
- ► If the engine fails to start: do not keep the starter cranking for longer than 10 seconds. Wait for about 30 seconds and then try again.
- With engine running, remove jumper cables from both vehicles in the exact reverse order.
- Close the cover ② on the positive terminal and re-install the cover ① ⇒ fig. 227.

The battery is vented to the outside to prevent gases from entering the vehicle interior. Make sure that the jumper clamps are well connected with their *metal parts in full contact* with the battery terminals.

## $\Lambda$

#### WARNING

To avoid serious personal injury and damage to the vehicle, heed all warnings and instructions of the jumper cable manufacturer. If in doubt, call for road service.

- Jumper cables must be long enough so that the vehicles do not touch.
- When connecting jumper cables, make sure that they cannot get caught in any moving parts in the engine compartment.
- Do not bend over the batteries danger of chemical burns!
- The battery cell locking screws must be tightened securely.
- Before you check anything in the engine compartment, always read and heed all WARNINGS ⇒ page 226, Engine compartment.



#### Note

Improper hook-up of jumper cables can ruin the generator.

- Always connect POSITIVE (+) to POSITIVE (+), and NEGATIVE (-) to NEGATIVE
   (-) ground post of the battery manager control unit.
- Check that all screw plugs on the battery cells are screwed in firmly. If not, tighten plugs prior to connecting clamp on negative battery terminal.
- Please note that the procedure for connecting a jumper cable as described above applies specifically to the case of your vehicle being jump started. When you are giving a jump start to another vehicle, do not connect the negative (-) cable to the negative (-) terminal on the discharged battery (4) ⇒ fig. 228. Instead, securely connect the negative (-) cable to either a solid metal component that is firmly bolted to the engine block or to the engine block itself. If the battery that is being charged does not vent to the outside, escaping battery gas could ignite and explode!

# Emergency towing with commercial tow truck

#### **General hints**

Your Audi requires special handling for towing.

The following information is to be used by commercial tow truck operators who know how to operate their equipment safely.

- Never tow your Audi, towing will cause damage to the engine and transmission.
- Never wrap the safety chains or winch cables around the brake lines.
- To prevent unnecessary damage, your Audi must be transported with a flat bed truck.
- To load the vehicle on to the flat bed, use the towing loop found in the vehicle tools and attach to the front or rear anchorage
   ⇒ page 287 and ⇒ page 287.



#### WARNING

A vehicle being towed is not safe for passengers. Never allow anyone to ride in a vehicle being towed, for any reason.

## Front towing loop

Do not install the front towing loop until it is needed.



Fig. 229 Front bumper: removing the cover cap



Fig. 230 Front bumper: screwing in the towing loop

The towing loop fits into the threaded hole located on the right side of the front bumper and covered by a cover when not in use.

- Remove the towing loop from the vehicle toolkit ⇒ page 269.
- ► Carefully remove the cover ⇒ fig. 229.
- Screw the towing loop tightly into the threaded hole as far as it will go ⇒ fig. 230.

When it is no longer needed, unscrew the towing loop and put it back into the vehicle toolkit. Be sure to have the towing loop stored in the vehicle at all times.

When re-installing the cover be sure to first insert the tabs on the cover into the retainers near the radiator grille. Then install the other side of the cover and push it into the retainers ⇒ fig. 229.

The appearance of the cover varies from the illustration for some model versions.

## WARNING

If the towing loop is not screwed in as far as it will go, the thread can pull out when the vehicle is towed - potential risk of an accident.



#### Note

The cover is attached to the bumper with several hooks. Do not use excessive force when removing the cover to avoid damaging it.

## Rear towing loop

On vehicles without a factory-installed trailer hitch\*, the threaded hole for the towing loop is on the right side of the rear bumper.



Fig. 231 Rear bumper: Cover



Fig. 232 Rear bumper: Screwing in towing loop

## Vehicles with a towing loop

- Remove the towing loop from the vehicle toolkit ⇒ page 269.
- Press the cover in by applying short strong pressure to the bottom part to release it from the bumper ⇒ fig. 231.
- Screw the towing loop tightly into the threaded hole as far as it will go 

   if g. 232.

#### Vehicles with a trailer hitch\*

- ► Install the trailer hitch.
- Attach the towing bar or the towing cable to the trailer hitch.

Unscrew the towing loop again after use and install the cover in the bumper. Return the towing loop to the vehicle toolkit. Be sure to have the towing loop stored in the vehicle at all times.

## $\Lambda$

## WARNING

- If the towing loop is not screwed in as far as it will go, the thread can pull out when the vehicle is towed - potential risk of an accident.
- If your vehicle has a trailer hitch\* only use a special towing bar to prevent damaging the ball hitch. These towing bars have been specially designed for trailer towing hitches.
- If your vehicle has a trailer hitch\* use only special towing cables.

## Loading the vehicle onto a flat bed truck



Fig. 233 Vehicle on flat bed truck

#### Front hook up

- Align the vehicle with the centerline of the car carrier ramp.
- Attach the winch hook to the front towline eye previously installed.

#### Rear hook up

- Align the vehicle with the centerline of the car carrier ramp.
- Attach the winch hook to the rear towline eye previously installed.



## **Tips**

Check carefully to make sure the hook-up is secure before moving the car up the flatbed truck ramp.

## Lifting vehicle

# Lifting with workshop hoist and with floor jack

The vehicle may only be lifted at the lifting points illustrated.

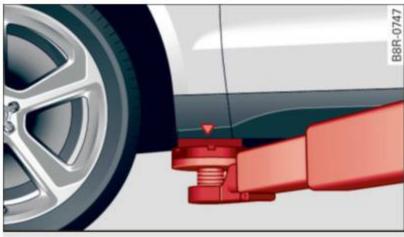


Fig. 234 Front lifting point

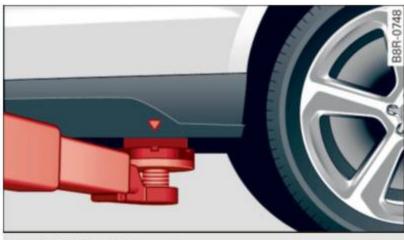


Fig. 235 Rear lifting point

- Locate lifting points ⇒ fig. 234 and ⇒ fig. 235.
- Adjust lifting arms of workshop hoist or floor jack to match vehicle lifting points.
- Insert a rubber pad between the floor jack/ workshop hoist and the lifting points.

If you must lift your vehicle with a floor jack to work underneath, be sure the vehicle is safely supported on stands intended for this purpose.

## Front lifting point

The lifting point is located on the floor pan reinforcement about at the same level as the jack mounting point ⇒ fig. 234. Do not lift the vehicle at the vertical sill reinforcement.

## Rear lifting point

The lifting point is located on the vertical reinforcement of the lower sill for the onboard jack\*  $\Rightarrow$  fig. 235.

## Lifting with vehicle jack\*

Refer to ⇒ page 276.



#### WARNING

- To reduce the risk of serious injury and vehicle damage.

  - Failure to lift the vehicle at these
    points could cause the vehicle to tilt or
    fall from a lift if there is a change in vehicle weight distribution and balance.
    This might happen, for example, when
    heavy components such as the engine
    block or transmission are removed.
- When removing heavy components like these, anchor vehicle to hoist or add corresponding weights to maintain the center of gravity. Otherwise, the vehicle might tilt or slip off the hoist, causing serious personal injury.

# 1

#### Note

- Be aware of the following points before lifting the vehicle:
  - The vehicle should never be lifted or jacked up from underneath the engine oil pan, the transmission housing, the front or rear axle or the body side members. This could lead to serious damage.
  - To avoid damage to the underbody or chassis frame, a rubber pad must be inserted between the floor jack and the lift points.
  - Before driving over a workshop hoist,
     check that the vehicle weight does not

- exceed the permissible lifting capacity of the hoist.
- Before driving over a workshop hoist, ensure that there is sufficient clearance between the hoist and low parts of the vehicle.

## General information

## Explanation of technical data

Some of the technical data listed in this manual requires further explanation.


The technical data for your vehicle is listed in the charts starting on ⇒ page 292. This section provides general information, notes and restrictions which apply to this data.

## Vehicle identification

The key data is given on the vehicle identification number (VIN) plate and the vehicle data sticker.



Fig. 236 Vehicle Identification Number (VIN) plate: location on driver's side dash panel

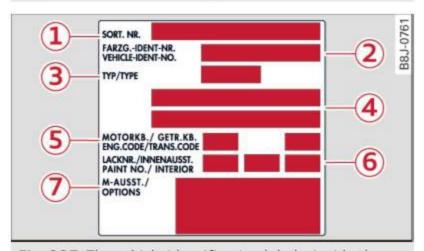

**Fig. 237** The vehicle identification label – inside the luggage compartment

#### The Vehicle Identification Number (VIN)

is located on the driver's side so that it is visible from the outside through the windshield ⇒ fig. 236. You can also display the Vehicle Identification Number of your vehicle in the radio or in the MMI\*. Select CAR function button > Vehicle ID number (VIN) or CAR function button > Car systems\* control button > Servicing & checks > VIN number.

#### The vehicle identification label

is located in the luggage compartment above the compartment for the vehicle tools.

The label  $\Rightarrow$  *fig. 237* shows the following vehicle data:

- Production control No.
- (2) Vehicle identification No.
- 3 Type code number
- Type designation/engine output in Kilowatts
- Engine and transmission code letter
- 6 Paint No./Interior
- Optional equipment No.'s

Vehicle data 2 to 7 are also found in your Warranty & Maintenance booklet.

## The safety compliance sticker

is your assurance that your new vehicle complies with all applicable Federal Motor Vehicle Safety Standards which were in effect at the time the vehicle was manufactured. You can find this sticker on the left door jamb. It shows the month and year of production and the vehicle identification number of your vehicle (perforation) as well as the Gross Vehicle Weight Rating (GVWR) and the Gross Axle Weight Rating (GAWR).

#### The high voltage warning label

is located on the lock carrier.

The spark ignition system complies with the Canadian standard ICES-002.

## Weights

#### Gross Vehicle Weight Rating

The Gross Vehicle Weight Rating (GVWR), and the Gross Axle Weight Rating (GAWR) for front and rear are listed on a sticker on the left door jamb.

The Gross Vehicle Weight Rating includes the weight of the basic vehicle plus full fuel tank, oil and coolant, plus maximum load, which includes passenger weight (150 lbs/68 kg per

designated seating position) and luggage weight  $\Rightarrow \triangle$ .

## **Gross Axle Weight Rating**

The Gross Axle Weight Rating is the maximum load that can be applied at each axle of the vehicle  $\Rightarrow \triangle$ .

## Vehicle capacity weight

The vehicle capacity weight (max. load) is listed on the driver's side B-pillar.

## Roof weight

The maximum permissible roof weight is **165 lbs (75 kg)**. The roof weight is made up of the weight of the roof rack system and the weight of the object being transported ⇒ page 72, Roof load.



## WARNING

- The actual Gross Axle Weight Rating at the front and rear axles should not exceed the permissible weights, and their combination must not exceed the Gross Vehicle Weight Rating.
- Exceeding permissible weight ratings can result in vehicle damage, accidents and personal injury.

# (!)

#### Note

- The vehicle capacity weight figures apply when the load is distributed evenly in the vehicle (passengers and luggage). When transporting a heavy load in the luggage compartment, carry the load as near to the rear axle as possible so that the vehicle's handling is not impaired.
- Do not exceed the maximum permissible axle loads or the maximum gross vehicle weight. Always remember that the vehicle's handling will be affected by the extra load. Therefore, adjust your speed accordingly.
- Always observe local regulations.

## **Dimensions**

The specifications refer to the basic model. Differences may occur depending on the model type and options ordered, for example, tire sizes.



#### Note

When driving up steep ramps, on rough roads, over curbs, etc. it is important to remember that some parts of your vehicle, such as spoilers or exhaust system components, may be close to the ground. Be careful not to damage them.

## **Data**

# 211 hp, 4-cylinder engine, quattro

## Engine data

| Maximum output SAE net | hp @ rpm   | 211 @ 4300 - 6000   |
|------------------------|--|---|
| Maximum torque SAE net | lb-ft @ rpm  | 258 @ 1500 - 4200   |
| No. of cylinders       |  | 4 cylinder  |
| Displacement           | CID (cm <sup>3</sup> )   | 121.1 (1984)  |
| Stroke                 | in (mm)  | 3.65 (92.8)   |
| Bore                   | in (mm)  | 3.25 (82.5)   |
| Compression ratio      |  | 9.6:1   |
| Fuel                   | maximum engir<br>⇒ page 228, Gas<br>Bio-ethanol (E8<br>gines may be op<br>(E85) or with pr | ded (91 AKI) Recommended for the performance. Further details soline (85) Vehicles with flexible fuel* enterated with bio-ethanol fuels emium unleaded gasoline (91 etails ⇒ page 229, Ethanol fuel |

## Dimensions (approx.)

| Length (with license plate bracket)    | in (mm) | 182.2 (4629) |  |
|--|---------|--------------|--|
| Width (with outside mirrors folded)    | in (mm) | 74.7 (1898)  |  |
| Height (unloaded)                      | in (mm) | 65.2 (1655)  |  |
| Turning circle diameter (curb to curb) | ft (m)  | 38.1 (11.6)  |  |

## Capacities (approx.)

| Fuel tank  |                 |           |
|--|-----------------|-----------|
| - Total capacity                                 | gal (liters)    | 19.8 (75) |
| - Reserve (of total capacity)                    | gal (liters)    | 2.6 (10)  |
| Windshield and headlight* washer fluid container | quarts (liters) | 4.9 (4.6) |
| Engine oil with filter change                    | quarts (liters) | 4.9 (4.6) |

# 211 hp, 4-cylinder engine, hybrid quattro

## Engine data

| Maximum output SAE net | hp @ rpm   | 211 @ 4300 - 6000 |
|------------------------|--|-------------------|
| Maximum torque SAE net | lb-ft @ rpm  | 258 @ 1500 - 4200 |
| No. of cylinders       |  | 4 cylinder        |
| Displacement           | CID (cm <sup>3</sup> )   | 121.1 (1984)      |
| Stroke                 | in (mm)  | 3.65 (92.8)       |
| Bore                   | in (mm)  | 3.25 (82.5)       |
| Compression ratio      |  | 9.6:1             |
| Fuel                   | Premium unleaded (91 AKI) Recommended for maximum engine performance. Further details ⇒ page 228, Gasoline |                   |

## Hybrid drive

| Electric output (short-term) | hp    | 54          |  |
|------------------------------|-------|-------------|--|
| Electric torque (short-term) | lb-ft | 155         |  |
| Total output (short-term)    | hp    | 245         |  |
| Total torque (short-term)    | lb-ft | 354         |  |
| Battery type                 |       | Lithium-ion |  |
| Battery energy content       | kWh   | 1.3         |  |

## Dimensions (approx.)

| Length (with license plate bracket)    | in (mm) | 182.2 (4629) |  |
|--|---------|--------------|--|
| Width (with outside mirrors folded)    | in (mm) | 74.7 (1898)  |  |
| Height (unloaded)                      | in (mm) | 65.2 (1655)  |  |
| Turning circle diameter (curb to curb) | ft (m)  | 38.1 (11.6)  |  |

## Capacities (approx.)

| gal (liters)    | 19.0 (72)                       |
|-----------------|---------------------------------|
| gal (liters)    | 2.6 (10)                        |
| quarts (liters) | 4.9 (4.6)                       |
| quarts (liters) | 4.9 (4.6)                       |
|                 | gal (liters)<br>quarts (liters) |

# 272 hp, 6-cylinder engine, quattro

## Engine data

| Maximum output SAE net | hp @ rpm               | 272 @ 4780 - 6500  |  |
|------------------------|------------------------|--|--|
| Maximum torque SAE net | lb-ft @ rpm            | 295 @ 2150 - 4780  |  |
| No. of cylinders       |                        | 6 cylinder   |  |
| Displacement           | CID (cm <sup>3</sup> ) | 182.8 (2995)   |  |
| Stroke                 | in (mm)                | 3.50 (89.0)  |  |
| Bore                   | in (mm)                | 3.33 (84.5)  |  |
| Compression ratio      |                        | 10.3:1   |  |
| Fuel                   | maximum engi           | Premium unleaded (91 AKI) Recommended for maximum engine performance. Further details ⇒ page 228, Gasoline |  |

## Dimensions (approx.)

| Length (with license plate bracket)    | in (mm) | 182.2 (4629) |  |
|--|---------|--------------|--|
| Width (with outside mirrors folded)    | in (mm) | 74.7 (1898)  |  |
| Height (unloaded)                      | in (mm) | 65.2 (1655)  |  |
| Turning circle diameter (curb to curb) | ft (m)  | 38.1 (11.6)  |  |

## Capacities (approx.)

| Fuel tank  |                 |           |
|--|-----------------|-----------|
| - Total capacity                                 | gal (liters)    | 19.8 (75) |
| - Reserve (of total capacity)                    | gal (liters)    | 2.6 (10)  |
| Windshield and headlight* washer fluid container | quarts (liters) | 4.9 (4.6) |
| Engine oil with filter change                    | quarts (liters) | 7.2 (6.8) |

## **Consumer Information**

## Warranty coverages

Your Audi is covered by the following warranties:

- New Vehicle Limited Warranty
- Limited Warranty Against Corrosion Perforation
- Emissions Control System Warranty
- Emissions Performance Warranty
- California Emissions Control Warranty (USA vehicles only)
- California Emissions Performance Warranty (USA vehicles only)

Detailed information regarding your warranties can be found in your **Warranty & Maintenance booklet**.

# Operating your vehicle outside the U.S.A. or Canada

Government regulations in the United States and Canada require that automobiles meet specific emission regulations and safety standards. Therefore, vehicles built for the U.S.A. and Canada differ from vehicles sold in other countries.

If you plan to take your vehicle outside the continental limits of the United States or Canada, there is the possibility that:

- unleaded fuels for vehicles with catalytic converter may not be available;
- fuel may have a considerably lower octane rating. Improper fuel may cause engine damage;
- service may be inadequate due to lack of proper service facilities, tools or testing equipment;
- replacement parts may not be readily available.
- Navigation systems for vehicles built for the U.S.A. and Canada will not necessarily work in Europe, and may not work in other countries outside of North America.



#### Note

Audi cannot be responsible for mechanical damage that could result from inadequate fuel, service or parts availability.

## Audi Service Repair Manuals and Literature

Audi Official Factory Service Manuals and Literature are published as soon as possible after model introduction. Service Manuals and literature are available to order from the Audi Technical Literature Ordering Center at:

www.audi.techliterature.com

## Maintenance

#### General

Your vehicle has been designed to help keep maintenance requirements to a minimum. However, a certain amount of regular maintenance is still necessary to assure your vehicle's safety, economy and reliability. For detailed vehicle maintenance consult your Warranty & Maintenance booklet.

Under difficult operating conditions, for example at extremely low outside temperatures, in very dusty regions, when towing a trailer very frequently, etc., some service work should be performed between the intervals specified. This applies particularly to:

- oil changes, and
- cleaning or replacing the air filter.



#### For the sake of the environment

By regularly maintaining your vehicle, you help make sure that emission standards are maintained, thus minimizing adverse effects on the environment.

# Important considerations for you and your vehicle

The increasing use of electronics, sophisticated fuel injection and emission control systems, and the generally increasing technical



complexity of today's automobiles, have steadily reduced the scope of maintenance and repairs which can be carried out by vehicle owners. Also, safety and environmental concerns place very strict limits on the nature of repairs and adjustments to engine and transmission parts which an owner can perform.

Maintenance, adjustments and repairs usually require special tools, testing devices and other equipment available to specially trained workshop personnel in order to assure proper performance, reliability and safety of the vehicle and its many systems.

Improper maintenance, adjustments and repairs can impair the operation and reliability of your vehicle and even void your vehicle warranty. Therefore, proof of servicing in accordance with the maintenance schedule may be a condition for upholding a possible warranty claim made within the warranty period.

Above all, operational safety can be adversely affected, creating unnecessary risks for you and your passengers.

If in doubt about any servicing, have it done by your authorized Audi dealer or any other properly equipped and qualified workshop. We strongly urge you to give your authorized Audi dealer the opportunity to perform all scheduled maintenance and necessary repairs. Your dealer has the facilities, original parts and trained specialists to keep your vehicle running properly.

## Performing limited maintenance yourself

The following pages describe a limited number of procedures which can be performed on your vehicle with ordinary tools, should the need arise and trained personnel be unavailable. Before performing any of these procedures, always thoroughly read all of the applicable text and carefully follow the instructions given. Always rigorously observe the **WARNINGS** provided.

Before you check anything in the engine compartment, always read and heed all **WARNINGS**  $\Rightarrow$   $\bigwedge$  and  $\Rightarrow$   $\bigwedge$  in Working in the engine compartment on page 233.

## $\Lambda$

## WARNING

- Serious personal injury may occur as a result of improperly performed maintenance, adjustments or repairs.
- Always be extremely careful when working on the vehicle. Always follow commonly accepted safety practices and general common sense. Never risk personal injury.
- Do not attempt any of the maintenance, checks or repairs described on the following pages if you are not fully familiar with these or other procedures with respect to the vehicle, or are uncertain how to proceed.
- Do not do any work without the proper tools and equipment. Have the necessary work done by your authorized Audi dealer or another properly equipped and qualified workshop.
- The engine compartment of any motor vehicle is a potentially hazardous area. Never reach into the area around or touch the radiator fan. It is temperature controlled and can switch on suddenly even when the engine is off and the ignition key has been removed. The radiator fan switches on automatically when the coolant reaches a certain temperature and will continue to run until the coolant temperature drops.
- Always remove the ignition key before anyone gets under the vehicle.
- Always support your vehicle with safety stands if it is necessary to work underneath the vehicle. The jack\* supplied with the vehicle is not adequate for this purpose and could collapse causing serious personal injury.
- If you must work underneath the vehicle with the wheels on the ground, always make sure the vehicle is on level ground, that the wheels are always securely blocked and that the engine cannot be started.

 Always make sure the transmission selector lever (automatic transmission) is in P (Park position) and the park brake is applied.

#### For the sake of the environment

- Changing the engine settings will adversely affect emission levels. This is detrimental to the environment and increases fuel consumption.
- Always observe environmental regulations when disposing of old engine oil, used brake fluid, dirty engine coolant, spent batteries or worn out tires.
- Undeployed airbag modules and pretensioners might be classified as Perchlorate Material -special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate. When the vehicle or parts of the restraint system including airbag modules safety belts with pretensioners are scrapped, all applicable laws and regulations must be observed. Your authorized Audi dealer is familiar with these requirements and we recommend that you have your dealer perform this service for you.

## Additional accessories, modifications and parts replacement

# Additional accessories and parts replacement

Always consult an authorized Audi dealer before purchasing accessories.

Your vehicle incorporates the latest safety design features ensuring a high standard of active and passive safety.

This safety could be compromised by non-approved changes to the vehicle. For this reason, if parts have to be replaced, please observe the following points when installing additional accessories: Approved Audi accessories and genuine Audi parts are available from authorized Audi dealers.

These dealers also have the necessary facilities, tools and trained specialists to install the parts and accessories properly.



#### WARNING

Using the wrong spare parts or using nonapproved accessories can cause damage to the vehicle and serious personal injury.

- Use only accessories expressly approved by Audi and genuine Audi spare parts
- These parts and accessories have been specially designed to be used on your vehicle.
- Never install accessories such as telephone cradles or beverage holders on airbag covers or within the airbag deployment zones. Doing so will increase the risk of injury if airbags are triggered in an accident!
- Before you check anything in the engine compartment, always read and heed all WARNINGS ⇒ page 226.



#### Note

- If items other than genuine Audi spare parts, add-on equipment and accessory items are used or if repair work is not performed according to specified methods, this can result in severe damage to your vehicle's engine and body (such as corrosion) and adversely affect your vehicle's warranty.
- If emergency repairs must be performed elsewhere, have the vehicle examined by an authorized Audi dealer as soon as possible.
- The manufacturer cannot be held liable for damage which occurs due to failure to comply with these stipulations.

#### **Technical Modifications**

Our guidelines must be complied with when technical modifications are made.

Always consult an authorized Audi dealer **before** starting work on any modifications.

This will help ensure that vehicle function, performance and safety are not impaired  $\Rightarrow \triangle$ .

Attempting to work on electronic components and the software used with them can cause malfunctions. Because of the way electronic components are interconnected with each other, such malfunctions can also have an adverse affect on other systems that are not directly involved. This means that you risk both a substantial reduction in the operational safety of your vehicle and an increased wear of vehicle parts  $\Rightarrow \land$ .

Authorized Audi dealers will perform this work in a professional and competent manner or, in special cases, refer you to a professional company that specializes in such modifications.



#### WARNING

Improper repairs and modifications can change the way vehicle systems work and cause damage to the vehicle and serious personal injury.



#### Note

If emergency repairs must be performed elsewhere, have the vehicle examined by an authorized Audi dealer as soon as possible.

## Declaration of Compliance, Telecommunications and Electronic Systems

Radio Frequency Devices and Radiocommunication Equipment User Manual Notice.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.

#### **Devices**

The following devices each comply with FCC Part 15.19, FCC Part 15.21 and RSS-Gen Issue 1:

- Adaptive cruise control\*
- Convenience key\*
- Audi side assist\*
- Cell phone package\*
- Electronic immobilizer
- HomeLink® universal remote control\*
- Remote control key

## FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### FCC Part 15.21

#### CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### RSS-Gen Issue 1

Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

| A  | Side airbags 172                                  |
|--|---|
|  | Side curtain airbags 175                          |
| Accessories                                | Warning/indicator lights 15                       |
| AC (climate control)                       | Weight-sensing mat                                |
| Adaptive cruise control                    | When must the system be inspected? . 168          |
| Cleaning sensors                           | Air transport 106                                 |
| Indicator lamp                             | All-wheel drive                                   |
| Messages                                   | Selective wheel torque control 197                |
| Request for driver intervention 112        | Winter tires 263                                  |
| Setting the distance                       | Alloy wheels 222                                  |
| Setting the driving program 112            | Alternator  |
| Adaptive dampers                           | Malfunction 28                                    |
| Adaptive light                             | Anti-freeze                                       |
| Defective 34                               | refer to Engine coolant system 240                |
| Adding                                     | Anti-lock brake system 197                        |
| Engine coolant                             | Warning/indicator lights 17                       |
| Engine oil 238                             | Anti-slip regulation                              |
| Windshield washer fluid 247                | Anti-theft alarm warning system                   |
| Additional accessories 297                 | Electronic immobilizer                            |
| Additives                                  | Approach/departure angle 209                      |
| Engine oil 238                             | Ashtray   |
| Adjusting                                  | Asterisk  |
| Air distribution (climate control) 80      | What does it mean when something is               |
| Front seats 61                             | marked with an asterisk? 6                        |
| Steering column manually 83                | Audi braking guard                                |
| Temperature (climate control) 80           | refer to Braking guard                            |
| Airbag system 157, 174                     | Audi drive select                                 |
| Advanced Airbag System 161                 | Indicator light 201                               |
| Advanced Airbag System components . 164    | also refer to Drive select                        |
| Care                                       |   |
| Children 179                               | Audi parking system plus with rearview camera 129 |
| Child restraints                           | Adjusting the display                             |
| Components (front airbags) 164             | Adjusting the warning tones                       |
| Danger of fitting a child safety seat on   | Cleaning sensors/camera 219                       |
| the front passenger seat                   | Rearview camera - parking mode 1 132              |
| Disposal                                   | Rearview camera - parking mode 2 132              |
| Front airbags                              | Safety precautions                                |
| How do the front airbags work? 166         | Switching on and off                              |
| How many airbags does my vehicle have? 164 | Trailer hitch                                     |
| How the Advanced Airbag System com-        | Audi Service Repair Manuals and Litera-           |
| ponents work together 165                  | ture 295  |
| Important things to know 157               | Auto-Check Control                                |
| Indicator light                            |   |
| Monitoring                                 | Auto locking                                      |
| PASSENGER AIR BAG OFF light 168            | Automatic belt retractor                          |
| Repairs                                    | Automatic car wash                                |
| Safety instructions                        | refer to Washing                                  |
|  | Automatic driving light control 49                |

| Automatic Shift Lock (ASL) 124               | Brake system 242                              |
|--|---|
| Automatic transmission 123                   | Anti-lock brake system                        |
| Automatic Shift Lock (ASL) 124               | Brake assist system 197                       |
| Driving 125                                  | Brake booster 200                             |
| Emergency mode                               | Brake fluid 242                               |
| Emergency release 128                        | Brake fluid specifications for refill and re- |
| Hill descent control 126                     | placement 243                                 |
| Kick-down                                    | Brake light defective                         |
| Manual shift program 127                     | Brake pads 205                                |
| Removal lock (ignition key) 83               | Electromechanical parking brake 88            |
| Selector lever                               | General information 200                       |
| Shift buttons                                | How does moisture or road salt affect the     |
| Automatic wipe/wash system 54                | brakes?                                       |
| Auto Safety Hotline                          | Malfunction                                   |
| AUTO (climate control) 80                    | Warning/indicator lights 18                   |
| Average speed                                | Worn brake pads symbol 33                     |
| Avoid damaging the vehicle 206               | Braking guard 107, 113                        |
| avoid damaging the verifice 200              | Messages 114                                  |
| B  | Settings                                      |
| В  | Switching on and off                          |
| Bass box                                     | Break-in period 205                           |
| Battery                                      | Brake pads                                    |
| Battery location inside the luggage com-     | Tires 205                                     |
| partment                                     | Breakover angle                               |
| Charging                                     | Bulbs   |
| Important warnings when working on           |   |
| the battery                                  | C   |
| Jump starting 284                            |   |
| Low  | California Proposition 65 Warning 234         |
| Replacing the battery 246                    | Battery specific                              |
| State of charge 203                          | Capacities 292                                |
| Voltage                                      | Car care                                      |
| Winter operation 243                         | Exterior                                      |
| Working on the battery 244                   | Interior                                      |
| Before driving                               | Plastic and vinyl 220                         |
| Bio-ethanol (Fuel)                           | Cargo area                                    |
| Blended gasoline                             | refer to Loading the luggage compart-         |
| Blower (climate control) 80                  | ment  |
| Body cavity sealing                          | Cargo floor 70                                |
| Booster seats                                | Catalytic converter 206                       |
| Brake fluid                                  | Center armrest                                |
|  | Adjusting 66                                  |
| Changing the brake fluid 243                 | Storage compartment 66                        |
| Checking the brake fluid level 242 Reservoir | Certification                                 |
| What is the correct brake fluid level? 242   | Changing                                      |
| What should I do if the brake fluid warn-    | A flat tire                                   |
|  | A wheel                                       |
| ing light comes on? 242                      | Engine oil                                    |
|  |   |

| Chassis                                  |      | MMI control console                 | 223      |
|--|------|-------------------------------------|----------|
| Undercoating                             | 222  | MMI display                         | 223      |
| Checking                                 |      | Plastic and vinyl                   | 220      |
| Engine coolant level                     | 240  | Plastic parts                       | 224      |
| Tire pressure                            |      | Radio display                       | 223      |
| Child restraints                         |      | Safety belts                        | 226      |
| Danger of using child restraints in the  |      | Trim strips                         | 220, 221 |
| front seat                               | 158  | Climate control                     | 79       |
| System anchors                           | 191  | Air vents                           | 81       |
| Where can I get additional information   |      | Automatic recirculation             | 81       |
| about child restraints and their use?    | 196  | Operation                           | 80       |
| Child safety                             | 178  | Setup                               | 81       |
| Convertible locking retractor            |      | Supplementary                       | 82       |
| Important safety instructions for using  |      | Synchronizing                       | 81       |
| child safety seats                       | 181  | Climatized cupholder                | 74       |
| Important things to know when driving    |      | Clock                               | 12       |
| with children                            | 178  | Closing                             |          |
| Installing a child restraint using the   |      | Panoramic sliding sunroof           | 47       |
| LATCH system                             | 193  | Coat hooks                          | 78       |
| Mounting and releasing the anchorage     |      | Cold tire inflation pressure        | 252      |
| hook                                     | 193  | Compass mirror                      |          |
| Tether anchors                           | 194  | Compliance                          |          |
| Tether straps                            | 194  | Consumer Information                |          |
| Child safety locks                       |      | Contacting NHTSA                    |          |
| Rear doors                               | . 46 |                                     | 140      |
| Child safety seats                       | 184  | Closing                             | 17       |
| Booster seats                            | 186  | Closing                             |          |
| Convertible child seats                  | 185  | Opening                             |          |
| Convertible locking retractor            | 188  | Convenience key                     |          |
| Danger of using child restraints in the  |      | Indicator lights                    |          |
| front seat                               | 158  | Locking and unlocking vehicle       |          |
| How do I properly install a child safety |      | Starting engine (START ENGINE STO   |          |
| seat in my vehicle?                      | 181  | button)                             |          |
| Infant seats                             | 184  | Stopping the engine (START ENGIN    |          |
| Installing                               | 188  | STOP button)                        |          |
| LATCH system                             | 193  | Switching on ignition               |          |
| Lower anchorages                         |      | Convertible child safety seats      | 185      |
| Safety instructions                      |      | Convertible locking retractor       | 100      |
| Unused safety belts on the rear seat     | 183  | Activating                          |          |
| Cigarette lighter                        | . 75 | Deactivating                        |          |
| Cleaning                                 |      | Using to secure a child safety seat |          |
| Engine compartment                       | 226  | Coolant system                      |          |
| Exhaust tail pipes                       | 223  | Cooled cupholder                    |          |
| Fabrics and fabric coverings             | 223  | Cooling box in glove compartment .  | 77       |
| Instrument panel                         |      | Cooling mode (climate control)      | 80       |
| Interior                                 | 223  | Cooling System                      |          |
| Leather                                  |      | Expansion tank                      | 240      |
| Matte finish paint                       | 219  | Cornering light                     | 51       |

| Cruise control                         | Driver's seat memory   |
|--|--|
| Changing speed                         | Activating remote control key 64   |
| Preselect speed 96                     | Drive select   |
| Switching off                          | Adaptive dampers   |
| Switching on                           | Dynamic steering   |
| Warning/indicator lights 17            | Setting the driving mode 121   |
| Cruising range 23                      | Driving lights 49  |
| Cupholders 73, 74                      | Driving messages   |
| Heated and cooled 74                   | Driving offroad  |
|  | Driving through water 210  |
| D                                      | Driving tips 209   |
|  | Rules of behavior 209  |
| Data                                   | Sand and mud   |
| Data recorder 197                      | Snow-covered ground 210  |
| Date display 12                        | Unpaved roads 210  |
| Daytime running lights 50              | Driving safely   |
| Declaration of compliance              | Driving through water  |
| Adaptive cruise control 298            | Driving time   |
| Audi side assist                       | Duplicate key  |
| Cell phone package 298                 | The state of the s |
| Convenience key 298                    | Dynamic steering   |
| Electronic immobilizer 298             | Indicator light 201  |
| HomeLink® universal remote control 298 | _  |
| Remote control key                     | E  |
| Defective light bulb warning           | E85 (Fuel)   |
| Defrosting (windows) 81                | Efficiency program   |
| Determining correct load limit 257     | Fuel economy messages  |
| Digital clock                          | Memory levels 23   |
| Digital compass 59                     | Other equipment 25   |
| Digital speedometer 21                 | Electrical accessories   |
| Dimensions                             | <i>refer to</i> Socket   |
| Dimming the rearview mirror 58         | Electrical seat adjustment   |
| Doors                                  | refer to Seat adjustment 62  |
| Child safety locks 46                  | Electromechanical parking brake  |
| Emergency locking 42                   | Emergency braking 90   |
| Driver information system 20           | Malfunction 91   |
| Defective light bulb warning           | Operation  |
| Digital speedometer                    | Parking  |
| Driver information messages 27         | Releasing and closing  |
| Indicator lights 99                    | Starting assist 90   |
| Messages                               | Starting from rest   |
| Open door or rear lid warning 21       | Starting off with a trailer 90   |
| Outside temperature display 21         | Warning/indicator lights 18  |
| Sound system display                   | Electromechanical power assist 201   |
| Driver seat                            | Indicator light 201  |
| refer to Seating position              | Electronic differential lock (EDL) 197   |
| . e.e. to seating position             | Warning/indicator lights 17  |

| Electronic immobilizer                     | Engine oil 235                               |
|--|--|
| Electronic power control                   | Adding 238                                   |
| (EPC) warning/indicator light 15           | Additives                                    |
| Electronic Stabilization Control (ESC) 197 | Changing 239                                 |
| ESC Offroad mode                           | Check oil level                              |
| Hill descent assist 199                    | Consumption 238                              |
| Warning/indicator lights 15                | Level 34                                     |
| Emergency braking 90                       | Oil consumption 237                          |
| Emergency flasher 52                       | Oil grades 235                               |
| Warning/indicator lights 16                | Pressure malfunction 30                      |
| Emergency key                              | Sensor defective                             |
| Starting engine                            | Specification and viscosity 235              |
| Emergency locking of the doors 42          | Engine speed limitation 34                   |
| Emergency operation                        | Environment                                  |
| Luggage compartment lid 45                 | Break-in period 205                          |
|  | Catalytic converter 206                      |
| Emergency release                          | Disposing of your vehicle battery 246        |
| Selector lever                             | Driving at high speeds 207                   |
| Emergency starting                         | Driving to minimize pollution and noise 207  |
| Emergency towing                           | Fuel   |
| Emergency unlocking                        | Fuel economy 207                             |
| Ignition key                               | Leaks under your vehicle 233                 |
| Energy management                          | Letting the vehicle stand and warm up . 207  |
| Engine                                     | Proper disposal of drained brake fluid . 243 |
| Compartment 235                            | Proper disposal of drained engine cool-      |
| Coolant                                    | ant 241                                      |
| Hood                                       | Proper disposal of drained engine            |
| Jump starting                              | oil 238, 239                                 |
| Start-Stop-System 91                       | Recycling used engine oil 238                |
| Starting 83, 86, 98                        | Roof rack                                    |
| Starting with jumper cables 284            | Unleaded fuel                                |
| Stopping                                   | What should I do with an old battery? . 246  |
| Engine compartment                         | EPC  |
| Safety instructions 233                    | refer to Electronic power control 15         |
| Working the engine compartment 233         | ESC  |
| Engine coolant system 240                  | refer to Electronic Stabilization Control    |
| Adding coolant 241                         | (ESC)  |
| Checking coolant level 240                 | ESC Offroad mode 198                         |
| Malfunction 30                             | Ethyl alcohol (Fuel) 229                     |
| Radiator fan 242                           | Event Data Recorder (EDR) 197                |
| Engine coolant temperature                 | Exhaust tail pipes                           |
| Temperature gauge 10                       | Cleaning 223                                 |
| Engine data                                | Expansion tank 240                           |
| Engine hood                                | Explanation of some technical terms 209      |
| Closing 233                                |  |
| How to release the hood 233                |  |

| Exterior mirrors                               | Recommendation                               |
|--|--|
| Adjusting 57                                   | Refuelling 231                               |
| Dimming  | Reserve                                      |
| Heating  | Tank capacity                                |
| Eyeglasses compartment                         | Unlocking the fuel filler flap by hand 232   |
|  | Fuel economy messages (efficiency pro-       |
| F  | gram)  |
| ē.   | Fuel filler flap                             |
| Fall line                                      | Unlocking the fuel filler flap by hand 232   |
| Fan  | Fuel supply too low                          |
| Radiator                                       |  |
| Fastening                                      | Fuse arrangement                             |
| Booster seats                                  |  |
| Convertible child safety seats 185             | G  |
| Infant seats                                   | Garage door opener (HomeLink) 135            |
| Flat tire                                      | Gas discharge lamps 283                      |
| Changing 274                                   | Gauges                                       |
| Flexible fuel 229                              | Engine coolant temperature 10                |
| Floor mats                                     | Fuel gauge                                   |
|  | Tachometer                                   |
| Fog lights                                     | General illustration                         |
| Folding chocks                                 | Instruments and controls 8                   |
| Folding the rear seat forward 67, 68           |  |
| Foot pedals 144                                | General rules and driving tips 209           |
| For the sake of the environment                | Before driving offroad                       |
| Gasoline fumes and the environment 231         | Driving offroad 209                          |
| Letting the engine warm up 83, 86              | Glossary of tire and loading terminology 249 |
| Reducing engine noise by early upshift-        | Glove compartment 76                         |
| ing  | Cooling box                                  |
| Refueling 231                                  | GPS controlled clock 12                      |
| Saving fuel by early upshifting 11             | Gradient angle 209                           |
| Front airbags                                  | Gross Vehicle Weight Rating (GVWR) 290       |
| Description                                    | Ground clearance 209                         |
| How they work                                  |  |
| Frontal collisions and the laws of physics 150 | H  |
| Front ashtray                                  |  |
| Front seats 61                                 | Headlights                                   |
| Adjusting 141                                  | Adaptive light 51                            |
| Child restraints in the front seat 158         | Fog lights 50                                |
| Fuel   | Headlight range control defective 34         |
| Additives                                      | Left hand drive, right hand drive 51         |
| Blended gasoline 228                           | Rear fog lights 50                           |
| Consumption 23                                 | Travel mode 51                               |
| Filler neck                                    | Washer reservoir                             |
| Fuel gauge                                     | Washer system 54                             |
| Gasoline 228                                   | Head restraints                              |
| Gasoline additives                             | Adjusting 142                                |
| Octane rating                                  | Front seats 65                               |
|  | Rear seats 65                                |

| Heated                                     | Improperly worn safety belts 155         |
|--|--|
| Cupholder                                  | Indicator lights                         |
| Exterior mirrors 57                        | Airbag system 168                        |
| Rear window 81                             | PASSENGER AIR BAG OFF 168                |
| Seats                                      | Infant seats                             |
| Washer fluid nozzles 54                    | Inflatable spare tire 270                |
| Heating 79                                 | Inflating                                |
| Heavy clothing and safety belts 152        | Installing child safety seats            |
| High beam                                  | Safety belts                             |
| Warning/indicator lights 17                |  |
| High voltage warning label 290             | Installing the upper tether strap on the |
|  | anchorage                                |
| Hill descent assist                        | Instrument cluster                       |
| Hill descent control                       | Instrument lighting 51                   |
| HomeLink (remote control) 135              | Instruments and controls 10              |
| Hood                                       | General illustration 8                   |
| Opening 233                                | Interior lights                          |
| Release lever 233                          | Dimming                                  |
| Horn 8                                     | Front                                    |
| How are child restraint system anchors re- | Rear 53                                  |
| lated to child safety 191                  | Interval wiping 54                       |
| How many airbags does my vehicle have? 164 | Rain sensor 54                           |
| How often should I check my tire pres-     |  |
| sures?                                     | 1  |
| How safety belt pretensioners work 155     | luman atautina                           |
| Hybrid drive                               | Jump-starting                            |
| 12 volt batteries                          | Jumper cables 285                        |
| Consumption display 104                    | Jump starting 105                        |
| Efficient drive mode 102                   |  |
| Energy flow display 103                    | K  |
| EV mode                                    | Key                                      |
| High voltage battery 97, 105               | Battery replacement                      |
| High voltage system 97                     | Check light                              |
| Operating modes 100                        | Emergency key 85                         |
| Power meter                                | Ignition/engine on/off 83                |
| Starting the vehicle 98                    | Key replacement                          |
| Transport 106                              | Master key with remote control 36        |
| Hydroplaning                               | Mechanical key                           |
| Trydroptaming                              | Removing                                 |
| <b>T</b>                                   | Kick-down                                |
| 1  |  |
| Ignition                                   | tiptronic                                |
| Switching on/off                           |  |
| Ignition key                               | L  |
| Emergency unlocking                        | Lane Change Assistant                    |
| Ignition lock 83                           | refer to Side assist                     |
| Malfunction 31, 34                         |  |
| Important things to do before driving 139  |  |
| ,  |  |

| LAICH  | M  |
|--|--|
| Description  | Maintenance  |
| Installing a child restraint   | Malfunction Indicator Lamp (MIL) 16, 26  |
| Location   | Master key   |
| Mounting and releasing the anchorage   | Battery replacement  |
| hook   | Check light  |
| Lateral angle  | Matte finish paint 219   |
| Leather  | Mechanical key   |
| Cleaning   | The state of the s |
| Left hand drive  | Memory for driver's seat   |
| Lifting jack   | Recalling settings 63  |
| Lifting vehicle 288  | Storing settings 63  |
| Light  | Mileage  |
| Coming home 50   | Average  |
| Daytime running lights 50  |  |
| Driving light control 49   | Mirrors Activating the digital compass   |
| Emergency flashers 52  | Activating the digital compass 59  |
| Exterior lighting 50   | Adjusting the exterior mirrors 57  |
| High beam  | dimming  |
| High beam warning/indicator light 17   | Monitoring the Advanced Airbag System 168  |
| Leaving home 50  | Multi-use attachment 77  |
| Sensor   | **   |
| Sensor defective   | N  |
| Switching on and off   | Natural leather  |
| Travel mode  | New tires and wheels   |
| Turn signals   | NHTSA  |
| Loading the luggage compartment 145  | Contacting 146   |
| Locking  | Number of seats  |
| Power locking switch   |  |
| Rear lid/trunk lid   | 0  |
| Remote control key   | 10.00  |
| Using the mechanical key 41  | Occupant seating positions 140   |
| Low beams  | Octane rating 228  |
| Defective  | Odometer   |
| Lower universal anchorages (Canada) 191  | Offroad mode   |
| Luggage compartment 67   | refer to ESC Offroad mode 198  |
| Cargo net  | OFF (climate control) 80   |
| Cover  | Oil  |
| Expanding 67, 68 Storage hooks 70  | refer to Engine oil 235, 238   |
| Stowing  | Oil consumption 238  |
| Tie-down rings 68  | On-Board Diagnostic System (OBD)   |
| also refer to Loading the luggage com-   | Data Link Connector (DLC) 26   |
| partment 145   | Electronic speed limiter 27  |
| Luggage compartment lid  | Malfunction Indicator Lamp (MIL) 26  |
| Emergency unlocking 45   | Onboard tool kit   |
| Lumbar support   | Open door or rear lid warning 21   |
| And the second s |  |

| Opening  | Power locks                                 |
|--|---|
| Panoramic sliding sunroof 47                     | Windows open and closed 47                  |
| Operate your vehicle economically and            | Power meter (hybrid drive) 98               |
| minimize pollution 207                           | Power seat adjustment 62                    |
| Optional equipment                               | Power steering                              |
| Marked with an asterisk 6                        | refer to Electromechanical power assist 201 |
| Other equipment (efficiency program) 25          | Power window regulators                     |
| Outside mirrors                                  | Convenience opening/closing 47              |
| refer to Exterior mirrors 57                     | Malfunctions 47                             |
| Outside temperature display 21                   | Switches                                    |
| Owner's manual                                   | Pregnant women                              |
| How the Owner's Manual is organized 6            | Special considerations when wearing a       |
| now the owner strandar is organized o            | safety belt                                 |
| D  | Proper safety belt position 153             |
| P  | Proper seating position                     |
| Paint  | Front passenger                             |
| Touch-up   | Occupants                                   |
| Paint No   | Rear passengers                             |
| Panoramic sliding sunroof                        | Protective tray                             |
| Convenience opening/closing 47                   | riocective tray                             |
| Emergency closing 48                             |   |
| Opening and closing 47                           | Q   |
| Parking 89                                       | Question                                    |
| Automatic transmission 125                       | What happens to unbelted occupants? 150     |
| Parking brake 88                                 | Why safety belts? 149                       |
| also refer to Electromechanical parking          |   |
| brake  | R   |
| Parking system                                   | Radiator fan                                |
| refer to Audi parking system plus with           | Rain sensor                                 |
| rearview camera 129                              | Defective                                   |
| Parts replacement                                | Reading lights                              |
| PASSENGER AIR BAG OFF light 168                  | Front                                       |
| Passive safety system 139                        | Rear  |
| Pedals   | Rear fog lights 50                          |
| Physical principles of a frontal collision . 150 | Rear lid                                    |
| Polishing  | 49 1977 8789 8889 8869                      |
| Pollutant filter (climate control) 79            | Automatic operation                         |
| Power locking system                             | Rear light                                  |
| Emergency locking 42                             | Defective                                   |
| Locking and unlocking the vehicle from           | Rear seats                                  |
| inside 42  | Adjusting seat 64                           |
| Rear lid/trunk lid 43                            |   |
| Selective unlock feature 39                      | Rearview camera                             |
| Settings 39                                      | Parking mode 1                              |
| Switch   | Parking mode 2                              |
| Unlocking and locking vehicle 40                 | Rear view mirror                            |
|  | Rear window heating                         |
|  | Recirculation mode (climate control) 80     |

| Red symbols 28  | Securing child safety seats 188            |
|---|--|
| Refill engine oil   | Special considerations for pregnant        |
| Refuelling 231  | women                                      |
| Release lever for hood 233  | Unfastening 154                            |
| Remote control  | Warning/indicator light 16, 149            |
| HomeLink  | Why YOU MUST wear them 149                 |
| Remote control key  | Worn properly 151                          |
| Unlocking and locking 40  | Safety compliance sticker 290              |
| Remote rear lid release 43  | Safety equipment                           |
| Repair manuals 295  | Safety features for occupant restraint and |
| Repairs   | protection                                 |
| Airbag system   | Safety guidelines                          |
| Replacing   | Seat adjustment 61                         |
| A fuse 280  | Safety instructions                        |
| Light bulbs 283   | Engine compartment 233                     |
| Tires and wheels 260  | for side curtain airbags 177               |
| Reporting Safety Defects 146, 147   | for using child safety seats 181           |
| Reset button  | for using safety belts                     |
| Retractor   | Monitoring the Advanced Airbag Sys-        |
| Right hand drive 51   | tem  |
| Rims  | Safety systems                             |
| Cast alloy  | Warning/indicator lights 15                |
| Roof rack   | Seat                                       |
| Attachment points 71  | Heating                                    |
| Installing the attachments 72   | Number of seats                            |
| Installing the roof rack 71   |  |
| Roof load 72  | Seat adjustment 62  Driver's seat 61       |
| Rule of behavior offroad 209  | Front passenger's seat 62                  |
|   | Front seats                                |
| S   | Head restraints                            |
| Cafa driving habita   | Memory 63                                  |
| Safe driving habits   | Seat belts                                 |
| Safety belt position  | refer to Safety belts 149                  |
| Safety belt height adjustment 155 Safety belts worn by pregnant women . 154 | Seating capacity                           |
| 1000 00000 00000 0000000000000000000000                                     | Seating position                           |
| Safety belt pretensioner  | Driver                                     |
| Safety belts  | Front passenger                            |
| Cleaning 226  | How to adjust the front seats 141          |
| Danger to passengers who do not wear a                                      | Incorrect seat position                    |
| safety belt   | Occupants                                  |
| Fastening   | Rear passengers 142                        |
| Height adjustment 155   | Sea transport 106                          |
| Improperly worn   | Selective unlock feature 39                |
| Not worn 150  | Selective wheel torque control (all-wheel  |
| Safety belt position 153  | drive)                                     |
| Safety instructions 152   |  |

| Selector lever   | Steering                                       |
|--|--|
| Emergency release 128  | Electromechanical power assist 201, 0          |
| Service and disposal   | Indicator light 201                            |
| Safety belt pretensioner 156   | Locking the steering                           |
| Service interval display   | Malfunction 31                                 |
| Service position for windshield wipers 55  | Manually adjusting the steering wheel 83       |
| SET button   | also refer to Electromechanical power as-      |
| Shift buttons  | sist 201                                       |
| Ship transport   | Steering wheel column                          |
| Side airbags   | Adjusting manually                             |
| Description  | Steps for determining correct load limit . 257 |
| How they work  | Stopping the engine 85, 87                     |
| Side assist  | Stopping (engine) 98                           |
| Activating and deactivating  | Storage  |
| Adjusting the brightness   | Cupholder door pockets 74                      |
| Cleaning sensors   | Glove compartment 76                           |
| Description  | Sun shade                                      |
| Sensor range   | Sun visors                                     |
| Side curtain airbags 175   | Supplementary (climate control) 82             |
| Description  | Switches                                       |
| How they work  | Emergency flashers 52                          |
| Safety instructions 177  | Symbols  |
| Side marker lights   | Red 28   |
| Snow chains 264  | Yellow   |
| Socket   |  |
| Sound system display   | T  |
| Driver information display 20  |  |
| Sources of information about child re-   | Tachometer                                     |
| straints and their use   | Technical modifications 298                    |
| Speedometer  | Tether anchors 194                             |
| Speed rating letter code   | Tether strap                                   |
|  | The first 1,000 miles (1,500 km) and after-    |
| Speed warning system   | wards  |
| Start-Stop-System  | Tie-down rings 68, 146                         |
| Engine does not switched off 92  | tiptronic 123                                  |
| Engine starts automatically 92 Indicator lights  | Automatic Shift Lock (ASL) 124                 |
| Messages   | Driving  |
| Starting/stopping the engine 92  | Emergency mode 128                             |
| Switching off/on   | Hill descent control 126                       |
| START ENGINE STOP button (Convenience  | Kick-down                                      |
| key) 86, 87  | Manual shift program 127                       |
| Starting from rest 90  | Selector lever                                 |
| Starting off with a trailer  | Tire Mobility System 104, 272                  |
| MANUAL AND THE AND ADDRESS OF THE AD | Tire pressure                                  |
| Starting the engine  | Tire pressure monitoring system 266            |
| Starting (engine) 98   | Loss of air pressure 16, 267                   |
|  |  |

| Malfunction                               | Transmission   |
|---|--|
| Resetting tire pressures 268              | Malfunction (indicator light) 128  |
| Tires                                     | tiptronic  |
| Repair kit                                | Transport Canada 147   |
| Repair set                                | Travel mode  |
| Service life                              | Tread Wear Indicator (TWI) 258   |
| Speed rating letter code 260              | Trip computer  |
| Tire manufacturing date 260               | Fuel consumption   |
| Tire specifications                       | Mileage  |
| Tread depth                               | Single-trip memory   |
| Uniform tire quality grading 262          | Total-trip memory 23   |
| Winter tires                              | Trip odometer  |
| Tires and vehicle load limits 256         | Trunk  |
| Tires and wheels                          | refer to Rear lid  |
| Checking tire pressure 254                |  |
| Cold tire inflation pressure 252          | Turn signals   |
| Dimensions                                | Warning/indicator lights 16  |
| General notes                             | The second secon |
| Glossary of tire and loading terminolo-   | U  |
| gy 249                                    | Undercoating 222   |
| Low aspect ratio tires 265                | Unfastening safety belts 154   |
| New tires and wheels 259                  | Unidirectional tires 248   |
| Replacing 260                             | Uniform tire quality grading 262   |
| Snow chains                               | Unlocking  |
| Tire pressure monitoring system . 16, 266 | Power locking switch 42  |
| Tires and vehicle load limits 256         | Rear lid/trunk lid   |
| Wheel bolts                               | Remote control key 40  |
| Winter tires                              | Using the mechanical key   |
| Tool kit 269                              | Use of jumper cables   |
| Tools 104                                 | osc or jumper capies   |
| Torn or frayed safety belts 152           | <b>\</b> /   |
| Touch-up paint                            | V  |
| Towing                                    | Vanity mirror 54   |
| Front eyelet 287                          | Vehicle  |
| Rear eyelet 287                           | Transport 106  |
| Tow truck procedures 286                  | Vehicle-care products 216  |
| Towing a trailer                          | Vehicle Identification Number (VIN) 290  |
| Parking system                            | Vehicle jack   |
| TPMS                                      | Vehicle literature 5   |
| Tire pressure monitoring system 267       | Vehicle tool kit   |
| Trailer towing                            | Ventilation 79   |
| Operating instructions 213                |  |
| Technical requirements 212, 213           | <b>\</b> \\/   |
| Tongue load                               | VV   |
| Trailer towing tips                       | Warning/indicator lights 10  |
| Trailer turn signal assembly              | Airbag system  |
| Warning/indicator lights 16               | Anti-lock brake system (ABS) 17  |
|   | Brake system   |

| Cruise control                              | 17 Where can I find the tire pressures for my  |
|---|--|
| Electromechanical parking brake             | 18 car?  |
| Electronic power control                    | 15 Why safety belts? 149, 150  |
| Electronic Stabilization Control (ESC)      |  |
| High beam                                   |  |
| Malfunction Indicator Lamp (MIL)            |  |
| Safety belt                                 |  |
| Tire pressure monitoring system             |  |
| Trailer turn signal assembly                | electioning it it is it  |
| Turn signals                                |  |
| Warning lights                              |  |
| Warranty coverages 2                        | Demosting  |
| Washer reservoir                            | Williasilieta Washer Itala   |
| Washing 2                                   | 16   |
| Automatic car wash 2                        | 17   |
| By hand                                     | 17   |
| General information                         |  |
| Matte finish paint                          | The process of the second seco |
| with a power washer 2                       |  |
| Waxing 2                                    |  |
| Wear indicator                              |  |
|   |  |
| Weights                                     |  |
| What happens if you wear your safety belt   | Defrosting windows   |
| too loose?                                  | 202  |
| What happens to unbelted occupants? 1       | Windows  |
| What impairs driving safety? 1              |  |
| What should I do after changing a           | Winter tires   |
| wheel? 2                                    |  |
| What should I do after replacing wheels? 2  |  |
| Wheel bolts                                 | Installing new wiper blades 56   |
| Torque                                      | 65   |
| Wheels 2                                    | 48 <b>X</b>  |
| Cast alloy 2                                | 22 Xenon-Lights  |
| Checking tire pressure 2                    |  |
| Cold tire inflation pressure 2              | 52 <b>Y</b>  |
| General notes 2                             | 48   |
| Glossary of tire and loading terminolo-     | Yellow symbols   |
| gy 2  | 49   |
| New tires and wheels 2                      | 59   |
| Tires and vehicle load limits 2             | 56   |
| When must a safety belt be replaced? 1      | 52   |
| When must the airbag system be inspect-     |  |
| ed?   | 68   |
| When should I adjust the tire pressures? 2  | 55   |
| When should I check the tire pressures? . 2 | 55   |
| Where are lower anchorages located? 1       | 92   |

It has always been Audi's policy to continuously improve its products. Audi, therefore, reserves the right to make changes in design and specifications, and to make additions or improvements in its products, without incurring any obligation to install them on products previously manufactured.

Text, illustrations and specifications in this manual are based on the most up-to-date information available at the time of printing.

All rights reserved. May not be reproduced or translated in whole or in part without the

written consent of AUDI AG. Specifications are subject to change without notice.

"Audi", "quattro" and the four rings emblem are registered trademarks of AUDI AG.

Editorial deadline: 09/07/2012



## For the sake of the environment

Printed on environmentally friendly paper (bleached without chlorine, recyclable).

Printed in Germany

© 2012 AUDI AG

Owner's Manual 2013 Audi Q5 2013 Audi Q5 hybrid quattro Englisch USA 11.2012 132.561.8RB.23



1325618RB23 www.audi.com