

# Owner's Manual

## 2025 Q3

Owner's Manual  
English North America 09.2024  
83A012721BN



83A012721BN

[www.audi.com](http://www.audi.com)

2025 Q3 Owner's Manual

**Audi** Vorsprung durch Technik

Vehicle Identification Number.	
Model, engine, transmission, month/year of manufacture	
Engine and transmission codes	
Paint number, interior equip- ment number	
Optional equipment number	

## Foreword

Thank you for choosing an Audi – we value your trust in us.

Your new Audi will allow you to experience the best in groundbreaking technology and premium quality equipment that a vehicle has to offer. Audi recommends that you read your Owner's Manual thoroughly so that you quickly become acquainted with your Audi and make use of all of its features.

In addition to explaining how the different features work, there are many useful tips and information concerning your safety, how to care for your vehicle, and how to maintain your vehicle's value. Audi also gives you useful tips and information on how to drive your vehicle more efficiently and in an environmentally-friendly manner.

Audi hopes you enjoy driving your vehicle and wishes you safe and pleasant motoring.



### **WARNING**

Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to [www.P65Warnings.ca.gov/passenger-vehicle](http://www.P65Warnings.ca.gov/passenger-vehicle).

<b>About this Owner's Manual</b> . . . . .	5	<b>Lights and vision</b> . . . . .	52
<b>Summary</b> . . . . .	6	Exterior lighting . . . . .	52
<b>Quick reference information</b> . . . . .	6	Interior lighting . . . . .	55
Online information . . . . .	6	Vision . . . . .	56
FAQ . . . . .	7	Windshield wipers . . . . .	58
Cockpit . . . . .	9	Digital compass . . . . .	61
Overview of indicator lights . . . . .	10	<b>Sitting correctly and safely</b> . . . . .	62
<b>Display and operation</b> . . . . .	14	Maintaining the correct seating position . . . . .	62
<b>Instrument cluster</b> . . . . .	14	Front seats . . . . .	62
Instrument cluster overview . . . . .	14	Rear seats . . . . .	64
Operating . . . . .	15	Steering wheel . . . . .	65
Adjusting the display . . . . .	15	Head restraints . . . . .	66
Coolant temperature display . . . . .	16	Safety belts . . . . .	67
Tachometer . . . . .	16	Memory function . . . . .	70
Odometer . . . . .	16	Airbag system . . . . .	70
Outside temperature display . . . . .	17	Child safety seats . . . . .	75
Engine oil temperature indicator . . . . .	17	<b>Storage and convenience</b> . . . . .	81
Vehicle functions . . . . .	17	Power sources . . . . .	81
<b>Touch display</b> . . . . .	19	Cup holders . . . . .	81
General touch display operation . . . . .	19	Storage areas and compartments . . . . .	82
Multi Media Interface . . . . .	21	Luggage compartment . . . . .	82
<b>Voice operation</b> . . . . .	27	Roof rack . . . . .	85
General information . . . . .	27	<b>Warm and cold</b> . . . . .	87
Speech dialog system . . . . .	27	Climate control system . . . . .	87
External voice operation . . . . .	28	Steering wheel heating . . . . .	89
<b>Global functions</b> . . . . .	30	Fluids in the A/C system . . . . .	90
Additional function buttons . . . . .	30	<b>Driving</b> . . . . .	91
<b>Starting and driving</b> . . . . .	31	Starting the vehicle . . . . .	91
<b>Personalization</b> . . . . .	31	When driving . . . . .	93
Users . . . . .	31	Drive system . . . . .	99
<b>Opening and closing</b> . . . . .	34	Start/Stop system . . . . .	100
Central locking . . . . .	34	Brakes . . . . .	101
Keys . . . . .	38	Electromechanical parking brake . . . . .	103
Luggage compartment lid . . . . .	41	Special driving situations . . . . .	104
Child safety lock . . . . .	46	<b>Driving dynamics</b> . . . . .	107
Power windows . . . . .	46	Audi drive select . . . . .	107
Panoramic glass roof . . . . .	48	Suspension . . . . .	108
Garage door opener . . . . .	49	Steering . . . . .	108



All wheel drive (quattro) . . . . .	109	<b>Audi connect</b> . . . . .	169
Electronic Stabilization Control (ESC) . . . . .	109	General information . . . . .	169
<b>Trailer towing</b> . . . . .	112	Audi connect Infotainment . . . . .	170
Driving with a trailer . . . . .	112	Connecting to Wi-Fi . . . . .	170
Trailer hitch . . . . .	114	Using a Wi-Fi hotspot . . . . .	171
<b>Assist systems</b> . . . . .	116	Audi connect Infotainment services . . . . .	171
<b>Assist systems</b> . . . . .	116	Audi connect vehicle control services . . . . .	171
General information . . . . .	116	Settings . . . . .	172
Surrounding area detection . . . . .	117	Troubleshooting . . . . .	173
Driver assistance menu . . . . .	119	<b>Emergency call</b> . . . . .	175
Parking aid menu . . . . .	119	Overview . . . . .	175
<b>Driving information</b> . . . . .	120	Emergency call . . . . .	175
Speed warning . . . . .	120	Online roadside assistance . . . . .	176
Camera-based traffic sign recognition . . . . .	120	<b>Navigation</b> . . . . .	178
Traffic light information . . . . .	122	Opening navigation . . . . .	178
<b>Driver assistance</b> . . . . .	124	myAudi navigation . . . . .	178
Cruise control system . . . . .	124	Entering a destination . . . . .	179
Adaptive cruise assist . . . . .	125	Stopping route guidance . . . . .	182
Distance warning . . . . .	135	Map . . . . .	182
Lane departure warning . . . . .	136	Predictive route guidance . . . . .	184
Audi pre sense . . . . .	138	Alternative routes . . . . .	185
Side assist . . . . .	141	Additional functions . . . . .	185
Emergency assist . . . . .	142	Satellite map . . . . .	186
<b>Parking and maneuvering</b> . . . . .	144	Map update . . . . .	186
Introduction . . . . .	144	Traffic information . . . . .	187
Parking aid plus . . . . .	144	Settings . . . . .	188
Rearview camera and peripheral cameras . . . . .	146	<b>Radio</b> . . . . .	190
Rear cross-traffic assist . . . . .	150	General information . . . . .	190
Assisted parking . . . . .	151	Radio functions . . . . .	191
Park assist . . . . .	154	Online radio . . . . .	194
<b>Infotainment system</b> . . . . .	157	Options and settings . . . . .	195
<b>Phone</b> . . . . .	157	Troubleshooting . . . . .	196
Introduction . . . . .	157	<b>Media</b> . . . . .	197
Setup . . . . .	157	General information . . . . .	197
Using the Audi phone box . . . . .	159	Bluetooth audio player . . . . .	197
Using the phone . . . . .	161	Online media . . . . .	198
Settings . . . . .	165	Amazon Alexa . . . . .	198
Messages . . . . .	166	Multimedia connections . . . . .	198
Troubleshooting . . . . .	167	Media playback . . . . .	200
		Options and settings . . . . .	203
		Supported media and file formats . . . . .	204
		Troubleshooting . . . . .	205

## Table of contents

<b>Interior entertainment</b> . . . . .	207	Jump starting . . . . .	265
Themes . . . . .	207	Towing . . . . .	267
<b>Smartphone interface</b> . . . . .	208	<b>Fuses and bulbs</b> . . . . .	270
Setup . . . . .	208	Fuses . . . . .	270
Troubleshooting . . . . .	209	Bulbs . . . . .	272
<b>Additional settings</b> . . . . .	211	<b>Customer information</b> . . . . .	274
System settings . . . . .	211	<b>Data privacy</b> . . . . .	274
Software update . . . . .	212	Privacy notice . . . . .	274
Connected devices . . . . .	212	Image recording . . . . .	274
Legal information . . . . .	213	Data storage . . . . .	274
<b>Maintenance and Care</b> . . . . .	215	Transmitted information . . . . .	275
<b>Checking and Filling</b> . . . . .	215	<b>Accessories and technical changes</b> . . . . .	278
Fuel . . . . .	215	Warranty . . . . .	278
Refueling . . . . .	216	Audi Literature Shop . . . . .	278
Emissions control system . . . . .	218	Driving in other countries . . . . .	278
Engine compartment . . . . .	218	Maintenance, repairs, and technical modifications . . . . .	278
Engine oil . . . . .	222	Accessories and parts . . . . .	280
Cooling system . . . . .	226	<b>Technical data</b> . . . . .	281
Brake fluid . . . . .	228	Identification data . . . . .	281
Electrical system . . . . .	229	Vehicle data . . . . .	281
Battery . . . . .	229	<b>Other information</b> . . . . .	283
Windshield washer system . . . . .	232	Brands and licenses . . . . .	283
Service interval display . . . . .	233	Disposal instructions . . . . .	283
<b>Wheels</b> . . . . .	234	Declaration of compliance for telecommunications equipment and electronic systems . . . . .	283
Tires and rims . . . . .	234	Reporting Safety Defects . . . . .	284
Tire pressure monitoring system . . . . .	252	<b>Index</b> . . . . .	286
<b>Care and cleaning</b> . . . . .	254		
General information . . . . .	254		
Car washes . . . . .	254		
Cleaning and care information . . . . .	255		
Taking your vehicle out of service . . . . .	260		
<b>Do It Yourself</b> . . . . .	261		
<b>Emergency assistance</b> . . . . .	261		
General information . . . . .	261		
Equipment . . . . .	261		
Changing a tire . . . . .	261		
Spare tire . . . . .	264		

This manual contains important information, safety precautions, and tips for using your vehicle.

### READ THIS OWNER'S MANUAL AND KEEP IT!

Read this Owner's Manual carefully before using your vehicle. Keep this manual and any other applicable documents in your vehicle at all times. This is especially important if you loan your vehicle to others or sell it.

**Updates to the Owner's Manual:** Please note that it has always been Audi's<sup>1)</sup> policy to continuously improve its products. Audi reserves the right to make changes in design and specifications, and to make additions or improvements in its products without incurring any obligation to install them on products previously manufactured. Changes by means of software updates may be possible, depending on the vehicle and market. Therefore, it is also possible that the Owner's Manual may be updated. This will be done in the form of supplements. Supplements may be provided to you in both printed and digital form. Notes in the supplement will indicate if a digital or printed supplement applies to you.

**Vehicle-specific features:** Standard equipment, equipment for specific markets, and special equipment that is available for the entire model line is described. In addition, it is possible that some of the equipment and functions will only be available at a later time or they may only be available in certain markets. Therefore, the descriptions also include items that are not available in your specific vehicle. The illustrations in this manual are a guide. Some of the details in your vehicle may differ from the illustrations. Text, illustrations, and specifications are based on the most current information available at the time of printing, and shall not constitute a basis for liability claims.

**Identifying if information is applicable:** Some sections do not apply to all vehicles. When this is the case, the beginning of the section indicates the applicability, for example "Applies to:

vehicles with speed warning system". In addition, optional or vehicle-specific equipment and functions may be indicated with an asterisk "\*" or a corresponding comment (such as "depending on vehicle equipment").

### Symbols and standards for descriptions in the Owner's Manual:

- \* Optional or vehicle-specific equipment
- The section continues on the next page.
- ⇒ *page 70* Cross reference to other descriptions or topics.
- ⇒ ⚠ Cross reference to a "WARNING".
- Directions**, such as "left", "right", "front", and "rear", are based on the vehicle's direction of travel.



#### WARNING

Text with this symbol contains information about safety and how to reduce the risk of serious personal injury or death.



#### Note

Text with this symbol contains information about reducing the risk of damage to your vehicle.



#### For the sake of the environment

Text with this symbol contains information on protecting the environment.



#### Tips

Text with this symbol contains additional useful information.

<sup>1)</sup> "Audi" refers to AUDI AG, the respective importer in a country, as well as joint ventures.

## Quick reference information

### Online information

#### myAudi

You can access the digital form of your Owner's Manual on your mobile device using myAudi.

Requirement: you must have a registered myAudi account. Your vehicle must be registered in your myAudi account.

- ▶ Visit [my.audi.com](http://my.audi.com), or
- ▶ Start the myAudi app on your mobile device.

#### Online Owner's Manual

Applies to: vehicles with Online Owner's Manual

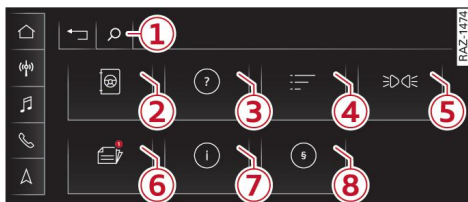


Fig. 1 Center display: Online Owner's Manual

The Online Owner's Manual can be accessed directly from the Owner's Manual in the Infotainment system. Each time you access the Owner's Manual, it will automatically display in the language that is set for your MMI.

#### Accessing the Online Owner's Manual

Requirement: the vehicle must be stationary.

- ▶ Applies to: MMI: Select on the home screen: **HELP > Owner's manual**.

#### Functions and operation

##### ① Free text search

Using the free text search, you can search for terms in the entire contents of the Owner's Manual. The search results will be grouped based on their topic.

- Press the button and enter the desired search term.

##### ② Chapter

You can display the contents of the Owner's Manual sorted by topic.

##### ③ FAQ

In order to get to know your vehicle, you can find answers to frequently asked questions in the FAQ section.

##### ④ Index

Using the index, you can search for a specific term and quickly access relevant information.

##### ⑤ Indicator lights

An overview of all available indicator lights and their meanings will be displayed.

- Press on any indicator light to display its meaning.

##### ⑥ Supplements

Supplements will be created if changes to the Owner's Manual are necessary. The **Supplements** menu will only appear if supplements are available. A notification icon displays the number of supplements that are available. This icon will disappear once the **Supplements** menu has been opened.

##### ⑦ Info

An overview of general information about the Owner's Manual will be displayed. You can also change the language in which the Online Owner's Manual content is displayed. The language will be reset when you exit the Online Owner's Manual.

##### Change language

- Applies to: MMI: Select on the home screen: **HELP > Owner's manual > Info > Change language**.

##### ⑧ Legal notes

An overview of all legal notes pertaining to the Online Owner's Manual will be displayed.

#### WARNING

To reduce the risk of an accident, only use the Online Owner's Manual when the vehicle is parked safely.

#### Tips

The content is the information that was available at the time of the editorial deadline for

this manual. There may be changes over the service life of the vehicle.

## FAQ

### Before driving

- How do I adjust the seat? ⇒ *page 62.*
- How do I adjust the steering wheel?  
⇒ *page 65.*
- How does the transmission selector work?  
⇒ *page 94.*
- What is a transmission selector position and a driving program? ⇒ *page 94.*
- How does the electromechanical parking brake work? ⇒ *page 103.*
- How do I adjust the exterior mirrors?  
⇒ *page 56.*
- How do I refuel my vehicle? ⇒ *page 216.*
- How do I operate windshield wipers with the rain sensor? ⇒ *page 58.*
- Where is the washer fluid reservoir located?  
⇒ *page 221.*
- How do I store the tire pressures? ⇒ *page 253.*
- How do I drive with a trailer? ⇒ *page 112.*

### Vehicle breakdowns and emergencies

- How do I jump start my vehicle? ⇒ *page 265.*
- Where can I find the correct tire pressure?  
⇒ *page 245.*
- What type of airbags are equipped in my vehicle? ⇒ *page 70.*
- Where are the towing eyes located on the vehicle? ⇒ *page 267.*

### Advanced functions

- How is the distance to the vehicle traveling ahead of me automatically maintained?  
⇒ *page 125.*
- How can I stay in the lane more easily?  
⇒ *page 129.*
- How can I be warned when leaving a lane?  
⇒ *page 136.*
- How do I use the parking aid? ⇒ *page 144.*
- How can I more safely drive through intersections and exits with poor visibility? ⇒ *page 149.*

- How can I have the high beam headlights controlled automatically? ⇒ *page 53.*
- How can I monitor the blind spot more easily when changing lanes? ⇒ *page 141, Side assist.*
- How can I open the luggage compartment lid with my foot? ⇒ *page 43.*
- How can I adjust the vehicle handling based on the driving situation and my preferences?  
⇒ *page 107, Audi drive select.*

### Display and operation

- How do I turn on the touch display?  
⇒ *page 21.*
- How do I operate the touch display?  
⇒ *page 19.*
- How do I control the volume? ⇒ *page 30.*
- How do I navigate through the menus?  
⇒ *page 22.*
- How do I write letters and numbers by hand?  
⇒ *page 25.*
- How do I operate functions such as the navigation by voice? ⇒ *page 27.*
- Which functions can I operate with the buttons on the steering wheel? ⇒ *page 15* or  
⇒ *page 30.*
- How can I adjust the brightness of the instrument and display lighting? ⇒ *page 56.*

### Infotainment system

- How can I connect my mobile device to use the hands-free system? ⇒ *page 157.*
- How can I switch between connected devices?  
⇒ *page 212.*
- How can I access information online?  
⇒ *page 169, Audi connect.*
- How can I use the Wi-Fi hotspot? ⇒ *page 171.*
- What are the different ways I can enter a navigation destination? ⇒ *page 179.*
- How can I operate the map functions?  
⇒ *page 182.*
- How can I display traffic information?  
⇒ *page 187.*
- How can I listen to the radio? ⇒ *page 190.*
- How can I play media? ⇒ *page 200.*

- How can I play music from my mobile device on the Infotainment system? ⇒ *page 197, Bluetooth audio player.*

### Tips and tricks

- How can I unlock my vehicle from the inside for other persons to enter? ⇒ *page 36.*
- How can I open all the windows from the outside using the remote control key? ⇒ *page 47, Convenience opening and closing.*
- How can I adjust the open position of the luggage compartment lid? ⇒ *page 43.*
- How can I synchronize both sides of the climate control system? ⇒ *page 88.*
- How can I deactivate the front passenger's airbag? ⇒ *page 73.*
- How do I secure a child safety seat? ⇒ *page 75.*
- What should I consider when driving through a car wash? ⇒ *page 254.*
- How can I drive in a way that is efficient and environmentally-friendly? ⇒ *page 99.*
- How can I request the next service appointment? ⇒ *page 233.*

# Cockpit

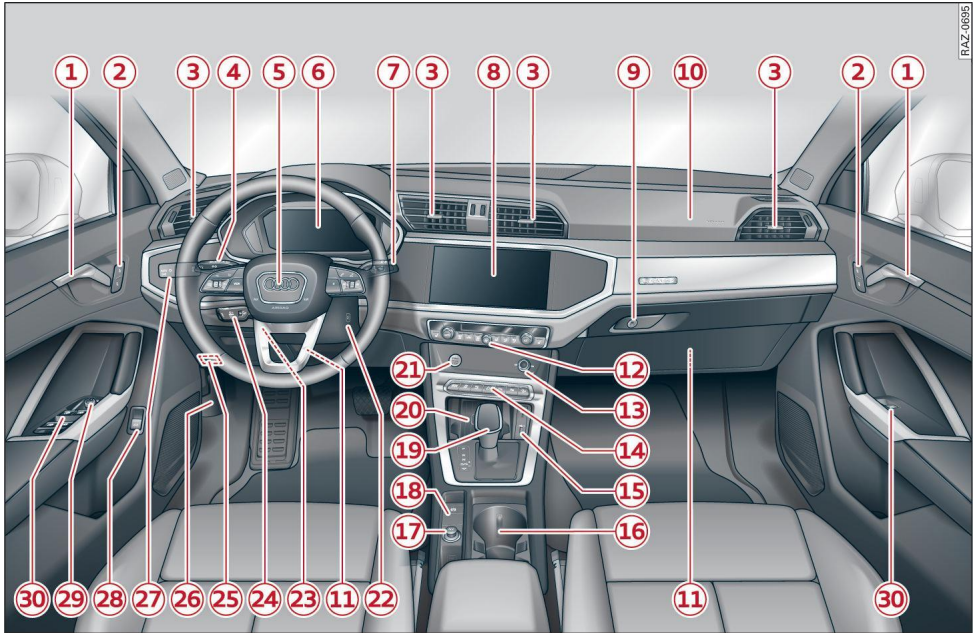


Fig. 2 Cockpit

- |  |        |   |
|--|--------|---|
| ① Door handle                                    |        |   |
| ② Central locking switch                         | 36     |   |
| ③ Air vent with thumbwheel                       |        |   |
| ④ Lever for:                                     |        |   |
| – Turn signals and high beams                    | 53     |   |
| – High beam assistant                            | 53     |   |
| – Lane departure warning                         | 136    |   |
| – Lane guidance                                  | 129    |   |
| ⑤ Multifunction steering wheel with:             |        |   |
| – Horn   |        |   |
| – Driver's airbag                                | 70     |   |
| – Operating buttons                              | 15, 30 |   |
| – Shift paddles                                  | 95     |   |
| ⑥ Instrument cluster                             | 14     |   |
| ⑦ Windshield washer system lever                 | 58     |   |
| ⑧ Center display                                 | 21     |   |
| ⑨ Lockable glove compartment                     |        |   |
| ⑩ Front passenger's airbag                       | 70     |   |
| ⑪ Knee airbag                                    | 70     |   |
| ⑫ Climate control system                         | 87     |   |
| ⑬ MMI control knob                               | 21, 30 |   |
| ⑭ Depending on equipment, buttons for:           |        |   |
| – drive select                                   | 107    |   |
| – Electronic Stabilization Control (ESC)         | 110    |   |
| – Start/Stop system                              | 100    |   |
| – Emergency flashers                             | 54     |   |
| – Parking system                                 | 144    |   |
| – Park assist                                    | 154    |   |
| – Hill descent assist                            | 105    |   |
| ⑮ USB ports with charging function               | 199    |   |
| ⑯ Depending on equipment:                        |        |   |
| – Cup holder                                     | 81     |   |
| – Mount for mobile device                        |        |   |
| ⑰ Socket   | 81     |   |
| ⑱ Electromechanical parking brake button         | 103    |   |
| ⑲ Transmission selector (automatic transmission) | 94     |   |
| ⑳ Audi phone box                                 | 159    |   |
| ㉑ <b>START ENGINE STOP</b> button                | 91     | ► |

22 Depending on equipment:

- Starting the engine when there is a malfunction . . . . . 92
- Ignition lock . . . . . 91

23 Steering wheel adjustment . . . . . 65

24 Lever for:

- Cruise control system . . . . . 124
- Adaptive cruise assist . . . . . 125

25 Connection port for the On Board Diagnostic System (OBD) . . . . . 274

26 Hood release . . . . . 220

27 Buttons for:

- Lights . . . . . 52
- All-weather lights . . . . . 52


28 Button for:

- Luggage compartment lid . . . . . 41

29 Exterior mirror adjustment . . . . . 56

30 Buttons for:

- Power windows . . . . . 46
- Child safety lock . . . . . 46

 **Tips**

Some of the equipment listed here is only installed in certain models or is available as an option.

## Overview of indicator lights



### Description

The indicator lights in the instrument cluster blink or turn on. They indicate functions or malfunctions. Some warning and indicator lights turn on when you turn on the ignition and must turn off when the drive system is turned on or while driving.

With some indicator lights, messages may appear and warning signals may sound. The indicator lights and messages may be covered by other displays. To show them again, select the second tab for messages with the multifunction steering wheel ⇒ *page 15*.










Some indicator lights in the display can be shown in several colors.

### Central indicator light











If the  or  indicator light turns on, check the message in the instrument cluster.

### Overview







The following indicator lights may be available, depending on the vehicle equipment:
















Red indicator lights	
	Central indicator light ⇒ <i>page 10</i> , Instrument cluster ⇒ <i>page 14</i>
	Cooling system ⇒ <i>page 16</i> , ⇒ <i>page 226</i> , ⇒ <i>page 226</i> , ⇒ <i>page 227</i>
	Safety belt ⇒ <i>page 69</i>
	Transmission ⇒ <i>page 98</i>
	Drive system ⇒ <i>page 99</i>
<b>BRAKE</b>	Brake system ⇒ <i>page 102</i> , ⇒ <i>page 228</i> , Electromechanical parking brake ⇒ <i>page 104</i>
	Brake system ⇒ <i>page 102</i> , ⇒ <i>page 228</i> , Electromechanical parking brake ⇒ <i>page 104</i>
<b>PARK</b>	Electromechanical parking brake ⇒ <i>page 103</i>
	Electromechanical parking brake ⇒ <i>page 103</i>
	Steering ⇒ <i>page 108</i>
	Steering lock ⇒ <i>page 108</i>
























	Adaptive cruise assist ⇒ page 127, Brake intervention request ⇒ page 130, Safe start monitor ⇒ page 134
	Adaptive cruise assist ⇒ page 127, ⇒ page 130
	Steering intervention request (Adaptive cruise assist) ⇒ page 130
	Distance warning ⇒ page 135
	Lane departure warning ⇒ page 136
	Lane departure warning ⇒ page 136
	Pre sense ⇒ page 138, ⇒ page 139
	Hood ⇒ page 221
	Engine oil pressure ⇒ page 222
	Electrical system ⇒ page 229

### Yellow indicator lights













	Central indicator light ⇒ page 10
	Engine speed limitation ⇒ page 16
	Engine speed limitation ⇒ page 16, Drive system ⇒ page 99
	Central locking ⇒ page 36
	Battery in remote control key ⇒ page 40
	Bulb failure indicator ⇒ page 55

	Adaptive light ⇒ page 55
	Headlight range control system ⇒ page 55
	Light/rain sensor ⇒ page 55, ⇒ page 60
	Windshield wipers ⇒ page 60
	Safety systems ⇒ page 71
	Engine start system ⇒ page 92
	Convenience key ⇒ page 92
	Hill hold assist ⇒ page 94
	Transmission ⇒ page 98, Clutch ⇒ page 98
	Electromechanical parking brake ⇒ page 104
	Suspension control ⇒ page 108
	Steering ⇒ page 108
	Steering lock ⇒ page 108
	Electronic Stabilization Control (ESC) ⇒ page 109, ⇒ page 111
	Electronic Stabilization Control (ESC) ⇒ page 109, ⇒ page 110, ⇒ page 111
<b>ESC OFF</b>	Electronic Stabilization Control (ESC) ⇒ page 111
<b>ABS</b>	Anti-lock Braking System (ABS) ⇒ page 111

	Anti-lock Braking System (ABS) ⇒ page 111
	Steering intervention request (Adaptive cruise assist) ⇒ page 130, Steering intervention request (Lane departure warning) ⇒ page 137
	Adaptive cruise assist ⇒ page 135
	Distance warning ⇒ page 135
	Lane departure warning ⇒ page 138
	Pre sense ⇒ page 138, ⇒ page 140, ⇒ page 140
	Side assist ⇒ page 142
	Emergency assist ⇒ page 143
	Parking aid ⇒ page 146
	Rear cross-traffic assist ⇒ page 151
	Park assist ⇒ page 155
	Emergency call function ⇒ page 176
	Tank system ⇒ page 216
	Malfunction Indicator Lamp (MIL) ⇒ page 216, ⇒ page 218, ⇒ page 264
	Engine oil level (MIN) ⇒ page 222
	Engine oil level (MAX) ⇒ page 222
	Engine oil sensor ⇒ page 222

	Engine warm-up request ⇒ page 222
	Electrical system ⇒ page 229
	Washer fluid level ⇒ page 233
	Tire pressure ⇒ page 252
<b>TPMS</b>	Tire pressure ⇒ page 252

### Other indicator lights

	Low beam headlights ⇒ page 52
	Parking lights ⇒ page 52, ⇒ page 52
	Turn signals ⇒ page 53, ⇒ page 54
	Turn signals ⇒ page 53, ⇒ page 54
	Start/Stop system ⇒ page 100
	Hill descent assist ⇒ page 106
	Trailer turn signals ⇒ page 113
<b>CRUISE</b>	Cruise control system ⇒ page 124
	Cruise control system ⇒ page 124
	Adaptive cruise assist ⇒ page 127
	Adaptive cruise assist ⇒ page 127, Adaptive cruise assist - ready to drive ⇒ page 134
	Adaptive cruise assist ⇒ page 127
	Adaptive cruise assist ⇒ page 127

	Adaptive cruise assist ⇒ page 127
	Efficiency assist ⇒ page 131
	Efficiency assist ⇒ page 131
	Efficiency assist ⇒ page 131
	Efficiency assist ⇒ page 131
	Efficiency assist ⇒ page 131
	Efficiency assist ⇒ page 131
	Efficiency assist ⇒ page 131
	Lane departure warning ⇒ page 136
	High beam headlights ⇒ page 53, ⇒ page 53
	High beam assistant ⇒ page 53
	Child safety lock ⇒ page 46
	Child safety lock ⇒ page 46
	High beam assistant ⇒ page 53, ⇒ page 55
	Convenience key ⇒ page 92
	Clutch ⇒ page 98
	Start/Stop system ⇒ page 101
	Electromechanical parking brake ⇒ page 104
	Electromechanical parking brake ⇒ page 104
	Hill descent assist ⇒ page 106

	Speed warning system ⇒ page 120
	Speed warning system ⇒ page 120
	Camera-based traffic sign recognition ⇒ page 121
	Cruise control system ⇒ page 125
	Cruise control system ⇒ page 125
	Adaptive cruise assist ⇒ page 127, ⇒ page 129
	Predictive control ⇒ page 131, Adaptive cruise assist ⇒ page 135
	Adaptive cruise assist ⇒ page 132
	Distance warning ⇒ page 135
	Lane departure warning ⇒ page 136
	Lane departure warning ⇒ page 138
	Side assist ⇒ page 142
	Emergency assist ⇒ page 143
	Parking aid ⇒ page 146
	Rear cross-traffic assist ⇒ page 151
	Park assist ⇒ page 155
	Park assist ⇒ page 155

Instrument cluster

Instrument cluster overview



Fig. 3 Audi virtual cockpit plus overview

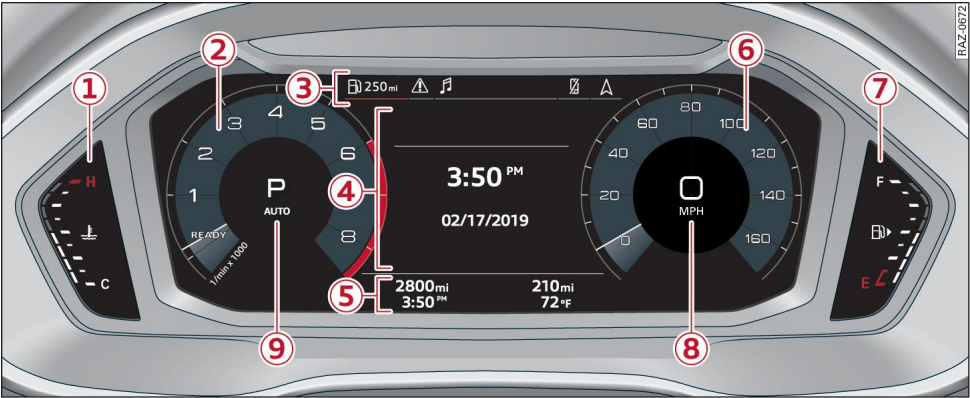


Fig. 4 Digital instrument cluster or Audi virtual cockpit overview

Depending on the vehicle equipment, the following items may appear in the instrument cluster:

- ① Display
  - Engine coolant temperature ... 16
- ② Left dial
  - Tachometer ..... 16
- ③ Tab area ..... 15
- ④ Central area ..... 15
- ⑤ Status bar (one or two lines)
- ⑥ Right dial
  - Convenience display
- ⑦ Fuel level ..... 216

- ⑧ Right additional display with speedometer
- ⑨ Left additional display with:
  - Transmission selector position ... 94
  - Audi drive select mode ..... 107

**WARNING**

If there is a serious system malfunction, the display may turn off. The indicator light may also turn on. Stop the vehicle safely. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

**i Tips**

- The following pages primarily show illustrations of the Audi virtual cockpit plus\*. The display or location of the items that are shown may vary on the different versions of the instrument cluster.
- You can select the units used for temperature, speed, and other measurements ⇒ *page 211*.
- Speeds are displayed in mph (miles per hour) or km/h (kilometers per hour).

**Operating**

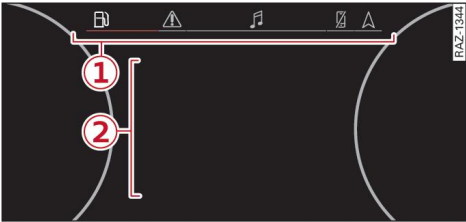


Fig. 5 Driver information system display

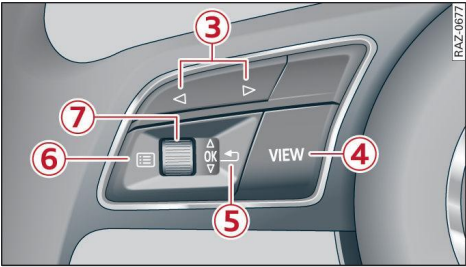


Fig. 6 Left side of multifunction steering wheel

Information is organized within various tabs ① in the instrument cluster. The tab contents are displayed in the central area ②.

Requirement: the ignition must be turned on.

**Selecting a tab**

- Press the </> button ③ repeatedly until the desired tab is selected.

**Returning to functions at higher levels**

- Press the ↶ button ⑤.

**Opening and closing the menu**

- Press the ≡ button ⑥.

**Selecting and confirming a function**

Requirement: a menu or list must be displayed.

- To select a function, turn the left thumbwheel ⑦ to the desired function.
- To confirm a selection, press the left thumbwheel ⑦.

**Switching the view**

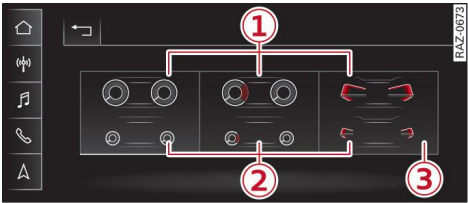
- Press the VIEW button ④ ⇒ *page 15*.

**Overview of the tabs**

Depending on vehicle equipment, the following tabs may be available:

Symbol	Description
	Vehicle functions
	Messages (this is only displayed if at least one indicator light/message is being displayed)
	Multimedia
	Phone
	Navigation

**Adjusting the display**



Applies to: Audi virtual cockpit

Fig. 7 Center display: adjusting the display

**Switching the view**

Applies to: Audi virtual cockpit

- Press the VIEW button to switch between the default view ① and the enhanced view ②.

**Adjusting the layout**

Applies to: Audi virtual cockpit

Depending on the vehicle equipment, various layouts may be available. ►

- Applies to: MMI: Select on the home screen: **SETTINGS > Display & Brightness > Audi virtual cockpit**.
- To adjust the desired layout, press ③.

### Adjusting the additional display


Applies to: Audi virtual cockpit

Depending on the vehicle equipment, the additional displays that can be selected may vary.

- Applies to: MMI: Select on the home screen: **SETTINGS > Display & Brightness > Audi virtual cockpit > Configure**.
- Select the desired additional display.

### Reducing the display

Depending on the vehicle equipment, you can hide the central area in the instrument cluster.

- Select on the instrument cluster: vehicle functions tab >  button > **Reduced display**, or
- Press the VIEW button on the multifunction steering wheel.


## Coolant temperature display

The coolant temperature display ① ⇒ *page 14* only functions when the ignition is turned on. To reduce the risk of engine damage, please observe the following notes about the temperature ranges.

### Cold range

If only the LEDs at the bottom of the gauge turn on, the engine has not reached operating temperature yet. Avoid high engine speeds, full acceleration, and heavy engine loads.

### Normal range

The engine has reached its operating temperature once the LEDs up to the center of the gauge turn on. If the  indicator light in the instrument cluster display turns on, the coolant temperature is too high ⇒ *page 226*.

#### Note

- Auxiliary headlights and other accessories in front of the air intake impair the cooling effect of the coolant.


This increases the risk of the engine overheating during high outside temperatures and heavy engine load.


- The front spoiler also helps to distribute cooling air correctly while driving. If the spoiler is damaged, the cooling effect will be impaired and the risk of the engine overheating will increase. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

## Tachometer

The tachometer ② ⇒ *page 14* displays the engine speed in revolutions per minute (RPM). The beginning of the red zone in the tachometer indicates the maximum permissible engine speed for all gears once the engine has been broken in. Before reaching the red zone, you should shift into the next higher gear, select the "D" or "S" position, or remove your foot from the accelerator pedal.

### Engine speed limitation

If the  indicator light turns on, the engine will be automatically limited to the RPM displayed in the instrument cluster. This will protect the engine components, for example during a cold start or from overheating.

If the engine speed limitation was activated by an engine control malfunction, the  indicator light also turns on. Make sure the engine speed does not go above the speed displayed, for example when downshifting. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

#### Note


The needle in the tachometer may only be in the red area of the gauge for a short period of time before there is a risk of damaging the engine. The location where the red zone begins varies depending on the engine.

## Odometer

The trip odometer and odometer are displayed in the status bar ⑤ ⇒ *page 14*.

The trip odometer shows the distance driven since it was last reset. It can be used to measure short distances. The odometer shows the total distance that the vehicle has been driven.


### Resetting the trip odometer

- ▶ Select on the instrument cluster: vehicle functions tab >  button > **Reset mi.**


#### Tips

Distances are displayed in mi (miles) or km (kilometers).

## Outside temperature display

The outside temperature is displayed in the status bar  ⇒ *page 14*.

If your vehicle is stationary or if you are driving at very low speeds, the temperature displayed in the instrument cluster may be slightly higher than the actual temperature outside due to heat radiating from the engine.

At temperatures below 41 °F (+5 °C), a snowflake symbol appears in front of the temperature display ⇒ .




#### WARNING

Do not assume the roads are free of ice based on the outside temperature display. Be aware that there may be ice on roads even when the outside temperature is around 41 °F (+5 °C) and that ice can increase the risk of accidents.



## Engine oil temperature indicator

Applies to: vehicles with engine oil temperature indicator

Depending on the vehicle equipment, the engine oil temperature  may be indicated by a bar in the instrument cluster.

- ▶ Open the vehicle functions tab and switch to the enhanced view ⇒ *page 15*.


When engine oil temperatures are low, the display --- °F (--- °C) appears in the instrument cluster. The engine has reached its operating temper-

ature when the engine oil temperature is between 176 °F (80 °C) and 248 °F (120 °C) under normal driving conditions. The engine oil temperature may be higher if there is heavy engine load and high temperatures outside. This is not a cause for concern as long as the  or  indicator lights do not turn on.

## Vehicle functions


### Overview

The trip computer is displayed in the first tab of the driver information system. Additional vehicle functions can be accessed depending on the vehicle equipment.

- ▶ Press the  button on the multifunction steering wheel.
- Trip computer ⇒ *page 17*
- Reduced display ⇒ *page 16*
- Reset trip odometer ⇒ *page 16*

 
### On-board computer

#### Changing the display

- ▶ Turn the left thumbwheel on the multifunction steering wheel  ⇒ *page 15, fig. 6* until the desired display is shown.

#### Resetting values to zero

Requirement: the **Consumption**, **Short-term memory**, or **Long-term memory** display must be selected.

- ▶ To reset the values in one of the memories to zero, press and hold the left thumbwheel on the multifunction steering wheel for one second, or
- ▶ Select on the instrument cluster: vehicle functions tab >  button > **Reset mi.**

#### Displays in the trip computer

The following displays may be shown, depending on the vehicle equipment:

- Time and date ⇒ *page 211*
- Average consumption ⇒ *page 18*
- Short-term memory overview
- Long-term memory overview

- Driver assistance ⇒ *page 127*
- Traffic sign recognition ⇒ *page 120* or traffic light information ⇒ *page 122*

### Short-term memory and long-term memory

The short-term memory collects driving information from the time the ignition is turned on until it is turned off. If you continue driving within two hours after turning off the ignition, the new values will be included when calculating the current trip information.

Unlike the short-term memory, the long-term memory is not erased automatically. You can select the time period for evaluating trip information yourself.

### Average consumption

The current consumption can be shown using a bar graph. The average consumption stored in the short-term memory is also displayed. If the bar is green, your vehicle is saving fuel (for example, using recuperation).

#### Tips

The date, time of day, and time and date format can be set ⇒ *page 211*.



## Touch display

### General touch display operation

#### General information

Applies to: touch display

The center display is a touchscreen. Operation is very similar to operating a smartphone.

#### Tips

Certain gestures are not available in every menu.

#### Pressing

Applies to: touch display

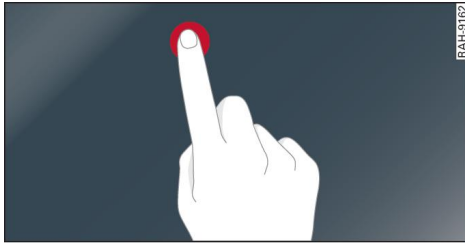


Fig. 8 Touch display: pressing

#### Selecting a function or button

- Press the desired function or button.

#### Pressing and holding

Applies to: touch display

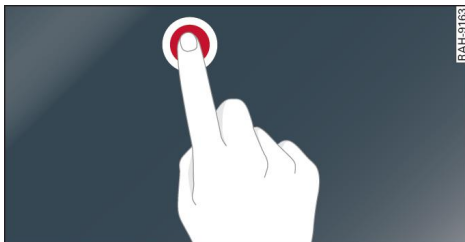


Fig. 9 Touch display: pressing and holding

#### Accessing options

For some items, you can access additional options that are not directly visible.

- Press and hold an item until the associated options are displayed.

#### Pressing and pulling

Applies to: touch display

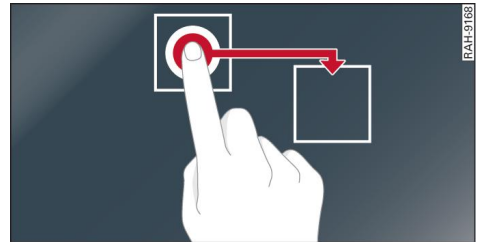


Fig. 10 Touch display: pressing and pulling

#### Moving an item

Some items can be placed in any location.

- Press and hold an item, and then use your finger to pull it to the desired location.

#### Pinching fingers together and pulling apart

Applies to: touch display

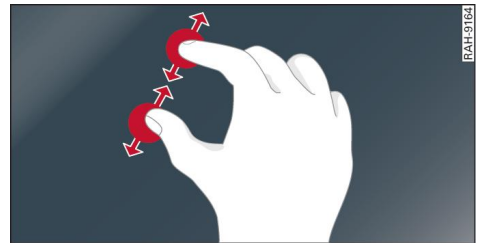


Fig. 11 Touch display: pinching fingers together and pulling them apart

#### Zooming in and out on an item

- To increase the size of an item, touch it with two fingers and pull your fingers apart.
- To decrease the size of an item, touch it with two fingers and pull your fingers together.

### Rotating

Applies to: touch display

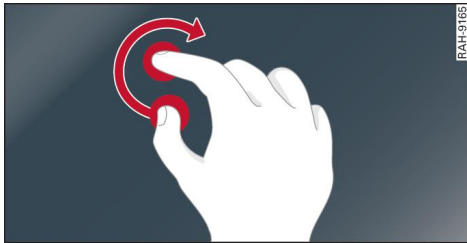


Fig. 12 Touch display: rotating

### Rotating the view or perspective

- Rotate the item using two fingers.

### Dragging

Applies to: touch display

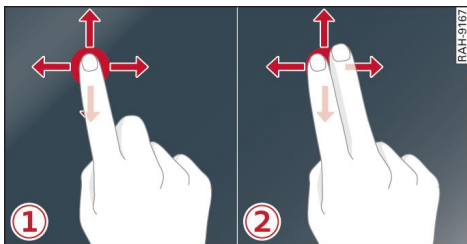


Fig. 13 Touch display: ① dragging with one finger, ② dragging with two fingers

### Scrolling or browsing through menus/lists

- To scroll through menus and lists, swipe upward or downward with one finger.
- To browse through menus and lists, swipe to the right or left with one finger.

### Tilting 3D displays

- Drag upward or downward with two fingers.

### Dragging away from/toward the edge of the screen

Applies to: touch display

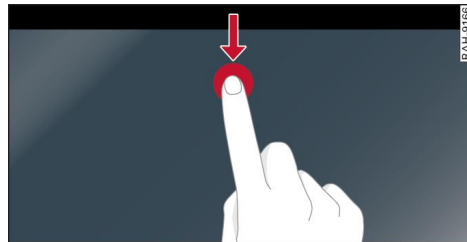




Fig. 14 Touch display: dragging away from the edge of the screen

### Opening hidden menus

The  symbol indicates that there is a hidden menu.

- Use your finger to drag inward from the upper or lower edge of the screen, or
- Press the  button.

### Closing hidden menus

- Press within the menu and drag it toward the upper or lower edge of the screen.


### Information about menu paths

This guide shows you at a glance the paths for opening a desired menu and its settings and functions.

### Example of a path

- Applies to: MMI: Select on the home screen:  
**SETTINGS > General > Date & time.**

### Following the path

- First, determine in which display the path should be entered. In this example, it is the MMI display.
- To open the home screen, press .
- If the **SETTINGS** button is not displayed, use your finger to swipe to the left or right until it appears.
- Press the **SETTINGS** button.
- If the **General** button is not displayed, swipe toward the left or right with one finger until it appears.

- Press the **General** button.
- If the **Date & time** button is not displayed, swipe upward or downward with one finger until it appears.
- Press the **Date & time** button.

### Tips

If a menu or symbol is in parentheses in the path, for example, (**General**) or (⚙️), then it is an optional menu item that does not need to be used in every system.

## Settings

- Applies to MMI: Select on the home screen: **SETTINGS > Display & Brightness > MMI**.

Possible settings:

- **Brightness**
- **Touchscreen feedback**

## Multi Media Interface

### Information about traffic safety

Audi recommends only using certain Infotainment system functions while the vehicle is stationary, such as entering a destination or pairing a mobile device. Be prepared to stop operating the Infotainment system at any time in the interest of your safety and the safety of other road users.

### WARNING

- Only use the Infotainment system when road, traffic, weather, and visibility conditions permit and always in a way that allows you to maintain complete control over your vehicle.
- This also applies to operating your mobile device via the MMI. Do not allow the visual or audio signals from a mobile device to distract you from traffic, because this increases the risk of an accident.

### Tips

Certain functions are not available while driving.

## Turning on or off


### Turning the MMI on or off

- To turn off the MMI, press and hold the MMI control knob ⇨ *page 30, fig. 21* until all Infotainment functions are turned off.
- To turn on the MMI, press the MMI control knob.

### Restarting the MMI

- Press and hold the MMI control knob for at least 10 seconds.

### Turning the center display on or off

- To turn off the center display, press  in the notification center ⇨ *page 24*.
- To turn on the center display, touch the display.

## Introduction

You can display and operate Infotainment system and vehicle functions using the touch display in the Multi Media Interface, abbreviated MMI.

### Configuration wizard

After starting for the first time, the configuration wizard helps you to set up the vehicle, for example to set the desired system language and connect a phone.

- Follow the instructions in the center display.
- Applies to: MMI: To access the configuration wizard at a later time, select on the home screen: **HELP > Configuration wizard**.

### Tool tips

You can have tool tips displayed if necessary. They introduce various MMI functions to you.

- Applies to: MMI: To open the tool tips, select on the home screen: **HELP > Tool tips > Basic information** or **Expert information**.
- Follow the instructions in the display.

### Online Owner's Manual

Applies to: vehicles with Online Owner's Manual

The Online Owner's Manual can be accessed directly from the Owner's Manual in the Infotainment system ⇨ *page 6*.

► Applies to: MMI: Select on the home screen:  
HELP > Owner's manual.

Menus and symbols



Fig. 15 MMI: center display


	Label	Description
①	Overview screen	Displays selected information tiles and provides quick access to certain functions ⇒ page 23
②	Quick access bar	Return to the home screen or the overview page, open menus quickly ⇒ page 23
③	Display area	Select a menu, apply settings, display content ⇒ page 23
④	Favorites	Use or manage favorites ⇒ page 23
⑤ – ⑦	Status bar	Operate functions and apply quick settings ⇒ page 24, display of available notifications ⑥ ⇒ page 24, status indicator ⑦ ⇒ page 24, time

Description of common symbols

You can operate the standard functions using the symbols listed. The symbols may be found in any menu, depending on the context.

Symbol	Description
←	Go back one level
×	Close the menu
🔍	Search for content
ℹ	Open explanations for a menu
⚙	Open settings for the selected menu
📱	Open the submenu
📝/✎	Adjust the settings
☆/★	Set as favorite

Symbol	Description
☐/☑	Turn functions on or off
⏻/⏷	Turn functions on or off
⦿/⦿	Turn functions on or off
...	Open additional actions
>	Open additional information for the selected menu

 **Tips**


The following information primarily shows illustrations of the center display in the largest possible screen size. The display or location of the items shown may vary depending on the vehicle equipment.

## Overview screen

Applies to: vehicles with overview screen

The overview screen is the first menu page in the MMI. Information about certain vehicle functions such as media, time, and phone is displayed in tiles. The available information tiles can be rearranged on the overview screen or replaced with others. Depending on the system context, you may be able to operate certain functions directly, such as muting the sound.


### Configuring the overview screen

- ▶ Press and hold an information tile on the overview screen.
- ▶ To change the position of an information tile, press and hold it and then slide it to the desired position.
- ▶ To replace an information tile, press  and select the desired information tile.
- ▶ Press **Done** to complete the configuration.

## Quick access area

Using the quick access area, you can return to the home screen and quickly switch between four menus that can be configured according to your preferences.

### Returning to the home screen or opening a menu quickly


- ▶ Press  or one of the four buttons.

### Configuring the quick access area

- ▶ Press and hold a button on the home screen display area or in the quick access bar.
- ▶ To move a button to the quick access bar, pull it from the display area to the quick access bar.
- ▶ To adjust the placement of the buttons in the quick access bar, pull them to the desired position in the bar.
- ▶ Press **Done** to complete the configuration.



#### Tips

The position of  cannot be adjusted.


## Display area

You can freely change the location of the buttons on the home screen display area.

### Configuring the display area

- ▶ Press and hold a button on the home screen display area.
- ▶ To adjust the placement of the buttons, pull them to the desired locations.
- ▶ Press **Done** to complete the configuration.

### Switching between menu pages



If a menu contains multiple menu pages,  is displayed in the display area. The white bar shows the location of the current menu page.


- ▶ To switch between menu pages, swipe your finger to the right or left.

## Favorites

By creating favorites, you can have quick access to various items, such as radio stations, frequently-used contacts, or vehicle settings. In the **FAVORITES** menu, the stored favorites are sorted by topic into information tiles.

### Adding a favorite

A  button indicates if you can add a favorite, such as a selected radio station. Depending on the context, you may also be able to add items without the  button to the favorites, such as entries in a list.

- ▶ Press , or
- ▶ Press and hold an item in a list.
- ▶ Press **Store as favorite**. The selected item will be added as a favorite.

### Using favorites

- ▶ Applies to: MMI: Select on the home screen: **FAVORITES**. The stored favorites will be displayed.
- ▶ To access a stored favorite, press that favorite.

Stored favorites can only be deleted or configured in the corresponding menu (such as **RADIO**). ▶

Arranging information tiles

- Applies to: MMI: Select on the home screen: **FAVORITES**.
- Press and hold the desired information tile.
- Pull the information tile into the desired position.
- Press **Done** to confirm the configuration.

Status display

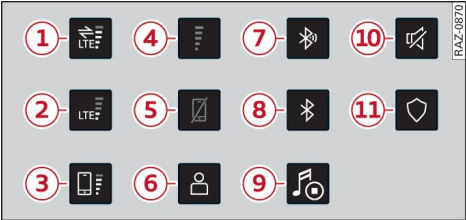


Fig. 16 Center display: frequently used symbols in the status bar

The symbols in the status bar show you information at a glance, such as if a mobile device is connected or if there is a data connection. The most common symbols are listed in the table.

	Description
①	There is a data connection. The bar indicates the signal strength of the data connection. Data is currently being transmitted.
②	There is a data connection. The bar indicates the signal strength of the data connection. No data is being transmitted now.
③	A mobile device is connected. The bar indicates the signal strength of the mobile phone connection.
④	There is no data connection.
⑤	An error occurred with the mobile device connection to the MMI.
⑥	A user is selected. If a question mark appears in the symbol, the guest user is active.
⑦	A Bluetooth device is connected.
⑧	Bluetooth is turned on, but no Bluetooth device is connected.
⑨	Audio playback was interrupted.

	Description
⑩	The audio source is muted.
⑪	Privacy settings are enabled. The additional symbol indicates which privacy settings are currently activated ⇒ page 276.

Notification center

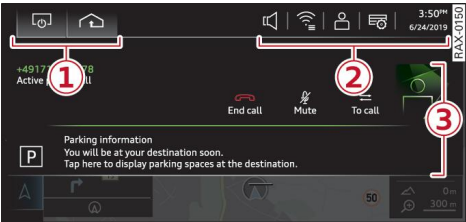
 


Fig. 17 Center display: notification center

Notifications can be displayed in the center display. They will be hidden after a certain period of time and a symbol for them will appear in the status bar ⑥ ⇒ page 22, fig. 15. In the notification center, you can view these notifications ③ ⇒ fig. 17, apply quick settings ②, and operate functions ①.

Using the notification center

- To open the notification center, pull the status bar downward, or
- Press the  button on the status bar.
- To turn quick settings on or off, press the respective symbol ①.
- To apply quick settings, press the respective symbol ②.
- To obtain additional information about a notification, press it.
- To delete a notification, pull it toward the right edge of the screen.
- If there are more than four notifications in the notification center, the older notifications will be hidden. To display the older notifications, drag your finger upward on the screen.

Selecting which content is displayed



You can set whether some notifications should be displayed.

- To set the displayed content, press , or

- Applies to MMI: Select on the home screen: **SETTINGS > Notifications.**
- Select and confirm which notifications should be displayed.





Operating functions

Depending on the vehicle equipment, the following functions can be operated in area ①:

Symbol	Description
	<b>Press:</b> turns the center display on or off <b>Press and hold:</b> turns screen cleaning mode on or off
	Opens the garage door opener function

Applying quick settings

Depending on vehicle equipment, the following quick settings may be available in area ②:

Symbol	Description
	Apply sound settings
	Manage connected devices
	Manage users
	Set displayed content in the notification center
3:50 PM 6/24/2019	Set date and time

Text input

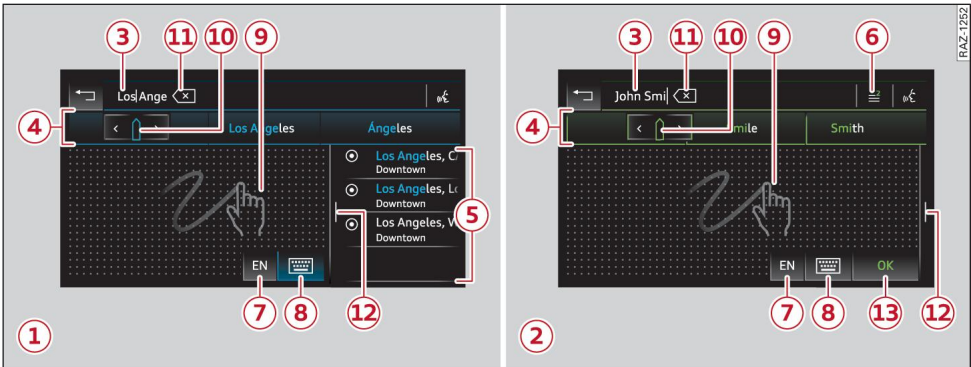


Fig. 18 Center display: text input diagram with MMI Navigation plus ① / MMI Radio plus ②

Overview

In the input fields of the various menus, you can enter letters, numbers, and characters, for example to find a contact in the directory. The text input display ① or ② depends on the vehicle equipment.

The text that is currently entered is displayed in the center display ③. Depending on the context, suggestions will be given based on the characters already entered ④ and results will be displayed ⑤ or ⑥.

Opening text input

- Tap inside the input field ③.

Changing the input language

Requirement: multiple input languages must be defined in the MMI ⇒ page 26.

- To switch between the defined input languages, press the button ⑦.

Switching the input methods

- To switch between handwriting input or the on-screen keyboard, press the button ⑧.

### Entering text

- Applies to: the on-screen keyboard: To enter text, press the buttons on the keyboard. Depending on the usage context, you may also be able to swipe over the letters.
- Applies to: handwriting input: To enter text, simply write in the input area using one finger ⑨. You can write the separate characters next to each other or one on top of the other without having to move your finger over after writing a character. When you end the entry, the writing is interpreted by the system.
- Applies to: the on-screen keyboard with an input language that uses accented characters: To enter accented characters (such as â, ç, ñ, ö), press and hold a character that has accented versions available and select the desired accented character.
- Applies to: handwriting input: To enter a space, drag a line from left to right in the input section ⑨.
- To select a location in the text input, press on the desired location in the input field. You can control the location more accurately using the slider in the display ⑩.
- To delete individual characters, press <X> ⑪, or
- Applies to: handwriting input: Drag a line from right to left in the input section ⑨.
- To delete multiple characters, press and hold <X> ⑪.
- To delete all characters at a specific location, press and hold <X> ⑪ and drag up to the desired location <sup>1)</sup>. When released, the highlighted characters are deleted.

### Accepting suggestions


- To accept a suggestion ④, press on it.

### Selecting entries from the results list

- Applies to: MMI Navigation plus: To enlarge the results list ⑤, press the button ⑫ or pull it toward the left.
- Applies to: MMI Radio plus: To view the results list, press the button ⑥, ⑫, or ⑬.
- To select an entry from the results list, press on it.

- To display more content in the results list, drag your finger upward or downward on the screen.

### Setting the input language or keyboard layout

- Select on the home screen: **SETTINGS > Language & Keyboard > Keyboard**.
- To define additional input languages, press the  button.
- To change the keyboard layout for an input language, press >. For example, you can select between QWERTZ and QWERTY.

---

<sup>1)</sup> Depending on the country or equipment



## Voice operation

### General information

You can operate many functions in the vehicle easily using voice commands.

#### Using the voice operation system effectively

- Speak clearly and distinctly at a normal volume. Speak louder when driving faster.
- Emphasize the words in the commands evenly and do not leave long pauses.
- To reduce background noise, close all openings, such as doors and windows. Make sure that passengers are not speaking when you are giving a voice command.
- Do not direct the vents toward the hands-free microphone, which is in the roof headliner near the front interior lights.
- Only use the system while seated in the driver's seat. All handsfree microphones are oriented for this seat position.



#### WARNING

- Direct your full attention to driving. As the driver, you have complete responsibility for safety in traffic. Only use the functions in such a way that you always maintain complete control over your vehicle in all traffic situations.
- Do not use voice operation in emergencies because your voice may change in stressful situations. The system may take longer to dial the number or may not be able to dial it at all. Dial the emergency number manually.



#### Tips

There are no voice guidance\* prompts when a dialog is active.

## Speech dialog system

### Operating

Applies to: vehicles with voice recognition system

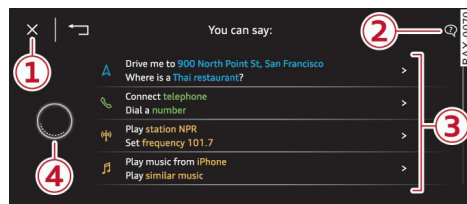

 



 
Fig. 19 Center display: voice recognition system

Requirement: the ignition and the MMI must be turned on. A system language supported by the voice recognition system must be set. There must be no phone calls in progress and the parking aid must not be active.

#### Operating by button

- Briefly press the  button on the multifunction steering wheel, or depending on the context, press  in the center display.
- Say the desired command after the signal tone.
- To turn off the voice recognition system, press and hold the  button on the multifunction steering wheel, or say or press **Cancel** ①  
⇒ fig. 19.


#### Operating with voice commands

- Applies to: MMI: To operate the voice recognition system using voice commands, select on the home screen: **SETTINGS > General > (Speech dialog system) > Activate the speech dialog system with "Hey Audi"**.
- Say the activation phrase **Hey Audi** together with the desired command.
- To turn off the voice recognition system, say **Cancel** or press and hold the  button on the multifunction steering wheel, or press ①  
⇒ fig. 19.

#### Commands and assistance

In the voice recognition system menu, possible commands or help settings are displayed for the current dialog ③.

- To receive additional help for the current dialog, say or press **Help** ②.

- ▶ To pause voice recognition, say or press **Pause** (4). To reactivate voice recognition, press (4) again or briefly press the  button on the multifunction steering wheel.

### Additional functions

Applies to: vehicles with voice recognition system

#### Command during voice output

If the function is turned on, you can simply say a new command during a prompt.

- ▶ Applies to: MMI: Select on the home screen: **SETTINGS > General > Speech dialog system > Allow commands during voice output.**

#### Online recognizer

Applies to: vehicles with online recognizer

You can activate the online recognizer for additional functions and to improve the results of voice recognition. A supported menu language must be selected. When there is an active Internet connection, the spoken command is evaluated in the vehicle and online.

- ▶ When you turn on the voice recognition system for the first time, a menu for the online recognizer will open, or
- ▶ Applies to MMI: Select on the home screen: **SETTINGS > General > Speech dialog system > Consent to online speech recognizer.**
- ▶ Read the licensing agreements and accept them.

#### Amazon Alexa

Applies to: vehicles with Amazon Alexa Integration

You can activate Amazon Alexa to access certain functions. A reduced number of commands for Amazon Alexa are available during this.

Requirement: you must be logged in to your myAudi account in the vehicle. The online recognizer must be activated. A system language that is supported by both the voice recognition system and Amazon Alexa must be selected.


- ▶ Applies to: MMI: Select on the home screen: **USERS > Connect to Amazon Alexa.**
- ▶ Follow the instructions in the display.
- ▶ Applies to: MMI: To operate Amazon Alexa using voice commands, select on the home

screen: **SETTINGS > General > (Speech dialog system) > Activate the speech dialog system with "Hey Audi".**

- ▶ Say the activation phrase "Alexa" together with the desired command.



#### Note

Read the information about Audi connect, especially regarding connectivity costs  in *General information on page 169.*



#### Tips

 
Audi provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.

 
 
## External voice operation

Applies to: vehicles with external speech dialog system


You can access and control the voice operation on a connected mobile device through your vehicle.

#### Turning external voice operation on or off

Requirement: the ignition and the MMI must be turned on. A mobile phone must be connected to the MMI with the **Handsfree** profile  *page 157*. The mobile device being connected must have voice control that can be controlled externally. There must be no phone calls in progress and the parking aid must not be active.

- ▶ To turn on external voice operation, press and hold the  button on the multifunction steering wheel.
- ▶ To turn off the external voice operation, press and hold the  button longer on the multifunction steering wheel or press **Cancel**.

#### Using external voice operation

- ▶ Say the desired command after the signal tone.
- ▶ To reactivate voice recognition when it is paused, press the  button briefly on the multifunction steering wheel or press **Resume**.



#### Tips

Audi simply provides access to control your mobile device with voice operation and does



not assume any responsibility for the contents and commands within the external voice control.

## Global functions

### Additional function buttons

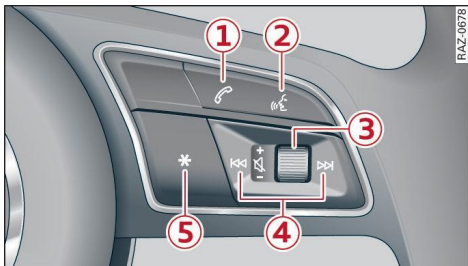


Fig. 20 Right side of the multifunction steering wheel



Fig. 21 Center console: MMI control knob

### Adjusting the volume

You can adjust the volume of an audio source or a system message (for example, from the voice recognition system) when the sound is playing.

- To increase or decrease the volume, turn the right thumbwheel ③ ⇒ fig. 20 upward or downward, or turn the MMI control knob ⇒ fig. 21 to the right or left.
- To mute, push the right thumbwheel or the MMI control knob.

### Selecting the previous/next track or station

- Press the <<< / >>> button ④ or briefly press the MMI control knob to the left or right.

### Fast forward/rewind

- Press and hold the <<< / >>> button ④ or press the MMI control knob to the left or right until the desired playback position is reached.

### Quick access steering wheel button

Depending on vehicle equipment, the button ⑤ may provide quick access to various functions.

- 📞 button, see ⇒ page 89.

You can program the \* button with various functions.

- To bring up the function that is currently set, press the \* button.
- To perform the function that is currently set, press and hold the \* button, or:
- Applies to MMI: Select on the home screen: **VEHICLE > Settings & Service > Steering wheel button assignment**.
- Select and confirm the desired function.

### Turning voice operation on or off

🗨️ button ②, see ⇒ page 27.

### Using the phone functions

📞 button ①, see ⇒ page 163.



#### WARNING

Adjust the volume of the audio system so that signals from outside the vehicle, such as police and fire sirens, can be heard easily at all times.

# Personalization

## Users

### General information

Applies to: vehicles with personalized user settings

Depending on vehicle equipment and your country, your vehicle may be able to manage different users in the MMI. Each user will be assigned the settings that they last used.

Before you begin driving, you can select a user in the MMI and load personalized Infotainment and vehicle settings.

Possible users in the MMI:

- **myAudi user:** as a myAudi user, you can use Audi connect services that require a myAudi account. Certain settings are transferred online to your myAudi account. If you log into your myAudi account in another vehicle, you can load your settings in the other vehicle.
- **Local user:** as a local user, you can only store settings in the current vehicle. Your settings cannot be transferred to other vehicles. Audi connect services that can only be used with a myAudi account will not be available.
- **Guest user:** as a guest user, you can store settings in the vehicle without changing the settings for other users. Audi recommends only using the guest user temporarily, because settings can be overwritten by other users.

Depending on vehicle equipment, the following options may be used to detect the active user so that the user settings can be loaded automatically before you start driving.

- Vehicle key

Requirement: the driver's door has been opened.

The detected user must be shown in the MMI. Confirm the user shown, select another user ⇨ *page 31*, or add another user ⇨ *page 31*.



### WARNING

It may not be possible to load Infotainment and vehicle settings, or they may only load partially. To reduce the risk of an accident, the driver must be responsible for the Infotainment system settings and vehicle settings at all times.

ment system settings and vehicle settings at all times.



### Tips

- Certain Infotainment and vehicle settings (such as mirrors, last radio stations) may be stored, depending on vehicle equipment. You can find additional information in the MMI. Select on the home screen: **SETTINGS** > **General** > **Legal notes** > **About Audi connect**.
- Applies to: myAudi users: The stored settings can only be transferred to vehicles that are capable of receiving the transmitted information. There may be restrictions that prevent this, particularly in other countries.
- Applies to: myAudi users: The settings can only be transferred and loaded when there is coverage from the applicable mobile phone service provider.
- Applies to: myAudi users with PIN protection turned on: If the MMI displays a detected user but you simply start driving or wait without entering the 4-digit PIN, then the guest user will be selected. Some settings for the detected myAudi user will be transferred to the guest user.

### User management

Applies to: vehicles with user management

#### Opening user management

Applies to: MMI

- ▶ Press **USERS** on the home screen.

#### Selecting a user

Applies to: MMI

- ▶ Press on the desired user.
- ▶ Enter the 4-digit PIN, if necessary.

#### Adding myAudi users

Applies to: MMI and Audi connect

Requirement: you must have successfully registered at my.audi.com and have created a 4-digit PIN.

- ▶ Press **Add user**.

- ▶ Press **Log in now** to log in with your myAudi credentials.
- ▶ Follow the system instructions.

To transfer existing destinations from the MMI to your myAudi account one time, confirm the system prompts with **Yes**.

### Adding a local user

Applies to: MMI

- ▶ Press **Add user**.
- ▶ Press **Initiate setup**.
- ▶ Press **Local user**.
- ▶ Follow the system instructions.

### Editing users

Applies to: MMI

Requirement: the user must be selected and that user's settings must be loaded.

- ▶ Press on the user.


Depending on the user type, available options may include the following.

**PIN protection:** when this function is turned on, the 4-digit PIN must be entered before any settings for this user can be loaded.


**Remove the user from the vehicle:** the user will only be deleted in the vehicle from the list in the MMI.

### Removing users

Applies to: MMI

- ▶ Select on the home screen: **USER** >  > *one or more entries* > **Delete**. The user will only be deleted from the list in the MMI. The authorizations for the user in the vehicle (such as key user) will not be removed.

#### Tips

- The guest user cannot be renamed.
- When changing users, the new user settings are loaded in the vehicle.
- If a user has the  symbol, PIN protection is active. To turn off PIN protection, you can edit the user.
- Depending on the country, you may be able to use an Audi app or my.audi.com.

### Key user

Applies to: vehicles with key user management

The vehicle owner must be set as the key user to use some of the specific Audi connect vehicle control services that depend on vehicle equipment.

The key user automatically has remote access authorization. This remote access authorization is necessary to control certain functions that depend on vehicle equipment, such as Audi connect vehicle control services, through the myAudi app.

### Setting the key user

Requirement: a key user must not be set yet.

- ▶ To set a key user for the vehicle, you will need a myAudi account. Register in the myAudi app or at my.audi.com.
- ▶ Add your vehicle to the myAudi app.
- ▶ Follow the instructions in the myAudi app.


### Managing additional users

Depending on the vehicle equipment, you can grant authorization for additional users to use Audi connect vehicle control services at my.audi.com.

### Removing the key user

If you remove the key user, all other users that were stored by the key user at my.audi.com and their authorizations will be deleted. It will no longer be possible to use Audi connect vehicle control services, depending on vehicle equipment.

Requirement: a key user must be set.

- ▶ Applies to: MMI: Select on the home screen: **USERS** >  > **Remove key user**.

#### Tips

- Depending on the country and model there may be an app other than the “myAudi app” available for your vehicle. For additional information, see my.audi.com.
- You do not need to log into the vehicle with a myAudi user in order to use Audi connect vehicle control services, which depend on the vehicle equipment.

- If you sell your vehicle, reset all settings to the factory default settings.

# Opening and closing

## Central locking

### General information

#### WARNING

- If you leave the vehicle, turn off the ignition and take the key with you. This applies particularly when children remain in the vehicle. Otherwise, children could start the vehicle or operate electrical equipment (such as power windows), which increases the risk of an accident.
- No one, especially children, should stay in the vehicle when it is locked from the outside, because the windows can no longer be opened from the inside. Locked doors make it more difficult for emergency workers to enter the vehicle, which increases the risk of death.
- Applies to: **child safety lock:** No one, especially children, should stay in the vehicle when the child safety lock is activated, because the rear doors and the windows can no longer be opened from the inside. This increases the risk of death.

### Description

All doors and the luggage compartment lid can be centrally unlocked and locked at once. You can select in the MMI if the entire vehicle or only the driver's door should unlock when unlocking the vehicle ⇒ *page 35*. The turn signals flash twice when you unlock the vehicle and flash once when you lock the vehicle. If they do not flash when locking, check if all doors and lids are closed.

Depending on the vehicle equipment, you may have different options for centrally unlocking and locking your vehicle.

- Vehicle key ⇒ *page 39*
- Sensors in the door handles ⇒ *page 39*
- Lock cylinder in the driver's door ⇒ *page 36*
- Interior central locking switch ⇒ *page 36*

### Key / vehicle key

The term “vehicle key” refers to the remote control key or convenience key\*. The convenience key\* is a remote control key with special functions ⇒ *page 39* and ⇒ *page 91*.

### Automatic locking

If you unlock the vehicle but then do not open any of the doors, the luggage compartment, or the hood within a short period time, the vehicle locks again automatically. This feature prevents the vehicle from being accidentally left unlocked for a long period of time.

### Automatic locking (Auto Lock)

The Auto Lock function locks all doors and the luggage compartment lid once the speed exceeds approximately 9 mph (15 km/h). The vehicle will unlock again if the unlock function in the central locking switch is pressed, the “P” position is selected, or the ignition is turned off.



You can open the doors individually from the inside by pulling the door handle one time. To open the rear doors individually, you must pull the door handle twice.

In the event of a crash with airbag deployment, the doors will also automatically unlock to allow access to the vehicle.


### Unintentionally locking yourself out

Only lock your vehicle when all of the doors and the luggage compartment lid are closed and there is no key in the vehicle. This reduces the risk of locking yourself out accidentally.

The following features help to reduce the risk of locking your vehicle key in the vehicle:

- If the driver's door is open, the vehicle cannot be locked by pressing the  button on the vehicle key or by touching the locking sensor\* on a door.
- Applies to: vehicles with convenience key: If the vehicle key that was used most recently is inside the luggage compartment, the luggage compartment lid will automatically open again slightly, after it closes ⇒ .



- Applies to: vehicles with convenience key: If the vehicle key that was last used is detected inside the vehicle, then it will not be possible to lock the vehicle from the outside ⇒ .

**WARNING**

Observe the safety precautions ⇒ *page 34*.

**Note**

Applies to: vehicles with convenience key

The following applies when locking the vehicle:

- If the vehicle key that was last used is detected inside the passenger compartment, then the vehicle cannot be locked from the outside **using the sensor**. Take the vehicle key with you and lock the vehicle again. Otherwise, the vehicle will not be protected against unauthorized access.
- If you try to lock the vehicle **using the button on the vehicle key** while the front passenger's or rear door is open, and you accidentally place the vehicle key inside the passenger compartment and close the door, the vehicle will lock at first. But if the keyless system detects a vehicle key inside the vehicle after it locks, then the vehicle will unlock again. The turn signals will flash several times to indicate this. If you do not open the vehicle to remove the vehicle key within a brief period, then the vehicle will lock automatically. This prevents the vehicle from being left unlocked for long periods of time. The vehicle key will then be locked inside the vehicle.
- If the luggage compartment lid closes and the system detects that the last vehicle key that was used is inside the luggage compartment, then the luggage compartment lid will open again slightly. The turn signals will flash several times to indicate this. The doors will lock. Always take the vehicle key with you, or unauthorized persons may be able to enter the vehicle.

**Tips**


- Do not leave valuables unattended in the vehicle. A locked vehicle is not a safe!
- The LED in the driver's door rail blinks when you lock the vehicle. If the LED turns on for approximately 30 seconds after locking, there is a malfunction in the central locking system. Have the problem corrected by an authorized Audi dealer or authorized Audi Service Facility.


### Setting the central locking system

You can adjust the central locking system to your preferences. The settings depend on the vehicle equipment.

- Applies to MMI: Select on the home screen: **VEHICLE > Settings & Service > Central locking**.

### Door unlocking

- If you select **All**, all doors and the luggage compartment lid will be unlocked when unlocking the vehicle.
- If you select **Driver's door**, only the driver's door will be unlocked. To unlock all doors and the luggage compartment lid, press the  button on the vehicle key twice. In vehicles with a convenience key\*, only the driver's door will unlock when you pull the driver's door handle. If you pull another door handle, the entire vehicle will be unlocked.

The entire vehicle will always be locked if you press the  button.

### Long press to open windows

You can select if all windows should open using the vehicle key ⇒ *page 47, Convenience opening and closing*.

### Fold mirrors

You can select if the exterior mirrors automatically fold in when locking. ►

### Tone when locking<sup>1)</sup>

You can select if an audio signal sounds when locking the vehicle.

### Open with convenience key




Applies to: vehicles with convenience key

You can deactivate the feature for unlocking and locking with the sensor ⇒ *page 39*.

### Central locking switch



Fig. 22 Driver's door: central locking switch

- To lock or unlock the vehicle, press the  or  button ⇒ .

When locking the vehicle with the central locking switch, the following applies:

- The doors and the luggage compartment lid cannot be opened from the outside for security reasons, for example to reduce the risk of unauthorized entry while stopped at a light.
- The LED in the central locking switch turns on when all doors are closed and locked.
- You can open the doors individually from the inside by pulling the door handle one time. To open the rear doors individually, you must pull the door handle twice.
- In the event of a crash with airbag deployment, the doors will unlock automatically to allow access to the vehicle.


### WARNING

- Observe the safety precautions ⇒ *page 34*.
- The central locking button works when the ignition is turned off.

- The central locking switch is inoperative when the vehicle is locked from the outside.

### Messages

The following messages may appear, depending on the vehicle equipment:

 **Driver's door: malfunction! Shift to P before leaving vehicle. See owner's manual**

There is a malfunction in the driver's door. Secure the vehicle before exiting by selecting the "P" position. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

### Mechanically unlocking or locking the doors

*All doors must be unlocked or locked individually if the central locking system fails.*

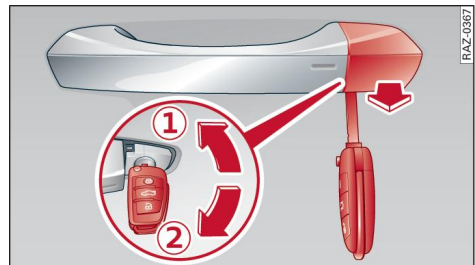


Fig. 23 Driver's door: door lock cylinder

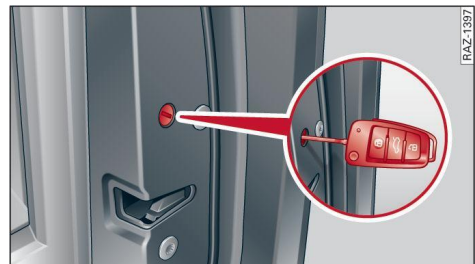
 


Fig. 24 Door: mechanically locking

Applies to: vehicles with anti-theft alarm system:  
After unlocking using the lock cylinder and opening the driver's door, you must press the  ►

<sup>1)</sup> This function is not available in all countries.

button on the vehicle key or turn on the ignition. Otherwise the alarm will sound. When mechanically locking the doors, the anti-theft alarm will not be activated.

### Unlocking or locking the driver's door with the vehicle key

- Fold out the vehicle key ⇒ *page 38, fig. 25.*
- Insert the vehicle key into the slot under the door handle and pry the cap off ⇒ *fig. 23.*
- To unlock the driver's door, turn the key to the unlock position in the direction of arrow ① ⇒ *fig. 23.*
- Pull the door handle to open the driver's door.
- To lock the driver's door, select the "P" position, close the door, and turn the key once to the close position ② ⇒ ⚠.

### Locking the front passenger's door and rear doors using the vehicle key

The mechanical lock is located on the edge of the doors. It is only visible when the door is open.

- Fold out the vehicle key ⇒ *page 38, fig. 25.*
- If necessary, remove the cap from the opening ⇒ *fig. 24.*
- Insert the vehicle key into the slot on the inside and turn it all the way to the right (on the right door) or left (on the left door).
- If necessary, install the cap in the opening and close the door.

Once the front passenger's door or rear doors close, it will no longer be possible to open them from the outside. The front doors can be opened from the inside by pulling the door handle one time. The rear doors can be unlocked from the inside by pulling the door handle one time and then opened by pulling the door handle again. If the child safety lock in one of the rear doors is activated, you must first pull the door handle from the inside. Then you can open the door from the outside.



#### WARNING

Observe the safety precautions ⇒ *page 34.*



#### Note

To reduce the risk of damaging the key and the lock cylinder, only insert the key into the lock cylinder in the direction shown ⇒ *fig. 23.*

### Anti-theft alarm system

Applies to: vehicles with anti-theft alarm system

If the anti-theft alarm system detects a vehicle break-in, audio and visual warning signals are triggered. The anti-theft alarm system is turned on or off when locking or unlocking your vehicle. If the alarm is triggered, it will shut off automatically after a certain amount of time.

#### Turning off the alarm manually

- To turn off the alarm, press the button on the vehicle key or turn on the ignition.

Depending on the vehicle equipment, the anti-theft alarm system may have the following features:

#### Break-in security feature

The alarm will be triggered if the doors, the hood, or the luggage compartment lid are broken into, or if a door that was previous unlocked using the lock cylinder is opened.

#### Interior/towing protection monitor

The alarm will be triggered if there are movements detected in the vehicle interior (for example, by animals) or if there is a change in the vehicle angle (for example, when the vehicle is being towed).

You can prevent the alarm from being triggered by deactivating the interior/towing protection monitor.

#### Deactivating the interior/towing protection monitor

There are the following options for deactivating the interior/towing protection monitor:

- Press the button on the vehicle key a second time **within two seconds**. Or
- Applies to: vehicles with convenience key:  
Touch the sensor on the door handle a second time **within two seconds**. Or

- ▶ Turn the vehicle key in the door lock to the close position a second time **within two seconds**. Or
- ▶ Applies to: vehicles with MMI: Select on the home screen: **VEHICLE > Settings & Service > Interior monitoring**.

If you lock the vehicle in this way, then the interior/towing protection monitor will remain off until the next time the vehicle is unlocked.

### Tips

The interior/towing protection monitoring only functions correctly when the windows and the roof\* are closed.

## Keys

### Key set

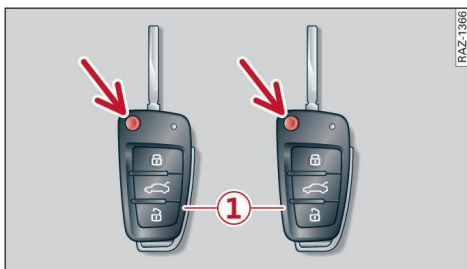


Fig. 25 Your vehicle key set



Fig. 26 Vehicle key: PANIC button

The key set includes two vehicle keys when delivered from the factory.

### 1 Vehicle key


You can unlock and lock your vehicle with the vehicle key. To fold the key out, press the release button ⇒ *fig. 25*.

If necessary, you can use the vehicle key to:

- Applies to: vehicles with lockable glove compartment: locking/unlocking the glove compartment.
- Manually unlock and lock the doors ⇒ *page 36*.
- Unlock the luggage compartment lid using the manual release ⇒ *page 45*

### 2 PANIC button

In an emergency, you can press the PANIC button to trigger a visible and audible vehicle alarm. You can do this as long as you are near your vehicle (within the key's working range).

- To trigger the alarm, press the **PANIC** button  ⇒ *fig. 26*.
- To turn the alarm off, press the **PANIC** button again.

### Lost key/replacing a key

If a vehicle key is lost, contact an authorized Audi dealer or authorized Audi Service Facility. Have that vehicle key deactivated. It is important to bring all keys with you. If a key is lost, you should report it to your insurance company.

Applies to: Audi connect vehicle control: If a mobile device with active Audi connect vehicle control (Remote Lock & Unlock) has been lost, it must be deactivated ⇒ *page 171*.

### Electronic immobilizer

The immobilizer prevents unauthorized use of the vehicle.

In some cases, it may not be possible to establish vehicle drive ready mode if there is also a vehicle key from a different vehicle manufacturer on the key chain.

### Data in the vehicle key

When driving, service and maintenance-relevant data is continuously stored in your vehicle key. An authorized Audi dealer or authorized Audi Service Facility can read out this data and tell you about the work your vehicle needs.



### WARNING

Observe the safety precautions ⇒ *page 34*.

**Note**

Protect the key against high temperatures and direct sunlight.

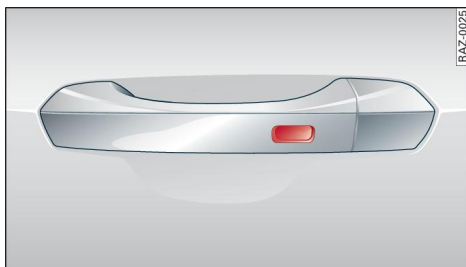
**For the sake of the environment**

Batteries and electrical/electronic devices must be disposed of in an environmentally safe manner ⇒ *page 283, Disposal instructions*.

**Tips**

- The vehicle key function can be temporarily disrupted by interference from transmitters near the vehicle working in the same frequency range (such as a mobile device or radio equipment). Always check if your vehicle is locked.
- Applies to MMI: You can view the number of keys programmed to the vehicle by selecting on the home screen: **VEHICLE > Settings & Service > Vehicle information**.
- A key tag that contains information about the vehicle key set may be attached to the key set at the factory. The key tag can be used to reorder vehicle keys. Keep the key tag. If you sell the vehicle, give the key tag to the buyer.
- The system complies with United States FCC regulations and ISSED regulations ⇒ *page 283*.

## Unlocking and locking the vehicle



Applies to: vehicles with convenience key

**Fig. 27** Door handle: sensor\* for locking the vehicle

Depending on the vehicle equipment, you may have various options for unlocking and locking your vehicle. The settings in the MMI specify which doors will unlock ⇒ *page 35*.

### Unlocking or locking using the vehicle key buttons

- ▶ To unlock the vehicle, press the button ⇒ *page 38, fig. 25*.
- ▶ To lock the vehicle, press the button **once**.

### Unlocking or locking using the sensors

Applies to: vehicles with convenience key

- ▶ To unlock the vehicle, grasp the door handle.
- ▶ To lock the vehicle, close the door and touch the sensor on the door handle **once** ⇒ *fig. 27*. Do not grasp the door handle while locking the vehicle, or else the vehicle will not lock. The door cannot be opened for a brief period directly after locking it. This way you have the opportunity to check if the doors locked correctly.

### Deactivating the sensor unlocking function

Applies to: vehicles with convenience key

You can deactivate the unlock function with the convenience key (keyless access) for one locking and unlocking cycle.

- ▶ Place the selector in the "P" position; otherwise, the vehicle cannot be locked.
- ▶ Close the door.
- ▶ Press the lock button on the convenience key and touch the sensor on the door handle (driver's door) one time within five seconds of pressing the button ⇒ *fig. 27*. Do not grasp the door handle while locking the vehicle, or else the vehicle will not lock.
- ▶ To check if the function has been deactivated, wait at least 10 seconds and pull the door handle again. The door should not open.

After that, it will only be possible to unlock the vehicle using the remote control key or by mechanically unlocking the lock cylinder. Keyless access will be active again after the next time the vehicle is locked/unlocked.

### Unlocking and locking with the Audi connect vehicle control service<sup>1)</sup>

Applies to: vehicles with Audi connect vehicle control

Requirement: Audi connect vehicle control services must be set up ⇒ *page 172, Setup*. The vehicle must be parking and the ignition must be turned off.




#### WARNING

Observe the safety precautions ⇒ *page 34*.



#### Tips

- Only use the vehicle key when you can see the vehicle.
- The vehicle can only be locked when the "P" position is selected.
- Do not use the vehicle key to lock and unlock when you are inside the vehicle. Otherwise, you could trigger the anti-theft alarm\*. If this happens, press the  unlock button.



#### Tips

Applies to: vehicles with convenience key

- When unlocking or locking the vehicle, the convenience key cannot be more than approximately 4 feet (1.5 m) away from the door handle or luggage compartment.
- Unlocking with the convenience key (keyless access) can be deactivated ⇒ *page 39*.
- To prevent the vehicle battery from discharging, the energy management gradually turns off convenience functions that are not needed. You then may no longer be able to unlock your vehicle with the sensors.

### LED and battery in the vehicle key

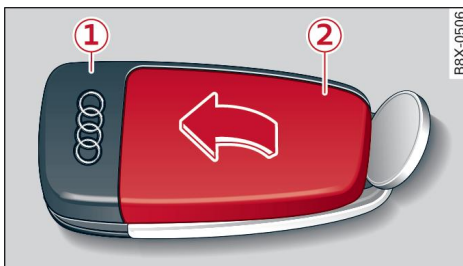


Fig. 28 Vehicle key (rear side): opening the cover

#### LED in the vehicle key


The LED in the vehicle key (front side) indicates the status of the key.

- ▶ If you press a button briefly, the LED blinks once.
- ▶ If you press and hold a button (convenience opening/closing), the LED blinks several times.
- ▶ If the LED does not blink, the vehicle key battery is drained. Replace the battery in the vehicle key.

#### Replacing the vehicle key battery

The replacement battery in the vehicle key must meet the same specifications as the original battery (battery type **CR 2032**).

- ▶ Pry the cover **2** off of the key **1** using a coin ⇒ *fig. 28*.
- ▶ Insert the new battery with the "+" facing up.
- ▶ Press the cover back onto the key until it clicks into place.

If the  indicator light appears with a corresponding message, the vehicle key battery is drained and must be replaced.



#### WARNING

A coin cell battery is installed in the vehicle key.

- If batteries or coin cell batteries are swallowed or enter the body in any other way, they can cause serious injuries or death

<sup>1)</sup> In certain countries.

within a short period of time. There is a risk of chemical burns.

- Keep vehicle keys and key fobs with batteries out of the reach of children.
- Keep new or used batteries away from children.
- If the battery compartment on a vehicle key does not close securely, stop using the key and keep it away from children.
- Seek medical attention immediately if you suspect that a battery was swallowed or has entered the body in any other way.



### For the sake of the environment

♻ Batteries and electrical/electronic devices must be disposed of in an environmentally safe manner ⇒ *page 283, Disposal instructions*.

## Synchronizing the vehicle key

The vehicle key must be synchronized if the vehicle does not lock/unlock with the remote control.

- ▶ Press the button on the vehicle key.
- ▶ Insert the key in the driver's door lock within 30 seconds ⇒ *page 36*.
- ▶ Press the button or button.

## Luggage compartment lid

### General information



### WARNING

- No one, especially children, should stay in the vehicle when it is locked from the outside, because the windows can no longer be opened from the inside. Locked doors make it more difficult for emergency workers to enter the vehicle, which increases the risk of death.
- Always close and lock the luggage compartment lid and the doors when the vehicle is not in use. Otherwise someone, such as a child, could enter the vehicle through the luggage compartment and become locked inside it. To reduce the risk of injury, do not

allow children to play in or around the vehicle.

- To reduce the risk of injuries by pinching, make sure that no one is in the operating area of the luggage compartment lid when closing, especially near the hinges, at the upper and lower edges of the lid, or all around the edge of the lid in general.
- After closing the luggage compartment lid, make sure that it is latched. Otherwise, the luggage compartment lid could open suddenly while driving, which would increase the risk of an accident.
- Never drive with the luggage compartment lid ajar or open, because exhaust fumes from outside can enter the vehicle interior and increase the risk of asphyxiation.
- If there is a luggage carrier (such as a bicycle rack) on the luggage compartment lid, the luggage compartment lid may not open completely under certain circumstances or it could close by itself if open due to the extra weight. Therefore, the open luggage compartment lid must be given additional support or the cargo must first be removed from the luggage carrier.
- Applies to: vehicles with power-operated or sensor-controlled luggage compartment lid: Pay careful attention when closing the luggage compartment lid. Otherwise, you could cause serious injury to yourself or others despite the pinch protection.



### Note

The luggage compartment lid can bump into objects such as the garage ceiling when opening and become damaged.



### Tips

When the vehicle is locked, the luggage compartment lid can be unlocked separately by pressing the button on the vehicle key. The luggage compartment lid locks automatically when it is closed again.



### Opening and closing the luggage compartment lid



Fig. 29 Rear lid: handle



Fig. 30 Driver's door: opening the luggage compartment lid

### Opening the luggage compartment lid

- Applies to: vehicles without convenience key: Unlock the vehicle or the luggage compartment lid using the button on the vehicle key and press the handle in the luggage compartment lid  $\Rightarrow$  fig. 29. Or
- Applies to: vehicles with convenience key: Press the handle in the luggage compartment lid  $\Rightarrow$  fig. 29. When the luggage compartment is locked, the vehicle key cannot be more than approximately 4 feet (1.5 m) away from the luggage compartment. Or
- Applies to: vehicles with automatic luggage compartment lid: Select the "P" position and pull the button  $\Rightarrow$  fig. 30 in the driver's door.

### Closing the luggage compartment lid

- Applies to vehicles without automatic luggage compartment lid: Use the inside grip to slightly pull the luggage compartment lid down and allow it to drop gently to close. Or
- Applies to: vehicles with automatic luggage compartment lid: Note  $\Rightarrow$  page 42.

### WARNING

Observe the safety precautions  $\Rightarrow$  page 41.

### Automatic luggage compartment lid

Applies to: vehicles with automatic luggage compartment lid

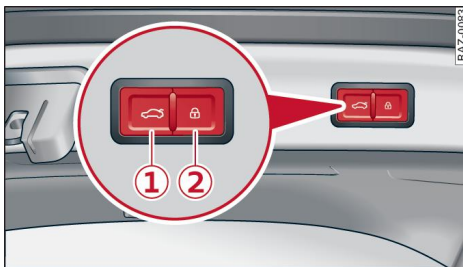


Fig. 31 Luggage compartment lid: ① closing button\*, ② lock button\* (vehicles with convenience key\*)

The luggage compartment lid can be opened and closed automatically  $\Rightarrow$  in *General information* on page 41.

### Opening the luggage compartment lid





- When the ignition is turned off, press and hold the button on the vehicle key for at least one second  $\Rightarrow$  page 38, fig. 25. Or
- Select the "P" position and pull the button\* in the driver's door  $\Rightarrow$  page 42, fig. 30. Or
- Applies to: vehicles with convenience key: Press the handle in the luggage compartment lid  $\Rightarrow$  page 42, fig. 29. When the luggage compartment is locked, the vehicle key cannot be more than approximately 4 feet (1.5 m) away from the luggage compartment.

### Closing the luggage compartment lid

- Press the button in the luggage compartment lid. Or
- Press the handle in the luggage compartment lid  $\Rightarrow$  page 42, fig. 29. Or
- Press the luggage compartment lid downward slightly. Or
- When the ignition is turned on, pull the switch in the driver's door  $\Rightarrow$  page 42, fig. 30 until the luggage compartment lid is closed. Or
- Applies to: vehicles with convenience key: Press and hold the button on the vehicle key while the ignition is off until the luggage


 



compartment lid closes. Make sure there is enough distance (maximum of approximately 4 feet (1.5 m) between you and the luggage compartment lid. Or

- ▶ Press the  button in the luggage compartment lid. Or
- ▶ Applies to: vehicles with convenience key: With the ignition off, press the  /  button in the luggage compartment lid. The vehicle key must not be more than approximately 4 feet (1.5 m) away from the luggage compartment and it must not be inside the vehicle. If you press the \* button, then the vehicle will lock.

### Stopping automatic opening or closing


The automatic opening or closing of the luggage compartment lid will stop if:


- ▶ You press the  button or press the handle in the luggage compartment lid ⇒ *page 42, fig. 29* again. Or
- ▶ You press the  button on the convenience key\*. Or
- ▶ Something blocks the luggage compartment lid or makes it difficult for the lid to move.

If you press the button  or the handle in the luggage compartment lid ⇒ *page 42, fig. 29* again, the luggage compartment lid will open or close again.

### Storing the luggage compartment lid opening position

The position must be at a certain height or higher to store.

- ▶ Bring the luggage compartment lid into the desired open position. If you want to move the luggage compartment lid to a lower position, move it slowly in small increments; otherwise, the luggage compartment lid will close automatically.
- ▶ Press and hold the  button in the luggage compartment lid for at least four seconds to store the new opening position. A visual and audio signal will follow.
- ▶ To set a higher open position, wait at least five seconds and then carefully press the luggage compartment lid upward.

- ▶ Press and hold the  button again for at least four seconds to store the desired opening position.

### Manually opening and closing the luggage compartment lid

If the electric motor malfunctions or the vehicle battery charge level is low, the luggage compartment lid can be opened or closed by hand. Extra force will be needed to do this. Move the lid slowly to reduce the amount of force needed.

- ▶ Pull the luggage compartment lid down slightly by the inside handle and then press on the lid until it latches.

 


#### WARNING

Observe the safety precautions ⇒ *page 41*.



#### Tips


If the luggage compartment lid is open while the vehicle key is inside the luggage compartment or the passenger compartment, then the \* button on the luggage compartment lid will be disabled.

### Opening and closing the luggage compartment lid with foot motion (kicking movement)

Applies to: vehicles with sensor-controlled luggage compartment lid



Fig. 32 Vehicle rear: foot motion (example)

The luggage compartment lid can be opened and closed automatically <sup>1)</sup> ⇒  in *General information on page 41*.

Requirements: the ignition must be off and the convenience key function must be activated in the MMI. You must be carrying your convenience key\* with you. You must be standing at the center behind the luggage compartment lid. Depending on vehicle equipment, it may also be possible to stand slightly off-center at the back of your vehicle.

### Activating and deactivating the function

You can turn the foot motion function for the luggage compartment lid on or off by activating or deactivating the function for unlocking with the convenience key (keyless access) in the central locking menu ⇒ *page 35, Setting the central locking system*.

### Opening and closing the luggage compartment lid


When opening, the turn signals will give visual confirmation.


When closing, there will be audio confirmation. If the vehicle was locked before the luggage compartment lid was opened, then the vehicle will be locked again automatically once the lid is closed.


- ▶ To open or close the luggage compartment lid, move your foot back and forth (foot motion) under the bumper in a single movement ⇒ *fig. 32*. Do not touch the bumper. Make sure you have secure footing. The luggage compartment lid will open or close once the system detects the movement.

### Stopping automatic opening or closing

The automatic opening or closing of the luggage compartment lid will stop if:

- ▶ You repeat the foot motion that is described.
- ▶ You push the button  ⇒ *page 42, fig. 31* or the handle in the luggage compartment lid ⇒ *page 42, fig. 29* again, or

- ▶ You press the  button on the convenience key, or
- ▶ Something blocks the luggage compartment lid or makes it difficult for the lid to move.

If you press the button  ⇒ *page 42, fig. 31* or the handle in the luggage compartment lid ⇒ *page 42, fig. 29* again, then the luggage compartment lid will open/close again.

### Information about using the foot motion correctly

The luggage compartment lid will only open or close if you perform the movement as described. This prevents the luggage compartment lid from opening or closing due to similar movements, such as when you walk between the rear of the vehicle and your garage door. In some situations, the function may be limited or temporarily unavailable. This may happen if:

- You are standing too close to the bumper or too far away from it.
- The luggage compartment lid was closed or opened immediately beforehand.
- You park close to a hedge and the branches move back and forth under the vehicle for a long period of time.
- You clean your vehicle, for example with a pressure washer or in a car wash.
- There is heavy rain.
- The bumper is very dirty, for example after driving on roads that have been treated with salt.
- There is interference with the convenience key's radio signal, such as from mobile devices or remote controls.
- The convenience key is located inside the luggage compartment or vehicle interior while the luggage compartment lid is still open. In this case the luggage compartment lid cannot be closed using a foot motion.

### Information about malfunctions

The following are examples of situations where the luggage compartment lid might open unintentionally:

<sup>1)</sup> The closing function applies to vehicles that also have automatic luggage compartment lid operation.

- When sweeping underneath the rear bumper
- If there is a strong stream of water or steam
- During maintenance and repairs in the rear bumper area
- If there are gates moving near the bumper

To prevent malfunctions, you can deactivate the foot motion function for the luggage compartment lid: ⇒ *page 44, Activating and deactivating the function.*



### WARNING

- Observe the safety precautions ⇒ *page 41.*
- Please note that when you have the convenience key with you, the sensor-controlled luggage compartment lid could open or close unexpectedly during activity near the rear of the vehicle. This increases the risk of an accident.



### Note

- Please note that when you have the convenience key with you, the sensor-controlled luggage compartment lid could open or close unexpectedly during activity near the rear of the vehicle (for example, the lid could hit the ceiling in a garage).
- Always make sure there is no valid vehicle key within the operating area of the luggage compartment lid if you do not intend it to be there.




### Note

To prevent the luggage compartment lid from opening unintentionally in the following situations, deactivate the function for unlocking with the convenience key (keyless access) in the MMI ⇒ *page 44, Activating and deactivating the function:*

- If you parked your vehicle near obstacles, such as lamp posts, pillars, or garage doors, or in underground garages with a low ceiling height.
- Each time you wash your vehicle
- When using a car wash
- Before all service and repair work on the vehicle
- Before attaching a bike rack or a trailer

## Manually unlocking the luggage compartment lid

*The luggage compartment lid can be released from the inside in an emergency.*

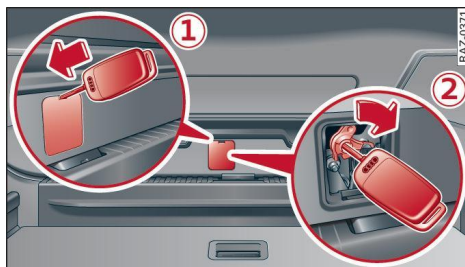

**Fig. 33** Rear lid opening: access to the emergency release

- ▶ Fold the backrest on the rear bench seat forward ⇒ *page 84.*
- ▶ Fold out the vehicle key ⇒ *page 38, fig. 25.*
- ▶ Pry the cover ☞ off using the vehicle key ①.
- ▶ Press the lever with the vehicle key in the direction of the arrow ② to release the luggage compartment lid.
- ▶ Fold the backrest backward until it locks into place.



### WARNING

Observe the safety precautions ⇒ *page 41.*



### WARNING

If you have folded the backrests into the upright position, always check if the lock is correctly engaged by pulling forward on the backrest.

### Child safety lock

The child safety lock prevents the rear doors from being opened from the inside and the rear power windows from being operated.

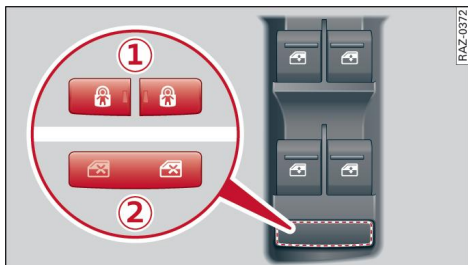


Fig. 34 Driver's door: controls




Applies to: vehicles with manual child safety locks

Fig. 35 Rear door: manual child safety lock


#### Vehicles with button

Applies to: vehicles with power child safety locks

- To activate and deactivate the child safety lock (door handle and power window switch) for a rear door, press the left or right  button in the driver's door ① that corresponds to that rear door ⇒ fig. 34. The LED in the button will turn on or off.
- Make sure the child safety lock is working by checking the function on the rear power window switch and door handle.

#### Vehicles with button

Applies to: vehicles with manual child safety locks

- To activate or deactivate the child safety lock for the power window switch in the rear doors, press the  button in the driver's door ② ⇒ fig. 34. The LED in the button will turn on or off.
- To activate or deactivate the manual child safety lock for the rear door handle, open the rear

door and turn the key switch either in the direction of the arrow (to activate) or opposite the direction of the arrow (to deactivate) using with the vehicle key ⇒ fig. 35. This will disable the function of the rear door handle.



- Make sure the child safety lock is working by checking the function on the rear power window switch and door handle.


When the child safety lock is turned on, the following functions are disabled:

- The rear inner door handles
- The rear power windows
- The central locking switch\* in the rear

#### Message in the instrument cluster display

The following messages may appear, depending on the vehicle equipment:

 /  **Child safety lock: malfunction! Please contact Service**

There is a malfunction in the child safety lock. Press the  button again.

If the message stays on, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

#### WARNING

- Observe the safety precautions ⇒ page 34.
- A malfunction in the child safety lock could allow the rear doors to be opened from the inside, which increases the risk of an accident.

### Power windows

#### Opening and closing the windows

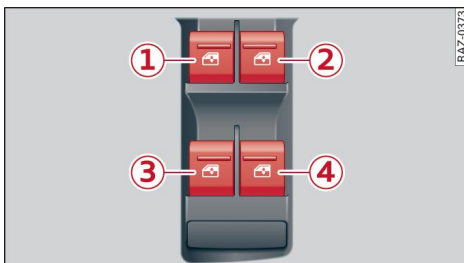


Fig. 36 Driver's door: power window switch

Power window switches:

- ① Left front door
- ② Right front door
- ③ Left rear door
- ④ Right rear door

## Opening and closing the windows

All power windows can be operated from the driver's seat. All power window switches are equipped with a two-stage function:

- ▶ To open or close the window completely, press the switch down or pull the switch up briefly to the second level. The operation will stop if the switch is pressed or pulled again.
- ▶ To select a partially open position, press or pull the switch to the first level until the desired window position is reached.

## Correcting a malfunction in the one-touch up/down function

If necessary, you can reactivate the one-touch up/down function if it malfunctions.

- ▶ Pull the power window switch up until the window is completely raised.
- ▶ Release the switch and pull it up again for at least one second.



### WARNING

- Observe the safety precautions ⇒ *page 34*.
- Never close the windows carelessly or in an uncontrolled manner, because this increases the risk of injury.



### Tips

- You can still open and close the windows for several minutes after turning the ignition off. The power window switch is not disabled until the driver's door or front passenger's door is opened.
- The power windows are equipped with pinch protection. The automatic window may stop closing and will open all the way again even if no obstacle is detected. Pull the power window switch up until the window is completely raised.

## Convenience opening and closing

Applies to: vehicles with convenience key

## Convenience opening and closing the windows and roof\*

You can set in the MMI if all windows can open at once ⇒ *page 35, Setting the central locking system*.

- ▶ Press and hold the button on the remote control key until all windows reach the desired position ⇒ **A**. Or:
- ▶ Touch the sensor\* on the door handle ⇒ *page 39, fig. 27* until all of the windows and the roof\* are closed. Do not place your hand in the door handle when doing this.

When all of the windows and the roof\* are closed, the turn signals will flash once.



### WARNING

- Observe the safety precautions ⇒ *page 34*.
- Never close the windows or the roof\* carelessly or in an uncontrolled manner, because this increases the risk of injury.
- For safety reasons, always pay attention when closing the windows and the roof so that no one is pinched.



### Tips

Audi recommends that you only use the button on the vehicle key to open the windows when they are in your line of sight and when you are no more than 6.5 feet (2 m) away from the vehicle.

# Panoramic glass roof

## Operating the roof and roof sunshade

Applies to: vehicles with panoramic glass roof and roof sunshade

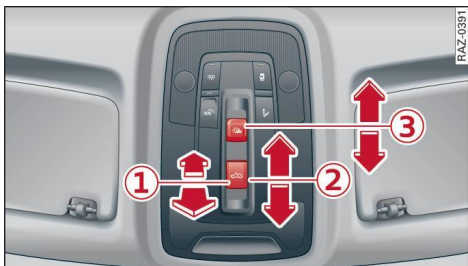


Fig. 37 Headliner: panoramic glass roof and sunshade\* buttons

The control buttons are equipped with a two-stage function.

If the sunshade is closed, it will automatically open when the roof is tilted or opened.

## Operating the roof sunshade

Applies to: Q3

The roof sunshade cannot be closed completely if the roof is open.

- ▶ Opening and closing the sunshade: push the switch in the headliner ③ briefly toward the rear or forward to the second level.
- ▶ Partially opening the sunshade: press the switch to the first level until the sunshade reaches the desired position.

## Operating the roof sunshade

Applies to: Q3 Sportback

The roof sunshade cannot be closed completely if the roof is open.

- ▶ Opening and closing the sunshade: push the switch in the headliner ② briefly toward the rear or forward to the second level.
- ▶ Partially opening the sunshade: press the switch to the first level until the sunshade reaches the desired position.

## Operating the roof

- ▶ Tilting the roof: press the switch in the headliner briefly up to the second level ①.

- ▶ Closing the tilted roof: pull the switch down briefly to the second level.
- ▶ Applies when the sunshade is open: Opening the roof: push the button toward the rear briefly to the second level ②.
- ▶ Closing the opened roof: push the switch forward briefly to the second level.
- ▶ Applies when the sunshade is open: Opening partially: push, press, or pull the switch to the first level until the roof reaches the desired position.

## Quick opening

You can also open the roof and roof sunshade in one movement.

- ▶ Push the switch back briefly to the second level ② twice in a row.

If necessary, you can interrupt the quick opening or closing process by pressing the button again.

## Roof emergency closing

If an object is detected when closing, the roof will open again automatically. In this case, you can then close it with the power emergency closing function.

- ▶ Within five seconds after the roof opens automatically, pull the switch until the panoramic glass roof is closed.



## WARNING

- Observe the safety precautions ⇒ page 34.
- To reduce the risk of injury, always pay attention when closing the roof. Always turn off the ignition and take the key with you when leaving the vehicle.



## Note

Always close the roof when you leave the vehicle and when there is precipitation to reduce the risk of damage to the interior equipment, particularly the electronic equipment.



## Tips

- After turning off the ignition, the roof and sunshades can still be operated for several

minutes as long as neither of the front doors have been opened.

- It is not possible to open the roof when temperatures are too low.

## Garage door opener <sup>1)</sup>

### Description

Applies to: vehicles with garage door opener

With the garage door opener, you can activate systems such as the garage doors, security systems, or house lights from inside your vehicle. These functions are operated in the MMI. Multiple receivers can be programmed, which can control the functions of up to eight<sup>2)</sup> hand-held transmitters.



### WARNING

- When operating or programming the garage door opener, make sure that no people or objects are in the area immediately surrounding the equipment. People can be injured or property can be damaged if struck when closing.
- Do not allow yourself to be distracted from traffic by viewing and operating the center display.



### Tips

- If you sell your vehicle, reset all settings to the factory default settings ⇒ *page 212*.
- The system complies with United States FCC regulations and ISSED regulations ⇒ *page 283*.



### Tips

- Before you program your system to the garage door opener, first check the compatibility:
- Ask an authorized Audi dealer or authorized Audi Service Facility or check at [www.homelink.com](http://www.homelink.com). You can also find more information about HomeLink there.

- You can display information about HomeLink (compatibility level/status/country code/HomeLink generation) in the MMI:
- Select on the home screen: **VEHICLE > Settings & Service > Garage opener > i**.

### Operation

Applies to: vehicles with garage door opener

Requirements: the remote control transmitter must be programmed ⇒ *page 50, Programming*, the vehicle must be within range of the system, and the ignition must be turned on.

There are multiple options to open or close the system (such as the garage door).

- To display the button (**Garage opener**) for the garage door opener, press the button in the status bar ⇒ *page 24*.
- If you have only programmed one remote control transmitter, press the button in the status bar on the center display ⇒ *page 22*. Or
- If you have programmed multiple remote control transmitters, press the button in the status bar on the center display ⇒ *page 22* and then press the button for the respective system. Or
- Applies to: vehicles with programmable steering wheel button: If you have configured the programmable steering wheel button, press the button ⇒ *page 30*. Or
- Applies to: vehicles with GPS pairing: If you have programmed **Location pairing**, press the respective button in the center display (notification center ⇒ *page 24*). As you approach the system, the button is displayed on the MMI. Or
- When reverse gear is selected, the parking system\* / rearview camera\* / peripheral camera\* will appear in the center display. To display the buttons of the first three garage door openers, press the button in the status bar and then press the button for the respective system.

If transmission was successful, the message:

**Send to: XXX** will appear.

<sup>1)</sup> Not available in all countries.

<sup>2)</sup> The possible number of hand-held transmitters depends on the equipment.

### Programming

Applies to: vehicles with garage door opener







You can program both fixed code and rolling code systems in the MMI using the procedure that is described.

Requirement: the ignition must be turned on.

#### Programming the system

Applies to: MMI

Requirement: the hand-held transmitter must be present and the vehicle must be within range of the system (such as the garage door) that you would like to program. If you program more than three remote control transmitters, assign the first three spots to the systems that you would also like to use when driving in reverse.

- ▶ To display the  button for the garage door opener, press the  button in the status bar ⇒ *page 24*.
- ▶ If you are programming the garage door opener for the **first time**, press the  button on the center display. Follow the instructions in the MMI. Or
- ▶ If you would like to program **other** systems, select on the home screen: **VEHICLE > Settings & Service > Garage opener**. Select the desired button: . Follow the instructions in the MMI.
- ▶ If you would like to **reprogram** systems that are already programmed, select on the home screen: **VEHICLE > Settings & Service > Garage opener**. Press the  button and select  for the system to be reprogrammed. Select: **Program**. Follow the instructions in the MMI.

With some systems, the garage door opener will be available immediately after programming. With other systems, the garage door opener must also be synchronized.

#### Synchronizing<sup>1)</sup>

Requirement: the hand-held transmitter must already be programmed and the vehicle must be within range of the system (such as the garage door).

If the system synchronization is performed directly after the programming procedure, follow the instructions on the MMI.

If you would like to sync at a later time:

- ▶ **Applies to: MMI:** Select on the home screen: **VEHICLE > Settings & Service > Garage opener**.
- ▶ Press the button for the system that you would like to synchronize.
- ▶ Follow the instructions in the MMI.

#### Location pairing



Applies to: vehicles with location pairing


For easier operation, you can program your system's location.

Requirements: the respective hand transmitter must be programmed ⇒ *page 50* and the vehicle must be located in front of the system.

- ▶ If you have programmed your system, follow the instructions in the MMI. Or

If you would like to set up location pairing at another time:

- ▶ **Applies to: MMI:** Select on the home screen: **VEHICLE > Settings & Service > Garage opener**.
- ▶ Press the  button.
- ▶ Press the  button for the system your vehicle is facing.
- ▶ Select: **Location pairing**.
- ▶ Follow the instructions in the MMI.

Only a maximum of three systems can be displayed in the notification center ⇒ *page 24*. If you would like to have all systems displayed, press .

#### Renaming programmed systems

You can rename the programmed systems according to your preferences (names may have a maximum of 10 characters).



- ▶ If you have programmed your system, follow the instructions in the MMI. Or

If you would like to change the name at another time:

- ▶ **Applies to: MMI:** Select on the home screen: **VEHICLE > Settings & Service > Garage opener**. ▶




<sup>1)</sup> Only applies to rolling code systems



- Press the  button.
- Press the  button for the system that you would like to rename.
- Select: **Rename**. If necessary, delete the preset name, such as Garage door opener 1.
- Follow the instructions in the MMI.

### Deleting programmed systems

The programmed systems can be deleted individually or all at once.

- Applies to: MMI: Select on the home screen: **VEHICLE > Settings & Service > Garage opener**.
- Press the  button.
- To delete an **individual** system, press the  button for the desired system. If the check mark  is set, select: **Delete**.
- To delete **all** systems, select: **All > Delete**.




#### Tips

- Make sure the batteries in the hand-held transmitter are charged before starting the programming process.
- The programming process may take up to 30 seconds. It may be necessary for the hand-held transmitter to be pressed again in the meantime.
- The garage door opener may need to be synchronized with the system after programming. Follow the manufacturer's instructions for doing this.



#### Tips

- In some cases, the system may need to be programmed in a different mode ("D mode").
- Turn on the ignition.
  - Applies to: MMI: Select on the home screen: **VEHICLE > Settings & Service > Garage opener**.
  - Press and hold the desired button .
  - Select **Yes, in D mode** and follow the instructions on the MMI.

## Lights and vision

### Exterior lighting

#### Turning the lights on or off

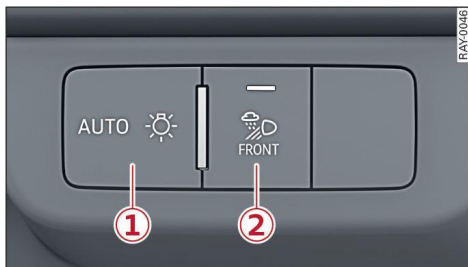


Fig. 38 Instrument panel: light button module

#### ① Light switch

Press and hold ① until the desired light function is selected. The selected function is displayed briefly in the instrument cluster. When turning on the ignition, the AUTO light function is automatically selected.

- AUTO - The automatic headlights adapt to the surrounding brightness automatically. The daytime running lights will automatically turn on. In vehicles for certain markets, you can turn the automatic daytime running lights on and off in the MMI.
- - You can turn the low beam headlights on manually once the ignition is turned on.
- - You can turn on the parking lights at speeds below 20 mph (32 km/h).
- USA models: OFF - You can turn off all light functions at speeds below 6 mph (10 km/h).
- Canada models: OFF - You can only turn off all light functions when the ignition is off while the vehicle is stationary.

When the low beam headlights or parking lights are turned on, the respective or indicator light appears in the instrument cluster.

#### ② All-weather lights

Applies to: vehicle with all-weather lights: The headlights automatically adjust so that there will be less glare, for example when the road surface is wet.

#### Automatic headlight range control

Your vehicle is equipped with automatic headlight range control. It reduces glare for oncoming traffic if the vehicle load changes. The headlight range adjusts automatically.

#### Audi adaptive light

Applies to: vehicles with Audi adaptive light

Audi adaptive light provides better visibility when driving in the dark. The lights are adapted to the road conditions based on speed, such as when driving on expressways, rural roads, at intersections, and around curves. The adaptive light only functions when the automatic headlights are activated.



#### WARNING

 
- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras → [page 116](#) to → [page 119](#).
- Automatic headlights are only intended to assist the driver. The driver is still responsible for controlling the headlights and may need to turn them on or off manually depending on light and visibility conditions. For example, fog cannot be detected by the light sensors. So always turn on the low beams under these weather conditions and when driving in the dark.



#### Tips

- If the vehicle battery has been discharging for a while, the parking light may turn off automatically. Avoid using the parking lights for several hours.
- Follow the regulations applicable to the country where you are operating the vehicle when stopping the vehicle and when using the lighting systems.
- Only the front headlights turn on when the daytime running lights are turned on. In vehicles in certain markets, the tail lights will also turn on.
- In cool or damp weather, the inside of the headlights, turn signals, and tail lights can fog over due to the temperature difference between the inside and outside. They will clear shortly after turning them on. This

does not affect the service life of the lighting.

- When the parking lights are turned on and the ignition is turned off, the  symbol appears in the light switch module.

## Turn signal and high beam lever

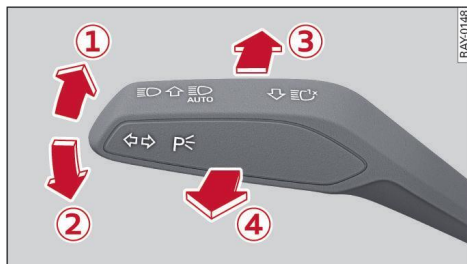




Fig. 39 Lever: turning the light functions on or off


The lever operates the turn signals, the high beams and the headlight flasher.

### Turn signals

The turn signal will activate when you move the lever into a turn signal position while the ignition is on. The respective  or  indicator light will flash. The turn signal blinks three times if you tap the lever (convenience turn signal).

- ① Right turn signal
- ② Left turn signal


If an indicator light blinks twice as fast as usual, a turn signal bulb has failed. Carefully drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

The  symbol does not have any function assigned to it in vehicles in certain countries.

### High beams and headlight flasher

- Move the lever to the corresponding position:

- ③ High beams on (vehicles with High beam assistant\* ⇒ page 53)
- ④ High beams off or headlight flasher

The  indicator light in the instrument cluster turns on.

## WARNING

High beams can cause glare for other persons, which increases the risk of an accident. For this reason, only use the high beams or the headlight flasher when they will not create glare for others.

## High beam assistant



Applies to: vehicles with high beam assistant

The high beam assistant automatically turns the high beams on or off depending on environmental factors.

A camera on the rearview mirror mount can detect light sources from other road users. The high beams turn on or off automatically depending on the position of vehicles traveling ahead and oncoming vehicles, the vehicle speed as well as other environmental factors and traffic conditions.


### Activating the high beam assistant

Requirement: the AUTO light function must be selected and the high beam assistant must be turned on in the MMI ⇒ page 54.

- To activate the high beam assistant, tap the lever forward ③ ⇒ page 53, fig. 39. The  indicator light will appear in the instrument cluster display and the high beams will turn on or off automatically. The  indicator light will turn on if the high beams are turned on.

### Activating and deactivating the high beam headlights manually

If the high beams did not turn on or off as expected, you may turn them on or off manually instead:

- To activate the high beams manually, tap the lever forward ③ ⇒ page 53, fig. 39. The  indicator light turns on.
- To deactivate the high beams manually, pull the lever back ④ ⇒ page 53, fig. 39. The high beam assistant is deactivated.

### Operating the headlight flasher

- To operate the headlight flashers, pull the lever back ④ ⇒ page 53, fig. 39. If the high beam

headlights are not turned on, the high beam assistant will remain activated.

### **WARNING**

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- The high beam assistant is only intended to assist the driver. The driver is always responsible for controlling the high beam headlights and adjusting them based on the lighting and visibility conditions.
- High beams can cause glare for other persons, which increases the risk of an accident. For this reason, only use the high beams or the headlight flasher when they will not create glare for others.

### **Tips**

Adhere to any local applicable regulations when using the lighting equipment, for example in regard to reducing glare for other road users. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.

## Adjusting the exterior lighting

The following settings depend on the vehicle equipment.

- Applies to: MMI: Select on the home screen: **VEHICLE > Light & Visibility > Exterior lighting**.

### Automatic headlights

You can adjust the following settings in the **Automatic headlights** menu:

**Activation time** - You can adjust if the headlights turn on **Early**, **Medium**, or **Late** based on the sensitivity of the light sensor.

**High beam assistant** - You can turn the high beam assistant on or off.

### Entry/exit lighting

The **Entry/exit lighting** illuminates the area around the vehicle when the vehicle is unlocked or when the driver's door is opened while the ig-

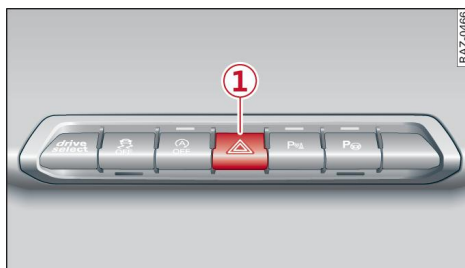
nition is off. The entry/exit lighting works when it is dark and when the AUTO light function is turned on. The daytime running lights turn on automatically each time the vehicle is unlocked, regardless of how bright it is outside the vehicle.

### Daytime running lights

**USA models:** The daytime running lights can be turned on or off.



**Canada models:** This function cannot be turned off. They activate automatically each time the ignition is turned on.



## Emergency flashers



**Fig. 40** Center console: emergency flashers

The emergency flashers help to make other road users aware of your vehicle in dangerous situations.

- Press the   button to turn the emergency flashers on or off.

When the emergency flashers are turned on, the  and  indicator lights will flash at the same time.

You can indicate a lane change or a turn when the emergency flashers are on by using the turn signal lever. The emergency flashers will stop temporarily.

The emergency flashers also work when the ignition is turned off.


### **Tips**


- You should turn the emergency flashers on if:
  - You are the last vehicle in a traffic jam so that all other vehicles approaching from behind can see your vehicle

- Your vehicle has broken down or you are having an emergency
- Your vehicle is being towed or if you are towing another vehicle

## Messages

The following messages may appear, depending on the vehicle equipment:


If the  indicator light turns on, a bulb has failed. The displayed message indicates the cause and possible solutions. If one of the messages remains on, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

 **Audi adaptive light: malfunction! See owner's manual**


Adaptive light is not working. The headlights still function. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

 **Headlight range control: malfunction! See owner's manual**

There is a malfunction in the headlight range control system, which may cause glare for other road users. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

 **High beam assistant: malfunction! See owner's manual**

You can still turn the high beams on or off manually. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

 **High beam assistant: currently unavailable. Camera view limited due to surroundings. See owner's manual**

This message appears if the camera's visual field is blocked. The system will turn itself off. Try turning the systems on later.

 **Automatic headlights: malfunction! See owner's manual**

The light/rain sensor is malfunctioning. The low beams remain on at all times for safety reasons

when using the AUTO light function. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

## Interior lighting


### Front interior lighting





Fig. 41 Headliner: interior lighting

### Interior lighting buttons

 – Interior lighting on/off

 – Door contact switch on/off. The interior lighting is controlled automatically.

### Touch-sensitive reading lights\*

- ▶ To turn a reading light on or off, touch the surface  briefly.
- ▶ To activate the manual dimming function, touch the surface  when the light is off and keep touching it until the desired brightness is reached.

### Rear interior lighting

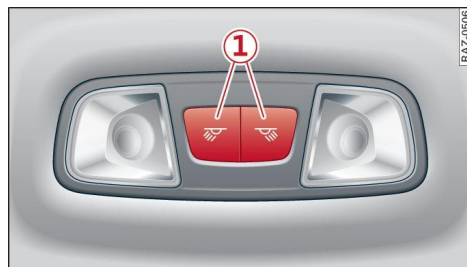


Fig. 42 Headliner: reading lights

### Reading lights

- ▶ To turn the reading lamp on or off, press the button ①.
- ▶ To activate the manual dimming function\*, touch the surface while the light is turned off ① and keep touching it until the desired brightness is reached.

### Interior lighting

Applies to: vehicles with interior lighting

The ambient lighting turns on when the ignition is turned on. The ambient lighting is deactivated when the light function is OFF.

The following settings depend on the vehicle equipment.

- ▶ Applies to MMI: Select on the home screen: **VEHICLE > Light & Visibility > Interior lighting**.

Possible settings:

- **Colors**
- **Brightness**

### Display brightness

You can set the instrument and display illumination. The settings depend on the vehicle equipment.

- ▶ Applies to MMI: select on the home screen: **SETTINGS > Display & Brightness**.

Possible settings:

- **Cockpit dimming**
- **MMI**
- **Audi virtual cockpit**

## Vision

### Adjusting exterior mirrors



Fig. 43 Driver's door: knob for the exterior mirrors

- ▶ Turn the knob in the driver's door to the desired position:

0 – Deactivates all adjustment functions.

↶ / ↷ – Selects the left or right exterior mirror. To adjust the mirror glass in a mirror, press the knob in the desired direction.

🔥 – Heats\* the mirror glass depending on the outside temperature.

↶ ↷ – Folds the exterior mirrors in\*. To fold the mirrors out, turn the knob to one of the other positions. In the MMI, you can select if the mirrors fold in automatically when you lock the vehicle  
⇒ page 35.

### Front passenger's exterior mirror tilt function\*

Requirement: the knob must be in the position for the front passenger's exterior mirror.

The mirror surfaces tilt slightly when reverse gear is selected to provide a better view, for example of the edge of the curb.

You can adjust the mirror surface by turning the knob in the desired direction.

The mirror moves from the reversing position back to the original position:

- When you turn off the ignition
- When you drive forward at speeds faster than 9 mph (15 km/h).
- When the knob is no longer in the position for the front passenger exterior mirror



## WARNING

Curved mirror surfaces (for example convex) enlarge the field of vision. However, they make objects in the mirror appear smaller and farther away. When using these mirrors to estimate your distance to vehicles behind you when changing lanes, you could estimate incorrectly, which increases the risk of an accident.



## Note

- Applies to: vehicles with power folding exterior mirrors: If the mirror housing was moved by outside forces (such as an impact when maneuvering), you must use the power folding function to fold the mirror all the way out. The mirrors will make a loud noise when they latch into place. The mirror housing must not be moved back into place by hand because this could impair the function of the mirror mechanism.
- Applies to: vehicles without power folding exterior mirrors: If the mirror housing was moved by outside forces (such as an impact when maneuvering), you must move it back into place by hand.
- If you wash the vehicle in an automatic car wash, you must fold the exterior mirrors in to reduce the risk of damage to the mirrors. Never fold power folding exterior mirrors\* by hand. Only fold them in and out using the power controls.



## Tips

If the power adjusting function malfunctions, the glass in both mirrors can be adjusted by pressing on the edge of it by hand.

## Dimming the mirrors

### Manual dimming rearview mirror

- ▶ Pull the lever on the bottom of the mirror back.

### Automatic dimming rearview mirror\*

- ▶ The interior and exterior mirrors\* dim automatically when light shines on them, for example from headlights on a vehicle behind you.



## WARNING

Applies to: vehicles with automatic dimming mirrors

- If the glass on an automatic dimming mirror breaks, electrolyte can leak out. This liquid can irritate the skin, eyes and respiratory system. If there is contact with the fluid, flush immediately with plenty of water. Seek medical attention if necessary.
- Repeated or long-term exposure to electrolyte fluid can lead to irritation of the airways, especially in people with asthma or other respiratory conditions. Take deep breaths immediately after leaving the vehicle or, if this is not possible, open all of the doors and windows as wide as possible.
- If electrolyte fluid comes into contact with the eyes, flush them thoroughly with plenty of clean water for at least 15 minutes and then seek medical attention.
- If electrolyte fluid comes into contact with the skin, flush the affected area with clean water for at least 15 minutes, and then clean with soap and water and seek medical attention. Clean affected clothing and shoes thoroughly before wearing again.
- If the fluid was swallowed and the person is conscious, flush the mouth with water for at least 15 minutes. Do not induce vomiting unless this is recommended by medical professionals. Seek medical attention immediately.



## Note

Applies to: vehicles with automatic dimming mirrors

If the glass on an automatic dimming mirror breaks, electrolyte can leak out. This liquid damages plastic surfaces and paint. Clean this liquid as quickly as possible, for example with a wet sponge.



## Tips

Applies to: vehicles with automatic dimming mirrors

- If the light reaching the rearview mirror is obstructed, the automatic dimming mirror will not function correctly,

- The automatic dimming mirrors do not dim when the interior lighting is turned on or the reverse gear is selected.

### Sun visors



Fig. 44 Front headliner: sun visor

### Sun visor

The sun visors can be moved out of their brackets and turned toward the doors ①.

They can also be moved back and forth lengthwise in this position.

### Vanity mirror

The mirror light turns on when the cover over the vanity mirror ② opens.

## Windshield wipers

### Turning on the windshield wipers

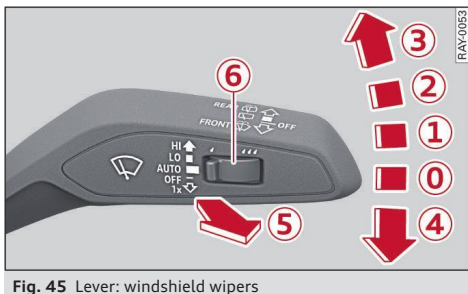


Fig. 45 Lever: windshield wipers



Fig. 46 Lever: rear window wiper

- Move the lever to the corresponding position:

#### ① Windshield wipers off

① Rain sensor/intermittent mode. The windshield wipers turn on once the vehicle speed exceeds approximately 2 mph (4 km/h) and it is raining. The higher the sensitivity of the rain sensor that is set (switch ⑥ to the right), the earlier the windshield wipers respond to moisture on the windshield. You can deactivate the rain sensor mode, which turns on intermittent mode. In intermittent mode, you can adjust the interval time using the switch ⑥.

- Applies to: MMI: Select on the home screen: **VEHICLE > Light & Visibility > Rain sensor.**

#### ② Slow wiping

#### ③ Fast wiping

④ Single wipe. If you hold the lever in this position longer, the wipers switch from slow wiping to fast wiping.

⑤ Clean the windshield . The number of wipes and afterwipes depends on how long the lever is held in position ⑤.


The wipers wipe one time after several seconds while driving to remove water droplets. You can turn off this function by moving the lever to position ⑤ within ten seconds of the afterwipe. The afterwipe function is reactivated the next time you turn on the ignition.

If you hold the lever in position ⑤ for longer than half a second, the edge wiping feature will be activated. This moves the windshield wipers closer to the edge of the windshield and performs an afterwipe to clean the residue that




results from the wiping process from the edge of the windshield. The function is available when driving at speeds up to 75 mph (120 km/h).

The headlight washer system\* operates only when the low beam headlights are on. If you move the lever into position ⑤, the headlights will be cleaned at fixed intervals.

⑦ Wipe the rear window . The number of wipes depends on the windshield wiper movement.

The rear wiper automatically turns on when the reverse gear is selected and the front windshield wipers are on and running.

⑧ Clean the rear window . The number of wipes depends on how long the lever is held in position ⑧.

### WARNING

- The rain sensor is only intended to assist the driver. The driver may still need to turn the wipers on manually depending on visibility conditions.
- The windshield must not be treated with water-repelling windshield coating agents. Under unfavorable conditions, such as wetness, darkness, and when the sun is low, these coatings can cause increased glare, which increases the risk of an accident. They can also cause wiper blade chatter.
- Properly functioning windshield wiper blades are required for a clear view and safe driving ⇒ page 59, *Cleaning/changing wiper blades*.

### Note

- If there is frost, make sure the windshield wiper blades are not frozen to the windshield. Turning on the windshield wipers when the blades are frozen to the windshield can damage the wiper blades.
- Prior to using a car wash, the windshield wiper system must be turned off (lever in position ①). This prevents the wipers from turning on unintentionally and causing damage to the windshield wiper system.

### Tips

- The windshield wipers turn off when the ignition is turned off. You can activate the windshield wipers after the ignition is turned on again by moving the lever to any position.
- Worn or dirty windshield wiper blades result in streaking. This can affect the rain sensor function. Check your windshield wiper blades regularly.
- When stopping temporarily, such as at a traffic light, the speed of the windshield wipers automatically reduces by one level.

## Cleaning/changing wiper blades

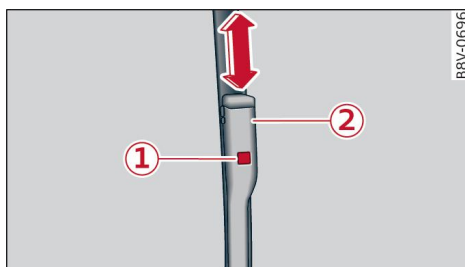


Fig. 47 Windshield wipers: replacing the wiper blades

### Wiper blade replacement position

- ▶ Turn off the ignition and hold the windshield wiper lever in position ④ ⇒ page 58, fig. 45 until the windshield wiper moves into the wiper blade replacement position.
- ▶ To bring the windshield wipers into the normal position, turn on the ignition and hold the lever in position ④ until the windshield wipers go back to the original position, or drive faster than 8 mph (12 km/h).

Applies to: MMI: You can also activate or deactivate the wiper change position in the center display:

- ▶ Turn the windshield wipers off (position ① ⇒ page 58, fig. 45).
- ▶ Select on the home screen: **VEHICLE > Settings & Service > Wiper change position.**

### Cleaning the wiper blades

Requirement: the windshield wipers must be in the wiper change position.

- ▶ Fold the windshield wiper arm away from the windshield.
- ▶ For information on cleaning, see ⇨ *table on page 255*.

### Replacing the wiper blades

Requirement: the windshield wipers must be in the wiper change position.

- ▶ Fold the windshield wiper arm away from the windshield.
- ▶ Hold the wiper blade firmly.
- ▶ Press the locking knob ① on the wiper blade.
- ▶ Remove the wiper blade from the windshield wiper arm mount ②.
- ▶ Insert the new wiper blade into the mount on the wiper arm until it clicks into place.
- ▶ Place the wiper arm back on the windshield.
- ▶ Exit the wiper change position.

#### WARNING

- For safety reasons, the windshield wiper blades should be replaced once or twice each year.
- Dirty windshield wiper blades can impair vision, which increases the risk of an accident.

#### Note

- The windshield wipers must only be lifted up when in the wiper change position. Otherwise, you risk damaging the paint on the hood or the windshield wiper motor.
- You should not move your vehicle or press the lever when the wiper arms are folded up from the windshield. The windshield wipers would move back into their original position and could damage the hood and windshield.

#### Tips

- You can also use the wiper blade replacement position for other reasons, for example if you want to protect the windshield from icing by using a cover.

- You cannot activate the wiper blade replacement position when the hood is open.

### Cleaning or replacing the rear wiper blade



Fig. 48 Rear window wiper: installing the wiper blade

### Cleaning the wiper blades

- ▶ Fold the wiper arm away from the rear window.
- ▶ For information on cleaning, see ⇨ *table on page 255*.

### Removing the wiper blade

- ▶ Fold the wiper arm away from the rear window.
- ▶ Remove the wiper blade from its holder.

### Installing the wiper blade


- ▶ Press the wiper blade mount into the retainer.
- ▶ Fold the window wiper arm back onto the rear window.

#### WARNING

For safety reasons, the windshield wiper blades should be replaced once or twice each year.

### Messages

The following messages may appear, depending on the vehicle equipment:

If the  indicator light turns on, then there is a windshield wiper malfunction. The message that is also displayed indicates the cause and possible solutions. If one of the messages does not turn off, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected. ▶

## Automatic wipers: malfunction! See owner's manual

The light/rain sensor is malfunctioning. You can still control all functions that are not controlled by the rain sensor using the windshield wiper lever. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

## Digital compass

### Turning the digital compass on or off

Applies to: vehicles with digital compass

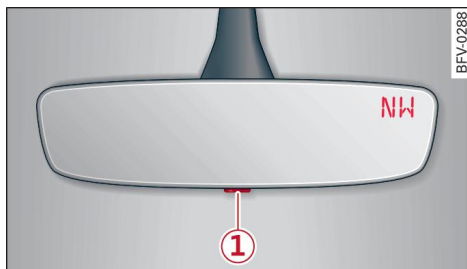


Fig. 49 Rearview mirror: digital compass is turned on

- To turn the digital compass on or off, press the button ① until the compass display in the mirror turns on or off.

The digital compass only works when the ignition is turned on. The directions are indicated with abbreviations: **N** (north), **NE** (northeast), **E** (east), **SE** (southeast), **S** (south), **SW** (southwest), **W** (west), **NW** (northwest).

### Tips

To prevent inaccurate compass readings, do not bring any remote controls, electrical devices, or metallic objects near the mirror.

### Adjusting the magnetic zone

Applies to: vehicles with digital compass

*The magnetic zone must be adjusted correctly for the compass to read accurately.*

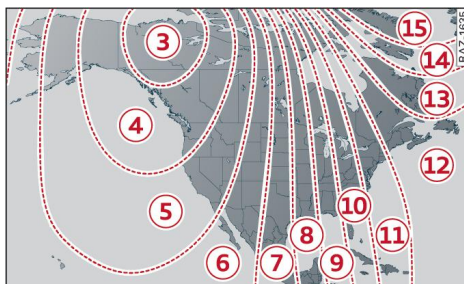


Fig. 50 Magnetic zone map

- Press and hold the button ① ⇨ page 61, fig. 49 until the number of the magnetic zone appears in the interior rearview mirror.
- Press the button ① repeatedly to select the correct magnetic zone. The selection mode turns off after a few seconds.

### Calibrating the digital compass

Applies to: vehicles with digital compass

*You must recalibrate the digital compass if it does not display the correct direction.*

- Press and hold the button ① until a **C** ⇨ page 61, fig. 49 appears in the rearview mirror.
- Drive in a circle at about 6 mph (10 km/h) until a direction is displayed in the rearview mirror.



### WARNING


To reduce the risk to yourself and other road users, calibrate the digital compass in an area where there is no traffic.

## Sitting correctly and safely

### Maintaining the correct seating position

#### General information

As the driver, you are responsible for making sure each person in the vehicle is sitting correctly in their seat and maintaining this correct seating position while driving. Make sure that:

- Each person in the vehicle has adjusted their seat correctly ⇒ *page 62*.
- The steering wheel is adjusted correctly ⇒ *page 65*.
- The mirrors are adjusted so that there is a sufficient view of the area around the vehicle ⇒ *page 56*.
- Each person in the vehicle has adjusted their head restraint correctly ⇒ *page 66*.
- Each person in the vehicle has adjusted their safety belt correctly ⇒ *page 67*.
- The activation status of the front passenger's airbag is suitable for the person in the front passenger's seat ⇒ *page 73*.
- Children are secured in suitable child safety seats that are secured to appropriate vehicle seats ⇒ *page 75*. Read and observe the important safety information pertaining to the use of child safety seats on the front passenger's seat ⇒  *in General information on page 75*.

#### Examples of incorrect seating positions

Safety belts can only provide optimal protection when they are routed correctly. Incorrect seating positions significantly reduce the protective functions of the safety belts and increase the risk of injury due to incorrect belt routing.

The following list includes examples of seating positions that could be dangerous for all vehicle occupants. This is not a complete list. Audi would simply like to increase your awareness of the topic. The following points apply when the vehicle is in motion:

- Never stand inside the vehicle.
- Never stand on the seats.

- Never kneel on the seats.
- Never tilt your backrest far back.
- Never lean against the instrument panel.
- Never lie down on the rear bench seat.
- Never sit only on the front section of the seat.
- Never sit sideways on the seat.
- Never lean against the window.
- Never place your feet out of the window.
- Never place your feet on the instrument panel.
- Never place your feet on the seat cushion.
- Never ride in the footwell.
- Never sit on the armrests.
- Never drive or ride in a seat without fastening your safety belt.
- Never ride in the luggage compartment.



#### WARNING

Incorrect seating positions, failure to wear a safety belt, or being too close to an airbag increase the risk of serious injury or death to vehicle occupants, especially if the airbags deploy and come into contact with vehicle occupants who are not seated correctly. Note the important information and warnings in the chapters for the topics given above.



#### Tips

If you or other passengers in the vehicle have physical limitations that prevent sitting in a correct position, modifications to the vehicle may be necessary. For more information, contact an authorized Audi dealer or authorized Audi Service Facility, or call Audi customer support at 1-800-822-2834.

### Front seats

#### General information

Make sure that:

- You can press the pedals down completely while your legs are slightly bent.
- The distance between your upper body and the steering wheel or instrument panel is at least 10 inches (25 cm).
- The distance between your knees and the instrument panel is at least 4 inches (10 cm).

- Your thighs are lightly supported by the front surface of the seat.
- The backrest is in an upright position and the back of the person seated is resting against it.
- You have a sufficient view of the area around the vehicle.
- You have a clear view of the instrument cluster and indicator lights

### **WARNING**

- If you are too close to the steering wheel or instrument panel, the airbag system cannot provide the optimal protection, which increases the risk of injury and death.
- To reduce the risk of injury to the driver in the event of sudden braking maneuvers or accidents, never drive with the backrest reclined very far. The airbag system and safety belts can only provide optimal protection when the backrest is in an upright position and the driver is wearing the safety belt correctly. If the backrest is angled back too far, the safety belt can shift to soft areas of the body, such as the stomach, which increases the risk of injury.
- To reduce the risk of an accident, only adjust the seats when the vehicle is stationary.
- Be careful when adjusting the seat. Lack of control or attention when adjusting can result in injuries due to pinching for vehicle occupants both in the front seats and rear seats.
- Never place objects in the driver's footwell. Objects could shift and enter the area around the pedals, which could prevent you from using them. You would then be unable to use the pedals if sudden driving or braking maneuvers were needed, which increases the risk of an accident.
- Make sure that the floor mats are always securely attached.
- To reduce the risk of an accident, never place additional floor mats or other floor covers over the installed floor mats, because this reduces the pedal's range of motion and can impair pedal operation.
- To reduce the risk of injury, never place your feet on the instrument panel, out of the


window, or on the seat surfaces. This also applies to persons in the rear seats.

### **Note**

To reduce the risk of damage, be very careful when adjusting the seat to make sure the head restraints do not come into contact with the roof.

### **Adjusting the front seats manually**

Applies to: vehicles with manual adjustable seats

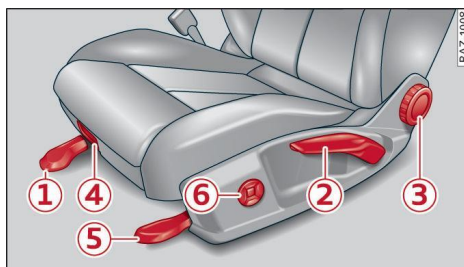

**Fig. 51** Front seat: adjusting the seat

The settings depend on the vehicle equipment.

### **Adjusting the seat position**

- ▶ To adjust the seat forward or back, pull the lever **1** and slide the seat.
- ▶ To adjust the seat up or down, pull or press the lever **2**.

### **Adjusting the backrests**

- ▶ To adjust the backrest forward or back, turn the adjusting wheel **3**.

### **Adjusting the thigh support**

- ▶ To increase or decrease the upper thigh support, lift the handle **4** and move the upper thigh support.

### **Adjusting the angle of the seat surface**

- ▶ To adjust the angle of the seat surface, pull or press the lever **5**.

### **Adjusting the lumbar support**

- ▶ To adjust the lumbar support, press the button **6** in the desired direction.

### Adjusting the power front seats

Applies to: vehicles with power adjustable seats

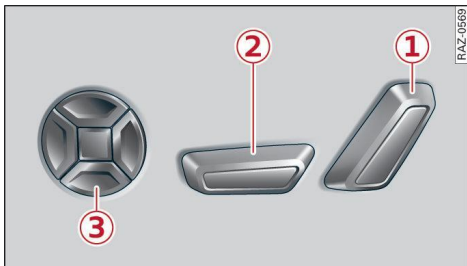


Fig. 52 Front seat: seat adjustment buttons

The settings depend on the vehicle equipment.

#### Adjusting the backrests

- ▶ To move the backrest forward or back, press the button ① forward or back.

#### Adjusting the seat position

- ▶ To move the seat forward or back, push the button ② forward or back.
- ▶ To adjust the seat upward or downward, push the rear section of the button ② upward or downward.
- ▶ To adjust the seat surface, press the front part of the button ② upward or downward.

#### Adjusting the lumbar support

- ▶ To adjust the lumbar support, press the button ③ in the desired direction.



#### WARNING

The power front seats can also be adjusted when the ignition is turned off. To reduce the risk of injury, children should never be left unattended in the vehicle for this reason.

- ▶ To adjust the armrest forward or backward, move the armrest in the desired direction.
- ▶ To adjust the angle, raise the armrest in stages.
- ▶ To move the armrest back into the original position, raise it slightly out of the top level and fold it downward.



#### WARNING

In certain positions, the front center armrest can interfere with arm movement, which increases the risk of injury.

## Rear seats

### General information



#### WARNING

- To reduce the risk of an accident, only adjust the seat when the vehicle is stationary.
- Be careful when adjusting the seat. Unsupervised or careless seat adjustment could cause parts of the body to be pinched, which increases the risk of injury.
- Always pull forward on the backrest to make sure it is correctly locked in place.

### Front center armrest

Applies to: vehicles with a front center armrest

The front center armrest is located between the front seats.

#### Adjusting the center armrest

The settings depend on the vehicle equipment.

## Adjusting the seats

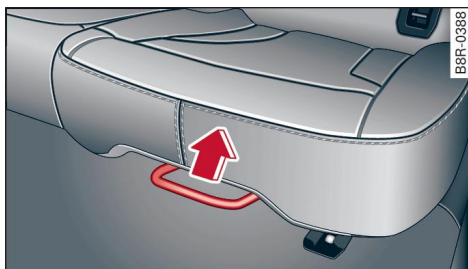


Fig. 53 Adjusting the seat position

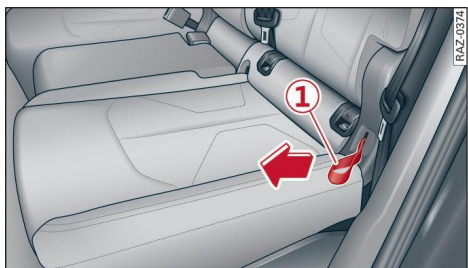


Fig. 54 Adjusting the backrests

### Adjusting the seat position

- ▶ To adjust the seat forward or back, pull the handle ⇒ *fig. 53* and slide the seat.
- ▶ Release the handle and continue sliding the seat until it locks into place.

### Adjusting the backrests

- ▶ Support the backrest with one hand and pull the strap ① at the same time.
- ▶ Move the backrest forward or back to the desired position.
- ▶ Release the strap and continue moving the backrest until it locks into place.

## Steering wheel

### General information

Make sure that:

- The distance between your upper body and the steering wheel is at least 10 inches (25 cm).
- Your arms are bent slightly at the elbows.
- You have a sufficient view of the area around the vehicle and you have a clear view of the instrument cluster

- You are always holding the steering wheel with both hands on the outer edge at the sides (9:00 and 3:00 position) when driving.

### WARNING

- To reduce the risk of an accident, make sure the steering wheel is adjusted correctly and cannot be moved out of position before you start to drive.
- If you are too close to the steering wheel, the driver's airbag cannot provide optimal protection, which increases the risk of injury or death.
- Never hold the steering wheel in the 12:00 position or in any other way, such as holding the center of the steering wheel. Otherwise, your arms, hands, and head could be injured in the event that the driver's airbag deploys.

### Adjusting the steering wheel position manually

Applies to: vehicles with manual steering wheel adjustment

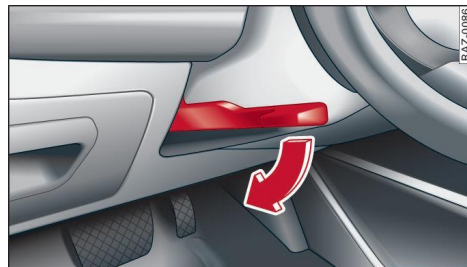


Fig. 55 Steering column: lever for adjusting the steering wheel position

The steering wheel position can be adjusted up and down, and forward and back.

- ▶ Press the lever in the direction of the arrow.
- ▶ Bring the steering wheel into the desired position.
- ▶ Push the lever all the way up until it engages.

### WARNING

- To reduce the risk of an accident, only adjust the steering wheel before you start driving. ▶



- Push the lever upward firmly so that the steering wheel position does not change unintentionally while driving, which would increase the risk of an accident.

## Head restraints

### General information

Applies to: vehicles with adjustable head restraints

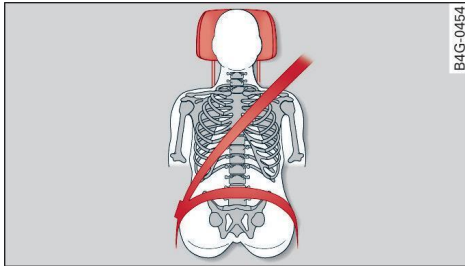


Fig. 56 Correctly-adjusted head restraint

Make sure that:

- The upper edge of the head restraint is as even as possible with the top of your head.
- The head restraint is as close as possible to the back of the head.
- The head restraints in any occupied rear seats are all the way up.

### ⚠ WARNING

- There is one head restraint for each seat. All vehicle occupants must adjust the head restraints correctly before every trip. Having head restraints that are not adjusted correctly or not installed in the vehicle increases the risk of a neck injury during sudden or unexpected driving or braking maneuvers or in a collision.
- Only remove the rear seat head restraints if it is necessary to install a child safety seat ⇒ [page 75](#). Stow the removed head restraints securely, for example in the luggage compartment. Reinstall the head restraints immediately once the child safety seat has been removed. Driving without head restraints increases the risk of serious neck injuries.

### Front head restraints

Applies to: vehicles with adjustable head restraints

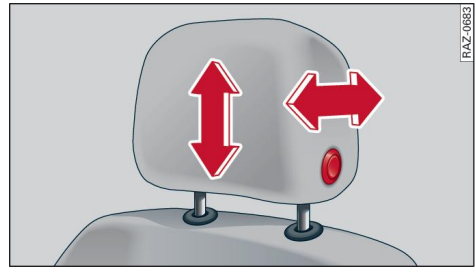


Fig. 57 Front seat: adjusting the head restraint

### Adjusting the head restraints

- ▶ To adjust the head restraint upward or forward, slide it until it locks into place.
- ▶ To adjust the head restraint downward or backward, press the button on the side and slide the head restraint. Release the button and slide the head restraint farther until it locks into place.

### Rear head restraints

Applies to: vehicles with adjustable head restraints

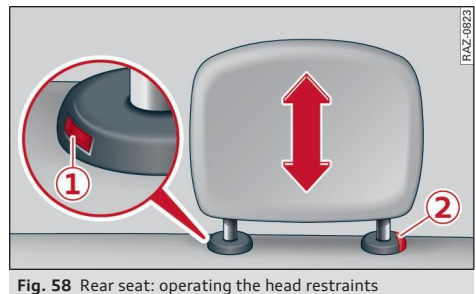


Fig. 58 Rear seat: operating the head restraints

### Adjusting the head restraints


- ▶ To adjust the head restraint upward, slide it until it locks into place.
- ▶ To adjust the head restraint all the way up or down, press the button ② and slide the head restraint. Release the button and slide the head restraint farther until it locks into place.

### Removing the head restraints

- ▶ Fold the backrest forward slightly ⇒ [page 84](#).
- ▶ Move the head restraint all the way up.
- ▶ Insert a suitable object, such as the extended vehicle key or mechanical key, into the release ▶



point ① ⇒ *fig. 58* on the inside or outside of the base.

- Press the button ② and pull the head restraint out of the backrest ⇒  in *General information* on page 66.

### Installing the head restraints

Applies to: vehicles with removable head restraints

- Fold the backrest forward slightly ⇒ *page 84*.
- Slide the posts on the head restraint down into the guides until the posts click into place.
- Press the button ② and slide the head restraint all the way down. It should not be possible to remove the head restraint from the backrest without pressing the button.

## Safety belts

### General information

Each seat is equipped with a three-point safety belt. Safety belts that are worn correctly are the most effective way to reduce the risk of serious injuries or death in a collision. Therefore, wear your safety belt correctly and make sure that all persons in the vehicle are also wearing their safety belts correctly when the vehicle is moving.

Even though your vehicle is equipped with an airbag system, each person in the vehicle must still always wear the appropriate safety belt. In addition to their normal protective function, safety belts also hold vehicle occupants in the correct seating position in the event of a collision so that the airbags can deploy correctly and provide additional protection. Safety belts provide protection during collisions when the airbags do not deploy or if they have already deployed.



### WARNING

The risk of serious injury or death increases if the safety belt is not fastened, if it is worn incorrectly, or if it is damaged.

- All vehicle occupants, including the driver, must fasten their safety belts correctly before every trip and must always keep their safety belts fastened during the trip, regardless of whether the seat is equipped with an airbag or not. This also applies to

children that are seated in a child safety seat that is appropriate for their weight and age and that is secured with a safety belt.

- In the event of a collision, vehicle occupants who are not wearing safety belts could be propelled through the vehicle interior and collide with vehicle components, such as the steering wheel, instrument panel, windshield, or doors. In some situations, vehicle occupants could also be ejected from the vehicle. Vehicle occupants in the rear seats who do not wear safety belts not only endanger themselves, but also other persons in the vehicle.
- Only one person may be fastened with a safety belt at a time. Never secure more than one person, including children, with a single safety belt.
- Never allow children or infants to ride on another person's lap and be belted into the safety belt with them.
- Insert the belt buckle only in the belt latch belonging to the corresponding seat, so that the protective function is not impaired.
- To ensure the maximum protective function of the safety belts, all persons in the vehicle must sit in a correct seating position ⇒ *page 62*.
- Check the condition of your vehicle's safety belts regularly ⇒ *page 255*. If you find damage to the belt webbing, the belt connections, the retractor, or the buckle, have the damaged safety belt replaced by an authorized Audi dealer or authorized Audi Service Facility.
- The safety belts must not be removed or modified in any way. Do not attempt to repair the safety belts yourself.
- Safety belts that are strained during an accident must be replaced by an authorized Audi dealer or authorized Audi Service Facility.

### Correct safety belt positioning

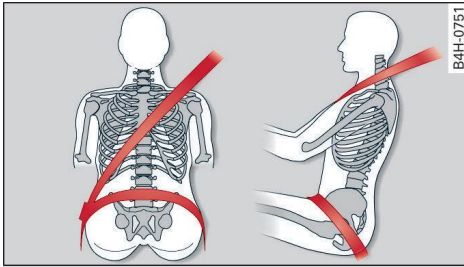


Fig. 59 Lap/shoulder belt positioning



Fig. 60 Safety belt positioning for pregnant women

Fastened safety belts offer optimal protection during an accident and reduce the risk of serious injury or death only when they are positioned correctly. Furthermore, the correct safety belt position holds the vehicle occupant in place so that a deployed airbag can provide maximum protection. Therefore, always fasten the safety belt and make sure it is positioned correctly ⇒ *fig. 59*.

To ensure the safety belt is positioned correctly, make sure of the following points:

- The lap portion of the safety belt must be located across the lap.
- The shoulder portion of the safety belt must rest over the center of the shoulder.
- The safety belt must always rest flat and securely on the body.

For pregnant women, the safety belt must rest evenly across the chest and as low and flat as possible on the lap, so that no pressure is applied to the lower abdomen. This should be done throughout the entire pregnancy ⇒ *fig. 60*.

### WARNING

Incorrect safety belt positioning can cause serious injury in the event of an accident or during sudden braking or driving maneuvers.

- Never drive with the backrest reclined extremely far. The more the backrest is tilted back, the greater the risk of injury due to the safety belt being routed incorrectly.
- The safety belt itself or a loose safety belt can cause serious injuries if it shifts onto soft areas of the body, such as the stomach.
- The shoulder portion of the safety belt must lie over the center of the shoulder and chest, and never under the arm, behind the back, or across the neck or face.
- The lap portion of the safety belt must lie across the lap and never over the stomach.
- The safety belt must lie flat and securely on the upper part of the body and the lap.
- The belt webbing must not be pinched or twisted, or rub against sharp edges.
- If the safety belt height is set incorrectly and/or the safety belt is routed incorrectly, then the safety belt's protective function will be impaired in the event of an accident. Make sure the safety belt is at the right height and is routed correctly for the person in the vehicle who is using it.
- A safety belt that is too loose may result in injuries during an accident, because your body will move farther forward due to kinetic energy and will be stopped abruptly by the belt.
- Bulky, loose clothing (such as a coat over a sports jacket) may prevent the seat and safety belts from functioning correctly.
- Do not position the safety belt over hard or breakable objects (such as glasses, pens, etc.).
- The lap belt portion of the safety belt must sit as low as possible on the lap of pregnant women and lie flat under the belly.

### Note

Make sure that there are no hook-and-loop fasteners or sharp objects such as zippers or rivets on clothing in the area where the safety

belt is worn. Otherwise, the safety belt could be damaged.

### Fastening and unfastening safety belts

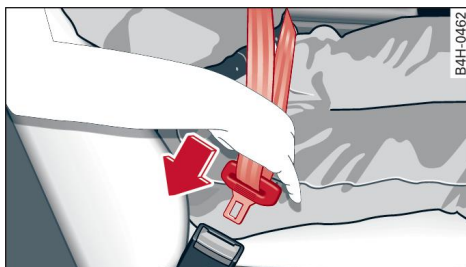


Fig. 61 Belt buckle and belt latch

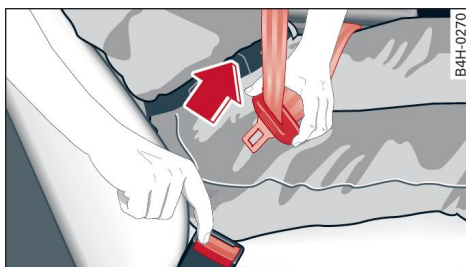


Fig. 62 Releasing the belt buckle from the belt latch

Observe the safety precautions ⇒ page 67.


### Fastening the safety belt

- Pull the safety belt by the belt buckle evenly across your chest and lap.
- Insert the belt buckle in the belt latch belonging to the seat until it audibly engages ⇒ fig. 61.
- Pull on the belt to make sure that the belt is securely locked in the latch.

### Unfastening the safety belt

- Press the red button on the belt latch ⇒ fig. 62. The belt buckle will pop out.
- Guide the belt back by hand so that the safety belt can roll up more easily.

### Safety belt monitoring system

 - If the indicator light turns on or flashes, a front safety belt is not fastened or it has been un-

fastened while driving. There may be additional audio warning signals.

### Adjusting the height of the safety belt

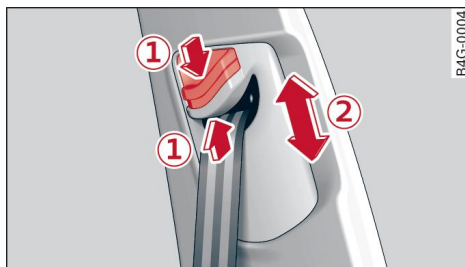


Fig. 63 Belt height adjustment for the front seats - safety belt relay

- To move the belt higher, slide the safety belt relay ② upward.
- To move the belt lower, press the release button ① and slide the safety belt relay ② downward.
- To check if the safety belt relay is securely locked in place, pull firmly on the belt.

### Tips

You can also adjust the height of the front seats to change the position of the safety belts.

### Additional safety belt functions

#### Belt retractor lock

The safety belts on the rear seats and on the front passenger seat are equipped with a belt retractor lock.

- If you secure a child safety seat with a safety belt, the belt retractor lock on the safety belt may need to be activated. Follow the instructions from the child safety seat manufacturer.
- When a person in the vehicle has fastened a safety belt, the belt retractor lock should not be activated. If the belt retractor lock has been activated unexpectedly, deactivate it.

Deactivating or activating the belt retractor lock ⇒ page 78. ►

### Safety belt retractor

The safety belts are equipped with an automatic belt retractor. This automatic retractor allows the safety belt to be pulled all the way out when the belt is pulled slowly. However, the automatic retractor locks during sudden braking maneuvers. It also locks the belts when accelerating, driving uphill, and driving around curves.

### Belt force limiter

Safety belts with belt force limiters reduce the force placed on the body by the safety belts during a collision.

### Safety belt pretensioners

In certain driving situations, safety belts may be tightened with reversible belt tensioners when you start driving. If the safety belt is too loose, it will be tightened so that the belt will rest closer to the body.

In some collisions, pyrotechnic belt tensioners may secure the safety belts so that they cannot loosen. This reduces forward movement of the persons in the vehicle.



#### WARNING

The pyrotechnic system can only provide protection during one collision. If the pyrotechnic belt tensioners deploy, the pretensioning system must be replaced by an authorized Audi dealer or authorized Audi Service Facility.



#### Tips

Smoke may be released when pyrotechnic belt tensioners deploy. This is not a sign of a vehicle fire.

## Memory function

### General information

Applies to: vehicles with memory function

With the memory function, you can save and call up seat profiles using the memory buttons in the door trim panel.

Depending on vehicle equipment, some settings such as the driver's seat and exterior mirror position can be stored.

### Storing and recalling a seat profile

Applies to: vehicles with memory function

The memory function buttons are located in the door trim panel.

#### Storing a seat profile

- ▶ Press the **SET** button. If the LED in the button turns on, a seat profile can be stored.
- ▶ Push one of the numbered memory buttons. A tone confirms that the settings were stored.

#### Recalling a seat profile

- ▶ When the a door is open and the ignition is turned off, press the memory button once briefly. The seat will be fully adjusted to the settings in the seat profile.
- ▶ If the door is closed or the ignition is turned on, press and hold the memory button until the seat is fully adjusted to the settings in the seat profile.



#### WARNING

- To reduce the risk of an accident, the seat setting can only be recalled when the vehicle is stationary.
- In an emergency, the recall process can be canceled by pressing the seat adjustment button on that seat.

## Airbag system

### General information



#### WARNING

- If you have not fastened your safety belt, you are in an incorrect seating position, or you are too close to the airbag system, the airbag system will not be able to protect you. This increases the risk of serious injuries or death. Make sure that each person in the vehicle has their safety belt fastened correctly and is sitting in a correct seating position → *page 62*. This is necessary

regardless of whether the seat is equipped with an airbag or not.

- Never place your feet on the instrument panel, out of the window, or on the seat surfaces. To help ensure that the airbag system can deploy correctly, never bend forward or lean on the door or the side window. Otherwise, serious injuries or death can occur if the airbags deploy.
- People, animals, or objects between the vehicle occupants and the airbag system can interfere with the correct deployment of the airbag or can be propelled through the vehicle interior, increasing the risk of serious injuries or death. Make sure that nothing is located between the vehicle occupants and the airbag system. Do not secure or transport any objects within the deployment zone of the airbag systems, especially on the steering wheel, on the instrument panel, on the doors, on the windows, or in the footwell.
- Never put stickers on the airbag system covers or cover them with any objects.
- Only lightweight clothing should be hung from the garment hooks in the vehicle. Do not use clothes hangers to hang clothing. The pockets of the clothing must not contain any heavy, breakable, or sharp-edged objects. This could impair the effectiveness of the side curtain airbags.
- You must not use seat or protective covers that are not specifically approved for use on Audi seats with side airbags. Since the side airbags deploy from the seat backrest, such covers could impair the protective function of the side airbags.
- Damage to the original seat covers in the airbag deployment area must always be repaired by an authorized Audi dealer or authorized Audi Service Facility.
- Airbag system components are installed at various locations in your vehicle. Incorrect work or repairs on the vehicle could damage the airbag system components or impair their functionality. This may prevent the airbags from deploying or cause them to deploy incorrectly in the event of an accident,

which increases the risk of serious injuries or death. Only have an authorized Audi dealer or authorized Audi Service Facility make repairs or modifications to a vehicle.


- The airbag system can only provide protection during one collision. If there is another collision, the airbag system will not deploy again. If the airbag system has deployed, have it replaced immediately by an authorized Audi dealer or authorized Audi Service Facility.
- Fine dust may appear if the airbags deploy. This is completely normal and does not indicate a fire in the vehicle. The fine dust can irritate the skin and mucous membranes in the eyes and can cause difficulty breathing, particularly for individuals who have or have had asthma or other health issues that affect breathing. Exit the vehicle or open the windows or doors to get access to fresh air.



### Tips

If you are transporting children in the vehicle, read the information and follow the safety precautions ⇨ *page 75*.

## Safety systems monitoring

The  indicator light in the instrument cluster monitors the safety systems such as the airbags (including the control modules, sensor, and wiring) and the belt tensioners. It turns on when you turn on the ignition and turns off after several seconds.

If the indicator light does not turn on when the ignition is turned on, does not turn off after several seconds, or turns on or flashes while driving, there may be a malfunction in one of the safety systems. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



### WARNING

Have the malfunction in the safety systems inspected immediately. Otherwise, there is a risk that the systems may not activate during

an accident, which increases the risk of serious injury or death.

### Description

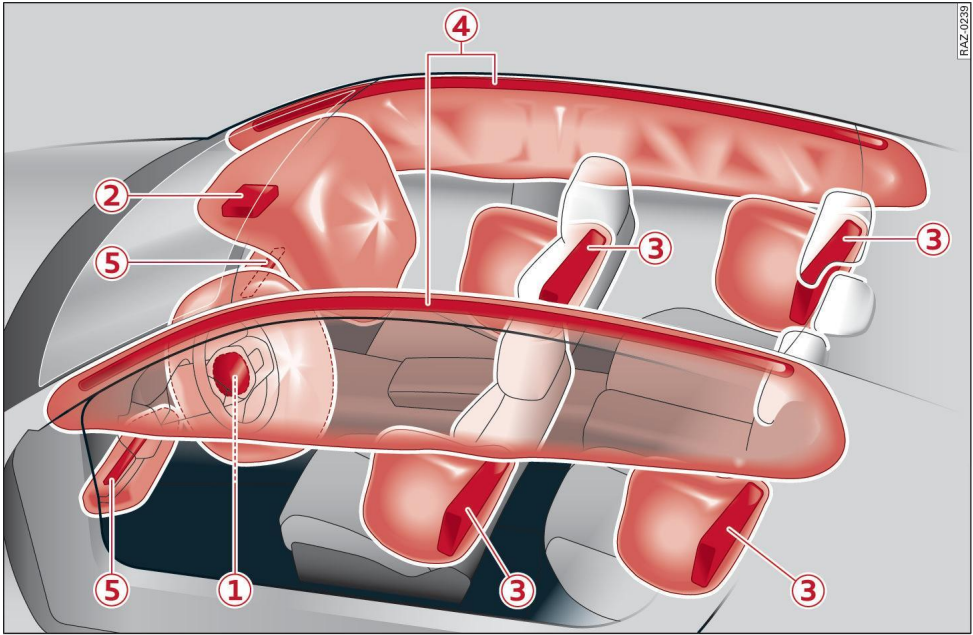


Fig. 64 Airbag overview image (deployment area/deployed airbags)

The locations of the airbags are labeled with “AIRBAG”. The following airbags are installed in your vehicle:

- ① Driver's airbag
- ② Front passenger's airbag
- ③ Front side airbags and rear, if applicable
- ④ Head curtain airbag with ejection mitigation
- ⑤ Knee airbags

Airbags offer the best possible protection in your vehicle during an accident when they are used together with safety belts that are fastened correctly, and when vehicle occupants are sitting in a correct seating position. Airbags are a supplementary restraint system and do not replace safety belts.

Airbags may deploy during front impact, side impact, or rollover accidents.

The deployment range for the airbag system cannot be defined for every situation, since the circumstances surrounding accidents can vary widely. Factors that play an important role include the condition of the object that the vehicle hits (hard or soft), the angle of impact, vehicle speed, etc. The deciding factor for the deployment of the airbag system is the deceleration that occurs during an accident. Sensors in the vehicle are designed to detect the severity of an accident in conjunction with the control module, and to provide a targeted and timely deployment of the restraint system. If the vehicle deceleration that is measured during an accident is below the specified reference values in the control module, then the airbags will not deploy, even though the vehicle may be severely damaged from the accident. In these cases, the vehicle occupants will be protected by the safety belts if they are fastened and worn correctly. ►

The deployment of the front passenger's airbag will depend on the occupancy of the seat  
⇒ page 73.

Each deployed airbag is filled with gas. When this occurs, the airbag covers open and the airbags unfold with great force into the deployment zone within milliseconds. Inflated airbags reduce the movement of persons in the vehicle who are wearing safety belts in the direction of the impact and thus help to reduce the risk of injury. They can help to protect the head, upper body, and lap, for example. However, there is the possibility that airbag deployment can cause injuries.

The airbag system works when the ignition is turned on.

If you or other passengers in the vehicle have physical limitations that prevent sitting in a correct position, modifications to the vehicle may be necessary. For more information, contact an authorized Audi dealer or authorized Audi Service Facility, or call Audi customer support at 1-800-822-2834.

### Tips

The side curtain airbags in your vehicle have ejection mitigation functions. This reduces the risk of being ejected from the vehicle interior during an accident, especially in the event of a vehicle rollover.

### Advanced airbag system



**Fig. 65** Headliner: indicator light to display the status of the front passenger's airbag


The Advanced Airbag System in your vehicle has been certified to comply with the requirements of the United States Federal Motor Vehicle Safety

Standard (FMVSS) 208, as well as Canada Motor Vehicle Safety Standard (CMVSS) 208 as applicable at the time your vehicle was manufactured. According to these requirements, the front Advanced Airbag System on the front passenger's side has been certified for "suppression" for infants approximately 12 months old and younger, and for "low risk deployment" for children aged 3 to 6 years old (as defined in the standard).

The advanced airbag system will activate or deactivate the front passenger's airbag based on the occupancy of the seat. If a front airbag deploys during a collision, the deployment force will adapt to the person in the vehicle.

### Components

The advanced airbag system consists of the following components:

- Front airbags in the steering wheel and in the instrument panel on the front passenger's side: these can protect persons in the front seats during a collision
- Passenger occupant detection sensor in the front passenger's seat: this detects if the front passenger's seat is occupied (for example, by a person or a small child in a child safety seat)
- Seat position sensors on the front seats: these determine the distance between the seat and the steering wheel or instrument panel
- Sensors in the front safety belt latch: these detect if the safety belts are fastened
- **PASSENGER AIR BAG OFF ON** indicator light in the headliner: this indicates if the front passenger's airbag is activated or deactivated
-  Indicator light in the instrument cluster: this monitors the function of the Advanced Airbag System components to ensure they are functioning correctly

### How the components function together

The passenger occupant detection sensor in the front passenger's seat detects if the front passenger's seat is occupied. The passenger occupant detection sensor measures the electrical capacity on the front passenger's seat. The passenger's airbag is activated or deactivated





depending on the electrical capacity that is measured.

The passenger's airbag is activated if:

- The electrical capacity is higher than the threshold stored in the control module
- The electrical capacity is the same as or greater than the electrical capacity of a typical adult



The passenger's airbag is deactivated if:



- The electrical capacity is lower than the threshold stored in the control module
- The electrical capacity is the same as or less than the electrical capacity of a typical one-year-old child in a child safety seat that has been used for certification in accordance with FMVSS 208



If the front passenger's airbag is activated, the PASSENGER AIR BAG ON  indicator light will turn on. If the front passenger's airbag is deactivated, the PASSENGER AIR BAG OFF  indicator light will turn on.

The deployment force of the front airbags adapts based on whether or not the safety belt is used and the distance between the seat and the steering wheel/instrument panel. For example, if a person is too close to the front airbag, the front airbag will deploy with less force to help reduce the risk of injury.

### Meaning of PASSENGER AIR BAG OFF ON indicator light





When the ignition is turned on, the system detects whether the front passenger's seat is occupied. PASSENGER AIR BAG OFF  ON  will turn on for several seconds during this process. Then it will indicate if the front passenger's airbag is activated or deactivated.

- PASSENGER AIR BAG OFF : the front passenger's airbag is deactivated and will not deploy in the event of an accident.
- PASSENGER AIR BAG ON : the front passenger's airbag is activated and could deploy in the event of an accident.

If a change to the occupancy status of the front passenger's seat is detected  
PASSENGER AIR BAG OFF  ON  will




flash for several seconds and will then display the status of the front passenger's airbag.

Always make sure the indicator light corresponds to the occupancy of the front passenger's seat.




- **An adult or individual of similar size in the front passenger's seat:** the front passenger's airbag must be activated, meaning PASSENGER AIR BAG ON  must turn on for a certain period of time and then turn off.
- **An individual of smaller size (for example, an adolescent or small adult) in the front passenger's seat:** the front passenger's airbag must be activated, i.e. PASSENGER AIR BAG ON  must turn on for a specific period of time and then go out.
- **Child in a child safety seat on the front passenger's seat:** the front passenger's airbag must be deactivated, so PASSENGER AIR BAG OFF  must stay on.
- **Front passenger's seat not occupied:** the front passenger's airbag must be deactivated, so PASSENGER AIR BAG OFF  must remain on.



### WARNING

- An adult or a person with a small stature (such as a young person or small adult) seated on the front passenger's seat will not be protected by the passenger's airbag in the event of a collision if the passenger's airbag is deactivated. This increases the risk of injury and death. When the vehicle is in motion, always make sure that PASSENGER AIR BAG ON  turns on for a certain period of time and then turns off. If PASSENGER AIR BAG ON  does not turn on, make sure the front passenger is sitting correctly in the seat → page 62 and that there is nothing covering the front passenger's seat (such as blankets or pillows). If PASSENGER AIR BAG ON  still does not turn on, the front passenger's seat must not be used. Drive to an authorized Audi dealer or authorized Audi Service Facility and have the airbag system inspected.
- A child in a child safety seat on the front passenger's seat - especially in a rear-facing



child safety seat - can receive a severe impact if the front passenger's airbag deploys, which increases the risk of serious injury or death. Always secure child safety seats on the rear seats. If special circumstances require the use of a child safety seat on the front passenger's seat, always make sure that **PASSENGER AIR BAG OFF**  remains on while driving. If **PASSENGER AIR BAG OFF**  does not turn on, remove the child safety seat and install it again according to the child safety seat manufacturer instructions. If **PASSENGER AIR BAG OFF**  still does not turn on, the front passenger's seat must not be used. Drive to an authorized Audi dealer or authorized Audi Service Facility and have the airbag system inspected.

- Fluids, electronic devices, or mechanical damage on the front passenger's seat may cause the front passenger seat occupant detection to malfunction. The system may then incorrectly detect if the front passenger's seat is occupied. As a result, it could deploy the front passenger's airbag incorrectly or fail to deploy it, which increases the risk of serious injury or death. Make sure that no wet objects (such as a wet hand towel) and no fluids come into contact with the front passenger's seat cushion. If the front passenger's seat becomes wet, dry it immediately. Make sure no electronic devices (such as a laptop or a retrofitted seat heater) are on the front passenger's seat. Do not transport any objects on or under the front passenger's seat.
- Seat covers or protective covers may prevent the advanced airbag system from correctly detecting child safety seats or persons in the front passenger's seat. You must not use seat covers or protective covers on the front passenger's seat that are not specifically approved for use on Audi seats with an advanced airbag system.

## Child safety seats

### General information

When installing and using child safety seats, follow the information in this Owner's Manual, the applicable state and federal regulations, and the manufacturer instructions for the child safety seat.

You can also obtain useful and current information from the following sources:

#### U.S. National Highway Traffic Safety Administration

<http://www.nhtsa.gov>

<http://www.safercar.gov>

#### National SAFE KIDS Campaign

<http://www.safekids.org>

#### SafetyBeltSafe U.S.A.

<http://www.carseat.org>

#### Transport Canada Information Centre

<http://www.tc.gc.ca/roadsafety>

#### Audi Customer Experience Center

<https://www.audiusa.com/help/contact-us>


<https://www.audi.ca/ca/web/en/models/layer/contact.html>





### WARNING

To reduce the risk of serious injuries or death, children must always be secured in the vehicle with a child safety seat that is appropriate for their body size, weight, and age.

- Children ages 12 and under must be transported using the appropriate child safety seat. Note differences in regulations between states and countries.
- Child safety seats secured incorrectly in the vehicle may cause serious injuries or death in the event of an accident. Always secure the child safety seat according to the manufacturer instructions.
- Children or babies must not under any circumstances be held on the lap of the driver or other passengers while driving.
- Do not secure more than one child in a child safety seat.

- Never allow a child to sit in a child safety seat unsupervised.
- Never allow children to ride unsecured in the vehicle or to stand or kneel on the seats while driving. In the event of an accident, a child could be propelled through the vehicle. This can result in serious injuries or death to the child and passengers.
- If children sit in an incorrect seating position while driving, they have a higher risk of injury during a sudden braking maneuver or accident. This especially applies to children in the front passenger's seat or children who have their head near the side airbag deployment area, if the airbag system is deployed during an accident. This incorrect seating position can cause serious injuries or death.
- Make sure there is enough space in front of the child in the child safety seat. If necessary, adjust the angle and position of the seat in front of the child safety seat.
- The rear side of a forward-facing child safety seat should be positioned as close as possible to the backrest on the vehicle seat. If the head restraints make it difficult to install a child safety seat, adjust or remove them if necessary ⇒ *page 66*. Reinstall the head restraints immediately once the child safety seat has been removed.
- Always make sure that the backrest on the seat where the child safety seat is installed is securely locked in place and cannot move forward. Otherwise, the backrest where the child safety seat is secured could move forward in the event of an accident or other emergency situation.
- NEVER use a rear-facing child safety seat on a seat with an ACTIVATED FRONT AIRBAG; this could cause DEATH or SERIOUS INJURIES to a CHILD.
- Always secure child safety seats on the rear seats. If exceptional circumstances require the child safety seat to be placed on the front passenger's seat, then the front passenger's airbag must be deactivated. Always make sure that **PASSENGER AIR BAG OFF**  remains on while driving. If

**PASSENGER AIR BAG OFF**  does not turn on, remove the child safety seat and install it again according to the child safety seat manufacturer instructions. If **PASSENGER AIR BAG OFF**  still does not turn on, the front passenger's seat must not be used. Drive to an authorized Audi dealer or authorized Audi Service Facility and have the airbag system inspected.

- If you must use a forward-facing child safety seat on the front passenger's seat, move the seat as far back as possible so that it is as far as possible from the front passenger's airbag. Make sure the adjustment range is clear when doing this. A child in a child safety seat on the front passenger's seat can receive a severe impact if the front passenger's airbag deploys, which increases the risk of serious injury or death.
- Replace the child safety seat after an accident because there could be damage that is not visible.
- Even if a child is not sitting in the child safety seat, the child safety seat must be secured. An unsecured child safety seat may be thrown through the vehicle interior during sudden braking maneuvers or an accident.

### Correct positioning for children

Always secure children in a child safety seat designed for the body size, weight, and age of the child.

You can secure child safety seats in your vehicle using the lower LATCH anchors or the safety belts. You can also secure child safety seats to the top tether anchor. Depending on the child safety seat, it may also be necessary to secure it to the top tether anchor. In Canada, securing forward-facing child safety seats to the top tether anchors is required by law.

### Always transport children in the rear seats

Accident statistics show that children that are secured correctly in the rear seats are safer than in ►

front seats. Always transport children in suitable child safety seats secured on the rear seats.

### In exceptional circumstances: transporting children in the front passenger's seat

If exceptional circumstances require the child safety seat to be placed on the front passenger's seat, then the front passenger's airbag must be deactivated. Please note the important information for this ⇒ *page 73, Advanced airbag system*. If you must secure a forward-facing child safety seat, move the front passenger's seat as far back as possible so that it is as far as possible from the front passenger's airbag. Make sure the adjustment range is clear when doing this.

### Only switch to a larger child safety seat when absolutely necessary

Switch to a larger child safety seat only when absolutely necessary. Secure your child using a safety belt without a child safety seat only if all of the following statements are true:

- The child is large enough to sit upright in the seat
- The child is able to sit with their back resting completely on the seat backrest
- The child is able to sit with their knees angled over the edge of the seat surface
- The child is able to sit with both of their feet completely touching the floor in the footwell
- The lap portion of the safety belt lies flat and securely over the hip area and never over the stomach
- The shoulder portion of the safety belt lies flat and securely over the center of the shoulder and the chest, and never under the arm, behind the back, or over the neck or face.
- The child is able to maintain this seating position throughout the entire trip

Read and follow the important information and warnings regarding the correct use of safety belts ⇒ *page 67*.

#### Tips

- Child safety seats can also be secured to seats with side airbags. In the event of an accident, children can also be protected by

the side airbags if the child is correctly secured in a suitable child safety seat that is attached correctly.

- The lower LATCH anchors as well as the safety belt may be required to correctly install some child safety seats. Using both at the same time is permitted, provided that the fastening systems or safety belts do not impair those in an adjacent seating position.
- All child safety seats are constructed so that they can be secured using the lap safety belt in the vehicle.
- Child safety seats with a load leg can only be secured to the outer rear seats and to the front passenger's seat.

### Securing child safety seats to the lower LATCH anchors




Fig. 66 Rear bench seat: lower LATCH anchors

Observe the safety precautions ⇒ *page 75*.

In the United States and Canada, child safety seats can be secured without safety belts using the LATCH system. LATCH stands for Lower Anchors and Tethers for Children. In Canada, similar systems are called UCRA, LUAS, or UAS.

The lower LATCH anchors in your vehicle are located on the outer seats of the rear bench seat between the seat surface and the backrest. These seating locations each have two lower LATCH anchors that can be used to secure a LATCH child safety seat. Marking points with a ⇒ *fig. 66* symbol are located on the covers for the lower LATCH anchors. You can locate the LATCH anchors using the marking points.

- Applies to: vehicles with forward/back adjustable rear bench seat: Move the rear seat all the way back.
- Activate the child safety lock ⇒ *page 46*.
- Remove the cover\* from both lower LATCH anchors.
- If you secure a child safety seat to the rear seat, secure any unused safety belts that are within reach of the child ⇒  in *Securing child safety seats with a safety belt on page 79*.
- Secure the child safety seat according to the child safety seat manufacturer instructions.
- Pull on the child safety seat to check if both sides are engaged correctly in the LATCH anchors.
- If possible, also secure the child safety seat to the respective top tether anchor in the vehicle ⇒ *page 79*.



### WARNING

The LATCH anchors in the vehicle are only designed for child safety seats with the LATCH system. To reduce the risk of serious injury or death, never secure other child restraint systems, belts, or objects to the anchors.




### Tips

The LATCH anchors are designed for a total weight (child and child safety seat combined) up to 65 lbs (29 kg). If the total weight is greater than this, the child safety seat must be secured with the vehicle safety belt.

### Securing child safety seats with a safety belt

Observe the safety precautions ⇒ *page 75*. The front passenger's seat is a dangerous location for a child, even with an advanced airbag system. If exceptional circumstances require the child safety seat to be placed on the front passenger's seat, then the front passenger's airbag must be deactivated. Please note the important information for this ⇒ *page 76, Correct positioning for children* and ⇒ *page 73, Advanced airbag system*.

### Securing child safety seats

- Applies to: vehicles with forward/back adjustable rear bench seat: Move the rear seat all the way back.
- Activate the child safety lock ⇒ *page 46*.
- If you secure a child safety seat to the rear seat, secure any unused safety belts that are within reach of the child ⇒  ⇒ *page 80*.
- If you secure a child safety seat to the front passenger's seat, adjust the front passenger's seat to the highest position.
- Secure the child safety seat according to the child safety seat manufacturer instructions.
- If necessary, activate the belt retractor lock ⇒ *page 78*.
- If the child safety seat is secured on the front passenger's seat, adjust the front passenger's seat backrest until it rests flat against the child safety seat. Also make sure that the upper safety belt fixture is behind the child safety seat.
- If you secure a child safety seat on the rear seat, also secure it to the correct top tether anchor if possible ⇒ *page 79*.

### Activating the belt retractor lock

If you secure a child safety seat using the vehicle safety belt, you must activate the belt retractor lock. Follow the child safety seat manufacturer instructions.

The belt retractor lock prevents the safety belt from becoming loose while driving, which could result in the child safety seat no longer being adequately secured.

- Secure the child safety seat according to the child safety seat manufacturer instructions. While doing so, pull out the safety belt. Insert the safety belt into the belt latch that belongs to that seat until it audibly locks.
- Pull the upper belt out completely and then allow it to retract. You will hear a clicking sound while the belt is retracting. It will not be possible to pull the safety belt out any farther.
- Push the child safety seat into the seat and allow the belt to retract more.
- Make sure that the child safety seat cannot move more than 1 inch (2.5 cm).

## Deactivating the belt retractor lock


- Unbuckle the safety belt from the belt latch.
- Remove the child safety seat according to the manufacturer instructions.
- Allow the safety belt to retract completely. The belt retractor lock is deactivated.



### WARNING

- A safety belt that is not locked by the belt retractor lock or a locking device cannot secure a child safety seat while driving or in the event of an accident, which increases the risk of death. Always make sure the belt retractor lock on the safety belt is activated if the child safety seat manufacturer instructions require it.
- To reduce the risk of death, never place a rear-facing child safety seat on the front passenger's seat when the front passenger's airbag is activated.
- For the child safety seat to offer the maximum protection, it is especially important to route the vehicle safety belt correctly. Always follow the instructions from the child safety seat manufacturer for routing the safety belt correctly. Incorrectly fastened safety belts can cause injuries, even during minor accidents.

## Additionally securing a child safety seat to the top tether anchor

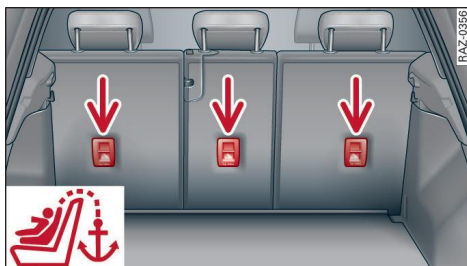

**Fig. 67** Rear backrest: top tether anchors to secure a child safety seat with an upper belt



**Fig. 68** Rear backrest: securing the upper belt to the top tether anchor

Observe the safety precautions ⇒ page 75.

There is a top tether anchor behind every seat in the rear bench seat to additionally secure a child safety seat with an upper belt.

- Move the head restraint behind the child safety seat upward.
- Secure the child safety seat according to the child safety seat manufacturer instructions.
- Guide the upper belt on the child safety seat under the head restraint or along both sides of it and toward the rear (depending on the child safety seat model).
- Fasten the belt to the top tether anchor ⇒ *fig. 68*. While doing this, make sure the belt is not twisted and is not running over any sharp edges.
- Pull the belt tightly so that the child safety seat rests at the top of the seat backrest.
- If necessary, move the head restraint behind the child safety seat downward.



### WARNING

The top tether anchors in the vehicle are only designed for child safety seats equipped with an upper strap. To reduce the risk of serious injury or death, never secure other child restraint systems, belts, or objects to the anchors.

### Securing unused safety belts on the rear bench seat

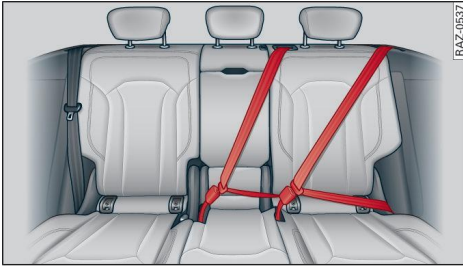


Fig. 69 Rear bench seat: securing unused safety belts

If a child safety seat is used on the rear bench seat, the child must not be able to reach any safety belts that are not being used. Secure safety belts that are within reach of the child.

- If you secure a child safety seat to the LATCH anchors, fasten the safety belt on the seat where the child safety seat is installed using the seat's safety belt latch.
- If you secure a child safety seat to one of the outer seats, fasten the safety belt for the center seat in its latch.
- Activate the belt retractor lock on the fastened safety belts. To do this, pull the upper belt out completely and then allow it to retract. You will hear a clicking sound while the belt is retracting. It will not be possible to pull the safety belt out any farther.
- Make sure the fastened safety belt does not block access to the LATCH anchors. Otherwise, it may not be possible to secure the child safety seat to the LATCH anchors correctly.



#### WARNING

A child in a child safety seat could play with the unused safety belts and then become entangled in them, which increases the risk of death. Always secure unused safety belts so that they are not within reach of children in child safety seats.

## Storage and convenience

### Power sources

When the ignition is turned on, you may be able to use multiple power sources for external devices, depending on the vehicle equipment.

 

#### 12 volt sockets

You can connect electrical accessories to the 12 volt sockets. The power usage from the sockets must not exceed a total of 120 watts. Do not connect multiple devices to the sockets in the vehicle at the same time.

The 12 volt sockets are labeled with the 12V symbol. They are located in the front center console, in the rear\*, and in the left floor panel in the luggage compartment\*.

#### USB ports

Applies to: vehicles with USB ports

You can charge mobile devices using the USB ports. Depending on the vehicle, the USB ports may be labeled with one of the following symbols: , , or CHARGE ONLY.



#### WARNING

- To reduce the risk of death, store all connected devices securely when driving so that they do not move around inside the vehicle when braking or in the event of an accident.
- Incorrect usage can result in serious injuries or burns. To reduce the risk of injuries, never leave children unattended in the vehicle with the vehicle key.



#### Note

- Read the operating instructions for connected devices.
- To reduce the risk of damage to the vehicle electrical system, never attempt to charge the vehicle battery by connecting accessories that provide power to the power sources.
- Do not connect any device whose network class (voltage) does not match the network class designed for the socket.

- Disconnect the connectors from the power sources carefully to reduce the risk of damaging them.

### Cup holders

Applies to: vehicles with cup holders



Fig. 70 Front center console: cup holder

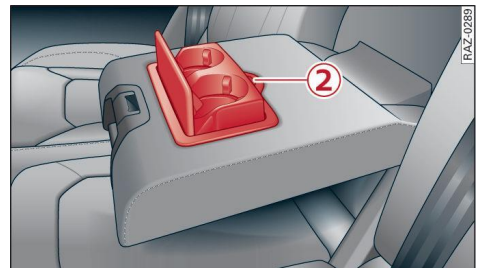


Fig. 71 Rear center armrest: cup holders

#### Cup holders in the front center console

- ▶ Set your beverage in the holder ①.

#### Cup holders in the rear center armrest

- ▶ Fold the center armrest downward.
- ▶ To open the cup holder, tap on the button ②.
- ▶ To close the cup holder, fold the cover back until it clicks into place.



#### WARNING

- Do not put any hot beverages in the cup holder while the vehicle is moving. Hot beverages could spill, which increases the risk of injury.
- Do not use any breakable beverage containers (for example, made out of glass or porcelain). You could be injured by them in the event of an accident.

### Note

Beverage containers in the cup holders should always have a lid. Otherwise, the liquid inside could spill and cause damage to vehicle equipment.

## Storage areas and compartments

Depending on vehicle equipment, there are a variety of storage areas, compartments, and retainers, such as the glove compartment, for safely storing and securing objects.

### WARNING

- To reduce the risk of injury, make sure all storage compartments are always closed while driving.
- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Store objects securely while driving.
- Only use the storage compartments in the door trim panels to store small objects that will not protrude out of the compartment and impair the function of the side airbags.
- Only lightweight clothing should be hung from the garment hooks in the vehicle. Do not use clothes hangers to hang clothing. The pockets of the clothing must not contain any heavy, breakable, or sharp-edged objects. This could impair the effectiveness of the side curtain airbags.
- Make sure your view toward the rear is not blocked, for example by hanging clothing or objects in the vehicle.

### Tips

Applies to: vehicles with Wi-Fi: Do not place any metal objects in the storage compartment\* on the end of the rear center console, because they could impair the Wi-Fi antenna function.

## Luggage compartment

### General information

All pieces of luggage or objects must be securely fastened in the luggage compartment. Note the following to maintain good vehicle handling:

- ▶ Distribute the load evenly in the luggage compartment.
- ▶ Close the luggage compartment cover before each drive if the load allows it.
- ▶ Stow heavy luggage as far forward in the luggage compartment as possible.
- ▶ Use non-elastic cords attached to the tie-downs to secure objects.

### WARNING

- The luggage compartment cover is not a surface for storing objects. Objects placed on the cover increase the risk of injury to all vehicle occupants during sudden driving or braking maneuvers or in the event of a collision.
- The luggage compartment cover must always be securely fastened when in use to reduce the risk of an accident.
- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Always stow objects securely in the luggage compartment and secure them at the tie-downs. Use straps suitable for heavy objects.
- If pieces of luggage or objects are secured to the tie-downs with unsuitable or damaged straps, this can increase the risk of injury during braking maneuvers or accidents.
- When transporting heavy objects, the vehicle characteristics will change due to the shift in the center of gravity, which increases the risk of an accident. You may need to adapt your driving style and speed to the current conditions.



- The cargo net\*<sup>1)</sup> is only strong enough to secure light objects. Heavy objects are not adequately secured. Attempting to secure heavy objects increases the risk of injury.
- Never exceed the permitted axle and load and vehicle weight ⇒ *page 282*.
- Never secure a child safety seat to the tie-downs.
- Never leave your vehicle unattended, especially if the luggage compartment lid is open. Children could enter the luggage compartment and close the luggage compartment lid from the inside. This increases the risk of death, since the children would be locked inside and may not be able to escape by themselves.
- Do not allow children to play in or on the vehicle. Close and lock the luggage compartment lid as well as all other doors when you leave the vehicle.
- Never transport persons in the luggage compartment. Each person in the vehicle must be secured correctly in the vehicle using the safety belts ⇒ *page 67*.
- Be careful when releasing the backrest and folding it forward. To reduce the risk of being pinched, pay attention and check when folding backrests forward.
- The backrest must be securely latched so objects cannot slide forward out of the luggage compartment during sudden braking.
- The backrest must be latched securely to ensure that the safety belt is protecting the center seating position.
- Always pull forward on the backrest to make sure it is correctly locked in place.
- If the safety belt becomes caught when folding the backrest back, then fold the backrest forward again and release the safety belt. Hold the safety belt with one hand and fold the backrest back carefully.
- For stability reasons, the bag hooks\* can hold a maximum weight of 6.6 lbs (3 kg). Heavier objects are not adequately secured. There is risk of personal injury.

### ! Note

- To reduce the risk of damage, move the rear head restraints down ⇒ *page 66* before folding the rear backrests forward.
- When folding the backrest forward, make sure the outer safety belts are in the belt guide recess so that they do not get pinched in the backrest lock and damaged. Other objects should be removed from the rear bench seat to protect the backrest from damage.
- If you move the front seat back when the rear seat backrest is folded forward, you could damage the head restraints on the rear seat.
- Make sure that the heating grid strips for the rear window defogger are not damaged by abrasive objects.

### i Tips

- The tire pressure must be adapted to the load ⇒ *page 245*.
- You can purchase straps at specialty stores.

### Luggage compartment cover

Applies to: vehicles with luggage compartment cover



**Fig. 72** Luggage compartment: cover when the luggage compartment lid is open

Observe the safety precautions ⇒ *page 82*.

- To remove the luggage compartment cover, unhook the straps ①.
- Pull the cover ② out of the retainers in the direction of the arrow.

<sup>1)</sup> In certain countries.

- ▶ To install the luggage compartment cover, slide it into the retainers until it engages.
- ▶ Hook the straps ① into the luggage compartment lid.

### Tips

Depending on the vehicle equipment, you may be able to store the luggage compartment cover under the adjustable cargo floor  
⇒ *page 85*. Remove the side inserts to do this.

### Folding the outer backrests

Applies to: vehicles with folding backrests

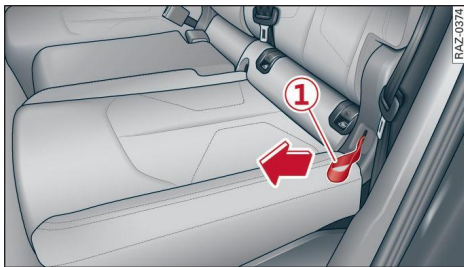


Fig. 73 Rear bench seat: loop

The rear seat backrests can be folded forward either separately or together.

Observe the safety precautions ⇒ *page 82*.

- ▶ If necessary, slide the rear bench seat back ⇒ *page 65*.
- ▶ To fold the backrest forward, pull the strap ① in the direction of the arrow. The backrest will swing forward.
- ▶ Fold the backrest forward until it locks into place.
- ▶ To fold the backrest back, pull the strap ① in the direction of the arrow again.
- ▶ Fold the backrest backward until it locks into place.

### Folding the center armrest

Applies to: vehicles with folding center armrest

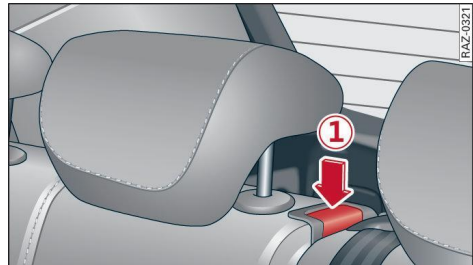


Fig. 74 Center backrest: release button

Observe the safety precautions ⇒ *page 82*.

- ▶ To fold the center backrest forward, press the release button ①.
- ▶ After the transport, fold the center backrest up until it locks into place.

### Tie-downs and cargo net<sup>1)</sup>

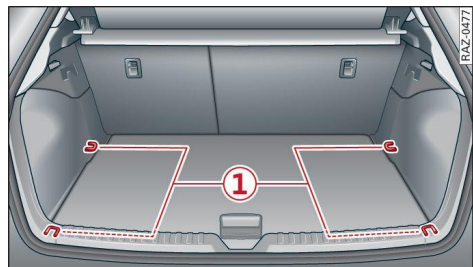


Fig. 75 Luggage compartment: location of the tie-downs

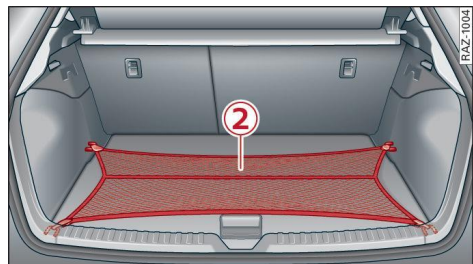


Fig. 76 Luggage compartment: luggage compartment net\* stretched out

Observe the safety precautions ⇒ *page 82*. ▶

<sup>1)</sup> In certain countries.

## Tie-downs

There are tie-downs ① in the luggage compartment to secure pieces of luggage and objects.

- Use the tie-downs to secure the cargo.

## Cargo net<sup>1)</sup>

Applies to: vehicles with cargo net

Light objects can be secured in the luggage compartment using the cargo net ②.

- Unfold the bracket for the front tie-downs.
- Insert the hooks on the cargo net into the tie-downs.

## Cargo floor

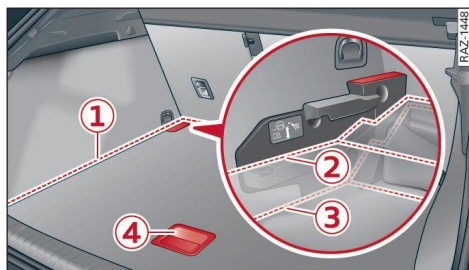


Fig. 77 Luggage compartment: lowering the cargo floor\*

## Removing or installing the cargo floor

- To remove the cargo floor, lift it by the handle ④.
- Pull the cargo floor toward the vehicle rear, out of the luggage compartment.
- To insert the cargo floor, push it all the way toward the backrest.

## Lowering/raising the cargo floor

Applies to: vehicles with adjustable cargo floor

The height of the cargo floor can be adjusted to create more space in the luggage compartment or to make loading and unloading easier.

- To lower the cargo floor, lift it at the handle ④.
- Pull the cargo floor slightly back and then push it forward again to position ② or ③.
- To raise the cargo floor, remove it and reinsert it in position ①.

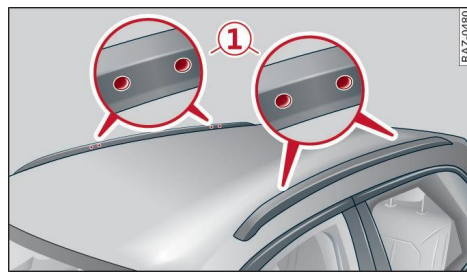
Audi recommends moving the cargo floor back into position ① after transporting goods.

Depending on vehicle equipment, there may be a middle floor panel under the adjustable cargo floor. Remove the middle floor panel to reach the vehicle tool kit ⇒ page 267 located below.

## Roof rack

### General information

Applies to: vehicles with roof rack mount



Applies to: vehicles with roof rail

Fig. 78 Roof rail: mounting points

If luggage or cargo is to be carried on the roof, you must observe the following:

- These roof racks are the basis for a complete roof rack system. Only roof racks that are suitable for your vehicle may be used. Audi recommends roof racks and attachments from the Audi Genuine Accessories program.
- Make sure the roof rack is mounted on the vehicle only at the specified locations ①.
- Note the permitted axle load, permitted total weight, and permitted roof load of your vehicle ⇒ page 282. The roof load is the total of the weight of the roof rack, the attachments, and the cargo you are carrying. However, you must also note the permitted load of the carrier system being used.



### WARNING

- Follow the installation instructions provided with the roof rack system. If you do not secure the roof rack system and objects on the

<sup>1)</sup> In certain countries.

roof correctly, they could come loose from the vehicle and cause an accident.

- The risk of an accident increases when using a roof rack system, because it changes the driving characteristics by shifting the center of gravity and/or the increasing the surface area exposed to wind. You may need to adapt your driving style and speed to the current conditions.

### **Note**

Make sure that the luggage compartment lid and the panoramic glass roof do not come into contact with objects on the roof when they are open.

### **For the sake of the environment**

Energy usage will increase because of the increased wind resistance. Remove the roof rack when you are no longer using it.

## Warm and cold

### Climate control system

#### Description

One of the following options may be available, depending on vehicle equipment:

- A deluxe automatic climate control system with two zones to individually adjust the temperature and air distribution for the left and right front sides<sup>1)</sup>
- A deluxe automatic climate control system with three zones where the temperature and air distribution can be adjusted separately on the left and right front sides, and the temperature can be adjusted separately in the rear

The climate control system warms, cools, dehumidifies, and filters the air in the vehicle interior. It is the most effective when the windows and, depending on vehicle equipment, the roof are closed. If there is a build-up of heat inside the vehicle, ventilation can help to speed up the cooling process.

The deluxe climate control system automatically maintains a temperature once it has been set. In

all heating mode functions except defrost, the blower only switches to a higher speed once the coolant has reached a certain temperature.

#### Active combination filter

When the fan is running, the filter will reduce particulate matter and the concentration of pollen, as well as odors in the interior.

#### Tips

- To prevent interference with the heating or cooling output and to prevent the windows from fogging over, the air intake in front of the windshield must be free of ice, snow, and leaves.
- Condensation from the cooling system can drip and form a puddle of water under the vehicle. This is normal and does not mean there is a leak.
- The energy management system may temporarily turn off certain functions, such as the seat heating or rear window defogger. These systems will be available again once the energy supply has been restored.

#### Operating in the cockpit




Fig. 79 Deluxe automatic climate control with 2 zones/3 zones: controls

Observe the safety precautions ⇒ .

<sup>1)</sup> In certain countries.

The functions can be turned on and off by pressing the buttons or adjusted by turning the knob. When the function is turned on, the LED in the respective button or knob turns on.



### **Cooling mode**

 
The cooling mode only functions with the blower turned on. The cooling system is turned on and off with the  button. The air is not cooled and humidity is not reduced when cooling mode is turned off. This can cause fog on the windows. The cooling mode turns off automatically at low outside temperatures.

### **Automatic mode**

Automatic mode maintains a constant temperature inside the vehicle. Air temperature, airflow and air distribution are controlled automatically. AUTO mode turns off once a button in the climate control system is pressed.




### **Temperature**

The temperature for the left and right sides can be adjusted separately with the dials /. Temperatures between 60 °F (+16 °C) and 84 °F (+28 °C) can be set. If outside of this range, **LO** or **HI** will appear in the control panel display. In both settings, the climate control runs constantly at the maximum cooling or heating level.

**Synchronization:** pressing and holding the  button for two seconds transfers the temperature setting on the driver's side to the front passenger's side. This applies a temperature change to the front passenger's side.


### **Blower**

The blower setting should not be set too low in order to prevent the windows from fogging and to ensure a continuous exchange of air inside the vehicle.

You can manually adjust the volume of air generated by the blower to your preference using the knob . To have the blower regulated automatically, press the  button. If the windows are foggy, press the  button.

### **Air distribution**

To help prevent the front side windows from fogging over, open the side air vents and angle them toward the side windows.



The air distribution can be adjusted with the buttons. To have the air distribution regulated automatically, press the  button.


### **Defrosting**



The windshield and side windows are defrosted or cleared of condensation as quickly as possible. Open the side air vents and angle them toward the side windows. The maximum amount of air flows mainly from the vents below the windshield. Recirculation mode turns off. The temperature should be set at 72 °F (+22 °C) or higher. The temperature is controlled automatically. Depending on the outside temperature, the A/C cooling mode may turn on automatically.

The  button turns off the defroster.

### **Recirculation mode**


In recirculation mode, the air inside the vehicle is circulated and filtered. This prevents the unfiltered air outside the vehicle from entering the vehicle interior  .

Pressing the  button turns recirculation mode on or off.

The  or  buttons also turn off recirculation mode.

### **Rear window defogger**




The rear window defogger only operates when the engine is running. It turns off automatically after 10 to 20 minutes, depending on the outside temperature.

To prevent the rear window defogger from turning off automatically, press and hold the  button for more than two seconds. It will remain on until the ignition is turned off.

### **Vents**

You can open and close the center and rear air vents using the thumbwheels. The levers adjust the direction of the airflow from the vents. ►

## Seat heating

The seat heating temperature can be set to different levels ⇨ . Press the  button once to turn on the highest level. Press the  button again to decrease the temperature one level at a time. The seat heating is off when all of the LEDs are off.



### WARNING

- You should not leave the recirculation mode on for an extended period of time. This can cause the windows to fog, which increases the risk of an accident.
- Using recirculation mode or, depending on the vehicle equipment, automatic recirculation for an extended period of time can cause the CO<sub>2</sub> concentration inside the vehicle to increase. This can have a negative effect on the well-being of vehicle occupants, which can increase the risk of an accident. Turn off recirculation mode or automatic recirculation and ventilate the vehicle at the first sign of unwellness.
- The vehicle is equipped with functions to automatically activate the seat heating. To reduce the risk of burns, individuals with reduced sensitivity to pain or temperature must make sure that the seat heating is off when starting the drive.
- When the seat heating is on, an alternating magnetic field is created. Interactions such as irritation of sensory organs or malfunctions of active medical implants (such as pacemakers, infusion pumps, or neurostimulators) are very unlikely. If you have a medical implant, seek medical advice from a specialist if you have any questions.
- Make sure others in the vehicle know how to use the seat heating safely.



### Note

- To reduce the risk of damage to the seat heating elements, do not kneel on the seats or place heavy pressure on one area of the seat.
- Only use the seat heating when the seat surface is dry.

- Only put dry items on the seat surfaces.
- Do not spill liquids on the seat surfaces.
- Covering the seat surfaces can impair the function of the seat heating. Do not use protective seat covers and do not put items (such as jackets, blankets, or bags) on the seat surfaces when the seat heating is on.
- Make sure others in the vehicle know how to use the seat heating safely.



### For the sake of the environment

Energy can be saved by turning off the A/C mode.

## Operating in the rear

Vents are located under the front seats to provide climate control in the rear of the vehicle.

The levers adjust the direction of the airflow from the vents. In addition to the foot vents, there are adjustable vents located on the center armrest.

Applies to: vehicles with 2-zone deluxe automatic climate control: The amount of air can be adjusted with the thumbwheel.

Applies to: vehicles with 3-zone deluxe automatic climate control: The amount of air and the temperature can be adjusted with the thumbwheels.

## Additional settings

You can adjust additional settings.

- Applies to MMI: Select on the home screen: **VEHICLE > Air conditioning**.


### Auto recirculation

This function will automatically operate the recirculation mode if air pollution is detected.

## Steering wheel heating

### Turning on or off

Applies to: vehicles with steering wheel heating

- Press the  button on the multifunction steering wheel to turn the steering wheel heating on or off.

Messages

Applies to: vehicles with steering wheel heating

The following messages may appear, depending on the vehicle equipment:








Steering wheel heating: malfunction! See owner's manual

If this message appears, there is a malfunction. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Fluids in the A/C system

Refrigerant in the A/C system


The sticker in the engine compartment provides information about the type and amount of refrigerant used in the vehicle's A/C system. The sticker is located in the front section of the engine compartment or at the front or back of the hood.

Symbol	Meaning
	Warning: the A/C system must only be serviced by qualified technicians.
	Refrigerant type
	Refrigerant oil type
	Refer to the service information (only available to authorized Audi dealers or authorized Audi Service Facilities)
	The A/C system must only be serviced by qualified technicians.
	Flammable refrigerant
	Make sure all components are disposed of correctly and never install components in the vehicle that have been removed from old vehicles or taken from recycling.

Refrigerant oil in the A/C system


The sticker in the engine compartment provides information about the type and amount of refrigerant oil used in the vehicle's A/C system. For information about the amount of refrigerant oil

used, contact an authorized Audi dealer or authorized Audi Service Facility.

 **WARNING**

The climate control system may only be serviced by qualified and certified technicians who have been trained according to the country-specific standards, for example SAE standards J2845 and J2911.

- Refrigerant is flammable. Keep the vehicle away from open flames, sparks, and other ignition sources to reduce the risk of serious injuries or death.
- The refrigerant is under pressure and can explode if heated, which increases the risk of serious injuries or death.
- The refrigerant can create toxic vapors when it comes in contact with hot surfaces. To reduce the risk of serious injuries or death, do not inhale these vapors.

 **Tips**

- Never repair the A/C system evaporator with components from old vehicles or from recycling.
- New replacement evaporators for portable A/C systems must be certified and labeled as such, so that they comply with the SAE standard J2842 HFO-1234yf and R744.



## Driving

### Starting the vehicle

#### Convenience key

Applies to: vehicles with convenience key

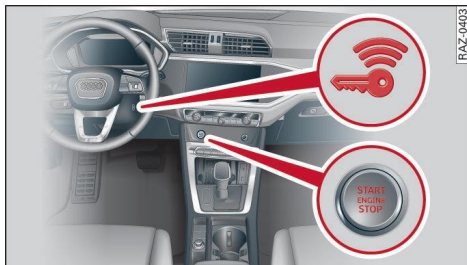


Fig. 80 Center console: starting the engine

Requirement: the key must be in the vehicle.

#### Starting the engine

- Press and hold the brake pedal.
- Press the **START ENGINE STOP** button. The engine will start.

Equipment that uses a lot of electricity is turned off temporarily when you start the engine. If the engine does not start immediately, the starting procedure stops automatically after a short time. If this is the case, repeat the starting procedure after approximately 30 seconds.

#### Stopping the engine

- Bring the vehicle to a full stop.
- Press the **START ENGINE STOP** button. The engine will turn off.

Applies to: vehicles with steering lock: The steering is locked when you turn off the engine and open the driver's door. The steering lock helps prevent vehicle theft. The "P" position must be engaged on vehicles with an automatic transmission.

#### Stopping the engine in an emergency

If necessary in an emergency, the engine can also be stopped while driving using the emergency off function\*.

- Press the **START ENGINE STOP** button twice in a row or press and hold it one time.

#### Turning on or off

If you would like to only turn the ignition on or off without starting the engine, follow these steps:

- Press the **START ENGINE STOP** button without pressing the brake pedal.

#### Turning off the ignition automatically

To prevent the vehicle battery from draining, the ignition and possibly the exterior lighting may turn off automatically.

Requirements:

- The Start/Stop system must have stopped the engine.
- You must have left the vehicle for longer than 30 seconds.
- The ignition must be turned on.

Among other indicators, the system detects that you have left the vehicle based on the following factors:

- The driver's door has been opened.
- The driver's safety belt has been unbuckled.
- The brake pedal is not being pressed.

The ignition will also be turned off if the vehicle is locked from the outside.

#### Ignition key

Applies to: vehicles with ignition lock

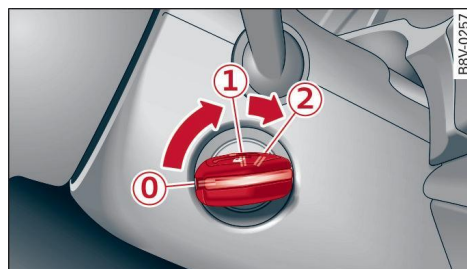


Fig. 81 Steering column: ignition lock

#### Starting the engine

- Press the brake pedal.
- Insert the ignition key into the ignition lock.
- Turn the key briefly to position ②. The ignition key automatically returns to position ①. Do not press the accelerator pedal when doing this. ►

- The engine will start and the vehicle will then be ready to drive.

Equipment that uses a lot of electricity is turned off temporarily when you start the engine. If the engine does not start immediately, stop the starting procedure by turning the ignition key to position ① and repeat after 30 seconds.

If it is difficult to turn the key to position ①, turn the steering wheel back and forth slightly to release the steering lock.

### Stopping the engine

- Bring the vehicle to a full stop.
- Turn the key to position ①. The engine will turn off.

### Activating the steering lock

Applies to: vehicles with steering lock

The steering lock helps prevent vehicle theft.

- Remove the ignition key.
- Turn the steering wheel until the steering wheel audibly locks.

### Turning the ignition on or off

If you would like to only turn the ignition on or off without starting the engine, follow these steps:

- Turning on: turn the key to position ①.
- Turning off: turn the key to position ①.

#### WARNING

Never remove the ignition key from the ignition lock while the vehicle is moving. Otherwise, the steering lock could engage and you would not be able to steer the vehicle, which increases the risk of an accident.

### General information

#### WARNING

- To reduce the risk of asphyxiation, never allow the engine to run in confined spaces.
- Never turn off the engine before the vehicle has come to a complete stop and the “P” position is engaged. The full functionality of the brake booster and power steering may

not be available. You would then need to use more force to steer and brake the vehicle. The fact that you cannot steer and brake as usual may increase the risk of accidents and serious injuries.

- Secure the vehicle against rolling before exiting the vehicle ⇒ *page 93*.

#### Note

- Avoid high engine speed, full throttle, and heavy engine load if the engine has not reached operating temperature yet. You could damage the engine.
- If the engine has been under heavy load for an extended period of time, heat builds up in the engine compartment after the engine is turned off and there is a risk of damaging the engine. For this reason, let the engine run at idle for approximately two minutes before shutting it off.

#### Tips

- Brief noises are normal when starting and parking the vehicle and are no cause for concern.
- For up to 10 minutes after stopping the engine, the radiator fan may turn on again automatically or it may continue to run, even if the ignition is turned off.
- It may not be possible to start the vehicle in extremely low temperatures.
- Power will be fully available once the engine is at operating temperature.

### Messages


The following messages may appear, depending on the vehicle equipment:


#### Engine start system: malfunction! Please contact Service

There is a malfunction in the engine start system. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

#### Remote control key: key not detected. Is the key still in the vehicle? ►

The vehicle key was removed from the vehicle while the engine is running. If the vehicle key is no longer in the vehicle, you cannot turn on the ignition or start the engine once you stop it. You also cannot lock the vehicle from the outside.

 **Remote control key: hold back of key against the designated area. See owner's manual**

The battery in the vehicle key may be drained or there may be a malfunction. To start the vehicle, you must also hold the vehicle key against the location shown  *⇒ page 91, fig. 80.*

If the malfunction remains, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

## When driving

### Starting to drive, stopping, and parking

#### Starting from a stop

- ▶ Press and hold the brake pedal.
- ▶ Start the engine.
- ▶ Select a transmission selector position.
- ▶ Release the parking brake.
- ▶ Release the brake pedal. The vehicle may roll.
- ▶ Press the accelerator pedal to accelerate.

#### Securing the vehicle against rolling

Secure your vehicle to prevent it from rolling before exiting the vehicle.

- ▶ Set the parking brake.
- ▶ Select the “P” position.
- ▶ If parking on a steep road, turn the steering wheel so that your vehicle will roll against the curb in case it should start to move.

If one of these measures is not possible, for example because there is no vehicle power, you must secure your vehicle against rolling using additional measures.

- ▶ Only park the vehicle on a level surface.
- ▶ Use suitable objects to block the front and rear wheels.

Set the parking brake before selecting the “P” position. This prevents too much stress from being

put on the locking mechanism when parking on a steep surface.

### WARNING

- Always set the parking brake when leaving your vehicle, even if only for a short period of time. If the parking brake is not set, the vehicle could roll, increasing the risk of an accident.
- Do not leave your vehicle unattended while the engine is running, because this increases the risk of an accident.
- If the parking brake is set, it can release automatically when the accelerator pedal is pressed. To reduce the risk of an accident, do not inadvertently press the accelerator pedal and always shift into the “P” position when the vehicle is stopped.
- If you leave the vehicle, turn off the ignition and take the key with you. This is especially important when leaving persons or animals in the vehicle. Otherwise, the vehicle could start unintentionally, the parking brake could release, or electronic equipment could activate, which increases the risk of an accident.
- No persons or animals should be left in a locked vehicle. Locked doors make it more difficult for emergency workers to enter the vehicle, which increases the risk of death.
- If you do not begin driving immediately after releasing the brake pedal, your vehicle may begin to roll backward. Press the brake pedal or set the parking brake immediately.

### Note

If you have to stop on an incline, always press the brake pedal to hold the vehicle in place to reduce the risk of the vehicle rolling backward. Do not try to hold the vehicle in place by pressing and holding the accelerator pedal. The transmission can overheat, which increases the risk of damage.


### Hill hold assist

If you take your foot off of the brake pedal when driving on hills, the braking force will be held for ▶

several seconds. At that time, you can start driving without the vehicle rolling backward.

Requirement: the driver's door must be closed, the engine must be on, and the vehicle must be traveling uphill.

- To activate hill hold assist, press and hold the brake pedal for several seconds while the vehicle is stationary.

 **WARNING**

- If you do not begin driving immediately after releasing the brake pedal, your vehicle may begin to roll backward. Press the brake pedal or set the parking brake immediately.
- The hill hold assist cannot hold the vehicle on inclines in every scenario (for example, on slippery or icy ground).

### Messages

The following messages may appear, depending on the vehicle equipment:

#### Hill hold assist: unavailable

The hill hold assist is temporarily unavailable. Press the brake pedal to secure the vehicle from rolling unintentionally.

### Transmission selector positions and driving programs

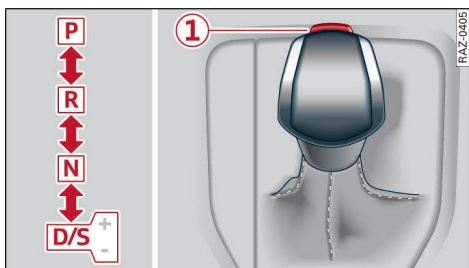


Fig. 82 Center console: transmission selector

The automatic transmission shifts automatically depending on the selected position and the current driving style. When driving with a moderate driving style, upshifting early and downshifting late will help to improve fuel economy. When

driving with a sporty driving style, the transmission permits higher RPMs.

### Transmission selector positions

The selector positions are displayed next to the transmission selector.

- **P** (Park): parking lock
- **R** (Reverse): driving in reverse
- **N** (Neutral): idling
- **D** (Drive): driving forward

### Driving programs

Various driving programs can be selected when in the “D” position. These programs influence, for example, when the transmission shifts and how the accelerator pedal responds.

The selected driving program is displayed in the instrument cluster.

- **D** (Drive): normal driving mode
- **S** (Sport): sporty driving mode

### Selecting a position

Requirement: the ignition must be turned on.

- Bring the vehicle to a full stop and press the brake pedal.
- Press the release button ① on the selector.
- To select a transmission selector position, move the selector into the corresponding position.
- The label next to the selector for the selected position will illuminate.

#### “N” (Neutral) position

In the “N” position, power is not transmitted to the driving wheels. Use the “N” position in a car wash (with conveyor belts), for example.

If you unintentionally select the “N” position while driving (faster than 1 mph (2 km/h)), you can select “D” again without pressing the brake pedal.

For safety reasons, the vehicle cannot be locked when the “N” position is selected.

#### “P” (Park) position

The parking lock secures the vehicle from rolling when the “P” position is selected. The parking

lock is a mechanical locking mechanism in the transmission.

If you cannot shift out of the “P” position, for example because the vehicle has no power, you may need to use the manual release for the parking lock ⇒ *page 97*.

### Selecting a driving program

To switch between the current driving program and “S”, push the selector toward the rear.

If you select the **dynamic** mode in Audi drive select\*, the “S” driving program will be activated. When the ignition is turned off, the driving program may be reset to “D”.

The S driving program might not be available in the Audi drive select\* **offroad** mode.



#### WARNING


- Before you start driving, check if the label for the desired selector position next to the transmission selector is illuminated.
- Secure the vehicle against rolling before exiting the vehicle ⇒ *page 93*.
- Power is still transmitted to the wheels when the engine is running at idle. To prevent the vehicle from “creeping”, you must keep your foot on the brake in all selector positions (except “P” and “N”) when the engine is running.
- To reduce the risk of an accident, do not press the accelerator pedal when changing selector positions if the vehicle is stationary and the engine is running.
- Never select the “R” or “P” positions while driving. Doing so could cause an accident.
- The vehicle can roll even if the ignition is turned off.



#### Tips

- If you shift back and forth between the “D” and “R” position within one second, you do not need to press the brake pedal. This makes it possible to “rock free” the vehicle if it is stuck, for example.
- Audi recommends the “D” driving program for everyday driving.

### Manual shifting

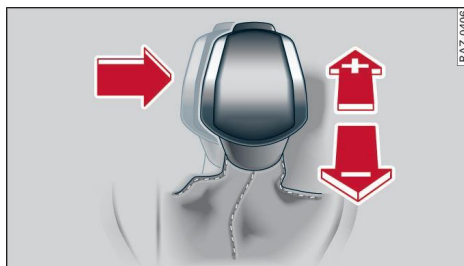

**Fig. 83** Center console: shifting manually with the transmission selector



**Fig. 84** Steering wheel: shift paddles\*

You can shift the gears manually when in the “D” position. The transmission must be in tiptronic mode.

### Shifting with the transmission selector

You can shift into manual shifting mode while the vehicle is stationary or while driving.

- To switch to manual shifting mode, tilt the selector toward the front passenger's side ⇒ *fig. 83*. “M” will be displayed in the instrument cluster.
- Upshifting: push the selector forward (+).
- Downshifting: push the selector toward the rear (-).
- To switch back to automatic mode, tilt the selector toward the driver's side.

### Shifting with the shift paddles

Applies to: vehicles with shift paddles

- Upshifting: press the (+) shift paddle ⇒ *fig. 84*.
- Downshifting: press the (-) shift paddle.
- To switch back to automatic mode, press and hold the (+) shift paddle or push the selector toward the rear.

If you stop using the shift paddles temporarily, the transmission will switch back to automatic mode. To keep shifting manually, tilt the selector toward the front passenger's side.

### Tips

- The transmission only allows manual shifting when the engine speed is within the permitted range.
- The transmission automatically shifts up or down before critical engine speed is reached.

## Accelerator pedal

You can accelerate the vehicle using the accelerator pedal.

### Maximum acceleration

If you press the accelerator pedal all the way down, the engine's full power will be used and you will reach maximum acceleration, also called "kick-down".

### WARNING

The driving wheels could spin and the vehicle could swerve on slick or slippery road surfaces when using kick-down, which increases the risk of an accident.

## Launch control

Applies to: vehicles with launch control

Launch control provides the best possible acceleration when starting from a stop.

### Requirements

- The engine must be at operating temperature.
- The steering wheel must not be turned.
- Start/Stop system\* must be deactivated  
⇒ *page 101*.
- ESC must be limited ⇒ *page 109*.
- The "S" driving program ⇒ *page 95* and the **dynamic** Audi drive select\* mode must be selected ⇒ *page 107*.

## Using launch control

- Press the brake pedal with your left foot and hold it all the way down for at least one second.
- With the brake pedal pressed, press the accelerator pedal all the way down with your right foot at the same time.
- Once the engine reaches a constant speed, remove your foot from the brake pedal.

Once the vehicle has started moving, reactivate the ESC so that it is fully functional.

### WARNING

Only use launch control when road and traffic conditions allow it and other road users will not be endangered or impacted by your driving and the vehicle's acceleration. The driving wheels could spin and the vehicle could swerve, especially on slick or slippery road surfaces, which increases the risk of an accident.

### Note

- When accelerating using launch control, all vehicle components are subject to heavy loads. This can result in increased wear.
- To reduce the risk of damaging the vehicle, trailer, and cargo, avoid using launch control while in trailer towing mode.

### Tips

After accelerating using launch control, the temperature of some vehicle components may increase greatly. If that happens, the function will not be available for a few minutes to reduce the risk of damage. After a cool-down period, launch control will be available again.

## Manually releasing the parking lock

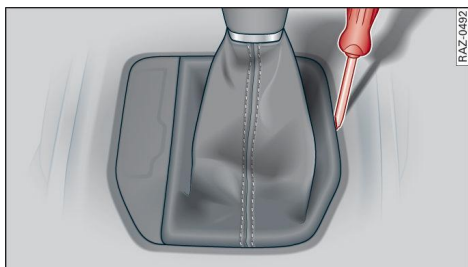


Fig. 85 Transmission selector: removing the shifter boot

The emergency release is located under the transmission selector shift gate. Only use the release if you have the necessary technical knowledge. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

You will need the screwdriver from the vehicle tool kit to release it ⇒ *page 267*. Use the flat side of the reversible screwdriver blade. You might also need a very long screwdriver.

### Removing the shifter boot

- ▶ Secure the vehicle against rolling ⇒ *page 93*.
- ▶ Turn off the ignition.
- ▶ To loosen the shifter boot, carefully insert the flat side of the screwdriver sideways into the slit near the shifter boot ⇒ *page 97, fig. 86*.
- ▶ Carefully pry the shifter boot out with the screwdriver while gripping the boot at the fold with your hand and pulling it upward and out until all four corners are released ⇒ *page 97, fig. 87*.
- ▶ Fold the shifter boot up around the shifter knob.
- ▶ Applies to: **right-hand drive vehicles**: Remove the gear trim and let it hang down to the side while still connected to the cable.

### Releasing the parking lock using the manual release

- ▶ Operate the emergency release ⇒ *page 97*.

### Attaching the shift cover

- ▶ Applies to: **right-hand drive vehicles**: Place the gear trim back into the shift gate.
- ▶ Clip the shift cover back into the shift gate.

## WARNING

- Only use the parking lock manual release if the vehicle is secured against rolling ⇒ *page 93*. An unsecured vehicle may roll, which increases the risk of an accident.
- Only activate the manual release while on a level surface or a slight slope.
- To reduce the risk of an accident, you must not drive when the manual release is activated.

## Emergency release operation

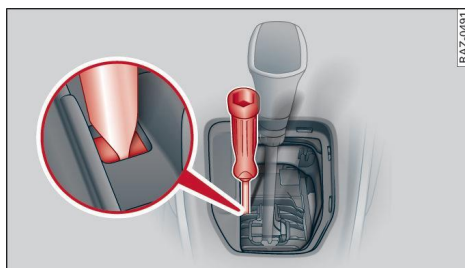


Fig. 86 Emergency release at the lower left

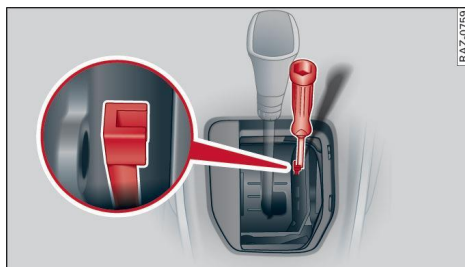


Fig. 87 Emergency release at the upper right

Depending on the version, the emergency release will be located under the shifter boot, either to the lower left or to the upper right.

The procedure differs depending on the version.

### Emergency release at the lower left

- ▶ Press and hold the yellow release button on the side with a screwdriver.
- ▶ Now press the unlock button on the selector and move the selector to the “N” position. ▶

### Emergency release at the upper right

- ▶ Insert the screwdriver into the opening of the yellow release lever.
- ▶ Using the screwdriver, carefully pull the release lever all the way back and hold it in this position.
- ▶ Now press the unlock button on the selector and move the selector to the "N" position.

### Messages

The following messages may appear, depending on the vehicle equipment:

#### **Transmission: malfunction! Safely stop vehicle**

Do not continue driving. Stop the vehicle as soon as possible in a safe location and secure it so it does not roll ⇒ *page 93*. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

#### **Transmission: too hot. Please stop vehicle**

Do not continue driving. Select the "P" position and contact an authorized Audi dealer or authorized Audi Service Facility for assistance.

#### **Transmission: too hot. Please adapt driving style**

The transmission temperature has increased significantly. Drive very cautiously or take a break from driving until the temperature returns to the normal range and the indicator light turns off.

#### **Transmission: malfunction! You can continue driving. See owner's manual**

There is a system malfunction in the transmission. You may continue driving. Drive to an authorized Audi dealer or authorized Audi Service Facility soon to have the malfunction corrected.

#### **Transmission: malfunction! You can continue driving with limited function. Please contact Service**

There is a system malfunction in the transmission. The transmission is switching to emergency mode. This mode only shifts into certain gears or may no longer shift at all. The engine may stall. Drive to an authorized Audi dealer or authorized

Audi Service Facility immediately to have the malfunction corrected.

#### **Transmission: malfunction! You can continue driving with limited function. No reverse gear**

There is a system malfunction in the transmission. The transmission is switching to emergency mode. This mode only shifts into certain gears or may no longer shift at all. The engine may stall. You cannot engage the reverse gear. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

#### **Transmission: malfunction! You can continue driving in D until engine is off**

There is a system malfunction in the transmission. The transmission is switching to emergency mode. If you turn the engine off, you will not be able to select any other selector positions after restarting the engine. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

#### **Danger of rolling away! P not possible. Please apply parking brake**

- The parking lock was released using the manual release ⇒ *page 97*. Or
- The parking lock can no longer be engaged. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. Secure the vehicle against rolling before exiting the vehicle ⇒ *page 93*.


#### **Clutch: malfunction! Please contact service**

There is an ongoing malfunction in the clutch. The engine torque that can be transferred is reduced. You may continue driving. Avoid using the clutch in any way that will place a heavy load on it. Do not let the clutch rub for a long time. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

#### **Clutch: temperature too high. Adapt driving style**



There is a malfunction in the clutch. The engine torque that can be transferred is reduced. You may continue driving. Avoid using the clutch in the future in any way that will place a heavy load on it. Do not let the clutch rub for a long time. The indicator light turns off once the clutch is fully operable again.

 **Clutch: check pedal. You can continue driving**

The clutch is not transferring all of the engine torque. If necessary, remove your foot from the clutch pedal.

## Drive system

### Breaking in

A new vehicle must be broken in within the first 1,000 miles (1,500 km) so that all moving parts work smoothly together, which helps to increase the service life of the engine and other drive components.

Do not drive higher than two-thirds of the maximum permitted engine RPM during the first 600 miles (1,000 km) and do not use full acceleration. The engine can be increased RPM gradually during the next 300 miles (500 km).

### Efficient and environmentally-friendly driving

Your driving style greatly influences the amount of fuel and energy consumed, the environmental impact, and the wear on the engine, brakes, and tires. Note the following information for efficient and environmentally-conscious driving:

- Turn off electrical equipment that is not needed, for example seat heating\*.
- Anticipate upcoming traffic situations while driving to avoid unnecessary acceleration and braking.
- Avoid driving at high speeds.
- Avoid adding extra weight to the vehicle if possible, for example by not leaving roof racks or bike racks installed when they are not needed.
- Make sure the tire pressure is correct.

- Have maintenance performed regularly on the vehicle.
- Do not let the engine run while the vehicle parked.
- Do not drive with winter tires during the summer.
- Use the Start/Stop system.
- Utilize the engine braking effect.
- Avoid driving short distances when possible.

### Tips

The amount of noise produced by the vehicle can increase significantly when driving with a sporty style. Show respect to others around you and the environment with the way you operate your vehicle, especially at night.

### Energy management

Your vehicle is equipped with an intelligent energy management system for distributing electricity. This significantly improves the starting ability and increases the vehicle battery life.

### Tips

- If you drive short distances frequently, the vehicle battery may not charge enough while driving. As a result, convenience functions for electrical equipment may be temporarily unavailable.
- The vehicle battery will gradually drain if the vehicle is not driven for long periods of time, or if electrical equipment is used when the engine is not running. To ensure that the vehicle can still be started, the electrical equipment will be limited or turned off.

### Messages

The following messages may appear, depending on the vehicle equipment:

 **Drive system: malfunction! Safely stop vehicle**

There is a malfunction in the drive system. The brake booster and the power steering may stop working. Stop the vehicle immediately or as soon ►

as possible and do not continue driving. Secure the vehicle against rolling before exiting the vehicle ⇒ *page 93*. Have the problem corrected by an authorized Audi dealer or authorized Audi Service Facility.

### **Drive system: malfunction! Please contact Service**

There is a malfunction in the drive system. Drive slowly to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

## Start/Stop system

### Description

Applies to: vehicles with Start/Stop system

The Start/Stop system can help increase fuel economy and reduce CO<sub>2</sub> emissions. In Start/Stop mode, the engine shuts off automatically when stopped, for example at a traffic light.

If certain conditions are met, the engine may stop before the vehicle has come to a complete stop. If you press the accelerator pedal when this happens, the engine will start and driving power will be transmitted.

The ignition and important assist systems such as the brake booster will remain available during the Stop phase. The engine will restart automatically when needed.

The Start/Stop system is automatically activated once the ignition is turned on.

### Basic requirements

- The driver's door and hood must be closed.
- The "P", "N", or "D" position must be engaged.
- The steering wheel must not be turned far in either direction.
- The vehicle must have driven faster than 2 mph (3 km/h) since the last time it stopped.
- The vehicle is not in trailer mode.

### **Note**


Always turn the Start/Stop system off when driving through water ⇒ *page 101*.

### **Tips**

- Depending on the driving situation, the engine may already stop when **coasting** before the vehicle has come to a complete stop.
- If you select the "D" position after shifting into reverse, the vehicle must be driven faster than 6 mph (10 km/h) in order for the Start/Stop system to become active again. This makes it possible to maneuver without stopping the engine.

### Stopping and starting the engine

Applies to: vehicles with Start/Stop system

- ▶ Press and hold the brake pedal until the vehicle has stopped. The  indicator light appears in the instrument cluster once the engine stops automatically.
- ▶ The engine starts again when you remove your foot from the brake pedal. The indicator light turns off.

If the parking brake is set, the engine will only start again when the brake pedal is released or the accelerator pedal is pressed.

### **Tips**


- Press the brake pedal during a Stop phase to keep the vehicle from rolling.
- The ignition will turn off if you press the **[START ENGINE STOP]** button during a Stop phase.
- If you leave the vehicle briefly during a Stop phase, the driver's door must be closed and the safety belt buckled for the engine to be able to restart.
- You can control if the engine will stop or not by reducing or increasing the amount of force you use to press the brake pedal. For example, if you only lightly press on the brake pedal in stop-and-go traffic or when turning, the engine will not turn off when the vehicle is stationary. If you press the brake pedal harder, the engine will turn off.

## Starting and stopping the engine automatically

Applies to: vehicles with Start/Stop system


The system checks if certain conditions are met before and during the Stop phase, and determines if the engine stops and how long it remains stopped. For example, if power usage is high, the engine will not be stopped. Along with other conditions, the following factors influence the automatic engine start or stop:


- Environmental conditions (slopes, inclines, elevation, temperature)
- Battery (charge status, temperature, power usage)
- Engine temperature
- Assist systems
- Driving behavior

Depending on the engine, the  indicator light may appear if the engine is not stopped.

## Manually turning the Start/Stop system off and on

Applies to: vehicles with Start/Stop system

The  button is located in front of the transmission selector in the center console.

- ▶ Press  to turn on or off. The button will be illuminated when the function is turned off.

### Tips

If you turn off the system during a Stop phase, the engine will start again automatically.

## Messages

Applies to: vehicles with Start/Stop system

The following messages may appear, depending on the vehicle equipment:

### Drive system: please start the vehicle manually

This message appears when specific conditions are not met during a Stop phase. The Start/Stop system will not be able to restart the engine. The engine must be started with the **START ENGINE STOP** button.

## Vehicle starting system: malfunction! Please contact Service

There is a malfunction in the Start/Stop system. Drive the vehicle to an authorized Audi dealer or authorized Service Facility as soon as possible to have the malfunction corrected.

## Brakes

### General information

You can apply the vehicle's brakes using the brake pedal.

### Operating noise

Noises may occur when braking depending on the speed, braking force, and outside conditions such as temperature and humidity.


### Braking effect

To ensure an optimal braking effect, the brake pads will be applied to the brake rotors for a short period of time when driving at high speeds while the windshield wipers are turned on.

If the brake system becomes damp, for example after driving in heavy rain, the braking effect may be delayed. Other factors that could temporarily increase the response time of the brakes include:

- Wet conditions
- Low temperatures, ice, and snow
- Roads covered in salt
- Dirty brake pads

### Corrosion

Corrosion may form on the brake rotors if there is no heavy braking, if the vehicle is not driven for long periods of time, or if the vehicle is not driven frequently or for long distances. In this case, braking heavily several times while driving at high speeds can clean the brake rotors ⇒ .

### Brake pads

New brake pads do not achieve their full braking effect during the first 250 miles (400 km). They must be “broken in” first. However, you can compensate for the slightly reduced braking force by pressing firmly on the brake pedal. Avoid heavy braking during the break-in period. ▶

Brake pad wear depends largely on the way the vehicle is driven and on operating conditions. Brake pad wear increases when driving frequently in the city or short distances or when using a very sporty driving style.

### Ceramic brakes

Applies to: vehicles with ceramic brakes

Ceramic brakes provide excellent deceleration rates.

The break-in period for new ceramic brakes may be significantly longer than for standard brake rotors. The properties of the material may also cause noise, especially when driving at lower speeds. Ceramic brakes also absorb more moisture in wet conditions. Therefore, there will temporarily be less braking force than when the brakes are dry. You can compensate for this by pressing the brake pedal harder.

#### WARNING

- Only apply the brakes for the purpose of cleaning the brake system when road and traffic conditions permit. You must not endanger other road users because this increases the risk of an accident.
- Due to the risk of injury, only have an authorized Audi dealer or authorized Audi Service Facility work on the brake system. Incorrect repairs could impair the function.
- Never let the vehicle roll while the engine is stopped because this increases the risk of an accident.
- During automatic braking maneuvers, the brake pedal may move downward automatically. To reduce the risk of injury, do not place your foot under the brake pedal.

#### Note

- Never let the brakes “rub” by pressing the pedal lightly when braking is not actually necessary. This can cause the brakes to overheat and increase braking distance and causes wear.
- Observe the important information for driving downhill ⇒ *page 104*. This especially applies when towing a trailer.



#### Tips


- In vehicles with an electromechanical brake booster, the resistance in the brake pedal may vary depending on the driving situation (such as if driver assistance system are active).
- If you retrofit your vehicle with a front spoiler, wheel covers or similar items, make sure that the air flow to the brakes is not obstructed. Otherwise the brake system can overheat.
- Also refer to the information about brake fluid ⇒ *page 228*.

## Messages

The following messages may appear, depending on the vehicle equipment:

**BRAKE /  Brakes: malfunction! Safely stop vehicle**

There is a malfunction in the brake system. If **ABS** /  and  also turn on, there is a malfunction in the ABS, ESC, and braking distribution. If the brake booster is not working, you have to use much more force when braking the vehicle.

Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance. Read and follow the other safety precautions ⇒ .

**BRAKE /  Warning! No brake booster function**

If the brake booster is not working, you have to use much more force when braking the vehicle. See an authorized Audi dealer or authorized Audi Service Facility for assistance.


**Brake booster: limited functionality. You can continue driving**


The brake booster has limited availability or is not available.

- If the message appears while the vehicle is stationary with the ignition turned off, there is **no** malfunction. The brake booster will be fully functional when the ignition is turned on. Before exiting your vehicle, secure it from rolling ⇒ *page 93*.

– If the message appears while the vehicle is stationary with the ignition turned on, there is a malfunction. Secure the vehicle against rolling ⇒ *page 93*. Remove your foot from the brake pedal. Turn the ignition off and back on. If the message still appears or it appears while driving, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected. The brake booster is available, but its effectiveness is reduced. The braking performance may be different compared to the usual performance.

### Other indicator lights

When you turn on the ignition, the **BRAKE** /  indicator light turns on briefly to check the function. If the indicator light does not turn on, there is a system malfunction.

If **BRAKE** /  stays on, there is a malfunction in the brake system.



 
#### WARNING

If a malfunction occurs in the ABS, ESC, and braking distribution, interventions that stabilize the vehicle will no longer be available. This could cause the vehicle to swerve, which increases the risk that the vehicle will slide. Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

## Electromechanical parking brake


 
### Operating the parking brake

The electromechanical parking brake is used to secure the vehicle from rolling unintentionally.

The  switch is located below the transmission selector in the center console. It turns on when the parking brake is set. You can release the parking brake manually or automatically when you start to drive.

### Setting and releasing the parking brake

- ▶ Setting: pull the  switch.

- ▶ If **PARK** /  appears, the parking brake is holding the vehicle. You can remove your foot from the brake pedal.
- ▶ Releasing: when the ignition is turned on, press and hold the brake pedal and press the  button.

If the red indicator light flashes, the braking force has not built up enough or it has decreased. You can also secure the vehicle by selecting the “P” position or pressing the brake pedal. Make sure the indicator light is off before you start driving.

### Automatically releasing the parking brake when starting to drive

Requirement: the driver's door must be closed and the driver safety belt must be fastened.

- ▶ Press the accelerator pedal to start to drive.

 


#### WARNING

- To reduce the risk of an accident, always make sure the vehicle is situated safely while stationary.
- If the parking brake is set, it can release automatically when the accelerator pedal is pressed. To reduce the risk of an accident, do not inadvertently press the accelerator pedal and always shift into the “P” position when the vehicle is stopped.
- If the power supply fails, you cannot set the parking brake once it is released, or release it if it is set. Secure the vehicle against rolling before exiting the vehicle ⇒ *page 93*. See an authorized Audi dealer or authorized Audi Service Facility for assistance.




#### Tips

- On steep inclines, especially when in trailer mode, the vehicle may roll backwards unintentionally when starting to drive. To reduce the risk of this happening, pull and hold the  switch while pressing the accelerator pedal. If enough drive power has built up at the wheels and the vehicle does not roll backwards, then release the switch to start to drive.

- If you leave the vehicle when the “D” or “R” position is engaged, the parking brake will be set automatically.
- Noises when the parking brake is set and released are normal and are not a cause for concern.
- The parking brake goes through a self-test cycle at regular intervals when the vehicle is stopped. Any noises associated with this are normal.

### Emergency braking function

Emergency braking should only be used in an emergency, if the standard brake pedal is malfunctioning or obstructed. When the emergency braking function is activated, the braking effect is similar to a heavy braking maneuver.

- ▶ Pull and hold the  switch while driving.
- ▶ An audio warning signal will sound and emergency braking will begin.
- ▶ If you press the accelerator pedal, emergency braking will be canceled.





### WARNING

Heavy braking while driving through curves or in poor road or weather conditions can cause the vehicle to slide or the rear of the vehicle to swerve, which increases the risk of an accident.

### Messages

The following messages may appear, depending on the vehicle equipment:

**BRAKE** /  **Parking brake: malfunction! Safely stop vehicle. See owner's manual**

**BRAKE** /  **Parking brake: malfunction! Please release parking brake**

If one of these messages appears, there is a malfunction in the parking brake. If the message appears while stationary, check if the parking brake is released and can be reset. If this is the case, turn the ignition off and back on.


If the message stays on, if the parking brake cannot be released, or if the message appears while

driving, do not continue driving. Secure the vehicle against rolling before exiting the vehicle ⇨ *page 93*. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

 **Parking brake: malfunction! Please contact Service**

There is a malfunction in the parking brake. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. Do not park the vehicle on inclines and secure it against rolling before exiting the vehicle ⇨ *page 93*.



/  **Parking brake: warning! Vehicle position too steep**

The braking force may not be enough to secure the vehicle from rolling away. Park the vehicle in a place with less of an incline.



/  **Parking brake: applied**

The parking brake is set. Press and hold the brake pedal to release the parking brake.

## Special driving situations

### Driving uphill and downhill

When driving uphill, downhill, or at high altitudes, note the following information:

- Drive slowly and carefully.
- Do not try to turn around if you cannot safely drive on an incline or hill. Instead, drive in reverse.
- When driving down hills, you can activate the hill descent control if you press the brake pedal while driving in the “D” position. The automatic transmission will select a gear suitable for driving down the hill and will attempt to maintain the speed at which the vehicle was traveling at the time the brake pedal was pressed. Press the brake pedal if necessary. The hill descent control will turn off once the hill levels out or you press the accelerator pedal.
- Utilize the engine braking effect when driving downhill by selecting the “S” driving program ⇨ *page 95*. This especially applies when towing a trailer. This reduces the load on the brakes. ▶

- Apply the brakes in intervals and do not press the brake pedal continuously.
- Use the hill descent assist if necessary  
⇒ *page 105*.

**WARNING**

- Only drive on inclines that your vehicle is designed to handle. Do not exceed the hill climbing ability of your vehicle. Your vehicle could tip or slide.
- Do not drive at an angle on steep inclines and hills. If your vehicle is about to tip, you must immediately start steering in the direction of the downward slope to reduce the risk of an accident.
- Always be ready to brake when using the hill descent control function.

**Offroad driving**

Your vehicle is not an offroad vehicle. Note the following points when driving offroad:

- Drive slowly and carefully.
- To reduce the risk of underbody damage, pay attention to the vehicle's ground clearance and drive across raised areas of the ground using the wheels on only one side of the vehicle, instead of allowing the center of the vehicle to pass over the raised areas.
- To reduce the risk of becoming stuck, drive through sandy or swampy areas at a steady speed and without stopping, if possible.

If necessary, use the following functions:

- Audi drive select\* **offroad** mode ⇒ *page 107*
- Hill descent assist\* ⇒ *page 105*
- Limit ESC ⇒ *page 110*

**WARNING**

Only drive in terrain that is suitable for the vehicle and your driving ability.

**For the sake of the environment**

Avoid actions that are damaging to the environment. Show respect for the natural environment and remain on marked routes.

**Tips**

Clean your vehicle after driving offroad. Dirt and stones falling off your vehicle can affect other road users.

**Driving through water**

If you must drive through water, follow these instructions:

- Check the stability of the ground, the current, and the water depth. If the ground is unstable, there is a strong current, or there are waves, the water must only reach **up to the lower edge of the body at the most**.
- Deactivate the Start/Stop system\*.
- Drive carefully and no faster than at a walking pace to prevent the front of the vehicle from creating waves, because they could splash above the lower edge of the body. Oncoming vehicles could also create waves.
- Do not stop the vehicle while in the water.
- Do not drive in reverse.
- Do not turn the engine off.

**WARNING**

After driving through water, press the brake pedal carefully to dry the brakes so that the full braking effect will be restored.

**Note**


Vehicle components such as the engine, drive system, suspension, or electrical system can be severely damaged by driving through water.

**Tips**



If possible, avoid driving through salt water because it increases the risk of corrosion. Use fresh water to clean any vehicle components that come into contact with salt water.

**Hill descent assist**


Applies to: vehicles with hill descent assist

The  button is located in the center console in front of the transmission selector. It lights up when the system is turned on.


Hill descent assist can assist you when driving down hills by maintaining a constant vehicle speed by automatically braking all four wheels. You can adjust the speed using the accelerator and brake pedals. The regulation depends on the hill and the vehicle speed.

- ▶ Turning on: press .
- ▶ Turning off: press  again.

### Active regulation

Regulation begins shortly after you start driving and is possible at speeds up to approximately 19 mph (30 km/h) and on hills that have an approximately 10-60% grade. If these conditions are met, regulation will be activated and the  indicator light will turn on.

### Ready mode

If one of the requirements for active regulation is not met, the system will be in ready mode. The  indicator light will turn on. Once the requirements are met again, the system will be able to provide active regulation again.

Applies to: vehicles without Audi drive select: If you exceed approximately 37 mph (60 km/h), the system will turn off automatically.



#### WARNING

- Be ready to apply the brakes at all times when using the hill descent assist.
- Always adjust the speed to the visibility, weather, road, and traffic conditions. The system cannot replace the driver's attention.
- The system cannot maintain a constant vehicle speed in all situations, for example when on smooth or slippery ground. This can increase the risk of an accident.



#### Tips

If you select the Audi drive select\* **offroad** mode, hill descent assist will turn on.



## Driving dynamics

### Audi drive select


#### Introduction


Applies to: vehicles with Audi drive select

Drive select makes it possible to experience different types of vehicle characteristics in one vehicle. With different driving modes, the driver can change the setting, for example from sporty to comfortable. This allows you to adjust the settings to your personal preferences. This makes it possible to combine settings such as a sporty drivetrain setting with comfortable steering.

#### Selecting an Audi drive select mode

Applies to: vehicles with Audi drive select

The  button is located in front of the transmission selector in the center console.

- Press the  button repeatedly until the desired mode appears in the instrument cluster or center display. Or:
- Applies to MMI: Select on the home screen: **VEHICLE > Audi drive select**.

You can change the driving mode when the vehicle is stationary or while driving. If traffic permits, briefly remove your foot from the accelerator pedal after changing modes so that the mode you have selected will be activated for the drive system.


The following modes may be available depending on vehicle equipment:

**offroad** – Provides assistance when driving off-road. The ESC will be restricted and the hill descent assist\* will be activated. The vehicle will exit this mode after the ignition is turned off.

**comfort** – Provides a comfort-oriented vehicle setup and is suited for long drives on highways.

**auto** – Provides an overall comfortable yet dynamic driving feel.

**dynamic** – Provides a sporty driving feel and is suited to a sporty driving style. The “S” driving program is selected on vehicles with an automatic transmission

**Individual** – Provides the option for personalized vehicle settings. Press  to configure the mode  
⇒ *page 107, Individual settings*.

#### Tips

- When the ignition is turned on, individual systems, such as the drive system, will be reset to a balanced setting. Select the current mode again to attain its full configuration.
- Audi recommends the **auto** mode for everyday driving.

#### Individual settings

Applies to: vehicles with Audi drive select

The equipment in your vehicle will determine which settings you can adjust.

#### Drive

The drive system will respond to accelerator pedal movement more quickly or in a more balanced manner. The shift points are located in higher or lower engine speed ranges on vehicles with automatic transmissions.

Depending on the equipment, certain driver assistance systems can also become more sporty or efficient.

Depending on the setting, the drive power will be distributed via the All Wheel Drive to be more sporty or moderate.

#### Steering

The power steering will adapt. Light steering is suitable for long trips on highways or smooth driving around curves, for example.

#### Suspension

The suspension adjusts to be tighter or more comfort-oriented when it comes to compensating for uneven spots on the road.

#### Engine sound

The engine sound adapts and can be subtle to sporty. In the automatic setting, the engine sound depends on the selected driving program.

## Suspension

### Adaptive dampers

Applies to: vehicles with suspension control

The adaptive dampers are an electronically-controlled damping system. The firmness of the suspension will adapt to the driving conditions and the driving situation. The settings depend on the selected Audi drive select\* mode.

### Ground clearance

The vehicle height and clearance can be influenced by the following factors:

- Change in temperature
- Change in load



### WARNING

To reduce the risk of injury, make sure no one gets pinched when the vehicle level is changing, for example when cleaning the underbody or the wheel housings.



### Note

Always make sure there is enough clearance above and below the vehicle. This is especially important for entrances with height restrictions, for example, before driving into underground garages. You could also scrape the ground when driving over the edges of curbs or on steep ramps, which could damage your vehicle.

### Messages

The following messages may appear, depending on the vehicle equipment:



### Suspension: malfunction! You can continue driving

There is a malfunction. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

## Steering

### Description

Electromechanical steering supports steering movements by electronically adapting the power steering depending on the vehicle speed. The settings depend on the selected Audi drive select\* mode.

### Progressive steering

Applies to: vehicles with progressive steering

The driving dynamic and driving stability are increased by the steering ratio based on the steering wheel angle. The steering is very direct when the steering wheel angle is sharp, and indirect when the angle is low. This enables comfortable maneuvering and a precise steering response at higher driving speeds.

### Messages

The following messages may appear, depending on the vehicle equipment:



### Steering: malfunction! Please stop vehicle

The power steering may have failed. Adapt your driving style immediately to compensate for the fact that it may be more difficult to turn the steering wheel, and stop your vehicle in a safe location as soon as possible. Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.



### Steering: malfunction! Please stop vehicle

There is a malfunction in the electronic steering lock. You cannot turn on the ignition. Secure the vehicle against rolling before exiting the vehicle ⇨ *page 93*. Do not tow your vehicle because it cannot be steered. See an authorized Audi dealer or authorized Audi Service Facility for assistance.



### Steering: malfunction! You can continue driving

There is a malfunction in the steering system. Steering may be more difficult or more sensitive. Adapt your driving style. Have the steering system checked immediately by an authorized Audi dealer or authorized Audi Service Facility. Please ►

note that the red indicator light may turn on after restarting the engine. Do not continue driving if it does.



### **Steering lock: malfunction! Please contact Service**

There is a malfunction in the electronic steering lock. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

### **WARNING**

Do not tow your vehicle if there is a malfunction in the electronic steering lock because this increases the risk of an accident.

### **Tips**


If the  or  indicator light only stays on for a short time, you may continue driving.

## All wheel drive (quattro)

### Description

Applies to: vehicles with all wheel drive

The all-wheel drive system distributes the driving power variably to the front and rear axle to improve the driving characteristics. It works together with selective wheel torque control, which can activate when driving through curves  
⇒ [page 110](#).

The all-wheel drive system is designed for high engine power. Your vehicle is exceptionally powerful and has excellent driving characteristics both under normal driving conditions and on snow and ice. Always read and follow safety precautions ⇒ .

### **WARNING**


- Even in vehicles with all wheel drive, you should adapt your driving style to the current road and traffic conditions to reduce the risk of an accident.
- The braking ability of your vehicle is limited by the grip of the tires. In this way, it is not different from a two wheel drive vehicle. Do not drive too fast because this increases the risk of an accident.


– Note that on wet streets, the front wheels can “hydroplane” if driving at speeds that are too high. Unlike front wheel drive vehicles, the engine RPM does not increase suddenly when the vehicle begins hydroplaning. Adapt your speed to the road conditions to reduce the risk of an accident.


## Electronic Stabilization Control (ESC)

### Description

Electronic Stabilization Control (ESC) supports driver safety. It reduces the risk of slipping and improves driving stability. ESC detects critical situations, such as if the vehicle is oversteering or understeering, or if the wheels are spinning. The brakes are applied or the engine torque is reduced in order to stabilize the vehicle.

If the  indicator light blinks while driving, the ESC is actively regulating.

If the  indicator light turns on, the system has turned off the ESC. In this case, you can turn the ignition off and then on to turn the ESC on again. The indicator light turns off when the system is fully functional.

If the  indicator light turns on, ESC was limited or turned off manually ⇒ [page 110](#).

The following systems are integrated in the ESC:

### Anti-Lock Braking System (ABS)

ABS prevents the wheels from locking when braking. The vehicle can still be steered even during hard braking. Apply steady pressure to the brake pedal. Do not pump the pedal. A pulsing in the brake pedal indicates that the system is acting to stabilize the vehicle.

### Brake assist

The brake assist system can decrease braking distance. It increases braking power when the driver presses the brake pedal quickly in emergency situations. You must press and hold the brake pedal until the dangerous situation is over. Depending on the activated driver assistance systems, the

brake assist system may respond with increased sensitivity.

### Anti-Slip Regulation (ASR)

ASR reduces drive power when the wheels begin spinning and adapts the power to the road conditions. This will increase the driving stability.

### Electronic Differential Lock (EDL)

The EDL applies the brakes to wheels that are slipping and transfers the drive power to the other wheels. This function is not available at higher speeds.

In extreme cases, EDL automatically turns off to keep the brake on the braked wheel from overheating. The vehicle is still functioning correctly. EDL will turn on again automatically when conditions have returned to normal.

### Power steering

The ESC can also support vehicle stability through steering.

### Selective wheel torque control

Selective wheel torque control is used when driving on curves. Braking is targeted toward the wheels on the inside of the curve as needed. This allows more precise driving in curves.

### Automatic post-collision braking system

The automatic post-collision braking system can help to reduce the risk of sliding and of additional collisions after an accident. If the airbag control module detects a collision, the vehicle is braked by the ESC.

The vehicle does not brake automatically if one of the following occurs:

- You are pressing the accelerator pedal.
- The braking force generated by the pressed brake pedal is greater than the braking force that would be initiated by the system.
- The ESC, the brake system, or the vehicle electrical system is not functioning.



ral physical laws. This is especially important on slippery or wet roads. If the systems begin acting to stabilize your vehicle, you should immediately alter your speed to match the road and traffic conditions. Do not let the increased safety provided cause you to take risks. This could increase your risk of a collision.

- Please note the risk of a collision increases when driving fast, especially through curves and on slippery or wet roads, and when driving too close to objects ahead. There is still a risk of accidents because the ESC and its integrated systems cannot always prevent collisions.
- Accelerate carefully when driving on smooth, slippery surfaces such as ice and snow. The drive wheels can spin even when these control systems are installed and this can affect driving stability and increase the risk of a collision.

### Tips

- The ABS and ASR only function correctly when all four wheels have a similar wear condition. Different tire sizes can result in a reduction in engine power.
- You may hear noises when the systems described are working.



## Operation

The  OFF button (or  OFF, depending on the model) for controlling the ESC is located in front of the transmission selector in the center console.

ESC turns on automatically when the ignition is turned on. It may make sense in some situations to limit the ESC so that the wheels can spin:

- Rocking the vehicle to free it when it is stuck
- Driving in deep snow, on unpaved ground, or with snow chains
- Driving downhill while braking on loose ground
- Driving with axle articulation

### Limiting ESC (Offroad mode)



- To limit the ESD, press the  OFF button briefly. The  indicator light will turn on. ▶

### WARNING

- The ESC and its integrated systems cannot overcome the limitations imposed by natu-

- To completely reactivate the ESC stabilization function, press the button again. The indicator light turns off.

### Turning off ESC

- To turn off the ESC, press and hold the  button for more than three seconds. The  and **ESC OFF** indicator lights turn on.
- To completely reactivate the ESC stabilization function, press the button again. The indicator lights turn off.



#### WARNING

- When the ESC is turned off or limited, there will be no vehicle stabilization or it will be limited. The driving wheels could spin and the vehicle could swerve, especially on slick or slippery road surfaces, which increases the risk of an accident.
- Because of the increased risk of an accident, only drive with the ESC turned off or limited when it is necessary. Reactivate the ESC as soon as possible.



#### Tips

- If you select the Audi drive select\* **offroad** mode, hill descent assist will turn on.
- If the ESC is limited, turned off, or malfunctioning, systems with an automatic braking intervention function may not be fully available.
- If malfunctions occur in other systems or certain driver assistance systems are active, the ESC must be turned on by the system. The ESC may turn on automatically and cannot be operated with the button.

### Messages

The following messages may appear, depending on the vehicle equipment:



**ABS**



**/**



**Stabilization control (ESC)**

**ABS): malfunction! See owner's manual**

There is a malfunction in the ABS or EDL. This also causes the ESC to malfunction. The brakes still function with their normal power, but ABS is not active.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

# Trailer towing

## Driving with a trailer

### General information

Your vehicle is primarily intended for transporting people and luggage. However, if you drive with a trailer, follow the technical requirements, the operation and driving tips, and the legal regulations.

Driving with a trailer affects the vehicle's energy usage, performance, and wear. It also requires greater concentration.

A retrofitted trailer hitch must be installed according to the instructions provided by the manufacturer ⇒ *page 115*.

### WARNING

- To reduce the risk of death, do not transport any people in a trailer.
- Only use a ball hitch that is approved for your vehicle. Using a ball hitch that is not approved for your vehicle can result in issues such as unstable driving behavior or uncoupling of the trailer and increase the risk of an accident. If you have questions, see an authorized Audi dealer or authorized Audi Service Facility.

### Operating instructions

#### Towing capacity

Never exceed the maximum permitted weights ⇒ *page 282*.

In some cases, the load when towing a trailer may be reduced due to the gross combined weight rating.

You can drive up larger inclines if you are not using the maximum towing capacity.

The specified towing weights only apply at elevations up to 3,200 feet (1,000 m) above sea level. As the elevation increases, the engine power decreases due to the decreasing air pressure. This reduces the hill climbing ability and towing capacity. For every additional 3,200 feet (1,000 m), the maximum gross combined weight rating

must be reduced by approximately 10%. The actual combined weight is the combined weight of the (loaded) vehicle and the (loaded) trailer.

#### Tongue weight

The maximum permitted tongue weight of the trailer drawbar on the trailer hitch ball head must not be exceeded.

For driving safety, Audi recommends always using the maximum permitted tongue weight, but do not exceed this weight. Having the tongue weight too low affects the handling of the vehicle and trailer.

You can determine the tongue weight using a tongue weight scale, a bathroom scale, or a public weigh station, for example. Audi recommends checking the tongue weight, especially when towing tandem trailers. If the tongue weight differs, it can be adjusted by distributing the load in the trailer correctly. If the tongue weight meets the specifications, then the load on the trailer should not be changed anymore.

#### Load distribution

Poor cargo load and distribution can negatively impact vehicle handling. Load the vehicle and trailer based on the following criteria as much as possible:

- Store objects in the vehicle luggage compartment, if possible. The vehicle should always carry the heaviest possible load and the trailer should have the lightest possible load.
- Distribute the load in the trailer so that the heavy objects are as close to the axle as possible.
- Secure objects so that they do not slide.
- Utilize the maximum permitted tongue weight if possible.

#### Speed


Adhere to the legal speed limits. Follow the legal regulations that are applicable in the country where you are operating the vehicle.

As the speed increases, the driving stability of the vehicle and trailer decreases. Therefore you should not exceed the maximum legal speed limit when there are unfavorable road, weather, ►

and/or wind conditions. This especially applies when driving downhill.

## Hills

When you start driving uphill or downhill, the vehicle and trailer may tilt or sway sooner than when driving on a level surface. Reduce the speed even for only minor swaying movements. Never attempt to “straighten out” the vehicle and trailer by accelerating.


Downshift before driving on hills to utilize the engine braking effect ⇒ .

## Exterior lighting

Follow the legal regulations for lighting on your trailer that are applicable in the country where you are operating the vehicle. If necessary, contact an authorized Audi dealer or authorized Audi Service Facility for more information.

Before you start driving, check all lighting equipment on the trailer while it is hitched to the vehicle.

The headlight range control automatically adjusts the light range of the headlights.

When the  indicator light blinks, then the turn signals are activated in trailer mode. If a turn signal on the trailer or on the vehicle fails while in trailer mode, the indicator light will **not** blink twice as fast to indicate this.

## Exterior mirrors

Make sure that you can also observe the traffic area behind the vehicle using the exterior mirrors, and use additional exterior mirrors if necessary. Adjust the additional exterior mirrors so that you have a sufficient visibility behind the vehicle. Follow the local legal regulations for installing additional exterior mirrors.

## Engine cooling system

Driving with a trailer means a higher load on the engine and the cooling system. Make sure the cooling system contains enough coolant.

## Engine coolant temperature

Pay attention specifically to the coolant temperature display when there are high outside temper-

atures, and when driving on long inclines ⇒ *page 16*. Shift to a higher gear in a timely manner.

## Tires

Set the tire pressure on your vehicle for a “full load”; see the tire pressure sticker ⇒ *page 245*. If necessary, also adjust the tire pressure on the trailer according to the manufacturer's specifications.

The trailer and the vehicle should be equipped with winter tires when driving in winter temperatures.

## Overrun brake

If your trailer is equipped with an overrun brake, it must be correctly adjusted and function correctly. When using a trailer with an overrun brake, first brake gently then quickly. This reduces the risk of jerking while braking if the trailer wheels lock up.



### WARNING

Constant braking causes the brakes to overheat and can substantially reduce braking performance, increase braking distance, or cause complete failure of the brake system.



### Note

Attachments retrofitted on the vehicle may cause damage, especially on the trailer hitch ball head. In cases of damage, have the function checked by an authorized Audi dealer or authorized Audi Service Facility.



### Tips

- Block the wheels with chocks when parking on inclines if the trailer is loaded.
- Audi recommends having the vehicle inspected between the inspection intervals if you tow a trailer frequently.
- Avoid driving with a trailer during the vehicle break-in period.

## Trailer hitch

### Introduction

Only use a trailer hitch with a removable ball hitch mount and ball hitch. The trailer hitch must be permitted for the vehicle, the trailer, and the permitted total weight of the trailer being pulled. Above all, it must be securely and safely attached to the vehicle trailer.

Never mount a trailer hitch on the bumper. The trailer hitch must be mounted in a way that does not impair the function of the bumper. Do not make any changes to the exhaust system and the brake system.

Check regularly if the trailer hitch is securely mounted. Always follow the instructions given by the trailer hitch manufacturer.

### WARNING

Never mount a "weight-distributing" or "load-balancing" trailer coupler as the trailer hitch. The vehicle was not designed for these types of trailer hitches. The trailer hitch can malfunction and the trailer can separate from the vehicle, which increases the risk of an accident.

### Using the trailer hitch

Applies to: vehicles with trailer hitch

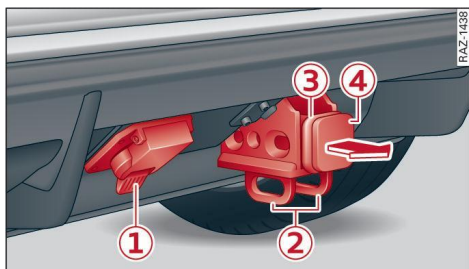


Fig. 88 Rear bumper: trailer hitch

The trailer hitch of your vehicle consists of the receiver (3), the trailer socket<sup>1)</sup> (1) or retainer for the trailer socket, two eyelets (2) for the safety chains, and the receiver cover (4).

The receiver (3) is suitable for securing a removable ball hitch mount with a ball head, for example when towing a trailer → ⚠.

- ▶ In order to use the trailer hitch, pull the cover (4) out of the receiver (3) in the direction of the arrow.
- ▶ Check the receiver (3) for dirt and clean it if necessary.
- ▶ When towing a trailer, use the trailer socket<sup>1)</sup> (1) and secure the safety chains using the eyelets (2).
- ▶ To prevent dirt from entering the receiver (3), close it with the cover (4) after using it.

### WARNING

- For your own safety, read the installation instructions provided by the ball hitch mount manufacturer.
- There is a risk of an accident if the ball hitch mount is installed incorrectly. The ball hitch mount must be secured in the receiver (3) correctly. The same applies to accessories that are secured in the receiver.
- Only use a ball hitch mount with ball head suitable for your vehicle and your trailer.
- To reduce the risk of injury, always remove the ball hitch mount if no trailer is mounted.
- To reduce the risk of an accident, contaminants on the trailer hitch must be removed because otherwise the ball hitch mount might not be secured correctly in the receiver.

### Tips

- No ball hitch mount or ball head is provided with the trailer hitch. You can purchase these at specialty stores.
- The eyelets on the trailer hitch are only intended for securing the trailer safety chains.

<sup>1)</sup> In certain countries.



## Driving with a trailer

### Trailer brakes

If the trailer has its own brake system, then follow the manufacturer specifications. However, the brake system on the trailer must never be connected to the vehicle brake system.

### Safety chains

Make sure the safety chains are correctly applied when pulling a trailer. The chains should hang down enough so that the trailer can drive around curves. However, they must not touch the ground.



#### WARNING

If the trailer is equipped with electronic brakes, these brakes cannot be activated by a factory-installed control system, which increases the risk of an accident.

## Retrofit installation

You can find out if your vehicle is equipped with a retrofitted trailer hitch at an authorized Audi dealer or authorized Audi Service Facility.

An authorized Audi dealer or authorized Audi Service Facility knows the specifications for retrofitting a trailer hitch and any necessary technical requirements.



#### WARNING

- Only have the additional trailer hitch installed by an authorized Audi dealer or authorized Audi Service Facility.
- There is a risk of an accident if the trailer hitch is installed incorrectly.
- For your own safety, read the assembly instructions provided by the trailer hitch manufacturer.



#### Note


- Connecting the socket incorrectly could cause damage to the vehicle electrical system.
- Longer inclines cannot be driven without a suitable cooling system, especially if the

outside temperatures are high. Otherwise, this increases the risk of engine damage.

## Assist systems

### General information

#### Safety precautions

Observe the safety information for the assist systems, sensors, and cameras ⇨ .


#### WARNING

- The driver has complete responsibility for vehicle operation at all times. The assist systems cannot replace the driver's attention. Give your full attention to driving the vehicle, and be ready to intervene in the traffic situation at all times.
- Activate the assist systems only if the surrounding conditions permit it. Always adapt your driving style to the current visual, weather, road, and traffic conditions.
- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Store objects securely while driving.
- For the assist systems to be able to respond correctly, the function of the sensors and cameras must not be restricted. Note the information on sensors and cameras ⇨ *page 117*.

#### Tips

- Pay attention to applicable local regulations relating to driving tasks, leaving space for emergency vehicles, vehicle distance, speed, parking location, wheel placement, etc. The driver is always responsible for following the laws that are applicable in the location where the vehicle is being operated.
- You can cancel a steering or braking intervention by the system by braking or accelerating noticeably, steering, or deactivating the respective assist system.
- Always check the assist systems settings before driving. The settings may have been changed, for example by turning off the ignition or by other persons.

#### System limitations

Observe the limitations of the assist systems, sensors, and cameras ⇨ .

#### WARNING

- The use of an assist system cannot overcome the natural laws of physics. A collision cannot be prevented in certain circumstances.
- Warnings, messages, or indicator lights may not be displayed or initiated on time or correctly, for example, if vehicles are approaching very fast.
- Corrective interventions by the assist systems, such as steering or braking interventions, may not be sufficient or they may not occur. Always be ready to intervene.

#### Tips

- Due to the system limitations when detecting the surrounding area, the systems may warn or intervene unexpectedly or too late in certain situations. The assist systems may also interpret a driving maneuver incorrectly and then warn or intervene unexpectedly.
- The systems may not function as expected in unusual driving situations, such as driving offroad, on unpaved roads, on loose ground, on inclines, or on grooves in the road.
- The systems may not function correctly in unclear traffic situations, such as turn lanes, exit ramps, construction zones, rises or dips that obstruct visibility, intersections, traffic circles, toll booths, or city traffic.
- The detection of the surrounding area can be limited, for example by vehicles traveling ahead or by rain, snow, heavy spray, or light shining into the camera.
- In trailer mode, some assist systems may be limited, may not respond as usual, or may be unavailable. Please refer to the instructions for towing a trailer located in ⇨ *page 112*.
- The steering wheel touch recognition may be limited when you wear gloves. Steering intervention requests from the steering assist systems may occur more frequently.

– If accessories have been mounted on the steering wheel, the steering assist systems may be limited. The frequency of steering intervention requests from the steering assist systems may vary as well.

## Surrounding area detection

### Sensor and camera coverage areas

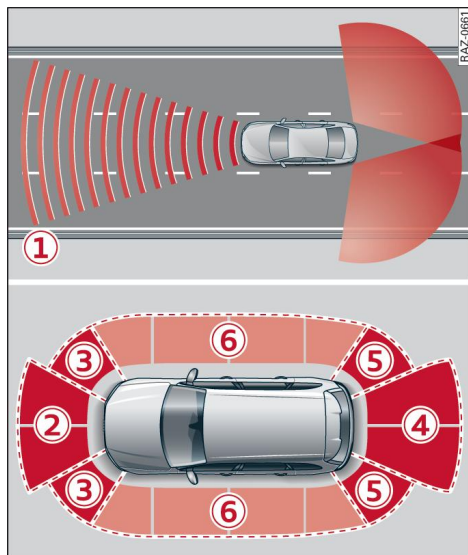


Fig. 89 Sensor coverage area

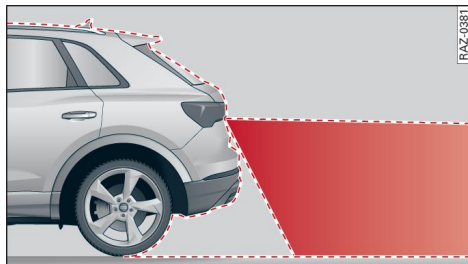


Fig. 90 Rearview camera coverage area

The assist systems analyze the data from various sensors and cameras installed in the vehicle. Do not use any assist systems if there is damage in the area of the sensors and cameras or on the vehicle underbody. Damage can impair the function of the sensors and cameras or cause malfunc-

tions. Have an authorized Audi dealer or authorized Audi Service Facility check their function.

### Radar sensors

Depending on the vehicle equipment, the area in front of and behind the vehicle may be detected ⇨ fig. 89 ①.

The wheel sensors on the rear corners of the vehicle are positioned so that the adjacent lanes to the left and right are detected on roads with a normal lane width.

### Ultrasonic sensors

Depending on vehicle equipment, various areas may be displayed in the MMI using the ultrasonic sensors ⇨ fig. 89.

The range of the displays depends on the location of the ultrasonic sensors:

- ② Approximately 4 feet (1.20 m)
- ③ Approximately 3 feet (0.90 m)
- ④ Approximately 5.2 feet (1.60 m)
- ⑤ Approximately 3 feet (0.90 m)
- ⑥ Approximately 3 feet (0.90 m)

The side area ⑥ is detected and evaluated when passing. There may have been changes to the surrounding area after turning off the ignition and on again, after opening the doors, or if the vehicle is left stationary for a period of time. In this case, the area will appear black until the area has been detected and evaluated.

### Cameras

Use the camera image in the display to assist you only if it shows a good, clear picture. Keep in mind that the image in the display is enlarged and distorted. Under certain circumstances, objects may appear different and unclear in the display.

The rearview camera can only detect the area marked in red ⇨ fig. 90. Only this area is displayed on the center display ⇨ A.



### WARNING

- Sensors and cameras have spots in which the surrounding area cannot be detected. Objects, animals, and people may only be

detected with limitations or may not be detected at all. Always monitor the traffic situation and the vehicle's surroundings directly and do not become distracted.

- Sensors may be subject to physical system limitations. External sources of interference, for example from other vehicles, can impair sensor functionality. The assist systems may be limited or may not function as expected.

### ! Note

- Obstacles may disappear from the measurement range when approaching them, even if they were already detected.
- In some situations, the ability of the sensors and cameras to detect and display certain objects may be limited:
  - Objects located above the coverage area, such as bumpers on parked cars, garage doors that are partially open, or objects that are hanging
  - Low obstacles
  - Narrow objects, such as barrier chains, foliage, poles, or fences
  - Projecting objects, such as trailer draw bars
  - Objects with certain surfaces and structures, such as fabric

### i Tips

- Exterior mirrors equipped with peripheral cameras must always be folded out fully to ensure correct functionality. Make sure the mirrors are folded out fully when driving.
- The sensors and cameras and the areas around them must not be obstructed or painted, because this can impair the function of the systems that depend on them. Make sure that the sensors and cameras are free of snow, ice, and other deposits. Attachments, stickers, adhesive, paint or similar objects must not be applied to sensors or extend into the visual field of the sensors and cameras.
- On vehicles that have factory-installed license plate brackets on the front of the ve-

hicle, the brackets may only be replaced with ones that are the same size and made of the same material. Do not install any license plate brackets on the front of vehicles that do not have factory-installed brackets. Otherwise, the function of the system could be impaired.

- The function of the sensors and cameras may be limited when light and visibility conditions are poor, for example when driving into a tunnel, when there is glare, or when there are reflective objects.
- External ultrasonic sensors, such as those in other vehicles, can interfere with the sensors.
- The coverage areas of the sensors ⇒ *fig. 89* and cameras ⇒ *fig. 90* are schematic representations and do not represent a true-to-scale image of the sensor ranges.
- The system complies with United States FCC regulations and ISSED regulations ⇒ *page 283*.

## Locations of the sensors and cameras

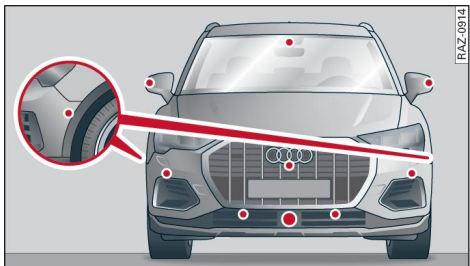


Fig. 91 Front area: sensors and cameras

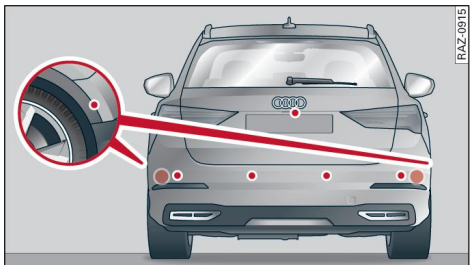


Fig. 92 Rear area: sensors and cameras

## Front area

Depending on the vehicle equipment, the following sensors and cameras may be installed:

- Camera behind the windshield
- Peripheral cameras on the exterior mirrors
- Front peripheral camera in the radiator grille
- Front and side ultrasonic sensors
- Front radar sensor in the center of the radiator grille

## Rear area

Depending on the vehicle equipment, the following sensors and cameras may be installed:

- Rearview camera in the luggage compartment lid
- Radar sensors at the rear corners of the vehicle
- Rear and side ultrasonic sensors

 
 
### Tips

- The locations of the sensors may differ slightly depending on vehicle equipment.
- Some sensors are installed under vehicle components and cannot be seen from the outside.
- The system complies with United States FCC regulations and ISCED regulations  
⇒ *page 283*.

## Driver assistance menu

In the **Driver assistance** menu, you can turn certain assist systems on or off, or adjust them to your preferences.

- Applies to MMI: Select on the home screen: **VEHICLE > Driver assistance**.

You can turn certain systems on/off by pressing  or adjust them to your preferences .

### WARNING


Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.


## Parking aid menu




Fig. 93 Center console: parking aid button

In the **Parking aid** menu, you can turn certain parking aids on or off or adjust them to your preferences.

- Applies to MMI: Select on the home screen: **VEHICLE > Parking aid**, or
- Press the ⇒ *fig. 93* button in the center console and press  in the center display when the parking system is active.

You can turn certain systems on/off by pressing  or adjust them to your preferences.

### Possible settings

The possible settings depend on the vehicle equipment. Some settings are only available via  and under certain conditions.

- **Automatic activation** ⇒ *page 144*
- **Front and rear volume** ⇒ *page 145*
- **Entertainment fader** ⇒ *page 145*.
- **Trailer view** ⇒ *page 148*
- **View** ⇒ *page 149*
- **Rear cross-traffic assist** ⇒ *page 150*

### WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.

## Driving information

### Speed warning

#### Description

Applies to: vehicles with speed warning system

The speed warning system helps to stay below a specified maximum speed. A warning threshold can be set in the MMI for this purpose.

Once the speed slightly exceeds the stored threshold, the speed warning system will provide an alert using an indicator in the instrument cluster and a warning tone. Once the speed drops below the stored maximum speed, the display will turn off.

Setting a threshold is recommended if you would like to be reminded when you reach a certain maximum speed. Situations where you may want to do so include driving in a country with a general speed limit or if there is a specified maximum speed for winter tires.

#### Tips

Regardless of the speed warning system, you should always monitor your speed using the speedometer and make sure you are following the legal speed limit.

#### Setting the warning threshold

Applies to: vehicles with speed warning system

You can adjust the warning threshold to your preferences in the **Driver assistance** menu ⇒ *page 119*. The settings depend on the vehicle equipment.



Possible settings:

**Speed warning** – adjust the speed for the warning threshold.

#### Messages

Applies to: vehicles with speed warning system

The following messages may appear, depending on the vehicle equipment:

  **Manually set (XY) speed limit warning threshold exceeded**

The stored speed was exceeded.

### Camera-based traffic sign recognition

#### Description

Applies to: vehicles with camera-based traffic sign recognition

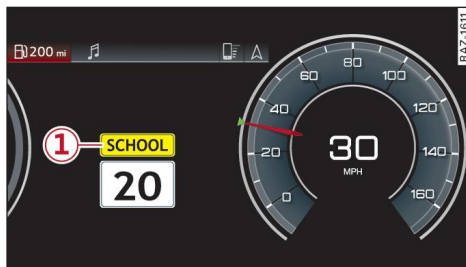



Fig. 94 Instrument cluster: traffic sign recognition

The traffic sign recognition shows the traffic signs detected by the front camera in the instrument cluster display. Data from the navigation system is also included in the display. By evaluating the data, applicable legal speed limits will also be displayed for roads that have no speed limit signs. Up to three traffic signs can be displayed at the same time. The speed limit that is currently applicable is displayed in the status bar. If necessary, it will be hidden if the system detects that turning right is prohibited at a red light.

Within the limitations of the system and depending on the market, additional symbols  that indicate speed limits in school zones, highways, construction zones, or at night may be displayed.

#### Limitations

The traffic sign recognition is subject to certain system limitations and may be unavailable or only partially available in the following situations:

- When visibility is poor, such as in snow, rain, fog, or heavy spray
- When there is glare, for example from oncoming traffic or the sun
- When driving at high speeds
- If the camera's visual field ⇒ *page 117* is covered, for example by dirt or stickers. For information on cleaning, see ⇒ *page 254*.

- If the traffic signs are completely or partially covered, for example by trees, snow, dirt, or other vehicles
- If traffic signs do not conform to the standards
- If traffic signs are damaged or bent
- If traffic signs are displayed on sign holders with electronic signs
- If the traffic signs or the roadways have changed, and the navigation data is no longer up-to-date



### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- Under some circumstances, traffic sign recognition may not detect traffic signs correctly or detect them at all. As a result, the system may not display the correct speed limit or any speed limit.



### Tips

- Traffic sign recognition only informs and warns about speed limits. Depending on the vehicle equipment, additional driver assistance systems can adjust the vehicle speed.
- The display in the instrument cluster is based on the units of measurement used for speed in the country where the vehicle is being operated. As a result, the display **50** in the instrument cluster can mean either km/h or mph, depending on the country.

## Operation

Applies to: vehicles with camera-based traffic sign recognition

### Accessing traffic sign recognition

- Select in the instrument cluster: vehicle functions tab > **Traffic signs**.

### Setting a traffic sign based speed warning

You can adjust the speed warning threshold to your preferences in the **Driver assistance** menu ⇒ *page 119*. The settings depend on the vehicle equipment.

Possible settings:

### Traffic sign based speed warning

You can turn visual and audio speed warnings on or off. The setting that was last used will be used again after restarting the vehicle.


**Traffic sign-based warning threshold** – you can select a warning threshold. If you exceed this, then the current detected speed limit will be shown in the display with an exclamation point for the duration that it is exceeded and it will blink for a short time. Additionally, a warning tone will sound for a short time. The setting will be saved when restarting.

**Warning tone when exceeding the speed limit** – you can turn the audio warning tone for exceeding the speed limit on or off. The setting that was last used will be used again after restarting the vehicle.

**Speed limit change notification tone** – you can turn the audio notification tone for speed limit changes on or off. The setting that was last used will be used again after restarting the vehicle.

## Messages

Applies to: vehicles with camera-based traffic sign recognition

If  is displayed when there is a malfunction, the camera-based traffic sign recognition functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or the front camera may be obstructed. Clean the area in front of the front camera ⇒ *page 118* and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

The following messages may appear, depending on the vehicle equipment:



**Traffic sign recognition: currently limited.**  
See owner's manual

This message appears if navigation system data is not available, for example on newly-constructed roads. The speed limit display will be temporarily limited, which increases the risk of an incorrect display.

### No traffic sign information available

Depending on the area, there is no valid navigation data and no speed limits were detected. This may also appear if there is a recommended speed, but no speed limit (for example when driving on and off the expressway).

## Traffic light information

### Description

Applies to: vehicles with traffic light information

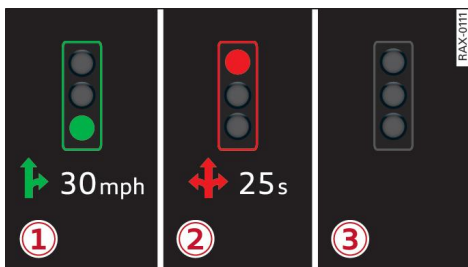


Fig. 95 Instrument cluster: traffic light information display

The traffic light information gives you a speed recommendation in order to reach the next traffic light when it is green ①, or it informs you of the wait time at the next red light ②. Once traffic light information is available, it will be displayed in the instrument cluster. If the vehicle is in an area with traffic light information but cannot receive a traffic light signal, then a gray traffic light symbol will be displayed ③.

### General information

Traffic light information is subject to system limitations and may be unavailable or only partially available in the following situations:

- If the permitted speed limit is exceeded
- If driving below a certain speed limit
- If the next traffic light is less than approximately 100 feet (30 m) away
- If the estimated wait time at a red light is less than four seconds

- If there is no traffic light data available
- If emergency response vehicles or public transit systems are active
- If traffic lights are in construction zones or being serviced
- If there are warnings from the camera-based traffic sign recognition\*
- If the camera-based traffic sign recognition\* is malfunctioning or not available
- If the data connection has been interrupted
- If data transmission is deactivated in the privacy settings
- If the subscription has expired

If this is the case, the menu item will be grayed out or it will not be possible to select it.



### WARNING

- When traffic light information is shown, also always pay attention to the traffic situation, the distance to other vehicles, and the area around the vehicle. The driver is always responsible for assessing the traffic situation.
- Always adapt your speed to the current weather, road and traffic conditions. The displayed information must never cause you to ignore legal traffic regulations and pose a safety risk.
- Regardless of the traffic light information, you should always monitor your speed using the speedometer and make sure you are adhering to the legal speed limit.
- The traffic light information does not adjust your vehicle's speed to the speed recommendation shown in the display.
- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ page 116 to ⇒ page 119.



### Tips

- Traffic light information was only available in select cities at the time this manual was published.
- Traffic light information is not available nationwide.
- The functions depend on the navigation data\* being up-to-date and correct



identification by the traffic sign recognition\*.

- Incorrect data from the camera-based traffic sign recognition\* or outdated navigation system\* map data may result in missing, implausible, or incorrect images in the display.
- Certain traffic lights can automatically adjust to the current traffic situation. If this occurs, the display of traffic light information can change suddenly.
- The traffic signs on the road always take priority over the display. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- Units of measurement and language settings are displayed based on how they were set in the MMI system settings ⇒ *page 211*.

shut down completely and then turn the ignition back on.

### Function currently unavailable. See owner's manual

There is a temporary system malfunction. Check if one or more of the following situations applies and correct the issue if necessary:

- Traffic light information is turned off
- Data transmission is deactivated
- The vehicle is not equipped with traffic sign recognition.
- There is no valid license
- Traffic light information is not available in that area

## Operation

Applies to: vehicles with traffic light information

### Turning traffic light information on or off

You can turn the traffic light information on or off in the **Driver assistance** menu ⇒ *page 119*.

### Accessing traffic light information

- Select in the instrument cluster: vehicle functions tab > **Traffic signs**.

## Tips

If another tab or another function is selected in the instrument cluster, the traffic light information will appear in the status bar on the instrument cluster.

## Messages

Applies to: vehicles with traffic light information

The following messages may appear, depending on the vehicle equipment:

### Malfunction! See owner's manual

The system could not be configured, for example due to a network malfunction. Turn off the ignition and shut down the vehicle to restart the system. Wait several minutes until the vehicle has

## Driver assistance

### Cruise control system

#### Description

Applies to: vehicles with cruise control system

The **cruise control system** assists you in maintaining a constant speed above approximately 15 mph (20 km/h). The system maintains the desired speed by braking and accelerating.

#### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- The cruise control system is only an assist system, and the driver is still responsible for operating the vehicle. The driver is especially responsible for braking, controlling the speed, and maintaining the distance to other vehicles.
- Turn off the cruise control temporarily when driving in turning lanes, highway exits, or in construction zones. This prevents the vehicle from accelerating to the stored speed when in these situations.

#### Note


Before driving downhill a long distance on a steep hill, decrease your speed and select a lower gear. This makes use of the engine braking effect and reduces the load placed on the brakes.

#### Display overview

Applies to: vehicles with cruise control system

Indicator lights and messages in the speedometer inform you about the driving situation and the settings. The displays depend on the country and equipment.

#### Indicator lights

**CRUISE** /  - the cruise control system is turned on and actively controls the set speed.

#### WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.

#### Turning on the system

Applies to: vehicles with cruise control system



Fig. 96 Lever: turning on the system

Requirement: the ignition must be turned on.

- To turn on the system, pull the lever toward you to position ②.

#### WARNING



- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- If the brakes are malfunctioning (for example, overheating) while the cruise control system is on, the regulating functions may shut off automatically.

#### Preselecting or activating a cruise control speed

Applies to: vehicles with cruise control system

When the vehicle is stationary, you can preselect the speed to be maintained, or you can select the speed while driving.

Requirement: the system must be turned on.

- To preselect a cruise control speed when the vehicle is stationary, tap the lever toward  /  ⇒ *page 124*, *fig. 96*.
- To activate the cruise control speed, pull the lever toward position ② while driving. ►

- ▶ To set the current driving speed as the cruise control speed, press the button **①** on the lever.

### Changing the cruise control speed

Applies to: vehicles with cruise control system

Requirement: the system must be turned on.

- ▶ To increase or decrease the cruise control speed in increments, tap the lever toward **⊕/⊖** ⇒ *page 124, fig. 96*.
- ▶ To increase or decrease the cruise control speed continuously, press and hold the lever toward **⊕/⊖**.

### Overriding or deactivating the cruise control speed

Applies to: vehicles with cruise control system

You can override or deactivate the cruise control system. When you deactivate the system, your cruise control speed will be stored and you can resume that speed.

Requirement: the system must be turned on and the set cruise control speed must be activated.

#### Overriding

- ▶ To temporarily override the set cruise control speed, press the accelerator pedal.
- ▶ To resume the stored regulated speed, remove your foot from the accelerator pedal.

If you override the cruise control system for a long period of time, the cruise control system will be deactivated.

#### Deactivating

- ▶ To deactivate the cruise control speed, press the lever toward **③** (not locked into place) ⇒ *page 124, fig. 96*, or
- ▶ Press the brake pedal.



#### WARNING

Resting your foot on the accelerator pedal could override the cruise control. Braking interventions and corrective actions by the system may not occur.

### Turning off the system

Applies to: vehicles with cruise control system


If you do not want to use the cruise control system for a longer period of time, you can turn it off.

- ▶ To turn off the system, press the lever toward **③** (locked into place) ⇒ *page 124, fig. 96*.

The indicator light will turn off and the set speed will be cleared.

### Messages

Applies to: vehicles with cruise control system

If **CRUISE** or  is displayed when there is a malfunction, the cruise control system functions may be unavailable or limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors ⇒ *page 118* and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

## Adaptive cruise assist

### General information

Applies to: vehicles with adaptive cruise assist

Depending on the vehicle equipment, the adaptive cruise assist may consist of the following functions:

Within the limitations of the system, the **adaptive cruise control** assists you while driving in controlling the speed and the set distance to the vehicle traveling ahead. If the system detects a vehicle traveling ahead, the adaptive cruise control can brake and accelerate your vehicle within the limitations of the system. On open roads with no traffic, it functions like a cruise control system. The stored speed is maintained. When approaching a vehicle traveling ahead, the adaptive cruise control automatically brakes to match that vehicle's speed and then maintains the set

distance as much as possible. Once the system does not detect a vehicle traveling ahead, adaptive cruise control will accelerate up to the set speed.

Within the limitations of the system, **lane guidance** provides corrective steering to assist the driver with keeping the vehicle in the center of the lane as much as possible. You can adjust if the adaptive cruise assist will provide support with lane guidance ⇒ *page 129, Turning lane guidance on or off*.

In **stop-and-go traffic and in traffic jams**, the vehicle may brake to a full stop and then may also start driving again automatically under certain conditions.

Applies to: vehicles with predictive control: **predictive control** can adjust the speed based on traffic and road conditions ⇒ *page 130*.



### WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.




### Tips


The system complies with United States FCC regulations and ISCED regulations ⇒ *page 283*.

## Limitations

Applies to: vehicles with adaptive cruise assist

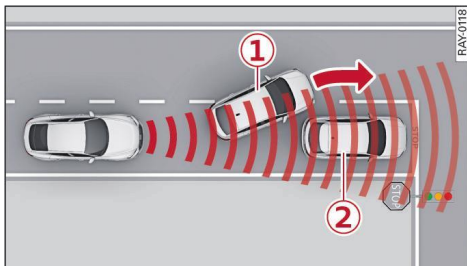

**Fig. 97** Example: vehicle changing lanes and stationary vehicle

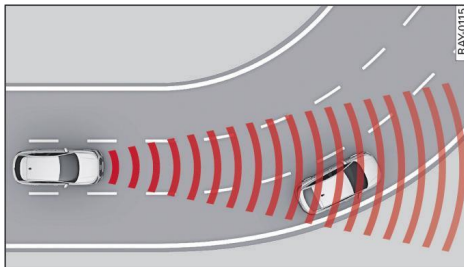

**Fig. 98** Example: driving into a curve

In some situations, the adaptive cruise assist function is limited and you must assume control of the vehicle when necessary, for example by applying the brakes.

- If a vehicle that was already detected ① turns or changes lanes, the adaptive cruise assist will respond to the vehicle ahead of it ②.
- When driving into a curve ⇒ *fig. 98* and out of a curve, the system may respond to a vehicle in the neighboring lane and apply the brakes. You can override the system by pressing the accelerator pedal briefly.
- The system works with the various sensors and cameras in the vehicle. Vehicles can only be detected once they are within the area and range covered by the sensors ⇒ *page 117*.
- When driving around tight curves, a vehicle traveling ahead that was previously detected may no longer be detected, and the adaptive cruise assist may accelerate unexpectedly.
- The system does not respond to a stationary vehicle in the same lane if it expects that you can easily drive around the stationary vehicle by turning the steering wheel.
- The system cannot respond to stationary obstacles, such as vehicles at the end of a traffic jam, especially when traveling at high speeds.
- The system has a limited ability to detect vehicles that are traveling a short distance ahead, off to the side of your vehicle, or moving into your lane.
- Objects that are difficult to detect, such as motorcycles traveling ahead, vehicles with high ground clearance, or vehicles with an overhanging load, may be detected late or not detected at all.

- The system does not respond to people, animals, or objects that are crossing or approaching from the opposite direction.

**WARNING**

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.

**Display overview**

Applies to: vehicles with adaptive cruise assist

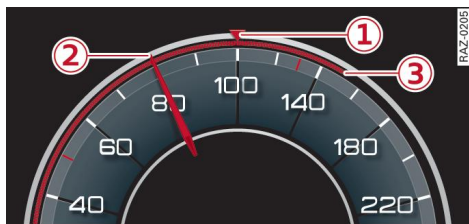


Fig. 99 Instrument cluster: display in speedometer

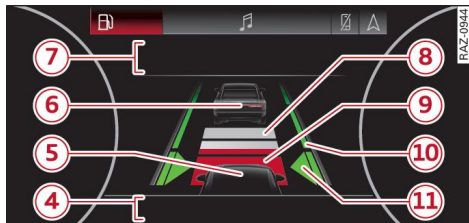


Fig. 100 Instrument cluster: driver assistance display

The driving situation and the settings are displayed in the instrument cluster ⇒ *fig. 99*. In the **Driver assistance** ⇒ *fig. 100* display, you can find more detailed information about the system. The displays depend on the country and equipment.

**Display in the speedometer**

- ① Marking for the set speed
- ② Current vehicle speed
- ③ Available speed range for adaptive cruise assist (example)

**Image in the Driver assistance display**

The image in the **Driver assistance** display only appears if it was opened in the trip computer ⇒ *page 17*.

- ④ Messages and settings
- ⑤ Your vehicle

- ⑥ Detected vehicle traveling ahead
- ⑦ Messages and settings
- ⑧ Set target distance
- ⑨ If you fall below the set distance, the distance bars turn red from the bottom upward.
- ⑩ Lane departure warning availability
- ⑪ Availability of lane guidance for adaptive cruise assist

**Indicator lights**

– The speed/distance control is active. No vehicles traveling ahead were detected. The stored speed is maintained.



– The speed/distance control is active. A vehicle traveling ahead was detected. The system controls the speed and distance from the vehicle traveling ahead, and accelerates and brakes automatically.



– The speed/distance control is active but the vehicle is not **ready to drive**. A vehicle traveling ahead was detected. Your vehicle is stationary and will not start driving automatically.



– The speed/distance control is active but the vehicle is not **ready to drive**. No vehicles traveling ahead were detected. Your vehicle is stationary and will not start driving automatically.



– Take over. The braking power is not sufficient ⇒ *page 130*, *Brake intervention request* or the safe start monitor is providing a warning ⇒ *page 134*.



– Lane guidance is active.



– Actively take over steering immediately. The system limitations have been reached ⇒ *page 130*, *Steering intervention requests*.



– Lane guidance is turned on but it is not active ⇒ *page 129*, *Lane guidance limitations*.



– Actively take over steering immediately. No steering detected or a system limitation has been reached ⇒ *page 130*, *Steering intervention requests*.

### WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ [page 116](#) to ⇒ [page 119](#).

### Using adaptive cruise assist

Applies to: vehicles with adaptive cruise assist

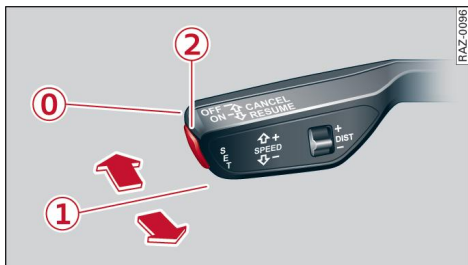


Fig. 101 Lever: using adaptive cruise assist

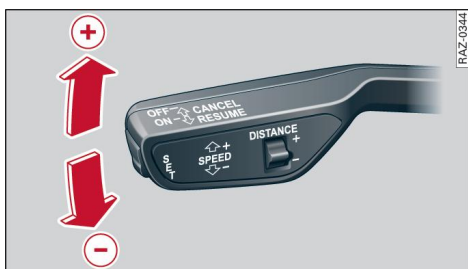


Fig. 102 Lever: changing the speed

### Turning on

- ▶ To turn on the adaptive cruise assist, pull the lever up to position ① until it engages.

### Storing the speed and activating regulation

If you have turned on the system, you can set the current speed as the “regulated speed” and activate regulation:

- ▶ Press the **[SET]** button ②. The set speed is indicated with a marking in the speedometer ① ⇒ [page 127](#), [fig. 99](#) and shown in the instrument cluster ⇒ [fig. 101](#).
- ▶ To store the speed while the vehicle is stationary, also hold the brake pedal down.

You can set any speed between 15 mph (20 km/h) and the maximum possible speed range ③<sup>1)</sup> ⇒ [page 127](#), [fig. 99](#).

### Pausing cruise control

The control can be stopped at any time:

- ▶ While driving or when the vehicle is stationary: Press the lever away from you in the direction of the arrow, or
- ▶ While driving: Press the brake pedal.




The  indicator light turns off.

### Resuming regulation

The previously set speed can be resumed at any time after a pause.


- ▶ To resume cruise control while driving, pull the lever toward you in the direction of the arrow.
- ▶ To resume cruise control when stationary, pull the lever toward you in the direction of the arrow while pressing the brake pedal.

### Changing the speed

- ▶ To increase or decrease the set speed in increments, tap the lever in the  direction.
- ▶ To increase or decrease the set speed continuously, hold the lever toward  or  until the marking in the speedometer ① ⇒ [page 127](#), [fig. 99](#) has reached the desired speed.

Applies to: vehicles with predictive control: Predictive control can automatically adjust the set speed based on traffic and road conditions ⇒ [page 130](#).

### Preselecting a speed

You can also preselect the speed when adaptive cruise assist is not active by moving the lever in the desired direction . Activate the previously selected speed by pulling the lever toward you in the direction of the arrow.

### Turning off

If you do not want to use the adaptive cruise assist for a longer period of time, you can turn it off.

<sup>1)</sup> Depends on the country and engine

- Push the lever away from you into position ① until it clicks into place.

The indicator light and the set speed will turn off.



### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇨ *page 116* to ⇨ *page 119*.
- Adaptive cruise assist is only an assist system, and the driver is still responsible for vehicle operation. The driver is especially responsible for braking, steering, starting to drive, and controlling the speed and the distance from other vehicles.
- Turn on adaptive cruise assist only if the surrounding conditions permit it. Always adapt your driving style to the current visual, weather, road, and traffic conditions.
- Turn off adaptive cruise assist temporarily when driving in turning lanes or highway exits. This prevents the vehicle from accelerating to the stored speed when in these situations.
- If you press the **SET** button ② when driving at speeds below 15 mph (20 km/h), the minimum possible speed that the system can maintain will be set. If no vehicle is detected ahead of you, the vehicle will accelerate up to that speed.




### Tips

- Always keep your hands on the steering wheel so you can be ready to steer at any time. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- If you turn off the ignition or the adaptive cruise assist, the stored speed is erased for safety reasons.
- When the adaptive cruise assist is turned on, the ESC and the ASR are turned on automatically.
- The system cannot be turned off or it may be interrupted if the road exceeds the maximum possible grade for safe operation.

### Turning lane guidance on or off

Applies to: vehicles with adaptive cruise assist and lane guidance

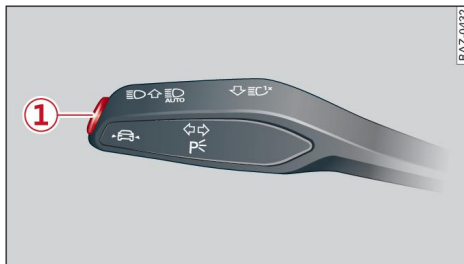

**Fig. 103** Turn signal lever: button for lane guidance and lane departure warning

Within the limitations of the system, lane guidance provides corrective steering to assist with keeping the vehicle in the center of the lane as much as possible.


### Turning lane guidance on or off

- To turn the availability of the lane guidance on or off, briefly press the button ① on the turn signal lever.

The availability of lane guidance is indicated with arrows ⑪ ⇨ *page 127*, *fig. 100* and with indicator lights ⇨ *page 127* in the **Driver assistance** display.

The system can assist you by providing corrective steering only when adaptive cruise assist is actively regulating and availability is turned on.

### Lane guidance limitations

If  turns white, lane guidance is turned on but is not active. This may occur due to the following system limitations or situations:

- The necessary lane marker lines have not been detected (for example, in a construction zone or because the lines are obstructed by snow, dirt, water, or lighting)
- The lane is too narrow or too wide.
- The curve is too narrow.
- Visibility is obstructed by a rise or dip.
- The driver's hands are not on the steering wheel.
- The turn signal was activated.

### WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.

### Tips

- Always keep your hands on the steering wheel so you can be ready to steer at any time. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- Audi recommends only turning on lane guidance on well-constructed roads.

## Driver intervention requests

Applies to: vehicles with adaptive cruise assist

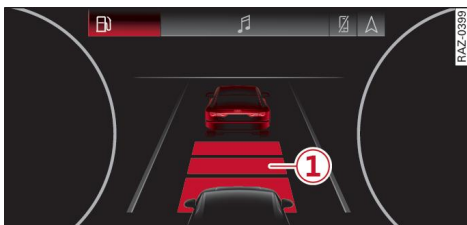





Fig. 104 Instrument cluster: brake intervention request


### Brake intervention request

If the  indicator light turns on and the message **Distance!** appears, press the brake pedal to apply the brakes ⇒ .



The braking effect by the adaptive cruise assist is not strong enough to maintain a sufficient distance to the vehicle traveling ahead in this situation.

The display  also appears if you have opened the **Driver assistance** display in the trip computer ⇒ *page 17*.

### Steering intervention requests

If the  indicator light turns on, actively take over steering immediately. The limitations of the system have been reached, for example because the system's steering power is not sufficient in curves that are too narrow. The system will be-

come inactive after a short time and will only become available again later.

If the  or  indicator lights turn on and a corresponding message appears, actively take over steering immediately. Sufficient steering activity was not detected or a system limitation has been reached. Keep your hands on the steering wheel so you can be ready to steer at any time. If you do not take over steering, adaptive cruise assist will be canceled. If the vehicle is equipped with emergency assist and it is ready to function, it will be activated ⇒ *page 142*.

### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- Adaptive cruise assist is only an assist system, and the driver is still responsible for vehicle operation. The driver is especially responsible for braking, steering, and maintaining the distance to other vehicles.


### Tips

- Always keep your hands on the steering wheel so you can be ready to steer at any time. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- The intervention requests may be accompanied by additional audio or visual signals, depending on the situation.

## Predictive control

Applies to: vehicles with adaptive cruise assist and predictive control

### General information

With predictive control, efficiency assist adapts the speed set in the adaptive cruise control  ⇒ *page 127*, *fig. 99* based on detected speed limits and the upcoming route. Once the system no longer detects any relevant conditions ahead, adaptive cruise control will accelerate back up to the last speed set by yourself. After turning on the ignition, the availability of predictive control ►



is indicated by a message when the adaptive cruise assist is first activated.

Incident symbols indicate the situation to which predictive control is responding.

### Requirements








- The predictive control is turned on in the **Driver assistance** menu under **Adaptive cruise assist** ⇒ *page 119*.
- Adaptive cruise assist must be actively regulating ⇒ *page 128*.
- The system can only respond to speed limits that are 15 mph (20 km/h) or higher.
- The map content of the navigation system\* must be updated regularly in order for the system to work without restrictions ⇒ *page 186*.

### Overriding control

You can override the predictive control at any time by pressing the accelerator pedal. If the system changes the vehicle speed to adapt to speed limits, you can change the speed using the lever ⇒ *page 128, fig. 102*.

### Situation symbols

Depending on vehicle equipment, the following symbols may be shown. The symbols indicate the situation to which the predictive control is responding. Some detail symbols will only be displayed in the **Driver assistance** display.

Symbol	Description
	<b>Speed limit</b> (example)
	<b>Speed limit</b>
	<b>Speed limit</b>
	<b>Speed limit removed</b>
	<b>Exit ahead</b>
	<b>Intersection ahead</b>
	<b>Traffic circle ahead</b>


### Setting predictive control

You can turn the predictive control on or off or adjust its settings in the **Driver assistance** menu under **Adaptive cruise assist** ⇒ *page 119*. The settings depend on the vehicle equipment.

**Set speed limit** – adaptation to speed limits can be turned **On** or **Off**. Regulation **With tolerance** can also be selected, if desired. In this scenario, you may fall below or exceed the set speed in favor of increased efficiency.

**Adjustment to curves along route** – Adjustment based on the curves along the route can be adjusted. The setting influences vehicle handling with predictive control, for example the speed for driving through curves.

### Messages

If  and a message with **Predictive control** is displayed when there is a malfunction, the efficiency assist functions are unavailable or limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors ⇒ *page 118* and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- Pay attention to traffic and the area around your vehicle when predictive control is turned on. The driver is always responsible for assessing the traffic situation.
- The system does not consider “right of way” rules and does not respond to traffic lights, so lack of driver attention in these situations can increase the risk of an accident.
- The speed when driving through curves may be different from what you as a driver would do or may not be suitable for the weather

and road conditions. If necessary, apply the brakes and reduce the selected speed to be maintained in the **Adjustment to curves along route** setting to reduce the risk of an accident.

### Tips

- Predictive control can exceed or drop below the maximum permitted speed. The driver is always responsible for adhering to the permitted speed limits.
- The traffic signs on the road always take priority over the display. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- The system only detects traffic signs that specify a speed limit.
- The display in the instrument cluster is based on the units of measurement used for speed in the country where the vehicle is being operated. As a result, a display of 50 in the instrument cluster can mean either mph or km/h, depending on the country.
- If a speed limit is detected, the marking **1** ⇒ page 127 of the set speed limit will be adjusted even if the adaptive cruise assist is not actively regulating.
- Control by the system depends on which adaptive cruise assist driving program is set or on the selected Audi drive select\* mode.
- After turning on the ignition and first driving onto a freeway or similar road without a speed limit, the system will regulate the speed to 80 mph (130 km/h)<sup>1)</sup>. Then the system adjusts to the last speed set by the driver.
- There is no adaptation to speed limits when driving through highway interchanges and when driving on or off the expressway.
- The system can fail to provide control or the control may be faulty if the values from the camera-based traffic sign recognition\* are incorrect or the navigation system\* map data is outdated.

- Aside from the road network, which is recorded in the navigation system's map information, certain functions may not be available.
- When route guidance is turned on, the system adapts to the route provided by the navigation system. Driving without route guidance or leaving a route can result in faulty control.

### Setting the distance


Applies to: vehicles with adaptive cruise assist



Fig. 105 Lever: setting the distance






When approaching a vehicle traveling ahead, the adaptive cruise assist brakes to the set speed and then maintains the set distance. If the vehicle traveling ahead accelerates, then the adaptive cruise assist will also accelerate up to the speed that you have set.

- Tap the rocker switch to display the distance that is currently set.
- To increase or decrease the distance in increments, tap the switch again toward **+** or **-**.

The newly-set distance will be shown briefly, for example with the  indicator light.

If you adjust the speed, you must also change the time gap to the vehicle traveling ahead. The higher the speed, the greater the distance that is needed. The following distances can be set: ►

<sup>1)</sup> In certain countries.

Symbol	Time distance	Distance at 62 mph (100 km/h)
	Approximately 1 second	92 feet (28 m)
	Approximately 1.3 seconds	118 feet (36 m)
	Approximately 1.8 seconds (the setting corresponds to a distance that is "half of the vehicle speed")	164 feet (50 m)
	Approximately 2.4 seconds	219 feet (67 m)
	Approximately 3.6 seconds	328 feet (100 m)

**WARNING**


Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ [page 116](#) to ⇒ [page 119](#).

**Tips**

- When setting the distance, the driver is responsible for adhering to any applicable legal regulations.
- In the **Driver assistance** display, a graphic display is shown instead of the indicator lights ⑧ ⇒ [page 127](#), [fig. 100](#). The display matches the functions of the indicator lights.
- Depending on the selected driving program and distance, driving behavior when accelerating may vary from moderate to sporty ⇒ [page 134](#), *Adjusting the adaptive cruise assist*.
- The distances provided are specified values. Depending on the driving situation and the driving style of the vehicle traveling ahead, the actual distance may be more or less than these target distances.

**Additional functions**

Applies to: vehicles with adaptive cruise assist

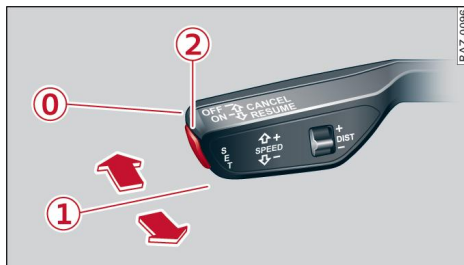

**Fig. 106** Lever: using adaptive cruise assist

Requirement: all additional functions require adaptive cruise assist control to be active.

**Overriding control**

You can override control by the system completely, for example if you would like to pass another vehicle or if you would like to accelerate faster.

- To accelerate manually, press the accelerator pedal.
- To resume the usual adaptive cruise control, remove your foot from the accelerator pedal.

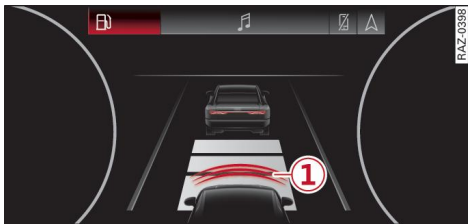
When you are in the **Driver assistance** display, the message **Overridden** will appear.

**WARNING**

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ [page 116](#) to ⇒ [page 119](#).
- Resting your foot on the accelerator pedal could override the cruise control. Braking interventions and corrective actions by the system may not occur.
- The functions only provide assistance. The driver is still responsible for controlling the vehicle when using these functions. The driver is especially responsible for changing lanes, applying the brakes, controlling the speed, and maintaining the distance to other vehicles.

### Driving in stop-and-go traffic

Applies to: vehicles with adaptive cruise assist





Applies to: vehicles with safe start monitor

Fig. 107 Instrument cluster: safe start monitor

### Stopping with adaptive cruise assist

The adaptive cruise assist also assists you in stop-and-go traffic. Within the limitations of the system, your vehicle may brake and remain at a stop if a vehicle traveling ahead stops.

### Starting to drive with adaptive cruise assist



As long as the message **ready to drive** and  is displayed, your vehicle will begin driving when the vehicle ahead starts to move ⇒ .


If your vehicle is stopped for too long, it will not begin driving again automatically for safety reasons and the message will turn off.

- To extend **ready to drive** for a brief time or reactivate it, pull the lever briefly toward you in the direction of the arrow ⇒ *page 133, fig. 106*.
- To resume manual control of the vehicle, tap the accelerator pedal.

### Safe start monitor

Applies to: vehicles with safe start monitor

The vehicle can still start to drive even if certain obstacles are detected when starting to drive ⇒ . If the surrounding area detection detects an obstacle, you will be alerted to the danger by the  indicator light.

If you are in the **Driver assistance** display, the display  ⇒ *fig. 107* and the message **Warning!** will also appear. An audio signal will sound as well. Your vehicle will drive more slowly when starting. This may also occur in some situations when there is no apparent obstacle.

- Press the brake pedal to slow your vehicle if necessary.

### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- If the message **ready to drive** appears, your vehicle will start driving even if there is an obstacle between your vehicle and the vehicle traveling ahead. To reduce the risk of an accident, always make sure there are no obstacles between your vehicle and the vehicle traveling ahead.

### Tips

For safety reasons, adaptive cruise assist only starts driving actively if:

- The driver's safety belt is fastened.
- All doors and the hood are closed
- The vehicle has not been stationary for a long period of time.

### Adjusting the adaptive cruise assist

Applies to: vehicles with adaptive cruise assist

You can adjust the adaptive cruise assist to your preferences in the **Driver assistance** menu ⇒ *page 119*. The settings depend on the vehicle equipment.


Possible settings:

Applies to: vehicles without Audi drive select

**Driving program** – Depending on the selected driving program and distance, the vehicle handling will be adjusted from **Sport** to **Comfort**.



Applies to: vehicles with Audi drive select

Vehicle handling will be adjusted based on the selected Audi drive select mode ⇒ *page 107*.

**Store last distance** - The last distance that was set will be stored after the ignition is turned off. If the distance is not stored, distance  (time distance of approximately 1.8 seconds) is automatically preset every time the ignition is turned on.

## Messages

Applies to: vehicles with adaptive cruise assist

If  or  is displayed when there is a malfunction, the adaptive cruise assist functions may be unavailable or limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors ⇨ [page 118](#) and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

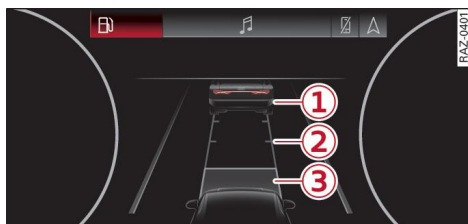
### Please take over!

This message appears if the vehicle rolls back when starting on a slight incline, even though the systems are active. Press the brake pedal to prevent the vehicle from rolling or starting to move. The message will also appear, for example if the steering power from the system is not sufficient and adaptive cruise assist is turned off.

## Distance warning

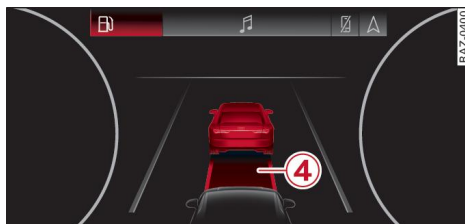
### Description

Applies to: vehicles with distance warning



Applies to: vehicles with adaptive cruise assist


**Fig. 108** Instrument cluster: display of the current distance



Applies to: vehicles with adaptive cruise assist:

**Fig. 109** Instrument cluster: distance warning

### General information

At speeds above approximately 40 mph (65 km/h), this function measures the distance to the vehicle traveling ahead as time. If the distance falls below the warning threshold and remains there, the system will warn you of the hazard with the  indicator light.

### Image in the Driver assistance display

Applies to: vehicles with adaptive cruise assist

The display only appears if the **Driver assistance** display is selected on the on-board computer ⇨ [page 17](#) and the adaptive cruise assist is not actively controlling the vehicle.

- ① Detected vehicle traveling ahead
- ② Use the markings to help you estimate the distance to an obstacle. Each marking represents approximately one second.
- ③ Set warning threshold. Depending on the settings, the display will be colored in from the bottom to the top.
- ④ The actual distance is smaller than the set distance and you will be informed about the danger.



### Adjusting the distance warning

– You can turn the distance warning on or off in the **Driver assistance** menu, or adjust it to your preferences ⇨ [page 119](#). The settings depend on the vehicle equipment.

Possible settings:


#### – Warning threshold

### Messages

If  or  is displayed when there is a malfunction, the distance warning functions may be unavailable or may be limited.


A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors ⇒ *page 118* and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



**WARNING**

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.



**Tips**

- The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- You may fall below the warning threshold briefly when passing or when quickly approaching a vehicle traveling ahead. There is no warning in this scenario. A warning is given only if you fall below the warning threshold for an extended period of time.


Lane departure warning

**General information**

Applies to: vehicles with lane departure warning

The lane departure warning can detect lane marker lines within the limitations of the system. If you are approaching a detected lane marker and it appears likely that you will leave the lane, the system can warn you with corrective steering and a steering wheel vibration, if necessary.

This system activates at speeds above approximately 40 mph (65 km/h) and is not available at very high speeds.




**WARNING**


Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.

**Description**

Applies to: vehicles with lane departure warning

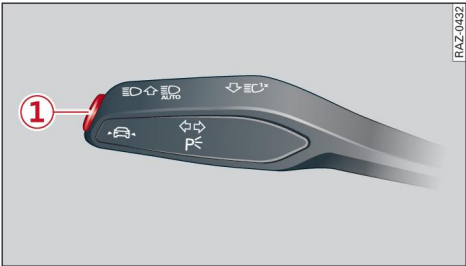

**Fig. 110** Turn signal lever: button for lane departure warning and lane guidance for adaptive cruise assist\*

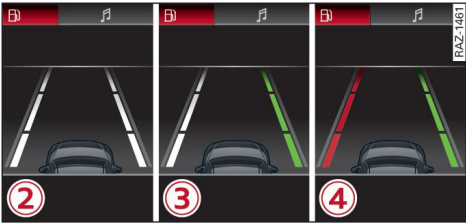





**Fig. 111** Instrument cluster: driver assistance display

- Turning the lane departure warning on or off**
- You can turn the lane departure warning on or off in the **Driver assistance** menu ⇒ *page 119*, or
  - Press and hold the button ① on the turn signal lever until the applicable display in the instrument cluster turns on.


If the button ① on the turn signal lever is only pressed briefly, lane guidance controls will activate ⇒ *page 129*.

Overview of displays and warnings

The availability, readiness to provide warnings, and the warnings are indicated with indicator lights. The lane departure warning is ready to provide warnings if an object is detected on at least one side of the individual lane.

Driver assistance display	Indicator lights	Meaning
② White line(s)		The lane departure warning is active on the side that is indicated, but not ready to provide warnings.
③ Green line(s)		The lane departure warning is active on the side that is indicated and is ready to provide warnings.
④ Red line		The lane departure warning system will warn you with a corrective steering intervention before exiting the lane on the respective side.
-		Red lines on both sides: lane guidance from the Emergency assist* is active ⇒ <i>page 142</i> .


If the lane departure warning must intervene for a long period of time, a message will request you to drive in the center of the lane. The steering wheel can also vibrate to warn you if lane boundaries are detected during a passing maneuver. You can turn the steering wheel vibrations on or off in the **Driver assistance** menu ⇒ *page 119*. The settings depend on the vehicle equipment.

If the  indicator light turns on, the lane departure warning is not ready to provide warnings. This may occur due to the following system limitations or situations:

- The necessary lane marker lines have not been detected (for example, in a construction zone or because the lines are obstructed by snow, dirt, water, or lighting)
- The lane is too narrow or too wide.
- The curve is too narrow.
- Visibility is obstructed by a rise or dip.
- The driver's hands are not on the steering wheel.

- The turn signal was activated.

### Steering intervention request

If the lane departure warning intervenes multiple times when no steering activity is detected, the steering intervention request will provide a warning using audio and visual signals, such as . Actively take over steering immediately and keep your hands on the steering wheel so that you will be ready to steer at any time. The system may no longer be ready to provide warnings after a short time, and it will only become active again later.

If you do not take over steering, the lane departure warning will no longer be ready to provide warnings. If the vehicle is equipped with emergency assist and it is ready to function, it will be activated ⇒ *page 142*.

### Behavior when a turn signal is active

**Applies to: vehicles without side assist:** The system will not warn you if you activate a turn signal before crossing the lane marker line. In this case, it assumes that you are changing lanes intentionally.

**Applies to: vehicles with side assist:** If the turn signal is activated, the lane departure warning is ready, and a lane change has been classified as critical by the lane departure warning due to vehicles traveling beside you or due to approaching vehicles, then a noticeable corrective steering movement will occur shortly before exiting the lane. This will attempt to keep your vehicle in the lane.



### WARNING



- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- The system uses corrective steering to warn that the vehicle is leaving the lane. The driver is always responsible for keeping the vehicle in the lane.
- Corrective steering may not occur at all in certain situations, such as during heavy braking. Always be ready to intervene.

### Tips

- Always keep your hands on the steering wheel so you can be ready to steer at any time. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- The system does not provide any corrective steering or steering wheel vibrations if it detects that you are passing another vehicle.
- The image in the **Driver assistance** display only appears if it was opened in the trip computer ⇒ *page 17*.

### Messages

Applies to: vehicles with lane departure warning

If  or  is displayed when there is a malfunction, the lane departure warning and lane guidance functions of the adaptive cruise\* functions may be unavailable or limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or the camera may be covered. Clean the area in front of the camera ⇒ *page 118, fig. 91* and try to turn on the systems again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

## Audi pre sense

### Function overview

Applies to: vehicles with Audi pre sense

Within the limitations of the system, the Audi pre sense functions can initiate measures in certain driving situations to protect the vehicle occupants and other road users. Depending on the vehicle equipment, various Audi pre sense systems may be installed:

- **Audi pre sense basic** can respond during emergency and dangerous braking maneuvers and unstable driving situations (such as oversteering or understeering).

- **Audi pre sense front** can detect an impending frontal impact and respond with warnings, braking interventions, and preemptive safety measures for the vehicle occupants.
- **Audi pre sense rear** monitors the rear traffic behind your vehicle and can respond to an impending rear impact.

### Audi pre sense preemptive safety measures

Applies to: vehicles with Audi pre sense

Depending on the vehicle speed and the vehicle equipment, the following functions may be initiated in certain situations:


- Visual and audio warnings
- Reversible tensioning of the front safety belts
- Closing the windows and panoramic glass roof



### WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.

### Tips

- Depending on the dangerous situation that is detected and the selected Audi drive select\* mode, all preemptive safety measures may not be initiated under certain circumstances. Certain functions may be modified or skipped if necessary.
- Audi pre sense may also be limited or unavailable under certain circumstances, for example if:
  - If there are persons in the vehicle who are not using a safety belt
  - After turning on the ignition, as long as the  indicator light is on.
  - When driving in reverse
  - The front passenger's airbag is turned off
  - If there is an airbag control module malfunction
  - When ESC is restricted or turned off


### Audi pre sense basic

Applies to: vehicles with Audi pre sense basic

Audi pre sense basic is automatically active at speeds of approximately 20 mph (30 km/h) and ▶



higher. Audi pre sense basic can trigger the Audi pre sense preemptive safety measures during emergency braking and dangerous braking maneuvers as well as in unstable driving situations, such as oversteering or understeering.

The message **Audi pre sense**  will warn you about the danger.



### WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.

## Audi pre sense front

Applies to: vehicles with Audi pre sense front

Within the limitations of the system, Audi pre sense front can warn about an impending front end collision and brake the vehicle strongly, if necessary. The system uses the data from the front radar sensors and is available at speeds above approximately 3 mph (5 km/h).

### Driving situations

The situations to which the system responds depends on the vehicle speed.

Up to speeds of approximately 40 mph (65 km/h), the system may respond to the following situations:

- Pedestrians<sup>1)</sup> moving across the lane
- Pedestrians<sup>1)</sup> in your lane traveling in the same direction as your vehicle

Up to speeds of approximately 50 mph (85 km/h), the system may respond to the following situations:


- When approaching a stationary vehicle

Up to speeds of approximately 155 mph (250 km/h), the system may respond to the following situations:

- A vehicle traveling ahead clearly applies the brakes
- When approaching a vehicle traveling ahead that is clearly traveling more slowly

- When approaching a stopped vehicle, as long as the system has already detected that this vehicle is driving in the same direction as your vehicle.

### Prewarning

The system can provide warnings about detected dangers at speeds above approximately 20 mph (30 km/h). **Audi pre sense**  appears in the instrument cluster and an audio signal sounds.

### A brief application of the brakes


If a collision with vehicles is imminent, there may be an acute warning using a brief application of the brakes. You will also be warned about the danger by an indicator in the instrument cluster display. You may only be able to avoid a collision by swerving or braking strongly.

### Automatic braking force increase

If there is an impending collision and you are not applying the brakes enough, the braking force may be increased, depending on the situation.

### Automatic braking

If you do not react to the acute warning, the system may apply the brakes, within the limitations of the system, with increasing braking force in order to reduce the speed of impact in the event of a collision.

If the brakes were applied until the vehicle stopped,  **Please take over!** will appear in the instrument cluster and you must take over control of the vehicle.



### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- Audi pre sense front cannot overcome natural physical laws. It is a system designed to assist and it cannot prevent a collision in every situation. The driver must always intervene. The driver is always responsible for braking in a timely manner. Do not let the

<sup>1)</sup> This is not available in some countries.

increased safety provided tempt you into taking risks. This could increase your risk of a collision.

- Among other things, Audi pre sense front does not respond to cyclists, pedestrians who are stationary, stopped, crossing at an angle or traveling toward your vehicle, groups of pedestrians, animals, crossing vehicles, oncoming vehicles, or objects, such as posts, guardrails, and railway vehicles.
- Audi pre sense front may be limited or unavailable in curves or when it is dark.
- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Store objects securely while driving.
- Make sure that each person in the vehicle has their safety belt fastened correctly and follows the instructions for proper seating ⇒ *page 62*.
- In trailer mode, the braking behavior of the vehicle and trailer may be different than usual during automatic braking.

### Tips

If you turn off the ESC, Audi pre sense also turns off automatically.

### Audi pre sense rear

Applies to: vehicles with Audi pre sense rear

Within the limitations of the system, Audi pre sense rear uses data from radar sensors in the rear area of the vehicle and calculates the probability of a rear-end collision with the vehicle behind you.

Audi pre sense preemptive safety measures can be initiated if the risk of a collision with the vehicle behind you is detected.

### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.

- Audi pre sense rear does not respond to pedestrians, animals, crossing objects, and objects not detected as vehicles.


### Tips

Audi pre sense rear functions may also turn off if there is a malfunction in the side assist system.

### Adjusting Audi pre sense

Applies to: vehicles with Audi pre sense

You can turn Audi pre sense and the associated systems on or off and adjust its settings in the **Driver assistance** menu ⇒ *page 119*. The settings depend on the vehicle equipment. The systems may only be turned on or off while the vehicle is stationary.


If you turn off Audi pre sense, the  indicator light will turn on and a corresponding message will appear.

### Tips

- If you turn off Audi pre sense, the system will turn on again automatically once the ignition is turned on again.
- Turn off Audi pre sense when you are not using public streets, when loading the vehicle onto a vehicle carrier, train, ship, or other type of transportation, or when towing the vehicle. This can help to prevent an undesired intervention from the Audi pre sense system.

### Messages

Applies to: vehicles with Audi pre sense

If  is displayed when there is a malfunction, the Audi pre sense functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors ⇒ *page 118*.

If the message still appears after turning the vehicle on again, have an authorized Audi dealer or ►

authorized repair facility correct the malfunction as soon as possible.

## Side assist

### Description

Applies to: vehicles with side assist

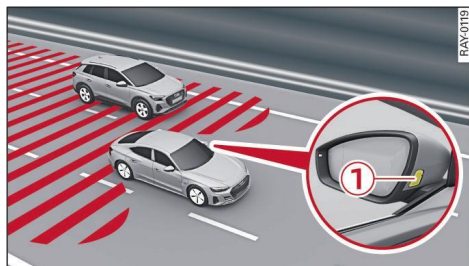


Fig. 112 Driving situations and displays in the exterior mirror

### General information

Side assist monitors the blind spot as well as the traffic behind your vehicle and provides assistance when you are changing lanes. If the system detects an object approaching and classifies it as critical, the display ① in the exterior mirror on that side of the vehicle will turn on.

### Driving situations

The side assist warning is active at speeds above approximately 9 mph (15 km/h) and can help in situations such as the following:

- Your vehicle is being passed. The faster another vehicle approaches from behind, the sooner the display in the exterior mirror will turn on.
- There are vehicles traveling in the same direction as you in a lane adjacent to yours. The display in the exterior mirror will turn on when the detected object is in the “blind spot”, at the latest.
- You are slowly passing another vehicle. If the difference in speed between the two vehicles is less than 9 mph (15 km/h), the display in the exterior mirror will turn on.

### Information stage

As long as you do not activate a turn signal, the system will inform you about objects classified as

critical by turning on the display in the respective exterior mirror ①.

The display remains dim in the information stage so that you are not distracted while looking forward.

### Warning stage

Once you activate a turn signal, the system will inform you about objects classified as critical by turning on the display in the respective exterior mirror.

If other driver assistance systems (depending on vehicle equipment) detect that your vehicle is about to leave the lane, the display will blink even if the turn signal lever is not activated to warn you about objects that are classified as critical. You can also be warned with corrective steering ⇨ *page 136, Lane departure warning*.

### System limitations

The system uses the data from the radar sensors at the rear corners of the vehicle. They are designed to detect the left and right adjacent lanes when the road lanes are the normal width. In some situations, the system may respond to vehicles in your own lane or lanes that are not directly adjacent to yours, or to objects on the side of the road. In this case, the display will turn on even though there is no vehicle in the critical area. These situations may include:

- Driving on the edge of your own lane
- Narrow lanes
- Curves
- High barriers on the side of the road
- Construction zones



### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇨ *page 116* to ⇨ *page 119*.
- The display may not appear on time when vehicles are approaching or being passed very quickly.

### Tips

- If the window glass in the driver's door or front passenger's door has been tinted, the display in the exterior mirror may be incorrect.
- The coverage areas of the sensors ⇒ *fig. 112* are schematic representations and do not represent a true-to-scale image of the sensor ranges.
- The system is not available when towing a trailer. There is no guarantee the system will turn off when using a retrofitted trailer hitch. Do not use these functions when towing a trailer.
- The system complies with United States FCC regulations and ISED regulations  
⇒ *page 283*.

### Adjusting side assist

Applies to: vehicles with side assist

You can turn the side assist on or off in the **Driver assistance** menu, or adjust it to your preferences ⇒ *page 119*. The settings depend on the vehicle equipment.

Possible settings:



**Brightness** – Change the brightness only when side assist is turned on, so that the selected setting can be checked in the exterior mirror displays. Adjust the brightness to a level where the display will not interfere with your view ahead. Because the display brightness automatically adapts to the ambient light, it may have already been adjusted to the highest or lowest setting during the automatic adaptation.

### Tips

If the system is turned on, the displays on the exterior mirrors will turn on briefly each time the ignition is turned on.

### Messages

Applies to: vehicles with side assist

If  or  is displayed when there is a malfunction, the side assist functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area of the sensors at the rear corners of the vehicle ⇒ *page 118*, *fig. 92* and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

## Emergency assist

### Description

Applies to: vehicles with emergency assist

### General information

Within the limitations of the system, emergency assist can detect inactivity from the driver. In these instances, the system will give a warning, assume control of the vehicle if necessary, and automatically bring the vehicle to a stop in the lane.

Emergency assist availability

- The emergency assist is automatically available when the adaptive cruise assist with lane guidance\* is activated, regardless of the vehicle speed.
- When adaptive cruise assist is turned on but not active, the system will only be active if the lane departure warning is activated and ready to provide warnings and the speed is greater than approximately 40 mph (65 km/h).
- The emergency assist is not available if the adaptive cruise assist is turned off.
- If one of the requirements for adaptive cruise assist or the lane departure warning is no longer met, the system may only function with limitations or it may deactivate automatically.


### Emergency assist functions

Measures may be initiated in stages. The vehicle can intervene within the limitations of the system. The measures depend on the dangerous situation and the vehicle equipment:

- Visual and audio warnings
- Vehicle control

- Reduction of vehicle speed in stages
- Activation of the brakes
- The emergency flashers are activated <sup>1)</sup>.
- Application of the brakes until the vehicle is stationary
- As soon as the vehicle stops, the parking brake is set.

### Display

If  is displayed for example, the emergency assist lane guidance is active.



### Overriding the emergency assist

You can override emergency assist as follows

⇒ :

- Move the steering wheel, or
- Press the brake pedal, or
- Press the accelerator pedal distinctly, or
- Turn off the adaptive cruise assist and the lane departure warning.

### Messages

If  or  is displayed when there is a malfunction, the emergency assist functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors ⇒ *page 118* and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



### Tips

Depending on the severity of the detected situation, not all safety measures will be initiated. Certain functions may be modified or skipped if necessary.



### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- The emergency assist is an assist system that should only be used in cases of emergency to take over control of the vehicle and bring it to a stop.

<sup>1)</sup> This function is not available in every market and on all vehicle equipment levels.

## Parking and maneuvering

### Introduction

Depending on the vehicle equipment, various parking aids will help you when parking and maneuvering.

#### Parking aid

The **parking aid plus** assists you while parking using audio and visual signals to warn you about objects detected in front of, behind, and next to\* the vehicle ⇒ *page 144*.

The **rearview camera** shows the area behind the vehicle in the center display. The lines in the rearview camera image help you to park and maneuver ⇒ *page 146*.


The **peripheral cameras** are an addition to the rearview camera and help you to see various areas around the vehicle while parking and maneuvering ⇒ *page 146*.

The **rear cross-traffic assist** can warn you of approaching cross traffic when driving in reverse or exiting a parking space ⇒ *page 150*.

#### Assisted parking

**Park assist** helps you to locate suitable parking spaces and to park in them and exit them. Park assist controls the steering movements when parking in free parking spaces. The driver is still responsible for accelerating, braking, and shifting gears. You must always monitor the area around the vehicle and supervise the process of parking or exiting a parking space ⇒ *page 154*.

#### Possible settings

You can adjust parking aid functions in the **Parking aid** menu according to your preferences ⇒ *page 119*. Some settings are only available via  and under certain conditions.

- **Automatic activation** ⇒ *page 144*
- **Front and rear volume** ⇒ *page 145*
- **Entertainment fader** ⇒ *page 145*.
- **Trailer view** ⇒ *page 148*
- **View** ⇒ *page 149*
- **Rear cross-traffic assist** ⇒ *page 150*

### WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.

### Tips

Audi recommends practicing parking in a traffic-free location or parking lot to become familiar with the systems. Practice parking in good lighting and weather conditions.

## Parking aid plus

### Activating and deactivating

Applies to: vehicles with parking aid plus



 
Fig. 113 Center console: parking aid button

#### General information

The parking aid assists when parking and maneuvering by providing warnings about obstacles. If the ultrasonic sensors on the vehicle ⇒ *page 117*, *fig. 89* detect an obstacle, the system will provide audio and visual warnings.

#### Activating and deactivating

Requirement: the vehicle speed must be under approximately 6 mph (10 km/h).

- Press the  button in the center console. When activating, a brief tone will sound and the LED in the button will turn on.

#### Automatic activation

- The system activates automatically when reverse gear is engaged while the engine is running.

If **Automatic activation** is turned on ⇒ *page 119* in the **Parking aid** menu and if the vehicle

approaches an obstacle when driving forward at speeds below approximately 6 mph (10 km/h), the parking aid will activate automatically. Audio signals will sound once the obstacle is within the sensor detection area.

### Automatic deactivation

The distance indicator for the parking aid plus will deactivate automatically when driving forward faster than approximately 6 mph (10 km/h).



#### WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ [page 116](#) to ⇒ [page 119](#).



#### Note

Keep enough distance from the curb to avoid damage to the rims.



#### Tips

- If the parking aid is deactivated, it can only be reactivated automatically when one of the following conditions is met:
  - The vehicle speed exceeds 6 mph (10 km/h)
  - The ignition is turned off and on again
  - The parking brake is set and then released
  - The “P” position is engaged and released again

### Warnings

Applies to: vehicles with parking aid plus

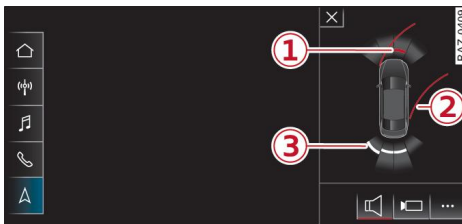


Fig. 114 Center display: distance display

If the sensors detect an obstacle, audio and visual signals will warn you.

### Visual warnings

The visual warnings in the center display help you to detect the critical vehicle area and to estimate the distance to an obstacle.

Red segments ① show detected obstacles that are in your vehicle's path. The red lines ② mark the expected direction of travel based on the steering angle. A white segment ③ indicates a detected obstacle that is outside of the vehicle's path. The closer your vehicle comes to the obstacle, the closer the segments will move to the vehicle. The collision area has been reached when the next to last segment is displayed. Obstacles in the collision area, including those outside of the vehicle's path, are shown in red. Do not continue driving forward or in reverse.

### Audio warnings

The closer your vehicle gets to a detected obstacle, the shorter the time between the audio signals. A continuous tone sounds when an obstacle is less than approximately 1 foot (0.30 m) away from the front or rear of the vehicle. A continuous tone sounds when an obstacle is less than approximately 0.7 feet (0.20 m) away from the sides\* of the vehicle. Do not continue driving forward or in reverse ⇒ .

- To deactivate audio signals when parking or exiting a parking space, press in the center display. The audio signals will be automatically activated again the next time the parking aid is activated.

### Adjusting the volume

You can adjust the volume to your preferences in the **Parking aid** menu ⇒ [page 119](#). The settings depend on the vehicle equipment.



Possible settings:



**Front volume** - Volume for the front and side\* area.

**Rear volume** – Volume for the rear area.

**Entertainment fader** – The volume of the audio/video source is lowered when the parking aid is activated.

### Error messages

If  appears, the sensor in the respective area or the speaker is faulty. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected. The LED in the  button may also flash when the system is activated.

If  or  is displayed when there is a malfunction, the parking aid functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors  $\Rightarrow$  page 118 and try to turn on the systems again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



#### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras  $\Rightarrow$  page 116 to  $\Rightarrow$  page 119.
- Sensors and cameras have spots in which the surrounding area cannot be detected. Objects, animals, and people may only be detected with limitations or may not be detected at all. Always monitor the traffic situation and the vehicle's surroundings directly and do not become distracted.



#### Note

- Keep enough distance from the curb to avoid damage to the rims.
- Applies to: vehicles with park assist: If you park in short parking spaces using park assist, a continuous tone will sound from the parking aid when the distance to an object is less than approximately 0.7 feet (0.20 m). Do not continue driving forward or in reverse.



#### Tips

- The segments in the side area\* are detected and analyzed when passing. There may have been changes to the surrounding area after turning off the ignition and on again, after opening the doors, or if the vehicle is left stationary for a period of time. In this case, the area will appear black until the area has been detected and evaluated.
- If the distance to an obstacle remains constant, the volume of the distance warning gradually lowers after a few seconds until it is muted (this does not apply to the continuous tone). If the obstacle comes closer than it was before the sound was muted, the tone will sound again. If the obstacle becomes farther away than it was before the sound was muted, no tone will sound. Pay attention to the vehicle's surroundings when you start to drive.
- There is no distance warning for the rear and the sides\* when trailer towing mode is detected. The front sensors remain activated. There is no guarantee the functions will be deactivated when using a retrofitted trailer hitch.

## Rearview camera and peripheral cameras

### Introduction

Applies to: vehicles with rearview camera/peripheral cameras

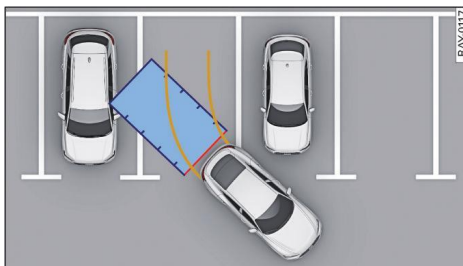


Fig. 115 Orientation line display when parking

Depending on the vehicle equipment, a rearview camera or multiple peripheral cameras may be available. ►



The **rearview camera** helps you to park or maneuver using orientation lines.

The **peripheral cameras** expand the vehicle overview to include various views around the vehicle that can be selected.

### WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇨ *page 116* to ⇨ *page 119*.


### Activating and deactivating

Applies to: vehicles with rearview camera/peripheral cameras



Fig. 116 Center console: parking aid button

### Activating and deactivating

- ▶ Press the **P** button in the center console.  
When activated, a brief tone will sound and the LED in the button will turn on, or
- ▶ Press  on in the center display if the visual distance indicator ⇨ *page 145*, *fig. 114* is shown.

The system can be activated at low speeds, such when maneuvering.

### Automatic activation

The system activates automatically when reverse gear is engaged while the engine is running. A brief tone will sound.

### Automatic deactivation

The system will deactivate automatically once the vehicle exceeds a certain speed while driving forward.

### WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇨ *page 116* to ⇨ *page 119*.

### Warnings

Applies to: vehicles with rearview camera/peripheral cameras

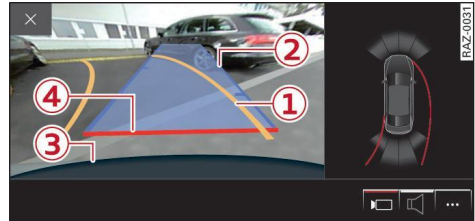
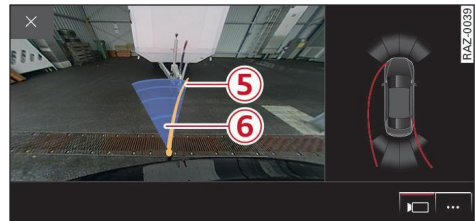


Fig. 117 Center display: aiming at a parking spot




Applies to: vehicles with trailer view

Fig. 118 Center display: trailer view

When parking with the rearview camera or peripheral camera, the parking aid audio and visual warnings\* will also assist you.


### Visual orientation lines



- ① The orange orientation lines show the vehicle's direction of travel ⇨ . Turn the steering wheel until the orange orientation lines align with the parking space.
- ② You can use the horizontal blue markings to help you estimate the distance to an obstacle. Each marking represents approximately 3 feet (1 meter). The blue surface is a static display and represents an extension of the vehicle perimeter to the rear.
- ③ You can recognize the rear bumper in the lower display.
- ④ You should stop driving in reverse when the red orientation line touches the edge of an object, at the latest.

### Trailer view

Applies to: vehicles with trailer view


Requirement: the rearview camera or peripheral cameras are activated.


- Applies to: vehicles with peripheral cameras:  
Switch to the **Rear** view ⇒ *page 149, fig. 119*.
- Select  > **Trailer view** in the center display when the parking aid is active.

With the trailer view ⇒ *fig. 118*, it will be easier for you to position your vehicle in front of a trailer. The orange orientation line  ⇒ *fig. 118* indicates the expected path toward the trailer hitch. Use the blue markings  to help you estimate the distance to the trailer hitch. Each marking represents approximately 1 foot (0.30 meters). The width of the blue surface represents the maximum steering wheel angle.

### Symbols

Applies to: vehicles with peripheral cameras


If  is displayed and the display area represented by that symbol is not available, then the camera on the that side is not available. The power exterior mirrors may have been folded in or a door or the luggage compartment lid may have been opened.

If  is displayed, there is a system malfunction and the display area represented by that symbol is not available. The camera is not working in this area.

If one of the symbols continues to be displayed, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.



### Note

- The orange orientation lines  show the direction the rear of the vehicle will be traveling, based on the steering wheel angle. The front of the vehicle swings out more than the rear of the vehicle. Maintain plenty of distance so that an exterior mirror or a corner of the vehicle does not collide with any obstacles.
- Keep enough distance from the curb to avoid damage to the rims.
- Only use the images provided by the camera on the rear of the vehicle when the luggage compartment lid is completely closed. Make sure any objects you may have mounted on the luggage compartment lid do not block the rearview camera.



### Tips

There is no distance warning for the rear and the sides\* when trailer towing mode is detected. The front sensors remain activated. The visual display switches to trailer mode. There is no guarantee the functions will be deactivated when using a retrofitted trailer hitch.



### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- Sensors and cameras have spots in which the surrounding area cannot be detected. Objects, animals, and people may only be detected with limitations or may not be detected at all. Always monitor the traffic situation and the vehicle's surroundings directly and do not become distracted.

## Operating the peripheral cameras

Applies to: vehicles with peripheral cameras

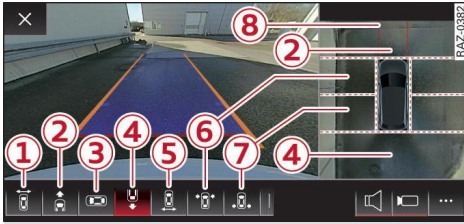


Fig. 119 Center display: peripheral cameras

On vehicles with peripheral cameras, you can select among different views.

### Selecting the views

- To display the entire selection bar, tap the current view ① or swipe at the edge of the selection bar from left to right.

- To select a view, press ① - ⑦ or tap in an area to show the vehicle in the side view <sup>1)</sup>.

### Selecting a view in the side area

The vehicle surroundings are shown in the side area of the display. You can adjust the view to your preferences in the **Parking aid** menu ⇒ page 119. You can switch between a visual display (**Graphic**) and the vehicle surroundings (**Camera**).

	Symbol/Description	Description
①	<b>Front corner</b> or Display selection bar	This view makes it easier to drive out of tight parking spaces or areas and intersections with poor visibility. It shows an almost 180° panoramic view in front of the vehicle.
②	<b>Front</b>	This view assists you in using the full area for maneuvering in front of the vehicle.
③	<b>Surroundings</b>	This view helps you to maneuver and position the vehicle more precisely. The area around the vehicle is shown using the camera images. The vehicle image is shown by the system ⇒ ⚠.
④	<b>Rear</b>	This view assists you in using the full area for maneuvering behind the vehicle. This is the rearview camera image.
⑤	<b>Rear corner</b>	This view can assist you when driving out of tight parking spaces or areas with poor visibility. It shows an almost 180° panoramic view behind the vehicle.
⑥	<b>Front tires</b>	This view helps you to see the distance between the front tires and the curb and the steering wheel angle when parking.
⑦	<b>Rear tires</b>	This view helps you to detect the distance between the rear wheels and the curb when parking.
⑧	<b>Steering wheel angle</b>	The red lines represent the estimated direction of travel based on the steering wheel angle ⇒ ⚠.

<sup>1)</sup> Requirement: The vehicle surroundings (**Camera**) is selected and visible in the **View** in the side area.

### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- The **Surroundings** view is created from the individual camera images. The vehicle image is shown by the system. Objects and obstacles above the camera are not displayed.

### Note

Only use the images provided by the camera on the rear of the vehicle when the luggage compartment lid is completely closed. Make sure any objects you may have mounted on the luggage compartment lid do not block the rearview camera.

### Tips

- Depending on the selected gear, it will automatically switch between the **Front** and **Rear** views. If you switch the view manually, the automatic front/rear camera change will be temporarily deactivated.
- When first activated while a forward gear is engaged, the **Front corner** is displayed.

## Rear cross-traffic assist

### Description

Applies to: vehicles with rear cross-traffic assist

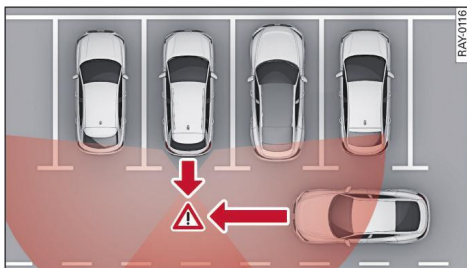


Fig. 120 Sensor detection range for rear cross-traffic assist

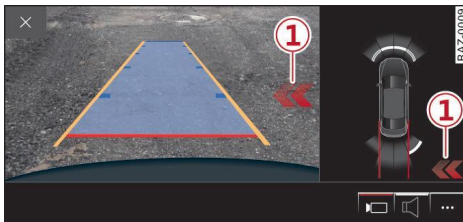



Fig. 121 Center display: rear cross-traffic assist display


### General information

Rear cross-traffic assist monitors the area behind and next to the vehicle using radar sensors at the rear corners of the vehicle. The system can detect moving objects that are approaching, such as vehicles ⇒ *fig. 120*. A display in the center display  and various warnings provide assistance when exiting a parking space.

### Requirements for using the rear cross-traffic assist:

- The parking aid is active ⇒ *page 144*.
- The speed while driving backwards is not higher than approximately 6 mph (10 km/h).

### Displays, warnings, and braking



 
- **Display:** the display  appears only when the parking aid is active. In vehicles with peripheral cameras, the display only appears in the **Rear** and **Rear corner** camera views. Arrows show the direction from which the cross traffic is approaching.
- **Audio warnings:** an audio signal may sound as an additional warning when driving in reverse.
- **Automatic brake activation:** if you do not react to a warning, a brief braking by the system can warn you of a potential collision with an approaching object.

The audio warning signal and the automatic brake activation occur only when driving in reverse.

### Turning the rear cross-traffic assist on or off

- You can turn the rear cross-traffic assist on or off in the **Parking aid** menu ⇒ *page 119*. ▶

## Messages

If  or  or  is displayed when there is a malfunction, the rear cross traffic assist functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area of the sensors at the rear corners of the vehicle  $\Rightarrow$  *page 118*, *fig. 92* and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras  $\Rightarrow$  *page 116* to  $\Rightarrow$  *page 119*.
- The rear cross-traffic assist will not provide alerts about people and cannot warn you about every type of approaching object, such as bicycles. Always monitor the traffic situation as well as the vehicle's surroundings with direct eye contact.
- The system may not respond at all or it may not respond at the right time when objects are approaching very quickly.
- The rear cross-traffic assist will not provide alerts if your vehicle is parallel or diagonally parked or if your vehicle is pulled too far into the parking space so that it is hidden by adjacent vehicles.



### Tips

- Once an automatic brake activation occurs, the system cannot brake automatically again for several seconds.
- System functions may not be available if the ESC is limited or turned off, or if there is a malfunction.
- If there is an audio warning signal from the rear cross-traffic assist, then the parking aid may not be able to provide audio warnings about detected obstacles under certain circumstances.

- The system is not available when the vehicle detects that you are towing a trailer. There is no guarantee the functions will turn off when using a retrofitted trailer hitch. Do not use these functions when towing a trailer.
- The system complies with United States FCC regulations and ISED regulations  $\Rightarrow$  *page 283*.
- The coverage areas of the sensors  $\Rightarrow$  *fig. 120* are schematic representations and do not represent a true-to-scale image of the sensor ranges.

## Assisted parking

### General information

Applies to: vehicles with park assist

If your vehicle is equipped with park assist, this system helps you find suitable parking spaces. Parking spaces are measured using ultrasonic sensors on the sides of the vehicle.

If a parking space is found, the system helps you to park while the driver monitors the vehicle's surroundings with the parking aids, cameras\*, and direct eye contact.



### WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras  $\Rightarrow$  *page 116* to  $\Rightarrow$  *page 119*.

### Options for parking and exiting parking spaces

Applies to: vehicles with park assist

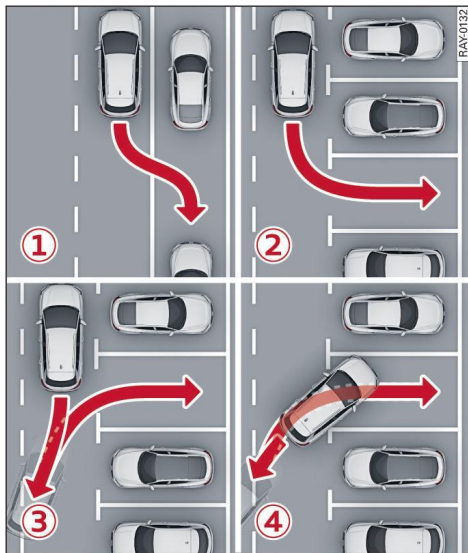


Fig. 122 Parking options overview

The following parking options may be available depending on the when the system is activated and the vehicle equipment:

- After a prior parking space search ① – ③  
⇒ page 152, *Parking space search*.
- After trying to park yourself, if you have driven past a parking space yourself ④. The front of the vehicle should already be far enough into the parking space so that the sensors can measure the space.

### Parking options

- ① Backing into parallel parking spaces
- ② Backing into perpendicular parking spaces
- ③ Driving forward into perpendicular parking spaces that you have already driven past
- ④ Driving forward into perpendicular parking spaces

### Options for exiting parking spaces

- ① Exiting parallel parking spaces

### Parking space search

Applies to: vehicles with park assist

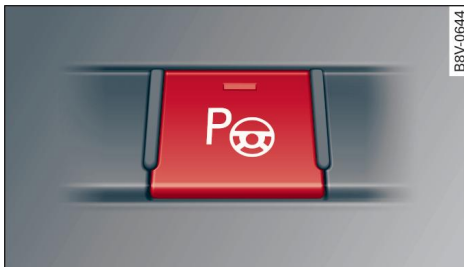


Fig. 123 Center console: park assist button



Fig. 124 Center display: activated parking space search

- ① Parking options display
- ② Arrows and symbols indicate the necessary actions, such as continuing to drive straight or applying the brakes
- ③ Parking space detected and selected by the system

### Activating the parking space search

- To activate the parking space search, press the **P** button in the center console ⇒ fig. 123, or
- To activate the parking space search when the parking aid is activated, press **P** in the center display.

The display for the parking space search appears in the center display ⇒ fig. 124.

### Searching for parking spaces

- Drive forward to the row of parking spaces at a low speed. For the best parking results, the vehicle should be approximately 3 feet (1 m) from the row of parking spaces.
- The parking space search is first done on the side of your lane. To switch the side to park on, turn on the turn signal for the other side or ►

press that side next to the vehicle in the center display.

## Selecting the parking space

If the system finds a parking space that could be suitable for the vehicle length and width, it will be displayed. The system automatically suggests a parking option ①.

If the parking space allows different parking options, they can be selected manually. Press one of the suggested parking options ① in the center display.

## Starting the parking process

To reach the right starting position, follow the optical instructions in the center display ②. Once the vehicle has reached the correct position, a **P** will appear above the selected parking space ③.

- Keep the vehicle as parallel as possible to the parked vehicles or to the side of the road.
- Make sure that the parking space is suitable for your vehicle ④.
- Start the assisted parking process ⇒ *page 154*.

## Maneuvering area

The vehicle can go off course during the parking process ⇒ ⚠. If there are obstacles within the maneuvering area that block or endanger the parking process, for example on the opposite side of the street, a message may appear. You may need to drive farther forward and stay closer to the row of parking spaces.



### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- The driver is always responsible when entering or exiting a parking space and during similar maneuvers.
- Sensors and cameras have spots in which the surrounding area cannot be detected. Objects, animals, and people may only be detected with limitations or may not be detected at all. Always monitor the traffic situation and the vehicle's surroundings directly and do not become distracted.



### Note

- Parking spaces classified as suitable by the system may have been detected incorrectly. The driver must decide if the parking space displayed is suitable for the vehicle.
- Certain objects (such as trees and posts) or types of ground (such as gravel, snow, and ice) in the area of the parking space may result in the vehicle not being positioned as it normally would be at the end of the parking process. This increases the risk of collisions.
- The parking assist systems may not be used while towing a trailer or when using rear carrier systems.



### Tips

- If you did not drive past a suitable parking space too quickly, the system can also be activated afterwards by pressing **P@** in the center display.
- The Electronic Stabilization Control (ESC) must not be turned off during the parking process. If the ESC intervenes, the parking process will be canceled.
- You can also drive into a perpendicular parking space yourself and then activate the system. If this is the case, the front of the vehicle should already be in the space ④ ⇒ *page 152, fig. 122* so that the sensors can measure the space.
- The system is not available when certain assist systems are turned on.
- If there are suitable parking spaces on both sides of the street, for example on a one-way street, you can change the side where the system is searching for parking spaces by activating the turn signal for the other side or by pressing on that side in the center display.
- The parking systems do not support assisted parking on steep inclines or on tight curves.



# Park assist

### General information

Applies to: vehicles with park assist

The park assist helps you when parking and exiting parking spaces after the parking space search. The park assist takes over the steering of the vehicle while you accelerate, brake, and monitor the vehicle's surroundings. Park assist can be interrupted at any time.

#### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇨ *page 116* to ⇨ *page 119*.
- The driver is always responsible when entering or exiting a parking space and during similar maneuvers.
- Do not use this function if the vehicle cannot move freely, for example when on a vehicle jack.
- Sensors and cameras have spots in which the surrounding area cannot be detected. Objects, animals, and people may only be detected with limitations or may not be detected at all. Always monitor the traffic situation and the vehicle's surroundings directly and do not become distracted.

#### Note

- Do not use the park assist systems when transporting cargo that extends out of the vehicle, when snow chains are mounted, or when the parking space is on a hill or incline.
- Park assist guides the vehicle either away from curbs or onto them if other vehicles are parked on the curb. Make sure that your vehicle's tires and rims are not damaged. Resume control of the vehicle in time or stop the process of parking or exiting the parking space.


#### Tips


Follow the legal regulations in the country where you are located when using Park assist.

### Parking with the park assists

Applies to: vehicles with park assist

Requirement: a suitable parking space must be found and selected ⇨ *page 152*. The vehicle must initially be stationary.

In the center display, arrows and symbols on the vehicle roof  ⇨ *page 152*, *fig. 124* indicate what action is needed, such as applying the brakes or changing the direction. Park assist automatically steers the vehicle into the parking space while the driver presses the pedals.

- ▶ After stopping the vehicle briefly, make sure the actual direction the vehicle is traveling matches the direction indicated by the park assist.
- ▶ Remove your hands from the steering wheel.
- ▶ Pay attention to the path of the vehicle. If the traffic situation permits, accelerate carefully ⇨ . The maximum parking speed is approximately 4 mph (7 km/h).
- ▶ Follow the visual instructions in the center display and the warning tones until the parking process has ended.

#### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇨ *page 116* to ⇨ *page 119*.
- Park assist is an assist system. The driver is still responsible for monitoring the vehicle's surroundings and preventing collisions when using the system.
- When using park assist to drive into or out of a parking space, the steering wheel turns quickly on its own. Reaching into the steering wheel spokes while this is happening can result in injury.

#### Tips


You can also cancel the driving direction set by the system by shifting between a forward gear and reverse gear. Based on the position of the vehicle, the system then calculates the additional steering and driving directions for maneuvering.





## Exiting parking spaces with park assist

Applies to: vehicles with park assist

If you parked the vehicle in a parallel parking space, park assist can help you drive out of it.

In the center display, arrows and symbols on the vehicle roof  ⇒ *page 152, fig. 124* indicate what action is needed, such as applying the brakes or changing the direction. Park assist automatically steers the vehicle out of the parking space while the driver presses the pedals.

- ▶ Start the engine.
- ▶ Press the **P** button in the center console ⇒ *page 152, fig. 123*.
- ▶ Wait until a message appears in the center display that specifies the direction of travel required to exit the parking space.
- ▶ Activate the turn signal on the desired side or press that side next to the vehicle in the center display.
- ▶ Make sure the actual direction the vehicle is traveling matches the direction indicated by the park assist.
- ▶ Remove your hands from the steering wheel.
- ▶ Pay attention to the path of the vehicle. If the traffic situation permits, accelerate carefully ⇒ . The maximum speed for exiting a parking space is 3 mph (5 km/h).
- ▶ Follow the visual instructions in the center display and the warning tones until the vehicle has finished exiting the parking space.
- ▶ The process of exiting the parking space has ended if additional corrective movements are no longer necessary and the specified steering wheel angle is sufficient to drive out of the parking space. Actively take over steering immediately ⇒ .



### WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.
- Park assist is an assist system. The driver is still responsible for monitoring the vehicle's surroundings and preventing collisions when using the system.

- When using park assist to drive into or out of a parking space, the steering wheel turns quickly on its own. Reaching into the steering wheel spokes while this is happening can result in injury.



### Note

Resume steering immediately after the last corrective movement and the takeover prompt, so that the specified steering wheel angle is not recentered.

## Interrupting the park assist

Applies to: vehicles with park assist

Park assist will be canceled automatically in the following scenarios:

- You turn off the system.
- You start steering.
- The speed is too high.
- The time limit is exceeded.
- An obstacle is detected.
- ESC intervenes.

Resume control of the vehicle, end the park assist manually, or:

- You can resume the parking process in some situations. Press the **P** button in the center console.
- To continue exiting the parking space, turn the engine off and on. Press the **P** button in the center console.






### WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 116* to ⇒ *page 119*.

## Messages

Applies to: vehicles with park assist

If the ,  or  indicator light turns on, the park assist is not available or was interrupted.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the ▶

sensors ⇒ *page 118* and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

## Phone

### Introduction

Applies to: vehicles with phone

You can operate various phone functions easily through the MMI in your vehicle.

Depending on the country and the vehicle equipment, the following options may be available:

- Connecting a mobile phone with Bluetooth
- Using two phones
- Using the Audi phone box




#### WARNING

- Medical experts warn that mobile devices can interfere with the function of pacemakers. Always maintain a minimum distance of about 7.9 inches (20 cm) between the mobile device antennas and the pacemaker.
- Do not carry the mobile device in a pocket directly over the pacemaker when the phone is turned on.
- Turn off the mobile device immediately if you suspect it may be interfering with the pacemaker.
- Do not use the voice recognition system\* ⇨ *page 27* in emergencies because your voice may change in stressful situations. The system may take longer to dial the number or may not be able to dial it at all. Dial the emergency number manually.
- Turn off your mobile device in areas where there is a risk of an explosion. These locations are not always clearly marked. This may include gas stations, fuel and chemical storage facilities or transport vehicles, or locations where fuel vapors (such as propane or gasoline vapor in vehicles or buildings), chemicals or large quantities of dust particles (such as flour, sawdust or metal) may be present in the air. This also applies to all other locations where you would normally turn off the vehicle drive system.
- The demands of traffic require full attention of all road users. Always read the chapter ⇨ *page 21, Information about traffic safety.*



#### Note

Read the information about Audi connect, especially regarding connectivity costs ⇨  in *General information on page 169.*



#### Tips

- The Bluetooth connection range is limited to inside the vehicle.
- A selection of supported Bluetooth devices can be found in the database for tested mobile devices at [www.audi.com/bluetooth](http://www.audi.com/bluetooth).

## Setup

### Connecting a mobile phone using Bluetooth

Applies to: vehicles with phone

Requirement: the vehicle must be stationary and the ignition must be turned on. The Bluetooth settings must be open on your mobile device during the connection setup. The mobile device to be connected must not be actively connected to any other Bluetooth device. The MMI must only be connected to one mobile device.

- ▶ Enable the Bluetooth function and visibility on the MMI ⇨ *page 211* and the mobile phone.
- ▶ **Applies to: MMI:** Select on the home screen: **PHONE**.
- ▶ Follow the system instructions. The available Bluetooth devices will be displayed after several seconds.
- ▶ Press on the desired mobile device in the list of displayed Bluetooth devices.
- ▶ To update the list, press ↻.

A PIN for a secure Bluetooth connection will be generated.

- ▶ Confirm the PIN on your mobile device.
- ▶ Follow the system instructions.
- ▶ Pay attention to any other system prompts on the MMI and on your mobile phone.

#### After connecting successfully

The mobile phone contacts are automatically loaded in the MMI. This process can take several minutes, depending on the number of contacts. ▶

Depending on your mobile phone and the connection type, you can use the following functions:

### Using the hands-free system

Requirement: your mobile phone must be connected to the MMI via a Bluetooth Hands Free Profile (Bluetooth HFP).

You can use the hands-free system. You can make calls using the antenna on your mobile device.

### Sending and receiving messages

See ⇒ *page 166*.

#### Tips



- Pay attention to any system prompts displayed on your mobile device or the MMI, for example if the system should connect automatically in the future. Depending on the mobile device, you may need to download contacts and confirm access to your messages separately.
- You can also search for the MMI on your mobile device using the Bluetooth device search.
- You only have to pair your device one time. Bluetooth devices that are already paired automatically connect to the MMI when the Bluetooth function is turned on, when they are within range, and when the ignition is turned on. The last connected mobile device is given first priority.
- You can manage additional settings for connected mobile devices in the Connected devices menu ⇒ *page 212*.
- When leaving the vehicle, the Bluetooth connection to the mobile device will automatically disconnect. Depending on your mobile device, phone calls in progress may be automatically redirected from the MMI to your mobile device so that you can continue the call on your phone.

can be reached in your vehicle through both mobile phones.

Applies to: mobile devices with Bluetooth Message Access Profile (MAP): You can send and receive messages with both mobile devices  
⇒ *page 166*.

### Connecting another mobile device

Requirement: a mobile device must be connected to the MMI. The vehicle must be stationary and the ignition must be turned on. The Bluetooth settings must be open on your mobile device during the connection setup. The mobile device to be connected must not be actively connected to any other Bluetooth device.

- ▶ Enable the Bluetooth function and visibility on the MMI ⇒ *page 211* and the mobile phone.
- ▶ Applies to: MMI: Select on the home screen: **PHONE** > , or
- ▶ Applies to: MMI: Select on the home screen: **SETTINGS** > **Connected devices** > **Telephone 1** or **Telephone 2** > **New connection**.
- ▶ Follow the system instructions. The available Bluetooth devices will be displayed after several seconds.
- ▶ Press on the desired mobile device in the list of displayed Bluetooth devices.
- ▶ To update the list, press .

A PIN for a secure Bluetooth connection will be generated.


- ▶ Confirm the PIN on your mobile device.
- ▶ Follow the system instructions.
- ▶ Pay attention to any other system prompts on the MMI and on your mobile phone.

### After connecting successfully

See ⇒ *page 157*, *After connecting successfully*.

### Switching between two mobile devices

Requirement: phone 1 and phone 2 must be connected to the MMI.

- ▶ Applies to: MMI: Select on the home screen: **PHONE** > . ▶

### Using two phones

Applies to: vehicles with phone

You can connect two mobile phones to the MMI at the same time using the Bluetooth HFP, for example a business phone and a private phone. You

**Note**

Read the information about Audi connect, especially regarding connectivity costs ➔ **Note** in *General information* on page 169.


**Disconnecting a mobile device**

Applies to: vehicles with phone

- To disconnect a Bluetooth device from the MMI, use the Connected devices menu ➔ *page 212*.

**Using the Audi phone box****General information**

Applies to: vehicles with Audi phone box/Audi phone box light

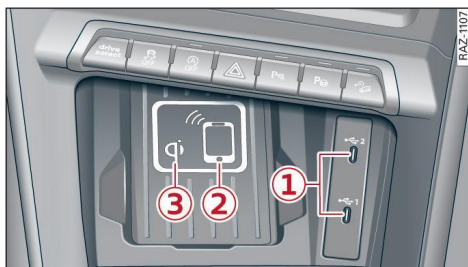

**Fig. 125** Front center console: Audi phone box with connections

Depending on vehicle equipment, you may be able to use the following functions with the Audi phone box:

- Make phone calls using the vehicle's exterior antenna
- Charge a mobile device using the USB input
- Charge a mobile device wirelessly
- Reminder signal

**Limitations**

In some situations, the functions of the Audi phone box may be limited or temporarily unavailable. For example, this may happen if:

- There is one more than mobile device in the Audi phone box
- The mobile device is inside a bag or a protective case
- There are objects between the Audi phone box and the mobile device

- The mobile device is not positioned in the center of the Audi phone box

**WARNING**

- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Store objects securely while driving.
- Do not allow the visual or audio signals from a mobile device to distract you from traffic, because this increases the risk of an accident. Operate the mobile device only via the MMI.

**Note**

Applicable to U.S.A.

Operation of the Audi phone box is subject to the following requirements of the Federal Communications Commission:

- This is a CONSUMER device.
- BEFORE USE, you MUST REGISTER THIS DEVICE with your wireless provider and have your provider's consent. Most wireless providers consent to the use of signal boosters. Some providers may not consent to the use of this device on their network. If you are unsure, contact your service provider.
- You MUST operate this device with approved antennas and cables as specified by the manufacturer. Antennas MUST be installed at least 20 cm (8 inches) from any person.
- You MUST cease operating this device immediately if requested by the FCC or a licensed wireless service provider.
- WARNING: E911 location information may not be provided or may be inaccurate for calls served by using this device.

**Note**

Applicable to Canada

**In Canada, operation of a Zone Enhancer, such as an Audi phone box, is subject to the following requirements of the Innovation, Science and Economic Development Canada (ISED):**

- This is a CONSUMER device.

- BEFORE USE, you **MUST** meet all requirements set out in **CPC-2-1-05**. At the time of printing this user manual, the CPC-2-1-05 client procedures circular of ISED Canada was available at the following web page: <http://www.ic.gc.ca/eic/site/smt-gst.nsf/eng/sf08942.html>.
- You **MUST** operate this device with approved antennas and cables as specified by the manufacturer. Antennas **MUST NOT** be installed within 20 cm of any person.
- You **MUST** cease operating this device immediately if requested by ISED or a licensed wireless service provider.
- **WARNING:** E911 location information may not be provided or may be inaccurate for calls served by using this device.

## Tips

 
 
- You can purchase a USB adapter from an authorized Audi dealer or authorized Audi Service Facility, or at specialty stores.
- Audi recommends using Audi Genuine Accessories. Audi has verified their reliability, safety, and suitability.

## Charging a mobile device wirelessly

Applies to: vehicles with Audi phone box/Audi phone box light

You can charge your mobile device wirelessly using the Audi phone box.

Requirement: the ignition must be turned on. Your mobile device must meet the Qi standard.

- ▶ Make sure that the wireless charging function is turned on:
- ▶ Applies to: MMI: Select on the home screen: **SETTINGS > General > Reminder signal and mobile device charging**.
- ▶ Turn on the **Mobile device wireless charging** function.
- ▶ To charge your mobile device wirelessly, lay it on the  symbol  ⇒ *page 159, fig. 125* in the center of the Audi phone box with the display facing up.

## WARNING

- The mobile device may become hot during wireless charging. Pay attention to the temperature of your mobile device and be careful when removing it from the Audi phone box.
- An alternating magnetic field is used for wireless charging. Maintain a minimum distance of approximately 2.4 inches (6 cm) to the Audi phone box charging plate. The thresholds for prolonged exposure at this distance comply with ICNIRP1998. Therefore, interactions such as irritation of sensory organs, malfunctions of active medical implants (such as pacemakers, infusion pumps, or neurostimulators) or effects on passive medical implants (such as prosthetic limbs) is highly unlikely. If you have a medical implant, seek medical advice from a specialist if you have any questions. You can

## Tips


The system complies with United States FCC regulations and ISED regulations ⇒ *page 283*.

## Making phone calls using the exterior antenna

Applies to: vehicles with Audi phone box

With the Audi phone box, you can make calls using the exterior antenna on the vehicle. Using the exterior antenna helps when there is a low signal and also provides better reception quality.

Requirement: the ignition must be turned on.


- ▶ To make phone calls through the vehicle's exterior antenna using your mobile device, lay your device on the phone symbol  ⇒ *page 159, fig. 125* in the center of the Audi phone box with the display facing up.

## Charging the battery using the USB input


Applies to: vehicles with Audi phone box/Audi phone box light

You can charge your mobile device using a special USB adapter with the Audi phone box  
⇒ *page 198*.

Requirement: the ignition must be turned on.

- ▶ To charge your mobile device via USB, connect it to the USB input  ⇒ *page 159, fig. 125*.

also turn the function for wireless charging in the Audi phone box on or off. You can still charge your mobile device using a cable connection.

 **Tips**

- The maximum charging capacity is 5 W.
- The charging time and temperature will vary depending on the mobile device being used.

**Mobile device reminder signal**

Applies to: vehicles with Audi phone box/Audi phone box light

When the device reminder signal is turned on, you will be notified that your mobile device is still in the Audi phone box when you leave the vehicle.

Requirement: your mobile device must be located in the Audi phone box (if Qi-capable) or connected to the USB port with charging function using a USB adapter, and the smartphone interface must be active or your iPhone must be connected to the MMI via Bluetooth and charging using a USB adapter connected to the USB port with charging function.

- Applies to: MMI: Select on the home screen: **SETTINGS > General > Reminder signal and mobile device charging.**

The following settings may be available, depending on vehicle equipment:

- **Signal tone**
- **Off**

**Spoken cue**

This setting is turned on at the factory.

**Mobile device notes: reminder, charge level**

When this function is turned on, the charge status of your mobile device is displayed. You will also be reminded not to forget your mobile device when leaving the vehicle.

Using the phone

**Accessing phone functions**

Applies to: vehicles with phone

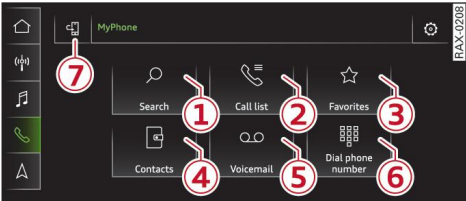


Fig. 126 Center display: selection menu

Requirement: a mobile device must be connected to the MMI.

- Applies to: MMI: Select on the home screen: **PHONE.**

Possible phone functions:

①	Search	
②	Call list	161
③	Favorites	162
④	Contacts	162
⑤	Voicemail	163
⑥	Dial phone number	163
⑦	Switch telephones	165

**Managing call lists**

Applies to: vehicles with phone




Fig. 127 Center display: call list

**Opening call lists using the MMI**

- Applies to: MMI: Select on the home screen: **PHONE > Call list.**

**Opening call lists using the multifunction steering wheel**

- Select in the instrument cluster: Phone tab >  button > **Call list.**

Possible call list symbols:

- ① Missed calls
- ② Dialed numbers
- ③ Accepted calls
- ④ Editing a phone number
- ⑤ Display business card . . . . . 163
- ⑥ Number of interactions with a contact

If more than one interaction with a contact or number has taken place, the last one is displayed in the form of an arrow ①, ②, or ③.

Call list options

Press and hold a contact or a phone number in the list until the **Options** menu appears.

Depending on the vehicle equipment and your mobile phone, the following options may be available:

- **Store as favorite** ⇨ page 162.
- **Send a text** ⇨ page 166.
- **Send e-mail** ⇨ page 166.

Edit number

Edit a phone number before dialing it.

Show history

Requirement: you must have had more than one interaction with a contact.

All interactions with a contact or a number are displayed.

Managing favorites

Applies to: vehicles with phone

You can store contacts for all connected mobile devices as shortcuts in the favorites list.

Accessing favorites


- Applies to: MMI: Select on the home screen: **PHONE > Favorites**.

Storing favorites

- Press ☆ ⇨ page 163 in the business card, or
- Press **Store as favorite** in the options ⇨ page 161.

Deleting favorites

- Press ★ ⇨ page 163 in the business card, or
- Select: **Favorites** > ✎ > *one or multiple favorites* or **Select all** > **Delete** > **(Done)**.

 **Tips**

The favorites can only be edited via the MMI.

Managing the directory

Applies to: vehicles with phone

You can manage up to four directories in the MMI.

Requirement: a mobile device must be connected to the MMI.

Opening the directory

- Applies to: MMI: Select on the home screen: **PHONE > Contacts**.

The contacts will be displayed. You can change the sort order ⇨ page 165, **Sort order**.

Deleting imported contacts

Requirement: you must have imported at least one contact ⇨ page 165.


- Select: **Contacts** > ✎ > *one or more text messages* > **Delete** > **(Done)**. The imported contacts are deleted.

Directory options

- Press and hold a contact in the directory until the **Options** menu appears.

Depending on the vehicle equipment and your mobile phone, the following options may be available:

- **Store as favorite** ⇨ page 162.
- **Send contact**: you can select **Text message** or **E-mail** ⇨ page 166.
- **Send a text** ⇨ page 166.
- **Send e-mail** ⇨ page 166.

 **Tips**

– Pay attention to any synchronization prompts on your mobile device when downloading contacts.





- The contacts from the mobile device may not be transferred in alphabetical order. If there are too many entries, contacts with different first letters may be missing in the MMI.
- Only the contacts from the active connected mobile device are displayed.
- The contacts in the local MMI memory are always visible and can be accessed by other persons.
- After turning off the ignition and exiting the vehicle, the mobile device directory will be updated when the MMI is started again if the mobile device is within range and the Bluetooth function is turned on in the mobile device and the MMI.
- Only the contacts in the local MMI memory can be deleted.




### Opening business cards

Applies to: vehicles with phone

The business card shows you details about a contact.

- ▶ To open a business card, press on a contact in the directory, or
- ▶ Press  in the call list  ⇒ *page 161, fig. 127.*

Possible options in the business card:

- ▶ **Call:** press on a phone number.
- ▶ **Storing a favorite:** press .
- ▶ **Deleting a favorite:** press .
- ▶ **Sending a text message:** press .
- ▶ **Starting navigation:** press on an address.
- ▶ **Sending an e-mail:** press on an e-mail address.
- ▶ **Send contact:** you can select **Text message** or **E-mail** ⇒ *page 166.*

### Listening to voicemail

Applies to: vehicles with phone

#### Calling voicemail

- ▶ Applies to: MMI: Select on the home screen: **PHONE > Voicemail.**

#### Entering the voicemail number

Requirement: there must be no voicemail number stored.

- ▶ Enter the desired number.
- ▶ Press **OK**.

#### Dialing the voicemail number

Requirement: a voicemail number must be stored.

- ▶ Press **Voicemail**. The call begins immediately.



#### Tips

This service must be set up and activated by the mobile phone service provider.

### Dialing a phone number


Applies to: vehicles with phone

Depending on the vehicle equipment, you may have the following options for dialing a phone number:

- Using text input in the MMI ⇒ *page 25.*
- Using voice operation ⇒ *page 27.*

### Call options

Applies to: vehicles with phone

- ▶ To accept or end a call, press the  button on the multifunction steering wheel.

Depending on your mobile device, the following options may be available in the MMI when there is an incoming call:

- **Answer**
- **Decline**
- **Message**

If you exit the vehicle during a phone call, the Bluetooth connection will be disconnected. Depending on your mobile device, phone calls in progress may be automatically transferred from the MMI to your mobile device.



#### Tips

The radio or media playback is muted during a phone call.

### During a phone call

Applies to: vehicles with phone

Depending on your mobile device and the type of connection, the following options may be available during a call:

- **End call**
- **Mute**

### Sending a tone sequence

Press **Numbers**. You can enter tone sequences (DTMF) and send them to the other party on the call.

### Hold

Requirement: **Conference** ⇨ *page 165* must be turned on.

Puts the current call on hold. To resume the call, press **Resume**.

### Answering an incoming call

One of these options will be available, depending on your mobile phone service provider and the selected **Conference** setting ⇨ *page 165*:

- **Answer**: the current phone call will be put on hold. The incoming call will be answered.
- **Replace**: the active call will be replaced with the incoming call.

### Declining an incoming call

If you select **Decline**, the incoming call will be declined.

### Conference

Requirement: **Conference** ⇨ *page 165* must be turned on. Two phone calls must be in progress.

Depending on your mobile phone service provider, you can add a call on hold and up to five active callers to a conference call.

### Swapping a call

Requirement: **Conference** ⇨ *page 165* must be turned on. Two phone calls must be in progress.

You can alternate between two phone calls.

### Additional call options

Press **More**.

Depending on the mobile device being used and the type of connection, the following options may be available:

### Transfer call to mobile device

Transfer the current call to your mobile device or Bluetooth headset\*.

### Switch to hands-free

Transfer the current call from your mobile device to the MMI.

### Add call

You can start a new call. The current call will be put on hold.

### Remove conference member

You can remove conference call members individually when a conference call is active.

### Microph. input

You can adjust the input level of the microphone using the slider.

### Tips

The call waiting function must be activated in your mobile device to be alerted about an incoming call during an active call.

### Making an emergency call

Applies to: vehicles with phone

Requirement: a mobile device must be connected to the MMI.

- Applies to: MMI: Select on the home screen: **PHONE > Dial phone number > the local emergency call number (for example, 911) > Dial**.

### WARNING

- Because your phone works with radio signals, a connection cannot be guaranteed under all circumstances. Do not rely on only your phone when it comes to essential communication (such as during a medical emergency).
- Always follow the instructions given by the emergency personnel during an emergency

call and only end the call when they instruct you to do so.

## Settings

### Phone settings

Applies to: vehicles with phone

- Applies to: MMI: Select on the home screen:  
**PHONE > ⚙️**.

The following options may be possible, depending on your mobile device:

- **Decline with text message\***
- **Edit voicemail number**

### Switching between two mobile devices

Requirement: phone 1 and phone 2 must be connected to the MMI.

**Switch telephones:** the device name of the available mobile device is displayed. You can switch the phone by pressing the button.

### Conference

Depending on your mobile phone service provider, you can use the following functions when the conference function is turned on:

- Accept another call while on a call. The first phone call is put on hold.
- Put an existing phone call on hold and start another call.
- Merge two phone calls into one conference call.

### Ringtone and volume settings

- **Ringtone and message volume:** you can adjust the volume using the slider.
- **Ringtone:** select a ringtone from the list.
- **Microphone input level:** you can adjust the input level of the microphone using the slider.

### Data module serial number (IMEI)

Applies to: vehicles with data module

The serial number (IMEI) will be displayed.

### Contact settings

Applies to: vehicles with phone

- Applies to: MMI: Select on the home screen:  
**PHONE > Contacts > ⚙️**.

### Switching between two mobile devices

Requirement: phone 1 and phone 2 must be connected to the MMI.

**Switch telephones:** the device name of the available mobile device is displayed. You can switch the phone by pressing the button.

The directory for the selected phone will be displayed.

### Hide grayed-out contacts

When this function is turned on, contacts that have no phone numbers stored for them will be hidden.

### Sort order

You can sort the contacts by **Last name** or **First name**.

### Download contacts

Requirement: a mobile device must be connected to the MMI.

To update the contacts in the MMI, you can manually download your mobile device contacts. Depending on the mobile device, you may need to disconnect and reconnect the Bluetooth connection to update the contacts.

### Importing and exporting contacts

Requirement: a USB storage device is connected to a USB port with charging function ⇒ *page 198*.

Contacts in vCard format (.vcf) can be imported or exported from the MMI.

- **Importing contacts from a storage device:** Requirement: the USB storage device must contain contacts in the vCard format. They must not be located in sub-folders. Select: **> Search for import data > USB device 1/USB device 2 > desired contacts** or **Select all > Start import**.
- **Exporting contacts to a storage medium:** Requirement: you must have a contact imported. Select: **Export contacts > Find exporting** ►

**source > USB device 1/USB device 2 > desired contacts or Select all > Start export.**

## Tips


- The imported contacts are stored in the local MMI memory.
- There should be no other files or folders on the storage medium containing the contacts to be imported.
- Contacts that were downloaded from a mobile device cannot be exported.
- Apple devices and MTP devices (such as smartphones) are not recognized as USB storage devices.

# Messages

## Text messages

Applies to: vehicles with phone

Requirement: your mobile device must be connected to the MMI via Bluetooth Message Access Profile (Bluetooth MAP).

- Applies to: MMI: Select on the home screen: **MESSAGES >  > Text message (phone 1)/Text message (phone 2).**

The following functions are available:

- **New text message\***
- **Inbox**
- **Sent**
- **Outbox\***
- **Drafts\***
- **Deleted**

### User defined\*

If necessary, user-defined folders will be copied to your mobile device.

### Message options

Press on a text message.

Depending on the country, the following options may be available:

- **Read out**
- **Reply**
- **Forward**
- **More**

To switch between messages, press **<** or **>**.


Press **More**. Depending on your mobile device and the selected mailbox, additional options may be available:

- **Call**
- **Forward**
- **Navigate**
- **Extract numbers**
- **Send again**

### Settings

Press .

### New text message notification

When the function is turned on, an envelope  in the MMI status bar will indicate when there is a new text message.


## Tips

Only new received messages may be displayed depending on your mobile device.

## E-mail

Applies to: vehicles with phone and e-mail

Requirement: your mobile device must be connected to the MMI via Bluetooth Message Access Profile (Bluetooth MAP).

- Applies to: MMI: Select on the home screen: **MESSAGES >  > E-mail (phone 1)/E-mail (phone 2).**

The following functions are available:

- **New e-mail**
- **Inbox**
- **Sent**
- **Outbox**
- **Drafts\***
- **Deleted\***

### User defined\*

If necessary, user-defined folders will be copied to your mobile device.

### Message options

Press on an e-mail.

Depending on the country, the following options may be available:

- Read out
- Reply
- Reply to all
- Forward
- More

To switch between messages, press < or >.

Press **More**. Depending on your mobile device and the selected mailbox, additional options may be available:


- Call
- Forward
- Extract e-mail
- Navigate
- Extract numbers
- Show all recipients

– Send again

Settings


Press .

New e-mail notification

When the function is turned on, an envelope  in the MMI status bar will indicate when there is a new e-mail.



Note

Read the information about Audi connect, especially regarding connectivity costs  in *General information on page 169*.



Tips

Only new received messages may be displayed depending on your mobile device.

Troubleshooting

Applies to: vehicles with phone

The information that follows lists some troubleshooting options. They depend on vehicle equipment.

Problem	Solution
<b>Pairing</b> the mobile device to the MMI failed.	Make sure the requirements for connecting a mobile phone have been met $\Rightarrow$ <i>page 157</i> , or Make sure you did not accidentally decline the PIN for establishing a connection on your mobile phone. If necessary, repeat the pairing process $\Rightarrow$ <i>page 157</i> .
After pairing, <b>not all contacts or no contacts</b> have been loaded into the MMI.	Avoid using special characters in names. Avoid using contact groups on your mobile device. Check for prompts on your mobile device when connecting with Bluetooth.
Certain <b>phone functions</b> are grayed out or not available.	The phone functions depend on the mobile phone service provider and the mobile device you are using.
Some <b>phone functions</b> may be grayed out or unavailable even though the mobile phone supports them.	Check if the Bluetooth settings on your mobile phone are restricted or individual Bluetooth settings are deactivated. This may be the case with business mobile phones.

Problem	Solution
The <b>MESSAGES</b> menu is not available.	Make sure your mobile device has an option to show messages option and that it is enabled.
Wireless mobile phone charging is not working or is interrupted.	Check if wireless charging with the Audi phone box is turned on. Check if your mobile device is Qi-capable. Make sure your mobile device is positioned correctly in the Audi phone box ⇨ <i>page 159</i> and that there are no objects located between the phone box and the phone.

## Audi connect

### General information

Applies to: vehicles with Audi connect

Depending on the country and the vehicle equipment, the following functions may be available:

- Audi connect Infotainment
- Audi connect vehicle control



#### WARNING

- To reduce the risk of an accident, only use Audi connect services and the Wi-Fi hotspot if the traffic situation permits. Read and follow the guidelines provided in [⇒ page 21, Information about traffic safety](#).
- It is only safe to use tablets, laptops, mobile devices and other similar devices when the vehicle is stationary because, like all loose objects, they could be thrown around the inside of the vehicle in a crash and cause serious injuries. Store these types of devices securely while driving. Also read the warnings in the chapter [⇒ page 70](#).



#### Note

- Applies to: **embedded SIM card usage:** The connection costs for Audi connect Infotainment services are included in the price of Audi connect Infotainment during the subscription period with some exceptions. Please note that there may be additional charges when using some services. For example, this applies to online radio/podcasts, additional online data, or for Internet connections and services that use the Wi-Fi hotspot. Depending on the country, data plans may need to be purchased for these Internet connections and services [⇒ page 173](#). For additional information, see [my.audi.com](http://my.audi.com).
- Applies to: **use of your own SIM card in the mobile phone via Wi-Fi:** If you use your own SIM card, all data connections for all Audi connect Infotainment services will run through your SIM card. This could result in additional costs, depending on your mobile phone service provider and especially when

using in other countries. A flat rate data plan is strongly recommended. You can obtain more information from your mobile phone service provider.

- In certain situations, the Wi-Fi hotspot data connection may be established as a replacement for the SIM card on your Wi-Fi device. This feature depends on the configuration of your Wi-Fi device and operating system. This could result in fees depending on your mobile phone service provider, especially if you are using this feature while abroad. A flat rate data plan is strongly recommended. For more information, contact your mobile phone service provider or refer to the owner's manual for your Wi-Fi device.
- You are responsible for all precautions taken for data protection, anti-virus protection, and protection against loss of data on mobile devices that are used, for example, to access the Internet through the Wi-Fi hotspot.
- In areas with poor GPS reception or outside the coverage range of the respective mobile phone service provider, some functions and/or services may not be available, it may not be possible to send or receive data, or functionality may be limited.



#### Tips

- The availability of services depends on the subscription.
- Audi merely provides access to third party services through the MMI and does not assume any responsibility for the content and availability of these services.
- Use of the most up-to-date mobile network standard is not available in every country. Contact an authorized Audi dealer or authorized Audi Service Facility or your mobile phone service provider for additional information.
- Availability, scope, providers, screen display, and costs of services may vary depending on the country, model, model year, end device and rates.

- All services/apps can be modified, activated/deactivated, renamed, and enhanced without further notification.
- Depending on the country and model there may be an app other than the “myAudi app” available for your vehicle. For additional information, see [my.audi.com](http://my.audi.com).

## Audi connect Infotainment


### Description

Applies to: vehicles with Audi connect Infotainment


With Audi connect Infotainment services, online information is transmitted directly to the vehicle.

An Internet connection is required to use Audi connect Infotainment. Depending on the country and vehicle equipment, the Internet connection can be established using an embedded SIM card (eSIM) or using your own SIM card in a mobile phone using Wi-Fi.

### WARNING

Always follow the information found in  in *General information on page 169*.

### Note


Always follow the information found in  in *General information on page 169*.

### Embedded SIM card

Applies to: vehicles with Audi connect Infotainment and an embedded SIM card

The data connection for Audi connect Infotainment services is made through an embedded SIM card (eSIM card) that is installed in the vehicle. You can use the Audi connect Infotainment services immediately.

### Note

Always follow the information found in  in *General information on page 169*.


### Using your own SIM card in a mobile phone via Wi-Fi

Applies to: vehicles with Audi connect Infotainment and Wi-Fi

Depending on the country and the vehicle equipment, the MMI can connect to your own SIM card in a mobile phone via a Wi-Fi connection and use it to establish an Internet connection

⇒ *page 170*.

### Note

Always follow the information found in  in *General information on page 169*.

## Connecting to Wi-Fi

Applies to: vehicles with Wi-Fi


The vehicle can use Wi-Fi to connect to a Wi-Fi hotspot.

Requirement: the ignition must be turned on.


- ▶ If necessary, turn on the “Wi-Fi hotspot (tethering)” function or the “personal hotspot” on your mobile device.
- ▶ Applies to: MMI: Select on the home screen: **SETTINGS > Connection settings > Wi-Fi**
- ▶ Turn on the Wi-Fi function.
- ▶ Press on the desired Wi-Fi hotspot from the list of available networks.
- ▶ Follow the system instructions.

The MMI has successfully connected to a Wi-Fi hotspot via Wi-Fi.

### WARNING

Always follow the information found in  in *General information on page 169*.

### Note

Always follow the information found in  in *General information on page 169*.

### Tips

The system complies with United States FCC regulations and ISSED regulations ⇒ *page 283*.



## Using a Wi-Fi hotspot

Applies to: vehicles with Wi-Fi hotspot

You can connect up to eight Wi-Fi devices (such as smartphones) with the MMI Wi-Fi hotspot. If the MMI is connected to the Internet ⇨ *page 170*, the connected Wi-Fi devices can also use the MMI's Internet connection.

Requirement: the ignition must be turned on. Depending on the country, a data packet may be available ⇨ *page 173*.

- ▶ Applies to: MMI: Select on the home screen: **SETTINGS > Connection settings > Wi-Fi hotspot** Turn on the Wi-Fi hotspot.
- ▶ Applies to: MMI: Select on the home screen: **SETTINGS > Connection settings > Wi-Fi hotspot** The access data for the Wi-Fi hotspot is displayed.
- ▶ Turn on the Wi-Fi function in your mobile device and connect it to the MMI Wi-Fi hotspot using the authentication data that is shown.
- ▶ Follow any additional system prompts on your Wi-Fi device if necessary.

Your device is successfully connected with the MMI's Wi-Fi hotspot.



### WARNING

Always follow the information found in ⇨ ⚠ in *General information on page 169*.



### Note

Always follow the information found in ⇨ ⓘ in *General information on page 169*.



### Tips

The system complies with United States FCC regulations and ISED regulations ⇨ *page 283*.

## Audi connect Infotainment services

### Configuration

Applies to: vehicles with Audi connect Infotainment

Some Audi connect Infotainment services must be configured through your personal myAudi ac-

count at [my.audi.com](http://my.audi.com) before using them for the first time.



### Tips

- A myAudi user must be logged in for some Audi connect Infotainment services.
- Some Audi connect Infotainment services must be activated at [my.audi.com](http://my.audi.com).
- Depending on the country, you may be able to use an Audi app or [my.audi.com](http://my.audi.com).
- For detailed information on configuration, visit [my.audi.com](http://my.audi.com).

### Services

Applies to: vehicles with Audi connect Infotainment

You can use the services that are available for your vehicle directly in the MMI. The scope of services depends on the country and equipment. There may be changes over the service life of the vehicle.



### WARNING

Always follow the information found in ⇨ ⚠ in *General information on page 169*.



### Note

Always follow the information found in ⇨ ⓘ in *General information on page 169*.

## Audi connect vehicle control services

### Services

Applies to: vehicles with Audi connect vehicle control


Using Audi connect vehicle control services, you can perform tasks such as viewing data about your vehicle or control vehicle functions remotely.

You can view and use services available for your vehicle at [my.audi.com](http://my.audi.com) or through the myAudi app.

Information about the services and the corresponding app was accurate at the time this manual was published. The scope of services depends ▶

on the country and equipment. There may be changes over the service life of the vehicle.

### **WARNING**

- Always follow the information found in  in *General information on page 169*.
- Driver messages, text messages, and illuminated warning and indicator lights in the vehicle always take priority over information from the Audi connect services. The information displayed by the Audi connect services should not cause you to take safety risks. This can result in the vehicle breaking down in traffic and to serious injuries or accidents.

 
### **Tips**

- Accessing specific data or controlling functions remotely depends on the charge level of the vehicle battery. Therefore, these functions only have limited availability after turning off the ignition.
- An eSIM card establishes the Internet connection for Audi connect vehicle control services. The costs for this are included in the price of Audi connect vehicle control services. The mobile phone network, for example, must be available to use these services.

## Setup

Applies to: vehicles with Audi connect vehicle control

Create a myAudi account by registering in the myAudi app or at my.audi.com, depending on your country.

- Set the key user  *page 32*.
- Install the myAudi app on your mobile device and log in with your access information.

### **Tips**

Some services require you to enter a 4-digit PIN that you set up during registration.

## Settings

### Wi-Fi

Applies to: vehicles with Wi-Fi

Requirement: the ignition must be turned on.


- **Applies to MMI:** Select on the home screen: **SETTINGS > Connection settings**.

Depending on the country and the vehicle equipment, the following functions may be available:


### Wi-Fi

The MMI Wi-Fi is active when this function is turned on. The MMI can be connected to a Wi-Fi hotspot.

### **WARNING**

Always follow the information found in  in *General information on page 169*.

### **Note**

Always follow the information found in  in *General information on page 169*.

### Wi-Fi hotspot

Applies to: vehicles with Wi-Fi hotspot

Requirement: the ignition must be turned on.

- **Applies to MMI:** Select on the home screen: **SETTINGS > Connection settings**.

Depending on the country and the vehicle equipment, the following functions may be available:

### Wi-Fi hotspot

When the function is turned on, the MMI's Wi-Fi hotspot is active and Wi-Fi devices can be connected to the hotspot.

### Wi-Fi hotspot settings

The Wi-Fi connection between the MMI and your Wi-Fi device is encrypted. You can change the following information if needed.


- **Access point (SSID):** name of the Wi-Fi hotspot.
- **Password:** an initial password was set at the factory in the MMI. Audi recommends changing ►

the initial password. Only use secure passwords that conform to the general guidelines for secure passwords. Follow the system instructions.

 
### Allow data connection through Wi-Fi

When the function is turned on, mobile devices can use the Internet connection through the Wi-Fi hotspot. Depending on the country, data packets may be required to do this.

#### WARNING

Always follow the information found in ⇨  in *General information on page 169*.

#### Note


Always follow the information found in ⇨  in *General information on page 169*.

#### Tips

The *name of the Wi-Fi hotspot* and the *Bluetooth name* are automatically compared when there are changes.

### Data plans<sup>1)</sup>

Applies to: vehicles with Audi connect

Data plans must be purchased in order to use certain services ⇨  in *General information on page 169*.


## Troubleshooting

Applies to: vehicles with Audi connect Infotainment


The information that follows lists some troubleshooting options. They depend on vehicle equipment. ►

You can purchase data plans at [my.audi.com](http://my.audi.com).

#### WARNING

Always follow the information found in ⇨  in *General information on page 169*.

#### Note

Always follow the information found in ⇨  in *General information on page 169*.

#### Tips

- Depending on the country, you may be able to use the myAudi app or [my.audi.com](http://my.audi.com).
- Depending on the country, there may be restrictions on the use of data plans (such as mobile phone service providers) when driving in other countries.
- If selling your vehicle, you should delete the vehicle from the customer portal for the mobile phone service provider to avoid being charged for additional purchases.

<sup>1)</sup> Not available in every market.

Problem	Solution
<b>Audi connect Infotainment services:</b> individual Audi connect Infotainment services are grayed out or not available.	Some Audi connect Infotainment services must be activated or configured through your personal myAudi account before using them for the first time. You can find detailed information online at <a href="http://my.audi.com">my.audi.com</a> .
<b>Wi-Fi hotspot:</b> it is not possible to connect through Wi-Fi.	Check if Wi-Fi hotspot is activated in the MMI ⇨ <i>page 172</i> . Delete all existing Wi-Fi connections on your mobile device and restart it.
<b>Wi-Fi hotspot:</b> Wi-Fi hotspot malfunction.	Remove metal objects in the storage compartment at the end of the rear center console.

## Emergency call

### Overview

Applies to: vehicles with emergency call function

An emergency call is a combination of data transmission and a phone call. Your vehicle uses data transmission to forward important information, such as the vehicle and position data, to an emergency call center.

Depending on the country and the vehicle equipment, the following functions may be available:

With the **emergency call**, you can call for help in dangerous situations as quickly as possible. Use this function when emergency help is needed ⇒ *page 175*.

– Audi connect emergency call (TPS emergency call). This eCall system uses third party emergency call centers, and if necessary, public emergency call centers.

With **online roadside assistance**, you can request assistance if there is a breakdown or a minor accident ⇒ *page 176*.



#### WARNING

- In areas with poor GPS reception or outside the coverage range of the respective mobile phone service provider, some functions and/or services may not be available, it may not be possible to send or receive data, or functionality may be limited.
- During active emergency calls, all sound sources, such as audible warning signals for the parking aid, can be muted.



#### Tips

To see which data can be transmitted, visit your Audi country or sales region website at [www.audi.com](http://www.audi.com).

for the installed SIM card is functioning and available for use.

TPS emergency calls are only available within the mobile network coverage area of the mobile phone service provider selected by Audi.



#### Tips

- The emergency call function cannot be deactivated in the Infotainment system settings.
- The availability of the TPS emergency call is limited to certain times.
- The costs for call and data connections for TPS emergency calls is included in the price of the services.

### Functions

Applies to: vehicles with emergency call function

A TPS emergency call can be made manually or automatically ⇒ *page 175*.

In the event that an automatic TPS emergency call is made, emergency responders as well as the local emergency call center or police station may receive the necessary information in order for help to arrive as quickly as possible.

### Making an emergency call

Applies to: vehicles with emergency call function

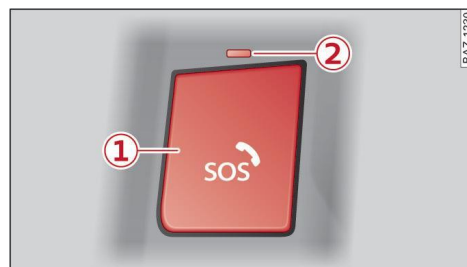


Fig. 128 Front headliner: cover for the emergency call button

## Emergency call

### Operation

Applies to: vehicles with emergency call function

The services are provided through a SIM card installed in the vehicle. Services are provided assuming that the mobile phone network required

### Manual emergency call

Requirement: the ignition must be turned on.

- Tap the cover ① to open it.

- ▶ Press and hold the emergency call button until the LED ② blinks. The emergency call will be made.
- ▶ If the emergency call button is pressed by mistake, then press it again immediately and hold it until the LED stays on. The emergency call will be canceled.

### Automatic emergency call

The vehicle electrical system initiates an automatic emergency call under certain circumstances, for example if an airbag deploys. The LED in the emergency call button ② will blink. The emergency call will be made. The emergency call cannot be canceled.

### LED status

- **Green** – The emergency call function is available.
- **Red** – There is a malfunction in the emergency call function. Contact an authorized Audi dealer or authorized Audi Service Facility. Note the messages about the availability of the emergency function ⇒ *page 176*.
- **Off** – The emergency call function is not available, perhaps because no network is available.

### Warnings

If there is a critical system failure in the emergency call systems, the vehicle occupants will receive the following warning: see ⇒ *page 176*, *LED status* and ⇒ *page 176*, *Messages*.

#### Tips

If the emergency call is canceled due to a poor connection, then the system automatically tries to connect again.

### Messages

Applies to: vehicles with emergency call function

#### **Emergency call function: malfunction! Limited availability. Please contact Service**

If this indicator light turns on and this message appears, the emergency call function is restricted.

ed. For example, you cannot call the emergency call center, but data may still be transmitted under certain circumstances. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

#### **Emergency call function: malfunction! Function unavailable. Please contact Service**

If this indicator light turns on and this message appears, you cannot make an emergency call. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

## Online roadside assistance

### Description

Applies to: vehicles with online roadside assistance

An online roadside assistance call <sup>1)</sup> is a combination of data transmission and a phone call. The data transmission from your vehicle forwards important information to the Audi service center, such as the vehicle and position data.

### Calling online roadside assistance

Applies to: vehicles with online roadside assistance



**Fig. 129** Front headliner: online roadside assistance button

### Calling online roadside assistance

- ▶ Press the button ③. The LED in the button turns red. The online roadside assistance call will be made.

<sup>1)</sup> The availability of the services offered depends on the country and may change in the future.

- If you press the button  by mistake, then press it again.

### Audi incident assistance

A minor accident may be detected by the vehicle electrical system. You are able to select between online roadside assistance and an emergency call in the MMI.



#### Tips

If the roadside assistance call is canceled due to a poor connection, then the call must be made again.

## Navigation

### Opening navigation

Applies to: vehicles with navigation system

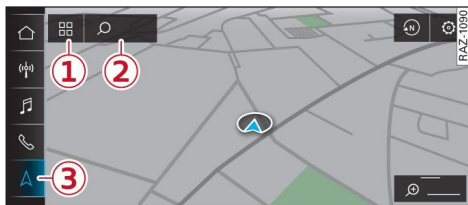


Fig. 130 Route guidance not started

The navigation system directs you to your destination, around traffic incidents, and on alternative routes, if desired.

#### Opening navigation

- Applies to: MMI: Press **NAVIGATION** on the home screen.

After accessing the navigation for the first time, the map is displayed.

#### Opening navigation using the multifunction steering wheel

- Select the Navigation tab in the instrument cluster.
- To display navigation when route guidance has started, select in the instrument cluster: the button > **Map**.

The following functions are available in the MMI:

- ① Select destination ⇒ *page 180*.
- ② Searching for navigation destinations ⇒ *page 179*.
- ③ **Switch between the map and the menu:** press repeatedly until the desired function is displayed.

You can find additional information about the map update at ⇒ *page 183, Map operation*.

the traffic regulations that are applicable in the country where you are operating the vehicle. In the event that the driving directions contradict traffic regulations, always follow the traffic regulations applicable in the country where you are operating the vehicle to reduce the risk of an accident.



#### Note

Read the information about Audi connect, especially regarding connectivity costs ⇒ in *General information on page 169*.



#### Tips

- Snow and objects on the GPS antenna or trees and large buildings can impair satellite reception and affect the system's ability to determine the vehicle position. Several deactivated or malfunctioning satellites can interrupt GPS reception.
- Because street names sometimes change, the names stored in the MMI may in rare cases differ from the actual street name.
- Applies to: multifunction steering wheel: Depending on the selected function, operation through the MMI may be required.
- Applies to: vehicles with Audi connect Infotainment: Depending on the country and vehicle equipment, additional services may be available.

## myAudi navigation

Applies to: vehicles with myAudi navigation

MMI navigation works seamlessly with the myAudi app.

Your destinations (favorites, last destinations) are synchronized through your myAudi account. All important destinations can be displayed in the vehicle and in the myAudi app.

To load destinations in the vehicle automatically, Audi recommends logging into the vehicle with a myAudi user ⇒ *page 31*.

myAudi navigation functions:

- You can send destinations and routes from the myAudi app to the vehicle ⇒ *page 181*.



#### WARNING

- The demands of traffic require full attention of all road users. Always read the chapter ⇒ *page 21, Information about traffic safety*.
- The route calculated by the navigation system is a driving recommendation. Follow



- Active route guidance in the myAudi app can be continued in the MMI.
- Depending on the situation, it may be possible to continue active route guidance from the MMI in the myAudi app to continue navigating to the destination after leaving the vehicle.

### Tips

- All services/apps can be modified, activated/deactivated, renamed, and enhanced without further notification.
- Depending on the country and model there may be an app other than the “myAudi app” available for your vehicle. For additional information, see [my.audi.com](http://my.audi.com).

## Entering a destination

### Searching for navigation destinations


Applies to: vehicles with navigation system

Different search options will be available depending on the country and vehicle equipment:

Using the online search option, you can use the results from a search engine provider to find a navigation destination.

Using the hybrid search option, you can enter the data for a navigation destination in any order all at once (for example, 5th Avenue New York). Likewise, you can search for points of interest or contacts in order to navigate to the desired destination.

### Opening a menu






- Applies to: MMI: Select on the home screen: **NAVIGATION** > .

### Online search<sup>1)</sup>

Applies to: vehicles with navigation system and online search

Requirement: the MMI must be connected to the Internet ⇒ *page 169, Audi connect*.

- Enter one or more search terms into the input field.


- The search engine provider shows suggestions  to narrow down the search.
- Press on suggestions, if available, until the desired destination appears in the results list. If necessary, use one finger to swipe upward or downward until the suggestions  or destinations  appear.
- Press on the desired destination . Route guidance will start.
- To open the **Details** ⇒ *page 181* menu, press .

### Hybrid search



If the **G** symbol is displayed in color in the MMI, then the hybrid search is turned off.

- To turn on the hybrid search, press the colored **G** symbol.

Requirement: hybrid search is turned on.


 

 
- Enter one or more search terms into the input field ⇒ *page 25, Text input*.
- Press on the desired destination in the results list. Route guidance will start.
- To open the **Details** ⇒ *page 181* menu, press .

### Online Points of Interest


- **Searching for points of interest:** enter the name of a POI.
- Select: *a symbol for a POI category* (such as ) > *a POI*, or
- To display all categories and search for a POI, select:  > *a category* (such as restaurants) > *a POI*.

### Change search area

Requirement: route guidance must be active.

- Applies to: MMI: Select on the home screen: **NAVIGATION** > .
- To change the search area, press  /  /  repeatedly until the desired search area is selected. ►

<sup>1)</sup> Audi provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.

 Tips

- The MMI input suggestions depend on the last navigated destinations.
- The navigation system always searches for the fastest route. You can have alternative routes displayed if necessary ⇒ *page 185*.
- If the destination cannot be found, it may not be stored in the navigation database. Check the spelling of the term that was searched or check the search area ⇒ *page 179*.
- Distances to points of interest are displayed as a straight-line distance from your current location. The actual distance from your current location to the point of interest is updated automatically. The list of points of interest that were found is not resorted when this happens.

Select destination

Applies to: vehicles with navigation system

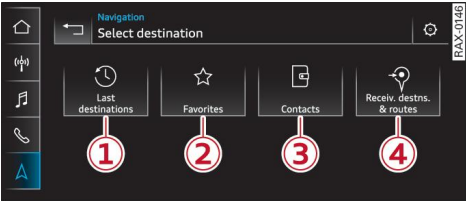



Fig. 131 Menu: select destination

Opening a menu

- Applies to: MMI: Press **NAVIGATION** on the home screen.
- If the map is displayed, press  ① ⇒ *page 178*, *fig. 130*.


The following functions are available:

① <b>Last destinations</b>	180
② <b>Favorites</b>	180
③ <b>Contacts</b>	180
④ <b>Received destinations and routes</b>	181

Loading previous destinations

 

Applies to: vehicles with navigation system

Your last destinations and routes can be loaded as a navigation destination.

 
 
As soon as you start route guidance, the destination is automatically saved in the last destinations. Your previous destinations are marked with the  symbol.


If you use myAudi navigation, your previous destinations will be synchronized with your myAudi account ⇒ *page 178*.

Accessing previous destinations

- Applies to: MMI: Select on the home screen: **NAVIGATION** >  > **Last destinations** > *select a destination* > **Start**.
- Select in the instrument cluster: Navigation tab >  button > **Last destinations** > *a destination*.

Deleting previous destinations

- Applies to: MMI: Select on the home screen: **NAVIGATION** >  > **Last destinations** >  > *select one or more entries* or **Select all** > **Delete** > **(Done)**.

 Tips

 

The last route will be automatically deleted from the list if you start a new route guidance after canceling the route.

Setting a favorite as the destination

Applies to: vehicles with navigation system

In the favorites, you can call up frequently-used destinations as well as your home/business address.

Requirement: a favorite must be stored ⇒ *page 185*.

- Applies to: MMI: Select on the home screen: **NAVIGATION** >  > **Favorites** > *select a destination*.
- Select in the instrument cluster: Navigation tab >  button > **Favorites** > *a destination*.

Selecting contacts as destinations

Applies to: vehicles with navigation system

You can navigate to contacts.

Requirement: a contact must have an address stored.

- Applies to: MMI: Select on the home screen: **NAVIGATION** > (☰) > **Contacts** > *a contact*.
- Press on the address for a contact.
- Press on a suggested address. The **Details** menu will be displayed.

### Tips


- If a contact is grayed out, there is no address stored for that contact.
- Navigation to geographical coordinates for a contact is not possible.

## Loading received destinations and routes

Applies to: vehicles with myAudi navigation

You can search for destinations or routes in the myAudi app and send to the vehicle.

Requirement: the MMI and the mobile device must be connected to the Internet ⇒ *page 169, Audi connect*. You must have the myAudi app installed on your mobile device.

- Send a destination or route in the myAudi app to the vehicle.
- Applies to: MMI: Select on the home screen: **NAVIGATION** > (☰) > **Received destinations and routes**.
- Make sure you are logged into the vehicle and the myAudi app with the same myAudi account. The received destination and routes will be loaded automatically.
- **Navigating to a destination:** press on a destination.
- **Deleting destinations:** select:  > *one or more entries* or **Select all** > **Delete** > **(Done)**.

### Tips

- All services/apps can be modified, activated/deactivated, renamed, and enhanced without further notification.
- Depending on the country and model there may be an app other than the “myAudi app” available for your vehicle. For additional information, see [my.audi.com](http://my.audi.com).

## Destination details

Applies to: vehicles with navigation system

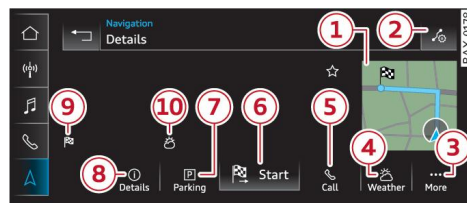


Fig. 132 Details

The functions depend on the vehicle equipment and the selected destination.

- 1 **Map preview:** to zoom in on the map preview, press on the map.
- 2 **Route criteria:** see ⇒ *page 189*.
- 3 **More:** additional functions.
- 4 **Weather:** Requirement: the MMI must be connected to the Internet ⇒ *page 169, Audi connect*. Also see ⇒ *page 171*.
- 5 **Call:** Requirement: a mobile device must be connected to the MMI ⇒ *page 157*. You will make a call to the phone number that is stored for the destination.
- 6 **Start:** starts navigation to the displayed destination. The map will be displayed ⇒ *page 183*.
- 7 **Parking:** press **Parking** to search for a parking space at the destination. You can use the parking space as a destination or stopover.
- 8 **Details:** Requirement: the MMI must be connected to the Internet ⇒ *page 169, Audi connect*.
- 9 **Display of distance/driving time to the destination**
- 10 **Weather at the destination:** Requirement: the MMI must be connected to the Internet ⇒ *page 169, Audi connect*.

## Selecting a destination from the map

Applies to: vehicles with navigation system

A point on the map can be used as the destination.

### Opening the map

- Applies to: MMI: Press **NAVIGATION** on the home screen.
- If necessary, press  $\Delta$  to display the map.

### Adjusting the scale

- Select:  $\odot/\otimes$  > *select a scale*.

### Marking the destination

- Press and hold a point on the map until a marking appears or the address for the selected destination is shown.

### Selecting map content (such as POIs) as the destination

Requirement: map content must be displayed  
 ⇒ *page 188*.

- Press on map content on the map (for example,  $\text{III}$ ).

### Selecting the destination

- Select:  $\text{III}$  > **Start**.

## Stopovers and route plan

Applies to: vehicles with navigation system

You can enter additional destinations during active route guidance.

### Entering a stopover

Requirement: route guidance must be active.

- Enter a destination ⇒ *page 179*.

### Displaying stopovers or the route plan

All destinations are listed in the route plan.

- Press on  $\text{III}$  in the side menu on the map  
 ⇒ *page 182, fig. 133*.

### Editing stopovers

- Press on  $\text{III}$  in the side menu on the map  
 ⇒ *page 182, fig. 133*.
- **Adding a stopover:** Select: **Add destination** > *select a destination* > **Add to route**.
- **Moving a stopover:** press  $\text{III}$ . Touch the  $\blacklozenge$  symbol and move the entry to the desired position. Press **Done**.

- **Deleting a stopover:** Select:  $\text{III}$  > *one or more entries* or **Select all** > **Delete** > **(Done)**.

## Stopping route guidance

Applies to: vehicles with navigation system

Requirement: route guidance must be active and the map must be displayed.

- Applies to: MMI: Press  $\text{III}$  ⇒ *page 182, fig. 133*.
- Select in the instrument cluster: Navigation tab  
 >  $\text{III}$  button > **Cancel route guidance**.

## Map

### Map functions

Applies to: vehicles with navigation system



Fig. 133 Active route guidance

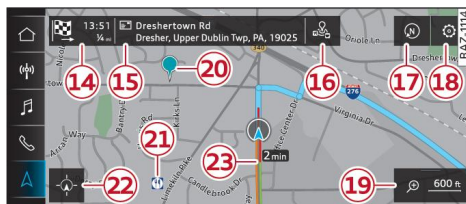


 

Fig. 134 Marked map object

### Opening the map





- Applies to: MMI: Press **NAVIGATION** on the home screen.
- If necessary, press  $\Delta$  to display the map.

The following list gives an overview of the information displayed on the map. Press on any function (for example, alternative routes) to show additional options.


- ① Select destination ⇒ *page 180*
- ② Entering a destination ⇒ *page 179*
- ③ Cancel route guidance ⇒ *page 182*
- ④ Current route
- ⑤ Request spoken prompt

- ⑥ Alternative routes ⇒ *page 185*
- ⑦ Display active destinations, stopovers, or route plan ⇒ *page 182*. The distance to the next destination in the route plan including the calculated arrival time is displayed
- ⑧ Traffic information online ⇒ *page 187*
- ⑨ Altitude
- ⑩ Displays the maximum permitted speed<sup>1)</sup>: within city limits, on expressways, and on highways
- ⑪ Current vehicle position
- ⑫ Route information ⇒ *page 189*
- ⑬ Name of the street on which you are driving
- ⑭ Start route guidance for a marked destination ⇒ *page 181, Selecting a destination from the map*
- ⑮ Display details for the destination ⇒ *page 181*
- ⑯ Search nearby ⇒ *page 179*
- ⑰ Adjust the map orientation. See also ⇒ *page 188*
- ⑱ Settings ⇒ *page 188*
- ⑲ Adjust the scale. Press the magnifying glass to turn automatic zoom ⇒ *page 188* on the map on or off. The  symbol appears when this function is turned on
- ⑳ Marked destination ⇒ *page 181, Selecting a destination from the map*
- ㉑ Map contents (points of interest, favorites). When there are multiple map contents in the immediate vicinity, the symbols are shown stacked on the map. To display a list of individual symbols, press  ⇒ *fig. 134*. Press on a POI in the list
- ㉒ Center the map to the current vehicle position
- ㉓ Traffic incidents and display of estimated losses of time on the route
  - **Green:** traffic is flowing freely.
  - **Orange:** stop-and-go traffic
  - **Red:** traffic jam or traffic obstructions.

## Additional possible symbols on the map

Symbol	Description
	Home address ⇒ <i>page 185, Favorites</i>
	Business address ⇒ <i>page 185, Favorites</i>
	Favorites ⇒ <i>page 185</i>
	Previous destinations display

## Traffic information

- **Colored warning symbols:** traffic incidents ahead that are on your route.
- **Grayed out warning symbols:** traffic incidents that are not on your route.
- All traffic incidents will display in color when route guidance is inactive.
- **Warning symbols with arrow:** traffic incident that you have been routed around, for example .

## Map operation

Applies to: vehicles with navigation system

You can operate the map ⇒ *page 182, fig. 133* with the movements described in the following information.

## Moving the map

- Drag your finger across the map in the desired direction.

## Moving the map quickly

- Swipe your finger across the map in the desired direction and lift your finger off the map.

## Zooming in on the map

- Place two fingers on the map and pull your fingers apart, or
- Double-tap on the map with one finger.

## Zooming out on the map

- Place two fingers on the map and pull your fingers together, or
- Double-tap on the map with two fingers. ►

<sup>1)</sup> Applies to vehicles without camera-based traffic sign recognition.

## Rotating the map

- Rotate the map using two fingers.

## Tilting the map


- Drag upward or downward with two fingers.

### Tips

Certain gestures may not be available on all touch displays or in every menu.

## Navigation view with route guidance started

Applies to: vehicles with navigation system and Audi virtual cockpit

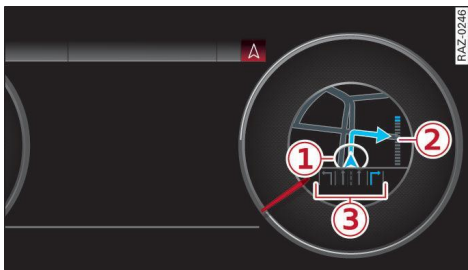

**Fig. 135** Instrument cluster: default view: turning maneuver when route guidance has started

Requirement: route guidance must be on  
⇒ [page 179](#).

The following information will be displayed in the driver information system, if available:

- ① Current vehicle position
- ② A bar graph appears when there is an upcoming turn. The fewer the bars that are shown, the shorter the distance is until the turn. If there is no upcoming turn immediately ahead, the distance to the destination or stopover, the calculated arrival time, and a direction arrow for the upcoming maneuver will be displayed in the right speedometer. If there is no upcoming maneuver, the distance to the next maneuver will be displayed.
- ③ Lane recommendation

## Predictive route guidance

Applies to: vehicles with navigation system and predictive route guidance

Your MMI can learn the routes that you drive frequently (such as your daily commute to work and back) and suggest route guidance based on the current vehicle position.

When the function is turned on, the MMI records the routes driven regardless of whether or not you are using navigation.

Without starting route guidance, your MMI can check the traffic conditions and show possible traffic incidents for the possible routes to be driven.

### Opening personal routes

Requirement: predictive route guidance is turned on ⇒ [page 189](#). Route guidance must not be active. A notification is displayed.

- The MMI displays up to three suggestions.  
Press on a suggestion. Route guidance will start.


### Better routes

If there are major traffic incidents, the MMI will display a notification regardless of the selected menu. If the MMI has calculated a better route, you can select it as the route.


- Press on the notification.

As soon as you turn off predictive route guidance, your personal routes will no longer be recorded. Routes that were already stored will remain stored.

### Deleting personal routes

- Applies to: MMI: Select on the home screen:  
**NAVIGATION** >  > **Predictive route guidance**  
> **Delete recordings from the last 24 hours** or  
**Delete all personal routes and destinations.**

### Tips

If the predictive route guidance is turned off and you press , the predictive route guidance settings will be displayed ⇒ [page 189](#).

## Alternative routes

Applies to: vehicles with navigation system

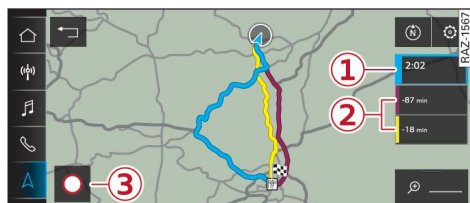


Fig. 136 Alternative routes in the overview map

### Opening alternative routes

Requirement: route guidance must be started  
 ⇒ page 179 and the map must be displayed  
 ⇒ page 183.

- Press on in the side menu on the map  
 ⇒ page 182, fig. 133.

#### ① Current route

The distance to the destination and the calculated arrival time will be displayed for the current route.

#### ② Alternative route

The difference in travel time compared to the selected route will be displayed.

#### ③ Block route

You can block the current route for a certain distance starting from the vehicle position, for example to drive around upcoming streets or tunnel closures. The navigation system automatically calculates an alternative route and the length of the blocked route. The route to be avoided that you have entered applies only to the current route and must be set again, if needed. The areas you have selected to avoid will appear with red and white shading on the map.

- **Block route:** press ③ ⇒ fig. 136.
- **Cancel route block:** press .

### Displaying alternative routes in the foreground

- Press ① in the corresponding information window, or

- Press and hold the information window for the corresponding alternative route (for example, ② ⇒ fig. 136).

### Select route

- Press on the information window for the corresponding route (for example ②).

## Additional functions

### Favorites

Applies to: vehicles with navigation system

In the favorites, you can call up frequently-used destinations as well as your home/business address.

### Accessing favorites

- Applies to: MMI: Select on the home screen:  
**NAVIGATION** > > **Favorites**.

If you use myAudi navigation, your favorites will be synchronized with your myAudi account  
 ⇒ page 178.

### Storing favorites

- Press in the **Details** menu ⇒ page 181, fig. 132.

### Storing a home address or business address

- Press **Home address** or **Business address**.  
 When accessed for the first time, you will be prompted to set the address.
- Select: **Create now** > *enter a destination* > **OK**.

### Editing a home address or business address

Requirement: the favorites list must be displayed. Your home address or business address must be stored.


- Press **Home address** or **Business address** until the **Options** menu is displayed.
- Select: **Change address** > *enter a destination* > (**Set as destination**) or (**Add to address**) > **OK**.

### Editing favorites

Requirement: the favorites list must be displayed.

- **Setting a favorite as a destination:** press on a favorite. ►

- **Deleting favorites:** in the **Details** menu, press ★ ⇨ *page 181, fig. 132*, or select: ✎ > *one or more entries* or **Select all > Delete > (Done)**.
- **Moving a favorite:** press ✎. Touch the ◆ symbol and move the entry to the desired position. Press **Done**.

 **Tips**



- After deleting the home address or business address, only the address is deleted and the entry will still be displayed in the favorites.
- Please note when moving favorites that items 1 and 2 are reserved for the home address and business address.

On-street parking

Applies to: vehicles with navigation system and on-street parking

In supported areas, you can display parking along the route.

Requirement: the **Parking** notification must be turned on ⇨ *page 24, Notification center*. The MMI must be connected to the Internet ⇨ *page 169, Audi connect*. Route guidance must be active, you must be close to your destination, and a notification must be displayed or an item on the map must be marked.

- Press on the notification, or
- Press  on the map.
- To navigate to a parking: space, press on a colored marking on the map.
- Select:  > **Start**.

Depending on availability, colored markings on the map indicate the probability of open parking spaces.


Color	Description
Green	High probability
Orange	Medium probability
Red	Low probability

## Satellite map


Applies to: vehicles with navigation system and satellite map

You can display the navigation map with satellite images.

Requirement: the MMI must be connected to the Internet ⇨ *page 169, Audi connect*.

- **Applies to:** MMI: Select on the home screen: **NAVIGATION** >  > **Map settings** > **Satellite map**<sup>1)</sup>.

The map view is based on data packets received from the Internet in the form of satellite images, which are then combined with the roadways from the ⇨ *page 182, fig. 133* standard map view.

 **Tips**

- The satellite map<sup>1)</sup> is updated regularly whenever the function is opened. The process may take several seconds.
- Depending on the Internet connection, the standard map may also be displayed when the satellite map is turned on<sup>1)</sup>.

## Map update

Introduction

Applies to: vehicles with navigation system

You can update the map data in the MMI with a map update. The functions depend on the country and vehicle equipment.

- Map update using the **Online map update** ⇨ *page 186*.
- Import a map update from the **USB connection** to your MMI ⇨ *page 187*.

Online map update

Applies to: vehicles with online map update

You can update the map content for the navigation system in your vehicle using the online map update function.

<sup>1)</sup> Audi provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.



The MMI determines regions based on the vehicle position. Based on this, update data for these regions are available for your MMI.

 
### Starting the update

Requirement: the MMI must be connected to the Internet ⇒ *page 169, Audi connect*.

- Applies to: MMI: To allow automatic online map updates, select on the home screen: **SETTINGS** > **System maintenance** > **Automatic online map update**. The MMI starts the map update automatically in the background when new map material is available.

You can check the status of the download process and the installation in the notification center ⇒ *page 24*.

#### Note

Read the information about Audi connect, especially regarding connectivity costs ⇒  in *General information on page 169*.

#### Tips

Because of the high volume of data, Audi recommends performing the map update using the USB connection ⇒ *page 187*.

### Map update using the USB connection

Applies to: vehicle with map updates using the USB connection

With the map update, you can update the map material in your navigation system.

Requirement: you must have created a myAudi account at my.audi.com. Your vehicle must be registered in your myAudi account.

### Downloading updates

- Download the map update at my.audi.com and store it on a USB flash drive. For additional information, visit my.audi.com.

### Installing updates

- Connect the USB flash drive to the USB port with charging function ⇒ *page 199*.
- Open the notification in the notification center on ⇒ *page 24* and press on the notification.

- Press **Next**. The status of the installation is shown in the display.

## Traffic information

### Introduction

Applies to: vehicles with navigation system and traffic information online

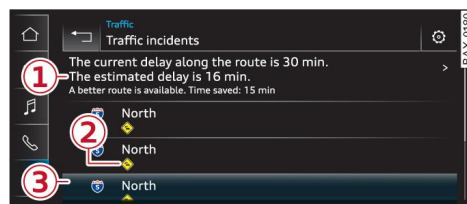


Fig. 137 Traffic information overview

### Open traffic information

Requirement: the map must be displayed  
⇒ *page 183*.

- Press on the traffic jam symbol in the side menu on the map ⇒ *page 182, fig. 133*.

### Display traffic report details

- Press on the traffic report ①.
- To display the previous or next traffic report, press ← or →.

The following information can be displayed:

- ① A message will appear if the MMI calculates a better route for the current route guidance. The predicted delay takes into account future changes to the traffic situation on the route. Press on an item in a list ① and select the better route. More information can be found under ⇒ *page 185*.
- ② A traffic message is displayed. The distance to the hazardous area is calculated from the current vehicle position.
- ③ The traffic messages are only shown when route guidance is active. Press on a line to display details about it.

#### Tips

- Particularly critical traffic information, such as warnings about wrong-way drivers, is automatically displayed as a notification.

- Traffic information is not available in some countries.

### Traffic rerouting

Applies to: vehicles with navigation system


By receiving traffic information, your MMI calculates a better route if available and the possible time saved compared to the current route.

#### Traffic rerouting

- Start route guidance.

The MMI uses a notification or a note in the traffic information ① ⇒ *page 187, fig. 137* to indicate a better route. You can decide which route you would like to use.

To select a better route, you have the following options:

- **Notification:** press . The better route will be used for route guidance, or press on the notification. Press on the information window for the better route (for example ② ⇒ *page 185, fig. 136*).
- **Note in the traffic information:** press on the list entry ① ⇒ *page 187, fig. 137*. Press on the information window for the better route (for example ② ⇒ *page 185, fig. 136*).

### Traffic information online

Applies to: vehicles with navigation system and traffic information online

The MMI can receive real-time online traffic information about congestion, accidents, road construction, and other incidents.

Requirement: the MMI must be connected to the Internet ⇒ *page 169, Audi connect*. Traffic information must be turned on in the MMI ⇒ *page 188*.

Traffic information will be displayed on the standard map ⇒ *page 182, fig. 133*.

Depending on vehicle equipment, online traffic information may also be displayed on the satellite map ⇒ *page 186*.

### Tips


- Having the **traffic information online** function turned on provides the most accurate reports of traffic situations and traffic forecasting. Your vehicle transmits and processes its anonymous, encrypted position information at regular intervals to the traffic data provider. You can turn off data transfer at any time ⇒ *page 276*.
- The **traffic information online** network is not available in all countries, and the coverage is not nationwide.

## Settings


Applies to: vehicles with navigation system

You can adjust the navigation system settings in the instrument cluster and in the MMI display separately. The settings depend on the country and vehicle equipment.

### Accessing settings

- Applies to: MMI: Select on the home screen: **NAVIGATION** > .

### Accessing settings using the multifunction steering wheel

- Select in the instrument cluster: Navigation tab >  button.

A setting made using the multifunction steering wheel only applies to the instrument cluster map.

### Map settings

**Satellite map:** see ⇒ *page 186*.

**Traffic info:** you can display current traffic information on the map.

- **Free flowing traffic**
- **Traffic obstructions**
- **Traffic information**

### Map colors

- **Automatic:** the map display adapts to the lighting conditions (for example, by changing from day to night when driving through a tunnel).
- **Day or Night**

## Map orientation

- **2D heading-up map/2D north-up map:** the current vehicle position is displayed. The map is oriented in the direction of travel or to the north.
- **3D map:** the current vehicle position is shown on a three-dimensional map and is aligned in the direction of travel.
- **Overview:** the entire route from the vehicle position to the destination or the next stopover is displayed on the map. The map is oriented to the north.

## Automatic zoom

- **On:** the map scale is adapted automatically depending on the type of road being traveled (expressway, highway, other roads) so that you always have an optimal overview of the road ahead. When route guidance is active, the scale is adjusted automatically for a better detailed view when there are upcoming maneuvers.
- **Intersection:** when route guidance is active, the scale is adjusted automatically for a better detailed view when there are upcoming maneuvers.
- **Off**

**MMI map contents/Map content:** you can turn the display of additional information (such as POIs) on the map in the center display on or off.

## Voice guidance

**Voice guidance:** with the **Traffic info** setting, the MMI will only give prompts if there are traffic incidents on your route.

## Voice guidance during phone call

**Entertainment fader during navigation:** the audio playback volume is temporarily lowered when navigation prompts are active.

## Route criteria

You can adjust which route criteria should be allowed or avoided for the route calculation.

## HOV/carpool lanes

## Highways

## Toll roads

## Ferries

## Route information

When this function is turned on and route guidance is active, route information ⇒ *page 182, fig. 133* is displayed. The next maneuver will be displayed at the bottom. POIs and traffic information will also be displayed. Press route information to display a preview of the next maneuver on the map. You can turn the following information on or off in route information.

- **Points of interest along the route**
- **Traffic information along the route**

## Use hybrid search as the default

When this function is turned on, the hybrid search will be used as the default for the destination search.

## Predictive route guidance

The predictive route guidance is turned off when the vehicle is delivered from the factory.

Your trips are recorded and destinations are suggested by the MMI when this function is turned on ⇒ *page 184*.

## Presentation mode

In presentation mode, the system simulates driving on the display along the planned route without the vehicle actually moving. You can use

**Specify starting point** when you would like to calculate a route starting from a location other than the current vehicle position, for example.

**Simulating route guidance:** start route guidance and press presentation mode.



## Tips

You can change the volume of navigation announcements while one is playing ⇒ *page 30*.

Radio

General information

Selecting the radio



 
Fig. 138 Center display: FM station list



Fig. 139 Center display: SiriusXM station list


Depending on the vehicle equipment, the radio may support the FM, AM, and SiriusXM (satellite radio) frequency bands. Using the HD Radio receiver\* also allows you to receive radio stations on the FM and AM bands in digital format.

Depending on the vehicle equipment and the selected station list, the following information will be displayed:




- ① **Station list**  
Shows the stations that are currently available. The station list updates automatically.
- ② **Stations**  
For example, the station name may be displayed depending on availability.
- ③ **HD Radio technology**  
FM/AM stations that can be received by digital radio are marked with the HD Radio technology symbol .  
If reception quality declines, the radio automatically switches to the analog FM/AM station depending on availability.
- ④ **Additional audio programs**  
Digital HD Radio stations may contain multiple additional audio programs. If you lose reception, the additional audio programs will


be muted since they can no longer be received.

⑤ **Radio ID**  
Your radio ID and contact data for your satellite radio provider are displayed.

- ⑥ **Channel number**
- ⑦  **No reception**  
The station cannot be received.

In addition to the symbols for the usual frequency bands, the following information may also be available depending on vehicle equipment:

Symbol	Description
	The station provides information in the background for an online station alternative. <b>Online station tracking</b> must be turned on for this ⇒ <i>page 196</i> .
	The station is received through the Internet.
	The system attempts to receive the station/podcast through the Internet.


-  **Tips**
- Contact the SiriusXM\* provider if you would like to receive satellite programming.
  - Buildings, tunnels, bridges, open areas, other vehicles, or objects on the vehicle roof can affect reception.
  - Satellite radio\* is not available in all regions.


Adjusting the radio using the MMI

- **Applies to: MMI:** To set a frequency band, select on the home screen: **RADIO > Source a category**.
- **Applies to: MMI:** To set a station, select on the home screen: **RADIO > Source > a category > a station/podcast\***.
- To select a frequency, follow the instructions under ⇒ *page 192, Free text search*.

Adjusting the radio using the multifunction steering wheel

Requirement: radio mode must be on.

- ▶ Select the radio/media tab in the instrument cluster.
- ▶ Press the  button to toggle between the radio and media or to select a different source.
- ▶ To select a station or a source, turn and press the left thumbwheel.

 **Tips**

Applies to: multifunction steering wheel: Depending on the selected function, operation through the MMI may be required.

Radio functions

Overview

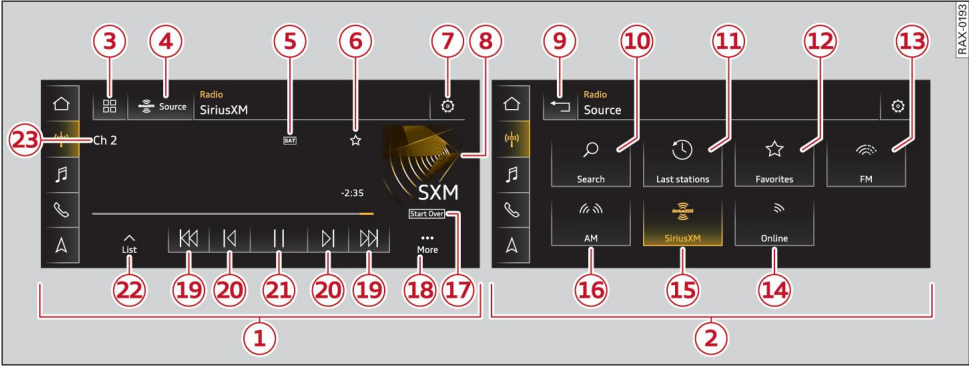



 



 

 








Fig. 140 Center display: left side: playback view of radio functions, right side: sources


Operating


- ▶ Applies to: MMI: To open the playback view , select on the home screen: **RADIO > Source > a category > a station/podcast\***.
- ▶ Applies to: MMI: To open the sources , select on the home screen: **RADIO > Source**.


The following functions may be available depending on the selected radio station/podcast\* and the vehicle equipment:

	Symbol/Description	Description
		Displaying categories in a frequency band.
	<b>Source</b>	Displays sources in the Radio menu.
	<b>Frequency band</b>	Shows the current station frequency band.
		Presets ⇨ <a href="#">page 193</a> .
		Settings ⇨ <a href="#">page 195</a> .
	<b>Station logo</b>	Depending on availability, you can switch between the image views: press on the station logo. Use one finger to swipe to the right or left to switch between the <b>Station logo</b> and <b>Cover art</b> (album cover). Also see ⇨ <a href="#">page 195</a> , <b>Online additional data</b> .
		Go back one level.
	<b>Search</b>	See ⇨ <a href="#">page 192</a> .
	<b>Last stations</b>	See ⇨ <a href="#">page 192</a> .
	<b>Presets</b>	See ⇨ <a href="#">page 193</a> .

	Symbol/Description	Description
13	FM	Displays stations from the <b>FM</b> frequency band.
14	Online	See ⇨ <i>page 194</i> .
15	SiriusXM	Displays stations from the <b>SiriusXM</b> frequency band.
16	AM	Displays stations from the <b>AM</b> frequency band.
17	Start over	Go to the beginning of the broadcast.
	Related	Channels, artists, and shows related to the content that is currently playing.
	Subscribe	Log in to be able to play the content.
18	More	Access options for the current station ⇨ <i>page 195</i> .
19	⏮⏭	<b>Selecting the previous or next track:</b> press ⏮ or ⏭. <b>Going to the beginning of the recording:</b> press and hold ⏮. <b>Going to the live program:</b> press and hold ⏭. The <b>LIVE</b> symbol will be displayed.
20	⏮⏭	Select the previous/next station.
21	▷/	Start or stop playback
	🔊/🔇	Unmutes or mutes playback.
22	List	The station list is displayed ⇨ <i>page 190</i> .
23	Info section	Depending on availability, the station name as well as program information, for example, may be displayed. Also see ⇨ <i>page 195</i> , <b>Online additional data</b> .

 **Note**

Read the information about Audi connect, especially regarding connectivity costs ⇨  in *General information on page 169*.

 **Tips**

Not all functions are available in every source and on every touch display.

Free text search

Using intelligent search, you can search for station names, frequencies, program types (such as **News**), podcasts\*, or online radio stations\*.





Opening free text search

- Applies to: MMI: Select on the home screen: **RADIO > Source > Search**.

Entering search terms

You can enter multiple search terms at once in any order.

The following information may be available:

Symbol	Description
	Results from the list: <b>Last stations</b>
	Results from the list: <b>Presets</b>
	Results from a <b>Station list</b>
For example, 	Station frequency band

Last stations

You can listen to the last stations that were played in all frequency bands.


Accessing last stations

- Applies to: MMI: Select on the home screen: **RADIO > Source > Last stations**.

Listening to last stations

- Press on a *station*. 

## Deleting last stations

- Select:  > *select one or more stations* or **Select all** > **Delete** > **(Done)**.

## Presets


You can store your favorite stations from every frequency band in the presets list.

Applies to: SiriusXM: Channels, shows, and sports teams will be stored in the presets as Smart Favorites. After turning on the ignition and the MMI, the Smart Favorites store radio programs at a specific time.

## Selecting presets using the MMI

- Applies to: MMI: Select on the home screen: **RADIO** > **Source** > **Presets** > *a preset*.

## Storing presets

- Press on  ⑥ in the playback view  
⇒ *page 191, fig. 140*.



Requirement: a list with radio stations must be displayed ⇒ *page 190, fig. 138*.

- Press and hold an entry in the list until the **Options** menu appears.
- Press **Store as preset**.

## Editing presets

- **Deleting presets:** press  in the playback view, or
- In the presets list, select:  > *one or more stations* or **Select all** > **Delete** > **(Done)**.

Requirement: the presets list must be displayed.

 
- **Moving a preset:** press .
- Touch the  symbol and move the entry to the desired position.
- Press **Done**.

## Live Sports

Applies to: vehicles with SiriusXM

Using the Live Sports category, you can find live commentary about your favorite teams during a live sports broadcast.

## Accessing live games

- Applies to: MMI: Select on the home screen: **RADIO** > **Source** > **SiriusXM** >  > **Sports** > **Live Sports** > *a game*.

The score, the status of the game, and, if available, the current possession of the ball are displayed.

## Saving/deleting a favorite team

- Press /★.

## Radio text

Program information (such as general text information, artist, composer, song) is displayed in the radio text.

Requirement: the selected radio station must support the radio text function.

## Opening radio text

- Applies to: MMI: Select on the home screen: **RADIO** > *select a frequency band (such as FM)* > *select a station* > **More** > **Radio text**.

Depending on vehicle equipment, the following functions may be available:

## Displaying previous radio text entries

- Swipe downward with one finger. The last radio text entries are displayed if they are available.

## Scrolling through radio text entries

- Swipe upward or downward with one finger.

## Showing Radio Text Plus information

If a radio text entry is displayed with a color, a phone number or a navigation destination for the station is available as radio text plus information.

You have the following options:

## Selecting the destination

- Select: *a navigation destination marked in color* > **Set as destination**.

## Call

- Select: *a phone number marked in color* > **Call**. ►

## Tips

A call to a phone number stored in the radio text will start immediately.

## Online radio

### General information

Applies to: vehicles with Audi connect Infotainment and online radio

You can listen to various radio stations or podcasts on the Internet using online radio.

Requirement: the MMI must be connected to the Internet ⇒ *page 169, Audi connect*. Depending on the country, a data package may also be required ⇒ *page 173*.

### Accessing online radio through the MMI

► Applies to: MMI: Select on the home screen: **RADIO > Source > Online**.

The following functions are available:

#### Previous selection

The station/podcast list for the last station or podcast that was playing will be displayed.


#### Top stations

The favorite online radio stations are displayed.

#### Filter list

► Select:  > (a category) > a station/podcast.

## Note

Read the information about Audi connect, especially regarding connectivity costs ⇒  in *General information on page 169*.

## Tips

- Depending on the Internet connection and network traffic, the connection may be lost when online radio is playing.
- Online radio reception may not be possible if Internet service is throttled.
- Online radio usage depends on the availability of the service from the third party provider.

- The range and screen display of online radio services from third party providers in the vehicle may vary.
- Please note that it may not be possible to play some online radio stations in certain countries.
- Audi only provides access to online radio and does not assume any responsibility for the content of these services.

### Podcasts

Applies to: vehicles with Audi connect Infotainment and online radio

### Opening podcasts using the MMI

► Applies to: MMI: Select on the home screen: **RADIO > Source > Online > Podcasts**.

The following functions are available:

#### Listening to a podcast

► Select: *a podcast > a podcast episode*.

#### Search

► Press .

The following functions are available in the podcast playback view:

#### Displaying podcast episodes

► Press **List**.

#### Starting/stopping podcast playback

► Press  / .

#### Previous/next podcast

► Press  / .

#### Changing the playback position

► Move the slider into the desired position.

#### Displaying the online radio menu

► Press .

#### Switching to radio

► Press **Source**. The sources in the Radio menu are displayed.

#### Podcast favorites

You can store podcasts in the podcast favorites. ►



Requirement: the playback view for a podcast must be displayed.

- Press ☆ ⑥ ⇒ *page 191, fig. 140.*

Requirement: a list with podcasts must be displayed.

- Press and hold an entry in the list until the **Options** menu appears.
- Press **Save podcast**.

## Listening to podcast favorites

Requirement: the podcast favorites list must be displayed. At least one podcast favorite must be stored.

- Select: *a podcast > a podcast episode.*

## Browsing through podcast favorites

Requirement: the podcast favorites list must be displayed. At least one podcast favorite must be stored.

- Press < or >.

## Displaying all podcast favorites

Requirement: the podcast favorites list must be displayed. At least one podcast favorite must be stored.

- Press **All**.

## Editing podcast favorites

- **Deleting podcast favorites:** press ★ in the playback view, or
- In the podcast favorites list, select: **All** > ✎ > *one or more podcasts*, or **Select All** > **Delete** > **(Done)**.

Requirement: the podcast favorites list must be displayed.

- **Moving podcast favorites:** Select: **All** > ✎.
- Touch the ◆ symbol and move the entry to the desired position.
- Press **Done**.

# Options and settings

## Options

Requirement: the playback view ① ⇒ *page 191, fig. 140* must be displayed.

- Press **More** ⑱, or

Requirement: a list with radio stations or podcasts\* must be displayed ⇒ *page 190, fig. 138.*

- Press and hold an entry in the list until the **Options** menu appears.

Depending on the selected source and vehicle equipment, the following functions may be available.

- **Store as preset** ⇒ *page 193.*
- **Radio text** ⇒ *page 193.*
- **Save podcast** ⇒ *page 194, Podcast favorites.*

## Related content

Channels, artists, and shows related to the content that is currently playing.

## Settings

- Applies to: MMI: Select on the home screen: **RADIO** > ⚙.

Depending on the vehicle equipment, the following settings may be available:

## HD Radio FM/HD Radio AM

You can turn HD Radio reception on or off.

## SiriusXM Tune Start

If you play a Smart Favorite when this function is turned on, the song currently playing on the channel will play from the beginning.

## SiriusXM subscription status

The status of your license is displayed.


**Call SiriusXM:** the phone number and radio ID of your satellite radio provider are displayed. To call your satellite radio provider using the MMI, press **Call SiriusXM**.



## Online additional data

Requirement: the MMI must be connected to the Internet ⇒ *page 169, Audi connect*. Depending on the country, a data package may also be required ⇒ *page 173.*

When the function is turned on, additional information (such as album cover, artist, track) will be loaded depending on the availability.

Online station tracking

Requirement: the MMI must be connected to the Internet ⇨ *page 169, Audi connect*. Depending on the country, a data package may also be required ⇨ *page 173*. A station provides information in the background for its online station alternative and is identified with the  symbol.

During reception loss in the FM frequency band, the radio tuner can establish a data connection and switch to an online station alternative, if it is available. If available, you can receive your local radio stations in every region of your country online. This may result in additional costs ⇨ . The  symbol indicates a station that is currently being received online.


– **Automatic/Off:** activates or deactivates automatic switching to online station alternatives.


– **With request:** switching to online station alternatives must be confirmed manually.


Preferred online radio data rate

Depending on the selected radio station, you may be able to adjust the data rate for online radio ⇨ *page 194* and for the **Online station tracking**.

For optimal sound playback, press **High**. To reduce data usage, press **Low**.

 **Note**

Read the information about Audi connect, especially regarding connectivity costs ⇨  in *General information on page 169*.

 **Tips**

Delays may occur when switching automatically between normal frequency bands and online radio.

Troubleshooting

The information that follows lists some troubleshooting options. They depend on vehicle equipment.

Problem	Solution
A station is no longer displayed in the station list.	Store the station as a preset in advance. Access the presets using the presets list ⇨ <i>page 193</i> .
<b>Online radio:</b> no playback from online radio.	Check if a data plan has been purchased for the applicable country and if it is available ⇨ <i>page 173</i> .

## Media


### General information

There may be different media sources and connections available depending on the vehicle equipment. For example, you can play media files using a connected USB drive or connect your mobile devices to the USB ports with charging function and operate them through the MMI.

**Media and format restrictions:** the MMI (including the USB storage device connection) was tested with a variety of products and media on the market. However, there may be cases where individual devices/media and media files may not be recognized, may play only with restrictions, or may not play at all.

**Restricted functionality:** reset the MMI to the factory default settings if functionality is restricted ⇒ *page 212*.

**Digital Rights Management:** please note that the media files are subject to copyright protection.

Files that are protected by DRM and are identified with the symbol  will not play.


**Data security:** never store important information on mobile devices. Audi is not responsible for damaged or lost files and media.

**Loading times:** the more files/folders/playlists there are on a storage medium, the longer it will take to load. To reduce the amount of time it takes the media files to load, use a storage medium that only contains media files, and create subfolders (for example, for each artist or album).

**Additional information:** when playing, audio files are automatically displayed with any additional information that is stored (such as the artist, track and album cover). If this information is not available on the medium, the MMI will revert to the local Gracenote metadata database or search online if necessary. See ⇒ *page 204*, **Online additional data**. However, in some cases, the additional information may not be displayed.



#### Note

Read the information about Audi connect, especially regarding connectivity costs ⇒  in *General information on page 169*.


### Bluetooth audio player

Applies to: vehicles with Bluetooth audio player

With the Bluetooth audio player, you can play music wirelessly through the MMI from your Bluetooth-capable mobile device (such as a mobile phone).

Requirement: the vehicle must be stationary and the ignition must be turned on. The Bluetooth settings will open on your mobile device during the connection setup. The Bluetooth function and visibility of the MMI ⇒ *page 211* and mobile device must be turned on.

#### Connecting a mobile device

- **Applies to:** MMI: Select on the home screen: **MEDIA > Source > Connect external device > New connection**. The available Bluetooth devices will be displayed after several seconds.
- Press on the desired mobile device in the list of displayed Bluetooth devices.
- To update the list, press .

A PIN for a secure Bluetooth connection will be generated.

- Confirm the PIN on your mobile device.

After connecting successfully, the mobile device will be displayed in the **Connected devices** menu as a Bluetooth audio player.

Playing media ⇒ *page 200*.



#### Tips

- Check for any connection requests on your Bluetooth device.
- Multiple Bluetooth audio players can be paired with the MMI, but only one at a time can be active as a Bluetooth audio player ⇒ *page 212*.
- The supported media functions (such as shuffle, list view, categories, search, options) depend on the Bluetooth device being used.

- Note the volume setting on your Bluetooth device. Audi recommends setting your mobile device to the maximum volume when using it as a Bluetooth audio player.
- A selection of supported Bluetooth devices can be found in the database for tested mobile devices at [www.audi.com/bluetooth](http://www.audi.com/bluetooth).

## Online media

Applies to: vehicles with Audi connect Infotainment and online media

You can play and operate various online media services, such as music streaming services, using the MMI.

Requirement: a supported online media service must be available in the country where the vehicle is being operated. you must be logged in to your myAudi account in the vehicle. The MMI must be connected to the Internet ⇨ *page 169*, *Audi connect*. Depending on the country, a data package may also be required ⇨ *page 173*.

### Connect online media


- Applies to: MMI: Select on the home screen: **MEDIA > Source > Streaming services**. All supported online services in your country will be displayed for the user that is logged in.
- Press on the desired online media service and follow the system instructions.

After successfully logging in, the online media service will be available as a media source.


### Starting online media

- Applies to: MMI: Select on the home screen: **MEDIA > Source > an online media source**.

#### WARNING

Always follow the information found in ⇨  in *General information on page 169*.

#### Note

- Read the information about Audi connect, especially regarding connectivity costs ⇨  in *General information on page 169*.

- There generally are additional costs when using an online media service account, especially when it is used internationally.

#### Tips

Depending on the Internet connection and network traffic, the connection may disconnect when online media sources are playing.

## Amazon Alexa


Applies to: vehicles with Amazon Alexa Integration

You can play various Amazon Alexa content using the MMI. The voice recognition system is used to operate it.

 
Requirement: Amazon Alexa must be activated ⇨ *page 28*. A data plan must be available ⇨ *page 173*.

- Start Amazon Alexa using the voice recognition system.
- Applies to: MMI: Select on the home screen: **MEDIA > Source > Alexa**.

#### WARNING

Always follow the information found in ⇨  in *General information on page 169*.

#### Note

Read the information about Audi connect, especially regarding connectivity costs ⇨  in *General information on page 169*.

## Multimedia connections

### USB adapter

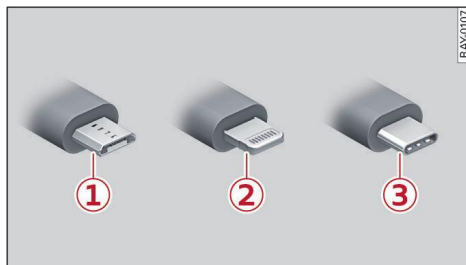


Fig. 141 Audi Genuine Accessories: USB adapter

You can connect your mobile devices to the MMI using the USB ports with charging function with a USB adapter, and charge the battery at the same time.

You can purchase the USB adapter cable from an authorized Audi dealer or at specialty stores:

- ① USB adapter for devices with a micro USB connection
- ② USB adapter for Apple devices with a Lightning connection
- ③ USB adapter for devices with USB type C connection

#### Note

Handle the USB adapter carefully. Do not allow it to be pinched.


#### Tips

Apple devices with a dock connector can only be charged using a USB adapter designed for devices with a dock connector. Data cannot be transmitted.

### USB ports with charging function

Applies to: vehicles with USB ports with charging function

Connect your mobile devices to the USB ports in order to operate the devices through the MMI and charge the batteries.

The USB ports are located in the front center console and are labeled with the  symbol. If multiple USB devices are connected to the USB ports (for example, a smartphone and a USB flash drive), any of these devices can be used as the playback source.

#### Connecting or charging mobile devices using a USB adapter

- ▶ Connect the matching USB adapter to a USB port and to the mobile device, such as a smartphone.

The battery will charge automatically.

Mobile devices connected to the USB ports are started and operated using the MMI ⇒ *page 200*.

#### Disconnecting a mobile device from the USB port

- ▶ Remove the USB adapter cable from the USB port.



#### WARNING

Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Never operate mobile devices while driving, because this increases the risk of an accident.



#### Note

- Disconnect the connector from the USB port carefully to reduce the risk of damaging them.
- Use a USB extension cable to connect devices that have an integrated USB connector (such as a USB stick) to reduce the risk of damage to your USB device and the USB port.
- Extremely high or low temperatures that can occur inside vehicles can damage mobile devices and/or impair their performance. Never leave mobile devices in the vehicle in extremely high or low temperatures.



#### Tips

- Always follow the information found in ⇒ *page 81*.
- When you turn off the ignition, the USB ports will still be supplied with power until the energy management system turns them off.
- Do not use additional adapter cables or USB extension cables to connect mobile devices to USB ports that already have a cable or that must be connected with a USB adapter cable (⇒ *page 198, fig. 141*). Using an additional adapter or USB extension cable may impair functionality.
- Functionality is not guaranteed for mobile devices that do not conform to the USB 2.0 specification.
- USB hubs are not supported.

- Video playback <sup>1)</sup> through the USB ports is not supported on Apple devices and MTP devices (such as smartphones).
- iPod touch or iPhone malfunctions also affect the operation of the MMI. Reset your mobile device in these situations.
- Audi recommends updating the iPod touch or iPhone software to the latest version. Refer to your mobile device owner's manual for more information.
- USB adapters on the USB ports will support iPod touch or iPhone devices from the 5th generation or newer with a lightning connector.
- A selection of supported devices can be found in the database for tested mobile devices at [www.audi.com/mp3](http://www.audi.com/mp3).

## Media playback<sup>1)</sup>

### Media sources

The following sources can be selected depending on the vehicle equipment:

- **Alexa** ⇒ *page 198*.
- **USB device** ⇒ *page 199*.
- **Connect external device**: you can connect external devices via Bluetooth and use the Bluetooth audio player ⇒ *page 197*, or you can connect an external device directly to the USB ports with charging function ⇒ *page 199*.
- **Streaming services** ⇒ *page 198*.


### Accessing media

#### Playing media files using the MMI

- ▶ Applies to: MMI: Select on the home screen: **MEDIA > Source > a source**. Depending on the connected device or online media service\*, the symbol for a source may change. The device name may be displayed (for example: my-Phone).
- ▶ Select a track from the categories in the media center ⇒ *page 200*.

#### Playing media files using the multifunction steering wheel

Requirement: a media source must contain media files ⇒ *page 200*.

- ▶ Select the radio/media tab in the instrument cluster.
- ▶ Press the  button to toggle between the radio and media or to select a different source.
- ▶ To select a media file/source, turn and press the left thumbwheel.

#### Tips

- For safety reasons, the video image\* is only displayed when the vehicle is stationary. Only the sound from the video\* plays while driving.
- Applies to: multifunction steering wheel: Depending on the selected function, operation through the MMI may be required.

### Media center

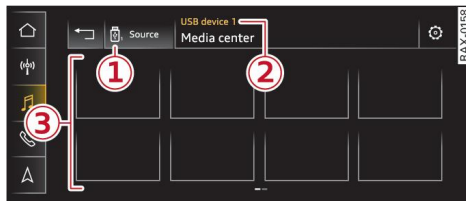


Fig. 142 Center display: media center

There are various categories available in the media center. You can also search for media files across sources. The current music track continues playing while you search the MMI.

#### Opening the media center

- ▶ Applies to: MMI: Select on the home screen: **MEDIA > Source > a source > a category**.

#### Source symbol

The symbol for the source that is currently in use is displayed. Depending on the connected device or online media service\*, the source symbol may change. As an example, a USB stick is shown ▶

<sup>1)</sup> Picture playback for video files depends on the country in which this function is used.

connected to the USB port with charging function.

### ② Source device name

The device name of the source that is currently in use is displayed.

### ③ Categories

The media center will display categories depending on vehicle equipment, the connected device, the content of the selected source, and the connection type:

- Last played tracks
- Artists
- Compilations
- Composers
- iTunes Radio
- Audio books
- Podcasts
- Genres
- Videos
- Tracks
- Albums

Other categories may be available depending on the service.

### Playlists

All playlists and smart playlists in the source are displayed.

### Smart playlists

- Last played tracks

### – Most played tracks


### Folders

The folder structure or track/chapter list is displayed.



#### Note

Applies to: vehicles with Audi connect Infotainment

- Cloud services and the iTunes radio category always require an Internet connection.
- Read the information about Audi connect, especially regarding connectivity costs ⇒  in *General information on page 169*.



#### Tips

- Only the categories supported by the medium/service are available.
- For safety reasons, the video image\* is only displayed when the vehicle is stationary. Only the sound from the video\* plays while driving.
- When synchronizing a mobile device with Cloud services, playlists may display incorrectly in the MMI. Use the media center in the device.
- Applies to: iPod touch/iPhone: Note the information about the USB port with charging function and the supported devices ⇒ *page 198*.

Media functions

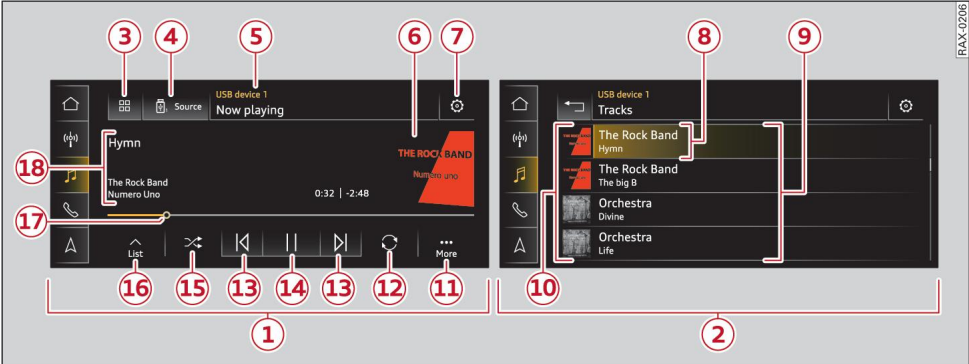


Fig. 143 Center display: left side: playback view; right side: playlist

Operating

► Applies to: MMI: To open the playback view ①, select on the home screen: **MEDIA > Source > a source > a category** (for example, **Artists > Album**) > a track.


► To open the playlist ②, select **List** in the playback view ⑬.

Depending on the vehicle equipment and the selected media sources, the following functions may be available.

	Symbol/Description	Description
③	☰	The media center categories are displayed based on the active source ⇒ <i>page 200</i> .
④	Source	Displays sources in the Media menu.
⑤	Source/device name	device name of the source that is currently playing.
⑥	Album cover in the playback view	Requirement: a media source with album covers must be selected or the covers must be available online ⇒ <i>page 204</i> , <b>Online additional data</b> . Displays the current album cover. <b>Display the playlist:</b> press on the cover.
⑦	⚙	Settings ⇒ <i>page 204</i> .
⑧	Current track information	Display of <b>Track</b> and <b>Artist</b> . Highlights the track that is currently playing.
⑨	List	<b>Browsing in the list:</b> drag your finger upward or downward.
⑩	Album cover in the playlist	Requirement: a media source with album covers must be selected or the covers must be available online ⇒ <i>page 204</i> , <b>Online additional data</b> . Displays the current album cover.
⑪	More	Opens options ⇒ <i>page 203</i> .
⑫	⏻ Off	<b>Switching between off/playlist/track:</b> press ⑫.
	🔄 Playlist	The tracks in the current playlist will repeat continuously in a loop.
	🔄 Track	The current track will repeat continuously in a loop.



	Symbol/Description	Description
13	⏮/⏭	<b>Selecting the previous/next track (or station/chapter):</b> press ⏮ or ⏭. <b>Fast forward/rewind:</b> to fast forward or rewind within a track, press and hold ⏭ or ⏮. <b>Jumping to the beginning of a track:</b> press on ⏮ after the first three seconds of play time.
14	⏩/⏪	Start or stop playback
15	🔀	When this function is turned on, all files in the playlist will play in random order.
16	List	The playlist 2 is displayed.
17	Playback position	The bar shows the current playback position in the track. <b>Fast-forward or rewind:</b> to fast forward or rewind within a track, move the bar to the right or left. <b>Changing the playback position:</b> press the desired playback position.
18	Info section	Display of Track, Artist, and Album.

 **Tips**

Not all functions are available in every source and on every touch display.

Free text search

Applies to: vehicles with free text search

You can search across all active sources, for example for tracks and artists.

Opening the search

Requirement: the selected source must support the search function.

- Applies to: MMI: Select on the home screen: **MEDIA > Search.**

Entries that contain the entered search term are listed in the results list. Each result is marked with the symbol for a category in the media center ⇒ *page 200.*

- You can search for the following categories:
- Artists
  - Albums
  - Tracks
  - Genres
  - Videos\*

Options and settings

Options

Context-dependent functions and settings may be available depending on the country and vehicle equipment, the selected source, the connected mobile device, and the connection type.

Requirement: the playback view must be displayed 1 ⇒ *page 202, fig. 143.*

- Press **More** 11.

Play more like this

The track currently playing is quickly analyzed for features such as artist, genre, mood, and beat, and a smart playlist with similar tracks will be shown.

Aspect ratio

Audi recommends the **Auto** setting for the picture format. If you press on an aspect ratio, you will see a preview of the setting on the screen. Press **OK** to apply the selected aspect ratio.

The following table gives an overview of the aspect ratios. The possible aspect ratios depend on the source or video file being played. ►

Aspect ratio	Description
Auto	The MMI detects the picture format of the source and displays the image in the optimal ratio.
4:3, 16:9	The image is fixed in the corresponding ratio. Select one of these options if the image is distorted or a section of the image is cut off or blurry when <b>Auto</b> is selected.
Zoom	The image is enlarged to fill the entire display.
Original	The image is displayed in the ratio of the source format. Select this option if the image is distorted or a section of the image is cut off or blurry when <b>Auto</b> is selected.

Settings

Accessing settings

- **Applies to:** MMI: Select on the home screen: **MEDIA** >
- Depending on the vehicle equipment, the following settings may be available:

Online additional data

Requirement: the MMI must be connected to the Internet ⇒ *page 169, Audi connect*. Depending on the country, a data package may also be required ⇒ *page 173*.

When the function is turned on, additional information (such as album cover, artist, track) will be loaded depending on the availability.

Supported media and file formats

Overview


Depending on the country and vehicle equipment, media files with the following properties may be supported by the connection for USB storage devices:

Audio/video files	
Supported media	<b>USB ports with charging function:</b> mobile devices ⇒ <i>page 198</i> such as iPhones, MTP players, and USB storage devices in “USB Device Sub-class 1 and 6” that conform to USB 2.0: USB sticks, USB MP3 players (Plug-and-Play capable), external USB flash drives, and hard drives
File system	<b>USB storage devices:</b> exFAT, FAT, FAT32, NTFS. <b>USB storage device partitions (primary/logical*):</b> 2 per USB connection.
Metadata	<b>Album cover:</b> GIF, JPG, PNG with max. 800x800 px. The album cover from the medium or from Gracenote* is displayed, depending on availability.
Playlists	.M3U; .PLS; .WPL; .M3U8; .ASX
Number of files	<b>USB mass storage device:</b> max. 50,000 files per medium; max. 1,000 files per playlist/folder

Audio files		
Format	File extension	Up to maximum 320 kbit/s 48 kHz sampling frequencies
MPEG 1/2 Layer 3	.mp3	
Windows Media Audio 9/10	.wma	
MPEG 2/4	.m4a; .m4b; .aac	
Opus	.opus; .ogg; .oga	

Audio files		
FLAC	.flac	48 kHz sampling frequency
ALAC	.m4a	
Monkey's Audio	.ape	

Video files		
Format	File extension	Up to maximum 15 Mbit/s and 1920x1080 px at maximum 30 fps
MPEG 1/2	.mpg; .mpeg	
MPEG4 AVC (H.264)	.mp4; .m4v; .mov; .avi	
Windows Media Video 9	.wmv; .asf	
MPEG-H (H.265/HEVC)	.mp4; .mov	
VP8/VP9	.webm	
Flash video	.flv; .f4v	


**Tips**

- The media sources do not support the Windows Media Audio 9 Voice format.
- For compressing MP3 files, Audi recommends a bit rate of at least 160 kbit/s. The display showing the remaining play time may differ for audio files with variable bit rate.
- Special characters (such as those in ID3 tag information) may display differently or may

- not always display, depending on the system language.
- The manufacturer of the storage device can provide information about its “USB Device Subclass”.
- Some MTP player functions are not supported, such as rating music tracks and video playback.

# Troubleshooting

The information that follows lists some troubleshooting options. They depend on vehicle equipment.

Problem	Solution
<b>USB ports with charging function/Bluetooth® audio player:</b> the mobile device is not supported.	Read the instructions in the chapter ⇒ <i>page 198, Multimedia connections</i> /⇒ <i>page 197, Bluetooth audio player</i> .
<b>USB ports with charging function:</b> the mobile device is not recognized as a source.	For many mobile phones or mobile devices, playback is not possible when the battery level is too low (less than 5% charge level). The mobile device will only be recognized as a media source in the MMI after connecting if the battery charge level is sufficient.
<b>USB ports with charging function:</b> malfunctions during audio playback through an iPod touch/iPhone.	The <b>Bluetooth® audio player</b> function is turned on. Turn off this function ⇒ <i>page 211</i> when you are not using the <b>Bluetooth® audio player</b> .

Problem	Solution
<b>USB ports with charging function:</b> audio playback through the connected mobile device is not possible.	Make sure the <i>MTP</i> USB mode is selected in the settings on your mobile device.
<b>Bluetooth® audio player:</b> interference with track display and audio playback.	Playback interference can occur when using the <b>Bluetooth® audio player</b> if a music player app from a third party provider is open. Audi recommends using the integrated media player on your Bluetooth device (such as a smartphone).
<b>Online media:</b> no playback of online media.	Check if a data plan has been purchased for the applicable country and if it is available ⇨ <i>page 173</i> .

## Interior entertainment


### Themes

Applies to: vehicles with themes

This function allows you to customize the appearance of the Infotainment system using themes.

#### Using the theme preview


You can display a temporary preview of a theme.

- Applies to: MMI: Select on the home screen:  
**THEMES** >  > a theme.
- Press **Preview**.

#### Downloading a theme

To continue using a theme, you must download it.

Requirements: You must have the myAudi app installed on your mobile device. You added your vehicle to the myAudi app. You are logged into the vehicle with your myAudi user.

- Open the myAudi app and download the desired theme, or
- Applies to: MMI: Select on the home screen:  
**THEMES** >  > a theme.
- Follow the system instructions.

#### Selecting a theme

Requirement: you have downloaded a theme.

- Choose your desired theme in the myAudi app, or
- Applies to: MMI: To activate a theme, select on the home screen: **THEMES** > a theme.
- Applies to: MMI: To restore the default appearance, select on the home screen: **THEMES** > **No theme**.

#### Using as a screensaver


The screensaver will display the background image without showing the menu icons.

Requirement: you have activated a theme.

- Applies to: MMI: Swipe to the right until the background image is displayed without menu icons.



#### Note

Read the information about Audi connect, especially regarding connectivity costs ⇒  in *General information on page 169*.

# Smartphone interface

## Setup

Applies to: vehicles with smartphone interface

You can connect your smartphone to the MMI with a cable or wirelessly\* using the smartphone interface. Certain content on your smartphone is adapted in the MMI while driving and can be operated through the MMI.

### Connecting a smartphone with a cable

Requirement: the vehicle must be stationary and the ignition must be turned on. An iPhone from generation 6S or newer with lightning connection or USB connection must have the latest operating system installed or a smartphone with Android Auto app must have Android 8.0 or newer installed.

- ▶ Connect your smartphone to the USB port with charging function ⇒ *page 199* using a USB adapter ⇒ *page 198, fig. 141*.

### Connecting a smartphone wirelessly

Applies to: vehicles with wireless Apple CarPlay/wireless Android Auto

Requirement: the vehicle must be stationary and the ignition must be turned on. An iPhone from generation 6S or newer with lightning connection or USB connection must have the latest operating system installed or a smartphone with Android Auto app must have Android 11 or newer installed.

- ▶ To connect your smartphone wirelessly, turn on the Bluetooth function and Wi-Fi on your smartphone.
- ▶ Applies to: Apple CarPlay: Open the Apple CarPlay settings in your iPhone.
- ▶ Applies to: Android Auto: Make sure that wireless Android Auto is allowed in the app settings in your smartphone.
- ▶ Enable the Bluetooth function and visibility on the MMI ⇒ *page 211*.
- ▶ Applies to: MMI: Select on the home screen: **SETTINGS > Connected devices > Smartphone interface > New connection**.
- ▶ In the MMI, press on your smartphone in the list of displayed devices.
- ▶ To update the list, press ↻.

### Establishing a wired/wireless\* connection

- ▶ Follow the system instructions if necessary.
- ▶ Pay attention to any additional system prompts on your smartphone, if applicable.
- ▶ Applies to: MMI: If you declined use of Apple CarPlay or Android Auto the first time you connected your smartphone, then select on the home screen: **SETTINGS > Connected devices > Smartphone interface > a smartphone**.
- ▶ Follow the system instructions.



### WARNING

Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Never operate mobile devices while driving, because this increases the risk of an accident.



### Note

Read the information about Audi connect, especially regarding connectivity costs ⇒ ⓘ in *General information on page 169*.



### Tips

- The functions that can be used depend on the following factors, among others:
  - The brand of your smartphone
  - The version of your smartphone's operating system
  - The software version of the app used
  - The USB adapter cable and correct connection
  - Your mobile phone service provider
  - The customized settings on your smartphone
- One of the factors above or a combination of any of them could cause incompatibility with the smartphone interface. Compatibility cannot be guaranteed for all types of smartphones. For more information and assistance, refer to the user guide and the manufacturer of your smartphone.
- Please note that in order to use the smartphone interface, you can only connect your smartphone via the front USB port with charging function.

- Wireless Apple CarPlay\*/wireless Android Auto\* is not available in all countries.
- Wireless Apple CarPlay\*/wireless Android Auto\* is only possible in vehicles without a navigation system or without a detected vehicle position (GPS data) if the following requirement is met: the embedded SIM card for the vehicle must be logged into the mobile phone network ⇒ *page 170*.
- If the connected smartphone has voice control, you can operate your smartphone using the external voice recognition system ⇒ *page 28*.
- The MMI uses the menu language selected in your smartphone settings.
- Some MMI functions are not available when there is an active smartphone interface connection.
- You cannot connect any mobile devices via Bluetooth when a smartphone interface connection is active.
- Usage of the smartphone interface depends on the availability of services through third party providers.
- Audi merely provides access to third party services through the MMI and does not assume any responsibility for the content of these services.

## Troubleshooting

Applies to: vehicles with smartphone interface

The information that follows lists some troubleshooting options. They depend on vehicle equipment.

Problem	Solution
Smartphone interface cannot be opened.	Check the battery charge level on your smartphone. Check the USB adapter and use a different one if necessary. Check if Android Auto or Apple CarPlay is available in the country where the vehicle is being operated.
	<b>Android Auto:</b> check if the Android Auto app is installed on your smartphone.
Connecting the smartphone to the MMI failed.	Make sure that you are using the correct USB adapter and check if the USB adapter is connected correctly to your smartphone and the USB port with charging function ⇒ <i>page 198</i> .
	<b>Apple CarPlay:</b> check if Apple CarPlay is activated on your iPhone. <b>Android Auto:</b> check in the Android Auto app if Android Auto permits new vehicles.

Problem	Solution
Wireless connection between the smartphone and the MMI failed.	<b>Apple CarPlay:</b> open the settings for Bluetooth and Apple CarPlay on your iPhone. Remove your vehicle.
	<b>Android Auto:</b> open the settings for Bluetooth on your smartphone. Remove your vehicle. Also remove your vehicle in the Android Auto app.
	Open the Connected devices menu ⇨ <i>page 212</i> . Delete your smartphone in the Telephone 1 and smartphone interface menu items. Repeat the connection process. Restart the MMI ⇨ <i>page 21</i> . Restart your smartphone. Open the Wi-Fi settings in your smartphone. Check if your smartphone has connected to the 5 GHz vehicle Wi-Fi. Try connecting to the 5 GHz Wi-Fi manually.
The smartphone is not automatically detected.	Make sure that you are using the correct USB adapter and check if the USB adapter is connected correctly to your smartphone and the USB port with charging function ⇨ <i>page 198</i> . Check if the requirements needed to connect a smartphone have been met.



## Additional settings

### System settings

#### Introduction

General settings are described in this chapter. You can find specific settings in the chapters about those settings. The available settings depend on the vehicle equipment.

#### Date and time

- Applies to: MMI: Select on the home screen: **SETTINGS > General > Date & time.**

Possible settings:

- **Automatically set date and time**
- **Date**
- **Time**
- **Date format**
- **Time format**
- **Automatic time zone**
- **Time zone**

#### Measurement units

- Applies to: MMI: Select on the home screen: **SETTINGS > General > Measurement units.**

Possible settings:

- **Speed**
- **Distance**
- **Temperature**
- **Volume**
- **Pressure**
- **Consumption (engine)**

#### Language and keyboard

- Applies to MMI: Select on the home screen: **SETTINGS > Language & Keyboard.**

#### Language

You can change the languages for the display, navigation announcements, and the voice recognition system.

#### Keyboard

See ⇨ page 25.

#### Sound

Requirement: an audio source must be active.

- Applies to MMI: Select on the home screen: **SETTINGS > Sound.**

Possible settings:

- **Treble**
- **Bass**
- **Balance/fader**
- **Speed dependent volume control**
- **Subwoofer**
- **Surround level**
- **Focus**
- **3D effect**

#### Announcements and tones

- Applies to: MMI: Select on the home screen: **SETTINGS > Announcements & Tones.**

Possible settings:

- **Announcement volume**



#### WARNING

Adjust the volume of the audio system so that signals from outside the vehicle, such as police and fire sirens, can be heard easily at all times.



#### Tips

The volume is automatically adjusted to a preset level when the MMI is turned on.

#### Bluetooth

Applies to: vehicles with Bluetooth

- Applies to MMI: Select on the home screen: **SETTINGS > Connection settings > Bluetooth®**

#### Bluetooth®

You can select a setting for visibility of the MMI to other Bluetooth devices. To connect a new

## Additional settings

Bluetooth device, the **Visible** setting must be selected. If **Invisible** is selected, a Bluetooth connection will only be possible with paired devices. If **Off** is selected, no Bluetooth device can be connected.

### Bluetooth® audio player

When this function is turned on, the profile will load automatically when your Bluetooth audio player is within range.

### Bluetooth® name

The MMI's Bluetooth name is displayed and can be changed.

#### Tips

The *name of the Wi-Fi hotspot* and the *Bluetooth name* are automatically compared when there are changes.

### Factory default settings

Requirement: the ignition must be turned on.

- Applies to MMI: Select on the home screen: **SETTINGS > System maintenance > Restore factory settings**.
- Follow the system instructions.

The settings will be reset. The system will restart. This may take some time.

#### Tips

Make sure that not only the settings were deleted but also the stored data, if applicable.

## Software update

### Introduction

Applies to: vehicles with software update

You can update your vehicle's software.

The functions depend on the country and vehicle equipment:

- Map material update for the navigation system  
⇒ *page 186*.
- Have the software update performed by an authorized Audi dealer or authorized Audi Service Facility. This can result in additional costs.

#### WARNING

- Perform the installation only when the vehicle is stationary. Otherwise, this increases the risk of an accident
- If the installation fails, contact an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

## Connected devices

### Displayed connected devices

Requirement: the vehicle must be stationary and the ignition must be turned on.

- Applies to: MMI: Select on the home screen: **SETTINGS > Connected devices**.

Possible menu items:

- Telephone 1
- Telephone 2
- Audio player
- Wi-Fi hotspot
- Headset


### Smartphone interface

You can connect your smartphone to the MMI  
⇒ *page 208*.

### myAudi app

This function is available if an appropriate Audi app is installed on your mobile device and started, and if the mobile device is connected to the vehicle's Wi-Fi hotspot.

#### Note

Read the information about Audi connect, especially regarding connectivity costs ⇒  in *General information on page 169*.

### Managing connected devices

Requirement: the connected devices menu must be displayed ⇒ *page 212*. ►

## Connecting a device

Requirement: Bluetooth visibility must be activated in the MMI ⇒ *page 211* and mobile device.

- ▶ Press on a menu item, such as **Telephone 1**.
- ▶ To search for and connect your mobile device, press **New connection** ⇒ *page 157*.

## Selecting a connected device

- ▶ Press on a menu item, such as **Telephone 1**.
- ▶ Press on the desired mobile device in the list of displayed devices. The connection will be made.

## Disconnecting a connected device

- ▶ Press on a menu item, such as **Telephone 1**.
- ▶ Press on the connected mobile device. The selected mobile device will be disconnected from the MMI.

## Deleting a device

- ▶ Press on a menu item, such as **Telephone 1**.
- ▶ Press and hold an element until the **Options** menu is displayed.
- ▶ Press **Delete**.

If a device is listed multiple times, it will be deleted from all menu items.



### Tips

Audi recommends not connecting more than six devices. Regularly delete devices that are no longer used.

## Additional options

Depending on the selected function, additional options may be available.

Requirement: the connected devices menu must be displayed ⇒ *page 212*.

- ▶ Press on a menu item, such as **Telephone 1**.
- ▶ Press and hold an element until the **Options** menu is displayed.

## Bluetooth® profiles

You can turn desired profiles on or off separately in the MMI.

## Favorite

To set a paired mobile device as the default phone, activate this function in the MMI.

When the mobile device is in range and the Bluetooth function on the mobile device and in the MMI is turned on, the default phone will be given priority over the other Bluetooth devices and will be connected directly to the MMI.

## Legal information

### General information

Information on the software licenses can be found online at [www.audi.com/softwareinfo](http://www.audi.com/softwareinfo).

### Multi Media Interface

- ▶ Applies to: MMI: Select on the home screen: **SETTINGS > General**.

### Licenses

### Version information

### Legal notes

Possible options:

- **Software information**
- **About Audi connect**

### Smartphone interface

Applies to: vehicles with smartphone interface

Requirement: a smartphone must be connected to the MMI ⇒ *page 208*.

- ▶ Applies to: MMI: Select on the home screen: **SETTINGS > Connected devices > Smartphone interface**.
- ▶ Press and hold an element until the **Options** menu is displayed.
- ▶ Press **Legal notes**.


### Instrument cluster

Requirement: the vehicle must be stationary and the ignition must be turned on.

- ▶ Select in the instrument cluster: vehicle functions tab ⇒ *page 15*.

## Additional settings

---

- Press and hold the  button on the multifunction steering wheel until the display appears.

Possible options:

- **Engine code**
- **Software information**
- **Version information**

## Checking and Filling

### Fuel

#### Types of gasoline

The correct gasoline grade is stated on the inside of the fuel filler door.


The vehicle is equipped with a catalytic converter and must only be driven with **unleaded gasoline**.

Audi recommends using TOP TIER Detergent Gasoline. For additional information on TOP TIER Detergent Gasoline, visit [www.toptiergas.com](http://www.toptiergas.com).

The individual gasoline grades are differentiated by **octane ratings**. This value is given with (R+M)/2 equating to AKI or in RON.

The headings below match the sticker in the fuel filler door (examples):

#### UNLEADED FUEL ONLY MIN. (R+M)/2 87 Regular / MIN. RON 91 Regular

Use regular gasoline with minimum 87 AKI / 91 RON ⇒ .

Audi recommends using premium gasoline with minimum 91 AKI / 95 RON to achieve the rated horsepower and torque.

#### UNLEADED FUEL ONLY PREMIUM MIN. (R+M)/2 91 / SUPER MIN. RON 95

Using premium gasoline with minimum 91 AKI / 95 RON is recommended.

If premium gasoline is not available, you can also use regular gasoline 87 AKI / 91 RON. However this does reduce the engine power slightly.

#### UNLEADED FUEL ONLY PREMIUM MIN. (R+M)/2 93 / SUPER PLUS MIN. RON 98

Using premium plus gasoline with at least 93 AKI / 98 RON is recommended.

If no premium plus gasoline is available, you can also use premium gasoline with 91 AKI / 95 RON. However this does reduce the engine power slightly.

#### Note

- Filling the tank just one time with leaded fuel or other metallic additives will cause permanent deterioration to the catalytic converter function.
- When gasoline with an octane rating that is too low is used, high speeds or heavy engine load can lead to engine damage.

#### Tips

The vehicle may be filled with fuel that has a higher octane rating than what is required by the engine.

#### Gasoline mixture

##### Gasoline with alcohol (ethanol)

You can fuel your vehicle with unleaded gasoline that has an ethanol content of up to 15%, for example “E15”.

##### Gasoline adapted to the season

Many gasoline fuels are adapted to the seasons. When the season changes, refueling at high-traffic gas stations is recommended. It is more likely that the gasoline will be suitable for the season there.

#### Note

- Do not use gasoline that does not meet the specifications.
- Ethanol fuels with a high ethanol percentage, such as E30 – E100, must **not** be used. The fuel system will be damaged!
- Methanol fuels with a high methanol percentage, such as M5 – M100, must **not** be used. The fuel system and the engine will be damaged!
- If you are unable to find out if a specific gasoline mixture meets the specifications, ask the gas station operator or their fuel supplier.
- Do not use any gasoline mixture whose composition cannot be identified.
- Audi does not assume any responsibility for damage to the fuel system or for performance problems caused by using gasoline

mixtures different from those specified. This type of damage also does not fall under the New Vehicle Limited Warranty or under the emissions control system warranty.

- If you notice a higher fuel consumption or poor handling or performance problems due to such gasoline mixtures, Audi recommends fueling with unblended gasoline.

### Gasoline additives

An important issue for many automobile manufacturers is combustion residue in the engine that results from the use of certain fuels.

Although types of gasoline differ depending on the manufacturer, there are similarities. Certain substances in the gasoline may cause deposits in the engine. Additives in the gasoline that should keep the engine and fuel system clean do not all function equally.

Audi recommends using TOP TIER Detergent Gasoline. For additional information on TOP TIER Detergent Gasoline, visit [www.toptiergas.com](http://www.toptiergas.com).

If you use incorrect fuels over a long period of time, the maximum engine performance may be impaired by combustion residue.

### Note


- Damage or malfunctions caused by the use of incorrect types of gasoline are not covered by the New Vehicle Limited Warranty.
- Only gasoline additives that have been approved by Audi may be used.

## Refueling

### Messages

The following messages may appear, depending on the vehicle equipment:

### Messages

If the  indicator light appears with a corresponding message, refuel the vehicle.

 **Tank system: malfunction! Please contact Service**

There is a malfunction in the fuel tank system. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

### Fueling detected. Reset mi (km) now?

Select **Yes** if you would like to reset the trip odometer.

The message appears in the instrument cluster depending on the fuel level in the tank and the amount of fuel added.

### Fueling procedure




**Fig. 144** Right rear side of the vehicle: opening the fuel filler door



**Fig. 145** Fuel filler door with attached fuel cap


The fuel filler door is unlocked or locked by the central locking system.

- ▶ Unlock the vehicle if necessary.
- ▶ Press on the left side of the fuel filler door to open it ⇒ *fig. 144*.
- ▶ Unscrew the tank cap counterclockwise.
- ▶ Place the cap from above on the open fuel filler door ⇒ *fig. 145*.
- ▶ Insert the fuel pump nozzle all the way into the fuel filler neck.

- ▶ Begin fueling. The fuel tank is full as soon as the pump nozzle shuts off for the first time  
⇒ .
- ▶ After the fuel pump has turned off, wait five seconds before removing the nozzle to allow the rest of the fuel to finish dripping into the fuel tank.
- ▶ Turn the fuel cap clockwise until it clicks into place.
- ▶ Close the fuel filler door and then press on the left side until it latches.

The correct fuel type for your vehicle can be found on a label located on the inside of the fuel filler door. For additional information on fuel, see ⇒ *page 215*.

For the tank capacity in your vehicle, refer to the Technical Data ⇒ *page 281*.

To reduce the risk of fuel leaking out or vapors escaping, make sure that the fuel tank is closed correctly. Otherwise the <sup>1)</sup> indicator light will turn on.



#### WARNING

Improper fueling procedures and improper handling of fuel can result in explosions, fires, severe burns, and other injuries.

- Do not smoke. Keep away from open flames.
- The ignition must be turned off when refueling.
- Mobile devices, radio devices, and other radio equipment should always be turned off when refueling. Electromagnetic rays could cause sparks and start a fire.
- If you do not insert the fuel pump nozzle all the way into the filler tube, then fuel can leak out. Spilled fuel can ignite and start a fire.
- Never get into the vehicle when refueling. If there is an exceptional situation where you must enter the vehicle, close the door and touch a metal surface before touching the fuel pump nozzle again. This will reduce the risk of electrostatic discharge that can cause

flying sparks. Sparks can start a fire when refueling.

- Once the fuel pump nozzle turns off the first time, the fuel tank is full. Do not continue fueling, or else the expansion space in the tank will be filled with fuel. Do not overfill the fuel tank – fuel may also leak at a later time if the temperature increases. This may cause explosions, fires, and severe or fatal injuries.



#### WARNING

Audi does not recommend transporting fuel containers inside the vehicle. Fuel could leak out of the container and ignite, especially during an accident. This can cause explosions, fires, and injuries.

- If you must transport fuel in a fuel container, note the following:
  - Always place the fuel container on the ground before filling. Never fill the fuel container with fuel while it is inside or on the vehicle. Electrostatic discharge can occur while refueling and the fuel vapors could ignite.
  - When using fuel containers made of metal, the fuel pump nozzle must always remain in contact with the container to reduce the risk of static charge.
  - Insert the fuel pump nozzle as far as possible into the filler opening while refueling.
  - Follow the applicable legal regulations in the country where you are driving when using, storing and transporting fuel containers.
  - Make sure that the fuel container meets the industry standards, for example ANSI or ASTM F852-86.



#### Note

- Remove fuel that has overflowed onto any vehicle components immediately to reduce the risk of damage to the vehicle.
- Never drive until the fuel tank is completely empty. The irregular supply of fuel that

<sup>1)</sup> Depending on the engine and country

results from that can cause engine misfires. Uncombusted fuel may enter the exhaust system and increase the risk of damage to the catalytic converter.



### For the sake of the environment

- Do not overfill the fuel tank, or fuel could leak out when the vehicle is warming up.
- Fuel should never enter the sewer system or come into contact with the ground.



### Tips

The fuel filler door on your vehicle does not lock if you lock the vehicle from the inside using the central locking switch.

## Manually releasing the fuel filler door

- ▶ See an authorized Audi dealer or authorized Audi Service Facility if you cannot open the fuel filler door.
- ▶ Afterward, drive to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

## Emissions control system

### General information



### WARNING

The temperature of the exhaust system is high, both when driving and after stopping the engine.

- Never touch the exhaust tail pipes once they have become hot. This could result in burns.
- Do not park your vehicle over flammable materials such as grass or leaves because the high temperature of the emissions system could start a fire.
- Do not apply underbody protectant in the exhaust system area, because this increases the risk of fire.


## Catalytic converter

Observe the safety precautions ⇒ *page 218, General information.*

The vehicle may only be driven with unleaded gasoline, or the catalytic converter will be destroyed.

Never drive until the tank is completely empty. The irregular supply of fuel that results from that can cause engine misfires. Uncombusted fuel could enter the exhaust system, which could cause overheating and damage to the catalytic converter.

## Malfunction Indicator Lamp (MIL)


If the  indicator light blinks or turns on, there is a malfunction related to emissions which can, for example, cause poor emissions quality and damage to the catalytic converter. Drive slowly to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

The indicator light can also turn on if the fuel filler cap is not closed correctly ⇒ *page 216<sup>1)</sup>*. On occasion, the indicator light may also turn on if the vehicle is driven with a compact spare tire installed ⇒ *page 264.*

## Engine compartment

### General information








*Special care is required if you are working in the engine compartment*

**For work in the engine compartment, such as checking and filling fluids, there is a risk of injury, scalding, accidents, and burns. For this reason, follow all the warnings and general safety precautions provided in the following information. The vehicle's engine compartment is a dangerous area. ⇒ .**

<sup>1)</sup> Depending on the engine and country



### Explanation of warning symbols:

	Observe all warnings - there is a risk for injury!
	Hot engine components! Rotating parts!
	The radiator fan can turn on at any time!
	High voltage! Turn off the engine before coming into contact with any ignition system components!
	The catalytic converter can be damaged if the oil level is too high!
	Hot coolant - there is a risk of scalding!
	Always follow the instructions in the Owner's Manual.

### **WARNING**

The engine/motor compartment in any motor vehicle is a potentially dangerous area and can cause serious personal injury.

- Always use extreme caution when doing any work in the engine compartment. Always follow commonly accepted safety practices and use common sense. Never risk personal injury.
- Never perform any work in the engine compartment unless you know exactly how to carry out the job and have the correct technical information and the correct tools.
- If you are uncertain about what to do, have the work performed by an authorized Audi dealer, an authorized Audi Service Facility, or another qualified workshop. Serious personal injury may result from work that is not performed correctly.

### **WARNING**

- Turn off the engine.
- Turn off the ignition.
- Set the parking brake.
- Select the “P” (Park) position.
- Allow the engine to cool.
- Keep children away from the engine compartment.

- Never spill fluids on a hot engine. These fluids (such as the freeze protection contained in the coolant) can catch fire.
- Avoid short circuits in the electrical system.
- Never reach into the radiator fan. The fan is temperature-controlled and can turn on suddenly, even when the ignition is turned off.
- Never open the hood when there is steam or coolant escaping from the engine compartment, because there is a risk that you could be burned. Wait until no steam or coolant is escaping.
- The cap on the coolant expansion tank must never be opened when the coolant is hot. The cooling system is under pressure. There is a risk of burns
- To protect your face, hands, and arms from hot steam or coolant, cover the cap with a thick cloth when opening.
- Do not remove the engine cover under any circumstances. This increases the risk of burns.
- Due to the risk of electric shock, never touch the ignition cable or other components in the electronic high-voltage ignition system when the engine is running or is starting.
- If a position is selected while the vehicle is stationary and the engine is running, do not press the accelerator pedal inadvertently. Pressing the accelerator pedal will cause the vehicle to move, and this could result in an accident.
- If inspections or repairs must be performed while the engine is running, moving components (such as the ribbed belt, generator, and radiator fan) pose an additional risk.
- Set the parking brake first and select the “P” (Park) position.
- Always make sure that no parts of the body, jewelry, ties, loose clothing, and long hair can be caught in moving engine components. Before any work, always remove any jewelry and/or ties, tie back long hair, and make sure all clothing fits close to the body to reduce the risk of anything becoming caught in engine components.

- Pay attention to the following warnings listed when work on the fuel system or on the electrical equipment is required.
- Do not smoke.
- Never work near open flames.
- Always have a working fire extinguisher nearby.
- All work on the battery or electrical system in your vehicle can result in injuries, chemical burns, accidents, or burns. Because of this, all work must be performed **only** by an authorized Audi dealer or authorized Audi Service Facility.
- Limit your exposure to exhaust and chemicals to as short a time as possible.

### **WARNING**

California Proposition 65 Warning:

- Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harms. Wash hands after handling.

### **Note**

When filling fluids, be sure not to add any fluids to the wrong reservoirs. Otherwise severe malfunctions and engine damage will occur.

### **For the sake of the environment**

You should regularly check the ground under your vehicle in order to detect leaks quickly. If there are visible spots from oil or other fluids, bring your vehicle to an authorized Audi dealer or authorized Audi Service Facility to be checked.

er or authorized Audi Service Facility to be checked.

## Opening and closing the hood

*The hood is released from inside the vehicle.*



Fig. 146 Footwell: release lever

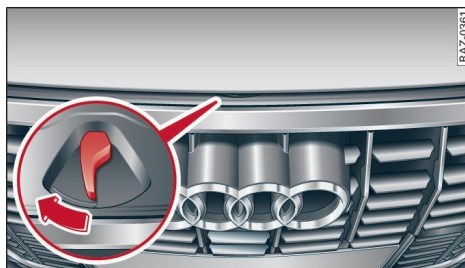




Fig. 147 Unlocked hood: lever

Observe the safety precautions ⇒ *page 218, General information.*

 
Make sure the wiper arms are not raised up from the windshield. Otherwise the paint could be damaged.


### Opening the hood

- ▶ With the door open, pull the lever <sup>1)</sup> below the instrument panel in the direction of the arrow ⇒ *fig. 146.*
- ▶ Raise the hood slightly ⇒ .
- ▶ Press the lever in the direction of the arrow ⇒ *fig. 147.* This releases the hooks.
- ▶ Open the hood.

### Closing the hood


- ▶ Push the hood down until you override the force of the strut.

<sup>1)</sup> The  symbol is not available in all countries.

- Let the hood fall lightly into the latch. *Do not press it in.* ⇒ .

### Messages

The following messages may appear, depending on the vehicle equipment:

 **Warning! Hood is not locked. Stop vehicle and check the lock**

The hood latch is not locked correctly. Stop immediately and close the hood.

### WARNING

- Never open the hood when there is steam or coolant escaping from the engine compart-

ment, because there is a risk that you could be burned. Wait until no steam or coolant is escaping.

- For safety reasons, the hood must always be latched securely while driving. Because of this, always check the hood after closing it to make sure it is latched correctly. The hood is latched if the front corners cannot be lifted.
- If you notice that the hood is not latched while you are driving, stop immediately and close it, because driving when the hood is not latched increases the risk of an accident.

## Engine compartment overview

*The most important check points.*

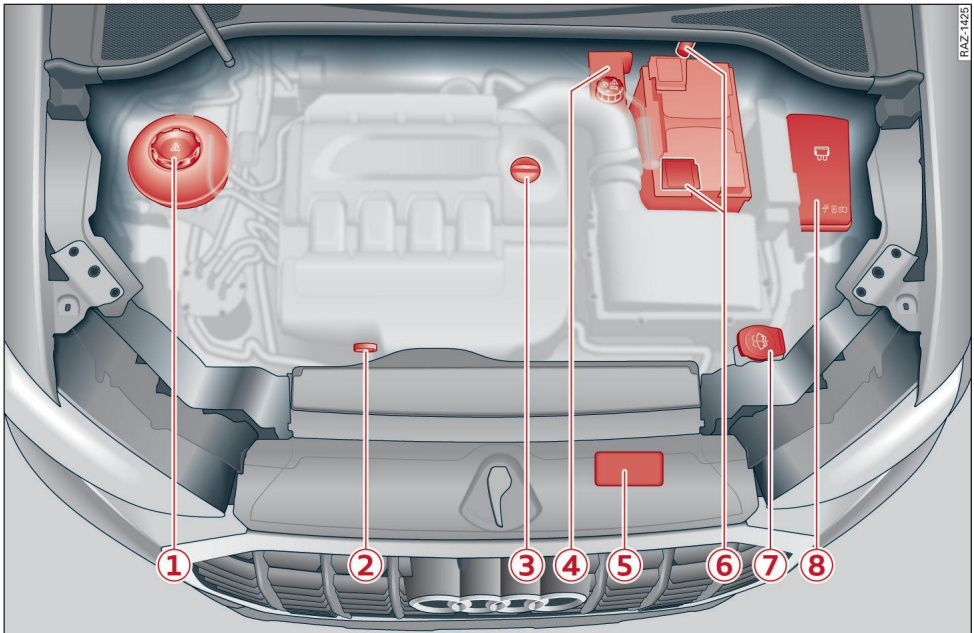

 
 


Fig. 148 Engine compartment overview: diagram

Observe the safety precautions ⇒ *page 218, General information.*

- ① Coolant expansion tank () ⇒ *page 227*
- ② Engine oil dipstick ⇒ *page 223*

- ③ Engine oil filler opening () ⇒ *page 223, Checking the engine oil level*
- ④ Brake fluid reservoir () ⇒ *page 228*
- ⑤ Sticker for engine oil specifications ⇒ *page 222*

- ⑥ Vehicle battery (+) and ground point (-) at the body ⇒ *page 232, Charging the 12 volt vehicle battery*, ⇒ *page 265, Jump starting*
- ⑦ Washer fluid reservoir (🚿) ⇒ *page 232*
- ⑧ Fuse housing ⇒ *page 270*

The engine oil dipstick and the engine oil filling opening may be located in different places within the engine compartment, depending on the engine version. Depending on the engine, the coolant expansion tank may look different.

## Engine oil

### If the engine oil level is too low

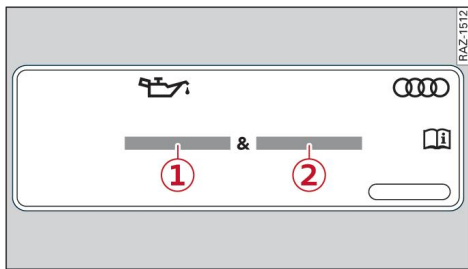


Fig. 149 Engine oil sticker

- ① Engine oil viscosity
- ② Engine oil standard

If you need to add engine oil, use an oil that meets the engine oil standard listed on the sticker ⇒ *fig. 149*. The sticker with the specified standard is located in the front of the engine compartment ⇒ *page 221, fig. 148*. When using the specified engine oil, you can adjust the oil level as often as needed.

If engine oil that meets the recommended specification is not available, **in an emergency** you may add a maximum of 0.5 quart (0.5 liter) engine oil of the that meets the following different standard **one time** until the next regular oil change.

- Standard VW 504 00, ACEA C3, ACEA C4, API SP or ILSAC GF-6A. All viscosity classes within these standards are permitted.

Audi recommends having the oil changed by an authorized Audi dealer or authorized Audi Service Facility.



### Note

Audi recommends using approved engine oil that meets the respective VW standard. Using engine oils which do not meet these quality standards can cause damage to the engine. As an exception and only in an emergency, 0.5 qt (0.5 l) of engine oil that differs from the standards listed may be used.



### Tips

Audi recommends using engine oils provided by Audi Genuine Parts.

## Messages

The following messages may appear, depending on the vehicle equipment:



### Turn off engine. Oil pressure too low

Stop driving and turn off the engine. Check the engine oil level ⇒ *page 223*.

- If the engine oil level is too low, add engine oil ⇒ *page 224*. Only continue driving once the indicator light turns off.
- If the engine oil level is correct and the indicator light still turns on, turn the engine off and do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Applies to: vehicles with oil level warning:



### Please check oil level

- You may continue driving for the time being. Check the engine oil level as soon as possible ⇒ *page 223, Checking the engine oil level*.
- If the engine oil level is correct and the indicator light still turns on, drive at low engine speed to an authorized Audi dealer or authorized Audi Service Facility.



### Please reduce oil level

There is too much oil in the engine and there is a risk of damaging the catalytic converter or ►

engine. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the engine oil level adjusted if necessary. Avoid high engine speeds, full acceleration, and heavy engine loads.

#### **Oil level sensor: oil change necessary. Please contact Service**

Fuel has entered the engine oil. This will cause the engine oil level to rise slowly and the engine oil quality to decrease. Do not extract engine oil to reduce the level, because this will increase the risk of engine damage. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have engine oil extracted.

#### **Oil level system: malfunction! Please contact Service**

The sensor that checks the engine oil level has malfunctioned. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

#### **Oil pressure sensor: malfunction! Please contact Service**

The sensor that checks the engine oil pressure has malfunctioned. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

#### **Please drive to warm up engine**

Especially low outside temperatures are a main reason why fuel may get into the engine oil. The fuel can only evaporate from the engine oil if the engine oil temperature is high enough.


Drive in the "S" position.

Drive the engine at higher RPMs while avoiding full acceleration.


You should drive for at least 30 minutes. The indicator light may not turn off during this time. Repeat the steps that are described at any time.

Have an authorized Audi dealer or authorized Audi Service Facility repair the malfunction if the indicator light does not turn off after a few drives.

#### **WARNING**


When the message  **Please drive to warm up engine** appears, adjust your speed according to the weather, road, terrain, and traffic conditions. You should never disobey the traffic laws applicable in the country in which you are driving in order to follow driving recommendations.

#### **Tips**

The oil pressure warning  is not an oil level indicator. Always check the oil level regularly.

#### Checking the engine oil level

*The engine oil dipstick varies depending on the engine type.*

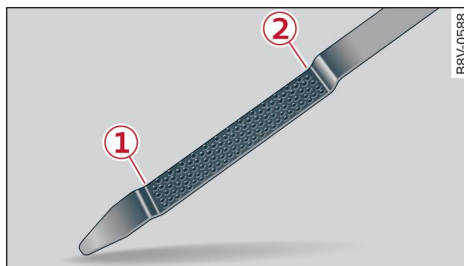

**Fig. 150** Oil dipstick (example): checking the engine oil level

Observe the safety precautions ⇒ *page 218, General information.*

- ▶ Park the vehicle on a level surface.
- ▶ Shut the engine off when it is warm.
- ▶ Wait approximately five minutes so that the engine oil can flow back into the engine oil pan.
- ▶ Open the hood ⇒ *page 220.*
- ▶ Remove the oil dipstick ⇒ *page 221, fig. 148*, wipe it off with a clean cloth and insert it all the way in again.
- ▶ Remove the oil dipstick again and then read the oil level ⇒ *table on page 224.*
- ▶ Slide the oil dipstick all the way in until it stops.
- ▶ Add engine oil if necessary ⇒ *page 224.*

Areas on the oil dipstick ⇒ *fig. 150*.

See ⇒ ①.

- |   |  |
|---|--|
| ① | If the engine oil level is just <b>over</b> the marking ①, then engine oil may be added.<br>If the engine oil level is just <b>under</b> the marking ①, then engine oil should be added. |
| ② | Do not add engine oil.   |

### ! Note

- The engine oil level must not be below the marking ①, because this increases the risk of engine damage.
- After adding engine oil, the oil level must not be above the marking ② ⇒ *fig. 150*, because this increases the risk of catalytic converter and/or engine damage. If the oil level is above the marking ②, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have any engine oil extracted. Avoid high engine speeds, full acceleration, and heavy engine loads.

### i Tips

- The engine oil consumption may be up to 0.5 quart/600 miles (0.5 liter/1,000 km), depending on driving style and operating conditions. Consumption may be higher during the first 3,000 miles (5,000 km). The engine oil level must be checked regularly. It is best to check each time you refuel your vehicle and before long drives.
- Because of the lubrication and cooling of the engine, combustion engines consume oil. The oil consumption varies depending on the engine and may change during the service life of the engine. Engines generally consume more oil at the beginning during the break-in period. Then oil consumption stabilizes after the break-in period.
- Under normal conditions, oil consumption depends on the quality and viscosity of the oil, the engine RPM, the climate conditions, and the road conditions. The dilution of oil from condensation or fuel residue as well as the age of the oil also play a role. Because engine wear increases with mileage, oil consumption will increase again over time until

it may be necessary to replace worn components.

- Because all these variables play a role, it is not possible to define an oil consumption standard. Therefore, the oil level must be checked regularly.
- If you believe that your engine has increased its oil consumption, contact an authorized Audi dealer or authorized Audi Service Facility to determine the cause. Please note that an exact oil consumption measurement must be done with the necessary care and accuracy and may take time. An authorized Audi dealer or authorized Audi Service Facility is trained in accurately measuring the oil consumption.
- You can find information on engine oil and engine oil capacities for the USA at [www.audiusa.com/help/maintenance](http://www.audiusa.com/help/maintenance), or for Canada at [www.audi.ca/ca/web/en/customer-area/care-and-maintenance/audi-service-schedules.html](http://www.audi.ca/ca/web/en/customer-area/care-and-maintenance/audi-service-schedules.html), or call 800-822-2834.

## Adding engine oil



**Fig. 151** Engine compartment: engine oil filling opening cover (example)

Observe the safety precautions ⇒ *page 218, General information*.

- ▶ Turn off the engine.
- ▶ Open the hood ⇒ *page 220*.
- ▶ Unscrew the cap for the engine oil filler opening ⇒ *fig. 151*.
- ▶ Carefully add 0.5 quart (0.5 liter) of the correct oil ⇒ *page 222*.
- ▶ Check the oil level again after two minutes ⇒ *page 223, Checking the engine oil level*.

- Applies to: using engine oil that meets the recommended specification: Add some more engine oil again if necessary.
- Close the engine oil filler cap and push the dipstick all the way in.
- Close the hood ⇒ *page 220*.



### WARNING

- When adding oil, do not let oil drip onto hot engine components. This increases the risk of a fire.
- You must close the cap on the oil filler opening correctly so that oil does not leak out onto the hot engine and exhaust system when the engine is running, because this is a fire hazard.
- Always clean skin thoroughly if it comes into contact with engine oil.
- Engine oil is poisonous and must be kept out of reach of children.
- Store the engine oil securely in the original container.



### Note

- Only use high-grade engine oil that explicitly meets the Audi oil quality standard for your vehicle. Using another oil may cause severe vehicle damage.
- Do not mix any additives with the engine oil. Additives may cause engine damage that is not covered by your New Vehicle Limited Warranty.



### For the sake of the environment

- Oil should never enter the sewer system or come into contact with the ground.
- Follow the legal regulations in the country where you are located when disposing of empty oil containers.

## Changing engine oil

*Audi recommends having the oil changed at an authorized Audi dealer or authorized Audi Service Facility.*

Observe the safety precautions ⇒ *page 218, General information*.

The engine oil must be changed at the intervals specified in the Warranty & Maintenance Booklet. This is very important because the lubrication function of the oil gradually declines during regular vehicle operation.

The engine oil should be changed more frequently under certain circumstances. Have the oil changed more frequently if you often drive short distances, your vehicle is predominantly in stop-and-go traffic situations, is in very dusty environments, or is operated for long periods of time in temperatures below zero.

Cleansing additives in the oil make fresh oil appear darker after the engine has run briefly. This is normal and no reason to change the engine oil more frequently than recommended.

Because correctly disposing of engine oil is difficult and special tools and technical knowledge are needed for an oil change, Audi recommends having your engine oil changed by an authorized Audi dealer or authorized Audi Service Facility.

If you change the engine oil yourself, please note the following important information:




### WARNING

If you change the engine oil on the vehicle yourself, the following precautions must be followed:


- Wear protective eyewear.
- Due to the risk of scalding, allow the engine to cool down sufficiently.
- Maintain enough distance when you are removing the oil drain plug. While doing this, keep your forearm parallel to the ground to reduce the risk of hot oil dripping down your arm.
- Drain the oil into a container designed for this purpose that is large enough to hold the full amount of oil in your engine.
- Engine oil is poisonous. Always store out of reach of children.
- Prolonged contact of used engine oil with the skin may cause skin damage. Always wash oil off immediately with soap and water to protect your skin.





**Note**

Do not mix any additives with the engine oil. Additives may cause engine damage that is not covered by your New Vehicle Limited Warranty.




**For the sake of the environment**

- Before changing the engine oil, make sure you can dispose of the used engine oil correctly.
- Engine oil must always be disposed of correctly. Do not dump it in the yard, in the forest, or in open water, river channels, or sewers.
- Have your used engine oil recycled by bringing it to a used oil collection site or contact a gas station.

Cooling system


Coolant

The engine cooling system is filled with a mixture of purified water and coolant additive at the factory. This coolant must not be not changed.


The coolant level is monitored using the  indicator light. However, you should occasionally check the coolant level.

Messages

The following messages may appear, depending on the vehicle equipment:

 **Turn off engine and check coolant level. See owner's manual**


or

 **Stop vehicle and check coolant level! See owner's manual**

The coolant level is too low.


Do not continue driving and turn off the ignition. Check the coolant level ⇨ *page 227*.

- If the coolant level is too low, add coolant ⇨ *page 227*. Only continue driving once the indicator light turns off.

 **Coolant temperature: too high. Please let engine run while vehicle is stationary**

Let the engine run at idle for a few minutes to cool off, until the indicator light turns off.

- If the indicator light does not turn off, do not continue driving the vehicle. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

 **Coolant system: malfunction! Please turn off engine**

Do not continue driving, shut off the engine, and turn off the ignition. See an authorized Audi dealer or authorized Audi Service Facility for assistance.


Coolant additive

The coolant additive is made of anti-freezing and corrosion protection agents. Only add the following coolant additives mixed with distilled water.

Coolant additive	Specification
G12evo	TL 774 L

The amount of coolant additive that needs to be mixed with water depends on the climate where the vehicle will be operated. If the coolant additive percentage is too low, the coolant can freeze and damage the engine.

	Coolant additive	Freeze protection
Warm regions	min. 40% max. 45%	min. -13 °F (-25 °C)
Cold regions	min. 50% max. 55%	max. -40 °F (-40 °C)



**Note**


- Before the start of winter, have an authorized Audi dealer or authorized Audi Service Facility check if the coolant additive in your vehicle matches the percentage appropriate for the climate. This is especially important when driving in colder climates.
- If the G12evo coolant additive is not available in an emergency, do not add any other additive. You could damage the engine. If this happens, only use distilled water and






restore the correct mixture ratio with the specified coolant additive as soon as possible.

- Only refill with new coolant.
- Radiator sealant must not be mixed with the coolant.
- You can continue driving if the permitted G12evo coolant additive was not added. However, go to an authorized Audi dealer or authorized Audi Service Facility immediately to have the coolant replaced to reduce the risk of engine damage.
- Due to the risk of engine damage, the cooling system should only be refilled by an authorized Audi dealer or authorized Audi Service Facility. An authorized Audi dealer or authorized Audi Service Facility can also provide you with important information about the recommended coolant additive.

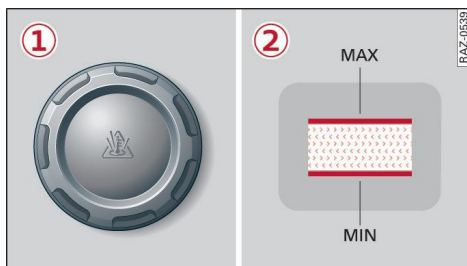
## Adding coolant



Requirement: there must be a residual amount of coolant in the expansion tank ⇒ .

If you must add coolant, use a mixture of distilled water and the specified coolant additive. Only use non-distilled water in emergency situations. Always use clean water only.

- ▶ Allow the engine to cool.
- ▶ Place a large, thick towel on the coolant expansion tank cap.
- ▶ Remove the cover  ⇒ *fig. 152* carefully to the left ⇒ .
- ▶ Add the correct mixture ratio of coolant ⇒ *page 226* up to the upper marking  ⇒ *fig. 152*.
- ▶ Make sure that the fluid level remains stable. Add more coolant if necessary.
- ▶ Screw on the cap securely to the right.



## Checking coolant



**Fig. 152** Engine compartment - coolant expansion tank (diagram):  cover;  markings

Observe the safety precautions ⇒ *page 218, General information*.

## Checking the coolant level

- ▶ Park the vehicle on a level surface.
- ▶ Turn off the ignition.
- ▶ Open the hood ⇒ *page 220*.
- ▶ Check the coolant level in the coolant expansion tank ⇒ *page 221, fig. 148* using the outer markings  ⇒ *fig. 152*. The coolant level must be between the markings  when the engine is cold. When the engine is warm it can be slightly above the upper marking.
- ▶ When you add coolant to the expansion tank, please refer to ⇒ *page 226, Cooling system*.


## WARNING

- The engine/motor compartment in any vehicle is a potentially dangerous area. Shut off the engine, turn off the ignition, and allow the engine to cool before working in the engine compartment. Always follow the information found in ⇒ *page 218, General information*.
- Never open the hood if you can see or hear steam or coolant escaping from the engine compartment. This increases the risk of burns. The cooling system is under pressure. When you no longer see or hear steam or coolant escaping, you may open the engine compartment with caution.
- When working in the engine compartment, remember that the radiator fan can turn on even if the ignition is turned off, which increases the risk of injury.
- Coolant additive and coolant can be dangerous to your health. For this reason, store the coolant in the original container and away from children. There is a risk of poisoning.

## Note

Coolant loss that results in the coolant expansion tank becoming nearly empty primarily

indicates that there are significant leaks in the cooling system, which can lead to further damage.

- Do not add coolant if the expansion tank is empty. Air could enter the cooling system and increase the risk of damage. If this is the case, do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.
- If there is any coolant remaining, add additional coolant. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. If the  indicator light turns on again, do not continue driving and turn off the ignition. See an authorized Audi dealer or authorized Audi Service Facility for assistance.
- If there is too much coolant in the expansion tank after adding coolant, drive to an authorized Audi dealer or authorized Audi Service Facility as soon as possible to have the coolant level corrected.
- Using non-distilled water increases the risk of engine damage. Its chemical components may cause significant corrosion damage in the engine.
- If you had to add a large amount of non-distilled water (more than 0.5 liter), then immediately drive to an authorized Audi dealer or authorized Audi Service Facility to have the coolant changed.

## Brake fluid

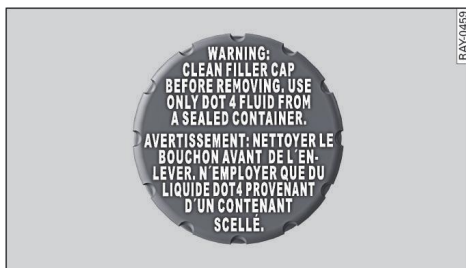



Fig. 153 Engine compartment: cap on brake fluid reservoir

Observe the safety precautions ⇒ *page 218, General information.*

## Checking the brake fluid level

- ▶ Park the vehicle on a level surface.
- ▶ Read the brake fluid level on the brake fluid reservoir ⇒ *page 221, fig. 148*. The brake fluid level must be between the MIN and MAX markings ⇒ .

The brake fluid level is monitored automatically.

## Messages

The following messages may appear, depending on the vehicle equipment:

** /  Brakes: stop vehicle and check brake fluid level**

Stop the vehicle and check the brake fluid level. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

## Changing the brake fluid

Brake fluid should be changed at regular intervals. Have the brake fluid changed by an authorized Audi dealer or authorized Audi Service Facility. The authorized Audi dealer or authorized Audi Service Facility will inform you of the replacement intervals.

### WARNING

- If the brake fluid level is below the MIN marking, it can impair the braking effect and driving safety, which increases the risk of an accident. Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.
- If the brake fluid is old, bubbles may form in the brake system during heavy braking. This could impair braking performance and driving safety, which increases the risk of an accident.
- The brake fluid in your vehicle must meet the standard VW 501 14 and is available at an authorized Audi dealer or authorized Audi Service Facility. If this brake fluid is not available, another high-grade brake fluid of equivalent quality may be used, and it must meet the U.S. Federal Motor Vehicle Standard (FMVSS) 116 DOT 4, Class 6.



- Reusing brake fluid or using brake fluid that is not permitted for your vehicle will significantly impair the braking performance and can even result in a failure of the brake system. The manufacturer of the vehicle is not liable for failures or damage resulting from this. It will also not be covered by the warranty.

### ! Note

- If the brake fluid level is above the MAX marking, brake fluid may leak out over the edge of the reservoir and result in damage to the vehicle.
- Do not allow any brake fluid to come into contact with the vehicle paint, because it will corrode the paint.

## Electrical system


The following messages may appear, depending on the vehicle equipment:

If the  or  indicator light turns on, there is a malfunction in the generator, the battery, or the vehicle electrical system.

 **Electrical system: malfunction! Safely stop vehicle**


or

 **Electrical system: malfunction! Battery is not charging**


Safely stop your vehicle, do not continue driving, and turn off the ignition ⇨ . See an authorized Audi dealer or authorized Audi Service Facility for assistance.

 **Electrical system: malfunction! Restart not possible. Please contact Service**

If you turn off the ignition, you will not be able to restart the vehicle. Vehicle functions or driving stability may be limited. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately.

 **Electrical system: malfunction! Please contact Service**

Turn off all electrical equipment that is not needed. If necessary, some equipment will be turned off automatically. Vehicle functions or driving stability may be limited. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately.

 **Electrical system: low battery charge. Battery will be charged while driving**

The starting ability may be impaired.


- If this message turns off after a little while, the vehicle battery has charged enough while driving.
- If the message does not turn off, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

### ! WARNING

When there is an electrical system malfunction, vehicle functions may not work and driving stability may be limited, which increases the risk of an accident. Do not continue driving and turn off the ignition. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

## Battery

### Battery general information

Because of the complex power supply, all work on batteries such as disconnecting, replacing, etc., should **only** be performed by an authorized Audi dealer or authorized Audi Service Facility ⇨ .

Multiple batteries with different technologies may be installed in your vehicle:

- Vehicle battery (for example, for starting the engine, basic power supply) ⇨ *page 231, Safety precautions*
- Auxiliary battery (for example, for recuperation or optional equipment) ⇨ *page 231, Safety precautions*

### Not running the vehicle for long periods of time

The battery will gradually drain if the vehicle does not run for long periods of time. To ensure that the vehicle can still be started, the electrical equipment will be limited or turned off. Some convenience functions, such as interior lighting or power seat adjustment, may not be available under certain circumstances. The convenience functions will be available again when you start the engine.

Even when electrical equipment is turned off, the equipment can still drain the battery if the vehicle is not driven for long periods of time. Deep draining results in a chemical reaction that destroys the inside of the battery. The battery must be charged every month to prevent this ⇒ *page 232*. Contact an authorized Audi dealer or authorized Audi Service Facility for more information.

### Winter operation

Cold weather places an especially high load on the 12 volt vehicle battery. Have the battery checked by an authorized Audi dealer or authorized Audi Service Facility before cold weather begins.

### Replacing the battery

Applies to: 12 volt vehicle battery

All work on the battery must **only** be performed by an authorized Audi dealer or authorized Audi Service Facility.

The 12 volt vehicle battery was developed based on the installation location and is equipped with safety features. If a 12 volt vehicle battery must be replaced, ask an authorized Audi dealer or authorized Audi Service Facility about the electromagnetic compatibility, size, and the necessary maintenance, power, and safety standards for the new 12 volt vehicle battery. The battery vent on the 12 volt vehicle battery must always be on the negative terminal side. The battery vent on the positive terminal side must always be closed.

When replacing the 12 volt lead-acid vehicle battery, only use a maintenance-free 12 volt lead-acid battery that conforms to the TL 825 06 and

VW 7 50 73 standards. These standards must be from October 2014 or newer.



#### WARNING


- All work on the battery or electrical system in your vehicle can result in injuries, chemical burns, accidents, or burns. Because of this, all work must be performed **only** by an authorized Audi dealer or authorized Audi Service Facility.
- Always have an authorized Audi dealer or authorized Audi Service Facility replace the 12 volt vehicle battery, because an adaptation must be performed on the vehicle electrical system when the battery is replaced. Only an authorized Audi dealer or authorized Audi Service Facility has the necessary technology to perform the adaption correctly. Otherwise, there could be a loss of safety-related functions among other things, which increases the risk of an accident.
- Using a 12 volt vehicle battery that does not match the same specifications and dimensions as the factory-installed 12 volt vehicle battery can result in short circuits or cause a fire. Serious injuries or death may result.
- Only use maintenance-free and leak-proof 12 volt vehicle batteries that match the same specifications and dimensions as the factory-installed 12 volt vehicle battery.
- Applies to: vehicles with a jump start connection in the engine compartment: The charging cable or jump start cable must never be connected directly to the 12 volt vehicle battery. Only use the connections in the engine compartment ⇒ *page 232*.




#### WARNING

- California Proposition 65 Warning:
- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harms. Wash hands after handling.

# Note



- If the vehicle will be parked for long periods of time, protect the 12 volt vehicle battery against the cold so that it will not “freeze” and become damaged ⇒ *page 232, Charging the 12 volt vehicle battery.*
- There are electrical components under the cargo floor behind a trim panel that warm up during operation. To reduce the risk of the components overheating, do not store objects such as blankets under the cargo floor. If the components overheat, they will turn off temporarily. This will be indicated by a message that will be displayed in the instrument cluster until the temperature returns to normal.
- Always have an authorized Audi dealer or authorized Audi Service Facility replace the 12 volt vehicle battery, because an adaptation must be performed on the vehicle electrical system when the battery is replaced. Only an authorized Audi dealer or authorized Audi Service Facility has the necessary technology to perform the adaption correctly.
- Using a vehicle battery that does not meet the AUDI AG quality specifications or with a capacity that is too low will void the vehicle’s certification for use on public roads, and this will void the vehicle registration ⇒ .


 









# For the sake of the environment

 Batteries and electrical/electronic devices must be disposed of in an environmentally safe manner ⇒ *page 283, Disposal instructions.*

## Safety precautions

### Explanation of warning symbols:

	Observe all warnings - there is a risk for injury!
	Always follow the instructions in the Owner’s Manual.

	12 volt vehicle battery. Energized components. Improper handling can result in short circuits ⇒  <i>in Battery general information on page 230.</i>
	With the exception of charging the 12 volt vehicle battery and jump starting, all other procedures involving the 12 volt vehicle battery must be performed by an authorized Audi dealer or authorized Audi Service Facility ⇒  <i>in Battery general information on page 230</i> ⇒  <i>in Battery general information on page 231.</i>
	Electrolyte fluid is highly corrosive. Always wear protective gloves and eye protection. <b>First aid:</b> if electrolyte fluid enters the eyes, immediately flush with clean water for several minutes. Seek medical attention immediately. Immediately neutralize electrolyte fluid on the skin or clothing using a soap solution and rinse with plenty of water. Seek medical attention immediately if electrolyte fluid is ingested.
	Always wear eye protection.
	If electrolyte fluid enters the eyes, immediately flush with clean water for several minutes. Seek medical attention immediately.
	Fire, sparks, open flame, and smoking are prohibited. Avoid creating sparks and short circuits when handling cables and electrical devices.
	Always keep children away from battery electrolyte fluid and the battery.
	A highly explosive mixture of gases can form when charging batteries.

## WARNING

All work on the batteries must **only** be performed by an authorized Audi dealer or authorized Audi Service Facility.

- Gases that escape from these batteries can be poisonous or flammable.
- The contents of these batteries can be corrosive. If any battery contents come into contact with the skin, flush the affected area

with clean water for at least 15 minutes. Then wash the affected area with soap. Have the affected area examined by a medical professional.

### Charging the 12 volt vehicle battery

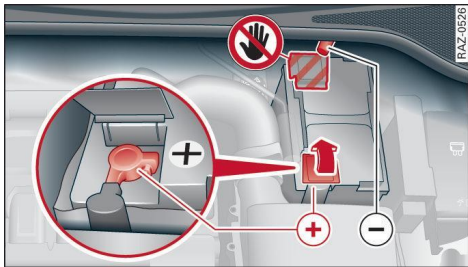


Fig. 154 Engine compartment with battery: connections for charger and jump start cable

Observe the safety precautions ⇒ *page 218, General information*, ⇒ ⚠ in *Battery general information on page 230* and ⇒ ⚠.

Requirement: only use chargers with a **maximum charging current of 14.8 volts**. The battery cables remain connected.

The battery is located in the engine compartment. The ground point ⊖ is always located on the vehicle body.

- ▶ Turn off the ignition and all electrical equipment.
- ▶ Open the hood ⇒ *page 220*.
- ▶ Open the cover on the positive terminal ⇒ *fig. 154*.
- ▶ Clamp the terminal clamps on the charger correctly onto the positive terminal/jump start connection ⊕ and the ground point ⊖.
- ▶ Insert the power cable for the charger into the socket and turn on the charger.
- ▶ Keep the hood completely open during the charging session ⇒ ⚠.
- ▶ At the end of the charging session, turn off the charger and pull the power cable out of the socket.
- ▶ Remove the charger terminal clamps.
- ▶ Close the cover on the positive terminal.
- ▶ Close the hood ⇒ *page 220*.

### ⚠ WARNING

- Never use charging equipment that is unsuitable, visibly damaged, and/or dirty. Check the charging equipment for damage before every use.
- A highly explosive mixture of gases can form when charging batteries. Only charge the battery in well-ventilated areas.
- A drained battery can freeze at temperatures around 32 °F (0 °C). Do not charge or use a frozen or thawed battery. If ice forms, the battery housing can crack and battery electrolyte fluid can leak, which increases the risk of an explosion and chemical burns. Contact an authorized Audi dealer or authorized Audi Service Facility for more information.
- Do not connect or disconnect the charging cable while charging because this increases the risk of an explosion.
- Leave the hood open while the 12 volt vehicle battery is charging. If the hood is closed, it could cause an electrical short circuit, which increases the risk of fire.

### i Tips


- Only charge the battery through the connections in the engine compartment.
- Read all of the manufacturer's instructions for the charger before charging the battery.

## Windshield washer system



Fig. 155 Engine compartment: washer fluid reservoir cap

Observe the safety precautions ⇒ *page 218, General information*. ▶

The windshield washer reservoir  contains the cleaning solution for the windshield, rear window, and the headlight washer system\*  
⇒ page 221. The reservoir capacity can be found in ⇒ page 281.

To reduce the risk of lime scale deposits on the spray nozzles, use clean water with low amounts of calcium. Always add window cleaner to the water. When the outside temperatures are cold, an anti-freezing agent should be added to the water so that it does not freeze.

## Messages

The following messages may appear, depending on the vehicle equipment:

### Please add washer fluid

Fill the washer fluid for the windshield washer system and the headlight washer system\* when the ignition is turned off.

### Note

- The concentration of anti-freezing agent must be adjusted to the vehicle operating conditions and the climate. A concentration that is too high can result in vehicle damage.
- Never add radiator anti-freeze or other additives to the washer fluid.
- Do not use a glass cleaner that contains paint solvents, because this could damage the paint.

## Service interval display

*The service interval display detects when your vehicle is due for service.*

The service interval display works in two stages:

- **Inspection or oil change reminder:** after driving a certain distance, a message appears in the instrument cluster display each time the ignition is turned on or off. The remaining distance or time is displayed briefly.
- **Inspection or oil change due:** if your vehicle has reached an inspection or oil change interval or both intervals at the same time, the message **Inspection due!** or **Oil change due!** or **Oil**

**change and inspection due!** appears briefly after turning the ignition on or off.

## Checking service intervals

You can check the remaining distance or time until the next oil change or next inspection in the Infotainment system.

Applies to MMI: Select on the home screen: **VEHICLE > Settings & Service > Service intervals.**

## Resetting the indicator

An authorized Audi dealer or authorized Audi Service Facility will reset the service interval display after performing service.

If you have changed the oil yourself, you must reset the oil change interval.

Applies to: MMI: To reset the display, select on the home screen: **VEHICLE > Settings & Service > Service intervals.**

### WARNING

Inadequate service, a lack of service, or failing to adhere to the service intervals can result in the vehicle breaking down in traffic, accidents, and serious injuries.

### Note

- Only reset the oil change indicator if the oil was changed.
- Regular service work on the vehicle is not only beneficial for sustainable use of the vehicle and retention of its value, but also for operational and traffic safety. For this reason, always have service work performed according to the Audi guidelines.
- Even if the mileage on the vehicle is low, do not exceed the time for the next service.
- Audi is not responsible for damage to the vehicle that occurred due to inadequate service or insufficient part availability.

## Wheels

### Tires and rims

#### General information

The combination of a rim and tire will be referred to as a wheel in this Owner's Manual. If only one of the components is referred to, then the term tire or rim will be used.

- ▶ Check your tires regularly for damage, such as punctures, cuts, cracks, and bulges. Remove foreign objects from the tire tread.
- ▶ If driving over curbs or similar obstacles, drive slowly and approach the curb at an angle.
- ▶ Have faulty tires or rims replaced immediately.
- ▶ Protect your tires from oil, grease, and fuel.
- ▶ Mark tires before removing them so that the same running direction can be maintained if they are reinstalled.
- ▶ Lay tires flat when storing and store them in a cool, dry location with as little exposure to light as possible.



#### WARNING

- Never drive faster than the maximum permitted speed for your tires. This could cause the tires to heat up too much. This increases the risk of an accident because it can cause the tire to burst.
- Always adapt your driving to the road and traffic conditions. Drive carefully and reduce your speed on icy or slippery roads. Even winter tires can lose traction on black ice.



#### Note


- Please note that summer and winter tires are designed for the conditions that are typical in those seasons. Audi recommends winter tires during the winter months. Low temperatures significantly decrease the elasticity of summer tires, which affects traction and braking ability. If summer tires are used in very cold temperatures, cracks can form on the tread bars, resulting in permanent tire damage that can cause loud driving noise and unbalanced tires.





–Burnished, polished, or chromed rims must not be used in winter driving conditions. The surface of the rims does not have sufficient corrosion protection for this and could be permanently damaged by road salt or similar substances. The exception to this are rims that are part of complete winter wheels provided by the factory.

## Tire designations

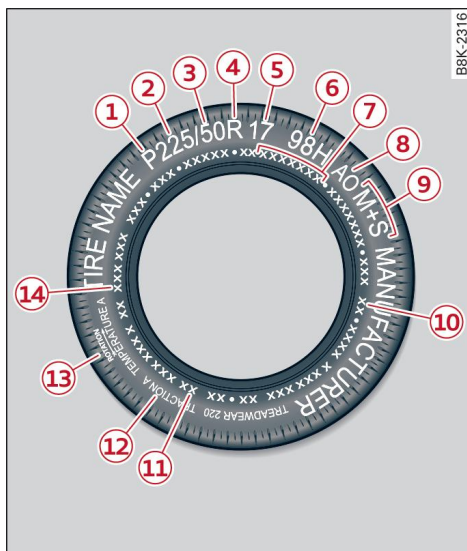

**Fig. 156** Tire designations on the sidewall

### ① Tires for passenger vehicles (if applicable)

“P” indicates a tire for a passenger vehicle. “T” indicates a tire designated for temporary use.

HL indicates High Load Capacity tires.

### ② Nominal width

Nominal width of the tire between the sidewalls in millimeters. In general: the larger the number, the wider the tire.

### ③ Aspect ratio

Height/width ratio expressed as a percentage.

### ④ Tire construction

“R” indicates a radial tire.

### ⑤ Rim diameter

Size of the rim diameter in inches.

### ⑥ Load index and speed rating

The load index indicates the tire's load-carrying capacity.

The speed rating indicates the maximum permitted speed. Also see ⇨ [△ in General information on page 234](#).

“EXTRA LOAD”, “xl” or “RF” indicates that the tire is reinforced or is an Extra Load tire. ►

Speed rating	Maximum permitted speed
P	up to 93 mph (150 km/h)
Q	up to 99 mph (160 km/h)
R	up to 106 mph (170 km/h)
S	up to 110 mph (180 km/h)
T	up to 118 mph (190 km/h)
U	up to 124 mph (200 km/h)
H	up to 130 mph (210 km/h)
V	up to 149 mph (240 km/h) <sup>a)</sup>
Z	above 149 mph (240 km/h) <sup>a)</sup>
W	up to 168 mph (270 km/h) <sup>a)</sup>
Y	up to 186 mph (300 km/h) <sup>a)</sup>

<sup>a)</sup> For tires above 149 mph (240 km/h), tire manufacturers sometimes use the code “ZR”.

**⑦ US DOT number (TIN) and manufacture date**

The manufacture date is listed on the tire sidewall (it may only appear on the inner side of the tire):

**DOT ... 2223 ...**


means, for example, that the tire was produced in the 22nd week of the year 2023.

**⑧ AO or RO**

Tires with the designation “AO” or “RO” that have been specifically matched to your Audi are installed at the factory. When used correctly, these tires meet very high standards for safety and handling. An authorized Audi dealer or authorized Audi Service Facility

will be able to provide you with more information.

**⑨ Mud and snow capability**

“M/S” or “M+S” indicates the tire is suitable for driving on mud and snow. The  symbol indicates a winter tire.

**⑩ Composition of the tire cord and materials**

The number of plies indicates the number of rubberized fabric layers in the tire. In general: the more layers, the more weight a tire can carry. Tire manufacturers must also specify the materials used in the tire. These include steel, nylon, polyester, and other materials.

**⑪ Maximum permitted load**

This number indicates the maximum load in kilograms and pounds that the tire can carry.

**⑫ Uniform tire quality grade standards for treadwear, traction, and temperature resistance**

Treadwear, traction, and temperature ranges ⇒ *page 251*. ▶

### 13 Running direction

The arrows indicate the running direction of unidirectional tires. You must always follow the specified running direction

⇒ page 264.

### 14 Maximum permitted inflation pressure

This number indicates the maximum pressure to which a tire can be inflated under normal operating conditions.

## Glossary of tire and loading terminology

### Accessory weight

means the combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio, and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

### Aspect ratio

means the ratio of the height to the width of the tire in percent. Numbers of 55 or lower indicate a low sidewall for improved steer-

ing response and better overall handling on dry pavement.

### Bead

means the part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim.

### Bead separation

means a breakdown of the bond between components in the bead.

### Cord

means the strands forming the plies in the tire.

### Cold tire inflation pressure

means the tire pressure recommended by the vehicle manufacturer for a tire of a designated size that has not been driven for more than a couple of miles (kilometers) at low speeds in the three hour period before the tire pressure is measured or adjusted.

### Curb weight

means the weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, air conditioning and additional weight of optional equipment. ►

### Extra load tire

means a tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire. Extra load tires may be identified as “XL”, “xl”, “EXTRA LOAD”, or “RF” on the sidewall.

### Gross Axle Weight Rating (“GAWR”)

means the load-carrying capacity of a single axle system, measured at the tire-ground interfaces.

### Gross Vehicle Weight Rating (“GVWR”)

means the maximum total loaded weight of the vehicle.

### Groove

means the space between two adjacent tread ribs.

### High load capacity tire

High load capacity tires are extra load tires that are designed to carry a higher load at the same pressure. High load capacity tires are identified with the prefix “HL” in front of the tire size designation.

### Load rating (code)

means the maximum load that a tire is rated to carry for a given inflation pressure. You may not find this information on all tires because it is not required by law.

### Maximum load rating

means the load rating for a tire at the maximum permissible inflation pressure for that tire.

### Maximum loaded vehicle weight

means the sum of:

- (a) Curb weight
- (b) Accessory weight
- (c) Vehicle capacity weight, and
- (d) Production options weight

### Maximum (permissible) inflation pressure

means the maximum cold inflation pressure to which a tire may be inflated. Also called “maximum inflation pressure.”

### Normal occupant weight

means 150 lbs. (68 kilograms) times the number of occupants seated in the vehicle up to the total seating capacity of your vehicle.

**Occupant distribution**

means distribution of occupants in a vehicle.

**Outer diameter**

means the overall diameter of an inflated new tire.

**Overall width**

means the linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs.

**Ply**

means a layer of rubber-coated parallel cords.

**Production options weight**

means the combined weight of those installed regular production options weighing over 5 lbs. (2.3 kg) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim.

**Radial ply tire**

means a pneumatic tire in which the ply cords that extend to the

beads are laid at substantially 90 degrees to the centerline of the tread.

**Recommended inflation pressure**

see ⇨ *page 237, Cold tire inflation pressure.*

**Reinforced tire**

means a tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire. Reinforced tires may be identified as “XL”, “xl”, “EXTRA LOAD”, or “RF” on the sidewall.

**Rim**

means a metal support for a tire or a tire and tube assembly upon which the tire beads are seated.

**Rim diameter**

means nominal diameter of the bead seat. If you change your wheel size, you will have to purchase new tires to match the new rim diameter.

**Rim size designation**

means rim diameter and width. ►

### Rim width


means nominal distance between rim flanges.

### Sidewall

means that portion of a tire between the tread and bead.

### Speed rating (letter code)

means the speed at which a tire is designed to be driven for extended periods of time. The ratings range from 93 mph (150 km/h) to 186 mph (298 km/h) ⇒ *table on page 236*. You may not find this information on all tires because it is not required by law.

The speed rating letter code, where applicable, is molded on the tire sidewall and indicates the maximum permissible road speeds. See also ⇒  *in General information on page 234*.

### Tire pressure monitoring system

means a system that detects when one or more of a vehicle's tires are underinflated and illuminates a low tire pressure warning telltale.

### Tread

means that portion of a tire that comes into contact with the road.

### Tread separation

means pulling away of the tread from the tire carcass.

### Treadwear indicators (TWI)

means the projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread. See ⇒ *page 244, Treadwear indicator* for more information on measuring tire wear.

### Uniform Tire Quality Grading

is a tire information system developed by the United States National Highway Traffic Safety Administration (NHTSA) that is designed to help buyers make relative comparisons among tires.

The UTQG is not a safety rating and not a guarantee that a tire will last for a prescribed number of miles (kilometers) or perform in a certain way. It simply gives tire buyers additional information to combine with other considerations, such as price, brand loyalty and dealer recommendations. Under UTQG, tires are graded by the ►

tire manufacturers in three areas: treadwear, traction, and temperature resistance. The UTQG information on the tires, molded into the sidewalls.

### **U.S. DOT Tire Identification Number (TIN)**

This is the tire's "serial number". It begins with the letters "DOT" and indicates that the tire meets all federal standards. The next two numbers or letters indicate the plant where it was manufactured, and the last four numbers represent the week and year of manufacture. For example,

#### **DOT ... 2223 ...**

means that the tire was produced in the 22nd week of 2023. The other numbers are marketing codes that may or may not be used by the tire manufacturer. This information is used to contact consumers if a tire defect requires a recall.

### **Vehicle capacity weight**

means the rated cargo and luggage load plus 150 lbs. (68 kilograms) times the vehicle's designated seating capacity.

### **Vehicle maximum load on the tire**

means that load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight and dividing by two.

### **Vehicle normal load on the tire**

means that load on an individual tire that is determined by distributing to each axle its share of the curb weight, accessory weight, and normal occupant weight (distributed in accordance with *⇒ table on page 247*) and dividing by two.

### **Occupant loading and distribution for vehicle normal load for various designated seating capacities**

Refer to the tire inflation pressure label *⇒ page 245, fig. 159* for the number of seating positions. Refer to the table *⇒ table on page 247* for the number of people that correspond to the vehicle normal load.

### **New tires or wheels**

Audi recommends having all work on tires or wheels performed by an authorized Audi dealer or ►

authorized Audi Service Facility. These facilities have the proper knowledge and are equipped with the required tools and replacement parts.

- ▶ New tires do not yet have the optimal gripping properties. Drive carefully and at moderate speeds for the first 350 miles (500 km) with new tires.
- ▶ Only use tires with the same design, size (rolling circumference), and as close to the same tread pattern as possible on all four wheels.
- ▶ Do not replace tires individually. At least replace both tires on the same axle at the same time.
- ▶ Audi recommends using Audi Original Tires. If you would like to use different tires, please note that the tires may perform differently even if they are the same size ⇒ ⚠.
- ▶ If you would like to equip your vehicle with a tire and rim combination that is different from what was installed at the factory, consult with an authorized Audi dealer or authorized Audi Service Facility before making a purchase ⇒ ⚠.

Because the spare tire\* is different from the regular tires installed on the vehicle (such as winter tires or wide tires), only use the spare tire\* temporarily in case of emergency and drive carefully while it is in use. It should be replaced with a regular tire as soon as possible.

**Applies to:** vehicles with all wheel drive: All four wheels must be equipped with tires that are the same brand and have the same construction and tread pattern so that the drive system is not damaged by different wheel speeds. For this reason, in case of emergency, only use a spare tire\* that is the same circumference as the regular tires.



### WARNING

- Only use tire/rim combinations and suitable wheel bolts that have been approved by Audi. Otherwise, damage to the vehicle and an accident could result.
- For technical reasons, it is not possible to use tires from other vehicles. In some cases, you cannot even use tires from the same vehicle model.



–Make sure that the tires you select have enough clearance to the vehicle. Replacement tires should not be chosen simply based on the nominal size, because tires with a different construction can differ greatly even if they are the same size. If there is not enough clearance, the tires or the vehicle can be damaged and this can reduce driving safety and increase the risk of an accident.

–Only use tires that are more than six years old when absolutely necessary and drive carefully when doing so.


–Do not use run-flat tires on your vehicle. Using them when not permitted can result in vehicle damage or accidents.

–If you install wheel covers on the vehicle, make sure they allow enough air circulation to cool the brake system. If they do not, this could increase the risk of an accident.

–Mounting a tire on the rim incorrectly can result in tire damage or failure. To reduce the risk of an accident, only

trained personnel may mount a tire on the rim.

## Tire wear and damage

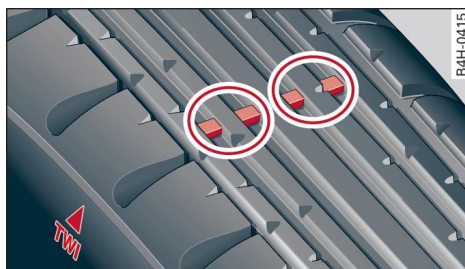

**Fig. 157** Tire profile: treadwear indicator

### Tire wear

Check the tires regularly for wear.

–Inflation pressure that is too low or high can increase tire wear considerably.

–Driving quickly through curves, rapid acceleration, and heavy braking increase tire wear. When driving under these conditions, check the tread depth every 3,100 miles (5,000 km) to 6,200 miles (10,000 km).

–Have an authorized Audi dealer or authorized Audi Service Facility check the wheel alignment if there is unusual wear.


–Have the wheels rebalanced if an imbalance is causing noticeable vibration in the steering wheel. If you do not, the tires and other ►

vehicle components could wear more quickly.

### Treadwear indicator

Original equipment tires contain treadwear indicators in the tread pattern, which are bars that are 1/16 inch (1.6 mm) high and are spaced evenly around the tire perpendicular to the running direction ⇒ *fig. 157*. The letters “TWI” or triangles on the tire sidewall indicate the location of the treadwear indicators.

When checking tread depth, you must check the wear indicators across the entire width of the tire and on all four tires.

The tires have reached the minimum tread depth <sup>1)</sup> when they have worn down to the treadwear indicators. Replace the tires with new ones ⇒ .

### Tire rotation

Rotating the tires regularly is recommended to ensure the tires wear evenly. To rotate the tires, install the tires from the rear axle on the front axle and vice versa.

This will allow the tires to have approximately the same length of service life.

For unidirectional tires, make sure the tires are installed according to the running direction indicated on the tire sidewall ⇒ *page 264*.

### Hidden damage

Damage to tires and rims can often occur in locations that are hidden. Unusual vibrations in the vehicle or pulling to one side may indicate that there is tire damage. Reduce your speed immediately. Check the tires for damage. If no damage is visible from the outside, drive slowly and carefully to the nearest authorized Audi dealer or authorized Audi Service Facility to have the vehicle inspected.



#### WARNING


Tread that has worn too low or uneven tread depths on the tires can reduce driving safety. This can increase the risk of an accident because it has a

---


<sup>1)</sup> Obey any applicable regulations in the country where the vehicle is being operated.

negative effect on handling, driving through curves, and braking, and because it increases the risk of hydroplaning when driving through deep puddles.

## Tire pressure

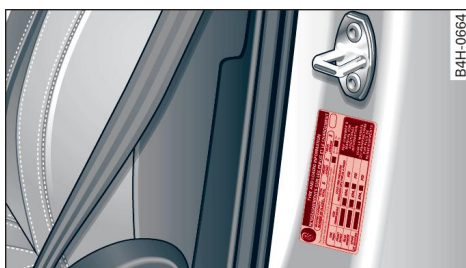

**Fig. 158** Driver's side B-pillar: tire pressure label

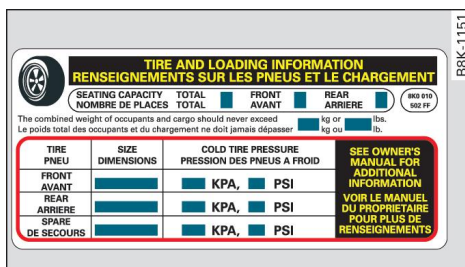

**Fig. 159** Tire pressure label

The correct tire pressure for tires installed at the factory is listed on a label. The label is located on the B-pillar (driver's side) ⇒ *fig. 158*, ⇒ *fig. 159*.

Use the tire pressure specified for a normal vehicle load when the vehicle is partially loaded ⇒ *table*

on page 247. If driving the vehicle when fully loaded, you must increase the tire pressure to the maximum specified pressure

⇒ ⚠.

## Checking and correcting tire pressure

- ▶ Check the tire pressure at least once per month and also check it before every long drive.
- ▶ Always check the tire pressure when the tires are *cold*. Do not reduce the pressure if it increases when the tires are warm.
- ▶ Refer to the sticker ⇒ *fig. 159* for the correct tire pressure.
- ▶ Correct the tire pressure if necessary.
- ▶ Save the changed tire pressure ⇒ *page 253*.
- ▶ Check the pressure in the spare tire (compact spare tire)\*. Always maintain the maximum temperature that is specified for the tire.



### WARNING

Always adapt the tire pressure to your driving style and the vehicle load.

–Overloading can result in loss of vehicle control and increase the risk of an accident. Read

- and follow the important safety precautions on ⇒ *page 247*.
- The tire must flex more if the tire pressure is too low or if the vehicle speed or load are too high. This heats the tire up too much. This increases the risk of an accident because it can cause the tire to burst and result in loss of vehicle control.
  - Incorrect tire pressure increases tire wear and has a negative

effect on driving and braking behavior, which increases the risk of an accident.



**Note**

Replace lost valve caps to reduce the risk of damage to the tire valves.



**For the sake of the environment**

Tire pressure that is too low increases fuel consumption.

**Tire pressure table**

Please note that the information contained in the following table was correct at the time of publication, and the information is subject to change. If there are any differences, you should always follow the tire pressure sticker ⇒ *page 245, fig. 158*.

Make sure that the tire designation on your tire matches the designation on the tire pressure label and the tire pressure table.

The following table lists recommended tire pressures in cold tires according to the load and the size of the tires installed. ►

Model/ Engine	Tire designation	Tire pressure							
		Normal load (up to 3 people) <sup>a)</sup>				Maximum load			
		Front		Rear		Front		Rear	
		kPa	PSI	kPa	PSI	kPa	PSI	kPa	PSI
<b>Q3:</b> <b>2.0L</b> <b>4-cylinder</b>	<b>235/55 R18 100H</b>	230	33	230	33	260	38	260	38
	<b>235/50 R19 99H</b>	230	33	230	33	260	38	260	38
	<b>215/65 R17 99H</b>	260	38	260	38	260	38	260	38
	<b>255/45 R19 104Y</b>	230	33	230	33	260	38	260	38
	<b>255/40 R20 101Y</b>	230	33	230	33	260	38	260	38
	<b>255/45 R19 104V</b>	230	33	230	33	260	38	260	38

a) Two people in the front, one person in the rear



## WARNING

Please note the important safety precautions regarding tire pressure ⇒ *page 245* and load limits ⇒ *page 247*.

## Tires and vehicle load limits

There are limits to the amount of load or weight that any vehicle and any tire can carry. A vehicle that is overloaded will not handle well and is more difficult to stop. Overloading can not only lead to loss of vehicle control, but can also damage important parts of the vehicle and can lead to sudden tire failure, including a blowout and sudden deflation that can cause the vehicle to crash.

Your safety and that of your passengers also depends on making sure that load limits are not ex-

ceeded. Vehicle load includes everybody and everything in and on the vehicle. These load limits are technically referred to as the vehicle's **Gross Vehicle Weight Rating** ("GVWR").

The "GVWR" includes the weight of the basic vehicle, all factory installed accessories, a full tank of fuel, oil, coolant and other fluids plus maximum load. The maximum load includes the number of passengers that the vehicle is intended to carry ("seating capacity") with an assumed weight of 150 lbs. (68 kg) for each passenger at a designated seating position and the total weight of any luggage in the vehicle. If you tow a trailer, the weight of the trailer hitch and the tongue weight of the loaded trailer must be

included as part of the vehicle load.

The **Gross Axle Weight Rating** (“GAWR”) is the maximum load that can be applied at each of the vehicle’s two axles.

The fact that there is an upper limit to your vehicle’s Gross Vehicle Weight Rating means that the total weight of whatever is being carried in the vehicle (including the weight of a trailer hitch and the tongue weight of the loaded trailer) is limited. The more passengers in the vehicle or passengers who are heavier than the standard weights assumed mean that less weight can be carried as luggage.

The Gross Vehicle Weight Rating and the Gross Axle Weight Rating are listed on the safety compliance sticker label located on the driver’s side B-pillar.



### WARNING

Overloading a vehicle can cause loss of vehicle control, a crash or other accident, serious personal injury, and even death.

–Carrying more weight than your vehicle was designed to

carry will prevent the vehicle from handling properly and increase the risk of the loss of vehicle control.

- The brakes on a vehicle that has been overloaded may not be able to stop the vehicle within a safe distance.
- Tires on a vehicle that has been overloaded can fail suddenly, including a blowout and sudden deflation, causing loss of control and a crash.
- Always make sure that the total load being transported – including the weight of a trailer hitch and the tongue weight of a loaded trailer – does not make the vehicle heavier than the vehicle’s Gross Vehicle Weight Rating.

### Determining correct load limit

Use the example below to calculate the total weight of the passengers and luggage or other things that you plan to transport so that you can make sure that your vehicle will not be overloaded.

## Steps for Determining Correct Load Limit

1. Locate the statement “THE COMBINED WEIGHT OF OCCUPANTS AND CARGO SHOULD NEVER EXCEED XXX KG OR XXX LBS” on your vehicle’s placard (tire inflation pressure label) ⇒ *page 245, fig. 159.*
  2. Determine the combined weight of the driver and passengers that will be riding in your vehicle.
  3. Subtract the combined weight of the driver and passengers from “XXX” kilograms or “XXX” pounds shown on the sticker ⇒ *page 245, fig. 159.*
  4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the “XXX” amount equals 1400 lbs. and there will be five 150 lbs. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1400-750 (5 x 150) = 650 lbs.)
  5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
  6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.
- Check the tire sidewall (⇒ *page 235, fig. 156*) to determine the designated load rating for a specific tire.

### Wheel bolts and rims

#### Wheel bolts

Wheel bolts must be clean and must loosen and tighten easily.

#### Rims

Rims with a bolted rim ring\* or with bolted wheel covers\* consist of multiple pieces. These components were bolted together using special bolts and a special procedure. You must not repair or disassemble them ⇒ ⚠.



#### WARNING


Wheel bolts that are tightened or repaired incorrectly can become loose and result in loss of vehicle control, which increases the risk of an accident. For the correct tightening specification, see ⇒ *page 264, Finishing.*

- Always keep the wheel bolts and the threads in the wheel hub clean and free of grease.
- Only use wheel bolts that fit the rim.
- Always have damaged rims repaired by an authorized Audi dealer or authorized Audi Service Facility. Never repair or disassemble

rim yourself, because this increases the risk of an accident.

### Winter tires

Winter tires significantly improve the vehicle's handling when driving in winter conditions. Because of their construction (width, compound, tread pattern), summer tires provide less traction on ice and snow.

- Use winter tires on all four wheels.
- Only use winter tires that are approved for your vehicle.
- Please note that the maximum permitted speed may be lower with winter tires ⇒  in *General information on page 234*. An authorized Audi dealer or authorized Audi Service Facility can inform you about the maximum permitted speed for your tires.
- Check the tire pressure after installing a wheel ⇒ *page 245*.

The effectiveness of winter tires is reduced greatly when the tread is worn down to a depth of 0.16 in (4 mm). The characteristics of winter tires also decrease greatly as the tire ages, regardless of the remaining tread.




### For the sake of the environment

Reinstall summer tires at the appropriate time, because they provide better handling when roads are free of snow and ice. Summer tires cause less road noise, tire wear, and fuel consumption.



### Tips

You can also use all season tires instead of winter tires. Please note that in some countries where winter tires are required, only winter tires with the  symbol may be permitted.

### Snow chains

Snow chains improve both driving and braking in winter road conditions.

- Only install snow chains on the front wheels.

- Check and correct the seating of the snow chains after driving a few feet, if necessary. Follow the instructions from the manufacturer.
- Note the maximum speed of 30 mph (50 km/h). Observe local regulations.

Use of snow chains is only permitted with certain rim/tire combinations due to technical reasons. Check with an authorized Audi dealer or authorized Audi Service Facility to see if you may use snow chains.

Use **fine-mesh snow chains**. They must not add more than 0.4 inch (10.5 mm) in height, including the chain lock.

You must remove the snow chains on roads without snow. Otherwise, you could impair driving ability and damage the tires.



### WARNING

Using incorrect snow chains or installing snow chains incorrectly can result in loss of vehicle control, which increases the risk of an accident.



### Note

Snow chains can damage the rims and wheel covers\* if the chains come into direct contact with them. Remove the wheel covers\* first. Use coated snow chains.



### Tips

When using snow chains, it may be advisable to limit the ESC ⇒ *page 110*.

### Low-profile tires

Applies to: vehicles with low-profile tires

Compared to other tire/rim combinations, low-profile tires offer a wider tread surface and a larger rim diameter with shorter tire sidewalls. This results in an agile driving feel. However, it may reduce the level of comfort and increase road noise when driving on roads in poor condition.

Low-profile tires can become damaged more quickly than standard tires when driving over large bumps, potholes, manhole covers, and



curbs. Therefore, it is particularly important to maintain the correct tire pressure ⇒ *page 245*.

To reduce the risk of damage to the tires and rims, drive very carefully on poor roads.

Check your wheels regularly every 2,000 miles (3,000 km) for damage. For example, check for bulges/cracks on the tires or deformations/cracks on the rims.

After a heavy impact or damage, have the tires and rims inspected or replaced immediately by an authorized Audi dealer or authorized Audi Service Facility.

Low-profile tires can wear out faster than standard tires.

### Uniform tire quality grading

- Tread wear
- Traction AA A B C
- Temperature A B C

Quality grades can be found where applicable on the tire side wall between tread shoulder and maximum section width ⇒ *page 235, fig. 156*.

**For example:** Tread wear **200**, Traction **AA**, Temperature **A**.

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.


### Tread wear

The *tread wear* grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and one half (1 1/2) times as well on the government course as a tire graded 100.


The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

### Traction

The *traction* grades, from highest to lowest, are AA, A, B and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance ⇒ .

### Temperature

The *temperature* grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure ⇒ .

The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.



#### WARNING

The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning or peak traction characteristics.



#### WARNING

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.



#### WARNING

Temperature grades apply to tires that are properly inflated and not over or underinflated.

## Tire pressure monitoring system

### General notes

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires).

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to over-heat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.


Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the

installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

### If the tire pressure monitoring indicator appears

*The tire pressure indicator in the instrument cluster informs you if the tire pressure is too low or if there is a system malfunction.*



Using the ABS sensors, the tire pressure monitoring system compares the tire tread circumference and vibration characteristics of the individual tires. If the pressure changes in one or more tires, this is indicated in the instrument cluster display with an indicator light  and a message. If only one tire is affected, the location of that tire will be indicated.

The tire pressures must be stored again each time you change the pressures (switching between partial and full load pressure) or after changing or replacing a tire on your vehicle ⇒ *page 253*. The tire pressure monitoring system only monitors the tire pressure you have stored. Refer to the tire pressure label for the recommended tire pressure for your vehicle ⇒ *page 245, fig. 159*.


Tire tread circumference and vibration characteristics can change and cause a tire pressure warning if:

- The tire pressure in one or more tires is too low
- The tires have structural damage
- The tire was replaced or the tire pressure was changed and it was not stored ⇒ *page 253*
- Tires that are only partially used are replaced with new tires


### Indicator lights

If the  indicator light turns on, there is a loss of pressure in at least one tire ⇒ . Check the tires and replace if necessary. Check and correct ►

the pressures of all four tires and store the pressure again ⇒ *page 253*.

If you have not stored new tire pressures, but the indicator light  is blinking and an audio signal sounds, then drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

### **TPMS** Tire pressure: malfunction! See owner's manual

If **TPMS** appears after turning the ignition on or while driving and the  indicator light in the instrument cluster blinks for approximately one minute and then stays on, there is system malfunction. Try to store the correct tire pressures ⇒ *page 253*. In some cases, you must drive for several minutes after storing the pressures until the indicator light turns off. If the indicator light does turn off or turns on again after a short period of time, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



### **WARNING**

- If the tire pressure indicator appears in the display, reduce your speed immediately and avoid any hard steering or braking maneuvers. Stop as soon as possible and check the tires and their pressure.
- The driver is responsible for maintaining the correct tire pressure. You must check the tire pressure regularly.
- Under certain conditions (such as a sporty driving style, winter conditions, or unpaved roads), the tire pressure monitoring system indicator may be delayed.



### **Tips**

- The tire pressure monitoring system can also stop working when there is an ESC malfunction.
- Using snow chains may result in a system malfunction.
- The tire pressure monitoring system in your Audi was calibrated with “Audi Original Tires” ⇒ *page 241*. Audi recommends using these tires.

### **Storing tire pressures**

*If the tire pressure changes or a tire is replaced, it must be confirmed in the system.*

- Before storing the tire pressures, make sure the tire pressures of all four tires meet the specified values and are adapted to the load ⇒ *page 245*.
- Turn on the ignition.
- Applies to MMI: Select on the home screen: **VEHICLE > Settings & Service > Tire pressure monitoring > Store tire pressure > Yes, store now**.



### **Tips**

Do not store the tire pressures if snow chains are installed.

# Care and cleaning

## General information

Regular, proper care helps to maintain your vehicle's value. It can also be a requirement when submitting warranty claims for corrosion damage and paint defects on the body.

The required cleaning and care products can be obtained from an authorized Audi dealer or authorized Service Facility. Read and follow the instructions for use on the packaging.

### WARNING

- Using cleaning and care products incorrectly can be dangerous to your health.
- Always store cleaning and care products out of reach of children to reduce the risk of poisoning.

## Car washes

The longer that deposits such as insects, bird droppings, tree sap, or road salt remain on the vehicle, the more the surface can be damaged. High temperatures such as those caused by sunlight increase the damaging effect.

Before washing, rinse off heavy deposits with plenty of water.

Stubborn deposits, such as bird droppings or tree sap, are best removed with plenty of water and a microfiber cloth.

Also, wash the underside of your vehicle once use of road salt ends for the season.

### Pressure washers

When washing your vehicle with a pressure washer, always follow the operating instructions provided with the pressure washer. This is especially important in regard to the pressure and spraying distance. Do not aim the spray directly at the seals on the side windows, doors, lids or the sunroof\* or at tires, rubber hoses, insulating material, sensors\* or camera lenses\*. Maintain a distance of at least 16 inches (40 cm).

Do not remove snow and ice with a pressure washer.

Never use cone nozzles or high pressure nozzles.

The water temperature must not be above 140 °F (60 °C).

### Automatic car wash

Spray off the vehicle before washing.

Make sure that the windows and roof\* are closed and the windshield wipers are off. Make sure that the vehicle is still able to roll during the washing process in the car wash. Follow instructions from the car wash operator, especially if there are accessories attached to your vehicle.

If possible, use car washes that do not have brushes.

### Washing by hand

Clean the vehicle starting from the top and working downward using a soft sponge or cleaning brush. Use solvent-free cleaning products.

### Washing vehicles with matte finish paint by hand

To reduce the risk of damaging the paint when washing, first remove dust and large particles from your vehicle. Insects, grease spots, and fingerprints are best removed with a special cleaner for matte finish paint.

Apply the product using a microfiber cloth. To reduce the risk of damaging the paint surface, do not use too much pressure.

Rinse the vehicle thoroughly with water. Then clean using a neutral shampoo and a soft microfiber cloth.

Rinse the vehicle thoroughly again and let it air dry. Remove any water residue using a chamois.

### WARNING

- To reduce the risk of accidents, only wash the vehicle when the ignition is off and follow the instructions from the car wash operator.
- To reduce the risk of cuts, protect yourself from sharp metal components when

washing the underbody or the inside of the wheel housings.

- After washing the vehicle, the effectiveness of the brakes may be delayed due to moisture on the brake rotors or ice in the winter. This increases the risk of an accident. The brakes must be dried with a few careful brake applications.

### Note

- If you wash the vehicle in an automatic car wash, you must fold the exterior mirrors in to reduce the risk of damage to the mirrors. Power folding exterior mirrors\* must only be folded in and out using the power folding function.
- To reduce the risk of damage to the rims and tires, compare the width between the wheels on your vehicle with the distance between the guide rails in the car wash.
- To reduce the risk of damage, compare the height and width of your vehicle with the height and width of the inside of the car wash.
- Make sure there is sufficient ground clearance when driving into a car wash with a conveyor belt ⇒ *page 108*. There is risk of damage because the vehicle could come in contact with the guide rails.
- Using a pressure washer incorrectly can cause damage. Never direct a stream of wa-

ter directly onto electrical/electronic components when cleaning the engine compartment. Such components can be seriously damaged by the entry of fluids and by pressure, and this can result in component failure.

- To reduce the risk of paint damage, do not wash the vehicle in direct sunlight.
- To reduce the risk of damage, do not wash decorative decals\* with a pressure washer.
- To reduce the risk of damage to the surface, do not use insect removing sponges, kitchen sponges, or similar items.
- When washing matte finish painted vehicle components:
  - Do not use polishing agents or hard wax to reduce the risk of damage to the surface.
  - Never use protective wax. It can destroy the matte finish effect.
  - Do not place any stickers or magnetic signs on vehicle components painted with matte finish paint. The paint could be damaged when the stickers or magnets are removed.




### For the sake of the environment

Only wash the vehicle in facilities specially designed for that purpose. This will reduce the risk of dirty water contaminated with oil entering the sewer system.

## Cleaning and care information

When cleaning and caring for individual vehicle components, refer to the following tables. The information contained here is simply recommendations. For questions or for components that

are not listed, consult an authorized Audi dealer or authorized Audi Service Facility. Also follow the information found in ⇒ .

### Exterior cleaning

Component	Situation	Solution
Windshield wiper blades	Deposits	Soft cloth with glass cleaner, ⇒ <i>page 60</i>
Headlights/tail lights	Deposits	Soft sponge with a mild soap solution <sup>a)</sup>

Component	Situation	Solution
<b>Sensors/ camera lenses</b>	Deposits	Sensors: soft cloth with a solvent-free cleaning product Camera lenses: soft cloth with an alcohol-free cleaning solution
	Snow/ice	Hand brush/solvent-free de-icing spray
<b>Wheels</b>	Road salt	Water
	Brake dust	Acid-free special cleaning solution
<b>Exhaust tail pipes</b>	Road salt	Water, cleaning solution suitable for stainless steel, if necessary
<b>Decorative parts and trim</b>	Deposits	Mild soap solution <sup>a)</sup> , cleaning solution suitable for stainless steel, if necessary
<b>Rubber seals</b>	Deposits	Microfiber cloth with a mild soap solution <sup>a)</sup>
	Frost	Protect the seals on doors, covers, and lids from freezing using a suitable care product
<b>Paint</b>	Spilled fuel	Rinse with water immediately
	Surface rust	Rust remover, then treat with hard wax; for questions, consult an authorized Audi dealer or authorized Audi Service Facility.
	Corrosion	Have it removed by an authorized Audi dealer or authorized Audi Service Facility.
	Water no longer beads on the surface of clean paint	Treat with hard wax (at least twice per year)
	No shine even though paint has been protected/paint looks poor	Treat with suitable polish; then apply paint protectant if the polish that was used does not contain any protectant
	Deposits such as insects, bird droppings, tree sap, and road salt	Dampen with water immediately and remove with a microfiber cloth
	Grease-based contaminants such as cosmetics or sunblock	Remove immediately with a mild soap solution <sup>a)</sup> and a soft cloth
<b>Carbon components</b>	Deposits	Clean the same way as painted parts ⇒ <i>page 254</i>



Component	Situation	Solution
<b>Decorative decals</b>	Deposits	Soft sponge with a mild soap solution <sup>a)</sup>
	Deposits such as insects, bird droppings, tree sap, and road salt	Dampen with water immediately and remove with a micro-fiber cloth
	Grease-based contaminants such as cosmetics or sunblock	Remove immediately with a mild soap solution <sup>a)</sup> and a soft cloth
	Spilled fuel	Blot immediately with a soft cloth and then remove with a mild soap solution <sup>a)</sup> and a soft cloth


<sup>a)</sup> Mild soap solution: maximum two tablespoons of neutral soap in 1 quart (1 liter) of water

### Interior cleaning


Component	Situation	Solution
<b>Window glass</b>	Deposits	Glass cleaner, then wipe dry
<b>Decorative parts and trim</b>	Deposits	Mild soap solution <sup>a)</sup>
<b>Plastic parts</b>	Deposits	Damp cloth
	Heavier deposits	Mild soap solution <sup>a)</sup> , detergent-free plastic cleaning solution, if necessary
<b>Displays/instrument cluster</b>	Deposits	Soft cloth with LCD cleaner; dust in the lower area of the instrument cluster can be removed using a soft brush.
<b>Controls</b>	Deposits	Soft brush, then a soft cloth with a mild soap solution <sup>a)</sup>
<b>Safety belts</b>	Deposits	Mild soap solution <sup>a)</sup> , allow to dry before letting them retract
<b>Textiles, artificial leather, microfiber</b>	Deposits adhering to the surface	Vacuum cleaner
	Water-based deposits such as coffee, tea, blood, etc.	Absorbent cloth and mild soap solution <sup>a)</sup>
	Oil-based deposits such as oil, make-up, etc.	Apply a mild soap solution <sup>a)</sup> , blot away the dissolved oil or dye, treat afterward with water, if necessary
	Special types of deposits such as ink, nail polish, latex paint, shoe polish, etc.	Special stain remover, blot with absorbent material, treat afterward with mild soap solution, if necessary <sup>a)</sup>

Component	Situation	Solution
Natural leather	Fresh stains	Cotton cloth with a mild soap solution <sup>a)</sup>
	Water-based deposits such as coffee, tea, blood, etc.	Fresh stains: absorbent cloth dried stains: stain remover suitable for leather
	Oil-based deposits such as oil, make-up, etc.	Fresh stains: absorbent cloth and stain remover suitable for leather Dried stains: oil cleaning spray
	Special types of deposits such as ink, nail polish, latex paint, shoe polish, etc.	Spot remover suitable for leather
	Care	Regularly apply conditioning cream that protects from light and penetrates into the material. Use special colored conditioning cream, if necessary.
Carbon components	Deposits	Clean the same way as plastic components

<sup>a)</sup> Mild soap solution: maximum two tablespoons of neutral soap in 1 quart (1 liter) of water

**WARNING**

The windshield must not be treated with water-repelling windshield coating agents. Under unfavorable conditions, such as wetness, darkness, and when the sun is low, these coatings can cause increased glare, which increases the risk of an accident. They can also cause wiper blade chatter.

**Note**

- **Headlights and tail lights**
  - Never clean the headlights or tail lights with a dry cloth or sponge because the lights could be damaged.
  - Do not use any cleaning products that contain alcohol, because they could cause cracks to form.
- **Wheels**
  - Never use any paint polish or other abrasive materials.
  - Damage to the protective layer on the rims, such as stone chips or scratches, must be repaired immediately.
- **Camera lenses**

- Never use warm or hot water to remove snow or ice from the camera lens. This could cause the lens to crack.
- Never use abrasive cleaning materials or alcohol to clean the camera lens. This could cause scratches and cracks.
- **Door windows**
  - Remove snow and ice on windows and exterior mirrors with a plastic scraper. To reduce the risk of scratches, move the scraper only in one direction and not back and forth.
  - Never remove snow or ice from door windows and mirrors using warm or hot water because this could cause cracks to form.
  - To reduce the risk of damage to the rear window defogger, do not apply any stickers on the heating wires on the inside of the window.
- **Decorative parts and trim**
  - Never use chrome care or cleaning products.
- **Rubber seals**
  - There is a risk of damage if chemical cleaning solutions or solvents are used.
- **Paint**



- To reduce the risk of scratches, the vehicle must be free of dirt and dust before polishing or waxing.
- To prevent paint damage, do not polish or wax the vehicle in direct sunlight.
- To reduce the risk of paint damage, do not polish away rust spots.
- Remove cosmetics and sunscreen immediately because they could damage the paint.
- **Decorative decals**
  - Do not clean decorative decals with a pressure washer, because the decals could loosen.
  - To reduce the risk of damage, do not use any rough powder or abrasive cleaning products.
  - To reduce the risk of damage, do not polish decorative decals.
  - Due to the risk of damage, do not use an ice scraper to remove snow and ice on windows with decorative decals on them.
- **Displays and instrument cluster**
  - Make sure that the display and instrument cluster are turned off and have cooled down before cleaning. To turn off the center display, select on the MMI home screen: **SETTINGS > Display & Brightness > MMI > Screen cleaning**.
  - Displays, the instrument cluster, and the trim surrounding it must not be cleaned with dry cleaning methods because they could become scratched.
  - Make sure no fluids enter the spaces between the instrument cluster and the trim, because this could cause damage.
- **Controls**
  - Make sure that no fluids enter the controls, because this could cause damage.
- **Safety belts**
  - Do not remove the safety belts to clean them.
  - Never clean safety belts or their components with chemicals or with corrosive fluids or solvents and never allow sharp objects to come into contact with the safety

belts. This could cause damage to the belt webbing.

- If there is damage to the webbing, the connections, the retractors, or the buckles, have them replaced by an authorized Audi dealer or authorized Audi Service Facility.

#### – **Textiles/artificial leather/microfiber**

- Never treat artificial leather or microfiber with leather care products, solvents, floor polish, shoe polish, spot remover, or similar products.
- Have a cleaning specialist remove stubborn stains to reduce the risk of damage.
- Never use steam cleaners, brushes, hard sponges, etc. when cleaning.
- Do not turn on the seat heating\* to dry the seat.
- Objects with sharp edges, such as zippers or rivets on clothing or belts, can cause damage to the surface.
- Open hook and loop fasteners, for example on clothing, can damage seat covers. Make sure hook and loop fasteners are closed.

#### – **Natural leather**

- Never treat leather with solvents, floor polish, shoe polish, spot remover or similar products.
- Objects with sharp edges, such as zippers or rivets on clothing or belts, can cause damage to the surface.
- Never use steam cleaners, brushes, hard sponges, etc. when cleaning.
- Do not turn on the seat heating\* to dry the seat.
- To help prevent the leather from fading, do not leave the vehicle in direct sunlight for long periods of time. If leaving the vehicle parked for long periods of time, you should cover the leather to protect it from direct sunlight.



#### **Tips**

- Insects are easier to remove from paint that has been freshly waxed.

- Regular waxing can prevent rust spots from forming.
- Decorative decals can age due to environmental conditions, which can result in damage such as brittleness. The color may fade if exposed to excessive sunlight.

## Taking your vehicle out of service

If you would like to take your vehicle out of service for a long period of time, contact an authorized Audi dealer or authorized Audi Service Facility. You can obtain information about the steps to complete depending on the conditions for taking the vehicle out of service (duration, location, etc.).

## Emergency assistance

### General information

- ▶ In the event of a breakdown, park the vehicle as far as possible from moving traffic. In the event of a flat tire, park the vehicle on a level surface. If you are on a steep hill, be especially careful.
- ▶ Set the parking brake.
- ▶ Turn on the emergency flashers.
- ▶ Have all passengers exit the vehicle. They should move to a safe place, for example behind a guard rail.



#### WARNING

Follow the steps listed above. This is for your own protection and for the safety of other road users.

### Equipment

#### Vehicle tool kit/vehicle jack

Applies to: vehicles with the vehicle tool kit and vehicle jack

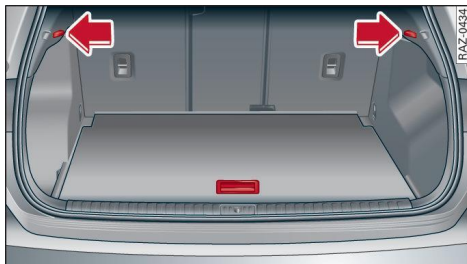


Fig. 160 Luggage compartment: cargo area floor

The vehicle tools and vehicle jack\* are stored in the luggage compartment under the cargo floor.

- ▶ Lift up the cargo floor with the plastic handle until it is clamped behind the tabs on both side panels.
- ▶ If necessary, lift out the center floor panel.

Applies to: vehicles with spare tire/subwoofer

- ▶ Turn the handwheel counter-clockwise and remove it.
- ▶ Remove the subwoofer\* ⇒ page 264.
- ▶ Remove the spare tire\*.



#### Tips

The vehicle jack\* does not require any maintenance.

### Changing a tire

#### Preparation

*You must complete the preparation before changing a tire.*

- ▶ Read and follow the important safety precautions ⇒ page 261.
- ▶ Set the parking brake.
- ▶ Select the “P” position.
- ▶ When towing a trailer: disconnect the trailer from your vehicle.
- ▶ Lay out the vehicle tool kit ⇒ page 261 and the spare tire ⇒ page 264.
- ▶ Turn off the ignition.



#### WARNING

The vehicle must also be secured to prevent it from rolling when using the vehicle jack\*. Use suitable objects to block the front and back of the wheel that is diagonal from the wheel with the flat tire.

#### Removing the cover

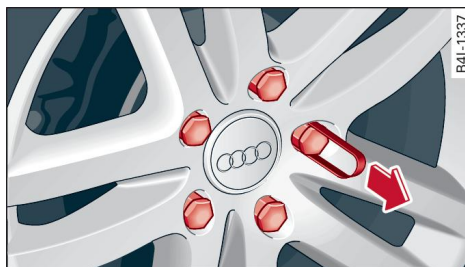


Fig. 161 Wheel: wheel bolts with caps

- ▶ Slide the plastic clip from the vehicle tool kit onto the cap until it engages ⇒ fig. 161.
- ▶ Remove the cap using the plastic clip.

### Anti-theft wheel bolts

Applies to: vehicles with anti-theft wheel bolts

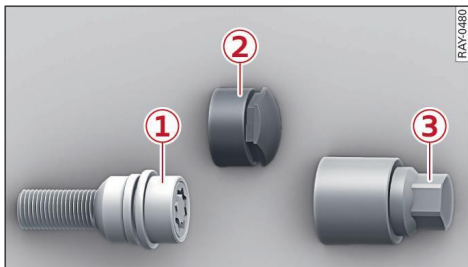


Fig. 162 Anti-theft wheel bolt with cap and adapter

You need a special adapter in the vehicle tool kit to remove the anti-theft wheel bolts.

- ▶ Remove the cap ②.
- ▶ Slide the adapter ③ all the way onto the anti-theft wheel bolt ①.
- ▶ Slide the wheel wrench\* from the vehicle tool kit all the way onto the adapter ③.
- ▶ Loosen the wheel bolt ⇒ *page 262*.

#### Tips

Note the code number for the wheel bolt adapter and store it in a safe place separate from the vehicle. If you need a replacement adapter, contact an authorized Audi dealer or authorized Audi Service Facility and give them the code number.

### Loosening the wheel bolts



Fig. 163 Wheel: loosening the wheel bolts

- ▶ Slide the wheel wrench\* from the vehicle tool kit all the way onto the wheel bolt<sup>1)</sup>.
- ▶ Turn the wheel bolt approximately one turn to the left. To achieve the required torque, hold the end of the wheel wrench\*. If the wheel bolt will not loosen, press carefully on the wheel wrench\* with your foot. Hold onto the vehicle securely while doing this and make sure your footing is stable.

#### WARNING

To reduce the risk of an accident, only loosen the wheel bolts gently one turn before raising the vehicle with the vehicle jack\*.

### Raising the vehicle

Applies to: vehicles with vehicle jack

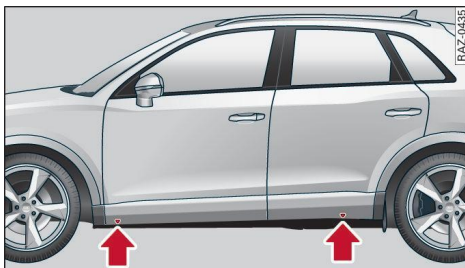


Fig. 164 Sill panels: markings

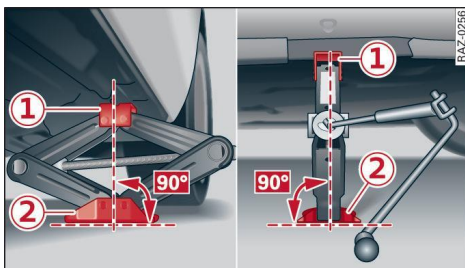



Fig. 165 Sill: positioning the vehicle jack

- ▶ Place the vehicle jack from the vehicle tool kit on a firm surface. Use a flat, stable support if necessary. On a slippery surface such as tile, you should use a non-slip pad such as a rubber mat ⇒ .

<sup>1)</sup> You need the matching adapter in order to loosen and tighten anti-theft wheel bolts\* ⇒ *page 262*.

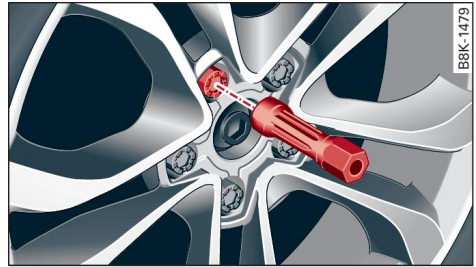
- Find the marking on the sill that is closest to the tire that will be changed ⇒ *fig. 164*. Behind the marking, there is a lifting point on the side sill for the vehicle jack.
- Raise the vehicle jack under the lifting point on the side sill until the bracket on the jack ① completely covers the notch on the vehicle.
- Align the vehicle jack so the bracket ① covers the notch and the base ② is flat on the ground. The base ② must be directly under the mounting point ①.
- Mount the crank on the vehicle jack: insert the crank into the opening on the handwheel. Turn the crank to the left or right to secure it.
- Continue raising the vehicle jack with the crank until the wheel lifts off the ground slightly.

**WARNING**


- To reduce the risk of injury, make sure no one is in the vehicle before raising it.
- Make sure the vehicle jack is stable. The risk of injury is increased when the ground is slippery or soft, because the vehicle jack could slide or sink.
- Only raise your vehicle with the vehicle jack provided by the factory. If you use a vehicle jack designed for another vehicle, your vehicle could slip and cause injury.
- Position the vehicle jack only at the designated mounting points on the side sill and align the jack. Otherwise, the vehicle jack could slip and cause an injury if it does not have sufficient hold on the vehicle.
- To reduce the risk of injury, do not raise any other vehicles or other loads using the vehicle jack provided by the factory.
- To reduce the risk of an accident, never start the engine when the vehicle is raised.
- To reduce the risk of injury, no work should be performed under the vehicle while it is raised.

**Note**

Do not lift the vehicle by the sill. Position the vehicle jack only at the designated mounting points on the side sill. Otherwise, your vehicle could be damaged.

**Removing and installing a wheel**

**Fig. 166** Wheel: internal hex socket to turn the wheel bolts

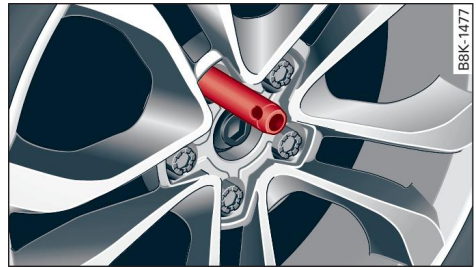

**Fig. 167** Wheel: alignment pin in the top hole

**Removing a wheel**

- Remove the top wheel bolt completely using the hex socket in the screwdriver handle from the vehicle tool kit ⇒ *fig. 166* and place it on a clean surface.
- Then install the alignment pin from the vehicle tool kit in the empty wheel bolt hole by hand ⇒ *fig. 167*.
- Remove the rest of the wheel bolts.
- Remove the wheel ⇒ ⚠. The alignment pin remains in the hole while doing this.

**Installing a wheel**

Read the directions on ⇒ *page 264* when installing unidirectional tires.

- Make sure that the wheel bolts and the threads in the wheel hub are clean, loosen/tighten easily, and are free of oil and grease.
- Slide the wheel on over the alignment pin ⇒ ⚠.
- Install the wheel bolts and tighten them gently using the hex socket.
- Remove the alignment pin and tighten the remaining wheel bolt.

- ▶ Carefully lower the vehicle using the vehicle jack\*.
- ▶ Tighten the wheel bolts in a diagonal pattern using the wheel wrench\*.

### **WARNING**

- Read and follow the important information and notes under ⇒ *page 241*.
- Never use the hex socket in the screwdriver handle to tighten the wheel bolts. Using the hex socket will not achieve the required tightening torque, which increases the risk of an accident.

### **Note**

When removing or installing the wheel, the rim could hit the brake rotor and damage the rotor. Work carefully and have a second person help you.

## Unidirectional tires

A unidirectional tire profile is identified by arrows on the tire sidewall that point in the running direction. You must always maintain the specified running direction. This is necessary to ensure the tire's optimal performance in regard to adhesion, running noise, and friction, and to reduce the risk of hydroplaning.

To benefit fully from the advantages of the unidirectional tire design, you should replace faulty tires as soon as possible and restore the correct running direction on all of the tires.

## Finishing

- ▶ Reinstall any covers on the wheel bolts that were removed.
- ▶ Store the vehicle tool kit in its designated place.
- ▶ If the removed wheel does not fit in the spare wheel well, store it securely in the luggage compartment ⇒ *page 82*.
- ▶ Check the tire pressure on the installed wheel as soon as possible.
- ▶ Correct the tire pressure and store it ⇒ *page 253*.

- ▶ The wheel bolts must be tightened to 100 ft lbs (140 Nm). Have them checked as soon as possible with a torque wrench. Drive carefully until then.
- ▶ Have the faulty wheel replaced as soon as possible.

## Spare tire

### Removing the subwoofer

Applies to: vehicles with subwoofer

*The subwoofer must be removed before the spare tire\*/temporary spare tire\* can be removed.*

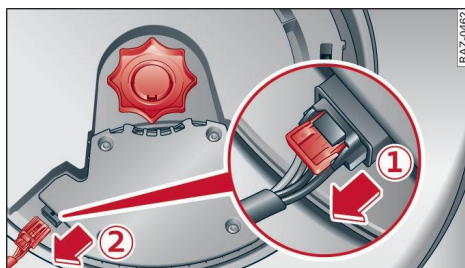


Fig. 168 Spare tire well: subwoofer

### Removing the subwoofer

- ▶ Pull out the red connector lock ①.
- ▶ Remove the connector ② and set the disconnected cable aside.
- ▶ Turn the handwheel counter-clockwise and remove it.
- ▶ Carefully remove the subwoofer.

### Installing the subwoofer

- ▶ Carefully place the subwoofer in the rim well. The word "FRONT" on the subwoofer must face forward.
- ▶ Insert the connector that was removed.
- ▶ Secure the subwoofer with the handle.

### Space-saving spare tire

Applies to: vehicles with space-saving spare tire (compact spare tire)

The spare tire is intended for short-term use only. Have the damaged tire checked and replaced if necessary by an authorized Audi dealer or authorized Audi Service Facility as soon as possible. ▶

There are some restrictions on the use of the compact spare tire. The compact spare tire has been designed specifically for your type of vehicle. Do not replace it with the spare tire from another type of vehicle.

The compact spare tire is located in the luggage compartment under the cargo floor ⇒ *page 267*.

The tire pressure must be adjusted to a specified value listed on the tire pressure sticker ⇒ *page 245, fig. 159*.

### Snow chains

For technical reasons, the use of snow chains on the compact spare tire is not permitted.

If you have to drive with snow chains and a front tire fails, mount the spare tire in place of a rear tire. Install the snow chains on the rear tire that you removed, and install that in place of the front tire that failed.




#### WARNING

- After installing a spare tire, the tire pressure must be checked as soon as possible.
- Do not drive faster than 50 mph (80 km/h) with a compact spare tire. Driving faster than that increases the risk of an accident.
- To reduce the risk of an accident, avoid hard acceleration or braking and driving fast around curves with the compact spare tire.
- To reduce the risk of an accident, never drive with more than one compact spare tire.
- Normal summer or winter tires must not be mounted on the compact spare wheel rim.



#### Tips

The  indicator light may turn on when driving with a compact spare tire, due to the different tire diameters. The indicator light should turn off after driving with standard tires again. If the indicator light does not turn off after three drives and a distance of approximately 75 miles (120 km), drive to an authorized Audi dealer or authorized Audi Service Facility as soon as possible to have the malfunction corrected.

## Jump starting

### Preparation

*You should only perform the following steps if you have the necessary technical knowledge and tools.*

If the engine does not start because the vehicle battery is drained, you can jump start your vehicle using another vehicle. Jump start cables are needed to do this.

Both vehicle batteries must have 12 volt nominal voltage. The voltage capacity (Ah) of the vehicle battery that is giving power must not be less than the capacity of the drained vehicle battery.

### Jump start cable

Only use a jump start cable with a large enough diameter. Note the manufacturer's specifications.

Only use a jump start cable with insulated terminal clamps.

Positive cable - usually red.

Negative cable - usually black.



#### WARNING

- A drained battery can freeze at temperatures around 32 °F (0 °C). To reduce the risk of an explosion and chemical burns, thaw a frozen battery immediately, before connecting jump start cables. After jump starting the vehicle, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the vehicle battery checked.
- Read the warnings when working in the engine compartment ⇒ *page 218*.
- Handling the jump start cables incorrectly may cause the vehicle battery to explode and result in serious injuries.
- To reduce the risk of chemical burns, do not bend over the vehicle battery.



#### Note

Jump start cables can cause considerable damage to the vehicle electrical system if they are connected incorrectly.



### Tips

- There must be no contact between the vehicles, or else voltage could flow when connecting the positive terminal and drain the vehicle battery of the vehicle providing the jump start.
- The drained vehicle battery must be connected correctly to the electrical system.
- Turn off electrical equipment that is not needed.

### Jump starting

Both jump start cables must be connected in the correct order.

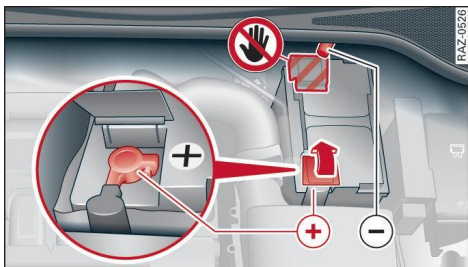


Fig. 169 Engine compartment: connectors for jump start cables or a charger

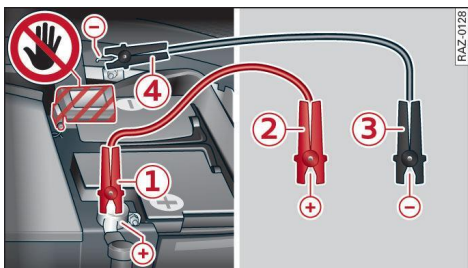


Fig. 170 Connecting the jump start cables

The jump start cable connections are located in the engine compartment.

Follow the information about the vehicle battery  
⇒ page 229.

### Connecting the positive cable (red) to the positive terminal

- Open the cover on the positive terminal  
⇒ fig. 169.

1. Attach one end of the positive cable (red) to the positive terminal on the vehicle battery  
① ⇒ fig. 170.
2. Attach the other end of the positive cable (red) to the positive terminal ② on the power source.

### Connecting the negative cable (black) to the negative terminal

3. Attach one end of the negative cable (black) to the negative terminal ③ on the power source.
4. Attach the other end of the negative cable (black) to the ground connection ④ on the vehicle.

### Starting the engine

- Start the engine in the vehicle giving the charge and let it run at idle.
- Now start the engine in your vehicle, which has the drained battery.
- If the engine does not start, stop the starting procedure after 10 seconds and then repeat it after approximately 30 seconds.
- Turn on the rear window defogger in your vehicle in order to reduce any voltage peaks that may occur when disconnecting the jump start cables. The headlights must be turned off.
- With the engines running, remove the cables in reverse order of the way they were installed.
- Close the cover on the positive terminal.

### WARNING

- Do not touch the non-insulated parts of the terminal clamps. The cable must also not come into contact with vehicle components that conduct electricity when it is connected to the positive vehicle battery terminal. This can cause a short circuit.
- The plugs on the battery cells must not be opened.
- Keep ignition sources (such as open flames, burning cigarettes, etc.) away from the vehicle batteries to reduce the risk of an explosion.
- Route the jump start cables so they cannot get caught in the moving parts in the other vehicle's engine compartment.



**Note**

- Do not use the negative terminal on the vehicle battery for jump starting. A malfunction could occur in the vehicle electrical system.
- Please note that the connecting process previously described for the jump start cables is intended for when your vehicle is being jump started.

**Tips**

Make sure that the connected jump start cables have sufficient contact with metal.

## Towing

**General information**

*You should only perform the following steps if you have the necessary technical knowledge and tools.*

Towing requires a certain amount of practice. Audi recommends contacting a towing company to have the vehicle transported.

You should only have your vehicle towed by another vehicle when disabled in exceptional circumstances. Inexperienced persons should not tow a vehicle.

**Notes on towing**

When the engine is stopped, the transmission will not be sufficiently lubricated if traveling at high speeds and long distances:

- The maximum permitted towing speed is 30 mph (50 km/h).
- The maximum permitted towing distance is 30 miles (50 km).

**Additional information on towing with a tow truck**

The vehicle may only be towed with the front axle raised. Do not wrap any chains or cables around the brake lines.

If the vehicle should be towed with the axle raised, then the ignition must be turned off to reduce the risk of damage to the drivetrain.

**Tow bar and towing cable**

The vehicle can be towed with a tow bar or towing cable. Both persons involved should be familiar with the special considerations when towing, especially when using a towing cable.

Always make sure the traction force does not exceed the permitted level and there are no shock loading conditions. There is always the risk of the coupling becoming overloaded when driving off-road.

For the most safety and security, drive with a tow bar. You should use a towing cable only if a tow bar is not available. Use a towing cable made of synthetic elastic cable or a cable made of similar elastic material.

**WARNING**

- Towing highly increases the risk of an accident, for example from colliding with the towing vehicle.
- To reduce the risk of an accident, do not allow anyone to remain inside the vehicle when it is being transported by a tow truck or a special transporter.
- Never secure the tow bar or towing cable to parts of the vehicle's axles or suspension. These could be damaged, resulting in accidents and serious injuries.

**Note**

- If normal towing methods are not possible, for example if the transmission is faulty or if the towing distance is greater than 30 miles (50 km), then transport the vehicle on a special carrier.
- If the vehicle is towed by a tow truck at the axle that is not permitted, this can cause severe damage to the transmission.
- The vehicle must not be tow started for technical reasons.

**Tips**

- If the power supply is interrupted, then it will not be possible to move the selector out of the "P" position. The parking lock must

be released using the manual release before towing the vehicle ⇒ *page 97*.

- Turn off Audi pre sense\* ⇒ *page 140* when loading the vehicle onto a vehicle carrier, train, ship, or other type of transportation, or when towing the vehicle. This can prevent an undesired intervention from the pre sense\* system.
- Follow the local legal regulations for towing.

### **WARNING**

- Never tow a vehicle using a tow bar or towing cable if the vehicle does not have electrical power.
- If the vehicle loses power while it is being towed, stop towing the vehicle immediately and consult an authorized Audi dealer or qualified repair facility.

## Towing

Read and follow the important information on ⇒ *page 267*.


### Preparations

- ▶ Only secure the towing cable or tow bar at the designated towing eyes ⇒ *page 268*, ⇒ *page 269*.
- ▶ Make sure the towing cable is not twisted. Otherwise it could disconnect from the towing eye while towing.
- ▶ Turn on the emergency flashers in both vehicles ⇒ *page 54*. However, do not do this if it prohibited by law.


### Towing vehicle (front)

- ▶ Start driving only once the towing cable is taut.
- ▶ Press the brake pedal very carefully.
- ▶ Avoid sudden braking or driving maneuvers.

### Vehicle being towed (rear)

- ▶ Make sure the ignition is turned on so that the steering wheel is not locked and so that you can use the turn signals, the horn, and the windshield wipers if needed ⇒ .
- ▶ The full functionality of the brake booster and power steering may not be available. You would then need to use more force to steer and brake the vehicle.
- ▶ Release the parking brake ⇒ *page 103*.
- ▶ Select the “N” position.
- ▶ Make sure the towing cable is always taut.

## Front towing eye

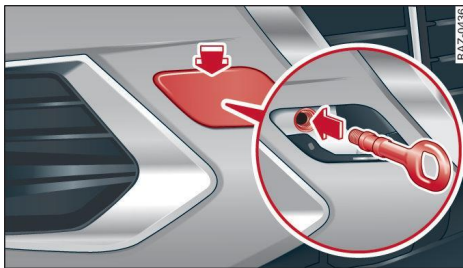

**Fig. 171** Front bumper: installing the towing eye

The threaded opening for the towing eye is located on the right side of the front bumper.

- ▶ Remove the towing eye from the vehicle tool kit ⇒ *page 261*.
- ▶ Press the cap inward with brief, strong pressure ⇒ *fig. 171*. The cap will loosen from the bumper.
- ▶ Tighten the towing eye as far as it will go into the mount. Use a suitable object to tighten the towing eye completely and securely in the mount.
- ▶ After using, place the towing eye back in the vehicle tool kit.

### **WARNING**

If the towing eye is not tightened all the way when installing, the threads may be pulled out when towing the vehicle and result in an accident.

### **Tips**

Depending on the model, the shape of the cap can vary.

## Rear towing eye



**Fig. 172** Rear bumper: installing the towing eye

The threaded opening for the towing eye is located on the right rear of the bumper.

- ▶ Remove the towing eye from the vehicle tool kit  
⇒ *page 261*.
- ▶ Press the cap inward with brief, strong pressure  
⇒ *fig. 172*. The cap will loosen from the bumper.
- ▶ Tighten the towing eye as far as it will go into the mount. Use a suitable object to tighten the towing eye completely and securely in the mount.
- ▶ After using, place the towing eye back in the vehicle tool kit.



### WARNING

If the towing eye is not tightened all the way when installing, the threads may be pulled out when towing the vehicle and result in an accident.



### Tips

Depending on the model, the shape of the cap can vary.

Fuses and bulbs

Fuses

Replacing fuses

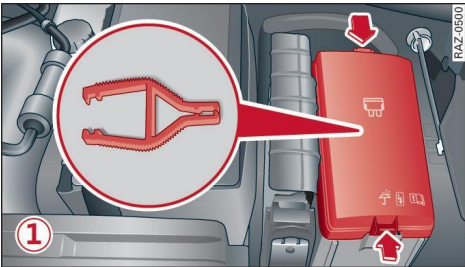


Fig. 173 Left side of the engine compartment: fuse cover (1)

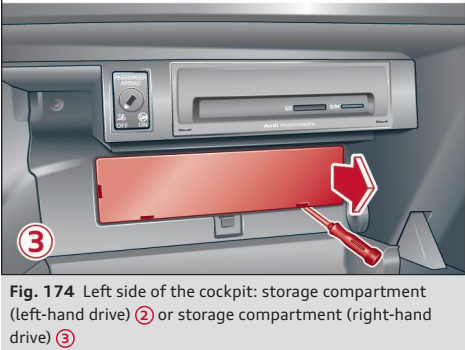
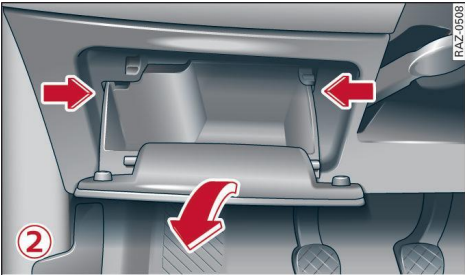


Fig. 174 Left side of the cockpit: storage compartment (left-hand drive) (2) or storage compartment (right-hand drive) (3)

Fuses are installed in various locations in your vehicle. The following information only lists fuses that you can change yourself. To have other fuses changed, contact an authorized Audi dealer or authorized Audi Service Facility. The following table does not list fuse locations that are not used.


A fuse that has blown will have metal strips that have burned through.

The fuses are located in the left side of the engine compartment (1), or behind the storage compartment in the left side of the cockpit (2) (left-hand drive vehicles) or the glove compartment (3) (right-hand drive vehicles).

- ▶ Turn off the ignition and all electrical equipment.
- ▶ Check the table that follows to see which fuse belongs to the affected equipment.
- ▶ Remove the screwdriver from the vehicle tool kit ⇒ page 261.
- ▶ Remove the appropriate cover.
- ▶ Remove the clamp from the rear side of the fuse cover (1).
- ▶ Remove the fuse using the clip.
- ▶ Replace the blown fuse only with a fuse that has the same amp rating.
- ▶ Install the cover.

Fuse color identification

Color	Current rating in amps
Black	1
Gray	2
Purple	3
Pink	4
Light brown	5
Brown	7.5
Red (narrow)	10
Light blue	15
Yellow	20
White or transparent	25
Light green	30
Teal	35
Orange	40
Red (wide)	50

 **WARNING**

Do not repair fuses and never replace a blown fuse with one that has a different amp rating. This can cause damage to the electrical system and increases the risk of fire.

**Note**

If a new fuse burns out again shortly after you have installed it, have the electrical system checked as soon as possible by an authorized Audi dealer or authorized Audi Service Facility.

**Tips**

Some of the equipment listed in the following tables applies only to certain model versions or certain optional equipment.

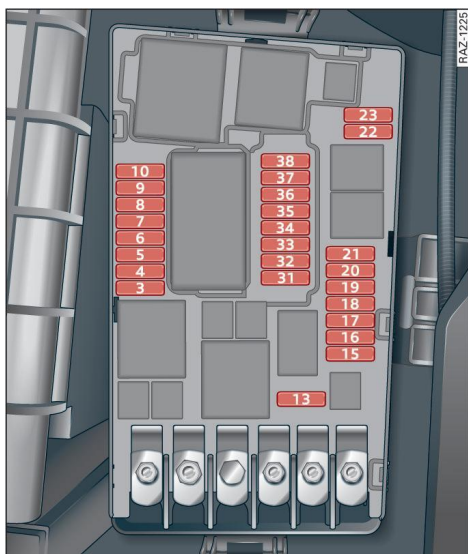
**Fuse assignment – engine compartment**

Fig. 175 Left side of engine compartment: fuse assignment

No.	Equipment
3	Drive system control module
4	Engine components, engine start
5	Engine components
6	Brake light sensor
7	Engine components
8	Heated oxygen sensors
9	Engine components
10	Fuel pump
13	Transmission fluid pump
15	Horn

No.	Equipment
16	Engine components, engine electronics
17	Electronic Stabilization Control (ESC), drive system control module
18	Battery monitoring control module, diagnostic interface
19	Windshield wiper control module
20	Anti-theft alarm system, garage door opener
21	Automatic transmission
22	Drive system control module
23	Engine start
31	Engine components, fuel injectors
35	Climate control system
36	Left headlight
37	Parking heater
38	Right headlight

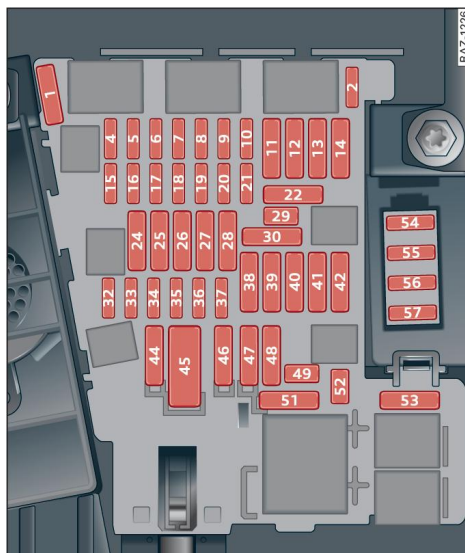
**Fuse assignment– cockpit**

Fig. 176 Left side of cockpit: fuse assignment

No.	Equipment
1	Exhaust treatment
2	Seat electronics, front seats
5	Diagnostic interface

No.	Equipment
6	Ignition key safety interlock, transmission selector (automatic transmission)
7	Auxiliary heating, climate control system control panel, tire pressure monitoring system
8	Headlight range control, interior monitoring, ambient lighting, light switch, roof electronics control module, emergency call module, parking brake, diagnostic connector, light/rain sensor, particulate matter sensor
9	Steering column electronics
10	Infotainment system, MMI control knob
11	Vehicle electrical system control module
12	Infotainment system
13	Driver's side safety belt tensioner, airbag control module
14	Climate control system blower
15	Electronic steering column lock
16	Audi phone box, Electronic Toll Collection System (ETC)
17	Instrument cluster, emergency call and communication control module
18	Rearview camera, peripheral cameras
19	Convenience access and start authorization control module
20	Exhaust treatment, fuel leak diagnosis
21	Steering column electronics
24	Vehicle electrical system control module
25	Driver side door control module, left rear window regulator motor, left rear door control module
26	Vehicle electrical system control module
27	Vehicle electrical system control module
29	Roof electronics control module, vehicle electrical system control module
30	48 V battery
32	Driver assistance systems, camera systems
33	Front passenger's seat electronics, roof electronics control module

No.	Equipment
34	A/C system components, parking brake, reverse lights, engine sound control module
35	Air quality sensor, diagnostic connector, center console switch module, rearview mirror, headlight range control, instrument illumination
39	Passenger side door control module, right rear window regulator motor, right rear door control module
40	12 volt socket
41	Passenger's side safety belt tensioner
42	Vehicle electrical system control module
44	All wheel drive control module
45	Driver's seat electronics
47	Rear window wiper
49	Engine start, clutch position sensor
52	Suspension control
53	Rear window defogger
54	Left trailer hitch light
55	Trailer detection control module
56	Right trailer hitch light
57	Trailer hitch socket

## Bulbs


### Changing bulbs

Audi recommends having bulbs replaced by a technician or an authorized Audi dealer or authorized Audi Service Facility in cases of doubt. These have the correct tools and replacement parts as well as the required technical knowledge.

### LED lights\*

Your vehicle is equipped with maintenance-free headlights and tail lights. However, if a light bulb needs to be replaced, please contact an authorized Audi dealer or authorized Audi Service Facility. ►

**WARNING**

If you still would like to try replacing the bulbs in your vehicle yourself, read the warnings regarding working in the engine compartment ⇒  *in General information on page 219.*

**Note**

Make sure the covers are fitted correctly on the headlights and tail lights so that no water will leak in from the outside and the light function will not be impaired.

Data privacy

Privacy notice

You can find information about data privacy online on the Audi website for your particular country or sales region, or in the vehicle MMI.

Applies to: MMI: Select on the home screen: **SETTINGS > General > Legal notes > About Audi connect**.

Image recording

Surrounding area monitoring

Applies to: vehicles with surrounding area monitoring

Some vehicle functions require the vehicle's path to be detected and evaluated. This is done by cameras installed permanently on the vehicle that detect objects in the vehicle's surroundings (such as obstacles or guard rails). The live images from the cameras are transmitted to the applicable control module.

The camera images are transferred to the responsible control module for processing and may be stored, depending on vehicle equipment. The control module analyzes the current camera image using image evaluation software. This image evaluation software detects anonymized technical measurements, such as distances to objects. The control module evaluates these technical measurements and makes it possible for the assist systems to control the vehicle as needed.

Data storage

Vehicle control modules

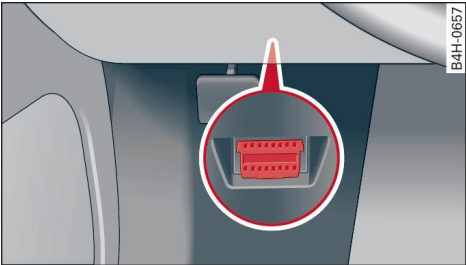



Fig. 177 Driver's side footwell: connection port for the On Board Diagnostic System (OBD)

Your vehicle is equipped with electronic control modules for various vehicle systems such as the airbags. These vehicle control modules store data while driving normally that is required by an authorized Audi dealer or authorized Audi Service Facility for diagnosis and repair purposes. Only certain types of data are recorded for a very short period of time if a control module has detected a system event. No noises, conversations, or images inside the vehicle will be recorded.

The data may include information such as the vehicle speed, the direction of travel, and information about the brake system, or also the behavior of the restraint system in the event of a collision. The stored data can be exported and downloaded with special devices, which must be connected directly to the vehicle.

On Board Diagnostic System (OBD)

There is a diagnostic connector port in the driver's side footwell to read out the various control modules and the event data recorder. Data regarding the function and condition of the electronic control modules is stored in the event memory. Only have an authorized Audi dealer or authorized Audi Service Facility read out and clear data from the event memory.

**WARNING**

- Incorrect use of the connection port for the On Board Diagnostic System can cause malfunctions, which can then result in accidents and serious injuries.
- Only allow an authorized Audi dealer or authorized Audi Service Facility to read out the data.

Crash data recorder

Event Data Recorder

This vehicle is equipped with an Event Data Recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an airbag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's system performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of



time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g. name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

### Assist system monitor

This vehicle is equipped with an Assist System Monitor (ASM). The ASM collects data that is not stored by the EDR in the event of an accident. The main task of the ASM is to make it possible to understand the role and the behavior of the assist systems in these accident situations. In addition to the data that the EDR stores, the ASM records data related to the assist systems starting several seconds before the accident or near-accident. The data collected by ASM depends on the equipment and may include the following information: status information of the assist systems (for example, if they are turned on or off, system events, etc.), control interventions (for example, by ESC, ABS, Audi pre sense, etc.), and assist system settings (such as speed settings).

Special devices and access to the vehicle or to the ASM are necessary in order to read the data from

the ASM memory. In addition to the vehicle manufacturer, third parties such as law enforcement authorities can also read and analyze the stored data if they have access to the vehicle or to the ASM.

### Data usage

Audi can read out the information stored in the data memories or similar data, or give this information to third parties, especially in the following situations:

- If the vehicle owner or lessee agrees
- If there is an official request from the police
- If a court or authorities request it

If legally permitted, Audi can also use the data for analysis of vehicle operation and safety performance or provide this data to third parties for research purposes.

## Transmitted information

### Data collection

Applies to: vehicles with data collection

Depending on the country, Audi may be able to access the vehicle and collect data, for example for the following reasons:

- Data collection for research and development
- Data collection for statistics, analytics, and reporting
- Data collection for personalized evaluations

For example, various technical function data, environmental data, driving data, and usage data will be collected for a specific purpose and forwarded to Audi. The data will be sent from the vehicle at the time the data is collected.

You can find additional information in the MMI. Select on the home screen: **SETTINGS > General > Legal notes > About Audi connect.**

If you would like to change the data collection settings, contact an authorized Audi dealer or authorized Audi Service Facility for more information. Depending on the country and equipment, you may be able to change data collection in the privacy mode settings of your vehicle.

### Privacy settings

Applies to: vehicles with Audi connect

- ▶ Applies to MMI: Select on the home screen: **SETTINGS > Privacy mode settings**.
- ▶ To display additional information about the privacy settings and the associated symbols in the status bar, press ⓘ in the MMI.

Requirement: the ignition must be turned on.

### Setting the maximum privacy settings

When the **Activate privacy mode** function is turned on, the data connection is deactivated or sending of data is restricted, but all safety-related, legal, or contractually required Audi connect services remain activated. The majority of the Audi connect services are deactivated.

When the function is turned off, the data connection will be available in order to use Audi connect services. After turning off the **Activate privacy mode** function, check the individual data categories as described under *Adjusting individual privacy settings*.

### Adjusting individual privacy settings

In the MMI, you can adjust individually which data should be transmitted from the vehicle. If you turn on a data category, the data will be transmitted.

You can also deactivate individual services for your vehicle at my.audi.com if you are logged into the vehicle as the key user ⇨ *page 31*. These deactivated services will not be available in the vehicle. For additional information, visit my.audi.com.<sup>1)</sup>

#### Note

You are responsible for all precautions taken for data protection, anti-virus protection, and protection against loss of data on mobile devices that are used to access the Internet through the Wi-Fi hotspot.

#### Tips

- The following interfaces are not affected by changes to the privacy settings: Bluetooth, Bluetooth Low Energy (BLE), Wi-Fi, smartphone interface, Near Field Communication (NFC), charging communication (high-voltage system), Electronic Toll Collect (ETC), On-Board Diagnostic System (OBD) if equipped.
- If the maximum privacy settings are turned on, your vehicle may not receive certificates and security updates for establishing a secure connection, depending on vehicle equipment. In order to receive security updates and certificates, turn off the maximum privacy settings for at least ten minutes every three months. Make sure that your vehicle is connected to the Internet. A symbol in the MMI status bar indicates if the required data connection is available ⇨ *page 24*.
- If the transmission of data is limited, it will have the following effects on the exchange of data for Audi connect services and emergency calls, if equipped:
  - The emergency call function will remain available without restrictions and will continue to transmit data.
  - If an online roadside assistance call is initiated, no data will be transmitted, but a call will be made.
  - If the Geofencing Alert, Speed Alert, and/or Valet Alert services have been activated by the key user, then they will remain available without restrictions and continue to transmit data.
  - Stored destinations (favorites, last destinations) are only stored in the vehicle. If you allow transmission of data again, these destinations will be synchronized via the myAudi account. To prevent synchronization of destinations, delete the destinations before you allow data to be transmitted again.

<sup>1)</sup> In certain countries.

## Audi connect

Applies to: vehicles with Audi connect Infotainment

Audi collects, uses, stores and shares your personal information, such as contact data, vehicle data, usage data, driving data and precise geolocation, in order to provide you with the products and services you have purchased or requested, and for a number of other purposes, for example, to track quality issues, to performance and safety, to meet our internal compliance or legal requirements and to market to customers and potential customers. For a more complete list of the data we collect, how we use it and with whom we share it, please visit your Audi national/sales region website at [www.audi.com](http://www.audi.com).

The collection, use and sharing may vary depending on your model and model year, your subscription status, or the service offering. For example, collection, use and sharing may vary between Audi connect services, if you have designated a key user, or if you are driving a model equipped with persistent data logging. Please review the complete Privacy Statement to understand our data handling practices with respect to a particular service.

You can find additional information about our data privacy practices in your MMI.

- Applies to: MMI: On the home screen, select: **SETTINGS > General > Legal notes > About Audi connect.**

Information about our privacy practices in conjunction with the mobile Audi connect application can be found in the Application's Privacy Statement.

For additional information about the privacy practices relating to Audi connect, myAudi, or other websites, applications or online services as well as your obligations with respect to using these services, and for additional information regarding Audi connect terms and conditions, please visit your Audi national/sales region website at [www.audi.com](http://www.audi.com).

# Accessories and technical changes

## Warranty

Your vehicle is covered by various warranties:

- New Vehicle Limited Warranty
- Limited Warranty Against Corrosion Perforation
- Applies to: USA models: Emissions Control System Warranties: *Federal Emissions Control System Defect Warranty, Federal Emissions Performance Warranty*
- Applies to: Canada models: Emissions Warranties: *Emissions Control System Defect Warranty, Emissions Performance Warranty*
- Applies to: USA models: Kansas Safety Belt Limited Warranty
- Applies to: USA models: California Emissions Control System Warranties: *Short-term Emissions Defects Warranty, Long-term Emissions Defects Warranty, TZE models Emissions Defects Warranty, California Emissions Performance Warranty*

You can find detailed information in your Warranty & Maintenance Booklet, in the California Emissions Booklet\*, or on the applicable website:

- Applies to: USA: [maintenance.audiusa.com](http://maintenance.audiusa.com)
- Applies to: Canada: [www.audimaintenance.ca](http://www.audimaintenance.ca) or [www.audimaintenance.ca/#/search/fr](http://www.audimaintenance.ca/#/search/fr)

## Audi Literature Shop

Service information is made available as soon as possible after a model is introduced and can be ordered in the Audi Literature Shop: <http://literature.audiusa.com>

## Driving in other countries

Government regulations in the United States and Canada require motor vehicles to comply with emissions regulations and safety standards. Therefore, vehicles that were produced for the U.S. and Canadian markets are different from vehicles produced for other countries.

If you plan to operate your vehicle outside of the United States or Canada, it is possible that:

- Fuel may have a significantly lower octane rating. Unsuitable fuels can cause engine damage.
- Proper maintenance and repair work may not be possible because special service equipment, tools, or measuring devices needed for your vehicle may not be available.
- Replacement parts may not always be available.
- Navigation systems for vehicles built for the U.S.A. and Canada will not necessarily work in Europe, and may not work in other countries.



### Note

Audi is not liable for damage to the vehicle resulting from these country-specific differences.

## Maintenance, repairs, and technical modifications

Observe the safety precautions ⇒ *page 218, General information* and ⇒ *page 262, Raising the vehicle*.

### General information

Due to the increasing complexity of technology in these vehicles, as well as the safety and environmental standards that apply, you can only perform a very limited amount of repairs and modifications to the vehicle yourself.

Proof of maintenance work may be required to submit a claim within the warranty period.

We recommend that you have your vehicle serviced by an authorized Audi dealer or authorized Audi Service Facility and that Audi Genuine Parts and Audi Genuine Accessories are used. This helps to ensure that your vehicle's functionality, performance, and safety are not impaired.

### Maintenance and repairs

Your vehicle was designed to help keep maintenance requirements to a minimum. Some regular maintenance is required to help ensure that your vehicle runs in a safe, economical, and reliable ►

manner. Please refer to your Warranty & Maintenance Booklet for more detailed information about vehicle maintenance.

When operating the vehicle under more extreme operating conditions, for example when outside temperatures are very low or in very dusty environments, certain maintenance should be performed between the specified intervals.

Maintenance and repair work generally requires special tools, measuring devices, and other equipment that is available to trained vehicle technicians in order to help ensure that your vehicle and all of its systems operate correctly, reliably, and safely. Performing work on the vehicle incorrectly can impair the operation and reliability of your vehicle and may void one or more of your vehicle's warranties.

### Technical Modifications

Interference with electronic components, their software, the wiring, and data transfer may cause malfunctions. Because of the way electronic components are interconnected, such malfunctions can also impair systems that are not directly involved. This means that you risk both a substantial reduction in the operational safety of your vehicle and increased wear of vehicle components.

Some convenience functions, such as the convenience turn signal function, individual door opening function, and displays, can be reprogrammed using special workshop equipment. If functions are reprogrammed, the information and descriptions about these functions in this Owner's Manual may no longer apply to the changed functions. Audi recommends that an authorized Audi dealer or authorized Audi Service Facility perform and verify any reprogramming procedures.



### WARNING

- There is a risk of an accident if maintenance, repairs, technical modifications, or paint work are not performed correctly. The functionality of the airbags, the driver assistance systems, and the vehicle may be impaired. Having the vehicle serviced by an authorized Audi dealer or authorized Audi Service Facility is recommended.

- There is the risk of an accident if work on the vehicle is performed incorrectly. Serious injuries may result. Having the vehicle serviced by an authorized Audi dealer or authorized Audi Service Facility is recommended.
- Please refer to the engine compartment safety precautions described in *⇒ page 218*.



### Note

- Maintenance work, repairs, technical modifications to the vehicle (such as installing additional equipment), or paint work that is not performed correctly can cause vehicle damage.
- The New Vehicle Limited Warranty does not cover damage or malfunctions if the recommended intended use of the vehicle and maintenance measures listed in the Audi Owner's Manual and the Warranty & Maintenance Booklet were not followed.
- If emergency repairs must be performed, take your vehicle to an authorized Audi dealer or authorized Audi Service Facility as soon as possible.
- Audi is not liable for damage to the vehicle resulting from failure to comply with these guidelines.



### For the sake of the environment

- Regular maintenance can help protect the environment.
- Technical modifications to the vehicle can have a negative impact on fuel consumption and vehicle emissions.



### Tips

Because of your vehicle's aluminum body design, all service and repair procedures affecting the body should be performed by an authorized Audi dealer or authorized Audi Service Facility, who will perform the work according to Audi factory specifications. Only Audi Genuine Parts are used when Audi experts perform repair or service procedures. Failure to use Audi Genuine Parts or Audi Genuine Accessories or performing repairs incorrectly

may result in severe vehicle damage, such as corrosion.

of the same material. Do not install any license plate brackets on the front of vehicles that do not have factory-installed brackets. Otherwise, the function of the system could be impaired.

# Accessories and parts

## Introduction

Consult with an authorized Audi dealer or authorized Audi Service Facility before purchasing accessories or replacement parts.

Audi recommends using Audi Genuine Parts and Audi Genuine Accessories. Audi does not evaluate the reliability and suitability of products that are not Audi Genuine Parts or endorse them, even if the product is approved by a certified testing agency or government agency.

Have all work performed by an authorized Audi dealer or authorized Service Facility. Audi recommends having all work performed by an authorized Audi dealer or authorized Audi Service Facility.

## Radio communications equipment

A correctly-installed exterior antenna is required for operating radio equipment in the vehicle. Otherwise, the increased electromagnetic waves can cause malfunctions in the vehicle. Observe the regulations in the country where the vehicle is being operated and the instructions from the radio equipment manufacturer.

An authorized Audi dealer or authorized Audi Service Facility can inform you about installation options and radio communications equipment.



### WARNING

- Installing unapproved accessories or incorrect replacement parts can cause vehicle damage and can increase the risk of an accident.
- Never attach accessories, such as phone holders or cup holders, to the airbag covers or within the airbag deployment zone, because this increases the risk of injury if the airbag deploys.
- On vehicles that have factory-installed license plate brackets on the front of the vehicle, the brackets may only be replaced with ones that are the same size and made

## Technical data

### Identification data

#### Vehicle data label

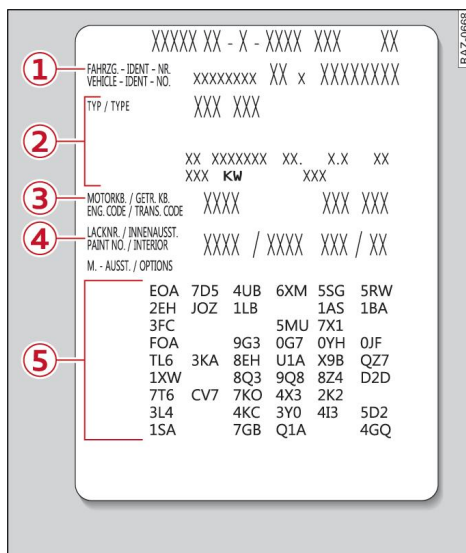


Fig. 178 Vehicle identification label

The vehicle data label is located on the inside of the Owner's Manual cover page.

The sticker contains the following vehicle data:

- 1 Vehicle Identification Number (VIN)

- 2 Vehicle type, displacement, engine output, transmission
- 3 Engine and transmission codes
- 4 Paint and interior codes
- 5 Optional equipment numbers

#### Vehicle Identification Number

The Vehicle Identification Number (VIN) is located in the following areas:

- Select on the home screen: **VEHICLE > Settings & Service > Vehicle info.**
- On the vehicle identification label
- At the front behind the windshield\*
- Stamped in the right front footwell under the carpet

#### Information about technical data

The values may vary based on special equipment as well as market-specific equipment and measuring methods.

Please note that the specifications listed in the vehicle documentation always take precedence.

#### Tips

Any technical data that is missing was not available at the time of publication.

## Vehicle data

#### Dimensions

	Length (in (mm))	Width (in (mm))	Width across the mirrors (in (mm))	Height at curb weight (in (mm))
Q3	176.6 (4,485) – 177 (4,495)	72.8 (1,849) – 73 (1,853)	79.7 (2,024)	64.1 (1,628) – 64.2 (1,631)

#### Capacities

	Approximate capacities
Fuel tank	15.9 gal (60 L)
Windshield/headlight washer system*	5.0 qt (4.8 L)

Weights



Fig. 179 Safety certificate

Gross Vehicle Weight Rating (GVWR)

The maximum permitted total weight ① of the vehicle is listed on the safety certificate on the side area of the door or on the driver's door pillar.

Trailer load

Trailer with brakes up to 12% incline	Tongue weight on trailer ball hitch	Gross combined weight rating
1,499 lbs (680 kg)	154 lbs (70 kg)	6,019 lbs (2,730 kg)

Gross Axle Weight Rating (GAWR)

The maximum permitted load on the front axle ② or the rear axle ③ is listed on the safety certificate on the side area of the door or on the driver's door pillar.

Load

The maximum permitted load is listed on the tire pressure label on the driver's door pillar.

Roof load

The maximum permissible roof load is 165 lbs (75 kg).



## Other information

### Brands and licenses

This manual does not contain any symbols, such as ® or ™, to identify trademarks or registered trademarks. However, the absence of these symbols does not constitute a waiver of any rights associated with these names.

Apple, iPhone, iPod touch, Apple CarPlay, Lightning, and iTunes Radio are trademarks of Apple Inc.

Other product and manufacturer names may be trademarks of their respective owners.

### Disposal instructions

#### General information

Follow the local legal regulations for disposing of electrical/electronic devices and of the vehicle.

#### Batteries

Handling batteries that contain lithium (Li) requires special care. For example, they must not be overheated or damaged. Battery components can be harmful to human and animal health and can accumulate in the environment. To reduce this risk, follow the legal regulations for disposal of batteries that are applicable in your country.

#### Vehicle

Certain components in your vehicle such as undeployed airbag modules, pretensioners and remote control batteries may contain Perchlorate Material – special handling may apply, See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate). When the vehicle or parts of the restraint system including airbag modules and safety belts with pretensioners are scrapped, all applicable laws and regulations must be observed. Your authorized Audi dealer is familiar with these requirements and we recommend that you have your dealer perform this service for you.

### Declaration of compliance for telecommunications equipment and electronic systems

Your vehicle may be equipped with various radio systems and electronic systems, depending on vehicle equipment. The manufacturer is not liable for radio malfunctions that are caused by unauthorized changes to the equipment.

#### FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### FCC Part 15.21

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### RSS-Gen

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

#### Tips

Additional information, updates, and supplements about the radio systems or product names are based on the vehicle equipment and country can be found on the following website: [www.audi.com/generalinfo](http://www.audi.com/generalinfo)

## **Reporting Safety Defects**

### **Applicable to U.S.A.**

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying

Audi of America, Inc.  
2200 Ferdinand Porsche Drive  
Herndon, VA 20171

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Audi of America, Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>;

or write to:

Administrator NHTSA  
1200 New Jersey Ave.,  
S.E. West Building  
Washington, DC  
20590.

You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

### **Applicable to Canada**

If you live in Canada and you believe that your vehicle has a defect that could cause a crash, injury or death, you should immediately inform Transport Canada, Defect Investigations and Recalls. You should also notify Audi Canada.

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls, may either call Transport Canada toll-free at:

Tel.: 1-800-333-0510 or  
Tel.: 1-819-994-3328 (Ottawa region and from other countries)  
TTY for hearing impaired:  
1-888-675-6863

or contact Transport Canada by mail at:

Transport Canada  
Motor Vehicle Safety Investiga-  
tions Laboratory  
80 Noel Street  
Gatineau, QC  
J8Z 0A1

For additional road safety infor-  
mation, please visit the Road  
Safety website at:

English:

[http://www.tc.gc.ca/eng/  
motorvehiclesafety/menu.htm](http://www.tc.gc.ca/eng/motorvehiclesafety/menu.htm)

French:

[http://www.tc.gc.ca/fra/  
securiteautomobile/menu.htm](http://www.tc.gc.ca/fra/securiteautomobile/menu.htm)

# Numbers and Symbols

2-zone deluxe automatic climate control . . . .	87
3-zone deluxe automatic climate control . . . .	87

## A

A/C cooling mode . . . . .	88
ABS <i>refer to Anti-Lock Braking System (ABS)</i> . .	109
Accelerator pedal . . . . .	96
Accessories . . . . .	280
Active combination filter . . . . .	87
Adaptive cruise assist . . . . .	125
Cleaning the sensors . . . . .	256
Adaptive cruise control . . . . .	125
Predictive control . . . . .	130
<i>also refer to Adaptive cruise assist</i> . . . . .	125
Adaptive dampers . . . . .	108
Adjusting sound . . . . .	211
Adjusting temperature . . . . .	88
Adjusting the brightness . . . . .	56
Adjusting volume . . . . .	30
Adjusting volume (announcements) . . . . .	211
Airbag system . . . . .	70
Alarm system <i>refer to Anti-theft alarm system</i> . . . . .	37
Alignment pin (changing the wheel) . . . . .	261
All-weather lights . . . . .	52
All season tires . . . . .	250
All wheel drive <i>refer to quattro</i> . . . . .	109
Amazon Alexa integration Media playback . . . . .	198
Android Auto <i>refer to Smartphone interface</i> . . . . .	208
Anti-Lock Braking System (ABS) . . . . .	109
Anti-Slip Regulation . . . . .	110
Anti-theft alarm system . . . . .	37
Anti-theft wheel bolts . . . . .	262
Apple CarPlay <i>refer to Smartphone interface</i> . . . . .	208
Aspect ratio Video . . . . .	203

ASR <i>refer to Anti-Slip Regulation</i> . . . . .	109
Audi adaptive light . . . . .	52
Audi ceramic . . . . .	102
Audi connect <i>refer to connect</i> . . . . .	169, 170
Audi connect Remote & Control . . . . .	171
Audi drive select . . . . .	107
Audio files . . . . .	200
Audi Online Owner's Manual . . . . .	6
Audi phone box . . . . .	159
Audi pre sense . . . . .	138
Messages . . . . .	140
rear . . . . .	140
Audi pre sense front . . . . .	139
Audi side assist <i>refer to Side assist</i> . . . . .	141
Audi virtual cockpit <i>refer to Instrument cluster</i> . . . . .	14
AUTO Automatic headlights . . . . .	52
Climate control system . . . . .	88
Auto Lock (central locking) . . . . .	34
Automatic luggage compartment lid . . . . .	42, 43
Automatic transmission . . . . .	94
Automatic wipe/wash system . . . . .	58
Average consumption . . . . .	17
Average speed . . . . .	17

## B

Band <i>refer to Frequency band</i> . . . . .	190
Battery Charging (12 volt vehicle battery) . . . . .	232
Safety precautions . . . . .	231
Vehicle battery (12 volt) . . . . .	229
Winter operation (12 volt vehicle battery) .	230
Battery (mobile device) Charging with USB . . . . .	160, 199
Wireless charging . . . . .	160
Blower . . . . .	88
Bluetooth Audio player . . . . .	197
Connecting a device . . . . .	212
Connecting a mobile phone . . . . .	157
Deleting a device . . . . .	213

Device overview . . . . .	212	Central locking switch . . . . .	36
Disconnecting a device . . . . .	212	Ceramic brakes . . . . .	102
Displaying profiles . . . . .	213	Certification . . . . .	283
Selecting a device . . . . .	212	Changing bulbs . . . . .	272
Specifying a favorite . . . . .	213	Charging	
Brake fluid		<i>refer to</i> Power sources . . . . .	81
Checking the brake fluid level . . . . .	228	Charging wirelessly . . . . .	160
Brakes . . . . .	101	Child safety lock	
Brake assist . . . . .	109	Power windows . . . . .	46
Brake fluid . . . . .	228	Rear doors . . . . .	46
Emergency braking function . . . . .	104	Child safety seats . . . . .	75
Hot . . . . .	104	Securing to the top tether anchor . . . . .	79
New brake pads . . . . .	101	Securing with a safety belt . . . . .	78
Brands . . . . .	283	Securing with LATCH . . . . .	77
Break-in security feature . . . . .	37	Cleaning . . . . .	254
Breaking in		Cleaning artificial leather . . . . .	257
New brake pads . . . . .	101	Cleaning carbon components . . . . .	256, 258
New tires . . . . .	241	Cleaning controls . . . . .	257
Bulb change . . . . .	272	Cleaning decorative parts and trim . . . . .	256, 257
Business address . . . . .	185	Cleaning exhaust tail pipes . . . . .	256
<b>C</b>		Cleaning microfiber . . . . .	257
California Proposition 65 Warning . . . . .	220	Cleaning plastic parts . . . . .	257
Battery specific . . . . .	230	Cleaning rubber seals . . . . .	256
Call list . . . . .	161	Cleaning textiles . . . . .	257
Cameras		Climate control system . . . . .	87
Coverage areas . . . . .	117	Closing	
Locations . . . . .	118	Automatic luggage compartment lid . . . . .	42
Capacities . . . . .	281	Convenience closing . . . . .	47
Cargo floor . . . . .	85	Hood . . . . .	220
Cargo net . . . . .	84	Luggage compartment lid . . . . .	42
Car key . . . . .	38	Luggage compartment lid with foot motion . . . . .	43
Car wash . . . . .	254	Panoramic glass roof . . . . .	48
Catalytic converter . . . . .	218	Sunshade (roof) . . . . .	48
Center display		Windows . . . . .	46
<i>refer to</i> Multi Media Interface . . . . .	21	Cockpit dimming . . . . .	56
Central locking . . . . .	34	Cockpit (overview) . . . . .	9
Auto Lock . . . . .	34	Color code . . . . .	281
Convenience key . . . . .	39	Coming to a stop . . . . .	93
Convenience opening and closing . . . . .	47	Compact spare tire . . . . .	264
Luggage compartment lid . . . . .	42	Compartments . . . . .	82
Mechanically unlocking and locking . . . . .	36	Compass in the mirror . . . . .	61
Messages . . . . .	36	Compliance . . . . .	283
Remote control key . . . . .	39	Conference call . . . . .	164
Setting . . . . .	35	Configuration wizard . . . . .	21
Vehicle key . . . . .	39		

connect . . . . .	169
Data plans . . . . .	173
Data Privacy . . . . .	277
Emergency call . . . . .	175
Infotainment . . . . .	170
Infotainment services . . . . .	171
Online roadside assistance . . . . .	176
Vehicle control services . . . . .	171
Connected devices . . . . .	212
Connections	
<i>refer to</i> Media . . . . .	197, 200
Consumer information . . . . .	278
Consumption	
Reducing . . . . .	99
Consumption (fuel) . . . . .	17
Contacts	
Importing and exporting . . . . .	165
Updating in the MMI . . . . .	165
<i>also refer to</i> Directory . . . . .	162
Convenience key . . . . .	34
Convenience closing . . . . .	47
<i>also refer to</i> Vehicle key . . . . .	38
Convenience opening and closing	
Windows or roof . . . . .	47
Coolant temperature display . . . . .	16
Cooling mode . . . . .	88
Cooling system	
Adding coolant . . . . .	227
Checking the coolant level . . . . .	227
Coolant . . . . .	226
Cornering light . . . . .	52
Cruise control system . . . . .	124
Cup holders . . . . .	81
Current consumption . . . . .	17

## D

Data module	
Serial number (IMEI) . . . . .	165
Data plans . . . . .	173
Data Privacy . . . . .	277
Date . . . . .	17
Setting . . . . .	211
Daytime running lights . . . . .	52
Declaration of compliance . . . . .	283
Defrosting (windows) . . . . .	88

Demo mode	
<i>refer to</i> Presentation mode . . . . .	188
Destination search . . . . .	179
Determining correct load limit . . . . .	248
Device overview . . . . .	212
Digital compass . . . . .	61
Dimensions . . . . .	281
Dimming the exterior mirrors . . . . .	57
Dimming the rearview mirror . . . . .	57
Directory . . . . .	162
Business card . . . . .	163
Display	
Cleaning . . . . .	257
Displaying tool tips . . . . .	21
Disposal . . . . .	278
Distance . . . . .	17
Distance warning . . . . .	135
Doors	
Child safety lock . . . . .	46
Door contact switch . . . . .	55
Mechanically unlocking and locking . . . . .	36
Driver assistance menu . . . . .	119
Driver information system . . . . .	15
Drives	
<i>refer to</i> Media . . . . .	197, 200
Drive select	
<i>refer to</i> Audi drive select . . . . .	107
Drive system . . . . .	99
Audi drive select . . . . .	107
Drive system (message) . . . . .	101
Driving down hills . . . . .	104
Driving program . . . . .	134
Driving through water . . . . .	105
Driving time . . . . .	17
Driving tips	
Driving through water . . . . .	105
Efficient driving . . . . .	99
Offroad driving . . . . .	105
Uphill and downhill . . . . .	104
Driving up hills . . . . .	104
Dust filter	
<i>refer to</i> Active combination filter . . . . .	87

## E

E-mail . . . . .	166
------------------	-----

eco mode (climate control system) . . . . .	88	Engine sound	
EDL		Audi drive select . . . . .	107
<i>refer to</i> Electronic Differential Lock . . . . .	109	Engine Start/Stop mode	
EDR		<i>refer to</i> Start/Stop system . . . . .	100, 101
<i>refer to</i> Event Data Recorder (EDR) . . . . .	274	Engine start system . . . . .	92
Efficiency assist		Engine stop	
Predictive control . . . . .	130	<i>refer to</i> Start/Stop system . . . . .	100, 101
Electrical system . . . . .	229	Entering a destination . . . . .	179
Electromechanical parking brake . . . . .	103	Destination from the map . . . . .	181
Electronic Differential Lock . . . . .	110	Entry/exit lighting . . . . .	54
Electronic immobilizer . . . . .	38	Environment	
Electronic Stabilization Control (ESC) . . . . .	109	Unleaded gasoline . . . . .	215
Embedded SIM card . . . . .	170	eSIM	
Emergency assist . . . . .	142	<i>refer to</i> Embedded SIM card . . . . .	170
Emergency assistance . . . . .	261	Event Data Recorder (EDR) . . . . .	274
Emergency braking function . . . . .	104	Exterior antenna . . . . .	160
Emergency call . . . . .	164, 175	Exterior lighting . . . . .	52
Emergency flashers . . . . .	54	Exterior mirrors . . . . .	56
Emergency mode . . . . .	98	Folding settings . . . . .	35
Emergency operation		External voice operation . . . . .	28
Doors . . . . .	36		
Panoramic glass roof . . . . .	48	<b>F</b>	
Emissions control system . . . . .	218	Factory default settings	
Energy management . . . . .	99	Multi Media Interface . . . . .	212
Engine		Fastest route . . . . .	179
Breaking in . . . . .	99	Favorites . . . . .	23
Coolant . . . . .	226	Bluetooth . . . . .	213
Emergency stop . . . . .	91	Navigation . . . . .	180
Jump starting . . . . .	265	Phone . . . . .	162
Start/Stop system . . . . .	100	Podcast . . . . .	194
Starting/stopping . . . . .	91	Federal Communications Commission (FCC) . . . . .	283
Engine compartment		File formats (media drives) . . . . .	204
Opening and closing the hood . . . . .	220	Floor mats . . . . .	62
Overview . . . . .	221	Folding the center armrest . . . . .	84
Safety precautions . . . . .	218	Folding the rear seats . . . . .	84
Engine oil		For the sake of the environment	
Adding . . . . .	222	Disposing of engine oil . . . . .	225
Changing . . . . .	225	Fueling . . . . .	216
Checking oil level . . . . .	222	Leaks . . . . .	220
Consumption . . . . .	222	Forward gear	
Dipstick . . . . .	223	<i>refer to</i> Transmission selector positions . . . . .	94
Indicator light . . . . .	222	Free text search	
Replacement intervals . . . . .	233	Media . . . . .	203
Temperature display . . . . .	17	Radio . . . . .	192
Type . . . . .	222		

- Freeze protection  
 Coolant . . . . . 226  
 Windshield washer system . . . . . 232
- Frequency band . . . . . 190  
*also refer to* Frequency band . . . . . 190
- Front center armrest . . . . . 64
- Front collision warning  
*refer to* Audi pre sense front . . . . . 138
- Front wiper blades  
 Changing . . . . . 59  
 Cleaning . . . . . 59
- Fuel . . . . . 215  
 Additives . . . . . 216  
 Capacities . . . . . 281  
 Current consumption . . . . . 17  
 Fuel gauge . . . . . 14  
 Gasoline . . . . . 215  
 Reducing fuel consumption . . . . . 99
- Fueling  
 Capacities . . . . . 281  
 Fuel filler door . . . . . 216
- Fuse assignment . . . . . 271
- G**
- Garage door opener . . . . . 49
- Garment hooks . . . . . 82
- Gasoline . . . . . 215  
 Additives . . . . . 216  
 Gasoline mixture . . . . . 215
- Gas pedal  
*refer to* Accelerator pedal . . . . . 96
- GAWR  
*refer to* Gross Axle Weight Rating (GAWR) . . . . . 282
- Glossary of tire and loading terminology . . . . . 237
- Glove compartment . . . . . 82
- Gross Axle Weight Rating (GAWR) . . . . . 282
- Gross Vehicle Weight Rating (GVWR) . . . . . 282
- GVWR  
*refer to* Gross Vehicle Weight  
 Rating (GVWR) . . . . . 282
- H**
- Hands-free . . . . . 158
- Hands Free Profile . . . . . 158
- Headlight range control . . . . . 52
- Headlights  
 Cleaning . . . . . 255  
 Headlight range control . . . . . 52  
 Washer system . . . . . 58  
 Washer system (filling washer fluid) . . . . . 232
- Headlight washer system  
 Capacities . . . . . 281
- Head restraints  
 Adjusting . . . . . 66  
 Removing and installing . . . . . 66
- Heated rear window . . . . . 88
- Heated steering wheel . . . . . 89
- Heater  
*refer to* Climate control system . . . . . 87
- HFP  
*refer to* Hands Free Profile . . . . . 157
- High beams  
 High beam assistant . . . . . 53
- Highway lights . . . . . 52
- Hill descent assist . . . . . 105
- Hill descent control . . . . . 104
- Hill hold assist . . . . . 93
- Home  
*refer to* Home address . . . . . 185
- Home address . . . . . 185
- HomeLink  
*refer to* Garage door opener . . . . . 49
- Home screen . . . . . 20
- Horn . . . . . 9
- Hotspot  
*refer to* Wi-Fi . . . . . 172
- I**
- Idle  
*refer to* Transmission selector positions . . . . . 94
- Ignition  
 Turning on or off . . . . . 91
- Imbalance (wheels) . . . . . 243
- Immobilizer  
*refer to* Electronic immobilizer . . . . . 38
- Indicator lights . . . . . 10
- Inspection interval  
*refer to* Service interval display . . . . . 233
- Instrument cluster . . . . . 14  
 Adjusting the layout . . . . . 15  
 Cleaning . . . . . 257



- Engine code . . . . . 213
- Malfunction . . . . . 14
- On-board computer . . . . . 17
- Operating . . . . . 15
- Service interval display . . . . . 233
- Software information . . . . . 213
- Switching tabs . . . . . 15
- Switching the view . . . . . 15
- Vehicle functions . . . . . 17
- Version information . . . . . 213
- Instrument illumination . . . . . 56
- Interior lighting . . . . . 55, 56
- Interior monitoring . . . . . 37
- Intermittent mode (windshield wipers) . . . . . 58
- International travel . . . . . 173
- Internet  
*refer to* connect . . . . . 169, 170
- Internet radio  
*refer to* Online radio . . . . . 194
- iPhone  
*refer to* USB ports with charging function . . . . . 198
- J**
- Jump starting . . . . . 265
- K**
- Key . . . . . 34, 38
- Convenience opening . . . . . 47
- Key replacement . . . . . 38
- PANIC button . . . . . 38
- Replacing the battery . . . . . 40
- Unlocking and locking . . . . . 39
- Key user . . . . . 32
- Kick-down . . . . . 96
- L**
- Lane assist  
*refer to* Lane departure warning . . . . . 129
- Lane departure warning . . . . . 136
- Cleaning the camera area . . . . . 256
- Lane guidance (adaptive cruise assist) . . . . . 129
- LATCH (securing child safety seats) . . . . . 77
- Launch control . . . . . 96
- Leather care and cleaning . . . . . 258
- Legal information
- License subscriptions . . . . . 213
- Software information . . . . . 213
- Software licenses . . . . . 213
- Version information . . . . . 213
- License plate bracket . . . . . 280
- Lifting points (vehicle jack) . . . . . 262
- Light/rain sensor
- Headlights . . . . . 52
- Intermittent mode (windshield wipers) . . . . . 58
- Light functions
- Interior lighting . . . . . 55
- Lighting . . . . . 52
- Changing bulbs . . . . . 272
- Exterior . . . . . 52
- Interior . . . . . 55
- Listening to music  
*refer to* Media . . . . . 197, 200
- Load . . . . . 282
- Local users . . . . . 31
- Locking and unlocking
- By remote control . . . . . 39
- Using the lock cylinder . . . . . 36
- With the convenience key . . . . . 39
- Low beam headlights . . . . . 52
- LTE  
*refer to* Exterior antenna . . . . . 160
- Luggage
- Luggage compartment lid . . . . . 41
- Luggage compartment . . . . . 82
- Cover . . . . . 83
- Increasing the size . . . . . 84
- Power sources . . . . . 81
- also refer to* Luggage compartment . . . . . 82
- Luggage compartment lid . . . . . 41
- Activating and deactivating the foot motion  
function . . . . . 44
- Closing button . . . . . 42
- General information . . . . . 41
- Manually unlocking . . . . . 45
- Opening and closing . . . . . 42
- Opening and closing with foot motion . . . . . 43
- Power opening and closing . . . . . 42
- Lumbar support . . . . . 63, 64

## M

Maintenance	278
Maintenance intervals	
<i>refer to</i> Service interval display	233
Malfunction Indicator Lamp (MIL)	218
Manual operation	
Luggage compartment lid	43, 45
Manual shifting	95
Map	
Changing the map scale	181
Display	183
Operating	182
Selecting a destination	181
MAP	
<i>refer to</i> Message Access Profile	166
Map preview	181
Map update	186
Online	186
USB connection	187
Media	197, 200
Supported formats	204
Media center	200
Memory function	70
Menu for opening and closing the luggage compartment lid with foot motion	44
Menu language	
<i>refer to</i> Setting the language	211
Menu paths	20
Message Access Profile	166
Messages	166
Mirror compass	61
Mirrors	
Adjusting exterior mirrors	56
Dimming	57
Vanity mirror	58
MMI	
<i>refer to</i> Multi Media Interface	21
Mobile device	
<i>refer to</i> Phone	157
Mobile device reminder signal	161
Mobile phone	
<i>refer to</i> Phone	157
Mobile phone compartment	
<i>refer to</i> Audi phone box	159
Mountain passes	104
Mountain roads	104

## Multifunction steering wheel

Buttons	15, 30
Operating	15
Programming buttons	30
Voice recognition system	27
Multi Media Interface	21
Menus and symbols	22
Operating	19, 22
Turning on or off	21
Muting	30
myAudi	31, 171
myAudi navigation	178, 181
myAudi users	31

## N

Natural leather care and cleaning	258
Navigation	178
Better route	188
Changing the scale	181
Destination details	181
Destination search	179
Favorites	185
<i>also refer to</i> Map	182
Navigation database	
Version information	213
Navigation (instrument cluster)	184
NHTSA	284
Notification center	24

## O

Octane rating (gasoline)	215
Odometer	16
Resetting	16
Office address	
<i>refer to</i> Business address	185
Offroad	
<i>refer to</i> Offroad driving	105
Offroad driving	105
Oil	
<i>refer to</i> Engine oil	222
On-board computer	17
On Board Diagnostic System (OBD)	218, 274
Online map	
<i>refer to</i> Satellite map	186
Online media	198

Online Owner's Manual . . . . .	6	Parking aid . . . . .	144
Online radio . . . . .	194	Adjusting volume . . . . .	145
<i>also refer to</i> Online radio . . . . .	194	Automatic activation . . . . .	144
Online roadside assistance . . . . .	176	Park assist . . . . .	154
Online services . . . . .		Parking aid plus . . . . .	144
<i>refer to</i> connect . . . . .	169, 170	Parking space search . . . . .	151
Opening . . . . .	34	Peripheral cameras . . . . .	146
Automatic luggage compartment lid . . . . .	42	Rear cross-traffic assist . . . . .	150
Convenience opening . . . . .	47	Rearview camera . . . . .	146
Fuel filler door . . . . .	216	Trailer view . . . . .	148
Hood . . . . .	220	Parking aid menu . . . . .	119
Luggage compartment lid . . . . .	42	Parking aids . . . . .	
Luggage compartment lid with foot motion . . . . .	43	Cleaning the sensors and camera . . . . .	256
Panoramic glass roof . . . . .	48	Parking and maneuvering . . . . .	144
Sunshade (roof) . . . . .	48	Parking brake . . . . .	
Windows . . . . .	46	<i>refer to</i> Electromechanical parking brake . . . . .	103
Opening and closing . . . . .		Parking lights . . . . .	52
<i>refer to</i> Unlocking and locking . . . . .	34, 39	Parking lock . . . . .	
Operating . . . . .		Manually releasing . . . . .	97
Instrument cluster . . . . .	15	<i>also refer to</i> Transmission selector positions . . . . .	94
Multifunction steering wheel . . . . .	15	Pedals . . . . .	96
Multi Media Interface . . . . .	19, 22	Perchlorate . . . . .	278
Text input . . . . .	25	Peripheral cameras . . . . .	146
Touch display . . . . .	19	Personal hotspot . . . . .	170
Voice recognition system . . . . .	27	Personal profiles . . . . .	
Optional equipment number . . . . .	281	<i>refer to</i> Users . . . . .	31
Options . . . . .		Phone . . . . .	157
Media . . . . .	203	Answering/ending a call . . . . .	163
Radio . . . . .	195	Audi phone box . . . . .	159
Overview (cockpit) . . . . .	9	Charging the battery (USB) . . . . .	160
Owner's Manual . . . . .		Charging the battery (wireless) . . . . .	160
Accessing the digital version . . . . .	6	Connecting a mobile phone . . . . .	157
		Connecting a second mobile device . . . . .	158
		Dialing a number . . . . .	163
		Disconnecting a mobile device . . . . .	159
		Exterior antenna . . . . .	160
		Mobile device reminder signal . . . . .	161
		Options during a phone call . . . . .	164
		Playing music . . . . .	197
		Phonebook . . . . .	
		<i>refer to</i> Directory . . . . .	162
		PIN . . . . .	
		4-digit PIN . . . . .	31
		Protection . . . . .	32
Paint code . . . . .	281		
Paint damage . . . . .	256		
PANIC button . . . . .	38		
PANIC function . . . . .	38		
Panoramic glass roof . . . . .	48		
Convenience opening and closing . . . . .	47		
Emergency closing . . . . .	48		
Quick opening . . . . .	48		
Park assist . . . . .	154		
Parking . . . . .	93		

## P

Playback		
Media	200	
Radio	191	
Podcast		
<i>refer to</i> Online radio	194	
Polishing	256	
Pollen filter		
<i>refer to</i> Active combination filter	87	
Power sources	81, 199	
Power window malfunction	46	
Power windows	46	
Malfunction	46, 47	
Predictive control	130	
Predictive route guidance	184	
pre sense		
<i>refer to</i> Audi pre sense	138	
Presentation mode	189	
Presets		
Radio	193	
Presets list		
<i>refer to</i> Presets	193	
Pressure		
Tire pressure monitoring system	252	
Tires	245	
Progressive steering	108	
Protecting	256	
Pyrotechnic elements	278	
<b>Q</b>		
quattro	109	
Selective wheel torque control	110	
<b>R</b>		
Radio	190	
Radio text	193	
Station list	190	
Radio communications equipment	280	
Radio equipment	280	
Radio Standards Specification (RSS)	283	
Rain/light sensor		
Headlights	52	
Intermittent mode (windshield wipers)	58	
Random		
<i>refer to</i> Shuffle	202	
Range (fuel level)	17	
Reading lights	55	
Rear cross-traffic assist	150	
Rear lid		
<i>refer to</i> Luggage compartment lid	42	
Rear seats	64	
Rearview camera	146	
Rear window defogger	88	
Rear wiper blades		
Cleaning	60	
Replacing	60	
Recirculation mode	88	
Recuperation	18	
Refueling	216	
Fuel filler door manual release	218	
Remote access authorization (key user)	32	
Remote control		
Garage door opener	49	
Remote control key	38	
Remote control key	38	
Convenience opening	47	
Key replacement	38	
LED	40	
PANIC function	38	
Replacing the battery	40	
Unlocking and locking	39	
<i>also refer to</i> Vehicle key	38	
Removing the caps (wheel bolts)	261	
Repairs	278	
Replacement key	38	
Replacement parts	280	
Replacing fuses	270	
Replacing the battery		
12 volt vehicle battery	230	
Vehicle key	40	
Reporting Safety Defects	284	
Reverse gear		
<i>refer to</i> Transmission selector positions	94	
Rims	249	
Cleaning	256	
Rolling	93	
Rolling ability		
Electromechanical parking brake	103	
"N" position	94	
Roof		
<i>refer to</i> Panoramic glass roof	48	
Roof load	282	

Roof rack . . . . .	85	Date and time . . . . .	211
<i>also refer to</i> Roof rack . . . . .	85	Directory . . . . .	165
Route guidance . . . . .		E-mail . . . . .	166
Stopping . . . . .	182	Language . . . . .	211
<i>also refer to</i> Navigation . . . . .	178	Measurement units . . . . .	211
Running direction (tires) . . . . .	264	Media . . . . .	204
		Navigation . . . . .	188
<b>S</b>		Opening and closing the luggage compartment lid with foot motion . . . . .	44
Safety belts . . . . .	67	Phone . . . . .	165
Cleaning . . . . .	257	Radio . . . . .	195
Locking . . . . .	78	Sound . . . . .	211
Securing child safety seats . . . . .	78	System . . . . .	211
Satellite map . . . . .	186	Text messages . . . . .	166
Saving fuel . . . . .		Time zone . . . . .	211
Recuperation . . . . .	18	Wi-Fi . . . . .	172
Screen . . . . .		Wi-Fi hotspot . . . . .	172
<i>refer to</i> Touch display . . . . .	19	Setting the language . . . . .	211
Screwdriver . . . . .	261	Setting the time . . . . .	211
Search function . . . . .		Shift paddles . . . . .	95
<i>refer to</i> Destination search . . . . .	179	Shuffle . . . . .	202
<i>refer to</i> Free text search . . . . .	192, 203	Side assist . . . . .	141
Seat heating . . . . .	89	Cleaning the sensors . . . . .	256
Seats . . . . .		SIM card . . . . .	170
Adjusting . . . . .	63	Sliding/tilting sunroof . . . . .	
Adjusting the front seats . . . . .	64	<i>refer to</i> Panoramic glass roof . . . . .	48
Adjusting the rear seats . . . . .	64	Smart Favorites . . . . .	
Cleaning . . . . .	257	<i>refer to</i> Presets . . . . .	193
Folding . . . . .	84	Smartphone . . . . .	
Head restraints . . . . .	66	<i>refer to</i> Phone . . . . .	157
Memory function . . . . .	70	Smartphone interface . . . . .	208
Storing a seat profile . . . . .	70	Legal information . . . . .	213
Selecting a source . . . . .		Snow chains . . . . .	250
Media . . . . .	200	Socket . . . . .	
Radio . . . . .	191	<i>refer to</i> Power sources . . . . .	81
Self-learning navigation . . . . .		Software information . . . . .	
<i>refer to</i> Predictive route guidance . . . . .	184	Legal information . . . . .	213
Sensors . . . . .		Software version (MMI) . . . . .	
Coverage areas . . . . .	117	Version information . . . . .	213
Locations . . . . .	118	Sound . . . . .	
Service interval . . . . .		<i>refer to</i> Adjusting sound . . . . .	211
<i>refer to</i> Service interval display . . . . .	233	Space-saving spare tire (compact spare tire) . . . . .	264
Service interval display . . . . .	233	Spare tire . . . . .	264
Setting measurement units . . . . .	211	Speed limit information . . . . .	
Settings . . . . .	211	<i>refer to</i> Traffic sign recognition . . . . .	120
Announcements and tones . . . . .	211	Speed limits . . . . .	
Bluetooth . . . . .	211	<i>refer to</i> Traffic sign recognition . . . . .	120

Speedometer . . . . .	14	Temperature display	
Speed warning system . . . . .	120	Coolant . . . . .	14
Start/Stop system . . . . .	100	Outside temperature . . . . .	17
Turning off and on . . . . .	101	Tethering . . . . .	170
Starting to drive . . . . .	93	<i>also refer to</i> Wi-Fi . . . . .	172
Starting (engine) . . . . .	100	Text input . . . . .	25
Steering . . . . .	108	Text messages . . . . .	166
Audi drive select . . . . .	107	Texts	
<i>also refer to</i> Steering . . . . .	108	<i>refer to</i> Text messages . . . . .	166
Steering lock . . . . .	91, 92, 108	Themes . . . . .	207
Steering wheel		Tie-downs . . . . .	84
Adjusting . . . . .	65	Tightening specification	
Adjusting manually . . . . .	65	Wheel bolts . . . . .	264
Shift paddles . . . . .	95	Tightening specification (wheel bolts) . . . . .	264
Steering wheel heating . . . . .	89	Time . . . . .	17
<i>also refer to</i> Multifunction steering wheel . . . . .	15	tiptronic	
Steps for determining correct load limit . . . . .	248	<i>refer to</i> Manual shifting . . . . .	95
Stopover (navigation) . . . . .	182	Tires . . . . .	234
Stopping . . . . .	93	Changing . . . . .	261
Stopping (engine) . . . . .	100	Labeling . . . . .	235
Storage areas . . . . .	82	Load index . . . . .	235
Stored stations		Low-profile tires . . . . .	250
<i>refer to</i> Presets . . . . .	193	Manufacture date . . . . .	235
Streaming		Service life . . . . .	243
<i>refer to</i> Online media . . . . .	198	Speed rating . . . . .	235
Subwoofer . . . . .	264	Tire pressure . . . . .	245
Sunshade		Tire pressure monitoring system . . . . .	252
Roof . . . . .	48	Tire pressure table . . . . .	246
<i>also refer to</i> Panoramic glass roof . . . . .	48	Tire pressure (trailer mode) . . . . .	112
Sun visors . . . . .	58	Treadwear indicators . . . . .	243
Suspension . . . . .	108	Unidirectional . . . . .	237, 264
Audi drive select . . . . .	107	Uniform tire quality grading . . . . .	251
Swap call . . . . .	164	Tires and wheels	
Symbols		Glossary of tire and loading terminology . . . . .	237
Media . . . . .	202	Tires and vehicle load limits . . . . .	247
Navigation . . . . .	182	Tools . . . . .	261
Radio . . . . .	191, 192	Top tether anchor (securing the child safety seat) . . . . .	79
<i>also refer to</i> Indicator lights . . . . .	10	Touch display	
System settings . . . . .	211	Adjusting brightness . . . . .	21
		Operating . . . . .	19
<b>T</b>		Towing . . . . .	267
Tachometer . . . . .	14, 16	Towing eye . . . . .	268, 269
Tail lights		Towing protection monitoring . . . . .	37
Cleaning . . . . .	255	TPMS	
Technical data . . . . .	281	Tire pressure monitoring system . . . . .	252
Technical modifications . . . . .	278		

Traffic information . . . . .	187	Raising . . . . .	262
Traffic information online . . . . .	188	Securing . . . . .	93
Traffic information online . . . . .	188	Starting . . . . .	91
Traffic light information . . . . .	122	Unlocking and locking . . . . .	39
Traffic sign recognition . . . . .	120	Vehicle care . . . . .	254
Traffic signs . . . . .	123	Vehicle control services . . . . .	171
Trailer load . . . . .	282	<i>also refer to</i> Audi connect Remote & Control . . . . .	171
Trailer mode		Vehicle data label . . . . .	281
Trailer hitch . . . . .	114	Vehicle Identification Number . . . . .	281
Trailer towing . . . . .	112	Vehicle jack . . . . .	261
Tongue weight . . . . .	112	Lifting points . . . . .	262
Trailer load . . . . .	112	Vehicle key . . . . .	34, 38
Trailer view . . . . .	148	Replacing the battery . . . . .	40
Transmission selector . . . . .	94	Synchronizing . . . . .	41
Transmission selector positions . . . . .	94	Vehicle starting system . . . . .	101
Turn signals . . . . .	53	Vehicle tool kit . . . . .	261
		Ventilation . . . . .	87
<b>U</b>		VIEW button . . . . .	15
Uniform tire quality grading . . . . .	251	VIN	
Unlocking and locking . . . . .	34	<i>refer to</i> Vehicle Identification Number . . . . .	281
By remote control . . . . .	39	Voicemail . . . . .	163
Using the lock cylinder . . . . .	36	Voice recognition system	
With Audi connect vehicle control . . . . .	40	External . . . . .	28
With the central locking switch . . . . .	36	Operating . . . . .	27
With the convenience key . . . . .	39		
Update (software) . . . . .	212	<b>W</b>	
USB adapter . . . . .	198	Warning lights	
USB drive		<i>refer to</i> Indicator lights . . . . .	10
Supported types/formats . . . . .	204	Washing matte finish paint . . . . .	254
USB port . . . . .	81	Wave band	
USB ports with charging function . . . . .	198, 199	<i>refer to</i> Frequency band . . . . .	190
USB stick		Weights . . . . .	282
<i>refer to</i> USB ports with charging function . . . . .	198	Wheel bolts . . . . .	249
Users		Changing a tire . . . . .	261
Local users . . . . .	31	Wheels . . . . .	234
myAudi users . . . . .	31	Cleaning . . . . .	256
		Glossary of tire and loading terminology . . . . .	237
<b>V</b>		Replacing . . . . .	261
Vanity mirror . . . . .	58	Tire pressure monitoring system . . . . .	252
Vehicle		Tires and vehicle load limits . . . . .	247
Care/cleaning . . . . .	254	Wheel wrench . . . . .	261
Dimensions . . . . .	281	Wi-Fi . . . . .	172
Identification data . . . . .	281	Hotspot settings . . . . .	172
Out of service . . . . .	260	Using a hotspot . . . . .	170, 171
Parking . . . . .	93	Wi-Fi network . . . . .	170

Wi-Fi tethering . . . . .	170
Windows	
Child safety lock . . . . .	46
Cleaning and removing ice . . . . .	257
Convenience opening and closing . . . . .	47
Defogging . . . . .	88
Defrosting . . . . .	88
Opening and closing . . . . .	46
Power windows . . . . .	46
Windshield	
Cleaning . . . . .	58
<i>also refer to</i> Windshield . . . . .	58
Windshield washer system . . . . .	58, 232
Capacities . . . . .	281
Windshield wipers . . . . .	58
Winter operation	
Car washes . . . . .	254
Cooling system . . . . .	226
Defrosting windows . . . . .	88
Rear window defogger . . . . .	88
Removing ice from windows . . . . .	257
Seat heating . . . . .	89
Snow chains . . . . .	250
Steering wheel heating . . . . .	89
Tires . . . . .	250
Vehicle battery (12 volt) . . . . .	230
Windshield washer system . . . . .	232
Winter tires . . . . .	250
Wireless Android Auto	
<i>refer to</i> Smartphone interface . . . . .	208
Wireless Apple CarPlay	
<i>refer to</i> Smartphone interface . . . . .	208
Work	
<i>refer to</i> Business address . . . . .	185





# Supplement

Q3, Q5, Q7, Q8, Q4 e-tron, Q8 e-tron

The Owner's Manual has been revised.

Topic: luggage compartment lid with foot motion activation  
(kicking movement)

# Opening and closing

### What has changed?

---

The following information has been added.

#### **Opening/closing the luggage compartment lid with foot motion activation (kicking movement)**

Applies: vehicles with sensor-controlled luggage compartment lid

The function for closing the luggage compartment lid using a foot motion is no longer available.



These instructions may not be reproduced or translated in whole or in part without written

consent of AUDI AG. All rights reserved by AUDI AG.

## **Supplement**

**English North America 08.2024**  
**80B012721HC**



80B012721HC