

6

Key - Remote control

Selective unlocking of the cab and load space.

Locking of the load space only.

Complete locking of the vehicle.



2a ▶ 15

Sliding side door

Pull the handle towards you then towards the rear and open the door, guiding the rearward movement until the point of resistance has been passed.



2b ▶ 19



6

5

2b

4

Opening the bonnet

Take care when working under the bonnet.

Raise the bonnet slightly by reaching in with a flat hand, palm down, to make access to the lever easier. Engage the base of the stay in the hole provided to hold the bonnet open.

Fix the stay in its location, identified by a sticker on the left-hand side panel of the vehicle.



6 ▶ 102

Grip control

The Grip control anti-slip system improves the road-holding of your vehicle in snow, mud and sand.

4 ▶ 85

Professional equipment - Accessories

5 ▶ 99

Key

: chapter identification

▶ : page identification

Hinged rear doors

Asymmetrical (2/3 - 1/3).



This lock makes it possible to keep the large door closed and drive with the small door open.



This control permits opening to approximately 180°.


2c ▶ 20

Rear roof flap

The rear roof flap is only compatible with the hinged doors.



2d ▶ 22

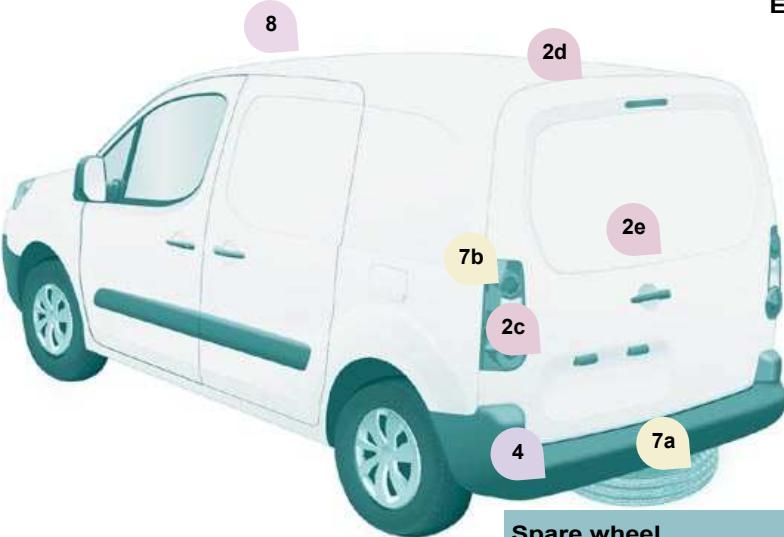**Spare wheel**

7a ▶ 112

Parking sensors

4 ▶ 81

Changing bulbs

7b ▶ 117

Useable dimensions


8 ▶ 128

Tailgate and rear screen

The tools are located under the right-hand seat.

Raise the carrier with the wheel flush against the floor.

2e ▶ 23

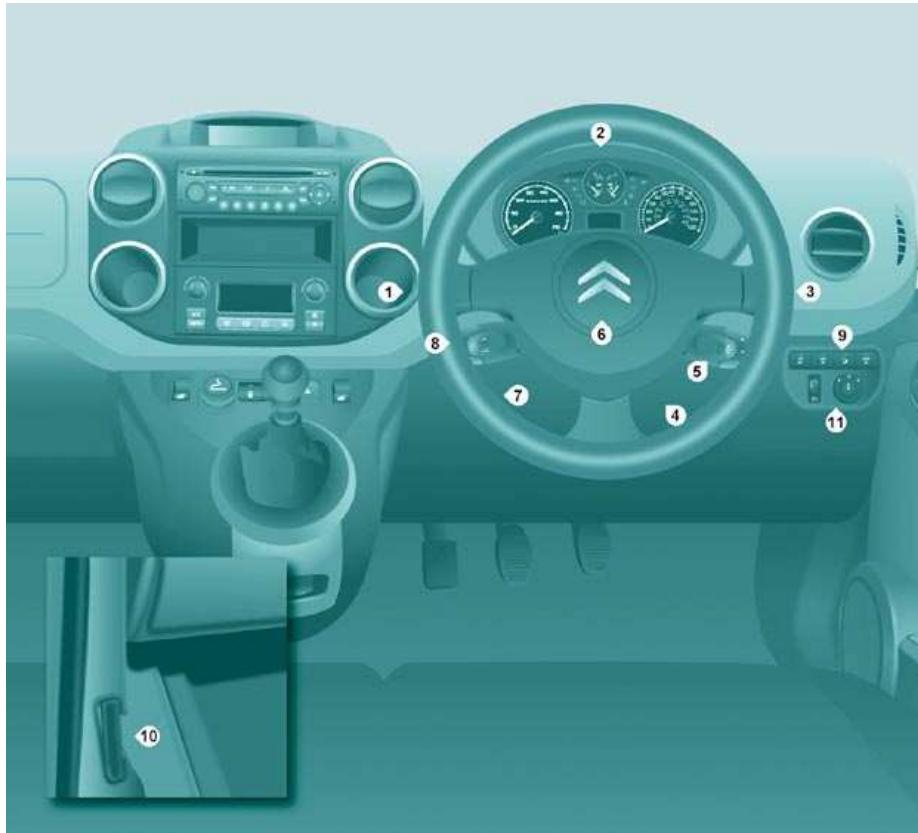

INSTRUMENTS AND CONTROLS

1. Lights and direction indicator stalk.
2. Instrument panel with screen.
3. Wipers, screenwash, trip computer controls.
4. Ignition.
5. Audio controls.
6. Driver's airbag, horn.
7. Steering wheel height and reach adjustment.
8. Cruise control, speed limiter switches.
9. Control panel, parking sensors, headlamp beam adjustment, ESP, Stop & Start.
10. Bonnet release.
11. Electric door mirror adjustment.



CENTRE CONSOLE

1. Switch panel: electric window.
2. Switch panel: hazard warning lamps, central locking (passenger compartment, load space).
3. Cigar lighter.
4. Heating-ventilation controls.
5. Storage compartment.

6. Grip Control. 4 ➔ 85
7. Audio equipment.
8. Screen.

9. Electronic gearbox selector lever 2 ➔ 38

10. Emergency or assistance call. 4 ➔ 9.1



SITTING COMFORTABLY

10



Driver's seat



1. Forwards-backwards adjustment.



2. Angle.



3. Height.



4. Head restraint height and angle.

3 ▶ 63



Steering wheel

Adjust the steering wheel for height and reach.

2 ▶ 40



Storage compartments

These are placed under the front seats. For greater ease, reach behind the seat to access them.

The tools are stored under the right-hand seat and can be accessed from the rear.

3 ▶ 69



Seat belts

Height adjustment.
Fastening.

4 ▶ 88



Mirrors

Manual adjustments.
Electric adjustments.

3 ▶ 77

SEEING CLEARLY



Lighting stalk



Lighting off.




Sidelamps.

Main beam headlamps (blue).
Dipped beam headlamps (green).

AUTO, automatic illumination of headlamps.

Motorway function: press up or down once, without passing the point of resistance; the corresponding direction indicators will flash three times.

3 ▶ 46

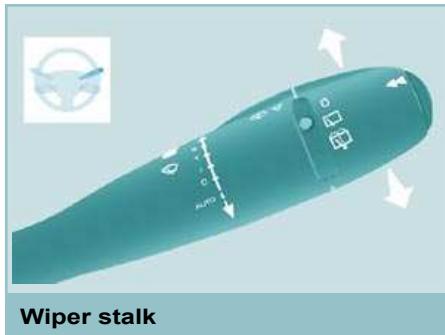

Wiper stalk

2 fast.
1 normal.
I intermittent.
0 off.
↓ single wipe.

AUTO, press the stalk down.



3 ▶ 49



Cruise control, Speed limiter


In cruise control mode, the vehicle speed must be higher than 25 mph (40 km/h) with at least 4th gear engaged.

3 ▶ 51, 54



Hill start assist


3 ▶ 45

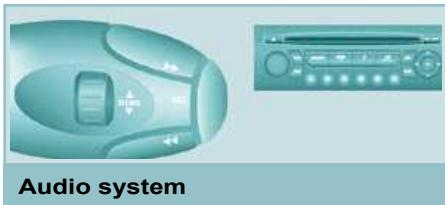

Audio system

9

CAB SPACE

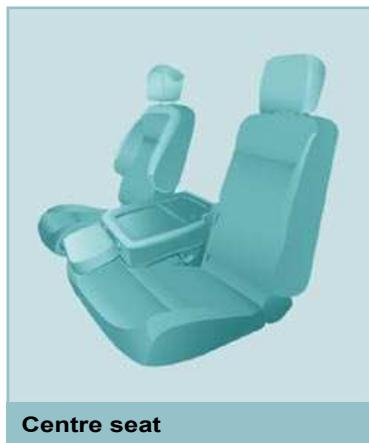**Extenso Cab**

A storage space under the seat cushion can be made secure by fitting a padlock (not supplied).

3 ▶ 65

**Outer seat**

- folded position, allows long load of up to 3 ms to be carried inside the vehicle, with the doors closed,

3 ▶ 66



- foldaway position: allows high loads to be carried in the cab.


3 ▶ 66

LOAD SPACE

**Stowing rings**

We recommend that the load is properly secured using the stowing rings on the floor and that heavy objects are placed at the front (towards the cab).

3 ▶ 74

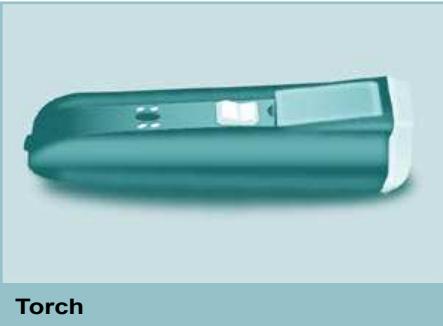**Torch**

Fitted in the wall, this illuminates the boot and can be removed when changing a wheel, ...


3 ▶ 71

Maximum loads

Overhead storage compartment: 5 kg.
Folding seat, in the seat back folded onto seat cushion position: 50 kg.
Transverse roof bars: 75 kg.
Roof rack: 120 kg.
Rear roof flap: 100 kg vertically.

**Partitions**

3 ▶ 75

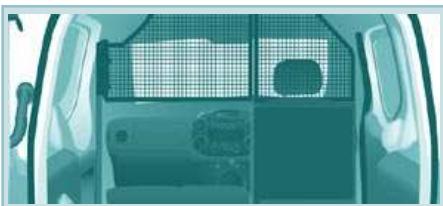**Removable flap**

This can be removed for the loading of long objects.

3 ▶ 75

CHILD SAFETY



Airbag deactivation


4 ➤ 93



Child seats

4 ➤ 94

VENTILATION

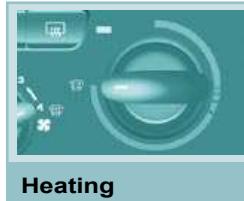

Heating



Air conditioning

3 ➤ 57



Digital air conditioning

3 ➤ 59

Recommended settings for Manual Air Conditioning

For optimum use of the system, we recommend:

If I require...	Air distribution	Temperature	Air flow	Air recirculation	AC
Heating					-
Cooling					
Demisting Defrosting					

3 ➤ 61

With Digital Air Conditioning, operation in AUTO mode is recommended at all times.



Remember to switch the system off when the ambient air suits your requirements.



ACCESS

KEY

This locks and unlocks the locks on the vehicle and starts the engine.

REMOTE CONTROL

Unlocking



Press this button once to unlock the front doors.
Press this button again to unlock your vehicle completely.

The direction indicators flash twice.



Unlocking the load space



Press this button to unlock all of the rear doors.

Security of use

To unlock the load space only:



Press this control to lock the vehicle completely.



Press this control to unlock the load space, the front doors alone remain locked.

Central locking



Press this button to lock the vehicle completely.

The direction indicators flash once. If one of the doors is open (transportation of long loads) or is not closed correctly, the central locking will not work.

Deadlocking

A **second press** on the closed padlock on the remote control within five seconds after locking changes the locking to deadlocking.

This is confirmed by fixed lighting of the direction indicators for approximately two seconds.

Deadlocking renders the exterior and interior door opening handles inoperative: do not leave anyone inside the vehicle when it is deadlocked.

If deadlocking is activated from inside the vehicle using the remote control, it will change to normal locking when the vehicle is started.



ACCESS

KEY

This locks and unlocks the locks on the vehicle and starts the engine.

REMOTE CONTROL

Unlocking



Press this button once to unlock the front doors.
Press this button again to unlock your vehicle completely.

The direction indicators flash twice.



Unlocking the load space



Press this button to unlock all of the rear doors.

Security of use

To unlock the load space only:



Press this control to lock the vehicle completely.



Press this control to unlock the load space, the front doors alone remain locked.

Central locking



Press this button to lock the vehicle completely.

The direction indicators flash once. If one of the doors is open (transportation of long loads) or is not closed correctly, the central locking will not work.

Deadlocking

A **second press** on the closed padlock on the remote control within five seconds after locking changes the locking to deadlocking.

This is confirmed by fixed lighting of the direction indicators for approximately two seconds.

Deadlocking renders the exterior and interior door opening handles inoperative: do not leave anyone inside the vehicle when it is deadlocked.

If deadlocking is activated from inside the vehicle using the remote control, it will change to normal locking when the vehicle is started.

Access


Folding/unfolding the key



Press this button to release the key from its housing.

To fold the key, press this chromed button then fold the key into the housing.

If you do not press the button, the mechanism may be damaged.

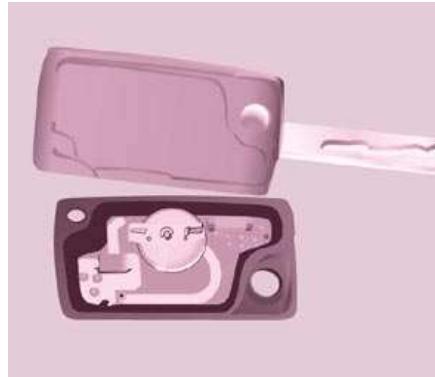

Good practice

Take care not to allow the remote control to come into contact with grease, dust, rain or a damp environment.

A heavy object attached to the key (keyring, ...) weighing on the shaft of the key in the switch, may cause a malfunction.

REMOTE CONTROL

Changing the battery

Battery ref.: CR1620/3 volts.

The information "battery flat" is given by an audible signal, accompanied by a message on the display.

To replace the battery, unclip the casing using a coin at the ring.

If the remote control does not work after the battery has been changed, re-programme the remote control.

There is a risk of damage if the replacement battery does not conform.

Use only identical batteries or batteries of an equivalent type to those recommended by CITROËN dealers.

Do not discard the remote control batteries, they contain metals which are harmful to the environment.

Deposit them at a CITROËN dealership, or at any other approved collection point.

Programming the remote control

Following changing of the remote control battery or disconnection of the vehicle battery, the remote control may have to be reprogrammed.

Wait at least one minute before using the remote control.

Insert the key in the ignition switch with the buttons (padlocks) of the remote control facing you.

Switch on the ignition.

Press the locking padlock for at least five seconds within the next ten seconds.

Switch off the ignition.

Wait at least one minute before using the remote control.

The remote control is now working again.

ELECTRONIC IMMOBILISER

All of the keys contain an electronic immobiliser device.

This device locks the engine supply system. It is activated automatically when the key is removed from the ignition.

After the ignition is switched on, a dialogue is established between the key and the electronic immobiliser system.

The metal part of the key must be unfolded correctly for correct dialogue to take place.

If you lose your keys

Visit a CITROËN dealer with the vehicle's V5 registration document and your identification document.

A CITROËN dealer will be able to retrieve the key code and the transponder code so that a replacement key can be ordered.

Good practice

Do not make any modifications to the electronic immobiliser system.

Operating the remote control, even when it is in your pocket, may result in involuntary unlocking of the doors.

The simultaneous use of other high frequency equipment (mobile telephones, domestic alarms...), may interfere with the operation of the remote control temporarily.

The remote control does not operate while the key is in the ignition, even if the ignition is off.

As a safety precaution (with children on board), remove the key from the ignition when leaving the vehicle, even for a short time.



ALARM

If fitted on your vehicle, this provides two types of protection:

- exterior protection: it sounds if a front/rear door or the bonnet is opened.
- interior protection: it sounds if the volume inside the passenger compartment changes (breaking of a window or a movement inside the vehicle).

If your vehicle is fitted with a separation partition, the interior protection is not active in the load space.

Locking the vehicle with complete alarm

Setting the alarm

- Switch off the ignition and get out of the vehicle.
- Set the alarm within five minutes of getting out of the vehicle, by locking or deadlocking using the remote control. The red diode, located on the button, flashes once per second.

ELECTRONIC IMMOBILISER

All of the keys contain an electronic immobiliser device.

This device locks the engine supply system. It is activated automatically when the key is removed from the ignition.

After the ignition is switched on, a dialogue is established between the key and the electronic immobiliser system.

The metal part of the key must be unfolded correctly for correct dialogue to take place.

If you lose your keys

Visit a CITROËN dealer with the vehicle's V5 registration document and your identification document.

A CITROËN dealer will be able to retrieve the key code and the transponder code so that a replacement key can be ordered.

Good practice

Do not make any modifications to the electronic immobiliser system.

Operating the remote control, even when it is in your pocket, may result in involuntary unlocking of the doors.

The simultaneous use of other high frequency equipment (mobile telephones, domestic alarms...), may interfere with the operation of the remote control temporarily.

The remote control does not operate while the key is in the ignition, even if the ignition is off.

As a safety precaution (with children on board), remove the key from the ignition when leaving the vehicle, even for a short time.



ALARM

If fitted on your vehicle, this provides two types of protection:

- exterior protection: it sounds if a front/rear door or the bonnet is opened.
- interior protection: it sounds if the volume inside the passenger compartment changes (breaking of a window or a movement inside the vehicle).

If your vehicle is fitted with a separation partition, the interior protection is not active in the load space.

Locking the vehicle with complete alarm

Setting the alarm

- Switch off the ignition and get out of the vehicle.
- Set the alarm within five minutes of getting out of the vehicle, by locking or deadlocking using the remote control. The red diode, located on the button, flashes once per second.

Access

Disarming

- Unlock the vehicle with the remote control or switch on the ignition, the red diode goes out.

Locking the vehicle with exterior protection only

If, while you are away from the vehicle, you wish to leave a window partially open or a pet inside the vehicle, you should choose exterior protection only.

- Switch off the ignition.



- In the next ten seconds, press the button until the red diode is on continuously.
- Get out of the vehicle.
- Within the next five minutes, set the alarm by locking or deadlocking using the remote control (the red diode flashes once a second).

Triggering

The siren sounds, the direction indicators flash for approximately 30 seconds and the red diode flashes rapidly.

- To switch it off, insert the key and switch on the ignition.

When the alarm has been triggered ten times in succession (when triggered for the eleventh time) it is deactivated. Repeat the rules for setting the alarm.

Locking the vehicle without alarm

- Insert the key in the lock on the driver's door and lock it.

Do not set the alarm when washing your vehicle.

Failure of the remote control

When the alarm is set but the remote control does not operate:

- Unlock the doors with the key and open the door. The alarm is triggered.
- Switch on the ignition in the next ten seconds. The alarm is disarmed.

Incorrect operation

When the ignition is switched on, if the red diode remains on for ten seconds, there is a fault in the siren connection. Contact a CITROËN dealer to have the system checked.

Automatic setting of the alarm

Depending on the country in which the vehicle is sold, the alarm is set automatically approximately 2 minutes after the last door is closed.

To prevent triggering of the alarm when a door is opened, it is imperative to press the remote control unlocking button again.

 Do not make any modifications to the alarm system as this could cause faults.



FRONT DOORS

From the outside

Use the remote control to lock/unlock the vehicle.

Insert the metal part of the key in the lock on the driver's side if the remote control does not work.



From the inside

Use the door opening control to unlock and open the door concerned.

Access

Disarming

- Unlock the vehicle with the remote control or switch on the ignition, the red diode goes out.

Locking the vehicle with exterior protection only

If, while you are away from the vehicle, you wish to leave a window partially open or a pet inside the vehicle, you should choose exterior protection only.

- Switch off the ignition.



- In the next ten seconds, press the button until the red diode is on continuously.
- Get out of the vehicle.
- Within the next five minutes, set the alarm by locking or deadlocking using the remote control (the red diode flashes once a second).

Triggering

The siren sounds, the direction indicators flash for approximately 30 seconds and the red diode flashes rapidly.

- To switch it off, insert the key and switch on the ignition.

When the alarm has been triggered ten times in succession (when triggered for the eleventh time) it is deactivated. Repeat the rules for setting the alarm.

Locking the vehicle without alarm

- Insert the key in the lock on the driver's door and lock it.

Do not set the alarm when washing your vehicle.

Failure of the remote control

When the alarm is set but the remote control does not operate:

- Unlock the doors with the key and open the door. The alarm is triggered.
- Switch on the ignition in the next ten seconds. The alarm is disarmed.

Incorrect operation

When the ignition is switched on, if the red diode remains on for ten seconds, there is a fault in the siren connection. Contact a CITROËN dealer to have the system checked.

Automatic setting of the alarm

Depending on the country in which the vehicle is sold, the alarm is set automatically approximately 2 minutes after the last door is closed.

To prevent triggering of the alarm when a door is opened, it is imperative to press the remote control unlocking button again.

 Do not make any modifications to the alarm system as this could cause faults.



FRONT DOORS

From the outside

Use the remote control to lock/unlock the vehicle.

Insert the metal part of the key in the lock on the driver's side if the remote control does not work.



From the inside

Use the door opening control to unlock and open the door concerned.



SLIDING SIDE DOOR

From the outside

Pull the handle towards you then towards the rear and open the side door, guiding the rearward sliding to beyond the point of resistance to hold it open.

From the inside

Unlock and open the side door using this handle, guiding the rearward sliding to the point of resistance. Pass this point to hold the door open.



Good practice

Take care not to block the guide space on the floor to allow the door to slide correctly.

If your vehicle is parked on a slope, guide the sliding of the side door. In fact, the door could open or close more rapidly due to the slope of the ground and could cause injury.

For safety and operation reasons, do not drive with the sliding side door open.



Operation in the event of a battery failure

Front and side passenger doors

In the event of a malfunction of the battery or of the central locking, use the lock to lock the doors mechanically.

- ☞ To open the door and get out of the vehicle, pull the interior control.
- ☞ To lock the door, insert the key in the lock, located on the edge of the door, then turn it **one eighth of a turn**.

Driver's door

- ☞ Insert the key in the lock, then turn it to the right to lock or to the left to unlock.



HINGED REAR DOORS

The hinged rear doors are asymmetrical (2/3 - 1/3), with the smaller door on the right. They are fitted with a central lock.

From outside

To open, pull the handle towards you.



Pull the lever to open the right-hand door.

To close, start with the right-hand door then close the left-hand door.

i With the roof rear flap, the rear bumper has been strengthened to serve as a footrest on accessing the vehicle.



Practice

It is possible to drive with the right-hand door open to make the transportation of long loads easier. The left-hand door is kept closed by the distinctive "yellow" lock, positioned at the base of the door. This closed door must not be used as a load retainer.

Driving with the right-hand door open is a special dispensation. Comply with the usual safety indications to attract the attention of other drivers.



Opening to approximately 180°

A check strap system permits extension of the opening from approximately 90° to approximately 180°.


Pull the yellow control when the door is open.

The check strap will re-attach automatically on closing.



From inside

Pull the handle towards you to open the left-hand door.

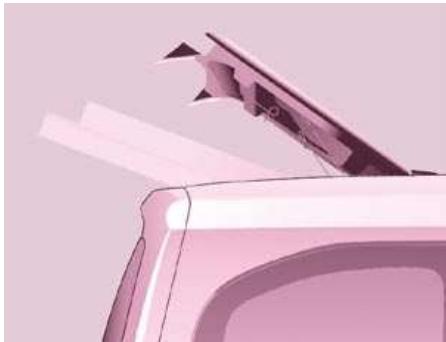

REAR ROOF FLAP

This rear roof flap is only compatible with the hinged doors.

To open the rear roof flap:

- raise the black paddle of the toggle,
- relieve the toggle by pressing the rear roof flap (downwards) then release the hook,
- lift the rear roof flap,
- pass the point of resistance to secure the rear roof flap using the support struts.

To close the rear roof flap:

- check that the support bar is secured correctly,
- lower the rear roof flap,
- while pressing the rear roof flap (downwards), take hold of the two loops of the spring then place the hook in its housing,



- lower the black paddle to secure the rear roof flap.

Securing the rear roof flap places it on the seal correctly and guarantees sealing without noise.

Support bar

A support bar is provided for transporting long loads, after opening the rear roof flap.

Fold back the support bar by lifting the lever.

Support it to the door pillar.

Support the long loads to be transported, lift them and reposition the support bar with one hand.

Ensure that it is secured correctly by pressing the handle downwards past the point of resistance and secure the loads firmly.

The side supports can be used as hooking points.

i The rear bumper has been strengthened to serve as a footrest on entering the vehicle.

! Never drive without the support bar in place.

The rear doors only lock when the support bar is installed.

When the rear roof flap is open, take care when driving where height is restricted.

Never rest loads directly on the rear doors.

Comply with the usual indications, to attract the attention of other drivers.



TAILGATE

From outside

Locking/unlocking is by means of the remote control.

To open, press the control below the trim then raise the tailgate.

A pull strap is available to close the tailgate in the high position.

Guide the closing of the tailgate to the balance point of its travel then apply a final press on the tailgate to close it fully.



From inside

Emergency control

In the event of a central unlocking operating fault, this permits unlocking of the tailgate from the inside.

Insert a small screwdriver in the opening, between the door and the floor. To unlock the lock, move the catch to the left then push the tailgate.



Tailgate screen

The opening rear screen allows you to access the rear of the vehicle directly, without having to open the tailgate.

Opening

After unlocking the vehicle using the remote control or the key, press the control and raise the rear screen to open it.

Closing

Close the rear screen by pressing the centre of the glass until it is fully closed.

The tailgate and tailgate screen cannot both be open at the same time, to prevent damage to the glass and the screen itself.



CENTRAL LOCKING

Cab and load space



An initial press permits central locking of the front and rear doors, when they are closed.

A second press permits central unlocking of the vehicle.

The control is inactive when the vehicle has been locked using the remote control or the key from the outside.

The control diode:

- flashes when the doors are locked with the vehicle stationary and the engine off,
- comes on when the doors are locked and from the time the ignition is switched on.

Load space



Press to lock/unlock the rear doors without changing the locking status of the cab.

The doors can still be opened from the inside.

Protection against attack

Locking while driving

When the vehicle moves off, as soon as you reach approximately 6 mph (10 km/h), the system locks the doors. A noise characteristic of central locking is heard. The LED on the control on the dashboard central control panel comes on.

During the journey, opening a door results in complete unlocking of the vehicle.

In the event of a serious impact, the doors are unlocked automatically to permit access by the emergency services.

Activating/deactivating the function



With the ignition on, press and hold this button to activate or deactivate the function.

Door open warning lamp



If this warning lamp comes on, check that all of your vehicle's doors are closed correctly.



INSTRUMENTS AND CONTROLS

INSTRUMENT PANEL

Dials

1. Distance recorder in kilometres/miles.
2. Display.
3. Fuel level, coolant temperature.
4. Rev counter.
5. Trip distance recorder/service indicator zero reset.
6. Instrument panel lighting rheostat.



Displays

- Speed limiter/cruise control.
- Kilometres/Miles travelled.
- Service indicator, engine oil level indicator, total kilometres/miles.
- Presence of water in the diesel filter.
- Diesel pre-heating.



Screens

The information is presented on board the vehicle in different display formats according to the vehicle's equipment.

Instruments and controls



Instrument panel without display

ADJUSTING THE TIME

Centre console without display



To adjust the time of the clock, use the left-hand button on the instrument panel then carry out the operations in the following order:

- turn to the left: the minutes flash,
- turn to the right to increase the minutes (hold the button to the right for rapid scrolling),
- turn to the left: the hours flash,

- turn to the right to increase the hours (hold the button to the right for rapid scrolling),
- turn to the left: 24 H or 12 H is displayed,
- turn to the right to select 24 H or 12 H,
- turn to the left to complete the time adjustment.

After approximately 30 seconds without any action, the display returns to the normal display.

Centre console with display



The display - time sequence is linked according to model (version). The access to the "Date" adjustment is only active when the model version offers a date in words.



- + To adjust the time and date indicated on the display, refer to the "Adjusting the date and time" section of chapter 9.

Warning lamps

Each time the vehicle is started: a series of warning lamps comes on applying a self-test check. They go off almost immediately. When the engine is running: the warning lamp becomes a warning if it remains on continuously or flashes. This initial warning may be accompanied by an audible signal and a message which appears in the screen. Do not ignore these warnings.

Warning lamp	is	indicates	Solution - action
	STOP	on, associated with another warning lamp and accompanied by a message in the screen.	major faults linked with the "Brake fluid level", "Engine oil pressure and temperature", "Coolant temperature", "Electronic brake force distribution" and "Power steering" warning lamps. You must stop, park and switch off the ignition. Have the fault checked by a CITROËN dealer.
	Handbrake/ Brake fluid level/EBFD	on.	that the parking brake is applied or has not been released fully. Releasing the parking brake switches off the warning lamp.
		on.	low brake fluid level. Top up using a fluid recommended by CITROËN.
		remaining on even though the level is correct and associated with the ABS warning lamp.	a fault with the electronic brake force distribution. You must stop, park and switch off the ignition. Have the fault checked by a CITROËN dealer.
	Engine oil pressure and temperature	on while driving.	low pressure or a high temperature. Park and switch off the ignition then allow to cool. Visually check the level. Chapter 6, "Levels" section.
		remaining on, even though the level is correct.	a major fault. Have the fault checked by a CITROËN dealer.

Instruments and controls

Warning lamp	is	indicates	Solution - action	
	Coolant temperature and level	on with needle in the red zone.	an abnormal increase in temperature.	Park and switch off the ignition then allow to cool. Visually check the level.
		flashing.	a drop in the coolant level.	Chapter 6, "Levels" section. Consult a CITROËN dealer.
	Service	on temporarily.	minor faults or warnings.	Consult the alert log in the display or screen. If your vehicle is equipped with a trip computer or a screen: refer to the "Audio equipment - Trip computer" section of chapter 9. Consult a CITROËN dealer.
		remaining on.	major faults.	
	Driver's seat belt not fastened	on then flashing.	the driver has not fastened their seat belt.	Pull the strap then insert the tongue in the buckle.
		accompanied by an audible signal then remains on.	the vehicle is moving with the driver's seat belt not fastened.	Check that the seat belt is fastened by pulling the strap. Chapter 4, "Seat belts" section.
	ECO	on.	The Stop & Start system has put the engine in STOP mode following a vehicle stop (red light, traffic jam, etc...).	As soon as you want to move off, the warning lamp goes off and the engine restarts automatically in START mode.
		flashes for a few seconds, then goes off.	The STOP is temporarily unavailable. or The START mode has been invoked automatically.	Section 2, under "Stop & Start".

Warning lamp	is	indicates	Solution - action
	Front/lateral airbag	flashing or remaining on.	a failure of an airbag. Have the system checked by a CITROËN dealer without delay. Chapter 4, "Airbags" section.
	Front passenger airbag deactivated	lit.	the intentional deactivation of this airbag in the presence of a rear-facing child seat. Chapter 4, "Airbags-child safety" section.
	Low fuel level	on with gauge needle in the red zone.	that there remain 8 litres of fuel when the lamp comes on. You must fill up with fuel to avoid running out. This warning lamp comes on each time you switch on the ignition until you have filled up. Capacity of the tank: approximately 60 litres. Never risk driving until the tank is empty, this could damage the emissions and injection systems.
		flashing.	cutting off of the supply following a serious impact. Restore the supply. Chapter 6, "Fuel" section.
	EOBD emission control system	flashing or remaining on.	a failure of the system. There is a risk of damage to the catalytic converter. Have the system checked by a CITROËN dealer.
	Battery charge	on.	a fault in the charging circuit. Check the battery terminals, ... Chapter 7, "Battery" section.
		flashing.	placing of the active functions on standby (economy mode). Chapter 7, "Battery" section.
		remaining on, in spite of the checks.	a faulty circuit, an ignition or injection malfunction. Have the fault checked by a CITROËN dealer.

Instruments and controls

Warning lamp	is	indicates	Solution - action	
	Power steering	on.	a fault with the system.	The vehicle retains conventional steering without assistance. Have the system checked by a CITROËN dealer.
	Door open detection	on and accompanied by a message in the screen.	that a door is not closed correctly.	Check that all of the doors are closed.
	ABS	remaining on.	a fault with the anti-lock braking system.	The vehicle retains conventional braking. Consult a CITROËN dealer.
	ESP	flashing.	triggering of the ASR or ESP regulation.	The system optimises traction and improves the directional stability of the vehicle. Chapter 4, "Driving safety" section.
		remaining on.	a fault with the system. E.g.: under-inflation of the tyres.	E.g.: check the pressure of the tyres. Have the system checked by a CITROËN dealer. (Wheel speed sensor, hydraulic block, ...).
		remaining on with the LED in the button (on the dashboard) on.	deactivation of the system at the request of the driver.	Operation of the system is deactivated. Reactivation is automatic above 30 mph (50 km/h) or after pressing the button (on the dashboard).

Warning lamp	is	indicates	Solution - action
	Particle emission filter	on.	a fault with the particle emission filter (Diesel additive level, risk of blockage, ...). Have the filter checked by a CITROËN dealer. Chapter 6, "Levels" section.
	Dipped beam headlamps/ Daytime running lamps	on.	a manual selection or automatic illumination of headlamps. Turn the ring on the lighting control stalk to the second position.
			illumination of the dipped beam headlamps from the time the ignition is switched on: daytime running lamps (depending on the country in which the vehicle is sold). Chapter 3, "Steering mounted controls" section.
	Main beam headlamps		pulling of the stalk towards you. Pull the stalk to return to dipped beam headlamps.
	Direction indicators	flashing with audible signal.	a change of direction via the lighting stalk, to the left of the steering wheel. To the Right: control to be pushed upwards. To the Left: control to be pushed downwards.
	Front foglamps	on.	a manual selection. The fog lamps only operate if the sidelamps or dipped beam headlamps are on.
	Rear foglamps	on.	a manual selection. The foglamps only operate if the sidelamps or dipped beam headlamps are on. In conditions of normal visibility, switch them off to avoid breaking the law. "This lamp is a dazzling red."

Instruments and controls

Warning lamp in the screen	is	indicates	Solution - action
	Cruise control	on.	cruise control selected. Manual selection. Chapter 3, "Steering mounted controls" section.
	Speed limiter	on.	speed limiter selected. Manual selection. Chapter 3, "Steering mounted controls" section.
	Diesel pre-heating	on.	climatic conditions requiring pre-heating. Wait until the warning lamp goes off before operating the starter.
	Presence of water in the Diesel filter	on and accompanied by a message in the screen.	water in the Diesel filter. Have the filter bled by a CITROËN dealer without delay. Chapter 6, "Checks" section. According to country.
	Service spanner	on.	that a service will be due shortly. Refer to the list of checks in the Maintenance and Warranty Guide. Have the service carried out by a CITROËN dealer.
	Time	flashing.	adjustment of the time. Use the left-hand button on the instrument panel. Chapter 2, at the beginning of the "Instruments and controls" section.

Instruments and controls



FUEL GAUGE

The fuel level is tested each time the key is turned to the "running" position.

The gauge is positioned on:

- **1:** the fuel tank is full, approximately 60 litres.
- **0:** the reserve is now being used, the warning light comes on continuously. The reserve when the warning first comes on is approximately 8 litres.

 Refer to the "Fuel" section of chapter 6.



COOLANT TEMPERATURE

The needle is positioned before the red zone: normal operation.

In arduous conditions of use or hot climatic conditions, the needle may move close to the red graduations.

What you should do if the needle enters the red zone:

Reduce your speed or let the engine run at idle.

What you should do if the warning light comes on:

- stop immediately, switch off the ignition. The fan may continue to operate for a certain time up to approximately 10 minutes,
- wait for the engine to cool down in order to check the coolant level and top it up if necessary.

As the cooling system is pressurised, follow this advice in order to avoid any risk of scalding:

- wait at least one hour after switching off the engine before carrying out any work,
- unscrew the cap by 1/4 turn to allow the pressure to drop,
- when the pressure has dropped, check the level on the expansion bottle,
- if necessary, remove the cap to top up.

If the needle remains in the red zone, have the system checked by a CITROËN dealer.

 Refer to the "Levels" section of chapter 6.

Instruments and controls

EMISSION CONTROL



EOBD (European On Board Diagnosis) is a diagnostics system which complies with, among others, the standards concerning authorised emissions of:

- CO (carbon monoxide),
- HC (unburnt hydrocarbons),
- NOx (nitrogen oxides) or particles, detected by oxygen sensors placed upstream and downstream of the catalytic converters.

Therefore, the driver is warned of any malfunction of this emission control system by the lighting of this specific warning lamp on the instrument panel.

There is a risk of damage to the catalytic converter. Have it checked by a CITROËN dealer.

TYRE UNDER-INFLATION DETECTION

Sensors check the tyre pressure during driving (speed higher than 12 mph [20 km/h]) and trigger a warning in the event of a malfunction or puncture.



Any anomaly detected (flat or punctured tyre, malfunction of a sensor) is indicated by visual and audible information and is accompanied by a message on the display.

Flat tyre

Check the tyre pressure as soon as possible.

Puncture

Stop immediately, avoiding any sudden movement of the steering wheel and the brakes.

Change the damaged (punctured or very deflated) tyre, and have the tyre pressure checked as soon as possible.



Refer to the "Changing a wheel" section of chapter 7.

If the damaged tyre is temporarily stored inside the vehicle, it will again emit this message to remind you of the necessity of having it repaired. This will prevent another warning of the same type being displayed.

Sensor(s) not detected

Under-inflation detection is absent from one (or several) tyre(s). Contact a CITROËN dealer to replace the faulty sensor(s).

This message is also displayed when one of the tyres is away from the vehicle (being repaired) or when a wheel without a sensor is fitted.

All repairs and changing of tyres on a wheel fitted with this system must be carried out by a CITROËN dealer.

The tyre under-inflation detection system is a driving aid which does not take the place of vigilance or the responsibility of the driver.

This system does not remove the need to have the tyre pressure checked regularly (including the spare wheel), to ensure that the dynamic performance of the vehicle remains at its best and to avoid premature wear of the tyres, in particular in the case of arduous driving (heavy load, high speed).

The system may temporarily be disturbed by radio broadcasts on a frequency close to it.

SERVICE INDICATOR

This programmes service intervals according to the use of the vehicle.

Operation

A few moments after the ignition has been switched on, the spanner indicating a service operation lights up; the display for the total distance recorder tells you (in round figures) the distance remaining before the next service.

The points at which a service is due are calculated from the last indicator zero reset.

The point at which a service is due is determined by two parameters:

- the distance travelled,
- the time which has elapsed since the last service.

i The distance remaining before the next service may be weighted by the time factor, depending on the driver's driving habits.

More than 1 000 miles/km before the next service is due

Example: 4 800 miles/km remain before the next service is due. When the ignition is switched on and for a few seconds, the display shows:



A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation showing the total and trip distances.

Less than 1 000 miles/km before the next service is due

Each time the ignition is switched on and for a few seconds, the spanner flashes and the number of miles/kilometres remaining is displayed:



A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation and the spanner remains lit. This indicates that a service should be carried out shortly.

Service overdue



Each time the ignition is switched on and for a few seconds, the spanner flashes and the excess distance is displayed.

i With the engine running the spanner remains lit until the service has been carried out.

First of the two terms reached: the spanner also lights up if the two-year interval has elapsed.

Instruments and controls

Zero re-set

Your CITROËN dealer carries out this operation after each service.

However, if you carry out the service yourself, the re-set procedure is as follows:

- switch off the ignition,
- press and hold the trip recorder reset button,
- switch on the ignition.

The display begins a countdown.

When the display shows "**=0**", release the button; the spanner disappears.

i After this operation, if you wish to disconnect the battery, lock the vehicle and wait for at least five minutes, otherwise the zero re-set will not be registered.

Engine oil level indicator

When the ignition is switched on, the engine oil level is indicated for a few seconds, after the service information.



Oil level correct



Lack of oil

Flashing of "OIL", linked with the service warning light, accompanied by an audible signal and a message on the display, indicates a lack of oil which could damage the engine.

If the lack of oil is confirmed by a check using the dipstick, it is essential that the level is topped up.



Oil level gauge fault
Flashing of "OIL--" indicates a malfunction of the engine oil level gauge. Consult a CITROËN dealer.

i The level read will only be correct if the vehicle is on level ground and the engine has been off for more than 15 minutes.



Dipstick

A = maximum, never exceed this level as a surplus of oil may damage the engine. Contact a CITROËN dealer without delay.

B = minimum, top up the level via the oil filler cap, using the type of oil suited to your engine.

Trip recorder zero reset button



With the ignition on, press the button until the zeros appear.



Lighting rheostat

With the lights on, press the button to vary the intensity of the lighting of the instruments and controls. When the lighting reaches the minimum (or maximum) setting, release the button then press it again to increase (or reduce) the brightness. As soon as the lighting is of the required brightness, release the button.



5-speed - reverse gear gearbox

GEARBOX

To change gear easily, always press the clutch pedal fully.

To prevent the mat from becoming caught under the pedal:

- ensure that the mat and its fixings on the floor are positioned correctly,
- never fit one mat on top of another.

When driving, avoid leaving your hand on the gear knob as the force exerted, even if slight, may wear the internal components of the gearbox over time.

To engage reverse gear, wait until the vehicle is stationary then push the gear lever to the right then down.

The lever should be moved slowly to reduce the noise on engaging reverse gear.



GEAR SHIFT INDICATOR



In order to drive as fuel efficiently as possible with a manual gearbox, this indicator lamp indicates to the driver to change up.

The driver remains responsible for deciding whether or not to follow this indication, since the indicator lamp comes on without taking into account the configuration of the road, the amount of traffic and safety factors.

The lighting of this indicator lamp cannot be deactivated.



When reverse gear is engaged and when changing down whilst decelerating, the function is disabled.

Gearbox and steering wheel


6-SPEED ELECTRONIC GEARBOX SYSTEM



Mode selection



- automatic mode: gear lever in position **A**.
- manual mode: gear lever in position **M**.

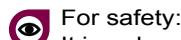

For safety:
It is only possible to come out of position **N** if the brake pedal is pressed.

The change from position **A** (driving in automatic mode) to position **M** (driving in manual mode) or vice versa can be made at any time. The warning lamp **A** goes off in the instrument panel.

Moving off

- To start the engine, the gear lever must be in position **N**.
- Press firmly on the brake pedal.
- Operate the starter.
- When the engine is running, place the selector lever on **R**, **A** or **M** as desired.
- Release the brake pedal and accelerate.

If the gear lever is not in position **N**, and/or if the brake pedal is not pressed, the engine will not start. Repeat the above procedure.

Reverse gear



Engaging reverse gear

Move the gear lever to **R**.

Only attempt to select reverse gear when the vehicle is stationary.

Neutral



Changing to neutral

Move the gear lever to **N**. If the vehicle is moving, do not select this position even momentarily.



Automatic mode



Changing to automatic mode

Move the gear lever to **A**.

The gearbox then functions in automatic mode, without any action on your part.

It constantly selects the gear that is best suited to the following conditions:

- driving style,
- road profile,
- optimum fuel consumption.



Manual mode



Move the gear lever to **M**.

Changing gear



Pull on the "+" control paddle to change up.
Pull on the "-" control paddle to change down.

- If the vehicle stops or reduces speed (for example when approaching a stop sign), the gearbox changes down automatically, to first gear if needed.
- It is not necessary to release the accelerator completely during gear changes.
- A request to change gear is accepted only if the engine speed permits it.
- For safety reasons, depending on the engine speed, a change down may be performed automatically.



In situations of high engine speeds (heavy acceleration), a change up will not occur unless the driver operates electronic gearbox system lever.

Gearbox and steering wheel

Acceleration

For optimum acceleration (e.g. to overtake another vehicle), simply press the pedal beyond the point of resistance at the end of its travel, by pressing down firmly.

Vehicle stationary, with the engine running

In the event of a prolonged stop with the engine running, the gearbox changes automatically to neutral **N**.

Stopping the vehicle

Before stopping the engine, put the gear lever in position **N**.

In all cases, it is essential to apply the parking brake. Check that the parking brake warning lamp is on in the instrument panel.

 Before doing anything in the engine compartment, check that the gear lever is in neutral **N**.



STEERING WHEEL ADJUSTMENT

When the vehicle is stationary, unlock the steering wheel by pulling the lever. Adjust the height and depth of the steering wheel, then lock by pushing the lever fully.

Gearbox and steering wheel

Acceleration

For optimum acceleration (e.g. to overtake another vehicle), simply press the pedal beyond the point of resistance at the end of its travel, by pressing down firmly.

Vehicle stationary, with the engine running

In the event of a prolonged stop with the engine running, the gearbox changes automatically to neutral **N**.

Stopping the vehicle

Before stopping the engine, put the gear lever in position **N**.

In all cases, it is essential to apply the parking brake. Check that the parking brake warning lamp is on in the instrument panel.

 Before doing anything in the engine compartment, check that the gear lever is in neutral **N**.



STEERING WHEEL ADJUSTMENT

When the vehicle is stationary, unlock the steering wheel by pulling the lever. Adjust the height and depth of the steering wheel, then lock by pushing the lever fully.

STOP & START

The Stop & Start system puts the engine temporarily on standby - STOP mode - during stops in the traffic (red lights, traffic jams, or other...). The engine restarts automatically - START mode - as soon as you want to move off. The restart takes place instantly, quickly and silently.

Perfect for urban use, the Stop & Start system reduces fuel consumption and exhaust emissions as well as the noise level when stationary.

Operation

Going into engine STOP mode



The "ECO" warning lamp comes on in the instrument panel and the engine goes into standby:

- **with a manual gearbox**, at speeds below 12 mph (20 km/h), when you put the gear lever into neutral and release the clutch pedal,
- **with the 6-speed electronic gearbox system**, at a speed below 5 mph (8 km/h), when you press the brake pedal or put the gear lever into position **N**.

If your vehicle is fitted with the system, a time counter calculates the sum of the periods in STOP mode during a journey. It rests itself to zero every time the ignition is switched on with the key.

 With the automatic gearbox system, for your comfort during parking manoeuvres, STOP mode is not available for a few seconds after coming out of reverse gear.

STOP mode does not affect the functionality of the vehicle, such as braking, power steering, for example.



Never refuel with the engine in STOP mode; you must switch off the ignition with the key.

Special cases: STOP mode unavailable

STOP mode is not invoked when:

- the driver's door is open,
- the driver's seat belt is not fastened,
- the vehicle has not exceeded 6 mph (10 km/h) since the last engine start using the key,
- the parking brake is applied or being applied,
- the engine is needed to maintain a comfortable temperature in the passenger compartment,
- demisting is active,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed to assure control of a system.



In this case, the "ECO" warning lamp flashes for a few seconds, then goes off.

This operation is perfectly normal.

Stop & Start

Going into engine START mode



The "ECO" warning lamp goes off and the engine starts:

- **with a manual gearbox**, when you depress the clutch pedal;
- **with the 6-speed electronic gearbox system**:
 - gear lever in position **A** or **M**, when you release the brake pedal,
 - or gear lever in position **N** and the brake pedal released, when you move the gear lever to position **A** or **M**,
 - or when you engage reverse gear.

Special cases: START invoked automatically

START is invoked automatically when:

- you open the driver's door,
- you unfasten the driver's seat belt,
- the speed of the vehicle exceeds 15 mph (25 km/h) with a manual gearbox or 7 mph (11 km/h) with the 6-speed electronic gearbox system,
- the parking brake is being applied,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed to assure control of a system.



In this case the "ECO" warning lamp flashes for few seconds, then goes off.

This operation is perfectly normal.

With a manual gearbox in STOP mode, if a gear is engaged without fully depressing the clutch pedal, a warning lamp comes on or a message is displayed asking you to depress the clutch pedal to restart the engine.

Deactivation



At any time, press the "ECO OFF" switch to deactivate the system.

This is confirmed by the switch warning lamp coming on accompanied by a message on the screen.

If the system has been deactivated in STOP mode, the engine restarts immediately.

Reactivation

Press the "ECO OFF" switch again. The system is active again; this is confirmed by the switch warning lamp going off and a message in the instrument panel.

 The system is reactivated automatically at every new start using the key.

Operating fault



In the event of a malfunction with the system, the "ECO OFF" switch warning lamp flashes, then comes on continuously.

have it checked by a CITROËN dealer or a qualified workshop.

In the event of a fault in STOP mode, the vehicle may stall. It is then necessary to switch off the ignition and start the engine again using the key.

Maintenance


 Before working under the bonnet, deactivate the Stop & Start system to avoid any risk of injury resulting from automatic operation of START mode.

This system requires a specific battery with a special specification and technology (reference numbers available from a CITROËN dealer or a qualified workshop).

Fitting a battery not listed by CITROËN introduces the risk of malfunction of the system.

 The Stop & Start system makes use of advanced technology. All work on this type of battery must be done only by a CITROËN dealer or a qualified workshop.

Starting and stopping

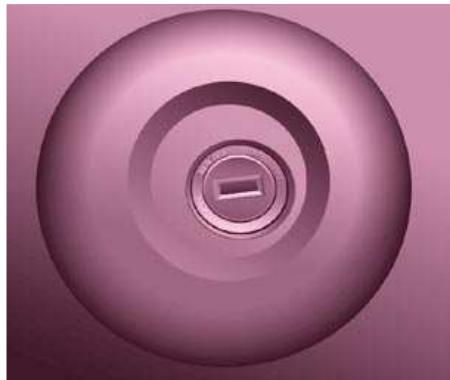

STARTING AND STOPPING

Running and accessories position.

To unlock the steering, turn the steering wheel gently while turning the key, without forcing. In this position, certain accessories can be used.

Starting position.

The starter is operated, the engine turns over, release the key.

STOP position: steering lock.

The ignition is off. Turn the steering wheel until the steering locks. Remove the key.

Good practice when starting



Door or bonnet open warning light

If this comes on, a door or the bonnet is not closed correctly, check!



Diesel pre-heating warning light

If the temperature is high enough, the warning light comes on for less than one second, you can start without waiting.

In cold weather, wait for this warning light to switch off then operate the starter (Starting position) until the engine starts.



Good practice when stopping

Minimise engine and gearbox wear

When switching off the ignition, let the engine run for a few seconds to allow the turbocharger (Diesel engine) to return to idle.

Do not press the accelerator when switching off the ignition.

There is no need to engage a gear after parking the vehicle.

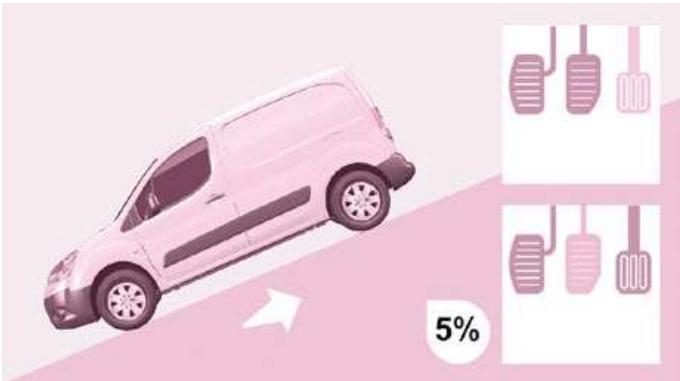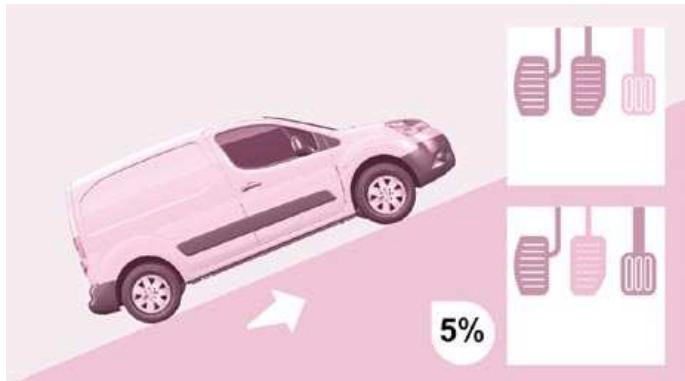

HILL START ASSIST

This function, linked with the ESP, makes hill starts easier and is activated in the following conditions:

- the vehicle must be stationary, engine running, foot on the brake,
- the gradient of the road must be steeper than 5 %,
- uphill, the gearbox must be in neutral or in a gear other than reverse,
- downhill, reverse gear must be engaged.

The HHC (Hill Holder Control) or Hill Start Assist function is a driving comfort system. It is not an automatic vehicle parking function or an automatic parking brake.

Operation

With the brake pedal and clutch pedal pressed, from the time you release the brake pedal you have approximately 2 seconds before the vehicle starts to roll back and without using the parking brake within which to move off.

During the moving off phase, the function is deactivated automatically, gradually releasing the braking pressure. During this phase, the typical noise of mechanical release of the brakes can be heard, indicating the imminent movement of the vehicle.

Hill start assist is deactivated in the following situations:


- when the clutch pedal is released,
- when the parking brake is applied,
- when the engine is switched off,
- when the engine stalls.

Operating fault



If a malfunction of the system occurs, this warning lamp comes on accompanied by an audible signal and confirmed by a message on the screen. Contact a CITROËN dealer to have the system checked.

Steering mounted controls

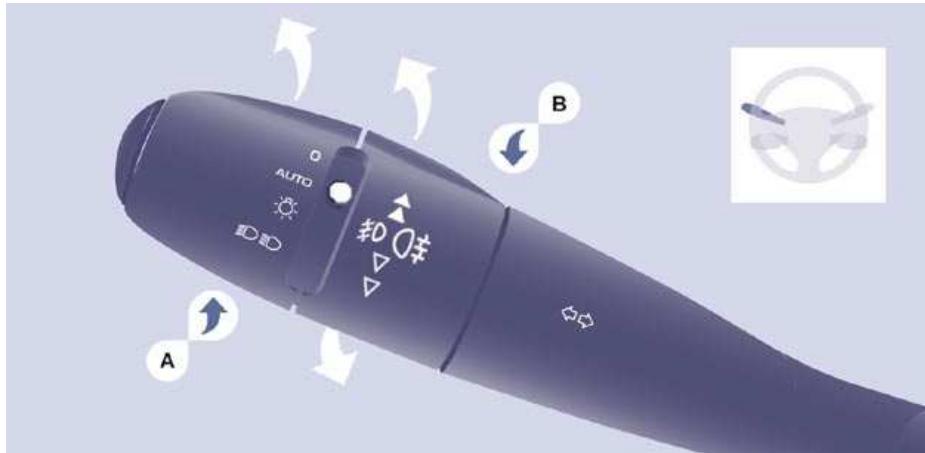

DIRECTION INDICATORS

Direction indicators



Left: downwards passing the point of resistance.

Right: upwards passing the point of resistance.

"Motorway" function

Press the control up or down to flash the corresponding direction indicator three times.

LIGHTING CONTROL

Front and rear lighting

Selection is by turning ring **A**.



Checking by means of the indicator lamps on the instrument panel is described in the "Instruments and controls" section of chapter 2.



Lighting off



Automatic lighting



Sidelamps



Dipped beam (green)
Main beam (blue)

Dipped beam/main beam change

Pull the stalk fully towards you.


Lighting-on buzzer

On switching of the ignition, all of the lamps turn off, except dipped beam if automatic guide-me-home lighting has been activated.

To activate the lighting control, turn ring **A** to the lighting off position "0" then to the selection of your choice.


On opening the driver's door, a warning buzzer sounds if you have left the lighting on.

Steering mounted controls

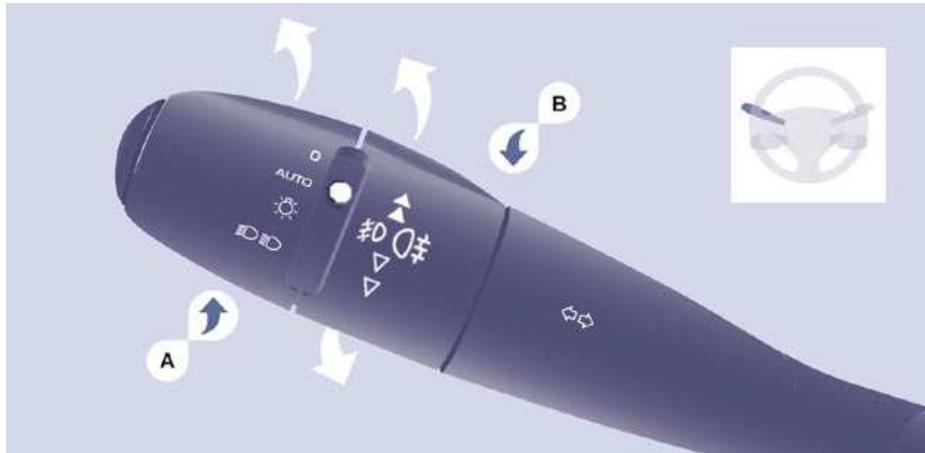

DIRECTION INDICATORS

Direction indicators

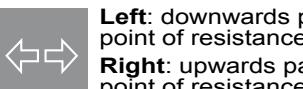

Left: downwards passing the point of resistance.

Right: upwards passing the point of resistance.

"Motorway" function

Press the control up or down to flash the corresponding direction indicator three times.

LIGHTING CONTROL

Front and rear lighting

Selection is by turning ring **A**.



Checking by means of the indicator lamps on the instrument panel is described in the "Instruments and controls" section of chapter 2.



Lighting off



Automatic lighting



Sidelamps



Dipped beam (green)
Main beam (blue)

Dipped beam/main beam change

Pull the stalk fully towards you.

Lighting-on buzzer

On switching of the ignition, all of the lamps turn off, except dipped beam if automatic guide-me-home lighting has been activated.

To activate the lighting control, turn ring **A** to the lighting off position "0" then to the selection of your choice.

On opening the driver's door, a warning buzzer sounds if you have left the lighting on.

If the user does not operate any equipment for 30 minutes, the Economy mode engages to avoid discharging the battery (see "Battery" in section 7). Electrical functions are put on standby and the battery warning lamp flashes.

Sidelamp operation is not affected by Economy mode.

Front and rear foglamps

Rotate ring **B** forwards to switch on and rearwards to switch off. The status is confirmed by the lamp on the instrument panel.

These operate with the sidelamps and the dipped beam headlamps.



Front foglamps (green, 1st rotation of the ring forwards).



Rear foglamps (amber, 2nd rotation of the ring forwards).

To switch off the front and rear foglamps, turn the ring rearwards twice in succession.

In clear weather or in rain, both day and night, rear foglamps dazzle and their use is prohibited.

i Do not forget to switch them off when they are no longer needed. Operation of the automatic lighting switches off the rear foglamps, but the front foglamps remain on.

Automatic switching on of the lights



The side lights and dipped beam headlamps switch on automatically if the light is poor, or during operation of the windscreen wipers. They switch off as soon as the light becomes bright enough or the windscreen wipers stop.

This function is not compatible with the daytime lights.

i In foggy weather or in snow, the brightness sensor can detect sufficient light. As a consequence, the lights will not come on automatically. If necessary, you must switch on the dipped headlamps manually.

i Do not cover the brightness sensor located on the windscreen, behind the mirror. It is used for the automatic switching on of the lights and for the automatic wipers.

Activation

Turn the ring to the **AUTO** position. The activation of this function is accompanied by a message on the display.

Deactivation

Turn the ring forwards or rearwards. The deactivation of this function is accompanied by a message on the display.

The function is deactivated temporarily when you use the manual lights stalk.

Steering mounted controls



If the brightness sensor does not function correctly, the lights come on accompanied by the service warning light, an audible signal and a message on the display.

Consult a CITROËN dealer.

Guide-me-home lighting

The temporary maintaining of the dipped headlamps lighting, with the ignition off, makes the driver's exit easier when the light is poor.



Manual operation

- With the ignition off, "flash" the headlamps within one minute after switching off the ignition.

The guide-me-home lighting switches off automatically after a set time.

Automatic operation



Activate the function via the "Vehicle config" menu.

HEADLAMP BEAM

Depending on the load in your vehicle, the beam setting must be adjusted.

- 0 - No load.
- 1 - Partial load.
- 2 - Average load.
- 3 - Maximum authorised load.

Initial setting is position 0.



Refer to the "Display flow chart" section of chapter 9.

Steering mounted controls



If the brightness sensor does not function correctly, the lights come on accompanied by the service warning light, an audible signal and a message on the display.

Consult a CITROËN dealer.

Guide-me-home lighting

The temporary maintaining of the dipped headlamps lighting, with the ignition off, makes the driver's exit easier when the light is poor.



Manual operation

- With the ignition off, "flash" the headlamps within one minute after switching off the ignition.

The guide-me-home lighting switches off automatically after a set time.

Automatic operation



Activate the function via the "Vehicle config" menu.

HEADLAMP BEAM


Depending on the load in your vehicle, the beam setting must be adjusted.

- 0 - No load.
- 1 - Partial load.
- 2 - Average load.
- 3 - Maximum authorised load.

Initial setting is position 0.



Refer to the "Display flow chart" section of chapter 9.

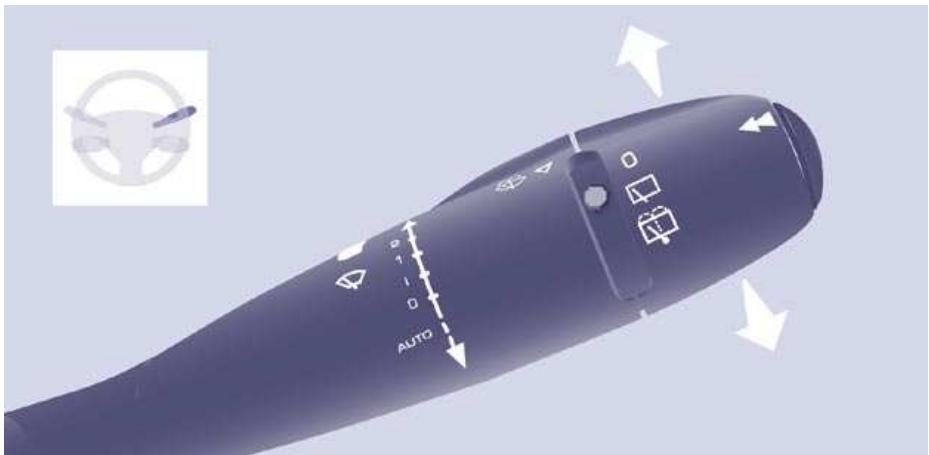

WINDSCREEN WIPER STALK

Manual windscreen wipers

- 2 Fast wipe (heavy rain).
- 1 Normal wipe (moderate rain).
- I Intermittent wipe.
- 0 Off.
- ↓ Single wipe (press downwards).

In the Intermittent position, the wiping speed is in proportion to the vehicle speed.

Whenever the ignition has been switched off for more than one minute, with the windscreen wiper stalk in position 2, 1 or I, the stalk must be reactivated:

- move the stalk to any position,
- then move it back to the required position.

Automatic windscreen wipers



Do not cover the rain sensor, located in the centre of the windscreen, behind the mirror.

In the **AUTO** position, the windscreen wipers operate automatically and adapt their speed to the intensity of the rainfall.

When not in **AUTO** mode, for the other positions, refer to the manual windscreen wipers section.

Activation

Press the control downwards. Activation of the function is accompanied by a message on the display.

The automatic windscreen wipers function must be reactivated if the ignition has been switched off for more than one minute, by pressing the stalk downwards.

Deactivation/Switching off

Place the windscreen wipers stalk in position I, 1 or 2. Deactivation of the function is accompanied by a message on the display.

In the event of malfunction of the automatic windscreen wipers, the windscreen wipers will operate in intermittent mode.

Contact a CITROËN dealer to have the system checked.



When using an automatic car wash, switch off the ignition to avoid triggering of the automatic wiping.

In winter, it is advisable to wait for the windscreen to completely clear of ice before operating the automatic wipe.

Steering mounted controls

Wash-wipe and headlamp wash

Pull the stalk towards you, the wash-wipe is accompanied by a timed sweep of the wipers.

The headlamp wash is linked with the wash-wipe, it is triggered if the dipped headlamps are on.

 To top up the levels, refer to the "Levels" section of chapter 6.


Special position of the windscreens wipers

 In the minute following switching off of the ignition, any action on the stalk positions the wipers against the windscreens uprights.

This action enables you to position the wiper blades for winter parking, cleaning or replacement.

 Refer to the "Changing a windscreens wiper blade" section of chapter 7.

To park the wipers in their normal position after this has been done, switch on the ignition and move the stalk.

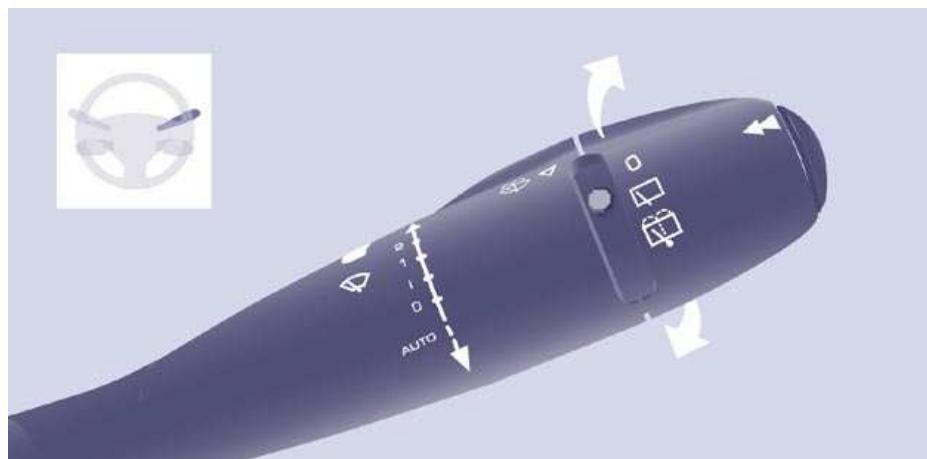

Rear windscreens wiper



Turn the ring to the first notch.

Rear windscreens wash



Turn the ring past the first notch: the windscreens wash then the windscreens wiper operate for a fixed time.

 In winter, in the event of a considerable amount of snow or ice, switch on the rear screen demister. Once de-icing is complete, remove the snow or ice which has accumulated on the rear wiper blade. You can then operate the rear windscreens wiper.



CRUISE CONTROL "CRUISE"

"This is the speed at which the driver wishes to drive".

This aid to driving in free-flowing traffic enables the vehicle to maintain the speed programmed by the driver, unless a steep gradient makes this impossible.

In order for it to be programmed or activated, the vehicle speed must be greater than 25 mph (40 km/h) with at least 4th gear engaged.

This cruise control shows the function selection status on the instrument panel and displays the programmed speed:



Function selected, displaying of the "Cruise Control" symbol.



Function deactivated, **OFF** (example at 107 km/h).



Function activated (example at 107 km/h).




Vehicle speed above (e.g. 118 km/h), the programmed speed is displayed flashing.



Operating fault detected, **OFF** - the dashes flash.

Steering mounted controls

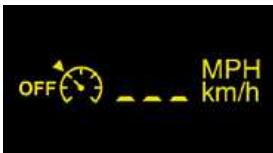

Selecting the function

- Place the switch in the **CRUISE** position. The cruise control is selected but is not yet active and no speed has been programmed.



First activation/ programming a speed


- Reach the chosen speed by pressing the accelerator.
- Press the **SET -** or **SET +** button.

This programmes/activates the reference speed and the vehicle will maintain this speed.

Temporary exceeding of the speed

It is possible to **accelerate** and drive momentarily at a speed greater than the programmed speed. The value programmed flashes.

When the accelerator pedal is released, the vehicle will return to the programmed speed.

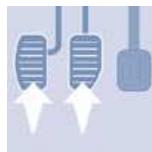

Deactivation (off)

- Press this button or the brake or clutch pedal.

Reactivation

- Following deactivation of the cruise control, press this button. Your vehicle will return to the last programmed speed.

Alternatively, you can repeat the "first activation" procedure.



Changing the programmed speed

There are two methods of memorising a speed higher than the previous one:

Without using the accelerator:

- press the **Set +** button.

A brief press increases the speed by 1 mph (km/h).

A maintained press increases the speed in steps of 5 mph (km/h).

Using the accelerator:

- exceed the memorised speed until the speed required is reached,
- press the **Set +** or **Set -** button.

To memorise a speed lower than the previous one:

- press the **Set -** button.

A brief press decreases the speed by 1 mph (km/h).

A maintained press decreases the speed in steps of 5 mph (km/h).

Switching the function off

- Place the dial in position **0** or switch off the ignition to switch everything off.

Cancelling the programmed reference speed

When the vehicle becomes stationary, after switching off the ignition, the system no longer memorises a speed.



Operating fault

The programmed speed is cleared then replaced by three dashes. Contact a CITROËN dealer to have the system checked.

Good practice

When changing the programmed reference speed by means of a maintained press, pay attention as the speed can increase or decrease rapidly.

Do not use the cruise control on slippery roads or in heavy traffic.

In the event of a steep slope, the cruise control cannot prevent the vehicle from exceeding the programmed speed.

In any event, the cruise control cannot replace the need to observe the speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

It is advisable to leave your feet near the pedals.

To avoid any jamming under the pedals:

- ensure that the mat and its fixings on the floor are positioned correctly,
- never place one mat on top of another.

Steering mounted controls



SPEED LIMITER "LIMIT"

"This is the selected speed which the driver does not wish to exceed".

This selection is made with the engine running while stationary or with the vehicle moving. The minimum speed which can be programmed is 20 mph (30 km/h).

The speed of the vehicle responds to the pressure of the driver's foot as far as the accelerator pedal point of resistance which indicates that the programmed speed has been reached.

However, pressing the pedal beyond this point of resistance to the floor permits exceeding of the programmed speed. To resume use of the limiter, simply reduce the pressure on the accelerator pedal gradually and return to a speed below that programmed.

The operating actions may be carried out when stationary, with the engine running, or with the vehicle moving.

This speed limiter shows the function selection status on the instrument panel and displays the programmed speed:



Function selected, displaying of the "Speed Limiter" symbol.



Function deactivated, last programmed speed - OFF (example at 65 mph (107 km/h)).



Function activated (example at 65 mph (107 km/h)).



Vehicle speed above (example 70 mph (118 km/h)), the programmed speed is displayed flashing.



Operating fault detected, OFF - the dashes flash.



Selecting the function

- Place the dial in the **LIMIT** position. The limiter is selected but is not yet active. The display indicates the last programmed speed.



Programming a speed

A speed can be programmed without activating the limiter but with the engine running.

To memorise a speed higher than the previous one:

- press the **Set +** button.

A brief press increases the speed by 1 mph (km/h).

A maintained press increases the speed in steps of 5 mph (km/h).

To memorise a speed lower than the previous one:

- press the **Set -** button.


A brief press decreases the speed by 1 mph (km/h).

A maintained press decreases the speed in steps of 5 mph (km/h).

Activation/Deactivation (off)

Pressing this button once activates the limiter, pressing the button again deactivates it (OFF).

Steering mounted controls

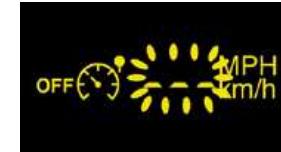

Exceeding the programmed speed

Pressing the accelerator pedal in order to exceed the programmed speed will have no effect unless you press the pedal **firmly** beyond the **point of resistance**.

The limiter is deactivated temporarily and the programmed speed flashes. To return to the limiter function, reduce your speed to below the programmed speed.

Flashing of the speed

The speed flashes:

- following forcing of the accelerator point of resistance,
- when the limiter cannot prevent an increase in the vehicle speed due to the profile of the road or on a steep descent,
- in the event of sharp acceleration.

Switching the function off

- Place the dial in position **0** or switch off the ignition to switch the system off.

The last programmed speed remains in the memory.

Operating fault

The programmed speed is cleared then replaced by three dashes. Contact a CITROËN dealer to have the system checked.

Good practice

In any event, the speed limiter cannot replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

Always pay attention to the profile of the road and sharp acceleration and stay in complete control of your vehicle.

To avoid any jamming under the pedals:

- ensure that the mat and its fixings on the floor are positioned correctly,
- never place one mat on top of another.



Heating control panel



Air conditioning control panel

VENTILATION

Manual adjustments:

Temperature



Control positioned in the blue zone, triggers cool air.



in the red zone, triggers heating of the interior ambient air.

Air flow



The force of the blown air at the vents varies from 1 to the strongest 4. Position 0 switches it off.

Remember to adjust this control in order to reach the ambient air comfort level.

Air distribution

The air supply distribution is determined by the following symbols:



the side vents and the central vents,



the footwells,



the windscreen and the footwells,



the windscreen.



The air distribution can be modulated by placing the control in the intermediate positions, marked "•".

Ventilation

Intake of exterior air



The diode on the button is off. This is the preferred operating position.

Recirculation of interior air



The diode on the button is lit. Recirculation temporarily prevents exterior odours and smoke from entering the passenger compartment.

Used with the setting of the force of blown air (from 1 to 4), recirculation enables you to obtain the required ambient air comfort level more quickly with both hot or cold settings.

This position should only be temporary. When your ambient air comfort level has been reached, return to the intake of exterior air position to permit renewal of the air in the passenger compartment and avoid misting. This operating mode is preferable.

Air conditioning A/C

The air conditioning can only operate with the engine running.



Pressing the button triggers the operation of the air conditioning, the diode is lit. Pressing the button again switches the function off and the diode is switched off.

The air conditioning does not operate if the air flow is set to 0.



DIGITAL AIR CONDITIONING WITH SEPARATE SETTINGS FOR THE DRIVER AND PASSENGER

Good practice

For maximum cooling or heating of the passenger compartment, it is possible to exceed the value 15 by turning until LO is displayed or the value 27 by turning until HI is displayed.

On entering the vehicle, the inside temperature may be much colder (or warmer) than is comfortable. There is no advantage in changing the value displayed in order to quickly reach the level of comfort required. The system will use its maximum performance to reach the comfort value set.

Automatic operation

AUTO comfort programme

This is the normal air conditioning system operating mode.



Press this button, the **AUTO** symbol is displayed.

In accordance with the comfort value selected, the system controls the distribution, the flow and the intake of air to guarantee comfort and a sufficient circulation of air in the passenger compartment. No further action on your part is required.

When the engine is cold, to prevent an excessive diffusion of cold air, the air diffuser will reach its optimum level gradually.

For your comfort, the settings are stored when the ignition is switched off and are reinstated the next time the vehicle is started.

The automatic function will no longer be maintained if you change a setting manually (AUTO is cleared).

Driver or passenger side comfort value

The value indicated in the screen corresponds to a level of comfort and not a temperature in degrees Celsius or Fahrenheit.



Turn this control to the left or to the right to decrease or increase the value. A setting around the value 21 provides optimum comfort. However, depending on your requirements, a setting between 18 and 24 is usual.



Do not cover the sunshine sensor located on the dashboard.

Manual operation

You can, according to your requirements, make a different selection from that offered by the system by changing a setting. The other functions will still be controlled automatically. Pressing the **AUTO** button restores fully automatic operation.



Air distribution

Pressing this button several times in succession directs the air flow towards:

- the windscreens,
- the windscreens and footwells,
- the footwells,
- the side vents, central vents and footwells,
- the side vents and central vents.



Air flow

Press the **small fan** button to reduce the flow or the **large fan** button to increase the flow.

On the display, the blades of the fan fill when the flow is increased.



Deactivating the system

Press the air flow **small fan** button until the fan symbol disappears from the display.

This action deactivates all of the system's functions, with the exception of the air recirculation and rear screen demisting (if fitted on your vehicle). Your comfort setting is no longer maintained and is switched off.



For your comfort, do not deactivate the system for long periods. Pressing the **large fan** button or the **AUTO** button reactivates the system with the values set before it was deactivated.



Intake of exterior air/ Recirculation of interior air

Press this button to recirculate the interior air. The recirculation symbol is displayed.

Recirculation prevents exterior odours and smoke from entering the passenger compartment. Avoid prolonged operation in interior air recirculation mode (risk of condensation, odour and humidity).

Pressing this button again activates the intake of exterior air.



Switching the air conditioning On/Off

Press this button, the **A/C** symbol is displayed and the air conditioning is activated.

Pressing this button again switches off the air conditioning.



The ventilation outlet, located in the glove box, diffuses cool air (if the air conditioning is on) regardless of the reference temperature requested in the passenger compartment and regardless of the exterior temperature.



DE-ICING AND DEMISTING

Manual mode



Direct the control to this air distribution setting.



Direct the control to this temperature setting.



Increase the air flow setting.



Press the air conditioning.



Returning to exterior air intake open permits renewal of the air in the passenger compartment (diode off).

De-icing the rear screen and/or mirrors



Pressing this button, with the engine running, activates the rapid demisting - de-icing of the rear screen and/or electric mirrors.

This function switches off:

- when the button is pressed,
- when the engine is switched off,
- automatically to prevent excessive energy consumption.



DE-ICING AND DEMISTING

Automatic mode: visibility programme

The comfort programme (AUTO) may not be sufficient to quickly demist or de-ice the windows (humidity, several passengers, ice).

In this case, select the visibility programme. The visibility programme indicator light comes on.

It activates the air conditioning, the air flow and provides optimum distribution of the ventilation to the windscreens and side windows.

It deactivates the air recirculation.

GOOD PRACTICE

Vents

"Leave them open"

For optimum distribution and diffusion of hot or cool air in the passenger compartment, there are adjustable central and side vents which can be directed sideways (right or left) or vertically (up or down). For your comfort while driving, do not close them and direct the flow of air towards the windows instead.

Air vents in the footwells and directed towards the windscreens complete the equipment.

Do not block the vents located at the windscreens or the air extractor located in the boot.

Dust filter, odour filter (activated carbon)

This filter traps certain dust and limits odours.

Ensure that this filter is in good condition and have all of the filter elements replaced regularly.



Refer to the "Checks" section of chapter 6.

Air conditioning

In all seasons, the air conditioning should only be used with the windows closed. However, if the interior temperature remains high after a prolonged period parked in the sun, do not hesitate to ventilate the passenger compartment for a few minutes.

Use the AUTO mode as much as possible as it permits optimised control of all of the functions: air flow, passenger compartment comfort temperature, air distribution, air intake mode or air recirculation in the passenger compartment.

Operate the air conditioning system for 5 to 10 minutes, once or twice a month, to keep it in perfect working order.

It is normal that the condensation created by the air conditioning system results in a flow of water which may form a puddle under the vehicle when parked.

If the system does not produce cold air, do not use it and contact a CITROËN dealer.



FRONT SEATS

Depending on the version and configuration of your vehicle, different front seats are fitted, either:

- a driver's seat and a passenger seat,
- an individual driver's seat and a modular bench.

Depending on the models, the following adjustments are available:



1 - Forwards/backwards adjustment

Lift the bar and slide the seat forwards or backwards.



2 - Seat back angle adjustment

With your back pressed against the seat back, move the lever forward and set the required angle.



3 - Driver's seat height adjustment

To raise the seat, pull the handle upwards then take your weight off the seat cushion.

To lower the seat, pull the handle upwards then push on the seat cushion.

Seats



Head restraint height adjustment

To raise the head restraint, slide it vertically upwards.

To lower the head restraint, press the button and slide the head restraint vertically downwards.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.

To remove the head restraint, press the button and pull the head restraint upwards.

To re-install, engage the head restraint rods in the holes, making sure they are aligned with the seat back.

 **Never drive with the head restraints removed; they must be in place and correctly adjusted.**



Armrest


To access the vertical position, raise the armrest until it locks.

Lower the armrest to put it back in the position for use.

To remove the armrest, press the release button from the vertical position and move aside the armrest.

To put the armrest back in place, clip it in the vertical position.

If the vehicle is fitted with the additional console and an armrest, to fold the passenger seat to the table position remove the console or the armrest.

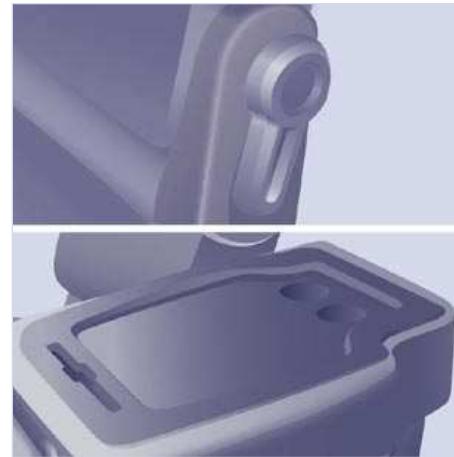

PASSENGER SEAT

The back of the individual passenger seat can be folded to form a writing table.

This position also permits the transportation of long loads.

Folding the seat back

Pull the lever forwards then tilt the seat back.

Returning the seat back to its original position

Pull the lever forwards then raise the seat back until it locks.

Seats



Head restraint height adjustment

To raise the head restraint, slide it vertically upwards.

To lower the head restraint, press the button and slide the head restraint vertically downwards.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.

To remove the head restraint, press the button and pull the head restraint upwards.

To re-install, engage the head restraint rods in the holes, making sure they are aligned with the seat back.

 **Never drive with the head restraints removed; they must be in place and correctly adjusted.**



Armrest


To access the vertical position, raise the armrest until it locks.

Lower the armrest to put it back in the position for use.

To remove the armrest, press the release button from the vertical position and move aside the armrest.

To put the armrest back in place, clip it in the vertical position.

If the vehicle is fitted with the additional console and an armrest, to fold the passenger seat to the table position remove the console or the armrest.

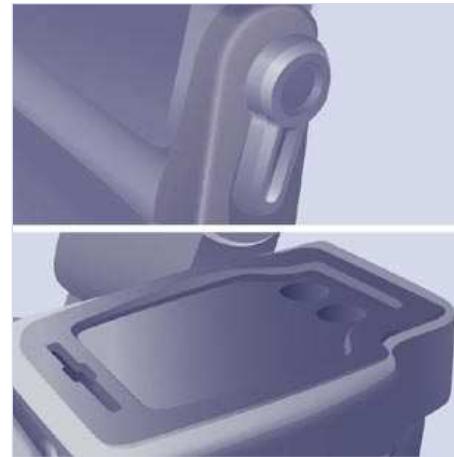

PASSENGER SEAT

The back of the individual passenger seat can be folded to form a writing table.

This position also permits the transportation of long loads.

Folding the seat back

Pull the lever forwards then tilt the seat back.

Returning the seat back to its original position

Pull the lever forwards then raise the seat back until it locks.



Extenso Cab

Centre seat

This is fitted with a 3-point seat belt with the seat belt return fixed on the load retaining ladder behind the driver.



Mobile office position

Pull the tab located on the lower edge of the seat to lower the seat back incorporating a writing table equipped with a strap.

To return the seat back to the upright position, pull the tab and guide the seat back until it locks.

During the operations, take care not to trap the tab under the seat cushion.



Storage compartment under the seat cushion

Raise the centre seat cushion to gain access to the storage compartment. This space can be made secure by fitting a padlock (not supplied).




Before locking the seat in the sitting position, always take care to leave the seat belt buckles visible and the associated straps available for the passengers.



Side seat

The back of the side seat is fitted with a metal shell.

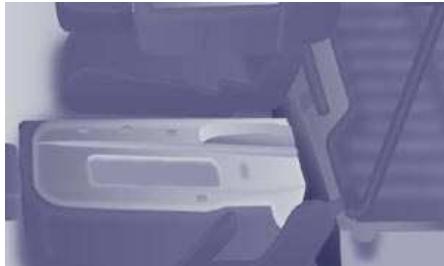

Retracted position

Pull the tab located on the upper edge of the seat by the head restraint to tilt and guide the entire seat.

It inserts itself into the floor in the front seat position and so forms a continuous flat floor with the load space.

This position permits the transportation of long loads inside the vehicle, up to 3 m (3.25 m in the case of the long versions) with the doors closed.

In the retracted position, the maximum weight on the seat back is 50 Kg.

To return the seat to the sitting position, raise the seat back until it locks on the floor in the seat position.



Foldaway position





Raise the yellow lever located at the base of the seat to release and raise the entire seat to the foldaway position (seat cushion raised against the seat back) until it locks.

This position permits the transportation of high loads in the cab part.



To return the seat to the sitting position, push the yellow lever located under the seat cushion and lower the entire seat until it is upright and locked on the floor in the seat position.

CONFIGURATIONS

Examples of various layouts combining comfort and practicality

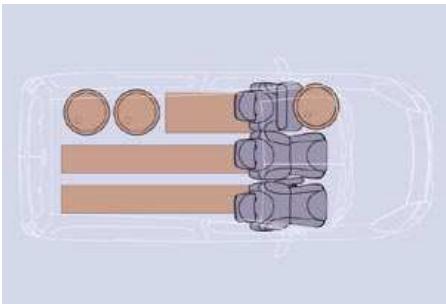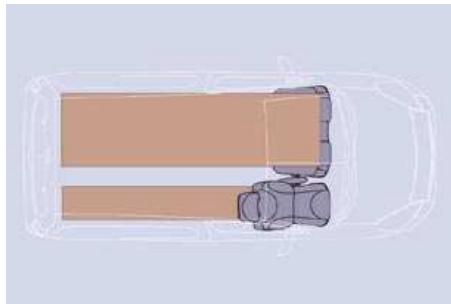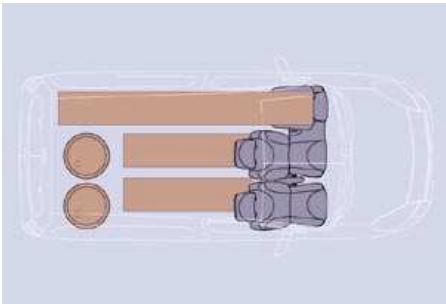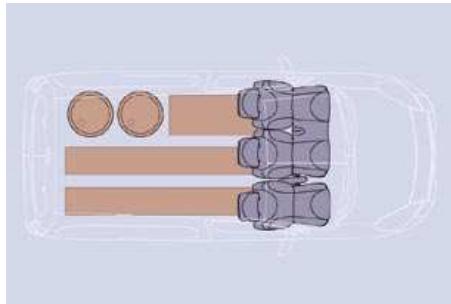

The various operations
must be carried out while
stationary.

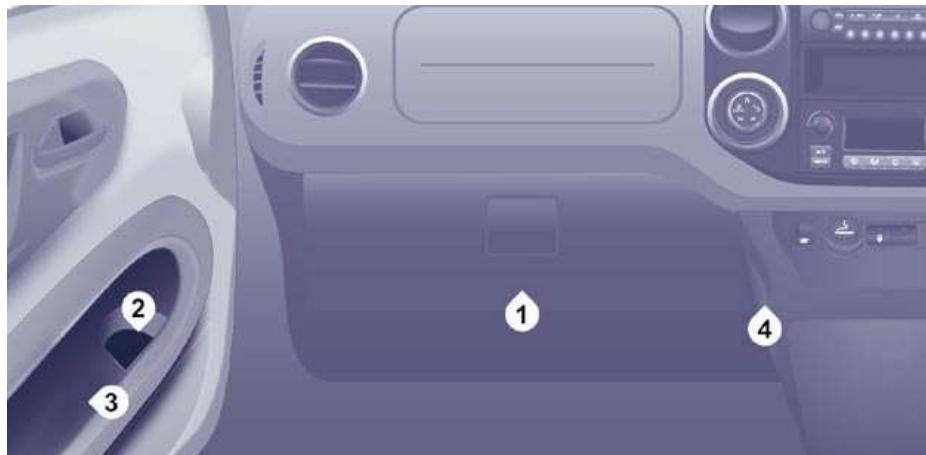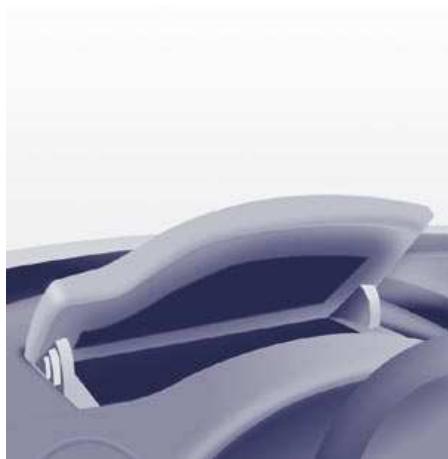

FRONT FITTINGS

Upper storage compartment

This is located on the fascia, behind the steering wheel.

A recess makes lifting of the lid easier when opening. Guide it to its rest position.

To close, guide the lid then press the centre gently.

Any liquid which could spill risks causing an electrical short circuit and therefore a potential fire.

1. Lower glove box


An auxiliary socket is located in the glove box (cable not supplied) for the connection of portable equipment (MP3 player, ...).

2. Storage tray and bottle holder (1.5 L)

3. Side storage compartment

4. Bag hook

Only hang flexible bags which are not too heavy on this hook.

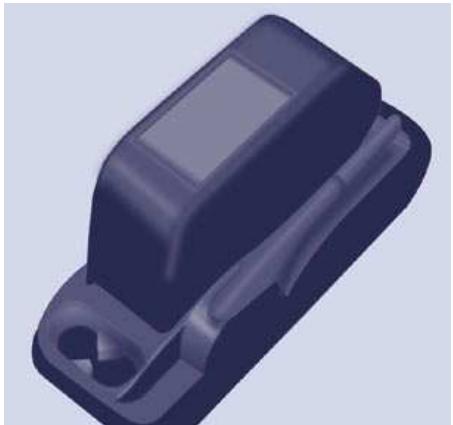

Central storage console

This console offers an appreciable additional storage area: it can be removed and clips onto a base which also incorporates two cup holders at the rear.

Ensure that the object (bottle, can...) placed in the cup holder is retained securely and does not risk being dislodged while driving.

Any liquid which could spill presents a risk of damage on contact with the instrument panel and centre console controls.

Take care.



Overhead storage unit

This is located above the sun visors and can accommodate various objects (a jumper, file, gloves...).

The openings concealed by the sun visors allow you to see and access the objects stored in the overhead storage unit.

The maximum weight permitted in the overhead storage unit is 5 Kg.

Do not place objects in this storage unit which could present a risk to the occupants.

Sun visor

To prevent dazzle from ahead, fold the sun visor down.


A pocket is provided in the driver's sun visor for storing toll cards, tickets, ...



Storage compartments under seats

Storage compartments may be provided in the floor under the front seats.


The tools are stored under the right-hand seat. Move the seat forward for easier access to the storage compartment.

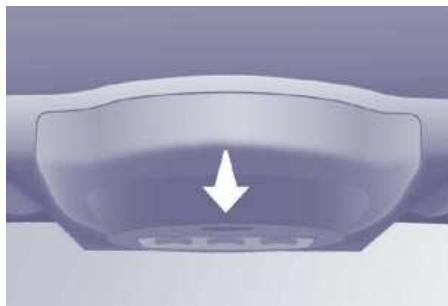

Front courtesy light



Rear courtesy light

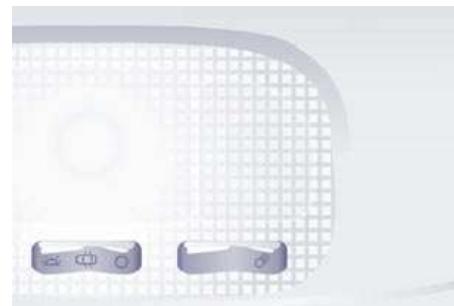

Front individual reading lights

COURTESY LIGHTS

Automatic switching on/off

The front courtesy light comes on when the key is removed from the ignition, when the vehicle is unlocked, when one of the front doors is opened and for location of the vehicle using the remote control.

It switches off gradually after the ignition is switched on and when the vehicle is locked.



Cab: comes on when one of the front doors is opened.



Load space: comes on when one of the rear doors is opened.

If the doors remain open for a few minutes, the courtesy lights are switched off.



These are switched on and off by means of a manual switch, with the ignition on.



Permanently on, ignition on.



Permanently off.



TORCH

A removable torch, incorporated in the wall of the boot, carries out two functions:

- boot light,
- torch.

The boot light operates automatically when the boot is opened.

The torch operates with NiMH type storage batteries.

Observe the polarities when fitting these storage batteries.

Using the torch

Remove it from its location by pulling from the top.

Press the switch, located on the back of the torch, to switch it on or off.

The retaining clip allows you to position the torch for precise use (for example, lighting while changing a wheel).

Storing the torch

Always put the torch back starting by positioning the lower part in its location.

If it is not engaged correctly it may not charge and may not come on when the boot is opened.

Putting the torch back in place switches it off automatically if it has not been switched off already.

The torch has a maximum operating time of 45 minutes and charges within a few hours while driving.

Never replace the storage batteries with conventional batteries.



CREW CAB

Bench seat

The crew cab consists of a 3-seat bench, located in row 2, the one-piece back of which is solid with the "load retainer" grille.

Access to the rear seats is via the sliding side door.

Head restraints and seat belts

The three seats are equipped with inertia reel seat belts. The seat belts of the side seats are solid with the panels, whereas the seat belt of the centre seat is solid with the back of the bench seat.

Each seat has a head restraint bolted onto the load retaining grille and which can be removed.

Do not store a head restraint inside the vehicle unless it is stowed or fixed to a support.

Do not drive with rear passengers without first bolting the head restraints in place.



Placing the bench seat in the fully folded position

- If necessary, move the front seats forward and fasten the strap of the seat belt of the centre seat.
- Check that the seat belt straps and buckles are positioned correctly along the side panels, to ensure that the sliding of the seat back is not hindered.
- Release the seat back using the control A.



- Using the same hand, fold the seat back and the associated grille onto the seat cushion.



- Take hold of the red strap (like a handle) and lift and assembly vertically, guiding the movement to the fully folded position.

The raised seat rests against the backs of the seats of row 1.



Putting the bench seat back in the seat position

- In a single movement: take hold of the red strap and pull the assembly horizontally towards the rear. Guide the movement until the feet of the bench seat lock on the floor.
- Raise the seat back. The control **A** locks automatically.
- Check that the bench is locked on the floor correctly once it has been returned to the seat position.

Do not let the assembly fall sharply.

Good practice

There is no need to assist, guide or support using the arm which remains free during the tilting movement.

The rear seat belt casings are not designed for securing the load transported. Use the stowing rings on the floor only.

The bench seat of the crew cab is not suitable for the installation of a child seat.



LOAD SPACE LAYOUT

12 volt socket (120 W max)

It is advisable to limit its use to avoid discharging the battery.



Stowing rings

Use the stowing rings on the rear floor to secure your loads.

As a safety precaution in case of sharp braking, you are advised to immobilise the load by securing it firmly using the stowing rings and place heavy objects as far forwards as possible (towards the cab).



Trims

The lower parts of the sides are fitted with load protection trims.

**Ladder**

Load retainers

Your vehicle can be equipped with a wide range of load retainers to effectively protect the driver and front passenger(s), while maintaining the loading adaptability.

**Mid-height partition**

Contact a CITROËN dealer for information about the different accessory load retainer models.

**Partition with flap**

Removable flap

The flap located on the panel section of the mid-height partition, behind the passenger seat(s), can be removed to permit the loading of long objects.

- Turn the control located at the top of the flap to release it.
- Lift the flap to remove it from its location.
- Pivot the flap by 90° to the right.
- Store it behind the driver's seat, clipping it into the securing lugs.



LOAD SPACE LAYOUT

12 volt socket (120 W max)

It is advisable to limit its use to avoid discharging the battery.



Stowing rings


Use the stowing rings on the rear floor to secure your loads.

As a safety precaution in case of sharp braking, you are advised to immobilise the load by securing it firmly using the stowing rings and place heavy objects as far forwards as possible (towards the cab).



Trims

The lower parts of the sides are fitted with load protection trims.

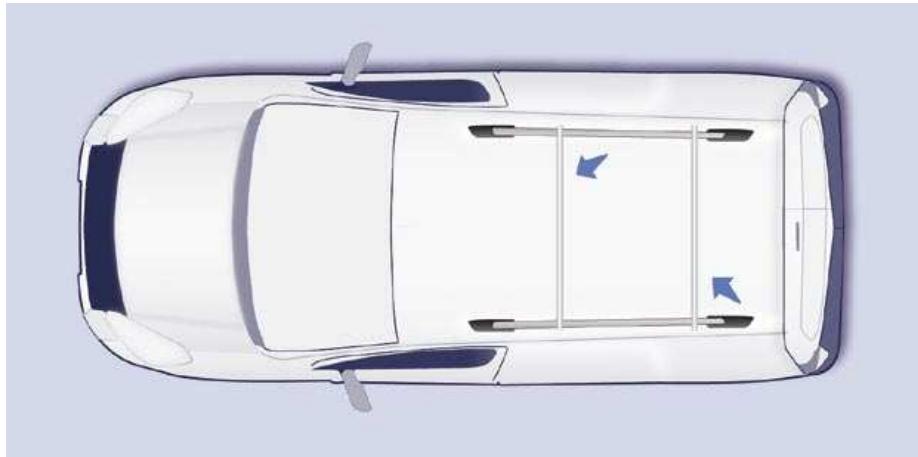

ROOF BARS

If you install transverse bars on these bars, refer to the weight values indicated by the manufacturer but do not exceed 75 Kg.



MIRRORS

Manual exterior mirrors

Move the lever in all four directions to adjust.

When the vehicle is parked, the exterior mirrors can be folded back manually.

The mirrors are not equipped with automatic de-icing.



Electric exterior mirrors

- Move the control to the right or to the left to select the corresponding mirror.
- Move the control in all four directions to adjust.
- Return the control to the central position.



Electric folding/unfolding

The mirrors can be folded or unfolded electrically from the inside, with the vehicle parked and the ignition on:

- Place the control in the central position.
- Turn the control downwards.

Heated mirrors



The electric mirrors can be heated. Press the rear screen de-icing button.

Mirrors and windows



Forced folding

If the mirror casing has come out of its initial location, with the vehicle stationary reposition the mirror casing manually or use the electric folding control.



Manual interior mirror

The interior mirror has two positions:

- day (normal),
- night (anti-dazzle).

To change from one to the other, push or pull the lever on the lower edge of the mirror.

Areas for toll cards/car park tickets

The athermic windscreen has two non-reflective zones located either side of the base of the interior mirror.

They are intended for affixing toll cards and/or car park tickets.



ELECTRIC WINDOWS

1. Driver's electric window control
2. Passenger electric window control

There are two operating modes:

Manual mode

Press or pull the control, without passing the point of resistance. The window stops when you release the control.

Automatic mode

Press or pull the control, beyond the point of resistance. The window opens or closes fully when the control is released. Pressing the control again stops the movement of the window.

The electrical functions of the electric windows are deactivated:

- approximately 45 seconds after the ignition is switched off,
- after one of the front doors is opened, if the ignition is off.

Safety auto-reverse

When the window rises and meets an obstacle, it stops and partially lowers.

Reinitialisation

Following reconnection of the battery, or in the event of a malfunction, the safety auto-reverse function must be reinitialised.

Lower the window fully, then raise it, it will rise in steps of a few centimetres each time the control is pressed. Repeat the operation until the window is fully closed.

Continue to press the control for at least one second after the window closed position has been reached. The safety auto-reverse does not operate during these operations.

Good practice

If the electric windows meet an obstacle during operation, you must reverse the movement of the window. To do this, press the control concerned.

When the driver operates the passenger electric window controls, he must ensure that no one is preventing correct closing of the windows.

The driver must ensure that the passengers use the electric windows correctly.

Be aware of children when operating the windows.

Following several consecutive closing/opening operations of the electric window control, a protection system is triggered which only authorises closing of the window. After closing, wait approximately 40 minutes. Once this time has elapsed, the control becomes operational again.

Driving safely



DRIVING SAFELY

HAZARD WARNING LAMPS

Press this button, the direction indicators flash.

They can operate with the ignition off. The hazard warning lamps should only be used in dangerous situations, when stopping in an emergency or when driving in unusual conditions.

Automatic lighting of hazard warning lights

When braking in an emergency, depending on the force of deceleration, the hazard warning lights come on automatically. They switch off automatically the first time you accelerate.

It is also possible to switch them off by pressing the button on the fascia.

HORN

Press the centre of the steering wheel.



PARKING BRAKE

Applying

Pull the parking brake lever up to immobilise your vehicle.

Check that the parking brake is applied firmly before leaving the vehicle.




If the parking brake is still on or has not been released properly, this is indicated by this warning lamp which comes on on the instrument panel.

When parking on a slope, direct your wheels towards the pavement and pull the parking brake lever up.

There is no advantage in engaging a gear after parking the vehicle, particularly if the vehicle is loaded.

Releasing

Pull the lever and press the button to lower the parking brake lever.

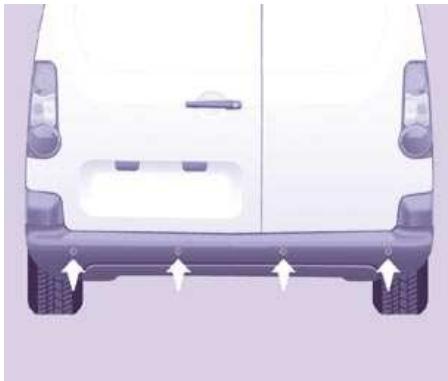

REAR PARKING ASSISTANCE

The audible and/or visual rear parking assistance consists of four proximity sensors, installed in the rear bumper. The sensors detect any obstacle which enters the field: person, vehicle, tree, fence, behind the vehicle during the manoeuvre.


Certain objects detected at the beginning of the manoeuvre will no longer be detected at the end of the manoeuvre due to the blind spots between and below the sensors. Examples: stake, roadworks cone or pavement post.



Engage reverse gear

An audible signal confirms the activation of the system by engaging reverse gear.

The proximity information is indicated by an audible signal which becomes more rapid as the vehicle approaches the obstacle. When the distance between the rear of the vehicle and the obstacle is less than approximately thirty centimetres, the audible signal becomes continuous.

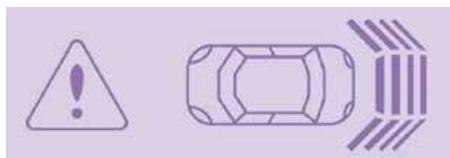

Display on the screen

Stop the assistance

Change to neutral.

Parking sensors



Activation/Deactivation



You can activate or deactivate the system by pressing this button.

The activation or deactivation of the system is stored when the vehicle stops.

Operating fault

In the event of an operating fault, when reverse gear is engaged the diode on the button comes on, accompanied by an audible signal and a message on the display. Consult a CITROËN dealer.

Good practice

In bad weather or in winter, ensure that the sensors are not covered with mud, ice or snow.

The system will be deactivated automatically if a trailer is being towed or if a bicycle carrier is fitted (vehicle fitted with a towbar or bicycle carrier recommended by CITROËN).

The parking assistance cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.

i You are advised to deactivate the system if your vehicle is fitted with a rear ladder or if you are transporting a load which exceeds the length of the vehicle.

ANTI-LOCK BRAKING SYSTEM (ABS - EBFD)

The ABS and EBFD (electronic brake force distribution) systems improve the stability and manoeuvrability of your vehicle on braking, in particular on poor or slippery surfaces.

The ABS prevents locking of the wheels, the EBFD provides control of the braking pressure wheel by wheel.

Good practice

The anti-lock braking system comes into operation automatically when there is a risk of wheel lock. It does not reduce the braking distance.

On very slippery surfaces (ice, oil, etc...) the ABS may increase the braking distance. When braking in an emergency, do not hesitate to press the brake pedal firmly, without releasing the pressure, even on a slippery surface, you will then be able to continue to manoeuvre the vehicle to avoid an obstacle.

Normal operation of the ABS may be felt by slight vibration of the brake pedal.

When changing wheels (tyres and rims), ensure that these are recommended by CITROËN.



If this warning light comes on, accompanied by an audible signal and a message on the display, it indicates a malfunction of the ABS which could result in a loss of control of the vehicle on braking.



If this warning light comes on, together with the brake and STOP warning lights, accompanied by an audible signal and a message on the display, it indicates a malfunction of the electronic brake force distribution which could result in a loss of control of the vehicle on braking.

Stop immediately.

In both cases, contact a CITROËN dealer.

EMERGENCY BRAKING ASSISTANCE SYSTEM (EBA)

In an emergency, this system enables the optimum braking pressure to be reached more quickly, press the pedal firmly without releasing it.

It is triggered by the speed at which the brake pedal is activated.

This alters the resistance of the brake pedal under your foot.

To prolong the operation of the emergency braking assistance system: keep your foot on the brake pedal.

Driving safely



TRACTION CONTROL (ASR) AND DYNAMIC STABILITY CONTROL (ESP)

These systems are linked and complement the ABS.

The ASR system is very useful for maintaining optimum drive and avoiding losses of control of the vehicle on acceleration.

The system optimises drive to prevent the wheels skidding, by acting on the brakes of the drive wheels and on the engine. It also allows the directional stability of the vehicle to be improved on acceleration.

Use the ESP to hold your course without attempting to countersteer.

If there is a variation between the trajectory followed by the vehicle and that required by the driver, the ESP system automatically acts on the engine and the brake of one or more wheels, in order to put the vehicle back on course.

Operation of the ASR and ESP systems



The LED flashes when the ASR or ESP is triggered.

Disarming the ASR/ESP systems

In certain exceptional conditions (starting the vehicle when stuck in mud or snow, or on loose ground...), it could prove useful to disarm the ASR and ESP systems to make the wheels spin and regain grip.



- Press the button or turn the dial to the ESP OFF position (depending on model).
- The indicator light comes on: the ASR and ESP systems no longer act.

They engage again:

- automatically above 30 mph (50 km/h),
- manually by pressing the button again or by turning the dial to this position (depending on model).



Operating check



When a malfunction of the systems occurs, the indicator light comes on, accompanied by an audible signal and a message on the display.

Contact a CITROËN dealer to have the system checked.

The warning light may also come on if the tyres are under-inflated. Check the pressure of each tyre.

Good practice

The ASR/ESP systems offer increased safety during normal driving, but should not incite the driver to take risks or to drive at high speed.

The operation of these systems is ensured if the recommendations of the manufacturer regarding the wheels (tyres and rims), the braking components, the electronic components and the fitting and repair procedures within the CITROËN network are observed.

After an impact, have these systems checked by a CITROËN dealer.



"GRIP CONTROL"

When driving on snow, mud or sand, this traction system is linked with all-season M+S (Mud and Snow) tyres which offer an excellent compromise between safety, grip and traction.

This equipment allows you to manoeuvre in most conditions of poor grip.

Pressing the accelerator pedal should be sufficient so that the power of the engine can ensure optimum management of the various parameters.

Correct use

Your vehicle is designed principally to drive on tarmacked roads but it allows you to drive on other less passable terrain occasionally.

However, it does not permit all-terrain activities such as:

- crossing and driving on terrain which could damage the underframe or strip away components (fuel pipe, fuel cooler, ...) due to obstacles or stones in particular,
- driving on terrain with steep gradients and poor grip,
- crossing a stream.

Driving safely



This **ESP** mode is calibrated for a low level of skidding, based on different conditions of grip encountered on the road.

When the ignition is switched off, the system returns automatically to ESP mode.



This **snow** mode allows the vehicle to adapt its strategy to the conditions of grip encountered for each of the two front wheels, on moving off.

When moving, the system optimises the skidding to guarantee the best acceleration possible in relation to the grip available.



This **sand** mode allows little skidding on the two driving wheels at the same time to allow the vehicle to move forward and limit the risks of getting stuck in the sand.

Do not use the other modes on sand as the vehicle may become stuck.



This **ESP OFF** mode is only suitable for specific conditions encountered when moving off or at low speed.

This mode is active up to 30 mph (50 km/h).



This **all terrain** mode (mud, wet grass...) allows, when moving off, considerable skidding on the wheel with the least grip to favour clearing of the mud and regain "grip". At the same time, the wheel with the most grip is controlled in such a way as to pass as much torque as possible. When moving, the system optimises the skidding to respond to the driver's requirements as fully as possible.



SEAT BELTS

Height adjustment


Squeeze the control with the return and slide the assembly on the driver's seat side and on the individual passenger seat side.

The height of the seat belt associated with the centre seat of the front bench cannot be adjusted.

Fastening

Pull the strap, then insert the tongue into the buckle.

Check that the seat belt is fastened correctly by pulling the strap.

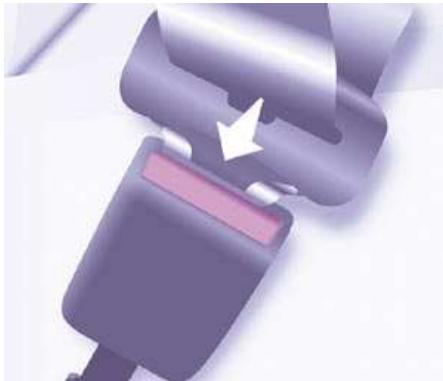

Unfastening

Press the red button.

Driver's seat belt not fastened warning light



When the vehicle is started, this warning light comes on if the driver has not fastened his seat belt.

Good practice

The driver must ensure that passengers use the seat belts correctly and that they are all strapped in securely before moving off.

Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

The seat belts are fitted with an inertia reel which automatically adjusts the length of the strap to your size.

Do not use accessories (clothes pegs, clips, safety pins, etc.) which permit a clearance with the seat belt straps.

Ensure that the seat belt is rolled up correctly after use.

After folding or moving a seat or a rear bench seat, ensure that the seat belt is rolled up correctly and that the buckle is ready to accommodate the tongue.

Depending on the nature and seriousness of any impact, the pretensioning device may be triggered before and independently of inflation of the airbags. It instantly tightens the seat belts against the body of the occupants.

Triggering of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

The force limiter reduces the pressure of the seat belt against the body of the occupants.

The pretensioning seat belts are active when the ignition is switched on.

The inertia reels are fitted with a device which automatically locks the strap in the event of a collision or emergency braking or if the vehicle rolls over.

You can unfasten the seat belt by pressing the red button on the buckle. Guide the seat belt after unfastening.

The airbag warning light comes on if the pretensioners are triggered.

Consult a CITROËN dealer.

In order to be effective, a seat belt must:

- restrain one person only,
- must not be twisted, check by pulling in front of you with an even movement,
- be tightened as close to the body as possible.

The upper part of the seat belt should be positioned in the hollow of the shoulder.

The lap part should be placed as low as possible on the pelvis.

Do not invert the seat belt buckles as they will not fulfil their role completely. If the seats are fitted with armrests, the lap part of the seat belt should always pass under the armrest.

Check that the seat belt is fastened correctly by pulling the strap firmly.

Recommendations for children:

- use a suitable child seat if the passenger is less than 12 years old or shorter than one metre fifty,
- never allow a child to travel on your lap, even with the seat belt fastened.



For further information regarding child seats, refer to the "Children on board" section of chapter 4.

In accordance with current safety regulations, your CITROËN dealer guarantees all work or any checks, from testing to maintenance, on your seat belt equipment.

Have the seat belts checked regularly (even after a minor impact) by a CITROËN dealer: they must not show any signs of wear, cutting or fraying and they must not be transformed or modified.



Clean the seat belt straps with soapy water or a textile cleaning product, sold by CITROËN dealers.

Front seat belts

The front seats are fitted with pretensioners and force limiters.

The seat belt associated with the centre seat of the front bench does not have a pretensioner.



AIRBAGS

The airbags have been designed to maximise the safety of the occupants in the event of a serious collision; they work in conjunction with the force limiting seat belts.

In the event of a serious collision, the electronic detectors record and analyse the front and side impacts suffered in the impact detection zones:

- in the event of a serious impact, the airbags inflate instantly and protect the occupants of the vehicle. Immediately after the impact, the airbags deflate rapidly, so that they do not hinder the visibility of the occupants nor their possible exit from the vehicle.

- in the event of a minor or rear impact and in certain roll-over conditions, the airbags will not be deployed; the seat belt alone is sufficient to provide maximum protection in these situations.

The seriousness of the collision depends on the nature of the obstacle and the speed of the vehicle at the moment of impact.

i Airbags only operate when the ignition is switched on.

This equipment only operates once. If a second impact occurs (during the same or a subsequent accident), the airbag will not operate.

The triggering of an airbag or airbags is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

This smoke is not harmful, but sensitive individuals may experience some irritation.

The noise of the detonation may result in a slight loss of hearing for a short time.



+ It is imperative that the passenger airbag is disarmed if a child seat is installed facing rearwards. Refer to the "Children on board" section of chapter 4.

Good practice

Sit in a normal upright position.

Wear a correctly adjusted seat belt. Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system is strictly forbidden unless it is carried out by qualified personnel of the CITROËN network.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is triggered cannot be ruled out. In fact, the bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Side airbags

Only put recommended covers on the seats. These will not hinder inflation of the side airbags. Consult a CITROËN dealer.

Do not fix or glue anything to the seat backs. This could cause injury to the chest or arms when the side airbag inflates.

Do not sit with the upper part of the body any nearer to the door than necessary.


Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Do not allow passengers to place their feet on the fascia, they risk serious injury if the airbag is triggered.

Smoke as little as possible as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.

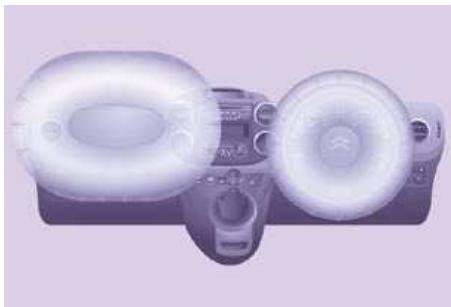

Front airbags

The front airbags are fitted in the centre of the steering wheel for the driver and in the dashboard for the front passenger(s).

Deployment

They are deployed simultaneously, unless the passenger's front airbag has been deactivated, in the event of a serious front impact applied to all or part of the front impact zone **A** in the longitudinal centreline of the vehicle on a horizontal plane directed from the front towards the rear of the vehicle.

The front airbag inflates between the front occupant of the vehicle and the dashboard to cushion their forward movement.



Deactivation

The passenger's front airbag alone can be deactivated:

- **With the ignition switched off**, insert the key into the passenger airbag deactivation switch
- turn it to the "**OFF**" position,
- then remove the key keeping the switch in the new position.



The airbag warning lamp in the instrument panel remains on while the airbag is deactivated.



To ensure the safety of your child, it is essential to deactivate the passenger airbag when you install a rear-facing child seat on the front passenger seat. Otherwise, the child would risk being killed or seriously injured if the airbag were to inflate.

Reactivation

In the "**OFF**" position, the passenger airbag will not be deployed in the event of an impact.

As soon as the child seat is removed, turn the airbag switch to the "**ON**" position to reactivate the airbag and thus ensure the safety of your passenger in the event of an impact.

Front airbag fault



If this warning lamp comes on, accompanied by an audible signal and a message in the screen, consult a CITROËN dealer to have the system checked.



If the two airbag warning lamps are on continuously, do not install a rear-facing child seat. Consult a CITROËN dealer.

i Airbags only operate when the ignition is switched on.

This equipment only operates once. If a second impact occurs (during the same or a subsequent accident), the airbag will not operate.

The triggering of an airbag or airbags is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

This smoke is not harmful, but sensitive individuals may experience some irritation.

The noise of the detonation may result in a slight loss of hearing for a short time.



+ It is imperative that the passenger airbag is disarmed if a child seat is installed facing rearwards. Refer to the "Children on board" section of chapter 4.

Good practice

Sit in a normal upright position.

Wear a correctly adjusted seat belt. Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system is strictly forbidden unless it is carried out by qualified personnel of the CITROËN network.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is triggered cannot be ruled out. In fact, the bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Side airbags

Only put recommended covers on the seats. These will not hinder inflation of the side airbags. Consult a CITROËN dealer.

Do not fix or glue anything to the seat backs. This could cause injury to the chest or arms when the side airbag inflates.

Do not sit with the upper part of the body any nearer to the door than necessary.

Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Do not allow passengers to place their feet on the fascia, they risk serious injury if the airbag is triggered.

Smoke as little as possible as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.

Airbags



Side airbags


This is a system which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest.

Each side airbag is incorporated in the front seat back frame, on the door side.

Activation

It is triggered unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The side airbag inflates between the front occupant of the vehicle and the corresponding door trim pad.

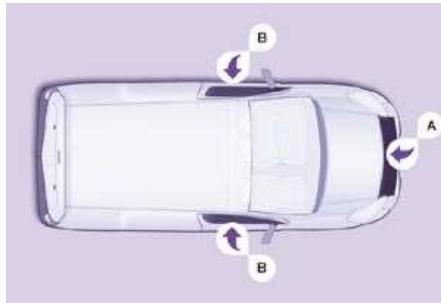

Impact detection zones

- A.** Front impact zone.
- B.** Side impact zone.

 In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be triggered.

Operating fault



If this warning light comes on on the instrument panel, accompanied by an audible signal and a message on the display, contact a CITROËN dealer to have the system checked. The airbags may no longer be triggered in the event of a serious impact.

Curtain airbags


This is a system which protects the driver and passengers in the event of a serious side impact in order to limit the risk of head injuries.

Each curtain airbag is incorporated in the pillars and the upper part of the passenger compartment.

Activation

It is triggered at the same time as the corresponding side airbag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The curtain airbag inflates between the occupant of the vehicle and the windows.

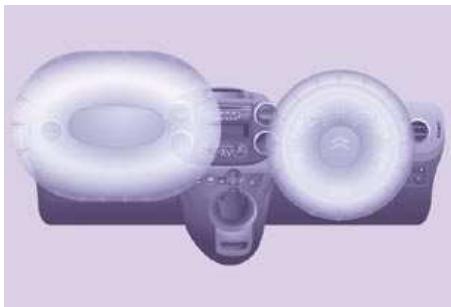

Front airbags

The front airbags are fitted in the centre of the steering wheel for the driver and in the dashboard for the front passenger(s).

Deployment

They are deployed simultaneously, unless the passenger's front airbag has been deactivated, in the event of a serious front impact applied to all or part of the front impact zone **A** in the longitudinal centreline of the vehicle on a horizontal plane directed from the front towards the rear of the vehicle.

The front airbag inflates between the front occupant of the vehicle and the dashboard to cushion their forward movement.



Deactivation

The passenger's front airbag alone can be deactivated:

- **With the ignition switched off**, insert the key into the passenger airbag deactivation switch
- turn it to the "**OFF**" position,
- then remove the key keeping the switch in the new position.



The airbag warning lamp in the instrument panel remains on while the airbag is deactivated.

 To ensure the safety of your child, it is essential to deactivate the passenger airbag when you install a rear-facing child seat on the front passenger seat. Otherwise, the child would risk being killed or seriously injured if the airbag were to inflate.

Reactivation

In the "**OFF**" position, the passenger airbag will not be deployed in the event of an impact.

As soon as the child seat is removed, turn the airbag switch to the "**ON**" position to reactivate the airbag and thus ensure the safety of your passenger in the event of an impact.

Front airbag fault



If this warning lamp comes on, accompanied by an audible signal and a message in the screen, consult a CITROËN dealer to have the system checked.



If the two airbag warning lamps are on continuously, do not install a rear-facing child seat. Consult a CITROËN dealer.



Child safety

GENERAL POINTS RELATING TO CHILD SEATS

Although one of CITROËN's main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please follow these precautions:

- all children under the age of 12 or less than one metre fifty tall must travel in approved child seats suited to their weight, on seats fitted with a seat belt or ISOFIX mountings.
- statistically, the safest seats in your vehicle for the transportation of children are the rear seats,
- a child weighing less than 9 kg must travel in the "rearwards-facing" position both in the front and in the rear,
- the passenger must not travel with a child on his lap.

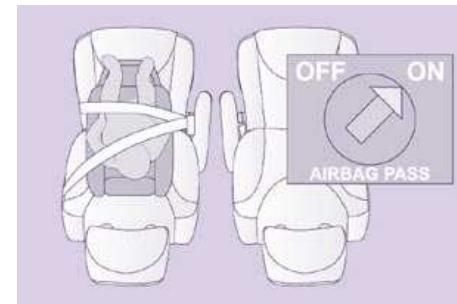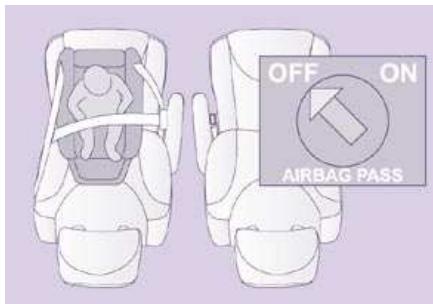

CHILD SEAT IN THE FRONT

"Rearwards-facing"

Recommended on the rear seats up to the age of 2.

When a "rearwards-facing" child seat is installed on the front passenger seat, it is essential that the passenger airbag is disarmed. Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

"Forwards-facing"

Recommended on the rear seats over the age of 2.

When a "forwards-facing" child seat is installed on the front passenger seat, leave the passenger airbag armed.

i The rules for carrying children are specific to each country. Consult the current legislation in your country.

Please consult the list of seats approved in your country. The Isofix mountings, the rear seats, the passenger airbag and the deactivation of this airbag depend on the version sold.



+ Refer to chapter 4, "Airbags" section.

i The child seats function and the passenger airbag disarming function are common to the entire CITROËN range.

If the passenger airbag is not disarmed, the installation of a "rearwards-facing" child seat in the front is strictly prohibited.

UNIVERSAL CHILD SEATS RECOMMENDED BY CITROËN

CITROËN offers a complete range of recommended child seats which are secured using a three point seat belt:

Group 0: from birth to 10 kg

Group 0+: from birth to 13 kg



L1

"ROMER Baby-Safe Plus"
Installed in the rear-facing position

Groups 1, 2 and 3: from 9 to 36 kg



L2

"KIDDY Life"
Use of the restraining cushion is compulsory for the transportation of young children (from 9 to 18 kg).

Groups 2 and 3: from 15 to 36 kg



L3
"RECARO Start"



L4
"KLIPPAN Optima"
From the age of 6 years (approximately 22 kg), the booster is used on its own.



+ Refer to chapter 4, "Airbags" section.

i The child seats function and the passenger airbag disarming function are common to the entire CITROËN range.

If the passenger airbag is not disarmed, the installation of a "rearwards-facing" child seat in the front is strictly prohibited.

UNIVERSAL CHILD SEATS RECOMMENDED BY CITROËN

CITROËN offers a complete range of recommended child seats which are secured using a three point seat belt:

Group 0: from birth to 10 kg

Group 0+: from birth to 13 kg



L1

"ROMER Baby-Safe Plus"
Installed in the rear-facing position

Groups 1, 2 and 3: from 9 to 36 kg



L2

"KIDDY Life"
Use of the restraining cushion is compulsory for the transportation of young children (from 9 to 18 kg).

Groups 2 and 3: from 15 to 36 kg



L3
"RECARO Start"



L4
"KLIPPAN Optima"
From the age of 6 years (approximately 22 kg), the booster is used on its own.

Child safety

INSTALLING CHILD SEATS ATTACHED USING THE SEAT BELT

96 In accordance with European regulations, this table indicates the options for installing child seats secured using a seat belt and universally approved in accordance with the weight of the child and the seat in the vehicle.

Seat		Weight of the child and indicative age				
		Under 13 kg (groups 0 (a) and 0+) Up to approx 1 year	From 9 to 18 kg (group 1) 1 to 3 years approx	From 15 to 25 kg (group 2) 3 to 6 years approx	From 22 to 36 kg (group 3) 6 to 10 years approx	
Row 1 (b)		Individual seat	U	U	U	U
		Bench, side seat	U	U	U	U
		Bench, centre seat (c)	U	U	U	U

a: Group 0: from birth to 10 kg.

b: consult the legislation in force in your country before installing your child on this seat.

c: the "RÖMER Baby-Safe Plus" child seat cannot be installed on this seat.

U: seat suitable for the installation of a child seat secured using a seat belt and universally approved, "rear facing" and/or "forward facing".

CITROËN advises against installing a child seat on the centre seat, with the exception of the "KLIPPAN Optima".

ADVICE ON CHILD SEATS

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Remember to fasten the seat belts or the child seat harnesses **keeping the slack** in relation to the child's body **to a minimum**, even for short journeys.

For optimum installation of the "forward facing" child seat, ensure that the back of the child seat is in contact with the back of the vehicle's seat and that the head restraint does not cause any discomfort.

If the head restraint has to be removed, ensure that it is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking.

Children under the age of 10 must not travel in the "forward facing" position on the front passenger seat, unless the rear seats are already occupied by other children, cannot be used or are absent.

Deactivate the passenger airbag when a "rear facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

As a safety precaution, do not leave:

- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To prevent accidental opening of the doors, use the "Child Lock".

Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds to the rear windows.

Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs. CITROËN recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.



TOWING A TRAILER, CARAVAN, BOAT, ETC...

 For more information about weights, refer to the administrative documents (V5 registration document, ...) or to the "Weights" section of chapter 8.

Driving advice

A towed vehicle must free wheel: gearbox in neutral.

Distribution of loads

Distribute the load in the trailer so that the heaviest objects are as close as possible to the axle and the nose weight is close to the maximum authorised without, however, exceeding it.

Cooling

Towing a trailer on a slope increases the coolant temperature.

As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

On the contrary, use a high gear to lower the engine speed and reduce your speed.

In all cases, pay attention to the coolant temperature.

Good Practice

In certain cases of particularly arduous use (towing the maximum load up a steep slope in high temperatures), the engine automatically limits its power. In this case, the automatic cutting off of the air conditioning allows the engine power to be recovered.



If the coolant temperature warning light comes on, stop the vehicle and switch off the engine as soon as possible.

 See the "Levels" section of chapter 6.

Tyres

Check the tyre pressures of the towing vehicle (see the "Identification features" section of chapter 8) and of the trailer, observing the recommended pressure.

Brakes

Towing increases the braking distance. Drive at a moderate speed, change down early and brake gradually.

Side wind

Sensitivity to side wind is increased. Drive smoothly and at a moderate speed.

ABS/ESP

The ABS or ESP systems only control the vehicle, not the trailer or caravan.

Rear parking assistance

The assistance does not function while the vehicle is towing.

Towbar

We recommend the use of original CITROËN towbars and their harnesses, which have been tested and approved from the design stage of your vehicle, and that you entrust the fitting of this equipment to a CITROËN dealer.

If this equipment is not fitted by a CITROËN dealer, it is imperative that it is fitted using the electrical pre-equipment installed at the rear of the vehicle and in accordance with the manufacturer's instructions.

In accordance with the general instructions a reminder of which has been given above, we draw your attention to the risk linked with fitting a towbar or electrical accessory not recommended by CITROËN. Fitting such equipment could result in the failure of your vehicle's electronic system. Please contact a CITROËN dealer for information before fitting this type of equipment.

OTHER ACCESSORIES

These accessories and parts, having been tested and approved for reliability and safety, are all adapted to your vehicle. A wide range of recommended accessories and genuine parts is available.

Range of trade equipment

The parts department publishes an accessory catalogue offering various equipment and fittings, such as:
Load retainers (all models).
Loading roller.

Towbar, towbar harness: trailer towbar which must be fitted by the CITROËN network.

Separation partitions and grilles, smooth, non-slip wooden protective floor.

Protective grilles.

Another range is also available, structured around comfort, leisure and maintenance:

Anti-theft alarm, window etching, first aid kit, high visibility vest, front and rear parking sensors, warning triangle, security bolts for alloy wheels...

Front seat covers compatible with airbags, bench, rubber mats, carpet mats, snow chains, blind, tailgate bicycle carrier, ...

Good Practice

In certain cases of particularly arduous use (towing the maximum load up a steep slope in high temperatures), the engine automatically limits its power. In this case, the automatic cutting off of the air conditioning allows the engine power to be recovered.



If the coolant temperature warning light comes on, stop the vehicle and switch off the engine as soon as possible.

 See the "Levels" section of chapter 6.

Tyres

Check the tyre pressures of the towing vehicle (see the "Identification features" section of chapter 8) and of the trailer, observing the recommended pressure.

Brakes

Towing increases the braking distance. Drive at a moderate speed, change down early and brake gradually.

Side wind

Sensitivity to side wind is increased. Drive smoothly and at a moderate speed.

ABS/ESP

The ABS or ESP systems only control the vehicle, not the trailer or caravan.

Rear parking assistance

The assistance does not function while the vehicle is towing.

Towbar

We recommend the use of original CITROËN towbars and their harnesses, which have been tested and approved from the design stage of your vehicle, and that you entrust the fitting of this equipment to a CITROËN dealer.

If this equipment is not fitted by a CITROËN dealer, it is imperative that it is fitted using the electrical pre-equipment installed at the rear of the vehicle and in accordance with the manufacturer's instructions.

In accordance with the general instructions a reminder of which has been given above, we draw your attention to the risk linked with fitting a towbar or electrical accessory not recommended by CITROËN. Fitting such equipment could result in the failure of your vehicle's electronic system. Please contact a CITROËN dealer for information before fitting this type of equipment.

OTHER ACCESSORIES

These accessories and parts, having been tested and approved for reliability and safety, are all adapted to your vehicle. A wide range of recommended accessories and genuine parts is available.

Range of trade equipment

The parts department publishes an accessory catalogue offering various equipment and fittings, such as:

- Load retainers (all models).
- Loading roller.

Towbar, towbar harness: trailer towbar which must be fitted by the CITROËN network.

Separation partitions and grilles, smooth, non-slip wooden protective floor.

Protective grilles.

Another range is also available, structured around comfort, leisure and maintenance:

Anti-theft alarm, window etching, first aid kit, high visibility vest, front and rear parking sensors, warning triangle, security bolts for alloy wheels...

Front seat covers compatible with airbags, bench, rubber mats, carpet mats, snow chains, blind, tailgate bicycle carrier, ...

Equipment

To prevent the mat from becoming caught under the pedals:

- ensure that the mat and its fixings are positioned correctly,
- never fit one mat on top of another.

Audio equipment, hands-free kit, speakers, CD changer, satellite navigation system, USB Box, Video kit, ...

Regardless of the audio and telematic equipment offered on the market, the technical constraints associated with the fitting of equipment of these families of products mean that the special features of the equipment and its compatibility with the capacities of the your vehicle's standard equipment must be taken into account. Please contact a CITROËN dealer for more information before fitting such equipment.

Maximum weights on bars

- Roof rack: 120 Kg.
- Transverse bars on roof: 100 Kg.
- Transverse bars on longitudinal bars: 75 Kg.

Installation of radiocommunication transmitters

Before installing accessory radiocommunication transmitters with an external aerial on your vehicle, you are advised to contact a representative of the CITROËN marque.

The CITROËN dealer network will inform you of the specifications (frequency band, maximum output power, aerial position, specific installation conditions) of the transmitters which can be fitted, in accordance with the Motor Vehicle Electromagnetic Compatibility Directive (2004/104/CE).

Front mud flaps, rear mud flaps, 15/17 inch alloy wheels, wheelarch trim, leather steering wheel,

Screenwash, interior and exterior cleaning and maintenance products, replacement bulbs, ...



The fitting of electrical equipment or accessories which are not recommended by Automobiles CITROËN may result in the failure of your vehicle's electronic system. Please note this specific warning. You are advised to contact a representative of the Marque to be shown the range of recommended equipment and accessories.

Depending on the country in which the vehicle is sold or operated, it is compulsory to have a high visibility safety jacket, warning triangle and replacement bulbs available in the vehicle.

"Active Fleet Data" Telematic unit

Connected directly to the heart of the vehicle (multiplexed network: "Full CAN"), the telematic unit, by means of a "ready to use" service, permits the sending in real time of information such as:

- distance travelled,
- distance remaining before the next service,
- warnings and faults (oil level, coolant level, oil temperature, coolant temperature, etc...).

This enables "Fleet" managers to optimise the monitoring and management of their professional vehicles.

According to country, contact a CITROËN dealer for further information.

Opening the bonnet



OPENING THE BONNET

On the inside

Pull the lever under the fascia panel towards you. The bonnet is unlocked.

On the outside

Raise the bonnet slightly by reaching in a flat hand, palm down, to make access to the lever easier.

With this hand, push the lever to the left. Raise the bonnet.

Bonnet strut


Secure the strut in its location, identified by a sticker on the left-hand panel side of the vehicle, to hold the bonnet open.

Before closing the bonnet, put the strut back in its clip without using excessive force.

To close

Lower the bonnet and release it at the end of its travel. Check that the bonnet is locked.


Avoid manoeuvring the bonnet in strong winds.

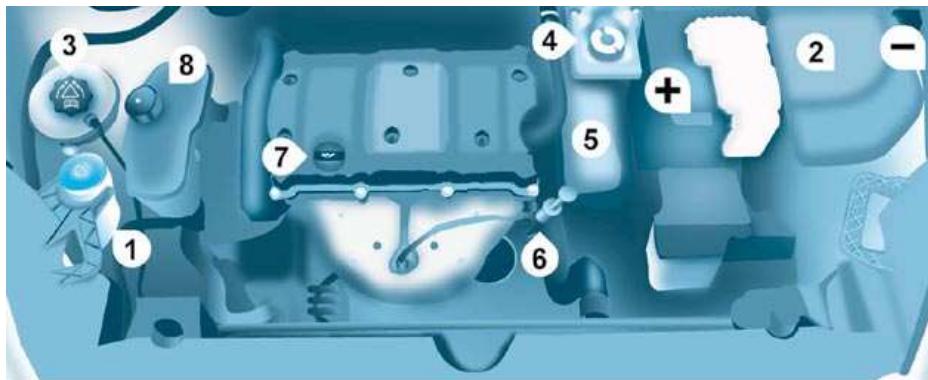

PETROL ENGINE

Take care when working under the bonnet.


1. Windscreen wash reservoir.
2. Fuse box.
3. Engine coolant reservoir.
4. Brake and clutch fluid reservoir.
5. Air filter.
6. Dipstick.
7. Engine oil filler cap.
8. Power steering fluid reservoir.

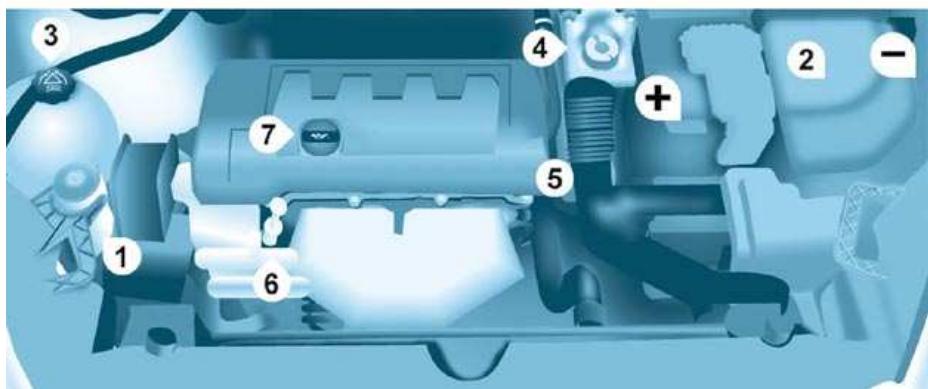

i Battery connections:

- + Positive metal point.
- Negative metal point (earth).

Under the bonnet

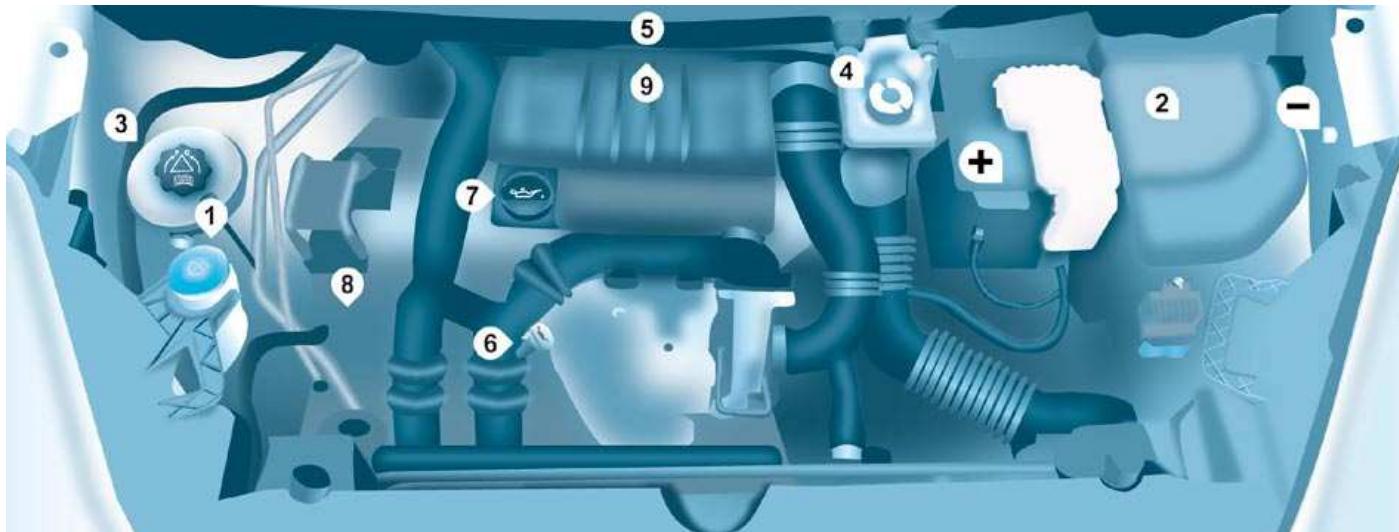

DIESEL ENGINE

Take care when working under the bonnet.

1. Windscreen wash reservoir.
2. Fuse box.
3. Engine coolant reservoir.
4. Brake and clutch fluid reservoir.
5. Air filter.
6. Dipstick.
7. Engine oil filler cap.
8. Power steering fluid reservoir.
9. Priming pump.

i Battery connections:

- + Positive metal point.
- Negative metal point (earth).

LEVELS


i These regular maintenance operations will keep your vehicle in good working order. Ask for advice from a a CITROËN dealer or refer to the servicing booklet in the handbook pack.

o If you have to remove/refit the engine style cover, handle it with care to avoid damaging the fixing clips.

Oil level

Check the level regularly and top up between changes.

Check the level with the vehicle level, engine cold, using the dipstick.

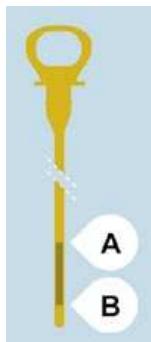

Dipstick

There are two marks on the dipstick:

A = maximum

If you fill past this mark, consult a CITROËN dealer.

B = minimum

Never allow the level to fall below this mark.

To maintain the reliability of engines and emission control systems, the use of additives in engine oil is prohibited.



Oil change

This must be carried out at the intervals specified and the viscosity grade of the oil selected must fulfil the requirements in the manufacturer's servicing schedule. Ask for advice from a CITROËN dealer.

Remove the dipstick before filling.

Check the level after filling (never exceed the max mark).

Refit the oil filler cap before closing the bonnet.

Viscosity selection

In all cases, the oil selected must meet the manufacturer's requirements.



Changing the brake fluid

The brake fluid must be changed at the intervals stated, according to the manufacturer's servicing schedule.

Use fluids recommended by the manufacturer, which fulfil DOT4 standards.

The level must be between the MIN and MAX marks on the reservoir.

If fluid has to be added frequently, this indicates a fault which must be checked by a CITROËN dealer as soon as possible.

Warning lamps

+ Checks using the warning lamps in the instrument panel is described in chapter 2, refer to the "Instruments and controls" section.

Levels

Cooling system

Only use the fluid recommended by the manufacturer. Otherwise, you risk seriously damaging your engine. When the engine is warm, the temperature of the coolant is controlled by the engine fan. As this fan can operate with the ignition key removed and because the cooling system is pressurised, wait for at least one hour after the engine has stopped before carrying out any work. Slacken the cap by 1/4 of a turn to release the pressure to prevent any risk of scalding. When the pressure has dropped, remove the cap and top up the level with coolant. If fluid has to be added frequently, this indicates a fault which must be checked by a CITROËN dealer as soon as possible.

Topping up

The level must be between the MIN and MAX marks on the expansion bottle. If more than 1 litre of fluid is required to top up the level, have the system checked by a CITROËN dealer.

Power steering fluid level

The vehicle must be parked on level ground with the engine cold. Unscrew the cap integrated with the gauge and check the level which must be between the MIN and MAX marks.

Screenwash and headlamp wash level

For best quality cleaning and for your safety, we would advise that you use products of the CITROËN range.

For optimum cleaning and to avoid freezing, this fluid must not be topped up or replaced with plain water.

Capacity of the screenwash reservoir: approximately 3 litres.

If your vehicle is fitted with headlamp washers, the capacity of the reservoir is 6 litres.



Diesel additive level (Diesel with particle emission filter)

The minimum level of this additive is indicated by lighting of the service warning lamp, accompanied by an audible signal and a message in the screen.

When this occurs with the engine running it is due to the start of saturation of the particle emission filter (exceptionally prolonged urban type driving conditions: low speed, long traffic jams, ...).

In order to regenerate the filter, you are advised to drive at a speed higher than 40 mph (60 km/h) for at least five minutes as soon as possible, when traffic conditions permit (until the message disappears and the service warning lamp goes off).

During regeneration of the particle emission filter, the noise of a relay operating may be heard under the dashboard.

If the message is still displayed and if the service warning lamp remains on, consult a CITROËN dealer.

Topping up

It is imperative that this additive is topped up by a CITROËN dealer without delay.

Used oil

Avoid prolonged contact of used oil with the skin.

Brake fluid is harmful to health and very corrosive.

Do not dispose of used oil, brake fluid or coolant into drains or into the ground but into the containers dedicated to this use at CITROËN dealer (France) or an authorised waste disposal site.

CHECKS

Battery

At the start of winter, have your battery checked by a CITROËN dealer.

Brake pads

Brake pad wear depends on the style of driving, in particular for vehicles which are used in town, over short distances. It may be necessary to check the thickness of the pads, even between services.

Unless there is a leak on the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

Brake disc/drum wear

For information on checking the brake disc/drum wear, consult a CITROËN dealer.

Parking brake

Where the parking brake travel is too great or there is a reduction in the performance of the system, the parking brake should be adjusted, even between services.

Have the system checked by a CITROËN dealer.



Carbon filter and passenger compartment filter

An access flap below the glove box permits replacement of the filters.

The carbon filter permits continuous and effective filtering of dust.

If the passenger compartment filter becomes blocked, this may reduce the performance of the air conditioning system and generate unpleasant odours.

We recommend the use of a combined passenger compartment filter. By means of its second special active filter, it contributes to the purification of the air breathed by the occupants and the cleanliness of the passenger compartment (reduction of allergic symptoms, unpleasant odours and greasy deposits).

Refer to the servicing booklet for the replacement interval for these components.

Depending on the environment (dusty atmosphere...) and the use of the vehicle (urban driving...), change them twice as often if necessary.

Oil filter

Change the filter regularly in accordance with the servicing schedule.

Particle emission filter (Diesel)

maintenance of the particle emission filter must be carried out by a CITROËN dealer.

On acceleration after the vehicle has been running for a prolonged period at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust. This water vapour does not have any adverse effect on vehicle handling or the environment.

Checks

Bleeding the water contained in the Diesel filter



If this warning lamp comes on, bleed the filter. Otherwise bleed regularly each time the engine oil is changed.

To drain the water, unscrew the bleed screw located on the filter.

Operate until all of the water no longer flows in the transparent pipe, then tighten the bleed screw.

HDi engines use advanced technology. All work requires special training, which is assured by a CITROËN dealer.

According to country.

Manual gearbox

Have the level checked in accordance with the manufacturer's servicing schedule.

i To check the main levels and certain components, in accordance with the manufacturer's servicing schedule, refer to the pages of the servicing booklet which correspond to your vehicle's engine.

i Only use products recommended by CITROËN or products of equivalent quality and specification.

In order to optimise the operation of units as important as the braking system, CITROËN selects and offers specific products.

In order to avoid damaging the electrical units, high pressure washing to clean the engine compartment is strictly prohibited.



FILLING WITH FUEL

Low fuel level



When the minimum fuel tank level is reached, this warning light comes on.

You then have **approximately 8 litres** of fuel remaining. Fill up without delay to avoid running out of fuel.

Never risk driving until you run out of fuel as this may damage the antipollution and injection systems.

Filling

The fuel tank must be filled **with the engine off**.

- Open the fuel filler flap.
- Insert the key, then turn it a quarter turn.
- Remove the cap and hook it onto the clip located on the inside of the flap.

A label affixed to the inside of the flap reminds you of the type of fuel to be used.

You must fill with at least 5 litres of fuel for it to be registered by the fuel gauge. When the fuel filler cap is opened, there may be a slight air suction noise. This vacuum is entirely normal and is due to the sealing of the fuel circuit. When filling the fuel tank, do not continue after the 3rd cut-off of the nozzle. This could cause malfunctions. The capacity of the fuel tank is approximately 60 litres.

- After filling the fuel tank, lock the cap and close the flap.



When filling with fuel, with the fuel filler flap open, ensure that no one attempts to open the sliding side door.

Quality of the fuel used for petrol engines

The petrol engines are perfectly compatible with E10 type petrol biofuels (containing 10 % ethanol), conforming to European standards EN 228 and EN 15376.

E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

For Brazil only, special vehicles are marketed to run on fuels containing up to 100 % ethanol (E100 type).



Fuel

Quality of the fuel used for Diesel engines

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Consult a CITROËN dealer.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).



DIESEL

FUEL CIRCUIT DISARMED

In a serious collision, a mechanism automatically prevents fuel from reaching the engine.



The flashing of this warning light is accompanied by a message on the display.

Check that there is no odour or leakage of fuel outside the vehicle and re-establish the fuel supply:

- switch off the ignition (STOP position),
- remove the key,
- put the key back in the ignition,
- switch on the ignition and start.

DIESEL REPRIMING PUMP

If you should run out of fuel, it is necessary to re-prime the circuit:

- fill the fuel tank with at least five litres of diesel,
- squeeze and release the manual re-priming pump, under the bonnet under the protective cover,
- operate the starter until the engine starts.



Refer to the "Under the bonnet" section of chapter 6.

Fuel

Quality of the fuel used for Diesel engines

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Consult a CITROËN dealer.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).



DIESEL

FUEL CIRCUIT DISARMED

In a serious collision, a mechanism automatically prevents fuel from reaching the engine.



The flashing of this warning light is accompanied by a message on the display.

Check that there is no odour or leakage of fuel outside the vehicle and re-establish the fuel supply:

- switch off the ignition (STOP position),
- remove the key,
- put the key back in the ignition,
- switch on the ignition and start.

DIESEL REPRIMING PUMP

If you should run out of fuel, it is necessary to re-prime the circuit:

- fill the fuel tank with at least five litres of diesel,
- squeeze and release the manual re-priming pump, under the bonnet under the protective cover,
- operate the starter until the engine starts.



Refer to the "Under the bonnet" section of chapter 6.


BATTERY

To charge the battery using a battery charger

- Disconnect the battery,
- Follow the instructions for use given by the battery charger manufacturer,
- Reconnect starting with the negative (-) terminal,
- Check that the terminals and connectors are clean. If they are covered with sulphate (white or greenish deposit), disconnect them and clean them.

To start the vehicle from another battery

- Connect the red cable to the positive (+) terminals of the two batteries,
- Connect one end of the green or black cable to the negative (-) terminal of the slave battery,
- Connect the other end of the green or black cable to an earth point on the broken down vehicle as far as possible from the battery,
- Operate the starter, let the engine run,
- Wait for the engine to return to idle, then disconnect the cables.

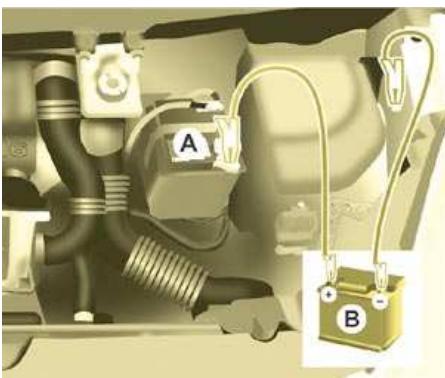

i It is advisable to disconnect the battery if the vehicle is not to be used for a period of more than one month.

Before disconnecting the battery, you must wait for 2 minutes after switching off the ignition.

Never disconnect a terminal when the engine is running.

Never charge a battery without first disconnecting the terminals.

After every reconnection of the battery, switch on the ignition and wait 1 minute before starting to allow the electronic systems to be initialised. If slight difficulties are experienced after this, please contact a CITROËN dealer.

After changing bulbs, wait approximately 3 minutes before reconnecting the battery.

ECONOMY MODE

After the engine has stopped, with the key in the ignition position, certain functions (windscreen wiper, electric windows, courtesy lights, audio equipment, etc.) can only be used for a cumulative duration of thirty minutes, to prevent discharging of the battery.


Once the thirty minutes are over, the active functions are put on standby and the battery warning light flashes accompanied by a message on the display.

To resume the use of these functions immediately, start the engine and let it run for a few minutes.

The time available will then be double the time for which the engine was left running. However, this time will always be between five and thirty minutes.

A flat battery will prevent the engine from starting.

Changing a wheel

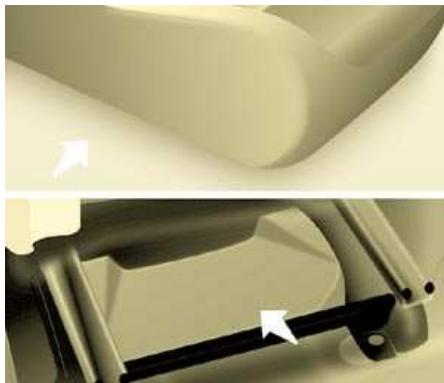

CHANGING A WHEEL


1. PARKING THE VEHICLE

- The occupants must get out of the vehicle and wait in a safe location.
- If possible, park the vehicle on level, stable and non-slippery ground.
- Apply the parking brake, switch off the ignition and engage first or reverse gear.

- If available, place a chock under the wheel diagonally opposite the one to be changed.

If the vehicle is fitted with a towbar, it is sometimes necessary to raise the vehicle slightly to make it easier to remove the spare wheel from its carrier.

On certain types of ground and/or if considerable loads are being transported, call a CITROËN dealer.

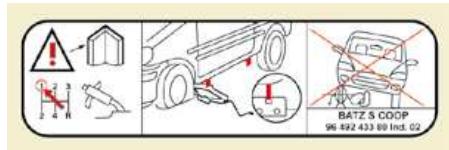

2. TOOLS

- The tools are stowed in a storage compartment located under the front seat. If necessary, move the seat forward to access the storage compartment from the rear.
- Unscrew the nut then take out the jack and the wheelbrace.


1. Wheelbrace.

2. Jack.

3. Alloy wheel embellisher remover.

4. Chock.


The jack and the tool kit are specific to your vehicle. Do not use them for other purposes.

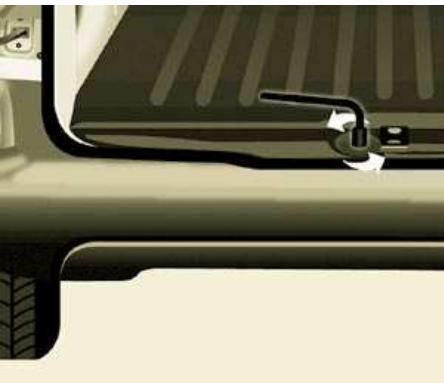

3. SPARE WHEEL

- Open the rear doors to gain access to the spare wheel.
- Unscrew the bolt using the wheelbrace until the carrier is lowered fully.
- Detach the carrier from the hook and place the spare wheel near the wheel to be changed.



Changing a wheel

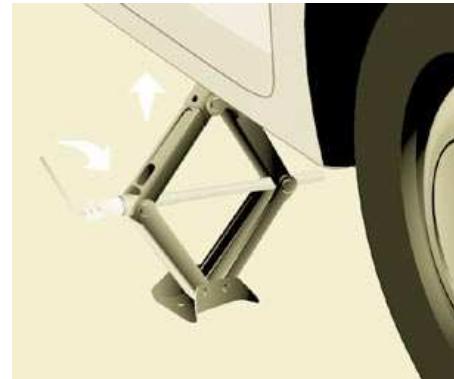

4. OPERATING PROCEDURE

- Remove the trim pulling it using the embellisher remover.
- Loosen the wheel bolts and start unscrewing them.
- Place the jack in contact with the locating point provided, the one which is closest to the wheel to be changed. Ensure that the jack is straight and that the base of the jack is fully in contact with the ground.
- Extend the jack to lift the wheel clear of the ground.
- Resume and complete the unscrewing of the wheel bolts.
- Remove the bolts and remove the wheel.

Do not extend the jack until you have started unscrewing the bolts on the wheel to be changed and have placed the chock under the wheel diagonally opposite.

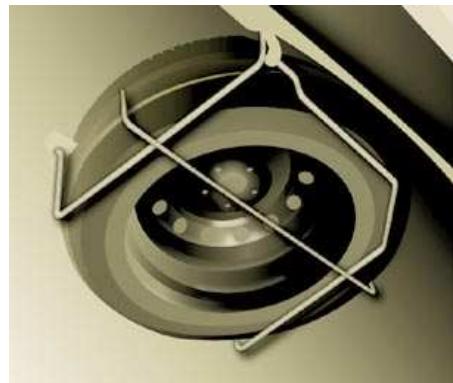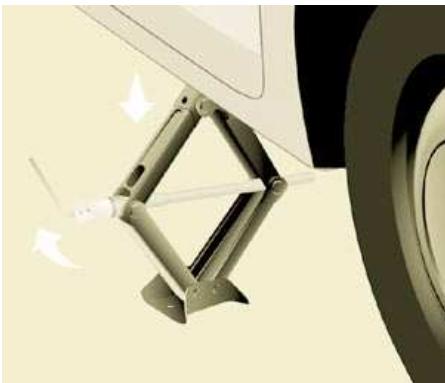

5. FITTING THE SPARE WHEEL

- Position the wheel on the hub and start tightening the bolts by hand.
- Carry out an initial tightening of the bolts using the wheelbrace.
- Lower the vehicle completely by folding the jack, then remove the jack.
- Tighten the bolts again using the wheelbrace, tighten them fully without forcing them.
- Place the wheel to be repaired in the carrier.
- Secure the carrier on the hook then raise the carrier using the bolt and the wheelbrace.

 Never go underneath a vehicle that is supported only by a jack (use a ramp). Never use a screwdriver in place of the wheelbrace.

Snow screen


6. REFITTING THE REPAIRED WHEEL

The wheel is refitted as described in step 5, not forgetting to refit the wheel embellisher.

 Refer to the "Identification markings" section of chapter 8 to locate the tyre label.

 Refer to the "Instruments and controls" section of chapter 2, "Tyre under-inflation detection" part, for recommendations after changing a wheel fitted with a tyre under-inflation detection sensor.


 The spare wheel is not designed to be used over long distances. Have the tightening of the bolts and the tyre pressure checked by a CITROËN dealer as soon as possible. Also, have the original wheel repaired and refitted by a CITROËN dealer as soon as possible.

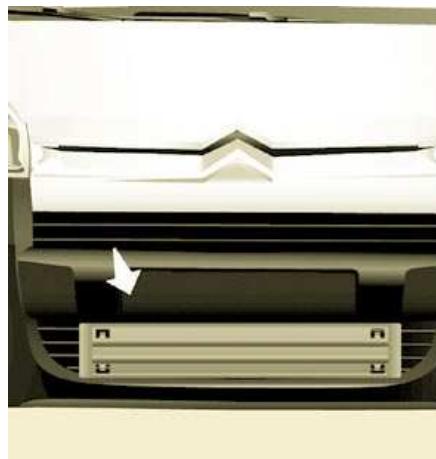

REMOVABLE SNOW SCREEN

According to country, the removable snow screen is installed on the lower part of the front bumper to prevent the accumulation of snow at the radiator cooling fan.

Do not forget to remove the snow screen when the exterior temperature is higher than 10 °C (no risk of snowfall) and when towing.

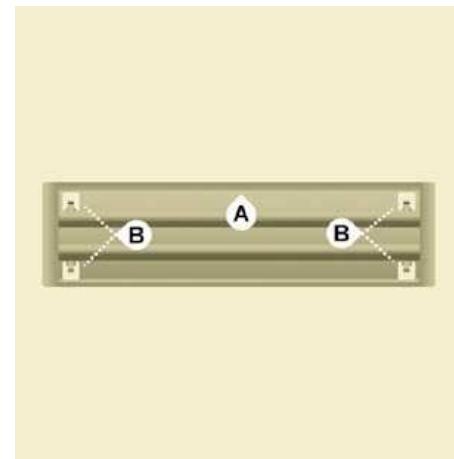

FITTING

- Offer up the snow screen facing its centring pin **A** on the front bumper.
- Put it in place by pressing at each clip **B** located in the four corners.

REMOVAL

- Pass a screwdriver into the hole located near each of the clips.
- Use the screwdriver as a lever to unclip the four clips **B** in turn.

Snow screen


6. REFITTING THE REPAIRED WHEEL

The wheel is refitted as described in step 5, not forgetting to refit the wheel embellisher.

 Refer to the "Identification markings" section of chapter 8 to locate the tyre label.

 Refer to the "Instruments and controls" section of chapter 2, "Tyre under-inflation detection" part, for recommendations after changing a wheel fitted with a tyre under-inflation detection sensor.


 The spare wheel is not designed to be used over long distances. Have the tightening of the bolts and the tyre pressure checked by a CITROËN dealer as soon as possible. Also, have the original wheel repaired and refitted by a CITROËN dealer as soon as possible.

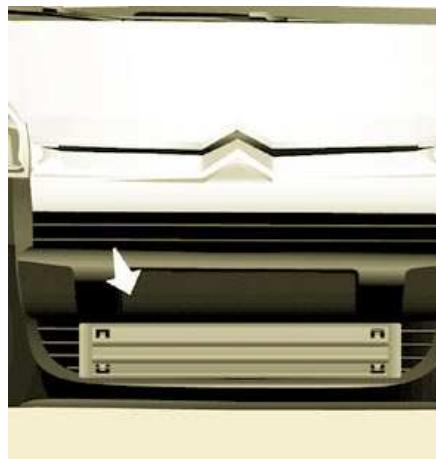

REMOVABLE SNOW SCREEN

According to country, the removable snow screen is installed on the lower part of the front bumper to prevent the accumulation of snow at the radiator cooling fan.

Do not forget to remove the snow screen when the exterior temperature is higher than 10 °C (no risk of snowfall) and when towing.

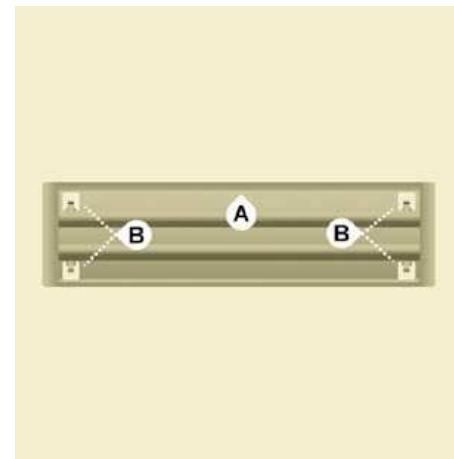


FITTING

- Offer up the snow screen facing its centring pin **A** on the front bumper.
- Put it in place by pressing at each clip **B** located in the four corners.

REMOVAL

- Pass a screwdriver into the hole located near each of the clips.
- Use the screwdriver as a lever to unclip the four clips **B** in turn.

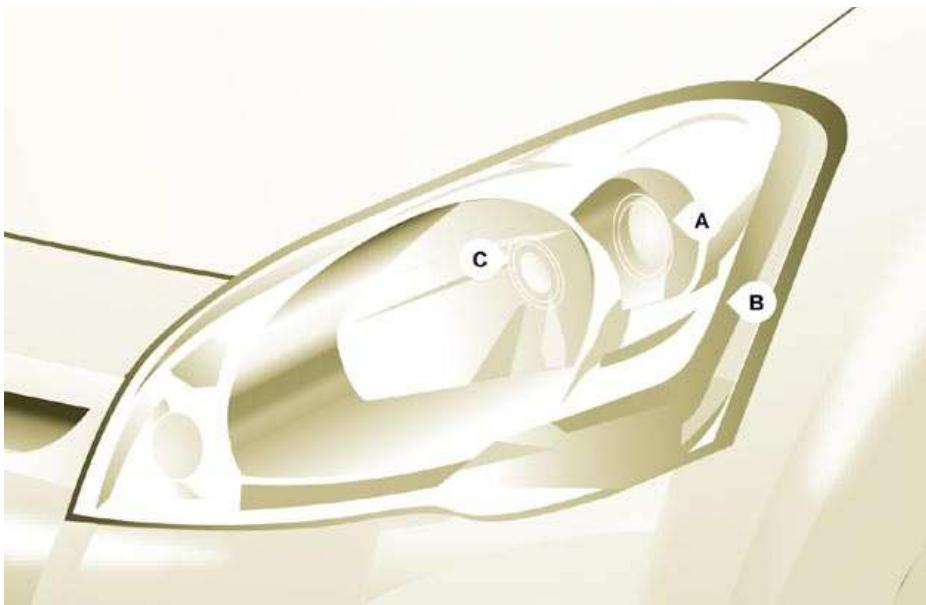

CHANGING A BULB

Open the bonnet. To access the bulbs, reach behind the headlamp unit.

Carry out the operations in reverse order to refit each bulb and check that the bonnet is closed securely.

 Halogen bulbs must be changed with the headlamp off. Wait a few minutes (risk of serious burns).

Do not touch the bulb directly with your fingers, use lint-free cloths.

It is normal for condensation to form inside the headlamps. Regular use of the vehicle eliminates this misting.

The bulbs must be changed with the ignition off or with the battery disconnected. Wait approximately 3 minutes after changing the bulb before reconnecting the battery.

Check that the lamps operate correctly after each operation.

High pressure washing

 When using this type of washing on stubborn dirt, do not persist on the headlamps, the lamps and their edges to avoid damaging their coating and seals.

Types of bulb

Various types of bulb are fitted to your vehicle. To remove them:



Type A

All glass bulb: pull gently as it is fitted by pressure.



Type B



Bayonet bulb: press on the bulb then turn it anticlockwise.



Type C

Halogen bulb: release the retaining spring from its housing.

Changing a bulb

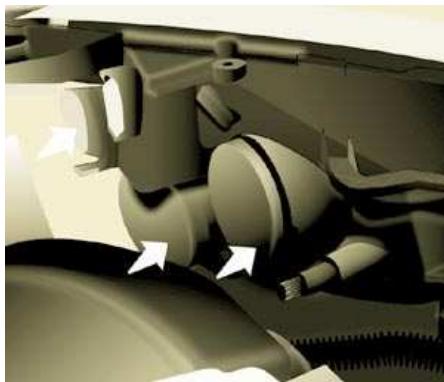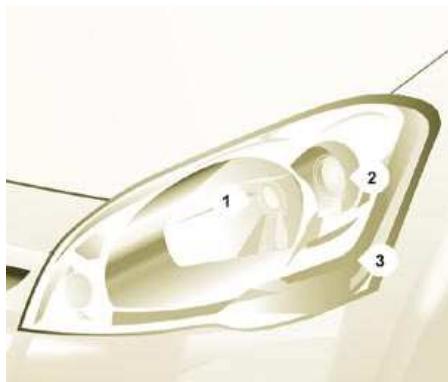

FRONT LAMPS

1. Dipped/Main beam headlamps

Type C, H4 - 55W

- Remove the centre cover by pulling the flexible rubber tab.
- Disconnect the electrical connector.
- Release the retaining tab.
- Change the bulb taking care to align the metal part with the grooves on the lamp.
- Reposition the retaining tab.
- Ensure that the cover is refitted correctly all round to assure correct sealing.

2. Sidelamps


Type A, W5W - 5W

- Remove the cover by pulling the flexible rubber tab.
- Remove the bulb holder fitted by pressure by pulling the connector.
- Change the bulb.
- Ensure that the cover is refitted correctly all round to assure correct sealing.

3. Direction indicators

Type B, PY21W - 21W (amber)

- Remove the cover by pulling the flexible rubber tab.
- Turn the bulb holder a quarter turn anticlockwise.
- Remove the bulb by pressing it lightly while turning it anticlockwise.
- Change the bulb.
- Ensure that the cover is refitted correctly all round to assure correct sealing.

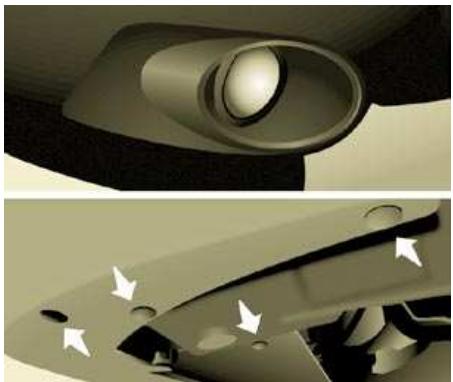

4. Foglamps

Type C, H1 - 55W

- Remove the foglamp by removing the bolt, which can be accessed via the hole provided for this purpose in the bumper, using a Torx® 30 screwdriver.
- Remove the three wheelarch liner fixing clips, located below the bumper.
- Move the mud guard upwards.
- Unclip the foglamp by squeezing the clip to release it.
- Remove the foglamp from the outside.
- Turn the yellow cover a 1/4 turn to open.
- Separate the clips which secure the base of bulb on each side to release the bulb.
- Remove the bulb by pulling, keeping it straight.
- Insert the new bulb, reposition the clips around the base of the bulb and carry out the operations in reverse order to put the lamp unit and the bumper back in position.



SIDE REPEATER

Type A, WY 5W (amber)

- Push the repeater towards the rear and disengage it by pulling the front.
- Contact a CITROËN dealer to obtain a new repeater which is a sealed component.
- To refit, engage the repeater towards the rear and bring it towards the front.




Front/Rear

COURTESY LAMPS

Type A, 12 V 5W - 5W

- Unclip the lens by sliding a screwdriver in the slots on each side of the courtesy lamp.
- Pull the bulb out and change it.
- Clip the lens in its housing and ensure that it is secured correctly.

Changing a bulb

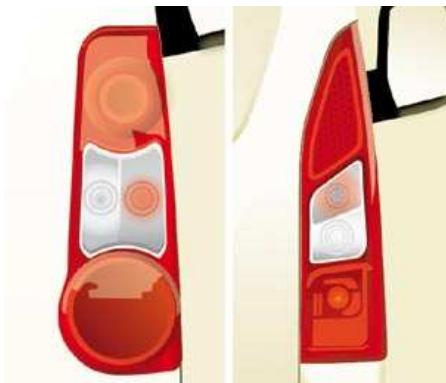

REAR LAMPS

For more information concerning the bulbs, refer to the "Types of bulb".

1. Brake lamps/sidelamps

Type B, P21/5W - 21/5W

2. Direction indicators


Type B, PY21W - 21W (amber)

3. Reversing lamps

Type B, P21W - 21W

4. Foglamps

Type B, P21W - 21W

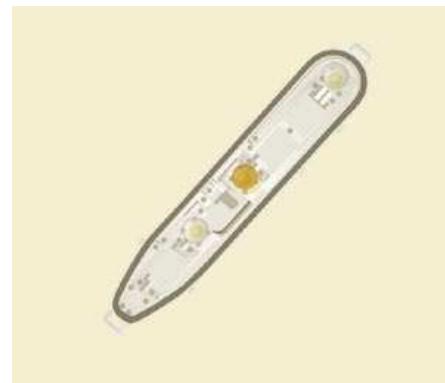

- Identify the faulty bulb then open the rear doors to 180°. Refer to the "Access" section of chapter 2.
- Remove the two fixing bolts using the screwdriver stored in the tool kit under the right-hand seat.
- Pull the lamp unit from the outside.
- Holding the lamp, disconnect the electrical connector.

- Move aside the 4 tabs then extract the bulb holder.

- Remove the faulty bulb by pressing it lightly while turning it anticlockwise.

- Change the bulb.

When removing the lamp unit:


- with tailgate, pull the lamp unit towards the centre of the vehicle,
- with hinged doors, pull the lamp unit towards you.

High pressure washing

 When using this type of washing on stubborn dirt, do not persist on the headlamps, the other lamps and their edges to avoid damaging their coating and seals.

 When refitting, take care to reposition the tabs and the supply wire correctly to avoid trapping the wire.

After changing the rear direction indicator bulb, the reinitialisation time is above 2 minutes.

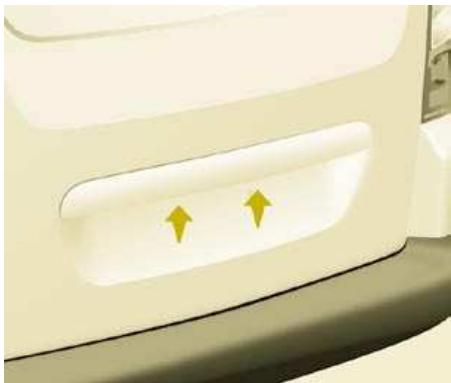


NUMBER PLATE LAMPS

Type A, W5W - 5W


With tailgate

- Move aside the plastic lens using a screwdriver.
- Change the bulb.
- Replace the plastic lens and press on it.

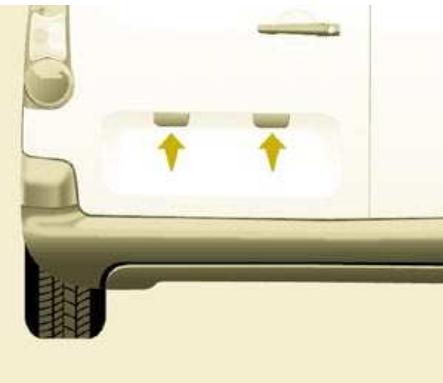

With hinged doors

- Unclip the interior trim.
- Disconnect the connector by moving aside its tab.
- Turn the bulb holder a quarter turn anticlockwise.
- Change the bulb.
- Put the bulb holder back in place and reconnect the connector.
- Put the trim back in place.

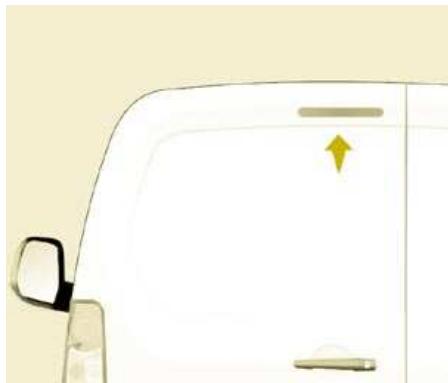

THIRD BRAKE LIGHT

Type A, W16W - 16W

- Unscrew the two nuts.
- Push the pins.
- If necessary, disconnect the connector to remove the light.
- Change the bulb.

Changing a fuse

CHANGING A FUSE


The fuseboxes are located:

- in the lower dashboard on the left-hand side (behind the cover),
- under the bonnet (near the battery).

If fitted on your vehicle, an additional fusebox is used for towing, the towbar and the connections for the coachbuilder and platform cab modifications. It is located on the right behind the load retaining partition.

The indications communicated are only those fuses which can be changed by the user using the tweezer, located behind the dashboard storage compartment on the right-hand side. For any other work, visit a CITROËN dealer.

i For professionals: for complete information on the fuses and relays, refer to the "Repair manual" diagram via the dealer network.

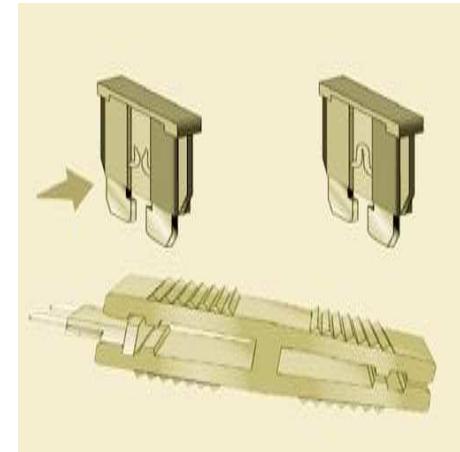

Removing and fitting a fuse

Before replacing a fuse, the cause of the incident must be found and rectified.


- Use the tweezer.

Always replace a failed fuse with a fuse of the same rating.

CITROËN will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying the malfunctions resulting from the installation of accessories not supplied and not recommended by the CITROËN network and not installed in accordance with its instructions, in particular when the combined consumption of all of the additional equipment connected exceeds 10 milliamperes.

DASHBOARD FUSES


Tilt the cover to gain access to the fuses.

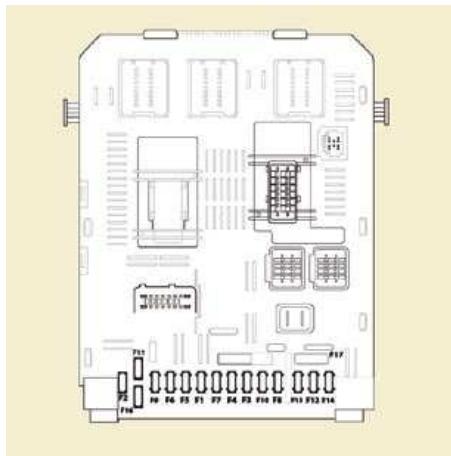

Fuses F	Amperes A	Allocation
1	15	Rear wiper
2	-	Spare
3	5	Airbag
4	10	Air conditioning, diagnostic socket, mirror control, headlamp beam
5	30	Electric windows
6	30	Locks
7	5	Rear courtesy lamp, front map reading lamp, roof console
8	20	Audio equipment, screen, tyre under-inflation detection, alarm and siren
9	30	Front and rear 12 V socket
10	15	Central column
11	15	Low current ignition switch
12	15	Rain and sunshine sensor, airbag
13	5	Instrument panel
14	15	Parking sensors, digital air conditioning controls, hands-free kit
15	30	Locks
16	-	Spare
17	40	Rear screen/mirrors defrosting

Changing a fuse


PASSENGER COMPARTMENT FUSES

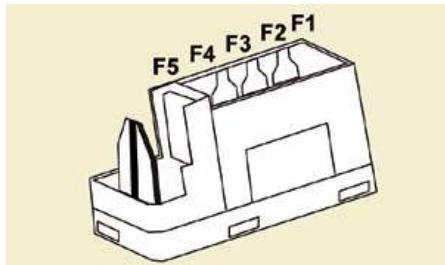

Fuses F	Amperes A	Allocation
1	-	Spare
2	20	Heated seats
3	-	Spare
4	15	Folding mirrors relay
5	15	Refrigeration equipment socket relay

TOWING/TOWBAR/ COACHBUILDERS/ PLATFORM CAB FUSES


The designations communicated are an indication only as this additional box relates to other information which depends on the modifier-coachbuilder for which the handbook cannot be used as a technical support.

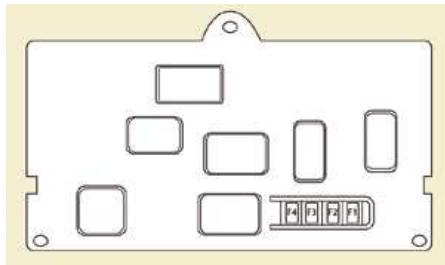

Fuses F	Amperes A	Allocation
1	15	Spare
2	15	Ignition, generator operating relay
3	15	Trailer 12 V supply
4	15	Permanent supply for the modifiers
5	40	Hazard warning lamps

FUSES UNDER THE BONNET

After opening the bonnet, unclip and tilt the box to gain access to the fuses.

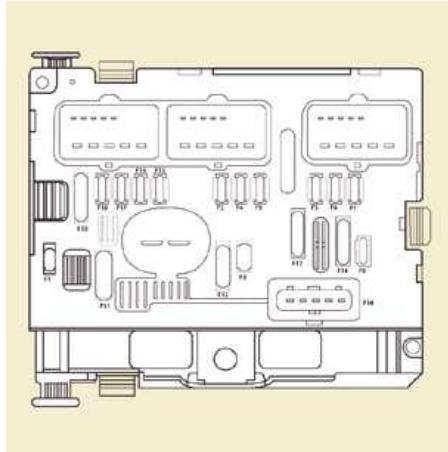

Fuses F	Amperes A	Allocation
1	20	Engine management
2	15	Horn
3	10	Front and rear screenwash pump
4	20	Headlamp wash pump
5	15	Engine components
6	10	Steering wheel angle sensor, ESP
7	10	Brake switch, clutch switch
8	25	Starter
9	10	Headlamp beam motor, parc management unit
10	30	Engine components
11	40	Spare
12	30	Wipers
13	40	Built-in systems interface
14	30	Pump
15	10	Right-hand main beam headlamp
16	10	Left-hand main beam headlamp
17	15	Right-hand dipped beam headlamp
18	15	Left-hand dipped beam headlamp

Changing a wiper blade



CHANGING A WINDSCREEN WIPER BLADE

Placing the wiper blades in the special position

- Less than a minute after switching off the ignition, press the wipers stalk downwards to position the wiper blades along the windscreen uprights (special position).


Changing a front wiper blade

- Lift the wiper arm.
- Unclip the blade and remove it.
- Fit the new blade.
- Push back the wiper arm.

To return the windscreen wipers to their normal position, switch on the ignition and operate the wipers stalk.

Changing the rear wiper blade

- Lift the wiper arm, then unclip the blade and remove it.
- Fit the new blade and push back the wiper arm.

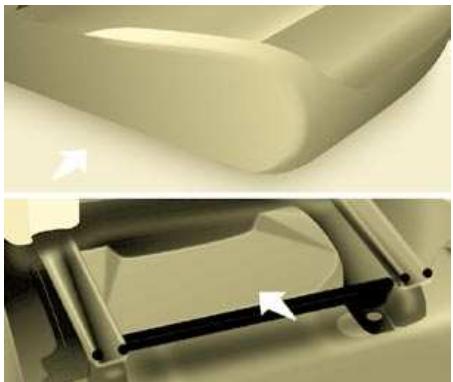


BEING TOWED

The towing eye is stored in the tool kit, located under the right-hand seat.


Without lifting (4 wheels on the road)

You should always use a towbar.

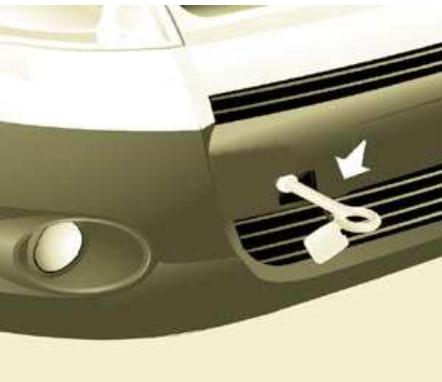

From the front

- Unclip the cover by pressing the bottom part.
- Screw in the removable towing eye until it locks.

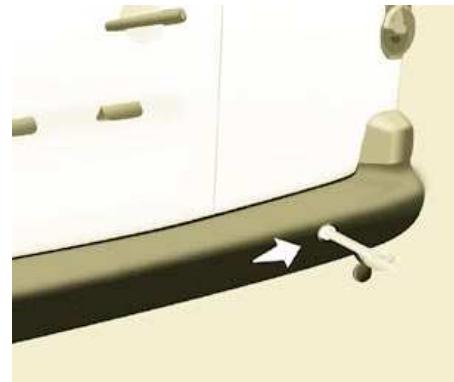

i When towing with the engine switched off, there is no braking or steering assistance.

From the rear

- Unclip the cover using a coin or the flat part of the towing eye,
- Screw in the removable towing eye until it locks.

Lifting (2 wheels on the road only)

It is preferable to raise the vehicle using professional lifting equipment.

Vehicles fitted with a manual gearbox (diesel version)

In the case of vehicles fitted with a manual gearbox, the gear lever must be in the neutral position, failure to observe this special condition may result in damage to certain braking components and the absence of braking assistance when the engine is started again.

Dimensions

128

		m ³
	L1	3,3
	L2	3,7



DIMENSIONS

The vehicle is available in 2 lengths (L1 and L2), refer to the tables:

		VAN (mm)		
		Short - L1		Long - L2
L	Overall length	625	850	750
H	Overall height	4 380		4 628
A	Wheelbase	1 805-1 834		2 728
B	Front overhang	925		
C	Rear overhang	727		975
D	Width over panels:	without mirrors	1 810	
		with mirrors	2 112	
E	Width of front tracks	1 505		
F	Width of rear tracks	1 554		
G	Useful length of rear floor	1 800		2 050
I	Useful length with front passenger seat folded	3 000		3 250

Dimensions



REAR DOORS (mm)			
	L1 - 625	L1 - 850	L2
M Maximum threshold with 195/65 R15 tyre	584	609	612
Hinged doors			Tailgate
Small		Large	
N Useful opening height (under panel)	1 148		1 313
O Width	495	543	1 582



SLIDING SIDE DOOR (mm)		
	L1	L2
P	Useful height	1 100
Q	Useful width	650
-	Height under raised tailgate	1 892

Dimensions



PLATFORM CAB (mm)		
L	Overall length	4 237
H	Overall height	1 821-1 822
A	Wheelbase	2 728
B	Front overhang	925
C	Rear overhang	584
D	Width over panels (without mirrors)	1 810
E	Width of front tracks	1 505
F	Width of rear tracks	1 554

WEIGHTS AND TOWED LOADS (KG)

General points

For more information, refer to your registration certificate.

In each country, it is imperative that the towed loads authorised by local legislation are complied with. To find out your vehicle's towing capacities and its gross train weight, consult a CITROËN dealer.

The speed of a towing vehicle must not exceed 50 mph (80 km/h) (comply with the legislation in force in your country).



The braked towed weight with load transfer can be increased on condition that the equivalent of this load is removed from the vehicle so that the GTW is not exceeded. Warning: towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres.

High ambient temperatures may result in a reduction in the performance of the vehicle in order to protect the engine; when the ambient temperature is higher than 37 °C, limit the towed weight.

The kerb weight is equal to the weight without load + driver (75 kg) + fuel tank filled to 90 %.

Identification markings

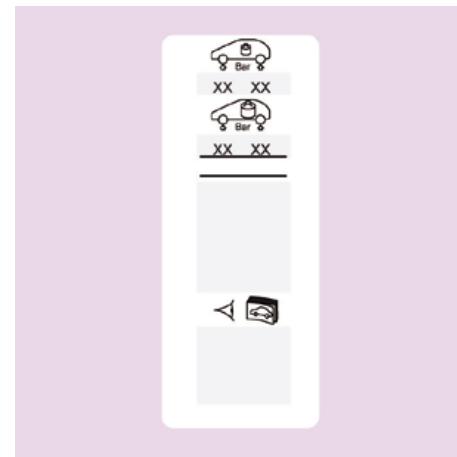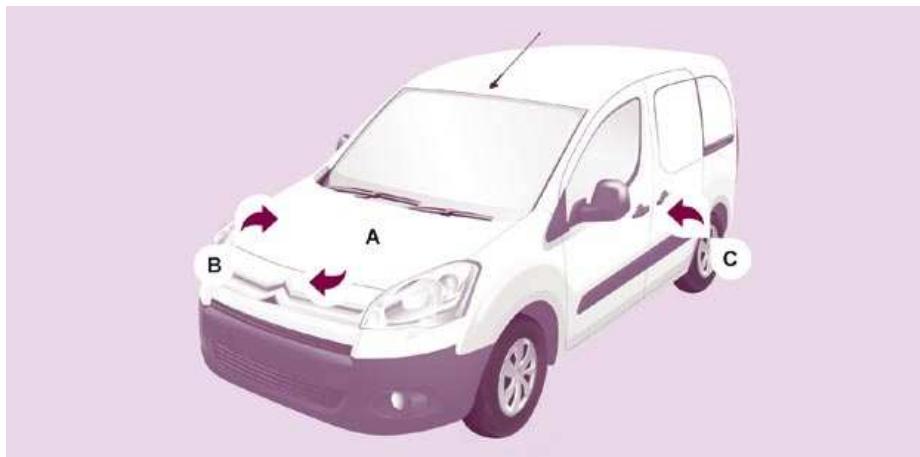

IDENTIFICATION FEATURES

A. Manufacturer's plate.

This is located on the engine mounting, on the right-hand side.

- 1 - VF Type serial number.
- 2 - Gross vehicle weight (GVW).
- 3 - Gross train weight (GTW).
- 4.1 - Maximum weight on front axle.
- 4.2 - Maximum weight on rear axle.

B. Serial number.

This is engraved on the front right wheelarch.

C. Tyres and paint colour reference.

The label **C**, on the front door gives:

- the wheel and tyre sizes,
- the brands of tyres approved by the manufacturer,
- the tyre pressures (the tyre pressure must be checked when the tyre is cold, at least once a month),
- the paint colour reference.

EMERGENCY OR ASSISTANCE CALL

EMERGENCY CALL



In an emergency, press this button for more than 2 seconds. Flashing of the green indicator lamp and a voice message confirm that the call has been made to the CITROËN Emergency team*.

Pressing this button again immediately cancels the request. The green indicator lamp goes off.

The green indicator lamp remains on (without flashing) when communication is established. It goes off at the end of communication.

This call is dealt with by the CITROËN Emergency team which receives locating information from the vehicle and can send a detailed alert to the appropriate emergency services. In countries in which the team is not operational, or when the locating service has been expressly declined, the call is dealt with directly by the emergency services (112) without the vehicle location.

! If an impact is detected by the airbag ECU, and independently of the deployment of any airbags, an emergency call is made automatically.

* This service is subject to conditions and availability. Consult a CITROËN dealer.

ASSISTANCE CALL



Press this button for more than 2 seconds to request assistance if the vehicle breaks down. A voice message confirms that the call has been made*.

Pressing this button again immediately cancels the request. The cancellation is confirmed by a voice message.

OPERATION OF THE SYSTEM




When the ignition is switched on, the green indicator lamp comes on for 3 seconds indicating that the system is operating correctly.



If the orange indicator lamp flashes: there is a system malfunction. If the orange indicator lamp is on continuously: the backup battery must be replaced.

In both cases, consult a CITROËN dealer.

If you purchased your vehicle outside the CITROËN dealer network, we invite you to have a dealer check the configuration of these services and, if desired, modified to suit your wishes. In a multi-lingual country, configuration is possible in the official national language of your choice.

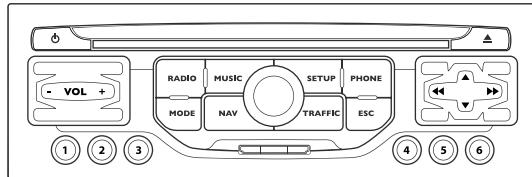

MYWAY

MULTIMEDIA AUDIO SYSTEM/BLUETOOTH TELEPHONE SATELLITE NAVIGATION SYSTEM FOR EUROPE BY SD CARD



The MyWay is protected in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact a CITROËN dealer for configuration of the system.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the MyWay switches off following the activation of the Energy Economy mode.




Certain functions described in this handbook will become available during the year.

CONTENTS

01	First steps	p.	9.4
02	Steering mounted controls	p.	9.5
03	General operation	p.	9.6
04	Navigation - Guidance	p.	9.9
05	Traffic information	p.	9.17
06	Radio	p.	9.19
07	Music media players	p.	9.20
08	Bluetooth telephone	p.	9.23
09	Configuration	p.	9.25
10	Trip computer	p.	9.26
11	Screen menu map	p.	9.27
Frequently asked questions p. 9.31			

01 FIRST STEPS


MyWay CONTROL PANEL

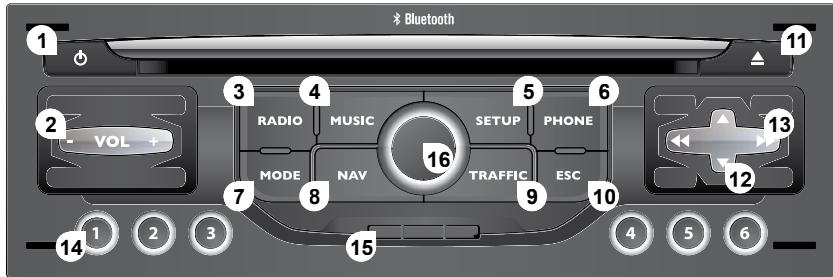

1. Engine not running
 - Short press: on/off.
 - Long press: CD pause, mute for the radio.Engine running
 - Short press: CD pause, mute for the radio.
 - Long press: reinitialisation of the system.
2. Volume adjustment (each source is independent, including also navigation messages and alerts)
3. Access to the "Radio" Menu. Display the list of stations.
4. Access to the "Music" Menu. Display the tracks.
- 3 - 4. Long press: access to the audio settings: front/rear fader and left/right balance, bass/treble, equaliser, loudness, automatic volume adjustment, initialise the settings.
5. Access to the "SETUP" menu.
Long press: access to the GPS coverage and the demonstration mode.
6. Access to the "Phone" Menu. Display the call list.
7. Access to the "MODE" menu.
Selection of the successive display of: Radio, Map, NAV (if navigation is in progress), Telephone (if a conversation is in progress), Trip computer.
Long press: display of a black screen (DARK).
8. Access to the "Navigation" Menu. Display the last destinations.
9. Access to the "Traffic" Menu. Display the current traffic alerts.
10. ESC: abandon the operation in progress.
11. CD eject.
12. Selection of the previous/next radio station from the list.
Selection of the previous/next MP3 folder.
Selection of the previous/next page of a list.
13. Selection of the previous/next radio station.
Selection of the previous/next CD or MP3 track.
Selection of the previous/next line of a list.
14. Buttons 1 to 6:
Selection of the stored radio station.
Long press: store the current radio station.
15. SD card reader (navigation SD card only).
16. Dial for selection of the screen display and according to the context of the menu.
Short press: contextual menu or confirmation.
Long press press: contextual menu specific to the list displayed.

02 STEERING MOUNTED CONTROLS

RADIO: selection of the next stored station.
Selection of the next entry in the address book.

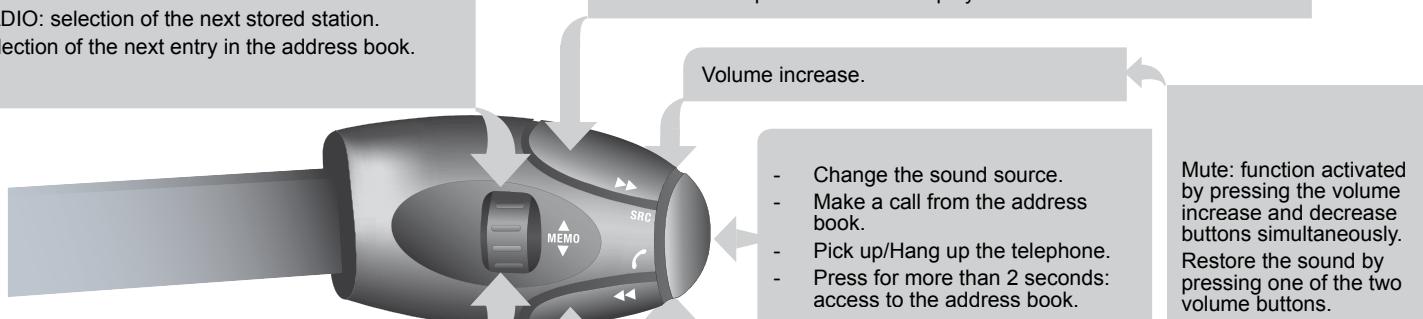

RADIO: selection of the previous stored station.
Selection of the previous entry in the address book.

RADIO: change to the previous radio station on the List.
Long press: automatic search for a lower frequency.

CD: selection of the previous track.
CD: continuous press: fast reverse.

03 GENERAL OPERATION

Press the MODE button several times in succession for access to the following menus:


RADIO/MUSIC MEDIA PLAYERS



TELEPHONE
(If a conversation is in progress)



TRIP COMPUTER

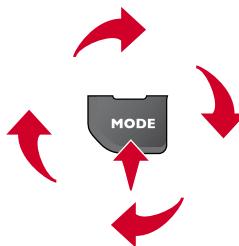

FULL SCREEN MAP



NAVIGATION
(If guidance is in progress)



SETUP:

system language*, date and time*, display, vehicle settings*, unit and system settings, "Demo mode".

* Available according to model.



TRAFFIC:

TMC information and messages.



For cleaning the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, with no additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section.

03 GENERAL OPERATION

DISPLAY ACCORDING TO THE CONTEXT



A press on the OK dial gives access to short-cut menus according to the display on the screen.

NAVIGATION (IF GUIDANCE IS IN PROGRESS):

1 Abort guidance

1 Repeat advice

1 Block road

1 Route info

2 Show destination

2 Trip info

3 Route type

3 Avoid

3 Satellites

2 Zoom/Scroll

1 Voice advice

1 Route options

TRIP COMPUTER:

1 Alert log

1 Status of functions

TELEPHONE:

1 End call

1 Hold call

1 Dial

1 DTMF-Tones

1 Private mode

1 Micro off

03 GENERAL OPERATION

DISPLAY ACCORDING TO THE CONTEXT

MUSIC MEDIA PLAYERS:

- 1 Traffic info (TA)
- 1 Play options
- 2 Normal order
- 2 Random track
- 2 Repeat folder
- 2 Scan
- 1 Select music

RADIO:

- 1 In FM mode
 - 2 Traffic info (TA)
 - 2 RDS
 - 2 Radiotext
 - 2 Regional prog.
 - 2 AM
- 1 In AM mode
 - 2 TA
 - 2 Refresh AM list
 - 2 FM

FULL SCREEN MAP:

- 1 Abort guidance/Resume guidance
- 1 Set destination
- 1 POIs nearby
- 1 Position info
- 1 Map settings
- 1 Zoom/Scroll


04 NAVIGATION - GUIDANCE

SELECTING A DESTINATION

1



Press the NAV button.

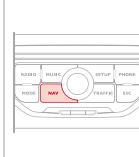


The list of the last 20 destinations appears under the Navigation Menu function.

2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

Navigation Menu

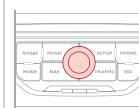


3



Select the "Destination input" function and press the dial to confirm.

Destination input

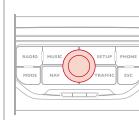

Insert the SD card in the front panel reader and leave it there to use the Navigation functions.

The navigation SD card data must not be modified.


Map data updates are available from CITROËN dealers.

4



Select the "Address input" function and press the dial to confirm.


Address input

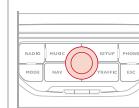

5




Once the country has been selected, turn the dial and select the town function. Press the dial to confirm.

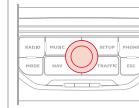

6



Select the letters of the town one by one confirming each time by pressing the dial.

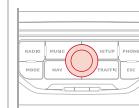


A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed via the LIST button on the virtual keypad.

04 NAVIGATION - GUIDANCE

7



Turn the dial and select OK.
Press the dial to confirm.

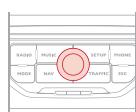


To speed up the process, the post code can be entered directly after selecting the "Postal code" function.
Use the virtual keypad to enter the letters and digits.

8



Repeat steps 5 to 7 for the "Street" and "House number" functions.

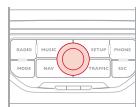

Select the "Save to address book" function to record the address entered in a directory file. Press the dial to confirm the selection.
MyWay allows up to 500 contact files to be recorded.



During guidance, pressing the end of the lighting stalk repeats the last guidance instruction.




To clear a destination; from steps 1 to 3, select "Choose from last destinations".
A long press on one of the destinations displays a list of actions from which you can select:
Delete entry
Delete list

9



Then select "Start route guidance" and the press the dial to confirm.

Start route guidance

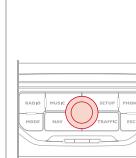

Select the route type:

"Fast route", "Short route" or "Optimized route" and press the dial to confirm.

It is also possible to select a destination via "Choose from address book" or "Choose from last destinations".

Choose from address book

Choose from last destinations



Map settings

You can zoom in/zoom out on the map using the dial.

It is possible to move the map or select its orientation via the short-cut menu of the FULL SCREEN MAP.

Press MODE until the map is displayed full screen. Press the dial then select "Map settings". Select "2.5D Map" or "2D Map" and in the latter case, select "North Up" or "Heading Up".

04 NAVIGATION - GUIDANCE

SETTING AND NAVIGATING TO MY "HOME ADDRESS"

i


To be set as the "Home address", an address must first be entered in the address book, for example from "Destination input"/"Address input" then "Save to address book".

1



Press the NAV button twice to display the Navigation Menu.

Navigation Menu

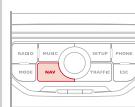

2



Select "Destination input" and confirm. Then select "Choose from address book" and confirm.

Destination input




3



Select "Address book" and confirm. Then select "Search entry (complete address book)" and confirm.

Address book

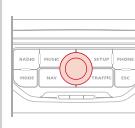


4



Select your home address and confirm. Then select "Edit entry" and confirm.

Edit entry

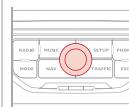

5



Select "Set as home address" and confirm to save.

Set as "Home address"



To start navigation towards "Home address", press NAV twice to display the Navigation Menu, select "Destination input" and confirm.

Then select "Navigate HOME" and confirm to start guidance.

04 NAVIGATION - GUIDANCE


ROUTE OPTIONS

The route selected by the MyWay system depends directly on the route options.
Changing these options may change the route completely.

1



Press the NAV button.

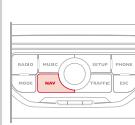


2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

Navigation Menu

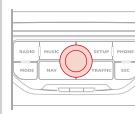


3



Select the "Route options" function and press the dial to confirm.

Route options

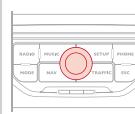


4



Select the "Route type" function and press the dial to confirm. This function allows you to change the route type.

Route type

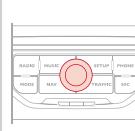


5



Select the "Route dynamics" function.

This function gives access to the "Traffic independent" or "Semi-dynamic" options.

Route dynamics

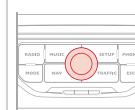


6



Select the "Avoidance criteria" function. This function provides access to the AVOID options (motorways, toll roads, ferries).

Avoidance criteria

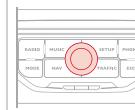


7



Turn the dial and select the "Recalculate" function to take into account the route options selected. Press the dial to confirm.

Recalculate

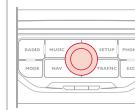

04 NAVIGATION - GUIDANCE

ADDING A STOPOVER

1



Press the NAV button.

2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

Navigation Menu

3



Select the "Stopovers" function and press the dial to confirm.

Stopovers

4



Select the "Add stopover" function (5 stopovers maximum) and press the dial to confirm.

Add stopover

5



Enter a new address, for example.

Address input

6



Once the new address has been entered, select OK and press the dial to confirm.

OK

7



Select "Recalculate" and press the dial to confirm.

Recalculate

8

9

10

Stopovers can be added to the route once the destination has been selected.



The stopover must be completed or deleted in order for the guidance to continue to the next destination. Otherwise, the MyWay will always return you to the previous stopover.


04 NAVIGATION - GUIDANCE

SEARCHING FOR POINTS OF INTEREST (POI)

The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).




Press the NAV button.

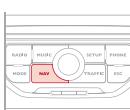


Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

Navigation Menu

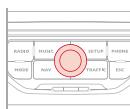

Select the "POI search" function and press the dial to confirm.

POI search

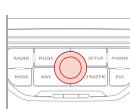


Select the "POI nearby" function to search for POIs around the vehicle.

POI nearby



Select the "POI near destination" function to search for POIs near the point of arrival of the route.

POI near destination

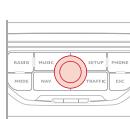

Select the "POI in city" function to search for POIs in the city required. Select the country then enter the name of the city using the virtual keypad.

POI in city



A list of cities present in the country selected can be accessed via the LIST button on the virtual keypad.






Select the "POI in country" function to search for POIs in the country required.

POI in country



Select the "POI near route" function to search for POIs near the route.

POI near route

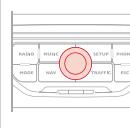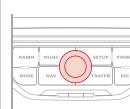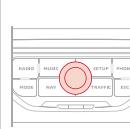

04 NAVIGATION - GUIDANCE



This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.

LIST OF PRINCIPAL POINTS OF INTEREST (POI)

 Service station

 LPG station

 Garage

 CITROËN

 Motor racing circuit

 Covered car park

 Car park

 Rest area

 Hotel

 Restaurant

 Refreshment area

 Picnic area

 Cafeteria



Airport



Railway station



Bus station



Port



Industrial estate



Supermarket



Bank



Vending machine



Tennis court



Swimming pool



Golf course



Winter sports resort



Theatre



Cinema



Camp site



Theme parks




Hospital




Pharmacy



Police station

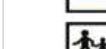

School

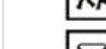

Post office




Museum




Tourist information



Automatic speed camera*

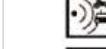

Red light camera*

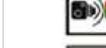

Risk area*

* According to availability in the country.


04 NAVIGATION - GUIDANCE

NAVIGATION SETTINGS

1



Press the NAV button.

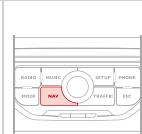


2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

Navigation Menu

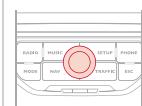


3



Select the "Settings" function and press the dial to confirm.

Settings

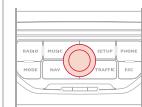


4



Select the "Navi volume" function and turn the dial to set the volume of each voice synthesiser (traffic information, alert messages...).

Navi volume

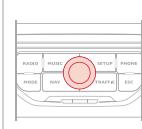

To activate or deactivate vocal guidance, with guidance active and the map displayed on the screen, press the dial and then select or deselect "Voice advice".

Voice advice




The adjustment of the volume for the Risk Areas POIs is used only during the transmission of an alert.

5



Select the "POI categories on Map" function to select the POIs to be displayed on the map by default.

POI categories on Map

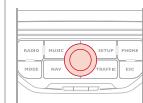


6



Select "Set parameters for risk areas" for access to the "Display on map", "Visual alert" and "Sound alert" functions.

Set parameters for risk areas

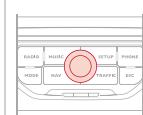

**UPDATING THE RISK AREAS POIs
(Speed camera information)**

Contact a CITROËN dealer for the procedure to follow to obtain the RISK AREA POIs.

This requires an SDHC (High Capacity) compatible reader.


05 TRAFFIC INFORMATION

CONFIGURE THE FILTERING AND DISPLAY OF TMC MESSAGES

1



Press the TRAFFIC button.

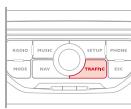


2

3



Press the TRAFFIC button again or select the Traffic Menu function and press the dial to confirm.

Traffic Menu

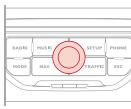

4



Select the filter of your choice:

Messages on route


All warning messages

Only warnings on route

All messages

The messages appear on the map and on the list.

To exit, press ESC.

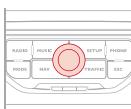

TMC (Traffic Message Channel) messages contain information on traffic and weather conditions, received in real time and transmitted to the driver in the form of audible announcements and symbols on the navigation map.


The navigation system can then suggest an alternative route to avoid a traffic problem.

5




Select the "Geo. Filter" function and press the dial to confirm.

Geo. Filter

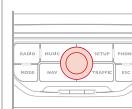

Then select the radius of the filter in miles (km) required in accordance with the route, press the dial to confirm.

When all of the messages on the route are selected, the addition of a geographical filter is recommended (within a radius of 3 miles (5 km) for example) to reduce the number of messages displayed on the map. The geographical filter follows the movement of the vehicle.

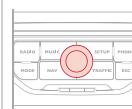

!

The filters are independent and their results are cumulative. We recommend a filter on the route and a filter around the vehicle of:

- 2 miles (3 km) or 3 miles (5 km) for a region with heavy traffic,
- 6 miles (10 km) for a region with normal traffic,
- 30 miles (50 km) for long journeys (motorway).

05 TRAFFIC INFORMATION

PRINCIPAL TMC SYMBOLS

1 Black and blue triangle: general information, for example:



2 Red and yellow triangle: traffic information, for example:



RECEIVING TA MESSAGES



- the station transmits TA messages.


- the station does not transmit TA messages.

- TA messages are not activated.

The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.




With the current audio source displayed on the screen, press the dial.

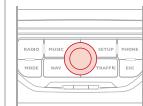

The shortcut menu for the source appears and gives access to:



Select Traffic Announcements (TA) and press the dial to confirm and go to the associated settings.

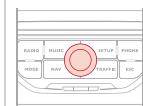


06 RADIO

SELECTING A STATION


1




Press the RADIO button to display the list of stations received locally sorted in alphabetical order. Select the station required by turning the dial and press to confirm.

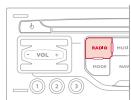

While listening to the radio, press one of the buttons to select the previous or next station on the list.

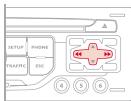

A long press of one of the buttons starts the automatic search for a station with a lower or higher frequency.

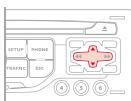

Press one of the buttons on the numeric keypad for more than 2 seconds to store the current station. Press the button on the numeric keypad to recall the stored radio station.


The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS following mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a failure of the audio equipment.

RDS - REGIONAL MODE

1




When the current radio station is displayed on the screen, press the dial.

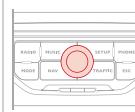

2


The radio source short-cuts menu appears and provides access to the following short-cuts:

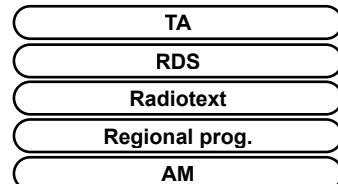

3



Select the function required and press the dial to confirm to gain access to the corresponding settings.

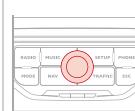

RDS, if displayed, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

07 MUSIC MEDIA PLAYERS

CD, MP3/WMA CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1, 2 & 2.5 Audio Layer 3 and the WMA format, an abbreviation of Windows Media Audio and the property of Microsoft, are audio compression standards which permit the recording of several tens of music files on a single disc.



The MyWay will only play audio files with the extension ".mp3" with a speed of between 8 Kbps and 320 Kbps and the extension ".wma" with a speed of between 5 Kbps and 384 Kbps.

It also supports the VBR (Variable Bit Rate) mode.
No other type of file (.mp4, .m3u...) can be played.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



It is advisable to restrict file names to 20 characters, without using special characters (e.g. " " ? ; ü) to avoid any play or display problems.


07 MUSIC MEDIA PLAYERS

SELECTING/PLAYING MUSIC CD, MP3/WMA CD

1



Press the MUSIC button.

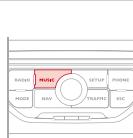

!


The list of tracks or MP3/WMA files appears under Music Menu.

2



Press the MUSIC button again or select the Music Menu function and press the dial to confirm.

Music Menu

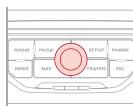


3



Select the "Select music" function and press the dial to confirm.


Select music

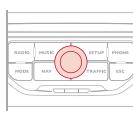

4




Select the music source required: CD, MP3/WMA CD. Press the dial to confirm. Play begins.

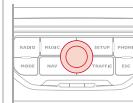

5




Press the up or down button to select the next/previous folder.

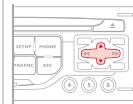

6



Press one of the buttons to select a music track.
Press and hold one of the buttons for fast forward or rewind play.

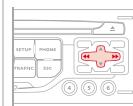

!


The playing and displaying of an MP3/WMA compilation may depend on the recording programme and/or the settings used. We recommend the ISO 9660 file standard.

07 MUSIC MEDIA PLAYERS

USING THE EXTERNAL INPUT (AUX) AUDIO JACK-RCA CABLE NOT SUPPLIED

1


Connect the portable device (MP3/
WMA player...) to the audio sockets
(white and red, RCA type) using a
JACK/RCA audio cable.

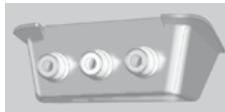

2



Press the MUSIC button then
press it again or select the Music
Menu function and press the dial to
confirm.

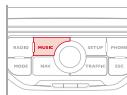


Music Menu

3



Select the "External device" function
and press the dial to activate it.

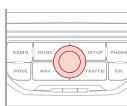


External device

4



Select the AUX music source and
press the dial to confirm. Play begins
automatically.

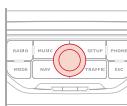

!

The display and management of the controls is on the portable
device.

08 BLUETOOTH TELEPHONE



CONNECTING A TELEPHONE



For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the MyWay must be carried out with the vehicle stationary. The ignition must be on.

1


Activate the telephone's Bluetooth function. The last telephone connected is reconnected automatically.



2



Press the PHONE button.

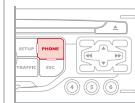

The list of telephones connected previously (4 maximum) appears on the multifunction screen. Select the telephone required for a new connection.


* The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you. A list of mobile telephones with the best level of compatibility is available from the dealer network.

3



For a first connection, select "Search phone" and press the dial to confirm. Then select the name of the telephone.

Search phone

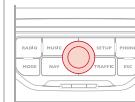

4

Enter the authentication code on the telephone. The code to be entered is displayed on the screen.




i

Once the telephone has been connected, MyWay can synchronise the address book and the call list. This synchronisation may take a few minutes*.

1



To change the telephone connected, press the PHONE button, then select Phone Menu and press the dial to confirm.

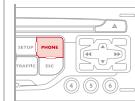


2



Select "Connect phone". Select the telephone and press to confirm.

Connect phone

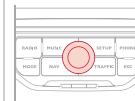

08 BLUETOOTH TELEPHONE

RECEIVING A CALL


1

An incoming call is announced by a ring and a superimposed display on the multifunction screen.

2

Select the "Yes" tab to accept or "No" to refuse and confirm by pressing the dial.


Yes **No**

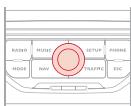


3

To hang up, press the PHONE button or press the dial and select "End call" then confirm by pressing the dial.

End call

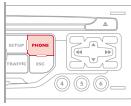

Press the end of the steering mounted control to accept the call or end the call in progress.

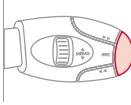


MAKING A CALL

1



Press the PHONE button.

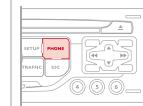

The list of the last 20 calls made and received in the vehicle appears under Phone Menu. You can select a number and press the dial to make the call.

2



Select the Phone Menu function and press the dial to confirm.

Phone Menu

Select "Dial number", then dial the telephone number using the virtual keypad.

Dial number



It is also possible to select a number from the address book. You can select "Dial from address book". The MyWay can record up to 4 000 entries.

Press the end of the steering mounted control for more than two seconds to gain access to the address book.



To delete a number, press the PHONE button then press and hold on a call number to display a list of actions including:
Delete entry
Delete list

09 CONFIGURATION


SETTING THE DATE AND TIME



! These settings must be entered again if the battery has been disconnected.




1 Press the SETUP button.

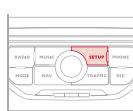


2 Select the "Date & Time" function and press the dial to confirm.

Date & Time

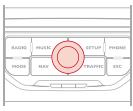


3 Select the "Set date & time" function and press the dial to confirm.

Set date & time

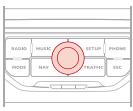

4 Adjust the settings one by one using the direction arrows and confirm by means of the dial.

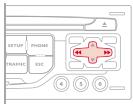


The SETUP function gives access to the following options: System language, Date & Time, Display (Brightness, Colour, Map colour), Vehicle, Units, System.

5




Select the "Date format" function and press the dial to confirm.

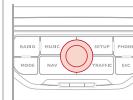

6



Confirm the format required using the dial.
Select the "Time format" function and press the dial to confirm.

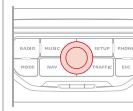

Confirm the format required using the dial.
Pressing the SETUP button for more than 2 seconds gives access to:

Description of the unit

GPS coverage

Demo mode


10 TRIP COMPUTER

TRIP COMPUTER

1

Press the MODE button several times in succession until the trip computer is displayed.

- The "vehicle" tab:
The range, the current fuel consumption and the distance remaining.
- The "1" (trip 1) tab with:
The average speed, the average fuel consumption and the distance travelled calculated over route "1".
- The "2" (trip 2) tab with the same functions for a second route.

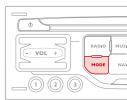

Each press of the button at the end of the wiper stalk displays the different trip computer information in succession, according to the screen.

A FEW DEFINITIONS

i

Range: displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average fuel consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km). If, whilst driving, dashes are displayed continuously in place of the digits, contact a CITROËN dealer.

Current fuel consumption: only calculated and displayed above 20 mph (30 km/h).

Average fuel consumption: this is the average fuel consumption since the last trip computer zero reset.

Distance travelled: calculated since the last trip computer zero reset.

Distance remaining to the destination: calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

Average speed: this is the average speed calculated since the last trip computer zero reset (ignition on).

11 SCREEN MENU MAP



MAIN FUNCTION

OPTION A

option A1

option A2

OPTION B...

Within 6 miles (10 km)

Within 30 miles (50 km)

Within 60 miles (100 km)

Vocal

Loudness

Speed dependent volume

Reset sound settings

"Music" Menu

Select music

Sound settings

Balance/Fader

Bass/Treble

Equalizer

Linear

Classic

Jazz

Rock/Pop

Techno

"Radio" Menu

Waveband

FM

AM

Manual tune

Sound settings

Balance/Fader

Bass/Treble

Equalizer

Linear



"Traffic" Menu

Messages on route

Only warnings on route

All warning messages

All messages

Geo. Filter

Within 2 miles (3 km)

Within 3 miles (5 km)

4	Classic
4	Jazz
4	Rock/Pop
4	Techno
4	Vocal
3	Loudness
3	Speed dependent volume
3	Reset sound settings

4	Start route guidance
4	Postal code
4	Save to address book
4	Intersection
4	City district
4	Geo position
4	Map
3	Navigate HOME
3	Choose from address book
3	Choose from last destinations
3	TMC station information
2	Stopovers
3	Add stopover
4	Address input
4	Navigate HOME
4	Choose from address book
4	Choose from last destinations

3	Rearrange route
3	Replace stopover
3	Delete stopover
3	Recalculate
4	Fast route
4	Short route
4	Optimized route
2	POI search
3	POI nearby
3	POI near destination
3	POI in city
3	POI in country
3	POI near route
2	Route options
3	Route type
4	Fast route
4	Short route

1		"Navigation" Menu
2		Abort guidance/Resume guidance
2		Destination input
2		Enter new address
3		Country
4		City
4		Street
4		House number

- 4 Optimized route
- 3 Route dynamics
- 4 Traffic independent
- 4 Semi-dynamic
- 3 **Avoidance criteria**
 - 4 Avoid motorways
 - 4 Avoid toll roads
 - 4 Avoid ferries
- 3 **Recalculate**
- 2 **Settings**
- 3 **Navi volume**
- 3 **POI categories on Map**
- 3 **Set parameters for risk areas**
 - 4 Display on map
 - 4 Visual alert
 - 4 Sound alert

 **"Phone" Menu**

- 1 Dial number
- 2 Dial from address book
- 2 Call lists
- 2 Connect phone
- 3 Search phone
- 3 Phones connected
- 4 Disconnect phone
- 4 Rename phone
- 4 Delete pairing
- 4 Delete all pairings
- 4 Show details
- 2 Settings
- 3 Select ring tone
- 3 Phone/Ring tone volume
- 3 Enter mailbox number

 **"SETUP" menu**

- 1 System language*
 - 2 Deutsch
 - 3 English
 - 3 Español
 - 3 Français
 - 3 Italiano
 - 3 Nederlands
 - 3 Polski
 - 3 Portuguese
- 2 Date & Time*
 - 3 Set date & time
 - 3 Date format
 - 3 Time format

* Available according to model.

Display

Brightness

Colour

Pop titanium

Toffee

Blue steel

Technogrey

Dark blue

Map colour

Day mode for map

Night mode for map

Auto. Day/Night for map

Vehicle*

Vehicle information

Alert log

Status of functions

Units

Temperature

Celsius

Fahrenheit

Metric/Imperial

Kilometres (Consumption: l/100)

Kilometres (Consumption: km/l)

Miles (Consumption: MPG)

System

Factory reset

Software version

Automatic scrolling

* Available according to model.


FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the Linear musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none">- Check that the CD is inserted in the player the right way up.- Check the condition of the CD: the CD cannot be played if it is too damaged.- Check the content in the case of a recorded CD: consult the advice in the Audio section.- The audio equipment's CD player does not play DVDs.- Because of their quality level, certain writeable CDs will not be played by the audio system.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a CITROËN dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
With the engine off, the audio equipment switches off after a few minutes of use.	When the engine is switched off, the audio equipment operating time depends on the battery charge. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.

QUESTION	ANSWER	SOLUTION
TA is selected. However, certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (displaying of the traffic information symbols on the map).
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
I receive a speed camera alert for a camera which is not on my route.	The system announces all speed cameras located in a conical zone forward of the vehicle. It may detect speed cameras on nearby or parallel roads.	Zoom the map to view the exact position of the speed camera.
The audible speed camera alert is not working.	Audible alerts are not active.	Activate audible alerts in Navigation Menu, Settings, Set parameters for risk areas.
	The alert volume level is set to minimum.	Increase the speed camera alert volume.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 3 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 3 satellites (long press on the SETUP button, then select GPS coverage).
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the conditions of reception of the GPS signal.
The route is not calculated successfully.	The exclusion criteria may conflict with the current location (exclusion of toll roads on a motorway with tolls).	Check the exclusion criteria.

QUESTION	ANSWER	SOLUTION
There is a long waiting time after inserting a CD.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take a few seconds.	This phenomenon is normal.
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be deactivated or the equipment may not be visible.	<ul style="list-style-type: none"> - Check that your telephone's Bluetooth function is activated. - Check that your telephone is visible.
A telephone connected by Bluetooth is inaudible.	The volume level depends on both the system and the telephone.	Increase the MyWay volume setting, possibly to maximum, and increase the telephone volume level if necessary.

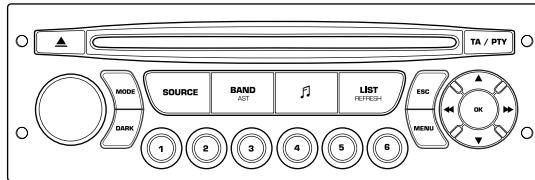

AUDIO SYSTEM

AUDIO SYSTEM/BLUETOOTH



Your Audio system is coded in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact your CITROËN dealer for configuration of the system.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the audio equipment may switch off after a few minutes.

CONTENTS

01	First steps	p.	9.36
02	Steering mounted controls	p.	9.37
03	Main menu	p.	9.38
04	Audio	p.	9.39
05	USB Box	p.	9.42
06	Bluetooth functions	p.	9.45
07	Configuration	p.	9.47
08	Trip computer	p.	9.48
09	Screen menu map	p.	9.49
Frequently asked questions			
		p.	9.54


01 FIRST STEPS



1. On/Off and volume adjustment.
2. CD eject.
3. Selection of the display on the screen from the following modes:
Audio (AUDIO), Trip Computer (TRIP) and Telephone (TEL) functions.
4. Selection of source: radio, audio CD/MP3 CD, USB, Jack connection, Streaming.
5. Selection of FM1, FM2, FMast and AM wavebands.
6. Setting audio options: front/rear fader, left/right balance, loudness, sound ambience.
7. Display the list of local stations, of the tracks on the CD or of the MP3 folders.
8. Abandon current operation.
9. TA (Traffic Announcement) function on/off.
Long press: access to the PTY (Types of radio programme) mode.
10. Confirmation.
11. Automatic search for a lower/higher frequency.
Selection of previous/next CD, MP3 or USB track.
12. Selection of a lower/higher radio frequency.
Selection of the previous/next MP3 folder.
Selection of the previous/next USB device folder/genre/artist/playlist.
13. Display the main menu.
14. Buttons 1 to 6:
Selection of a stored radio station.
Long press: store a station.
15. The DARK button changes the display on the screen to improve driving comfort at night.
1st press: lighting the upper band only.
2nd press: display of a black screen.
3rd press: return to the standard display.

02 STEERING MOUNTED CONTROLS

RADIO: selection of the previous stored station.
USB: selection of the previous genre/artist/folder from the classification list.
Selection of the previous item on a menu.

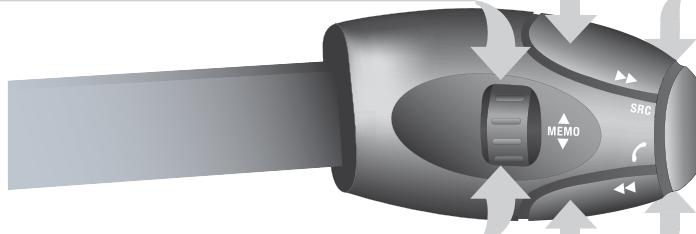

RADIO: automatic search for a higher frequency.
CD/MP3/USB: selection of the next track.
CD/USB: continuous press: fast forwards play.
Selection of the previous item.

RADIO: selection of the next stored station.
USB: selection of the next genre/artist/folder from the classification list.
Selection of the next item on a menu.

RADIO: automatic search for a lower frequency.
CD/MP3/USB: selection of the previous track.
CD/USB: continuous press: fast reverse.
Selection of the next item.

Mute: press the volume increase and decrease buttons simultaneously.
The sound is restored by pressing one of the two volume buttons.

03 MAIN MENU

> MONOCHROME SCREEN C

AUDIO FUNCTIONS: radio, CD, USB, options.

TELEPHONE: Bluetooth hands-free, pairing, management of a call.



TRIP COMPUTER: entering of distances, alerts, status of functions.

PERSONALISATION-CONFIGURATION: vehicle parameters, display, languages.

> MONOCHROME SCREEN A



For a detailed global view of the menus available, refer to the "Screen menu map" section.

04 AUDIO



RADIO

SELECTING A STATION

- 1  Press the SOURCE button several times in succession and select the radio.
- 2  Press the BAND AST button to select a waveband: FM1, FM2, FMast, AM.
- 3  Briefly press one of the buttons to carry out an automatic search of the radio stations.
- 4  Press one of the buttons to carry out a manual search of the radio stations.
-   Press the LIST REFRESH button to display the list of stations received locally (30 stations maximum). To update this list, press for more than two seconds.

The external environment (hills, buildings, tunnels, basement car parks, ...) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio system.

RDS

- 1  Press the MENU button.
- 2  Select AUDIO FUNCTIONS then press OK.
- 3  Select the FM WAVEBAND PREFERENCES function then press OK.
- 4  Select ACTIVATE RDS then press OK. RDS appears on the screen.
-  The RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

04 AUDIO


RECEIVING TA MESSAGES

! The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1



Press the TA button to activate or deactivate traffic messages.

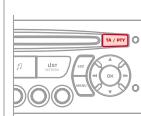

CD PLAYING A CD



Insert circular compact discs only.


Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.

Without pressing the EJECT button, insert a CD in the player, play begins automatically.

1




To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.

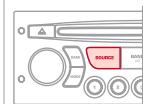

2



Press one of the buttons to select a track on the CD.

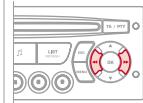


!

Press the LIST REFRESH button to display the list of tracks on the CD.

3



Press and hold one of the buttons for fast forward or backward.

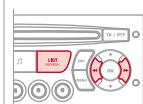

04 AUDIO

MP3 CD PLAYING AN MP3 COMPILATION



Insert an MP3 compilation in the player.

The audio equipment searches for all of the music tracks, which may take anything between a few seconds and several tens of seconds, before play begins.




On a single disc, the CD player can read up to 255 MP3 files spread over 8 folder levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played.


While the CD is being played, the folder structure is not followed. All of the files are displayed on a single level.



To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.

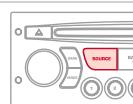


Press one of the buttons to select a track on the CD.

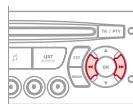

Press the LIST REFRESH button to display the list of directories of the MP3 compilation.



Press and hold one of the buttons for fast forward or backward play.

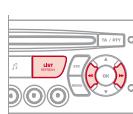

MP3 CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1.2 & 2.5 Audio Layer 3, is an audio compression standard which permits the recording of several tens of music files on a single disc.



In order to be able to play a recorded CDR or CDRW, when recording, the ISO 9660 level 1.2 or Joliet file format is recommended.

If the disc is recorded in another format, it may not be played correctly.

It is recommended that the same recording format is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet format is recommended.



The audio system will only play files with the extension ".mp3" with a sampling rate of 22.05 KHz or 44.1 KHz. No other type of file (.wma, .mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ü) to avoid any playing or displaying problems.



Empty CDs are not recognised and may damage the system.

05 USB BOX

USING THE USB BOX

1

This unit consists of a USB port and an auxiliary Jack socket*. The audio files are transmitted from portable equipment such as a digital player or a USB memory stick to your Audio system to be listened to via the vehicle's speakers.



2

USB memory stick (1.1, 1.2 and 2.0) or iPod® of generation 5 or later:

- USB memory sticks should be formatted FAT or FAT 32 (NTFS not supported),
- the iPod® lead is essential,
- navigation through the file database is by means of the steering mounted controls,
- the iPod® software should be regularly updated for the best connection.



3

Other iPod® players of earlier generations and players using the MTP protocol*:

- play via Jack-Jack lead only (not supplied),
- navigation through the file database is from the portable device.



The list of compatible equipment and the compression rates supported are available from CITROËN dealers.

CONNECTING A USB MEMORY STICK

1



Connect the memory stick to the port, directly or using a lead. If the audio equipment is switched on, the USB source is detected as soon as it is connected. Play begins automatically after a delay which depends on the capacity of the USB memory stick.

The file formats recognised are .mp3 (mpeg1 layer 3 only), .wma (standard 9 only, 128 kbits/sec compression), .wav and .ogg.

The playlists types accepted are m3u, .pls, .wpl.

!

The system puts together playlists (temporary memory) created over a period which depends on the capacity of the USB device. The other sources are available during this time.

The playlists are updated each time the ignition is switched off or each time a USB memory stick is connected.

When connecting for the first time, the classification suggested is by folder. When you reconnect, the classification selected previously is retained.

* According to vehicle.

05 USB BOX


USING THE USB PORT

2

Press and hold LIST to display the different classifications. Select by Folder/Artist/Genre/Playlist, press OK to select the classification required, then press OK again to confirm.




- by Folder: all folders containing audio files recognised on the peripheral device, classified in alphabetical order without following the flow chart.
- by Artist: all of the artist names defined in the ID3 Tags, classified in alphabetical order.
- by Genre: all of the genres defined in the ID3 Tags.
- by Playlist: in accordance with the playlists recorded on the USB device.

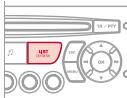


3

Press LIST briefly to display the previously selected classification. Navigate through the list using the left/right and up/down buttons. Confirm the selection by pressing OK.

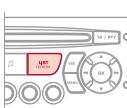


4

Press one of these buttons to gain access to the previous/next track on the classification list currently being played. Press and hold one of the buttons for fast forward or backward play.

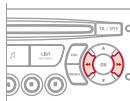

5

Press one of these buttons to gain access to the previous/next Genre, Folder, Artist or Playlist on the classification list currently being played.

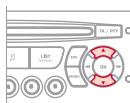

CONNECTING AN iPod® VIA THE USB PORT

1

The lists available are Artist, Genre and Playlist (as defined on the iPod®). Selection and Navigation are described in steps 1 to 5 above.

!

Do not connect a hard disk or USB devices other than audio equipment to the USB port. This could damage your installation.

05 USB BOX

USING THE AUXILIARY SOCKET (AUX) JACK SOCKET OR RCA SOCKET (according to vehicle)




The auxiliary socket, JACK or RCA, permits the connection of a portable device (MP3 player...).



Do not connect a device to both the USB port and the auxiliary JACK socket simultaneously.

1


Connect the portable device (MP3 player...) to the auxiliary JACK socket or to the audio sockets (white and red, RCA type) using a suitable cable (not supplied).

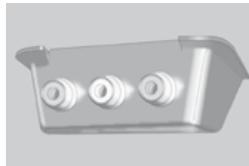

2



Press the SOURCE button several times in succession and select AUX.

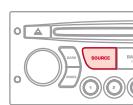

ADJUSTING THE VOLUME OF THE AUXILIARY SOURCE

1


First adjust the volume of your portable device.



2



Then adjust the volume of your audio system.

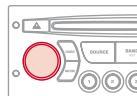

The display and control is via the portable device.



06 BLUETOOTH FUNCTIONS



BLUETOOTH TELEPHONE

SCREEN C
(AVAILABILITY DEPENDS ON MODEL AND VERSION)

PAIRING A TELEPHONE



For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio equipment must be carried out with the vehicle stationary and the ignition on.


1

Activate the telephone's Bluetooth function.



2


Press the MENU button.

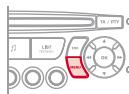

3

In the menu, select:

- Bluetooth telephone function - Audio
- Bluetooth configuration
- Perform a Bluetooth search

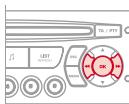

4

A window is displayed with "Searching...".

5

The first 4 telephones recognised are displayed in this window.

The services offered depend on the network, the SIM card and the compatibility of the Bluetooth equipment used.

Consult your telephone's manual and your operator to find out which services are available to you. A list of mobile telephones which offer the best range of services is available from the network. Consult a CITROËN dealer.



The TELEPHONE menu permits access to the following functions in particular: Directory*, Call list, Pairing management.

* If your telephone is fully compatible.

6

Select the telephone to be connected from the list. Only one telephone can be connected at a time.



7

A virtual keypad is displayed on the screen: enter a code with at least 4 digits. Confirm by pressing OK.

Confirm by pressing OK.



8

A message is displayed on the screen of the telephone chosen: to accept the pairing, enter the same code on the telephone, then confirm by pressing OK.

If pairing fails, the number of attempts is not limited.

9

"Pairing of Name_telephone successful" appears on the screen.

10

The automatic connection authorised is only active after the telephone has been configured.

The directory and the call list can be accessed after the synchronisation period.



The pairing can also be initiated from the telephone.

06 BLUETOOTH FUNCTIONS




RECEIVING A CALL

1 An incoming call is announced by a ring and a superimposed display on the multifunction screen.



Select the YES tab on the display using the buttons and confirm by pressing OK.

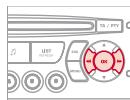

2 Press the steering mounted control OK to accept the call.



MAKING A CALL

1 From the Bluetooth telephone function Audio menu, select Manage the telephone call then Call, Call list or Directory.



2 Press the end of the steering mounted control for more than two seconds to gain access to your directory.

Or

To dial a number, use your telephone's keypad, with the vehicle stationary.



BLUETOOTH AUDIO STREAMING

! Wireless transmission of the telephone's music files via the audio equipment. The telephone must be able to manage the appropriate bluetooth profiles (Profiles A2DP/AVRCP).

1 Initiate the pairing between the telephone and the vehicle. This pairing can be initiated from the vehicle's telephone function menu or via the telephone's keypad. See steps 1 to 10 on the previous pages. During the pairing phase, the vehicle must be stationary with the key in the ignition.



2 Select the telephone to be connected from the telephone function menu.
The audio system connects to a newly paired telephone automatically.



3 Activate the streaming source by pressing the SOURCE button*. The tracks to be played can be controlled as usual via the buttons on the Radio control panel and the steering mounted controls**. The contextual information can be displayed on the screen.



* In certain cases, playing of the Audio files must be initiated from the keypad.

** If the telephone supports the function.

07 CONFIGURATION




SETTING THE DATE AND TIME

SCREEN C

1




Press the MENU button.

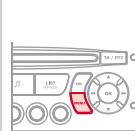

2




Using the arrows, select PERSONALISATION CONFIGURATION.

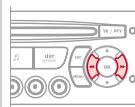

3




Press to confirm the selection.

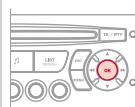

4




Using the arrows, select DISPLAY CONFIGURATION.

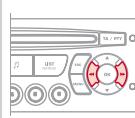

5




Press to confirm the selection.

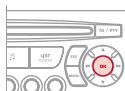

6




Using the arrows, select ADJUST DATE AND TIME.

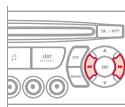

7




Press to confirm the selection.

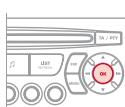

8



Adjust the settings one by one confirming by pressing the OK button. Next select the OK tab on the screen then confirm.

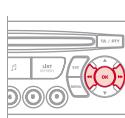

08 TRIP COMPUTER



Each press of the button, located at the end of the wiper stalk, displays the different trip computer information in succession, depending on the screen.



- the "vehicle" tab with:
 - the range, the current fuel consumption and the distance remaining to the destination,
- the "1" tab (trip 1) with:
 - the average speed, the average consumption and the distance travelled calculated over trip "1",
- the "2" tab (trip 2) with the same information for a second trip.



Zero reset

When the required trip is displayed, press the control for more than two seconds.

A FEW DEFINITIONS

Range: displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average fuel consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a CITROËN dealer.

Current fuel consumption: only calculated and displayed above 20 mph (30 km/h).

Average fuel consumption: this is the average fuel consumption since the last trip computer zero reset.

Distance travelled: calculated since the last trip computer zero reset.

Distance remaining to the destination: calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

Average speed: this is the average speed calculated since the last trip computer zero reset (ignition on).

09 SCREEN MENU MAP

MONOCHROME A



RADIO-CD

- 1 RDS SEARCH
- 2 REG MODE
- 2 CD REPEAT
- 2 RANDOM PLAY



MAIN FUNCTION

- 1 CHOICE A
- 2 Choice A1
- 3 Choice A2
- 2 CHOICE B...

OPTIONS

- 1 DIAGNOSTICS
- 2 CONSULT
- 3 ABANDON

VEHICLE CONFIG*

- 1 REV WIPE ACT
- 2 GUIDE LAMPS

UNITS

- 1 TEMPERATURE: °CELSIUS/°FAHRENHEIT
- 2 FUEL CONSUMPTION: KM/L - L/100 - MPG

* The parameters vary according to vehicle.

09 SCREEN MENU MAP



DISPLAY ADJUST

- 1 YEAR
- 2 MONTH
- 2 DATE
- 2 HOUR
- 2 MINUTES
- 2 12 H/24 H MODE

LANGUAGE

- 1 FRANCAIS
- 2 ITALIANO
- 2 NEDERLANDS
- 2 PORTUGUES
- 2 PORTUGUES-BRASIL
- 2 DEUTSCH
- 2 ENGLISH
- 2 ESPANOL

09 SCREEN MENU MAP



MONOCHROME C



RADIO

- 1 activate/deactivate RDS
- 1 activate/deactivate REG mode
- 1 activate/deactivate radiotext



Press the OK dial for access to short-cut menus according to the display on the screen:

CD/MP3 CD

- 1 activate/deactivate Intro
- 1 activate/deactivate track repeat (the entire current CD for CD, the entire current folder for MP3 CD)
- 1 activate/deactivate random play (the entire current CD for CD, the entire current folder for MP3 CD)

USB

- 1 activate/deactivate track repeat (of the current folder/artist/genre/playlist)
- 1 activate/deactivate random play (of the current folder/artist/genre/playlist)

09 SCREEN MENU MAP



MONOCHROME C

Pressing the MENU button displays:



AUDIO FUNCTIONS

- 1
- 2 **FM BAND PREFERENCES**
- 3
- 4 **alternative frequencies (RDS)**
- 4 **activate/deactivate**
- 3 **regional mode (REG)**
- 4 **activate/deactivate**
- 3 **radio-text information (RDTXT)**
- 4 **activate/deactivate**

PLAY MODES

- 2
- 3 **album repeat (RPT)**
- 4 **activate/deactivate**
- 3 **track random play (RDM)**
- 4 **activate/deactivate**



TRIP COMPUTER

- 1
- 2 **ENTER DISTANCE TO DESTINATION**
- 3 **Distance: x miles**
- 2 **ALERT LOG**
- 3 **Diagnostics**
- 2 **STATUS OF THE FUNCTIONS***
- 3 **Functions activated or deactivated**

* The parameters vary according to vehicle.



PERSONALISATION-CONFIGURATION

- 1
- 2 **DEFINE THE VEHICLE PARAMETERS***
- 2 **DISPLAY CONFIGURATION**
- 3 **video brightness adjustment**
- 4 **normal video**
- 4 **inverse video**
- 4 **brightness (- +) adjustment**
- 3 **date and time adjustment**
- 3 **day/month/year adjustment**
- 4 **hour/minute adjustment**
- 4 **choice of 12 h/24 h mode**
- 3 **choice of units**
- 4 **l/100 km - mpg - km/l**
- 4 **°Celsius/°Fahrenheit**
- 2 **CHOICE OF LANGUAGE**

09 SCREEN MENU MAP



BLUETOOTH TELEPHONE

1 Bluetooth configuration

2 Connect/Disconnect a device

3 Telephone function

3 Audio Streaming function

4 Consult the paired device

4 Delete a paired device

4 Perform a Bluetooth search

2 Call

3 Calls list

4 Directory

2 Manage the telephone call

3 Terminate the current call

3 Activate private mode

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the "Audio" section. - The audio equipment's CD player does not play DVDs. - Due to their quality level, certain writeable CDs will not be played by the audio system.
The message "USB peripheral error" is displayed on the screen. The Bluetooth connection is cut.	<p>The battery of the peripheral may not be sufficiently charged.</p> <p>The USB memory stick is not recognised. The memory stick may be corrupt.</p>	<p>Recharge the battery of the peripheral device.</p> <p>Reformat the memory stick.</p>
The CD player sound is poor.	<p>The CD used is scratched or of poor quality.</p> <p>The audio equipment settings (bass, treble, ambiences) are unsuitable.</p>	<p>Insert good quality CDs and store them in suitable conditions.</p> <p>Set the treble or bass level to 0, without selecting an ambience.</p>

QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station is not part of the regional traffic information network.	Tune to a radio station which broadcasts traffic information.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a CITROËN dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
With the engine off, the audio equipment switches off after a few minutes of use.	When the engine is switched off, the audio equipment operating time depends on the battery charge. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio equipment switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.