

Owner's Manual

2025 A5

2025 A5 Owner's Manual

Owner's Manual
English North America 07.2024
8W7012721BL



8W7012721BL

www.audi.com

Audi Vorsprung durch Technik

These instructions may not be reproduced or translated in whole or in part without written consent of AUDI AG. All rights reserved by AUDI AG.

© 2024 AUDI AG

Foreword

Thank you for choosing an Audi – we value your trust in us.

Your new Audi will allow you to experience the best in groundbreaking technology and premium quality equipment that a vehicle has to offer. Audi recommends that you read your Owner's Manual thoroughly so that you quickly become acquainted with your Audi and make use of all of its features.

In addition to explaining how the different features work, there are many useful tips and information concerning your safety, how to care for your vehicle, and how to maintain your vehicle's value. Audi also gives you useful tips and information on how to drive your vehicle more efficiently and in an environmentally-friendly manner.

Audi hopes you enjoy driving your vehicle and wishes you safe and pleasant motoring.



WARNING

Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

About this Owner's Manual	5	Power windows	49
Summary	6	Panoramic glass roof	50
Quick reference information	6	Valet parking	51
Online information	6	Garage door opener	51
FAQ	7	Lights and vision	54
Cockpit	9	Exterior lighting	54
Overview of indicator lights	10	Interior lighting	58
Display and operation	15	Vision	60
Instrument cluster	15	Windshield wipers	61
Instrument cluster overview	15	Digital compass	64
Operating	16	Sitting correctly and safely	65
Adjusting the display	16	Maintaining the correct seating position	65
Coolant temperature display	17	Front seats	65
Tachometer	17	Steering wheel	69
Odometer	18	Head restraints	70
Outside temperature display	18	Safety belts	71
Engine oil temperature indicator	18	Memory function	75
Boost indicator	19	Airbag system	75
Shift light indicator	19	Child safety seats	80
Sport displays	19	Storage and convenience	86
Vehicle functions	19	Power sources	86
Touch display	21	Cup holders	86
General touch display operation	21	Storage and compartments	87
Multi Media Interface	23	Luggage compartment	87
Head-up display	29	Roof rack	91
Description	29	Warm and cold	92
Voice recognition system	30	Climate control system	92
General information	30	Steering wheel heating	95
Description	30	Fluids in the A/C system	95
External voice operation	31	Driving	97
Global functions	32	Starting the vehicle	97
Additional function buttons	32	When driving	98
Starting and driving	33	Drive system	104
Personalization	33	Start/Stop system	105
Users	33	Brakes	106
Opening and closing	36	Electromechanical parking brake	108
Central locking	36	Special driving situations	110
Keys	40	Driving dynamics	112
Luggage compartment lid	43	Audi drive select	112
Child safety lock	48	Suspension	113
		RS sport suspension pro (adjustable coilover suspension)	113

Steering	120	Infotainment system	175
All wheel drive (quattro)	121	Phone	175
Electronic Stabilization Control (ESC)	122	Introduction	175
Trailer towing	124	Setup	175
Driving with a trailer	124	Using the Audi phone box	177
Trailer hitch	125	Using the phone	179
Assist systems	127	Settings	183
Assist systems	127	Messages	184
General information	127	Troubleshooting	185
Surrounding area detection	128	Audi connect	187
Driver assistance menu	130	General information	187
Parking aid menu	130	Audi connect Infotainment	188
Driving information	131	Connecting to Wi-Fi	188
Speed warning	131	Using a Wi-Fi hotspot	189
Camera-based traffic sign recognition	131	Audi connect Infotainment services	189
Traffic light information	133	Functions on demand	190
Driver alert warning	134	Audi connect apps	190
Distraction warning	136	Audi connect vehicle control services	191
Lap timer	136	Settings	191
Acceleration measurement	137	Troubleshooting	192
Integrated Toll Module	138	Emergency call	194
Driver assistance	140	Overview	194
Cruise control system	140	Emergency call	194
Efficiency assist	141	Online roadside assistance	195
Audi adaptive cruise control	143	Navigation	197
Traffic jam assist	151	Opening navigation	197
Distance warning	153	myAudi navigation	197
Audi active lane assist/lane departure warning	154	Entering a destination	198
Audi pre sense	156	Stopping route guidance	201
Side assist	160	Map	201
Exit warning	161	Predictive route guidance	203
Parking and maneuvering	163	Alternative routes	204
Introduction	163	Additional functions	204
Parking aid plus	163	Satellite map	205
Rearview camera and peripheral cameras	165	Map update	205
Rear cross-traffic assist	169	Traffic information	206
Assisted parking	170	Settings	207
Park assist	172	Radio	209
		General information	209
		Radio functions	210
		Online radio	213
		Options and settings	214
		Troubleshooting	215

Table of contents

Media	216	Do It Yourself	285
General information	216	Emergency assistance	285
Bluetooth audio player	216	General information	285
Online media	217	Equipment	285
Multimedia connections	217	Tire mobility kit	285
Media playback	219	Changing a tire	288
Options and settings	222	Space-saving spare tire	291
Supported media and file formats	222	Jump starting	291
Troubleshooting	224	Towing	293
Interior entertainment	225	Fuses and bulbs	296
Themes	225	Fuses	296
Holoride interface	225	Bulbs	300
Smartphone interface	227	Customer information	301
Setup	227	Data privacy	301
Troubleshooting	228	Privacy notice	301
Additional settings	230	Image recording	301
System settings	230	Data storage	301
Software update	231	Transmitted information	302
Connected devices	231	Accessories and technical	
Legal information	232	changes	305
Maintenance and Care	234	Warranty	305
Checking and Filling	234	Audi Literature Shop	305
Fuel	234	Driving in other countries	305
Refueling	235	Maintenance, repairs, and technical	
Emissions control system	237	modifications	305
Engine compartment	237	Accessories and parts	307
Engine oil	241	Technical data	308
Cooling system	244	Identification data	308
Brake fluid	247	Vehicle data	308
Electrical system	248	Other information	310
Battery	249	Online Car Care	310
Windshield washer system	252	Brands and licenses	310
Service interval display	253	Disposal instructions	310
Wheels	254	Declaration of compliance for	
Tires and rims	254	telecommunications equipment and	
Tire pressure monitoring system	273	electronic systems	310
Tire pressure monitoring system	274	Reporting Safety Defects	311
Care and cleaning	278	Index	313
General information	278		
Car washes	278		
Cleaning and care information	279		
Taking your vehicle out of service	284		

This manual contains important information, safety precautions, and tips for using your vehicle.

READ THIS OWNER'S MANUAL AND KEEP IT!

Read this Owner's Manual carefully before using your vehicle. Keep this manual and any other applicable documents in your vehicle at all times. This is especially important if you loan your vehicle to others or sell it.

Updates to the Owner's Manual: Please note that it has always been Audi's¹⁾ policy to continuously improve its products. Audi reserves the right to make changes in design and specifications, and to make additions or improvements in its products without incurring any obligation to install them on products previously manufactured. Changes by means of software updates may be possible, depending on the vehicle and market. Therefore, it is also possible that the Owner's Manual may be updated. This will be done in the form of supplements. Supplements may be provided to you in both printed and digital form. Notes in the supplement will indicate if a digital or printed supplement applies to you.

Vehicle-specific features: Standard equipment, equipment for specific markets, and special equipment that is available for the entire model line is described. In addition, it is possible that some of the equipment and functions will only be available at a later time or they may only be available in certain markets. Therefore, the descriptions also include items that are not available in your specific vehicle. The illustrations in this manual are a guide. Some of the details in your vehicle may differ from the illustrations. Text, illustrations, and specifications are based on the most current information available at the time of printing, and shall not constitute a basis for liability claims.

Identifying if information is applicable: Some sections do not apply to all vehicles. When this is the case, the beginning of the section indicates the applicability, for example "Applies to:

vehicles with speed warning system". In addition, optional or vehicle-specific equipment and functions may be indicated with an asterisk "*" or a corresponding comment (such as "depending on vehicle equipment").

Symbols and standards for descriptions in the Owner's Manual:

- * Optional or vehicle-specific equipment
- The section continues on the next page.

⇒ *page 75* Cross reference to other descriptions or topics.

⇒ ⚠ Cross reference to a "WARNING".

Directions, such as "left", "right", "front", and "rear", are based on the vehicle's direction of travel.



WARNING

Text with this symbol contains information about safety and how to reduce the risk of serious personal injury or death.



Note

Text with this symbol contains information about reducing the risk of damage to your vehicle.



For the sake of the environment

Text with this symbol contains information on protecting the environment.



Tips

Text with this symbol contains additional useful information.

¹⁾ "Audi" refers to AUDI AG, the respective importer in a country, as well as joint ventures.

Quick reference information

Online information

myAudi

You can access the digital form of your Owner's Manual on your mobile device using myAudi.

Requirement: you must have a registered myAudi account. Your vehicle must be registered in your myAudi account.

- ▶ Visit my.audi.com, or
- ▶ Start the myAudi app on your mobile device.

Online Owner's Manual

Applies to: vehicles with Online Owner's Manual

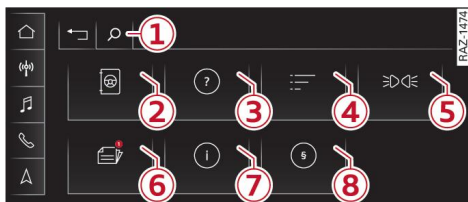


Fig. 1 Center display: Online Owner's Manual

The Online Owner's Manual can be accessed directly from the Owner's Manual in the Infotainment system. Each time you access the Owner's Manual, it will automatically display in the language that is set for your MMI.

Accessing the Online Owner's Manual

Requirement: the vehicle must be stationary.

- ▶ Applies to: MMI: Select on the home screen: **HELP > Owner's manual**.

Functions and operation

① Free text search

Using the free text search, you can search for terms in the entire contents of the Owner's Manual. The search results will be grouped based on their topic.

- Press the button and enter the desired search term.

② Chapter

You can display the contents of the Owner's Manual sorted by topic.

③ FAQ

In order to get to know your vehicle, you can find answers to frequently asked questions in the FAQ section.

④ Index

Using the index, you can search for a specific term and quickly access relevant information.

⑤ Indicator lights

An overview of all available indicator lights and their meanings will be displayed.

- Press on any indicator light to display its meaning.

⑥ Supplements

Supplements will be created if changes to the Owner's Manual are necessary. The **Supplements** menu will only appear if supplements are available. A notification icon displays the number of supplements that are available. This icon will disappear once the **Supplements** menu has been opened.

⑦ Info

An overview of general information about the Owner's Manual will be displayed. You can also change the language in which the Online Owner's Manual content is displayed. The language will be reset when you exit the Online Owner's Manual.

Change language

- Applies to: MMI: Select on the home screen: **HELP > Owner's manual > Info > Change language**.

⑧ Legal notes

An overview of all legal notes pertaining to the Online Owner's Manual will be displayed.

WARNING

To reduce the risk of an accident, only use the Online Owner's Manual when the vehicle is parked safely.

Tips

The content is the information that was available at the time of the editorial deadline for

this manual. There may be changes over the service life of the vehicle.

FAQ

Before driving

- How do I adjust the seat? ⇒ *page 65*.
- How do I adjust the steering wheel?
⇒ *page 69*.
- How does the transmission selector work?
⇒ *page 99*.
- What is a transmission position and a driving program? ⇒ *page 99*.
- How does the electromechanical parking brake work? ⇒ *page 108*.
- How do I adjust the exterior mirrors?
⇒ *page 60*.
- How do I refuel my vehicle? ⇒ *page 235*.
- How do I operate windshield wipers with the rain sensor? ⇒ *page 61*.
- Where is the washer fluid reservoir located?
⇒ *page 240*.
- How do I store the tire pressures? ⇒ *page 274* or ⇒ *page 276*.

Vehicle breakdowns and emergencies

- Where can I find the correct tire pressure?
⇒ *page 265*.
- How do I jump start my vehicle? ⇒ *page 291*.
- What type of airbags are equipped in my vehicle? ⇒ *page 75*.
- Where are the towing eyes located on the vehicle? ⇒ *page 293*.

Advanced functions

- How is the distance to the vehicle traveling ahead of me automatically maintained?
⇒ *page 143, Audi adaptive cruise control*.
- How does the Audi adaptive cruise control respond automatically to speed limits and road conditions? ⇒ *page 147*.
- How can I be warned when leaving a lane?
⇒ *page 154*.
- How do I use the parking aid? ⇒ *page 163*.
- How can I more safely drive through intersections and exits with poor visibility? ⇒ *page 167*.

- How can I have the high beam headlights controlled automatically? ⇒ *page 55*.
- How can I monitor the blind spot more easily when changing lanes? ⇒ *page 160, Side assist*.
- How can I adjust the vehicle handling based on the driving situation and my preferences?
⇒ *page 112, Audi drive select*.
- How do the swerve assist and turn assist help me? ⇒ *page 158* or ⇒ *page 159*.

Display and operation

- How do I turn on the touch display?
⇒ *page 23*.
- How do I operate the touch display?
⇒ *page 21*.
- How do I control the volume? ⇒ *page 32*.
- How do I navigate through the menus?
⇒ *page 24*.
- How do I write letters and numbers by hand?
⇒ *page 27*.
- How do I operate functions such as the navigation by voice? ⇒ *page 30*.
- Which functions can I operate with the buttons on the steering wheel? ⇒ *page 16* or ⇒ *page 32*.
- How do I display information on the windshield? ⇒ *page 29, Head-up display*.
- How can I adjust the brightness of the instrument and display lighting? ⇒ *page 59*.

Infotainment system

- How can I connect my mobile device to use the hands-free system? ⇒ *page 175*.
- How can I switch between connected devices?
⇒ *page 231*.
- How can I access information online?
⇒ *page 187, Audi connect*.
- How can I use the Wi-Fi hotspot? ⇒ *page 189*.
- What are the different ways I can enter a navigation destination? ⇒ *page 198*.
- How can I operate the map functions?
⇒ *page 201*.
- How can I display traffic information?
⇒ *page 206*.
- How can I listen to the radio? ⇒ *page 209*.
- How can I play media? ⇒ *page 219*.

- How can I play music from my mobile device on the Infotainment system? ⇒ *page 216, Bluetooth audio player.*

Tips and tricks

- How can I unlock my vehicle from the inside for other persons to enter? ⇒ *page 38.*
- How can I open all the windows from the outside using the remote control key? ⇒ *page 49, Convenience opening and closing.*
- How can I adjust the open position of the luggage compartment lid? ⇒ *page 45.*
- How can I deactivate the front passenger's airbag? ⇒ *page 78.*
- How do I secure a child safety seat? ⇒ *page 80.*
- What should I consider when driving through a car wash? ⇒ *page 278.*
- How can I drive in a way that is efficient and environmentally-friendly? ⇒ *page 104.*
- How can I request the next service appointment? ⇒ *page 253.*

Cockpit

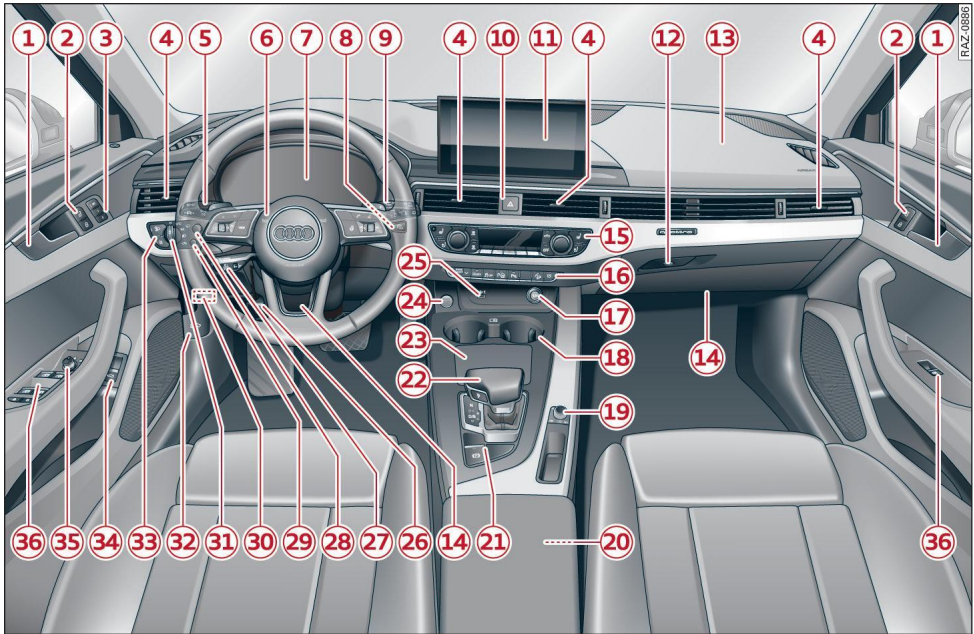


Fig. 2 Cockpit

① Door handle		⑬ Front passenger's airbag	75
② Central locking switch	38	⑭ Knee airbag	75
③ Memory function buttons	75	⑮ Climate control system	92
④ Vent		⑯ Depending on equipment, buttons for:	
⑤ Lever for:		– drive select	112
– Turn signals and high beams	55	– Start/Stop system	105
– High beam assistant	55	– Electronic Stabilization Control (ESC)	122
– Audi active lane assist	154	– Park assist	172
– Traffic jam assist	151	– Parking system	163
⑥ Multifunction steering wheel with:		– Center display	23
– Horn		⑰ Socket	86
– Driver's airbag	75	⑱ Cup holder	86
– Operating buttons	16, 32	⑲ MMI control knob	23, 32
– Shift paddles	101	⑳ Center armrest with storage compartment. Depending on vehicle equipment, it may have:	
⑦ Instrument cluster	15	– USB ports with charging function	218
⑧ Reset trip odometer	18	– Audi phone box	177 ►
⑨ Windshield washer system lever	61		
⑩ Emergency flashers	57		
⑪ Center display	23		
⑫ Lockable glove compartment with:			
– Valet Parking function	51		

– Starting the engine when there is a malfunction	97
21 Electromechanical parking brake button	108
22 Selector (automatic transmission)	99
23 Storage compartment	87
24 START ENGINE STOP button	97
25 USB ports with charging function	218
26 Steering wheel adjustment	70
27 Lever for:	
– Cruise control system	140
– Audi adaptive cruise control	143
28 Button for turning the head-up display on and off, adjusting the height	29
29 Instrument illumination	59
30 Connection port for the On Board Diagnostic System (OBD)	301
31 Headlight control switch	54
32 Hood release	239
33 All-weather lights button	54
34 Luggage compartment lid button	43
35 Exterior mirror adjustment	60
36 Buttons for:	
– Power windows	49
– Child safety lock	48

 **Tips**

Some of the equipment listed here is only installed in certain models or is available as an option.

Overview of indicator lights

Description

The indicator lights in the instrument cluster blink or turn on. They indicate functions or malfunctions. Some warning and indicator lights turn on when you turn on the ignition and must turn off when the drive system is turned on or while driving.

With some indicator lights, messages may appear and warning signals may sound. The indicator lights and messages may be covered by other

displays. To show them again, select the second tab for messages with the multifunction steering wheel ⇒ *page 16*.

Some indicator lights in the display can be shown in several colors.

Central indicator light

If the  or  indicator light turns on, check the message in the instrument cluster.

Overview

The following indicator lights may be available, depending on the vehicle equipment:

Red indicator lights	
	Central indicator light ⇒ <i>page 10</i> , Instrument cluster ⇒ <i>page 15</i>
	Cooling system ⇒ <i>page 17</i> , ⇒ <i>page 244</i> , ⇒ <i>page 244</i> , ⇒ <i>page 246</i>
	Safety belt ⇒ <i>page 74</i>
	Transmission ⇒ <i>page 103</i>
	Drive system ⇒ <i>page 105</i> , Electrical system ⇒ <i>page 248</i>
BRAKE	Brake system ⇒ <i>page 108</i> , ⇒ <i>page 248</i> , Electromechanical parking brake ⇒ <i>page 109</i>
	Brake system ⇒ <i>page 108</i> , ⇒ <i>page 248</i> , Electromechanical parking brake ⇒ <i>page 109</i>
PARK	Electromechanical parking brake ⇒ <i>page 108</i>

	Electromechanical parking brake ⇒ page 108
	Steering ⇒ page 120
	Steering lock ⇒ page 120
	Adaptive cruise control ⇒ page 144, Brake intervention request ⇒ page 146, Safe start monitor ⇒ page 150
	Traffic jam assist ⇒ page 152
	Steering intervention request (Traffic jam assist) ⇒ page 152
	Distance warning ⇒ page 153
	Active lane assist ⇒ page 154
	Pre sense ⇒ page 157, ⇒ page 157
	Hood ⇒ page 239
	Engine oil pressure ⇒ page 241
	Engine oil level (MIN) ⇒ page 241
	Electrical system ⇒ page 248

Yellow indicator lights

	Central indicator light ⇒ page 10
	Engine speed limitation ⇒ page 18
	Engine speed limitation ⇒ page 18, Drive system ⇒ page 105
	Central locking ⇒ page 38

	Battery in remote control key ⇒ page 42
	Bulb failure indicator ⇒ page 58
	Adaptive light ⇒ page 58
	Headlight range control system ⇒ page 58
	Light/rain sensor ⇒ page 58, ⇒ page 63
	Windshield wipers ⇒ page 63
	Safety systems ⇒ page 76
	Engine start system ⇒ page 98
	Convenience key ⇒ page 98
	Transmission ⇒ page 103
	Brake system ⇒ page 108
	Electromechanical parking brake ⇒ page 109
	Suspension control ⇒ page 113
	Steering ⇒ page 120
	Steering lock ⇒ page 120
	All wheel drive ⇒ page 121, Sport differential ⇒ page 121
	Electronic Stabilization Control (ESC) ⇒ page 122
	Electronic Stabilization Control (ESC) ⇒ page 123

	Electronic Stabilization Control (ESC) ⇒ page 123
ABS	Anti-lock Braking System (ABS) ⇒ page 123
	Anti-lock Braking System (ABS) ⇒ page 123
	Driver alert warning ⇒ page 135
	Distraction warning ⇒ page 136
	Adaptive cruise control ⇒ page 151, Traffic jam assist ⇒ page 152
	Steering intervention request (Traffic jam assist) ⇒ page 152, Steering intervention request (active lane assist) ⇒ page 154
	Distance warning ⇒ page 153
	Active lane assist ⇒ page 154, ⇒ page 156
	Pre sense ⇒ page 156, ⇒ page 159, ⇒ page 159
	Side assist, exit warning ⇒ page 161
	Parking aid ⇒ page 165
	Rear cross-traffic assist ⇒ page 169
	Park assist ⇒ page 174
	Emergency call function ⇒ page 195
	Tank system ⇒ page 235

	Malfunction Indicator Lamp (MIL) ⇒ page 235, ⇒ page 237
	Engine oil level (MIN) ⇒ page 241
	Engine oil level (MAX) ⇒ page 241
	Engine oil sensor ⇒ page 241
	Engine warm-up request ⇒ page 241
	Electrical system ⇒ page 248
	Washer fluid level ⇒ page 252
	Tire pressure ⇒ page 274, ⇒ page 276
TPMS	Tire pressure ⇒ page 274, ⇒ page 277

Other indicator lights

	Low beam headlights ⇒ page 54
	Parking lights ⇒ page 54
	Turn signals ⇒ page 55, ⇒ page 57
	Turn signals ⇒ page 55, ⇒ page 57
	Start/Stop system ⇒ page 106
CRUISE	Cruise control system ⇒ page 140
	Cruise control system ⇒ page 140
	Efficiency assist ⇒ page 142, ⇒ page 142
	Efficiency assist ⇒ page 142

	Efficiency assist ⇒ page 142
	Efficiency assist ⇒ page 142
	Efficiency assist ⇒ page 142
	Efficiency assist ⇒ page 142
	Efficiency assist ⇒ page 142
	Adaptive cruise control ⇒ page 144
	Adaptive cruise control ⇒ page 144
	Adaptive cruise control ⇒ page 144
	Adaptive cruise control ⇒ page 144
	Adaptive cruise control ⇒ page 150
	Traffic jam assist ⇒ page 152
	Traffic jam assist ⇒ page 152
	Active lane assist ⇒ page 154
	High beam headlights ⇒ page 55, ⇒ page 55
	High beam assistant ⇒ page 55, ⇒ page 56
	Laser lights ⇒ page 56
	Child safety lock ⇒ page 48
	Child safety lock ⇒ page 48
	Child safety lock ⇒ page 48
	Valet Parking activated ⇒ page 51

	High beam assistant ⇒ page 55, ⇒ page 56, ⇒ page 58
	Convenience key ⇒ page 98
	Transmission ⇒ page 103
	Start/Stop system ⇒ page 106
	Electromechanical parking brake ⇒ page 109
	Electromechanical parking brake ⇒ page 109
	Brake ⇒ page 109
	Steering ⇒ page 120
	Speed warning system ⇒ page 131
	Speed warning system ⇒ page 131
	Camera-based traffic sign recognition ⇒ page 132
	Driver alert warning ⇒ page 135
	Distraction warning ⇒ page 136
	Cruise control system ⇒ page 141
	Cruise control system ⇒ page 141
	Efficiency assist ⇒ page 142, Predictive control ⇒ page 147, Adaptive cruise control ⇒ page 151, Traffic jam assist ⇒ page 152
	Adaptive cruise control ⇒ page 148

	Adaptive cruise control ⇒ <i>page 151</i> , Traffic jam assist ⇒ <i>page 152</i> , ⇒ <i>page 152</i>
	Distance warning ⇒ <i>page 153</i>
	Active lane assist ⇒ <i>page 154</i> , ⇒ <i>page 156</i>
	Side assist, exit warning ⇒ <i>page 161</i>
	Parking aid ⇒ <i>page 165</i>
	Rear cross-traffic assist ⇒ <i>page 169</i>
	Park assist ⇒ <i>page 174</i>
	Park assist ⇒ <i>page 174</i>

Instrument cluster

Instrument cluster overview



Fig. 3 Instrument cluster overview (Audi virtual cockpit)

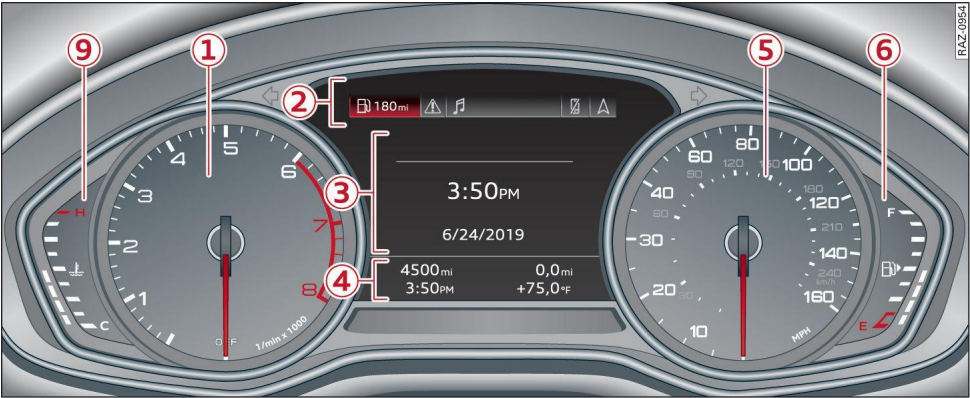


Fig. 4 Instrument cluster overview (analog)

Depending on the vehicle equipment, the following items may appear in the instrument cluster:

- ① Left dial
 - Tachometer 17
- ② Tab area 16
- ③ Central area 16
- ④ Status bar (one or two lines)
- ⑤ Right dial
 - Convenience display
 - Speedometer
- ⑥ Display
 - Fuel level 235

- ⑦ Right additional display with speedometer
- ⑧ Left additional display with:
 - Transmission selector position . . . 99
 - Audi drive select mode 112
- ⑨ Display
 - Engine coolant temperature . . . 17



WARNING

Applies to: vehicles with Audi virtual cockpit

If there is a serious system malfunction, the display may turn off. The indicator light may also turn on. Stop the vehicle safely. See ▶

an authorized Audi dealer or authorized Audi Service Facility for assistance.

 **Tips**

- The following pages primarily show illustrations of the Audi virtual cockpit*. The display or location of the items that are shown may vary on the different versions of the instrument cluster.
- You can select the units used for temperature, speed, and other measurements
⇒ [page 230](#).
- Speeds are displayed in mph (miles per hour) or km/h (kilometers per hour).
- Certain instrument cluster content can also be displayed in the head-up display*
⇒ [page 29](#).

Operating

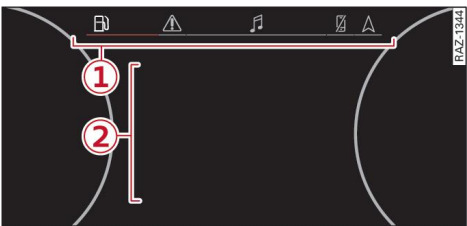


Fig. 5 Driver information system display

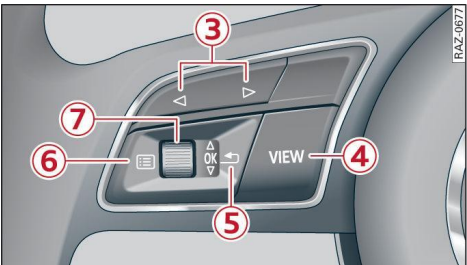


Fig. 6 Left side of multifunction steering wheel

Information is organized within various tabs ① in the instrument cluster. The tab contents are displayed in the central area ②.

Requirement: the ignition must be turned on.

Selecting a tab

- Press the  button ③ repeatedly until the desired tab is selected.

Returning to functions at higher levels

- Press the  button ⑤.

Opening and closing the menu

- Press the  button ⑥.

Selecting and confirming a function

Requirement: a menu or list must be displayed.

- To select a function, turn the left thumbwheel ⑦ to the desired function.
- To confirm a selection, press the left thumbwheel ⑦.

Switching the view


- Press the VIEW button ④ ⇒ [page 16](#).

Overview of the tabs

Depending on vehicle equipment, the following tabs may be available:

Symbol	Description
	Vehicle functions
	Messages (this is only displayed if at least one indicator light/message is being displayed)
	Multimedia
	Phone
	Navigation

Adjusting the display

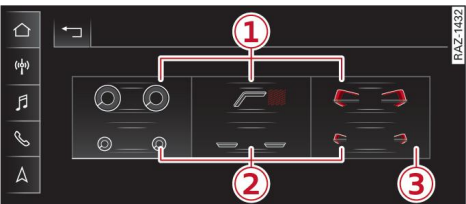

Applies to: Audi virtual cockpit

Fig. 7 Center display: adjusting the display

Switching the view

Applies to: Audi virtual cockpit

- Press the VIEW button to switch between the default view ① and the enhanced view ②.

Adjusting the layout

Applies to: Audi virtual cockpit

Depending on the vehicle equipment, various layouts may be available.

- Applies to: MMI: Select on the home screen: **SETTINGS > Display & Brightness > Audi virtual cockpit**.
- To adjust the desired layout, press **3**.

Setting the automatic layout change

Applies to: RS model with Audi virtual cockpit

Requirement: depending on vehicle equipment, the **Performance** or **Runway** layout must be set.

- Applies to: MMI: Select on the home screen: **SETTINGS > Display & Brightness > Audi virtual cockpit > Configure > Automatic activation of RS layout**.

Depending on vehicle equipment, the **Performance** or **Runway** layout will be automatically set when switching into the RS modes ⇒ *page 112*.

Adjusting the additional display

Applies to: Audi virtual cockpit

Depending on the vehicle equipment, the additional displays that can be selected may vary.

- Applies to: MMI: Select on the home screen: **SETTINGS > Display & Brightness > Audi virtual cockpit > Configure**.
- Select the desired additional display.

Reducing the display

Depending on the vehicle equipment, you can hide the central area in the instrument cluster.

- Select on the instrument cluster: vehicle functions tab >  button > **Reduced display**, or
- Press the VIEW button on the multifunction steering wheel.

Changing the color scheme

Applies to: RS models

Depending on the vehicle equipment, you can change the color scheme in the instrument cluster.

- Select on the instrument cluster: vehicle functions tab >  button > **Color change display**.

Coolant temperature display

Applies to: vehicles with a coolant temperature indicator

The coolant temperature display **9** ⇒ *page 15* only functions when the ignition is turned on. To reduce the risk of engine damage, please observe the following notes about the temperature ranges.

Cold range

If only the LEDs at the bottom of the gauge turn on, the engine has not reached operating temperature yet. Avoid high engine speeds, full acceleration, and heavy engine loads.

Normal range

The engine has reached its operating temperature once the LEDs up to the center of the gauge turn on. If the  indicator light in the instrument cluster display turns on, the coolant temperature is too high ⇒ *page 244*.



Note

- Auxiliary headlights and other accessories in front of the air intake impair the cooling effect of the coolant. This increases the risk of the engine overheating during high outside temperatures and heavy engine load.
- The front spoiler also helps to distribute cooling air correctly while driving. If the spoiler is damaged, the cooling effect will be impaired and the risk of the engine overheating will increase. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Tachometer

The tachometer **1** ⇒ *page 15* displays the engine speed in revolutions per minute (RPM). The beginning of the red zone in the tachometer indicates the maximum permissible engine speed for all gears once the engine has been broken in. Before reaching the red zone, you should shift into the next higher gear, select the "D" or "S" position, or remove your foot from the accelerator pedal.

Engine speed limitation

If the  indicator light turns on, the engine will be automatically limited to the RPM displayed in the instrument cluster. This will protect the engine components, for example during a cold start or from overheating.

If the engine speed limitation was activated by an engine control malfunction, the  indicator light also turns on. Make sure the engine speed does not go above the speed displayed, for example when downshifting. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Note

The needle in the tachometer may only be in the red area of the gauge for a short period of time before there is a risk of damaging the engine. The location where the red zone begins varies depending on the engine.

Odometer

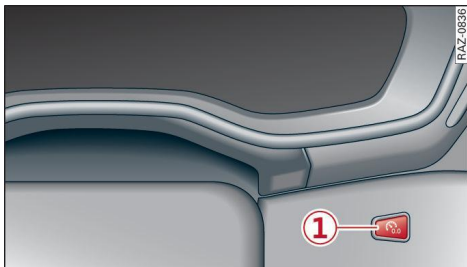


Fig. 8 Instrument cluster: reset button

The trip odometer and odometer are displayed in the status bar  ⇒ [page 15](#).

The trip odometer shows the distance driven since it was last reset. It can be used to measure short distances. The odometer shows the total distance that the vehicle has been driven.

Resetting the trip odometer

- To reset the trip odometer to zero, press the reset button .

Tips

Distances are displayed in mi (miles) or km (kilometers).

Outside temperature display

The outside temperature is displayed in the status bar  ⇒ [page 15](#).

If your vehicle is stationary or if you are driving at very low speeds, the temperature displayed in the instrument cluster may be slightly higher than the actual temperature outside due to heat radiating from the engine.

At temperatures below 41 °F (+5 °C), a snowflake symbol appears in front of the temperature display ⇒ .

WARNING

Do not assume the roads are free of ice based on the outside temperature display. Be aware that there may be ice on roads even when the outside temperature is around 41 °F (+5 °C) and that ice can increase the risk of accidents.

Engine oil temperature indicator

Applies to: vehicles with engine oil temperature indicator

Depending on the vehicle equipment, the engine oil temperature  may be indicated by a bar in the instrument cluster.

- Applies to: vehicles with Audi virtual cockpit:
Open the vehicle functions tab and switch to the enhanced view ⇒ [page 16](#).
- Applies to: vehicles with analog instrument cluster: Open the lap timer ⇒ [page 136](#).

When engine oil temperatures are low, the display --- °F (--- °C) appears in the instrument cluster. The engine has reached its operating temperature when the engine oil temperature is between 176 °F (80 °C) and 248 °F (120 °C) under normal driving conditions. The engine oil temperature may be higher if there is heavy engine load and high temperatures outside. This is not a

cause for concern as long as the  or  indicator lights do not turn on.

Boost indicator

Applies to: vehicles with boost indicator

Depending on vehicle equipment, the current engine load (meaning the current boost pressure) may be indicated by a bar in the instrument cluster.

- ▶ Applies to: vehicles with Audi virtual cockpit:
Open the vehicle functions tab and switch to the enhanced view ⇒ [page 16](#).
- ▶ Applies to: vehicles with analog instrument cluster: Open the lap timer ⇒ [page 136](#).

Shift light indicator

Applies to: RS models

The shift light indicator indicates when the RPM limit is reached.

- ▶ Applies to: vehicles with Audi virtual cockpit:
Set the **Performance** layout. Depending on the layout, you can also set **Runway** ⇒ [page 16](#).
- ▶ Applies to: vehicles with analog instrument cluster: Open the lap timer ⇒ [page 136](#).

The shift light indicator is displayed with green, yellow and red ranges in the upper areas of the tachometer. The shift light indicator will blink red when approaching the engine speed limit. Shift to the next highest gear at the right time.

Sport displays

Applies to: RS models

Various sport displays, such as a G meter or tire pressure indicator, may be available depending on vehicle equipment.

Opening sport displays in the instrument cluster

Applies to: vehicles with Audi virtual cockpit

- ▶ Select in the instrument cluster: Vehicle functions tab >  button > **Sport displays**.
- ▶ Turn the left thumbwheel on the multifunction steering wheel until the desired sport display appears in the instrument cluster.

Opening sport displays in the MMI

Applies to: vehicles with Audi virtual cockpit

- ▶ Applies to: MMI: Select on the home screen: **VEHICLE** >  **Monitor**.
- ▶ Browse to the desired display if necessary.

G meter

Applies to: vehicles with Audi virtual cockpit

The G meter displays the longitudinal and lateral acceleration. The current values are displayed in the instrument cluster while driving. The maximum values that are reached are stored and displayed when the vehicle is stationary. Only the maximum values that are reached are displayed in the MMI.

- ▶ To reset the stored values, press and hold the left thumbwheel on the multifunction steering wheel for one second.

Tire pressure

The tire pressure monitoring system displays the current tire pressures and temperatures. Also see ⇒ [page 274](#), *Tire pressure monitoring system*.

Engine data

Applies to: vehicles with Audi virtual cockpit

The engine data in the instrument cluster shows which percentage of the maximum output or maximum torque is currently being used.

Temperature

The temperature display in the MMI shows the temperature of various fluids and vehicle components, such as the engine oil or sport differential.

Vehicle functions

Overview

The trip computer is displayed in the first tab of the driver information system. Additional vehicle functions can be accessed depending on the vehicle equipment.

- ▶ Press the  button on the multifunction steering wheel.
- Trip computer ⇒ [page 20](#)
- Sport displays ⇒ [page 19](#)
- Lap times ⇒ [page 136](#)

- Lap statistics ⇒ *page 137*
- Acceleration measurement ⇒ *page 137*
- Reduced display ⇒ *page 17*

On-board computer

Changing the display

- Turn the left thumbwheel on the multifunction steering wheel ⑦ ⇒ *page 16, fig. 6* until the desired display is shown.

Resetting values to zero

Requirement: the **Consumption**, **Short-term memory**, or **Long-term memory** display must be selected.

- To reset the values in one of the memories to zero, press and hold the left thumbwheel on the multifunction steering wheel for one second, or
- Select on the instrument cluster: vehicle functions tab >  button > **Reset mi.**

Displays in the trip computer

The following displays may be shown, depending on the vehicle equipment:

- Time and date ⇒ *page 230*
- Level
- Digital speedometer
- Average consumption ⇒ *page 20*
- Range
- Short-term memory overview
- Long-term memory overview
- Energy consumers ⇒ *page 20*
- Driver assistance ⇒ *page 144*
- Traffic sign recognition and traffic light information

Short-term memory and long-term memory

The short-term memory collects driving information from the time the ignition is turned on until it is turned off. If you continue driving within two hours after turning off the ignition, the new values will be included when calculating the current trip information.

Unlike the short-term memory, the long-term memory is not erased automatically. You can se-

lect the time period for evaluating trip information yourself.

Average consumption

The current consumption can be shown using a bar graph. The average consumption stored in the short-term memory is also displayed. If the bar is green, your vehicle is saving fuel (for example, using recuperation).

Energy consumers

The **Energy consumers** view lists other equipment that is currently affecting fuel consumption. The display shows up to three equipment items. The equipment using the most power is listed first. If more than three items using power are turned on, the equipment that is currently using the most power is displayed. A gauge also shows the current total consumption of all other equipment.



Tips

The date, time of day, and time and date format can be set ⇒ *page 230*.

Touch display

General touch display operation

General information

Applies to: touch display

The center display is a touchscreen. Operation is very similar to operating a smartphone.

Tips

Certain gestures are not available in every menu.

Pressing

Applies to: touch display

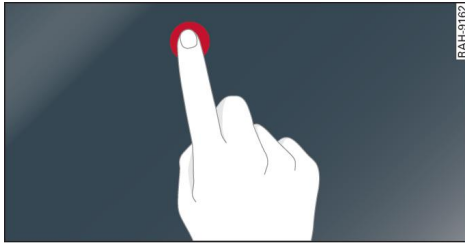


Fig. 9 Touch display: pressing

Selecting a function or button

- Press the desired function or button.

Pressing and holding

Applies to: touch display

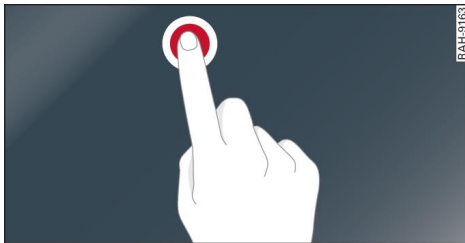


Fig. 10 Touch display: pressing and holding

Accessing options

For some items, you can access additional options that are not directly visible.

- Press and hold an item until the associated options are displayed.

Pressing and pulling

Applies to: touch display

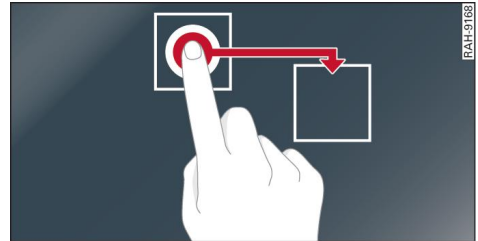


Fig. 11 Touch display: pressing and pulling

Moving an item

Some items can be placed in any location.

- Press and hold an item, and then use your finger to pull it to the desired location.

Creating and deleting folders

- To create a folder, press and hold an item and drag it onto another one. The folder will be created and a name fitting the category will be assigned ⇒ [page 25](#).
- To delete a folder, move all items out of the folder.

Pinching fingers together and pulling apart

Applies to: touch display

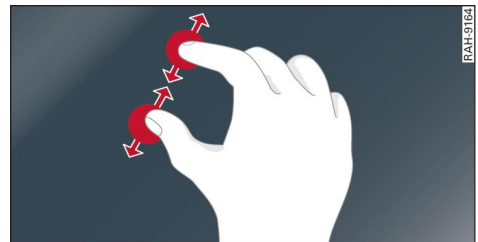


Fig. 12 Touch display: pinching fingers together and pulling them apart

Zooming in and out on an item

- To increase the size of an item, touch it with two fingers and pull your fingers apart.
- To decrease the size of an item, touch it with two fingers and pull your fingers together.

Rotating

Applies to: touch display

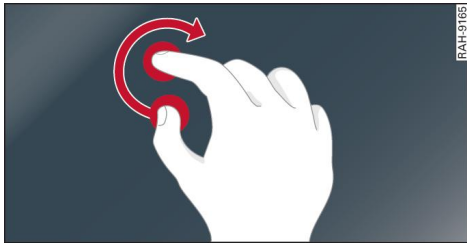


Fig. 13 Touch display: rotating

Rotating the view or perspective

- Rotate the item using two fingers.

Dragging

Applies to: touch display

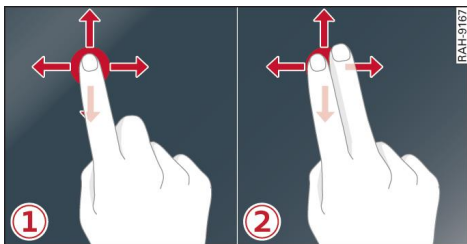


Fig. 14 Touch display: ① dragging with one finger, ② dragging with two fingers

Scrolling or browsing through menus/lists

- To scroll through menus and lists, swipe upward or downward with one finger.
- To browse through menus and lists, swipe to the right or left with one finger.

Tilting 3D displays

- Drag upward or downward with two fingers.

Dragging away from/toward the edge of the screen

Applies to: touch display

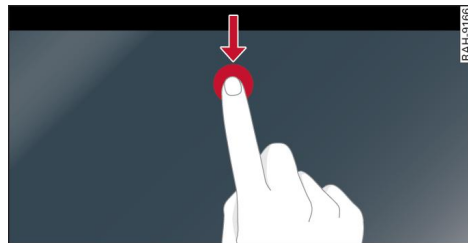


Fig. 15 Touch display: dragging away from the edge of the screen

Opening hidden menus

The  symbol indicates that there is a hidden menu.

- Use your finger to drag inward from the upper or lower edge of the screen, or
- Press the  button.

Closing hidden menus

- Press within the menu and drag it toward the upper or lower edge of the screen.

Information about menu paths

This guide shows you at a glance the paths for opening a desired menu and its settings and functions.

Example of a path

- Applies to: MMI: Select on the home screen: **SETTINGS > General > Date & time.**

Following the path

- First, determine in which display the path should be entered. In this example, it is the MMI display.
- To open the home screen, press .
- If the **SETTINGS** button is not displayed, use your finger to swipe to the left or right until it appears.
- Press the **SETTINGS** button.
- If the **General** button is not displayed, swipe toward the left or right with one finger until it appears.

- Press the **General** button.
- If the **Date & time** button is not displayed, swipe upward or downward with one finger until it appears.
- Press the **Date & time** button.

Tips

If a menu or symbol is in parentheses in the path, for example, (**General**) or () , then it is an optional menu item that does not need to be used in every system.

Settings

- Applies to MMI: Select on the home screen: **SETTINGS > Display & Brightness > MMI**.

Possible settings:

- **Brightness**
- **Touchscreen feedback**

Multi Media Interface

Information about traffic safety

Audi recommends only using certain Infotainment system functions, such as entering a destination or pairing a mobile device, while the vehicle is stationary. Be prepared to stop operating the Infotainment system at any time in the interest of your safety and the safety of other road users.

WARNING

- Only use the Infotainment system when road, traffic, weather, and visibility conditions permit and always in a way that allows you to maintain complete control over your vehicle.
- This also applies to operating your mobile device via the MMI. Do not allow the visual or audio signals from a mobile device to distract you from traffic, because this increases the risk of an accident.

Tips

Certain functions are not available while driving.

Turning on or off

Turning the MMI on or off

- To turn off the MMI, press and hold the MMI control knob ⇒ *page 32, fig. 23* until all Infotainment functions are turned off.
- To turn on the MMI, press the MMI control knob.

Restarting the MMI

- Press and hold the MMI control knob for at least 10 seconds.

Turning the center display on or off

- To turn the center display on or off, press the  button in the center console in front of the transmission selector, or
- To turn off the center display, press  in the notification center ⇒ *page 26*.
- To turn on the center display, touch the display or press  again.

Introduction

You can display and operate Infotainment system and vehicle functions using the touch display in the Multi Media Interface, abbreviated MMI.

Depending on the vehicle equipment, you may be able to download other apps in addition to the ones that are preinstalled ⇒ *page 190*.

Configuration wizard

After starting for the first time, the configuration wizard helps you to set up the vehicle, for example to set the desired system language and connect a phone.

- Follow the instructions in the center display.
- Applies to: MMI: To access the configuration wizard at a later time, select on the home screen: **HELP > Configuration wizard**.

Tool tips

You can have tool tips displayed if necessary. They introduce various MMI functions to you.

- Applies to: MMI: To open the tool tips, select on the home screen: **HELP > Tool tips > Basic information** or **Expert information**. ►

► Follow the instructions in the display.

► Applies to: MMI: Select on the home screen:
HELP > Owner's manual.

Online Owner's Manual

Applies to: vehicles with Online Owner's Manual

The Online Owner's Manual can be accessed directly from the Owner's Manual in the Infotainment system ⇒ *page 6*.

Menus and symbols

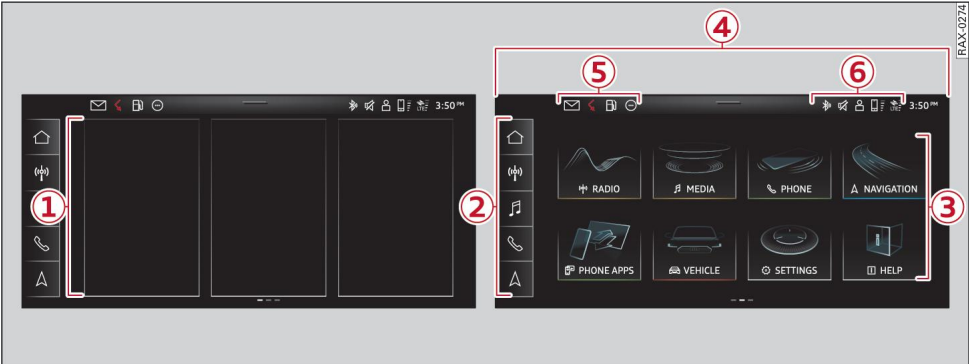


Fig. 16 MMI: center display

	Label	Description
①	Overview screen	Displays selected information tiles and provides quick access to certain functions ⇒ <i>page 25</i>
②	Quick access bar	Return to the home screen or the overview page, open menus quickly ⇒ <i>page 25</i>
③	Display area	Select a menu, apply settings, display content ⇒ <i>page 25</i>
④ – ⑥	Status bar	Operate functions and apply quick settings ⇒ <i>page 26</i> , display of available notifications ⑤ ⇒ <i>page 26</i> , status indicator ⑥ ⇒ <i>page 25</i> , time

Description of common symbols

You can operate the standard functions using the symbols listed. The symbols may be found in any menu, depending on the context.

Symbol	Description
↶	Go back one level
✕	Close the menu
🔍	Search for content
❗	Open explanations for a menu
⚙️	Open settings for the selected menu

Symbol	Description
📄	Open the submenu
🔧/🔧	Adjust the settings
☆/★	Set as favorite
☐/☑	Turn functions on or off
⏸/⏹	Turn functions on or off
⦿/⦿	Turn functions on or off
⋮	Open additional actions
>	Open additional information for the selected menu

Overview screen

The overview screen is the first menu page in the MMI. Information tiles display specific information about certain vehicle functions, such as media. If you are logged in with your myAudi user, the overview screen may contain personalized information depending on vehicle equipment, such as recently used apps. The MMI will display and arrange personalized information automatically.

Configuring the overview screen

- Press and hold an information tile on the overview screen.
- To change the position of an information tile, press and hold it and then slide it to the desired position. Depending on vehicle equipment, the layout of the overview screen can be customized.
- To replace an information tile, press  and select the desired information tile.
- Press **Done** to complete the configuration.

Opening the global text search

Depending on vehicle equipment, you can use the global text search to search the MMI for key words.

- Open the overview screen and swipe your finger to the right.

Quick access area

Using the quick access area, you can return to the home screen and quickly switch between four menus that can be configured according to your preferences.

Returning to the home screen or opening a menu quickly

- Press  or one of the four buttons.

Configuring the quick access area

- Press and hold a button on the home screen display area or in the quick access bar.
- To move a button to the quick access bar, pull it from the display area to the quick access bar.
- To adjust the placement of the buttons in the quick access bar, pull them to the desired position in the bar.

- Press **Done** to complete the configuration.



Tips

The position of  cannot be adjusted.

Display area

You can change the location of the buttons and folders on the home screen display area.

Configuring the display area

- Press and hold a button on the home screen display area.
- To adjust the placement of the buttons, pull them to the desired locations.
- To rename a folder, press on the folder name and then enter the desired name.
- Press **Done** to complete the configuration.

Switching between menu pages

If a menu contains multiple menu pages,  is displayed in the display area. The white bar shows the location of the current menu page.

- To switch between menu pages, swipe your finger to the right or left.

Status display



Fig. 17 Center display: frequently used symbols in the status bar

The symbols in the status bar show you information at a glance, such as if a mobile device is connected or if there is a data connection. The most common symbols are listed in the table. ►

	Description
①	There is a data connection. The bar indicates the signal strength of the data connection. Data is currently being transmitted.
②	There is a data connection. The bar indicates the signal strength of the data connection. No data is being transmitted now.
③	A mobile device is connected. The bar indicates the signal strength of the mobile phone connection.
④	There is no data connection.
⑤	An error occurred with the mobile device connection to the MMI.
⑥	A user is selected. If a question mark appears in the symbol  , the guest user is active.
⑦	A Bluetooth device is connected.
⑧	Bluetooth is turned on, but no Bluetooth device is connected.
⑨	Audio playback was interrupted.
⑩	The audio source is muted.
⑪	Privacy settings are enabled. The additional symbol indicates which privacy settings are currently activated ⇒ <i>page 302</i> .
⑫	The Integrated Toll Module is turned on. The numbers 1 - 3+ indicate how many passengers are selected in the MMI.

Notification center

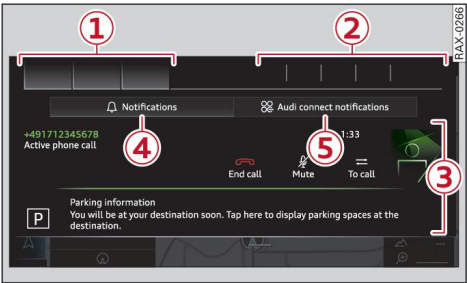


Fig. 18 Center display: notification center

Notifications from the Audi system and Audi connect apps can be displayed in the center display. They will be hidden after a certain period of time

and a symbol for them will appear in the status bar ⑤ ⇒ *page 24, fig. 16*. In the notification center, you can view these notifications ③ ⇒ *fig. 18*, apply quick settings ②, and operate functions ①.

Depending on the vehicle equipment, system notifications and connect app notifications will be grouped and displayed in separate notification lists ④ / ⑤.

Using the notification center

- ▶ To open the notification center, pull the status bar downward, or
- ▶ Press the  button on the status bar.
- ▶ To change the notification list, tap on the desired button in the notification center ④ or ⑤.
- ▶ To turn quick settings on or off, press the respective symbol ①.
- ▶ To apply quick settings, press the respective symbol ②.
- ▶ To obtain additional information about a notification, press it.
- ▶ To delete a notification, pull it toward the right edge of the screen.
- ▶ If there are more than four notifications in the notification center, the older notifications will be hidden. To display the older notifications, drag your finger upward on the screen.

Selecting which content is displayed

For some system notifications, you can set if they should be displayed.

- ▶ To set the displayed content, press , or
- ▶ Applies to MMI: Select on the home screen: **SETTINGS > Notifications**.
- ▶ Select and confirm which notifications should be displayed.

Operating functions

Depending on the vehicle equipment, the following functions can be operated in area ①:

Symbol	Description
	Press: turns the center display on or off (this can also be done using the button in the center console)
	Press and hold: turns the screen clearing mode on or off (can also be done using the button in the center console)
	Opens the garage door opener function

Applying quick settings

Depending on vehicle equipment, the following quick settings may be available in area ②:

Symbol	Description
	Apply sound settings
	Manage connected devices
	Manage users
	Set displayed content in the notification center
3:50 PM 6/24/2019	Set date and time

Text input

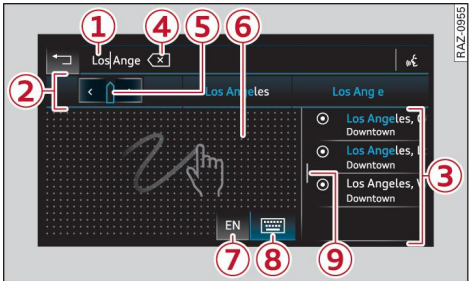


Fig. 19 Center display: text input

Overview

In the input fields of various menus, you can enter letters, numbers and characters, for example to find an address in navigation*.

The text that is currently entered is displayed in the center display ①. Depending on the context,

word suggestions may be given based on the characters that have been entered ② and results may be shown ③.

Opening text input

- Tap inside the input field ①.

Changing the input language

Requirement: multiple input languages must be defined in the MMI ⇒ page 28.

- To switch between the defined input languages, press the button ⑦.

Switching the input methods

- To switch between handwriting input or the on-screen keyboard, press the button ⑧.

Entering text

- Applies to: the on-screen keyboard: To enter text, press the buttons on the keyboard. Depending on the usage context, you may also be able to swipe over the letters ¹⁾.
- Applies to: handwriting input: To enter text, simply write in the input area using one finger ⑥. You can write the separate characters next to each other or one on top of the other without having to move your finger over after writing a character. When you end the entry, the writing is interpreted by the system.
- Applies to: the on-screen keyboard with an input language that uses accented characters: To enter accented characters (such as â, ç, ñ, ö), press and hold a character that has accented versions available and select the desired accented character.
- Applies to: handwriting input: To enter a space, drag a line from left to right in the input section ⑥.
- To select a location in the text input, press on the desired location in the input field. You can control the location more accurately using the slider on the screen ⑤¹⁾.
- To delete individual characters, press ④, or
- Applies to: handwriting input: Drag a line from right to left in the input section ⑥.

¹⁾ Depending on the country or equipment

- ▶ To delete multiple characters, press and hold  ④.
- ▶ To delete all characters at a specific location, press and hold  ④ and drag up to the desired location ¹⁾. When released, the highlighted characters are deleted.

Accepting suggested words or selecting entries from the results list

- ▶ To accept a suggested word ② or select an entry from the results list ③, press on it.
- ▶ To display more content in the results list, drag your finger upward or downward on the screen.
- ▶ To enlarge the results list, press the ⑨ button or pull it inward.

Setting the input language or keyboard layout

- ▶ Select on the home screen: **SETTINGS > Language & Keyboard > Keyboard**.
- ▶ To define additional input languages, press the  button.
- ▶ To change the keyboard layout for an input language, press >. For example, you can select between QWERTZ and QWERTY.

¹⁾ Depending on the country or equipment

Head-up display

Description

Applies to: vehicles with head-up display



Fig. 20 Instrument panel: knob for the head-up display

The head-up display shows certain warnings or selected information from the assist systems in the driver's field of vision.

Turning on or off

- To turn on the head-up display, press the  knob ①.
- To turn off the head-up display, press the  knob.

Adjusting the height

The height of the head-up display can be adjusted to the individual driver.

- Make sure you are seated correctly ⇨ *page 65*.
- Turn the knob  to the right or left.

Settings in the Infotainment system

- Applies to: MMI: Select on the home screen: **SETTINGS > Display & Brightness > Head-up display**.

Possible settings:

- **Display rotation**
- **Brightness**
- **Display contents:** you can set which information should be displayed. Some information and warnings cannot be hidden.

Tips

- Sunglasses with polarization filters and unfavorable lighting conditions can impair visibility of the display.
- An optimal display depends on the seat position and the height adjustment of the head-up display.
- A special windshield is needed for the head-up display function.
- For information on cleaning, see ⇨ *table Interior cleaning on page 281*.

Note

To reduce the risk of scratches on the glass that covers the head-up display, do not place any objects in the projection opening.

Voice recognition system

General information

Applies to: vehicles with voice recognition system

Various functions can be easily operated from the driver's and front passenger's seat using voice commands.

Using the voice recognition system optimally

- Speak clearly and distinctly at a normal volume. Speak louder when driving faster.
- Emphasize the words in the commands evenly and do not leave long pauses.
- To reduce background noise, close all openings, such as doors and windows. Make sure that passengers are not speaking when you are giving a voice command.
- Do not direct the vents toward the hands-free microphone, which is in the roof headliner near the front interior lights.



WARNING

- Direct your full attention to driving. As the driver, you have complete responsibility for safety in traffic. Only use the functions in such a way that you always maintain complete control over your vehicle in all traffic situations.
- Do not use the voice recognition system in emergencies because your voice may change in stressful situations. The system may take longer to dial the number or may not be able to dial it at all. Dial the emergency number manually.



Tips

There are no voice guidance* prompts when a dialog is active.

Description

Operating the voice recognition system

Applies to: vehicles with voice recognition system

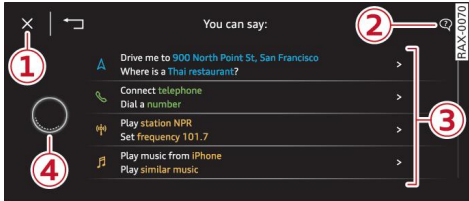


Fig. 21 Center display: voice recognition system

Requirement: the ignition and the MMI must be turned on. A system language supported by the voice recognition system must be set. There must be no phone calls in progress and the parking aid must not be active.

Operating by button

- Briefly press the  button on the multifunction steering wheel, or depending on the context, press  in the center display.
- Say the desired command after the signal tone.
- To turn off the voice recognition system, press and hold the  button on the multifunction steering wheel, or say or press **Cancel** ①
⇒ fig. 21.

Operating with voice commands

- Applies to: MMI: To operate the voice recognition system using voice commands, select on the home screen: **SETTINGS > General > (Speech dialog system) > Activate the speech dialog system with "Hey Audi"**.
- Say the activation phrase **Hey Audi** together with the desired command.
- To turn off the voice recognition system, say **Cancel** or press and hold the  button on the multifunction steering wheel, or press ①
⇒ fig. 21.

Commands and assistance

In the voice recognition system menu, possible commands or help settings are displayed for the current dialog ③.

- To receive additional help for the current dialog, say or press **Help** ②.

- To pause voice recognition, say or press **Pause** . To reactivate voice recognition, press  again or briefly press the  button on the multifunction steering wheel.

Additional functions

Applies to: vehicles with voice recognition system

Command during voice output

If the function is turned on, you can simply say a new command during a prompt.

- Applies to: MMI: Select on the home screen: **SETTINGS > General > Speech dialog system > Allow commands during voice output.**

Online recognizer

Applies to: vehicles with online recognizer

You can activate the online recognizer for additional functions and to improve the results of voice recognition. A supported menu language must be selected. When there is an active Internet connection, the spoken command is evaluated in the vehicle and online.

- When you turn on the voice recognition system for the first time, a menu for the online recognizer will open, or
- Applies to MMI: Select on the home screen: **SETTINGS > General > Speech dialog system > Consent to online speech recognizer.**
- Read the licensing agreements and accept them.

Note

Read the information about Audi connect, especially regarding connectivity costs  *in General information on page 187.*

External voice operation

Applies to: vehicles with external speech dialog system

You can access and control the voice operation on a connected mobile device through your vehicle.

Turning external voice operation on or off

Requirement: the ignition and the MMI must be turned on. A mobile phone must be connected to the MMI with the **Handsfree** profile  *page 175.* The mobile device being connected must have

voice control that can be controlled externally. There must be no phone calls in progress and the parking aid must not be active.

- To turn on external voice operation, press and hold the  button on the multifunction steering wheel.
- To turn off the external voice operation, press and hold the  button longer on the multifunction steering wheel or press **Cancel**.

Using external voice operation

- Say the desired command after the signal tone.
- To reactivate voice recognition when it is paused, press the  button briefly on the multifunction steering wheel or press **Resume**.

Tips

Audi simply provides access to control your mobile device with voice operation and does not assume any responsibility for the contents and commands within the external voice control.

Global functions

Additional function buttons

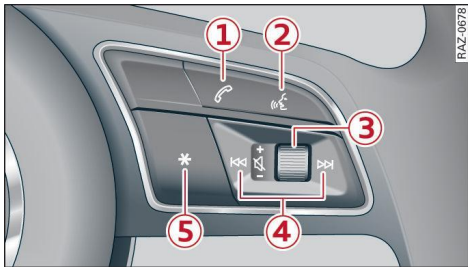


Fig. 22 Right side of the multifunction steering wheel



Fig. 23 Center console: MMI control knob

Adjusting the volume

You can adjust the volume of an audio source or a system message (for example, from the voice recognition system) when the sound is playing.

- To increase or decrease the volume, turn the right thumbwheel ③ ⇒ fig. 22 upward or downward, or turn the MMI control knob ⇒ fig. 23 to the right or left.
- To mute, push the right thumbwheel or the MMI control knob.

Selecting the previous/next track or station

- Press the <<< / >>> button ④ or briefly press the MMI control knob to the left or right.

Fast forward/rewind

- Press and hold the <<< / >>> button ④ or press the MMI control knob to the left or right until the desired playback position is reached.

Quick access steering wheel button

Depending on vehicle equipment, the button ⑤ may provide quick access to various functions.

- button, see ⇒ page 95.
- button, see ⇒ page 112.

You can program the * button with various functions.

- To bring up the function that is currently set, press the * button.
- To perform the function that is currently set, press and hold the * button, or:
- Applies to MMI: Select on the home screen: **VEHICLE > Settings & Service > Steering wheel button assignment**.
- Select and confirm the desired function.

Turning the voice recognition system on or off

button ②, see ⇒ page 30.

Using the phone functions

button ①, see ⇒ page 181.

WARNING

Adjust the volume of the audio system so that signals from outside the vehicle, such as police and fire sirens, can be heard easily at all times.

Personalization

Users

General information

Applies to: vehicles with personalized user settings

Depending on vehicle equipment and your country, your vehicle may be able to manage different users in the MMI. Each user will be assigned the settings that they last used.

Before you begin driving, you can select a user in the MMI and load personalized Infotainment and vehicle settings.

Possible users in the MMI:

- **myAudi user:** as a myAudi user, you can use Audi connect services that require a myAudi account. Certain settings are transferred online to your myAudi account. If you log into your myAudi account in another vehicle, you can load your settings in the other vehicle.
- **Local user:** as a local user, you can only store settings in the current vehicle. Your settings cannot be transferred to other vehicles. Audi connect services that can only be used with a myAudi account will not be available.
- **Guest user:** as a guest user, you can store settings in the vehicle without changing the settings for other users. Audi recommends only using the guest user temporarily, because settings can be overwritten by other users.

Depending on vehicle equipment, the following options may be used to detect the active user so that the user settings can be loaded automatically before you start driving.

- Vehicle key

Requirement: the driver's door has been opened.

The detected user must be shown in the MMI. Confirm the user shown, select another user ⇨ *page 33*, or add another user ⇨ *page 33*.



WARNING

It may not be possible to load Infotainment and vehicle settings, or they may only load partially. To reduce the risk of an accident, the driver must be responsible for the Infotainment system settings and vehicle settings at all times.

ment system settings and vehicle settings at all times.



Tips

- Certain Infotainment and vehicle settings (such as mirrors, last radio stations) may be stored, depending on vehicle equipment. You can find additional information in the MMI. Select on the home screen: **SETTINGS** > **General** > **Legal notes** > **About Audi connect**.
- Applies to: myAudi users: The stored settings can only be transferred to vehicles that are capable of receiving the transmitted information. There may be restrictions that prevent this, particularly in other countries.
- Applies to: myAudi users: The settings can only be transferred and loaded when there is coverage from the applicable mobile phone service provider.
- Applies to: myAudi users with PIN protection turned on: If the MMI displays a detected user but you simply start driving or wait without entering the 4-digit PIN, then the guest user will be selected. Some settings for the detected myAudi user will be transferred to the guest user.

User management

Applies to: vehicles with user management

Opening user management

Applies to: MMI

- ▶ Press **USERS** on the home screen.

Selecting a user

Applies to: MMI

- ▶ Press on the desired user.
- ▶ Enter the 4-digit myAudi PIN, if necessary.

Adding myAudi users

Applies to: MMI and Audi connect

Requirement: you must have successfully registered at my.audi.com and have created a 4-digit myAudi PIN.

- ▶ Press **Add user**.

- ▶ Press **Log in now** to log in with your myAudi credentials.
- ▶ Follow the system instructions.

Adding a local user

Applies to: MMI

- ▶ Press **Add user**.
- ▶ Press **Initiate setup**.
- ▶ Press **Local user**.
- ▶ Follow the system instructions.

Edit user

Applies to: MMI

Requirement: the user must be selected and that user's settings must be loaded.

- ▶ Press on the user.

Depending on the user type, available options may include the following.

Changing PIN protection or authentication methods, depending on the vehicle: when this function is turned on, the 4-digit myAudi PIN must be entered before any settings for this user can be loaded.

Remove the user from the vehicle: the user will only be deleted in the vehicle from the list in the MMI.

Change name: you can change the name of the local user.

Removing users

Applies to: MMI

- ▶ Select on the home screen: **USER** >  > *one or more entries* > **Delete**. The user will only be deleted from the list in the MMI. The authorizations for the user in the vehicle (such as key user) will not be removed.

Tips

- The guest user cannot be renamed.
- When changing users, the new user settings are loaded in the vehicle.
- If a user has the  symbol, PIN protection is active. To turn off PIN protection, you can edit the user.
- Depending on the country, you may be able to use an Audi app or my.audi.com.

Key user

Applies to: vehicles with key user management

The vehicle owner must be set as the key user to use some of the specific Audi connect vehicle control services that depend on vehicle equipment.

The key user automatically has remote access authorization. This remote access authorization is necessary to control certain functions that depend on vehicle equipment, such as Audi connect vehicle control services, through the myAudi app.

Setting the key user

Requirement: a key user must not be set yet.

- ▶ To set a key user for the vehicle, you will need a myAudi account. Register in the myAudi app or at my.audi.com.
- ▶ Add your vehicle to the myAudi app.
- ▶ Follow the instructions in the myAudi app.

Managing additional users

Depending on the vehicle equipment, you can grant authorization for additional users to use Audi connect vehicle control services at my.audi.com.

Removing the key user

If you remove the key user, all other users that were stored by the key user at my.audi.com and their authorizations will be deleted. It will no longer be possible to use Audi connect vehicle control services, depending on vehicle equipment.

Requirement: a key user must be set.

- ▶ Applies to: MMI: Select on the home screen: **USERS** >  > **Remove key user**.

Tips

- Depending on the country and model there may be an app other than the “myAudi app” available for your vehicle. For additional information, see my.audi.com.
- You do not need to log into the vehicle with a myAudi user in order to use Audi connect vehicle control services, which depend on the vehicle equipment.

- If you sell your vehicle, reset all settings to the factory default settings.

Opening and closing

Central locking

General information

WARNING

- If you leave the vehicle, turn off the ignition and take the key with you. This applies particularly when children remain in the vehicle. Otherwise, children could start the vehicle or operate electrical equipment (such as power windows), which increases the risk of an accident.
- No one, especially children, should stay in the vehicle when it is locked from the outside, because the windows can no longer be opened from the inside. Locked doors make it more difficult for emergency workers to enter the vehicle, which increases the risk of death.
- Applies to: child safety lock: No one, especially children, should stay in the vehicle when the child safety lock is activated, because the rear doors and the windows can no longer be opened from the inside. This increases the risk of death.

Description

All doors and the luggage compartment lid can be centrally unlocked and locked at once. You can select in the MMI if the entire vehicle or only the driver's door should unlock when unlocking the vehicle ⇒ *page 37*. The turn signals flash twice when you unlock the vehicle and flash once when you lock the vehicle. If they do not flash when locking, check if all doors and lids are closed.

Depending on the vehicle equipment, you may have different options for centrally unlocking and locking your vehicle.

- Vehicle key ⇒ *page 41*
- Sensors in the door handles ⇒ *page 41*
- Lock cylinder in the driver's door ⇒ *page 39*
- Interior central locking switch ⇒ *page 38*

Vehicle key

The term “vehicle key” refers to the remote control key or convenience key*. The convenience key* is a remote control key with special functions ⇒ *page 41* and ⇒ *page 97*.

Automatic locking

If you unlock the vehicle but then do not open any of the doors, the luggage compartment, or the hood within a short period time, the vehicle locks again automatically. This feature prevents the vehicle from being accidentally left unlocked for a long period of time.

Automatic locking (Auto Lock)

The Auto Lock function locks all doors and the luggage compartment lid once the speed exceeds approximately 9 mph (15 km/h). The vehicle will unlock again if the unlock function in the central locking switch is pressed, the “P” position is selected, or the ignition is turned off.

You can open the doors individually from the inside by pulling the door handle one time. To open the rear doors individually, you must pull the door handle twice.

In the event of a crash with airbag deployment, the doors will also automatically unlock to allow access to the vehicle.

Unintentionally locking yourself out

Only lock your vehicle when all of the doors and the luggage compartment lid are closed and there is no key in the vehicle. This reduces the risk of locking yourself out accidentally.

The following features help to reduce the risk of locking your vehicle key in the vehicle:

- If the driver's door is open, the vehicle cannot be locked by pressing the  button on the vehicle key or by touching the locking sensor* on a door.
- If the vehicle key that was used most recently is inside the luggage compartment, the luggage compartment lid will automatically open again after it closes ⇒ .

- If the vehicle key that was last used is detected inside the vehicle, then the vehicle cannot be locked from the outside ⇒ .



WARNING

Observe the safety precautions ⇒ *page 36*.



Note

The following applies when locking the vehicle:

- If the vehicle key that was last used is detected inside the passenger compartment, then the vehicle cannot be locked from the outside **using the sensor**. Take the vehicle key with you and lock the vehicle again. Otherwise, the vehicle will not be protected against unauthorized access.
- If you locked the vehicle while the front passenger's door or rear door is open, and you accidentally place the vehicle key inside the passenger compartment and close the door, the vehicle will lock at first. But if the keyless system detects a vehicle key inside the vehicle after it locks, then the vehicle will unlock again. The turn signals will flash several times and a warning tone¹⁾ will sound to indicate this. If you do not open the vehicle to remove the vehicle key within a brief period, then the vehicle will lock automatically. This prevents the vehicle from being left unlocked for long periods of time. The vehicle key will then be locked inside the vehicle.
- If the luggage compartment lid closes and the system detects that the last vehicle key that was used is inside the luggage compartment, then the luggage compartment lid will open again. The turn signals will flash several times and a warning tone¹⁾ will sound to indicate this. The doors will lock. Always take the vehicle key with you, or unauthorized persons may be able to enter the vehicle.



Tips

- Do not leave valuables unattended in the vehicle. A locked vehicle is not a safe!
- The LED in the driver's door rail blinks when you lock the vehicle. If the LED turns on for approximately 30 seconds after locking, there is a malfunction in the central locking system. Have the problem corrected by an authorized Audi dealer or authorized Audi Service Facility.

Setting the central locking system

You can adjust the central locking system to your preferences. The settings depend on the vehicle equipment.

- Applies to MMI: Select on the home screen: **VEHICLE > Settings & Service > Central locking**.

Door unlocking

- If you select **All**, all doors and the luggage compartment lid will be unlocked when unlocking the vehicle.
- If you select **Driver's door**, only the driver's door will be unlocked. To unlock all doors and the luggage compartment lid, press the  button on the vehicle key twice. In vehicles with a convenience key*, only the driver's door will unlock when you pull the driver's door handle. If you pull another door handle, the entire vehicle will be unlocked.

The entire vehicle will always be locked if you press the  button.

Long press to open windows

You can select if all windows and the panoramic glass roof* should open using the vehicle key ⇒ *page 49, Convenience opening and closing*. If you press and hold the  button on the vehicle key, all of the windows and the panoramic glass roof* will close.

Disable rear lid handle

You can select if the luggage compartment lid can be opened with the handle ⇒ *page 44*, ►

¹⁾ Applies to: vehicles with anti-theft alarm system

fig. 31. If you activate this function, the luggage compartment lid can only be opened with the  button on the vehicle key or in the driver's door. In vehicles with a convenience key*, you can still open the luggage compartment lid using the handle $\Rightarrow$ *page 44*, *fig. 31* if an authorized convenience key is detected $\Rightarrow$ *page 43*.

Fold mirrors

You can select if the exterior mirrors automatically fold in when locking.

Tone when locking¹⁾

You can select if an audio signal sounds when locking the vehicle.

Open with convenience key

Applies to: vehicles with convenience key

You can deactivate the feature for unlocking using the sensor. The function for locking using the sensor will still be enabled $\Rightarrow$ *page 41*.

Central locking switch



Fig. 24 Driver's door: central locking switch

- To lock or unlock the vehicle, press the  or  button $\Rightarrow$ .

When locking the vehicle with the central locking switch, the following applies:

- The doors and the luggage compartment lid cannot be opened from the outside for security reasons, for example to reduce the risk of unauthorized entry while stopped at a light.

- The LED in the central locking switch turns on when all doors are closed and locked.
- You can open the doors individually from the inside by pulling the door handle one time. To open the rear doors individually, you must pull the door handle twice.
- In the event of a crash with airbag deployment, the doors unlock automatically to allow access to the vehicle.



WARNING

- Observe the safety precautions $\Rightarrow$ *page 36*.
- The central locking button works when the ignition is turned off.
- The central locking switch is inoperative when the vehicle is locked from the outside.

Messages

The following messages may appear, depending on the vehicle equipment:



Driver's door: malfunction! Shift to P before leaving vehicle. See owner's manual

There is a malfunction in the driver's door. Secure the vehicle before exiting by selecting the "P" position. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Vehicle key detected in vehicle interior

or

Vehicle key detected in luggage compartment

This message appears if a vehicle key was detected inside the vehicle when a door or the luggage compartment lid was closed after locking the vehicle. The vehicle will also respond by flashing the turn signals several times and sounding a warning tone²⁾. Retrieve the vehicle key immediately. Otherwise the vehicle will be locked automatically and the vehicle key will be locked inside the vehicle. This prevents the vehicle from being left unlocked for long periods of time.

¹⁾ This function is not available in all countries.

²⁾ Applies to: vehicles with anti-theft alarm system

Mechanically unlocking or locking the doors

All doors must be unlocked or locked individually if the central locking system fails.

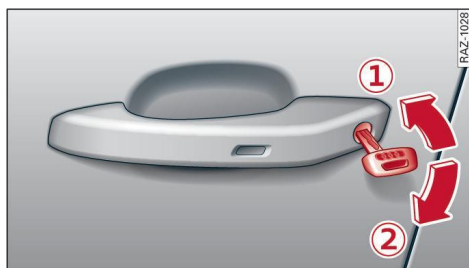


Fig. 25 Driver's door: door lock cylinder



Fig. 26 Door: mechanically locking

Applies to: vehicles with anti-theft alarm system:
After unlocking using the lock cylinder and opening the driver's door, you must press the  button on the vehicle key or turn on the ignition. Otherwise the alarm will sound. When mechanically locking the doors, the anti-theft alarm will not be activated.

Unlocking or locking the driver's door with the mechanical key

- Remove the mechanical key ⇒ page 40.

- To unlock the driver's door, turn the mechanical key to the unlock position in the direction of arrow ① ⇒ fig. 25. The head of the mechanical key faces the rear door when doing this.
- Pull the door handle to open the driver's door.
- To lock the driver's door, select the "P" position, close the door, and turn the mechanical key once to the lock position ② ⇒ . The head of the mechanical key faces the rear door when doing this.

Locking the front passenger's door and rear doors* using the mechanical key

The mechanical lock is located on the edge of the doors ① or in the latch opening ② ⇒ fig. 26. It is only visible when the door is open.

- Remove the mechanical key ⇒ page 40.
- If necessary, remove the cap from the opening ⇒ fig. 26.
- Insert the mechanical key into the slot on the inside and turn it all the way to the right (right door) or left (left door).
- If necessary, install the cap in the opening and close the door.

Once the front passenger's door or rear doors* close, it will no longer be possible to open them from the outside. The front doors can be opened from the inside by pulling the door handle one time. The rear doors* can be unlocked from the inside by pulling the door handle one time and then opened by pulling the door handle again. If the child safety lock in one of the rear doors is activated, you must first pull the door handle from the inside. Then you can open the door from the outside.



WARNING

Observe the safety precautions ⇒ page 36.

Anti-theft alarm system

Applies to: vehicles with anti-theft alarm system

If the anti-theft alarm system detects a vehicle break-in, audio and visual warning signals are triggered. The anti-theft alarm system is turned on or off when locking or unlocking your vehicle. If the alarm is triggered, it will shut off automatically after a certain amount of time. ►

Turning off the alarm manually

- To turn off the alarm, press the  button on the vehicle key or turn on the ignition.

Depending on the vehicle equipment, the anti-theft alarm system may have the following features:

Break-in security feature

The alarm will be triggered if the doors, the hood, or the luggage compartment lid are broken into, or if a door that was previous unlocked using the lock cylinder is opened.

Interior/towing protection monitor

The alarm will be triggered if there are movements detected in the vehicle interior (for example, by animals) or if there is a change in the vehicle angle (for example, when the vehicle is being towed).

You can prevent the alarm from being triggered by deactivating the interior/towing protection monitor.

Deactivating the interior/towing protection monitor

There are the following options for deactivating the interior/towing protection monitor:

- Press the  button on the vehicle key a second time **within two seconds**. Or
- Applies to: vehicles with convenience key: Touch the sensor on the door handle a second time **within two seconds**. Or
- Turn the mechanical key in the door lock to the close position a second time **within two seconds**. Or
- Applies to: vehicles with MMI: Select on the home screen: **VEHICLE > Settings & Service > Interior monitoring**.

If you lock the vehicle in this way, then the interior/towing protection monitor will remain off until the next time the vehicle is unlocked.

Once deactivated, the LED in the door rail will blink briefly and then will stay off for about 30 seconds.

Tips

The interior/towing protection monitoring only functions correctly when the windows and the roof* are closed.

Keys

Key set

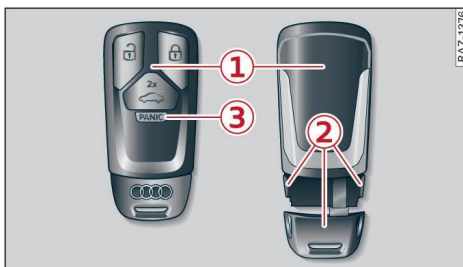


Fig. 27 Your vehicle key set

The key set includes two vehicle keys when delivered from the factory.

① Vehicle key

You can unlock and lock your vehicle with the vehicle key.

② Mechanical key and release buttons for the mechanical key

A mechanical key is integrated into the vehicle key. To remove it, press the release button and remove the mechanical key.

Using the mechanical key, you can:

- Applies to: vehicles with lockable glove compartment: locking/unlocking the glove compartment.
- Manually unlock and lock the doors ⇨ *page 39*.
- Applies to: sedan with locking backrests: Locking and unlocking the backrest ⇨ *page 89*.
- Unlock the luggage compartment lid using the manual release ⇨ *page 47*

③ PANIC button

In an emergency, you can press the PANIC button to trigger a visible and audible vehicle alarm. You can do this as long as you are near your vehicle (within the key's working range). ►

- To trigger the alarm, press the **PANIC** button ③ ⇒ *fig. 27*.
- To turn the alarm off, press the **PANIC** button again.

Lost key/replacing a key

If a vehicle key is lost, contact an authorized Audi dealer or authorized Audi Service Facility. Have that vehicle key deactivated. It is important to bring all keys with you.

If a key is lost, you should report it to your insurance company.

Electronic immobilizer

The immobilizer prevents unauthorized use of the vehicle.

In some cases, it may not be possible to establish vehicle drive ready mode if there is also a vehicle key from a different vehicle manufacturer on the key chain.

Data in the vehicle key

When driving, service and maintenance-relevant data is continuously stored in your vehicle key. An authorized Audi dealer or authorized Audi Service Facility can read out this data and tell you about the work your vehicle needs.



WARNING

Observe the safety precautions ⇒ *page 36*.



Note

Protect the key against high temperatures and direct sunlight.



For the sake of the environment

⌘ Batteries and electrical/electronic devices must be disposed of in an environmentally safe manner ⇒ *page 310, Disposal instructions*.



Tips

- The vehicle key function can be temporarily disrupted by interference from transmitters near the vehicle working in the same frequency range (such as a mobile device or ra-

dio equipment). Always check if your vehicle is locked.

- Applies to MMI: You can view the number of keys programmed to the vehicle by selecting on the home screen: **VEHICLE > Settings & Service > Vehicle information**.
- A key tag that contains information about the vehicle key set may be attached to the key set at the factory. The key tag can be used to reorder vehicle keys. Keep the key tag. If you sell the vehicle, give the key tag to the buyer.
- The system complies with United States FCC regulations and ISED regulations
⇒ *page 310*.

Unlocking and locking the vehicle

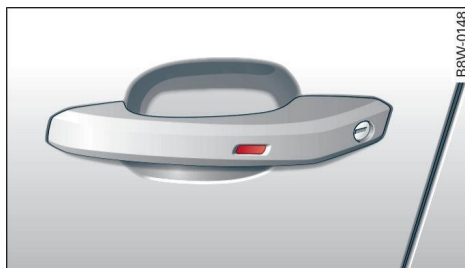


Fig. 28 Door handle: sensor for locking

Depending on the vehicle equipment, you may have various options for unlocking and locking your vehicle. The settings in the MMI specify which doors will unlock ⇒ *page 37*.

Unlocking or locking using the vehicle key buttons

- ▶ To unlock the vehicle, press the  button ⇒ *page 40, fig. 27*.
- ▶ To lock the vehicle, press the  button **once**.

Unlocking or locking using the sensors

Applies to: vehicles with convenience key

- ▶ To unlock the vehicle, grasp the door handle.
- ▶ To lock the vehicle, close the door and touch the sensor on the door handle **once** ⇒ *fig. 28*. Do not grasp the door handle while locking the vehicle, or else the vehicle will not lock. The door cannot be opened for a brief period directly after locking it. This way you have the

opportunity to check if the doors locked correctly.

Unlocking and locking with the Audi connect vehicle control service¹⁾

Applies to: vehicles with Audi connect vehicle control

Requirement: Audi connect vehicle control services must be set up ⇒ *page 191*. The vehicle must be parking and the ignition must be turned off.

WARNING

Observe the safety precautions ⇒ *page 36*.

Tips

- Only use the vehicle key when you can see the vehicle.
- The vehicle can only be locked when the "P" position is selected.
- Do not use the vehicle key to lock and unlock when you are inside the vehicle. Otherwise, you could trigger the anti-theft alarm*. If this happens, press the  unlock button.

Tips

Applies to: vehicles with convenience key

- When unlocking or locking the vehicle, the convenience key cannot be more than approximately 4 feet (1.5 m) away from the door handle or luggage compartment.
- Unlocking with the convenience key (keyless access) can be deactivated in the MMI ⇒ *page 37*.
- To prevent the vehicle battery from discharging, the energy management gradually turns off convenience functions that are not needed. You then may no longer be able to unlock your vehicle with the sensors.

LED and battery in the vehicle key



Fig. 29 Vehicle key: removing the battery holder

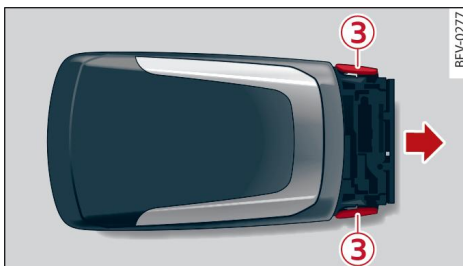


Fig. 30 Vehicle key (rear side): removing the battery holder

LED in the vehicle key

The LED ① indicates the vehicle key function.

- ▶ If you press a button briefly, the LED blinks once.
- ▶ If you press and hold a button (convenience opening/closing), the LED blinks several times.
- ▶ If the LED does not blink, the vehicle key battery is drained. Replace the battery in the vehicle key.

Replacing the vehicle key battery

The replacement battery in the vehicle key must meet the same specifications as the original battery (battery type **CR 2032**).

- ▶ Press the release buttons ② ⇒ *fig. 29* and remove the mechanical key.
- ▶ Press the release buttons ③ ⇒ *fig. 30* while pulling the battery holder out of the vehicle key in the direction of the arrow.
- ▶ Replace the battery and insert the new battery with the "+" symbol facing down.

¹⁾ In certain countries.

- ▶ Slide the battery holder carefully into the vehicle key.
- ▶ Insert the mechanical key.

If the  indicator light appears with a corresponding message, the vehicle key battery is drained and must be replaced.



WARNING

If batteries or coin cell batteries are swallowed or enter the body in any other way, they can cause serious injuries or death within a short period of time. There is a risk of chemical burns.

- Keep vehicle keys and key fobs with batteries out of the reach of children.
- Keep new or used batteries away from children.
- If the battery compartment on a vehicle key does not close securely, stop using the key and keep it away from children.
- Seek medical attention immediately if you suspect that a battery was swallowed or has entered the body in any other way.



For the sake of the environment

 Batteries and electrical/electronic devices must be disposed of in an environmentally safe manner ⇒ *page 310, Disposal instructions*.

Luggage compartment lid

General information



WARNING

- No one, especially children, should stay in the vehicle when it is locked from the outside, because the windows can no longer be opened from the inside. Locked doors make it more difficult for emergency workers to enter the vehicle, which increases the risk of death.

- Always close and lock the luggage compartment lid and the doors when the vehicle is not in use. Otherwise someone, such as a child, could enter the vehicle through the luggage compartment and become locked inside it. To reduce the risk of injury, do not allow children to play in or around the vehicle.

- To reduce the risk of injuries by pinching, make sure that no one is in the operating area of the luggage compartment lid when closing, especially near the hinges, at the upper and lower edges of the lid, or all around the edge of the lid in general.
- After closing the luggage compartment lid, make sure that it is latched. Otherwise, the luggage compartment lid could open suddenly while driving, which would increase the risk of an accident.
- Never drive with the luggage compartment lid ajar or open, because exhaust fumes from outside can enter the vehicle interior and increase the risk of asphyxiation.
- If there is a luggage carrier (such as a bicycle rack) on the luggage compartment lid, the luggage compartment lid may not open completely under certain circumstances or it could close by itself if open due to the extra weight. Therefore, the open luggage compartment lid must be given additional support or the cargo must first be removed from the luggage carrier.
- Applies to: vehicles with power-operated or sensor-controlled luggage compartment lid: ¹⁾ Pay careful attention when closing the luggage compartment lid. Otherwise, you could cause serious injury to yourself or others despite the pinch protection.



Note

The luggage compartment lid can bump into objects such as the garage ceiling when opening and become damaged. ▶

¹⁾ Not available in all countries.

Tips

- When the vehicle is locked, the luggage compartment lid can be unlocked separately by pressing the  button twice on the vehicle key. The luggage compartment lid locks automatically when it is closed again.
- The ability to open the luggage compartment lid using the handle $\Rightarrow$ page 44, fig. 31 can be deactivated or activated in the MMI $\Rightarrow$ page 37.

Opening and closing the luggage compartment lid



Fig. 31 Rear lid: handle



Fig. 32 Driver's door: opening the luggage compartment lid

Opening the luggage compartment lid

- Applies to: vehicles without convenience key: Unlock the vehicle or the luggage compartment lid using the  /  button on the vehicle key and press the handle in the luggage compartment lid $\Rightarrow$ fig. 31. Or
- Applies to: vehicles with convenience key: Press the handle in the luggage compartment lid $\Rightarrow$ fig. 31. When the luggage compartment is locked, the vehicle key cannot be more than ap-

proximately 4 feet (1.5 m) away from the luggage compartment. Or

- Applies to: vehicles with automatic luggage compartment lid: Select the "P" position and pull the  button $\Rightarrow$ fig. 32 in the driver's door.

Closing the luggage compartment lid

- Applies to vehicles without automatic luggage compartment lid: Use the inside grip to slightly pull the luggage compartment lid down and allow it to drop gently to close. Or
- Applies to: vehicles with automatic luggage compartment lid: Note $\Rightarrow$ page 44.



WARNING

Observe the safety precautions $\Rightarrow$ page 43.

Automatic luggage compartment lid

Applies to: vehicles with automatic luggage compartment lid

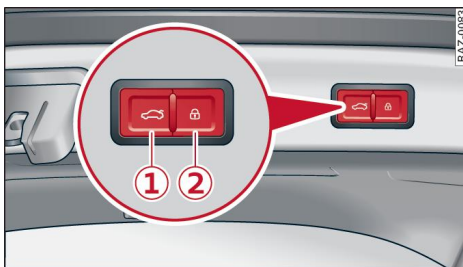


Fig. 33 Luggage compartment lid: ① closing button*, ② lock button* (vehicles with convenience key*)

The luggage compartment lid can be opened and closed automatically $\Rightarrow$  in *General information* on page 43.

Opening the luggage compartment lid

- When the ignition is turned off, press the  button on the vehicle key twice $\Rightarrow$ page 40, fig. 27. Or
- Select the "P" position and pull the  button* in the driver's door $\Rightarrow$ page 44, fig. 32. Or
- Applies to: vehicles with convenience key: Press the handle in the luggage compartment lid $\Rightarrow$ page 44, fig. 31. When the luggage compartment is locked, the vehicle key cannot be more than approximately 4 feet (1.5 m) away from the luggage compartment.

Closing the luggage compartment lid

- ▶ Press the  button in the luggage compartment lid. Or
- ▶ Press the handle in the luggage compartment lid ⇒ *page 44, fig. 31*. Or
- ▶ Press the luggage compartment lid downward slightly. Or
- ▶ When the ignition is turned on, pull the  switch in the driver's door ⇒ *page 44, fig. 32* until the luggage compartment lid is closed. Or
- ▶ Applies to: vehicles with convenience key: Press and hold the  button on the vehicle key while the ignition is off until the luggage compartment lid closes. Make sure there is enough distance (maximum of approximately 9 feet (3 m)) between you and the luggage compartment lid. Or
- ▶ Press the  button in the luggage compartment lid. Or
- ▶ Applies to: vehicles with convenience key: With the ignition off, press the  /  button in the luggage compartment lid. The vehicle key must not be more than approximately 4 feet (1.5 m) away from the luggage compartment and it must not be inside the vehicle. If you press the * button, then the vehicle will lock.

Stopping automatic opening or closing

The automatic opening or closing of the luggage compartment lid will stop if:

- ▶ You press the  button or press the handle in the luggage compartment lid ⇒ *page 44, fig. 31* again. Or
- ▶ You press the  button on the convenience key*. Or
- ▶ Something blocks the luggage compartment lid or makes it difficult for the lid to move.

If you press the button  or the handle in the luggage compartment lid ⇒ *page 44, fig. 31* again, the luggage compartment lid will open or close again.

Storing the luggage compartment lid opening position

Applies to: Sportback

The position must be at a certain height or higher to store.

- ▶ Bring the luggage compartment lid into the desired open position. If you want to move the luggage compartment lid to a lower position, move it slowly in small increments; otherwise, the luggage compartment lid will close automatically.
- ▶ Press and hold the  button in the luggage compartment lid for at least four seconds to store the new opening position. A visual and audio signal will follow.
- ▶ To set a higher open position, wait at least five seconds and then carefully press the luggage compartment lid upward.
- ▶ Press and hold the  button again for at least four seconds to store the desired opening position.

Manually opening and closing the luggage compartment lid

If the electric motor malfunctions or the vehicle battery charge level is low, the luggage compartment lid can be opened or closed by hand. Extra force will be needed to do this. Move the lid slowly to reduce the amount of force needed.

- ▶ Pull the luggage compartment lid down slightly by the inside handle and then press on the lid until it latches.



WARNING

Observe the safety precautions ⇒ *page 43*.



Tips

If the luggage compartment lid is open while the vehicle key is inside the luggage compartment or the passenger compartment, then the * button on the luggage compartment lid will be disabled.

Opening and closing the luggage compartment lid with foot motion¹⁾ (kicking movement)

Applies to: vehicles with sensor-controlled luggage compartment lid



Fig. 34 Vehicle rear: foot motion (example)

The luggage compartment lid can be opened and closed automatically²⁾ ⇒ ⚠ in *General information* on page 43.

Requirements: you must be carrying your convenience key* with you. The ignition must be off. You must be standing at the center behind the luggage compartment lid. Depending on vehicle equipment, it may also be possible to stand slightly off-center at the back of your vehicle.

- Move your foot back and forth under the bumper one time ⇒ *fig. 34*. Do not touch the bumper. Make sure you have secure footing. The luggage compartment lid will open or close²⁾ once the system detects the movement. The automatic opening or closing will be canceled if you repeat one of the movements described.

⚠ WARNING

Observe the safety precautions ⇒ *page 43*.

⚠ WARNING

Please note that when you have the convenience key with you, the sensor-controlled luggage compartment lid could open or close unexpectedly during activity near the rear of the vehicle. This increases the risk of an accident.

! Note

Please note that when you have the convenience key with you, the sensor-controlled luggage compartment lid could open or close unexpectedly during activity near the rear of the vehicle (for example, the lid could hit the ceiling in a garage).

i Tips

The luggage compartment lid will only open or close²⁾ if you perform the movement as described. This prevents the luggage compartment lid from opening or closing due to similar movements²⁾, such as when you walk between the rear of the vehicle and your garage door. In some situations, the function may be limited or temporarily unavailable. This may happen if:

- You are standing too close to the bumper or too far away from it.
- The luggage compartment lid was closed or opened immediately beforehand.
- You park close to a hedge and the branches move back and forth under the vehicle for a long period of time.
- You clean your vehicle, for example with a pressure washer or in a car wash.
- There is heavy rain.
- The bumper is very dirty, for example after driving on roads that have been treated with salt.
- There is interference to the vehicle key's radio signal, such as from mobile devices or remote controls
- If the vehicle key is located in the luggage compartment or passenger compartment while the luggage compartment lid is open, then it will not be possible to close the luggage compartment lid using foot motions.

¹⁾ Not available in all countries.

²⁾ The closing function applies to vehicles that also have automatic luggage compartment lid operation.

Manually unlocking the luggage compartment lid

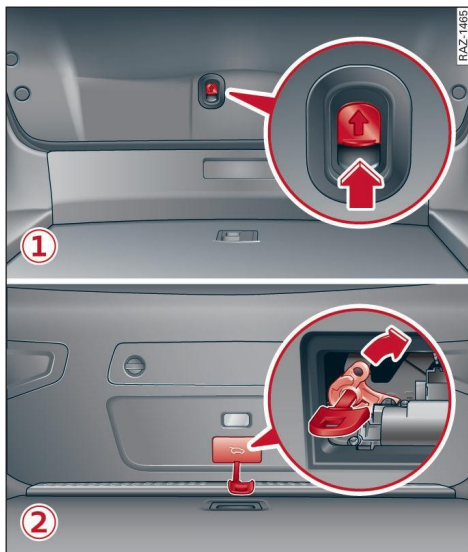


Fig. 35 Inner luggage compartment lid: access to the emergency release. ① Coupe, ② Sportback

- Fold the backrest on the rear bench seat forward ⇒ *page 89*.
- Applies to: Coupe: Press the lever in the direction of the arrow until the luggage compartment lid opens ① ⇒ *fig. 35*.
- Applies to: Sportback: Remove the mechanical key ⇒ *page 40*.
- Applies to: Sportback: Using the mechanical key, pry out the cover in the luggage compartment lid trim panel ② ⇒ *fig. 35*.
- Applies to: Sportback: To unlock the luggage compartment lid, press the lever in the direction of the arrow using a suitable object (such as a screwdriver) or using the mechanical key if necessary.
- Fold the backrest backward until it locks into place.



WARNING

Observe the safety precautions ⇒ *page 43*.



WARNING

If you have folded the backrests into the upright position, always check if the lock is correctly engaged by pulling forward on the backrest.

Opening the luggage compartment lid from the inside in an emergency

Applies to: vehicles with interior trunk release

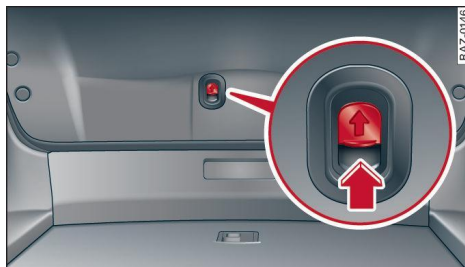


Fig. 36 Inner luggage compartment lid: lever

- Press the lever in the direction of the arrow until the luggage compartment lid opens.

Child safety lock

Applies to: vehicles with child safety locks

The child safety lock prevents the rear doors from being opened from the inside and the rear power windows from being operated.

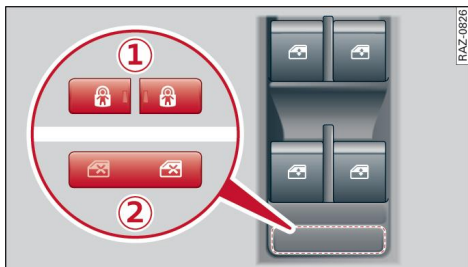


Fig. 37 Driver's door: controls



Applies to: vehicles with manual child safety locks

Fig. 38 Rear door: manual child safety lock

Vehicles with button

Applies to: vehicles with power child safety locks

- ▶ To activate and deactivate the child safety lock (door handle and power window switch) for a rear door, press the left or right  button in the driver's door ① that corresponds to that rear door ⇒ fig. 37. The LED in the button will turn on or off.
- ▶ Make sure the child safety lock is working by checking the function on the rear power window switch and door handle.

Vehicles with button

Applies to: vehicles with manual child safety locks

- ▶ To activate or deactivate the child safety lock for the power window switch in the rear doors, press the  button in the driver's door ② ⇒ fig. 37. The LED in the button will turn on or off.

- ▶ To activate or deactivate the manual child safety lock for the rear door handle, open the respective rear door and turn the key switch with the mechanical key in the direction of the arrow or opposite the direction of the arrow ⇒ fig. 38. This will disable the function of the rear door handle.
- ▶ Make sure the child safety lock is working by checking the function on the rear power window switch and door handle.

When the child safety lock is turned on, the following functions are disabled:

- The rear inner door handles*
- The rear power windows*
- The control panel* for the climate control system in the rear. In this case, you can continue operating the climate control system in the rear using the **SYNC** button ⇒ page 93 in the climate control system controls in the cockpit.

Applies to: vehicles with power child safety locks: It is not possible to operate the rear climate control system* when the child safety lock is activated. The **SET REAR** function allows you to adjust all settings in the rear using the climate control system controls in the cockpit.

Message in the instrument cluster display

The following messages may appear, depending on the vehicle equipment:

/ **Child safety lock: malfunction! Please contact Service**

There is a malfunction in the child safety lock. Press the  /  button again.

If the message stays on, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

WARNING

- Observe the safety precautions ⇒ page 36.
- A malfunction in the child safety lock could allow the rear doors to be opened from the inside, which increases the risk of an accident.

Power windows

Opening and closing the windows

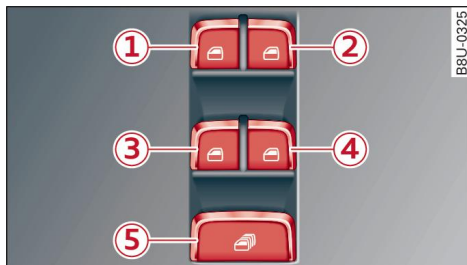


Fig. 39 Driver's door: power window switch*

Power window switches:

- ① Left front door
- ② Right front door
- ③ Left rear door*
- ④ Right rear door*
- ⑤ Central switch* for opening or closing all side windows at the same time

Opening and closing the windows

All power windows can be operated from the driver's seat. All power window switches are equipped with a two-stage function:

- To open or close the window completely, press the switch down or pull the switch up briefly to the second level. The operation will stop if the switch is pressed or pulled again.
- To select a partially open position, press or pull the switch to the first level until the desired window position is reached.

Correcting a malfunction in the one-touch up/down function

If necessary, you can reactivate the one-touch up/down function if it malfunctions.

- Pull the power window switch up until the window is completely raised.
- Release the switch and pull it up again for at least one second.



WARNING

- Observe the safety precautions ⇒ page 36.

- Never close the windows carelessly or in an uncontrolled manner, because this increases the risk of injury.



Tips

- The windows will automatically open slightly when you open the doors.
- If the window in the driver's or front passenger's door is completely open, it will raise slightly when the door is opened. The window will lower again when you close the door.
- You can still open and close the windows for several minutes after turning the ignition off. The power windows do not turn off until the driver's door or front passenger's door has been opened.
- The power windows are equipped with pinch protection. The automatic window may stop closing and will open all the way again even if no obstacle is detected. Pull the power window switch up until the window is completely raised.

Convenience opening and closing

Applies to: vehicles with convenience key

Convenience opening and closing the windows and roof*

You can set in the MMI if all windows and the roof* should open all at once ⇒ page 37, *Setting the central locking system*.

- Press and hold the button on the vehicle key until all of the windows reach the desired position and the roof* is tilted open ⇒ Or
- Touch the sensor* on the door handle ⇒ page 41, fig. 28 until all of the windows and the roof* are closed. Do not place your hand in the door handle when doing this.

When all of the windows and the roof* are closed, the turn signals will flash once.



WARNING

- Observe the safety precautions ⇒ page 36. ►

- Never close the windows or the roof* carelessly or in an uncontrolled manner, because this increases the risk of injury.
- For security reasons, the windows and the roof* should only be opened and closed with the vehicle key when they are within sight and when you are at a maximum distance of approximately 6.5 feet (2 m) from the vehicle. Always pay attention when using the  button to close the windows and the roof* so that no one is pinched. The closing process will stop immediately when the  button is released.

Tips

Applies to: vehicles with panoramic glass roof: If the sunshade is closed, it will automatically open when the roof is tilted.

Panoramic glass roof

Operating the panoramic glass roof and roof sunshade

Applies to: vehicles with panoramic glass roof and roof sunshade

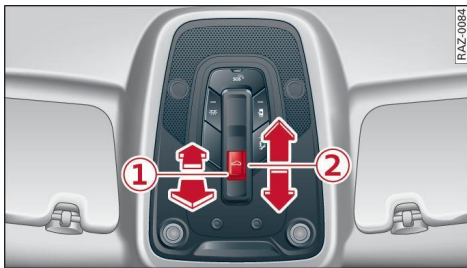


Fig. 40 Headliner: button for the panoramic glass roof and sunshade

The control button is equipped with a two-stage function.

If the sunshade is closed, it will automatically open when the roof is tilted or opened.

Operating the roof sunshade

The roof sunshade cannot be closed completely if the roof is open.

- ▶ Opening and closing the sunshade: push the  switch in the headliner  briefly toward the rear or forward to the second level.
- ▶ Partially opening the sunshade: press the  switch to the first level until the sunshade reaches the desired position.

Operating the roof

- ▶ Tilting the roof: press the  switch in the headliner briefly up to the second level .
- ▶ Closing the tilted roof: pull the  switch down briefly to the second level.
- ▶ Applies when the sunshade is open: Opening the roof: push the  button toward the rear briefly to the second level .
- ▶ Closing the opened roof: push the  switch forward briefly to the second level.
- ▶ Applies when the sunshade is open: Opening partially: push, press, or pull the  switch to the first level until the roof reaches the desired position.

Quick opening and closing

You can also open or close the roof and roof sunshade in one movement.

- ▶ Opening the roof and sunshade: slide the  switch back briefly twice in a row to the second level .
- ▶ Closing the opened roof: push the  switch forward briefly twice in a row to the second level.

If necessary, you can interrupt the quick opening or closing process by pressing the button again.

Roof emergency closing

If an object is detected when closing, the roof will open again automatically. In this case, you can then close it with the power emergency closing function.

- ▶ Within five seconds after the roof opens automatically, pull the switch  until the roof closes.

WARNING

- Observe the safety precautions ⇒ page 36.
- To reduce the risk of injury, always pay attention when closing the roof. Always turn

off the ignition and take the key with you when leaving the vehicle.

Note

Always close the roof when you leave the vehicle and when there is precipitation to reduce the risk of damage to the interior equipment, particularly the electronic equipment.

Tips

- After turning off the ignition, the roof and sunshades can still be operated for several minutes as long as neither of the front doors have been opened.
- It is not possible to open the roof when temperatures are too low.

Valet parking

Applies to: vehicles with valet parking function

The valet parking function can protect the luggage compartment from unauthorized access.

The **VALET** button for valet parking is in the glove compartment.

You can turn on the valet parking function, for example when someone else is parking your vehicle ¹⁾. The vehicle can be driven, locked, and unlocked using the vehicle key, but access to the luggage compartment is blocked.

- ▶ Remove the mechanical key ⇨ *page 40*.
- ▶ Press the **VALET** button in the glove compartment. The LED in the button turns on if the function is turned on.
- ▶ Lock the glove compartment with the mechanical key.
- ▶ Applies to: vehicles with lockable backrests in the rear: To also secure the luggage compartment from the vehicle interior, lock the backrests in the rear of the vehicle ⇨ *page 89*.
- ▶ Give your vehicle key to the service personnel who are parking your vehicle and keep the mechanical key.

If the  indicator light appears with a corresponding message, the vehicle key battery is drained and must be replaced.

The following buttons are deactivated when the valet parking function is turned on:

-  Button in the driver's door
-  Button on the vehicle key
- Handle in the luggage compartment lid
⇨ *page 44, fig. 31*

If the valet parking function is turned on, a message will appear every time the ignition is turned on.

Tips

Please note that the luggage compartment can still be accessed from the vehicle interior in vehicles with fixed rear seat backrests or ones that cannot be locked, even when the valet parking function is turned on.

Garage door opener

Description

Applies to: vehicles with garage door opener

With the garage door opener, you can activate systems such as the garage doors, security systems, or house lights from inside your vehicle. The functions are operated on the rearview mirror. Multiple receivers that can control the functions of up to three hand-held transmitters can be programmed. A menu guide will be shown in the MMI when operating the functions.

WARNING

- When operating or programming the garage door opener, make sure that no people or objects are in the area immediately surrounding the equipment. People can be injured or property can be damaged if struck when closing.
- Do not allow yourself to be distracted from traffic by viewing and operating the center display.

¹⁾ This function is not available in all countries.

Tips

- If you sell your vehicle, reset all settings to the factory default settings ⇒ *page 231*.
- The system complies with United States FCC regulations and ISED regulations
⇒ *page 310*.

Tips

- Before you program your system to the garage door opener, first check the compatibility:
- Ask an authorized Audi dealer or authorized Audi Service Facility or check at www.homelink.com. You can also find more information about HomeLink there.
 - You can display information about HomeLink (compatibility level/status/country code/HomeLink generation) in the MMI:
– Select on the home screen: **VEHICLE > Settings & Service > Garage opener > ①**.

Operation

Applies to: vehicles with garage door opener



Fig. 41 Rearview mirror: buttons for the garage door opener

Requirements: the remote control transmitter must be programmed ⇒ *page 52, Programming*, the vehicle must be within range of the system, and the ignition must be turned on.

To open or close the system (such as the garage door), press the corresponding button on the rearview mirror.

If the signal was transmitted successfully, the  symbol on the rearview mirror will flash white.

Programming

Applies to: vehicles with garage door opener

You can program both fixed code and rolling code systems in the MMI using the procedure that is described.

Requirement: the ignition must be turned on.

If programming has been started, the  symbol on the rearview mirror will flash orange.

Programming the system

Applies to: MMI

Requirement: the hand-held transmitter must be present and the vehicle must be within range of the system (such as the garage door) that you would like to program.

- ▶ If you would like to program a system, select on the home screen: **VEHICLE > Settings & Service > Garage opener**. Press the desired button (1-3). Follow the instructions in the MMI. Or
- ▶ Press the corresponding button in the garage door opener on the rearview mirror. Follow the instructions in the MMI.
- ▶ If you would like to **reprogram** systems that are already programmed, select on the home screen: **VEHICLE > Settings & Service > Garage opener**. Press the button you would like to program (1-3) with the opener system. Follow the instructions in the MMI.

With some systems, the garage door opener will be available immediately after programming. With other systems, the garage door opener must also be synchronized. In this case, the  symbol on the rearview mirror will flash white quickly.

Synchronizing¹⁾

Requirement: the hand-held transmitter must already be programmed and the vehicle must be within range of the system (such as the garage door).

If the system synchronization is performed directly after the programming procedure, follow the instructions on the MMI.

¹⁾ Only applies to rolling code systems

If you would like to sync at a later time:

- Applies to: MMI: Select on the home screen:
VEHICLE > Settings & Service > Garage opener.
- Press the desired button (1-3) that you would like to synchronize and then press **Sync**.
- Follow the instructions in the MMI.

Deleting programmed systems

Opener systems that are programmed can be deleted individually.

- Applies to: MMI: Select on the home screen:
VEHICLE > Settings & Service > Garage opener.
- Press the button (1-3) with the programming you would like to delete and press **Delete**.

Tips

- Make sure the batteries in the hand-held transmitter are charged before starting the programming process.
- The programming process may take up to 30 seconds. It may be necessary for the hand-held transmitter to be pressed again in the meantime.
- The garage door opener may need to be synchronized with the system after programming. Follow the manufacturer's instructions for doing this.

Tips

- In some cases, the system may need to be programmed in a different mode ("D mode").
- Turn on the ignition.
 - Applies to: MMI: Select on the home screen:
VEHICLE > Settings & Service > Garage opener.
 - Press and hold the desired button (1-3).
 - Select **Yes, in D mode** and follow the instructions on the MMI.

Lights and vision

Exterior lighting

Turning the lights on or off



Fig. 42 Instrument panel: light switch with button

① Light switch ☀

Turn the light switch ① to the corresponding position when the ignition is turned on. The ☀ symbol and the selected position will turn on (except position 0).

0 - The daytime running lights will automatically turn on. In vehicles for some markets, you can turn the automatic daytime running lights on and off in the MMI.

AUTO - The headlights will automatically adapt to the surrounding brightness.

☀ - Parking lights

☀ - Low beam headlights

When the low beam headlights or parking lights are turned on, the corresponding ☀ or ☀ indicator light will turn on depending on vehicle equipment.

② All-weather lights ☀

Requirement: the light switch must be in the AUTO or ☀ position.

The headlights automatically adjust so that there will be less glare, for example when the road surface is wet.

Automatic headlight range control

Your vehicle is equipped with automatic headlight range control. It reduces glare for oncoming

traffic if the vehicle load changes. The headlight range adjusts automatically.

Audi adaptive light

Applies to: vehicles with Audi adaptive light

Audi adaptive light provides better visibility when driving in the dark. The lights are adapted to the road conditions based on speed, such as when driving on expressways, rural roads, at intersections, and around curves. The adaptive lights only function when the light switch is in the AUTO position and the all-weather lights are turned off.



WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ page 127 to ⇒ page 130.
- Automatic headlights are only intended to assist the driver. The driver is still responsible for controlling the headlights and may need to turn them on or off manually depending on light and visibility conditions. For example, fog cannot be detected by the light sensors. So always turn on the low beams ☀ under these weather conditions and when driving in the dark.



Tips

- If the vehicle battery has been discharging for a while, the parking light may turn off automatically. Avoid using the parking lights for several hours.
- When using lighting equipment, the driver is responsible for adhering to any local applicable regulations while driving and when parking the vehicle.
- Only the front headlights are on when the daytime running lights are turned on. In vehicles in certain markets, the tail lights will also turn on.
- In cool or damp weather, the inside of the headlights, turn signals, and tail lights can fog over due to the temperature difference between the inside and outside. They will clear shortly after turning them on. This does not affect the service life of the lighting.

Turn signal and high beam lever

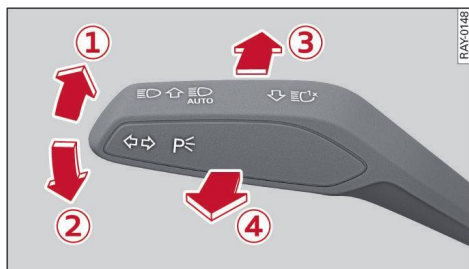


Fig. 43 Lever: turning the light functions on or off

The lever operates the turn signals, the high beams and the headlight flasher.

Turn signals ⇄

The turn signal will activate when you move the lever into a turn signal position while the ignition is on. The respective or indicator light will flash. The turn signal blinks three times if you tap the lever (convenience turn signal).

- ① Right turn signal
- ② Left turn signal

If an indicator light blinks twice as fast as usual, a turn signal bulb has failed. Carefully drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

The $P<$ symbol does not have any function assigned to it in vehicles in certain countries.

High beams and headlight flasher

► Move the lever to the corresponding position:

- ③ High beams on (vehicles with High beam assistant* ⇒ page 55)
- ④ High beams off or headlight flasher

The indicator light in the instrument cluster will turn on.

WARNING

High beams can cause glare for other persons, which increases the risk of an accident. For this reason, only use the high beams or the

headlight flasher when they will not create glare for others.

High beam assistant

Applies to: vehicles with high beam assistant

The high beam assistant automatically turns the high beams on or off depending on environmental factors.

A camera on the rearview mirror mount can detect light sources from other road users. The high beams turn on or off automatically depending on the position of vehicles traveling ahead and oncoming vehicles, the vehicle speed as well as other environmental factors and traffic conditions.

Activating the high beam assistant

Requirement: the light switch must be in the AUTO position and the high beam assistant must be turned on in the MMI ⇒ page 57.

- To activate the high beam assistant, tap the lever forward ③ ⇒ page 55, fig. 43. The indicator light will appear in the instrument cluster display and the high beams will turn on or off automatically. The indicator light will turn on if the high beams are turned on.

Activating and deactivating the high beam head lights manually

If the high beams did not turn on or off as expected, you may turn them on or off manually instead:

- To activate the high beams manually, tap the lever forward ③ ⇒ page 55, fig. 43. The indicator light will turn on.
- To deactivate the high beams manually, pull the lever back ④ ⇒ page 55, fig. 43. The high beam assistant is deactivated.

Operating the headlight flasher

- To operate the headlight flashers, pull the lever back ④ ⇒ page 55, fig. 43. If the high beam headlights are not turned on, the high beam assistant will remain activated. ►

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ [page 127](#) to ⇒ [page 130](#).
- The high beam assistant is only intended to assist the driver. The driver is always responsible for controlling the high beam headlights and adjusting them based on the lighting and visibility conditions.
- High beams can cause glare for other persons, which increases the risk of an accident. For this reason, only use the high beams or the headlight flasher when they will not create glare for others.

Tips

Adhere to any local applicable regulations when using the lighting equipment, for example in regard to reducing glare for other road users. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.

Laser lighting

Applies to: vehicles with laser lighting



Fig. 44 Headlights: label

The laser lights increase the range of the headlights.

An additional module integrated in the headlight converts a blue laser light into a white light using a luminescent material.

Activating or deactivating laser lights

Requirement: the light switch must be in the AUTO position and the high beam assistant and the laser lights must be turned on in the MMI ⇒ [page 57](#).

The high beam is controlled by the high beam assistant. The laser lights turn on shortly after the LED high beams are turned on.

- ▶ To activate the high beam assistant, tap the lever forward  ⇒ [page 55](#), [fig. 43](#). The  indicator light will appear in the instrument cluster display and the high beams will turn on or off automatically.

The laser lights are turned on at speeds above approximately 44 mph (70 km/h) when the high beams are turned on. The  indicator light will turn on if the high beams are turned on. The  indicator light turns on if the laser lights are turned on.

The laser lights are turned off if the speed drops below approximately 30 mph (50 km/h) or if the high beam assistant turns off the LED headlights.

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ [page 127](#) to ⇒ [page 130](#).
- All repair procedures on the headlights must be performed by an authorized Audi dealer or authorized Audi Service Facility that will perform the work according to Audi factory specifications. Incorrect repairs could result in eye injury, impair the function, and may void the vehicle's operating license.
- Opening the laser module is not permitted and could cause permanent injuries to the eyes.

- Dangerous exposure to laser beams may occur if the covers are removed or if the headlight module housing is opened.

Tips

- The headlight contains a class 2 laser. The technical design converts the laser beam so that there is no danger when it is used for its intended purpose.
- The laser beam emission from the headlight has been classified in accordance with IEC 60825-1:2007.
- The possible emission is below the threshold for laser class 2.
- Maximum laser beam output: 5W (continuous emission), wavelength range $\lambda = 400 \text{ nm} - 700 \text{ nm}$.
- The headlight light functions are rated in accordance with IEC 62471-5:2015.
- The beam emitted from the headlight was classified as risk group 2.

Adjusting the exterior lighting

The following settings depend on the vehicle equipment.

- Applies to: MMI: Select on the home screen: **VEHICLE > Light & Visibility > Exterior lighting**.

Automatic headlights

You can adjust the following settings in the **Automatic headlights** menu:

Activation time - You can adjust if the headlights turn on **Early**, **Medium**, or **Late** based on the sensitivity of the light sensor.

High beam assistant - You can turn the high beam assistant on or off.

Laser lights - You can turn the laser lights on and off.

Entry/exit lighting

The **Entry/exit lighting** illuminates the area around the vehicle when the vehicle is unlocked or when the driver's door is opened while the ignition is off. The entry/exit lighting works when it

is dark and the light switch is in the AUTO position. The daytime running lights turn on automatically each time the vehicle is unlocked, regardless of how bright it is outside the vehicle.

Daytime running lights

USA models: The daytime running lights can be turned on or off.

Canada models: This function cannot be turned off. They activate automatically each time the ignition is turned on.

Emergency flashers



Fig. 45 Center console: emergency flashers

The emergency flashers help to make other road users aware of your vehicle in dangerous situations.

- Press the  button  to turn the emergency flashers on or off.

When the emergency flashers are turned on, the  and  indicator lights will flash at the same time.

You can indicate a lane change or a turn when the emergency flashers are on by using the turn signal lever. The emergency flashers will stop temporarily.

The emergency flashers also work when the ignition is turned off.

Tips

- You should turn the emergency flashers on if:
 - You are the last vehicle in a traffic jam so that all other vehicles approaching from behind can see your vehicle

- Your vehicle has broken down or you are having an emergency
- Your vehicle is being towed or if you are towing another vehicle

Messages

The following messages may appear, depending on the vehicle equipment:

If the  indicator light turns on, a bulb has failed. The displayed message indicates the cause and possible solutions. If one of the messages remains on, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

 **Audi adaptive light: malfunction! See owner's manual**

Adaptive light is not working. The headlights still function. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

 **Headlight range control: malfunction! See owner's manual**

There is a malfunction in the headlight range control system, which may cause glare for other road users. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

 **High beam assistant: malfunction! See owner's manual**

You can still turn the high beams on or off manually. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

 **High beam assistant: currently unavailable. Camera view limited due to environmental conditions**

This message appears if the camera's visual field is blocked. The system will turn itself off. Try turning the systems on later.

 **Automatic headlights: malfunction! See owner's manual**

The light/rain sensor is malfunctioning. In the AUTO light switch position, the low beams re-

main turned on at all times for safety reasons. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Interior lighting

Front interior lighting



Fig. 46 Headliner: front interior lighting

Interior lighting buttons

 – Interior lighting on/off

 – Door contact switch on/off. The interior lighting is controlled automatically.

Touch-sensitive reading lights

- ▶ To turn a reading light on or off, touch the surface  briefly.
- ▶ To activate the manual dimming function, touch the surface  when the light is turned off and keep touching it until the desired brightness is reached.

Rear interior lighting

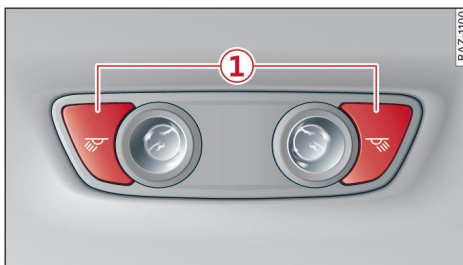


Fig. 47 Headliner: rear reading lights

Reading lights

- ▶ To turn the reading lamp on or off, press the  button ①.
- ▶ To activate the manual dimming function*, touch the surface while the light is off  ① and keep touching it until the desired brightness is reached.

Interior lighting

Applies to: vehicles with interior lighting

The ambient lighting turns on when the ignition is turned on. The 0 light switch position deactivates the interior lighting.

The following settings depend on the vehicle equipment.

- ▶ Applies to MMI: Select on the home screen: **VEHICLE > Light & Visibility > Interior lighting**.

You can choose from various color profiles, such as **Maritime**.

Additional settings and profiles:

- **Brightness**: you can adjust the brightness for all of the interior lighting.
- **Individual**: you can adjust the brightness and color of the interior lighting separately for the line and surface lighting.
- **Audi drive select**: the line and surface lighting color changes depending on the selected drive select mode.

Tips

Depending on vehicle equipment, when the drive select* function is turned on, the color of the contour and surface lighting may briefly change to red or blue when the interior temperature is manually increased or decreased.

Display brightness

You can set the instrument and display illumination. The settings depend on the vehicle equipment.

- ▶ Applies to MMI: select on the home screen: **SETTINGS > Display & Brightness**.

- Cockpit dimming
- Head-up display
- MMI
- Audi virtual cockpit

Instrument illumination



Fig. 48 Light switch: instrument illumination

 – You can adjust the background brightness of the instruments and display illumination.

- ▶ Press the knob ① to release it.
- ▶ Turn the knob toward "-" or "+" to reduce or increase the brightness.
- ▶ Press the knob again to return it to its original position.

Tips

Depending on vehicle equipment, the instrument illumination (needles and gauges) may turn on when the lights are off and the ignition is turned on. The illumination for the gauges reduces automatically and eventually turns off as brightness outside increases. This function reminds the driver to turn the low beams on at the appropriate time.

Vision

Adjusting exterior mirrors



Fig. 49 Driver's door: knob for the exterior mirrors

► Turn the knob in the driver's door to the desired position:

0 – Deactivates all adjustment functions.

◀ / ▶ – Selects the left or right exterior mirror. To adjust the mirror glass in a mirror, press the knob in the desired direction.

🔥 – Heats the mirror glass depending on the outside temperature.

↔ – Folds the exterior mirrors in*. To fold the mirrors out, turn the knob to one of the other positions. In the MMI, you can select if the mirrors fold in automatically when you lock the vehicle
⇒ *page 37*.

Front passenger's exterior mirror tilt function*

Requirement: the knob must be in the position for the front passenger's exterior mirror.

The mirror surfaces tilt slightly when reverse gear is selected to provide a better view, for example of the edge of the curb.

You can adjust the mirror surface by turning the knob in the desired direction.

The mirror moves from the reversing position back to the original position:

- When you turn off the ignition
- When you drive forward at speeds faster than 9 mph (15 km/h).
- When the knob is no longer in the position for the front passenger exterior mirror

WARNING

Curved mirror surfaces (for example convex) enlarge the field of vision. However, they make objects in the mirror appear smaller and farther away. When using these mirrors to estimate your distance to vehicles behind you when changing lanes, you could estimate incorrectly, which increases the risk of an accident.

Note

- Applies to: vehicles with power folding exterior mirrors: If the mirror housing was moved by outside forces (such as an impact when maneuvering), you must use the power folding function to fold the mirror all the way out. The mirrors will make a loud noise when they latch into place. The mirror housing must not be moved back into place by hand because this could impair the function of the mirror mechanism.
- Applies to: vehicles without power folding exterior mirrors: If the mirror housing was moved by outside forces (such as an impact when maneuvering), you must move it back into place by hand.
- If you wash the vehicle in an automatic car wash, you must fold the exterior mirrors in to reduce the risk of damage to the mirrors. Never fold power folding exterior mirrors* by hand. Only fold them in and out using the power controls.

Tips

If the power adjusting function malfunctions, the glass in both mirrors can be adjusted by pressing on the edge of it by hand.

Dimming the mirrors

Manual dimming rearview mirror

- Pull the lever on the bottom of the mirror back. ►

Automatic dimming rearview mirror

Applies to: vehicles with automatic dimming mirrors

- The interior and exterior mirrors dim automatically when light shines on them, for example from headlights on a vehicle behind you.



WARNING

Applies to: vehicles with automatic dimming mirrors

- Electrolyte fluid can leak out from broken mirror glass. This liquid can irritate the skin, eyes and respiratory system. If there is contact with the fluid, flush immediately with plenty of water. Seek medical attention if necessary.
- Repeated or long-term exposure to electrolyte fluid can lead to irritation of the airways, especially in people with asthma or other respiratory conditions. Take deep breaths immediately after leaving the vehicle or, if this is not possible, open all of the doors and windows as wide as possible.
- If electrolyte fluid comes into contact with the eyes, flush them thoroughly with plenty of clean water for at least 15 minutes and then seek medical attention.
- If electrolyte fluid comes into contact with the skin, flush the affected area with clean water for at least 15 minutes, and then clean with soap and water and seek medical attention. Clean affected clothing and shoes thoroughly before wearing again.
- If the fluid was swallowed and the person is conscious, flush the mouth with water for at least 15 minutes. Do not induce vomiting unless this is recommended by medical professionals. Seek medical attention immediately.



Note

Applies to: vehicles with automatic dimming mirrors

Electrolyte fluid can leak out from broken mirror glass. This liquid damages plastic surfaces and paint. Clean this liquid as quickly as possible, for example with a wet sponge.



Tips

Applies to: vehicles with automatic dimming mirrors

- If the light reaching the rearview mirror is obstructed, the automatic dimming mirror will not function correctly,
- The automatic dimming mirrors do not dim when the interior lighting is turned on or the reverse gear is selected.

Sun visors



Fig. 50 Roof headliner: sun visor

Sun visor

The sun visors can be moved out of their brackets and turned toward the doors ①.

They can also be moved back and forth lengthwise in this position.

Vanity mirror

The mirror light turns on when the cover over the vanity mirror ② opens.

Windshield wipers

Turning on the windshield wipers

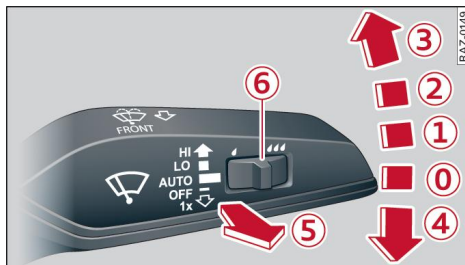


Fig. 51 Lever: windshield wipers

► Move the lever  to the corresponding position:

① Windshield wipers off

① Rain sensor/intermittent mode. The windshield wipers turn on once the vehicle speed exceeds approximately 2 mph (4 km/h) and it is raining. The higher the sensitivity of the rain sensor that is set (switch ⑥ to the right), the earlier the windshield wipers respond to moisture on the windshield. You can deactivate the rain sensor mode, which turns on intermittent mode. In intermittent mode, you can adjust the interval time using the switch ⑥.

► Applies to: MMI: Select on the home screen:
VEHICLE > Light & Visibility > Rain sensor.

② Slow wiping

③ Fast wiping

④ Single wipe. If you hold the lever in this position longer, the wipers switch from slow wiping to fast wiping.

⑤ Clean the windshield . The number of wipes and afterwipes depends on how long the lever is held in position ⑤.

The wipers wipe one time after several seconds while driving to remove water droplets. You can turn off this function by moving the lever to position ⑤ within ten seconds of the afterwipe. The afterwipe function is reactivated the next time you turn on the ignition.

If you hold the lever in position ⑤ for longer than half a second, the edge wiping feature will be activated. This moves the windshield wipers closer to the edge of the windshield and performs an afterwipe to clean the residue that results from the wiping process from the edge of the windshield. The function is available when driving at speeds up to 75 mph (120 km/h).

The headlight washer system* operates only when the low beam headlights are on. If you move the lever into position ⑤, the headlights will be cleaned at regular intervals.

WARNING

- The rain sensor is only intended to assist the driver. The driver may still need to turn the wipers on manually depending on visibility conditions.
- The windshield must not be treated with water-repelling windshield coating agents. Under unfavorable conditions, such as wetness, darkness, and when the sun is low, these coatings can cause increased glare, which increases the risk of an accident. They can also cause wiper blade chatter.
- Properly functioning windshield wiper blades are required for a clear view and safe driving ⇒ page 63, *Cleaning/changing wiper blades*.

Note

- If there is frost, make sure the windshield wiper blades are not frozen to the windshield. Turning on the windshield wipers when the blades are frozen to the windshield can damage the wiper blades.
- Prior to using a car wash, the windshield wiper system must be turned off (lever in position ①). This prevents the wipers from turning on unintentionally and causing damage to the windshield wiper system.

Tips

- The windshield wipers turn off when the ignition is turned off. You can activate the windshield wipers after the ignition is turned on again by moving the lever to any position. The single wipe function (lever in position ④) also functions when the ignition is turned off.
- Worn or dirty windshield wiper blades result in streaking. This can affect the rain sensor function. Check your windshield wiper blades regularly.
- When stopping temporarily, such as at a traffic light, the speed of the windshield wipers automatically reduces by one level.

Cleaning/changing wiper blades

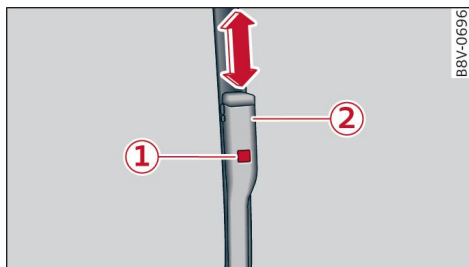


Fig. 52 Windshield wipers: replacing the wiper blades

Wiper blade replacement position

- ▶ Turn off the ignition and hold the windshield wiper lever in position ④ ⇒ *page 61, fig. 51* until the windshield wiper moves into the wiper blade replacement position.
- ▶ To bring the windshield wipers into the normal position, turn on the ignition and hold the lever in position ④ until the windshield wipers go back to the original position, or drive faster than 8 mph (12 km/h).

You can also turn the wiper blade replacement position on or off in the MMI:

- ▶ Turn the windshield wipers off (position ① ⇒ *page 61, fig. 51*).
- ▶ Applies to MMI: Select on the home screen: **VEHICLE > Settings & Service > Wiper change position**.

Cleaning the wiper blades

Requirement: the windshield wipers must be in the wiper change position.

- ▶ Fold the windshield wiper arm away from the windshield.
- ▶ For information on cleaning, see ⇒ *table on page 279*.

Replacing the wiper blades

Requirement: the windshield wipers must be in the wiper change position.

- ▶ Fold the windshield wiper arm away from the windshield.
- ▶ Hold the wiper blade firmly.
- ▶ Press the locking knob ① on the wiper blade.

- ▶ Remove the wiper blade from the windshield wiper arm mount ②.
- ▶ Insert the new wiper blade into the mount on the wiper arm until it clicks into place.
- ▶ Place the wiper arm back on the windshield.
- ▶ Exit the wiper change position.



WARNING

- For safety reasons, the windshield wiper blades should be replaced once or twice each year.
- Dirty windshield wiper blades can impair vision, which increases the risk of an accident.



Note

- The windshield wipers must only be lifted up when in the wiper change position. Otherwise, you risk damaging the paint on the hood or the windshield wiper motor.
- You should not move your vehicle or press the lever when the wiper arms are folded up from the windshield. The windshield wipers would move back into their original position and could damage the hood and windshield.



Tips

- You can also use the wiper blade replacement position for other reasons, for example if you want to protect the windshield from icing by using a cover.
- You cannot activate the wiper blade replacement position when the hood is open.

Messages

The following messages may appear, depending on the vehicle equipment:

If the  indicator light turns on, then there is a windshield wiper malfunction. The message that is also displayed indicates the cause and possible solutions. If one of the messages does not turn off, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.



Automatic wipers: malfunction! See owner's manual

The light/rain sensor is malfunctioning. You can still control all functions that are not controlled by the rain sensor using the windshield wiper lever. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Digital compass

Turning the digital compass on or off

Applies to: vehicles with digital compass



Fig. 53 Rearview mirror: digital compass is turned on

- To turn the digital compass on or off, press a suitable object, such as a paper clip, into the opening at the bottom of the mirror housing for at least 3 seconds, until the compass display in the mirror turns off or on.

The digital compass only works when the ignition is turned on. The directions are indicated with abbreviations: **N** (north), **NE** (northeast), **E** (east), **SE** (southeast), **S** (south), **SW** (southwest), **W** (west), **NW** (northwest).

Tips

To prevent inaccurate compass readings, do not bring any remote controls, electrical devices, or metallic objects near the mirror.

Adjusting the magnetic zone

Applies to: vehicles with digital compass

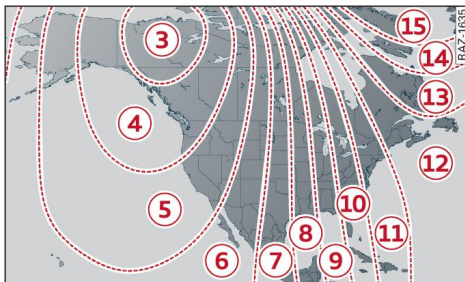


Fig. 54 Magnetic zone map

The magnetic zone must be adjusted correctly for the compass to read accurately.

- Press a suitable object, such as a paper clip, into the opening at the bottom of the mirror housing for at least 8 seconds ⇒ page 64, fig. 53 until the number of the magnetic field zone that is set appears in the rearview mirror.
- Set the magnetic field zone by briefly pressing repeatedly. The selection mode turns off after a few seconds.

Calibrating the digital compass

Applies to: vehicles with digital compass

If the display is incorrect or inaccurate, the digital compass must be recalibrated.

- Press a suitable object, such as a paper clip, into the opening at the bottom of the mirror housing for at least 10 seconds ⇒ page 64, fig. 53 until **C** appears in the rearview mirror.
- Drive in a circle at about 6 mph (10 km/h) until a direction is displayed in the rearview mirror.

WARNING

To reduce the risk to yourself and other road users, calibrate the digital compass in an area where there is no traffic.

Sitting correctly and safely

Maintaining the correct seating position

General information

As the driver, you are responsible for making sure each person in the vehicle is sitting correctly in their seat and maintaining this correct seating position while driving. Make sure that:

- Each person in the vehicle has adjusted their seat correctly ⇒ *page 65*.
- The steering wheel is adjusted correctly ⇒ *page 69*.
- The mirrors are adjusted so that there is a sufficient view of the area around the vehicle ⇒ *page 60*.
- Each person in the vehicle has adjusted their head restraint correctly ⇒ *page 70*.
- Each person in the vehicle has adjusted their safety belt correctly ⇒ *page 71*.
- The activation status of the front passenger's airbag is suitable for the person in the front passenger's seat ⇒ *page 78*.
- Children are secured in suitable child safety seats that are secured to appropriate vehicle seats ⇒ *page 80*. Read and observe the important safety information pertaining to the use of child safety seats on the front passenger's seat ⇒  *in General information on page 80*.

Examples of incorrect seating positions

Safety belts can only provide optimal protection when they are routed correctly. Incorrect seating positions significantly reduce the protective functions of the safety belts and increase the risk of injury due to incorrect belt routing.

The following list includes examples of seating positions that could be dangerous for all vehicle occupants. This is not a complete list. Audi would simply like to increase your awareness of the topic. The following points apply when the vehicle is in motion:

- Never stand inside the vehicle.
- Never stand on the seats.

- Never kneel on the seats.
- Never tilt your backrest far back.
- Never lean against the instrument panel.
- Never lie down on the rear bench seat.
- Never sit only on the front section of the seat.
- Never sit sideways on the seat.
- Never lean against the window.
- Never place your feet out of the window.
- Never place your feet on the instrument panel.
- Never place your feet on the seat cushion.
- Never ride in the footwell.
- Never sit on the armrests.
- Never drive or ride in a seat without fastening your safety belt.
- Never ride in the luggage compartment.



WARNING

Incorrect seating positions, failure to wear a safety belt, or being too close to an airbag increase the risk of serious injury or death to vehicle occupants, especially if the airbags deploy and come into contact with vehicle occupants who are not seated correctly. Note the important information and warnings in the chapters for the topics given above.



Tips

If you or other passengers in the vehicle have physical limitations that prevent sitting in a correct position, modifications to the vehicle may be necessary. For more information, contact an authorized Audi dealer or authorized Audi Service Facility, or call Audi customer support at 1-800-822-2834.

Front seats

General information

Make sure that:

- You can press the pedals down completely while your legs are slightly bent.
- The distance between your upper body and the steering wheel or instrument panel is at least 10 inches (25 cm).
- The distance between your knees and the instrument panel is at least 4 inches (10 cm).

- Your thighs are lightly supported by the front surface of the seat.
- The backrest is in an upright position and the back of the person seated is resting against it.
- You have a sufficient view of the area around the vehicle.
- You have a clear view of the instrument cluster, indicator lights, and the head-up display*.

WARNING

- If you are too close to the steering wheel or instrument panel, the airbag system cannot provide the optimal protection, which increases the risk of injury and death.
- To reduce the risk of injury to the driver in the event of sudden braking maneuvers or accidents, never drive with the backrest reclined very far. The airbag system and safety belts can only provide optimal protection when the backrest is in an upright position and the driver is wearing the safety belt correctly. If the backrest is angled back too far, the safety belt can shift to soft areas of the body, such as the stomach, which increases the risk of injury.
- To reduce the risk of an accident, only adjust the seats when the vehicle is stationary.
- Be careful when adjusting the seat. Lack of control or attention when adjusting can result in injuries due to pinching for vehicle occupants both in the front seats and rear seats.
- Never place objects in the driver's footwell. Objects could shift and enter the area around the pedals, which could prevent you from using them. You would then be unable to use the pedals if sudden driving or braking maneuvers were needed, which increases the risk of an accident.
- Make sure that the floor mats are always securely attached.
- To reduce the risk of an accident, never place additional floor mats or other floor covers over the installed floor mats, because this reduces the pedal's range of motion and can impair pedal operation.
- To reduce the risk of injury, never place your feet on the instrument panel, out of the

window, or on the seat surfaces. This also applies to persons in the rear seats.

Note

To reduce the risk of damage, be very careful when adjusting the seat to make sure the head restraints do not come into contact with the roof.

Manual seat adjustment

Applies to: vehicles with manual adjustable seats

The settings depend on the vehicle equipment.

Adjusting the seat position

- ▶ To adjust the seat forward or back, pull the lever ① and slide the seat.
- ▶ To adjust the seat up or down, pull or press the lever ②.

Adjusting the backrests

- ▶ To adjust the backrest forward or back, turn the adjusting wheel ③.

Adjusting the thigh support

- ▶ To increase or decrease the upper thigh support, lift the handle ④ and move the upper thigh support.

Adjusting the angle of the seat surface

- ▶ To adjust the angle of the seat surface, pull or press the lever ⑤.

Adjusting the lumbar support

- ▶ To adjust the lumbar support, press the button ⑥ in the desired direction.

WARNING

- To reduce the risk of an accident, only adjust the driver's seat when the vehicle is stationary.
- Exercise caution when adjusting the seat height. Adjusting the seat carelessly or without checking can pinch hands and fingers.
- The front seat backrests must not be reclined too far back when driving, because this impairs the effectiveness of the safety

belts and airbag system, which increases the risk of injury.

Power seat adjustment

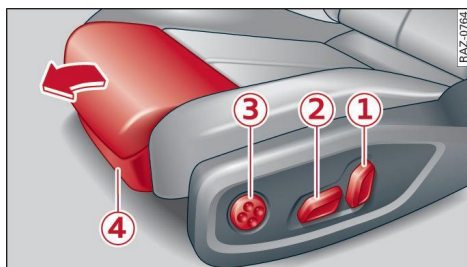


Fig. 55 Front seat: adjusting the seat (version A)

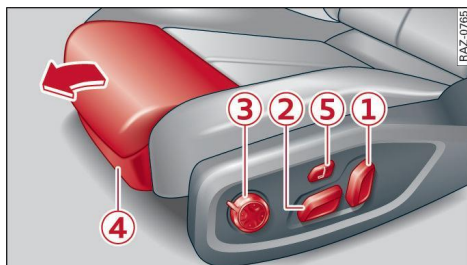


Fig. 56 Front seat: adjusting the seat (version B)

The settings depend on the vehicle equipment.

Adjusting the backrests

- To move the backrest forward or backward, press the button ① forward or backward.

Adjusting the seat position

- To move the seat forward or backward, push the button ② forward or backward.
- To adjust the seat upward or downward, push the rear section of the button ② upward or downward.
- To adjust the seat surface, press the front part of the button ② upward or downward.

Adjusting the lumbar support

- To adjust the lumbar support, press the button ③ in the desired direction.

Adjusting the thigh support

- To increase or decrease the upper thigh support, lift the handle ④ and move the upper thigh support.

Massage function

- To turn the massage function on or off, press the button ⑤ ⇒ fig. 56.

Adjusting the side supports

You can adjust the side bolsters using the multi-function button ③ ⇒ fig. 56.

⚠ WARNING

- To reduce the risk of an accident, only adjust the driver's seat when the vehicle is stationary.
- The power front seats can also be adjusted when the ignition is turned off. To reduce the risk of injury, children should never be left unattended in the vehicle for this reason.
- Exercise caution when adjusting the seat height. Unsupervised or careless seat adjustment could cause parts of the body to be pinched, which increases the risk of injury.
- The front seat backrests must not be reclined too far back when driving, because this impairs the effectiveness of the safety belts and airbag system, which increases the risk of injury.

Adjusting the front seats in the MMI

Applies to: vehicles with seat settings in the MMI



Fig. 57 Center display: seat settings

The settings and the number of menus and buttons depend on the vehicle equipment. ►

Operating

Applies to: MMI

- ▶ Select on the home screen: **VEHICLE > Seats**.
- ▶ To access the various menus ①, swipe to the left or right.
- ▶ To display the various seats, press > or < ②.

The red coloring of the symbol ③ indicates which seat is selected.

Massage

See ⇒ page 68

Additional seat settings

See ⇒ page 68

Front seat massage function

Applies to: vehicles with massage function

Selecting the massage function

- ▶ To open the **Massage** menu, press the button ⑤ ⇒ page 67, fig. 56.

Turning the massage function on or off

Applies to: MMI

- ▶ To turn the massage function on or off, press the button ⑤ ⇒ page 67, fig. 56.
- ▶ Press **Start/Stop** on the MMI.

Setting the massage type and intensity

Applies to: MMI

- ▶ To adjust the massage type, press the desired button on the MMI, for example **Wave**.
- ▶ To adjust the intensity of the massage, press **Intensity** on the MMI repeatedly until the desired level is reached.

Tips

The massage function turns off automatically after approximately 10 minutes.

Additional settings in the MMI

- ▶ Applies to: MMI: Select on the home screen: **VEHICLE > Seats**.
- ▶ Swipe to the left if necessary.

Depending on the vehicle equipment, the following options may be available.

Reset seat position

You can adjust the position of the front passenger's seat to match the driver's seat.

Driver seat entry assistance

Entry assistance makes it easier to enter or exit the vehicle.

Front passenger seat adjustment

You can adjust the front passenger's side with the driver's seat buttons.

Easy entry function for the rear seats

Applies to: vehicles with easy entry function

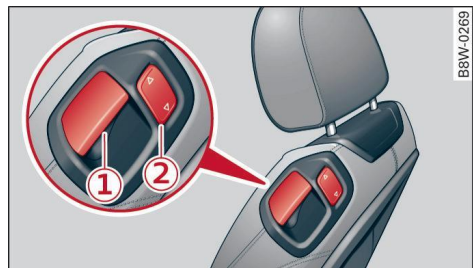


Fig. 58 Front seat: power entry assistance (version 1)

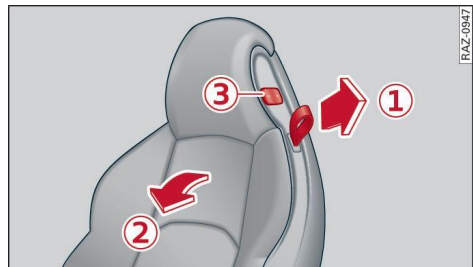


Fig. 59 Front seat: power entry assistance (version 2)

Entry assistance makes it easier for the rear passengers to enter and exit the vehicle.

Power entry assistance (version 1)

- ▶ Lift the handle ① ⇒ fig. 58 and fold the seat backrest forward.
- ▶ To move the seat all the way forward or to the original position, press the ② button briefly. You can stop the seat by pressing the button again.
- ▶ You can move the seat all the way forward even when the backrest is upright. Press and hold ▶

the button ② until the seat reaches your preferred position.

Power entry assistance (version 2)

Pull on the loop ① ⇒ *fig. 59* and fold the backrest forward ②.

- To move the seat all the way forward or to the original position, press the ③ button briefly. You can stop the seat by pressing the button again.



WARNING

Always make sure the front seats are upright and securely locked in place.

- Power entry assistance also works when the ignition is turned off¹⁾ or when the vehicle key is removed, so that rear seat passengers can still move to the front of the vehicle in an emergency situation. To reduce the risk of injury, children should never be left unattended in the vehicle for this reason.



Tips

To prevent the head restraints from running into the headliner, the power adjustable head restraints* automatically move forward or upward when the seat is adjusted.

Front center armrest

Applies to: vehicles with a front center armrest

The front center armrest is located between the front seats.

Adjusting the center armrest

The settings depend on the vehicle equipment.

- To adjust the armrest forward or backward, move the armrest in the desired direction.
- To adjust the angle, raise the armrest in stages.
- To move the armrest back into the original position, raise it slightly out of the top level and fold it downward.



WARNING

In certain positions, the front center armrest can interfere with arm movement, which increases the risk of injury.

Steering wheel

General information

Make sure that:

- The distance between your upper body and the steering wheel is at least 10 inches (25 cm).
- Your arms are bent slightly at the elbows.
- You have a sufficient view of the area around the vehicle and you have a clear view of the instrument cluster and head-up display*.
- You are always holding the steering wheel with both hands on the outer edge at the sides (9:00 and 3:00 position) when driving.



WARNING

- To reduce the risk of an accident, make sure the steering wheel is adjusted correctly and cannot be moved out of position before you start to drive.
- If you are too close to the steering wheel, the driver's airbag cannot provide optimal protection, which increases the risk of injury or death.
- Never hold the steering wheel in the 12:00 position or in any other way, such as holding the center of the steering wheel. Otherwise, your arms, hands, and head could be injured in the event that the driver's airbag deploys.

¹⁾ Requirement: the vehicle battery must have a sufficient charge level.

Adjusting the steering wheel position manually

Applies to: vehicles with manual steering wheel adjustment

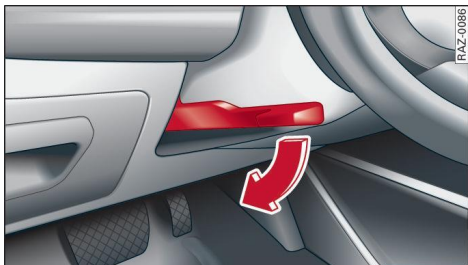


Fig. 60 Steering column: lever for adjusting the steering wheel position

The steering wheel position can be adjusted up and down, and forward and back.

- ▶ Press the lever in the direction of the arrow.
- ▶ Bring the steering wheel into the desired position.
- ▶ Push the lever all the way up until it engages.

WARNING

- To reduce the risk of an accident, only adjust the steering wheel before you start driving.
- Push the lever upward firmly so that the steering wheel position does not change unintentionally while driving, which would increase the risk of an accident.

Head restraints

General information

Applies to: vehicles with adjustable head restraints

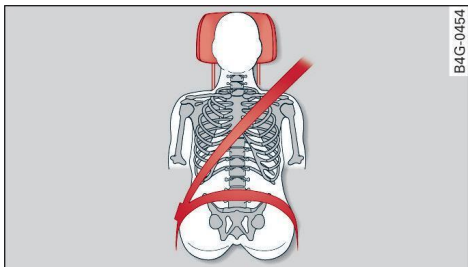


Fig. 61 Correctly-adjusted head restraint

Make sure that:

- The upper edge of the head restraint is as even as possible with the top of your head.
- The head restraint is as close as possible to the back of the head.
- The head restraints in any occupied rear seats are all the way up.

WARNING

- There is one head restraint for each seat. All vehicle occupants must adjust the head restraints correctly before every trip. Having head restraints that are not adjusted correctly or not installed in the vehicle increases the risk of a neck injury during sudden or unexpected driving or braking maneuvers or in a collision.
- Only remove the rear seat head restraints if it is necessary to install a child safety seat
⇒ page 80. Stow the removed head restraints securely, for example in the luggage compartment. Reinstall the head restraints immediately once the child safety seat has been removed. Driving without head restraints increases the risk of serious neck injuries.

Front head restraints

Applies to: vehicles with adjustable head restraints

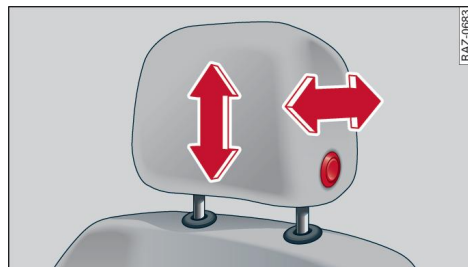


Fig. 62 Front seat: adjusting the head restraint

The settings depend on the vehicle equipment.

Adjusting the head restraints

Applies to: vehicles with manually adjustable head restraints

- ▶ To adjust the head restraint upward or forward, slide it until it locks into place.
- ▶ To adjust the head restraint downward or backward, press the button on the side and slide the ▶

head restraint. Release the button and slide the head restraint farther until it locks into place.

Power head restraint adjustment

Applies to: vehicles with power adjustable head restraints

- ▶ To adjust the head restraint upward or downward, press the button ① ⇒ *page 67, fig. 55* or ⇒ *page 67, fig. 56* upward or downward.
- ▶ To adjust the head restraint forward or backward as needed, press the side button and slide the head restraint in the desired direction until it locks into place.

Rear head restraints

Applies to: vehicles with adjustable head restraints

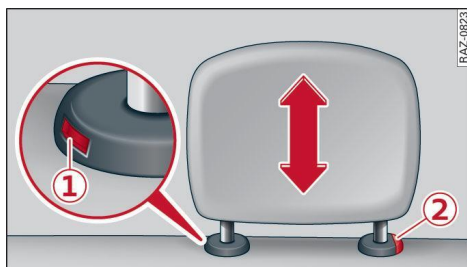


Fig. 63 Rear seat: adjusting or removing the head restraint

Adjusting the head restraints

- ▶ To adjust the head restraint upward, slide it until it locks into place.
- ▶ To adjust the head restraint downward, press the button ② and slide the head restraint. Release the button and slide the head restraint farther until it locks into place.

Removing the head restraints

Applies to: vehicles with removable head restraints

- ▶ Fold the backrest forward slightly ⇒ *page 87*.
- ▶ Move the head restraint all the way up.
- ▶ Insert a suitable object, such as the extended vehicle key or mechanical key, into the release point ① on the inside or outside of the base.
- ▶ Press the button ② and pull the head restraint out of the backrest.

Installing the head restraints

- ▶ Fold the backrest forward slightly ⇒ *page 89*.
- ▶ Slide the posts on the head restraint down into the guides until the posts click into place.

- ▶ Press the button ② and slide the head restraint all the way down. It should not be possible to remove the head restraint from the backrest without pressing the button.

Safety belts

General information

Each seat is equipped with a three-point safety belt. Safety belts that are worn correctly are the most effective way to reduce the risk of serious injuries or death in a collision. Therefore, wear your safety belt correctly and make sure that all persons in the vehicle are also wearing their safety belts correctly when the vehicle is moving.

Even though your vehicle is equipped with an air-bag system, each person in the vehicle must still always wear the appropriate safety belt. In addition to their normal protective function, safety belts also hold vehicle occupants in the correct seating position in the event of a collision so that the airbags can deploy correctly and provide additional protection. Safety belts provide protection during collisions when the airbags do not deploy or if they have already deployed.

WARNING

The risk of serious injury or death increases if the safety belt is not fastened, if it is worn incorrectly, or if it is damaged.

- All vehicle occupants, including the driver, must fasten their safety belts correctly before every trip and must always keep their safety belts fastened during the trip, regardless of whether the seat is equipped with an airbag or not. This also applies to children that are seated in a child safety seat that is appropriate for their weight and age and that is secured with a safety belt.
- In the event of a collision, vehicle occupants who are not wearing safety belts could be propelled through the vehicle interior and collide with vehicle components, such as the steering wheel, instrument panel, windshield, or doors. In some situations, vehicle occupants could also be ejected from the vehicle. Vehicle occupants in the rear seats

who do not wear safety belts not only endanger themselves, but also other persons in the vehicle.

- Only one person may be fastened with a safety belt at a time. Never secure more than one person, including children, with a single safety belt.
- Never allow children or infants to ride on another person's lap and be belted into the safety belt with them.
- Insert the belt buckle only in the belt latch belonging to the corresponding seat, so that the protective function is not impaired.
- To ensure the maximum protective function of the safety belts, all persons in the vehicle must sit in a correct seating position ⇒ *page 65*.
- Check the condition of your vehicle's safety belts regularly ⇒ *page 279*. If you find damage to the belt webbing, the belt connections, the retractor, or the buckle, have the damaged safety belt replaced by an authorized Audi dealer or authorized Audi Service Facility.
- The safety belts must not be removed or modified in any way. Do not attempt to repair the safety belts yourself.
- Safety belts that are strained during an accident must be replaced by an authorized Audi dealer or authorized Audi Service Facility.

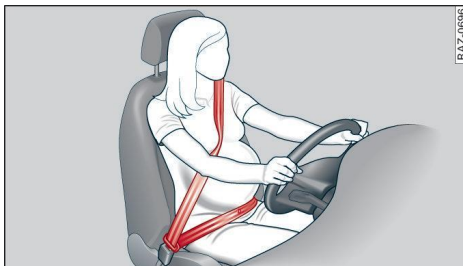


Fig. 65 Safety belt positioning for pregnant women

Fastened safety belts offer optimal protection during an accident and reduce the risk of serious injury or death only when they are positioned correctly. Furthermore, the correct safety belt position holds the vehicle occupant in place so that a deployed airbag can provide maximum protection. Therefore, always fasten the safety belt and make sure it is positioned correctly ⇒ *fig. 64*.

To ensure the safety belt is positioned correctly, make sure of the following points:

- The lap portion of the safety belt must be located across the lap.
- The shoulder portion of the safety belt must rest over the center of the shoulder.
- The safety belt must always rest flat and securely on the body.

For pregnant women, the safety belt must rest evenly across the chest and as low and flat as possible on the lap, so that no pressure is applied to the lower abdomen. This should be done throughout the entire pregnancy ⇒ *fig. 65*.

Correct safety belt positioning

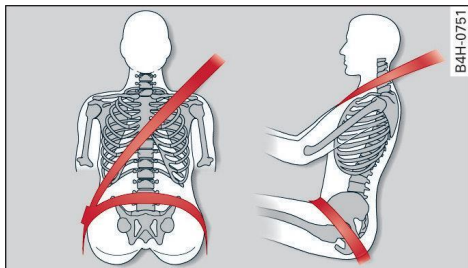


Fig. 64 Lap/shoulder belt positioning

WARNING

Incorrect safety belt positioning can cause serious injury in the event of an accident or during sudden braking or driving maneuvers.

- Never drive with the backrest reclined extremely far. The more the backrest is tilted back, the greater the risk of injury due to the safety belt being routed incorrectly.
- The safety belt itself or a loose safety belt can cause serious injuries if it shifts onto soft areas of the body, such as the stomach.
- The shoulder portion of the safety belt must lie over the center of the shoulder and

chest, and never under the arm, behind the back, or across the neck or face.

- The lap portion of the safety belt must lie across the lap and never over the stomach.
- The safety belt must lie flat and securely on the upper part of the body and the lap.
- The belt webbing must not be pinched or twisted, or rub against sharp edges.
- If the safety belt height is set incorrectly and/or the safety belt is routed incorrectly, then the safety belt's protective function will be impaired in the event of an accident. Make sure the safety belt is at the right height and is routed correctly for the person in the vehicle who is using it.
- A safety belt that is too loose may result in injuries during an accident, because your body will move farther forward due to kinetic energy and will be stopped abruptly by the belt.
- Bulky, loose clothing (such as a coat over a sports jacket) may prevent the seat and safety belts from functioning correctly.
- Do not position the safety belt over hard or breakable objects (such as glasses, pens, etc.).
- The lap belt portion of the safety belt must sit as low as possible on the lap of pregnant women and lie flat under the belly.



Note

Make sure that there are no hook-and-loop fasteners or sharp objects such as zippers or rivets on clothing in the area where the safety belt is worn. Otherwise, the safety belt could be damaged.

Belt positioner

Applies to: vehicles with belt positioners

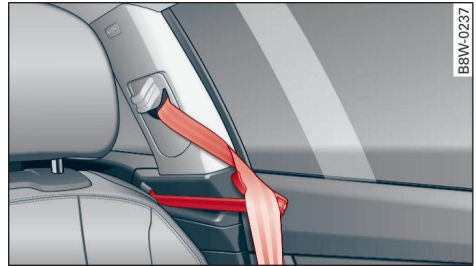


Fig. 66 Driver's seat: belt positioner

Belt positioners make it easier to fasten the safety belts on the front seats.

The belt positioner extends automatically when you close the door and turn on the ignition.

The belt positioner retracts automatically again when the belt tongue locks into the belt latch, if the safety belt is not fastened, if you turn off the ignition, or if you open the door.



WARNING

The belt positioners can cause injury or damage if they pinch people or objects when extending or retracting.

Fastening and unfastening safety belts



Fig. 67 Belt buckle and belt latch

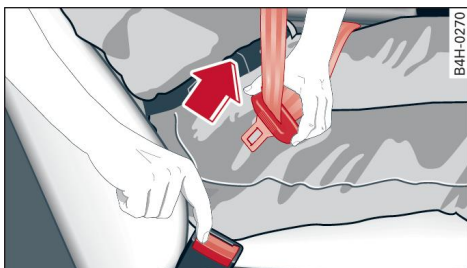


Fig. 68 Releasing the belt buckle from the belt latch

Observe the safety precautions ⇒ page 71.

Fastening the safety belt

- Pull the safety belt by the belt buckle evenly across your chest and lap.
- Insert the belt buckle in the belt latch belonging to the seat until it audibly engages ⇒ fig. 67.
- Pull on the belt to make sure that the belt is securely locked in the latch.

Unfastening the safety belt

- Press the red button on the belt latch ⇒ fig. 68. The belt buckle will pop out.
- Guide the belt back by hand so that the safety belt can roll up more easily.

Safety belt monitoring system

 - If the indicator light turns on or flashes, a front safety belt is not fastened or it has been unfastened while driving. There may be additional audio warning signals.

Adjusting the height of the safety belt

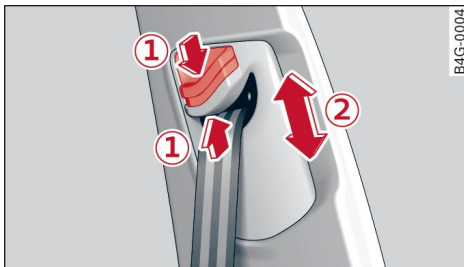


Fig. 69 Belt height adjustment for the front seats - safety belt relay

- To move the belt higher, slide the safety belt relay ② upward.
- To move the belt lower, press the release button ① and slide the safety belt relay ② downward.
- To check if the safety belt relay is securely locked in place, pull firmly on the belt.

Tips

You can also adjust the height of the front seats to change the position of the safety belts.

Additional safety belt functions

Belt retractor lock

The safety belts on the rear seats and on the front passenger seat are equipped with a belt retractor lock.

- If you secure a child safety seat with a safety belt, the belt retractor lock on the safety belt may need to be activated. Follow the instructions from the child safety seat manufacturer.
- When a person in the vehicle has fastened a safety belt, the belt retractor lock should not be activated. If the belt retractor lock has been activated unexpectedly, deactivate it.

Deactivating or activating the belt retractor lock ⇒ page 83.

Safety belt retractor

The safety belts are equipped with an automatic belt retractor. This automatic retractor allows the ►

safety belt to be pulled all the way out when the belt is pulled slowly. However, the automatic retractor locks during sudden braking maneuvers. It also locks the belts when accelerating, driving uphill, and driving around curves.

Belt force limiter

Safety belts with belt force limiters reduce the force placed on the body by the safety belts during a collision.

Safety belt pretensioners

In certain driving situations, safety belts may be tightened with reversible belt tensioners when you start driving. If the safety belt is too loose, it will be tightened so that the belt will rest closer to the body.

In some collisions, pyrotechnic belt tensioners may secure the safety belts so that they cannot loosen. This reduces forward movement of the persons in the vehicle.



WARNING

The pyrotechnic system can only provide protection during one collision. If the pyrotechnic belt tensioners deploy, the pretensioning system must be replaced by an authorized Audi dealer or authorized Audi Service Facility.



Tips

Smoke may be released when pyrotechnic belt tensioners deploy. This is not a sign of a vehicle fire.

Memory function

General information

Applies to: vehicles with memory function

With the memory function, you can save and call up seat profiles using the memory buttons in the door trim panel.

Depending on vehicle equipment, some settings such as the driver's seat and exterior mirror position can be stored.

Storing and recalling a seat profile

Applies to: vehicles with memory function

The memory function buttons are located in the door trim panel.

Storing a seat profile

- ▶ Press the **SET** button. If the LED in the button turns on, a seat profile can be stored.
- ▶ Push one of the numbered memory buttons. A tone confirms that the settings were stored.

Recalling a seat profile

- ▶ When the a door is open and the ignition is turned off, press the memory button once briefly. The seat will be fully adjusted to the settings in the seat profile.
- ▶ If the door is closed or the ignition is turned on, press and hold the memory button until the seat is fully adjusted to the settings in the seat profile.



WARNING

- To reduce the risk of an accident, the seat setting can only be recalled when the vehicle is stationary.
- In an emergency, the recall process can be canceled by pressing the seat adjustment button on that seat.

Airbag system

General information



WARNING

- If you have not fastened your safety belt, you are in an incorrect seating position, or you are too close to the airbag system, the airbag system will not be able to protect you. This increases the risk of serious injuries or death. Make sure that each person in the vehicle has their safety belt fastened correctly and is sitting in a correct seating position ⇒ *page 65*. This is necessary regardless of whether the seat is equipped with an airbag or not.
- Never place your feet on the instrument panel, out of the window, or on the seat

surfaces. To help ensure that the airbag system can deploy correctly, never bend forward or lean on the door or the side window. Otherwise, serious injuries or death can occur if the airbags deploy.

- People, animals, or objects between the vehicle occupants and the airbag system can interfere with the correct deployment of the airbag or can be propelled through the vehicle interior, increasing the risk of serious injuries or death. Make sure that nothing is located between the vehicle occupants and the airbag system. Do not secure or transport any objects within the deployment zone of the airbag systems, especially on the steering wheel, on the instrument panel, on the doors, on the windows, or in the footwell.
- Never put stickers on the airbag system covers or cover them with any objects.
- Only lightweight clothing should be hung from the garment hooks in the vehicle. Do not use clothes hangers to hang clothing. The pockets of the clothing must not contain any heavy, breakable, or sharp-edged objects. This could impair the effectiveness of the side curtain airbags.
- You must not use seat or protective covers that are not specifically approved for use on Audi seats with side airbags. Since the side airbags deploy from the seat backrest, such covers could impair the protective function of the side airbags.
- Damage to the original seat covers in the airbag deployment area must always be repaired by an authorized Audi dealer or authorized Audi Service Facility.
- Airbag system components are installed at various locations in your vehicle. Incorrect work or repairs on the vehicle could damage the airbag system components or impair their functionality. This may prevent the airbags from deploying or cause them to deploy incorrectly in the event of an accident, which increases the risk of serious injuries or death. Only have an authorized Audi dealer or authorized Audi Service Facility make repairs or modifications to a vehicle.

- The airbag system can only provide protection during one collision. If there is another collision, the airbag system will not deploy again. If the airbag system has deployed, have it replaced immediately by an authorized Audi dealer or authorized Audi Service Facility.
- Fine dust may appear if the airbags deploy. This is completely normal and does not indicate a fire in the vehicle. The fine dust can irritate the skin and mucous membranes in the eyes and can cause difficulty breathing, particularly for individuals who have or have had asthma or other health issues that affect breathing. Exit the vehicle or open the windows or doors to get access to fresh air.



Tips

If you are transporting children in the vehicle, read the information and follow the safety precautions ⇨ *page 80*.

Safety systems monitoring

The  indicator light in the instrument cluster monitors the safety systems such as the airbags (including the control modules, sensor, and wiring) and the belt tensioners. It turns on when you turn on the ignition and turns off after several seconds.

If the indicator light does not turn on when the ignition is turned on, does not turn off after several seconds, or turns on or flashes while driving, there may be a malfunction in one of the safety systems. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



WARNING

Have the malfunction in the safety systems inspected immediately. Otherwise, there is a risk that the systems may not activate during an accident, which increases the risk of serious injury or death.

Description

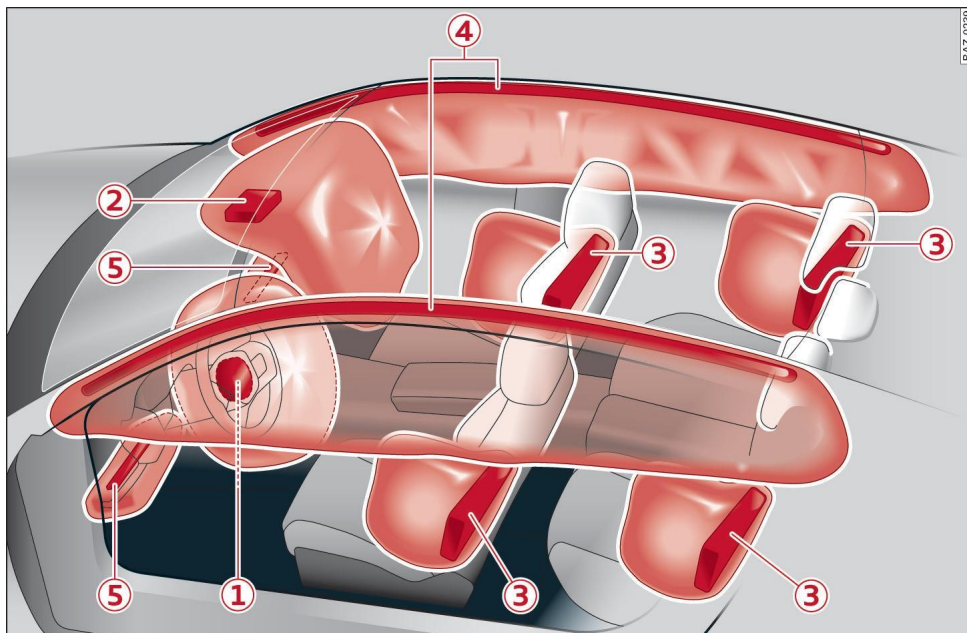


Fig. 70 Airbag overview image (deployment area/deployed airbags)

The locations of the airbags are labeled with “AIRBAG”. The following airbags are installed in your vehicle:

- ① Driver's airbag
- ② Front passenger's airbag
- ③ Side airbags in the front and possibly in the rear (on Sportback models)
- ④ Head curtain airbag with ejection mitigation
- ⑤ Knee airbags

Airbags offer the best possible protection in your vehicle during an accident when they are used together with safety belts that are fastened correctly, and when vehicle occupants are sitting in a correct seating position. Airbags are a supplementary restraint system and do not replace safety belts.

Airbags may deploy during front impact, side impact, or rollover accidents.

The deployment range for the airbag system cannot be defined for every situation, since the circumstances surrounding accidents can vary wide-

ly. Factors that play an important role include the condition of the object that the vehicle hits (hard or soft), the angle of impact, vehicle speed, etc. The deciding factor for the deployment of the airbag system is the deceleration that occurs during an accident. Sensors in the vehicle are designed to detect the severity of an accident in conjunction with the control module, and to provide a targeted and timely deployment of the restraint system. If the vehicle deceleration that is measured during an accident is below the specified reference values in the control module, then the airbags will not deploy, even though the vehicle may be severely damaged from the accident. In these cases, the vehicle occupants will be protected by the safety belts if they are fastened and worn correctly.

The deployment of the front passenger's airbag will depend on the occupancy of the seat
⇒ page 78.

Each deployed airbag is filled with gas. When this occurs, the airbag covers open and the airbags ►

unfold with great force into the deployment zone within milliseconds. Inflated airbags reduce the movement of persons in the vehicle who are wearing safety belts in the direction of the impact and thus help to reduce the risk of injury. They can help to protect the head, upper body, and lap, for example. However, there is the possibility that airbag deployment can cause injuries.

The airbag system works when the ignition is turned on.

If you or other passengers in the vehicle have physical limitations that prevent sitting in a correct position, modifications to the vehicle may be necessary. For more information, contact an authorized Audi dealer or authorized Audi Service Facility, or call Audi customer support at 1-800-822-2834.

Tips

The side curtain airbags in your vehicle have ejection mitigation functions. This reduces the risk of being ejected from the vehicle interior during an accident, especially in the event of a vehicle rollover.

Advanced airbag system



Fig. 71 Headliner: indicator light to display the status of the front passenger's airbag

The Advanced Airbag System in your vehicle has been certified to comply with the requirements of the United States Federal Motor Vehicle Safety Standard (FMVSS) 208, as well as Canada Motor Vehicle Safety Standard (CMVSS) 208 as applicable at the time your vehicle was manufactured. According to these requirements, the front Advanced Airbag System on the front passenger's side has been certified for "suppression" for in-

fants approximately 12 months old and younger, and for "low risk deployment" for children aged 3 to 6 years old (as defined in the standard).

The advanced airbag system will activate or deactivate the front passenger's airbag based on the occupancy of the seat. If a front airbag deploys during a collision, the deployment force will adapt to the person in the vehicle.

Components

The advanced airbag system consists of the following components:

- Front airbags in the steering wheel and in the instrument panel on the front passenger's side: these can protect persons in the front seats during a collision
- Passenger occupant detection sensor in the front passenger's seat: this detects if the front passenger's seat is occupied (for example, by a person or a small child in a child safety seat)
- Seat position sensors on the front seats: these determine the distance between the seat and the steering wheel or instrument panel
- Sensors in the front safety belt latch: these detect if the safety belts are fastened
- PASSENGER AIR BAG OFF  ON  indicator light in the headliner: this indicates if the front passenger's airbag is activated or deactivated
-  Indicator light in the instrument cluster: this monitors the function of the Advanced Airbag System components to ensure they are functioning correctly

How the components function together

The passenger occupant detection sensor in the front passenger's seat detects if the front passenger's seat is occupied. The passenger occupant detection sensor measures the electrical capacity on the front passenger's seat. The passenger's airbag is activated or deactivated depending on the electrical capacity that is measured.

The passenger's airbag is activated if:

- The electrical capacity is higher than the threshold stored in the control module

- The electrical capacity is the same as or greater than the electrical capacity of a typical adult

The passenger's airbag is deactivated if:

- The electrical capacity is lower than the threshold stored in the control module
- The electrical capacity is the same as or less than the electrical capacity of a typical one-year-old child in a child safety seat that has been used for certification in accordance with FMVSS 208

If the front passenger's airbag is activated, the **PASSENGER AIR BAG ON**  indicator light will turn on. If the front passenger's airbag is deactivated, the **PASSENGER AIR BAG OFF**  indicator light will turn on.

The deployment force of the front airbags adapts based on whether or not the safety belt is used and the distance between the seat and the steering wheel/instrument panel. For example, if a person is too close to the front airbag, the front airbag will deploy with less force to help reduce the risk of injury.

Meaning of **PASSENGER AIR BAG OFF** **ON** indicator light

When the ignition is turned on, the system detects whether the front passenger's seat is occupied. **PASSENGER AIR BAG OFF**  **ON**  will turn on for several seconds during this process. Then it will indicate if the front passenger's airbag is activated or deactivated.

- **PASSENGER AIR BAG OFF** : the front passenger's airbag is deactivated and will not deploy in the event of an accident.
- **PASSENGER AIR BAG ON** : the front passenger's airbag is activated and could deploy in the event of an accident.

If a change to the occupancy status of the front passenger's seat is detected **PASSENGER AIR BAG OFF**  **ON**  will flash for several seconds and will then display the status of the front passenger's airbag.

Always make sure the indicator light corresponds to the occupancy of the front passenger's seat.

- **An adult or individual of similar size in the front passenger's seat:** the front passenger's airbag must be activated, therefore **PASSENGER AIR BAG ON**  must remain turned on.
- **An individual of smaller size (for example, an adolescent or small adult) in the front passenger's seat:** the front passenger's airbag must be activated, so **PASSENGER AIR BAG ON**  must stay on.
- **Child in a child safety seat on the front passenger's seat:** the front passenger's airbag must be deactivated, so **PASSENGER AIR BAG OFF**  must stay on.
- **Front passenger's seat not occupied:** the front passenger's airbag must be deactivated, so **PASSENGER AIR BAG OFF**  must remain on.



WARNING

- An adult or a person with a small stature (such as a young person or small adult) seated on the front passenger's seat will not be protected by the passenger's airbag in the event of a collision if the passenger's airbag is deactivated. This increases the risk of injury and death. Always make sure that **PASSENGER AIR BAG ON**  remains on while driving. If **PASSENGER AIR BAG ON**  does not turn on, make sure the front passenger is sitting correctly in the seat ⇨ *page 65* and that there is nothing covering the front passenger's seat (such as blankets or pillows). If **PASSENGER AIR BAG ON**  still does not turn on, the front passenger's seat must not be used. Drive to an authorized Audi dealer or authorized Audi Service Facility and have the airbag system inspected.
- A child in a child safety seat on the front passenger's seat - especially in a rear-facing child safety seat - can receive a severe impact if the front passenger's airbag deploys, which increases the risk of serious injury or death. Always secure child safety seats on the rear seats. If special circumstances require the use of a child safety seat on the

front passenger's seat, always make sure that **PASSENGER AIR BAG OFF**  remains on while driving. If **PASSENGER AIR BAG OFF**  does not turn on, remove the child safety seat and install it again according to the child safety seat manufacturer instructions. If **PASSENGER AIR BAG OFF**  still does not turn on, the front passenger's seat must not be used. Drive to an authorized Audi dealer or authorized Audi Service Facility and have the airbag system inspected.

- Fluids, electronic devices, or mechanical damage on the front passenger's seat may cause the front passenger seat occupant detection to malfunction. The system may then incorrectly detect if the front passenger's seat is occupied. As a result, it could deploy the front passenger's airbag incorrectly or fail to deploy it, which increases the risk of serious injury or death. Make sure that no wet objects (such as a wet hand towel) and no fluids come into contact with the front passenger's seat cushion. If the front passenger's seat becomes wet, dry it immediately. Make sure no electronic devices (such as a laptop or a retrofitted seat heater) are on the front passenger's seat. Do not transport any objects on or under the front passenger's seat.
- Seat covers or protective covers may prevent the advanced airbag system from correctly detecting child safety seats or persons in the front passenger's seat. You must not use seat covers or protective covers on the front passenger's seat that are not specifically approved for use on Audi seats with an advanced airbag system.

Child safety seats

General information

When installing and using child safety seats, follow the information in this Owner's Manual, the applicable state and federal regulations, and the manufacturer instructions for the child safety seat.

You can also obtain useful and current information from the following sources:

U.S. National Highway Traffic Safety Administration

<http://www.nhtsa.gov>

<http://www.safercar.gov>

National SAFE KIDS Campaign

<http://www.safekids.org>

SafetyBeltSafe U.S.A.

<http://www.carseat.org>

Transport Canada Information Centre

<http://www.tc.gc.ca/roadsafety>

Audi Customer Experience Center

<https://www.audiusa.com/help/contact-us>

<https://www.audi.ca/ca/web/en/models/layer/contact.html>



WARNING

To reduce the risk of serious injuries or death, children must always be secured in the vehicle with a child safety seat that is appropriate for their body size, weight, and age.

- Children ages 12 and under must be transported using the appropriate child safety seat. Note differences in regulations between states and countries.
- Child safety seats secured incorrectly in the vehicle may cause serious injuries or death in the event of an accident. Always secure the child safety seat according to the manufacturer instructions.
- Children or babies must not under any circumstances be held on the lap of the driver or other passengers while driving.
- Do not secure more than one child in a child safety seat.
- Never allow a child to sit in a child safety seat unsupervised.
- Never allow children to ride unsecured in the vehicle or to stand or kneel on the seats while driving. In the event of an accident, a child could be propelled through the vehicle. This can result in serious injuries or death to the child and passengers.
- If children sit in an incorrect seating position while driving, they have a higher risk of

injury during a sudden braking maneuver or accident. This especially applies to children in the front passenger's seat or children who have their head near the side airbag deployment area, if the airbag system is deployed during an accident. This incorrect seating position can cause serious injuries or death.

- Make sure there is enough space in front of the child in the child safety seat. If necessary, adjust the angle and position of the seat in front of the child safety seat.
- The rear side of a forward-facing child safety seat should be positioned as close as possible to the backrest on the vehicle seat. If the head restraints make it difficult to install a child safety seat, adjust or remove them if necessary ⇒ *page 70*. Reinstall the head restraints immediately once the child safety seat has been removed.
- Always make sure that the backrest on the seat where the child safety seat is installed is securely locked in place and cannot move forward. Otherwise, the backrest where the child safety seat is secured could move forward in the event of an accident or other emergency situation.
- NEVER use a rear-facing child safety seat on a seat with an ACTIVATED FRONT AIRBAG; this could cause DEATH or SERIOUS INJURIES to a CHILD.
- Always secure child safety seats on the rear seats. If exceptional circumstances require the child safety seat to be placed on the front passenger's seat, then the front passenger's airbag must be deactivated. Always make sure that **PASSENGER AIR BAG OFF**  remains on while driving. If **PASSENGER AIR BAG OFF**  does not turn on, remove the child safety seat and install it again according to the child safety seat manufacturer instructions. If **PASSENGER AIR BAG OFF**  still does not turn on, the front passenger's seat must not be used. Drive to an authorized Audi dealer or authorized Audi Service Facility and have the airbag system inspected.

- If you must use a forward-facing child safety seat on the front passenger's seat, move the seat as far back as possible so that it is as far as possible from the front passenger's airbag. Make sure the adjustment range is clear when doing this. A child in a child safety seat on the front passenger's seat can receive a severe impact if the front passenger's airbag deploys, which increases the risk of serious injury or death.
- Replace the child safety seat after an accident because there could be damage that is not visible.
- Even if a child is not sitting in the child safety seat, the child safety seat must be secured. An unsecured child safety seat may be thrown through the vehicle interior during sudden braking maneuvers or an accident.

Correct positioning for children

Always secure children in a child safety seat designed for the body size, weight, and age of the child.

You can secure child safety seats in your vehicle using the lower LATCH anchors or the safety belts. You can also secure child safety seats to the top tether anchor. Depending on the child safety seat, it may also be necessary to secure it to the top tether anchor. In Canada, securing forward-facing child safety seats to the top tether anchors is required by law.

Always transport children in the rear seats

Accident statistics show that children that are secured correctly in the rear seats are safer than in front seats. Always transport children in suitable child safety seats secured on the rear seats.

In exceptional circumstances: transporting children in the front passenger's seat

If exceptional circumstances require the child safety seat to be placed on the front passenger's seat, then the front passenger's airbag must be deactivated. Please note the important information for this ⇒ *page 78, Advanced airbag system*. If you must secure a forward-facing child safety

seat, move the front passenger's seat as far back as possible so that it is as far as possible from the front passenger's airbag. Make sure the adjustment range is clear when doing this.

Only switch to a larger child safety seat when absolutely necessary

Switch to a larger child safety seat only when absolutely necessary. Secure your child using a safety belt without a child safety seat only if all of the following statements are true:

- The child is large enough to sit upright in the seat
- The child is able to sit with their back resting completely on the seat backrest
- The child is able to sit with their knees angled over the edge of the seat surface
- The child is able to sit with both of their feet completely touching the floor in the footwell
- The lap portion of the safety belt lies flat and securely over the hip area and never over the stomach
- The shoulder portion of the safety belt lies flat and securely over the center of the shoulder and the chest, and never under the arm, behind the back, or over the neck or face.
- The child is able to maintain this seating position throughout the entire trip

Read and follow the important information and warnings regarding the correct use of safety belts ⇒ *page 71*.

Tips

- Child safety seats can also be secured to seats with side airbags. In the event of an accident, children can also be protected by the side airbags if the child is correctly secured in a suitable child safety seat that is attached correctly.
- The lower LATCH anchors as well as the safety belt may be required to correctly install some child safety seats. Using both at the same time is permitted, provided that the fastening systems or safety belts do not impair those in an adjacent seating position.

- All child safety seats are constructed so that they can be secured using the lap safety belt in the vehicle.
- Child safety seats with a load leg can only be secured to the outer rear seats and to the front passenger's seat.

Securing child safety seats to the lower LATCH anchors

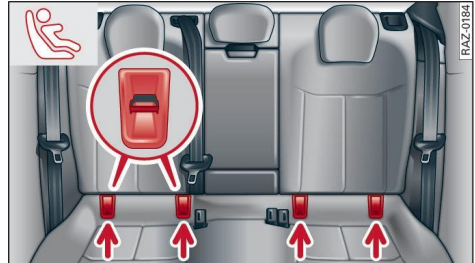


Fig. 72 Rear bench seat: lower LATCH anchors

Observe the safety precautions ⇒ *page 80*.

In the United States and Canada, child safety seats can be secured without safety belts using the LATCH system. LATCH stands for Lower Anchors and Tethers for Children. In Canada, similar systems are called UCRA, LUAS, or UAS.

The lower LATCH anchors in your vehicle are located on the outer seats of the rear bench seat between the seat surface and the backrest. These seating locations each have two lower LATCH anchors that can be used to secure a LATCH child safety seat. Marking points with a ⇒ *fig. 72* symbol are located on the covers for the lower LATCH anchors. You can locate the LATCH anchors using the marking points.

- ▶ Activate the child safety lock ⇒ *page 48*.
- ▶ Remove the cover* from both lower LATCH anchors.
- ▶ If you secure a child safety seat to the rear seat, secure any unused safety belts that are within reach of the child ⇒  in *Securing child safety seats with a safety belt on page 83*.
- ▶ Secure the child safety seat according to the child safety seat manufacturer instructions. ▶

- Pull on the child safety seat to check if both sides are engaged correctly in the LATCH anchors.
- If possible, also secure the child safety seat to the respective top tether anchor in the vehicle ⇒ *page 84*.



WARNING

The LATCH anchors in the vehicle are only designed for child safety seats with the LATCH system. To reduce the risk of serious injury or death, never secure other child restraint systems, belts, or objects to the anchors.



Tips

The LATCH anchors are designed for a total weight (child and child safety seat combined) up to 65 lbs (29 kg). If the total weight is greater than this, the child safety seat must be secured with the vehicle safety belt.

Securing child safety seats with a safety belt

Observe the safety precautions ⇒ *page 80*. The front passenger's seat is a dangerous location for a child, even with an advanced airbag system. If exceptional circumstances require the child safety seat to be placed on the front passenger's seat, then the front passenger's airbag must be deactivated. Please note the important information for this ⇒ *page 81, Correct positioning for children* and ⇒ *page 78, Advanced airbag system*.

Securing child safety seats

- Activate the child safety lock ⇒ *page 48*.
- If you secure a child safety seat to the rear seat, secure any unused safety belts that are within reach of the child ⇒ , ⇒ *page 85*.
- If you secure a child safety seat to the front passenger's seat, adjust the front passenger's seat to the highest position.
- Secure the child safety seat according to the child safety seat manufacturer instructions.
- If necessary, activate the belt retractor lock ⇒ *page 83*.

- If the child safety seat is secured on the front passenger's seat, adjust the front passenger's seat backrest until it rests flat against the child safety seat. Also make sure that the upper safety belt fixture is behind the child safety seat.
- If you secure a child safety seat on the rear seat, also secure it to the correct top tether anchor if possible ⇒ *page 84*.

Activating the belt retractor lock

If you secure a child safety seat using the vehicle safety belt, you must activate the belt retractor lock. Follow the child safety seat manufacturer instructions.

The belt retractor lock prevents the safety belt from becoming loose while driving, which could result in the child safety seat no longer being adequately secured.

- Secure the child safety seat according to the child safety seat manufacturer instructions. While doing so, pull out the safety belt. Insert the safety belt into the belt latch that belongs to that seat until it audibly locks.
- Pull the upper belt out completely and then allow it to retract. You will hear a clicking sound while the belt is retracting. It will not be possible to pull the safety belt out any farther.
- Push the child safety seat into the seat and allow the belt to retract more.
- Make sure that the child safety seat cannot move more than 1 inch (2.5 cm).

Deactivating the belt retractor lock

- Unbuckle the safety belt from the belt latch.
- Remove the child safety seat according to the manufacturer instructions.
- Allow the safety belt to retract completely. The belt retractor lock is deactivated.



WARNING

- A safety belt that is not locked by the belt retractor lock or a locking device cannot secure a child safety seat while driving or in the event of an accident, which increases the risk of death. Always make sure the belt retractor lock on the safety belt is activated

if the child safety seat manufacturer instructions require it.

- To reduce the risk of death, never place a rear-facing child safety seat on the front passenger's seat when the front passenger's airbag is activated.
- For the child safety seat to offer the maximum protection, it is especially important to route the vehicle safety belt correctly. Always follow the instructions from the child safety seat manufacturer for routing the safety belt correctly. Incorrectly fastened safety belts can cause injuries, even during minor accidents.

Additionally securing a child safety seat to the top tether anchor

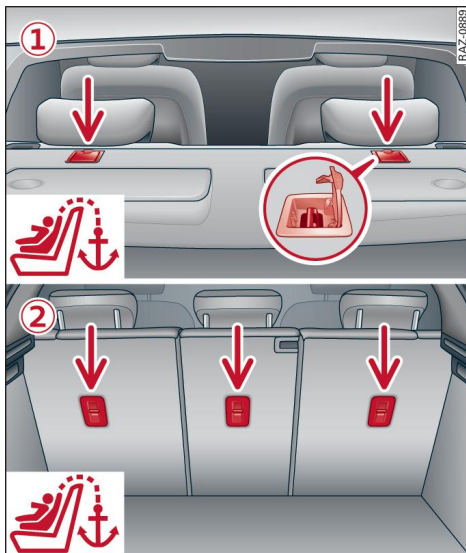


Fig. 73 Version ① rear shelf / Version ② rear backrest: top tether anchors for securing a child safety seat with an upper strap

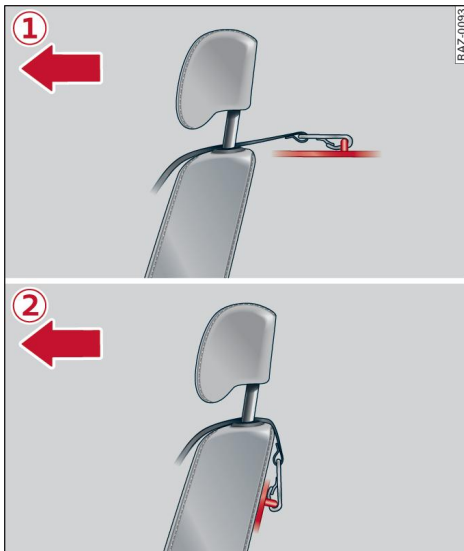


Fig. 74 Version ① rear shelf / Version ② rear backrest: securing the upper strap on the top tether anchor

Observe the safety precautions ⇒ page 80.

There is a top tether anchor behind every seat in the rear bench seat to additionally secure a child safety seat with an upper belt.

- ▶ Move the head restraint behind the child safety seat upward.
- ▶ Applies to: version 1: Fold the cover for the top tether anchor upward.
- ▶ Guide the upper belt on the child safety seat under the head restraint or along both sides of it and toward the rear (depending on the child safety seat model).
- ▶ Fasten the belt to the top tether anchor ⇒ fig. 74. While doing this, make sure the belt is not twisted and is not running over any sharp edges.
- ▶ Secure the child safety seat according to the child safety seat manufacturer instructions.
- ▶ Pull the belt tightly so that the child safety seat rests at the top of the seat backrest.
- ▶ If necessary, move the head restraint behind the child safety seat downward.

**WARNING**

The top tether anchors in the vehicle are only designed for child safety seats equipped with an upper strap. To reduce the risk of serious injury or death, never secure other child restraint systems, belts, or objects to the anchors.

tangled in them, which increases the risk of death. Always secure unused safety belts so that they are not within reach of children in child safety seats.

Securing unused safety belts on the rear bench seat



Fig. 75 Rear bench seat: securing unused safety belts

If a child safety seat is used on the rear bench seat, the child must not be able to reach any safety belts that are not being used. Secure safety belts that are within reach of the child.

- If you secure a child safety seat to the LATCH anchors, fasten the safety belt on the seat where the child safety seat is installed using the seat's safety belt latch.
- Applies to: Sportback: If you secure a child safety seat on one of the outer seats, fasten the safety belt for the center seat in its latch.
- Activate the belt retractor lock on the fastened safety belts. To do this, pull the upper belt out completely and then allow it to retract. You will hear a clicking sound while the belt is retracting. It will not be possible to pull the safety belt out any farther.
- Make sure the fastened safety belt does not block access to the LATCH anchors. Otherwise, it may not be possible to secure the child safety seat to the LATCH anchors correctly.

**WARNING**

A child in a child safety seat could play with the unused safety belts and then become en-

Storage and convenience

Power sources

When the ignition is turned on, you may be able to use multiple power sources for external devices, depending on the vehicle equipment.

12 volt sockets

You can connect electrical accessories to the 12 volt sockets. The power usage from the sockets must not exceed a total of 120 watts. Do not connect multiple devices to the sockets in the vehicle at the same time.

The 12 volt sockets are labeled with the 12V symbol. They are located in the front center console, in the rear* and on the side trim panel in the luggage compartment*.

USB ports

Applies to: vehicles with USB ports

You can charge mobile devices using the USB ports. Depending on the vehicle, the USB ports may be labeled with one of the following symbols: , , or CHARGE ONLY.

- Disconnect the connectors from the power sources carefully to reduce the risk of damaging them.

Tips

Do not connect any other devices to the sockets when using the compressor* provided by the factory ⇒ *page 285*. The power consumption in the sockets may be temporarily exceeded when using the compressor*.

Cup holders

Applies to: vehicles with cup holders

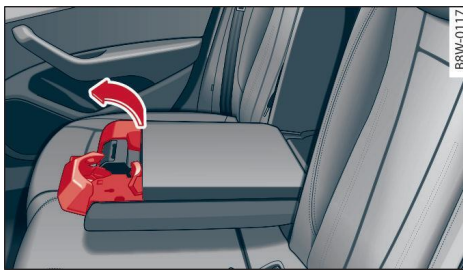


Fig. 76 Rear center armrest*: cup holders

Depending on vehicle equipment, your vehicle may have cup holders in the front center console, in the center of the rear bench seat, in the rear center armrest, or on the right and left side in the rear.

Cup holders in the rear center armrest*

- ▶ Fold the center armrest* downward.
- ▶ To open the cup holders, pull the top cover on the cup holders forward ⇒ *fig. 76*.
- ▶ To close the cup holder, fold the cover back until it clicks into place.

WARNING

- Do not put any hot beverages in the cup holder while the vehicle is moving. Hot beverages could spill, which increases the risk of injury.
- Do not use any breakable beverage containers (for example, made out of glass or porcelain). You could be injured by them in the event of an accident.

WARNING

- To reduce the risk of death, store all connected devices securely when driving so that they do not move around inside the vehicle when braking or in the event of an accident.
- Incorrect usage can result in serious injuries or burns. To reduce the risk of injuries, never leave children unattended in the vehicle with the vehicle key.

Note

- Read the operating instructions for connected devices.
- To reduce the risk of damage to the vehicle electrical system, never attempt to charge the vehicle battery by connecting accessories that provide power to the power sources.
- Do not connect any device whose network class (voltage) does not match the network class designed for the socket.

Note

Beverage containers in the cup holders should always have a lid. Otherwise, the liquid inside could spill and cause damage to vehicle equipment.

Storage and compartments

Storage area behind the rear head restraints

Applies to: vehicles with storage area behind the rear head restraints

The storage area can be used to carry light pieces of clothing.

WARNING

The storage compartment must not be used to transport heavy objects, hard objects, or animals. Such objects endanger persons in the vehicle and increase the risk of injury during sudden driving or braking maneuvers or in an accident.

Note

Make sure that the heating grid strips for the rear window defogger are not damaged by abrasive objects.

Tips

To ensure the ventilation functions correctly, the ventilation slots between the rear window and the storage area must not be covered.

Other storage locations

Depending on vehicle equipment, there are a variety of storage areas, compartments, and retainers, such as the glove compartment, for safely storing and securing objects.

WARNING

- To reduce the risk of injury, make sure all storage compartments are always closed while driving.
- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Store objects securely while driving.

ing maneuvers, which increases the risk of an accident. Store objects securely while driving.

- Only use the storage compartments in the door trim panels to store small objects that will not protrude out of the compartment and impair the function of the side airbags.
- For strength reasons, only secure objects up to 11 lbs (5 kg) with the straps* in the luggage compartment. Heavier objects are not adequately secured. There is risk of personal injury.
- Only lightweight clothing should be hung from the garment hooks in the vehicle. Do not use clothes hangers to hang clothing. The pockets of the clothing must not contain any heavy, breakable, or sharp-edged objects. This could impair the effectiveness of the side curtain airbags.
- Make sure your view toward the rear is not blocked, for example by hanging clothing or objects in the vehicle.

Luggage compartment

General information

All pieces of luggage or objects must be securely fastened in the luggage compartment. Note the following to maintain good vehicle handling:

- ▶ Distribute the load evenly in the luggage compartment.
- ▶ Close the luggage compartment cover before each drive if the load allows it.
- ▶ Stow heavy luggage as far forward in the luggage compartment as possible.
- ▶ Use non-elastic cords attached to the tie-downs to secure objects.

WARNING

- Applies to: vehicles with luggage compartment cover: The luggage compartment cover is not a surface for storing objects. Objects placed on the cover increase the risk of injury to all vehicle occupants during sudden driving or braking maneuvers or in the event of a collision.

- Applies to: vehicles with luggage compartment cover: The luggage compartment cover must always be securely fastened when in use to reduce the risk of an accident.
- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Always stow objects securely in the luggage compartment and secure them at the tie-downs. Use straps suitable for heavy objects.
- If pieces of luggage or objects are secured to the tie-downs with unsuitable or damaged straps, this can increase the risk of injury during braking maneuvers or accidents.
- When transporting heavy objects, the vehicle characteristics will change due to the shift in the center of gravity, which increases the risk of an accident. You may need to adapt your driving style and speed to the current conditions.
- Never exceed the permitted axle and load and vehicle weight ⇒ *page 309*.
- Never secure a child safety seat to the tie-downs.
- Never leave your vehicle unattended, especially if the luggage compartment lid is open. Children could enter the luggage compartment and close the luggage compartment lid from the inside. This increases the risk of death, since the children would be locked inside and may not be able to escape by themselves.
- Do not allow children to play in or on the vehicle. Close and lock the luggage compartment lid as well as all other doors when you leave the vehicle.
- Never transport persons in the luggage compartment. Each person in the vehicle must be secured correctly in the vehicle using the safety belts ⇒ *page 71*.
- Be careful when releasing the backrest and folding it forward. To reduce the risk of being pinched, pay attention and check when folding backrests forward.
- The backrest must be securely latched so objects cannot slide forward out of the luggage compartment during sudden braking.

- The backrest must be latched securely to ensure that the safety belt is protecting the center seating position.
- Always pull forward on the backrest to make sure it is correctly locked in place.
- If the safety belt becomes caught when folding the backrest back, then fold the backrest forward again and release the safety belt. Hold the safety belt with one hand and fold the backrest back carefully.
- For stability reasons, the bag hooks* can hold a maximum weight of 6.6 lbs (3 kg). Heavier objects are not adequately secured. There is risk of personal injury.



Note

- To reduce the risk of damage, move the rear head restraints down ⇒ *page 71* before folding the rear backrests forward.
- When folding the backrest forward, make sure the outer safety belts are in the belt guide recess so that they do not get pinched in the backrest lock and damaged. Other objects should be removed from the rear bench seat to protect the backrest from damage.
- To reduce the risk of damaging the front seats, make sure there is enough space between the front seat and the rear seat equipment when folding the center backrest forward.
- If you move the front seat back when the rear seat backrest is folded forward, you could damage the head restraints on the rear seat.
- Make sure that the heating grid strips for the rear window defogger are not damaged by abrasive objects.



Tips

- The tire pressure must be adapted to the load ⇒ *page 265*.
- You can purchase straps at specialty stores.

Luggage compartment cover

Applies to: vehicles with luggage compartment cover



Fig. 77 Luggage compartment: luggage compartment lid cover

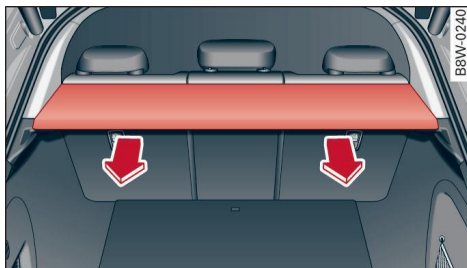


Fig. 78 Luggage compartment: cover behind the rear bench seat

Observe the safety precautions ⇒ [page 87](#).

Removing and installing the luggage compartment lid cover


- To remove the cover, turn the knob to a horizontal position.
- Pull the cover out of the retainers in the direction of the arrow ⇒ [fig. 77](#).
- To install the cover, slide it forward on the retainers until they engage.
- Turn the knob to a vertical position.

Removing and installing the cover behind the rear bench seat

- To remove the cover, pull it in the direction of the arrow ⇒ [fig. 78](#).
- Pull the cover upward to release.
- To install the cover, insert the left and right sides of the cover into the mounts on the side trim panel.
- Slide the cover forward until it locks into place.


Folding the outer backrests

Applies to: vehicles with folding backrests

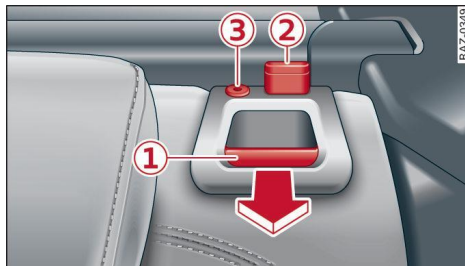

Applies to: Coupe/Sportback

Fig. 79 Outer backrest: release lever, latching indicator with red marking and lock*

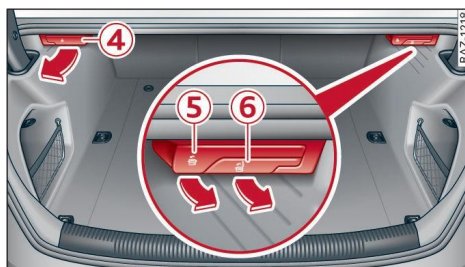

Applies to: Coupe:

Fig. 80 Luggage compartment: release lever

Depending on the vehicle equipment, it may be possible to fold the backrests forward separately or together.

Observe the safety precautions ⇒ [page 87](#).

Folding the outer rear backrests forward and backward

- **Applies to: Coupe/Sportback:** To fold the backrest forward, pull the release lever ① in the direction of the arrow, or
- **Applies to: Coupe:** To fold the left/right backrest forward, pull the left/right release lever ④/⑤ in the luggage compartment in the direction of the arrow.
- After transport, fold the backrest up again until it latches or the red marking ② is no longer visible.

Locking the outer backrests

Applies to: Coupe

To prevent access to the luggage compartment from the vehicle interior, the backrests can be

locked with the mechanical key ⇒ *page 40* in the lock ③ when the backrests are latched in place.

- To lock or unlock the backrest, turn the locking mechanism on the backrest into the horizontal or vertical position ⇒ *fig. 82*.

Folding the center armrest

Applies to: vehicles with folding center armrest


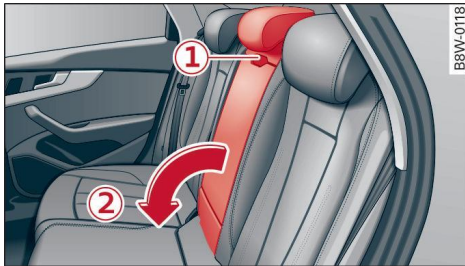


Fig. 81 Center backrest: folding the backrest forward

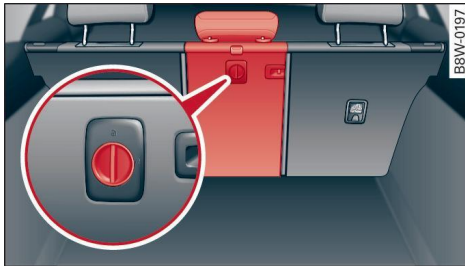

Applies to: Coupe

Fig. 82 Center backrest: folding the backrest forward

Tie-downs

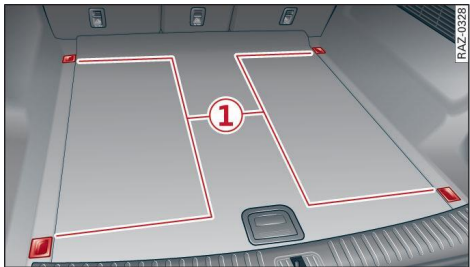


Fig. 83 Luggage compartment: location of the tie-downs

Observe the safety precautions ⇒ *page 87*.

Tie-downs

There are tie-downs ① in the luggage compartment to secure pieces of luggage and objects.

- Use the tie-downs to secure the cargo.

Observe the safety precautions ⇒ *page 87*.

Folding the center rear backrest forward and backward

Applies to: Coupe/Sportback

- Pull on the upper release lever ① and fold the backrest forward ②, or
- Applies to: Coupe: Pull the release lever ⑥ ⇒ *page 89, fig. 80* and fold the backrest forward.
- Fold the backrest backward until it locks into place.

Locking and unlocking the center backrest


Applies to: Coupe

To prevent access to the luggage compartment from the vehicle interior, the center backrest can be locked and unlocked from the luggage compartment.

Roof rack


General information

Applies to: vehicles with roof rack mount

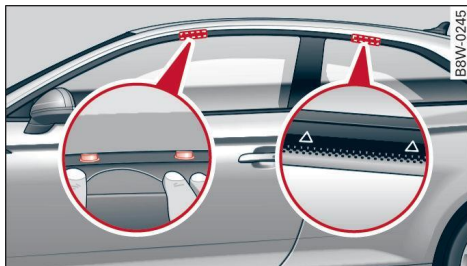

Applies to: Coupe

Fig. 84 Roof: mounting points

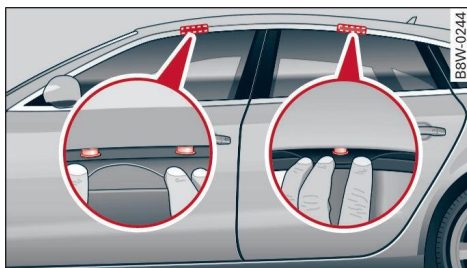

Applies to: Sportback

Fig. 85 Roof: mounting points

If luggage or cargo is to be carried on the roof, you must observe the following:

- These roof racks are the basis for a complete roof rack system. Only roof racks that are suitable for your vehicle may be used. Audi recommends roof racks and attachments from the Audi Genuine Accessories program.
- Make sure the roof rack is mounted on the vehicle only at the specified locations ⇒ *fig. 84* or ⇒ *fig. 85*.
- Note the permitted axle load, permitted total weight, and permitted roof load of your vehicle ⇒ *page 309*. The roof load is the total of the weight of the roof rack, the attachments, and the cargo you are carrying. However, you must also note the permitted load of the carrier system being used.



WARNING

- Follow the installation instructions provided with the roof rack system. If you do not secure the roof rack system and objects on the roof correctly, they could come loose from the vehicle and cause an accident.
- The risk of an accident increases when using a roof rack system, because it changes the driving characteristics by shifting the center of gravity and/or the increasing the surface area exposed to wind. You may need to adapt your driving style and speed to the current conditions.



Note

Make sure that the luggage compartment lid and the panoramic glass roof* do not come into contact with objects on the roof when they are open.



For the sake of the environment

Energy usage will increase because of the increased wind resistance. Remove the roof rack when you are no longer using it.

Warm and cold

Climate control system

Description

Your vehicle has a deluxe automatic climate control system with three zones in which the temperature, air distribution, and air supply can be adjusted separately for the front left and right sides, as well as the temperature in the rear.

The climate control system warms, cools, dehumidifies, and filters the air in the vehicle interior. It is the most effective when the windows and, depending on vehicle equipment, the roof are closed. If there is a build-up of heat inside the vehicle, ventilation can help to speed up the cooling process.

The automatic climate control system automatically maintains a temperature once it has been set. In all heating mode functions except defrost, the blower only switches to a higher speed once the coolant has reached a certain temperature.

Active combination filter

When the fan is running, the filter will reduce particulate matter and the concentration of pollen, as well as odors in the interior.

Tips

- To prevent interference with the heating or cooling output and to prevent the windows from fogging over, the air intake in front of the windshield must be free of ice, snow, and leaves.
- Condensation from the cooling system can drip and form a puddle of water under the vehicle. This is normal and does not mean there is a leak.
- The energy management system may temporarily turn off certain functions, such as the seat heating or rear window defogger. These systems will be available again once the energy supply has been restored.

Operating in the cockpit

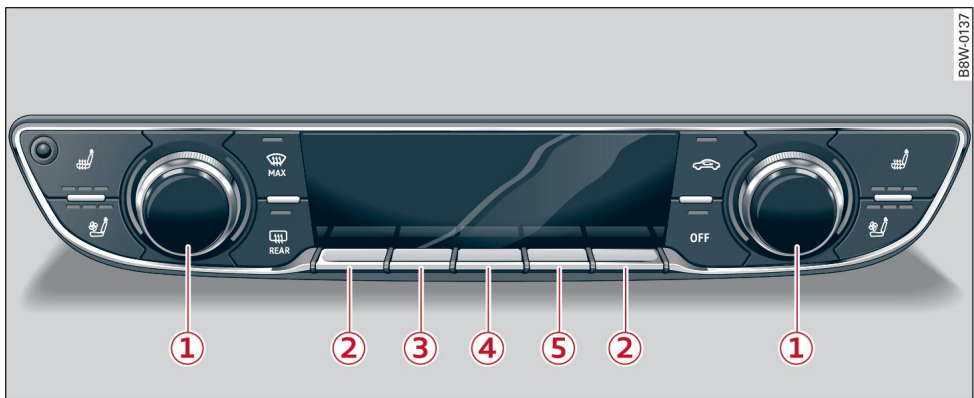


Fig. 86 3-zone deluxe automatic climate control system: controls

Observe the safety precautions ⇨ .

Press the knobs, buttons, or rocker switches to turn the functions on or off. When the function is turned on, the LED in the respective button or knob turns on. Some rocker switches can be assigned with multiple functions. The various functions can be activated by pressing the switch

multiple times. Depending on the vehicle equipment, the functions of the rocker switches ③ and ⑤ may be reversed on right-hand drive vehicles. The driver and front passenger settings can be adjusted separately. ▶

Turning the climate control system on or off

The  button turns the climate control system on or off. It also turns on when you press another button or a knob. Airflow from outside is blocked when the climate control system is turned off.

A/C Cooling mode

The cooling mode only functions with the blower turned on. The air is not cooled and humidity is not reduced when cooling mode is turned off. This can cause fog on the windows. The cooling mode turns off automatically at low outside temperatures.

Depending on the vehicle equipment, you can select from the following settings for cooling mode by pressing the rocker switch :

- **A/C MAX:** activates the maximum cooling mode of the climate control system. To reduce unnecessary energy usage, only use this function briefly. In unfavorable weather conditions, this function may increase the fogging on the windows.
- **A/C ON:** turns on the cooling mode and controls it automatically.
- **A/C OFF:** turns off the cooling mode.

AUTO Automatic mode

Automatic mode maintains a constant temperature inside the vehicle. Air temperature, airflow and air distribution are controlled automatically. You can turn automatic mode on or off by pressing the knob .

Temperature

You can adjust the temperature between 60°F (+16°C) and 84°F (+28°C) by turning the knob . If outside of this range, **LO** or **HI** will appear in the climate control system display. In both settings, the climate control runs constantly at the maximum cooling or heating level.

SYNC Synchronization

Use the rocker switch  to select the function. When synchronization is turned on, the settings for the driver's side are applied to the front pas-

senger's side and the rear (except for seat heating/ventilation, depending on vehicle equipment). If the settings on the front passenger's side or in the rear are changed, the synchronization will automatically turn off and **3-ZONE** will appear in the display.

SET REAR Function

Use the rocker switch  to select the function. When the function is turned on, you can adjust all settings for the rear using the climate control system controls in the cockpit. The rear climate control system controls cannot be operated at the same time. This function turns off automatically after a certain period of time or after leaving the menu.

Blower

The blower setting should not be set too low in order to prevent the windows from fogging and to ensure a continuous exchange of air inside the vehicle.

You can adjust the volume of air generated by the blower to your preference using the rocker switch . To have the blower regulated automatically, press one of the knobs .

Air distribution

To help prevent the front side windows from fogging over, open the side air vents and angle them toward the side windows.

You can use the rocker switches  to adjust the vents where the air will flow out of. Press the rocker switches  repeatedly until the desired air distribution setting is displayed in the climate control system controls. To have the air distribution regulated automatically, press one of the knobs .

Defrosting

The windshield and side windows are defrosted or cleared of condensation as quickly as possible. Open the side air vents and angle them toward the side windows. The maximum amount of air flows mainly from the vents below the windshield.

Defrost is turned on and off using the  button. Recirculation mode turns off. The temperature is controlled automatically. Defrost is turned off by pressing the  button again. You can also turn off the function by pressing the knob .

Recirculation mode

In recirculation mode, the air inside the vehicle is circulated and filtered. This prevents the unfiltered air outside the vehicle from entering the vehicle interior ⇒ .

Pressing the  button turns recirculation mode on or off manually. You can also turn off recirculation mode by pressing the knob  or the  button.

Rear window defogger

The rear window defogger only operates when the engine is running. It turns off automatically after 10 to 20 minutes, depending on the outside temperature.

Pressing the  button turns the rear window defogger on or off. To prevent the rear window defogger from turning off automatically, press and hold the  button for more than three seconds. It will remain on until the ignition is turned off.

Vents

You can open and close the center and rear air vents using the thumbwheels. The levers adjust the direction of the airflow from the vents.

Seat heating

The seat heating temperature can be set at various levels. Press the  button once to turn on the highest level ⇒ . Press the  button again to decrease the temperature one level at a time. The seat heating is off when all of the LEDs are off.

Seat ventilation

Applies to: vehicles with seat ventilation

The seat ventilation intensity can be set to multiple levels. Press the  button once to turn on the highest level. Press the  button again to decrease the intensity one level at a time. The seat ventilation is off when all of the LEDs are off.

Residual heat

The residual heat from the coolant is used to heat the vehicle interior. The residual heat function will turn off automatically after approximately 15 minutes.

You can activate the residual heat function when the ignition is turned off by pressing the knob  (left side).

WARNING

- You should not leave the recirculation mode on for an extended period of time. This can cause the windows to fog, which increases the risk of an accident.
- Using recirculation mode or, depending on the vehicle equipment, automatic recirculation for an extended period of time can cause the CO₂ concentration inside the vehicle to increase. This can have a negative effect on the well-being of vehicle occupants, which can increase the risk of an accident. Turn off recirculation mode or automatic recirculation and ventilate the vehicle at the first sign of unwellness.
- The vehicle is equipped with functions to automatically activate the seat heating. To reduce the risk of burns, individuals with reduced sensitivity to pain or temperature must make sure that the seat heating is off when starting the drive.
- When the seat heating is on, an alternating magnetic field is created. Interactions such as irritation of sensory organs or malfunctions of active medical implants (such as pacemakers, infusion pumps, or neurostimulators) are very unlikely. If you have a medical implant, seek medical advice from a specialist if you have any questions.
- Make sure others in the vehicle know how to use the seat heating safely.

Note

- To reduce the risk of damage to the seat heating elements, do not kneel on the seats or place heavy pressure on one area of the seat.

- Only use the seat heating when the seat surface is dry.
- Only put dry items on the seat surfaces.
- Do not spill liquids on the seat surfaces.
- Covering the seat surfaces can impair the function of the seat heating. Do not use protective seat covers and do not put items (such as jackets, blankets, or bags) on the seat surfaces when the seat heating is on.
- Make sure others in the vehicle know how to use the seat heating safely.



For the sake of the environment

Energy can be saved by turning off the A/C mode.



Tips

If the front passenger's seat heating is turned on, it will not turn on again automatically if more than 10 minutes have passed between turning off the ignition and turning it on again.

Operating in the rear

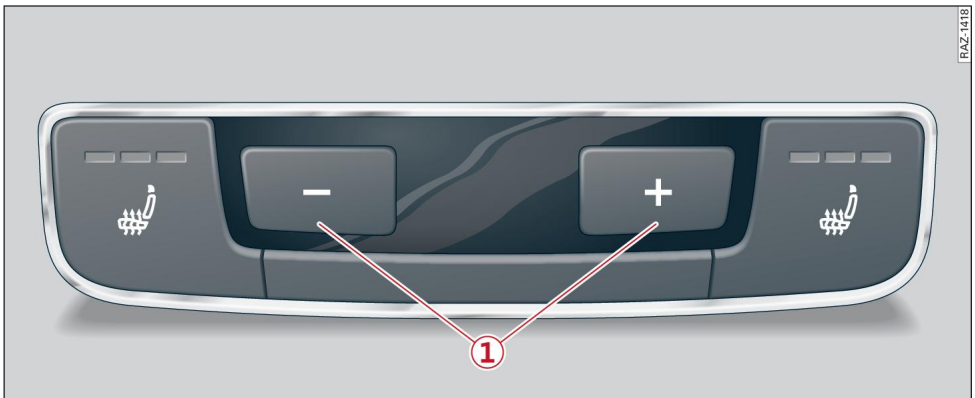


Fig. 87 3-zone deluxe automatic climate control system: controls

The vent in the center console can be opened and closed with the thumbwheel. The levers adjust the direction of the airflow from the vents.

The temperature can be selected using the and buttons ①. Depending on the vehicle equipment, the temperature of the seat heating can be set at various levels. Press the button once to turn on the highest level ⇨ *in Operating in the cockpit on page 94*. Press the button again to decrease the temperature one level at a time. The seat heating is off when all of the LEDs are off.

Auto recirculation

This function will automatically operate the recirculation mode if air pollution is detected ⇨ *in Operating in the cockpit on page 94*.

Steering wheel heating

Turning on or off

Applies to: vehicles with steering wheel heating

- Press the button on the multifunction steering wheel to turn the steering wheel heating on or off.

Additional settings

You can adjust additional settings.

- Applies to MMI: Select on the home screen: **VEHICLE > Air conditioning**.

Fluids in the A/C system

Refrigerant in the A/C system

The sticker in the engine compartment provides information about the type and amount of

refrigerant used in the vehicle's A/C system. The sticker is located in the front section of the engine compartment or at the front or back of the hood.

Symbol	Meaning
	Warning: the A/C system must only be serviced by qualified technicians.
	Refrigerant type
	Refrigerant oil type
	Refer to the service information (only available to authorized Audi dealers or authorized Audi Service Facilities)
	The A/C system must only be serviced by qualified technicians.
	Flammable refrigerant
	Make sure all components are disposed of correctly and never install components in the vehicle that have been removed from old vehicles or taken from recycling.

– The refrigerant can create toxic vapors when it comes in contact with hot surfaces. To reduce the risk of serious injuries or death, do not inhale these vapors.

 **Tips**

- Never repair the A/C system evaporator with components from old vehicles or from recycling.
- New replacement evaporators for portable A/C systems must be certified and labeled as such, so that they comply with the SAE standard J2842 HF0-1234yf and R744.

Refrigerant oil in the A/C system

The sticker in the engine compartment provides information about the type and amount of refrigerant oil used in the vehicle's A/C system. For information about the amount of refrigerant oil used, contact an authorized Audi dealer or authorized Audi Service Facility.

 **WARNING**

The climate control system may only be serviced by qualified and certified technicians who have been trained according to the country-specific standards, for example SAE standards J2845 and J2911.

- Refrigerant is flammable. Keep the vehicle away from open flames, sparks, and other ignition sources to reduce the risk of serious injuries or death.
- The refrigerant is under pressure and can explode if heated, which increases the risk of serious injuries or death.

Driving

Starting the vehicle

Convenience key

Applies to: vehicles with convenience key

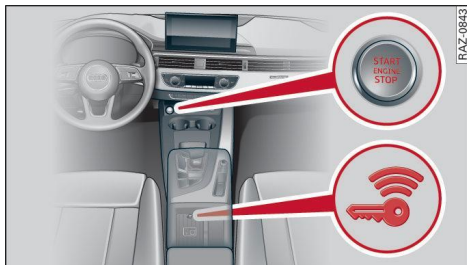


Fig. 88 Center console: starting the engine

Requirement: the key must be in the vehicle.

Starting the engine

- Press and hold the brake pedal.
- Press the **START ENGINE STOP** button. The engine will start.

Equipment that uses a lot of electricity is turned off temporarily when you start the engine. If the engine does not start immediately, the starting procedure stops automatically after a short time. If this is the case, repeat the starting procedure after approximately 30 seconds.

Stopping the engine

- Bring the vehicle to a full stop.
- Press the **START ENGINE STOP** button. The engine will turn off.

Applies to: vehicles with steering lock: The steering is locked when you turn off the engine and open the driver's door. The steering lock helps prevent vehicle theft. The "P" position must be engaged on vehicles with an automatic transmission.

Stopping the engine in an emergency

If necessary in an emergency, the engine can also be stopped while driving using the emergency off function*.

- Press the **START ENGINE STOP** button twice in a row or press and hold it one time.

Turning on or off

If you would like to only turn the ignition on or off without starting the engine, follow these steps:

- Press the **START ENGINE STOP** button without pressing the brake pedal.

Turning off the ignition automatically

To prevent the vehicle battery from draining, the ignition and possibly the exterior lighting may turn off automatically.

Requirements:

- The Start/Stop system must have stopped the engine.
- You must have left the vehicle for longer than 30 seconds.
- The ignition must be turned on.

Among other indicators, the system detects that you have left the vehicle based on the following factors:

- The driver's door has been opened.
- The driver's safety belt has been unbuckled.
- The brake pedal is not being pressed.

The ignition will also be turned off after 30 minutes or if you lock the vehicle from the outside.

WARNING

- To reduce the risk of asphyxiation, never allow the engine to run in confined spaces.
- Never turn off the engine before the vehicle has come to a complete stop and the "P" position is engaged. The full functionality of the brake booster and power steering may not be available. You would then need to use more force to steer and brake the vehicle. The fact that you cannot steer and brake as usual may increase the risk of accidents and serious injuries.
- Secure the vehicle against rolling before exiting the vehicle ⇒ page 98.

Note

- Avoid high engine speed, full throttle, and heavy engine load if the engine has not

reached operating temperature yet. You could damage the engine.

- If the engine has been under heavy load for an extended period of time, heat builds up in the engine compartment after the engine is turned off and there is a risk of damaging the engine. For this reason, let the engine run at idle for approximately two minutes before shutting it off.

Tips

- Brief noises are normal when starting and parking the vehicle and are no cause for concern.
- For up to 10 minutes after stopping the engine, the radiator fan may turn on again automatically or it may continue to run, even if the ignition is turned off.
- It may not be possible to start the vehicle in extremely low temperatures.
- Power will be fully available once the engine is at operating temperature.

Messages

The following messages may appear, depending on the vehicle equipment:

Engine start system: malfunction! Please contact Service

There is a malfunction in the engine start system. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Remote control key: key not detected. Is the key still in the vehicle?

The vehicle key was removed from the vehicle while the engine is running. If the vehicle key is no longer in the vehicle, you cannot turn on the ignition or start the engine once you stop it. You also cannot lock the vehicle from the outside.

Remote control key: hold back of key against the designated area. See owner's manual

The battery in the vehicle key may be drained or there may be a malfunction. To start the vehicle,

you must also hold the vehicle key against the location shown  ⇒ page 97, fig. 88.

If the malfunction remains, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

When driving

Starting to drive, stopping, and parking

Starting from a stop

- ▶ Press and hold the brake pedal.
- ▶ Start the engine.
- ▶ Select the “D” or “R” position.
- ▶ Release the parking brake.
- ▶ Release the brake pedal. The vehicle may roll.
- ▶ Press the accelerator pedal to accelerate.

Securing the vehicle against rolling

Secure your vehicle to prevent it from rolling before exiting the vehicle.

- ▶ Set the parking brake.
- ▶ Select the “P” position.
- ▶ If parking on a steep road, turn the steering wheel so that your vehicle will roll against the curb in case it should start to move.

If one of these measures is not possible, for example because there is no vehicle power, you must secure your vehicle against rolling using additional measures.

- ▶ Only park the vehicle on a level surface.
- ▶ Use suitable objects to block the front and rear wheels.

Set the parking brake before selecting the “P” position. This prevents too much stress from being put on the locking mechanism when parking on a steep surface.

WARNING

- Always set the parking brake when leaving your vehicle, even if only for a short period of time. If the parking brake is not set, the vehicle could roll, increasing the risk of an accident.

- Do not leave your vehicle unattended while the engine is running, because this increases the risk of an accident.
- If the parking brake is set, it can release automatically when the accelerator pedal is pressed. To reduce the risk of an accident, do not inadvertently press the accelerator pedal and always shift into the “P” position when the vehicle is stopped.
- If you leave the vehicle, turn off the ignition and take the key with you. This is especially important when leaving persons or animals in the vehicle. Otherwise, the vehicle could start unintentionally, the parking brake could release, or electronic equipment could activate, which increases the risk of an accident.
- No persons or animals should be left in a locked vehicle. Locked doors make it more difficult for emergency workers to enter the vehicle, which increases the risk of death.
- If you do not begin driving immediately after releasing the brake pedal, your vehicle may begin to roll backward. Press the brake pedal or set the parking brake immediately.

Note

If you have to stop on an incline, always press the brake pedal to hold the vehicle in place to reduce the risk of the vehicle rolling backward. Do not try to hold the vehicle in place by pressing and holding the accelerator pedal. The transmission can overheat, which increases the risk of damage.

Hill hold assist

If you take your foot off of the brake pedal when driving on hills, the braking force will be held for several seconds. At that time, you can start driving without the vehicle rolling backward.

Requirement: the driver's door must be closed, the engine must be on, and the vehicle must be traveling uphill.

- To activate hill hold assist, press and hold the brake pedal for several seconds while the vehicle is stationary.

WARNING

- If you do not begin driving immediately after releasing the brake pedal, your vehicle may begin to roll backward. Press the brake pedal or set the parking brake immediately.
- The hill hold assist cannot hold the vehicle on inclines in every scenario (for example, on slippery or icy ground).

Transmission selector positions and driving programs

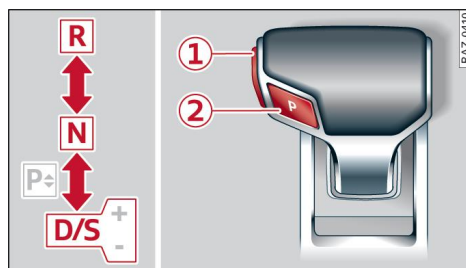


Fig. 89 Center console: transmission selector

The automatic transmission shifts automatically depending on the selected position and the current driving style. When driving with a moderate driving style, upshifting early and downshifting late will help to improve fuel economy. When driving with a sporty driving style, the transmission permits higher RPMs.

Transmission selector positions

The positions are displayed next to the transmission selector.

- **P** (Park): parking lock
- **R** (Reverse): driving in reverse
- **N** (Neutral): idling
- **D** (Drive): driving forward

Driving programs

Various driving programs can be selected when in the “D” position. These programs influence, for example, when the transmission shifts and how the accelerator pedal responds.

The selected driving program is displayed in the instrument cluster. ►

- **D** (Drive): normal driving mode
- **S** (Sport): sporty driving mode

Selecting a position

Requirement: the ignition must be turned on.

- Bring the vehicle to a full stop and press the brake pedal.
- Press the release button  on the selector.
- To select the nearest position, move the selector forward or back until you feel the first pressure point.
- To skip a position (for example, to move from “D” directly to “R”), move the selector past the pressure point in the desired direction.
- The label next to the selector for the selected position will illuminate.

“N” (Neutral) position

In the “N” position, power is not transmitted to the driving wheels. Use the “N” position in a car wash (with conveyor belts), for example.

If you unintentionally select the “N” position while driving (faster than 1 mph (2 km/h)), you can select “D” again without pressing the brake pedal.

For safety reasons, the vehicle cannot be locked when the “N” position is engaged.

“P” (Park) position

Requirement: the ignition must be turned on.

The parking lock secures the vehicle from rolling when the “P” position is selected. The parking lock is a mechanical locking mechanism in the transmission.

- Bring the vehicle to a full stop and press the brake pedal.
- Press the “P” button  on the selector.
- The “P” next to the selector will illuminate.

“P” engages automatically if you turn off the engine while the “D” or “R” position is selected. If you turn off the engine while in the “N” position, “P” will engage automatically after approximately 30 minutes.

If you want to switch from “P” to “D” or “R”, the engine must be running.

If you cannot shift out of the “P” position, for example because the vehicle has no power, you may need to use the manual release for the parking lock ⇒ *page 102*.

Selecting a driving program

To switch between the current driving program and “S”, push the selector toward the rear.

If you select the **dynamic** mode in Audi drive select*, the “S” driving program will be activated. When the ignition is turned off, the driving program may be reset to “D”.



WARNING

- Before you start driving, check if the label for the desired position next to the selector is illuminated.
- Secure the vehicle against rolling before exiting the vehicle ⇒ *page 98*.
- Power is still transmitted to the wheels when the engine is running at idle. To prevent the vehicle from “creeping”, you must keep your foot on the brake in all selector positions (except “P” and “N”) when the engine is running.
- To reduce the risk of an accident, do not press the accelerator pedal when changing selector positions if the vehicle is stationary and the engine is running.
- Never select the “R” position while driving. Doing so could cause an accident.
- The vehicle can roll even if the ignition is turned off.



Tips

- If you shift back and forth between “D” and “R” within one second, you do not need to press the brake pedal. This makes it possible to “rock” if it is stuck, for example.
- Audi recommends the “D” driving program for everyday driving.

Manual shifting



Fig. 90 Center console: shifting manually with the selector



Fig. 91 Steering wheel: shift paddles*

You can shift the gears manually when in the “D” position. The transmission is in tiptronic mode and “M” is displayed in the instrument cluster. You can shift into manual shifting mode while the vehicle is stationary or while driving.

Shifting with the selector

- ▶ To switch to manual shifting mode, tilt the selector toward the front passenger's side
⇒ *fig. 90*. “M” will be displayed in the instrument cluster.
- ▶ Upshifting: push the selector forward (+).
- ▶ Downshifting: push the selector toward the rear (-).
- ▶ To switch back to automatic mode, tilt the selector toward the driver's side.

Shifting with the shift paddles

Applies to: vehicles with shift paddles

- ▶ Upshifting: press the (+) shift paddle ⇒ *fig. 91*.
- ▶ Downshifting: press the (-) shift paddle.
- ▶ Applies to: RS models: To engage the lowest possible gear for maximum acceleration, press and hold the (-) shift paddle.

- ▶ To switch back to automatic mode, press and hold the (+) shift paddle or push the selector toward the rear.

If you stop using the shift paddles temporarily, the transmission will switch back to automatic mode. To keep shifting manually, tilt the selector toward the front passenger's side.

Tips

- The transmission only allows manual shifting when the engine speed is within the permitted range.
- The transmission automatically shifts up or down before critical engine speed is reached.
- Applies to: RS models: Depending on the engine, the “M” in the instrument cluster will be displayed in red font in certain situations. The manual shifting mode reacts particularly sporty in this case. When accelerating, the transmission does **not** automatically shift to the next gear shortly before the maximum permitted engine RPM is reached. Shift to the next highest gear at the right time.

Accelerator pedal

You can accelerate the vehicle using the accelerator pedal.

Maximum acceleration

If you press the accelerator pedal all the way down, the engine's full power will be used and you will reach maximum acceleration, also called “kick-down”.

WARNING

The driving wheels could spin and the vehicle could swerve on slick or slippery road surfaces when using kick-down, which increases the risk of an accident.

Launch control

Applies to: vehicles with launch control

Launch control provides the best possible acceleration when starting from a stop. ▶

Requirements

- The engine must be at operating temperature.
- The steering wheel must not be turned.
- Start/Stop system* must be deactivated
⇒ *page 105*.
- ESC must be limited ⇒ *page 122*.
- The “S” driving program ⇒ *page 100* and the **dynamic** Audi drive select* mode must be selected ⇒ *page 112*.

Using launch control

- Press the brake pedal with your left foot and hold it all the way down for at least one second.
- With the brake pedal pressed, press the accelerator pedal all the way down with your right foot at the same time.
- Once the engine reaches a constant speed, remove your foot from the brake pedal.
- Applies to: RS models: The **Launch control program: activated** message will appear, depending on the vehicle equipment. Once the engine reaches a constant speed, remove your foot from the brake pedal.

Once the vehicle has started moving or the acceleration process is finished, reactivate the ESC so that it is fully functional.

WARNING

Only use launch control when road and traffic conditions allow it and other road users will not be endangered or impacted by your driving and the vehicle's acceleration. The driving wheels could spin and the vehicle could swerve, especially on slick or slippery road surfaces, which increases the risk of an accident.

Note

- When accelerating using launch control, all vehicle components are subject to heavy loads. This can result in increased wear.
- To reduce the risk of damaging the vehicle, trailer, and cargo, avoid using launch control while in trailer towing mode.

Tips

After accelerating using launch control, the temperature of some vehicle components may increase greatly. If that happens, the function will not be available for a few minutes to reduce the risk of damage. After a cool-down period, launch control will be available again.

Manually releasing the parking lock

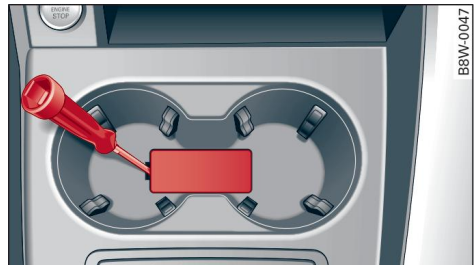


Fig. 92 Front cup holder: removing the cover

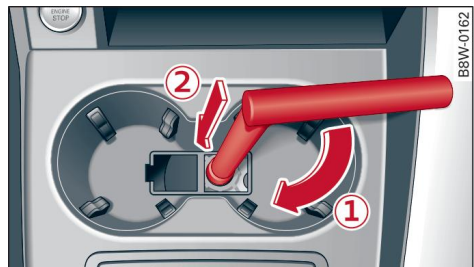


Fig. 93 Front cup holder: parking lock emergency release

The emergency release is located in the front cup holder under a cover.

You will need the screwdriver and the socket wrench from the vehicle tool kit in order to release ⇒ *page 285*. Use the flat side of the reversible screwdriver blade.

Releasing the parking lock using the manual release

- ▶ Secure the vehicle against rolling ⇒ *page 98*.
- ▶ Remove the rubber mat.
- ▶ Pry the cover off the opening using the screwdriver inserted in the slot.
- ▶ Insert the socket wrench from the vehicle tool kit into the opening.

- ▶ Turn the socket wrench clockwise until it stops **①** and press it downward until it locks into place **②**.
- ▶ Leave the socket wrench inserted.

Resetting the parking lock

- ▶ Press the brake pedal and start the engine.
- ▶ Keep the brake pedal pressed and engage the following positions one after the other: "N", "D", and back to "N".
- ▶ Turn the engine off again.
- ▶ Grasp the socket wrench with both hands and carefully pull it upward to remove.
- ▶ Reinsert the cover and rubber mat.



WARNING

- Only use the parking lock manual release if the vehicle is secured against rolling
⇒ *page 98*. An unsecured vehicle may roll, which increases the risk of an accident.
- Only activate the manual release while on a level surface or a slight slope.
- To reduce the risk of an accident, you must not drive when the manual release is activated.



Note

Due to the risk of damage, carefully remove the socket wrench when you reset the parking lock.

Messages

The following messages may appear, depending on the vehicle equipment:

Transmission: malfunction! Safely stop vehicle

Do not continue driving. Stop the vehicle as soon as possible in a safe location and secure it so it does not roll ⇒ *page 98*. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Transmission: too hot. Please stop vehicle

Do not continue driving. Select the "P" position and contact an authorized Audi dealer or authorized Audi Service Facility for assistance.



Transmission: too hot. Please adapt driving style

The transmission temperature has increased significantly. Drive very cautiously or take a break from driving until the temperature returns to the normal range and the indicator light turns off.



Transmission: malfunction! You can continue driving. See owner's manual

There is a system malfunction in the transmission. You may continue driving. Drive to an authorized Audi dealer or authorized Audi Service Facility soon to have the malfunction corrected.



Transmission: malfunction! You can continue driving with limited function. Please contact Service

There is a system malfunction in the transmission. The transmission is switching to emergency mode. This mode only shifts into certain gears or may no longer shift at all. The engine may stall. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



Transmission: malfunction! You can continue driving with limited function. No reverse gear

There is a system malfunction in the transmission. The transmission is switching to emergency mode. This mode only shifts into certain gears or may no longer shift at all. The engine may stall. You cannot engage the reverse gear. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



Transmission: malfunction! You can continue driving in D until engine is off

There is a system malfunction in the transmission. The transmission is switching to emergency mode. If you turn the engine off, you will not be able to select any other selector positions after restarting the engine. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



Danger of rolling away! P not possible. Please apply parking brake

- The parking lock was released using the manual release ⇒ *page 102*. Or
- The parking lock can no longer be engaged. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. Secure the vehicle against rolling before exiting the vehicle ⇒ *page 98*.

Selector lever: malfunction! Gear change only possible using both shift paddles

There is a system malfunction in the selector. You can continue driving with limited functionality. The selector is not working. Selector positions can only be selected by tapping both shift paddles at the same time when the vehicle is stationary. The “P” position engages automatically when you turn off the engine. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Selector lever: malfunction! You can continue driving. Please contact Service

There is a system malfunction in the selector. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

P button: malfunction! Auto P when engine off. Please contact Service

There is a malfunction in the parking brake button on the selector. The “P” position engages automatically when you turn off the engine. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Move selector lever to automatic position

There is a malfunction in the tiptronic mode. End tiptronic mode by pushing the selector to the left into the “D/S” position.

Drive system

Breaking in

A new vehicle must be broken in within the first 1,000 miles (1,500 km) so that all moving parts work smoothly together, which helps to increase

the service life of the engine and other drive components.

Do not drive higher than two-thirds of the maximum permitted engine RPM during the first 600 miles (1,000 km) and do not use full acceleration. The engine can be increased RPM gradually during the next 300 miles (500 km).

Efficient and environmentally-friendly driving

Your driving style greatly influences the amount of fuel and energy consumed, the environmental impact, and the wear on the engine, brakes, and tires. Note the following information for efficient and environmentally-conscious driving:

- Turn off electrical equipment that is not needed, for example seat heating*.
- Anticipate upcoming traffic situations while driving to avoid unnecessary acceleration and braking.
- Avoid driving at high speeds.
- Avoid adding extra weight to the vehicle if possible, for example by not leaving roof racks or bike racks installed when they are not needed.
- Make sure the tire pressure is correct.
- Have maintenance performed regularly on the vehicle.
- Do not let the engine run while the vehicle parked.
- Do not drive with winter tires during the summer.
- Use the Start/Stop system.
- Utilize the engine braking effect.
- Avoid driving short distances when possible.

Tips

The amount of noise produced by the vehicle can increase significantly when driving with a sporty style. Show respect to others around you and the environment with the way you operate your vehicle, especially at night.

Energy management

Your vehicle is equipped with an intelligent energy management system for distributing ►

electricity. This significantly improves the starting ability and increases the vehicle battery life.

Tips

- If you drive short distances frequently, the vehicle battery may not charge enough while driving. As a result, convenience functions for electrical equipment may be temporarily unavailable.
- The vehicle battery will gradually drain if the vehicle is not driven for long periods of time, or if electrical equipment is used when the engine is not running. To ensure that the vehicle can still be started, the electrical equipment will be limited or turned off.

Messages

The following messages may appear, depending on the vehicle equipment:

Drive system: malfunction! Safely stop vehicle

There is a malfunction in the drive system. The brake booster and the power steering may stop working. Stop the vehicle immediately or as soon as possible and do not continue driving. Secure the vehicle against rolling before exiting the vehicle → *page 98*. Have the problem corrected by an authorized Audi dealer or authorized Audi Service Facility.

Drive system: malfunction! Please contact Service

There is a malfunction in the drive system. The driving power is limited. Drive slowly to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Start/Stop system

Description

Applies to: vehicles with Start/Stop system

The Start/Stop system can help increase fuel economy and reduce CO₂ emissions. In Start/Stop mode, the engine shuts off automatically when stopped, for example at a traffic light.

If certain conditions are met, the engine may stop before the vehicle has come to a complete stop. If you release the brake pedal or press the accelerator pedal when this happens, the engine will start and driving power will be transmitted.

The ignition and important assist systems such as the brake booster will remain available during the Stop phase. The engine will restart automatically when needed.

The Start/Stop system is automatically activated once the ignition is turned on.

Turning the Start/Stop system off or on

The  button is located in front of the transmission selector in the center console. The button will be illuminated when the function is turned off.

- Press  to turn on or off.

If you turn off the system during a Stop phase, the engine will start again automatically.

Basic requirements

- The driver's door and the hood must be closed and the driver's safety belt must be fastened.
- The "P", "N", or "D" position must be engaged.
- The steering wheel must not be turned far in either direction.
- The vehicle must have driven faster than 2 mph (3 km/h) since the last time it stopped.
- The vehicle is not in trailer mode.

Note

Always turn off the Start/Stop system when driving through water → *page 105*.

Tips

- Depending on the driving situation, the engine may already stop when **coasting** before the vehicle has come to a complete stop.
- If you select the "D" position after shifting into reverse, the vehicle must be driven faster than 6 mph (10 km/h) in order for the Start/Stop system to become active again. This makes it possible to maneuver without stopping the engine.

Stopping and starting the engine

Applies to: vehicles with Start/Stop system

- ▶ Press and hold the brake pedal until the vehicle has stopped. The  indicator light appears in the instrument cluster once the engine stops automatically.
- ▶ The engine starts again when you remove your foot from the brake pedal. The indicator light turns off.

If the parking brake is set, the engine will only start again when the accelerator pedal is pressed.

Tips

- Press the brake pedal during a Stop phase to keep the vehicle from rolling.
- The ignition will turn off if you press the **START ENGINE STOP** button during a Stop phase.
- If you leave the vehicle briefly during a Stop phase and then enter again, the driver's door must be closed and the safety belt must be fastened in order for the engine to be able to restart.
- You can control if the engine will stop or not by reducing or increasing the amount of force you use to press the brake pedal. For example, if you only lightly press on the brake pedal in stop-and-go traffic or when turning, the engine will not turn off when the vehicle is stationary. If you press the brake pedal harder, the engine will turn off.

Starting and stopping the engine automatically

Applies to: vehicles with Start/Stop system

The system checks if certain conditions are met before and during the Stop phase, and determines if the engine stops and how long it remains stopped. For example, if power usage is high, the engine will not be stopped. Along with other conditions, the following factors influence the automatic engine start or stop:

- Environmental conditions (slopes, inclines, elevation, temperature)

- Battery (charge status, temperature, power usage)
- Engine temperature
- Assist systems
- Driving behavior

Depending on the engine, the  indicator light may appear if the engine is not stopped.

Messages

Applies to: vehicles with Start/Stop system

The following messages may appear, depending on the vehicle equipment:

Drive system: please start the vehicle manually

This message appears when specific conditions are not met during a Stop phase. The Start/Stop system will not be able to restart the engine. The engine must be started with the **START ENGINE STOP** button.

Vehicle starting system: malfunction! Please contact Service

There is a malfunction in the Start/Stop system. Drive the vehicle to an authorized Audi dealer or authorized Service Facility as soon as possible to have the malfunction corrected.

Brakes

General information

You can apply the vehicle's brakes using the brake pedal.

Operating noise

Noises may occur when braking depending on the speed, braking force, and outside conditions such as temperature and humidity.

Braking effect

To ensure an optimal braking effect, the brake pads will be applied to the brake rotors for a short period of time when driving at high speeds while the windshield wipers are turned on.

If the brake system becomes damp, for example after driving in heavy rain, the braking effect may ▶

be delayed. Other factors that could temporarily increase the response time of the brakes include:

- Wet conditions
- Low temperatures, ice, and snow
- Roads covered in salt
- Dirty brake pads

Corrosion

Corrosion may form on the brake rotors if there is no heavy braking, if the vehicle is not driven for long periods of time, or if the vehicle is not driven frequently or for long distances. In this case, braking heavily several times while driving at high speeds can clean the brake rotors ⇒ .

Brake pads

New brake pads do not achieve their full braking effect during the first 250 miles (400 km). They must be “broken in” first. However, you can compensate for the slightly reduced braking force by pressing firmly on the brake pedal. Avoid heavy braking during the break-in period.

Brake pad wear depends largely on the way the vehicle is driven and on operating conditions. Brake pad wear increases when driving frequently in the city or short distances or when using a very sporty driving style.

Ceramic brakes

Applies to: vehicles with ceramic brakes

Ceramic brakes provide excellent deceleration rates.

The break-in period for new ceramic brakes may be significantly longer than for standard brake rotors. The properties of the material may also cause noise, especially when driving at lower speeds. Ceramic brakes also absorb more moisture in wet conditions. Therefore, there will temporarily be less braking force than when the brakes are dry. You can compensate for this by pressing the brake pedal harder.

Automatic post-collision braking system

The automatic post-collision braking system can help to reduce the risk of sliding and of additional collisions after an accident. If the airbag con-

trol module detects a collision, the vehicle is braked by the ESC.

The vehicle does not brake automatically if one of the following occurs:

- You are pressing the accelerator pedal.
- The braking force generated by the pressed brake pedal is greater than the braking force that would be initiated by the system.
- The ESC, the brake system, or the vehicle electrical system is not functioning.



WARNING

- Only apply the brakes for the purpose of cleaning the brake system when road and traffic conditions permit. You must not endanger other road users because this increases the risk of an accident.
- Due to the risk of injury, only have an authorized Audi dealer or authorized Audi Service Facility work on the brake system. Incorrect repairs could impair the function.
- Never let the vehicle roll while the engine is stopped because this increases the risk of an accident.
- During automatic braking maneuvers, the brake pedal may move downward automatically. To reduce the risk of injury, do not place your foot under the brake pedal.



Note

- Never let the brakes “rub” by pressing the pedal lightly when braking is not actually necessary. This can cause the brakes to overheat and increases braking distance and causes wear.
- Observe the important information for driving downhill ⇒ *page 110*. This especially applies when towing a trailer.



Tips

- If you retrofit your vehicle with a front spoiler, wheel covers or similar items, make sure that the air flow to the brakes is not obstructed. Otherwise the brake system can overheat.
- Also refer to the information about brake fluid ⇒ *page 247*.

Messages

The following messages may appear, depending on the vehicle equipment:

BRAKE /  **Brakes: malfunction! Safely stop vehicle**

There is a malfunction in the brake system. If **ABS** /  and  also turn on, there is a malfunction in the ABS, ESC, and braking distribution. If the brake booster is not working, you have to use much more force when braking the vehicle.

Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance. Read and follow the other safety precautions ⇒ .

BRAKE /  **Brake pads: wear limit reached. You can continue driving. Please contact Service**

The brake pads are worn. Drive to an authorized Audi dealer or authorized Audi Service Facility as soon as possible to have the malfunction corrected.

Brake booster: limited functionality. You can continue driving. Please contact Service

There is a brake booster malfunction. The brake booster is available, but its effectiveness is reduced. The braking performance may be different compared to the usual performance. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Brake booster: deactivated. See owner's manual

The brake booster remains active for a brief period of time after turning off the ignition. Secure the vehicle against rolling ⇒ *page 98*.

Other indicator lights

When you turn on the ignition, the **BRAKE** /  indicator light turns on briefly to check the function. If the indicator light does not turn on, there is a system malfunction.

If **BRAKE** /  stays on, there is a malfunction in the brake system.

 – A high load was placed on the brakes from driving downhill for a long period of time. Follow

the instructions in the message to utilize the engine braking effect and to relieve the brakes.



WARNING

If a malfunction occurs in the ABS, ESC, and braking distribution, interventions that stabilize the vehicle will no longer be available. This could cause the vehicle to swerve, which increases the risk that the vehicle will slide. Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Electromechanical parking brake

Operating the parking brake

The electromechanical parking brake is used to secure the vehicle from rolling unintentionally.

The  switch is located below the transmission selector in the center console. It turns on when the parking brake is set. You can release the parking brake manually or automatically when you start to drive.

Setting and releasing the parking brake

- ▶ Setting: pull the .
- ▶ If **PARK** /  appears, the parking brake is holding the vehicle. You can remove your foot from the brake pedal.
- ▶ Releasing: when the ignition is turned on, press and hold the brake pedal and press the  button.

If the red indicator light flashes, the braking force has not built up enough or it has decreased. You can also secure the vehicle by selecting the “P” position or pressing the brake pedal. Make sure the indicator light is off before you start driving.

Automatically releasing the parking brake when starting to drive

Requirement: the driver's door must be closed and the driver safety belt must be fastened.

- ▶ Press the accelerator pedal to start to drive. ▶

**WARNING**

- To reduce the risk of an accident, always make sure the vehicle is situated safely while stationary.
- If the parking brake is set, it can release automatically when the accelerator pedal is pressed. To reduce the risk of an accident, do not inadvertently press the accelerator pedal and always shift into the “P” position when the vehicle is stopped.
- If the power supply fails, you cannot set the parking brake once it is released, or release it if it is set. Secure the vehicle against rolling before exiting the vehicle ⇒ *page 98*. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

**Tips**

- On steep inclines, especially when in trailer mode, the vehicle may roll backwards unintentionally when starting to drive. To reduce the risk of this happening, pull and hold the  switch while pressing the accelerator pedal. If enough drive power has built up at the wheels and the vehicle does not roll backwards, then release the switch to start to drive.
- If you leave the vehicle when the “D” or “R” position is engaged, the parking brake will be set automatically.
- Noises when the parking brake is set and released are normal and are not a cause for concern.
- The parking brake goes through a self-test cycle at regular intervals when the vehicle is stopped. Any noises associated with this are normal.

Emergency braking function

Emergency braking should only be used in an emergency, if the standard brake pedal is malfunctioning or obstructed. When the emergency braking function is activated, the braking effect is similar to a heavy braking maneuver.

- Pull and hold the  switch while driving.

- An audio warning signal will sound and emergency braking will begin.
- If you press the accelerator pedal, emergency braking will be canceled.

**WARNING**

Heavy braking while driving through curves or in poor road or weather conditions can cause the vehicle to slide or the rear of the vehicle to swerve, which increases the risk of an accident.

Messages

The following messages may appear, depending on the vehicle equipment:

BRAKE /  Parking brake: malfunction! Safely stop vehicle. See owner's manual

BRAKE /  Parking brake: malfunction! Please release parking brake

If one of these messages appears, there is a malfunction in the parking brake. If the message appears while stationary, check if the parking brake is released and can be reset. If this is the case, turn the ignition off and back on.

If the message stays on, if the parking brake cannot be released, or if the message appears while driving, do not continue driving. Secure the vehicle against rolling before exiting the vehicle ⇒ *page 98*. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

 Parking brake: malfunction! Please contact Service

There is a malfunction in the parking brake. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. Do not park the vehicle on inclines and secure it against rolling before exiting the vehicle ⇒ *page 98*.



/  Parking brake: warning! Vehicle position too steep

The braking force may not be enough to secure the vehicle from rolling away. Park the vehicle in a place with less of an incline.

Parking brake: applied

The parking brake is set. Press and hold the brake pedal to release the parking brake.

Take over!

The vehicle cannot be held in place automatically. Press the brake pedal to secure the vehicle from rolling unintentionally.

Special driving situations

Sporty driving

Applies to: RS models

Driving in a sporty style, for example on a driving track, places more stress than usual on all vehicle components, especially the engine, transmission, tires, brakes, and suspension. This type of operation requires additional inspection and maintenance work and may require components to be replaced earlier than usual.

Your vehicle is designed and approved for road use. Therefore, driving on a driving track is only possible for a limited distance.

Contact an authorized Audi dealer or authorized Audi Service Facility. Have your vehicle inspected there to make sure it is suitable for driving on a track, and make sure you are aware of all current, applicable guidelines. The following are some of the special requirements:

- The boiling point for the brake fluid must be within the tolerance range.
- New brake pads require a certain break-in period ⇨ *page 106*.
- The tires, brake system, brake pads, and brake rotors must be in sound condition.

On the driving track

- Warm up the engine by driving no higher than two-thirds of the maximum permitted engine RPM. The engine oil must be brought to a minimum temperature of 158 °F (70 °C).
- Check the tire pressure when the tires are warm and adjust it if necessary.

If necessary, use the following functions:

- **dynamic** Audi drive select mode* ⇨ *page 112*

- Launch control ⇨ *page 101*

- Limit ESC ⇨ *page 122*

After driving on a driving track

- Before parking the vehicle, you should allow the engine and brakes to cool back down to normal operating temperature by driving more moderately.
- Check the brake pads using a suitable method. Heavy diagonal wear can only be detected by inspecting visually. This is only possible to a limited extent from the outside.
- Check the tire pressure when the tires are cold and adjust it if necessary.



WARNING

- A sporty driving style will increase wear, especially on drive system and suspension components and tires.
- Driving in the threshold range increases the risk of an accident, and therefore requires driving skills suitable for the situation and special care in handling the vehicle, the driving situation, and the risk associated with it.
- Make sure that the vehicle is in sound condition at all times.



Tips

Wear caused by load does not constitute a vehicle fault as defined by the terms of the warranty.

Driving uphill and downhill

When driving uphill, downhill, or at high altitudes, note the following information:

- Drive slowly and carefully.
- Do not try to turn around if you cannot safely drive on an incline or hill. Instead, drive in reverse.
- When driving down hills, you can activate the hill descent control if you press the brake pedal while driving in the “D” position. The automatic transmission will select a gear suitable for driving down the hill and will attempt to maintain the speed at which the vehicle was traveling at the time the brake pedal was pressed. Press the ►

- brake pedal if necessary. The hill descent control will turn off once the hill levels out or you press the accelerator pedal.
- Utilize the engine braking effect when driving downhill by selecting the “S” driving program ⇒ *page 100*. This especially applies when towing a trailer. This reduces the load on the brakes.
 - Apply the brakes in intervals and do not press the brake pedal continuously.

**WARNING**

- Only drive on inclines that your vehicle is designed to handle. Do not exceed the hill climbing ability of your vehicle. Your vehicle could tip or slide.
- Do not drive at an angle on steep inclines and hills. If your vehicle is about to tip, you must immediately start steering in the direction of the downward slope to reduce the risk of an accident.
- Always be ready to brake when using the hill descent control function.

**Note**

Vehicle components such as the engine, drive system, suspension, or electrical system can be severely damaged by driving through water.

**Tips**

If possible, avoid driving through salt water because it increases the risk of corrosion. Use fresh water to clean any vehicle components that come into contact with salt water.

Driving through water

If you must drive through water, follow these instructions:

- Check the stability of the ground, the current, and the water depth. If the ground is unstable, there is a strong current, or there are waves, the water must only reach **up to the lower edge of the body at the most**.
- Deactivate the Start/Stop system*.
- Drive carefully and no faster than at a walking pace to prevent the front of the vehicle from creating waves, because they could splash above the lower edge of the body. Oncoming vehicles could also create waves.
- Do not stop the vehicle while in the water.
- Do not drive in reverse.
- Do not turn the engine off.

**WARNING**

After driving through water, press the brake pedal carefully to dry the brakes so that the full braking effect will be restored.

Driving dynamics

Audi drive select

Introduction

Applies to: vehicles with Audi drive select

Drive select makes it possible to experience different types of vehicle characteristics in one vehicle. With different driving modes, the driver can change the setting, for example from sporty to comfortable. This allows you to adjust the settings to your personal preferences. This makes it possible to combine settings such as a sporty drivetrain setting with comfortable steering.

Selecting an Audi drive select mode

Applies to: vehicles with Audi drive select

The **drive select** button is located in front of the transmission selector in the center console.

- ▶ Press the left or right arrow key until the desired mode appears in the MMI. Or:
- ▶ Applies to MMI: Select on the home screen: **VEHICLE > Audi drive select**.

You can change the driving mode when the vehicle is stationary or while driving. If traffic permits, briefly remove your foot from the accelerator pedal after changing modes so that the mode you have selected will be activated for the drive system.

The following modes may be available depending on vehicle equipment:

comfort – Provides a comfort-oriented vehicle setup and is suited for long drives on highways.

auto – Provides an overall comfortable yet dynamic driving feel.

dynamic – Provides a sporty driving feel and is suited to a sporty driving style. The “S” driving program is selected.

Individual – Provides the option for personalized vehicle settings. Press  to configure the mode
⇒ page 112, *Individual settings*.

Tips

- When the ignition is turned on, individual systems, such as the drive system, will be reset to a balanced setting. Select the current mode again to attain its full configuration.
- Audi recommends the **auto** mode for everyday driving.

Selecting RS mode

Applies to: RS models

In RS models, there are two individual adjustable RS modes instead of the **Individual** mode. The vehicle will exit this mode after the ignition is turned off.

Selecting the mode

- ▶ To switch between the RS modes and the last Audi drive select mode that was selected, press the **RS** button on the multi-function steering wheel. Or:
- ▶ Applies to MMI: Select on the home screen: **VEHICLE > Audi drive select**.

Adjusting the mode

- ▶ Applies to MMI: Select on the home screen: **VEHICLE > Audi drive select**.
- ▶ To configure the respective RS mode, press 
⇒ page 112, *Individual settings*.

Individual settings

Applies to: vehicles with Audi drive select

The equipment in your vehicle will determine which settings you can adjust.

Drive

The drive system will react to accelerator pedal movement more quickly or in a more balanced manner. The shift points are located in higher or lower engine speed ranges on vehicles with automatic transmissions.

Depending on the setting, the drive power at the rear axle will be distributed with the sport differential* to be more sporty or moderate
⇒ page 121. 

In RS models, the sport differential is adjusted using a separate menu item.

Steering

The power steering will adapt. Light steering is suitable for long trips on highways or smooth driving around curves, for example.

Suspension

The suspension adjusts to be tighter or more comfort-oriented when it comes to compensating for uneven spots on the road.

Engine sound

The engine sound adapts and can be subtle to sporty. In the automatic setting, the engine sound depends on the selected driving program.

quattro with sport differential

Applies to: RS models

Depending on the setting, the drive power at the rear axle will be distributed with the sport differential* to be more sporty or moderate
⇒ *page 121*.

Suspension

Adaptive dampers

Applies to: vehicles with suspension control

The adaptive dampers are an electronically-controlled damping system. The firmness of the suspension will adapt to the driving conditions and the driving situation. The settings depend on the selected Audi drive select* mode.

Ground clearance

The vehicle height and clearance can be influenced by the following factors:

- Change in temperature
- Change in load



WARNING

To reduce the risk of injury, make sure no one gets pinched when the vehicle level is changing, for example when cleaning the underbody or the wheel housings.



Note

Always make sure there is enough clearance above and below the vehicle. This is especially important for entrances with height restrictions, for example, before driving into underground garages. You could also scrape the ground when driving over the edges of curbs or on steep ramps, which could damage your vehicle.

Messages

The following messages may appear, depending on the vehicle equipment:



Suspension: malfunction! You can continue driving

There is a malfunction. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

RS sport suspension pro (adjustable coilover suspension)

Safety precautions

Applies to: vehicles with RS sport suspension pro

Audi recommends having all work on the RS sport suspension pro performed by an authorized Audi dealer or authorized Audi Service Facility. These facilities have the proper knowledge and are equipped with the required tools and replacement parts.



WARNING

Some of the procedures described require work to be performed in the engine compartment. Always use extreme caution when doing any work in the engine compartment. There is a risk of injury, scalding, accidents, and fire when performing work in the engine compartment. Therefore, observe the warnings and general safety precautions
⇒ *page 237*.

WARNING

- Observe the important safety precautions about removing and installing wheels ⇒ *page 288*. Please note that, contrary to the information in the “Replacing wheels” chapter, a vehicle jack must never be used.
- Use a hoist when necessary to make the desired adjustments.
- For safety reasons, never use a vehicle jack when adjusting the damping and suspension, because this increases the risk of an accident or death.
- Use extreme caution when performing work on the vehicle while it has been lifted:
 - You could strike parts of the body, which increases the risk of injury.
 - Be careful of hot components, because they increase the risk of burns.
 - Also observe the manufacturer's instructions for the hoist.

WARNING

- To reduce the risk of accidents and damage, do not attempt to perform adjustments on the damping and suspension unless you are in possession of the necessary equipment and have the skills required to perform the work correctly.
- To reduce the risk of accidents and damage, always follow the adjustment instructions. This is particularly important if the vehicle has been driven on a driving track for a high proportion of its total mileage.
- Observe the important safety precautions about driving on a driving track ⇒ *page 110*.
- Observe the important safety precautions about ground clearance ⇒ *page 113*.
- You must always adjust the ground clearance and damping according to the driving situation. Key driving characteristics, such as grip, steering behavior, and steering precision, change depending on the settings, which can increase the risk of accident or death.
- The ESC stabilizes your vehicle when the settings are within the recommended range.

Read and follow the important safety precautions ⇒ *page 122*.

Tips

Audi recommends keeping the damping set to the basic setting (factory setting) when driving on public roads ⇒ *table on page 117*. The ensures both balanced and sporty vehicle handling while maintaining a good level of ride comfort.

General information

Applies to: vehicles with RS sport suspension pro

Vehicles with RS sport suspension pro are equipped with adjustable coilover suspension. The damping and ground clearance can be adjusted manually to a limited extent.

Adjust the adjustable coilover suspension and the shock absorbers only if you have the skills required to perform the work correctly. Observe the applicable safety precautions ⇒ *page 113*.

Shock absorbers

The damping on the front and rear axles can be set so that it is stiffer or softer. This is done by adjusting the rebound and compression stages.

- Rebound stage – damping when piston rod is raised (coil spring extends)
- Compression stage – damping when piston rod is lowered (coil spring compresses)

Adjustable coilover suspension

The suspension can be lowered or raised at the front and rear axles via a coil spring on the suspension strut.

Basic setting (factory setting)

When the vehicle is delivered, the suspension and shock absorbers are in the basic setting (factory setting) ⇒ *table on page 117*. This basic setting has been defined specifically for the front and rear axles of your vehicle. It provides a balanced compromise between sporty performance and ride comfort.

The settings can be adjusted for driving on a driving track.

Special tools

Applies to: vehicles with RS sport suspension pro

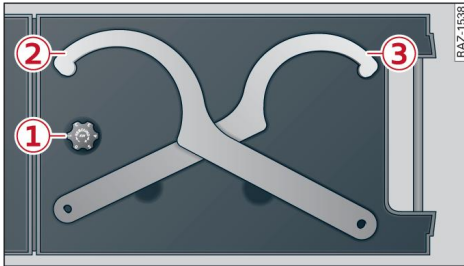


Fig. 94 Box with special tools

A box with special tools for the RS sport suspension pro is provided with the vehicle.

- ① Adjusting screw: rebound stage on the front axle
- ② Large hook wrench: adjustable coilover suspension on the front axle
- ③ Small hook wrench: adjustable coilover suspension on the rear axle

Adjusting the shock absorbers: rebound stage on the front axle

Applies to: vehicles with RS sport suspension pro

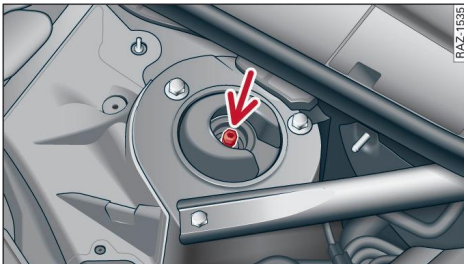


Fig. 95 Engine compartment: hole for the adjusting screw for setting the rebound stage on the front axle

General information

The rebound stage on the front axle can be adjusted using the adjusting screw from the set of special tools. The upper end of the piston rod with the hole for the special tool can be accessed from the engine compartment.

The numbers on the adjusting screw are for orientation purposes only. They are **not** relevant for the adjustment procedure. Instead, please pay

attention to the stages that can be felt when turning the adjusting screw (referred to below as “clicks”).

The adjustment range for the rebound stage is 0 to 16 clicks. For the recommended settings, please refer to ⇒ *page 117*.

Preparation

- ▶ Set the parking brake.
- ▶ Select the “P” position.
- ▶ Turn off the ignition.
- ▶ Allow the engine to cool.
- ▶ Make sure the adjusting screw ① ⇒ *page 115*, *fig. 94* from the set of special tools is available.
- ▶ Open the hood ⇒ *page 239*. Observe the warnings and general safety precautions ⇒ *page 237*.

Adjusting the rebound stage

- ▶ Insert the adjusting screw ① from the set of special tools in the hole in the upper end of the piston rod.
- ▶ Requirement for all adjustment procedures: the adjusting screw must be fully closed, meaning it must be turned as far as it will go in the  (stiff) direction.
- ▶ To make the rebound stage softer, turn the adjusting screw as many clicks as necessary in the  direction until the desired setting is reached.
- ▶ To make the rebound stage stiffer, turn the adjusting screw as many clicks as necessary in the  direction until the desired setting is reached.
- ▶ Perform the adjustment on the other side of the front axle in the same way.

Effect of settings on driving characteristics

High rebound forces increase driving precision on the front axle, but may result in reduced grip. Ride comfort may be severely limited. Low rebound forces improve ride comfort when driving slowly, but reduce stability and steering precision when driving at high speeds.



Note

The adjusting screw operates a precision mechanical valve. To reduce the risk of damage

to the adjustment mechanism, never attempt to turn the screw past the end point of the adjustment range.

Adjusting the shock absorbers: rebound stage on the rear axle

Applies to: vehicles with RS sport suspension pro

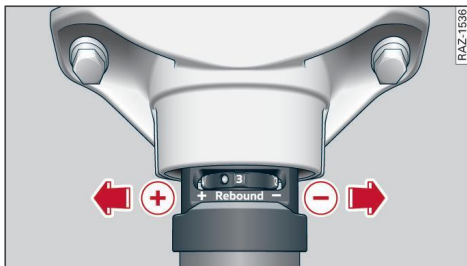


Fig. 96 Shock absorber piston rod: adjusting wheel for the rebound stage

General information

The rebound stage on the rear axle can be adjusted via an adjusting wheel on the upper end of each piston rod. The numbers on the adjusting wheel are for orientation purposes only. They are **not** relevant for the adjustment procedure. Instead, please pay attention to the stages that can be felt when turning the adjusting wheel (referred to below as “clicks”).

The adjustment range for the rebound stage is 0 to 16 clicks. For the recommended settings, please refer to ⇒ *page 117*.

Preparation

- ▶ Set the parking brake.
- ▶ Select the “P” position.
- ▶ Turn off the ignition.
- ▶ Lift the vehicle using a hoist. Follow the manufacturer's instructions for doing this. Never use a jack to lift the vehicle.
- ▶ Remove the wheel. Observe the instructions and the important safety precautions ⇒ *page 288*. Contrary to the information in the “Replacing wheels” chapter, a vehicle jack must never be used.

Adjusting the rebound stage

- ▶ Requirement for all adjustment procedures: the adjusting wheel must be fully closed, meaning it must be turned as far as it will go in the ⊕ (stiff) direction ⇒ *fig. 96*.
- ▶ To make the rebound stage softer, turn the adjusting wheel as many clicks as necessary in the ⊖ direction ⇒ *fig. 96* until the desired setting is reached.
- ▶ To make the rebound stage stiffer, turn the adjusting wheel as many clicks as necessary in the ⊕ direction ⇒ *fig. 96* until the desired setting is reached.
- ▶ Perform the adjustment on the other side of the rear axle in the same way.

Completing

- ▶ Reinstall the wheel ⇒ *page 288*. Contrary to the information in the “Replacing wheels” chapter, a vehicle jack must never be used.
- ▶ Lower the vehicle again using a hoist.

Effect of settings on driving characteristics

Low rebound forces improve ride comfort when driving slowly, but reduce stability and steering precision when driving at high speeds.



Note

The adjusting wheel operates a precision mechanical valve. To reduce the risk of damage to the adjustment mechanism, never attempt to turn the screw past the end point of the adjustment range.

Adjusting the shock absorbers: compression stage

Applies to: vehicles with RS sport suspension pro

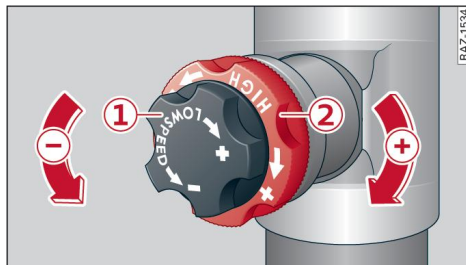


Fig. 97 Rear axle: lower area of shock absorber with adjusting wheels for the compression stage

The damping force can be adjusted according to the road surface:

- ① Low-speed compression stage - for long bumps, for example
- ② High-speed compression stage - for fast load changes, for example

General information

The compression stage on the front and rear axles can be adjusted using an adjusting wheel in the lower area of the shock absorber. The numbers on the adjusting wheel are for orientation purposes only. They are **not** relevant for the adjustment procedure. Instead, please pay attention to the stages that can be felt when turning the adjusting wheel (referred to below as “clicks”).

The adjustment range for the compression stage is 0 to 13 clicks. For the recommended settings, please refer to ⇒ *page 117*.

Preparation

- ▶ Set the parking brake.
- ▶ Select the “P” position.
- ▶ Turn off the ignition.
- ▶ Lift the vehicle using a hoist. Follow the manufacturer's instructions for doing this. Never use a jack to lift the vehicle.

Adjusting the compression stage

- ▶ Requirement for all adjustment procedures: the adjusting wheel must be fully closed, meaning it must be turned as far as it will go in the ⊕ (stiff) direction ⇒ *fig. 97*.
- ▶ To make the compression stage softer, turn the adjusting wheel as many clicks as necessary in the ⊖ direction ⇒ *fig. 97* until the desired setting is reached.
- ▶ To make the compression stage stiffer, turn the adjusting wheel as many clicks as necessary in the ⊕ direction ⇒ *fig. 97* until the desired setting is reached.

Effect of settings on driving characteristics

A stiff compression stage setting on the front axle makes the vehicle's steering more precise and direct. A stiff compression stage setting on the rear axle increases the vehicle's stability

when turning and helps counteract oversteer. A soft compression stage setting on the front axle makes the steering less direct and makes the vehicle handling more comfortable. A soft compression stage setting on the rear axle causes the rear of the vehicle to swing out more when turning.



Note

- If the compression stage is too stiff, ride comfort can be impaired when the vehicle is rolling and grip will be reduced.
- The adjusting wheel operates a precision mechanical valve. To reduce the risk of damage to the adjustment mechanism, never attempt to turn the screw past the end point of the adjustment range.

Recommended settings for the rebound stage and the compression stage

Applies to: vehicles with RS sport suspension pro

The following table shows the recommended settings for the rebound stage and compression stage in different driving situations.

Basic settings (factory settings) for use on public roads

	Front axle (clicks)	Rear axle (clicks)
Rebound stage	7	12
Low-speed compression stage	9	7
High-speed compression stage	9	10

Driving track

	Front axle (clicks)	Rear axle (clicks)
Rebound stage	6	9
Low-speed compression stage	3	3
High-speed compression stage	1	5



WARNING

Never set the damping to “very stiff” on one axle and “very soft” on the other. To reduce the risk of understeer and oversteer, the difference between the values on the two axles must not be greater than 9 clicks. A difference greater than 9 clicks increases the risk of an accident.

Adjusting the adjustable coilover suspension

Applies to: vehicles with RS sport suspension pro

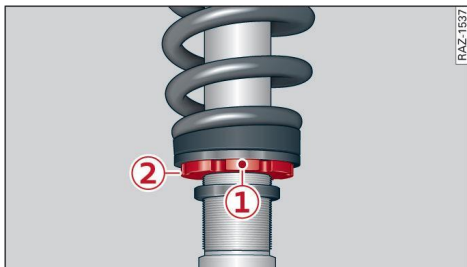


Fig. 98 Suspension strut on the front axle: coil spring with adjusting nut

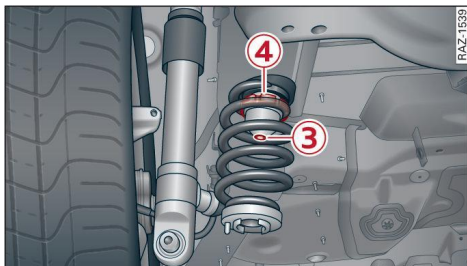


Fig. 99 Suspension strut on the rear axle: coil spring with adjusting nut

Preparation

- ▶ Before adjusting the adjustable coilover suspension, determine the current curb weight position with the vehicle resting on its wheels
⇒ page 119.
- ▶ Set the parking brake.
- ▶ Select the “P” position.
- ▶ Turn off the ignition.
- ▶ Lift the vehicle using a hoist. Follow the manufacturer’s instructions for doing this. Never use a jack to lift the vehicle.

- ▶ Remove the wheel. Observe the instructions and the important safety precautions
⇒ page 288. Contrary to the information in the “Replacing wheels” chapter, a vehicle jack must never be used.
- ▶ Clean the coil spring.

Adjusting the suspension on the front axle

- ▶ Make sure the large hook wrench (2) ⇒ page 115, fig. 94 from the set of special tools is available.
- ▶ To loosen the adjusting nut, turn the threaded pin (1) ⇒ fig. 98 using a suitable hex socket wrench.
- ▶ To lower the suspension, turn the lower adjusting nut (2) downward by the desired amount using the hook wrench. For settings, refer to the table ⇒ table on page 119.
- ▶ To raise the suspension, turn the adjusting nut upward.
- ▶ Then tighten the threaded pin as far as it will go to secure it.
- ▶ Perform the adjustment on the other side of the front axle in the same way.

Adjusting the suspension on the rear axle

- ▶ Make sure the small hook wrench (3) ⇒ page 115, fig. 94 from the set of special tools is available.
- ▶ Remove the stone deflector. To do this, remove the expanding rivets, for example using pliers.
- ▶ Insert a very long hex socket wrench through the coil spring from below and into the hex socket head bolt (3) ⇒ fig. 99.
- ▶ At the same time, position the hook wrench on the adjusting nut (4).
- ▶ To lower the suspension, turn the adjusting nut upward while counterholding with the hex socket wrench at the same time.
- ▶ To raise the suspension, turn the adjusting nut downward while counterholding with the hex socket wrench at the same time.
- ▶ Perform the adjustment on the other side of the rear axle in the same way.

Completing

- ▶ Reinstall the stone deflector.

- ▶ Reinstall the wheel ⇒ *page 288*. Contrary to the information in the “Replacing wheels” chapter, a vehicle jack must never be used.
- ▶ Lower the vehicle again using a hoist.
- ▶ Drive forward and backward a few feet so that the suspension is no longer under tension.
- ▶ To check the setting, determine the new curb weight position ⇒ *page 119*.

**Note**

Lowering the vehicle can cause increased wear on the axles and other components.

Determining the curb weight position

Applies to: vehicles with RS sport suspension pro

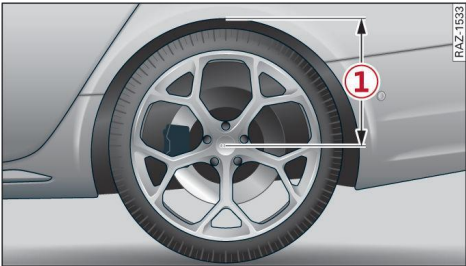


Fig. 100 Curb weight position

**Tips**

The setting on the suspension strut does not correspond to the actual value by which the vehicle is lowered. One turn of the adjusting nut corresponds to 2/16 in (2.8 mm) on the front axle and 5/32 in (3.8 mm) on the rear axle.

(fuel tank and washer fluid reservoir for headlight washer system full; spare tire*, vehicle tool kit, and vehicle jack* in vehicle) without the driver.

The setting for the curb weight position, which is relevant when raising and lowering the height of the vehicle, is calculated as the distance between the center of the wheel and the lower edge of the fender.

The term “curb weight position” ① refers to the weight of the vehicle when it is ready to operate

Settings for the curb weight position

Adjustable coilover suspension	Amount lowered	Absolute value for the front axle	Absolute value for the rear axle
Basic setting (factory setting)	0 in (0 mm)	14 1/16 in (357 mm)	14 7/32 in (361 mm)
Maximum values for lowering	13/32 in (10 mm)	13 21/32 in (347 mm)	13 13/16 in (351 mm)

**WARNING**

The curb weight position of the vehicle when it is delivered (factory setting) may vary depending on the vehicle equipment. The suspension must never be lowered below the absolute values specified in the table.

- The vehicle’s certification for use on public roads becomes void below these values. The

vehicle must not be driven on public roads in this condition.

- Below these values, the assist systems must be adjusted or recalibrated by an authorized Audi dealer or authorized Audi Service Facility to reduce the risk of an accident.

**Note**

- The adjustable coilover suspension must not be subjected to any load while it is being

adjusted. The vehicle must always be lifted correctly.

- Always adjust the suspension in accordance with the specified settings. The settings must always be symmetrical on each axle; otherwise there is a risk of excessive tire wear.

Tips

It is not necessary to perform a wheel alignment if the vehicle is lowered within the limits of the permitted absolute values.

Steering

Description

Electromechanical steering supports steering movements by electronically adapting the power steering depending on the vehicle speed. The settings depend on the selected Audi drive select* mode.

Dynamic steering

Applies to: vehicles with dynamic steering

The driving dynamic and driving stability are increased by the steering ratio based on the speed. At reduced speeds, steering is direct in order to provide agile steering behavior and keep the steering effort as minimal as possible when maneuvering the vehicle. This sets the steering to be less sensitive at higher speeds in order to provide improved vehicle control.

Messages

The following messages may appear, depending on the vehicle equipment:

Steering: malfunction! Please stop vehicle

The power steering may have failed. Adapt your driving style immediately to compensate for the fact that it may be more difficult to turn the steering wheel, and stop your vehicle in a safe location as soon as possible. Secure the vehicle against rolling before exiting the vehicle ⇨ *page 98*. Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Steering: malfunction! Please stop vehicle

There is a malfunction in the electronic steering lock. You cannot turn on the ignition. Secure the vehicle against rolling before exiting the vehicle ⇨ *page 98*. Do not tow your vehicle because it cannot be steered. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Steering: malfunction! You can continue driving

There is a malfunction in the steering system. Steering may be more difficult or more sensitive. Adapt your driving style. Have the steering system checked immediately by an authorized Audi dealer or authorized Audi Service Facility. Please note that the red indicator light may turn on after restarting the engine. Do not continue driving if it does.

Steering lock: malfunction! Please contact Service

There is a malfunction in the electronic steering lock. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Dynamic steering: correcting steering wheel position

The steering is reinitializing. The steering wheel will move easily after starting the vehicle. Reinitialization might be necessary if the steering wheel was moved while the engine was off. The display turns off if the initialization was successful.

WARNING

Do not tow your vehicle if there is a malfunction in the electronic steering lock because this increases the risk of an accident.

Tips

- If there is a malfunction, the steering wheel may be crooked when driving straight.
- If the  or  indicator light only stays on for a short time, you may continue driving.

All wheel drive (quattro)

Description

Applies to: vehicles with all wheel drive

The all-wheel drive system distributes the driving power variably to the front and rear axle to improve the driving characteristics. It works together with selective wheel torque control, which can activate when driving through curves

⇒ page 122.

Applies to: vehicles with quattro ultra: If the driving situation does not require all wheel drive, then the rear section of the drivetrain will decouple to save fuel. The system constantly determines and anticipates if all wheel drive is needed. This allows the rear drivetrain to recouple shortly before it is needed.

The all-wheel drive system is designed for high engine power. Your vehicle is exceptionally powerful and has excellent driving characteristics both under normal driving conditions and on snow and ice. Always read and follow safety precautions ⇒ .

WARNING

- Even in vehicles with all wheel drive, you should adapt your driving style to the current road and traffic conditions to reduce the risk of an accident.
- The braking ability of your vehicle is limited by the grip of the tires. In this way, it is not different from a two wheel drive vehicle. Do not drive too fast because this increases the risk of an accident.
- Note that on wet streets, the front wheels can “hydroplane” if driving at speeds that are too high. Unlike front wheel drive vehicles, the engine RPM does not increase suddenly when the vehicle begins hydroplaning. Adapt your speed to the road conditions to reduce the risk of an accident.

Sport differential

Applies to: vehicles with sport differential

The sport differential distributes the drive power to the rear axle based on the situation. The goal

is a high level of agility and ability to accelerate on curves. The vehicle is very responsive to steering. The settings depend on the selected Audi drive select* mode.

Messages

The following messages may appear, depending on the vehicle equipment:

 **All-wheel drive: malfunction! You can continue driving. Please contact Service**

Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

 **Sport differential: malfunction! Please contact Service**

Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

 **All-wheel drive: too hot. Please adapt driving style. See owner's manual**

The transmission temperature has increased significantly due to the sporty driving manner. Drive in a less sporty manner until the temperature returns to the normal range and the indicator light turns off.

 **Sport differential: temperature too high. Please adapt driving style**

The transmission temperature has increased significantly due to the sporty driving manner. Drive in a less sporty manner until the temperature returns to the normal range and the indicator light turns off.

WARNING

Contact an authorized Audi dealer or authorized Audi Service Facility if the sport differential is faulty or malfunctioning. The repair must be performed by trained personnel using the correct oil in order to ensure safety.

Electronic Stabilization Control (ESC)

Description

Electronic Stabilization Control (ESC) supports driver safety. It reduces the risk of slipping and improves driving stability. ESC detects critical situations, such as if the vehicle is oversteering or understeering, or if the wheels are spinning.

The brakes are applied or the engine torque is reduced in order to stabilize the vehicle.

The following stabilization functions are integrated into the ESC, among others:

Anti-Lock Braking System (ABS)

ABS prevents the wheels from locking when braking. The vehicle can still be steered even during hard braking. Apply steady pressure to the brake pedal. Do not pump the pedal.

A pulsing in the brake pedal indicates that the system is acting to stabilize the vehicle.

Anti-Slip Regulation (ASR)

ASR reduces drive power when the wheels begin spinning and adapts the power to the road conditions. This will increase the driving stability.

Electronic Differential Lock (EDL)

The EDL applies the brakes to wheels that are slipping and transfers the drive power to the other wheels. This function is not available at higher speeds.

In extreme cases, EDL automatically turns off to keep the brake on the braked wheel from overheating. The vehicle is still functioning correctly. EDL will turn on again automatically when conditions have returned to normal.

Selective wheel torque control

Selective wheel torque control is used when driving on curves. Braking is targeted toward the wheels on the inside of the curve as needed. This allows more precise driving in curves.

Power steering

The ESC can also support vehicle stability through steering.



WARNING

- The ESC and its integrated systems cannot overcome the limitations imposed by natural physical laws. This is especially important on slippery or wet roads. If the systems begin acting to stabilize your vehicle, you should immediately alter your speed to match the road and traffic conditions. Do not let the increased safety provided cause you to take risks. This could increase your risk of a collision.
- Please note the risk of a collision increases when driving fast, especially through curves and on slippery or wet roads, and when driving too close to objects ahead. There is still a risk of accidents because the ESC and its integrated systems cannot always prevent collisions.
- Accelerate carefully when driving on smooth, slippery surfaces such as ice and snow. The drive wheels can spin even when these control systems are installed and this can affect driving stability and increase the risk of a collision.



Tips

The ABS and ASR only function correctly when all four wheels have a similar wear condition. Different tire sizes can result in a reduction in engine power.

Operation

The  button (or , depending on the model) for controlling the ESC is located in the center console in front of the transmission selector. ESC turns on automatically when the ignition is turned on.

Limiting ESC

In some situations, it may make sense to limit the stabilizing function of the ESC so that the wheels can spin, for example to rock the vehicle to free it when it is stuck or to drive with snow

chains. The ESC can also be limited to provide more sporty driving characteristics with fewer stabilizing corrective actions.

- To limit the ESC, press the  button briefly. The  indicator light will turn on.
- To completely reactivate the ESC stabilization function, press the button again. The indicator light turns off.

Turning off ESC

For a more active control of the vehicle where the stabilizing functions of the ESC cannot intervene, the ESC can be turned off.

- To turn off the ESC, press and hold the  button for more than three seconds. The  and **ESC OFF** indicator lights turn on.
- To completely reactivate the ESC stabilization function, press the button again. The indicator lights turn off.



WARNING

- When the ESC is turned off or limited, there will be no vehicle stabilization or it will be limited. The driving wheels could spin and the vehicle could swerve, especially on slick or slippery road surfaces, which increases the risk of an accident.
- Because of the increased risk of an accident, only drive with the ESC turned off or limited when it is necessary. Reactivate the ESC as soon as possible.



Tips

- If the ESC is limited, turned off, or malfunctioning, systems with an automatic braking intervention function may not be fully available.
- If malfunctions occur in other systems or certain driver assistance systems are active, the ESC must be turned on by the system. The ESC may turn on automatically and cannot be operated with the button.



ABS



Stabilization control (ESC/ABS): malfunction! See owner's manual

There is a malfunction in the ABS or EDL. This also causes the ESC to malfunction. The brakes still function with their normal power, but ABS is not active.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Other indicator lights

If  blinks while driving, the ESC is actively regulating. Operating noises may occur. If the indicator light stays on, the ESC has been turned off due to system needs. The indicator light turns off when the system is fully functional.

Messages

The following messages may appear, depending on the vehicle equipment:

Trailer towing

Driving with a trailer

General information

Your vehicle is primarily intended for transporting people and luggage. However, if you drive with a trailer, follow the technical requirements, the operation and driving tips, and the legal regulations.

Driving with a trailer affects the vehicle's energy usage, performance, and wear. It also requires greater concentration.

A retrofitted trailer hitch must be installed according to the instructions provided by the manufacturer ⇒ *page 126*.



WARNING

- To reduce the risk of death, do not transport any people in a trailer.
- Only use a ball hitch that is approved for your vehicle. Using a ball hitch that is not approved for your vehicle can result in issues such as unstable driving behavior or uncoupling of the trailer and increase the risk of an accident. If you have questions, see an authorized Audi dealer or authorized Audi Service Facility.

Operating instructions

Towing capacity

Your vehicle can only be operated with class 1 or class 2 trailers.

Load distribution

Poor cargo load and distribution can negatively impact vehicle handling. Load the vehicle and trailer based on the following criteria as much as possible:

- Store objects in the vehicle luggage compartment, if possible. The vehicle should always carry the heaviest possible load and the trailer should have the lightest possible load.

- Distribute the load in the trailer so that the heavy objects are as close to the axle as possible.
- Secure objects so that they do not slide.
- Utilize the maximum permitted tongue weight if possible.

Speed

Adhere to the legal speed limits. Follow the legal regulations that are applicable in the country where you are operating the vehicle.

As the speed increases, the driving stability of the vehicle and trailer decreases. Therefore you should not exceed the maximum legal speed limit when there are unfavorable road, weather, and/or wind conditions. This especially applies when driving downhill.

Hills

When you start driving uphill or downhill, the vehicle and trailer may tilt or sway sooner than when driving on a level surface. Reduce the speed even for only minor swaying movements. Never attempt to “straighten out” the vehicle and trailer by accelerating.

Downshift before driving on hills to utilize the engine braking effect ⇒ .

Exterior lighting

Follow the legal regulations for lighting on your trailer that are applicable in the country where you are operating the vehicle. If necessary, contact an authorized Audi dealer or authorized Audi Service Facility for more information.

Before you start driving, check all lighting equipment on the trailer while it is hitched to the vehicle.

The headlight range control automatically adjusts the light range of the headlights.

Exterior mirrors

Make sure that you can also observe the traffic area behind the vehicle using the exterior mirrors, and use additional exterior mirrors if necessary. Adjust the additional exterior mirrors so



that you have a sufficient visibility behind the vehicle. Follow the local legal regulations for installing additional exterior mirrors.

Engine cooling system

Driving with a trailer means a higher load on the engine and the cooling system. Make sure the cooling system contains enough coolant.

Engine coolant temperature

Pay attention specifically to the coolant temperature display when there are high outside temperatures, and when driving on long inclines
⇒ *page 17*. Shift to a higher gear in a timely manner.

Tires

Set the tire pressure on your vehicle for a “full load”; see the tire pressure sticker ⇒ *page 265*. If necessary, also adjust the tire pressure on the trailer according to the manufacturer's specifications.

The trailer and the vehicle should be equipped with winter tires when driving in winter temperatures.

Overrun brake

If your trailer is equipped with an overrun brake, it must be correctly adjusted and function correctly. When using a trailer with an overrun brake, first brake gently then quickly. This reduces the risk of jerking while braking if the trailer wheels lock up.



WARNING

Constant braking causes the brakes to overheat and can substantially reduce braking performance, increase braking distance, or cause complete failure of the brake system.



Note

Attachments retrofitted on the vehicle may cause damage, especially on the trailer hitch ball head. In cases of damage, have the function checked by an authorized Audi dealer or authorized Audi Service Facility.



Tips

- Block the wheels with chocks when parking on inclines if the trailer is loaded.
- Audi recommends having the vehicle inspected between the inspection intervals if you tow a trailer frequently.
- Avoid driving with a trailer during the vehicle break-in period.

Trailer hitch

Introduction

Only use a trailer hitch with a removable ball hitch mount and ball hitch. The trailer hitch must be permitted for the vehicle, the trailer, and the permitted total weight of the trailer being pulled. Above all, it must be securely and safely attached to the vehicle trailer.

Never mount a trailer hitch on the bumper. The trailer hitch must be mounted in a way that does not impair the function of the bumper. Do not make any changes to the exhaust system and the brake system.

Check regularly if the trailer hitch is securely mounted. Always follow the instructions given by the trailer hitch manufacturer.

Driving with a trailer

Trailer brakes

If the trailer has its own brake system, then follow the manufacturer specifications. However, the brake system on the trailer must never be connected to the vehicle brake system.

Safety chains

Make sure the safety chains are correctly applied when pulling a trailer. The chains should hang down enough so that the trailer can drive around curves. However, they must not touch the ground.



WARNING

If the trailer is equipped with electronic brakes, these brakes cannot be activated by a

factory-installed control system, which increases the risk of an accident.

Retrofit installation

You can find out if your vehicle is equipped with a retrofitted trailer hitch at an authorized Audi dealer or authorized Audi Service Facility.

An authorized Audi dealer or authorized Audi Service Facility knows the specifications for retrofitting a trailer hitch and any necessary technical requirements.



WARNING

- Only have the additional trailer hitch installed by an authorized Audi dealer or authorized Audi Service Facility.
- There is a risk of an accident if the trailer hitch is installed incorrectly.
- For your own safety, read the assembly instructions provided by the trailer hitch manufacturer.



Note

- Connecting the socket incorrectly could cause damage to the vehicle electrical system.
- Longer inclines cannot be driven without a suitable cooling system, especially if the outside temperatures are high. Otherwise, this increases the risk of engine damage.

Assist systems

General information

Safety precautions

Observe the safety information for the assist systems, sensors, and cameras ⇨ .

WARNING

- As the driver, you have complete responsibility for all driving operations at all times. The assist systems cannot replace the driver's attention. Give your full attention to driving the vehicle, and be ready to intervene in the traffic situation at all times.
- Activate the assist systems only if the surrounding conditions permit it. Always adapt your driving style to the current visual, weather, road, and traffic conditions.
- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Store objects securely while driving.
- For the assist systems to be able to respond correctly, the function of the sensors and cameras must not be restricted. Note the information on sensors and cameras
⇨ *page 128*.

Tips

- Pay attention to applicable local regulations relating to driving tasks, leaving space for emergency vehicles, vehicle distance, speed, parking location, wheel placement, etc. The driver is always responsible for following the laws that are applicable in the location where the vehicle is being operated.
- You can cancel a steering or braking intervention by the system by braking or accelerating noticeably, steering, or deactivating the respective assist system.
- Always check the assist systems settings before driving. The settings may have been changed, for example by turning off the ignition or by other persons.

System limitations

Observe the limitations of the assist systems, sensors, and cameras ⇨ .

WARNING

- The use of an assist system cannot overcome the natural laws of physics. A collision cannot be prevented in certain circumstances.
- Warnings, messages, or indicator lights may not be displayed or initiated on time or correctly, for example, if vehicles are approaching very fast.
- Corrective interventions by the assist systems, such as steering or braking interventions, may not be sufficient or they may not occur. Always be ready to intervene.

Tips

- Due to the system limitations when detecting the surrounding area, the systems may warn or intervene unexpectedly or too late in certain situations. The assist systems may also interpret a driving maneuver incorrectly and then warn or intervene unexpectedly.
- The systems may not function as expected in unusual driving situations, such as driving offroad, on unpaved roads, on loose ground, on inclines, or on grooves in the road.
- The systems may not function correctly in unclear traffic situations, such as turn lanes, exit ramps, construction zones, rises or dips that obstruct visibility, intersections, traffic circles, toll booths, or city traffic.
- The detection of the surrounding area can be limited, for example by vehicles traveling ahead or by rain, snow, heavy spray, or light shining into the camera.
- The steering wheel touch recognition may be limited when you wear gloves. Steering intervention requests from the steering assist systems may occur more frequently.
- If accessories have been mounted on the steering wheel, the steering assist systems may be limited. The frequency of steering intervention requests from the steering assist systems may vary as well.

Surrounding area detection

Sensor and camera coverage areas

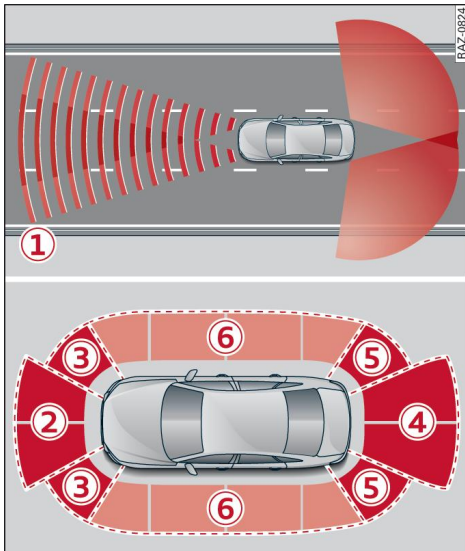


Fig. 101 Sensor detection ranges

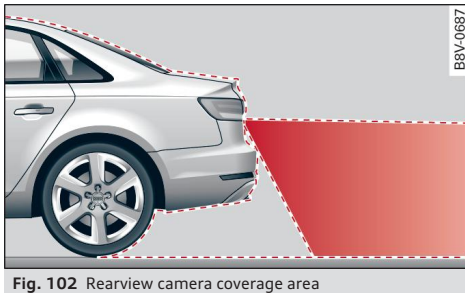


Fig. 102 Rearview camera coverage area

The assist systems analyze the data from various sensors and cameras installed in the vehicle. Do not use any assist systems if there is damage in the area of the sensors and cameras or on the vehicle underbody. Damage can impair the function of the sensors and cameras or cause malfunctions. Have an authorized Audi dealer or authorized Audi Service Facility check their function.

Radar sensors

Depending on the vehicle equipment, the area in front of and behind the vehicle may be detected ⇒ *fig. 101* ①.

The wheel sensors on the rear corners of the vehicle are positioned so that the adjacent lanes to the left and right are detected on roads with a normal lane width.

Ultrasonic sensors

Depending on vehicle equipment, various areas may be displayed in the MMI using the ultrasonic sensors ⇒ *fig. 101*.

The range of the displays depends on the location of the ultrasonic sensors:

- ② Approximately 4 feet (1.20 m)
- ③ Approximately 3 feet (0.90 m)
- ④ Approximately 5.2 feet (1.60 m)
- ⑤ Approximately 3 feet (0.90 m)
- ⑥ Approximately 3 feet (0.90 m)

The side area ⑥ is detected and evaluated when passing. There may have been changes to the surrounding area after turning off the ignition and on again, after opening the doors, or if the vehicle is left stationary for a period of time. In this case, the area will appear black until the area has been detected and evaluated.

Cameras

Use the camera image in the display to assist you only if it shows a good, clear picture. Keep in mind that the image in the display is enlarged and distorted. Under certain circumstances, objects may appear different and unclear in the display.

The rearview camera can only detect the area marked in red ⇒ *fig. 102*. Only this area is displayed on the center display ⇒ ⚠.



WARNING

- Sensors and cameras have spots in which the surrounding area cannot be detected. Objects, animals, and people may only be detected with limitations or may not be detected at all. Always monitor the traffic situation and the vehicle's surroundings directly and do not become distracted.
- Sensors may be subject to physical system limitations. External sources of interference, for example from other vehicles, can

impair sensor functionality. The assist systems may be limited or may not function as expected.

Note

- Obstacles may disappear from the measurement range when approaching them, even if they were already detected.
- In some situations, the ability of the sensors and cameras to detect and display certain objects may be limited:
 - Objects located above the coverage area, such as bumpers on parked cars, garage doors that are partially open, or objects that are hanging
 - Low obstacles
 - Narrow objects, such as barrier chains, foliage, poles, or fences
 - Projecting objects, such as trailer draw bars
 - Objects with certain surfaces and structures, such as fabric

 Tips

- Exterior mirrors equipped with peripheral cameras must always be folded out fully to ensure correct functionality. Make sure the mirrors are folded out fully when driving.
- The sensors and cameras and the areas around them must not be obstructed or painted, because this can impair the function of the systems that depend on them. Make sure that the sensors and cameras are free of snow, ice, and other deposits. Attachments, stickers, adhesive, paint or similar objects must not be applied to sensors or extend into the visual field of the sensors and cameras.
- On vehicles that have factory-installed license plate brackets on the front of the vehicle, the brackets may only be replaced with ones that are the same size and made of the same material. Do not install any license plate brackets on the front of vehicles that do not have factory-installed brackets. Otherwise, the function of the system could be impaired.

- The function of the sensors and cameras may be limited when light and visibility conditions are poor, for example when driving into a tunnel, when there is glare, or when there are reflective objects.
- External ultrasonic sensors, such as those in other vehicles, can interfere with the sensors.
- The coverage areas of the sensors $\Rightarrow$ *fig. 101* and cameras $\Rightarrow$ *fig. 102* are schematic representations and do not represent a true-to-scale image of the sensor ranges.
- The system complies with United States FCC regulations and ISCED regulations
 $\Rightarrow$ *page 310*.

Locations of the sensors and cameras

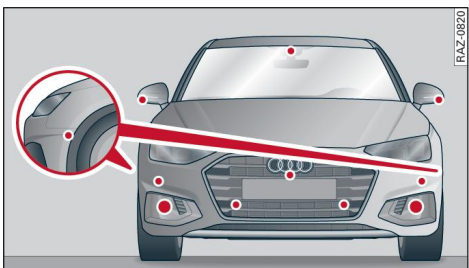


Fig. 103 Front area: sensors and cameras

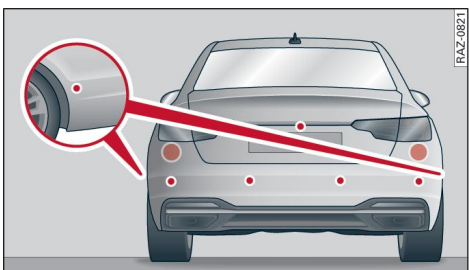


Fig. 104 Rear area: sensors and cameras

Front area

Depending on the vehicle equipment, the following sensors and cameras may be installed:

- Camera behind the windshield
- Peripheral cameras on the exterior mirrors
- Front peripheral camera in the radiator grille
- Front and side ultrasonic sensors

- Front radar sensors at the corners of the bumper

Rear area

Depending on the vehicle equipment, the following sensors and cameras may be installed:

- Rearview camera in the luggage compartment lid
- Radar sensors at the rear corners of the vehicle
- Rear and side ultrasonic sensors

Tips

- The locations of the sensors may differ slightly depending on vehicle equipment.
- Some sensors are installed under vehicle components and cannot be seen from the outside.
- The system complies with United States FCC regulations and ISSED regulations
⇒ *page 310*.

Driver assistance menu

In the **Driver assistance** menu, you can turn certain assist systems on or off, or adjust them to your preferences.

- Applies to MMI: Select on the home screen: **VEHICLE** > **Driver assistance**.

You can turn certain systems on/off by pressing  or adjust them to your preferences .

WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.

Parking aid menu

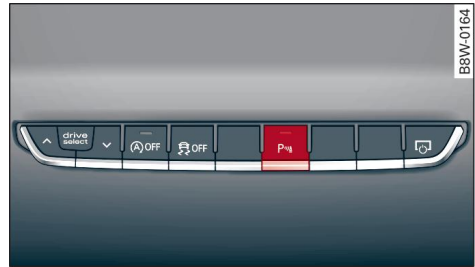


Fig. 105 Center console: parking aids button

In the **Parking aid** menu, you can turn certain parking aids on or off or adjust them to your preferences.

- Applies to MMI: Select on the home screen: **VEHICLE** > **Parking aid**, or
- Press the  button ⇒ *fig. 105* in the center console and press  in the center display when the parking system is active.

You can turn certain systems on/off by pressing  or adjust them to your preferences .

Possible settings

The possible settings depend on the vehicle equipment. Some settings are only available via  and under certain conditions.

- **Automatic activation** ⇒ *page 163*
- **Front and rear volume** ⇒ *page 164*
- **Entertainment fader** ⇒ *page 164*.
- **View** ⇒ *page 167*
- **Rear cross-traffic assist** ⇒ *page 169*

WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.

Driving information

Speed warning

Description

Applies to: vehicles with speed warning system

The speed warning system helps to stay below a specified maximum speed. A warning threshold can be set in the MMI for this purpose.

Once the speed slightly exceeds the stored threshold, the speed warning system will provide an alert using an indicator in the instrument cluster and a warning tone. Once the speed drops below the stored maximum speed, the display will turn off.

Setting a threshold is recommended if you would like to be reminded when you reach a certain maximum speed. Situations where you may want to do so include driving in a country with a general speed limit or if there is a specified maximum speed for winter tires.

Tips

Regardless of the speed warning system, you should always monitor your speed using the speedometer and make sure you are adhering to the legal speed limit.

Setting the warning threshold

Applies to: vehicles with speed warning system

You can adjust the warning threshold to your preferences in the **Driver assistance** menu ⇒ *page 130*. The settings depend on the vehicle equipment.

Possible settings:

Speed warning – adjust the speed for the warning threshold.

Messages

Applies to: vehicles with speed warning system

The following messages may appear, depending on the vehicle equipment:

  **Manually set (XY) warning threshold exceeded**

The stored speed was exceeded.

Camera-based traffic sign recognition

Description

Applies to: vehicles with camera-based traffic sign recognition

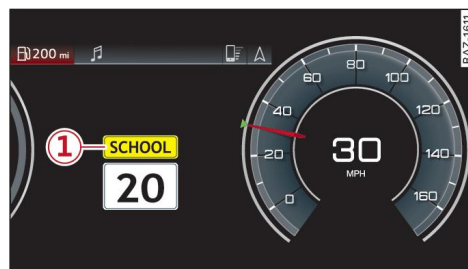


Fig. 106 Instrument cluster: traffic sign recognition

The traffic sign recognition shows the traffic signs detected by the front camera in the instrument cluster display and in the head-up display*. Data from the navigation system is also included in the display. Up to three traffic signs can be displayed in the instrument cluster at once. The speed limit that is currently applicable is displayed in the status bar. If necessary, it will be hidden if the system detects that turning right is prohibited at a red light. The display in the head-up display* can be turned off ⇒ *page 29*.

Within the limitations of the system and depending on the market, speed limit restrictions ① in school zones, highways, construction zones, or at night may be displayed.

Limitations

The traffic sign recognition is subject to certain system limitations and may be unavailable or only partially available in the following situations:

- When visibility is poor, such as in snow, rain, fog, or heavy spray
- When there is glare, for example from oncoming traffic or the sun
- At high speeds
- If the camera's visual field ⇒ *page 128* is covered, for example by dirt or stickers. For information on cleaning, see ⇒ *page 278*.

- If the traffic signs are completely or partially covered, for example by trees, snow, dirt, or other vehicles
- If traffic signs do not conform to the standard format
- If traffic signs are damaged or bent
- If traffic signs are displayed on sign holders with electronic signs
- If the traffic signs or the roadways have changed, and the navigation data is no longer up-to-date

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- Under some circumstances, traffic sign recognition may not detect traffic signs correctly or detect them at all. As a result, the system may not display the correct speed limit or any speed limit.

Tips

- Traffic sign recognition only informs and warns about speed limits. Depending on the vehicle equipment, additional driver assistance systems can adjust the vehicle speed.
- The display in the instrument cluster is based on the units of measurement used for speed in the country where the vehicle is being operated. As a result, a display of **50** in the instrument cluster can mean either mph or km/h, depending on the country.

Operation

Applies to: vehicles with camera-based traffic sign recognition

Accessing traffic sign recognition

- Select in the instrument cluster: vehicle functions tab > **Traffic signs**.

Setting a traffic sign based speed warning

You can adjust the speed warning threshold to your preferences in the **Driver assistance** menu ⇒ *page 130*. The settings depend on the vehicle equipment.

Possible settings:

Traffic sign based speed warning

You can turn visual and audio speed warnings on or off. The setting that was last used will be used again after restarting the vehicle.

Traffic sign-based warning threshold – you can select a warning threshold. If you exceed this, then the current detected speed limit will be shown in the display with an exclamation point for the duration that it is exceeded and it will blink for a short time. Additionally, a warning tone will sound for a short time. The setting will be saved when restarting.

Warning tone when exceeding the speed limit – you can turn the audio warning tone for exceeding the speed limit on or off. The setting that was last used will be used again after restarting the vehicle.

Speed limit change notification tone – you can turn the audio notification tone for speed limit changes on or off. The setting that was last used will be used again after restarting the vehicle.

Deactivate when using cruise control – you can turn the visual and audio warnings during active cruise control on or off. Restarting the vehicle will reset the setting to the default setting.

Messages

Applies to: vehicles with camera-based traffic sign recognition

If  is displayed when there is a malfunction, the camera-based traffic sign recognition functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors ⇒ *page 129* and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. ►

The following messages may appear, depending on the vehicle equipment:

 **Traffic sign recognition: currently limited.**
See owner's manual

This message appears if navigation system data is not available, for example on newly-constructed roads. The speed limit display will be temporarily limited, which increases the risk of an incorrect display.

No traffic sign information available

Depending on the area, there is no valid navigation data and no speed limits were detected. This may also appear if there is a recommended speed, but no speed limit (for example when driving on and off the expressway).

Traffic light information

Description

Applies to: vehicles with traffic light information

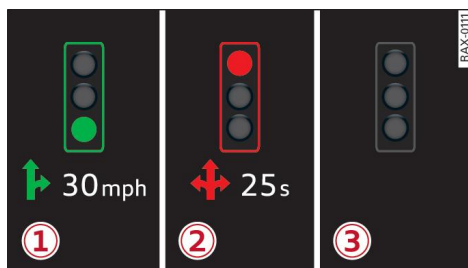


Fig. 107 Instrument cluster: traffic light information display

The traffic light information gives you a speed recommendation in order to reach the next traffic light when it is green ①, or it informs you of the wait time at the next red light ②. Once traffic light data is available, the traffic light information will be displayed in the instrument cluster and in the head-up display*. If the vehicle is in an area with traffic light information but cannot receive a traffic light signal, then a gray traffic light symbol will be displayed ③.

General information

Traffic light information is subject to system limitations and may be unavailable or only partially available in the following situations:

- If the permitted speed limit is exceeded
- If driving below a certain speed limit
- If the next traffic light is less than approximately 100 feet (30 m) away
- If the estimated wait time at a red light is less than four seconds
- If there is no traffic light data available
- If emergency response vehicles or public transit systems are active
- If traffic lights are in construction zones or being serviced
- If there are warnings from the camera-based traffic sign recognition*
- If the camera-based traffic sign recognition* is malfunctioning or not available
- If the data connection has been interrupted
- If data transmission is deactivated in the privacy settings
- If the subscription has expired

If this is the case, the menu item will be grayed-out or it will not be possible to select it.



WARNING

- When traffic light information is shown, also always pay attention to the traffic situation, the distance to other vehicles, and the area around the vehicle. The driver is always responsible for assessing the traffic situation.
- Always adapt your speed to the current weather, road and traffic conditions. The displayed information must never cause you to ignore legal traffic regulations and pose a safety risk.
- Regardless of the traffic light information, you should always monitor your speed using the speedometer and make sure you are adhering to the legal speed limit.
- The traffic light information does not adjust your vehicle's speed to the speed recommendation shown in the display.
- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras → page 127 to → page 130.

Tips

- Traffic light information was only available in select cities at the time this manual was published.
- Traffic light information is not available nationwide.
- The functions depend on the navigation data* being up-to-date and correct identification by the traffic sign recognition*.
- Incorrect data from the camera-based traffic sign recognition* or outdated navigation system* map data may result in missing, implausible, or incorrect images in the display.
- Certain traffic lights can automatically adjust to the current traffic situation. If this occurs, the display of traffic light information can change suddenly.
- The traffic signs on the road always take priority over the display. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- Units of measurement and language settings are displayed based on how they were set in the MMI system settings → *page 230*.

Operation

Applies to: vehicles with traffic light information

Turning traffic light information on or off

You can turn the traffic light information on or off in the **Driver assistance** menu → *page 130*.

Accessing traffic light information

- ▶ Select in the instrument cluster: vehicle functions tab > **Traffic signs**.

Tips

If another tab or another function is selected in the instrument cluster, the traffic light information will appear in the status bar on the instrument cluster.

Messages

Applies to: vehicles with traffic light information

The following messages may appear, depending on the vehicle equipment:

Malfunction! See owner's manual

The system could not be configured, for example due to a network malfunction. Turn off the ignition and shut down the vehicle to restart the system. Wait several minutes until the vehicle has shut down completely and then turn the ignition back on.

Function currently unavailable. See owner's manual

There is a temporary system malfunction. Check if one or more of the following situations applies and correct the issue if necessary:

- Traffic light information is turned off
- Data transmission is deactivated
- The vehicle is not equipped with traffic sign recognition.
- There is no valid license
- Traffic light information is not available in that area

Driver alert warning

Description

Applies to: vehicles with driver alert warning

Within the limitations of the system, the driver alert warning informs the driver if a break is needed.

After starting to drive, the driver alert warning analyzes the driving behavior and uses this data to assess drowsiness. This assessment is continuously compared with the current driving behavior.

If this comparison suggests that the driver is drowsy while traveling at speeds of 40 mph (65 km/h) or above, then the system will recommend a break. This suggestion will be provided by means of a display in the instrument cluster. If high levels of drowsiness are detected, there will also be an audio signal. ▶

System limitations

In some situations, the system may not be able to interpret the driver's behavior correctly:

- At speeds lower than approximately 37 mph (60 km/h)
- At speeds greater than approximately 80 mph (130 km/h)
- On curvy roads
- With poor road conditions
- In construction zones
- In poor weather conditions
- When driving with a sporty driving style
- If you are distracted
- If the Lane guidance* is activated
- If the driver starts to sleep or sleeps momentarily

Resetting the system

The system will be automatically reset in the following situations:

- When you turn off the ignition
- If you unbuckle the driver's safety belt and open the driver's door
- If the vehicle is stationary for some time



WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- Never drive when you are tired, as this could increase the risk of an accident. On long drives, regularly take breaks that are long enough to provide sufficient rest. The driver is always responsible for their own driving capability.



Tips

In some situations, the system may interpret driving maneuvers incorrectly and then recommend a break based on that incorrect interpretation.

Operation

Applies to: vehicles with driver alert warning

Turning the driver alert warning on or off

You can turn the driver alert warning on or off and adjust its settings in the **Driver assistance** menu ⇒ *page 130*. The settings depend on the vehicle equipment.

Possible settings:

Sensitivity – You can set the sensitivity of the driver alert warning to **High**, **Medium** or **Low**.

Opening the drowsiness display

The current drowsiness assessment is displayed in the instrument cluster.

- ▶ Select in the instrument cluster: vehicle functions tab > **Driver state estimat.**

If you turn off the system, it will remain off the next time you turn on the ignition.

Messages

Applies to: vehicles with driver alert warning

If  is displayed when there is a malfunction, the driver alert warning functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. Try turning on the system again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

The following messages may appear, depending on the vehicle equipment:



Driver alert warning: please take a rest!

High levels of drowsiness have been detected. Take a break.



Driver alert warning: rest recommended

Low levels of drowsiness have been detected. Take a break if possible.

Distraction warning

Description

Applies to: vehicles with distraction warning

The distraction warning will provide an alert if the system detects that the driver is distracted from the traffic situation.

The system detects if you are performing operations while driving that could distract you from the traffic situation, such as adjusting the power seat*.

In this case, the system will prompt you to concentrate on the traffic situation starting at low speeds with a display in the instrument cluster, as well as with an audio signal if you are very distracted.

System limitations

In some cases, the system may be limited or may not operate at all:

- At speeds lower than approximately 6 mph (10 km/h)
- If driver distraction is high due to external influences (such as the traffic situation)
- If driver distraction is high due to operating equipment that is not part of the vehicle (such as mobile devices)
- If driver distraction is high due to use of the Infotainment system

WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.

Operation

Applies to: vehicles with distraction warning

Turning the distraction warning on or off

You can turn the distraction warning on or off and adjust its settings in the **Driver assistance** menu ⇒ *page 130*. The settings depend on the vehicle equipment.

Possible settings:

Sensitivity – You can set the sensitivity of the distraction warning to **High**, **Medium** or **Low**.

If you turn off the system, it will remain off the next time you turn on the ignition.

Messages

Applies to: vehicles with distraction warning

If  is displayed when there is a malfunction, the distraction warning functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. Try turning on the system again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

The following messages may appear, depending on the vehicle equipment:

 **Supervision needed. Focus on the road at all times!**

High levels of distraction have been detected.

 **Supervision needed. Focus on the road at all times!**

Low levels of distraction have been detected.

Lap timer

Introduction

Applies to: vehicles with lap timer

You can record and evaluate lap times with the lap timer. You can operate the lap timer using the multifunction steering wheel ⇒ *page 16*.

Opening the lap timer

- Select in the instrument cluster: Vehicle functions tab >  button > **Lap times**.

An additional indicator will appear in the head-up display*.

WARNING

Your focus should always be on driving your vehicle safely. As the driver, you have

complete responsibility for safety in traffic. To reduce the risk of an accident, only use the lap timer functions in such a way that you always maintain complete control over your vehicle in all traffic situations.

Tips

You can retrieve information from the trip computer while the lap timer stopwatch is running.

Lap times and timing

Applies to: vehicles with lap timer

Requirement: the lap timer must be open.

Timing laps

- ▶ To start timing manually, select **Start lap 1** in the menu.
- ▶ To start timing automatically as soon as you begin to drive, select **Start lap 1 by driving off** or **Start by driving off** in the menu.
- ▶ To start timing a new lap after driving a lap, select **New lap** in the menu. This starts timing the next lap at the same time.

After completing a lap, the difference between the last lap and the previous best lap time will be indicated with a **-** or **+**.

Pausing timing and displaying a split time

- ▶ To take a break , select **Pause** in the menu.
- ▶ To resume timing, select **Resume** in the menu.
- ▶ To display a split time, select **Split time** in the menu. The split time  appears for approximately ten seconds in the instrument cluster. The current lap timing will continue running.

Canceling lap timing

The timing of the current lap will stop. The lap time will be erased and will not be included in the statistics.

- ▶ Select **Cancel lap** in the menu.

Resetting the time

- ▶ Select **Reset lap times** in the menu.

Tips

- A maximum of 99 lap times can be measured.
- If timing is paused, you can continue it later even if you turn off the ignition.
- Saved lap times cannot be individually deleted from the total results.
- The saved lap timer values will remain after turning off the ignition.

Lap statistics

Applies to: vehicles with lap timer

Displaying lap statistics

You can display the number of laps driven , the fastest lap **+**, the slowest lap **-**, and the average time  in the instrument cluster.

- ▶ Select in the instrument cluster: Vehicle functions tab >  button > **Lap statistics**.
- ▶ Turn the thumbwheel down or up to display the individual lap times.
- ▶ To return to the lap timing that was started, select the  button > **Lap times**.

Resetting lap statistics

Requirement: the lap statistics menu must be displayed.

- ▶ To reset the lap statistics, press and hold the left thumbwheel until the message **No lap times have been recorded yet.** appears.

Tips

The lap statistics list the lap times for the last 30 laps. The fastest and slowest lap times out of up to 99 measured laps are also displayed.

Acceleration measurement¹⁾

Introduction

Applies to: vehicles with acceleration measurement

With the acceleration measurement, you can measure the time that you need to reach a



¹⁾ Not available in all countries

specific speed/distance. For the best possible measurement readings, Audi recommends limiting the ESC or turning it off. Keep in mind that the environmental conditions and tire properties can affect the results of the measurement.

Opening the acceleration measurement

- ▶ Select in the instrument cluster: vehicle functions tab >  button > **Acceleration measure.**

WARNING

Your focus should always be on driving your vehicle safely. As the driver, you have complete responsibility for safety in traffic. Only use the acceleration measurement function on closed courses to reduce the risk of accidents.

Tips

The acceleration measurement was calibrated using the largest possible summer tire/rim combination available at the factory. Using a different tire/rim combination could affect the accuracy of the measurement.

Using the acceleration measurement

Applies to: vehicles with acceleration measurement

Requirement: the acceleration measurement must be opened.

- ▶ Bring the vehicle to a full stop.
- ▶ Select and confirm the desired speed or distance.
- ▶ Wait briefly until the  symbol appears in the instrument cluster next to the time measurement.
- ▶ To start the acceleration measurement, accelerate the vehicle. The measurement ends automatically once you have reached the selected speed or distance.

Integrated Toll Module

Description

Applies to: vehicles with Integrated Toll Module

Depending on the region, you can pay toll fees in certain countries using the Integrated Toll Mod-

ule (ITM). It replaces a separate transponder for detecting toll fees. The system electronics are integrated in the rearview mirror housing.

To use the ITM in toll zones, you must register and activate it.

Registration

- ▶ **Applies to: MMI:** Select on the home screen: **VEHICLE > Settings & Service > Integrated Toll Module.**
- ▶ Note the Integrated Toll Module ID.
- ▶ To register the ITM, go to the displayed web address and follow the instructions.

Activation

- ▶ To activate the ITM, press  in the MMI.

Entering the number of passengers

A lower toll fee may be charged depending on the number of passengers and the region. You must either enter the number of passengers or deactivate the ITM based on the laws applicable in the area where you are driving.

- ▶ To enter the number of passengers, select the appropriate button in the MMI.
- ▶ To deactivate the ITM, press  in the MMI.

Tips

- The driver is responsible for specifying the correct number of passengers and activating or deactivating the ITM.
- Malfunctions can occur when detecting tolls if both the ITM and transponder are activated. Deactivate the system not being used or remove it as necessary.
- If the rearview mirror is replaced, you must register the new ITM and remove the old ITM from the account.
- The system complies with United States FCC regulations and ISED regulations
⇒ *page 310.*

Display

Applies to: vehicles with Integrated Toll Module

The selected number of passengers is displayed in the MMI status bar ⇒ *page 25.*

The  symbol in the status bar and a notification in the MMI will indicate if there is a faulty connection between the ITM and the MMI or if the ITM is faulty. If the connection remains interrupted or the ITM is faulty, drive immediately to an authorized Audi dealer or authorized Audi Service Facility.

Driver assistance

Cruise control system

Description

Applies to: vehicles with cruise control system

The **cruise control system** assists you in maintaining a constant speed above approximately 15 mph (20 km/h). The system maintains the desired speed by braking and accelerating.

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- The cruise control system is only an assist system, and the driver is still responsible for operating the vehicle. The driver is especially responsible for braking, controlling the speed, and maintaining the distance to other vehicles.
- Turn off the cruise control temporarily when driving in turning lanes, highway exits, or in construction zones. This prevents the vehicle from accelerating to the stored speed when in these situations.

Note

Before driving downhill a long distance on a steep hill, decrease your speed and select a lower gear. This makes use of the engine braking effect and reduces the load placed on the brakes.

Display overview

Applies to: vehicles with cruise control system

Indicator lights and messages in the speedometer inform you about the driving situation and the settings. The displays depend on the country and equipment.

Indicator lights

CRUISE /  - the cruise control system is turned on and actively controls the set speed.

An additional indicator will appear in the head-up display*.

WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.

Turning on the system

Applies to: vehicles with cruise control system



Fig. 108 Lever: turning on the system

Requirement: the ignition must be turned on.

- To turn on the system, pull the lever toward you to position ②.

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- If the brakes are malfunctioning (for example, overheating) while the cruise control system is turned on, the regulating functions may shut off automatically.

Preselecting or activating a cruise control speed

Applies to: vehicles with cruise control system

When the vehicle is stationary, you can preselect the speed to be maintained, or you can select the speed while driving.

Requirement: the system must be turned on.

- To preselect a cruise control speed when the vehicle is stationary, tap the lever toward  /  ⇒ *page 140*, *fig. 108*.
- To activate the cruise control speed, pull the lever toward position ② while driving. ►

- To set the current driving speed as the cruise control speed, press the button **1** on the lever.

Changing the cruise control speed

Applies to: vehicles with cruise control system

Requirement: the system must be turned on.

- To increase or decrease the cruise control speed in small increments, tap the lever up to the first level toward **+**/**-** ⇒ *page 140, fig. 108*.
- To increase or decrease the cruise control speed in larger increments, tap the lever up to the second level toward **+**/**-**.
- To increase or decrease the cruise control speed continuously, tap and hold the lever at the first or second level toward **+**/**-**.

Overriding or deactivating the cruise control speed

Applies to: vehicles with cruise control system

You can override or deactivate the cruise control system. When you deactivate the system, your cruise control speed will be stored and you can resume that speed.

Requirement: the system must be turned on and the set cruise control speed must be activated.

Overriding

- To temporarily override the set cruise control speed, press the accelerator pedal.
- To resume the stored regulated speed, remove your foot from the accelerator pedal.

If you override the cruise control system for a long period of time, the cruise control system will be deactivated.

Deactivating

- To deactivate the cruise control speed, press the lever to position **3** (not locked into place) ⇒ *page 140, fig. 108*, or
- Press the brake pedal.



WARNING

Resting your foot on the accelerator pedal could override the cruise control. Braking in-

terventions and corrective actions by the system may not occur.

Turning off the system

Applies to: vehicles with cruise control system

If you do not want to use the cruise control system for a longer period of time, you can turn it off.

- To turn off the system, press the lever toward **3** (locked into place) ⇒ *page 140, fig. 108*.

The indicator light will turn off and the set speed will be cleared.

Messages

Applies to: vehicles with cruise control system

If **CRUISE** or  is displayed when there is a malfunction, the cruise control system functions may be unavailable or limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors ⇒ *page 129* and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Efficiency assist

Description

Applies to: vehicles with efficiency assist

Efficiency assist can assist with predictive information in order to reduce fuel consumption. Depending on vehicle equipment, the system may access data from the navigation system, the camera behind the windshield, and the radar sensors.

Adjusting the efficiency assist

You can adjust efficiency assist functions individually. The settings depend on the vehicle equipment.

– **Predictive messages** ⇒ *page 142*.

– Predictive control ⇨ page 147.

Situation symbols

Depending on the equipment version, efficiency assist can use the following symbols to indicate the situation to which the system is responding.

Depending on the equipment version, some of the symbols can only be displayed in the **Driver assistance** display to clarify to which situation the system is responding.

Some symbols only appear if **Predictive messages** are turned on, and some symbols only appear if **Predictive control** is turned on and Audi adaptive cruise control* is actively regulating the vehicle.

Symbol	Description
	Slow down (predictive messages only)
	Adjustment to curves along route (predictive control only) Additional symbols are shown in the Driver assistance display.
	Speed limit
	Speed limit
	Exit ahead
	Intersection ahead
	Traffic circle ahead
	(predictive control only) If the indicator light turns on in green and red, it is indicating that there is a difference between the speed limit and the set speed.

**WARNING**

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇨ page 127 to ⇨ page 130.

**Tips**

- The functions depend on the navigation data* being up-to-date and correct identification by the traffic sign recognition*.
- The system only detects traffic signs that specify a speed limit.
- The display in the instrument cluster is based on the units of measurement used for speed in the country where the vehicle is being operated. As a result, a display of 50 in the instrument cluster can mean either mph or km/h, depending on the country.
- Aside from the road network, which is recorded in the navigation system’s map information, certain functions may not be available.
- Certain settings are automatically stored and assigned to the remote control key being used.

Predictive messages

Applies to: vehicles with efficiency assist

The  symbol appears in the instrument cluster display when the efficiency assist recommends removing your foot from the accelerator pedal. Symbols indicate the situation to which the system is responding ⇨ page 142, *Situation symbols*.

Requirements

- The cruise control system* or Audi adaptive cruise control* must not be actively regulating.
- The vehicle speed must be at least 20 mph (30 km/h).
- The remaining distance until the situation is reached must be large enough to allow the system to respond to the situation.
- The automatic transmission is not in the “S” driving program.

Turning predictive messages on or off

You can turn predictive messages on or off. The possible settings depend on the vehicle equipment.

Applies to MMI: Select on the home screen: **VEHICLE > Efficiency assist > Predictive messages.** ▶

**WARNING**

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- Pay attention to traffic and the area around your vehicle when efficiency assist is turned on. The driver is always responsible for assessing the traffic situation.

**Tips**

- The traffic signs on the road always take priority over the display. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- When a route is planned using the navigation system*, then system displays messages based on an assumed route. Without route guidance, the system displays messages based on an assumed route.
- The wording of the message may vary depending on the Audi drive select* mode and the selector position that are selected.

Audi adaptive cruise control

General information

Applies to: vehicles with Audi adaptive cruise control

Depending on vehicle equipment, Audi adaptive cruise control may consist of the following functions:

Within the limitations of the system, the **adaptive speed and distance control** assists while driving in controlling the speed and keeping the set distance to the vehicle traveling ahead. If the system detects a vehicle traveling ahead, the adaptive cruise control can brake and accelerate your vehicle within the limitations of the system. On open roads with no traffic, it functions like a cruise control system. The stored speed is maintained. When approaching a vehicle traveling ahead, the adaptive cruise control system automatically brakes to match that vehicle's speed and then maintains the set distance as much as possible. As soon as the system does not detect a

vehicle traveling ahead, adaptive cruise control accelerates up to the stored speed.

In **stop-and-go traffic**, the vehicle may brake to a full stop and then may also start driving again automatically under certain conditions ⇒ *page 150*.

Applies to: vehicles with traffic jam assist: In **traffic jams or in stop-and-go traffic**, the **traffic jam assist** can assist in staying within the lane detected by the system ⇒ *page 151*.

Applies to: vehicles with predictive control: **Predictive control** can adjust the set speed based on traffic and road conditions ⇒ *page 147*.

**WARNING**

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.

**Tips**

The system complies with United States FCC regulations and ISED regulations ⇒ *page 310*.

Limitations

Applies to: vehicles with Audi adaptive cruise control

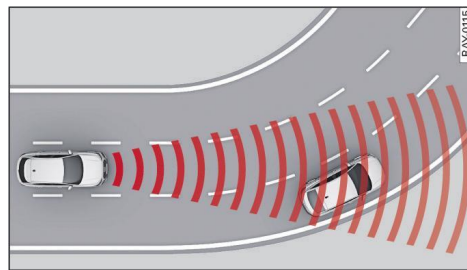


Fig. 109 Example: driving into a curve

In some situations, the adaptive cruise control function is limited and you must assume control of the vehicle when necessary, for example by applying the brakes.

- When driving into a curve ⇒ *fig. 109* and out of a curve, the system may respond to a vehicle in the neighboring lane and apply the brakes. You can override the system by pressing the accelerator pedal briefly.

- The system works with the various sensors and cameras in the vehicle. Vehicles can only be detected once they are within the area and range covered by the sensors ⇒ *page 128, fig. 101*.
- When driving around tight curves, a vehicle traveling ahead that was previously detected may no longer be detected, and the system may accelerate unexpectedly.
- The system does not respond to a stationary vehicle in the same lane if it expects that you can easily drive around the stationary vehicle by turning the steering wheel.
- The system cannot respond to stationary obstacles, such as vehicles at the end of a traffic jam, especially when traveling at high speeds.
- The system has a limited ability to detect vehicles that are traveling a short distance ahead, off to the side of your vehicle, or moving into your lane.
- Objects that are difficult to detect, such as motorcycles traveling ahead, vehicles with high ground clearance, or vehicles with an overhanging load, may be detected late or not detected at all.
- The system does not respond to people, animals, or objects that are crossing or approaching from the opposite direction.

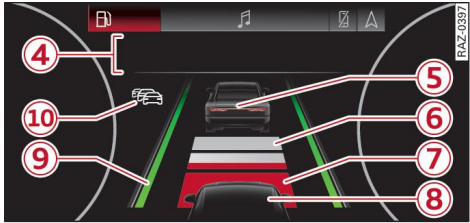


Fig. 111 Instrument cluster: driver assistance display

The driving situation and the settings are displayed in the instrument cluster ⇒ *fig. 110*. In the **Driver assistance** ⇒ *fig. 111* display, you can find more detailed information about the system. The displays depend on the country and equipment.

Display in the speedometer

- ① Marking for the set speed
- ② Current vehicle speed
- ③ Available speed range for the adaptive cruise control (example)

Image in the Driver assistance display

The image in the **Driver assistance** display only appears if it was opened in the trip computer ⇒ *page 20*.

- ④ Messages and settings
- ⑤ Detected vehicle traveling ahead
- ⑥ Set target distance
- ⑦ If you fall below the set distance, the distance bars turn red from the bottom upward.
- ⑧ Your vehicle
- ⑨ Availability of Audi active lane assist
- ⑩ Availability of traffic jam assist

Indicator lights

 – The speed/distance control is active. No vehicles traveling ahead were detected. The stored speed is maintained.

 – The speed/distance control is active. A vehicle traveling ahead was detected. The system controls the speed and distance from the vehicle traveling ahead, and accelerates and brakes automatically.

 – The speed/distance control is active but the vehicle is not **ready to drive**. A vehicle traveling

WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.

Display overview

Applies to: vehicles with Audi adaptive cruise control

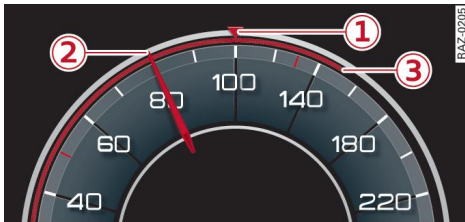


Fig. 110 Instrument cluster: display in speedometer

ahead was detected. Your vehicle is stationary and will not start driving automatically.

 – The speed/distance control is active but the vehicle is not **ready to drive**. No vehicles traveling ahead were detected. Your vehicle is stationary and will not start driving automatically.

 – Take over. The braking power is not sufficient ⇒ *page 146, Brake intervention request* or the safe start monitor is providing a warning ⇒ *page 150*.



WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.

Operating Audi adaptive cruise control

Applies to: vehicles with Audi adaptive cruise control

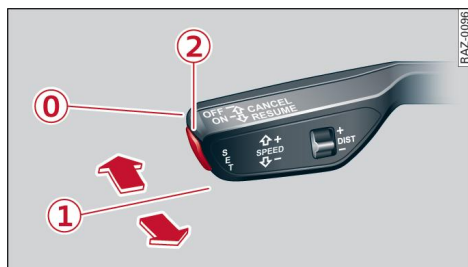


Fig. 112 Lever: operating adaptive cruise control



Fig. 113 Lever: changing the speed

Turning on

- ▶ To turn on the adaptive cruise control, pull the lever up to position ① until it engages.

Storing the speed and activating regulation

If you have turned on the system, you can set the current speed as the “regulated speed” and activate regulation:

- ▶ Press the **SET** button ②. The set speed is indicated with a marking in the speedometer ① ⇒ *page 144, fig. 110* and shown in the instrument cluster ⇒ .
- ▶ To store the speed while the vehicle is stationary, also hold the brake pedal down.

You can set any speed between 15 mph (20 km/h)¹⁾ and the maximum possible speed range ③²⁾ ⇒ *page 144, fig. 110*.

Pausing cruise control

The control can be stopped at any time:

- ▶ While driving or when the vehicle is stationary: Press the lever away from you in the direction of the arrow, or
- ▶ While driving: Press the brake pedal.

The  indicator light turns off.

Resuming regulation

The previously set speed can be resumed at any time after a pause.

- ▶ To resume cruise control while driving, pull the lever toward you in the direction of the arrow.
- ▶ To resume cruise control when stationary, pull the lever toward you in the direction of the arrow while pressing the brake pedal.

Changing the speed

- ▶ To increase or decrease the set speed in smaller increments, briefly tap the lever toward  or  to the first level.
- ▶ To increase or decrease the set speed in larger increments, briefly tap the lever toward  or  to the second level.
- ▶ To increase or decrease the set speed continuously, hold the lever toward  or  until the marking in the speedometer ① ⇒ *page 144, fig. 110* has reached the desired speed.

¹⁾ Analog instrument cluster: 20 mph (30 km/h)

²⁾ Depends on the country and engine

Applies to: vehicles with predictive control: Predictive control can automatically adjust the set speed based on traffic and road conditions ⇒ *page 147*.

Preselecting a speed

You can also preselect the speed when adaptive cruise control is not active by moving the lever in the desired direction (+/-). Activate the previously selected speed by pulling the lever toward you in the direction of the arrow.

Turning off

If you do not want to use the adaptive cruise control for a long period of time, you can turn it off.

- Push the lever away from you into position ① until it clicks into place.

The indicator light and the set speed will turn off.

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- The activated adaptive cruise control is only an assist system, and the driver is still responsible for controlling the vehicle. The driver is especially responsible for braking, steering, starting to drive, and controlling the speed and the distance from other vehicles.
- Turn on the adaptive cruise control only if the surrounding conditions permit it. Always adapt your driving style to the current visual, weather, road, and traffic conditions.
- Turn off adaptive cruise control temporarily when driving in turning lanes, on expressway exits, or in construction zones. This prevents the vehicle from accelerating to the stored speed when in these situations.
- If you press the **SET** button ② when driving at speeds below 15 mph (20 km/h)¹⁾, the minimum possible speed that the system can maintain will be set. If no vehicle is detected ahead of you, the vehicle will accelerate up to that speed.

Tips

- Always keep your hands on the steering wheel so you can be ready to steer at any time. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- If you turn off the ignition or the adaptive cruise control system, the set speed is erased for safety reasons.
- When adaptive cruise control is turned on, the ESC and ASR automatically turn on.
- The system cannot be turned off or it may be interrupted if the road exceeds the maximum possible grade for safe operation.

Driver intervention requests

Applies to: vehicles with Audi adaptive cruise control

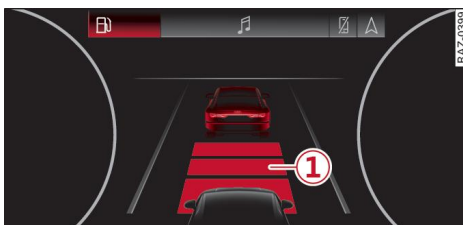


Fig. 114 Instrument cluster: brake intervention request

Brake intervention request

If the  indicator light turns on and the message **Distance!** appears, press the brake pedal to apply the brakes ⇒ .

The braking effect by the adaptive cruise control is not strong enough to maintain a sufficient distance to the vehicle traveling ahead in this situation.

The display ① also appears if you have opened the **Driver assistance** display in the trip computer ⇒ *page 20*.

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.

¹⁾ Analog instrument cluster: 20 mph (30 km/h)

- The adaptive cruise control is only an assist system, and the driver is still responsible for controlling the vehicle. The driver is especially responsible for braking, steering, and maintaining the distance to other vehicles.

Tips

- Always keep your hands on the steering wheel so you can be ready to steer at any time. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- The intervention requests may be accompanied by additional audio or visual signals, depending on the situation.

Predictive control

Applies to: vehicles with Audi adaptive cruise control and predictive control

General information

With predictive control, efficiency assist adapts the set speed in adaptive cruise control  ⇒ *page 144, fig. 110* based on detected speed limits and the upcoming route. Once the system no longer detects any relevant conditions ahead, adaptive cruise control will accelerate back up to the last speed that you set. After turning on the ignition, the availability of predictive control is indicated by a message when the adaptive cruise control is first activated.

Incident symbols indicate the situation to which predictive control is reacting ⇒ *page 142, Situation symbols*.

Requirements

- At least one predictive control is turned on in the **Driver assistance** menu under **Audi adaptive cruise control** ⇒ *page 130*.
- Adaptive cruise control is actively regulating ⇒ *page 145*.
- The system can only respond to speed limits that are 15 mph (20 km/h)¹⁾ or higher

- The map content of the navigation system* must be updated regularly in order for the system to work without restrictions ⇒ *page 205*.

Overriding control

You can override the predictive control based on the route ahead at any time by pressing the accelerator pedal. If the system changes the vehicle speed to adapt to speed limits, you can change the speed using the lever ⇒ *page 145, fig. 113*.

Setting predictive control

You can turn the predictive control on or off and adjust its settings in the **Driver assistance** menu under **Audi adaptive cruise control** ⇒ *page 130*. The settings depend on the vehicle equipment.

Set speed limit – adaptation to speed limits can be turned **On** or **Off**. Regulation **With tolerance** can also be selected, if desired. In this scenario, you may fall below or exceed the set speed in favor of increased efficiency.

Adjustment to curves along route – Adjustment based on the curves along the route can be adjusted. The setting influences vehicle handling with predictive control, for example the speed for driving through curves.

Messages

If  and a message with **Predictive control** is displayed when there is a malfunction, the efficiency assist functions are unavailable or limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors ⇒ *page 129* and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. ►

¹⁾ Analog instrument cluster: 20 mph (30 km/h)

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- Pay attention to traffic and the area around your vehicle when predictive control is turned on. The driver is always responsible for assessing the traffic situation.
- The system does not consider “right of way” rules and does not respond to traffic lights, so lack of driver attention in these situations can increase the risk of an accident.
- The speed when driving through curves may be different from what you as a driver would do or may not be suitable for the weather and road conditions. If necessary, apply the brakes and reduce the selected speed to be maintained in the **Adjustment to curves along route** setting to reduce the risk of an accident.

- There is no adaptation to speed limits when driving through highway interchanges and when driving on or off the expressway.
- The system can fail to provide control or the control may be faulty if the values from the camera-based traffic sign recognition* are incorrect or the navigation system* map data is outdated.
- When route guidance is turned on, the system adapts to the route provided by the navigation system. Driving without route guidance or leaving a route can result in faulty control.

Setting the distance

Applies to: vehicles with Audi adaptive cruise control



Fig. 115 Lever: setting the distance

When approaching a vehicle traveling ahead, the adaptive cruise control system brakes to match that vehicle's speed and then adjusts to the set distance. If the vehicle traveling ahead accelerates, then the adaptive cruise control will accelerate up to the speed that you have set.

- ▶ Tap the rocker switch to display the distance that is currently set.
- ▶ To increase or decrease the distance in increments, tap the switch again toward  or .

The newly-set distance will be shown briefly, for example with the  indicator light.

If you adjust the speed, you must also change the time gap to the vehicle traveling ahead. The higher the speed, the greater the distance that is needed. The following distances can be set: ▶

Tips

- Predictive control can exceed or drop below the maximum permitted speed. The driver is always responsible for adhering to the permitted speed limits.
- The traffic signs on the road always take priority over the display. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- If a speed limit is detected, the marking  ⇒ *page 144* of the set speed limit will be adjusted even if Audi adaptive cruise control is not actively regulating.
- Control by the system depends on which adaptive cruise control driving program is set or on the selected Audi drive select* mode.
- After turning on the ignition and first driving onto a freeway or similar road without a speed limit, the system will regulate the speed to 80 mph (130 km/h)¹⁾. Then the system adjusts to the last speed set by the driver.

¹⁾ In certain countries.

Symbol	Time distance	Distance at 62 mph (100 km/h)
	Approximately 1 second	92 feet (28 m)
	Approximately 1.3 seconds	118 feet (36 m)
	Approximately 1.8 seconds (the setting corresponds to a distance that is "half of the vehicle speed")	164 feet (50 m)
	Approximately 2.4 seconds	219 feet (67 m)
	Approximately 3.6 seconds	328 feet (100 m)



WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras → [page 127](#) to → [page 130](#).



Tips

- When setting the distance, the driver is responsible for adhering to any applicable legal regulations.
- In the **Driver assistance** display, a graphic display is shown instead of the indicator lights ⑥ → [page 144](#), [fig. 111](#). The display matches the functions of the indicator lights.
- Depending on the selected driving program and distance, driving behavior when accelerating may vary from moderate to sporty → [page 151](#), *Adjusting adaptive cruise control*.
- The distances provided are specified values. Depending on the driving situation and the driving style of the vehicle traveling ahead, the actual distance may be more or less than these target distances.

Additional functions

Applies to: vehicles with Audi adaptive cruise control

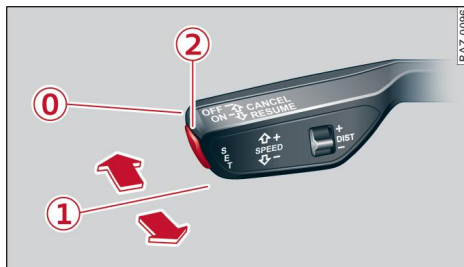


Fig. 116 Lever: operating the Audi adaptive cruise control

Requirement: all additional functions require adaptive cruise control to be active.

Overriding control

You can override control by the system completely, for example if you would like to pass another vehicle or if you would like to accelerate faster.

- To accelerate manually, pull the lever toward you in the direction of the arrow and hold it there, or press the accelerator pedal.
- To resume the usual cruise control, release the lever or remove your foot from the accelerator pedal.

When you are in the **Driver assistance** display, the message **Overridden** will appear.

Decreasing the distance

You can temporarily decrease the distance even more, for example if you would like to merge into another lane because of lane closures. In this situation, the adaptive cruise control will accelerate above the set speed if necessary.

- To further reduce the distance temporarily to the vehicle traveling ahead, pull the lever toward you in the direction of the arrow and hold it in that position.
- To resume the system control, release the lever.

The adaptive cruise control reduces the distance and, if necessary, accelerates the vehicle above the set speed. When you are in the **Driver assistance** display, the message **Overridden** will appear.

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- Resting your foot on the accelerator pedal could override the cruise control. Braking interventions and corrective actions by the system may not occur.
- The functions only provide assistance. The driver is still responsible for controlling the vehicle when using these functions. The driver is especially responsible for changing lanes, applying the brakes, controlling the speed, and maintaining the distance to other vehicles.

- ▶ To extend  **ready to drive** mode for several seconds or to reactivate it, pull the lever briefly toward you in the direction of the arrow
⇒ *page 149, fig. 116*.
- ▶ To resume manual control of the vehicle, tap the accelerator pedal.

Safe start monitor

Applies to: vehicles with safe start monitor

The vehicle can still start to drive even if certain obstacles are detected when starting to drive
⇒ . If the surrounding area detection detects an obstacle, you will be alerted to the danger by the  indicator light.

If you are in the **Driver assistance** display, the display  ⇒ *fig. 117* and the message **Warning!** will also appear. An audio signal will sound as well. Your vehicle will drive more slowly when starting. This may also occur in some situations when there is no apparent obstacle.

- ▶ Press the brake pedal to slow your vehicle if necessary.

WARNING


- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- If the message  **ready to drive**²⁾ appears, your vehicle will start driving even if there is an obstacle between your vehicle and the vehicle ahead. To reduce the risk of an accident, always make sure there are no obstacles between your vehicle and the vehicle traveling ahead.

Tips

- For safety reasons, the adaptive cruise control only controls actively if
- The driver's safety belt is fastened.
 - All doors and the hood are closed
 - The vehicle has not been stationary for a long period of time.

Driving in stop-and-go traffic

Applies to: vehicles with Audi adaptive cruise control

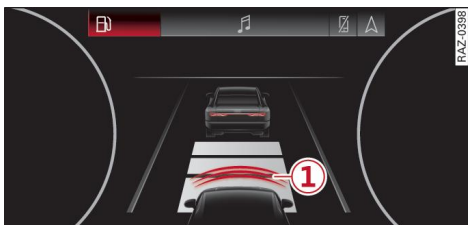

Applies to: vehicles with safe start monitor
Fig. 117 Instrument cluster: safe start monitor

Stopping with adaptive cruise control

The adaptive cruise control system also assists you in stop-and-go traffic¹⁾. Within the limitations of the system, your vehicle may brake and remain at a stop if a vehicle traveling ahead stops.

Starting to drive with adaptive cruise control

As long as the message  **ready to drive** and  is displayed, your vehicle will begin driving when the vehicle ahead starts to move ⇒ .

If your vehicle is stopped for too long, it will not begin driving again automatically for safety reasons and the message will turn off.

¹⁾ Depending on the engine

²⁾ This is not available in some countries.

Adjusting adaptive cruise control

Applies to: vehicles with Audi adaptive cruise control

You can adjust the adaptive cruise control to your preferences in the **Driver assistance** menu ⇒ *page 130*. The settings depend on the vehicle equipment.

Possible settings:

Store last distance - The last distance that was set will be stored after the ignition is turned off. If the distance is not stored, distance  (time distance of approximately 1.8 seconds) is automatically preset every time the ignition is turned on.

Applies to: vehicles without Audi drive select

Driving program - Depending on the selected driving program and distance, the vehicle handling will be adjusted from **Sport** to **Comfort**.

Applies to: vehicles with Audi drive select

Vehicle handling will be adjusted based on the set distance and the selected Audi drive select mode ⇒ *page 112*.

Tips

Certain settings are automatically stored and assigned to the remote control key being used.

Messages

Applies to: vehicles with Audi adaptive cruise control

If ,  or  is displayed when there is a malfunction, the adaptive cruise control or traffic jam assist functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors ⇒ *page 129* and try to turn on the systems again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

The following messages may appear, depending on the vehicle equipment:

ACC: manual control!

This message appears if the vehicle rolls back when starting on a slight incline, even though the systems are active. Press the brake pedal to prevent the vehicle from rolling or starting to move.

Traffic jam assist

Description

Applies to: vehicles with traffic jam assist

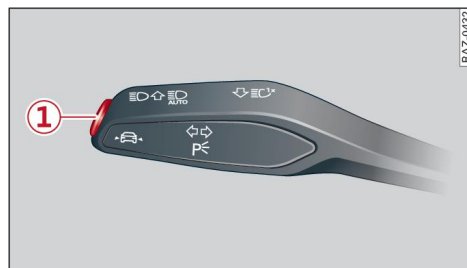


Fig. 118 Turn signal lever: button for traffic jam assist and Audi active lane assist

Traffic jam assist offers support when driving in traffic jams or in heavy traffic.

In a speed range under 40 mph (65 km/h), the system can help to keep the vehicle within a lane calculated by the system. Within the limitations of the system, the system controls the steering automatically when adaptive cruise control is turned on. Since traffic jam assist is only an assist system, the driver must always keep their hands on the steering wheel and be ready to steer. The control can be overridden at any time by actively steering.

The system is designed for driving on expressways and highways.

Requirements for using traffic jam assist:

- The traffic jam assist is preselected in the **Driver assistance** menu ⇒ *page 130*.
- Adaptive cruise control must be turned on and active ⇒ *page 145*.

If you open the **Driver assistance** display in the trip computer ⇒ *page 20*, the  indicator light ►

and the message **Traffic jam assist available** will turn on when a traffic jam is detected.

Activating or deactivating traffic jam assist

- ▶ To activate or deactivate traffic jam assist, press the  button on the turn signal lever.

Always turn off traffic jam assist in the following situations:

- When increased attention is needed.
- In construction zones
- In city driving
- On stretches of road with curves
- In unclear traffic situations such as at intersections or toll stations
- The turn signal was activated.

Indicator lights

 Traffic jam assist is available.

 and  - Traffic jam assist is turned on. Vehicles traveling ahead were detected. Your vehicle adapts while driving.

 - Traffic jam assist turns off if you do not take over steering after multiple driver intervention requests. The system brakes the vehicle until it is stationary.

Steering intervention request

If no steering activity is detected or the steering power from the system is not sufficient, the driver steering intervention request will alert the driver using audio and visual signals, such as  or . Actively take over steering immediately and keep your hands on the steering wheel so that you will be ready to steer at any time.

If you do not take over steering, adaptive cruise control (with traffic jam assist) will be turned off. The system brakes the vehicle until it is stationary.*

cially responsible for braking, steering, starting to drive, and controlling the speed and the distance from other vehicles.

- Turn on the traffic jam assist only if the surrounding conditions permit it. Always adapt your driving style to the current visual, weather, road, and traffic conditions.
- Turn off traffic jam assist temporarily when driving in turning lanes or highway exits. This prevents the vehicle from accelerating to the stored speed when in these situations.

Tips

- Always keep your hands on the steering wheel. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- Pay attention to applicable local regulations relating to driving tasks, leaving space for emergency vehicles, etc. The driver is always responsible for following the laws that are applicable in the location where the vehicle is being operated.
- If traffic jam assist was deactivated through the MMI, you can continue operating the Audi active lane assist using the  *fig. 118* button  *page 154*. The traffic jam assist functions are no longer available.
- You are not necessarily guided to the center of your lane.

Messages

Applies to: vehicles with traffic jam assist

If , , or  is displayed when there is a malfunction, the traffic jam assist functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors  *page 129* and try to turn on the systems again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service

WARNING


- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras  *page 127* to  *page 130*.
- The activated traffic jam assist is only an assist system, and the driver is still responsible for vehicle operation. The driver is espe-

Facility immediately to have the malfunction corrected.

Distance warning


Description

Applies to: vehicles with distance warning

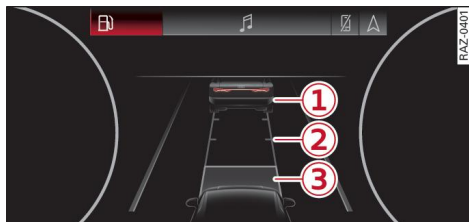

Applies to: vehicles with adaptive cruise control:

Fig. 119 Instrument cluster: display of the current distance

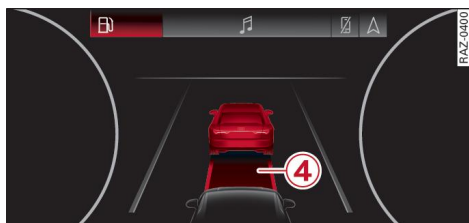

Applies to: vehicles with Audi adaptive cruise control

Fig. 120 Instrument cluster: distance warning

General information

At speeds above approximately 40 mph (65 km/h), this function measures the distance to the vehicle traveling ahead as time. If the distance falls below the warning threshold and remains there, the system will warn you of the hazard with the indicator light.

Image in the Driver assistance display

Applies to: vehicles with Audi adaptive cruise control

The display only appears if the **Driver assistance** display is selected in the trip computer $\Rightarrow$ [page 20](#) and the adaptive cruise control is not actively controlling the vehicle.

- ① Detected vehicle traveling ahead
- ② Use the markings to help you estimate the distance to an obstacle. Each marking represents approximately one second.

- ③ Set warning threshold. Depending on the settings, the display will be colored in from the bottom to the top.
- ④ The actual distance is smaller than the set distance and you will be informed about the danger.

Adjusting the distance warning

You can turn the distance warning on or off in the **Driver assistance** menu, or adjust it to your preferences $\Rightarrow$ [page 130](#). The settings depend on the vehicle equipment.

Possible settings:

– Warning threshold

Messages

If or is displayed when there is a malfunction, the distance warning functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors $\Rightarrow$ [page 129](#) and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras $\Rightarrow$ [page 127](#) to $\Rightarrow$ [page 130](#).



Tips

- The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- You may fall below the warning threshold briefly when passing or when quickly approaching a vehicle traveling ahead. There is no warning in this scenario. A warning is given only if you fall below the warning threshold for an extended period of time.

Audi active lane assist/ lane departure warning

General information

Applies to: vehicles with Audi active lane assist

The Audi active lane assist/lane departure warning (called only Audi active lane assist in the vehicle displays and in the information that follows in this Owner's Manual) can detect lane marker lines within the limitations of the system. If you are approaching a detected lane marker and it

appears likely that you will leave the lane, the system can warn you with corrective steering and a steering wheel vibration, if necessary.

The system functions at speeds above approximately 40 mph (65 km/h).

 **WARNING**

Observe the safety information and note the limitations of the assist systems, sensors, and cameras ➔ *page 127* to ➔ *page 130*.

Description

Applies to: vehicles with Audi active lane assist

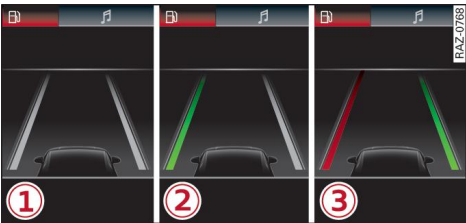


Fig. 121 Instrument cluster: driver assistance display

Overview of displays and warnings

The availability, readiness to provide warnings, and the warnings are indicated with indicator lights. Audi active lane assist is ready to provide warnings if an object is detected on at least one side of the lane where your vehicle is traveling.

Driver assistance display	Indicator lights		Meaning
	Audi virtual cockpit	Instrument cluster (analog)	
① White lines	✓ ✗	✓ ✗	Audi active lane assist is activated, but is not ready to provide warnings.
② Green line(s)	✓ ✗	✓ ✗	Audi active lane assist is activated and ready to provide warnings.
③ Red line	✓ ✗	✓ ✗ Blinking	Audi active lane assist will warn you with corrective steering before exiting the lane.

If the system must intervene for a long period of time, a message will request you to drive in the center of the lane. The steering wheel can also vibrate to warn you if lane boundaries are detected during a passing maneuver.

If the system is turned on but is not ready to provide warnings, one of the following systems limitations or situations could be the cause:

- The necessary lane marker lines have not been detected (for example, in a construction zone or because the lines are obstructed by snow, dirt, water, or lighting)
- The lane is too narrow or too wide.

- The curve is too narrow.
- Visibility is obstructed by a rise or dip.
- The driver's hands are not on the steering wheel.
- The turn signal was activated.

Steering intervention request

If Audi active lane assist intervenes multiple times when no steering activity is detected, the steering intervention request will provide a warning using audio and visual signals, such as . Actively take over steering immediately and keep your hands on the steering wheel so that you will be ready to steer at any time. The system may no ▶

longer be ready to provide warnings after a short time, and it will only become active again later.

If you do not take over steering, Audi active lane assist will be turned off.

Behavior when a turn signal is active

Applies to: vehicles without side assist: The system will not warn you if you activate a turn signal before crossing the lane marker line. In this case, it assumes that you are changing lanes intentionally.

Applies to: vehicles with side assist: If the turn signal is activated, Audi active lane assist is ready, and a lane change has been classified as critical by lane assist due to vehicles traveling beside you or due to approaching vehicles, then a noticeable corrective steering movement will occur briefly before exiting the lane. This will attempt to keep your vehicle in the lane.

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ [page 127](#) to ⇒ [page 130](#).
- The system uses corrective steering to warn that the vehicle is leaving the lane. The driver is always responsible for keeping the vehicle in the lane.
- Corrective steering may not occur at all in certain situations, such as during heavy braking. Always be ready to intervene.

Tips

- Always keep your hands on the steering wheel so you can be ready to steer at any time. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- The system does not provide any corrective steering or steering wheel vibrations if it detects that you are passing another vehicle.
- The image in the **Driver assistance** display only appears if it was opened in the trip computer ⇒ [page 20](#).

Turning on or off

Applies to: vehicles with Audi active lane assist

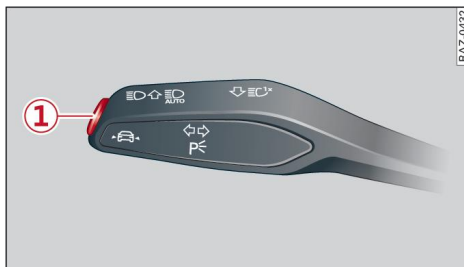


Fig. 122 Turn signal lever: button for Audi active lane assist

- Press and hold the button  on the turn signal lever until the applicable indicator light in the instrument cluster turns off or on.



WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ [page 127](#) to ⇒ [page 130](#).

Adjusting Audi active lane assist

Applies to: vehicles with Audi active lane assist

You can adjust the Audi active lane assist/Lane departure warning to your preferences in the **Driver assistance** menu ⇒ [page 130](#). The settings depend on the vehicle equipment.

Possible settings:

- **Steering correction** – In the **Late** setting, the steering correction will only occur shortly before a wheel crosses a detected lane marker line. In the **Early** setting, steering correction occurs continuously in order to help keep the vehicle in the center of the lane. If the steering correction cannot be set, the steering correction will function in the **Late** setting. You may also toggle between the settings by briefly pressing the  ⇒ [page 155](#), [fig. 122](#) button.
- **Vibration warning** – You can select if you would also like to be warned using a vibration in the steering wheel.

Tips

Certain settings are automatically stored and assigned to the remote control key being used.

Messages

Applies to: vehicles with Audi active lane assist

If  or  is displayed when there is a malfunction, the active lane assist functions may be unavailable or limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or the camera may be covered. Clean the area in front of the camera ⇒ *page 129* and try to turn on the systems again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Audi pre sense

Function overview

Applies to: vehicles with Audi pre sense

Within the limitations of the system, the Audi pre sense functions can initiate measures in certain driving situations to protect the vehicle occupants and other road users. Depending on the vehicle equipment, various Audi pre sense systems may be installed:

- **Audi pre sense basic** can respond during emergency and dangerous braking maneuvers and unstable driving situations (such as oversteering or understeering).
- **Audi pre sense city** and **Audi pre sense front** can detect an impending frontal impact and respond with warnings, braking interventions, and preemptive safety measures for the vehicle occupants.
- **Audi pre sense rear** monitors the rear traffic behind your vehicle and can respond to an impending rear impact.

- The **swerve assist** can help you to steer the vehicle around an obstacle during an evasive maneuver that is detected as critical.
- The **turn assist** can detect vehicles in the opposite lane as critical during a turning maneuver and respond with braking maneuvers.

Audi pre sense safety measures

Applies to: vehicles with Audi pre sense

Depending on the vehicle speed and the vehicle equipment, the following functions may be initiated in certain situations:

- Visual and audio warnings
- Reversible tensioning of safety belts
- Closing the windows and panoramic glass roof
- Adjusting the seats
- Other preemptive safety measures by individual systems



WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.



Tips

- Depending on the risk situation that is detected and the selected Audi drive select* mode, not all preemptive safety measures may be initiated under certain circumstances. Certain functions may be modified or skipped if necessary.
- Audi pre sense may also be limited or unavailable under certain circumstances, for example if:
 - If there are persons in the vehicle who are not using a safety belt
 - After turning on the ignition, as long as the  indicator light is on.
 - When driving in reverse
 - The front passenger's airbag is turned off
 - If there is an airbag control module malfunction
- System functions may not be available if the ESC is limited or turned off, or if there is a malfunction.

Audi pre sense basic

Applies to: vehicles with Audi pre sense basic

Audi pre sense basic is automatically active at speeds of approximately 20 mph (30 km/h) and higher. Audi pre sense basic can trigger preemptive safety measures during emergency braking and dangerous braking maneuvers as well as in unstable driving situations, such as oversteering or understeering ⇒ *page 156, Audi pre sense safety measures.*

The message **Audi pre sense**  will warn you about the danger.



WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127 to ⇒ page 130.*

Audi pre sense city

Applies to: vehicles with Audi pre sense city

Within the limitations of the system, Audi pre sense city can warn about an impending front end collision and brake the vehicle strongly, if necessary. The system uses the camera behind the windshield and is available at speeds above approximately 6 mph (10 km/h).

Driving situations

The situations to which the system responds depends on the vehicle speed.

Automatic braking interventions are available at vehicle speeds up to approximately 52 mph (85 km/h).

Up to speeds of approximately 52 mph (85 km/h), the system may respond to the following situations:

- Pedestrians are moving inside your lane

Up to speeds of approximately 155 mph (250 km/h), the system may respond to the following situations:

- A vehicle traveling ahead clearly applies the brakes
- When approaching a vehicle ahead that is clearly traveling more slowly
- When approaching a stationary vehicle

Prewarning

To warn about detected dangers, **Audi pre sense**  will appear in the instrument cluster and an audio signal will sound.

A brief application of the brakes

If a collision is imminent, there may be an acute warning using a brief application of the brakes. You will also be warned about the danger by an indicator in the instrument cluster display. You may only be able to avoid a collision by swerving or braking strongly.

Automatic braking force increase

If there is an impending collision and you are not applying the brakes enough, the braking force may be increased, depending on the situation.

Automatic braking

If you do not react to the acute warning, the system may apply the brakes with strong braking force within the limitations of the system in order to reduce the speed of impact in the event of a collision.

If the brakes were applied until the vehicle stopped,  **Please take over!** will appear in the instrument cluster and you must take over control of the vehicle.



WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127 to ⇒ page 130.*
- Audi pre sense cannot overcome natural physical laws. It is a system designed to assist and it cannot prevent a collision in every situation. The driver must always intervene. The driver is always responsible for braking in a timely manner. Do not let the increased safety provided cause you to take risks. This could increase your risk of a collision.
- Audi pre sense city does not respond to certain objects, such as animals, crossing or oncoming vehicles, bars, railings, or railcars.
- Audi pre sense may be limited or unavailable in curves or when it is dark.

- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Store objects securely while driving.
- Make sure that each person in the vehicle has their safety belt fastened correctly and follows the instructions for proper seating ⇒ *page 65*.

Tips

Certain system functions may not be available if the ESC is limited or turned off ⇒ *page 122* or if there is a malfunction.

Audi pre sense front

Applies to: vehicles with Audi pre sense front

Audi pre sense front provides the same scope of functions as Audi pre sense city, with a few exceptions ⇒ *page 157*. The system has an extensive field of view due to additional sensors that are installed. Because of this, vehicles that are braking or traveling significantly more slowly can be detected earlier and more clearly, depending on the limitations of the system.

The following features apply to Audi pre sense front:

- Automatic braking interventions are available at vehicle speeds up to approximately 155 mph (250 km/h)
- The system does not detect pedestrians

WARNING

- Observe the safety precautions ⇒  *in Audi pre sense city on page 157*.
- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- Audi pre sense front does not respond to certain objects, such as pedestrians, animals, crossing or oncoming vehicles, bars, railings, or railcars.

Audi pre sense rear

Applies to: vehicles with Audi pre sense rear

Within the limitations of the system, Audi pre sense rear uses data from radar sensors at the rear corners of the vehicle and calculates the probability of a rear-end collision with the vehicle behind you.

Audi pre sense preemptive safety measures can be initiated if the risk of a collision with the vehicle behind you is detected.

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- Audi pre sense rear does not respond to pedestrians, animals, crossing objects, and objects not detected as vehicles.

Tips

Audi pre sense rear functions may also turn off if there is a malfunction in the side assist system.

Swerve assist

Applies to: vehicles with swerve assist

The swerve assist can help you to steer the vehicle around an obstacle detected in a critical area. If you avoid an obstacle after the acute warning, then the swerve assist assists you by applying slight steering adjustment to correct your steering wheel angle as long as you are actively steering. Swerve assist is available at speeds between approximately 20 mph (30 km/h) and 90 mph (150 km/h).

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- Swerve assist does not respond to pedestrians, animals, crossing objects, and objects not detected as vehicles.

Tips

- System functions may not be available if the ESC is limited or turned off, or if there is a malfunction.
- An indicator in the instrument cluster will inform you when there is an intervention.

Turn assist

Applies to: vehicles with turn assist

When turning left¹⁾, turn assist can help to reduce the risk of a collision with an oncoming vehicle by using braking action to keep your vehicle in its lane. The function is only available when the turn signal is turned on and at speeds up to approximately 6 mph (10 km/h).

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- The turn assist does not respond to pedestrians, animals, crossing objects, and objects not detected as vehicles.

Tips

- System functions may not be available if the ESC is limited or turned off, or if there is a malfunction.
- An indicator in the instrument cluster will inform you when there is an intervention.

Adjusting Audi pre sense

Applies to: vehicles with Audi pre sense

You can turn Audi pre sense and the associated systems on or off and adjust its settings in the **Driver assistance** menu ⇒ *page 130*. The systems may only be turned on or off and adjusted while the vehicle is stationary.

If you turn off Audi pre sense, the  indicator light will turn on and a corresponding message will appear.

Possible settings:

Setting the prewarning

You can adjust the warning time for the prewarning to your preference (**Early/Medium/Late**) or turn off the prewarning.

Set the warning time for the early warning to **Early** at first. If you feel that the prewarnings appear too early, then set the warning time to **Medium**. The **Late** warning time should only be set in special circumstances.

Tips

- If Audi pre sense is turned off, it will turn on again automatically once the ignition is turned on again.
- Turn off Audi pre sense when you are not using public streets, when loading the vehicle onto a vehicle carrier, train, ship, or other type of transportation, or when towing the vehicle. This can help to prevent an undesired intervention from the Audi pre sense system.
- Certain settings are automatically stored and assigned to the remote control key being used.

Messages

Applies to: vehicles with Audi pre sense

If  is displayed when there is a malfunction, the Audi pre sense functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Bring the vehicle to a full stop, turn off the ignition, and clean the area in front of the sensors ⇒ *page 129*.

If the message still appears after turning on the ignition again, have an authorized repair facility correct the malfunction as soon as possible.

¹⁾ When making a right turn in countries with left-hand drive vehicles.

Side assist

Description

Applies to: vehicles with side assist

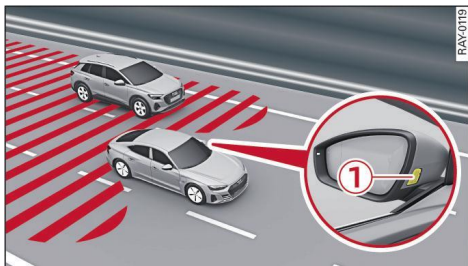


Fig. 123 Driving situations and displays in the exterior mirror

General information

Side assist monitors the blind spot as well as the traffic behind your vehicle and provides assistance when you are changing lanes. If the system detects an object approaching and classifies it as critical, the display ① in the exterior mirror on that side of the vehicle will turn on.

Driving situations

The side assist warning is active at speeds above approximately 9 mph (15 km/h) and can help in situations such as the following:

- Your vehicle is being passed. The faster another vehicle approaches from behind, the sooner the display in the exterior mirror will turn on.
- There are vehicles traveling in the same direction as you in a lane adjacent to yours. The display in the exterior mirror will turn on when the detected object is in the “blind spot”, at the latest.
- You are slowly passing another vehicle. If the difference in speed between the two vehicles is less than 9 mph (15 km/h), the display in the exterior mirror will turn on.

Information stage

As long as you do not activate a turn signal, the system will inform you about objects classified as critical by turning on the display in the respective exterior mirror ①.

The display remains dim in the information stage so that you are not distracted while looking forward.

Warning stage

Once you activate a turn signal, the system will inform you about objects classified as critical by turning on the display in the respective exterior mirror.

If other driver assistance systems (depending on vehicle equipment) detect that your vehicle is about to leave the lane, the display will blink even if the turn signal lever is not activated to warn you about objects that are classified as critical. You can also be warned with corrective steering ⇒ *page 154, Audi active lane assist/lane departure warning*.

System limitations

The system uses the data from the radar sensors at the rear corners of the vehicle ⇒ *page 129, fig. 104*. They are designed to detect the left and right adjacent lanes when the road lanes are the normal width. In some situations, the system may respond to vehicles in your own lane or lanes that are not directly adjacent to yours, or to objects on the side of the road. In this case, the display will turn on even though there is no vehicle in the critical area. These situations may include:

- Driving on the edge of your own lane
- Narrow lanes
- Curves
- High barriers on the side of the road
- Construction zones



WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127 to ⇒ page 130*.
- The display may not appear on time when vehicles are approaching or being passed very quickly.



Tips

- If the window glass in the driver's door or front passenger's door has been tinted, the

display in the exterior mirror may be incorrect.

- The coverage areas of the sensors ⇒ *fig. 123* are schematic representations and do not represent a true-to-scale image of the sensor ranges.
- The system complies with United States FCC regulations and ISED regulations ⇒ *page 310*.

Adjusting side assist

Applies to: vehicles with side assist

You can turn the side assist on or off in the **Driver assistance** menu, or adjust it to your preferences ⇒ *page 130*. The settings depend on the vehicle equipment.

Possible settings:

Brightness

Change the brightness only when side assist is turned on, so that the selected setting can be checked in the exterior mirror displays. Adjust the brightness to a level where the display in the information stage will not disrupt your view ahead. Because the display brightness automatically adapts to the ambient light, it may have already been adjusted to the highest or lowest setting during the automatic adaptation.

Tips

- If the system is turned on, the displays on the exterior mirrors will turn on briefly each time the ignition is turned on.
- If you turn side assist on or off, the exit warning will also turn on or off.
- Certain settings are automatically stored and assigned to the remote control key being used.

Messages

Applies to: vehicles with side assist

If  or  is displayed when there is a malfunction, the side assist and exit warning system functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The

weather conditions may be too poor or a sensor may be obstructed. Clean the sensor area at the rear corners of the vehicle ⇒ *page 129, fig. 104* and try to turn the systems on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Exit warning

Description

Applies to: vehicles with exit warning system

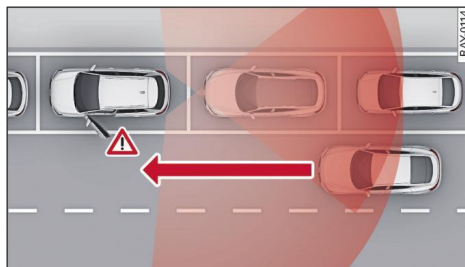


Fig. 124 Approaching traffic detected

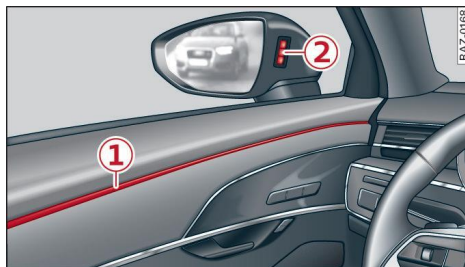


Fig. 125 Front door: exit warning

General information

Within the limitations of the system, the exit warning system can detect traffic approaching from behind such as vehicles, and provide assistance based on this information when you are exiting the vehicle ⇒ *fig. 124*. The system uses the data from the radar sensors at the rear corners of the vehicle.

Displays and warnings

If a door is opened while the vehicle is stationary, the warning strip (1) on that door and the display (2) on that side of the vehicle will blink if another ►

road user is detected in a critical situation. If another road user that is classified as critical is approaching while a door is already open, the displays on that door will turn on.

The same messages apply for the exit warning system and side assist ⇒ *page 161*.

– The system complies with United States FCC regulations and ISED regulations
⇒ *page 310*.



WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- Always pay attention to traffic and to the area around your vehicle. The exit warning system does not replace the attention of the vehicle occupants. The vehicle occupants are always responsible for opening the doors and exiting the vehicle.
- The exit warning system does not respond to people and cannot warn you about every type of approaching object, such as cyclists. Always monitor the traffic situation as well as the vehicle's surroundings with direct eye contact.
- The display may not appear in time when vehicles are approaching very quickly.
- The exit warning system does not respond to stationary objects or pedestrians.
- The exit warning system will not provide alerts if your vehicle is pulled too far into the parking space so that it is hidden by adjacent vehicles.



Tips

- The exit warning is turned on or off by the side assist warning ⇒ *page 161*.
- The exit warning system can be available for up to approximately three minutes after unlocking the vehicle and opening the door as well as after turning off the ignition. Then the displays flash briefly and the system turns off.
- The display brightness for the exit warning system cannot be adjusted.
- The coverage areas of the sensors ⇒ *fig. 124* are schematic representations and do not represent a true-to-scale image of the sensor ranges.

Parking and maneuvering

Introduction

Depending on the vehicle equipment, various parking aids will help you when parking and maneuvering.

Parking aid

The **parking aid plus** assists you while parking using audio and visual signals to warn you about objects detected in front of, behind, and next to* the vehicle ⇒ *page 163*.

The **rearview camera** shows the area behind the vehicle in the center display. The lines in the rearview camera image help you to park and maneuver ⇒ *page 165*.

The **peripheral cameras** are an addition to the rearview camera and help you to see various areas around the vehicle while parking and maneuvering ⇒ *page 165*.

The **rear cross-traffic assist** can warn you of approaching cross traffic when driving in reverse or exiting a parking space ⇒ *page 169*.

Assisted parking

Park assist helps you to locate suitable parking spaces and to park in them and exit them. Park assist controls the steering movements when parking in free parking spaces. The driver is still responsible for accelerating, braking, and shifting gears. You must always monitor the area around the vehicle and supervise the process of parking or exiting a parking space ⇒ *page 172*.

Possible settings

You can adjust parking aid functions in the **Parking aid** menu according to your preferences ⇒ *page 130*. Some settings are only available via  and under certain conditions.

- **Automatic activation** ⇒ *page 163*
- **Front and rear volume** ⇒ *page 164*
- **Entertainment fader** ⇒ *page 164*.
- **View** ⇒ *page 167*
- **Rear cross-traffic assist** ⇒ *page 169*



WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.



Tips

Audi recommends practicing parking in a traffic-free location or parking lot to become familiar with the systems. Practice parking in good lighting and weather conditions.

Parking aid plus

Activating and deactivating

Applies to: vehicles with parking aid plus

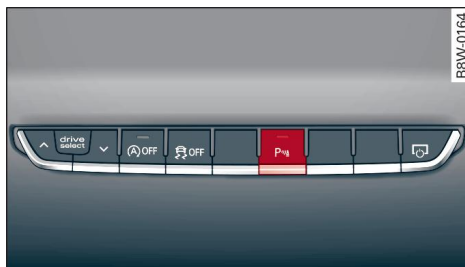


Fig. 126 Center console: parking aid button

General information

The parking aid assists when parking and maneuvering by providing warnings about obstacles. If the ultrasonic sensors on the vehicle ⇒ *page 128*, *fig. 101* detect an obstacle, the system will provide audio and visual warnings.

Activating and deactivating

Requirement: the vehicle speed must be under approximately 6 mph (10 km/h).

- Press the  button in the center console.

Depending on the country, the system may not be deactivated when the reverse gear is selected.

Automatic activation

- The system activates automatically when the ignition is on and the reverse gear is engaged, or

If **Automatic activation** is turned on ⇒ *page 130* in the **Parking aid** menu and if the vehicle approaches an obstacle when driving forward at speeds below approximately 6 mph (10 km/h), the parking aid will activate automatically. Audio signals will sound once the obstacle is within the sensor detection area.

Automatic deactivation

The distance indicator for the parking aid will deactivate automatically when driving forward faster than approximately 6 mph (10 km/h).



WARNING
Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.



Note
Keep enough distance from the curb to avoid damage to the rims.



Tips

- If the parking aid is deactivated, it can only be reactivated automatically when one of the following conditions is met:
 - The vehicle speed exceeds 6 mph (10 km/h)
 - The ignition is turned off and on again
 - The parking brake is set and then released
 - The “P” position is engaged and released again

Warnings

Applies to: vehicles with parking aid plus

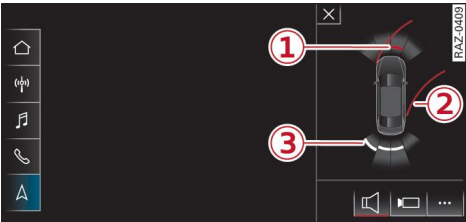


Fig. 127 Center display: distance display

If the sensors detect an obstacle, audio and visual signals will warn you.

Visual warnings

The visual warnings in the center display help you to detect the critical vehicle area and to estimate the distance to an obstacle.

Red segments ① show detected obstacles that are in your vehicle's path. The red lines ② mark the expected direction of travel based on the steering angle. A white segment ③ indicates a detected obstacle that is outside of the vehicle's path. The closer your vehicle comes to the obstacle, the closer the segments will move to the vehicle. The collision area has been reached when the next to last segment is displayed. Obstacles in the collision area, including those outside of the vehicle's path, are shown in red. Do not continue driving forward or in reverse.

Audio warnings

The closer your vehicle gets to a detected obstacle, the shorter the time between the audio signals. A continuous tone sounds when an obstacle is less than approximately 1 foot (0.30 m) away from the front or rear of the vehicle. A continuous tone sounds when an obstacle is less than approximately 0.7 feet (0.20 m) away from the sides* of the vehicle. Do not continue driving forward or in reverse ⇒ .

► To deactivate audio signals when parking or exiting a parking space, press  in the center display. Depending on the country, the audio warnings will be reactivated after changing the selector position or when activating the parking aid again.

Adjusting the volume

You can adjust the volume to your preferences in the **Parking aid** menu ⇒ *page 130*. The settings depend on the vehicle equipment.

Possible settings:

Front volume – Volume for the front and side* area.

Rear volume – Volume for the rear area.

Entertainment fader – The volume of the audio/video source is lowered when the parking aid is activated.

The new level is demonstrated briefly* when the volume is adjusted.

Error messages

If  appears, the sensor in the respective area or the speaker is faulty. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

If  or  is displayed when there is a malfunction, the parking aid functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors → *page 129* and try to turn on the systems again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras → *page 127* to → *page 130*.
- Sensors and cameras have spots in which the surrounding area cannot be detected. Objects, animals, and people may only be detected with limitations or may not be detected at all. Always monitor the traffic situation and the vehicle's surroundings directly and do not become distracted.



Note

- Keep enough distance from the curb to avoid damage to the rims.
- Applies to: vehicles with park assist: If you park in short parking spaces using park assist, a continuous tone will sound from the parking aid when the distance to an object is less than approximately 0.7 feet (0.20 m). Do not continue driving forward or in reverse.



Tips

- The segments in the side area* are detected and analyzed when passing. If you turn the ignition off and on again or open the door, or if the vehicle is stationary for a period of time, the surrounding area may have changed in the meantime. In this case, the area will appear black until the area has been detected and evaluated.
- If the distance to an obstacle remains constant, the volume of the distance warning gradually lowers after a few seconds until it is muted (this does not apply to the continuous tone). If the obstacle comes closer than it was before the sound was muted, the tone will sound again. If the obstacle becomes farther away than it was before the sound was muted, no tone will sound. Pay attention to the vehicle's surroundings when you start to drive.

Rearview camera and peripheral cameras

Introduction

Applies to: vehicles with rearview camera/peripheral cameras

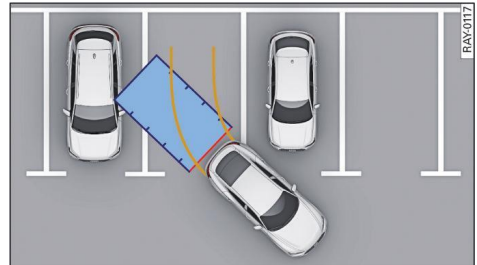


Fig. 128 Orientation line display when parking

Depending on the vehicle equipment, a rearview camera or multiple peripheral cameras may be available.

The **rearview camera** helps you to park or maneuver using orientation lines.

The **peripheral cameras** expand the vehicle overview to include various views around the vehicle that can be selected.



WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.

Activating and deactivating

Applies to: vehicles with rearview camera/peripheral cameras



Fig. 129 Center console: parking aid button

Activating and deactivating

- ▶ Press the  button in the center console, or
 - ▶ Press  on in the center display if the visual distance indicator ⇒ *page 164*, *fig. 127* is shown.
- The system can be activated at low speeds, such when maneuvering.

Automatic activation

The system activates automatically when the ignition is on and the reverse gear is engaged.

Automatic deactivation

The system will deactivate automatically once the vehicle exceeds a certain speed while driving forward.



WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.

Warnings

Applies to: vehicles with rearview camera/peripheral cameras

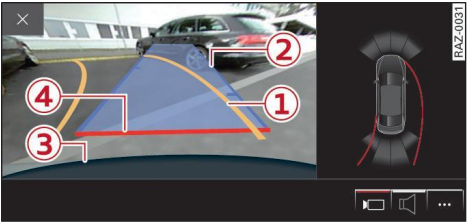


Fig. 130 Center display: aiming at a parking spot

When parking with the rearview camera or peripheral camera, the parking aid audio and visual warnings* ⇒ *page 164* will also assist you.

Visual orientation lines

- ① The orange orientation lines show the vehicle's direction of travel ⇒ . Turn the steering wheel until the orange orientation lines align with the parking space.
- ② You can use the horizontal blue markings to help you estimate the distance to an obstacle. Each marking represents approximately 3 feet (1 meter). The blue surface is a static display and represents an extension of the vehicle perimeter to the rear.
- ③ You can recognize the rear bumper in the lower display.
- ④ You should stop driving in reverse when the red orientation line touches the edge of an object, at the latest.

Symbols

Applies to: vehicles with peripheral cameras

If // is displayed and the display area represented by that symbol is not available, then the camera on the that side is not available. The power exterior mirrors may have been folded in or a door or the luggage compartment lid may have been opened.

If  is displayed, there is a system malfunction and the display area represented by that symbol is not available. The camera is not working in this area.

If one of the symbols continues to be displayed, drive immediately to an authorized Audi dealer or ▶

authorized Audi Service Facility to have the malfunction corrected.



WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- Sensors and cameras have spots in which the surrounding area cannot be detected. Objects, animals, and people may only be detected with limitations or may not be detected at all. Always monitor the traffic situation and the vehicle's surroundings directly and do not become distracted.



Note

- The orange orientation lines ① show the direction the rear of the vehicle will be travel-

ing, based on the steering wheel angle. The front of the vehicle swings out more than the rear of the vehicle. Maintain plenty of distance so that an exterior mirror or a corner of the vehicle does not collide with any obstacles.

- Keep enough distance from the curb to avoid damage to the rims.
- Only use the images provided by the camera on the rear of the vehicle when the luggage compartment lid is completely closed. Make sure any objects you may have mounted on the luggage compartment lid do not block the rearview camera.

Operating the peripheral cameras

Applies to: vehicles with peripheral cameras

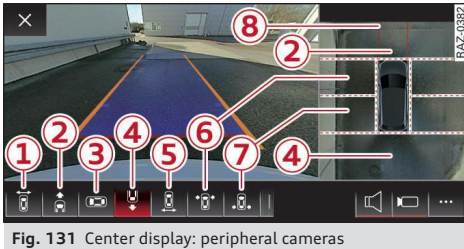


Fig. 131 Center display: peripheral cameras

On vehicles with peripheral cameras, you can select among different views.

Selecting the views

- To display the entire selection bar, tap the current view ① or swipe at the edge of the selection bar from left to right.

- To select a view, press ① - ⑦ or tap in an area to show the vehicle in the side view ¹⁾.

Selecting a view in the side area

The vehicle surroundings are shown in the side area of the display. You can adjust the view to your preferences in the **Parking aid** menu ⇒ *page 130*. You can switch between a visual display (**Graphic**) and the vehicle surroundings (**Camera**).

¹⁾ Requirement: The vehicle surroundings (**Camera**) is selected and visible in the **View** in the side area.

	Symbol/Description	Description
①	Front corner or Display selection bar	This view makes it easier to drive out of tight parking spaces or areas and intersections with poor visibility. It shows an almost 180° panoramic view in front of the vehicle.
②	Front	This view assists you in using the full area for maneuvering in front of the vehicle.
③	Surroundings	This view helps you to maneuver and position the vehicle more precisely. The area around the vehicle is shown using the camera images. The vehicle image is shown by the system ⇨ ⚠.
④	Rear	This view assists you in using the full area for maneuvering behind the vehicle. This is the rearview camera image.
⑤	Rear corner	This view can assist you when driving out of tight parking spaces or areas with poor visibility. It shows an almost 180° panoramic view behind the vehicle.
⑥	Front tires	This view helps you to see the distance between the front tires and the curb and the steering wheel angle when parking.
⑦	Rear tires	This view helps you to detect the distance between the rear wheels and the curb when parking.
⑧	Steering wheel angle	The red lines represent the estimated direction of travel based on the steering wheel angle ⇨ ⚙.

**WARNING**

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇨ *page 127* to ⇨ *page 130*.
- The **Surroundings** view is created from the individual camera images. The vehicle image is shown by the system. Objects and obstacles above the camera are not displayed.

– When first activated while a forward gear is engaged, the **Front corner** is displayed.

**Note**

Only use the images provided by the camera on the rear of the vehicle when the luggage compartment lid is completely closed. Make sure any objects you may have mounted on the luggage compartment lid do not block the rearview camera.

**Tips**

- Depending on the selected gear, it will automatically switch between the **Front** and **Rear** views. If you switch the view manually, the automatic front/rear camera change will be temporarily deactivated.

Rear cross-traffic assist

Description

Applies to: vehicles with rear cross-traffic assist

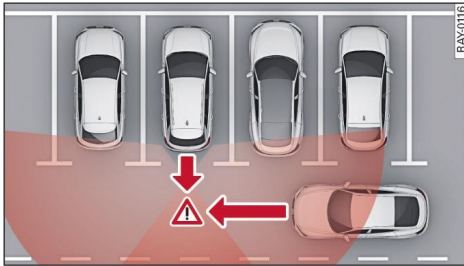


Fig. 132 Sensor detection range for rear cross-traffic assist

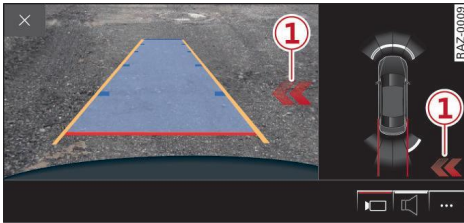


Fig. 133 Center display: rear cross-traffic assist display

General information

Rear cross-traffic assist monitors the area behind and next to the vehicle using radar sensors at the rear corners of the vehicle. The system can detect moving objects that are approaching, such as vehicles ⇒ *fig. 132*. A display in the MMI ① and various warnings provide assistance when exiting a parking space.

Requirements for using the rear cross-traffic assist:

- The parking aid is active ⇒ *page 163* or reverse gear is selected.
- The speed when driving in reverse must not be higher than approximately 9 mph (15 km/h).

Displays, warnings, and braking

- **Display:** the display ① appears only when the parking aid is active. In vehicles with peripheral cameras, the display only appears in the **Rear** and **Rear corner** camera views. Arrows show the direction from which the cross traffic is approaching.

- **Audio warnings:** an audio signal may sound as an additional warning when driving in reverse.
- **Automatic brake activation:** if you do not react to a warning, a brief braking by the system can warn you of a potential collision with an approaching object.

The audio warning signal and the automatic brake activation occur only when driving in reverse.

Turning the rear cross-traffic assist on or off

You can turn the rear cross-traffic assist on or off in the **Parking aid** menu ⇒ *page 130*.

Messages

If , , or  is displayed when there is a malfunction, the rear cross traffic assist functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area of the sensors at the rear corners of the vehicle ⇒ *page 129*, *fig. 104* and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

! WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- The rear cross-traffic assist will not provide alerts about people and cannot warn you about every type of approaching object, such as bicycles. Always monitor the traffic situation as well as the vehicle's surroundings with direct eye contact.
- The system may not respond at all or it may not respond at the right time when objects are approaching very quickly.
- The rear cross-traffic assist will not provide alerts if your vehicle is parallel or diagonally parked or if your vehicle is pulled too far into the parking space so that it is hidden by adjacent vehicles.

Tips

- Once an automatic brake activation occurs, the system cannot initiate another activation for several seconds.
- System functions may not be available if the ESC is limited or turned off, or if there is a malfunction.
- If there is an audio warning signal from the rear cross-traffic assist, then the parking aid may not be able to provide audio warnings about detected obstacles under certain circumstances.
- The system complies with United States FCC regulations and ISED regulations ⇒ *page 310*.
- The coverage areas of the sensors ⇒ *fig. 132* are schematic representations and do not represent a true-to-scale image of the sensor ranges.

Assisted parking

General information

Applies to: vehicles with park assist

If your vehicle is equipped with park assist, this system helps you find suitable parking spaces. Parking spaces are measured using ultrasonic sensors on the sides of the vehicle.

The system helps with the process of parking or exiting a parking space while you monitor the vehicle's surroundings with the parking aids, cameras*, and direct eye contact. The vehicle moves the steering wheel autonomously.

WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.

Options for parking and exiting parking spaces

Applies to: vehicles with park assist

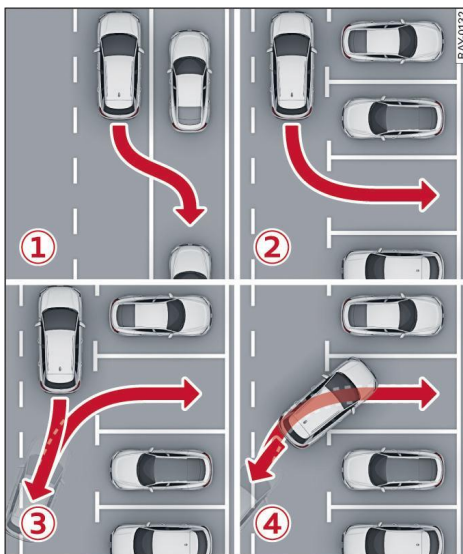


Fig. 134 Parking options overview

The following parking options may be available, depending on the time of activation:

- After a prior parking space search ① – ③ ⇒ *page 171*.
- After trying to park yourself, if you have driven past a parking space yourself ④. The front of the vehicle should already be far enough into the parking space so that the sensors can measure the space.

Parking options

- ① Backing into parallel parking spaces
- ② Backing into perpendicular parking spaces
- ③ Driving forward into perpendicular parking spaces that you have already driven past
- ④ Driving forward into perpendicular parking spaces

Options for exiting parking spaces¹⁾

- ① Exiting parallel parking spaces

¹⁾ In preparation at the time of printing.

Parking space search

Applies to: vehicles with park assist

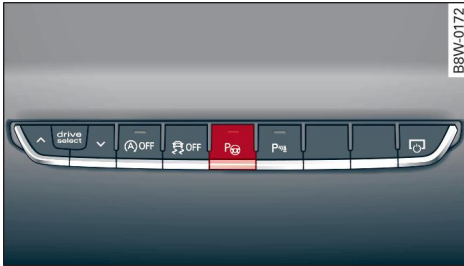


Fig. 135 Center console: park assist button



Fig. 136 Center display: activated parking space search

- ① Parking options display
- ② Arrows and symbols indicate the necessary actions, such as continuing to drive forward or applying the brakes
- ③ Parking space detected and selected by the system

Activating the parking space search

- To activate the parking space search, press the **P** button in the center console, or
- To activate the parking space search when the parking aid is activated, press **P** in the center display.

The display for the parking space search appears in the center display ⇒ *fig. 136*.

Searching for parking spaces

- Drive forward to the row of parking spaces at a low speed. For the best parking results, the vehicle should be approximately 3 feet (1 m) from the row of parking spaces.
- The parking space search is first done on the side of your lane. To switch the side for the parking space search, activate the turn signal for that side. Depending on vehicle equipment,

you may also be able to press on the side next to your vehicle in the center display.

Selecting the parking space

If the system finds a parking space that could be suitable for the vehicle length and width, it will be displayed. The system automatically suggests a parking option ①.

If the parking space allows different parking options, they can be selected manually. Press one of the suggested parking options ① in the center display.

Starting the parking process

To reach the correct starting position, follow the visual instructions in the center display ②. Once the vehicle has reached the correct position, a **P** will appear above the selected parking space ③.

- Keep the vehicle as parallel as possible to the parked vehicles or to the side of the road.
- Make sure that the parking space is suitable for your vehicle ⇒ .
- Start the assisted parking process ⇒ *page 172*.

Maneuvering area

The vehicle can go off course during the parking process ⇒ . If there are obstacles within the maneuvering area that block or endanger the parking process, for example on the opposite side of the street, a message may appear. You may need to drive farther forward and stay closer to the row of parking spaces.



WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- The driver is always responsible when entering or exiting a parking space and during similar maneuvers.
- Sensors and cameras have spots in which the surrounding area cannot be detected. Objects, animals, and people may only be detected with limitations or may not be detected at all. Always monitor the traffic situation and the vehicle's surroundings directly and do not become distracted.

Note

- Parking spaces classified as suitable by the system may have been detected incorrectly. The driver must decide if the parking space displayed is suitable for the vehicle.
- Certain objects (such as trees and posts) or types of ground (such as gravel, snow, and ice) in the area of the parking space may result in the vehicle not being positioned as it normally would be at the end of the parking process. This increases the risk of collisions.

Tips

- If you did not drive past a suitable parking space too quickly, the system can also be activated afterwards by pressing **P** in the center display.
- The Electronic Stabilization Control (ESC) must not be turned off during the parking process. If the ESC intervenes, the parking process will be canceled.
- You can also drive into a perpendicular parking space yourself and then activate the system. If this is the case, the front of the vehicle should already be in the space  *⇒ page 170, fig. 134* so that the sensors can measure the space.
- The system is not available when certain assist systems are turned on.
- If there are suitable parking spaces on both sides of the street, for example on a one-way street, you can change the side where the system is searching for parking spaces by activating the turn signal for the other side or by pressing on that side in the center display.
- The parking systems do not support assisted parking on steep inclines or on tight curves.

the vehicle while you accelerate, brake, and monitor the vehicle's surroundings. Park assist can be interrupted at any time.

WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras *⇒ page 127 to ⇒ page 130*.
- The driver is always responsible when entering or exiting a parking space and during similar maneuvers.
- Do not use this function if the vehicle cannot move freely, for example when on a vehicle jack.
- Sensors and cameras have spots in which the surrounding area cannot be detected. Objects, animals, and people may only be detected with limitations or may not be detected at all. Always monitor the traffic situation and the vehicle's surroundings directly and do not become distracted.

Note

- Do not use the park assist systems when transporting cargo that extends out of the vehicle, when snow chains are mounted, or when the parking space is on a hill or incline.
- Park assist guides the vehicle either away from curbs or onto them if other vehicles are parked on the curb. Make sure that your vehicle's tires and rims are not damaged. Resume control of the vehicle in time or stop the process of parking or exiting the parking space.

Tips

Follow the legal regulations in the country where you are located when using Park assist.

Park assist

General information

Applies to: vehicles with park assist

The park assist helps you when parking and exiting parking spaces after the parking space search. The park assist takes over the steering of

Parking with the park assists

Applies to: vehicles with park assist

Requirement: a suitable parking space must be found and selected *⇒ page 171*. The vehicle must initially be stationary. ►

In the center display, arrows and symbols on the vehicle roof ② ⇒ *page 171, fig. 136* indicate what action is needed, such as applying the brakes or changing the direction. Park assist automatically steers the vehicle into the parking space while the driver presses the pedals.

- ▶ After stopping the vehicle briefly, make sure the actual direction the vehicle is traveling matches the direction indicated by the park assist.
- ▶ Remove your hands from the steering wheel.
- ▶ Pay attention to the path of the vehicle. If the traffic situation permits, accelerate carefully ⇒ ⚠. The maximum parking speed is approximately 4 mph (7 km/h).
- ▶ Follow the visual instructions in the center display and the warning tones until the parking process has ended.



WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.
- Park assist is an assist system. The driver is still responsible for monitoring the vehicle's surroundings and preventing collisions when using the system.
- When using park assist to drive into or out of a parking space, the steering wheel turns quickly on its own. Reaching into the steering wheel spokes while this is happening can result in injury.



Tips

You can also cancel the driving direction set by the system by shifting between a forward gear and reverse gear. Based on the position of the vehicle, the system then calculates the additional steering and driving directions for maneuvering.

Exiting parking spaces with park assist¹⁾

Applies to: vehicles with park assist

If you parked the vehicle in a parallel parking space, park assist can help you drive out of it.

In the center display, arrows and symbols on the vehicle roof ② ⇒ *page 171, fig. 136* indicate what action is needed, such as applying the brakes or changing the direction. Park assist automatically steers the vehicle out of the parking space while the driver presses the pedals.

- ▶ Start the engine.
- ▶ Press the **P** button in the center console.
- ▶ Wait until a message appears in the center display that specifies the direction of travel required to exit the parking space.
- ▶ Activate the turn signal on the desired side or press that side next to the vehicle in the center display.
- ▶ Activate the turn signal on the desired side or, depending on vehicle equipment, press that side next to the vehicle in the center display.
- ▶ Make sure the actual direction the vehicle is traveling matches the direction indicated by the park assist.
- ▶ Remove your hands from the steering wheel.
- ▶ Pay attention to the path of the vehicle. If the traffic situation permits, accelerate carefully ⇒ ⚠. The maximum speed for exiting a parking space is 3 mph (5 km/h).
- ▶ Follow the visual instructions in the display and the audio warnings until the vehicle has finished exiting the parking space.
- ▶ The process of exiting the parking space has ended if additional corrective movements are no longer necessary and the specified steering wheel angle is sufficient to drive out of the parking space. Actively take over steering immediately ⇒ ⚠.



WARNING

- Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.

¹⁾ In preparation at the time of printing.

- Park assist is an assist system. The driver is still responsible for monitoring the vehicle's surroundings and preventing collisions when using the system.
- When using park assist to drive into or out of a parking space, the steering wheel turns quickly on its own. Reaching into the steering wheel spokes while this is happening can result in injury.

Note

Resume steering immediately after the last corrective movement and the takeover prompt, so that the specified steering wheel angle is not recentered.

Interrupting the park assist

Applies to: vehicles with park assist

Park assist will be canceled automatically in the following scenarios:

- You turn off the system.
- You start steering.
- The speed is too high.
- The time limit is exceeded.
- An obstacle is detected.
- ESC intervenes.

Actively resume control of the vehicle immediately, end the park assist manually, or:

- You can resume the parking process in some situations. Press the  button in the center console.
- To continue exiting the parking space, turn the engine off and on. Press the  button in the center console.

WARNING

Observe the safety precautions and note the limitations of the assist systems, sensors, and cameras ⇒ *page 127* to ⇒ *page 130*.

Messages

Applies to: vehicles with park assist

If the ,  or  indicator light turns on, the park assist is not available or was interrupted.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be obstructed. Clean the area in front of the sensors ⇒ *page 129* and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Phone

Introduction

Applies to: vehicles with phone

You can operate various phone functions easily through the MMI in your vehicle.

Depending on the country and the vehicle equipment, the following options may be available:

- Connecting a mobile phone with Bluetooth
- Using two phones
- Using the Audi phone box



WARNING

- Medical experts warn that mobile devices can interfere with the function of pacemakers. Always maintain a minimum distance of about 7.9 inches (20 cm) between the mobile device antennas and the pacemaker.
- Do not carry the mobile device in a pocket directly over the pacemaker when the phone is turned on.
- Turn off the mobile device immediately if you suspect it may be interfering with the pacemaker.
- Do not use the voice recognition system*
⇒ *page 30* in emergencies because your voice may change in stressful situations. The system may take longer to dial the number or may not be able to dial it at all. Dial the emergency number manually.
- Turn off your mobile device in areas where there is a risk of an explosion. These locations are not always clearly marked. This may include gas stations, fuel and chemical storage facilities or transport vehicles, or locations where fuel vapors (such as propane or gasoline vapor in vehicles or buildings), chemicals or large quantities of dust particles (such as flour, sawdust or metal) may be present in the air. This also applies to all other locations where you would normally turn off the vehicle engine.
- The demands of traffic require full attention of all road users. Always read the chapter
⇒ *page 23, Information about traffic safety.*



Note

Read the information about Audi connect, especially regarding connectivity costs ⇒  in *General information on page 187.*



Tips

- The Bluetooth connection range is limited to inside the vehicle.
- A selection of supported Bluetooth devices can be found in the database for tested mobile devices at www.audi.com/bluetooth.

Setup

Connecting a mobile phone using Bluetooth

Applies to: vehicles with phone

Requirement: the vehicle must be stationary and the ignition must be turned on. The Bluetooth settings must be open on your mobile device during the connection setup. The mobile device to be connected must not be actively connected to any other Bluetooth device. The MMI must only be connected to one mobile device.

- ▶ Enable the Bluetooth function and visibility on the MMI ⇒ *page 231* and the mobile phone.
- ▶ **Applies to:** MMI: Select on the home screen: **PHONE**.
- ▶ Follow the system instructions. The available Bluetooth devices will be displayed after several seconds.
- ▶ Press on the desired mobile device in the list of displayed Bluetooth devices.
- ▶ To update the list, press ↺.

A PIN for a secure Bluetooth connection will be generated.

- ▶ Confirm the PIN on your mobile device.
- ▶ Follow the system instructions.
- ▶ Pay attention to any other system prompts on the MMI and on your mobile phone.

After connecting successfully

The mobile phone contacts are automatically loaded in the MMI. This process can take several minutes, depending on the number of contacts. ▶

Depending on your mobile phone and the connection type, you can use the following functions:

Using the hands-free system

Requirement: your mobile phone must be connected to the MMI via a Bluetooth Hands Free Profile (Bluetooth HFP).

You can use the hands-free system. You can make calls using the antenna on your mobile device.

Sending and receiving messages

See ⇒ *page 184*.

Tips

- Pay attention to any system prompts displayed on your mobile device or the MMI, for example if the system should connect automatically in the future. Depending on the mobile device, you may need to download contacts and confirm access to your messages separately.
- You can also search for the MMI on your mobile device using the Bluetooth device search.
- You only have to pair your device one time. Bluetooth devices that are already paired automatically connect to the MMI when the Bluetooth function is turned on, when they are within range, and when the ignition is turned on. The last connected mobile device is given first priority.
- You can manage additional settings for connected mobile devices in the Connected devices menu ⇒ *page 231*.
- When leaving the vehicle, the Bluetooth connection to the mobile device will automatically disconnect. Depending on your mobile device, phone calls in progress may be automatically redirected from the MMI to your mobile device so that you can continue the call on your phone.

can be reached in your vehicle through both mobile phones.

Applies to: mobile devices with Bluetooth Message Access Profile (MAP): You can send and receive messages with both mobile devices
⇒ *page 184*.

Connecting another mobile device

Requirement: a mobile device must be connected to the MMI. The vehicle must be stationary and the ignition must be turned on. The Bluetooth settings must be open on your mobile device during the connection setup. The mobile device to be connected must not be actively connected to any other Bluetooth device.

- ▶ Enable the Bluetooth function and visibility on the MMI ⇒ *page 231* and the mobile phone.
- ▶ Applies to: MMI: Select on the home screen: **PHONE** > , or
- ▶ Applies to: MMI: Select on the home screen: **SETTINGS** > **Connected devices** > **Telephone 1** or **Telephone 2** > **New connection**.
- ▶ Follow the system instructions. The available Bluetooth devices will be displayed after several seconds.
- ▶ Press on the desired mobile device in the list of displayed Bluetooth devices.
- ▶ To update the list, press .

A PIN for a secure Bluetooth connection will be generated.

- ▶ Confirm the PIN on your mobile device.
- ▶ Follow the system instructions.
- ▶ Pay attention to any other system prompts on the MMI and on your mobile phone.

After connecting successfully

See ⇒ *page 175*, *After connecting successfully*.

Switching between two mobile devices

Requirement: phone 1 and phone 2 must be connected to the MMI.

- ▶ Applies to: MMI: Select on the home screen: **PHONE** > .

Using two phones

Applies to: vehicles with phone

You can connect two mobile phones to the MMI at the same time using the Bluetooth HFP, for example a business phone and a private phone. You

Note

Read the information about Audi connect, especially regarding connectivity costs ⇒ **Note** in *General information* on page 187.

Disconnecting a mobile device

Applies to: vehicles with phone

- To disconnect a Bluetooth device from the MMI, use the Connected devices menu ⇒ *page 231*.

Using the Audi phone box**General information**

Applies to: vehicles with Audi phone box/Audi phone box light

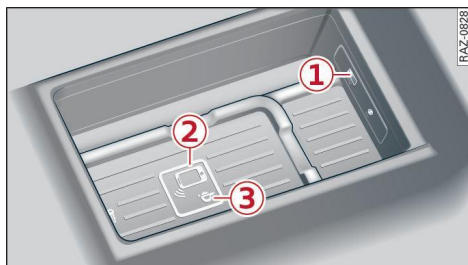


Fig. 137 Front center console: Audi phone box with connections

Depending on vehicle equipment, you may be able to use the following functions with the Audi phone box:

- Make phone calls using the vehicle's exterior antenna
- Charge a mobile device using the USB input
- Charge a mobile device wirelessly
- Reminder signal

Limitations

In some situations, the functions of the Audi phone box may be limited or temporarily unavailable. For example, this may happen if:

- There is one more than mobile device in the Audi phone box
- The mobile device is inside a bag or a protective case
- There are objects between the Audi phone box and the mobile device

- The mobile device is not positioned in the center of the Audi phone box

WARNING

- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Store objects securely while driving.
- Do not allow the visual or audio signals from a mobile device to distract you from traffic, because this increases the risk of an accident. Operate the mobile device only via the MMI. Fold the center armrest down while driving.

Note

Applicable to U.S.A.

Operation of the Audi phone box is subject to the following requirements of the Federal Communications Commission:

- This is a CONSUMER device.
- BEFORE USE, you MUST REGISTER THIS DEVICE with your wireless provider and have your provider's consent. Most wireless providers consent to the use of signal boosters. Some providers may not consent to the use of this device on their network. If you are unsure, contact your service provider.
- You MUST operate this device with approved antennas and cables as specified by the manufacturer. Antennas MUST be installed at least 20 cm (8 inches) from any person.
- You MUST cease operating this device immediately if requested by the FCC or a licensed wireless service provider.
- WARNING: E911 location information may not be provided or may be inaccurate for calls served by using this device.

Note

Applicable to Canada

In Canada, operation of a Zone Enhancer, such as an Audi phone box, is subject to the following requirements of the Innovation, Science and Economic Development Canada (ISED):

- This is a **CONSUMER** device.
- **BEFORE USE**, you **MUST** meet all requirements set out in **CPC-2-1-05**. At the time of printing this user manual, the CPC-2-1-05 client procedures circular of ISED Canada was available at the following web page: <http://www.ic.gc.ca/eic/site/smt-gst.nsf/eng/sf08942.html>.
- You **MUST** operate this device with approved antennas and cables as specified by the manufacturer. Antennas **MUST NOT** be installed within 20 cm of any person.
- You **MUST** cease operating this device immediately if requested by ISED or a licensed wireless service provider.
- **WARNING:** E911 location information may not be provided or may be inaccurate for calls served by using this device.

Tips

- You can purchase a USB adapter from an authorized Audi dealer or authorized Audi Service Facility, or at specialty stores.
- Audi recommends using Audi Genuine Accessories. Audi has verified their reliability, safety, and suitability.

Charging a mobile device wirelessly

Applies to: vehicles with Audi phone box/Audi phone box light

You can charge your mobile device wirelessly using the Audi phone box.

Requirement: the ignition must be turned on. Your mobile device must meet the Qi standard.

- ▶ Make sure that the wireless charging function is turned on:
- ▶ Applies to: MMI: Select on the home screen: **SETTINGS > General > Reminder signal and mobile device charging**.
- ▶ Turn on the **Mobile device wireless charging** function.
- ▶ To charge your mobile device wirelessly, lay it on the  symbol  ⇒ *page 177, fig. 137* in the center of the Audi phone box with the display facing up.

WARNING

- The mobile device may become hot during wireless charging. Pay attention to the temperature of your mobile device and be careful when removing it from the Audi phone box.
- An alternating magnetic field is used for wireless charging. Maintain a minimum distance of approximately 2.4 inches (6 cm) to the Audi phone box charging plate. The thresholds for prolonged exposure at this distance comply with ICNIRP1998. Therefore, interactions such as irritation of sensory organs, malfunctions of active medical implants (such as pacemakers, infusion pumps, or neurostimulators) or effects on passive medical implants (such as prosthetic limbs) is highly unlikely. If you have a medical implant, seek medical advice from a specialist if you have any questions. You can

Tips

The system complies with United States FCC regulations and ISED regulations ⇒ *page 310*.

Making phone calls using the exterior antenna

Applies to: vehicles with Audi phone box

With the Audi phone box, you can make calls using the exterior antenna on the vehicle. Using the exterior antenna helps when there is a low signal and also provides better reception quality.

Requirement: the ignition must be turned on.

- ▶ To make phone calls through the vehicle's exterior antenna using your mobile device, lay your device on the phone symbol  ⇒ *page 177, fig. 137* in the center of the Audi phone box with the display facing up.

Charging the battery using the USB input

Applies to: vehicles with Audi phone box/Audi phone box light

You can charge your mobile device using a special USB adapter with the Audi phone box
⇒ *page 217*.

Requirement: the ignition must be turned on.

- ▶ To charge your mobile device via USB, connect it to the USB input  ⇒ *page 177, fig. 137*.

also turn the function for wireless charging in the Audi phone box on or off. You can still charge your mobile device using a cable connection.

 **Tips**

- The maximum charging capacity is 5 W.
- The charging time and temperature will vary depending on the mobile device being used.

Mobile device reminder signal

Applies to: vehicles with Audi phone box/Audi phone box light

When the device reminder signal is turned on, you will be notified that your mobile device is still in the Audi phone box when you leave the vehicle.

Requirement: your mobile device must be located in the Audi phone box (if Qi-capable) or connected to the USB port with charging function using a USB adapter, and the smartphone interface must be active or your iPhone must be connected to the MMI via Bluetooth and charging using a USB adapter connected to the USB port with charging function.

- Applies to: MMI: Select on the home screen: **SETTINGS > General > Reminder signal and mobile device charging.**

The following settings may be available, depending on vehicle equipment:

- **Signal tone**
- **Off**

Spoken cue

This setting is turned on at the factory.

Mobile device notes: reminder, charge level

When this function is turned on, the charge status of your mobile device is displayed. You will also be reminded not to forget your mobile device when leaving the vehicle.

Using the phone

Accessing phone functions

Applies to: vehicles with phone

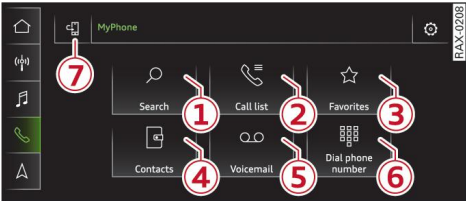


Fig. 138 Center display: selection menu

Requirement: a mobile device must be connected to the MMI.

- Applies to: MMI: Select on the home screen: **PHONE.**

Possible phone functions:

①	Search	
②	Call list	179
③	Favorites	180
④	Contacts	180
⑤	Voicemail	181
⑥	Dial phone number	181
⑦	Switch telephones	183

Managing call lists

Applies to: vehicles with phone

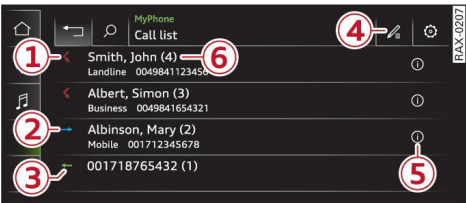


Fig. 139 Center display: call list

Opening call lists using the MMI

- Applies to: MMI: Select on the home screen: **PHONE > Call list.**

Opening call lists using the multifunction steering wheel

- Select in the instrument cluster: Phone tab >  button > **Call list.**

Possible call list symbols:

- ① Missed calls
- ② Dialed numbers
- ③ Accepted calls
- ④ Editing a phone number
- ⑤ Display business card 181
- ⑥ Number of interactions with a contact

If more than one interaction with a contact or number has taken place, the last one is displayed in the form of an arrow ①, ②, or ③.

Call list options

Press and hold a contact or a phone number in the list until the **Options** menu appears.

Depending on the vehicle equipment and your mobile phone, the following options may be available:

- **Store as favorite** ⇨ *page 180*.
- **Send a text** ⇨ *page 184*.
- **Send e-mail** ⇨ *page 184*.

Edit number

Edit a phone number before dialing it.

Show history

Requirement: you must have had more than one interaction with a contact.

All interactions with a contact or a number are displayed.

Managing favorites

Applies to: vehicles with phone

You can store contacts for all connected mobile devices as shortcuts in the favorites list.

Accessing favorites

- Applies to: MMI: Select on the home screen: **PHONE > Favorites**.

Storing favorites

- Press ☆ ⇨ *page 181* in the business card, or
- Press **Store as favorite** in the options ⇨ *page 179*.

Deleting favorites

- Press ★ ⇨ *page 181* in the business card, or
- Select: **Favorites** > ✎ > *one or multiple favorites* or **Select all** > **Delete** > **(Done)**.

 **Tips**

The favorites can only be edited via the MMI.

Managing the directory

Applies to: vehicles with phone

You can manage up to four directories in the MMI.

Requirement: a mobile device must be connected to the MMI.

Opening the directory

- Applies to: MMI: Select on the home screen: **PHONE > Contacts**.

The contacts will be displayed. You can change the sort order ⇨ *page 183*, **Sort order**.

Deleting imported contacts

Requirement: you must have imported at least one contact ⇨ *page 183*.

- Select: **Contacts** > ✎ > *one or more text messages* > **Delete** > **(Done)**. The imported contacts are deleted.

Directory options

- Press and hold a contact in the directory until the **Options** menu appears.

Depending on the vehicle equipment and your mobile phone, the following options may be available:

- **Store as favorite** ⇨ *page 180*.
- **Send contact**: you can select **Text message** or **E-mail** ⇨ *page 184*.
- **Send a text** ⇨ *page 184*.
- **Send e-mail** ⇨ *page 184*.

 **Tips**

– Pay attention to any synchronization prompts on your mobile device when downloading contacts.

- The contacts from the mobile device may not be transferred in alphabetical order. If there are too many entries, contacts with different first letters may be missing in the MMI.
- Only the contacts from the active connected mobile device are displayed.
- The contacts in the local MMI memory are always visible and can be accessed by other persons.
- After turning off the ignition and exiting the vehicle, the mobile device directory will be updated when the MMI is started again if the mobile device is within range and the Bluetooth function is turned on in the mobile device and the MMI.
- Only the contacts in the local MMI memory can be deleted.

Opening business cards

Applies to: vehicles with phone

The business card shows you details about a contact.

- ▶ To open a business card, press on a contact in the directory, or
- ▶ Press  in the call list  ⇒ *page 179, fig. 139*.

Possible options in the business card:

- ▶ **Call:** press on a phone number.
- ▶ **Storing a favorite:** press .
- ▶ **Deleting a favorite:** press .
- ▶ **Sending a text message:** press .
- ▶ **Starting navigation:** press on an address.
- ▶ **Sending an e-mail:** press on an e-mail address.
- ▶ **Send contact:** you can select **Text message** or **E-mail** ⇒ *page 184*.

Listening to voicemail

Applies to: vehicles with phone

Calling voicemail

- ▶ Applies to: MMI: Select on the home screen: **PHONE > Voicemail**.

Entering the voicemail number

Requirement: there must be no voicemail number stored.

- ▶ Enter the desired number.
- ▶ Press **OK**.

Dialing the voicemail number

Requirement: a voicemail number must be stored.

- ▶ Press **Voicemail**. The call begins immediately.



Tips

This service must be set up and activated by the mobile phone service provider.

Dialing a phone number

Applies to: vehicles with phone

Depending on the vehicle equipment, you may have the following options for dialing a phone number:

- Using text input in the MMI ⇒ *page 27*.
- Using voice operation ⇒ *page 30*.

Call options

Applies to: vehicles with phone

- ▶ To accept or end a call, press the  button on the multifunction steering wheel. Operating ⇒ *page 16* and ⇒ *page 32*.

Depending on your mobile device, the following options may be available in the MMI when there is an incoming call:

- **Answer**
- **Decline**
- **Message**

If you exit the vehicle during a phone call, the Bluetooth connection will be disconnected. Depending on your mobile device, phone calls in progress may be automatically transferred from the MMI to your mobile device.



Tips

The radio or media playback is muted during a phone call.

During a phone call

Applies to: vehicles with phone

Depending on your mobile device and the type of connection, the following options may be available during a call:

- End call
- Mute

Sending a tone sequence

Press **Numbers**. You can enter tone sequences (DTMF) and send them to the other party on the call.

Hold

Requirement: **Conference** ⇨ *page 183* must be turned on.

Puts the current call on hold. To resume the call, press **Resume**.

Answering an incoming call

One of these options will be available, depending on your mobile phone service provider and the selected **Conference** setting ⇨ *page 183*:

- **Answer**: the current phone call will be put on hold. The incoming call will be answered.
- **Replace**: the active call will be replaced with the incoming call.

Declining an incoming call

If you select **Decline**, the incoming call will be declined.

Conference

Requirement: **Conference** ⇨ *page 183* must be turned on. Two phone calls must be in progress.

Depending on your mobile phone service provider, you can add a call on hold and up to five active callers to a conference call.

Swapping a call

Requirement: **Conference** ⇨ *page 183* must be turned on. Two phone calls must be in progress.

You can alternate between two phone calls.

Additional call options

Press **More**.

Depending on the mobile device being used and the type of connection, the following options may be available:

Transfer call to mobile device

Transfer the current call to your mobile device or Bluetooth headset*.

Switch to hands-free

Transfer the current call from your mobile device to the MMI.

Add call

You can start a new call. The current call will be put on hold.

Remove conference member

You can remove conference call members individually when a conference call is active.

Microph. input

You can adjust the input level of the microphone using the slider.

 **Tips**

The call waiting function must be activated in your mobile device to be alerted about an incoming call during an active call.

Making an emergency call

Applies to: vehicles with phone

Requirement: a mobile device must be connected to the MMI.

- Applies to: MMI: Select on the home screen: **PHONE > Dial phone number > the local emergency call number (for example, 911) > Dial.**

 **WARNING**

- Because your phone works with radio signals, a connection cannot be guaranteed under all circumstances. Do not rely on only your phone when it comes to essential communication (such as during a medical emergency).
- Always follow the instructions given by the emergency personnel during an emergency

call and only end the call when they instruct you to do so.

Settings

Phone settings

Applies to: vehicles with phone

- Applies to: MMI: Select on the home screen:
PHONE > ⚙️.

The following options may be possible, depending on your mobile device:

- **Decline with text message**
- **Edit voicemail number**

Switching between two mobile devices

Requirement: phone 1 and phone 2 must be connected to the MMI.

Switch telephones: the device name of the available mobile device is displayed. You can switch the phone by pressing the button.

Conference

Depending on your mobile phone service provider, you can use the following functions when the conference function is turned on:

- Accept another call while on a call. The first phone call is put on hold.
- Put an existing phone call on hold and start another call.
- Merge two phone calls into one conference call.

Ringtone and volume settings

- **Ringtone and message volume:** you can adjust the volume using the slider.
- **Ringtone:** select a ringtone from the list.
- **Microphone input level:** you can adjust the input level of the microphone using the slider.

Data module serial number (IMEI)

Applies to: vehicles with data module

The serial number (IMEI) will be displayed.

Contact settings

Applies to: vehicles with phone

- Applies to: MMI: Select on the home screen:
PHONE > Contacts > ⚙️.

Switching between two mobile devices

Requirement: phone 1 and phone 2 must be connected to the MMI.

Switch telephones: the device name of the available mobile device is displayed. You can switch the phone by pressing the button.

The directory for the selected phone will be displayed.

Hide grayed-out contacts

When this function is turned on, contacts that have no phone numbers stored for them will be hidden.

Sort order

You can sort the contacts by **Last name** or **First name**.

Download contacts

Requirement: a mobile device must be connected to the MMI.

To update the contacts in the MMI, you can manually download your mobile device contacts. Depending on the mobile device, you may need to disconnect and reconnect the Bluetooth connection to update the contacts.

Importing and exporting contacts

Requirement: a USB storage device is connected to a USB port with charging function ⇒ [page 217](#).

Contacts in vCard format (.vcf) can be imported or exported from the MMI.

- **Importing contacts from a storage device:** Requirement: the USB storage device must contain contacts in the vCard format. They must not be located in sub-folders. Select: **> Search for import data > USB device 1/USB device 2 > desired contacts** or **Select all > Start import**.
- **Exporting contacts to a storage medium:** Requirement: you must have a contact imported. Select: **Export contacts > Find exporting** ►

source > **USB device 1/USB device 2** > *desired contacts* or **Select all** > **Start export**.

Tips

- The imported contacts are stored in the local MMI memory.
- There should be no other files or folders on the storage medium containing the contacts to be imported.
- Contacts that were downloaded from a mobile device cannot be exported.
- Apple devices and MTP devices (such as smartphones) are not recognized as USB storage devices.

Messages

Text messages

Applies to: vehicles with phone

Requirement: your mobile device must be connected to the MMI via Bluetooth Message Access Profile (Bluetooth MAP).

- Applies to: MMI: Select on the home screen: **MESSAGES** >  > **Text message (phone 1)/Text message (phone 2)**.

The following functions are available:

- **New text message***
- **Inbox**
- **Sent**
- **Outbox***
- **Drafts***
- **Deleted**

User defined*

If necessary, user-defined folders will be copied to your mobile device.

Message options

Press on a text message.

Depending on the country, the following options may be available:

- **Read out**
- **Reply**
- **Forward**
- **More**

To switch between messages, press < or >.

Press **More**. Depending on your mobile device and the selected mailbox, additional options may be available:

- **Call**
- **Forward**
- **Navigate**
- **Extract numbers**
- **Send again**

Settings

Press .

New text message notification

When the function is turned on, an envelope  in the MMI status bar will indicate when there is a new text message.

Tips

Only new received messages may be displayed depending on your mobile device.

E-mail

Applies to: vehicles with phone and e-mail

Requirement: your mobile device must be connected to the MMI via Bluetooth Message Access Profile (Bluetooth MAP).

- Applies to: MMI: Select on the home screen: **MESSAGES** >  > **E-mail (phone 1)/E-mail (phone 2)**.

The following functions are available:

- **New e-mail**
- **Inbox**
- **Sent**
- **Outbox**
- **Drafts***
- **Deleted***

User defined*

If necessary, user-defined folders will be copied to your mobile device.

Message options

Press on an e-mail.

Depending on the country, the following options may be available:

- Read out
- Reply
- Reply to all
- Forward
- More

To switch between messages, press < or >.

Press **More**. Depending on your mobile device and the selected mailbox, additional options may be available:

- Call
- Forward
- Extract e-mail
- Navigate
- Extract numbers
- Show all recipients

– Send again

Settings

Press .

New e-mail notification

When the function is turned on, an envelope  in the MMI status bar will indicate when there is a new e-mail.



Note

Read the information about Audi connect, especially regarding connectivity costs  in *General information on page 187*.



Tips

Only new received messages may be displayed depending on your mobile device.

Troubleshooting

Applies to: vehicles with phone

The information that follows lists some troubleshooting options. They depend on vehicle equipment.

Problem	Solution
Pairing the mobile device to the MMI failed.	Make sure the requirements for connecting a mobile phone have been met $\Rightarrow$ <i>page 175</i> , or Make sure you did not accidentally decline the PIN for establishing a connection on your mobile phone. If necessary, repeat the pairing process $\Rightarrow$ <i>page 175</i> .
After pairing, not all contacts or no contacts have been loaded into the MMI.	Avoid using special characters in names. Avoid using contact groups on your mobile device. Check for prompts on your mobile device when connecting with Bluetooth.
Certain phone functions are grayed out or not available.	The phone functions depend on the mobile phone service provider and the mobile device you are using.
Some phone functions may be grayed out or unavailable even though the mobile phone supports them.	Check if the Bluetooth settings on your mobile phone are restricted or individual Bluetooth settings are deactivated. This may be the case with business mobile phones.

Problem	Solution
The MESSAGES menu is not available.	Make sure your mobile device has an option to show messages option and that it is enabled.
Wireless mobile phone charging is not working or is interrupted.	Check if wireless charging with the Audi phone box is turned on. Check if your mobile device is Qi-capable. Make sure your mobile device is positioned correctly in the Audi phone box ⇨ <i>page 177</i> and that there are no objects located between the phone box and the phone.

Audi connect

General information

Applies to: vehicles with Audi connect

Depending on the country and the vehicle equipment, the following functions may be available:

- Audi connect Infotainment
- Audi connect vehicle control
- Audi connect apps



WARNING

- To reduce the risk of an accident, only use Audi connect services and the Wi-Fi hotspot if the traffic situation permits. Read and follow the guidelines provided in ⇒ *page 23, Information about traffic safety.*
- It is only safe to use tablets, laptops, mobile devices and other similar devices when the vehicle is stationary because, like all loose objects, they could be thrown around the inside of the vehicle in a crash and cause serious injuries. Store these types of devices securely while driving. Also read the warnings in the chapter ⇒ *page 75.*



Note

- Applies to: embedded SIM card usage: The connection costs for Audi connect Infotainment services are included in the price of Audi connect Infotainment during the subscription period with some exceptions. Please note that there may be additional charges when using some services. For example, this applies to online radio/podcasts, additional online data, or for Internet connections and services that use the Wi-Fi hotspot. Depending on the country, data plans may need to be purchased for these Internet connections and services ⇒ *page 192.* For additional information, see my.audi.com.
- Applies to: use of your own SIM card in the mobile phone via Wi-Fi: If you use your own SIM card, all data connections for all Audi connect Infotainment services will run through your SIM card. This could result in additional costs, depending on your mobile

phone service provider and especially when using in other countries. A flat rate data plan is strongly recommended. You can obtain more information from your mobile phone service provider.

- In certain situations, the Wi-Fi hotspot data connection may be established as a replacement for the SIM card on your Wi-Fi device. This feature depends on the configuration of your Wi-Fi device and operating system. This could result in fees depending on your mobile phone service provider, especially if you are using this feature while abroad. A flat rate data plan is strongly recommended. For more information, contact your mobile phone service provider or refer to the owner's manual for your Wi-Fi device.
- You are responsible for all precautions taken for data protection, anti-virus protection, and protection against loss of data on mobile devices that are used, for example, to access the Internet through the Wi-Fi hotspot.
- In areas with poor GPS reception or outside the coverage range of the respective mobile phone service provider, some functions and/or services may not be available, it may not be possible to send or receive data, or functionality may be limited.



Tips

- The availability of services depends on the subscription.
- Audi merely provides access to third party services through the MMI and does not assume any responsibility for the content and availability of these services.
- Use of the most up-to-date mobile network standard is not available in every country. Contact an authorized Audi dealer or authorized Audi Service Facility or your mobile phone service provider for additional information.
- Availability, scope, providers, screen display, and costs of services may vary depending on the country, model, model year, end device and rates.

- All services/apps can be modified, activated/deactivated, renamed, and enhanced without further notification.
- Depending on the country and model there may be an app other than the “myAudi app” available for your vehicle. For additional information, see my.audi.com.

Audi connect Infotainment

Description

Applies to: vehicles with Audi connect Infotainment

With Audi connect Infotainment services, online information is transmitted directly to the vehicle.

An Internet connection is required to use Audi connect Infotainment. Depending on the country and vehicle equipment, the Internet connection can be established using an embedded SIM card (eSIM) or using your own SIM card in a mobile phone using Wi-Fi.

WARNING

Always follow the information found in  in *General information on page 187*.

Note

Always follow the information found in  in *General information on page 187*.

Embedded SIM card

Applies to: vehicles with Audi connect Infotainment and an embedded SIM card

The data connection for Audi connect Infotainment services is made through an embedded SIM card (eSIM card) that is installed in the vehicle. You can use the Audi connect Infotainment services immediately.

Note

Always follow the information found in  in *General information on page 187*.

Using your own SIM card in a mobile phone via Wi-Fi

Applies to: vehicles with Audi connect Infotainment and Wi-Fi

Depending on the country and the vehicle equipment, the MMI can connect to your own SIM card in a mobile phone via a Wi-Fi connection and use it to establish an Internet connection

⇒ *page 188*.

Note

Always follow the information found in  in *General information on page 187*.

Connecting to Wi-Fi

Applies to: vehicles with Wi-Fi

The vehicle can use Wi-Fi to connect to a Wi-Fi hotspot.

Requirement: the ignition must be turned on.

- ▶ If necessary, turn on the “Wi-Fi hotspot (tethering)” function or the “personal hotspot” on your mobile device.
- ▶ Applies to: MMI: Select on the home screen: **SETTINGS > Connection settings > Wi-Fi**
- ▶ Turn on the Wi-Fi function.
- ▶ Press on the desired Wi-Fi hotspot from the list of available networks.
- ▶ Follow the system instructions.

The MMI has successfully connected to a Wi-Fi hotspot via Wi-Fi.

WARNING

Always follow the information found in  in *General information on page 187*.

Note

Always follow the information found in  in *General information on page 187*.

Tips

The system complies with United States FCC regulations and ISSED regulations ⇒ *page 310*.

Using a Wi-Fi hotspot

Applies to: vehicles with Wi-Fi hotspot

You can connect up to eight Wi-Fi devices (such as smartphones) with the MMI Wi-Fi hotspot. If the MMI is connected to the Internet ⇨ *page 188*, the connected Wi-Fi devices can also use the MMI's Internet connection.

Requirement: the ignition must be turned on. Depending on the country, a data packet may be available ⇨ *page 192*.

- Applies to: MMI: Select on the home screen: **SETTINGS > Connection settings > Wi-Fi hotspot** Turn on the Wi-Fi hotspot.
- Applies to: MMI: Select on the home screen: **SETTINGS > Connection settings > Wi-Fi hotspot** The access data for the Wi-Fi hotspot is displayed.
- Turn on the Wi-Fi function in your mobile device and connect it to the MMI Wi-Fi hotspot using the authentication data that is shown.
- Follow any additional system prompts on your Wi-Fi device if necessary.

Your device is successfully connected with the MMI's Wi-Fi hotspot.



WARNING

Always follow the information found in ⇨ in *General information on page 187*.



Note

Always follow the information found in ⇨ in *General information on page 187*.



Tips

The system complies with United States FCC regulations and ISED regulations ⇨ *page 310*.

Audi connect Infotainment services

Configuration

Applies to: vehicles with Audi connect Infotainment

Some Audi connect Infotainment services must be configured through your personal myAudi ac-

count at my.audi.com before using them for the first time.



Tips

- A myAudi user must be logged in for some Audi connect Infotainment services.
- Some Audi connect Infotainment services must be activated at my.audi.com.
- Depending on the country, you may be able to use an Audi app or my.audi.com.
- For detailed information on configuration, visit my.audi.com.

Services

Applies to: vehicles with Audi connect Infotainment

You can use the services that are available for your vehicle directly in the MMI. The scope of services depends on the country and equipment. There may be changes over the service life of the vehicle.

Weather information

Applies to: MMI

- Press **WEATHER** on the home screen.

Editing settings: Select: **WEATHER** > .

- To display the weather for a location, press on a location in the list.
- To display the weather for your current location, press on the location that is marked with the crosshairs.

Requirement: route guidance must be active.

- To display the weather at your destination, press on the location that is marked with the flag .

Adding a location: select: **WEATHER** > > **In a new city** > a location.

Removing a location: select: **WEATHER** > > > **one or more locations** or **Select all** > **Delete**.

Online news

- Applies to: MMI: Select on the home screen: **NEWS**.

Access to the calendar

Requirement: the myAudi app must be installed and open on your mobile device. Access to your ►

calendar must be enabled on your mobile device. You must be logged into the myAudi app with your myAudi login data and you must have selected your vehicle. The Wi-Fi function on your mobile device and the MMI must be enabled and your mobile device must be paired to the MMI Wi-Fi hotspot ⇒ *page 191, Wi-Fi hotspot*.

You can display the your mobile device calendar on the MMI.

- Applies to: MMI: Select on the home screen: **CALENDAR**.

WARNING

Always follow the information found in ⇒  *in General information on page 187*.

Note

Always follow the information found in ⇒  *in General information on page 187*.

Functions on demand

Displaying purchased functions

Applies to: vehicles with functions on demand

Depending on the country and vehicle equipment, you can purchase functions on demand through a myAudi account in the myAudi app at any time.

The following options are available for displaying purchased functions in the vehicle.

- Applies to: MMI: Select on the home screen: **PURCHASES**.

Tips

- Equipment installed at the factory may be displayed as purchased functions.
- The availability of functions in the myAudi app varies depending on the country.
- Depending on the country and model there may be an app other than the “myAudi app” available for your vehicle. For additional information, see my.audi.com.

Messages

Applies to: vehicles with functions on demand

If a message about a function that requires a license is displayed, the function may no longer be available. Check the MMI Purchases menu to see if you have a license for this function or if the license has expired. Purchase the function if necessary using functions on demand.

Audi connect apps

Setup

Applies to: vehicles with Audi connect apps

You must be logged in to the vehicle as a myAudi user to use Audi connect apps.

- Create a myAudi account by registering in the myAudi app.
- Add your vehicle to your myAudi account and then verify your myAudi account using one of the verification processes provided.
- Add the myAudi user to your vehicle.

WARNING

Always follow the information found in ⇒  *in General information on page 187*.

Note

Always follow the information found in ⇒  *in General information on page 187*.

Apps

Applies to: vehicles with Audi connect apps

Requirement: you must be logged in to your vehicle with your myAudi user.

STORE

You can search and install apps for your vehicle.

WARNING

Always follow the information found in ⇒  *in General information on page 187*.

Note

Always follow the information found in ⇒  *in General information on page 187*.

Audi connect vehicle control services

Services

Applies to: vehicles with Audi connect vehicle control

Using Audi connect vehicle control services, you can perform tasks such as viewing data about your vehicle or control vehicle functions remotely.

You can view and use services available for your vehicle at my.audi.com or through the myAudi app.

Information about the services and the corresponding app was accurate at the time this manual was published. The scope of services depends on the country and equipment. There may be changes over the service life of the vehicle.



WARNING

- Always follow the information found in ⇨  in *General information on page 187*.
- Driver messages, text messages, and illuminated warning and indicator lights in the vehicle always take priority over information from the Audi connect services. The information displayed by the Audi connect services should not cause you to take safety risks. This can result in the vehicle breaking down in traffic and to serious injuries or accidents.



Tips

- Accessing specific data or controlling functions remotely depends on the charge level of the vehicle battery. Therefore, these functions only have limited availability after turning off the ignition.
- An eSIM card establishes the Internet connection for Audi connect vehicle control services. The costs for this are included in the price of Audi connect vehicle control services. The mobile phone network, for example, must be available to use these services.

Setup

Applies to: vehicles with Audi connect vehicle control

Create a myAudi account by registering in the myAudi app or at my.audi.com, depending on your country.

- Set the key user ⇨ *page 34*.
- Install the myAudi app on your mobile device and log in with your access information.



Tips

Some services require you to enter a 4-digit PIN that you set up during registration.

Settings

Wi-Fi

Applies to: vehicles with Wi-Fi

Requirement: the ignition must be turned on.

- Applies to MMI: Select on the home screen: **SETTINGS > Connection settings**.

Depending on the country and the vehicle equipment, the following functions may be available:

Wi-Fi

The MMI Wi-Fi is active when this function is turned on. The MMI can be connected to a Wi-Fi hotspot.



WARNING

Always follow the information found in ⇨  in *General information on page 187*.



Note

Always follow the information found in ⇨  in *General information on page 187*.

Wi-Fi hotspot

Applies to: vehicles with Wi-Fi hotspot

Requirement: the ignition must be turned on.

- Applies to MMI: Select on the home screen: **SETTINGS > Connection settings**.

Depending on the country and the vehicle equipment, the following functions may be available: ►

Wi-Fi hotspot

When the function is turned on, the MMI's Wi-Fi hotspot is active and Wi-Fi devices can be connected to the hotspot.

Wi-Fi hotspot settings

The Wi-Fi connection between the MMI and your Wi-Fi device is encrypted. You can change the following information if needed.

- **Access point (SSID):** name of the Wi-Fi hotspot.
- **Password:** an initial password was set at the factory in the MMI. Audi recommends changing the initial password. Only use secure passwords that conform to the general guidelines for secure passwords. Follow the system instructions.

Allow data connection through Wi-Fi

When the function is turned on, mobile devices can use the Internet connection through the Wi-Fi hotspot. Depending on the country, data packets may be required to do this.

WARNING

Always follow the information found in ⇨  in *General information on page 187*.

Note

Always follow the information found in ⇨  in *General information on page 187*.

Tips

The *name of the Wi-Fi hotspot* and the *Bluetooth name* are automatically compared when there are changes.

Data plans¹⁾

Applies to: vehicles with Audi connect

Data plans must be purchased in order to use certain services ⇨  in *General information on page 187*.

You can purchase data plans at my.audi.com.

WARNING

Always follow the information found in ⇨  in *General information on page 187*.

Note

Always follow the information found in ⇨  in *General information on page 187*.

Tips

- Depending on the country, you may be able to use the myAudi app or my.audi.com.
- Depending on the country, there may be restrictions on the use of data plans (such as mobile phone service providers) when driving in other countries.
- If selling your vehicle, you should delete the vehicle from the customer portal for the mobile phone service provider to avoid being charged for additional purchases.

Troubleshooting

Applies to: vehicles with Audi connect Infotainment

The information that follows lists some troubleshooting options. They depend on vehicle equipment. ►

¹⁾ Not available in every market.

Problem	Solution
Audi connect Infotainment services: individual Audi connect Infotainment services are grayed out or not available.	Some Audi connect Infotainment services must be activated or configured through your personal myAudi account before using them for the first time. You can find detailed information online at my.audi.com .
Wi-Fi hotspot: it is not possible to connect through Wi-Fi.	Check if Wi-Fi hotspot is activated in the MMI ⇨ <i>page 191</i> . Delete all existing Wi-Fi connections on your mobile device and restart it.

Emergency call

Overview

Applies to: vehicles with emergency call function

An emergency call is a combination of data transmission and a phone call. Your vehicle uses data transmission to forward important information, such as the vehicle and position data, to an emergency call center.

Depending on the country and the vehicle equipment, the following functions may be available:

With the **emergency call**, you can call for help in dangerous situations as quickly as possible. Use this function when emergency help is needed ⇒ *page 194*.

– Audi connect emergency call (TPS emergency call). This eCall system uses third party emergency call centers, and if necessary, public emergency call centers.

With **online roadside assistance**, you can request assistance if there is a breakdown or a minor accident ⇒ *page 195*.



WARNING

In areas with poor GPS reception or outside the coverage range of the respective mobile phone service provider, some functions and/or services may not be available, it may not be possible to send or receive data, or functionality may be limited.



Tips

To see which data can be transmitted, visit your Audi country or sales region website at www.audi.com.

Emergency call

Operation

Applies to: vehicles with emergency call function

The services are provided through a SIM card installed in the vehicle. Services are provided assuming that the mobile phone network required for the installed SIM card is functioning and available for use.

TPS emergency calls are only available within the mobile network coverage area of the mobile phone service provider selected by Audi.



Tips

- The emergency call function cannot be deactivated in the Infotainment system settings.
- The availability of the TPS emergency call is limited to certain times.
- The costs for call and data connections for TPS emergency calls is included in the price of the services.

Functions

Applies to: vehicles with emergency call function

A TPS emergency call can be made manually or automatically ⇒ *page 194*.

In the event that an automatic TPS emergency call is made, emergency responders as well as the local emergency call center or police station may receive the necessary information in order for help to arrive as quickly as possible.

Making an emergency call

Applies to: vehicles with emergency call function

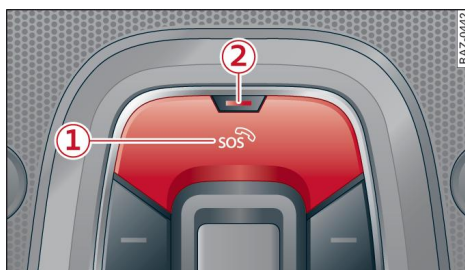


Fig. 140 Front headliner: cover for the emergency call button

Manual emergency call

Requirement: the ignition must be turned on.

- ▶ Tap the cover ① to open it.
- ▶ Press and hold the emergency call button until the LED ② blinks. The emergency call will be made.
- ▶ If the emergency call button is pressed by mistake, then press it again immediately and hold ▶

it until the LED stays on. The emergency call will be canceled.

Automatic emergency call

The vehicle electrical system initiates an automatic emergency call under certain circumstances, for example if an airbag deploys. The LED in the emergency call button  will blink. The emergency call will be made. The emergency call cannot be canceled.

LED status

- **Green** – The emergency call function is available.
- **Red** – There is a malfunction in the emergency call function. Contact an authorized Audi dealer or authorized Audi Service Facility. Note the messages about the availability of the emergency function ⇨ *page 195*.
- **Off** – The emergency call function is not available, perhaps because no network is available.

Warnings

If there is a critical system failure in the emergency call systems, the vehicle occupants will receive the following warning: see ⇨ *page 195, LED status* and ⇨ *page 195, Messages*.

Tips

If the emergency call ends due to a poor connection, then the system will automatically try to connect again.

Sending the phone number during an emergency call

Applies to: vehicles with TPS emergency call function

In case of an emergency call, your phone number¹⁾ can be sent to a public emergency call center or police station to ensure help arrives as quickly as possible.

Turning on the function

Applies to: MMI

- ▶ Select on the home screen: **PHONE** > .
- ▶ Turn on the **Send phone number during an emergency call** function.

Messages

Applies to: vehicles with emergency call function

Emergency call function: malfunction! Limited availability. Contact Service

If this indicator light turns on and this message appears, the emergency call function is restricted. For example, you cannot call the emergency call center, but data may still be transmitted under certain circumstances. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Emergency call function: malfunction! Function unavailable. Please contact Service

If this indicator light turns on and this message appears, you cannot make an emergency call. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Online roadside assistance

Description

Applies to: vehicles with online roadside assistance

An online roadside assistance call²⁾ is a combination of data transmission and a phone call. The data transmission from your vehicle forwards important information to the Audi service center, such as the vehicle and position data.

¹⁾ Compatibility cannot be guaranteed for all types of phones/SIM cards. Because of this, it may not always be possible to read out the phone number. The display will not indicate if there is a compatibility issue.

²⁾ The availability of the services offered depends on the country and may change in the future.

Calling online roadside assistance

Applies to: vehicles with online roadside assistance

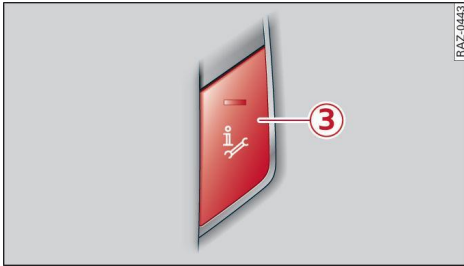


Fig. 141 Front headliner: online roadside assistance button

Calling online roadside assistance

- ▶ Press the button ③. The LED in the button turns red. The online roadside assistance call will be made.
- ▶ If you press the button ③ by mistake, then press it again.

Audi incident assistance

A minor accident may be detected by the vehicle electrical system. You are able to select between online roadside assistance and an emergency call in the MMI.

Tips

If the roadside assistance call is canceled due to a poor connection, then the call must be made again.

Navigation

Opening navigation

Applies to: vehicles with navigation system

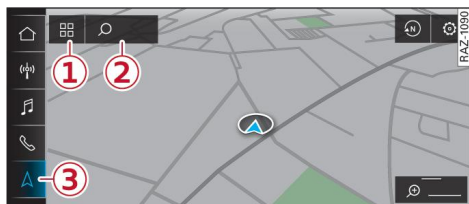


Fig. 142 Route guidance not started

The navigation system directs you to your destination, around traffic incidents, and on alternative routes, if desired.

Opening navigation

- Applies to: MMI: Press **NAVIGATION** on the home screen.

After accessing the navigation for the first time, the map is displayed.

Opening navigation using the multifunction steering wheel

- Select the Navigation tab in the instrument cluster.
- To display navigation when route guidance has started, select in the instrument cluster: the button > **Map**.

The following functions are available in the MMI:

- ① Select destination ⇒ *page 199*.
- ② Searching for navigation destinations ⇒ *page 198*.
- ③ **Switch between the map and the menu:** press repeatedly until the desired function is displayed.

You can find additional information about the map update at ⇒ *page 202, Map operation*.

WARNING

- The demands of traffic require full attention of all road users. Always read the chapter ⇒ *page 23, Information about traffic safety*.
- The route calculated by the navigation system is a driving recommendation. Follow

the traffic regulations that are applicable in the country where you are operating the vehicle. In the event that the driving directions contradict traffic regulations, always follow the traffic regulations applicable in the country where you are operating the vehicle to reduce the risk of an accident.

Note

Read the information about Audi connect, especially regarding connectivity costs ⇒ in *General information on page 187*.

Tips

- Snow and objects on the GPS antenna or trees and large buildings can impair satellite reception and affect the system's ability to determine the vehicle position. Several deactivated or malfunctioning satellites can interrupt GPS reception.
- Because street names sometimes change, the names stored in the MMI may in rare cases differ from the actual street name.
- Applies to: multifunction steering wheel: Depending on the selected function, operation through the MMI may be required.
- Applies to: vehicles with Audi connect Infotainment: Depending on the country and vehicle equipment, additional services may be available.
- An additional indicator will appear in the head-up display*.

myAudi navigation

Applies to: vehicles with myAudi navigation

MMI navigation works seamlessly with the myAudi app.

Your destinations (favorites, last destinations) are synchronized through your myAudi account. All important destinations can be displayed in the vehicle and in the myAudi app.

To load destinations in the vehicle automatically, Audi recommends logging into the vehicle with a myAudi user ⇒ *page 33*.

myAudi navigation functions:

- You can send destinations and routes from the myAudi app to the vehicle ⇒ *page 200*.
- Active route guidance in the myAudi app can be continued in the MMI.
- Depending on the situation, it may be possible to continue active route guidance from the MMI in the myAudi app to continue navigating to the destination after leaving the vehicle.

Tips

- All services/apps can be modified, activated/deactivated, renamed, and enhanced without further notification.
- Depending on the country and model there may be an app other than the “myAudi app” available for your vehicle. For additional information, see my.audi.com.

Entering a destination

Searching for navigation destinations

Applies to: vehicles with navigation system

Different search options will be available depending on the country and vehicle equipment:

Using the online search option, you can use the results from a search engine provider to find a navigation destination.

Using the hybrid search option, you can enter the data for a navigation destination in any order all at once (for example, 5th Avenue New York). Likewise, you can search for points of interest or contacts in order to navigate to the desired destination.

Opening a menu

- ▶ Applies to: MMI: Select on the home screen: **NAVIGATION** > .

Online search¹⁾

Applies to: vehicles with navigation system and online search

Requirement: the MMI must be connected to the Internet ⇒ *page 187, Audi connect*.

- ▶ Enter one or more search terms into the input field.
- ▶ The search engine provider shows suggestions  to narrow down the search.
- ▶ Press on suggestions, if available, until the desired destination appears in the results list. If necessary, use one finger to swipe upward or downward until the suggestions  or destinations  appear.
- ▶ Press on the desired destination . Route guidance will start.
- ▶ To open the **Details** ⇒ *page 200* menu, press .

Hybrid search

If the **G** symbol is displayed in color in the MMI, then the hybrid search is turned off.

- ▶ To turn on the hybrid search, press the colored **G** symbol.

Requirement: hybrid search is turned on.

- ▶ Enter one or more search terms into the input field ⇒ *page 27, Text input*.
- ▶ Press on the desired destination in the results list. Route guidance will start.
- ▶ To open the **Details** ⇒ *page 200* menu, press .

Online Points of Interest

- ▶ **Searching for points of interest:** enter the name of a POI.
- ▶ Select: *a symbol for a POI category* (such as  > *a POI*, or
- ▶ To display all categories and search for a POI, select:  > *a category* (such as restaurants) > *a POI*.

Change search area

Requirement: route guidance must be active.

- ▶ Applies to: MMI: Select on the home screen: **NAVIGATION** > .
- ▶ To change the search area, press  /  /  repeatedly until the desired search area is selected. ▶

¹⁾ Audi provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.

Tips

- The MMI input suggestions depend on the last navigated destinations.
- The navigation system always searches for the fastest route. You can have alternative routes displayed if necessary ⇒ *page 204*.
- If the destination cannot be found, it may not be stored in the navigation database. Check the spelling of the term that was searched or check the search area ⇒ *page 198*.
- Distances to points of interest are displayed as a straight-line distance from your current location. The actual distance from your current location to the point of interest is updated automatically. The list of points of interest that were found is not resorted when this happens.

Select destination

Applies to: vehicles with navigation system

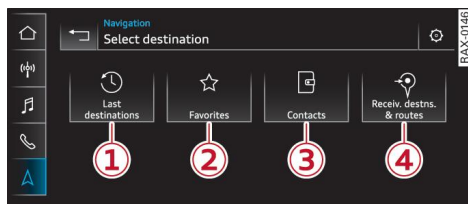


Fig. 143 Menu: select destination

Opening a menu

- Applies to: MMI: Press **NAVIGATION** on the home screen.
- If the map is displayed, press  ① ⇒ *page 197*, *fig. 142*.

The following functions are available:

- | | |
|---|-----|
| ① Last destinations | 199 |
| ② Favorites | 199 |
| ③ Contacts | 199 |
| ④ Received destinations and routes . | 200 |

Loading previous destinations

Applies to: vehicles with navigation system

Your last destinations and routes can be loaded as a navigation destination.

As soon as you start route guidance, the destination is automatically saved in the last destinations. Your previous destinations are marked with the  symbol.

If you use myAudi navigation, your previous destinations will be synchronized with your myAudi account ⇒ *page 197*.

Accessing previous destinations

- Applies to: MMI: Select on the home screen: **NAVIGATION** >  > **Last destinations** > *select a destination* > **Start**.
- Select in the instrument cluster: Navigation tab >  button > **Last destinations** > *a destination*.

Deleting previous destinations

- Applies to: MMI: Select on the home screen: **NAVIGATION** >  > **Last destinations** >  > *select one or more entries* or **Select all** > **Delete** > **(Done)**.

Tips

The last route will be automatically deleted from the list if you start a new route guidance after canceling the route.

Setting a favorite as the destination

Applies to: vehicles with navigation system

In the favorites, you can call up frequently-used destinations as well as your home/business address.

Requirement: a favorite must be stored
⇒ *page 204*.

- Applies to: MMI: Select on the home screen: **NAVIGATION** >  > **Favorites** > *select a destination*.
- Select in the instrument cluster: Navigation tab >  button > **Favorites** > *a destination*.

Selecting contacts as destinations

Applies to: vehicles with navigation system

You can navigate to contacts.

Requirement: a contact must have an address stored.

- Applies to: MMI: Select on the home screen: **NAVIGATION** > (📍) > **Contacts** > a contact.
- Press on the address for a contact.
- Press on a suggested address. The **Details** menu will be displayed.

Tips

- If a contact is grayed out, there is no address stored for that contact.
- Navigation to geographical coordinates for a contact is not possible.

Loading received destinations and routes

Applies to: vehicles with myAudi navigation

You can search for destinations or routes in the myAudi app and send to the vehicle.

Requirement: the MMI and the mobile device must be connected to the Internet ⇨ [page 187](#), *Audi connect*. You must have the myAudi app installed on your mobile device.

- Send a destination or route in the myAudi app to the vehicle.
- Applies to: MMI: Select on the home screen: **NAVIGATION** > (📍) > **Received destinations and routes**.
- Make sure you are logged into the vehicle and the myAudi app with the same myAudi account. The received destination and routes will be loaded automatically.
- **Navigating to a destination:** press on a destination.
- **Deleting destinations:** select:  > one or more entries or **Select all** > **Delete** > **(Done)**.

Tips

- All services/apps can be modified, activated/deactivated, renamed, and enhanced without further notification.
- Depending on the country and model there may be an app other than the “myAudi app” available for your vehicle. For additional information, see my.audi.com.

Destination details

Applies to: vehicles with navigation system

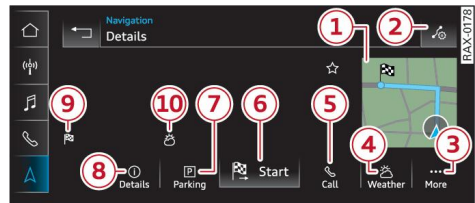


Fig. 144 Details

The functions depend on the vehicle equipment and the selected destination.

- 1 **Map preview:** to zoom in on the map preview, press on the map.
- 2 **Route criteria:** see ⇨ [page 208](#).
- 3 **More:** additional functions.
- 4 **Weather:** Requirement: the MMI must be connected to the Internet ⇨ [page 187](#), *Audi connect*. Also see ⇨ [page 189](#).
- 5 **Call:** Requirement: a mobile device must be connected to the MMI ⇨ [page 175](#). You will make a call to the phone number that is stored for the destination.
- 6 **Start:** starts navigation to the displayed destination. The map will be displayed ⇨ [page 202](#).
- 7 **Parking:** press **Parking** to search for a parking space at the destination. You can use the parking space as a destination or stopover.
- 8 **Details:** Requirement: the MMI must be connected to the Internet ⇨ [page 187](#), *Audi connect*.
- 9 **Display of distance/driving time to the destination**
- 10 **Weather at the destination:** Requirement: the MMI must be connected to the Internet ⇨ [page 187](#), *Audi connect*.

Selecting a destination from the map

Applies to: vehicles with navigation system

A point on the map can be used as the destination.

Opening the map

- Applies to: MMI: Press **NAVIGATION** on the home screen.
- If necessary, press Δ to display the map.

Adjusting the scale

- Select: $\oplus/\otimes$ > *select a scale*.

Marking the destination

- Press and hold a point on the map until a marking appears or the address for the selected destination is shown.

Selecting map content (such as POIs) as the destination

Requirement: map content must be displayed
⇒ *page 207*.

- Press on map content on the map (for example, .

Selecting the destination

- Select:  > **Start**.

Stopovers and route plan

Applies to: vehicles with navigation system

You can enter additional destinations during active route guidance.

Entering a stopover

Requirement: route guidance must be active.

- Enter a destination ⇒ *page 198*.

Displaying stopovers or the route plan

All destinations are listed in the route plan.

- Press on  in the side menu on the map
⇒ *page 201, fig. 145*.

Editing stopovers

- Press on  in the side menu on the map
⇒ *page 201, fig. 145*.
- **Adding a stopover:** Select: **Add destination** > *select a destination* > **Add to route**.
- **Moving a stopover:** press . Touch the $\blacklozenge$ symbol and move the entry to the desired position. Press **Done**.

- **Deleting a stopover:** Select:  > *one or more entries* or **Select all** > **Delete** > **(Done)**.

Stopping route guidance

Applies to: vehicles with navigation system

Requirement: route guidance must be active and the map must be displayed.

- Applies to: MMI: Press  ⇒ *page 201, fig. 145*.
- Select in the instrument cluster: Navigation tab >  button > **Cancel route guidance**.

Map

Map functions

Applies to: vehicles with navigation system



Fig. 145 Active route guidance

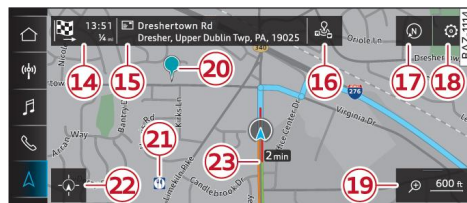


Fig. 146 Marked map object

Opening the map

- Applies to: MMI: Press **NAVIGATION** on the home screen.
- If necessary, press Δ to display the map.

The following list gives an overview of the information displayed on the map. Press on any function (for example, alternative routes) to show additional options.

- ① Select destination ⇒ *page 199*
- ② Entering a destination ⇒ *page 198*
- ③ Cancel route guidance ⇒ *page 201*
- ④ Current route
- ⑤ Request spoken prompt

- ⑥ Alternative routes ⇒ *page 204*
- ⑦ Display active destinations, stopovers, or route plan ⇒ *page 201*. The distance to the next destination in the route plan including the calculated arrival time is displayed
- ⑧ Traffic information online ⇒ *page 206*
- ⑨ Altitude
- ⑩ Displays the maximum permitted speed¹⁾: within city limits, on expressways, and on highways
- ⑪ Current vehicle position
- ⑫ Route information ⇒ *page 208*
- ⑬ Name of the street on which you are driving
- ⑭ Start route guidance for a marked destination ⇒ *page 200, Selecting a destination from the map*
- ⑮ Display details for the destination ⇒ *page 200*
- ⑯ Search nearby ⇒ *page 198*
- ⑰ Adjust the map orientation. See also ⇒ *page 207*
- ⑱ Settings ⇒ *page 207*
- ⑲ Adjust the scale. Press the magnifying glass to turn automatic zoom ⇒ *page 207* on the map on or off. The  symbol appears when this function is turned on
- ⑳ Marked destination ⇒ *page 200, Selecting a destination from the map*
- ㉑ Map contents (points of interest, favorites). When there are multiple map contents in the immediate vicinity, the symbols are shown stacked on the map. To display a list of individual symbols, press  ⇒ *fig. 146*. Press on a POI in the list
- ㉒ Center the map to the current vehicle position
- ㉓ Traffic incidents and display of estimated losses of time on the route
 - **Green:** traffic is flowing freely.
 - **Orange:** stop-and-go traffic
 - **Red:** traffic jam or traffic obstructions.

Additional possible symbols on the map

Symbol	Description
	Home address ⇒ <i>page 204, Favorites</i>
	Business address ⇒ <i>page 204, Favorites</i>
	Favorites ⇒ <i>page 204</i>
	Previous destinations display

Traffic information

- **Colored warning symbols:** traffic incidents ahead that are on your route.
- **Grayed out warning symbols:** traffic incidents that are not on your route.
- All traffic incidents will display in color when route guidance is inactive.
- **Warning symbols with arrow:** traffic incident that you have been routed around, for example .

Map operation

Applies to: vehicles with navigation system

You can operate the map ⇒ *page 201, fig. 145* with the movements described in the following information.

Moving the map

- Drag your finger across the map in the desired direction.

Moving the map quickly

- Swipe your finger across the map in the desired direction and lift your finger off the map.

Zooming in on the map

- Place two fingers on the map and pull your fingers apart, or
- Double-tap on the map with one finger.

Zooming out on the map

- Place two fingers on the map and pull your fingers together, or
- Double-tap on the map with two fingers. ►

¹⁾ Applies to vehicles without camera-based traffic sign recognition.

Rotating the map

- Rotate the map using two fingers.

Tilting the map

- Drag upward or downward with two fingers.

Tips

Certain gestures may not be available on all touch displays or in every menu.

Navigation view with route guidance started

Applies to: vehicles with navigation system and Audi virtual cockpit

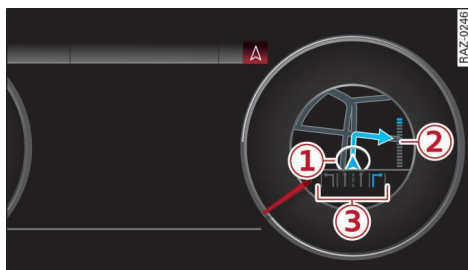


Fig. 147 Instrument cluster: default view: turning maneuver when route guidance has started

Requirement: route guidance must be on
⇒ page 198.

The following information will be displayed in the driver information system, if available:

- ① Current vehicle position
- ② A bar graph appears when there is an upcoming turn. The fewer the bars that are shown, the shorter the distance is until the turn. If there is no upcoming turn immediately ahead, the distance to the destination or stopover, the calculated arrival time, and a direction arrow for the upcoming maneuver will be displayed in the right speedometer. If there is no upcoming maneuver, the distance to the next maneuver will be displayed.
- ③ Lane recommendation

Predictive route guidance

Applies to: vehicles with navigation system and predictive route guidance

Your MMI can learn the routes that you drive frequently (such as your daily commute to work and back) and suggest route guidance based on the current vehicle position.

When the function is turned on, the MMI records the routes driven regardless of whether or not you are using navigation.

Without starting route guidance, your MMI can check the traffic conditions and show possible traffic incidents for the possible routes to be driven.

Opening personal routes

Requirement: predictive route guidance is turned on ⇒ page 208. Route guidance must not be active. A notification is displayed.

- The MMI displays up to three suggestions.
Press on a suggestion. Route guidance will start.

Better routes

If there are major traffic incidents, the MMI will display a notification regardless of the selected menu. If the MMI has calculated a better route, you can select it as the route.

- Press on the notification.

As soon as you turn off predictive route guidance, your personal routes will no longer be recorded. Routes that were already stored will remain stored.

Deleting personal routes

- Applies to: MMI: Select on the home screen:
NAVIGATION >  > **Predictive route guidance**
> **Delete recordings from the last 24 hours** or
Delete all personal routes and destinations.

Tips

If the predictive route guidance is turned off and you press , the predictive route guidance settings will be displayed ⇒ page 208.

Alternative routes

Applies to: vehicles with navigation system

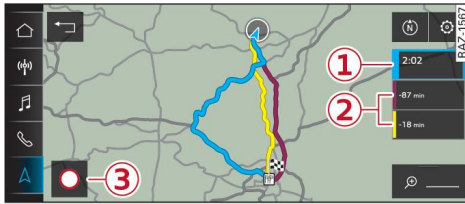


Fig. 148 Alternative routes in the overview map

Opening alternative routes

Requirement: route guidance must be started
⇒ page 198 and the map must be displayed
⇒ page 202.

- Press on  in the side menu on the map
⇒ page 201, fig. 145.

① Current route

The distance to the destination and the calculated arrival time will be displayed for the current route.

② Alternative route

The difference in travel time compared to the selected route will be displayed.

③ Block route

You can block the current route for a certain distance starting from the vehicle position, for example to drive around upcoming streets or tunnel closures. The navigation system automatically calculates an alternative route and the length of the blocked route. The route to be avoided that you have entered applies only to the current route and must be set again, if needed. The areas you have selected to avoid will appear with red and white shading on the map.

- **Block route:** press ③ ⇒ fig. 148.
- **Cancel route block:** press .

Displaying alternative routes in the foreground

- Press ① in the corresponding information window, or

- Press and hold the information window for the corresponding alternative route (for example, ② ⇒ fig. 148).

Select route

- Press on the information window for the corresponding route (for example ②).

Additional functions

Favorites

Applies to: vehicles with navigation system

In the favorites, you can call up frequently-used destinations as well as your home/business address.

Accessing favorites

- Applies to: MMI: Select on the home screen: **NAVIGATION** >  > **Favorites**.

If you use myAudi navigation, your favorites will be synchronized with your myAudi account
⇒ page 197.

Storing favorites

- Press  in the **Details** menu ⇒ page 200, fig. 144.

Storing a home address or business address

- Press **Home address** or **Business address**.
When accessed for the first time, you will be prompted to set the address.
- Select: **Create now** > *enter a destination* > **OK**.

Editing a home address or business address

Requirement: the favorites list must be displayed. Your home address or business address must be stored.

- Press **Home address** or **Business address** until the **Options** menu is displayed.
- Select: **Change address** > *enter a destination* > (**Set as destination**) or (**Add to address**) > **OK**.

Editing favorites

Requirement: the favorites list must be displayed.

- **Setting a favorite as a destination:** press on a favorite. ►

- **Deleting favorites:** in the **Details** menu, press ★ ⇒ *page 200, fig. 144*, or select:  > *one or more entries* or **Select all** > **Delete** > **(Done)**.
- **Moving a favorite:** press . Touch the  symbol and move the entry to the desired position. Press **Done**.

Tips

- After deleting the home address or business address, only the address is deleted and the entry will still be displayed in the favorites.
- Please note when moving favorites that items 1 and 2 are reserved for the home address and business address.

On-street parking

Applies to: vehicles with navigation system and on-street parking

In supported areas, you can display parking along the route.

Requirement: the **Parking** notification must be turned on ⇒ *page 26, Notification center*. The MMI must be connected to the Internet ⇒ *page 187, Audi connect*. Route guidance must be active, you must be close to your destination, and a notification must be displayed or an item on the map must be marked.

- Press on the notification, or
- Press  on the map.
- To navigate to a parking: space, press on a colored marking on the map.
- Select:  > **Start**.

Depending on availability, colored markings on the map indicate the probability of open parking spaces.

Color	Description
Green	High probability
Orange	Medium probability
Red	Low probability

Satellite map

Applies to: vehicles with navigation system and satellite map

You can display the navigation map with satellite images.

Requirement: the MMI must be connected to the Internet ⇒ *page 187, Audi connect*.

- Applies to: MMI: Select on the home screen: **NAVIGATION** >  > **Map settings** > **Satellite map**¹⁾.

The map view is based on data packets received from the Internet in the form of satellite images, which are then combined with the roadways from the ⇒ *page 201, fig. 145* standard map view.

Tips

- The satellite map¹⁾ is updated regularly whenever the function is opened. The process may take several seconds.
- Depending on the Internet connection, the standard map may also be displayed when the satellite map is turned on¹⁾.

Map update

Introduction

Applies to: vehicles with navigation system

You can update the map data in the MMI with a map update. The functions depend on the country and vehicle equipment.

- Map update using the **Online map update** ⇒ *page 205*.
- Import a map update from the **USB connection** to your MMI ⇒ *page 206*.

Online map update

Applies to: vehicles with online map update

You can update the map content for the navigation system in your vehicle using the online map update function. ►

¹⁾ Audi provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.

The MMI determines regions based on the vehicle position. Based on this, update data for these regions are available for your MMI.

Starting the update

Requirement: the MMI must be connected to the Internet ⇒ *page 187, Audi connect*.

- Applies to: MMI: To allow automatic online map updates, select on the home screen: **SETTINGS** > **System maintenance** > **Automatic online map update**. The MMI starts the map update automatically in the background when new map material is available.

You can check the status of the download process and the installation in the notification center ⇒ *page 26*.

Note

Read the information about Audi connect, especially regarding connectivity costs ⇒  in *General information on page 187*.

Tips

Because of the high volume of data, Audi recommends performing the map update using the USB connection ⇒ *page 206*.

Map update using the USB connection

Applies to: vehicle with map updates using the USB connection

With the map update, you can update the map material in your navigation system.

Requirement: you must have created a myAudi account at my.audi.com. Your vehicle must be registered in your myAudi account.

Downloading updates

- Download the map update at my.audi.com and store it on a USB flash drive. For additional information, visit my.audi.com.

Installing updates

- Connect the USB flash drive to the USB port with charging function ⇒ *page 218*.
- Open the notification in the notification center on ⇒ *page 26* and press on the notification.

- Press **Next**. The status of the installation is shown in the display.

Traffic information

Introduction

Applies to: vehicles with navigation system and traffic information online

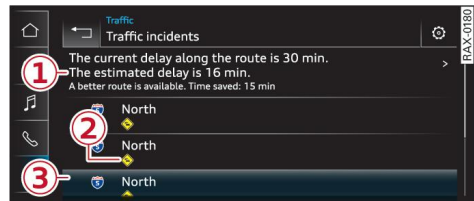


Fig. 149 Traffic information overview

Open traffic information

Requirement: the map must be displayed
⇒ *page 202*.

- Press on the traffic jam symbol in the side menu on the map ⇒ *page 201, fig. 145*.

Display traffic report details

- Press on the traffic report ①.
- To display the previous or next traffic report, press ← or →.

The following information can be displayed:

- ① A message will appear if the MMI calculates a better route for the current route guidance. The predicted delay takes into account future changes to the traffic situation on the route. Press on an item in a list ① and select the better route. More information can be found under ⇒ *page 204*.
- ② A traffic message is displayed. The distance to the hazardous area is calculated from the current vehicle position.
- ③ The traffic messages are only shown when route guidance is active. Press on a line to display details about it.

Tips

- Particularly critical traffic information, such as warnings about wrong-way drivers, is automatically displayed as a notification.

- Traffic information is not available in some countries.

Traffic rerouting

Applies to: vehicles with navigation system

By receiving traffic information, your MMI calculates a better route if available and the possible time saved compared to the current route.

Traffic rerouting

- Start route guidance.

The MMI uses a notification or a note in the traffic information ① ⇒ *page 206, fig. 149* to indicate a better route. You can decide which route you would like to use.

To select a better route, you have the following options:

- **Notification:** press . The better route will be used for route guidance, or press on the notification. Press on the information window for the better route (for example ② ⇒ *page 204, fig. 148*).
- **Note in the traffic information:** press on the list entry ① ⇒ *page 206, fig. 149*. Press on the information window for the better route (for example ② ⇒ *page 204, fig. 148*).

Traffic information online

Applies to: vehicles with navigation system and traffic information online

The MMI can receive real-time online traffic information about congestion, accidents, road construction, and other incidents.

Requirement: the MMI must be connected to the Internet ⇒ *page 187, Audi connect*. Traffic information must be turned on in the MMI ⇒ *page 207*.

Traffic information will be displayed on the standard map ⇒ *page 201, fig. 145*.

Depending on vehicle equipment, online traffic information may also be displayed on the satellite map ⇒ *page 205*.

Tips

- Having the **traffic information online** function turned on provides the most accurate reports of traffic situations and traffic forecasting. Your vehicle transmits and processes its anonymous, encrypted position information at regular intervals to the traffic data provider. You can turn off data transfer at any time ⇒ *page 302*.
- The **traffic information online** network is not available in all countries, and the coverage is not nationwide.

Settings

Applies to: vehicles with navigation system

You can adjust the navigation system settings in the instrument cluster and in the MMI display separately. The settings depend on the country and vehicle equipment.

Accessing settings

- Applies to: MMI: Select on the home screen: **NAVIGATION** > .

Accessing settings using the multifunction steering wheel

- Select in the instrument cluster: Navigation tab >  button.

A setting made using the multifunction steering wheel only applies to the instrument cluster map.

Map settings

Satellite map: see ⇒ *page 205*.

Traffic info: you can display current traffic information on the map.

- **Free flowing traffic**
- **Traffic obstructions**
- **Traffic information**

Map colors

- **Automatic:** the map display adapts to the lighting conditions (for example, by changing from day to night when driving through a tunnel).
- **Day or Night**

Map orientation

- **2D heading-up map/2D north-up map:** the current vehicle position is displayed. The map is oriented in the direction of travel or to the north.
- **3D heading up map:** the current vehicle position is shown on a three-dimensional map and is aligned to the direction of travel.
- **Overview:** the entire route from the vehicle position to the destination or the next stopover is displayed on the map. The map is oriented to the north.

Automatic zoom

- **On:** the map scale is adapted automatically depending on the type of road being traveled (expressway, highway, other roads) so that you always have an optimal overview of the road ahead. When route guidance is active, the scale is adjusted automatically for a better detailed view when there are upcoming maneuvers.
- **Intersection:** when route guidance is active, the scale is adjusted automatically for a better detailed view when there are upcoming maneuvers.
- **Off**

MMI map contents/Map content: you can turn the display of additional information (such as POIs) on the map in the center display on or off.

Voice guidance

Voice guidance: with the **Traffic info** setting, the MMI will only give prompts if there are traffic incidents on your route.

Voice guidance during phone call

Entertainment fader during navigation: the audio playback volume is temporarily lowered when navigation prompts are active.

Route criteria

You can adjust which route criteria should be allowed or avoided for the route calculation.

HOV/carpool lanes

Highways

Toll roads

Ferries

Route information

When this function is turned on and route guidance is active, route information ⇨ *page 201, fig. 145* is displayed. The next maneuver will be displayed at the bottom. POIs and traffic information will also be displayed. Press route information to display a preview of the next maneuver on the map. You can turn the following information on or off in route information.

- **Points of interest along the route**
- **Traffic information along the route**

Use hybrid search as the default

When this function is turned on, the hybrid search will be used as the default for the destination search.

Predictive route guidance

The predictive route guidance is turned off when the vehicle is delivered from the factory.

Your trips are recorded and destinations are suggested by the MMI when this function is turned on ⇨ *page 203*.

Presentation mode

In presentation mode, the system simulates driving on the display along the planned route without the vehicle actually moving. You can use

Specify starting point when you would like to calculate a route starting from a location other than the current vehicle position, for example.

Simulating route guidance: start route guidance and press presentation mode.



Tips

You can change the volume of navigation announcements while one is playing ⇨ *page 32*.

Radio

General information

Selecting the radio



Fig. 150 Center display: FM station list

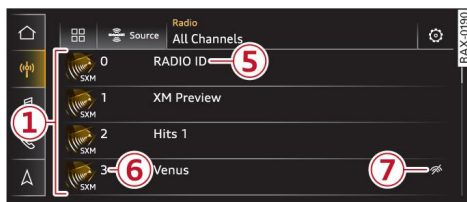


Fig. 151 Center display: SiriusXM station list

Depending on the vehicle equipment, the radio may support the FM, AM, and SiriusXM (satellite radio) frequency bands. Using the HD Radio receiver* also allows you to receive radio stations on the FM and AM bands in digital format.

Depending on the vehicle equipment and the selected station list, the following information will be displayed:

① Station list

Shows the stations that are currently available. The station list updates automatically.

② Stations

For example, the station name may be displayed depending on availability.

③ HD Radio technology

FM/AM stations that can be received by digital radio are marked with the HD Radio technology symbol .

If reception quality declines, the radio automatically switches to the analog FM/AM station depending on availability.

④ Additional audio programs

Digital HD Radio stations may contain multiple additional audio programs. If you lose reception, the additional audio programs will

be muted since they can no longer be received.

⑤ Radio ID

Your radio ID and contact data for your satellite radio provider are displayed.

⑥ Channel number

⑦ No reception

The station cannot be received.

In addition to the symbols for the usual frequency bands, the following information may also be available depending on vehicle equipment:

Symbol	Description
	The station provides information in the background for an online station alternative. Online station tracking must be turned on for this ⇒ page 215 .
	The station is received through the Internet.
	The system attempts to receive the station/podcast through the Internet.

Tips

- Contact the SiriusXM* provider if you would like to receive satellite programming.
- Buildings, tunnels, bridges, open areas, other vehicles, or objects on the vehicle roof can affect reception.
- Satellite radio* is not available in all regions.

Adjusting the radio using the MMI

- **Applies to:** MMI: To set a frequency band, select on the home screen: **RADIO > Source a category**.
- **Applies to:** MMI: To set a station, select on the home screen: **RADIO > Source > a category > a station/podcast***.
- To select a frequency, follow the instructions under ⇒ [page 211](#), *Free text search*.

Adjusting the radio using the multifunction steering wheel

Requirement: radio mode must be on. ►

- ▶ Select the radio/media tab in the instrument cluster.
- ▶ Press the  button to toggle between the radio and media or to select a different source.
- ▶ To select a station or a source, turn and press the left thumbwheel.

 **Tips**

Applies to: multifunction steering wheel: Depending on the selected function, operation through the MMI may be required.

Radio functions

Overview

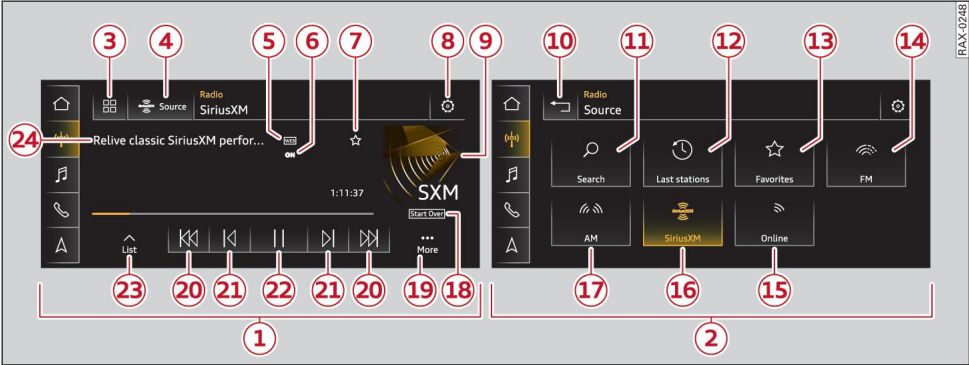


Fig. 152 Center display: left side: playback view of radio functions, right side: sources

Operating

- ▶ Applies to: MMI: To open the playback view **①**, select on the home screen: **RADIO > Source > a category > a station/podcast***.
- ▶ Applies to: MMI: To open the sources **②**, select on the home screen: **RADIO > Source**.

The following functions may be available depending on the selected radio station/podcast* and the vehicle equipment:

	Symbol/Description	Description
③		Displaying categories in a frequency band.
④	Source	Displays sources in the Radio menu.
⑤	Frequency band	Shows the current station frequency band.
⑥	ON	Indicates that on demand content is playing. The MMI must be connected to the Internet for this.
⑦		Presets ⇒ page 212 .
⑧		Settings ⇒ page 214 .
⑨	Station logo	Depending on availability, you can switch between the image views: press on the station logo. Use one finger to swipe to the right or left to switch between the Station logo and Cover art (album cover). Also see ⇒ page 215 , Online additional data .
⑩		Go back one level.
⑪	Search	See ⇒ page 211 .
⑫	Last stations	See ⇒ page 211 .

	Symbol/Description	Description
13	Presets	See ⇨ <i>page 212</i> .
14	FM	Displays stations from the FM frequency band.
15	Online	See ⇨ <i>page 213</i> .
16	SiriusXM	Displays stations from the SiriusXM frequency band. Combines SiriusXM Live channels and on demand content, depending on vehicle equipment.
17	AM	Displays stations from the AM frequency band.
18	Start over	Go to the beginning of the broadcast.
	Related	Channels, artists, and shows related to the content that is currently playing.
	Subscribe	Log in to be able to play the content.
	Switch to WEB	Switch manually to Internet reception.
	Switch to SAT	Switch manually to satellite reception.
19	More	Access options for the current station ⇨ <i>page 214</i> .
20	⏮/⏭	Selecting the previous or next track: press ⏮ or ⏭. Going to the beginning of the recording: press and hold ⏮. Going to the live program: press and hold ⏭. The LIVE symbol will be displayed.
21	⏮/⏭	Select the previous/next station.
22	▶/	Start or stop playback
	🔊/🔇	Unmutes or mutes playback.
23	List	The station list is displayed ⇨ <i>page 209</i> .
24	Info section	Depending on availability, the station name as well as program information, for example, may be displayed. Also see ⇨ <i>page 215</i> , Online additional data .

! Note

Read the information about Audi connect, especially regarding connectivity costs ⇨ ! in *General information on page 187*.

i Tips

Not all functions are available in every source and on every touch display.

Free text search

Using intelligent search, you can search for station names, frequencies, program types (such as **News**), podcasts*, or online radio stations*.

Opening free text search

- Applies to: MMI: Select on the home screen: **RADIO > Source > Search**.

Entering search terms

You can enter multiple search terms at once in any order.

The following information may be available:

Symbol	Description
🕒	Results from the list: Last stations
☆	Results from the list: Presets
(Ⓛ)	Results from a Station list
For example, FM	Station frequency band

Last stations

You can listen to the last stations that were played in all frequency bands. ►

Accessing last stations

- Applies to: MMI: Select on the home screen: **RADIO > Source > Last stations.**

Listening to last stations

- Press on a station.

Deleting last stations

- Select:  > *select one or more stations* or **Select all > Delete > (Done).**

Presets

You can store your favorite stations from every frequency band in the presets list.

Applies to: SiriusXM: Channels, shows, and sports teams will be stored in the presets as Smart Favorites. After turning on the ignition and the MMI, the Smart Favorites store radio programs at a specific time.

Selecting presets using the MMI

- Applies to: MMI: Select on the home screen: **RADIO > Source > Presets > a preset.**

Storing presets

- Press on   in the playback view
⇒ *page 210, fig. 152.*

Requirement: a list with radio stations must be displayed ⇒ *page 209, fig. 150.*

- Press and hold an entry in the list until the **Options** menu appears.
- Press **Store as preset.**

Editing presets

- **Deleting presets:** press  in the playback view, or
- In the presets list, select:  > *one or more stations* or **Select all > Delete > (Done).**

Requirement: the presets list must be displayed.

- **Moving a preset:** press .
- Touch the  symbol and move the entry to the desired position.
- Press **Done.**

Live Sports

Applies to: vehicles with SiriusXM

Using the Live Sports category, you can find live commentary about your favorite teams during a live sports broadcast. Depending on vehicle equipment, you may be able to turn commentary that favors a certain side on or off.

Accessing live games

- Applies to: MMI: Select on the home screen: **RADIO > Source > SiriusXM >  > Sports > Live Sports > a game.**

The score, the status of the game, and, if available, the current possession of the ball are displayed.

Saving/deleting a favorite team

- Press /★.

Turning commentary on or off

Requirement: the MMI must be connected to the Internet.

- Press / .

Radio text

Program information (such as general text information, artist, composer, song) is displayed in the radio text.

Requirement: the selected radio station must support the radio text function.

Opening radio text

- Applies to: MMI: Select on the home screen: **RADIO > select a frequency band (such as FM) > select a station > More > Radio text.**

Depending on vehicle equipment, the following functions may be available:

Displaying previous radio text entries

- Swipe downward with one finger. The last radio text entries are displayed if they are available.

Scrolling through radio text entries

- Swipe upward or downward with one finger. ►

Showing Radio Text Plus information

If a radio text entry is displayed with a color, a phone number or a navigation destination for the station is available as radio text plus information.

You have the following options:

Selecting the destination

- Select: *a navigation destination marked in color* > **Set as destination**.

Call

- Select: *a phone number marked in color* > **Call**.

Tips

A call to a phone number stored in the radio text will start immediately.

Online radio

General information

Applies to: vehicles with Audi connect Infotainment and online radio

You can listen to various radio stations or podcasts on the Internet using online radio.

Requirement: the MMI must be connected to the Internet ⇨ *page 187, Audi connect*. Depending on the country, a data package may also be required ⇨ *page 192*.

Accessing online radio through the MMI

- Applies to: MMI: Select on the home screen: **RADIO > Source > Online**.

The following functions are available:

Previous selection

The station/podcast list for the last station or podcast that was playing will be displayed.

Top stations

The favorite online radio stations are displayed.

Filter list

- Select:  > *(a category)* > *a station/podcast*.

Note

Read the information about Audi connect, especially regarding connectivity costs ⇨  in *General information on page 187*.

Tips

- Depending on the Internet connection and network traffic, the connection may be lost when online radio is playing.
- Online radio reception may not be possible if Internet service is throttled.
- Online radio usage depends on the availability of the service from the third party provider.
- The range and screen display of online radio services from third party providers in the vehicle may vary.
- Please note that it may not be possible to play some online radio stations in certain countries.
- Audi only provides access to online radio and does not assume any responsibility for the content of these services.

Podcasts

Applies to: vehicles with Audi connect Infotainment and online radio

Opening podcasts using the MMI

- Applies to: MMI: Select on the home screen: **RADIO > Source > Online > Podcasts**.

The following functions are available:

Listening to a podcast

- Select: *a podcast* > *a podcast episode*.

Search

- Press .

The following functions are available in the podcast playback view:

Displaying podcast episodes

- Press **List**.

Starting/stopping podcast playback

- Press  / **II**.

Previous/next podcast

- ▶ Press **K** / **N**.

Changing the playback position

- ▶ Move the slider into the desired position.

Displaying the online radio menu

- ▶ Press **⏏**.

Switching to radio

- ▶ Press **Source**. The sources in the Radio menu are displayed.

Podcast favorites

You can store podcasts in the podcast favorites.

Requirement: the playback view for a podcast must be displayed.

- ▶ Press **☆** **(7)** ⇒ *page 210, fig. 152*.

Requirement: a list with podcasts must be displayed.

- ▶ Press and hold an entry in the list until the **Options** menu appears.
- ▶ Press **Save podcast**.

Listening to podcast favorites

Requirement: the podcast favorites list must be displayed. At least one podcast favorite must be stored.

- ▶ Select: *a podcast* > *a podcast episode*.

Browsing through podcast favorites

Requirement: the podcast favorites list must be displayed. At least one podcast favorite must be stored.

- ▶ Press **<** or **>**.

Displaying all podcast favorites

Requirement: the podcast favorites list must be displayed. At least one podcast favorite must be stored.

- ▶ Press **All**.

Editing podcast favorites

- ▶ **Deleting podcast favorites:** press **★** in the playback view, or

- ▶ In the podcast favorites list, select: **All** > **✎** > *one or more podcasts*, or **Select All** > **Delete** > **(Done)**.

Requirement: the podcast favorites list must be displayed.

- ▶ **Moving podcast favorites:** Select: **All** > **✎**.
- ▶ Touch the **◆** symbol and move the entry to the desired position.
- ▶ Press **Done**.

Options and settings

Options

Requirement: the playback view **(1)** ⇒ *page 210, fig. 152* must be displayed.

- ▶ Press **More** **(19)**, or

Requirement: a list with radio stations or podcasts* must be displayed ⇒ *page 209, fig. 150*.

- ▶ Press and hold an entry in the list until the **Options** menu appears.

Depending on the selected source and vehicle equipment, the following functions may be available.

- **Store as favorite** ⇒ *page 212*.
- **Radio text** ⇒ *page 212*.
- **Save podcast** ⇒ *page 214, Podcast favorites*.

Related content

Channels, artists, and shows related to the content that is currently playing.

Settings

- ▶ **Applies to:** MMI: Select on the home screen: **RADIO** > **⚙**.

Depending on the vehicle equipment, the following settings may be available:

HD Radio FM/HD Radio AM

You can turn HD Radio reception on or off.

SiriusXM Tune Start

If you play a Smart Favorite or Internet radio station when this function is turned on, the song ▶

currently playing on the channel will play from the beginning.

SiriusXM subscription status

The status of your license is displayed.

Call SiriusXM: the phone number and radio ID of your satellite radio provider are displayed. To call your satellite radio provider using the MMI, press **Call SiriusXM**.

Online additional data

Requirement: the MMI must be connected to the Internet ⇨ *page 187, Audi connect*. Depending on the country, a data package may also be required ⇨ *page 192*.

When the function is turned on, additional information (such as album cover, artist, track) will be loaded depending on the availability.

Online station tracking

Requirement: the MMI must be connected to the Internet ⇨ *page 187, Audi connect*. Depending on the country, a data package may also be required ⇨ *page 192*. A station provides information in the background for its online station alternative and is identified with the  symbol.

During reception loss in the FM frequency band, the radio tuner can establish a data connection

and switch to an online station alternative, if it is available. If available, you can receive your local radio stations in every region of your country online. This may result in additional costs ⇨ . The  symbol indicates a station that is currently being received online.

- **Automatic/Off:** activates or deactivates automatic switching to online station alternatives.
- **With request:** switching to online station alternatives must be confirmed manually.

Preferred online radio data rate

Depending on the selected radio station, you may be able to adjust the data rate for online radio ⇨ *page 213* and for the **Online station tracking**.

For optimal sound playback, press **High**. To reduce data usage, press **Low**.



Note

Read the information about Audi connect, especially regarding connectivity costs ⇨  *in General information on page 187*.



Tips

Delays may occur when switching automatically between normal frequency bands and online radio.

Troubleshooting

The information that follows lists some troubleshooting options. They depend on vehicle equipment.

Problem	Solution
A station is no longer displayed in the station list.	Store the station as a preset in advance. Access the presets using the presets list ⇨ <i>page 212</i> .
Online radio: no playback from online radio.	Check if a data plan has been purchased for the applicable country and if it is available ⇨ <i>page 192</i> .

Media

General information

There may be different media sources and connections available depending on the vehicle equipment. For example, you can play media files using a connected USB drive or connect your mobile devices to the USB ports with charging function and operate them through the MMI.

Media and format restrictions: the MMI (including the USB storage device connection) was tested with a variety of products and media on the market. However, there may be cases where individual devices/media and media files may not be recognized, may play only with restrictions, or may not play at all.

Restricted functionality: reset the MMI to the factory default settings if functionality is restricted ⇒ [page 231](#).

Digital Rights Management: please note that the media files are subject to copyright protection.

Files that are protected by DRM and are identified with the symbol  will not play.

Data security: never store important information on mobile devices. Audi is not responsible for damaged or lost files and media.

Loading times: the more files/folders/playlists there are on a storage medium, the longer it will take to load. To reduce the amount of time it takes the media files to load, use a storage medium that only contains media files, and create subfolders (for example, for each artist or album).

Additional information: when playing, audio files are automatically displayed with any additional information that is stored (such as the artist, track and album cover). If this information is not available on the medium, the MMI will revert to the local Gracenote metadata database or search online if necessary. See ⇒ [page 222](#), **Online additional data**. However, in some cases, the additional information may not be displayed.



Note

Read the information about Audi connect, especially regarding connectivity costs ⇒  in *General information on page 187*.

Bluetooth audio player

Applies to: vehicles with Bluetooth audio player

With the Bluetooth audio player, you can play music wirelessly through the MMI from your Bluetooth-capable mobile device (such as a mobile phone).

Requirement: the vehicle must be stationary and the ignition must be turned on. The Bluetooth settings will open on your mobile device during the connection setup. The Bluetooth function and visibility of the MMI ⇒ [page 231](#) and mobile device must be turned on.

Connecting a mobile device

- **Applies to:** MMI: Select on the home screen: **MEDIA > Source > Connect external device > New connection**. The available Bluetooth devices will be displayed after several seconds.
- Press on the desired mobile device in the list of displayed Bluetooth devices.
- To update the list, press .

A PIN for a secure Bluetooth connection will be generated.

- Confirm the PIN on your mobile device.

After connecting successfully, the mobile device will be displayed in the **Connected devices** menu as a Bluetooth audio player.

Playing media ⇒ [page 219](#).



Tips

- Check for any connection requests on your Bluetooth device.
- Multiple Bluetooth audio players can be paired with the MMI, but only one at a time can be active as a Bluetooth audio player ⇒ [page 231](#).
- The supported media functions (such as shuffle, list view, categories, search, options) depend on the Bluetooth device being used.

- Note the volume setting on your Bluetooth device. Audi recommends setting your mobile device to the maximum volume when using it as a Bluetooth audio player.
- A selection of supported Bluetooth devices can be found in the database for tested mobile devices at www.audi.com/bluetooth.

Online media

Applies to: vehicles with Audi connect Infotainment and online media

You can play and operate various online media services, such as music streaming services, using the MMI.

Requirement: a supported online media service must be available in the country where the vehicle is being operated. You must be logged in to your myAudi account in the vehicle. The MMI must be connected to the Internet ⇒ [page 187](#), *Audi connect*. Depending on the country, a data package may also be required ⇒ [page 192](#).

Connect online media

- Applies to: MMI: Select on the home screen: **MEDIA > Source > Streaming services**. All supported online services in your country will be displayed for the user that is logged in.
- Press on the desired online media service and follow the system instructions.

After successfully logging in, the online media service will be available as a media source.

Starting online media

- Applies to: MMI: Select on the home screen: **MEDIA > Source > an online media source**.



WARNING

Always follow the information found in ⇒ *in General information on page 187*.



Note

- Read the information about Audi connect, especially regarding connectivity costs ⇒ *in General information on page 187*.

- There generally are additional costs when using an online media service account, especially when it is used internationally.



Tips

Depending on the Internet connection and network traffic, the connection may disconnect when online media sources are playing.

Multimedia connections

USB adapter

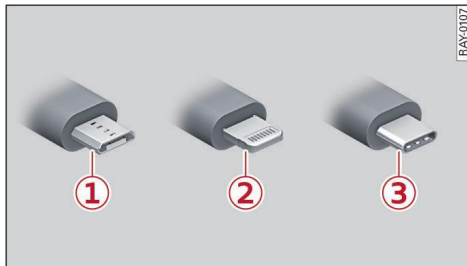


Fig. 153 Audi Genuine Accessories: USB adapter

You can connect your mobile devices to the MMI using the USB ports with charging function with a USB adapter, and charge the battery at the same time.

You can purchase the USB adapter cable from an authorized Audi dealer or at specialty stores:

- ① USB adapter for devices with a micro USB connection
- ② USB adapter for Apple devices with a Lightning connection
- ③ USB adapter for devices with USB type C connection



Note

Handle the USB adapter carefully. Do not allow it to be pinched.



Tips

Apple devices with a dock connector can only be charged using a USB adapter designed for devices with a dock connector. Data cannot be transmitted.

USB ports with charging function

Connect your mobile devices to the USB ports in order to operate the devices through the MMI and charge the batteries.

The USB ports are located in the front center console and are labeled with the  symbol. If multiple USB devices are connected to the USB ports (for example, a smartphone and a USB flash drive), any of these devices can be used as the playback source.

Connecting or charging mobile devices using a USB adapter

- ▶ Connect the matching USB adapter to a USB port and to the mobile device, such as a smartphone.

The battery will charge automatically.

Mobile devices connected to the USB ports are started and operated using the MMI ⇒ *page 219*.

Disconnecting a mobile device from the USB port

- ▶ Remove the USB adapter cable from the USB port.



WARNING

Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Never operate mobile devices while driving, because this increases the risk of an accident.



Note

- Disconnect the connector from the USB port carefully to reduce the risk of damaging them.
- Use a USB extension cable to connect devices that have an integrated USB connector (such as a USB stick) to reduce the risk of damage to your USB device and the USB port.
- Extremely high or low temperatures that can occur inside vehicles can damage mobile

devices and/or impair their performance. Never leave mobile devices in the vehicle in extremely high or low temperatures.



Tips

- Always follow the information found in ⇒ *page 86*.
- When you turn off the ignition, the USB ports will still be supplied with power until the energy management system turns them off.
- Do not use additional adapter cables or USB extension cables to connect mobile devices to USB ports that already have a cable or that must be connected with a USB adapter cable (⇒ *page 217, fig. 153*). Using an additional adapter or USB extension cable may impair functionality.
- Functionality is not guaranteed for mobile devices that do not conform to the USB 2.0 specification.
- USB hubs are not supported.
- Video playback ¹⁾ through the USB ports is not supported on Apple devices and MTP devices (such as smartphones).
- iPod touch or iPhone malfunctions also affect the operation of the MMI. Reset your mobile device in these situations.
- Audi recommends updating the iPod touch or iPhone software to the latest version. Refer to your mobile device owner's manual for more information.
- USB adapters on the USB ports will support iPod touch or iPhone devices from the 5th generation or newer with a lightning connector.
- A selection of supported devices can be found in the database for tested mobile devices at www.audi.com/mp3.

¹⁾ Picture playback for video files depends on the country in which this function is used.

Media playback¹⁾

Media sources

The following sources can be selected depending on the vehicle equipment:

- **USB device** ⇒ page 218.
- **Connect external device:** you can connect external devices via Bluetooth and use the Bluetooth audio player ⇒ page 216, or you can connect an external device directly to the USB port with charging function ⇒ page 218.
- **Streaming services** ⇒ page 217.

Accessing media

Playing media files using the MMI

- **Applies to:** MMI: Select on the home screen: **MEDIA > Source > a source**. Depending on the connected device or online media service*, the symbol for a source may change. The device name may be displayed (for example: my-Phone).
- Select a track from the categories in the media center ⇒ page 219.

Playing media files using the multifunction steering wheel

Requirement: a media source must contain media files ⇒ page 219.

- Select the radio/media tab in the instrument cluster.
- Press the  button to toggle between the radio and media or to select a different source.
- To select a media file/source, turn and press the left thumbwheel.

Tips

- For safety reasons, the video image is only displayed when the vehicle is stationary. Only the sound from the video plays while driving.

- **Applies to:** multifunction steering wheel: Depending on the selected function, operation through the MMI may be required.

Media center

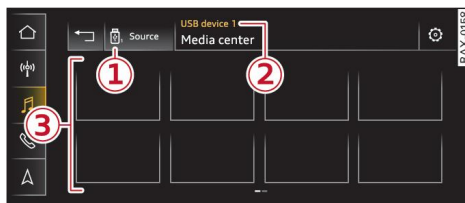


Fig. 154 Center display: media center

There are various categories available in the media center. You can also search for media files across sources. The current music track continues playing while you search the MMI.

Opening the media center

- **Applies to:** MMI: Select on the home screen: **MEDIA > Source > a source > a category**.

① Source symbol

The symbol for the source that is currently in use is displayed. Depending on the connected device or online media service*, the source symbol may change. As an example, a USB stick is shown connected to the USB port with charging function.

② Source device name

The device name of the source that is currently in use is displayed.

③ Categories

The media center will display categories depending on vehicle equipment, the connected device, the content of the selected source, and the connection type:

- **Last played tracks**
- **Artists**
- **Compilations**
- **Composers**
- **iTunes Radio**

¹⁾ Picture playback for video files depends on the country in which this function is used.

- Audio books
- Podcasts
- Genres
- Videos
- Tracks
- Albums

Other categories may be available depending on the service.

Playlists

All playlists and smart playlists in the source are displayed.

Smart playlists

- Last played tracks
- Most played tracks

Folders

The folder structure or track/chapter list is displayed.

! Note

Applies to: vehicles with Audi connect Infotainment

- Cloud services and the iTunes radio category always require an Internet connection.

- Read the information about Audi connect, especially regarding connectivity costs ➔ [! in General information on page 187.](#)

i Tips

- Only the categories supported by the medium/service are available.
- For safety reasons, the video image is only displayed when the vehicle is stationary. Only the sound from the video plays while driving.
- When synchronizing a mobile device with Cloud services, playlists may display incorrectly in the MMI. Use the media center in the device.
- Applies to: iPod touch/iPhone: Note the information about the USB port with charging function and the supported devices ➔ [page 217.](#)

Media functions

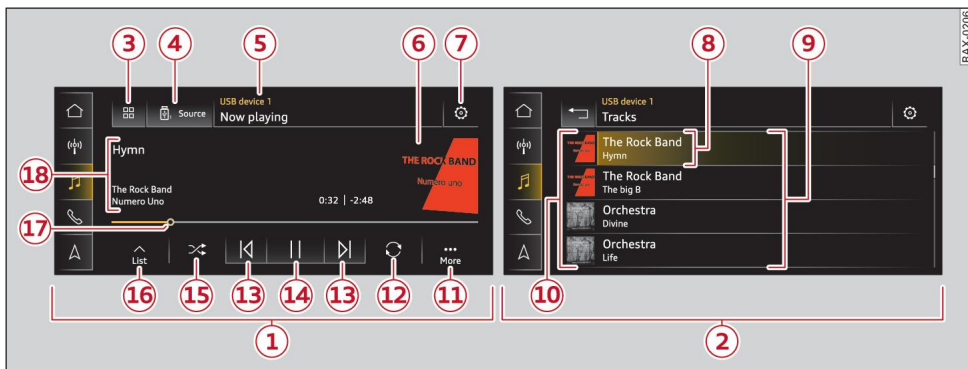


Fig. 155 Center display: left side: playback view; right side: playlist

Operating

- Applies to: MMI: To open the playback view ①, select on the home screen: **MEDIA > Source > a source > a category** (for example, **Artists > Album**) > a track.

- To open the playlist ②, select **List** in the playback view ⑬.

Depending on the vehicle equipment and the selected media sources, the following functions may be available. ►

	Symbol/Description	Description
③	⏏	The media center categories are displayed based on the active source ⇒ <i>page 219</i> .
④	Source	Displays sources in the Media menu.
⑤	Source/device name	device name of the source that is currently playing.
⑥	Album cover in the playback view	Requirement: a media source with album covers must be selected or the covers must be available online ⇒ <i>page 222</i> , Online additional data . Displays the current album cover. Display the playlist: press on the cover.
⑦	⚙	Settings ⇒ <i>page 222</i> .
⑧	Current track information	Display of Track and Artist . Highlights the track that is currently playing.
⑨	List	Browsing in the list: drag your finger upward or downward.
⑩	Album cover in the playlist	Requirement: a media source with album covers must be selected or the covers must be available online ⇒ <i>page 222</i> , Online additional data . Displays the current album cover.
⑪	More	Opens options ⇒ <i>page 222</i> .
⑫	⏮ Off	Switching between off/playlist/track: press ⑫.
	🔄 Playlist	The tracks in the current playlist will repeat continuously in a loop.
	🔄 Track	The current track will repeat continuously in a loop.
⑬	⏮/⏭	Selecting the previous/next track (or station/chapter): press ⏮ or ⏭. Fast forward/rewind: to fast forward or rewind within a track, press and hold ⏭ or ⏮. Jumping to the beginning of a track: press on ⏮ after the first three seconds of play time.
⑭	▶/⏮	Start or stop playback
⑮	🔀	When this function is turned on, all files in the playlist will play in random order.
⑯	List	The playlist ⑫ is displayed.
⑰	Playback position	The bar shows the current playback position in the track. Fast-forward or rewind: to fast forward or rewind within a track, move the bar to the right or left. Changing the playback position: press the desired playback position.
⑱	Info section	Display of Track , Artist , and Album .



Tips

Not all functions are available in every source and on every touch display.

Free text search

Applies to: vehicles with free text search

You can search across all active sources, for example for tracks and artists.

Opening the search

Requirement: the selected source must support the search function.

- Applies to: MMI: Select on the home screen: **MEDIA > Search.**

Entries that contain the entered search term are listed in the results list. Each result is marked with the symbol for a category in the media center ⇒ *page 219.*

You can search for the following categories:

- Artists
- Albums
- Tracks
- Genres
- Videos

Options and settings

Options

Context-dependent functions and settings may be available depending on the country and vehicle equipment, the selected source, the connected mobile device, and the connection type.

Requirement: the playback view must be displayed ① ⇒ *page 220, fig. 155.*

- Press **More** ⑪.

Play more like this

The track currently playing is quickly analyzed for features such as artist, genre, mood, and beat, and a smart playlist with similar tracks will be shown.

Aspect ratio

Audi recommends the **Auto** setting for the picture format. If you press on an aspect ratio, you will see a preview of the setting on the screen. Press **OK** to apply the selected aspect ratio.

The following table gives an overview of the aspect ratios. The possible aspect ratios depend on the source or video file being played.

Aspect ratio	Description
Auto	The MMI detects the picture format of the source and displays the image in the optimal ratio.
4:3, 16:9	The image is fixed in the corresponding ratio. Select one of these options if the image is distorted or a section of the image is cut off or blurry when Auto is selected.
Zoom	The image is enlarged to fill the entire display.
Original	The image is displayed in the ratio of the source format. Select this option if the image is distorted or a section of the image is cut off or blurry when Auto is selected.

Settings

Accessing settings

- Applies to: MMI: Select on the home screen: **MEDIA > ⚙️.**

Depending on the vehicle equipment, the following settings may be available:

Online additional data

Requirement: the MMI must be connected to the Internet ⇒ *page 187, Audi connect.* Depending on the country, a data package may also be required ⇒ *page 192.*

When the function is turned on, additional information (such as album cover, artist, track) will be loaded depending on the availability.

Supported media and file formats

Overview

Depending on the country and vehicle equipment, media files with the following properties

may be supported by the connection for USB storage devices: ►

Audio/video files	
Supported media	USB ports with charging function: mobile devices ⇨ <i>page 217</i> such as iPhones, MTP players, and USB storage devices in “USB Device Subclass 1 and 6” that conform to USB 2.0: USB sticks, USB MP3 players (Plug-and-Play capable), external USB flash drives, and hard drives
File system	USB storage devices: exFAT, FAT, FAT32, NTFS. USB storage device partitions (primary/logical*): 2 per USB connection.
Metadata	Album cover: GIF, JPG, PNG with max. 800x800 px. The album cover from the medium or from Gracenote* is displayed, depending on availability.
Playlists	.M3U; .PLS; .WPL; .M3U8; .ASX
Number of files	USB mass storage device: max. 50,000 files per medium; max. 1,000 files per playlist/folder

Audio files		
Format	File extension	Up to maximum 320 kbit/s 48 kHz sampling frequencies
MPEG 1/2 Layer 3	.mp3	
Windows Media Audio 9/10	.wma	
MPEG 2/4	.m4a; .m4b; .aac	
Opus	.opus; .ogg; .oga	
FLAC	.flac	48 kHz sampling frequency
ALAC	.m4a	
Monkey's Audio	.ape	

Video files		
Format	File extension	Up to maximum 15 Mbit/s and 1920x1080 px at maximum 30 fps
MPEG 1/2	.mpg; .mpeg	
MPEG4 AVC (H.264)	.mp4; .m4v; .mov; .avi	
Windows Media Video 9	.wmv; .asf	
MPEG-H (H.265/HEVC)	.mp4; .mov	
VP8/VP9	.webm	
Flash video	.flv; .f4v	

Tips

- The media sources do not support the Windows Media Audio 9 Voice format.
- For compressing MP3 files, Audi recommends a bit rate of at least 160 kbit/s. The display showing the remaining play time may differ for audio files with variable bit rate.
- Special characters (such as those in ID3 tag information) may display differently or may

not always display, depending on the system language.

- The manufacturer of the storage device can provide information about its “USB Device Subclass”.
- Some MTP player functions are not supported, such as rating music tracks and video playback.

Troubleshooting

The information that follows lists some troubleshooting options. They depend on vehicle equipment.

Problem	Solution
USB ports with charging function/Bluetooth® audio player: the mobile device is not supported.	Read the instructions in the chapter ⇒ <i>page 217, Multimedia connections</i> /⇒ <i>page 216, Bluetooth audio player</i> .
USB ports with charging function: the mobile device is not recognized as a source.	For many mobile phones or mobile devices, playback is not possible when the battery level is too low (less than 5% charge level). The mobile device will only be recognized as a media source in the MMI after connecting if the battery charge level is sufficient.
USB ports with charging function: malfunctions during audio playback through an iPod touch/iPhone.	The Bluetooth® audio player function is turned on. Turn off this function ⇒ <i>page 230</i> when you are not using the Bluetooth® audio player .
USB ports with charging function: audio playback through the connected mobile device is not possible.	Make sure the <i>MTP</i> USB mode is selected in the settings on your mobile device.
Bluetooth® audio player: interference with track display and audio playback.	Playback interference can occur when using the Bluetooth® audio player if a music player app from a third party provider is open. Audi recommends using the integrated media player on your Bluetooth device (such as a smartphone).
Online media: no playback of online media.	Check if a data plan has been purchased for the applicable country and if it is available ⇒ <i>page 192</i> .

Interior entertainment

Themes

Applies to: vehicles with themes

This function allows you to customize the appearance of the Infotainment system using themes.

Using the theme preview

You can display a temporary preview of a theme.

- Applies to: MMI: Select on the home screen: **THEMES** >  > a theme.
- Press **Preview**.

Downloading a theme

To continue using a theme, you must download it.

Requirements: You must have the myAudi app installed on your mobile device. You added your vehicle to the myAudi app. You are logged into the vehicle with your myAudi user.

- Open the myAudi app and download the desired theme, or
- Applies to: MMI: Select on the home screen: **THEMES** >  > a theme.
- Follow the system instructions.

Selecting a theme

Requirement: you have downloaded a theme.

- Choose your desired theme in the myAudi app, or
- Applies to: MMI: To activate a theme, select on the home screen: **THEMES** > a theme.
- Applies to: MMI: To restore the default appearance, select on the home screen: **THEMES** > **No theme**.

Using as a screensaver

The screensaver will display the background image without showing the menu icons.

Requirement: you have activated a theme.

- Applies to: MMI: Swipe to the right until the background image is displayed without menu icons.



Note

Read the information about Audi connect, especially regarding connectivity costs ⇒  in *General information on page 187*.

Holoride interface

Applies to: vehicles with holoride interface

With a compatible virtual reality headset (VR headset) you can experience content such as games, movies, and presentations in a virtual world, while seated in the outer sections of the rear bench seat. The holoride interface connects the driving movements of the vehicle (such as acceleration, braking, and steering) with a virtual environment and in this way offers a virtual experience that imitates reality.

Limitations

The following requirements must be met in order to use holoride:

- The person using the system is seated in one of the outer seating positions in the rear bench seat.
- The person using the system is at least 5 feet (1.5 m) tall.
- The person using the system cannot touch any objects located in front of them (such as the back of the front seats) when they stretch their arms and fingers all the way out.
- The person using the system is using a VR headset with the necessary accessories for in-car use.

Requirements

- You have a compatible VR headset.
- You have installed the myAudi app on your mobile device and you have registered your vehicle in the myAudi app.
- You are logged into the vehicle with your myAudi user.
- You have installed the holoride app on your VR headset.

Setup

- Have the driver turn on the ignition.
- Place the VR headset on your head and start the holoride app on your VR headset.

- ▶ Start the myAudi app on your mobile device and follow the instructions.
- ▶ Follow the instructions on the VR headset.

Device compatibility

Compatibility cannot be guaranteed for all types of VR headsets. The availability depends on the following factors, among others:

- Brand and design of the VR headset.
- Software version of the holoride app used



WARNING

- Incorrect use increases the risk of injuries or an accident.
- Using the VR headsets in any location other than the outer sections of the rear bench seat increases the risk of serious injury during an accident.
- Pay attention to the safety precautions displayed in the holoride app in the VR headset.
- As the driver, do not let holoride users distract you from driving, as this could increase the risk of an accident.



Note

Always follow the information found in ⇒  in *General information on page 187*.

Smartphone interface

Setup

Applies to: vehicles with smartphone interface

You can connect your smartphone to the MMI with a cable or wirelessly* using the smartphone interface. Certain content on your smartphone is adapted in the MMI while driving and can be operated through the MMI.

Connecting a smartphone with a cable

Requirement: the vehicle must be stationary and the ignition must be turned on. An iPhone from generation 6S or newer with lightning connection or USB connection must have the latest operating system installed or a smartphone with Android Auto app must have Android 8.0 or newer installed.

- Connect your smartphone to the USB port with charging function ⇒ *page 218* using a USB adapter ⇒ *page 217, fig. 153*.

Connecting a smartphone wirelessly

Applies to: vehicles with wireless Apple CarPlay/wireless Android Auto

Requirement: the vehicle must be stationary and the ignition must be turned on. An iPhone from generation 6S or newer with lightning connection or USB connection must have the latest operating system installed or a smartphone with Android Auto app must have Android 11 or newer installed.

- To connect your smartphone wirelessly, turn on the Bluetooth function and Wi-Fi on your smartphone.
- Applies to: Apple CarPlay: Open the Apple CarPlay settings in your iPhone.
- Applies to: Android Auto: Make sure that wireless Android Auto is allowed in the app settings in your smartphone.
- Enable the Bluetooth function and visibility on the MMI ⇒ *page 231*.
- Applies to: MMI: Select on the home screen: **SETTINGS > Connected devices > Smartphone interface > New connection**.
- In the MMI, press on your smartphone in the list of displayed devices.
- To update the list, press .

Establishing a wired/wireless* connection

- Follow the system instructions if necessary.
- Pay attention to any additional system prompts on your smartphone, if applicable.
- Applies to: MMI: If you declined use of Apple CarPlay or Android Auto the first time you connected your smartphone, then select on the home screen: **SETTINGS > Connected devices > Smartphone interface > a smartphone**.
- Follow the system instructions.



WARNING

Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Never operate mobile devices while driving, because this increases the risk of an accident.



Note

Read the information about Audi connect, especially regarding connectivity costs ⇒  in *General information on page 187*.



Tips

- The functions that can be used depend on the following factors, among others:
 - The brand of your smartphone
 - The version of your smartphone's operating system
 - The software version of the app used
 - The USB adapter cable and correct connection
 - Your mobile phone service provider
 - The customized settings on your smartphone
- One of the factors above or a combination of any of them could cause incompatibility with the smartphone interface. Compatibility cannot be guaranteed for all types of smartphones. For more information and assistance, refer to the user guide and the manufacturer of your smartphone.
- Please note that in order to use the smartphone interface, you can only connect your smartphone via the front USB port with charging function.

- Wireless Apple CarPlay*/wireless Android Auto* is not available in all countries.
 - Wireless Apple CarPlay*/wireless Android Auto* is only possible in vehicles without a navigation system or without a detected vehicle position (GPS data) if the following requirement is met: the embedded SIM card for the vehicle must be logged into the mobile phone network ⇒ *page 188*.
 - If the connected smartphone has voice control, you can operate your smartphone using the external voice recognition system ⇒ *page 31*.
 - The MMI uses the menu language selected in your smartphone settings.
- Some MMI functions are not available when there is an active smartphone interface connection.
 - You cannot connect any mobile devices via Bluetooth when a smartphone interface connection is active.
 - Usage of the smartphone interface depends on the availability of services through third party providers.
 - Audi merely provides access to third party services through the MMI and does not assume any responsibility for the content of these services.

Troubleshooting

Applies to: vehicles with smartphone interface

The information that follows lists some troubleshooting options. They depend on vehicle equipment.

Problem	Solution
Smartphone interface cannot be opened.	Check the battery charge level on your smartphone. Check the USB adapter and use a different one if necessary. Check if Android Auto or Apple CarPlay is available in the country where the vehicle is being operated.
	Android Auto: check if the Android Auto app is installed on your smartphone.
Connecting the smartphone to the MMI failed.	Make sure that you are using the correct USB adapter and check if the USB adapter is connected correctly to your smartphone and the USB port with charging function ⇒ <i>page 217</i> .
	Apple CarPlay: check if Apple CarPlay is activated on your iPhone.
	Android Auto: check in the Android Auto app if Android Auto permits new vehicles.

Problem	Solution
Wireless connection between the smartphone and the MMI failed.	Apple CarPlay: open the settings for Bluetooth and Apple CarPlay on your iPhone. Remove your vehicle.
	Android Auto: open the settings for Bluetooth on your smartphone. Remove your vehicle. Also remove your vehicle in the Android Auto app.
	Open the Connected devices menu ⇒ <i>page 231</i> . Delete your smartphone in the Telephone 1 and smartphone interface menu items. Repeat the connection process. Restart the MMI ⇒ <i>page 23</i> . Restart your smartphone. Open the Wi-Fi settings in your smartphone. Check if your smartphone has connected to the 5 GHz vehicle Wi-Fi. Try connecting to the 5 GHz Wi-Fi manually.
The smartphone is not automatically detected.	Make sure that you are using the correct USB adapter and check if the USB adapter is connected correctly to your smartphone and the USB port with charging function ⇒ <i>page 217</i> . Check if the requirements needed to connect a smartphone have been met.

Additional settings

System settings

Introduction

General settings are described in this chapter. You can find specific settings in the chapters about those settings. The available settings depend on the vehicle equipment.

Date and time

- Applies to: MMI: Select on the home screen: **SETTINGS > General > Date & time.**

Possible settings:

- **Automatically set date and time**
- **Date**
- **Time**
- **Date format**
- **Time format**
- **Automatic time zone**
- **Time zone**

Measurement units

- Applies to: MMI: Select on the home screen: **SETTINGS > General > Measurement units.**

Possible settings:

- **Speed**
- **Distance**
- **Temperature**
- **Volume**
- **Pressure**
- **Consumption (engine)**

Language and keyboard

- Applies to MMI: Select on the home screen: **SETTINGS > Language & Keyboard.**

Language

You can change the languages for the display, navigation announcements, and the voice recognition system.

Keyboard

See ⇨ *page 27.*

Sound

Requirement: an audio source must be active.

- Applies to MMI: Select on the home screen: **SETTINGS > Sound.**

Possible settings:

- **Treble**
- **Bass**
- **Balance/fader**
- **Speed dependent volume control**
- **Subwoofer**
- **Surround level**
- **Focus**
- **3D effect**

Announcements and tones

- Applies to: MMI: Select on the home screen: **SETTINGS > Announcements & Tones.**

Possible settings:

- **Announcement volume**
- **Audi Heartbeat**



WARNING

Adjust the volume of the audio system so that signals from outside the vehicle, such as police and fire sirens, can be heard easily at all times.



Tips

The volume is automatically adjusted to a preset level when the MMI is turned on.

Bluetooth

- Applies to MMI: Select on the home screen: **SETTINGS > Connection settings > Bluetooth® ►**

Bluetooth®

You can select a setting for visibility of the MMI to other Bluetooth devices. To connect a new Bluetooth device, the **Visible** setting must be selected. If **Invisible** is selected, a Bluetooth connection will only be possible with paired devices. If **Off** is selected, no Bluetooth device can be connected.

Bluetooth® audio player

When this function is turned on, the profile will load automatically when your Bluetooth audio player is within range.

Bluetooth® name

The MMI's Bluetooth name is displayed and can be changed.

Tips

The *name of the Wi-Fi hotspot* and the *Bluetooth name* are automatically compared when there are changes.

Factory default settings

Requirement: the ignition must be turned on.

- Applies to MMI: Select on the home screen: **SETTINGS > System maintenance > Restore factory settings**.
- Follow the system instructions.

The settings will be reset. The system will restart. This may take some time.

Tips

Make sure that not only the settings were deleted but also the stored data, if applicable.

Software update

Introduction

Applies to: vehicles with software update

You can update your vehicle's software.

The functions depend on the country and vehicle equipment:

- Map material update for the navigation system
⇒ *page 205*.

- Have the software update performed by an authorized Audi dealer or authorized Audi Service Facility. This can result in additional costs.



WARNING

- Perform the installation only when the vehicle is stationary. Otherwise, this increases the risk of an accident
- If the installation fails, contact an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Connected devices

Displayed connected devices

Requirement: the vehicle must be stationary and the ignition must be turned on.

- Applies to: MMI: Select on the home screen: **SETTINGS > Connected devices**.

Possible menu items:

- Telephone 1
- Telephone 2
- Audio player
- Wi-Fi hotspot
- Headset

Smartphone interface

You can connect your smartphone to the MMI
⇒ *page 227*.

myAudi app

This function is available if an appropriate Audi app is installed on your mobile device and started, and if the mobile device is connected to the vehicle's Wi-Fi hotspot.



Note

Read the information about Audi connect, especially regarding connectivity costs ⇒  *in General information on page 187*.

Managing connected devices

Requirement: the connected devices menu must be displayed ⇒ *page 231*. ►

Connecting a device

Requirement: Bluetooth visibility must be activated in the MMI ⇒ *page 231* and mobile device.

- ▶ Press on a menu item, such as **Telephone 1**.
- ▶ To search for and connect your mobile device, press **New connection** ⇒ *page 175*.

Selecting a connected device

- ▶ Press on a menu item, such as **Telephone 1**.
- ▶ Press on the desired mobile device in the list of displayed devices. The connection will be made.

Disconnecting a connected device

- ▶ Press on a menu item, such as **Telephone 1**.
- ▶ Press on the connected mobile device. The selected mobile device will be disconnected from the MMI.

Deleting a device

- ▶ Press on a menu item, such as **Telephone 1**.
- ▶ Press and hold an element until the **Options** menu is displayed.
- ▶ Press **Delete**.

If a device is listed multiple times, it will be deleted from all menu items.

Tips

Audi recommends not connecting more than six devices. Regularly delete devices that are no longer used.

Additional options

Depending on the selected function, additional options may be available.

Requirement: the connected devices menu must be displayed ⇒ *page 231*.

- ▶ Press on a menu item, such as **Telephone 1**.
- ▶ Press and hold an element until the **Options** menu is displayed.

Bluetooth® profiles

You can turn desired profiles on or off separately in the MMI.

Favorite

To set a paired mobile device as the default phone, activate this function in the MMI.

When the mobile device is in range and the Bluetooth function on the mobile device and in the MMI is turned on, the default phone will be given priority over the other Bluetooth devices and will be connected directly to the MMI.

Legal information

General information

Information on the software licenses can be found online at www.audi.com/softwareinfo.

Multi Media Interface

- ▶ Applies to: MMI: Select on the home screen: **SETTINGS > General**.

Licenses

Version information

Legal notes

Possible options:

- **Software information**
- **About Audi connect**

Smartphone interface

Applies to: vehicles with smartphone interface

Requirement: a smartphone must be connected to the MMI ⇒ *page 227*.

- ▶ Applies to: MMI: Select on the home screen: **SETTINGS > Connected devices > Smartphone interface**.
- ▶ Press and hold an element until the **Options** menu is displayed.
- ▶ Press **Legal notes**.

Instrument cluster

Requirement: the vehicle must be stationary and the ignition must be turned on.

- ▶ Select in the instrument cluster: vehicle functions tab ⇒ *page 16*.

- Press and hold the  button on the multifunction steering wheel until the display appears.

Possible options:

- **Engine code**
- **Software information**
- **Version information**

Head-up display

Applies to: vehicles with head-up display

Requirement: the vehicle must be stationary and the ignition must be turned on. The head-up display is turned off.

- To display the license text in the head-up display, press and hold the  button  **1**
⇒ *page 29, fig. 20* until the display appears.

Audi connect apps

Applies to: vehicles with Audi connect apps

- Applies to: MMI: Select on the home screen:
SETTINGS > Audi connect settings.

In the submenus, you can find legal notes, software information, license information, and version information.

Checking and Filling

Fuel

Types of gasoline

The correct gasoline grade is stated on the inside of the fuel filler door.

The vehicle is equipped with a catalytic converter and must only be driven with **unleaded gasoline**.

Audi recommends using TOP TIER Detergent Gasoline. For additional information on TOP TIER Detergent Gasoline, visit www.toptiergas.com.

The individual gasoline grades are differentiated by **octane ratings**. This value is given with (R+M)/2 equating to AKI or in RON.

The headings below match the sticker in the fuel filler door (examples):

UNLEADED FUEL ONLY MIN. (R+M)/2 87 Regular / MIN. RON 91 Regular

Use regular gasoline with minimum 87 AKI / 91 RON ⇨ .

Audi recommends using premium gasoline with minimum 91 AKI / 95 RON to achieve the rated horsepower and torque.

UNLEADED FUEL ONLY PREMIUM MIN. (R+M)/2 91 / SUPER MIN. RON 95

Using premium gasoline with minimum 91 AKI / 95 RON is recommended.

If premium gasoline is not available, you can also use regular gasoline 87 AKI / 91 RON. However this does reduce the engine power slightly.

UNLEADED FUEL ONLY PREMIUM MIN. (R+M)/2 93 / SUPER PLUS MIN. RON 98

Using premium plus gasoline with at least 93 AKI / 98 RON is recommended.

If no premium plus gasoline is available, you can also use premium gasoline with 91 AKI / 95 RON. However this does reduce the engine power slightly.

Note

- Filling the tank just one time with leaded fuel or other metallic additives will cause permanent deterioration to the catalytic converter function.
- When gasoline with an octane rating that is too low is used, high speeds or heavy engine load can lead to engine damage.

Tips

The vehicle may be filled with fuel that has a higher octane rating than what is required by the engine.

Gasoline mixture

Gasoline with alcohol (ethanol)

You can fuel your vehicle with unleaded gasoline that has an ethanol content of up to 15%, for example “E15”.

Gasoline adapted to the season

Many gasoline fuels are adapted to the seasons. When the season changes, refueling at high-traffic gas stations is recommended. It is more likely that the gasoline will be suitable for the season there.

Note

- Do not use gasoline that does not meet the specifications.
- Ethanol fuels with a high ethanol percentage, such as E30 – E100, must **not** be used. The fuel system will be damaged!
- Methanol fuels with a high methanol percentage, such as M5 – M100, must **not** be used. The fuel system and the engine will be damaged!
- If you are unable to find out if a specific gasoline mixture meets the specifications, ask the gas station operator or their fuel supplier.
- Do not use any gasoline mixture whose composition cannot be identified.
- Audi does not assume any responsibility for damage to the fuel system or for performance problems caused by using gasoline

mixtures different from those specified. This type of damage also does not fall under the New Vehicle Limited Warranty or under the emissions control system warranty.

- If you notice a higher fuel consumption or poor handling or performance problems due to such gasoline mixtures, Audi recommends fueling with unblended gasoline.

Gasoline additives

An important issue for many automobile manufacturers is combustion residue in the engine that results from the use of certain fuels.

Although types of gasoline differ depending on the manufacturer, there are similarities. Certain substances in the gasoline may cause deposits in the engine. Additives in the gasoline that should keep the engine and fuel system clean do not all function equally.

Audi recommends using TOP TIER Detergent Gasoline. For additional information on TOP TIER Detergent Gasoline, visit www.toptiergas.com.

If you use incorrect fuels over a long period of time, the maximum engine performance may be impaired by combustion residue.

Note

- Damage or malfunctions caused by the use of incorrect types of gasoline are not covered by the New Vehicle Limited Warranty.
- Only gasoline additives that have been approved by Audi may be used.

Refueling

Messages

The following messages may appear, depending on the vehicle equipment:

Messages

If the  indicator light appears with a corresponding message, refuel the vehicle.

 **Tank system: malfunction! Please contact Service**

There is a malfunction in the fuel tank system. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Fueling procedure

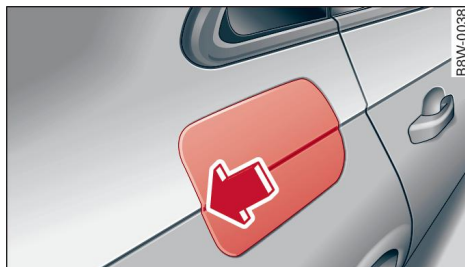


Fig. 156 Right rear side of the vehicle: opening the fuel filler door



Fig. 157 Fuel filler door with attached fuel cap

The fuel filler door is unlocked or locked by the central locking system.

- ▶ Unlock the vehicle if necessary.
- ▶ Press on the left side of the fuel filler door to open it ⇒ *fig. 156*.
- ▶ Unscrew the tank cap counterclockwise.
- ▶ Place the cap from above on the open fuel filler door ⇒ *fig. 157*.
- ▶ Insert the fuel pump nozzle all the way into the fuel filler neck.
- ▶ Begin fueling. Once the fuel pump nozzle turns off the first time, the fuel tank is full. Do not continue fueling, or else the expansion space in the tank will be filled with fuel.
- ▶ After the fuel pump has turned off, wait five seconds before removing the nozzle to allow the rest of the fuel to finish dripping into the fuel tank.

- ▶ Turn the fuel cap clockwise until it clicks into place.
- ▶ Close the fuel filler door and then press on the left side until it latches.

The correct fuel type for your vehicle can be found on a label located on the inside of the fuel filler door. For additional information on fuel, see ⇒ *page 234*.

For the tank capacity in your vehicle, refer to the Technical Data ⇒ *page 308*.

To reduce the risk of fuel leaking out or vapors escaping, make sure that the fuel tank is closed correctly. Otherwise the ¹⁾ indicator light will turn on.

WARNING

Improper fueling procedures and improper handling of fuel can result in explosions, fires, severe burns, and other injuries.

- Do not smoke. Keep away from open flames.
- The ignition must be turned off when refueling.
- Mobile devices, radio devices, and other radio equipment should always be turned off when refueling. Electromagnetic rays could cause sparks and start a fire.
- If you do not insert the fuel pump nozzle all the way into the filler tube, then fuel can leak out. Spilled fuel can ignite and start a fire.
- Never get into the vehicle when refueling. If there is an exceptional situation where you must enter the vehicle, close the door and touch a metal surface before touching the fuel pump nozzle again. This will reduce the risk of electrostatic discharge that can cause flying sparks. Sparks can start a fire when refueling.

WARNING

Audi does not recommend transporting fuel containers inside the vehicle. Fuel could leak out of the container and ignite, especially dur-

ing an accident. This can cause explosions, fires, and injuries.

- If you must transport fuel in a fuel container, note the following:
 - Always place the fuel container on the ground before filling. Never fill the fuel container with fuel while it is inside or on the vehicle. Electrostatic discharge can occur while refueling and the fuel vapors could ignite.
 - When using fuel containers made of metal, the fuel pump nozzle must always remain in contact with the container to reduce the risk of static charge.
 - Insert the fuel pump nozzle as far as possible into the filler opening while refueling.
 - Follow the applicable legal regulations in the country where you are driving when using, storing and transporting fuel containers.
- Make sure that the fuel container meets the industry standards, for example ANSI or ASTM F852-86.

Note

- Remove fuel that has overflowed onto any vehicle components immediately to reduce the risk of damage to the vehicle.
- Never drive until the fuel tank is completely empty. The irregular supply of fuel that results from that can cause engine misfires. Uncombusted fuel may enter the exhaust system and increase the risk of damage to the catalytic converter.

For the sake of the environment

- Do not overfill the fuel tank, or fuel could leak out when the vehicle is warming up.
- Fuel should never enter the sewer system or come into contact with the ground.

Tips

The fuel filler door on your vehicle does not lock if you lock the vehicle from the inside using the central locking switch.

¹⁾ Depending on the engine and country

Manually releasing the fuel filler door

- ▶ See an authorized Audi dealer or authorized Audi Service Facility if you cannot open the fuel filler door.
- ▶ Afterward, drive to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Emissions control system

General information

WARNING

The temperature of the exhaust system is high, both when driving and after stopping the engine.

- Never touch the exhaust tail pipes once they have become hot. This could result in burns.
- Do not park your vehicle over flammable materials such as grass or leaves because the high temperature of the emissions system could start a fire.
- Do not apply underbody protectant in the exhaust system area, because this increases the risk of fire.

Catalytic converter

Observe the safety precautions ⇒ *page 237, General information*.

The vehicle may only be driven with unleaded gasoline, or the catalytic converter will be destroyed.

Never drive until the tank is completely empty. The irregular supply of fuel that results from that can cause engine misfires. Uncombusted fuel could enter the exhaust system, which could cause overheating and damage to the catalytic converter.

Malfunction Indicator Lamp (MIL)

If the  indicator light blinks or turns on, there is a malfunction related to emissions which can, for example, cause poor emissions quality and damage to the catalytic converter. Drive slowly to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

The indicator light can also turn on if the fuel filler cap is not closed correctly ⇒ *page 235*¹⁾.

Engine compartment

General information

Special care is required if you are working in the engine compartment

For work in the engine compartment, such as checking and filling fluids, there is a risk of injury, scalding, accidents, and burns. For this reason, follow all the warnings and general safety precautions provided in the following information. The vehicle's engine compartment is a dangerous area. ⇒ .

Explanation of warning symbols:

	Observe all warnings - there is a risk for injury!
	Hot engine components! Rotating parts!
	The radiator fan can turn on at any time!
	High voltage! Turn off the engine before coming into contact with any ignition system components!
	The catalytic converter can be damaged if the oil level is too high!
	Hot coolant - there is a risk of scalding!
	Always follow the instructions in the Owner's Manual. ▶

¹⁾ Depending on the engine and country

WARNING

The engine/motor compartment in any motor vehicle is a potentially dangerous area and can cause serious personal injury.

- Always use extreme caution when doing any work in the engine compartment. Always follow commonly accepted safety practices and use common sense. Never risk personal injury.
- Never perform any work in the engine compartment unless you know exactly how to carry out the job and have the correct technical information and the correct tools.
- If you are uncertain about what to do, have the work performed by an authorized Audi dealer, an authorized Audi Service Facility, or another qualified workshop. Serious personal injury may result from work that is not performed correctly.

WARNING

- Turn off the engine.
- Turn off the ignition.
- Set the parking brake.
- Select the “P” (Park) position.
- Allow the engine to cool.
- Keep children away from the engine compartment.
- Never spill fluids on a hot engine. These fluids (such as the freeze protection contained in the coolant) can catch fire.
- Avoid short circuits in the electrical system.
- Never reach into the radiator fan. The fan is temperature-controlled and can turn on suddenly, even when the ignition is turned off.
- Never open the hood when there is steam or coolant escaping from the engine compartment, because there is a risk that you could be burned. Wait until no steam or coolant is escaping.
- The cap on the coolant expansion tank must never be opened when the coolant is hot. The cooling system is under pressure. There is a risk of burns

- To protect your face, hands, and arms from hot steam or coolant, cover the cap with a thick cloth when opening.
- Do not remove the engine cover under any circumstances. This increases the risk of burns.
- Due to the risk of electric shock, never touch the ignition cable or other components in the electronic high-voltage ignition system when the engine is running or is starting.
- If a position is selected while the vehicle is stationary and the engine is running, do not press the accelerator pedal inadvertently. Pressing the accelerator pedal will cause the vehicle to move, and this could result in an accident.
- If inspections or repairs must be performed while the engine is running, moving components (such as the ribbed belt, generator, and radiator fan) pose an additional risk.
- Set the parking brake first and select the “P” (Park) position.
- Always make sure that no parts of the body, jewelry, ties, loose clothing, and long hair can be caught in moving engine components. Before any work, always remove any jewelry and/or ties, tie back long hair, and make sure all clothing fits close to the body to reduce the risk of anything becoming caught in engine components.
- Pay attention to the following warnings listed when work on the fuel system or on the electrical equipment is required.
- Do not smoke.
- Never work near open flames.
- Always have a working fire extinguisher nearby.
- All work on the battery or electrical system in your vehicle can result in injuries, chemical burns, accidents, or burns. Because of this, all work must be performed **only** by an authorized Audi dealer or authorized Audi Service Facility.
- Limit your exposure to exhaust and chemicals to as short a time as possible.



WARNING

California Proposition 65 Warning:

- Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harms. Wash hands after handling.



Note

When filling fluids, be sure not to add any fluids to the wrong reservoirs. Otherwise severe malfunctions and engine damage will occur.



For the sake of the environment

You should regularly check the ground under your vehicle in order to detect leaks quickly. If there are visible spots from oil or other fluids, bring your vehicle to an authorized Audi dealer or authorized Audi Service Facility to be checked.

Opening and closing the hood

The hood is released from inside the vehicle.



Fig. 158 Footwell: release lever

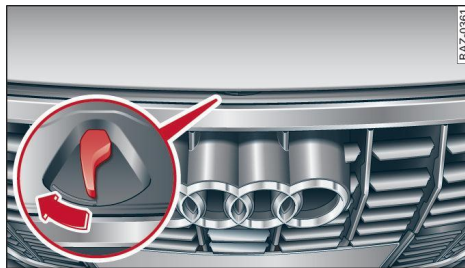


Fig. 159 Unlocked hood: lever

Observe the safety precautions ⇒ page 237, General information.

Make sure the wiper arms are not raised up from the windshield. Otherwise the paint could be damaged.

Opening the hood

- ▶ With the door open, pull the lever ⤴¹⁾ below the instrument panel in the direction of the arrow ⇒ fig. 158.
- ▶ Raise the hood slightly ⇒ ⚠.
- ▶ Press the lever ⇒ fig. 159 in the direction of the arrow. This releases the hooks.
- ▶ Open the hood.

Closing the hood

- ▶ Push the hood down until you override the force of the struts.
- ▶ Let the hood fall lightly into the latch. *Do not press it in.* ⇒ ⚠.

Messages

The following messages may appear, depending on the vehicle equipment:



Warning! Hood is not locked. Stop vehicle and check the lock

The hood latch is not locked correctly. Stop immediately and close the hood.



WARNING

- Never open the hood when there is steam or coolant escaping from the engine compartment, because there is a risk that you could

¹⁾ The ⤴ symbol is not available in all countries.

be burned. Wait until no steam or coolant is escaping.

- For safety reasons, the hood must always be latched securely while driving. Because of this, always check the hood after closing it to make sure it is latched correctly. The

hood is latched if the front corners cannot be lifted.

- If you notice that the hood is not latched while you are driving, stop immediately and close it, because driving when the hood is not latched increases the risk of an accident.

Engine compartment overview

The most important check points.

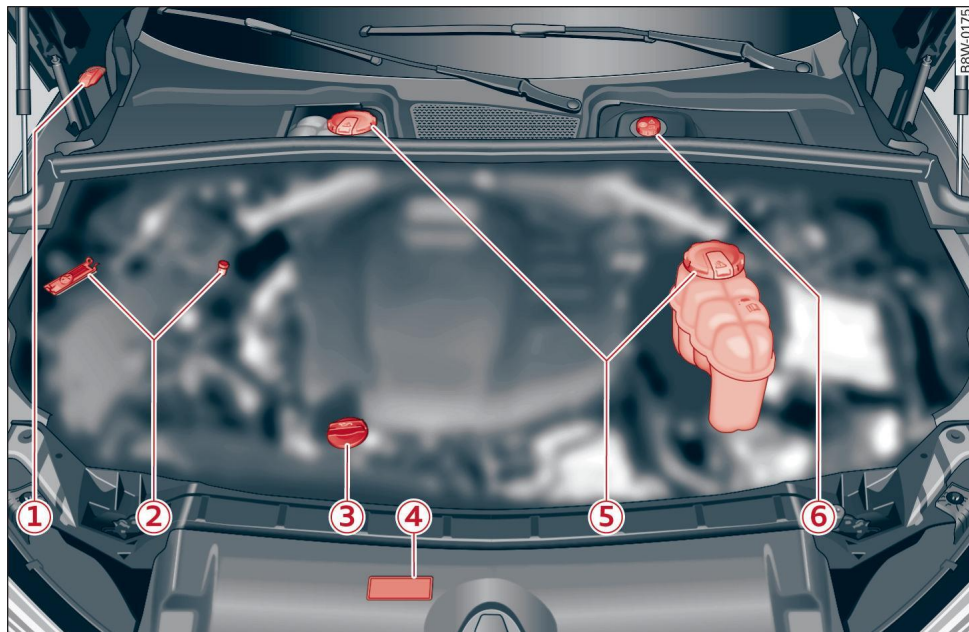


Fig. 160 Engine compartment overview: diagram

Observe the safety precautions ⇒ *page 237, General information.*

- ① Washer fluid reservoir (☞) ⇒ *page 252*
- ② Jump start points: (+) under a cover, (-) ground point ⇒ *page 251, Charging the 12 volt vehicle battery* ⇒ *page 291, Jump starting*
- ③ Engine oil filler opening (☞) ⇒ *page 242, Checking the engine oil level*
- ④ Sticker for engine oil specifications ⇒ *page 241*
- ⑤ Coolant expansion tank (☞) (depending on the engine) ⇒ *page 246*

- ⑥ Brake fluid reservoir (☞) ⇒ *page 247*

The coolant expansion tank and the engine oil filling opening may be located in different places within the engine compartment, depending on the engine version.

Engine oil

If the engine oil level is too low

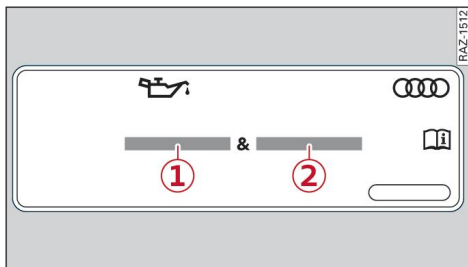


Fig. 161 Engine oil sticker

- ① Engine oil viscosity
- ② Engine oil standard

If you need to add engine oil, use an oil that meets the engine oil standard listed on the sticker ⇒ *fig. 161*. The sticker with the specified standard is located in the front of the engine compartment ⇒ *page 240, fig. 160*. When using the specified engine oil, you can adjust the oil level as often as needed.

If engine oil that meets the recommended specification is not available, **in an emergency** you may add a maximum of 0.5 quart (0.5 liter) engine oil of the that meets the following different standard **one time** until the next regular oil change.

- Standard VW 504 00, ACEA C3, ACEA C4, API SP or ILSAC GF-6A. All viscosity classes within these standards are permitted.

Audi recommends having the oil changed by an authorized Audi dealer or authorized Audi Service Facility.

! Note

Audi recommends using approved engine oil that meets the respective VW standard. Using engine oils which do not meet these quality standards can cause damage to the engine. As an exception and only in an emergency, 0.5 qt (0.5 l) of engine oil that differs from the standards listed may be used.

i Tips

Audi recommends using engine oils provided by Audi Genuine Parts.

Messages

The following messages may appear, depending on the vehicle equipment:

Turn off engine. Oil pressure too low

Stop driving and turn off the engine. Check the engine oil level ⇒ *page 242*.

- If the engine oil level is too low, add engine oil ⇒ *page 243*. Only continue driving once the indicator light turns off.
- If the engine oil level is correct and the indicator light still turns on, turn the engine off and do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Applies to: vehicles with oil level warning

Please add oil immediately

Stop driving and turn off the engine. Check the engine oil level ⇒ *page 242* and add engine oil immediately ⇒ *page 243*.

Please add max. x qt (x l) oil. You can continue driving

Add the amount of oil shown immediately ⇒ *page 243*.

Please reduce oil level

There is too much oil in the engine and there is a risk of damaging the catalytic converter or engine. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have engine oil extracted if necessary. Avoid high engine speeds, full acceleration, and heavy engine loads.

Oil level sensor: oil change necessary. Please contact Service

Fuel has entered the engine oil. This will cause the engine oil level to rise slowly and the engine oil quality to decrease. Do not extract engine oil to reduce the level, because this will increase the ►

risk of engine damage. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have engine oil extracted.

Oil level system: malfunction! Please contact Service

The sensor that checks the engine oil level has malfunctioned. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Oil pressure sensor: malfunction! Please contact Service

The sensor that checks the engine oil pressure has malfunctioned. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Please drive to warm up engine

Especially low outside temperatures are a main reason why fuel may get into the engine oil. The fuel can only evaporate from the engine oil if the engine oil temperature is high enough.

Drive in the “S” position.

Drive the engine at higher RPMs while avoiding full acceleration.

You should drive for at least 30 minutes. The indicator light may not turn off during this time. Repeat the steps that are described at any time.

Have an authorized Audi dealer or authorized Audi Service Facility repair the malfunction if the indicator light does not turn off after a few drives.

WARNING

When the message  **Please drive to warm up engine** appears, adjust your speed according to the weather, road, terrain, and traffic conditions. You should never disobey the traffic laws applicable in the country in which you are driving in order to follow driving recommendations.

Tips

The oil pressure warning  is not an oil level indicator. Always check the oil level regularly.

Checking the engine oil level

The engine oil level can be checked in the MMI.

Observe the safety precautions ⇒ *page 237, General information.*

- ▶ Park the vehicle on a level surface.
- ▶ Shut the engine off when it is warm.
- ▶ Turn only the ignition on again.
- ▶ Wait approximately five minutes so that the engine oil can flow back into the engine oil pan.
- ▶ **Applies to MMI:** Select on the home screen: **VEHICLE > Settings & Service > Oil level.**
- ▶ Read the oil level in the display. Add engine oil if the bar in the oil level indicator is just below “min” ⇒ *page 243.*



Note

If the engine oil level is too low or too high, there is a risk of engine damage.



Tips

The oil level indicator in the display is only an informational display. If the oil level is too low, a minimum oil warning appears in the instrument cluster. Add oil and close the hood. The current oil level will be displayed on the MMI the next time the ignition is turned on.



Tips

The engine oil consumption may be up to 0.5 quart/600 miles (0.5 liter/1,000 km), depending on driving style and operating conditions. In RS models, the oil consumption may be up to 0.8 qt/600 mi (0.8 L/1,000 km). Consumption may be higher during the first 3,000 miles (5,000 km). The engine oil level must be checked regularly. It is best to check each time you refuel your vehicle and before long drives.

– Because of the lubrication and cooling of the engine, combustion engines consume oil. The oil consumption varies depending on the engine and may change during the service life of the engine. Engines generally consume more oil at the beginning during the break-in period. Then oil consumption stabilizes after the break-in period.

- Under normal conditions, oil consumption depends on the quality and viscosity of the oil, the engine RPM, the climate conditions, and the road conditions. The dilution of oil from condensation or fuel residue as well as the age of the oil also play a role. Because engine wear increases with mileage, oil consumption will increase again over time until it may be necessary to replace worn components.
- Because all these variables play a role, it is not possible to define an oil consumption standard. Therefore, the oil level must be checked regularly.
- If you believe that your engine has increased its oil consumption, contact an authorized Audi dealer or authorized Audi Service Facility to determine the cause. Please note that an exact oil consumption measurement must be done with the necessary care and accuracy and may take time. An authorized Audi dealer or authorized Audi Service Facility is trained in accurately measuring the oil consumption.
- You can find information on engine oil and engine oil capacities for the USA at www.audiusa.com/help/maintenance, or for Canada at www.audi.ca/ca/web/en/customer-area/care-and-maintenance/audi-service-schedules.html, or call 800-822-2834.

- ▶ Turn off the engine.
- ▶ Open the hood ⇒ *page 239*.
- ▶ Unscrew the cap  for the engine oil filler opening ⇒ *fig. 162*.
- ▶ Carefully add 0.5 quart (0.5 liter) of the correct oil ⇒ *page 241*.
- ▶ Close the engine oil filler opening cap.
- ▶ Close the hood ⇒ *page 239*.
- ▶ Restart the ignition after two minutes and read the current oil level in the MMI ⇒ *page 242*.
- ▶ Applies to: using engine oil that meets the recommended specification: Add some more engine oil again if necessary.



WARNING

- When adding oil, do not let oil drip onto hot engine components. This increases the risk of a fire.
- You must close the cap on the oil filler opening correctly so that oil does not leak out onto the hot engine and exhaust system when the engine is running, because this is a fire hazard.
- Always clean skin thoroughly if it comes into contact with engine oil.
- Engine oil is poisonous and must be kept out of reach of children.
- Store the engine oil securely in the original container.



Note

- Only use high-grade engine oil that explicitly meets the Audi oil quality standard for your vehicle. Using another oil may cause severe vehicle damage.
- Do not mix any additives with the engine oil. Additives may cause engine damage that is not covered by your New Vehicle Limited Warranty.



For the sake of the environment

- Oil should never enter the sewer system or come into contact with the ground.
- Follow the legal regulations in the country where you are located when disposing of empty oil containers.

Adding engine oil



Fig. 162 Engine compartment: engine oil filling opening cover (example)

Observe the safety precautions ⇒ *page 237, General information*.

Changing engine oil

Audi recommends having the oil changed at an authorized Audi dealer or authorized Audi Service Facility.

Observe the safety precautions ⇨ *page 237, General information.*

The engine oil must be changed at the intervals specified in the Warranty & Maintenance Booklet. This is very important because the lubrication function of the oil gradually declines during regular vehicle operation.

The engine oil should be changed more frequently under certain circumstances. Have the oil changed more frequently if you often drive short distances, your vehicle is predominantly in stop-and-go traffic situations, is in very dusty environments, or is operated for long periods of time in temperatures below zero.

Cleansing additives in the oil make fresh oil appear darker after the engine has run briefly. This is normal and no reason to change the engine oil more frequently than recommended.

Because correctly disposing of engine oil is difficult and special tools and technical knowledge are needed for an oil change, Audi recommends having your engine oil changed by an authorized Audi dealer or authorized Audi Service Facility.

If you change the engine oil yourself, please note the following important information:



WARNING

If you change the engine oil on the vehicle yourself, the following precautions must be followed:

- Wear protective eyewear.
- Due to the risk of scalding, allow the engine to cool down sufficiently.
- Maintain enough distance when you are removing the oil drain plug. While doing this, keep your forearm parallel to the ground to reduce the risk of hot oil dripping down your arm.

- Drain the oil into a container designed for this purpose that is large enough to hold the full amount of oil in your engine.
- Engine oil is poisonous. Always store out of reach of children.
- Prolonged contact of used engine oil with the skin may cause skin damage. Always wash oil off immediately with soap and water to protect your skin.



Note

Do not mix any additives with the engine oil. Additives may cause engine damage that is not covered by your New Vehicle Limited Warranty.



For the sake of the environment

- Before changing the engine oil, make sure you can dispose of the used engine oil correctly.
- Engine oil must always be disposed of correctly. Do not dump it in the yard, in the forest, or in open water, river channels, or sewers.
- Have your used engine oil recycled by bringing it to a used oil collection site or contact a gas station.

Cooling system

Coolant

The engine cooling system is filled with a mixture of purified water and coolant additive at the factory. This coolant must not be changed.

The coolant level is monitored using the  indicator light. However, you should occasionally check the coolant level.

Messages

The following messages may appear, depending on the vehicle equipment:



Turn off engine and check coolant level. See owner's manual

The coolant level is too low. ►

Do not continue driving and turn off the ignition. Check the coolant level ⇒ *page 246*.

- If the coolant level is too low, add coolant ⇒ *page 246*. Only continue driving once the indicator light turns off.

Coolant temperature: too high. Please let engine run while vehicle is stationary

Let the engine run at idle for a few minutes to cool off, until the indicator light turns off.

- If the indicator light does not turn off, do not continue driving the vehicle. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Coolant system: malfunction! Please turn off engine

Do not continue driving, shut off the engine, and turn off the ignition. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Coolant additive

The coolant additive is made of anti-freezing and corrosion protection agents. Only add the following coolant additives mixed with distilled water.

Coolant additive	Specification
G12evo	TL 774 L

The amount of coolant additive that needs to be mixed with water depends on the climate where the vehicle will be operated. If the coolant additive percentage is too low, the coolant can freeze and damage the engine.

	Coolant additive	Freeze protection
Warm regions	min. 40% max. 45%	min. -13 °F (-25 °C)
Cold regions	min. 50% max. 55%	max. -40 °F (-40 °C)

Note

- Before the start of winter, have an authorized Audi dealer or authorized Audi Service Facility check if the coolant additive in your vehicle matches the percentage appropriate

for the climate. This is especially important when driving in colder climates.

- If the G12evo coolant additive is not available in an emergency, do not add any other additive. You could damage the engine. If this happens, only use distilled water and restore the correct mixture ratio with the specified coolant additive as soon as possible.
- Only refill with new coolant.
- Radiator sealant must not be mixed with the coolant.
- You can continue driving if the permitted G12evo coolant additive was not added. However, go to an authorized Audi dealer or authorized Audi Service Facility immediately to have the coolant replaced to reduce the risk of engine damage.
- Due to the risk of engine damage, the cooling system should only be refilled by an authorized Audi dealer or authorized Audi Service Facility. An authorized Audi dealer or authorized Audi Service Facility can also provide you with important information about the recommended coolant additive.

Checking coolant

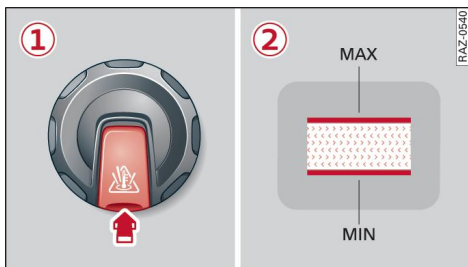


Fig. 163 Engine compartment - coolant expansion tank (diagram): ① cover with release button; ② coolant expansion tank markings (4-cylinder engine)

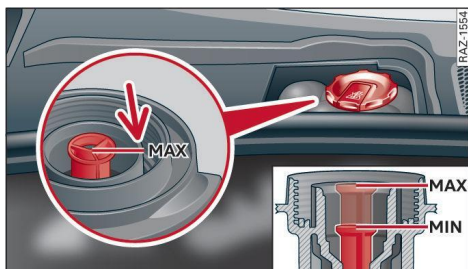


Fig. 164 Coolant expansion tank markings (6-cylinder engine)

Observe the safety precautions ⇒ *page 237, General information.*

Depending on the version of the engine, the coolant expansion tank will be located in the engine compartment ⇒ *page 246, Checking the coolant level/adding coolant (1)* or in the plenum chamber under a cover ⇒ *page 246, Checking the coolant level/adding coolant (2):*

Checking the coolant level/adding coolant (1)

Applies to: vehicles with coolant expansion tank in the engine compartment

In vehicles with a 4-cylinder engine, the coolant expansion tank is located in the engine compartment ⇒ *page 240, fig. 160.*

- ▶ Park the vehicle on a level surface.
- ▶ Turn off the ignition.
- ▶ Open the hood ⇒ *page 239.*
- ▶ Check the coolant level in the coolant expansion tank ⇒ *page 240, fig. 160* using the outer markings ② ⇒ *fig. 163.* The coolant level must

be between the markings ② when the engine is cold. When the engine is warm it can be slightly above the upper marking.

- ▶ If you must add coolant, use a mixture of water and coolant additive. Audi recommends mixing the coolant additive with distilled water.
- ▶ Allow the engine to cool ⇒ ⚠.
- ▶ Place a large, thick towel on the coolant expansion tank cap.
- ▶ Push the release button ① ⇒ *fig. 163* on the cap and carefully turn it to the left until you feel resistance ⇒ ⚠.
- ▶ Push the release button again and remove the cap completely.
- ▶ Requirement for adding coolant: there must be a residual amount of coolant in the expansion tank ⇒ !.
- ▶ Add the correct mixture ratio of coolant ⇒ *page 245* up to the upper marking ② ⇒ *fig. 163.*
- ▶ Make sure that the fluid level remains stable. Add more coolant if necessary.
- ▶ Turn the cap to the right to tighten it until you feel resistance a second time.

Checking the coolant level/adding coolant (2)

Applies to: vehicles with coolant expansion tank in the plenum chamber

In vehicles with a 6-cylinder engine, the coolant expansion tank is located under a cover in the plenum chamber ⇒ *page 240, fig. 160.*

- ▶ Park the vehicle on a level surface.
- ▶ Turn off the ignition.
- ▶ Allow the engine to cool ⇒ ⚠.
- ▶ Open the hood ⇒ *page 239.*
- ▶ Remove the cover that is located under the windshield wiper on the front passenger's side.
- ▶ Place a large, thick towel on the coolant expansion tank cap.
- ▶ Push the release button ① ⇒ *fig. 163* on the cap and carefully turn it to the left until you feel resistance ⇒ ⚠.
- ▶ Push the release button again and remove the cap completely.
- ▶ There is a float located in the coolant expansion tank. Read the coolant level using the coolant level float ⇒ *fig. 164.* When the engine is cold, the float must be located between the MIN

marking and the edge of the filler opening (MAX) on the coolant expansion tank

⇒ *fig. 164*. When the engine is warm, the float can also be slightly above MAX.

- ▶ If the coolant level is correct, turn the cap to the right to tighten it until you feel resistance a second time, and then reinstall the cover below the windshield wiper.
- ▶ If you must add coolant, use a mixture of water and coolant additive. Audi recommends mixing the coolant additive with distilled water.
- ▶ Requirement for adding coolant: there must be a residual amount of coolant in the expansion tank ⇒ .
- ▶ Add coolant in the correct mixture ratio ⇒ *page 245* until the float is positioned at the edge of the filler opening on the coolant expansion tank (= MAX) ⇒ *fig. 164*.
- ▶ Make sure that the fluid level remains stable. Add more coolant if necessary.
- ▶ Turn the cap to the right to tighten it until you feel resistance a second time, and then reinstall the cover below the windshield wiper.



WARNING

- The engine/motor compartment in any vehicle is a potentially dangerous area. Shut off the engine, turn off the ignition, and allow the engine to cool before working in the engine compartment. Always follow the information found in ⇒ *page 237, General information*.
- Never open the hood if you can see or hear steam or coolant escaping from the engine compartment. This increases the risk of burns. The cooling system is under pressure. When you no longer see or hear steam or coolant escaping, you may open the engine compartment with caution.
- When working in the engine compartment, remember that the radiator fan can turn on even if the ignition is turned off, which increases the risk of injury.
- Coolant additive and coolant can be dangerous to your health. For this reason, store the coolant in the original container and away from children. There is a risk of poisoning.



Note

Coolant loss that results in the coolant expansion tank becoming nearly empty primarily indicates that there are significant leaks in the cooling system, which can lead to further damage.

- Do not add coolant if the expansion tank is empty. Air could enter the cooling system and increase the risk of damage. If this is the case, do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.
- If there is any coolant remaining, add additional coolant. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. If the  indicator light turns on again, do not continue driving and turn off the ignition. See an authorized Audi dealer or authorized Audi Service Facility for assistance.
- If there is too much coolant in the expansion tank after adding coolant, drive to an authorized Audi dealer or authorized Audi Service Facility as soon as possible to have the coolant level corrected.
- Using non-distilled water increases the risk of engine damage. Its chemical components may cause significant corrosion damage in the engine.
- If you had to add a large amount of non-distilled water (more than 0.5 liter), then immediately drive to an authorized Audi dealer or authorized Audi Service Facility to have the coolant changed.

Brake fluid

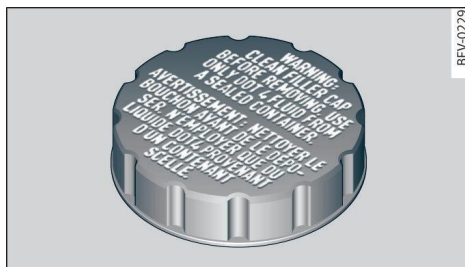


Fig. 165 Engine compartment: cap on brake fluid reservoir

Observe the safety precautions ⇒ *page 237, General information*.

Checking the brake fluid level

The brake fluid reservoir is located under a cover on the driver's side.

- ▶ Park the vehicle on a level surface.
- ▶ Lift the cover ⇒ *page 240, fig. 160* at both openings and remove it.
- ▶ Read the brake fluid level on the brake fluid reservoir ⇒ *page 240, fig. 160*. The brake fluid level must be between the MIN and MAX markings ⇒ .

The brake fluid level is monitored automatically.

Messages

The following messages may appear, depending on the vehicle equipment:

BRAKE /  Brakes: stop vehicle and check brake fluid level

Stop the vehicle and check the brake fluid level. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Changing the brake fluid

Brake fluid should be changed at regular intervals. Have the brake fluid changed by an authorized Audi dealer or authorized Audi Service Facility. The authorized Audi dealer or authorized Audi Service Facility will inform you of the replacement intervals.

WARNING

- If the brake fluid level is below the MIN marking, it can impair the braking effect and driving safety, which increases the risk of an accident. Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.
- If the brake fluid is old, bubbles may form in the brake system during heavy braking. This could impair braking performance and driving safety, which increases the risk of an accident.
- The brake fluid in your vehicle must meet the standard VW 501 14 and is available at

an authorized Audi dealer or authorized Audi Service Facility. If this brake fluid is not available, another high-grade brake fluid of equivalent quality may be used, and it must meet the U.S. Federal Motor Vehicle Standard (FMVSS) 116 DOT 4, Class 6.

- Reusing brake fluid or using brake fluid that is not permitted for your vehicle will significantly impair the braking performance and can even result in a failure of the brake system. The manufacturer of the vehicle is not liable for failures or damage resulting from this. It will also not be covered by the warranty.

Note

- If the brake fluid level is above the MAX marking, brake fluid may leak out over the edge of the reservoir and result in damage to the vehicle.
- Do not allow any brake fluid to come into contact with the vehicle paint, because it will corrode the paint.

Electrical system

The following messages may appear, depending on the vehicle equipment:

If the  /  or  indicator light turns on, there is a malfunction in the power supply, the battery, or the vehicle electrical system.

 /  Electrical system: malfunction! Safely stop vehicle

Safely stop your vehicle, do not continue driving, and turn off the ignition ⇒ . See an authorized Audi dealer or authorized Audi Service Facility for assistance.

 Electrical system: malfunction! Restart not possible. Please contact Service

If you turn off the ignition, you will not be able to restart the vehicle. Vehicle functions or driving stability may be limited. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately. ▶

Electrical system: malfunction! Please contact Service

Turn off all electrical equipment that is not needed. If necessary, some equipment will be turned off automatically. Vehicle functions or driving stability may be limited. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately.

Electrical system: low battery charge. Battery will be charged while driving

The starting ability may be impaired.

- If this message turns off after a little while, the vehicle battery has charged enough while driving.
- If the message does not turn off, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.



WARNING

When there is an electrical system malfunction, vehicle functions may not work and driving stability may be limited, which increases the risk of an accident. Do not continue driving and turn off the ignition. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Battery

Battery general information

Because of the complex power supply, all work on batteries such as disconnecting, replacing, etc., should **only** be performed by an authorized Audi dealer or authorized Audi Service Facility ⇒ .

Multiple batteries with different technologies may be installed in your vehicle:

- Vehicle battery (for example, for starting the engine, basic power supply) ⇒ *page 250, Safety precautions*
- Auxiliary battery (for example, for recuperation or optional equipment) ⇒ *page 250, Safety precautions*

Not running the vehicle for long periods of time

The battery will gradually drain if the vehicle does not run for long periods of time. To ensure that the vehicle can still be started, the electrical equipment will be limited or turned off. Some convenience functions, such as interior lighting or power seat adjustment, may not be available under certain circumstances. The convenience functions will be available again when you start the engine.

Even when electrical equipment is turned off, the equipment can still drain the battery if the vehicle is not driven for long periods of time. Deep draining results in a chemical reaction that destroys the inside of the battery. The battery must be charged every month to prevent this ⇒ *page 251*. Contact an authorized Audi dealer or authorized Audi Service Facility for more information.

Winter operation

Cold weather places an especially high load on the 12 volt vehicle battery. Have the battery checked by an authorized Audi dealer or authorized Audi Service Facility before cold weather begins.

Replacing the battery

Applies to: 12 volt vehicle battery

All work on the battery must **only** be performed by an authorized Audi dealer or authorized Audi Service Facility.

The 12 volt vehicle battery was developed based on the installation location and is equipped with safety features. If a 12 volt vehicle battery must be replaced, ask an authorized Audi dealer or authorized Audi Service Facility about the electromagnetic compatibility, size, and the necessary maintenance, power, and safety standards for the new 12 volt vehicle battery. The battery vent on the 12 volt vehicle battery must always be on the negative terminal side. The battery vent on the positive terminal side must always be closed.

When replacing the 12 volt lead-acid vehicle battery, only use a maintenance-free 12 volt lead-acid battery that conforms to the TL 825 06 and ►

VW 7 50 73 standards. These standards must be from October 2014 or newer.

**WARNING**

- All work on the battery or electrical system in your vehicle can result in injuries, chemical burns, accidents, or burns. Because of this, all work must be performed **only** by an authorized Audi dealer or authorized Audi Service Facility.
- Always have an authorized Audi dealer or authorized Audi Service Facility replace the 12 volt vehicle battery, because an adaptation must be performed on the vehicle electrical system when the battery is replaced. Only an authorized Audi dealer or authorized Audi Service Facility has the necessary technology to perform the adaption correctly. Otherwise, there could be a loss of safety-related functions among other things, which increases the risk of an accident.
- Using a 12 volt vehicle battery that does not match the same specifications and dimensions as the factory-installed 12 volt vehicle battery can result in short circuits or cause a fire. Serious injuries or death may result.
- Only use maintenance-free and leak-proof 12 volt vehicle batteries that match the same specifications and dimensions as the factory-installed 12 volt vehicle battery.
- Never connect a charging cable or jump start cable directly to the 12 volt vehicle battery. Only use the connections in the engine compartment ⇒ *page 251*.

**WARNING**

California Proposition 65 Warning:

- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harms. Wash hands after handling.

**Note**

- If the vehicle will be parked for long periods of time, protect the 12 volt vehicle battery against the cold so that it will not “freeze”

- and become damaged ⇒ *page 251, Charging the 12 volt vehicle battery*.
- There are electrical components under the cargo floor behind a trim panel that warm up during operation. To reduce the risk of the components overheating, do not store objects such as blankets under the cargo floor. If the components overheat, they will turn off temporarily. This will be indicated by a message that will be displayed in the instrument cluster until the temperature returns to normal.
- Always have an authorized Audi dealer or authorized Audi Service Facility replace the 12 volt vehicle battery, because an adaptation must be performed on the vehicle electrical system when the battery is replaced. Only an authorized Audi dealer or authorized Audi Service Facility has the necessary technology to perform the adaption correctly.
- Using a vehicle battery that does not meet the AUDI AG quality specifications or with a capacity that is too low will void the vehicle’s certification for use on public roads, and this will void the vehicle registration ⇒ .

**For the sake of the environment**

 Batteries and electrical/electronic devices must be disposed of in an environmentally safe manner ⇒ *page 310, Disposal instructions*.

Safety precautions

Explanation of warning symbols:

	Observe all warnings - there is a risk for injury!
	Always follow the instructions in the Owner’s Manual.
	12 volt vehicle battery. Energized components. Improper handling can result in short circuits ⇒  in <i>Battery general information on page 250</i> .

	With the exception of charging the 12 volt vehicle battery and jump starting, all other procedures involving the 12 volt vehicle battery must be performed by an authorized Audi dealer or authorized Audi Service Facility ⇒  in <i>Battery general information</i> on page 250 ⇒  in <i>Battery general information</i> on page 250.
	Electrolyte fluid is highly corrosive. Always wear protective gloves and eye protection. First aid: if electrolyte fluid enters the eyes, immediately flush with clean water for several minutes. Seek medical attention immediately. Immediately neutralize electrolyte fluid on the skin or clothing using a soap solution and rinse with plenty of water. Seek medical attention immediately if electrolyte fluid is ingested.
	Always wear eye protection.
	If electrolyte fluid enters the eyes, immediately flush with clean water for several minutes. Seek medical attention immediately.
	Fire, sparks, open flame, and smoking are prohibited. Avoid creating sparks and short circuits when handling cables and electrical devices.
	Always keep children away from battery electrolyte fluid and the battery.
	A highly explosive mixture of gases can form when charging batteries.

WARNING

All work on the batteries must **only** be performed by an authorized Audi dealer or authorized Audi Service Facility.

- Gases that escape from these batteries can be poisonous or flammable.
- The contents of these batteries can be corrosive. If any battery contents come into contact with the skin, flush the affected area with clean water for at least 15 minutes. Then wash the affected area with soap. Have the affected area examined by a medical professional.

Note

Applies to: mild hybrid drive

- Components must not be connected to the battery terminals and wires on the 48 volt battery because this increases the risk of damage, for example due to overvoltage.
- Have maintenance work performed only by trained personnel.
- Have the 48 volt lithium battery replaced only by an authorized Audi dealer or authorized Audi Service Facility. Audi recommends an authorized Audi dealer or authorized Audi Service Facility, because these locations have trained personnel and the required parts and tools.
- Never try to replace the 48 volt lithium battery yourself. The 48 volt lithium battery in this vehicle may only be replaced with a 48 volt lithium battery designed by Audi specifically for this vehicle. Using other 48 volt lithium or lead batteries will result in considerable malfunctions or even total failure of the electrical system.
- Never make modifications to the lithium battery.
- Never open the 48 volt battery.

Charging the 12 volt vehicle battery



Fig. 166 Engine compartment: connectors for a charger or jump start cables

Observe the safety precautions ⇒ page 237, *General information*, ⇒  in *Battery general information* on page 250 and ⇒ .

Requirement: only use chargers with a **maximum charging current of 14.8 volts**. The battery cables remain connected.

The charging cable connections are located in the engine compartment. The ground point  is always located on the vehicle body.

- ▶ Turn off the ignition and all electrical equipment.
- ▶ Open the hood $\Rightarrow$ *page 239*.
- ▶ Press the release lever on the positive terminal and fold the cover upward $\Rightarrow$ *fig. 166*.
- ▶ Clamp the terminal clamps on the charger correctly onto the positive terminal  and the ground point .
- ▶ Insert the power cable for the charger into the socket and turn on the charger.
- ▶ Keep the hood completely open during the charging session $\Rightarrow$ .
- ▶ At the end of the charging session, turn off the charger and pull the power cable out of the socket.
- ▶ Remove the charger terminal clamps.
- ▶ Close the cover on the positive terminal.
- ▶ Close the hood $\Rightarrow$ *page 239*.

WARNING

- Never use charging equipment that is unsuitable, visibly damaged, and/or dirty. Check the charging equipment for damage before every use.
- Never connect a charging cable or jump start cable directly to the 12 volt vehicle battery. Only use the connections in the engine compartment $\Rightarrow$ *page 251*.
- A highly explosive mixture of gases can form when charging batteries. Only charge the battery in well-ventilated areas.
- A drained battery can freeze at temperatures around 32 °F (0 °C). Do not charge or use a frozen or thawed battery. If ice forms, the battery housing can crack and battery electrolyte fluid can leak, which increases the risk of an explosion and chemical burns. Contact an authorized Audi dealer or authorized Audi Service Facility for more information.
- Leave the hood open while the 12 volt vehicle battery is charging. If the hood is closed, it could cause an electrical short circuit, which increases the risk of fire.

Tips

Read all of the manufacturer's instructions for the charger before charging the battery.

Windshield washer system



Fig. 167 Engine compartment: washer fluid reservoir cap

Observe the safety precautions $\Rightarrow$ *page 237, General information*.

The windshield washer fluid reservoir  contains the cleaning solution for the windshield and the headlight washer system* $\Rightarrow$ *page 240*. The reservoir capacity can be found in $\Rightarrow$ *page 308*.

To reduce the risk of lime scale deposits on the spray nozzles, use clean water with low amounts of calcium. Always add window cleaner to the water. When the outside temperatures are cold, an anti-freezing agent should be added to the water so that it does not freeze.

Messages

The following messages may appear, depending on the vehicle equipment:

Please add washer fluid

Fill the washer fluid for the windshield washer system and the headlight washer system* when the ignition is turned off.

Note

- The concentration of anti-freezing agent must be adjusted to the vehicle operating conditions and the climate. A concentration that is too high can result in vehicle damage.

- Never add radiator anti-freeze or other additives to the washer fluid.
- Do not use a glass cleaner that contains paint solvents, because this could damage the paint.

Service interval display

The service interval display detects when your vehicle is due for service.

The service interval display works in two stages:

- **Inspection or oil change reminder:** after driving a certain distance, a message appears in the instrument cluster display each time the ignition is turned on or off. The remaining distance or time is displayed briefly.
- **Inspection or oil change due:** if your vehicle has reached an inspection or oil change interval or both intervals at the same time, the message **Inspection due!** or **Oil change due!** or **Oil change and inspection due!** appears briefly after turning the ignition on or off.

Checking service intervals

You can check the remaining distance or time until the next oil change or next inspection in the Infotainment system.

Applies to MMI: Select on the home screen: **VEHICLE > Settings & Service > Service intervals.**

Resetting the indicator

An authorized Audi dealer or authorized Audi Service Facility will reset the service interval display after performing service.

If you have changed the oil yourself, you must reset the oil change interval.

Applies to: MMI: To reset the display, select on the home screen: **VEHICLE > Settings & Service > Service intervals.**



Note

- Only reset the oil change indicator if the oil was changed.
- Regular service work on the vehicle is not only beneficial for sustainable use of the vehicle and retention of its value, but also for operational and traffic safety. For this reason, always have service work performed according to the Audi guidelines.
- Even if the mileage on the vehicle is low, do not exceed the time for the next service.
- Audi is not responsible for damage to the vehicle that occurred due to inadequate service or insufficient part availability.



WARNING

Inadequate service, a lack of service, or failing to adhere to the service intervals can result in the vehicle breaking down in traffic, accidents, and serious injuries.

Wheels

Tires and rims

General information

The combination of a rim and tire will be referred to as a wheel in this Owner's Manual. If only one of the components is referred to, then the term tire or rim will be used.

- ▶ Check your tires regularly for damage, such as punctures, cuts, cracks, and bulges. Remove foreign objects from the tire tread.
- ▶ If driving over curbs or similar obstacles, drive slowly and approach the curb at an angle.
- ▶ Have faulty tires or rims replaced immediately.
- ▶ Protect your tires from oil, grease, and fuel.
- ▶ Mark tires before removing them so that the same running direction can be maintained if they are reinstalled.
- ▶ Lay tires flat when storing and store them in a cool, dry location with as little exposure to light as possible.



WARNING

- Never drive faster than the maximum permitted speed for your tires. This could cause the tires to heat up too much. This increases the risk of an accident because it can cause the tire to burst.
- Always adapt your driving to the road and traffic conditions. Drive carefully and reduce your speed on icy or slippery roads. Even winter tires can lose traction on black ice.



Note

- Please note that summer and winter tires are designed for the conditions that are typical in those seasons. Audi recommends winter tires during the winter months. Low temperatures significantly decrease the elasticity of summer tires, which affects traction and braking ability. If summer tires are used in very cold temperatures, cracks can form on the tread bars, resulting in permanent tire damage that can cause loud driving noise and unbalanced tires.

–Burnished, polished, or chromed rims must not be used in winter driving conditions. The surface of the rims does not have sufficient corrosion protection for this and could be permanently damaged by road salt or similar substances. The exception to this are rims that are part of complete winter wheels provided by the factory.

Tire designations

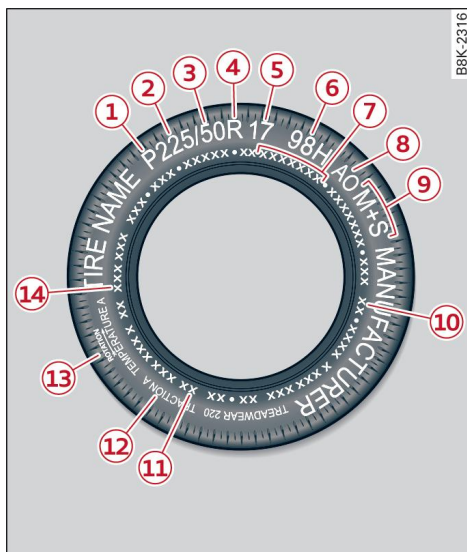


Fig. 168 Tire designations on the sidewall

① Tires for passenger vehicles (if applicable)

“P” indicates a tire for a passenger vehicle. “T” indicates a tire designated for temporary use.

HL indicates High Load Capacity tires.

② Nominal width

Nominal width of the tire between the sidewalls in millimeters. In general: the larger the number, the wider the tire.

③ Aspect ratio

Height/width ratio expressed as a percentage.

④ Tire construction

“R” indicates a radial tire.

⑤ Rim diameter

Size of the rim diameter in inches.

⑥ Load index and speed rating

The load index indicates the tire's load-carrying capacity.

The speed rating indicates the maximum permitted speed. Also see ⇨ [▲ in General information on page 254.](#)

“EXTRA LOAD”, “xl” or “RF” indicates that the tire is reinforced or is an Extra Load tire.

Speed rating	Maximum permitted speed
P	up to 93 mph (150 km/h)
Q	up to 99 mph (160 km/h)
R	up to 106 mph (170 km/h)
S	up to 110 mph (180 km/h)
T	up to 118 mph (190 km/h)
U	up to 124 mph (200 km/h)
H	up to 130 mph (210 km/h)
V	up to 149 mph (240 km/h) ^{a)}
Z	above 149 mph (240 km/h) ^{a)}
W	up to 168 mph (270 km/h) ^{a)}
Y	up to 186 mph (300 km/h) ^{a)}

^{a)} For tires above 149 mph (240 km/h), tire manufacturers sometimes use the code “ZR”.

⑦ US DOT number (TIN) and manufacture date

The manufacture date is listed on the tire sidewall (it may only appear on the inner side of the tire):

DOT ... 2224 ...

means, for example, that the tire was produced in the 22nd week of the year 2024.

⑧ AO or RO

Tires with the designation “AO” or “RO” that have been specifically matched to your Audi are installed at the factory. When used correctly, these tires meet very high standards for safety and handling. An authorized Audi dealer or authorized Audi Service Facility

will be able to provide you with more information.

⑨ Mud and snow capability

“M/S” or “M+S” indicates the tire is suitable for driving on mud and snow. The  symbol indicates a winter tire.

⑩ Composition of the tire cord and materials

The number of plies indicates the number of rubberized fabric layers in the tire. In general: the more layers, the more weight a tire can carry. Tire manufacturers must also specify the materials used in the tire. These include steel, nylon, polyester, and other materials.

⑪ Maximum permitted load

This number indicates the maximum load in kilograms and pounds that the tire can carry.

⑫ Uniform tire quality grade standards for treadwear, traction, and temperature resistance

Treadwear, traction, and temperature ranges ⇒ *page 272.*



13 Running direction

The arrows indicate the running direction of unidirectional tires. You must always follow the specified running direction
⇒ *page 290*.

14 Maximum permitted inflation pressure

This number indicates the maximum pressure to which a tire can be inflated under normal operating conditions.

Glossary of tire and loading terminology

Accessory weight

means the combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio, and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

Aspect ratio

means the ratio of the height to the width of the tire in percent. Numbers of 55 or lower indicate a low sidewall for improved steer-

ing response and better overall handling on dry pavement.

Bead

means the part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim.

Bead separation

means a breakdown of the bond between components in the bead.

Cord

means the strands forming the plies in the tire.

Cold tire inflation pressure

means the tire pressure recommended by the vehicle manufacturer for a tire of a designated size that has not been driven for more than a couple of miles (kilometers) at low speeds in the three hour period before the tire pressure is measured or adjusted.

Curb weight

means the weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, air conditioning and additional weight of optional equipment. ►

Extra load tire

means a tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire. Extra load tires may be identified as “XL”, “xl”, “EXTRA LOAD”, or “RF” on the sidewall.

Gross Axle Weight Rating (“GAWR”)

means the load-carrying capacity of a single axle system, measured at the tire-ground interfaces.

Gross Vehicle Weight Rating (“GVWR”)

means the maximum total loaded weight of the vehicle.

Groove

means the space between two adjacent tread ribs.

High load capacity tire

High load capacity tires are extra load tires that are designed to carry a higher load at the same pressure. High load capacity tires are identified with the prefix “HL” in front of the tire size designation.

Load rating (code)

means the maximum load that a tire is rated to carry for a given inflation pressure. You may not find this information on all tires because it is not required by law.

Maximum load rating

means the load rating for a tire at the maximum permissible inflation pressure for that tire.

Maximum loaded vehicle weight

means the sum of:

- (a) Curb weight
- (b) Accessory weight
- (c) Vehicle capacity weight, and
- (d) Production options weight

Maximum (permissible) inflation pressure

means the maximum cold inflation pressure to which a tire may be inflated. Also called “maximum inflation pressure.”

Normal occupant weight

means 150 lbs. (68 kilograms) times the number of occupants seated in the vehicle up to the total seating capacity of your vehicle.

Occupant distribution

means distribution of occupants in a vehicle.

Outer diameter

means the overall diameter of an inflated new tire.

Overall width

means the linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs.

Ply

means a layer of rubber-coated parallel cords.

Production options weight

means the combined weight of those installed regular production options weighing over 5 lbs. (2.3 kg) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim.

Radial ply tire

means a pneumatic tire in which the ply cords that extend to the

beads are laid at substantially 90 degrees to the centerline of the tread.

Recommended inflation pressure

see ⇨ *page 257, Cold tire inflation pressure.*

Reinforced tire

means a tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire. Reinforced tires may be identified as “XL”, “xl”, “EXTRA LOAD”, or “RF” on the sidewall.

Rim

means a metal support for a tire or a tire and tube assembly upon which the tire beads are seated.

Rim diameter

means nominal diameter of the bead seat. If you change your wheel size, you will have to purchase new tires to match the new rim diameter.

Rim size designation

means rim diameter and width. ►

Rim width

means nominal distance between rim flanges.

Sidewall

means that portion of a tire between the tread and bead.

Speed rating (letter code)

means the speed at which a tire is designed to be driven for extended periods of time. The ratings range from 93 mph (150 km/h) to 186 mph (298 km/h) ⇒ *table on page 256*. You may not find this information on all tires because it is not required by law.

The speed rating letter code, where applicable, is molded on the tire sidewall and indicates the maximum permissible road speeds. See also ⇒  *in General information on page 254*.

Tire pressure monitoring system

means a system that detects when one or more of a vehicle's tires are underinflated and illuminates a low tire pressure warning telltale.

Tread

means that portion of a tire that comes into contact with the road.

Tread separation

means pulling away of the tread from the tire carcass.

Treadwear indicators (TWI)

means the projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread. See ⇒ *page 264, Treadwear indicator* for more information on measuring tire wear.

Uniform Tire Quality Grading

is a tire information system developed by the United States National Highway Traffic Safety Administration (NHTSA) that is designed to help buyers make relative comparisons among tires.

The UTQG is not a safety rating and not a guarantee that a tire will last for a prescribed number of miles (kilometers) or perform in a certain way. It simply gives tire buyers additional information to combine with other considerations, such as price, brand loyalty and dealer recommendations. Under UTQG, tires are graded by the ►

tire manufacturers in three areas: treadwear, traction, and temperature resistance. The UTQG information on the tires, molded into the sidewalls.

U.S. DOT Tire Identification Number (TIN)

This is the tire's "serial number". It begins with the letters "DOT" and indicates that the tire meets all federal standards. The next two numbers or letters indicate the plant where it was manufactured, and the last four numbers represent the week and year of manufacture. For example,

DOT ... 2224 ...

means that the tire was produced in the 22nd week of 2024. The other numbers are marketing codes that may or may not be used by the tire manufacturer. This information is used to contact consumers if a tire defect requires a recall.

Vehicle capacity weight

means the rated cargo and luggage load plus 150 lbs. (68 kilograms) times the vehicle's designated seating capacity.

Vehicle maximum load on the tire

means that load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight and dividing by two.

Vehicle normal load on the tire

means that load on an individual tire that is determined by distributing to each axle its share of the curb weight, accessory weight, and normal occupant weight (distributed in accordance with *⇒ table on page 267*) and dividing by two.

Occupant loading and distribution for vehicle normal load for various designated seating capacities

Refer to the tire inflation pressure label *⇒ page 265, fig. 171* for the number of seating positions. Refer to the table *⇒ table on page 267* for the number of people that correspond to the vehicle normal load.

New tires or wheels

Audi recommends having all work on tires or wheels performed by an authorized Audi dealer or ►

authorized Audi Service Facility. These facilities have the proper knowledge and are equipped with the required tools and replacement parts.

- New tires do not yet have the optimal gripping properties. Drive carefully and at moderate speeds for the first 350 miles (500 km) with new tires.
- Only use tires with the same design, size (rolling circumference), and as close to the same tread pattern as possible on all four wheels.
- Applies to: RS models: Only use tires with the same design, size (rolling circumference), and the same tread pattern on all four wheels.
- Do not replace tires individually. At least replace both tires on the same axle at the same time.
- Audi recommends using Audi Original Tires. If you would like to use different tires, please note that the tires may perform differently even if they are the same size ⇒ ⚠.
- If you would like to equip your vehicle with a tire and rim combination that is different from what was installed at the facto-

ry, consult with an authorized Audi dealer or authorized Audi Service Facility before making a purchase ⇒ ⚠.

Because the spare tire* is different from the regular tires installed on the vehicle (such as winter tires or wide tires), only use the spare tire* temporarily in case of emergency and drive carefully while it is in use. It should be replaced with a regular tire as soon as possible.

All four wheels must be equipped with tires that are the same brand and have the same construction and tread pattern so that the drive system is not damaged by different tire speeds. For this reason, in case of emergency, only use a spare tire* that is the same circumference as the regular tires.



WARNING

- Do not use steel rims that are 17 inches or larger. Otherwise, damage to the vehicle and an accident could result.
- Only use tire/rim combinations and suitable wheel bolts that have been approved by

Audi. Otherwise, damage to the vehicle and an accident could result.

- For technical reasons, it is not possible to use tires from other vehicles. In some cases, you cannot even use tires from the same vehicle model.
- Make sure that the tires you select have enough clearance to the vehicle. Replacement tires should not be chosen simply based on the nominal size, because tires with a different construction can differ greatly even if they are the same size. If there is not enough clearance, the tires or the vehicle can be damaged and this can reduce driving safety and increase the risk of an accident.
- Only use tires that are more than six years old when absolutely necessary and drive carefully when doing so.
- Do not use run-flat tires on your vehicle. Using them when not permitted can result in vehicle damage or accidents.
- If you install wheel covers on the vehicle, make sure they allow enough air circulation to

cool the brake system. If they do not, this could increase the risk of an accident.

- Mounting a tire on the rim incorrectly can result in tire damage or failure. To reduce the risk of an accident, only trained personnel may mount a tire on the rim.

Tire wear and damage

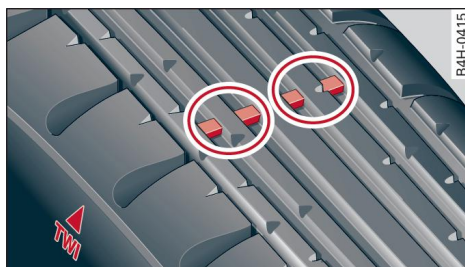


Fig. 169 Tire profile: treadwear indicator

Tire wear

- Check the tires regularly for wear.
- Inflation pressure that is too low or high can increase tire wear considerably.
 - Driving quickly through curves, rapid acceleration, and heavy braking increase tire wear. When driving under these conditions, check the tread depth every 3,100 miles (5,000 km) to 6,200 miles (10,000 km).

- Have an authorized Audi dealer or authorized Audi Service Facility check the wheel alignment if there is unusual wear.
- Have the wheels rebalanced if an imbalance is causing noticeable vibration in the steering wheel. If you do not, the tires and other vehicle components could wear more quickly.

Treadwear indicator

Original equipment tires contain treadwear indicators in the tread pattern, which are bars that are 1/16 inch (1.6 mm) high and are spaced evenly around the tire perpendicular to the running direction ⇒ *fig. 169*. The letters “TWI” or triangles on the tire sidewall indicate the location of the treadwear indicators.

When checking tread depth, you must check the wear indicators across the entire width of the tire and on all four tires.

The tires have reached the minimum tread depth ¹⁾ when they have worn down to the treadwear

indicators. Replace the tires with new ones ⇒ .

Tire rotation

Rotating the tires regularly is recommended to ensure the tires wear evenly. To rotate the tires, install the tires from the rear axle on the front axle and vice versa. This will allow the tires to have approximately the same length of service life.

For unidirectional tires, make sure the tires are installed according to the running direction indicated on the tire sidewall ⇒ *page 290*.

Hidden damage

Damage to tires and rims can often occur in locations that are hidden. Unusual vibrations in the vehicle or pulling to one side may indicate that there is tire damage. Reduce your speed immediately. Check the tires for damage. If no damage is visible from the outside, drive slowly and carefully to the nearest authorized Audi dealer or authorized Audi Service ►

¹⁾ Obey any applicable regulations in the country where the vehicle is being operated.

Facility to have the vehicle inspected.



WARNING

Tread that has worn too low or uneven tread depths on the tires can reduce driving safety. This can increase the risk of an accident because it has a negative effect on handling, driving through curves, and braking, and because it increases the risk of hydroplaning when driving through deep puddles.

The correct tire pressure for tires installed at the factory is listed on a label. The label is located on the B-pillar (driver's side) ⇒ *fig. 170*, ⇒ *fig. 171*. The location may vary depending on the model.

Use the tire pressure specified for a normal vehicle load when the vehicle is partially loaded ⇒ *table on page 267*. If driving the vehicle when fully loaded, you must increase the tire pressure to the maximum specified pressure ⇒ ⚠.

Tire pressure

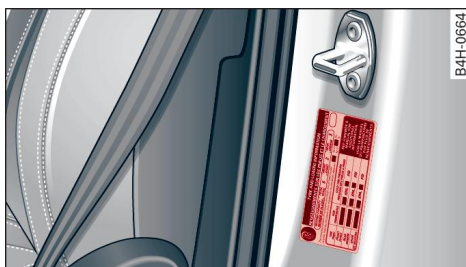


Fig. 170 Driver's side B-pillar: tire pressure label

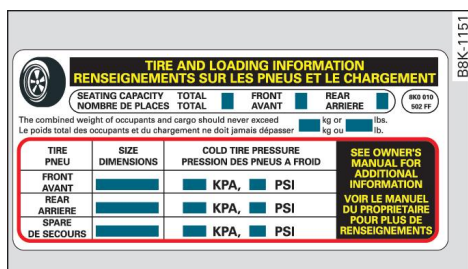


Fig. 171 Tire pressure label

Checking and correcting tire pressure

- ▶ Check the tire pressure at least once per month and also check it before every long drive.
- ▶ Always check the tire pressure when the tires are *cold*. Do not reduce the pressure if it increases when the tires are warm.
- ▶ Refer to the sticker ⇒ *fig. 171* for the correct tire pressure.
- ▶ Correct the tire pressure if necessary.
- ▶ Store the new tire pressure ⇒ *page 274* or ⇒ *page 276*.
- ▶ Check the pressure in the spare tire (compact spare tire)*. Always maintain the maximum

temperature that is specified for the tire.



WARNING

Always adapt the tire pressure to your driving style and the vehicle load.

- Overloading can result in loss of vehicle control and increase the risk of an accident. Read and follow the important safety precautions on ⇒ *page 268*.
- The tire must flex more if the tire pressure is too low or if the vehicle speed or load are too high. This heats the tire up too much. This increases the risk of an accident because it

can cause the tire to burst and result in loss of vehicle control.

- Incorrect tire pressure increases tire wear and has a negative effect on driving and braking behavior, which increases the risk of an accident.



Note

Replace lost valve caps to reduce the risk of damage to the tire valves.



For the sake of the environment

Tire pressure that is too low increases fuel consumption.

Tire pressure table

Please note that the information contained in the following table was correct at the time of publication, and the information is subject to change. If there are any differences, you should always follow the tire pressure sticker ⇒ *page 265, fig. 170*.

Make sure that the tire designation on your tire matches the designation on the tire pressure label and the tire pressure table.

The following table lists recommended tire pressures in cold tires according to the load and the size of the tires installed. ►

Model/ Engine	Tire designation	Tire pressure							
		Normal load (up to 2/3* people) ^{a)}				Maximum load			
		Front		Rear		Front		Rear	
		kPa	PSI	kPa	PSI	kPa	PSI	kPa	PSI
A5 Coupe: 2.0L 4-cylinder	225/50 R17 94Y	220	32	200	29	240	35	240	35
	245/40 R18 93Y	220	32	200	29	240	35	240	35
	245/40 R18 97H	240	35	240	35	260	38	260	38
	255/35 R19 96Y	220	32	220	32	240	35	240	35
	255/35 R19 96H	240	35	240	35	260	38	260	38
	265/30 R20 94Y	230	33	230	33	250	36	250	36
S5 Coupe: 3.0L 6-cylinder	245/40 R18 97H	240	35	220	32	270	39	270	39
	245/40 R18 97Y	250	36	230	33	280	41	280	41
	255/35 R19 96Y	260	38	240	35	290	42	290	42
	255/35 R19 96H	260	38	240	35	290	42	290	42
	265/30 R20 94Y	280	41	260	38	300	44	300	44
RS 5 Coupe: 2.9L 6-cylinder^{b)}	265/35 R19 98Y 155 mph (250 km/h)	240	35	220	32	260	38	260	38
	265/35 R19 98Y 174 mph (280 km/h)	260	38	240	35	280	41	280	41
	265/35 R19 98Y 180 mph (290 km/h)	310	45	300	44	320	46	320	46
	275/30 R20 97Y 155 mph (250 km/h)	250	36	230	33	270	39	270	39
	275/30 R20 97Y 174 mph (280 km/h)	270	39	240	35	290	42	290	42
	275/30 R20 97Y 180 mph (290 km/h)	320	46	310	45	330	48	330	48
A5 Sportback: 2.0L 4-cylinder	225/50 R17 94Y	220	32	200	29	240	35	240	35
	245/40 R18 93Y	220	32	200	29	240	35	240	35
	245/40 R18 97H	240	35	240	35	260	38	280	41
	255/35 R19 96Y	220	32	220	32	260	38	280	41
	255/35 R19 96H	240	35	240	35	260	38	280	41
	265/30 R20 94Y	230	33	230	33	260	38	260	38
S5 Sportback: 3.0L 6-cylinder	245/40 R18 97H	240	35	220	32	270	39	270	39
	245/40 R18 97Y	250	36	230	33	280	41	280	41
	255/35 R19 96Y	260	38	240	35	290	42	290	42
	255/35 R19 96H	260	38	240	35	290	42	290	42
	265/30 R20 94Y	280	41	260	38	310	45	310	45

Model/ Engine	Tire designation	Tire pressure							
		Normal load (up to 2/3* people) ^{a)}				Maximum load			
		Front		Rear		Front		Rear	
		kPa	PSI	kPa	PSI	kPa	PSI	kPa	PSI
RS 5 Sportback: 2.9L 6-cylinder ^{b)}	265/35 R19 98Y 155 mph (250 km/h)	250	36	220	32	270	39	270	39
	265/35 R19 98Y 174 mph (280 km/h)	270	39	250	36	290	42	290	42
	265/35 R19 98Y 180 mph (290 km/h)	310	45	300	44	320	46	320	46
	275/30 R20 97Y 155 mph (250 km/h)	260	38	220	32	280	41	280	41
	275/30 R20 97Y 174 mph (280 km/h)	280	41	250	36	300	44	300	44
	275/30 R20 97Y 180 mph (290 km/h)	320	46	310	45	330	48	330	48

- a) **Vehicles with four seating positions:** two people in the front, **Vehicles with five seating positions:** two people in the front, one person in the rear
- b) The tire pressure depends on the maximum permitted speed for your vehicle.

**WARNING**

Please note the important safety precautions regarding tire pressure ⇒ *page 265* and load limits ⇒ *page 268*.

Tires and vehicle load limits

There are limits to the amount of load or weight that any vehicle and any tire can carry. A vehicle that is overloaded will not handle well and is more difficult to stop. Overloading can not only lead to loss of vehicle control, but can also damage important parts of the vehicle and can lead to sudden

tire failure, including a blowout and sudden deflation that can cause the vehicle to crash.

Your safety and that of your passengers also depends on making sure that load limits are not exceeded. Vehicle load includes everybody and everything in and on the vehicle. These load limits are technically referred to as the vehicle’s **Gross Vehicle Weight Rating** (“GVWR”).

The “GVWR” includes the weight of the basic vehicle, all factory installed accessories, a full tank of fuel, oil, coolant and other fluids ▶

plus maximum load. The maximum load includes the number of passengers that the vehicle is intended to carry (“seating capacity”) with an assumed weight of 150 lbs. (68 kg) for each passenger at a designated seating position and the total weight of any luggage in the vehicle. If you tow a trailer, the weight of the trailer hitch and the tongue weight of the loaded trailer must be included as part of the vehicle load.

The **Gross Axle Weight Rating** (“GAWR”) is the maximum load that can be applied at each of the vehicle’s two axles.

The fact that there is an upper limit to your vehicle’s Gross Vehicle Weight Rating means that the total weight of whatever is being carried in the vehicle (including the weight of a trailer hitch and the tongue weight of the loaded trailer) is limited. The more passengers in the vehicle or passengers who are heavier than the standard weights assumed mean that less weight can be carried as luggage.

The Gross Vehicle Weight Rating and the Gross Axle Weight Rating

are listed on the safety compliance sticker on the front end of the driver’s door.



WARNING

Overloading a vehicle can cause loss of vehicle control, a crash or other accident, serious personal injury, and even death.

- Carrying more weight than your vehicle was designed to carry will prevent the vehicle from handling properly and increase the risk of the loss of vehicle control.

- The brakes on a vehicle that has been overloaded may not be able to stop the vehicle within a safe distance.

- Tires on a vehicle that has been overloaded can fail suddenly, including a blowout and sudden deflation, causing loss of control and a crash.

- Always make sure that the total load being transported – including the weight of a trailer hitch and the tongue weight of a loaded trailer – does not make the vehicle heavier than the vehicle’s Gross Vehicle Weight Rating.

Determining correct load limit

Use the example below to calculate the total weight of the passengers and luggage or other things that you plan to transport so that you can make sure that your vehicle will not be overloaded.

Steps for Determining Correct Load Limit

1. Locate the statement “THE COMBINED WEIGHT OF OCCUPANTS AND CARGO SHOULD NEVER EXCEED XXX KG OR XXX LBS” on your vehicle’s placard (tire inflation pressure label)
⇒ *page 265, fig. 171.*
2. Determine the combined weight of the driver and passengers that will be riding in your vehicle.
3. Subtract the combined weight of the driver and passengers from “XXX” kilograms or “XXX” pounds shown on the sticker
⇒ *page 265, fig. 171.*
4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the “XXX” amount equals 1400 lbs. and there will be five 150 lbs. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs.
 $(1400 - 750 (5 \times 150) = 650 \text{ lbs.})$
5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.
 - Check the tire sidewall (⇒ *page 255, fig. 168*) to determine the designated load rating for a specific tire.

Wheel bolts and rims

Wheel bolts

Wheel bolts must be clean and must loosen and tighten easily.

Rims

Rims with a bolted rim ring* or with bolted wheel covers* consist of multiple pieces. These components were bolted together using special bolts ►

and a special procedure. You must not repair or disassemble them ⇒ .



WARNING

Wheel bolts that are tightened or repaired incorrectly can become loose and result in loss of vehicle control, which increases the risk of an accident. For the correct tightening specification, see ⇒ *page 290, Finishing*.

- Always keep the wheel bolts and the threads in the wheel hub clean and free of grease.
- Only use wheel bolts that fit the rim.
- Always have damaged rims repaired by an authorized Audi dealer or authorized Audi Service Facility. Never repair or disassemble rims yourself, because this increases the risk of an accident.

Winter tires

Winter tires significantly improve the vehicle's handling when driving in winter conditions. Because of their construction (width, compound, tread pattern), summer tires provide less traction on ice and snow.

- ▶ Use winter tires on all four wheels.
- ▶ Only use winter tires that are approved for your vehicle.
- ▶ Please note that the maximum permitted speed may be lower with winter tires ⇒  *in General information on page 254*. An authorized Audi dealer or authorized Audi Service Facility can inform you about the maximum permitted speed for your tires.
- ▶ Check the tire pressure after installing a wheel ⇒ *page 265*.

The effectiveness of winter tires is reduced greatly when the tread is worn down to a depth of 0.16 in (4 mm). The characteristics of winter tires also decrease greatly as the tire ages, regardless of the remaining tread.



For the sake of the environment

Reinstall summer tires at the appropriate time, because they provide better handling when roads are free of snow and ice. Summer

tires cause less road noise, tire wear, and fuel consumption.



Tips

You can also use all season tires instead of winter tires. Please note that in some countries where winter tires are required, only winter tires with the  symbol may be permitted.

Snow chains

Snow chains improve both driving and braking in winter road conditions.

- ▶ Only install snow chains on the front wheels.
- ▶ Check and correct the seating of the snow chains after driving a few feet, if necessary. Follow the instructions from the manufacturer.
- ▶ Note the maximum speed of 30 mph (50 km/h). Observe local regulations.

Use of snow chains is only permitted with certain rim/tire combinations due to technical reasons. Check with an authorized Audi dealer or authorized Audi Service Facility to see if you may use snow chains.

Use **fine-mesh snow chains**. They must not add more than 0.53 inch (13.5 mm) in height, including the chain lock.

You must remove the snow chains on roads without snow. Otherwise, you could impair driving ability and damage the tires.



WARNING

Using incorrect snow chains or installing snow chains incorrectly can result in loss of vehicle control, which increases the risk of an accident.



Note

Snow chains can damage the rims and wheel covers* if the chains come into direct contact with them. Remove the wheel covers* first. Use coated snow chains.

Tips

When using snow chains, it may be advisable to limit the ESC ⇒ *page 122*.

Low-profile tires

Applies to: vehicles with low-profile tires

Compared to other tire/rim combinations, low-profile tires offer a wider tread surface and a larger rim diameter with shorter tire sidewalls. This results in an agile driving feel. However, it may reduce the level of comfort and increase road noise when driving on roads in poor condition.

Low-profile tires can become damaged more quickly than standard tires when driving over large bumps, potholes, manhole covers, and curbs. Therefore, it is particularly important to maintain the correct tire pressure ⇒ *page 265*.

To reduce the risk of damage to the tires and rims, drive very carefully on poor roads.

Check your wheels regularly every 2,000 miles (3,000 km) for damage. For example, check for bulges/cracks on the tires or deformations/cracks on the rims.

After a heavy impact or damage, have the tires and rims inspected or replaced immediately by an authorized Audi dealer or authorized Audi Service Facility.

Low-profile tires can wear out faster than standard tires.

Uniform tire quality grading

- Tread wear
- Traction AA A B C
- Temperature A B C

Quality grades can be found where applicable on the tire side wall between tread shoulder and maximum section width ⇒ *page 255, fig. 168*.

For example: Tread wear **200**, Traction **AA**, Temperature **A**.

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

Tread wear

The *tread wear* grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and one half (1 1/2) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction

The *traction* grades, from highest to lowest, are AA, A, B and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance ⇒ .

Temperature

The *temperature* grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure ⇒ .

The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

WARNING

The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning or peak traction characteristics.

**WARNING**

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

**WARNING**

Temperature grades apply to tires that are properly inflated and not over or underinflated.

Tire pressure monitoring system

General notes

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires).

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to over-heat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

If the tire pressure monitoring indicator appears

Applies to: vehicles with Tire Pressure Monitoring System indicator

The tire pressure indicator in the instrument cluster informs you if the tire pressure is too low or if there is a system malfunction.

Using the ABS sensors, the tire pressure monitoring system compares the tire tread circumference and vibration characteristics of the individual tires. If the pressure changes in one or more tires, this is indicated in the instrument cluster display with an indicator light  and a message. If only one tire is affected, the location of that tire will be indicated.

The tire pressures must be stored again each time you change the pressures (switching between partial and full load pressure) or after changing or replacing a tire on your vehicle ⇒ [page 274](#). The tire pressure monitoring system only monitors the tire pressure you have stored. Refer to the tire pressure label for the recommended tire pressure for your vehicle ⇒ [page 265](#), [fig. 171](#).

Tire tread circumference and vibration characteristics can change and cause a tire pressure warning if:

- The tire pressure in one or more tires is too low
- The tires have structural damage
- The tire was replaced or the tire pressure was changed and it was not stored ⇒ *page 274*
- Tires that are only partially used are replaced with new tires

Indicator lights

If the  indicator light turns on, there is a loss of pressure in at least one tire ⇒ . Check the tires and replace if necessary. Check and correct the pressures of all four tires and store the pressure again ⇒ *page 274*.

If you have not stored new tire pressures, but the indicator light  is blinking and an audio signal sounds, then drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

TPMS Tire pressure: malfunction! See owner's manual

If **TPMS** appears after turning on the ignition or while driving and the  indicator light in the instrument cluster blinks for approximately one minute and then stays on, there is system malfunction. Try to store the correct tire pressures ⇒ *page 274*. In some cases, you must drive for several minutes after storing the pressures until the indicator light turns off. If the indicator light does turn off or turns on again after a short period of time, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

WARNING

- If the tire pressure indicator appears in the display, reduce your speed immediately and avoid any hard steering or braking maneuvers. Stop as soon as possible and check the tires and their pressure.
- The driver is responsible for maintaining the correct tire pressure. You must check the tire pressure regularly.

- Under certain conditions (such as a sporty driving style, winter conditions, or unpaved roads), the tire pressure monitoring system indicator may be delayed.

Tips

- The tire pressure monitoring system can also stop working when there is an ESC malfunction.
- Using snow chains may result in a system malfunction.
- The tire pressure monitoring system in your Audi was calibrated with “Audi Original Tires” ⇒ *page 261*. Audi recommends using these tires.

Storing tire pressures

Applies to: vehicles with Tire Pressure Monitoring System indicator

If the tire pressure changes or a tire is replaced, it must be confirmed in the system.

- ▶ Before storing the tire pressures, make sure the tire pressures of all four tires meet the specified values and are adapted to the load ⇒ *page 265*.
- ▶ Turn on the ignition.
- ▶ Applies to MMI: Select on the home screen: **VEHICLE > Settings & Service > Tire pressure monitoring > Store tire pressure > Yes, store now**.

Tips

- Do not store the tire pressures if snow chains are installed.

Tire pressure monitoring system

General notes

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure

label, you should determine the proper tire inflation pressure for those tires).

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to over-heat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

General information

Applies to: vehicles with tire pressure monitoring system

The tire pressure monitoring system monitors the pressure in the four tires when driving.

The system uses sensors that measure the temperature and pressure in the tires. The data is sent from these sensors to the control module by radio frequency.

The tire pressure monitoring system shows the current pressures and temperatures of the tires in the MMI while driving ⇒ [page 276](#). It also compares the current tire pressures with the stored tire pressures and gives a warning in the driver information system if the tire pressure is different from what is stored ⇒ [page 276](#).

The system does not detect if the stored tire pressures match the recommended tire pressures. You must store the tire pressures again in each of the following situations ⇒ [page 276](#):

- Each time the tire pressures change, for example when the load in the vehicle changes
- After replacing a tire
- If wheels with new wheel sensors are used



WARNING

- The tire pressure monitoring system assists with monitoring tire pressures. The driver is always responsible for maintaining the correct tire pressure.
- Do not change the tire pressure when the temperature of the tire is extremely high. This could result in serious damage to the tire and even cause the tire to burst, increasing the risk of an accident.
- A tire with low pressure flexes more. This heats the tire up too much. This could cause the tread to separate and even cause the tire to burst, increasing the risk of an accident.
- The tire pressure monitoring system does not warn about damage or defects in the tire construction that could cause the tire to burst, for example. Inspect your tires regularly.

Tips

- If tires are replaced, the sensors and valves do not need to be removed or replaced. Only replace the valve stem and, if necessary, the valve and the wheel electronics. If you have questions, see an authorized Audi dealer or authorized Audi Service Facility.
- An incorrect display or a malfunction in the tire pressure monitoring system can occur after using the tire mobility kit*. Have the sensors replaced by an authorized Audi dealer or authorized Audi Service Facility.
- The system complies with United States FCC regulations and ISED regulations
⇒ [page 310](#).

Displaying tire pressures and temperatures

Applies to: vehicles with tire pressure monitoring system

Requirement: you must be driving the vehicle.

- Applies to MMI: Select on the home screen: **VEHICLE > Settings & Service > Tire pressure monitoring > Display tire pressure**.

The current tire pressures are shown in green, yellow, or red numbers:

- **Green:** the current tire pressure and the specified tire pressure are approximately the same.
- **Yellow:** the current tire pressure is lower than the specified tire pressure.
- **Red:** the current tire pressure is much lower than the specified tire pressure.

The specified tire pressure is the last tire pressure that was stored ⇒ [page 276](#).

Note that the tire pressure also depends on the temperature of the tire. The tire pressure increases as the tires become warmer while driving.

WARNING

Read and follow the important information and notes ⇒ [page 275](#).

Tips

The tire pressure or temperature is not displayed while the vehicle is stationary and in

adaptation mode. Dashes --.-- are shown in place of the pressure and temperature.

Tire pressure loss

Applies to: vehicles with tire pressure monitoring system

If the  indicator light turns on, the tire pressure is too low compared to the specified pressure. Check and store the tire pressure(s) the next time it is possible ⇒ [page 276](#).

Flat tire! Safely stop vehicle. Please check all tires and store pressures in MMI

If the indicator light turns on and the message appears, the tire pressure has reached a critical level compared to the specified pressure. Avoid unnecessary steering and braking maneuvers. Adapt your driving style to the situation. Stop as soon as possible and check the tire(s). If it is possible to continue driving, see an authorized Audi dealer or authorized Audi Service Facility immediately and have your tire(s) repaired or replaced if necessary.

WARNING

Read and follow the important information and notes ⇒ [page 275](#).

Storing new tire pressures

Applies to: vehicles with tire pressure monitoring system

The tire pressure specifications must be stored correctly for the tire pressure monitoring system to function reliably.

It is always necessary to store the tire pressures when the tire pressures are modified, for example due to a change in load or when new sensors are installed.

- Before storing the tire pressures, make sure the tire pressures of all four tires meet the specified values and are adapted to the load ⇒ [page 265](#), [fig. 171](#). Only correct and store the pressure in tires whose temperature is approximately the same as the ambient temperature. If the temperature of the tire is higher than the ambient air temperature, the tire pressure must be increased approximately 3 PSI (0,2 bar) above the value on the sticker. ►

- ▶ Turn on the ignition.
- ▶ Applies to MMI: Select on the home screen: **VEHICLE > Settings & Service > Tire pressure monitoring > Store tire pressure > Yes, store now.**
- ▶ If the changed tire pressures are not displayed on the MMI, drive the vehicle for approximately 10 minutes so that the sensor signal from the wheels is received again.

During this adaptation phase, --.-- is displayed for the pressure and temperature and the tire pressure monitoring system is only partially available. It only provides a warning if one or more tire pressures is below the minimum permitted specified pressure.

Tire pressure: wheel change detected. Please check all tires and store pressures in MMI

If the indicator light turns on and the message appears, the system has detected that the location of the sensors has changed due to a wheel replacement, or new sensors have been installed. Store the new tire pressures.



WARNING

Read and follow the important information and notes ⇨ *page 275.*

Malfunctions

Applies to: vehicles with tire pressure monitoring system

TPMS **Tire pressure: malfunction! See owner's manual**

If the **TPMS** indicator light appears after turning on the ignition or while driving and the  indicator light also blinks for approximately one minute and then stays on, then there is system malfunction. The following are examples of situations that could cause a malfunction:

- If the message appears at the end of the adaptation phase, the system may not detect one or several of the wheel sensors necessary for pressure monitoring. This may result from one or more wheels without wheel sensors or with incompatible wheel sensors being installed.
- A wheel sensor or another component has failed.

- Using snow chains can affect the function of the system because of the shielding effect of the chains.
- The tire pressure monitoring system is not available due to a malfunction.
- Transmitters with the same frequency, such as headphones or remote controlled devices, may cause a temporary system malfunction due to the strong electromagnetic field.

The **TPMS** indicator light and the message turn off once the tire pressure monitoring system is available again. If you cannot correct the malfunction and the **TPMS** indicator light stays on, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Care and cleaning

General information

Regular, proper care helps to maintain your vehicle's value. It can also be a requirement when submitting warranty claims for corrosion damage and paint defects on the body.

The required cleaning and care products can be obtained from an authorized Audi dealer or authorized Service Facility. Read and follow the instructions for use on the packaging.

WARNING

- Using cleaning and care products incorrectly can be dangerous to your health.
- Always store cleaning and care products out of reach of children to reduce the risk of poisoning.

Car washes

The longer that deposits such as insects, bird droppings, tree sap, or road salt remain on the vehicle, the more the surface can be damaged. High temperatures such as those caused by sunlight increase the damaging effect.

Before washing, rinse off heavy deposits with plenty of water.

Stubborn deposits, such as bird droppings or tree sap, are best removed with plenty of water and a microfiber cloth.

Also, wash the underside of your vehicle once use of road salt ends for the season.

Pressure washers

When washing your vehicle with a pressure washer, always follow the operating instructions provided with the pressure washer. This is especially important in regard to the pressure and spraying distance. Do not aim the spray directly at seals on side windows, doors, the hood, the luggage compartment lid or the panorama glass roof* or at tires, rubber hoses, insulating material, sensors* or camera lenses*. Maintain a distance of at least 16 inches (40 cm).

Do not remove snow and ice with a pressure washer.

Never use cone nozzles or high pressure nozzles.

The water temperature must not be above 140 °F (60 °C).

Automatic car wash

Spray off the vehicle before washing.

Make sure that the windows and panoramic glass roof* are closed and the windshield wipers are off. Make sure that the vehicle is still able to roll during the washing process in the car wash. Follow instructions from the car wash operator, especially if there are accessories attached to your vehicle.

If possible, use car washes that do not have brushes.

Washing by hand

Clean the vehicle starting from the top and working downward using a soft sponge or cleaning brush. Use solvent-free cleaning products.

Washing vehicles with matte finish paint by hand

To reduce the risk of damaging the paint when washing, first remove dust and large particles from your vehicle. Insects, grease spots, and fingerprints are best removed with a special cleaner for matte finish paint.

Apply the product using a microfiber cloth. To reduce the risk of damaging the paint surface, do not use too much pressure.

Rinse the vehicle thoroughly with water. Then clean using a neutral shampoo and a soft microfiber cloth.

Rinse the vehicle thoroughly again and let it air dry. Remove any water residue using a chamois.

WARNING

- To reduce the risk of accidents, only wash the vehicle when the ignition is off and follow the instructions from the car wash operator.

- To reduce the risk of cuts, protect yourself from sharp metal components when washing the underbody or the inside of the wheel housings.
- After washing the vehicle, the effectiveness of the brakes may be delayed due to moisture on the brake rotors or ice in the winter. This increases the risk of an accident. The brakes must be dried with a few careful brake applications.

Note

- If you wash the vehicle in an automatic car wash, you must fold the exterior mirrors in to reduce the risk of damage to the mirrors. Power folding exterior mirrors* must only be folded in and out using the power folding function.
- To reduce the risk of damage to the rims and tires, compare the width between the wheels on your vehicle with the distance between the guide rails in the car wash.
- To reduce the risk of damage, compare the height and width of your vehicle with the height and width of the inside of the car wash.
- Make sure there is sufficient ground clearance when driving into a car wash with a conveyor belt ⇒ *page 113*. There is risk of damage because the vehicle could come in contact with the guide rails.
- Using a pressure washer incorrectly can cause damage. Never direct a stream of wa-

ter directly onto electrical/electronic components when cleaning the engine compartment. Such components can be seriously damaged by the entry of fluids and by pressure, and this can result in component failure.

- To reduce the risk of paint damage, do not wash the vehicle in direct sunlight.
- To reduce the risk of damage, do not wash decorative decals* with a pressure washer.
- To reduce the risk of damage to the surface, do not use insect removing sponges, kitchen sponges, or similar items.
- When washing matte finish painted vehicle components:
 - Do not use polishing agents or hard wax to reduce the risk of damage to the surface.
 - Never use protective wax. It can destroy the matte finish effect.
 - Do not place any stickers or magnetic signs on vehicle components painted with matte finish paint. The paint could be damaged when the stickers or magnets are removed.



For the sake of the environment

Only wash the vehicle in facilities specially designed for that purpose. This will reduce the risk of dirty water contaminated with oil entering the sewer system.

Cleaning and care information

When cleaning and caring for individual vehicle components, refer to the following tables. The information contained here is simply recommendations. For questions or for components that

are not listed, consult an authorized Audi dealer or authorized Audi Service Facility. Also follow the information found in ⇒ .

Exterior cleaning

Component	Situation	Solution
Windshield wiper blades	Deposits	Soft cloth with glass cleaner, ⇒ <i>page 63</i>
Headlights/ tail lights	Deposits	Soft sponge with a mild soap solution ^{a)}

Care and cleaning

Component	Situation	Solution
Sensors/ camera lenses	Deposits	Sensors: soft cloth with a solvent-free cleaning product Camera lenses: soft cloth with an alcohol-free cleaning solution
	Snow/ice	Hand brush/solvent-free de-icing spray
Wheels	Road salt	Water
	Brake dust	Acid-free special cleaning solution
Exhaust tail pipes	Road salt	Water, cleaning solution suitable for stainless steel, if necessary
Decorative parts and trim	Deposits	Mild soap solution ^{a)} , cleaning solution suitable for stainless steel, if necessary
Rubber seals	Deposits	Microfiber cloth with a mild soap solution ^{a)}
	Frost	Protect the seals on doors, covers, and lids from freezing using a suitable care product
Paint	Spilled fuel	Rinse with water immediately
	Surface rust	Rust remover, then treat with hard wax; for questions, consult an authorized Audi dealer or authorized Audi Service Facility.
	Corrosion	Have it removed by an authorized Audi dealer or authorized Audi Service Facility.
	Water no longer beads on the surface of clean paint	Treat with hard wax (at least twice per year)
	No shine even though paint has been protected/paint looks poor	Treat with suitable polish; then apply paint protectant if the polish that was used does not contain any protectant
	Deposits such as insects, bird droppings, tree sap, and road salt	Dampen with water immediately and remove with a microfiber cloth
	Grease-based contaminants such as cosmetics or sunblock	Remove immediately with a mild soap solution ^{a)} and a soft cloth
Carbon components	Deposits	Clean the same way as painted parts ⇒ <i>page 278</i>



Component	Situation	Solution
Decorative decals	Deposits	Soft sponge with a mild soap solution ^{a)}
	Deposits such as insects, bird droppings, tree sap, and road salt	Dampen with water immediately and remove with a micro-fiber cloth
	Grease-based contaminants such as cosmetics or sunblock	Remove immediately with a mild soap solution ^{a)} and a soft cloth
	Spilled fuel	Blot immediately with a soft cloth and then remove with a mild soap solution ^{a)} and a soft cloth

^{a)} Mild soap solution: maximum two tablespoons of neutral soap in 1 quart (1 liter) of water

Interior cleaning

Component	Situation	Solution
Window glass	Deposits	Glass cleaner, then wipe dry
Decorative parts and trim	Deposits	Mild soap solution ^{a)}
Plastic parts	Deposits	Damp cloth
	Heavier deposits	Mild soap solution ^{a)} , detergent-free plastic cleaning solution, if necessary
Displays/instrument cluster	Deposits	Soft cloth with LCD cleaner; dust in the lower area of the instrument cluster can be removed using a soft brush.
Controls	Deposits	Soft brush, then a soft cloth with a mild soap solution ^{a)}
Safety belts	Deposits	Mild soap solution ^{a)} , allow to dry before letting them retract
Textiles, artificial leather, microfiber	Deposits adhering to the surface	Vacuum cleaner
	Water-based deposits such as coffee, tea, blood, etc.	Absorbent cloth and mild soap solution ^{a)}
	Oil-based deposits such as oil, make-up, etc.	Apply a mild soap solution ^{a)} , blot away the dissolved oil or dye, treat afterward with water, if necessary
	Special types of deposits such as ink, nail polish, latex paint, shoe polish, etc.	Special stain remover, blot with absorbent material, treat afterward with mild soap solution, if necessary ^{a)}

Component	Situation	Solution
Natural leather	Fresh stains	Cotton cloth with a mild soap solution ^{a)}
	Water-based deposits such as coffee, tea, blood, etc.	Fresh stains: absorbent cloth dried stains: stain remover suitable for leather
	Oil-based deposits such as oil, make-up, etc.	Fresh stains: absorbent cloth and stain remover suitable for leather Dried stains: oil cleaning spray
	Special types of deposits such as ink, nail polish, latex paint, shoe polish, etc.	Spot remover suitable for leather
	Care	Regularly apply conditioning cream that protects from light and penetrates into the material. Use special colored conditioning cream, if necessary.
Carbon components	Deposits	Clean the same way as plastic components

^{a)} Mild soap solution: maximum two tablespoons of neutral soap in 1 quart (1 liter) of water

**WARNING**

The windshield must not be treated with water-repelling windshield coating agents. Under unfavorable conditions, such as wetness, darkness, and when the sun is low, these coatings can cause increased glare, which increases the risk of an accident. They can also cause wiper blade chatter.

**Note**

- **Headlights and tail lights**
 - Never clean the headlights or tail lights with a dry cloth or sponge because the lights could be damaged.
 - Do not use any cleaning products that contain alcohol, because they could cause cracks to form.
- **Wheels**
 - Never use any paint polish or other abrasive materials.
 - Damage to the protective layer on the rims, such as stone chips or scratches, must be repaired immediately.
- **Camera lenses**

- Never use warm or hot water to remove snow or ice from the camera lens. This could cause the lens to crack.
- Never use abrasive cleaning materials or alcohol to clean the camera lens. This could cause scratches and cracks.
- **Door windows**
 - Remove snow and ice on windows and exterior mirrors with a plastic scraper. To reduce the risk of scratches, move the scraper only in one direction and not back and forth.
 - Never remove snow or ice from door windows and mirrors using warm or hot water because this could cause cracks to form.
 - To reduce the risk of damage to the rear window defogger, do not apply any stickers on the heating wires on the inside of the window.
- **Decorative parts and trim**
 - Never use chrome care or cleaning products.
- **Rubber seals**
 - There is a risk of damage if chemical cleaning solutions or solvents are used.
- **Paint**

- To reduce the risk of scratches, the vehicle must be free of dirt and dust before polishing or waxing.
- To prevent paint damage, do not polish or wax the vehicle in direct sunlight.
- To reduce the risk of paint damage, do not polish away rust spots.
- Remove cosmetics and sunscreen immediately because they could damage the paint.
- **Decorative decals**
 - Do not clean decorative decals with a pressure washer, because the decals could loosen.
 - To reduce the risk of damage, do not use any rough powder or abrasive cleaning products.
 - To reduce the risk of damage, do not polish decorative decals.
 - Due to the risk of damage, do not use an ice scraper to remove snow and ice on windows with decorative decals on them.
- **Displays and instrument cluster**
 - Make sure that the display and instrument cluster are turned off and have cooled down before cleaning. To turn off the center display, select on the MMI home screen: **SETTINGS > Display & Brightness > MMI > Screen cleaning**.
 - Displays, the instrument cluster, and the trim surrounding it must not be cleaned with dry cleaning methods because they could become scratched.
 - Make sure no fluids enter the spaces between the instrument cluster and the trim, because this could cause damage.
- **Controls**
 - Make sure that no fluids enter the controls, because this could cause damage.
- **Safety belts**
 - Do not remove the safety belts to clean them.
 - Never clean safety belts or their components with chemicals or with corrosive fluids or solvents and never allow sharp objects to come into contact with the safety

belts. This could cause damage to the belt webbing.

- If there is damage to the webbing, the connections, the retractors, or the buckles, have them replaced by an authorized Audi dealer or authorized Audi Service Facility.

– **Textiles/artificial leather/microfiber**

- Never treat artificial leather or microfiber with leather care products, solvents, floor polish, shoe polish, spot remover, or similar products.
- Have a cleaning specialist remove stubborn stains to reduce the risk of damage.
- Never use steam cleaners, brushes, hard sponges, etc. when cleaning.
- Do not turn on the seat heating* to dry the seat.
- Objects with sharp edges, such as zippers or rivets on clothing or belts, can cause damage to the surface.
- Open hook and loop fasteners, for example on clothing, can damage seat covers. Make sure hook and loop fasteners are closed.

– **Natural leather**

- Never treat leather with solvents, floor polish, shoe polish, spot remover or similar products.
- Objects with sharp edges, such as zippers or rivets on clothing or belts, can cause damage to the surface.
- Never use steam cleaners, brushes, hard sponges, etc. when cleaning.
- Do not turn on the seat heating* to dry the seat.
- To help prevent the leather from fading, do not leave the vehicle in direct sunlight for long periods of time. If leaving the vehicle parked for long periods of time, you should cover the leather to protect it from direct sunlight.



Tips

- Insects are easier to remove from paint that has been freshly waxed.

- Regular waxing can prevent rust spots from forming.
- Decorative decals can age due to environmental conditions, which can result in damage such as brittleness. The color may fade if exposed to excessive sunlight.

Taking your vehicle out of service

If you would like to take your vehicle out of service for a long period of time, contact an authorized Audi dealer or authorized Audi Service Facility. You can obtain information about the steps to complete depending on the conditions for taking the vehicle out of service (duration, location, etc.).

Emergency assistance

General information

- In the event of a breakdown, park the vehicle as far as possible from moving traffic. In the event of a flat tire, park the vehicle on a level surface. If you are on a steep hill, be especially careful.
- Set the parking brake.
- Turn on the emergency flashers.
- Have all passengers exit the vehicle. They should move to a safe place, for example behind a guard rail.



WARNING

Follow the steps listed above. This is for your own protection and for the safety of other road users.

Equipment

Vehicle tool kit, tire mobility kit, and vehicle jack

Applies to: vehicles with the vehicle tool kit, tire mobility kit, and vehicle jack



Fig. 172 Luggage compartment: cargo area floor

The vehicle tool kit, vehicle jack, tire mobility kit, and compressor are stored in the luggage compartment under the cargo floor.

- Applies to: Coupe/Sportback: To open the front compartment, lift the cargo floor by the strap ①.
- To open the rear compartment, lift the cargo floor by the plastic handle ②.
- Applies to: coupe: Engage the plastic handle ② in the luggage compartment seal.

- Applies to: Coupe/Sportback: To remove the cargo floor completely, pull it toward the rear using the plastic handle ②.
- Applies to: vehicles with spare tire: Turn the handle counter-clockwise and remove the spare tire.
- Applies to: coupe: Unhook the cargo floor again before closing the luggage compartment lid.

Depending on vehicle equipment, the vehicle tool kit, tire mobility kit, and compressor may be located under another cover that is secured with a handwheel.

Applies to: vehicles with vehicle jack in the storage bag: The bag with the vehicle jack is secured to the tie-downs in the luggage compartment and must be secured to the tie-downs again after using it.



WARNING

Applies to: vehicles with vehicle jack in the storage bag

A vehicle jack that is unsecured, incorrectly secured, or not secured in the luggage compartment may slide out of place when braking, turning, or in an accident, which increases the risk of injuries to persons in the vehicle. To reduce the risk of an accident, never transport the vehicle jack without securing it.



Tips

- In some vehicles, the rear compartment may not open.
- The vehicle jack in your vehicle is maintenance-free.

Tire mobility kit

Preparation

Applies to: vehicles with tire mobility kit

- Read and follow the important safety precautions ⇨ page 285.
- Set the parking brake.
- Select the “P” position.
- Check if a repair with the tire mobility kit is possible ⇨ page 286.

Using the tire mobility kit

Applies to: vehicles with tire mobility kit

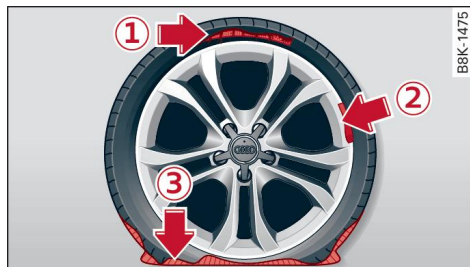


Fig. 173 Tire: tire damage that cannot be repaired

The tire repair is only meant for temporary use. Change the damaged tire as soon as possible

⇒ ⚠.

If the tire is pierced by an object such as a nail, do not remove the object from the tire.

The tire mobility kit can be used at temperatures as low as -4 °F (-20 °C).

The tire mobility kit must not be used:

- If the tire has cuts or punctures that are larger than 0.16 inch (4 mm) ① ⇒ fig. 173
- If the rim is damaged ②
- If you have driven with very low tire pressure or without air in the tire ③

See an authorized Audi dealer or authorized Audi Service Facility for assistance in these cases.

- Seek medical attention immediately if an allergic reaction occurs.
- Keep the tire sealant away from children.
- In vehicles with a tire pressure monitoring system*, using tire sealant can result in an incorrect display or a system malfunction. Drive carefully to the nearest authorized Audi dealer or authorized Audi Service Facility.



For the sake of the environment

♻ Batteries and electrical/electronic devices must be disposed of in an environmentally safe manner ⇒ page 310, *Disposal instructions*.



Tips

- If sealant leaks, allow it to dry in place. You can then peel it off like a sticker.
- Note the expiration date on the sealant bottle. Replace the tire sealant at an authorized Audi dealer or authorized Audi Service Facility.
- Radio reception can be interrupted when operating the compressor.
- Follow the legal regulations that are applicable in the country where you are operating the vehicle.



WARNING

- Please note that the tire mobility kit cannot be used in all situations, and that it may only be used temporarily.
- The tire sealant must not come in contact with skin, eyes, or clothing.
- If tire sealant comes into contact with your eyes or your skin, thoroughly rinse the affected area immediately with clean water.
- Do not inhale the fumes.
- If you swallow any of the tire sealant, thoroughly rinse your mouth immediately and drink a lot of water. Do not induce vomiting. Seek medical attention immediately.
- Change your clothing immediately if it comes into contact with tire sealant.

Repairing tires

Applies to: vehicles with tire mobility kit

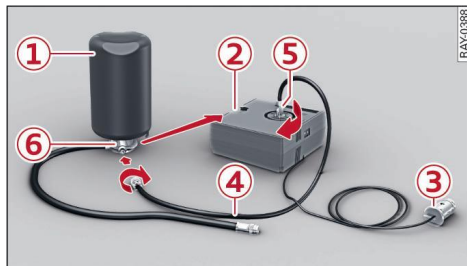


Fig. 174 Components of the tire mobility kit

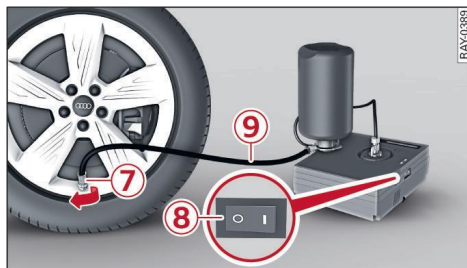


Fig. 175 Tire mobility kit connection

Requirement: the tire mobility kit must be laid out and ready for use ⇒ page 285.

Setting up the tire mobility kit

- ▶ Take the connector ③ and pressure hose ④ from the bottom of the housing.
- ▶ Install one end of the pressure hose ④ all the way into the socket ⑤ of the compressor by turning it clockwise ¹⁾. Install the other end of the flange ⑥ of the tire sealant bottle ①.
- ▶ Insert the sealant bottle with the flange at the bottom into the opening ② on the compressor.
- ▶ Remove the valve cap from the faulty tire.
- ▶ Connect the filler hose ⑨ to the valve ⑦ ⇒ fig. 175.
- ▶ Connect the plug ③ ⇒ fig. 174 to an outlet in the vehicle.
- ▶ Turn on the ignition.

Inflating a tire

- ▶ Move the switch ⑧ ⇒ fig. 175 on the compressor into position I.
- ▶ Inflate the tire to between 29 psi (200 kPa) and 36 psi (250 kPa) and read the pressure on the gauge.
- ▶ If this tire pressure is not reached, remove the filler hose. Drive slowly approximately 33 feet (10 m) forward or in reverse so that the sealant can be distributed in the tire. Inflate the tire again ⇒ ⚠.

⚠ WARNING

- Read and follow the manufacturer's safety precautions on the compressor and in the instructions on the bottle of sealant.
- If a tire pressure of 29 psi (200 kPa) cannot be reached after inflating for 10 minutes, then the tire is too severely damaged. Do not continue driving.
- If the tire cannot be repaired with the tire sealant, see an authorized Audi dealer or authorized Audi Service Facility for assistance.

i Tips

Do not operate the compressor for more than ten minutes continuously, or it can overheat. Once the compressor has cooled, you can continue to use it.

Completing

Applies to: vehicles with tire mobility kit

- ▶ Affix the sticker that says "max. 50 mph (max. 80 km/h)" that is provided with the tire mobility kit within your field of vision.
- ▶ Stop the vehicle after driving for about 10 minutes and check the tire pressure.
- ▶ If the tire pressure is lower than 19 psi (130 kPa), then the tire is too severely damaged. Do not continue driving. ▶

¹⁾ The compressor may look different. However, the way it is operated is generally the same.

WARNING

Pay attention to the following after repairing a tire:

- Do not drive faster than 50 mph (80 km/h).
- Avoid hard acceleration or braking and driving fast around curves.
- The vehicle may become more difficult to control.
- If the tire is too severely damaged, see an authorized Audi dealer or authorized Audi Service Facility for assistance.

For the sake of the environment

You can give the used tire sealant bottle to an authorized Audi dealer or authorized Audi Service Facility for disposal.

Tips

Remember to obtain a new bottle of sealant from an authorized Audi dealer or authorized Audi Service Facility after repairing a tire.

Changing a tire

Preparation

You must complete the preparation before changing a tire.

- Read and follow the important safety precautions ⇒ *page 285*.
- Set the parking brake.
- Select the “P” position.
- When towing a trailer: disconnect the trailer from your vehicle.
- Lay out the vehicle tool kit ⇒ *page 285* and the spare tire ⇒ *page 291*.
- Turn off the ignition.

WARNING

The vehicle must also be secured to prevent it from rolling when using the vehicle jack*. Use suitable objects to block the front and back of the wheel that is diagonal from the wheel with the flat tire.

Removing the caps



Fig. 176 Wheel: wheel bolts with caps

- Slide the plastic clip from the vehicle tool kit onto the cap until it engages ⇒ *fig. 176*.
- Remove the cap using the plastic clip.

Loosening the wheel bolts



Fig. 177 Wheel: loosening the wheel bolts

- Slide the wheel wrench* from the vehicle tool kit all the way onto the wheel bolt.
- Turn the wheel bolt approximately one turn to the left. To achieve the required torque, hold the end of the wheel wrench*. If the wheel bolt will not loosen, press carefully on the wheel wrench* with your foot. Hold onto the vehicle securely while doing this and make sure your footing is stable.

WARNING

To reduce the risk of an accident, only loosen the wheel bolts gently one turn before raising the vehicle with the vehicle jack*.

Raising the vehicle

Applies to: vehicles with vehicle jack

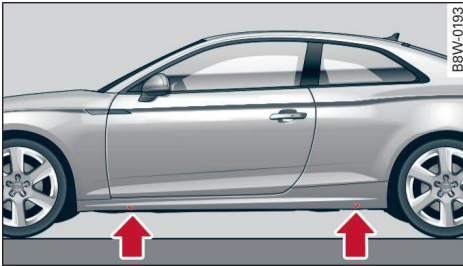


Fig. 178 Sill panels: markings

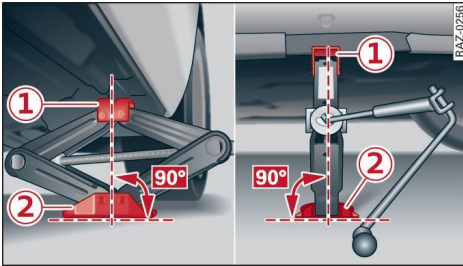


Fig. 179 Sill: positioning the vehicle jack

- Place the vehicle jack from the vehicle tool kit on a firm surface. Use a flat, stable support if necessary. On a slippery surface such as tile, you should use a non-slip pad such as a rubber mat ⇒ ⚠.
- Find the marking on the sill that is closest to the tire that will be changed ⇒ *fig. 178*. Behind the marking, there is a lifting point on the side sill for the vehicle jack.
- Turn the handwheel to raise the vehicle jack under the lifting point on the side sill until the bracket on the jack ① completely covers the notch on the vehicle.
- Align the vehicle jack so the bracket ① covers the notch and the base ② is flat on the ground. The base ② must be directly under the mounting point ①.
- Mount the crank on the vehicle jack: insert the crank into the opening on the handwheel. Turn the crank to the left or right to secure it.
- Continue raising the vehicle jack with the crank until the wheel lifts off the ground slightly.

⚠ WARNING

- To reduce the risk of injury, make sure no one is in the vehicle before raising it.
- Make sure the vehicle jack is stable. The risk of injury is increased when the ground is slippery or soft, because the vehicle jack could slide or sink.
- Only raise your vehicle with the vehicle jack provided by the factory. If you use a vehicle jack designed for another vehicle, your vehicle could slip and cause injury.
- Position the vehicle jack only at the designated mounting points on the side sill and align the jack. Otherwise, the vehicle jack could slip and cause an injury if it does not have sufficient hold on the vehicle.
- To reduce the risk of injury, do not raise any other vehicles or other loads using the vehicle jack provided by the factory.
- To reduce the risk of an accident, never start the engine when the vehicle is raised.
- To reduce the risk of injury, no work should be performed under the vehicle while it is raised.

⚠ Note

Do not lift the vehicle by the sill. Position the vehicle jack only at the designated mounting points on the side sill. Otherwise, your vehicle could be damaged.

Removing and installing a wheel

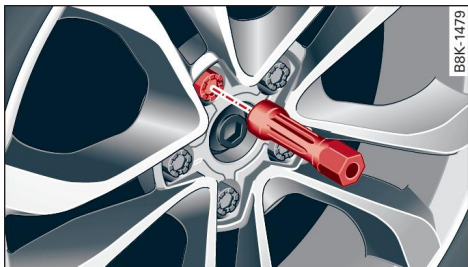


Fig. 180 Wheel: internal hex socket to turn the wheel bolts

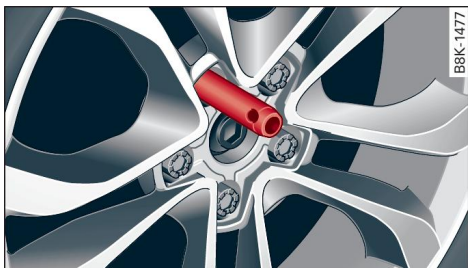


Fig. 181 Wheel: alignment pin in the top hole

Removing a wheel

- ▶ Remove the top wheel bolt completely using the hex socket in the screwdriver handle from the vehicle tool kit ⇒ *fig. 180* and place it on a clean surface.
- ▶ Then install the alignment pin from the vehicle tool kit by hand in the empty wheel bolt hole ⇒ *fig. 181*¹⁾.
- ▶ Remove the rest of the wheel bolts.
- ▶ Remove the wheel ⇒ ⚠. The alignment pin remains in the hole while doing this.

Installing a wheel

Read the directions on ⇒ *page 290* when installing unidirectional tires.

- ▶ Make sure that the wheel bolts and the threads in the wheel hub are clean, loosen/tighten easily, and are free of oil and grease.
- ▶ Slide the wheel on over the alignment pin ⇒ ⚠.

- ▶ Install the wheel bolts and tighten them gently using the hex socket.
- ▶ Remove the alignment pin and tighten the remaining wheel bolt.
- ▶ Carefully lower the vehicle using the vehicle jack*.
- ▶ Tighten the wheel bolts in a diagonal pattern using the wheel wrench*.

⚠ WARNING

- Read and follow the important information and notes under ⇒ *page 261*.
- Never use the hex socket in the screwdriver handle or the hex socket wrench with the ratchet to loosen or tighten the wheel bolts. This increases the risk of an accident, because you will not be able to achieve the correct tightening specification.

⚠ Note

When removing or installing the wheel, the rim could hit the brake rotor and damage the rotor. Work carefully and have a second person help you.

Unidirectional tires

A unidirectional tire profile is identified by arrows on the tire sidewall that point in the running direction. You must always maintain the specified running direction. This is necessary to ensure the tire's optimal performance in regard to adhesion, running noise, and friction, and to reduce the risk of hydroplaning.

To benefit fully from the advantages of the unidirectional tire design, you should replace faulty tires as soon as possible and restore the correct running direction on all of the tires.

Finishing

- ▶ Reinstall any covers on the wheel bolts that were removed.

¹⁾ Applies to: vehicles with ceramic brake rotors*: Use a second alignment pin* from the vehicle tool kit for the lowest hole according to the steps described for the first alignment pin.

- ▶ Store the vehicle tool kit in its designated place.
- ▶ If the removed wheel does not fit in the spare wheel well, store it securely in the luggage compartment ⇒ *page 87*.
- ▶ Check the tire pressure on the installed wheel as soon as possible.
- ▶ Correct the tire pressure and store it in the MMI ⇒ *page 274* or ⇒ *page 276*.
- ▶ The wheel bolts must be tightened to 90 ft lbs (120 Nm). Have them checked as soon as possible with a torque wrench. Drive carefully until then.
- ▶ Have the faulty wheel replaced as soon as possible.

Space-saving spare tire

Applies to: vehicles with space-saving spare tire (compact spare tire)

The spare tire is intended for short-term use only. Have the damaged tire checked and replaced if necessary by an authorized Audi dealer or authorized Audi Service Facility as soon as possible.

There are some restrictions on the use of the compact spare tire. The compact spare tire has been designed specifically for your type of vehicle. Do not replace it with the spare tire from another type of vehicle.

The compact spare tire is located in the luggage compartment under the cargo floor ⇒ *page 285*.

The tire pressure must be adjusted to a specified value listed on the tire pressure sticker ⇒ *page 265, fig. 171*.

Snow chains

For technical reasons, the use of snow chains on the compact spare tire is not permitted.

If you have to drive with snow chains and a front tire fails, mount the spare tire in place of a rear tire. Install the snow chains on the rear tire that you removed, and install that in place of the front tire that failed.



WARNING

- After installing a spare tire, the tire pressure must be checked as soon as possible.

- Do not drive faster than 50 mph (80 km/h) with a compact spare tire. Driving faster than that increases the risk of an accident.
- To reduce the risk of an accident, avoid hard acceleration or braking and driving fast around curves with the compact spare tire.
- To reduce the risk of an accident, never drive with more than one compact spare tire.
- Normal summer or winter tires must not be mounted on the compact spare wheel rim.



Note

Secure the spare tire in the spare tire well using the handwheel in order to reduce the risk of damage to other components.

Jump starting

Preparation

You should only perform the following steps if you have the necessary technical knowledge and tools.

If the engine does not start because the vehicle battery is drained, you can jump start your vehicle using another vehicle. Jump start cables are needed to do this.

Both vehicle batteries must have 12 volt nominal voltage. The voltage capacity (Ah) of the vehicle battery that is giving power must not be less than the capacity of the drained vehicle battery.

Jump start cable

Only use a jump start cable with a large enough diameter. Note the manufacturer's specifications.

Only use a jump start cable with insulated terminal clamps.

Positive cable - usually red.

Negative cable - usually black.



WARNING

- A drained battery can freeze at temperatures around 32 °F (0 °C). To reduce the risk of an explosion and chemical burns, thaw a frozen battery immediately, before

connecting jump start cables. After jump starting the vehicle, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the vehicle battery checked.

- Read the warnings when working in the engine compartment ⇒ *page 237*.
- Handling the jump start cables incorrectly may cause the vehicle battery to explode and result in serious injuries.

Note

Jump start cables can cause considerable damage to the vehicle electrical system if they are connected incorrectly.

Tips

- There must be no contact between the vehicles, or else voltage could flow when connecting the positive terminal and drain the vehicle battery of the vehicle providing the jump start.
- The drained vehicle battery must be connected correctly to the electrical system.
- Turn off electrical equipment that is not needed.

Jump starting

Both jump start cables must be connected in the correct order.

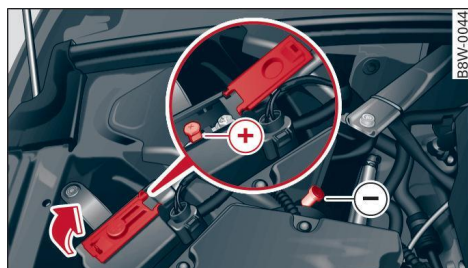


Fig. 182 Engine compartment: connectors for jump start cables or a charger

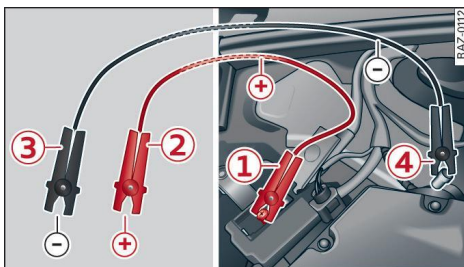


Fig. 183 Connecting the jump start cables

The jump start cable connections are located in the engine compartment.

Follow the information about the vehicle battery ⇒ *page 249*.

Connecting the positive cable (red) to the positive terminal

- ▶ Open the cover on the positive terminal ⇒ *fig. 182*.
- 1. Attach one end of the positive cable (red) to the jump-start pin **1** ⇒ *fig. 183* on your vehicle.
- 2. Attach the other end of the positive cable (red) to the positive terminal **2** on the power source.

Connecting the negative cable (black) to the negative terminal

- 3. Attach one end of the negative cable (black) to the negative terminal **3** on the power source.
- 4. Attach the other end of the negative cable (black) to the jump-start pin **4** on the vehicle.

Starting the engine

- ▶ Start the engine in the vehicle giving the charge and let it run at idle.
- ▶ Now start the engine in your vehicle, which has the drained battery.
- ▶ If the engine does not start, stop the starting procedure after 10 seconds and then repeat it after approximately 30 seconds.
- ▶ Turn on the rear window defogger in your vehicle in order to reduce any voltage peaks that may occur when disconnecting the jump start cables. The headlights must be turned off. ▶

- ▶ With the engines running, remove the cables in reverse order of the way they were installed.
- ▶ Close the cover on the positive terminal.

**WARNING**

- Never connect the jump start cable directly to your vehicle battery. Only use the connections in the engine compartment.
- Do not touch the non-insulated parts of the terminal clamps. The cable must also not come into contact with vehicle components that conduct electricity when it is connected to the positive vehicle battery terminal. This can cause a short circuit.
- The plugs on the battery cells must not be opened.
- Keep ignition sources (such as open flames, burning cigarettes, etc.) away from the vehicle batteries to reduce the risk of an explosion.
- Route the jump start cables so they cannot get caught in the moving parts in the other vehicle's engine compartment.

**Note**

Please note that the connecting process previously described for the jump start cables is intended for when your vehicle is being jump started.

**Tips**

Make sure that the connected jump start cables have sufficient contact with metal.

Towing

General information

You should only perform the following steps if you have the necessary technical knowledge and tools.

Towing requires a certain amount of practice. Audi recommends contacting a towing company to have the vehicle transported.

You should only have your vehicle towed by another vehicle when disabled in exceptional cir-

cumstances. Inexperienced persons should not tow a vehicle.

Notes on towing

When the engine is stopped, the transmission will not be sufficiently lubricated if traveling at high speeds and long distances:

- The maximum permitted towing speed is 30 mph (50 km/h).
- The maximum permitted towing distance is 30 miles (50 km).

Additional information on towing with a tow truck

The vehicle may only be towed with the front axle raised. Do not wrap any chains or cables around the brake lines.

Tow bar and towing cable

The vehicle can be towed with a tow bar or towing cable. Both persons involved should be familiar with the special considerations when towing, especially when using a towing cable.

Always make sure the traction force does not exceed the permitted level and there are no shock loading conditions. There is always the risk of the coupling becoming overloaded when driving off-road.

For the most safety and security, drive with a tow bar. You should use a towing cable only if a tow bar is not available. Use a towing cable made of synthetic elastic cable or a cable made of similar elastic material.

**WARNING**

- Towing highly increases the risk of an accident, for example from colliding with the towing vehicle.
- To reduce the risk of an accident, do not allow anyone to remain inside the vehicle when it is being transported by a tow truck or a special transporter.
- Never secure the tow bar or towing cable to parts of the vehicle's axles or suspension. These could be damaged, resulting in accidents and serious injuries.

Note

- If normal towing methods are not possible, for example if the transmission is faulty or if the towing distance is greater than 30 miles (50 km), then transport the vehicle on a special carrier.
- If the vehicle is towed by a tow truck at the axle that is not permitted, this can cause severe damage to the transmission.
- The vehicle must not be tow started for technical reasons.

Tips

- If the power supply is interrupted, then it will not be possible to move the selector out of the "P" position. The parking lock must be released using the manual release before towing the vehicle ⇒ *page 102*.
- Turn off Audi pre sense* ⇒ *page 159* when loading the vehicle onto a vehicle carrier, train, ship, or other type of transportation, or when towing the vehicle. This can prevent an undesired intervention from the pre sense* system.
- Follow the local legal regulations for towing.

Towing

Read and follow the important information on ⇒ *page 293*.

Preparations

- ▶ Only secure the towing cable or tow bar at the designated towing eye ⇒ *page 294*.
- ▶ Make sure the towing cable is not twisted. Otherwise it could disconnect from the towing eye while towing.
- ▶ Turn on the emergency flashers in both vehicles ⇒ *page 57*. However, do not do this if prohibited by law.

Towing vehicle (front)

- ▶ Start driving only once the towing cable is taut.
- ▶ Press the brake pedal very carefully.
- ▶ Avoid sudden braking or driving maneuvers.

Vehicle being towed (rear)

- ▶ Make sure the ignition is turned on so that the steering wheel is not locked and so that you can use the turn signals, the horn, and the windshield wipers if needed ⇒ .
- ▶ The full functionality of the brake booster and power steering may not be available. You would then need to use more force to steer and brake the vehicle.
- ▶ Release the parking brake ⇒ *page 108*.
- ▶ Select the "N" position.
- ▶ Make sure the towing cable is always taut.

WARNING

- Never tow a vehicle using a tow bar or towing cable if the vehicle does not have electrical power.
- If the vehicle loses power while it is being towed, stop towing the vehicle immediately and consult an authorized Audi dealer or qualified repair facility.

Rear towing eye


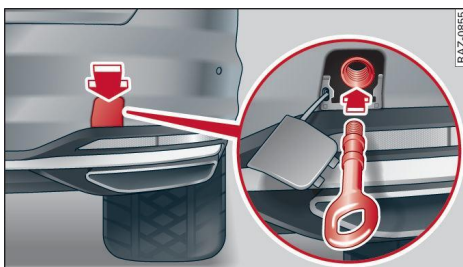


Fig. 184 Rear bumper: installing the towing eye

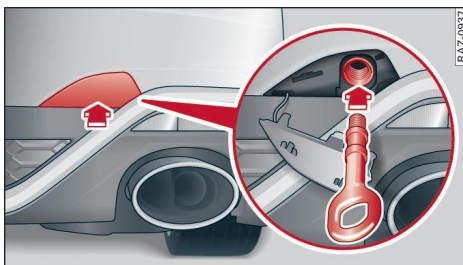

Applies to: RS models

Fig. 185 Rear bumper: installing the towing eye

The threaded opening for the towing eye is located on the right rear of the bumper. ▶

- ▶ Remove the towing eye from the vehicle tool kit
⇒ *page 285*.
- ▶ Press the cap inward with brief, strong pressure
⇒ *fig. 184* or ⇒ *fig. 185*. The cap will loosen from the bumper.
- ▶ Tighten the towing eye as far as it will go into the mount. Use a suitable object to tighten the towing eye completely and securely in the mount.
- ▶ After using, place the towing eye back in the vehicle tool kit.

**WARNING**

If the towing eye is not tightened all the way when installing, the threads may be pulled out when towing the vehicle and result in an accident.

**Tips**

Depending on the model, the shape of the cap can vary.

Fuses and bulbs

Fuses

Replacing fuses

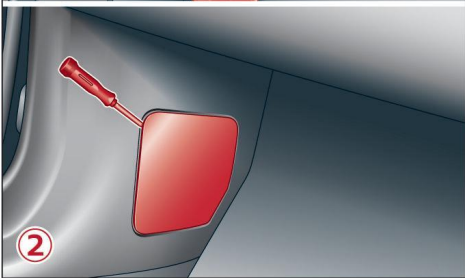
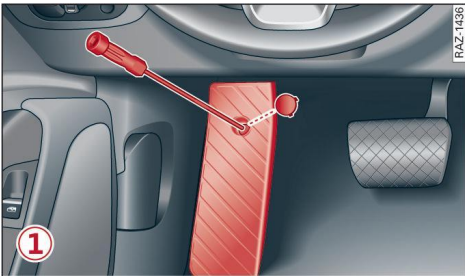


Fig. 186 Driver's side footwell (left-hand drive vehicles): footrest ①, front passenger's side footwell (right-hand drive vehicles): cover ②

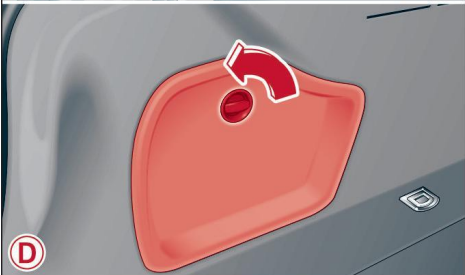
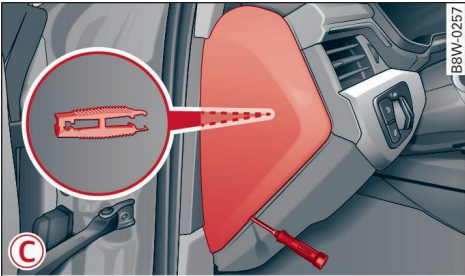


Fig. 187 Driver's side cockpit (left-hand drive/right-hand drive vehicles): cover ③, left side of luggage compartment: cover ④

Fuses are installed in various locations in your vehicle. The following information only lists fuses that you can change yourself. To have other fuses changed, contact an authorized Audi dealer or authorized Audi Service Facility. The following table does not list fuse locations that are not used.

A fuse that has blown will have metal strips that have burned through.

The fuses are located in the footwell under the footrest (left-hand drive vehicle) ① or behind the cover (right-hand drive vehicle) ②. Additional fuses are located on the front side of the cockpit (driver's side) ③ and under the left cover in the luggage compartment ④.

- ▶ Turn off the ignition and all electrical equipment.
- ▶ Check the table that follows to see which fuse belongs to the affected equipment.
- ▶ Remove the screwdriver and the reversible Torx bit from the vehicle tool kit ⇒ page 285.
- ▶ Remove the footrest or the corresponding cover.
- ▶ Remove the colored plastic clip from the fuse panel, if necessary ⇒ page 297, fig. 188.
- ▶ Remove the clip from the rear side of the cover ③.
- ▶ Remove the fuse using the clip.
- ▶ Replace the blown fuse only with a fuse that has the same amp rating.
- ▶ Reinstall the plastic bracket, if present.
- ▶ Reattach the footrest or the cover.

Fuse color identification

Color	Current rating in amps
Black	1
Gray	2
Purple	3
Pink	4
Light brown	5
Brown	7.5
Red (narrow)	10
Light blue	15
Yellow	20
White or transparent	25

Color	Current rating in amps
Light green	30
Teal	35
Orange	40
Red (wide)	50

**WARNING**

Do not repair fuses and never replace a blown fuse with one that has a different amp rating. This can cause damage to the electrical system and increases the risk of fire.

**Note**

If a new fuse burns out again shortly after you have installed it, have the electrical system checked as soon as possible by an authorized Audi dealer or authorized Audi Service Facility.

**Tips**

Some of the equipment listed in the following tables applies only to certain model versions or certain optional equipment.

Fuse assignment – footwell

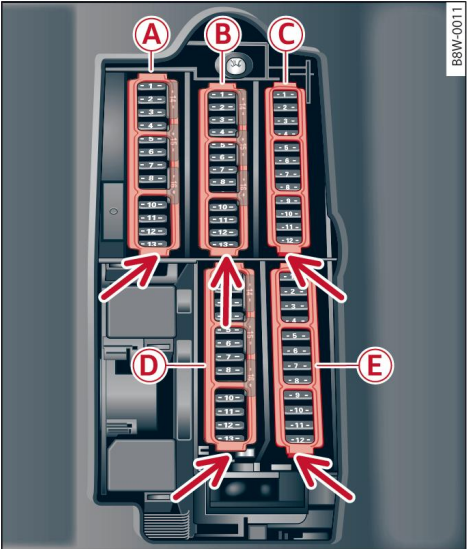


Fig. 188 Driver's footwell (left-hand drive vehicle): fuse panel with plastic clip

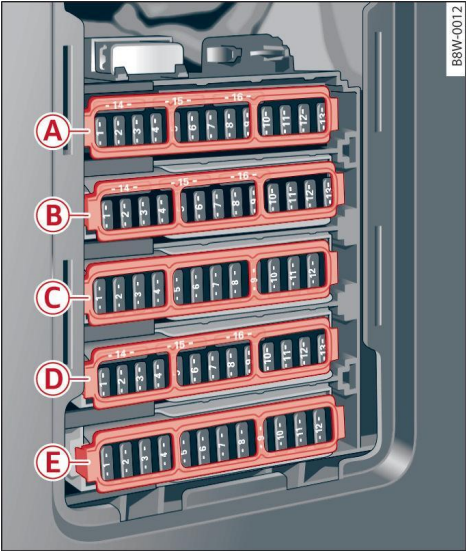


Fig. 189 Front passenger's footwell (right-hand drive vehicle): fuse panel with plastic clip

Fuse panel A (brown)	
No.	Equipment
1	Catalytic converter heating
2	Engine components
3	Exhaust doors, fuel injectors, air intake, engine heating
4	Vacuum pump, hot water pump, NOx sensor, particulate sensor, biodiesel sensor, exhaust doors
5	Brake light sensor
6	Engine valves, camshaft adjustment
7	Heated oxygen sensors, mass airflow sensor, water pump
8	Water pump, high pressure pump, high pressure regulator valve, temperature valve, engine mount
9	Hot water pump, engine relay, 48 V starter generator, 48 V water pump
10	Oil pressure sensor, oil temperature sensor
11	Clutch position sensor, 48 V starter generator, water pump, 12 V starter generator
12	Engine valves, engine mount
13	Engine cooling

Fuse panel (A) (brown)	
14	Fuel injectors, drive system control module
15	Ignition coils, heated oxygen sensors
16	Fuel pump

Fuse panel (B) (red)	
No.	Equipment
1	Anti-theft alarm system
2	Drive system control module
3	Left front seat electronics, lumbar support, massaging seat
4	Automatic transmission selector
5	Horn
6	Parking brake, Electronic Toll Collection System (ETC)
7	Diagnostic interface
8	Roof electronics control module
9	Emergency call and communication control module
10	Airbag control module
11	Electronic Stabilization Control (ESC), Anti-Lock Braking System (ABS)
12	Diagnostic connection, Electronic Toll Collection System (ETC), Light/rain sensor
13	Climate control system
14	Right front door control module
15	Climate control system compressor
16	Brake system pressure reservoir

Fuse panel (C) (black)	
No.	Equipment
1	Front seat heating
2	Windshield wipers
3	Left headlight electronics
4	Panoramic glass roof
5	Left front door control module
6	12 volt socket
7	Right rear door control module, right rear power window
8	All wheel drive control module
9	Right headlight electronics

Fuse panel (C) (black)	
10	Windshield washer system/headlight washer system control module
11	Left rear door control module, left rear power window
12	Parking heater

Fuse panel (D) (black)	
No.	Equipment
1	Front seat electronics, seat ventilation, rearview mirror, rear climate control system control panel, passenger's airbag warning light, diagnostic connection
2	Diagnostic interface, vehicle electrical system control module
3	Engine sound control module
4	Clutch position sensor
5	Engine start
6	Diagnostic connection
7	USB connection
8	Garage door opener
9	Audi adaptive cruise control
11	Front camera
12	Right headlight
13	Left headlight
14	Transmission fluid cooling

Fuse panel (E) (red)	
No.	Equipment
1	Ignition coils
2	Climate control system compressor
5	Left headlight
6	Automatic transmission
7	Instrument panel
8	Climate control system blower
9	Right headlight
10	Dynamic steering
11	Engine start

Fuse assignment- cockpit

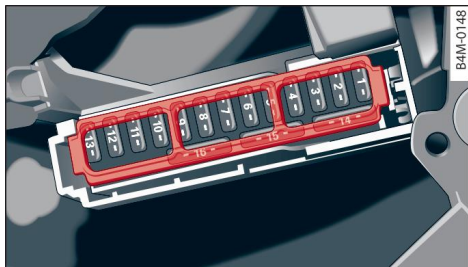


Fig. 190 Driver side cockpit: fuse panel with plastic bracket

No.	Equipment
1	Convenience access and start authorization control module
2	Audi phone box, USB connection
4	Head-up display
5	USB ports with charging function
6	Front climate control system control panel
7	Steering column lock
8	Center display
9	Instrument cluster
10	MMI control knob
11	Light switch, switch module
12	Steering column electronics
14	Infotainment system
16	Steering column electronics, steering wheel heating

Fuse assignment - luggage compartment

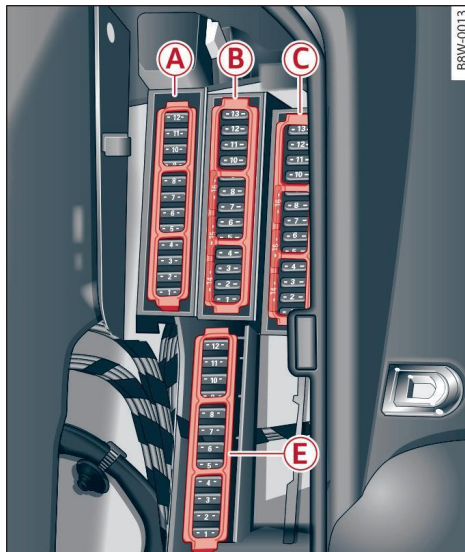


Fig. 191 Left side of the luggage compartment: fuse panel with plastic clip

Fuse panel A (black)

No.	Equipment
2	Windshield defroster
3	Windshield defroster
5	Suspension control
6	Automatic transmission
7	Rear window defogger
8	Rear seat heating
9	Left tail lights
10	Airbag, driver's side safety belt tensioner control module
11	Luggage compartment lid lock, fuel filler door lock, convenience system control module
12	Luggage compartment lid

Fuse panel B (red)

No.	Equipment
6	Electric compressor

Fuse panel  (brown)	
No.	Equipment
1	Exterior antenna
2	Audi phone box
3	Right front seat electronics, lumbar support, massaging seat
4	Side assist
6	Interior monitoring, anti-theft alarm system, tire pressure monitoring system
7	Convenience access and start authorization control module
8	Tank module
10	Data exchange and telematics control module
11	Auxiliary battery control module
12	Garage door opener
13	Rearview camera, peripheral cameras
14	Right tail lights
16	Airbag, front passenger's side safety belt tensioner control module

Fuse panel  (red)	
No.	Equipment
3	Exhaust treatment
5	Right trailer hitch light
7	Trailer hitch release
8	Left trailer hitch light
9	Trailer hitch socket
10	All wheel drive control module, sport differential
11	Exhaust treatment

Bulbs

Note

Your vehicle is equipped with maintenance-free headlights and tail lights. However, if a light bulb needs to be replaced, please contact an authorized Audi dealer or authorized Audi Service Facility.

Data privacy

Privacy notice

You can find information about data privacy online on the Audi website for your particular country or sales region, or in the vehicle MMI.

Applies to: MMI: Select on the home screen: **SETTINGS > General > Legal notes > About Audi connect**.

Image recording

Surrounding area monitoring

Applies to: vehicles with surrounding area monitoring

Some vehicle functions require the vehicle's path to be detected and evaluated. This is done by cameras installed permanently on the vehicle that detect objects in the vehicle's surroundings (such as obstacles or guard rails). The live images from the cameras are transmitted to the applicable control module.

The camera images are transferred to the responsible control module for processing and may be stored, depending on vehicle equipment. The control module analyzes the current camera image using image evaluation software. This image evaluation software detects anonymized technical measurements, such as distances to objects. The control module evaluates these technical measurements and makes it possible for the assist systems to control the vehicle as needed.

Data storage

Vehicle control modules

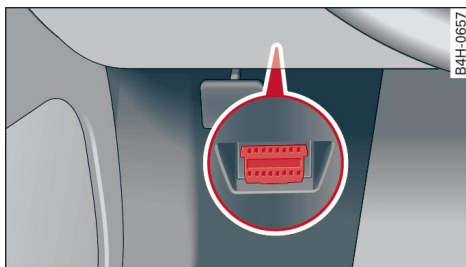


Fig. 192 Driver's side footwell: connection port for the On Board Diagnostic System (OBD)

Your vehicle is equipped with electronic control modules for various vehicle systems such as the airbags. These vehicle control modules store data while driving normally that is required by an authorized Audi dealer or authorized Audi Service Facility for diagnosis and repair purposes. Only certain types of data are recorded for a very short period of time if a control module has detected a system event. No noises, conversations, or images inside the vehicle will be recorded.

The data may include information such as the vehicle speed, the direction of travel, and information about the brake system, or also the behavior of the restraint system in the event of a collision. The stored data can be exported and downloaded with special devices, which must be connected directly to the vehicle.

On Board Diagnostic System (OBD)

There is a diagnostic connector port in the driver's side footwell to read out the various control modules and the event data recorder. Data regarding the function and condition of the electronic control modules is stored in the event memory. Only have an authorized Audi dealer or authorized Audi Service Facility read out and clear data from the event memory.



WARNING

- Incorrect use of the connection port for the On Board Diagnostic System can cause malfunctions, which can then result in accidents and serious injuries.
- Only allow an authorized Audi dealer or authorized Audi Service Facility to read out the data.

Crash data recorder

Event Data Recorder

This vehicle is equipped with an Event Data Recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an airbag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's system performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of

time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g. name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

Data usage

Audi can read out the information stored in the data memories or similar data, or give this information to third parties, especially in the following situations:

- If the vehicle owner or lessee agrees
- If there is an official request from the police
- If a court or authorities request it

If legally permitted, Audi can also use the data for analysis of vehicle operation and safety performance or provide this data to third parties for research purposes.

Transmitted information

Data collection

Applies to: vehicles with data collection

Depending on the country, Audi may be able to access the vehicle and collect data, for example for the following reasons:

- Data collection for research and development
- Data collection for statistics, analytics, and reporting
- Data collection for personalized evaluations

For example, various technical function data, environmental data, driving data, and usage data will be collected for a specific purpose and forwarded to Audi. The data will be sent from the vehicle at the time the data is collected.

You can find additional information in the MMI. Select on the home screen: **SETTINGS > General > Legal notes > About Audi connect.**

If you would like to change the data collection settings, contact an authorized Audi dealer or authorized Audi Service Facility for more information. Depending on the country and equipment, you may be able to change data collection in the privacy mode settings of your vehicle.

Privacy settings

Applies to: vehicles with Audi connect

- **Applies to MMI:** Select on the home screen: **SETTINGS > Privacy mode settings.**
- To display additional information about the privacy settings and the associated symbols in the status bar, press ① in the MMI.

Requirement: the ignition must be turned on.

Setting the maximum privacy settings

When the **Activate privacy mode** function is turned on, the data connection is deactivated or sending of data is restricted, but all safety-related, legal, or contractually required Audi connect services remain activated. The majority of the Audi connect services are deactivated.

When the function is turned off, the data connection will be available in order to use Audi connect ►

services. After turning off the **Activate privacy mode** function, check the individual data categories as described under *Adjusting individual privacy settings*.

Adjusting individual privacy settings

In the MMI, you can adjust individually which data should be transmitted from the vehicle. If you turn on a data category, the data will be transmitted.

You can also deactivate individual services for your vehicle at my.audi.com if you are logged into the vehicle as the key user ⇒ *page 33*. These deactivated services will not be available in the vehicle. For additional information, visit my.audi.com.¹⁾

Note

You are responsible for all precautions taken for data protection, anti-virus protection, and protection against loss of data on mobile devices that are used to access the Internet through the Wi-Fi hotspot.

Tips

- The following interfaces are not affected by changes to the privacy settings: Bluetooth, Bluetooth Low Energy (BLE), Wi-Fi, smartphone interface, Near Field Communication (NFC), charging communication (high-voltage system), Electronic Toll Collect (ETC), On-Board Diagnostic System (OBD) if equipped.
- If the maximum privacy settings are turned on, your vehicle may not receive certificates and security updates for establishing a secure connection, depending on vehicle equipment. In order to receive security updates and certificates, turn off the maximum privacy settings for at least ten minutes every three months. Make sure that your vehicle is connected to the Internet. A symbol in the MMI status bar indicates if the required data connection is available ⇒ *page 25*.

- If the transmission of data is limited, it will have the following effects on the exchange of data for Audi connect services and emergency calls, if equipped:
 - The emergency call function will remain available without restrictions and will continue to transmit data.
 - If an online roadside assistance call is initiated, no data will be transmitted, but a call will be made.
 - Online Car Care will remain available without restrictions and continue to transmit data, as long as the vehicle's embedded SIM card is connected to the mobile phone network.
 - If the Geofencing Alert, Speed Alert, and/or Valet Alert services have been activated by the key user, then they will remain available without restrictions and continue to transmit data.
 - Stored destinations (favorites, last destinations) are only stored in the vehicle. If you allow transmission of data again, these destinations will be synchronized via the myAudi account. To prevent synchronization of destinations, delete the destinations before you allow data to be transmitted again.

Audi connect

Applies to: vehicles with Audi connect Infotainment

Audi collects, uses, stores and shares your personal information, such as contact data, vehicle data, usage data, driving data and precise geolocation, in order to provide you with the products and services you have purchased or requested, and for a number of other purposes, for example, to track quality issues, to performance and safety, to meet our internal compliance or legal requirements and to market to customers and potential customers. For a more complete list of the data we collect, how we use it and with whom we share it, please visit your Audi national/sales region website at www.audi.com. ►

¹⁾ In certain countries.

The collection, use and sharing may vary depending on your model and model year, your subscription status, or the service offering. For example, collection, use and sharing may vary between Audi connect services, if you have designated a key user, or if you are driving a model equipped with persistent data logging. Please review the complete Privacy Statement to understand our data handling practices with respect to a particular service.

You can find additional information about our data privacy practices in your MMI.

- Applies to: MMI: On the home screen, select:
SETTINGS > General > Legal notes > About Audi connect.

Information about our privacy practices in conjunction with the mobile Audi connect application can be found in the Application's Privacy Statement.

For additional information about the privacy practices relating to Audi connect, myAudi, or other websites, applications or online services as well as your obligations with respect to using these services, and for additional information regarding Audi connect terms and conditions, please visit your Audi national/sales region website at www.audi.com.

Accessories and technical changes

Warranty

Your vehicle is covered by various warranties:

- New Vehicle Limited Warranty
- Limited Warranty Against Corrosion Perforation
- Applies to: USA models: Emissions Control System Warranties: *Federal Emissions Control System Defect Warranty, Federal Emissions Performance Warranty*
- Applies to: Canada models: Emissions Warranties: *Emissions Control System Defect Warranty, Emissions Performance Warranty*
- Applies to: USA models: Kansas Safety Belt Limited Warranty
- Applies to: USA models: California Emissions Control System Warranties: *Short-term Emissions Defects Warranty, Long-term Emissions Defects Warranty, TZEV models Emissions Defects Warranty, California Emissions Performance Warranty*

You can find detailed information in your Warranty & Maintenance Booklet, in the California Emissions Booklet*, or on the applicable website:

- Applies to: USA: maintenance.audiusa.com
- Applies to: Canada: www.audimaintenance.ca or www.audimaintenance.ca/#/search/fr

Audi Literature Shop

Service information is made available as soon as possible after a model is introduced and can be ordered in the Audi Literature Shop: <http://literature.audiusa.com>

Driving in other countries

Government regulations in the United States and Canada require motor vehicles to comply with emissions regulations and safety standards. Therefore, vehicles that were produced for the U.S. and Canadian markets are different from vehicles produced for other countries.

If you plan to operate your vehicle outside of the United States or Canada, it is possible that:

- Fuel may have a significantly lower octane rating. Unsuitable fuels can cause engine damage.
- Proper maintenance and repair work may not be possible because special service equipment, tools, or measuring devices needed for your vehicle may not be available.
- Replacement parts may not always be available.
- Navigation systems for vehicles built for the U.S.A. and Canada will not necessarily work in Europe, and may not work in other countries.



Note

Audi is not liable for damage to the vehicle resulting from these country-specific differences.

Maintenance, repairs, and technical modifications

Observe the safety precautions ⇒ *page 237, General information* and ⇒ *page 289, Raising the vehicle*.

General information

Due to the increasing complexity of technology in these vehicles, as well as the safety and environmental standards that apply, you can only perform a very limited amount of repairs and modifications to the vehicle yourself.

Proof of maintenance work may be required to submit a claim within the warranty period.

We recommend that you have your vehicle serviced by an authorized Audi dealer or authorized Audi Service Facility and that Audi Genuine Parts and Audi Genuine Accessories are used. This helps to ensure that your vehicle's functionality, performance, and safety are not impaired.

Maintenance and repairs

Your vehicle was designed to help keep maintenance requirements to a minimum. Some regular maintenance is required to help ensure that your vehicle runs in a safe, economical, and reliable ►

manner. Please refer to your Warranty & Maintenance Booklet for more detailed information about vehicle maintenance.

When operating the vehicle under more extreme operating conditions, for example when outside temperatures are very low or in very dusty environments, certain maintenance should be performed between the specified intervals.

Maintenance and repair work generally requires special tools, measuring devices, and other equipment that is available to trained vehicle technicians in order to help ensure that your vehicle and all of its systems operate correctly, reliably, and safely. Performing work on the vehicle incorrectly can impair the operation and reliability of your vehicle and may void one or more of your vehicle's warranties.

Technical Modifications

Interference with electronic components, their software, the wiring, and data transfer may cause malfunctions. Because of the way electronic components are interconnected, such malfunctions can also impair systems that are not directly involved. This means that you risk both a substantial reduction in the operational safety of your vehicle and increased wear of vehicle components.

Some convenience functions, such as the convenience turn signal function, individual door opening function, and displays, can be reprogrammed using special workshop equipment. If functions are reprogrammed, the information and descriptions about these functions in this Owner's Manual may no longer apply to the changed functions. Audi recommends that an authorized Audi dealer or authorized Audi Service Facility perform and verify any reprogramming procedures.

WARNING

- There is a risk of an accident if maintenance, repairs, technical modifications, or paint work are not performed correctly. The functionality of the airbags, the driver assistance systems, and the vehicle may be impaired. Having the vehicle serviced by an authorized Audi dealer or authorized Audi Service Facility is recommended.

- There is the risk of an accident if work on the vehicle is performed incorrectly. Serious injuries may result. Having the vehicle serviced by an authorized Audi dealer or authorized Audi Service Facility is recommended.
- Please refer to the engine compartment safety precautions described in [⇒ page 237](#).



Note

- Maintenance work, repairs, technical modifications to the vehicle (such as installing additional equipment), or paint work that is not performed correctly can cause vehicle damage.
- The New Vehicle Limited Warranty does not cover damage or malfunctions if the recommended intended use of the vehicle and maintenance measures listed in the Audi Owner's Manual and the Warranty & Maintenance Booklet were not followed.
- If emergency repairs must be performed, take your vehicle to an authorized Audi dealer or authorized Audi Service Facility as soon as possible.
- Audi is not liable for damage to the vehicle resulting from failure to comply with these guidelines.



For the sake of the environment

- Regular maintenance can help protect the environment.
- Technical modifications to the vehicle can have a negative impact on fuel consumption and vehicle emissions.



Tips

Because of your vehicle's aluminum body design, all service and repair procedures affecting the body should be performed by an authorized Audi dealer or authorized Audi Service Facility, who will perform the work according to Audi factory specifications. Only Audi Genuine Parts are used when Audi experts perform repair or service procedures. Failure to use Audi Genuine Parts or Audi Genuine Accessories or performing repairs incorrectly

may result in severe vehicle damage, such as corrosion.

Accessories and parts

Introduction

Consult with an authorized Audi dealer or authorized Audi Service Facility before purchasing accessories or replacement parts.

Audi recommends using Audi Genuine Parts and Audi Genuine Accessories. Audi does not evaluate the reliability and suitability of products that are not Audi Genuine Parts or endorse them, even if the product is approved by a certified testing agency or government agency.

Have all work performed by an authorized Audi dealer or authorized Service Facility. Audi recommends having all work performed by an authorized Audi dealer or authorized Audi Service Facility.

Radio communications equipment

A correctly-installed exterior antenna is required for operating radio equipment in the vehicle. Otherwise, the increased electromagnetic waves can cause malfunctions in the vehicle. Observe the regulations in the country where the vehicle is being operated and the instructions from the radio equipment manufacturer.

An authorized Audi dealer or authorized Audi Service Facility can inform you about installation options and radio communications equipment.

of the same material. Do not install any license plate brackets on the front of vehicles that do not have factory-installed brackets. Otherwise, the function of the system could be impaired.



WARNING

- Installing unapproved accessories or incorrect replacement parts can cause vehicle damage and can increase the risk of an accident.
- Never attach accessories, such as phone holders or cup holders, to the airbag covers or within the airbag deployment zone, because this increases the risk of injury if the airbag deploys.
- On vehicles that have factory-installed license plate brackets on the front of the vehicle, the brackets may only be replaced with ones that are the same size and made

Technical data

Identification data

Vehicle Identification Number

The Vehicle Identification Number (VIN) is located in the following areas:

- Applies to MMI: Select on the home screen: **VEHICLE > Settings & Service > Vehicle information**.
- At the front behind the windshield
- Stamped into the engine compartment on the right side

Information about technical data

The values may vary based on special equipment as well as market-specific equipment and measuring methods.

Please note that the specifications listed in the vehicle documentation always take precedence.

 **Tips**

Any technical data that is missing was not available at the time of publication.

Vehicle data

Dimensions

	Length (in (mm))	Width (in (mm))	Width across the mirrors (in (mm))	Height at curb weight (in (mm))
A5 Coupe	184.9 (4,697) – 185.2 (4,705)	72.7 (1,846)	79.9 (2,029)	53.9 (1,369) – 54.3 (1,379)
A5 Sportback	187.3 (4,757) – 187.6 (4,765)	72.7 (1,846)	79.9 (2,029)	55.0 (1,396) – 55.4 (1,406)
S5 Coupe	185.2 (4,705)	72.7 (1,846)	79.9 (2,029)	53.9 (1,368) – 54.3 (1,378)
S5 Sportback	187.6 (4,765)	72.7 (1,846)	79.9 (2,029)	55.1 (1,395) – 54.9 (1,405)
RS 5 Coupe	185.7 (4,717)	73.5 (1,866)	79.9 (2,029)	54.0 (1,372) – 54.1 (1,374)
RS 5 Sportback	188.1 (4,777)	73.5 (1,866)	79.9 (2,029)	55.1 (1,399) – 55.1 (1,400)

Capacities

	Approximate capacities
Fuel tank	14.3 gal (54 L) / 15.3 gal (58 L) ^{a)}
Windshield/headlight washer system*	5.0 qt (4.7 L) / 5.2 qt (4.9 L) ^{a)}

^{a)} The specifications depend on vehicle equipment.

Weights

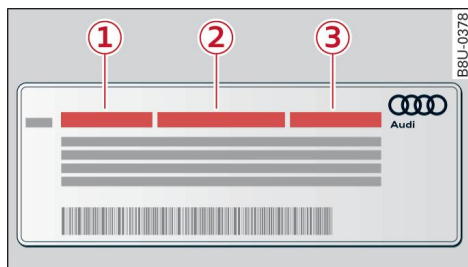


Fig. 193 Safety certificate

Gross Vehicle Weight Rating (GVWR)

The maximum permitted total weight ① of the vehicle is listed on the safety certificate on the side area of the door or on the driver's door pillar.

Gross Axle Weight Rating (GAWR)

The maximum permitted load on the front axle ② or the rear axle ③ is listed on the safety certificate on the side area of the door or on the driver's door pillar.

Load

The maximum permitted load is listed on the tire pressure label on the driver's door pillar.

Roof load

The maximum permitted roof load is:

- Applies to: Coupe: 165 lbs (75 kg)
- Applies to: Sportback: 198 lbs (90 kg)

Other information

Online Car Care

Applies to: vehicles with Online Car Care

If new messages from Online Car Care are available, they will be displayed in the MMI when you turn on the ignition.

- Applies to: MMI: To access Online Car Care messages at a later time, select on the home screen: **VEHICLE > Settings & Service > Online Car Care**.

Special service events, service measures, and recalls regarding your vehicle will be displayed via Online Car Care.

WARNING

- Always follow the information found in ⇒  in *General information on page 187*.
- Recalls by the manufacturer must be performed. Failing to adhere to this requirement can void the vehicle's operating license. Failing to perform measures can result in impaired functionality, which increases the risk of an accident.

Note

- Always follow the information found in ⇒  in *General information on page 187*.
- Recalls by the manufacturer must be performed. If they are not, there is a risk of vehicle damage.

Brands and licenses

This manual does not contain any symbols, such as ® or ™, to identify trademarks or registered trademarks. However, the absence of these symbols does not constitute a waiver of any rights associated with these names.

Apple, iPhone, iPod touch, Apple CarPlay, Lightning, and iTunes Radio are trademarks of Apple Inc.

Other product and manufacturer names may be trademarks of their respective owners.

Disposal instructions

General information

Follow the local legal regulations for disposing of electrical/electronic devices and of the vehicle.

Batteries

Handling batteries that contain lithium (Li) requires special care. For example, they must not be overheated or damaged. Battery components can be harmful to human and animal health and can accumulate in the environment. To reduce this risk, follow the legal regulations for disposal of batteries that are applicable in your country.

Vehicle

Certain components in your vehicle such as undeployed airbag modules, pretensioners and remote control batteries may contain Perchlorate Material – special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate. When the vehicle or parts of the restraint system including airbag modules and safety belts with pretensioners are scrapped, all applicable laws and regulations must be observed. Your authorized Audi dealer is familiar with these requirements and we recommend that you have your dealer perform this service for you.

Declaration of compliance for telecommunications equipment and electronic systems

Your vehicle may be equipped with various radio systems and electronic systems, depending on vehicle equipment. The manufacturer is not liable for radio malfunctions that are caused by unauthorized changes to the equipment.

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any ►

interference received, including interference that may cause undesired operation.

FCC Part 15.21

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RSS-Gen

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

RSS 102

Radiofrequency radiation exposure Information: This equipment complies with FCC and ISCED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm (8 inches) between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Integrated Toll Module* – FCC (USA) and ISCED (Canada)

This device complies with FCC rules part 90 and Innovation, Science, and Economic Development Canada RSS-137. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference that may be received including interference that may cause undesired operation. **WARNING:** The transmitter has been tested and complies with FCC and ISCED rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

This equipment complies with FCC and ISCED radiation exposure limits set forth for an uncontrolled environment. End Users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must be at least 20 cm (8 inches) from the user and must not be co-located or operating in conjunction with any other antenna or transmitter.



Tips

Additional information, updates, and supplements about the radio systems or product names are based on the vehicle equipment and country can be found on the following website: www.audi.com/generalinfo

Reporting Safety Defects Applicable to U.S.A.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying

Audi of America, Inc.
2200 Ferdinand Porsche Drive
Herndon, VA 20171

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, ►

your dealer, or Audi of America, Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>;

or write to:

Administrator NHTSA
1200 New Jersey Ave.,
S.E. West Building
Washington, DC
20590.

You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

Applicable to Canada

If you live in Canada and you believe that your vehicle has a defect that could cause a crash, injury or death, you should immediately inform Transport Canada, Defect Investigations and Recalls. You should also notify Audi Canada.

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls, may either call Transport Canada toll-free at:

Tel.: 1-800-333-0510 or

Tel.: 1-819-994-3328 (Ottawa region and from other countries)

TTY for hearing impaired:
1-888-675-6863

or contact Transport Canada by mail at:

Transport Canada
Motor Vehicle Safety Investigations Laboratory
80 Noel Street
Gatineau, QC
J8Z 0A1

For additional road safety information, please visit the Road Safety website at:

English:

<http://www.tc.gc.ca/eng/motorvehiclesafety/menu.htm>

French:

<http://www.tc.gc.ca/fra/securiteautomobile/menu.htm>

Numbers and Symbols

3-zone deluxe automatic climate control system 92

A

A/C cooling mode 93

ABS

refer to Anti-Lock Braking System (ABS) 122

Acceleration measurement 137

Accelerator pedal 101

Accessories 307

Active combination filter 92

Active lane assist

refer to Audi active lane assist 151, 154

Adaptive cruise control 143

Adaptive dampers 113

Adjustable coilover suspension 113, 114

Adjusting air distribution 93

Adjusting brightness 59

Adjusting sound 230

Adjusting temperature 93

Adjusting volume 32

Adjusting volume (announcements) 230

Airbag system 75

Alarm system

refer to Anti-theft alarm system 39

Alignment pin (changing the wheel) 285

All-weather lights 54

All season tires 271

All wheel drive

refer to quattro 121

Android Auto

refer to Smartphone interface 227

Anti-Lock Braking System (ABS) 122

Anti-Slip Regulation 122

Anti-theft alarm system 39

App 190

Apple CarPlay

refer to Smartphone interface 227

Aspect ratio

Video 222

ASR

refer to Anti-Slip Regulation 122

Audi active lane assist 154

Cleaning the camera area 280

Audi adaptive cruise control

Cleaning the sensors 280

Predictive control 147

Traffic jam assist 151

Audi adaptive light 54

Audi ceramic 107

Audi connect

refer to connect 187, 188

Audi connect Remote & Control 191

Audi drive select 112

Audio files 219

Audi Online Owner's Manual 6

Audi phone box 177

Audi pre sense 156

Messages 159

Safety measures 156

Audi pre sense city 157

Audi pre sense front 158

Audi side assist

refer to Side assist 160

Audi virtual cockpit

refer to Instrument cluster 15

AUTO

Automatic climate control system 93

Automatic headlights 54

Auto Lock (central locking) 36

Automatic climate control system 92

Automatic luggage compartment lid 44, 46

Automatic transmission 99

Automatic wipe/wash system 61

Average consumption 20

Average speed 20

B

Band

refer to Frequency band 209

Battery

Charging (12 volt vehicle battery) 251

Safety precautions 250

Vehicle battery (12 volt) 249

Winter operation (12 volt vehicle battery) 249

Battery (mobile device)

Charging with USB 178, 218

Wireless charging 178

Belt positioner	73	Luggage compartment lid	44
Blower	93	Mechanically unlocking and locking	39
Bluetooth		Messages	38
Audio player	216	Remote control key	41
Connecting a device	231	Setting	37
Connecting a mobile phone	175	Vehicle key	41
Deleting a device	232	Central locking switch	38
Device overview	231	Ceramic brakes	107
Disconnecting a device	231	Certification	310
Displaying profiles	232	Changing light bulbs	300
Selecting a device	231	Charging	
Specifying a favorite	232	<i>refer to</i> Power sources	86
Boost	19	Charging wirelessly	178
Boost pressure indicator	19	Child safety lock	
Brake fluid		Climate control system controls in the rear	48
Checking the brake fluid level	247	Power windows	48
Brakes	106	Rear doors	48
Brake fluid	247	Child safety seats	80
Emergency braking function	109	Securing to the top tether anchor	84
Hot	110	Securing with a safety belt	83
New brake pads	107	Securing with LATCH	82
Brands	310	Cleaning	278
Break-in security feature	39	Cleaning artificial leather	281
Breaking in		Cleaning carbon components	280, 282
New brake pads	107	Cleaning controls	281
New tires	261	Cleaning decorative parts and trim	280, 281
Bulb replacement	300	Cleaning exhaust tail pipes	280
Business address	204	Cleaning microfiber	281
		Cleaning plastic parts	281
		Cleaning rubber seals	280
		Cleaning textiles	281
		Climate control system	92
		<i>also refer to</i> Automatic climate control system	92
		Climate control system controls in the rear	
		Child safety lock	48
		Closing	
		Automatic luggage compartment lid	44
		Convenience closing	49
		Hood	239
		Luggage compartment lid	44
		Luggage compartment lid with foot motion	46
		Panoramic glass roof	50
		Sunshade (roof)	50
		Windows	49
		Cockpit dimming	59

C

Cockpit (overview)	9	D	
Coming to a stop	98	Data module	
Compact spare tire	291	Serial number (IMEI)	183
Compartments	87	Data plans	192
Compass in the mirror	64	Data Privacy	303
Compliance	310	Date	20
Conference call	182	Setting	230
Configuration wizard	23	Daytime running lights	54
connect	187	Declaration of compliance	310
Data plans	192	Defrosting the windows	93
Data Privacy	303	Demo mode	
Emergency call	194	<i>refer to</i> Presentation mode	207
Infotainment	188	Destination search	198
Infotainment services	189	Determining correct load limit	270
Online roadside assistance	195	Device overview	231
Vehicle control services	191	Digital compass	64
Connected devices	231	Dimensions	308
Connections		Dimming the exterior mirrors	60
<i>refer to</i> Media	216, 219	Dimming the rearview mirror	60
Consumer information	305	Directory	180
Consumption		Business card	181
Reducing	104	Display	
Consumption (fuel)	20	Cleaning	281
Contacts		Displaying tool tips	23
Importing and exporting	183	Disposal	305
Updating in the MMI	183	Distance	20
<i>also refer to</i> Directory	180	Distance warning	153
Convenience key	36	Distraction warning	136
Convenience closing	49	Doors	
<i>also refer to</i> Vehicle key	40	Child safety lock	48
Convenience opening and closing		Door contact switch	58
Windows or panoramic glass roof	49	Mechanically unlocking and locking	39
Coolant temperature display	17	Driver alert warning	134
Cooling mode	93	Driver assistance menu	130
Cooling system		Driver information system	16
Adding coolant	246	Drives	
Checking the coolant level	246	<i>refer to</i> Media	216, 219
Coolant	244	Drive select	
Cornering light	54	<i>refer to</i> Audi drive select	112
Cruise control system	140	Drive system	104
Cup holders	86	Audi drive select	112
Current consumption	20	Drive system (message)	106
Customer information	310	Driving down hills	110
Customer measures	310	Driving program	151
		Driving through water	111

Driving time	20	Engine compartment	
Driving tips		Opening and closing the hood	239
Driving through water	111	Overview	240
Efficient driving	104	Safety precautions	237
Uphill and downhill	110	Engine data	
Driving track	110	<i>refer to</i> Sport displays	19
Driving up hills	110	Engine oil	
Dust filter		Adding	241
<i>refer to</i> Active combination filter	92	Changing	244
Dynamic steering	120	Checking oil level	241
		Consumption	241
		Indicator light	241
		Replacement intervals	253
		Temperature display	18
		Type	241
		Engine sound	
		Audi drive select	113
		Engine Start/Stop mode	
		<i>refer to</i> Start/Stop system	105
		Engine start system	98
		Engine stop	
		<i>refer to</i> Start/Stop system	105
		Entering a destination	198
		Destination from the map	200
		Entry/exit lighting	57
		Entry assistance	68
		<i>also refer to</i> Exit assistance	68
		<i>also refer to</i> Seats	68
		Environment	
		Unleaded gasoline	234
		ESC Sport	122
		eSIM	
		<i>refer to</i> Embedded SIM card	188
		Event Data Recorder (EDR)	301
		Exit assistance	68
		Exit warning	161
		Exterior antenna	178
		Exterior lighting	54
		Exterior mirrors	60
		Folding settings	37
		External voice operation	31
		F	
		Factory default settings	
		Multi Media Interface	231
		Fastest route	198
E			
E-mail	184		
EDL			
<i>refer to</i> Electronic Differential Lock	122		
EDR			
<i>refer to</i> Event Data Recorder (EDR)	301		
Efficiency assist	141		
Predictive control	147		
Electrical system	248		
Electromechanical parking brake	108		
Electronic Differential Lock	122		
Electronic immobilizer	41		
Electronic Stabilization Control (ESC)	122		
Embedded SIM card	188		
Emergency assistance	285		
Emergency braking function	109		
Emergency call	182, 194		
Emergency flashers	57		
Emergency mode	103		
Emergency operation			
Doors	39		
Panoramic glass roof	50		
Emissions control system	237		
Energy consumers	20		
Energy management	104		
Engine			
Breaking in	104		
Coolant	244		
Emergency stop	97		
Jump starting	291		
Start/Stop system	105		
Starting/stopping	97		

Favorites	
Bluetooth	232
Navigation	199
Phone	180
Podcast	214
Federal Communications Commission (FCC)	310
File formats (media drives)	222
Floor mats	65
Folding the center armrest	90
Folding the rear seats	89
For the sake of the environment	
Disposing of engine oil	244
Fueling	235
Leaks	239
Free text search	
Media	221
Radio	211
Freeze protection	
Coolant	244
Windshield washer system	252
Frequency band	209
<i>also refer to</i> Frequency band	209
Front center armrest	69
Front collision warning	
<i>refer to</i> Audi pre sense front	156
Front passenger's seat adjustment	
Rear	68
Front wiper blades	
Changing	63
Cleaning	63
Fuel	234
Additives	235
Capacities	308
Current consumption	20
Fuel gauge	15
Gasoline	234
Reducing fuel consumption	104
Fueling	
Capacities	308
Fuel filler door	235
Functions on demand	190
Functions that require a license	190
<i>also refer to</i> Functions on demand	190
Fuses	
Assignment	297
Replacing	296
G	
Garage door opener	51
Garment hooks	87
Gasoline	234
Additives	235
Gasoline mixture	234
Gas pedal	
<i>refer to</i> Accelerator pedal	101
GAWR	
<i>refer to</i> Gross Axle Weight Rating (GAWR)	309
Glossary of tire and loading terminology	257
Glove compartment	87
Valet parking	51
G meter	
<i>refer to</i> Sport displays	19
Gross Axle Weight Rating (GAWR)	309
Gross Vehicle Weight Rating (GVWR)	309
GVWR	
<i>refer to</i> Gross Vehicle Weight Rating (GVWR)	309
H	
Hands-free	176
Hands Free Profile	176
Head-up display	
Adjusting	29
Adjusting brightness	59
Operating	29
Headlight range control	54
Headlights	54
Cleaning	279
Headlight range control	54
Washer system	61
Washer system (filling washer fluid)	252
Headlight washer system	
Capacities	308
Head restraints	70
Heated	
Rear window	94
Seats	94
Heated steering wheel	95
Heating	92
HFP	
<i>refer to</i> Hands Free Profile	175

High beams	
High beam assistant	55
Highway lights	54
Hill descent control	110
Hill hold assist	99
Holoride interface	225
Home	
<i>refer to</i> Home address	204
Home address	204
HomeLink	
<i>refer to</i> Garage door opener	51
Home screen	22
Horn	9
Hotspot	
<i>refer to</i> Wi-Fi	191

I

Ignition	
Turning on or off	97
Imbalance (wheels)	263
Immobilizer	
<i>refer to</i> Electronic immobilizer	40
Indicator lights	10
Inspection interval	
<i>refer to</i> Service interval display	253
Instrument cluster	15
Adjusting the layout	16
Cleaning	281
Engine code	232
Malfunction	15
On-board computer	20
Operating	16
Service interval display	253
Software information	232
Switching tabs	16
Switching the view	16
Vehicle functions	19
Version information	232
Instruments	
Adjusting illumination	59
Integrated Toll Module	138
Interior lighting	58, 59
Interior monitoring	39
Interior trunk release	
Luggage compartment lid	47
<i>also refer to</i> Luggage compartment lid	44, 47

Intermittent mode (windshield wipers)	61
International travel	192
Internet	
<i>refer to</i> connect	187, 188
Internet radio	
<i>refer to</i> Online radio	213
iPhone	
<i>refer to</i> USB ports with charging function	217

J

Jump starting	291
---------------	-----

K

Key	36, 40
Convenience opening and closing	49
Key replacement	40
Mechanical key	40
PANIC button	40
Replacing the battery	42
Unlocking and locking	41
Key user	34
Kick-down	101

L

Lane assist	
<i>refer to</i> Audi active lane assist	151, 154
<i>refer to</i> Traffic jam assist	151
Lane departure warning	154
Lap counter	
<i>refer to</i> Lap timer	136
Lap timer	136
Laser lighting	56
LATCH (securing child safety seats)	82
Launch control	101
Leather care and cleaning	282
Legal information	
License subscriptions	232
Software information	232
Software licenses	232
Version information	232
License plate bracket	307
Lifting points (vehicle jack)	289
Light/rain sensor	
Automatic headlights	54
Intermittent mode (windshield wipers)	61

Lighting	54	MAP	
Exterior	54	<i>refer to</i> Message Access Profile	184
Interior	58	Map preview	200
Listening to music		Map update	205
<i>refer to</i> Media	216, 219	Online	205
Load	309	USB connection	206
Local users	33	Message function	
Locking and unlocking		Front	68
By remote control	41	Mechanical key	40
Using the lock cylinder	39	Media	216, 219
With the convenience key	41	Supported formats	222
Low beam headlights	54	Media center	219
LTE		Memory function	75
<i>refer to</i> Exterior antenna	178	Menu language	
Luggage		<i>refer to</i> Setting the language	230
Luggage compartment lid	43	Menu paths	22
Luggage compartment	87	Message Access Profile	184
Cover	89	Messages	184
Increasing the size	89	Mirror compass	64
Power sources	86	Mirrors	
Tie-downs	90	Adjusting exterior mirrors	60
Valet parking	51	Dimming	60
<i>also refer to</i> Luggage compartment	87	Vanity mirror	61
Luggage compartment lid	43, 47	MMI	
Closing button	44	<i>refer to</i> Multi Media Interface	23
General information	43	Mobile device	
Manually unlocking	47	<i>refer to</i> Phone	175
Opening and closing	44	Mobile device reminder signal	179
Opening and closing with foot motion	46	Mobile phone	
Opening from the inside in an emergency	47	<i>refer to</i> Phone	175
Power opening and closing	44	Mobile phone compartment	
Lumbar support	66, 67	<i>refer to</i> Audi phone box	177
		Mountain passes	110
		Mountain roads	110
		Multifunction steering wheel	
		Buttons	16, 32
		Operating	16
		Programming buttons	32
		Voice recognition system	30
		Multi Media Interface	23
		Menus and symbols	24
		Operating	21, 24
		Turning on or off	23
		Muting	32
		myAudi	33, 189
		myAudi navigation	197, 200

M

Maintenance	305
Maintenance intervals	
<i>refer to</i> Service interval display	253
Malfunction Indicator Lamp (MIL)	237
Manual operation	
Luggage compartment lid	45, 47
Manual shifting	101
Map	
Changing the map scale	200
Display	202
Operating	201
Selecting a destination	200

myAudi PIN	34
myAudi users	33
N	
Natural leather care and cleaning	282
Navigation	197
Better route	207
Changing the scale	200
Destination details	200
Destination search	198
Favorites	204
<i>also refer to</i> Map	201
Navigation database	
Version information	232
Navigation (instrument cluster)	203
NHTSA	311
Notification center	26
O	
Octane rating (gasoline)	234
Odometer	18
Resetting	18
Office address	
<i>refer to</i> Business address	204
OFF (button)	93
Oil	
<i>refer to</i> Engine oil	241
On-board computer	20
On Board Diagnostic System (OBD)	237, 301
Online	
Car care	310
Measures	310
Service	310
Online map	
<i>refer to</i> Satellite map	205
Online media	217
Online Owner's Manual	6
Online radio	213
<i>also refer to</i> Online radio	213
Online roadside assistance	195
Online services	
<i>refer to</i> connect	187, 188
Opening	36
Automatic luggage compartment lid	44
Convenience opening	49

Fuel filler door	235
Hood	239
Luggage compartment lid	44
Luggage compartment lid with foot motion	46
Panoramic glass roof	50
Sunshade (roof)	50
Windows	49
Opening and closing	
<i>refer to</i> Unlocking and locking	36, 41
Operating	
Head-up display	29
Instrument cluster	16
Multifunction steering wheel	16
Multi Media Interface	21, 24
Text input	27
Touch display	21
Voice recognition system	30
Options	
Media	222
Radio	214
Overview (cockpit)	9
Owner's Manual	
Accessing the digital version	6

P	
Paint damage	280
PANIC button	40
PANIC function	40
Panoramic glass roof	50
Convenience opening and closing	49
Emergency closing	50
Quick opening and closing	50
Park assist	172
Parking	98
Parking aid	163
Adjusting volume	164
Automatic activation	163
Cleaning the sensors/camera	280
Park assist	172
Parking aid plus	163
Parking space search	170
Peripheral cameras	165
Rear cross-traffic assist	169
Rearview camera	165
Parking aid menu	130
Parking and maneuvering	163

- Parking brake
refer to Electromechanical parking brake . . . 108
- Parking lights 54
- Parking lock
 Manually releasing 102, 114
- Pedals 101
- Perchlorate 305
- Performance/torque display
refer to Sport displays 19
- Peripheral cameras 165
- Personal hotspot 188
- Personal profiles
refer to Users 33
- Phone 175
 Answering/ending a call 181
 Audi phone box 177
 Charging the battery (USB) 178
 Charging the battery (wireless) 178
 Connecting a mobile phone 175
 Connecting a second mobile device 176
 Dialing a number 181
 Disconnecting a mobile device 177
 Exterior antenna 178
 Mobile device reminder signal 179
 Options during a phone call 182
 Playing music 216
- Phonebook
refer to Directory 180
- PIN
 4-digit myAudi PIN 33
 Protection 34
- Playback
 Media 219
 Radio 210
- Podcast
refer to Online radio 213
- Polishing 280
- Pollen filter
refer to Active combination filter 92
- Power sources 86, 218
- Power window malfunction 49
- Power windows 49
 Malfunction 49
- Predictive control 147
- Predictive messages 142
- Predictive route guidance 203
- pre sense
refer to Audi pre sense 156
- Presentation mode 208
- Presets
 Radio 212
- Presets list
refer to Presets 212
- Pressure
 Tire pressure monitoring system 273, 274
 Tires 265
- Protecting 280
- Pyrotechnic elements 305
- ## Q
- quattro 121
 Selective wheel torque control 122
- ## R
- Radio 209
 Radio text 212
 Station list 209
- Radio communications equipment 307
- Radio equipment 307
- Radio Standards Specification (RSS) 310
- Rain/light sensor
 Automatic headlights 54
 Intermittent mode (windshield wipers) 61
- Random
refer to Shuffle 220
- Range (fuel level) 20
- Reading lights 58
- Rear cross-traffic assist 169
- Rear lid
refer to Luggage compartment lid 44, 47
- Rear shelf
refer to Storage area behind the rear head
 restraints 87
- Rearview camera 165
- Rear window defogger 94
- Recall 310
- Recirculation mode 94
- Recuperation 20
- Refueling 235
 Fuel filler door manual release 237
- Remote access authorization (key user) 34

Remote control		Screen	
Garage door opener	51	<i>refer to</i> Touch display	21
Remote control key	40	Screwdriver	285
Convenience opening and closing	49	Search function	
Key replacement	40	<i>refer to</i> Destination search	198
LED	42	<i>refer to</i> Free text search	211, 221
PANIC function	40	Seat heating	94
Replacing the battery	42	Seats	
Unlocking and locking	41	Adjusting	66, 67
<i>also refer to</i> Vehicle key	40	Cleaning	281
Removing wheel bolt caps	288	Easy entry function	68
Repairs	305	Folding	89
Replacement key	40	Head restraints	70
Replacement parts	307	Memory function	75
Replacing the battery		Resetting the position	68
12 volt vehicle battery	249	Storing a seat profile	75
Vehicle key	42	Seat ventilation	94
Reporting Safety Defects	311	Selecting a source	
Rims	270	Media	219
Cleaning	280	Radio	210
Rolling	98	Selector positions	99
Rolling ability		Self-learning navigation	
Electromechanical parking brake	108	<i>refer to</i> Predictive route guidance	203
"N" position	100	Sensors	
Roof		Coverage areas	128
<i>refer to</i> Panoramic glass roof	50	Locations	129
Roof load	309	Service interval	
Roof rack	91	<i>refer to</i> Service interval display	253
<i>also refer to</i> Roof rack	91	Service interval display	253
Route guidance		Service measures	310
Stopping	201	SET REAR (button)	93
<i>also refer to</i> Navigation	197	Setting measurement units	230
RS sport suspension pro	113	Settings	230
Running direction (tires)	290	Announcements and tones	230
		Bluetooth	230
		Date and time	230
		Directory	183
		E-mail	184
		Language	230
		Measurement units	230
		Media	222
		Navigation	207
		Phone	183
		Radio	214
		Sound	230
		System	230
		Text messages	184

S

Safety belts	71
Belt positioner	73
Cleaning	281
Locking	83
Securing child safety seats	83
Satellite map	205
Saving fuel	
Energy consumers	20
Recuperation	20

Time zone	230	Steering	120
Wi-Fi	191	Audi drive select	113
Wi-Fi hotspot	191	also refer to Steering	120
Setting the language	230	Steering lock	97
Setting the time	230	Steering wheel	
Shift light indicator	19	Adjusting	70
Shift paddles	101	Adjusting manually	70
Shop	190	Shift paddles	101
Shuffle	220	Steering wheel heating	95
Side assist	160	also refer to Multifunction steering wheel	16
Cleaning the sensors	280	Steps for determining correct load limit	270
SIM card	188	Stopover (navigation)	201
Sliding/tilting sunroof		Stopping	98
refer to Panoramic glass roof	50	Stopping (engine)	106
Smart Favorites		Storage	87
refer to Presets	212	Storage area behind the rear head restraints	87
Smartphone		Stored stations	
refer to Phone	175	refer to Presets	212
Smartphone interface	227	Straps	87
Legal information	232	Streaming	
Snow chains	271	refer to Online media	217
Socket		Sunshade	
refer to Power sources	86	Roof	50
Software information		also refer to Panoramic glass roof	50
Legal information	232	Sun visors	61
Software version (MMI)		Suspension	113
Version information	232	Audi drive select	113
Sound		RS sport suspension pro (adjustable coilover suspension)	113
refer to Adjusting sound	230	Swap call	182
Space-saving spare tire (compact spare tire)	291	Swerve assist	158
Spare tire	291	Symbols	
Speed limit information		Media	220
refer to Traffic sign recognition	131	Navigation	201
Speed limits		Radio	210, 211
refer to Traffic sign recognition	131	also refer to Indicator lights	10
Speedometer	15	SYNC (button)	93
Speed warning system	131	System settings	230
Sport differential	121		
Sport displays	19		
Sporty driving	110		
Start/Stop system	105		
Turning off or on	105		
Starting to drive	98		
Starting (engine)	106		

T

Tachometer	15, 17
Tail lights	
Cleaning	279
Technical data	308
Technical modifications	305
Technical product information	310

Temperature display		
Coolant	15	
Outside temperature	18	
Temperature displays		
<i>refer to</i> Sport displays	19	
Tethering	188	
<i>also refer to</i> Wi-Fi	191	
Text input	27	
Text messages	184	
Texts		
<i>refer to</i> Text messages	184	
Themes	225	
Tie-downs	90	
Tightening specification		
Wheel bolts	290	
Tightening specification (wheel bolts)	290	
Time	20	
tiptronic		
<i>refer to</i> Manual shifting	101	
Tire Mobility System (tire repair set)	285	
Tires	254	
Changing	288	
Labeling	255	
Load index	255	
Low-profile tires	272	
Manufacture date	255	
Repair set	285	
Service life	263	
Speed rating	255	
Tire pressure	265	
Tire pressure monitoring system	273, 274	
Tire pressure table	266	
Tire pressure (trailer mode)	124	
Treadwear indicators	263	
Unidirectional	257, 290	
Uniform tire quality grading	272	
Tires and wheels		
Glossary of tire and loading terminology	257	
Tires and vehicle load limits	268	
Toll Module		
<i>refer to</i> Integrated Toll Module	138	
Tools	285	
Top tether anchor (securing the child safety seat)	84	
Touch display		
Adjusting brightness	23	
Operating	21	
Towing	293	
Towing eye	294	
Towing protection monitoring	39	
TPMS		
Indicator light	277	
Tire pressure monitoring system	273, 274	
Traffic information	206	
Traffic information online	207	
Traffic information online	207	
Traffic jam assist	151	
Traffic light information	133	
Traffic sign recognition	131	
Traffic signs	134	
Trailer mode		
Trailer hitch	125	
Trailer towing	124	
Tongue weight	124	
Trailer load	124	
Transmission selector	99	
Turn assist	159	
Turn signals	55	
U		
Uniform tire quality grading	272	
Unlocking and locking	36	
By remote control	41	
Using the lock cylinder	39	
With Audi connect vehicle control	42	
With the central locking switch	38	
With the convenience key	41	
Update (software)	231	
USB adapter	217	
USB drive		
Supported types/formats	222	
USB port	86	
USB ports with charging function	217, 218	
USB stick		
<i>refer to</i> USB ports with charging function	217	
Users		
Local users	33	
myAudi users	33	
Using residual heat	94	
V		
Valet parking	51	

Vanity mirror	61	Wheels	254
Vehicle		Cleaning	280
Care/cleaning	278	Glossary of tire and loading terminology . .	257
Dimensions	308	Replacing	288
Identification data	308	Tire pressure monitoring system	273, 274
Out of service	284	Tires and vehicle load limits	268
Parking	98	Wheel wrench	285
Raising	289	Wi-Fi	191
Securing	98	Hotspot settings	191
Starting	97	Using a hotspot	188, 189
Unlocking and locking	41	Wi-Fi network	188
Vehicle care	278	Wi-Fi tethering	188
Vehicle control services	191	Windows	
<i>also refer to</i> Audi connect Remote & Con- trol	191	Child safety lock	48
Vehicle Identification Number	308	Cleaning and removing ice	281
Vehicle Identification Number (VIN) <i>refer to</i> Vehicle Identification Number . . .	308	Convenience opening and closing	49
Vehicle jack	285	Opening and closing	49
Lifting points	289	Power windows	49
Vehicle key	36, 40	Windshield	
Replacing the battery	42	Cleaning	61
Vehicle starting system	106	<i>also refer to</i> Windshield	61
Vehicle tool kit	285	Windshield washer system	61, 252
Ventilation	92	Capacities	308
VIEW button	16	Windshield wipers	61
VIN		Winter operation	
<i>refer to</i> Vehicle Identification Number . . .	308	Car washes	278
Virtual reality experience <i>refer to</i> Holoride interface	225	Cooling system	244
Voicemail	181	Defrosting the windows	93
Voice recognition system	30	Rear window defogger	94
External	31	Removing ice from windows	281
Operating	30	Seat heating	94
W		Snow chains	271
Warning lights		Steering wheel heating	95
<i>refer to</i> Indicator lights	10	Tires	271
Washing matte finish paint	278	Vehicle battery (12 volt)	249
Wave band		Windshield washer system	252
<i>refer to</i> Frequency band	209	Winter tires	271
Weights	309	Wireless Android Auto	
Wheel bolts	270	<i>refer to</i> Smartphone interface	227
Changing a tire	288	Wireless Apple CarPlay	
		<i>refer to</i> Smartphone interface	227
		Work	
		<i>refer to</i> Business address	204