LINK: CONTENT & A-Z



The Ultimate Driving Machine®



OWNER'S MANUAL.
THE BMW X3.





## WELCOME TO BMW.

## Owner's Manual.

## BMW X3.

Thank you for choosing a BMW.

The more familiar you are with your vehicle, the better control you will have on the road. We therefore strongly suggest:

Read this Owner's Manual before starting off in your new BMW. Also use the Integrated Owner's Manual in your vehicle. It contains important information on vehicle operation that will help you make full use of the technical features available in your BMW. The manual also contains information designed to enhance operating reliability and road safety, and to contribute to maintaining the value of your BMW.

Any updates made after the editorial deadline can be found in the appendix of the printed Owner's Manual for the vehicle.

You can find supplementary information in the additional brochures in the onboard literature.

We wish you a safe and enjoyable ride.

## **TABLE OF CONTENTS**

NOTES

Navigation, Entertainment and Communication can be called up via the Integrated Owner's Manual in the vehicle.

	110120	
Inforr	mation	8
*	QUICK REFERENCE	
Ente	ring	18
Set-u	up and use	22
On th	ne road	26
::::	AT A GLANCE	
Cock	pit	36
Idle s	state, standby state, and drive-ready state	41
iDrive	9	44
BMW	V Gesture Control	53
Voice	e activation system	56
Gene	eral settings 6	30
Perso	onal settings 6	34
Conr	nections	36
Own	er's Manual media	76
4	CONTROLS	
Oper	ning and closing 8	30
Seats	s, mirrors, and steering wheel 10	)4
Trans	sporting children safely1	17
Drivir	ng 12	22
Displ	ays 14	42
Light	s	59
Safet	ty 16	36
Drivir	ng stability control systems	95
Drive	r assistance systems20	)(
Drivir	ng comfort20	37
Clima	ate control	38

Interior equipment	253
Storage compartments	260
Cargo area	264
(i) DRIVING TIPS	
Things to remember when driving	
Trailer towing	279
Saving fuel	283
Refueling	202
Fuel	
Wheels and tires	
Engine compartment	
Engine oil	
Coolant	
Maintenance	
Replacing components	342
Breakdown assistance	351
Care	358
Q REFERENCE	
Technical data	364
Appendix	
Everything from A to Z	

© 2019 Bayerische Motoren Werke

Aktiengesellschaft

Munich, Germany

Reprinting, including excerpts, only with the written consent of BMW AG, Munich.

US English ID5 VI/19, 07 19 490

Printed on environmentally friendly paper, bleached without chlorine, suitable for recycling.



# ! NOTES

Information	0
Information	

## **Information**

## **Using this Owner's Manual**

#### Orientation

The fastest way to find information on a particular topic is by using the index.

An initial overview of the vehicle is provided in the first chapter.

# Updates made after the editorial deadline

Due to updates after the editorial deadline, differences may exist between the printed Owner's Manual and the Integrated Owner's Manual in the vehicle.

Notes on updates can be found in the appendix of the printed Owner's Manual for the vehicle.

# Owner's Manual for Navigation, Entertainment, Communication

The Owner's Manual for Navigation, Entertainment, and Communication can be obtained as a printed book from the service center.

The topics are also discussed in the Integrated Owner's Manual in the vehicle.

# Additional sources of information

#### Service center

A service center will be glad to answer questions at any time.

#### Internet

Vehicle information and general information on BMW, for instance. on technology, are available on the Internet: www.bmwusa.com.

# Integrated Owner's Manual in the vehicle

The Integrated Owner's Manual specifically describes features and functions found in the vehicle. The Integrated Owner's Manual can be displayed on the Control Display. Additional information, refer to page 76.

### **BMW Driver's Guide app**

The BMW Driver's Guide app specifically describes features and functions found in the vehicle. The app can be displayed on smartphones and tablets.

#### **BMW Driver's Guide Web**

Driver's Guide Web shows the most suitable information for the selected vehicle. If possible, only equipment and functions that are actually installed in the vehicle will be explained. Driver's Guide Web can be displayed in any current browser.

## Symbols and displays

## Symbols in the Owner's Manual

Symbol	Meaning
Δ	Precautions that must be followed in order to avoid the possibility of injury to yourself and to others as well as serious damage to the vehicle.
₩	Measures that can be taken to help protect the environment.
""	Texts in vehicle used to select individual functions.

Symbol	Meaning
><	Verbal instructions to use with the voice activation system.
»«	Responses generated by the voice activation system.

#### **Action steps**

Action steps to be carried out are presented as a numbered list. The steps must be carried out in the defined order.

- 1. First action step.
- 2. Second action step.

#### **Enumerations**

Enumerations without mandatory order or alternative possibilities are presented as a list with bullet points.

- First possibility.
- Second possibility.

## Symbols on vehicle components

This symbol on a vehicle component indicates that further information on the component is available in the Owner's Manual.

# Vehicle features and options

This Owner's Manual describes all models and all standard, country-specific and optional equipment that is offered in the model series. Therefore, this Owner's Manual also describes and illustrates features and functions that are not available in a vehicle, for example because of the selected optional features or the country-specific version.

This also applies to safety-related functions and systems.

When using these functions and systems, the applicable laws and regulations must be observed.

For any options and equipment not described in this Owner's Manual, refer to the Supplementary Owner's Manuals.

Your BMW service center is happy to answer any questions that you may have about the features and options applicable to your vehicle.

# Status of the Owner's Manual

#### **Basic information**

The manufacturer of your vehicle pursues a policy of constant development that is conceived to ensure that our vehicles continue to embody the highest quality and safety standards. In rare cases, therefore, the features described in this Owner's Manual may differ from those in your vehicle.

# Updates made after the editorial deadline

Due to updates after the editorial deadline, differences may exist between the printed Owner's Manual and the Integrated Owner's Manual in the vehicle.

Notes on updates can be found in the appendix of the printed Owner's Manual for the vehicle.

## For Your Own Safety

#### Intended use

Heed the following when using the vehicle:

- Owner's Manual.
- Information on the vehicle. Do not remove stickers.
- ▶ Technical vehicle data.

- ▶ The traffic, speed, and safety laws where the vehicle is driven.
- ▶ Vehicle documents and statutory documents.

### **Warranty**

Your vehicle is technically configured for the operating conditions and registration requirements applying in the country of first delivery, also known as homologation. If your vehicle is to be operated in a different country it might be necessary to adapt your vehicle to potentially differing operating conditions and registration requirements. If your vehicle does not comply with the homologation requirements in a certain country you may not be able to lodge warranty claims for vour vehicle there. Further information on warranty is available from a service center.

### **Maintenance and repairs**

Advanced technology, for instance the use of modern materials and high-performance electronics, requires suitable maintenance and repair work.

The manufacturer of the vehicle recommends that you entrust corresponding procedures to a BMW center. If you choose to use another service facility. BMW recommends use of a facility that performs work, e.g., maintenance and repair, according to BMW specifications with properly trained personnel, referred to in the Owner's Manual as "another qualified service center or repair shop".

If work is performed improperly, for instance maintenance and repair, there is a risk of subsequent damage and related safety risks.

Improperly performed work on the vehicle paint can lead to a failure or malfunction of components, e.g., the radar sensors, and thereby result in a safety risk.

### Parts and accessories

BMW recommends the use of parts and accessory products approved by BMW.

Approved parts and accessories, and advice on their use and installation are available from a BMW center.

BMW parts and accessories have been tested by BMW for their safety and suitability in BMW vehi-

BMW warrants genuine BMW parts and accessories.

BMW does not evaluate whether each individual product from another manufacturer can be used with BMW vehicles without presenting a safety hazard, even if a country-specific official approval was issued. BMW does not evaluate whether these products are suitable for BMW vehicles under all usage conditions.

## **California Proposition 65 Warning**

For vehicles sold in California, the law requires vehicle manufacturers to provide the following warning:

#### ⚠ Warning

Engine exhaust and a wide variety of Automobile components and parts, including components found in the interior furnishings in a vehicle, contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Battery posts, terminals and related accessories contain lead and lead compounds. Batteries also contain other chemicals known to the State of California to cause cancer. Wash your hands after handling. Used engine oil contains chemicals that have caused cancer in laboratory animals. Always protect your skin by washing thoroughly with soap and water. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

**NOTES** 

#### Marning

Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

#### Marning

Breathing Diesel Engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov/diesel.

### Service and warranty

We recommend that you read this publication thoroughly. Your vehicle is covered by the following warranties:

- New Vehicle Limited Warranty.
- Rust Perforation Limited Warranty.
- ▶ Federal Emissions System Defect Warranty.
- ▶ Federal Emissions Performance Warranty.
- California Emission Control System Limited Warranty.

Detailed information about these warranties is listed in the Service and Warranty Information Booklet for US models or in the Warranty and Service Guide Booklet for Canadian models.

Your vehicle has been specifically adapted and designed to meet the particular operating conditions and homologation requirements in your country and continental region in order to deliver the full driving pleasure while the vehicle is operated under those conditions. If you wish to operate your vehicle in another country or region, you may be required to adapt your vehicle to meet different prevailing operating conditions and homologation requirements. You should also be aware of any applicable warranty limitations or exclusions for such country or region. In such case, please contact Customer Relations for further information.

#### Maintenance

Maintain the vehicle regularly to sustain the road safety, operational reliability and the New Vehicle Limited Warranty.

Specifications for required maintenance measures:

- BMW Maintenance system.
- Service and Warranty Information Booklet for US models.
- Warranty and Service Guide Booklet for Canadian models.

If the vehicle is not maintained according to these specifications, this could result in damaging the vehicle. Such damage is not covered by the BMW New Vehicle Limited Warranty.

## Data memory

#### General information

Electronic control devices are installed in the vehicle. Electronic control units process data they receive from vehicle sensors, self-generate or exchange with each other. Some control units are necessary for the vehicle to function safely or provide assistance during driving, for instance driver assistance systems. Furthermore, control units facilitate comfort or infotainment functions.

Information about stored or exchanged data can be requested from the manufacturer of the vehicle, in a separate booklet, for example.

#### I

#### Personal reference

Each vehicle is marked with a unique vehicle identification number. Depending on the country, the vehicle owner can be identified with the vehicle identification number, license plate and corresponding authorities. In addition, there are other options to track data collected in the vehicle to the driver or vehicle owner, for instance, via the ConnectedDrive account that is used.

## Operating data in the vehicle

Control units process data to operate the vehicle. For example, this includes:

- Status messages for the vehicle and its individual components, e.g., wheel rotational speed, wheel speed, deceleration, transverse acceleration, engaged safety belt indicator.
- ➤ Ambient conditions, e.g., temperature, rain sensor signals.

The processed data is only processed in the vehicle itself and generally volatile. The data is not stored beyond the operating period.

Electronic components, e.g. control units and ignition keys, contain components for storing technical information. Information about the vehicle condition, component usage, maintenance requirements events or faults can be stored temporarily or permanently.

This information generally records the state of a component, a module, a system, or the environment, for instance:

- Operating states of system components, for instance, fill levels, tire inflation pressure, battery status.
- ▶ Malfunctions and faults in important system components, for instance lights and brakes.
- Responses by the vehicle to special situations such as airbag deployment or engagement of the driving stability control systems.
- ▶ Information on vehicle-damaging events.

The data is required to perform the control unit functions. Furthermore, it also serves to recog-

nize and correct malfunctions, and helps the vehicle manufacturer to optimize vehicle functions.

The majority of this data is volatile and is only processed within the vehicle itself. Only a small share of data is stored in event or fault memories based on an event.

When servicing, for instance during repairs, service processes, warranty cases, and quality assurance measures, this technical information can be read out from the vehicle together with the vehicle identification number.

A dealer's service center or another qualified service center or repair shop can read out the information. The socket for OBD Onboard Diagnosis required by law in the vehicle is used to read out the data.

The data is collected, processed, and used by the relevant organizations in the service network. The data documents technical conditions of the vehicle, helps with the identification of the fault, compliance with warranty obligations and quality improvement.

Furthermore, the manufacturer has product monitoring duties to meet in line with product liability law. To fulfill these duties, the vehicle manufacturer needs technical data from the vehicle. The data from the vehicle can also be used to check customer claims for warranty and guaranty.

Fault and event memories in the vehicle can be reset when a dealer's service center or another qualified service center or repair shop performs repair or servicing work.

# Data entry and data transfer into the vehicle

#### **General information**

Depending on the vehicle equipment, comfort and individual settings can be stored in the vehicle and modified or reset at any time.

For example, this includes:

**NOTES** 

- Settings for the seat and steering wheel positions.
- Suspension and climate control settings.

If necessary, data can be transferred to the entertainment and communication system of the vehicle, for instance via smartphone.

This includes the following depending on the respective equipment:

- Multimedia data such as music, films or photos for playback in an integrated multimedia system.
- Address book data for use in conjunction with an integrated hands-free system or an integrated navigation system.
- Entered navigation destinations.
- Data on the use of Internet services.

This data can be stored locally in the vehicle or is found on a device that has been connected to the vehicle, e.g., a smartphone, USB stick or MP3 player. If this data is stored in the vehicle, it can be deleted at any time.

This data is only transmitted to third parties upon personal request as part of the use of online services. The transmission depends on the selected settings for the use of the services.

### Incorporation of mobile devices

Depending on the vehicle equipment, mobile devices connected to the vehicle, for instance smartphones, can be controlled via the vehicle control elements.

The sound and picture from the mobile device can be played back and displayed through the multimedia system. Certain information is transferred to the mobile device at the same time. Depending on the type of incorporation, this includes, for instance position data and other general vehicle information. This optimizes the way in which selected apps, for instance navigation or music playback, work.

There is no further interaction between the mobile device and the vehicle, such as active access to vehicle data. How the data will be processed further is determined by the provider of the particular app being used. The extent of the possible settings depends on the respective app and the operating system of the mobile device.

#### **Services**

#### **General information**

If the vehicle has a wireless network connection, this enables data to be exchanged between the vehicle and other systems. The wireless network connection is realized via an in-vehicle transmitter and receiver unit or via personal mobile devices brought into the vehicle, for instance smartphones. This wireless network connection enables 'online functions' to be used. These include online services and apps supplied by the vehicle manufacturer or by other providers.

## Services from the vehicle manufacturer

Where online services from the vehicle manufacturer are concerned, the corresponding functions are described in the appropriate place, for instance the Owner's Manual or manufacturer's website. The relevant legal information pertaining to data protection is provided there too. Personal data may be used to perform online services. Data is exchanged over a secure connection, for instance with the IT systems of the vehicle manufacturer intended for this purpose.

Any collection, processing, and use of personal data above and beyond that needed to provide the services must always be based on a legal permission, contractual arrangement or consent. It is also possible to activate or deactivate the data connection as a whole. That is, with the exception of functions and services required by law such as Assist systems.

#### Services from other providers

When using online services from other providers, these services are the responsibility of the relevant provider and subject to their data privacy Д

conditions and terms of use. The vehicle manufacturer has no influence on the content exchanged during this process. Information on the way in which personal data is collected and used in relation to services from third parties, the scope of such data, and its purpose, can be obtained from the relevant service provider.

## **Event Data Recorder EDR**

This vehicle is equipped with an event data recorder EDR. The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating.
- ▶ Whether or not the driver and passenger safety belts were fastened.
- ▶ How far, if at all, the driver was depressing the accelerator and/or brake pedal.
- ▶ How fast the vehicle was traveling.

This data can help provide a better understanding of the circumstances in which crashes and injuries occur.

EDR data is recorded by your vehicle only if a nontrivial crash situation occurs; no data is recorded by the EDR under normal driving conditions and no personal data, for instance name, gender, age, and crash location, are recorded.

However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manu-

facturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

# Vehicle identification number

## **Engine compartment**



The vehicle identification number can be found in the engine compartment, on the right-hand side of the vehicle.

#### Windshield



The vehicle identification number can also be found behind the windshield.

#### **iDrive**

It is also possible to display the vehicle identification number via iDrive, refer to page 69.

## **Reporting safety defects**

#### For US customers

The following only applies to vehicles owned and operated in the US.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration NHTSA, in addition to notifying BMW of North America, LLC, P.O. Box 1227, Westwood, New Jersey 07675-1227, Telephone 1-800-831-1117.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign.


However, NHTSA cannot become involved in individual problems between you, your dealer, or BMW of North America, LLC.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to http://www.safercar.gov; or write to: Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590. You can also obtain other information about motor vehicle safety from http://www.safercar.gov.

#### For Canadian customers

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls, may call the toll-free hotline 1-800-333-0510. You can also obtain other information about motor vehicle safety from http://www.tc.gc.ca/roadsafety.



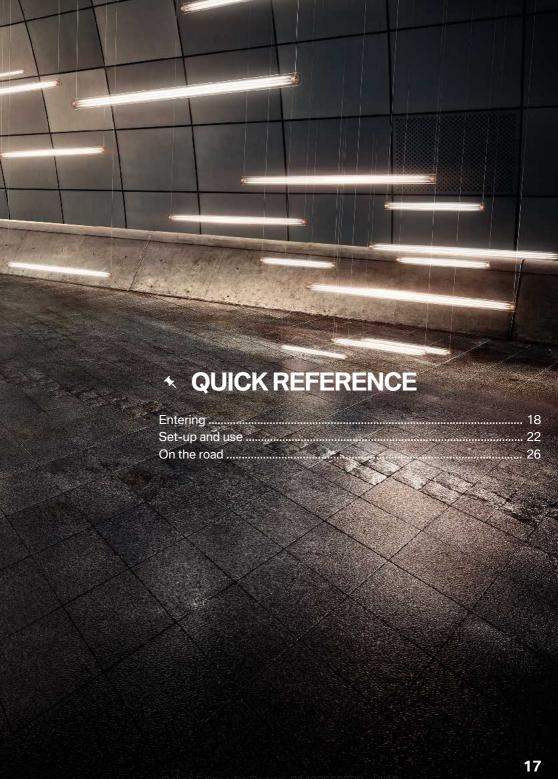

#### \*

## **Entering**

## **Opening and closing**

## **Buttons on the vehicle key**



- 1 Unlocking
- 2 Locking
- 3 To open the tailgate
- **4** Press and hold or press three times in quick succession: panic mode

Press briefly: headlight courtesy delay feature

## Unlocking the vehicle



Press the button on the vehicle key.

Depending on the settings, either only the driver's door or all vehicle access points are unlocked

If only the driver's door is unlocked, press the button on the vehicle key again to unlock the other vehicle access points.



Press and hold the button on the vehicle key after unlocking.

The windows and the glass sunroof are opened, as long as the button on the vehicle key is pressed.

## Locking the vehicle



Press the button on the vehicle key.

All vehicle access points are locked.

# **Buttons for the central locking system**

#### Overview



Buttons for the central locking system.

#### Locking



Pressing the button locks the vehicle if the front doors are closed.

The fuel filler flap remains unlocked.

### Unlocking



Pressing the button unlocks the vehicle.

#### Panic mode

You can trigger the alarm system if you find yourself in a dangerous situation.



- ▶ Press the button on the vehicle key and hold for at least 3 seconds.
- ▶ Briefly press the button on the vehicle key three times in succession.

To switch off the alarm: press any button.

#### **Comfort Access**

#### Concept

The vehicle can be accessed without operating the vehicle kev.

Carrying the vehicle key with you, e.g., in your pants pocket, is sufficient.

The vehicle automatically detects the vehicle key when it is in close proximity or in the car's interior.

#### Unlocking the vehicle



Grasp the handle of a vehicle door completely.

#### Locking the vehicle



Touch the grooved surface on the handle of a closed vehicle door with your finger for approx. 1 second without grasping the door handle.

#### Opening and closing the tailgate with no-touch activation

#### Concept

The tailgate can be opened and closed with notouch activation using the vehicle key you are carrying.

#### Performing the foot movement

- 1. Stand in the middle behind the vehicle at approx. one arm's length away from the rear of the vehicle.
- 2. Wave a foot under the vehicle in the direction. of travel and immediately pull it back. With this movement, the leg must pass through the ranges of both sensors.



## **Tailgate**

## **Opening**



▶ Unlock the vehicle and then press the button on the outside of the tailgate.



Press the button on the vehicle key for approx. 1 second.

\*

Depending on the setting, the doors may be unlocked.

#### Closing



Press the button on the inside of the tailgate.

# Displays and control elements

# In the vicinity of the steering wheel



- 1 Light switch element
- 2 Turn signal indicator, high beams
- 3 Instrument cluster
- 4 Wipers
- 5 Start/Stop button


### **Indicator/warning lights**

#### Instrument cluster

The indicator/warning lights can light up in a variety of combinations and colors.


Several of the lights are checked for proper functioning and light up temporarily when the engine is started or standby state is switched on.

#### **Driver's door**

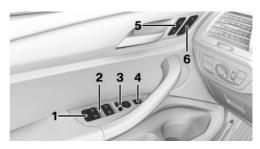

- 1 Safety switch
- 2 Power windows
- 3 Exterior mirrors
- 4 Opening/closing the tailgate
- 5 Central locking system
- 6 Memory function

#### Switch console

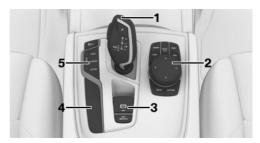

- Selector lever
- 2 Controller
- 3 Parking brake, Automatic Hold
- 4 Parking assistance systems
- 5 Driving Dynamics Control

#### **iDrive**

#### Concept

The iDrive combines the functions of many switches. These functions can be operated via the Controller.

#### Controller

#### General information

The buttons can be used to open the menus directly. The Controller can be used to select menu items and enter the settings.

#### **Buttons on the Controller**

Button	Function
MENU	Press once: calls up the main menu.
	Press twice: displays all menu items of the main menu.
СОМ	Opens the Communication menu.
MEDIA	Opens the Media/Radio menu.
BACK	Press once: opens the previous display.
	Press and hold: open the menus used last.
OPTION	Opens the Options menu.

## **Voice activation**

## Using the voice activation system

#### Activating the voice activation system

- 1. Press the button on the steering wheel.
- 2. Wait for the signal.
- 3. Say the command.



The symbol on the Control Display indicates that the voice activation system is active.

If no other commands are possible, operate the function via iDrive.

#### Terminating the voice activation system



Press the button on the steering wheel or Cancelo

#### Help on the voice activation system

- ➤ To have the available spoken instructions read out loud: ›Voice commands.
- ➤ To have information on the operating principle of the voice activation system read out loud: ›General information on voice control.
- ➤ To have help for the current menu read out loud: >Help<.

# Information for Emergency Requests

Do not use the voice activation system to initiate an Emergency Request. In stressful situations, the voice and vocal pitch can change. This can unnecessarily delay the establishment of a phone connection.


Instead, use the SOS button close to the interior mirror.

#### 4

## Set-up and use

# Seats, mirrors, and steering wheel

#### **Electrically adjustable seats**

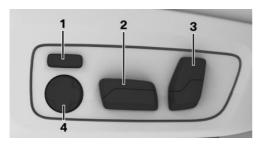

- Backrest width
- 2 Forward/backward, height, seat tilt
- 3 Backrest tilt
- 4 Lumbar support

## Adjusting the head restraint

## Height



- To lower: press the button, arrow 1, and push the head restraint down.
- ▶ To raise: push the head restraint up.

After setting the height, make sure that the head restraint engages correctly.

## Adjusting the distance: manual head restraints



- Back: press the button and push the head restraint toward the rear.
- ► Forward: pull the head restraint toward the front.


## **Adjusting the exterior mirrors**



- Adjusting
- 2 Selecting a mirror, Automatic Curb Monitor
- 3 Folding in and out

## Adjusting the steering wheel

#### Manual steering wheel adjustment

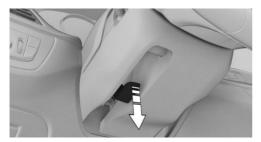

- 1. Fold the lever down.
- 2. Move the steering wheel to the preferred height and angle to suit your seating position.
- 3. Fold the lever back up.

## **Memory function**

#### Concept

The following settings can be stored and, if necessary, retrieved using the memory function:

- Seat position.
- Exterior mirror position.
- ▶ Height of the Head-up Display.

## **Storing**


- 1. Set the desired position.
- 2. SET Press button on the door. The writing on the button lights up.
- 3. Press the desired button 1 or 2 at the door while the writing is lit. A signal sounds.

### Calling up settings

Press the desired button 1 or 2.

## Infotainment

#### Radio

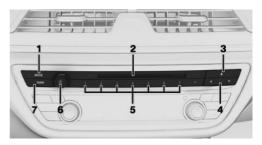

- 1 Changing the entertainment source
- 2 CD/DVD drive
- 3 Eject CD/DVD
- 4 Changing the station/track
- **5** Programmable memory buttons
- 6 Sound output on/off, volume
- 7 Waveband/satellite radio Changing the waveband

## **Navigation destination entry**

#### **Entering a destination via address**

#### State/province

- 1. "Navigation"
- 2. 🚯 "Enter address"
- 3. "State/Province?"
- 4. Select the country from the list.

#### **Entering the address**

The address can be entered in any order.

Example: entering the address via the town/city

- 1. "City/Postal code?"
- Enter the town/city.
   The list is narrowed down further with each entry.
- 3. **OK** Select the symbol.

- \*
- 4. Select a town/city from the list.
- 5. If necessary, enter the street.
- 6. Select the street as you would the town/city.
- 7. If necessary, enter a house number.
- 8. **OK** Select the symbol.
- Select a house number or range of house numbers from the list.

#### Starting destination guidance

"Start guidance"

If only the town/city was entered: destination guidance is started to the town/city center.

## Connecting a mobile phone

#### **General information**

After the mobile phone is connected once to the vehicle, the mobile phone can be operated using iDrive and the steering wheel buttons.

#### Connecting the mobile phone via passkey entry

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Connect new device"
- 5. Select the functions for which the mobile phone is to be used.
  - The vehicle's Bluetooth name is displayed on the Control Display.
- To perform additional steps on the mobile phone, refer to the mobile phone owner's manual: e.g., search for or connect the Bluetooth device or a new device.
  - The Bluetooth name of the vehicle appears on the mobile phone display. Select the Bluetooth name of the vehicle.
- Depending on the mobile device, a control number is displayed or the control number must be entered.

- Compare the control number displayed on the Control Display with the control number on the display of the device.
  - Confirm the control number on the device and on the Control Display.
- ▶ Enter and confirm the same control number on the device and via iDrive.

The device is connected and displayed in the device list.

## **Using the phone**

#### Accepting a call

Incoming calls can be answered in several ways.

- Via iDrive:
  - <sup>↑</sup> "Accept"
  - Press the corresponding button on the steering wheel.



- Via the selection list in the instrument cluster: Use the thumbwheel on the steering wheel to select: "Accept"
- Via gestures: point the index finger into the direction of the Control Display.

### Dialing a number

- 1. "Communication"
- 2. "Dial number"
- 3. Enter the numbers.
- Select the symbol. The connection is established via the mobile phone to which this function has been assigned.

Establish the connection via the additional phone:

- 1. Press the button.
- 2. "Call via"

## **Apple CarPlay preparation**

#### Concept

CarPlay allows certain functions of a compatible Apple iPhone to be used via Siri voice operation and iDrive.

#### **Functional requirements**

- ➤ Compatible iPhone. iPhone 5 or later with iOS 7.1 or later.
- ▶ Corresponding mobile contract.
- Bluetooth, WiFi, and Siri voice operation are switched on on the iPhone.

### **Switching on Bluetooth and CarPlay**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. Select the following settings:
  - ▶ "Bluetooth®"
  - "Apple CarPlay"

#### Pairing the iPhone with CarPlay

Pair iPhone via Bluetooth with the vehicle.

Select CarPlay as the function:

● "Apple CarPlay"

The iPhone is connected to the vehicle and displayed in the device list.

#### \*

## On the road

## **Driving**

## **Drive-ready state**

#### Switching on drive-ready state



- Depress the brake pedal.
- Press the Start/Stop button.

#### Switching off drive-ready state

Steptronic transmission:

- Engage selector lever position P with the vehicle stopped.
- Press the Start/Stop button. The engine is switched off.
- 3. Set the parking brake.

### **Auto Start/Stop function**

The Auto Start/Stop function switches the engine off automatically while stationary to save fuel. The engine starts automatically under the following preconditions:

Steptronic transmission:

- By releasing the brake pedal.
- ▶ When Automatic Hold is activated: press the accelerator pedal.

## Parking brake

### **Setting**



Pull the switch.

The LED and indicator light light up.

#### Releasing

With drive-ready state switched on:

Steptronic transmission: press the switch while the brake is pressed or selector lever position P is set.

The LED and indicator light go out.

The parking brake is released.

#### **Parking**

The parking brake is automatically set if the vehicle is being held by Automatic Hold and the drive-ready state is switched off or the vehicle is exited.

## **Steptronic transmission**

# Engaging selector lever position D, N, R



- Drive mode D.
- Neutral N.
- R is reverse.

With the driver's safety belt fastened, briefly push the selector lever in the desired direction, past a resistance point, if needed. The selector lever returns to the center position in each case.

To prevent the vehicle from creeping after you select a drive mode or reverse, maintain pressure on the brake pedal until you are ready to start.

A selector lever lock prevents the inadvertent shifting to selector lever position R or the inadvertent shifting from selector lever position P.

Engage selector lever position R only when the vehicle is stationary.

#### Releasing the selector lever lock



Press the button.

### **Engaging P**

Engage selector lever position P only when the vehicle is stationary.



Press button P.

# Steptronic transmission, Sport program and manual mode



Activate the Sport program/manual mode:

Press the selector lever to the left from selector lever position D.

Manual mode:

- To shift down: press the selector lever forward.
- ▶ To shift up: pull the selector lever rearwards.

End the sport program/manual mode: Push the selector lever to the right.

# High beams, headlight flasher, turn signal

### High beams, headlight flasher




Push the lever forward or pull it backward.

- High beams on, arrow 1.
   The high beams light up when the low beams are switched on.
- ▶ High beams off/headlight flasher, arrow 2.

#### \*

#### **Turn signal**

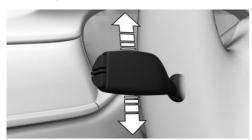

- On: press the lever past the resistance point.
- ▶ Off: press the lever past the resistance point in the opposite direction.
- ➤ Triple turn signal activation: lightly tap the lever up or down.
- ▶ Brief signaling: press the lever to the resistance point and hold it there for as long as you want the turn signal to flash.

## **Lights and lighting**

## **Light functions**

Symbol	runction
Dŧ	Front fog lights.
0	Lights off.  Daytime running lights.
∋D Q€	Parking lights.
<b>E</b> CA	Automatic headlight control.  Adaptive light functions.
<b></b> ■D	Low beams.
: از ت	Instrument lighting.

## Symbol Function



Right roadside parking light.



Left roadside parking light.

## Wiper system

## Switching the wipers on/off and brief wipe

#### Switching on



Press the lever up until the desired position is reached.

- ▶ Resting position of the wipers: position 0.
- ▶ Rain sensor: position 1.
- Normal wiper speed: position 2.
- ▶ Fast wiper speed: position 3.

#### Brief wipe and switching off



Press the lever down.

- ➤ Switching off: press the lever down until it reaches its standard position.
- ▶ Brief wipe: press the lever down from the standard position.

#### Rain sensor

#### Activating/deactivating



To activate: press the lever up once from its standard position, arrow 1.

To deactivate: press the lever back into the standard position.

#### Adjusting the sensitivity



Turn the thumbwheel on the wiper lever.

#### Cleaning the windshield



Pull the wiper lever towards you.

#### **Rear window wiper**

#### Switching on



Turn the outer switch upward.

- ▶ Resting position of the wiper, position 0.
- ▶ Intermittent mode, arrow 1. When reverse gear is engaged, the system switches to continuous operation.

#### Clean the rear window

Turn the outer switch in the desired direction.

- ▶ In resting position: turn the switch downward, arrow 3. The switch automatically returns to its idle position when released.
- ▶ In intermittent mode: turn the switch further, arrow 2. The switch automatically returns to its interval position when released.



## **Climate control**

## **Automatic climate control**

# **Button Function** Temperature. Climate control operation. AUTO program. AUTO Recirculated-air mode. Air flow, manual. Air distribution, manual. Defrost and defog window. мах Rear window defroster. ttt Seat heating.

# Automatic climate control with enhanced features

Button	Function
AUTO	Temperature.
AIC	Climate control operation.
MAX A/C	Maximum cooling.
AUTO	AUTO program.
<b>(</b>	Recirculated-air mode.
%}+ <b>%</b>	Air flow, manual.
<i>≅,</i> i	Air distribution, manual.
SYNC	SYNC program.
MAX (III)	Defrost and defog window.
(ttt)	Rear window defroster.
	Active seat ventilation.
#	Seat heating.
MENU	Opening the Climate menu.

## Refueling

#### Refueling

#### Fuel cap

1. To open the fuel filler flap, press on the rear edge, arrow. The fuel filler flap opens.



- 2. Turn the fuel cap counterclockwise.
- 3. Place the fuel cap in the bracket attached to the fuel filler flap.

#### Gasoline

For the best fuel efficiency, the gasoline should be sulfur-free or very low in sulfur content.

Fuels that are marked on the gas pump as containing metal must not be used.

Information on the recommended fuel grade can be found in the Owner's Manual.

#### **Diesel**

The engine of your BMW is designed for diesel with low sulfur content:

Ultra-Low Sulfur Diesel ASTM D 975-xx.

xx: comply with the current standard in each case.

#### Wheels and tires

### Tire inflation pressure specifications

The tire inflation pressure specifications can be found in the tire inflation pressure table in the printed Owner's Manual.

# After correcting the tire inflation pressure

With runflat tires:

Reinitialize the Flat Tire Monitor.

With Tire Pressure Monitor TPM:

The corrected tire inflation pressures are applied automatically. Make sure that the correct tire settings have been made.

With tires that cannot be found in the tire pressure values on the Control Display, reset the Tire Pressure Monitor TPM.

#### Checking the tire inflation pressure

Regularly check the tire inflation pressure and correct it as needed:

- At least twice a month.
- ▶ Before embarking on an extended trip.

#### Cleaning the wheels

The friction during hard braking may produce brake dust and make the rims dirty. Brake dust can be removed by cleaning the rims. BMW recommends using vehicle care and cleaning products from BMW.

#### **Electronic oil measurement**

#### Requirements

Depending on the previous displays, the status display appears when the engine is running or after the vehicle has been driven for at least 30 minutes.

## Displaying the engine oil level

Via iDrive:

- 1. "My Vehicle"
- "Vehicle status"
- 3. Engine oil level"

Different messages appear on the Control Display depending on the engine oil level. Pay attention to these messages.



## Adding engine oil

#### **General information**

Safely park the vehicle and switch off drive-ready state before adding engine oil.

#### **Adding**



Only add engine oil when the message is displayed in the instrument cluster.

Observe the quantity to be added in the message.

Take care not to add too much engine oil.

Observe recommended engine oil types.

## **Providing assistance**

## **Hazard warning flashers**



The button is located in the center console.

#### **Breakdown assistance**

#### **BMW Roadside Assistance**

Via iDrive:

- 1. "ConnectedDrive"
- 2. "BMW Assist"
- "BMW Roadside Assistance"
   A voice connection is established to BMW Roadside Assistance.

#### **ConnectedDrive**

#### Concierge service

The BMW Assist Concierge service offers information on events, gas stations or hotels, and provides phone numbers and addresses. Many hotels can be booked directly by the BMW Concierge service. The Concierge service is part of the optional BMW Assist Response Center.

Via iDrive:

- 1. "ConnectedDrive"
- 2. "Concierge"

A voice connection to the Concierge service is established.


#### **Teleservices**

Teleservices are services that help to maintain vehicle mobility.

Depending on the equipment version, Teleservices comprise the following services:

- BMW Roadside Assistance.
- BMW Accident Assistance.
- Service Request.
- ▶ Teleservice Report.
- ▶ Teleservice Battery Guard.
- Your dealer's service center.



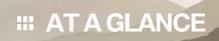

Gockpit	30
Idle state, standby state, and drive-ready state	41
iDrive	44
BMW Gesture Control	53
Voice activation system	56
General settings	60
Personal settings	64
Connections	
Owner's Manual media	76


## **Cockpit**

## Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily

available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## In the vicinity of the steering wheel

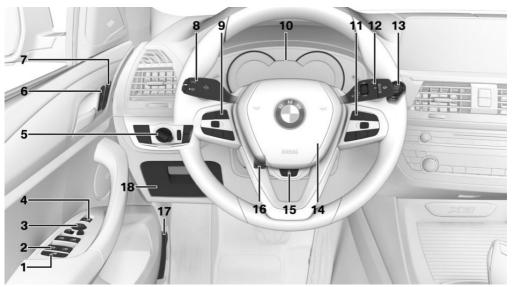

Safety switch 100

Power windows 99



Exterior mirror operation 111



Opening/closing the tailgate 94

5 Lights



Front fog lights 163



Light switch 159



Lights off



Daytime running lights 161



Parking lights 159



Automatic headlight control 160 Adaptive light functions 161 High-beam Assistant 162



Low beams 159



Instrument lighting 163



Right roadside parking light 160



Left roadside parking light 160

6 Central locking system



Unlocking 90



Locking 90

7 Seating comfort features



Memory function 113

8 Steering column stalk, left



Turn signal 129



High beams, headlight flasher 129



High-beam Assistant 162



Onboard Computer 152

9 Steering wheel buttons, left



Cruise control on/off 200



Active Cruise Control on/off 203



Steering and traffic jam assistant on/off 210



Cruise control: to store the speed



Pause or continue cruise control



Active Cruise Control: increase distance



Active Cruise Control: reduce distance



With steering and traffic jam assistant: adjust distance

Cruise control rocker switch

10 Instrument cluster 142





Changing the station/track, see Owner's Manual for Navigation, Entertainment, Communication 8



Entertainment source, see Owner's Manual for Navigation, Entertainment and Communication 8



Volume, see Owner's Manual for Navigation, Entertainment and Communication 8



Voice activation system 56



Telephone, see Owner's Manual for Navigation, Entertainment and Communication 8

Thumbwheel for selection lists 151

12 Steering column stalk, right



Wipers 130



Rain sensor 131



Cleaning the windshield 131



Rear window wiper in Canadian models 132



Rear window wiper 132



Clean the rear window 132



Switching drive-ready state on/ off 122



Auto Start/Stop function 123



Horn, entire surface



Heated steering wheel 113


**16** Adjusting the steering wheel 113



Unlocking the hood 332

18 Glove compartment 261

# In the vicinity of the center console

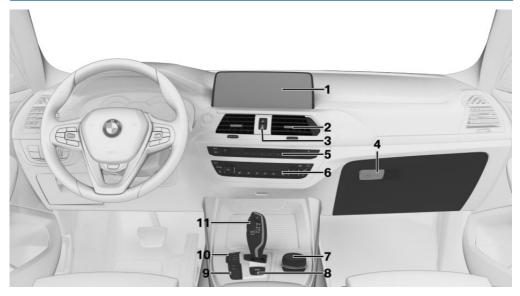

- 1 Control Display 46
- 2 Ventilation 245







Hazard warning system 351



Intelligent Safety 170

- 4 Glove compartment 260
- 5 Radio/multimedia, see Owner's Manual for Navigation, Entertainment, and Communication 8
- 6 Automatic climate control 238
- 7 Controller with buttons 46



Parking brake 126



Automatic Hold 127





PDC Park Distance Control 214

Without Surround View: rearview camera 219

Surround View 222

Cross traffic warning 234

Parking assistant 229



Surround View: Panorama

View 222



HDC Hill Descent Control 198

10 SPORT Driving Dynamics Control 139

SPORT driving mode

COMFORT

COMFORT driving mode

ECO PRO

ECO PRO driving mode



ADAPTIVE driving mode



DSC Dynamic Stability Control 195

11 Steptronic transmission selector lever 134

# In the vicinity of the roofliner



SOS



Emergency Request, SOS 353

4

Reading lights 164

2

Glass sunroof 101



Interior lights 163

3

Indicator light, front-seat passenger airbag 169



# Idle state, standby state, and drive-ready state

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **General information**

Depending on the situation, the vehicle is in one of the three states:

- Idle state.
- Standby state.
- Drive-ready state.

#### Idle state

### Concept

If the vehicle is in idle state, it is switched off. All power consumers are deactivated.

#### **General information**

The vehicle is in idle state prior to opening from the outside and after exiting and locking.

## **Safety information**

#### Warning

An unsecured vehicle can begin to move and possibly roll away. There is a risk of accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, follow the following:

- Set the parking brake.
- ▷ On uphill grades or on a downhill slope, turn the front wheels in the direction of the
- ▷ On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.

#### Marning

Unattended children or animals in the vehicle can cause the vehicle to move and endanger themselves and traffic, for instance due to the following actions:

- Pressing the Start/Stop button.
- > Releasing the parking brake.
- > Opening and closing the doors or windows.
- ▶ Engaging selector lever position N.
- ▶ Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the vehicle kev with you when exiting and lock the vehicle.

#### **AT A GLANCE**

#### **Automatic idle state**

The idle state is automatically established under the following conditions:

- After several minutes, if no operation takes place on the vehicle.
- If the charge state of the vehicle battery is low.
- Depending on the setting via iDrive, if one of the front doors is opened when exiting the vehicle.

The idle state is not automatically established while a phone call is active.

# Establishing idle state when opening the front doors

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- 4. "Turn off after door opening"

#### Manual idle state

To establish idle state in the vehicle after end of trip:





Press and hold the button until the OFF indicator on the instrument cluster goes out.

## Standby state

#### Concept

When standby state is switched on, most functions can be used while the vehicle is stationary. Desired settings can be adjusted.

#### General information

The vehicle is in the standby state after the front doors are opened from the outside.

### Display in the instrument cluster



OFF is displayed in the instrument cluster. The drivetrain is switched off and standby state switched on.

## **Drive-ready state**

### Concept

Switching on drive-ready state corresponds to starting the engine.

#### **General information**

Some functions, such as DSC Dynamic Stability Control, can only be used with drive-ready state switched on.

Follow further information on the drive-ready state, refer to page 122.

### Switching on drive-ready state



Drive-ready state is switched on via the Start/Stop button:

- 1. Depress the brake pedal.
- 2. Press the Start/Stop button.



When drive-ready state is switched on, the tachometer shows the current engine speed.

## **Switching off drive-ready state**

Press the Start/Stop button to switch off driveready state. The vehicle switches into standby state.

# **iDrive**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **Concept**

The iDrive combines the functions of many switches. These functions can be operated via the Controller.

## Safety information

## **⚠** Warning

Operating the integrated information systems and communication devices while driving can distract from traffic. It is possible to lose control of the vehicle. There is a risk of accident. Only use the systems or devices when the traffic situation allows. As warranted, stop and use the systems and devices while the vehicle is stationary.

# **Input and display**

#### Letters and numbers

Symbol	Function	
abc or ABC	Change between capital and lower-case letters.	
ш	Insert blank space.	
<b>.</b>	Use voice activation.	
OK	Confirm entry.	

#### **Entry comparison**

When entering names and addresses, the choice is narrowed down with every letter entered and letters may be added automatically.

Entries are continuously compared with data stored in the vehicle.

- Only those letters are offered during entry for which data is available.
- Destination search: place names can be entered in all languages that are available in iDrive.

# Activating/deactivating the functions

Several menu items are preceded by a checkbox. The checkbox indicates whether the function is activated or deactivated. Selecting the menu item activates or deactivates the function.

**▼** Function is activated.

☐ Function is deactivated.



#### **Status information**

#### **General information**

The status field can be found in the upper area of the Control Display. Status information is displayed in the form of symbols.

#### Status field symbols

#### Radio

Symbol	Meaning	
Ю	HD Radio station is being received.	
sxm	Satellite radio is switched on.	

#### **Telephone**

Symbol	Meaning
8	Incoming or outgoing call.
A	Missed call.
att	Signal strength of cellular network.
	Network search.
attl	Cellular network is not available.
ll	The critical charge state of the mobile phone has been reached.
<b>å</b> ııl	Roaming is active.
$\Box$	SMS text message received.
$\boxtimes$	Message received.
Ţ	Reminder.
B	Sending not possible.
9]	Contacts are being loaded.

#### **Entertainment**

Symbol	Meaning
0	CD/DVD player.
€r.	Bluetooth audio.
ψ	USB audio interface.
Ēu	WiFi.

#### Other symbols

Symbol	Meaning	
$\triangle$	Check Control message.	
IJ.	The sound output has been switched off.	
	Request for the current vehicle position.	
0	Checking the current vehicle posi-	

## Split screen, split screen display

#### General information

Additional information, for instance information from the Onboard Computer can be displayed in several menus on the right side of the split screen display, referred to as the split screen.

The additional information remains visible even when switching to another menu on the split screen.

#### Switching on/off



2. "Split screen"

#### Selecting the display

The display can be selected in menus which support the split screen function.

- 1. Move the Controller to the right until the split screen is selected.
- Press the Controller.
- 3. Select the desired setting.

#### Specifying the number of displays

It is possible to specify the number of displays.

- 1. Move the Controller to the right until the split screen is selected.
- Press the Controller.
- 3. "Personalize menu"
- 4. Select the desired setting.
- 5. Move the Controller to the left.

## **Control elements**

#### Overview



- 1 Control Display, with touchscreen depending on the equipment version
- 2 Controller with buttons and, depending on the equipment version, with touchpad

### **Control Display**

#### **General information**

To clean the Control Display, follow the care instructions, refer to page 361.

In the case of very high temperatures on the Control Display, for instance due to intense solar radiation, the brightness may be reduced down to complete deactivation. Once the temperature is reduced, for instance through shade or air conditioning, the normal functions are restored.

#### Safety information



#### 

Objects in the area in the front of the Control Display can shift and damage the Control Display. There is a risk of damage to property. Do not place objects in the area in front of the Control Display.

#### Switching on/off automatically

The Control Display is switched on automatically after unlocking.

In certain situations, the Control Display is switched off automatically, for instance if no operation is performed on the vehicle for several minutes.

#### Switching on/off manually

The Control Display can also be switched off manually.

- - Press the button.
- 2. "Turn off control display"

Press the Controller or any button on the Controller to switch it back on again.

## **Controller with navigation** system


#### General information

The buttons can be used to open the menus directly. The Controller can be used to select menu items and enter the settings.


Some iDrive functions can be operated using the touchpad on the Controller, refer to page 51.

#### **Operation**

▶ Turn to switch between menu items, for ex-

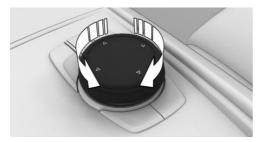

▶ Press to select a menu item, for example.

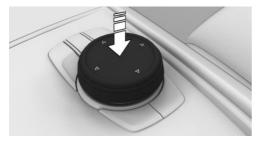

➤ Tilt in four directions to switch between displays, for example.



#### **Buttons on the Controller**

Button	Function

Press once: calls up the main menu.

Press twice: displays all menu items of the main menu.

Opens the Communication menu.

#### **Button Function**

Opens the Media/Radio menu.

Opens destination input menu for navigation.

Opens navigation map.

Press once: opens the previous display.

Press and hold: open the menus used

Opens the Options menu.

### **Controller without navigation** system

#### General information

The buttons can be used to open the menus directly. The Controller can be used to select menu items and enter the settings.

#### **Operation**

▶ Turn to switch between menu items, for example.



▶ Press to select a menu item, for example.



Tilt in two directions to switch between displays, for example.



#### **Buttons on the Controller**

## **Button Function**

Press once: calls up the main menu.

Press twice: displays all menu items of the main menu.

Opens the Communication menu.

Opens the Media/Radio menu.

Press once: opens the previous display.

Press and hold: open the menus used last.


Opens the Options menu.

# Operating via the Controller

#### Opening the main menu

MENU

Press the button.

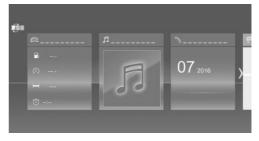

The main menu is displayed.

All iDrive functions can be called up via the main menu.

#### Adjusting the main menu



Press the button twice

All menu items of the main menu are displayed.

- 2. Select a menu item.
- 3. To move the menu item to the desired position, tilt the Controller to the right or left.

#### **Selecting menu items**

Highlighted menu items can be selected.

1. Turn the Controller until the desired menu item is highlighted.





2. Press the Controller.

#### **Dynamic contents**

You can display dynamic contents within the menu items. The contents of the menu items update automatically, e.g., the active destination guidance in the navigation. To access the dynamic content directly, tap on the lower section of the menu item.

Via iDrive:

- 1. "My Vehicle"
- 2. "Contents of main menu"

## Changing between displays

After a menu item is selected, for instance "iDrive settings", a new display appears.

- Move the Controller to the left. The current display closes and the previous display is shown.
- Press the button.

The previous display re-opens.

Move the Controller to the right. The new display opens.

An arrow indicates that additional displays can be opened.

## **Opening recently used menus**



Press and hold this button.

The recently used menus are displayed.

## **Opening the Options menu**



Press the button.

The "Options" menu is displayed.

The menu consists of various areas:

- ▶ Screen settings, for instance "Split screen".
- ▶ Control options for the selected main menu, for instance for "Media/Radio".

▶ If applicable, further operating options for the selected menu, for instance "Save station".

### **Changing settings**

Settings, such as brightness, can be entered.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Control display"
- 5. "Brightness at night"
- 6. Turn the Controller until the desired setting is displayed.
- 7. Press the Controller.

### **Entering letters and numbers**

#### Input

- 1. Turn the Controller: select letters or numbers.
- 2. **OK**: confirm entry.

**Symbol Function** 

#### **Deleting**

l←	Press the Controller: delete letters or number.	
l←	Hold the Controller down: delete all	

#### Using alphabetical lists

For alphabetical lists with more than 30 entries. the letters for which there is an entry are displayed at the left edge.

- 1. Turn the Controller to the left or right guickly. All letters for which there are entries are displayed on the left edge.
- Select the first letter of the desired entry. The first entry of the selected letter is displayed.


# **Operation via touchscreen**

#### **General information**

Depending on the equipment version, the Control Display is equipped with a touchscreen.

Touch the screen with your fingers. Do not use any objects.

#### **Opening the main menu**

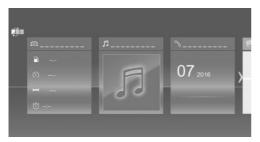

The main menu is displayed.

All iDrive functions can be called up via the main menu.

## Adjusting the main menu

1. Tap on the symbol.

All menu items of the main menu are displayed.

2. Drag the menu item to the desired position on the right or left.

### **Selecting menu items**

Tap the desired menu item.



#### **Dynamic contents**

You can display dynamic contents within the menu items. The contents of the menu items update automatically, e.g., the active destination guidance in the navigation. To access the dynamic content directly, tap on the lower section of the menu item.

Via iDrive:

- 1. "My Vehicle"
- 2. "Contents of main menu"

#### **Changing between displays**

After a menu item is selected, a new display opens.

An arrow indicates that additional displays can be opened.

- ▶ Swipe to the left.
- ▶ Tap arrow.

The new display opens.

### **Changing settings**

Settings such as brightness can be changed via the touchscreen.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Control display"
- 5. "Brightness at night"
- 6. To perform the desired setting:
  - Slide in the selected field to the right or left, until the desired setting is displayed.
  - ▶ , + Tap on the symbol.

#### **Entering letters and numbers**

#### Input

Tap the symbol on the touchscreen.
 A keyboard appears in the Control Display.



2. Enter letters and numbers.

#### **Deleting**

Symbol	Function	
l←	Tapping the symbol: deletes the letter or number.	
l←	Tapping and holding the symbol all letters: deletes all letters or numbers.	

## **Operating navigation map**

The navigation map can be moved using the touchscreen.

Function	Operation
Enlarge/shrink map.	Drag in or out with the fingers.

## **Touchpad**

#### **General information**

Some iDrive functions can be operated using the touchpad on the Controller.

## **Selecting functions**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Touchpad"
- 4. Select the desired setting:
  - "Speller": enter letters and numbers.
  - ▶ "Map": use the map.
  - "Search fields": to write letters without selecting the list field.
  - "Audio feedback": pronounces entered letters and numbers.

#### **Entering letters and numbers**

Entering letters requires some practice at the beginning. When entering, pay attention to the following:

- ▶ The system distinguishes between upper and lower-case letters and numbers. To make entries, you may need to change between upper and lower-case letters, numbers and characters, refer to page 49.
- ▶ Enter characters as they are displayed on the Control Display.
- Always enter associated characters, such as accents or periods so that the letter can be clearly recognized. The set language determines what input is possible. Where necessarv, enter special characters via the Controller.

### **Entering special characters**

Input	Operation
Delete a character.	Swipe to the left on the touchpad.
Enter a blank space.	Swipe to the right in the center of the touchpad.
Enter a hyphen.	Swipe to the right in the upper area of the touchpad.
Enter an under- score.	Swipe to the right in the lower area of the touchpad.

## Using the map

The map in the navigation system can be moved via the touchpad.

Function	Operation
Move map.	Swipe in the appropriate direction.
Enlarge/shrink map.	Drag in or out on the touch- pad with fingers.
Display menu.	Tap once.

# Programmable memory buttons

#### **General information**

The iDrive functions can be stored on the programmable memory buttons and called up directly, for instance radio stations, navigation destinations, phone numbers and menu entries or pages in the Integrated Owner's Manual.

Settings are stored for the driver profile currently used.

#### **Storing a function**

- 1. Select function via iDrive.
- 2. 1... 7 Press and hold the desired button until a signal sounds.

### **Executing a function**



Press the button.

The function will work immediately. This means, for instance that the number is dialed when a phone number is selected.

#### Displaying the key assignment

Touch buttons with finger. Do not wear gloves or use objects.

The button assignment is displayed at the top edge of screen.

#### **Deleting the button assignments**

- Press and hold buttons 1 and simultaneously for approx. 5 seconds.
- 2. "OK"



# **BMW Gesture Control**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **Concept**

Several iDrive functions can be operated by hand motion only using BMW Gesture Control.

#### **Overview**



The gestures that are performed underneath the interior mirror are captured by a camera in the roofliner

# **Activating/deactivating**

#### Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Gestures"
- 4. "Gesture control"

# **Adjusting**

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Gestures"
- 4. Select the desired setting:
  - ▶ "Display tips": the possible gesture is shown on the Control Display.
  - ▶ "Audio feedback": an acoustic signal is emitted once the gesture is recognized.

# Possible gestures

Gesture	Operation	Function
J	Move index finger forward and backward in the direction of the screen.	Accept call.  Select a highlighted entry in a list during voice activation.  Confirm "Resume guidance" pop-up.
	Move hand across the width of the Control Display in the direction of the front-passenger side.	Reject call. Close pop-up. Terminate voice activation.
3	Slowly move hand clockwise in a circular pattern with the index finger stretched out forward.  Gesture is detected after one circular motion.	Increase the volume.
3	Slowly move forearm counterclockwise in a circular pattern with the index finger stretched out forward.  Gesture is detected after one circular motion.	Reduce the volume.
	Pinch with thumb and index finger and move hand horizontally to the right or left.	Surround View: turn camera view. This gesture can only be executed while the vehicle is stationary.
14	Move stretched out index and middle finger forward.	Individually assignable gesture.

Perform gestures underneath the interior mirror and next to the steering wheel.

Execute gestures clearly.

The gestures can also be executed from the front-passenger side.

## **Assigning gesture individually**

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Gestures"

- 4. "Function assignment"
- 5. Select the desired setting.

#### **System limits**

Gesture recognition by the camera can be disturbed by the following circumstances:

- ▶ The camera lens is covered.
- ▶ Objects are located on the interior mirror.
- ▶ The camera lens is dirty. Clean the camera lenses, refer to page 361.
- ➤ The gesture is executed outside of the detection range.
- ▶ Wearing of gloves or jewelry.
- ▶ Smoking in the car's interior.

# Voice activation system

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# **Concept**

Most functions displayed on the Control Display can be operated by voice commands via the voice activation system. The system supports you with announcements during input.

### **General information**

- ▶ Functions that can only be used when the vehicle is stationary can only be operated via the voice activation system to a limited extent.
- The system uses a special microphone on the driver's side.
- > .... in the Owner's Manual denotes verbal instructions to use with the voice activation system.

# **Functional requirements**

A language must be set via iDrive that is supported by the voice activation system. To set the language, refer to page 60. ▶ Always say commands in the language of the voice activation system.

# Using the voice activation system

# Activating the voice activation system

- 1. Press the button on the steering wheel.
- 2. Wait for the signal.
- 3. Say the command.



The symbol on the Control Display indicates that the voice activation system is active.

No other commands may be available. In this case, operate the function via iDrive.

# Terminating the voice activation system



Press the button on the steering wheel or Cancel

### Possible commands

#### **General information**

Most menu items on the Control Display can be spoken as commands.

Commands from other menus can also be spoken.

You can also select list entries such as phone list entries via voice activation. Read these list entries out loud exactly as they are shown in the respective list.



### **Displaying possible commands**

The following is displayed in the top area of the Control Display:

- ▶ Some possible commands for the current menu
- > Some possible commands from other menus.
- Status of the voice recognition.
- Encrypted connection is not available.

### **Example: opening the tone** settings

The commands of the menu items are spoken just as they are selected via the Controller.

- 1. Switch on the Entertainment sound output, if needed.
- Press the button on the steering
- 3. →Media and radio
- 4. →Tone«

### Help on the voice activation system

- ▶ To have the available spoken instructions read out loud:>Voice commandsc
- ▶ To have information on the operating principle of the voice activation system read out loud: General information on voice control.
- ▶ To have help for the current menu read out loud: >Help«.

### **Information for Emergency** Requests

Do not use the voice activation system to initiate an Emergency Request. In stressful situations, the voice and vocal pitch can change. This can unnecessarily delay the establishment of a phone connection.

Instead, use the SOS button, refer to page 353, close to the interior mirror.

## **Adjusting**

#### Setting the language

The language to be used for voice activation and system announcements can be set.

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. If necessary, "Language"
- 4. "Language:"
- 5. Select the desired language.

### Setting the voice dialog

You can set the system to use standard dialog or a short version.

The short version of the voice dialog plays back short messages in abbreviated form.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Language"
- 4. "Speech mode:"
- 5. Select the desired setting.

#### Online speech processing

Online speech processing provides a dictation function, a natural method of entering destinations and improves the quality of voice recognition. To use the functions, data is transmitted to a service provider via an encrypted connection and stored locally there.

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Language"
- 4. "Server speech recognition"

### Adjusting the volume

Turn the volume button during the spoken instructions until the desired volume is set.

- ➤ The volume remains constant even if the volume of other audio sources is changed.
- ➤ The volume is stored for the driver profile currently used.

# **System limits**

- ▶ Certain noises can be detected and may lead to problems. Keep the doors, windows, and glass sunroof closed.
- Noises from the front passenger or the rear seat bench can impair the system. Avoid making other noise in the vehicle while speaking.
- Major language dialects can cause problems with the voice recognition feature. Speak loud and clear.

# Using the voice activation system of the smartphone

A smartphone connected to the vehicle can be used via voice activation.

Activate voice command response on the smartphone for this purpose.

1. Press and hold the button on the steering wheel for approx. 3 seconds.

Voice command response is activated on the smartphone.

2. Release the button.

If activation is successful, a confirmation appears on the Control Display.

If it was not possible to activate voice command response, the list of Bluetooth devices appears on the Control Display.

# Amazon Alexa Car Integration

#### Concept

Alexa is a digital assistant by Amazon. With Amazon Alexa Car Integration, Alexa can be used in the vehicle.

#### **General information**

Some of the Alexa functions are limited in the vehicle to prevent any impairment of safety while driving.

#### **Functional requirement**

- ▶ Amazon Alexa Car Integration purchased via ConnectedDrive Store.
- ➤ The ConnectedDrive account in the vehicle is the same as in the BMW Connected app.
- ➤ The vehicle is connected in the BMW Connected app.
- Amazon account and BMW account are connected in the BMW Connected app.
- Bluetooth connection or USB connection between vehicle and mobile device is active.

# Activation in the BMW Connected app

The Amazon Alexa Car Integration is activated in the BMW Connected app.

Follow the instructions in the app.

#### **Activation in the vehicle**

An authorization for the use of Amazon Alexa Car Integration is required every time before starting a trip.

- 1. Authorizing Amazon Alexa Car Integration:
  - Pair mobile device with the vehicle via Bluetooth.



- ▶ Select driver profile, refer to page 65.
- Press the button on the steering wheel.
- 3. Wait for the signal.
- 4. Say activation word Alexa and desired command.

Information about the active function is displayed on the Control Display.

#### **Malfunction**

In case of a malfunction, switch off the vehicle and start the engine again.

# **General settings**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## Language

#### **Setting the language**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. If necessary, "Language"
- 4. "Language:"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

#### Setting the voice dialog

For voice dialog for the voice activation system, refer to page 57.

#### **Time**

### Setting the time zone

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"

- 3. "Date and time"
- 4. "Time zone:"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

### **Setting the time**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Date and time"
- 4. "Time:"
- Turn the Controller until the desired hours are displayed.
- 6. Press the Controller.
- 7. Turn the Controller until the desired minutes are displayed.
- 8. Press the Controller.

### **Setting the time format**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Date and time"
- 4. "Time format:"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

# Instrument cluster with enhanced features: setting the clock time display

The clock time can be displayed in analog or digital form.



- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Instrument panel"
- 5. "Time"
- 6. Select the desired setting.

The setting is stored for the driver profile currently used.

#### **Automatic time setting**

Depending on your vehicle's optional features, the time, date and, if needed, the time zone are updated automatically.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Date and time"
- 4. "Automatic time setting"

The setting is stored for the driver profile currently used.

#### **Date**

## Setting the date

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Date and time"
- 4. "Date:"
- 5. Turn the Controller until the desired day is displayed.
- 6. Press the Controller.
- 7. Make the settings for the month and year.

#### **Setting the date format**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Date and time"
- 4. "Date format:"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

## **Setting the units of** measurement

Depending on the country version, you can set the units of measurement for some values, for instance consumption, distances, and temperature.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Units"
- 4. Select the desired menu item.
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

# **Activating/deactivating the** display of the current vehicle position

#### Concept

If vehicle tracking has been activated, the current vehicle position can be displayed in the BMW Connected app or in the Connected Drive customer portal.



### **Activating/deactivating**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Vehicle tracking"
- 4. "Vehicle tracking"

# Activating/deactivating popup windows

For some functions, popup windows are displayed automatically on the Control Display. Some of these popup windows can be activated or deactivated.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Pop-ups"
- 4. Select the desired setting.

The setting is stored for the driver profile currently used.

# **Control Display**

### **Brightness**

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Displays"
- 4. "Control display"
- 5. "Brightness at night"
- Turn the Controller until the desired brightness is set.
- 7. Press the Controller.

The setting is stored for the driver profile currently used.

Depending on the light conditions, the brightness settings may not be clearly visible.

# Selecting the contents of the main menu

You can select the displayed contents for some menu items in the main menu.



Press the button.

- 2. "Contents of main menu"
- 3. Select the desired menu and the desired content.

The setting is stored for the driver profile currently used.

# **Messages**

#### Concept

The menu centrally displays all messages arriving in the vehicle in list form.

#### **General information**

The following messages can be displayed:

- Traffic messages.
- ➤ Communication messages, for example emails, SMS text messages or reminders.
- Messages from, e.g., the Concierge service or the BMW Connected app.
- Check Control messages.
- Service requirements messages.
- Messages from the vehicle manufacturer.

Messages are additionally displayed in the status field.

#### **Retrieving messages**

- 1. "My Vehicle"
- 2. "iDrive settings"



- 3. "Notifications"
- 4. Select the desired message.

The respective menu is opened, where the message is displayed.

#### **Deleting messages**

All messages, except Check Control messages or messages from the vehicle manufacturer, can be deleted from the list.

Check Control messages or messages from the vehicle manufacturer are displayed as long as they are relevant.

Via iDrive:

- 1. "Notifications"
- 2. Select the desired message.
- Press the button.
- 4. "Delete this notification" or "Delete all notifications"

#### **Adjusting**

The following settings can be adjusted:

- ▶ Select the applications, from which messages will be permitted.
- Sort the messages according to date or priority.

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Notifications"
- 4. Select the desired setting.

# **Personal settings**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **Data protection**

#### **Data transfer**

#### Concept

The vehicle offers different functions, whose use requires a data transfer to BMW or a service provider. The data transfer can be deactivated for some functions.

#### **General information**

With data transfer deactivated, the respective function cannot be used.

Only make these settings while stationary.

### **Activating/deactivating**

Follow the instructions on the Control Display.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Data privacy"
- 4. Select the desired setting.

# Deleting personal data in the vehicle

#### Concept

Depending on the usage, the vehicle stores personal data, such as stored radio stations. This personal data can be permanently deleted using iDrive

#### **General information**

Depending on the equipment package, the following data can be deleted:

- Driver profile settings.
- Stored radio stations.
- > Stored programmable memory buttons.
- ▶ Travel and Onboard Computer information.
- Music hard disk.
- ▶ Navigation, for instance stored destinations.
- Phone book.
- ▶ Online data, for instance Favorites, cookies.
- Office data, for instance voice notes.
- ▶ Login accounts.

Altogether, the deletion of the data can take up to 15 minutes.

#### **Functional requirement**

Data can only be deleted while stationary.

#### **Deleting data**

Note and follow the instructions on the Control Display.

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Data privacy"
- 4. "Delete personal data"

- "Delete personal data"
- 6. "OK"
- 7. Exit and lock the vehicle.

The deletion process takes 15 minutes to complete.

If not all data was deleted, repeat the deletion.

#### **Canceling deletion**

Switch on the drive-ready state to cancel deletion of the data.

## **Driver profiles**

#### Concept

In the driver profiles, individual settings for several drivers can be stored and called up again when required.

#### **General information**

There are three driver profiles with which personal vehicle settings can be stored. Every vehicle key has been assigned one of these driver profiles.

If the vehicle is unlocked using a vehicle key, the assigned personal driver profile will be activated. All settings stored in the driver profile are automatically applied.

If several drivers use their own vehicle keys, the vehicle will apply the personal settings as it is being unlocked. These settings are also restored, if the vehicle has been used in the meantime by a person with a different vehicle key.

Changes to the settings are automatically stored in the driver profile currently activated.

If another driver profile is selected via iDrive, the settings stored in it will be applied automatically. The new driver profile is assigned to the vehicle key that is currently in use.

There is an additional guest profile available that is not assigned to any vehicle key. It can be used to apply settings in the vehicle without changing the personal driver profiles.

#### **Functional requirements**

For the system to be able to identify the driver profile associated to a particular driver, the detected vehicle key must be clearly allocated to the driver.

This is the case when:

- ▶ The driver is only carrying his or her own vehicle key.
- ▶ The driver unlocks the vehicle.
- The driver gets into the vehicle through the driver's door.

### Active driver profile

After switching on the Control Display, the name of the active driver profile is displayed.

Select driver profile, refer to page 66.

As soon as the engine is started or any key is pressed, the last selected display is shown on the Control Display.

To exit the welcome screen via iDrive: "OK"

#### **Adjusting**

The settings for the following systems and functions are stored in the active driver profile. The scope of storable settings depends on country and equipment.

- Unlocking and locking.
- ▶ Lights.
- Climate control.
- Radio
- Instrument cluster.
- Programmable memory buttons.
- Volumes, tone.
- Control Display.
- PDC Park Distance Control.
- Rearview camera.



- Panorama View.
- ▶ Head-up Display.
- Driving Dynamics Control.
- Seat position, exterior mirror position.
   Both the positions saved via the seat memory and the last position set are saved.
- Intelligent Safety.

#### **Profile management**

#### Selecting a driver profile

Regardless of the vehicle key in use, a different driver profile may be activated. This allows you to call up personal vehicle settings, even if you did not unlock the vehicle with your own vehicle key.

#### Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. Select driver profile.
- 4. "OK"
- ➤ All settings stored in the selected driver profile are automatically applied.
- ➤ The called-up driver profile is assigned to the vehicle key being used at the time.
- If the driver profile is already assigned to a different vehicle key, this driver profile will apply to both vehicle keys.

#### **Guest profile**

The guest profile is for individual settings that are stored in none of the three personal driver profiles.

#### Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- "Drive off (guest)"
- 4. "OK"

The guest profile cannot be renamed. It is not assigned to the vehicle key currently in use.

#### Renaming a driver profile

A personal name can be assigned to the active driver profile to avoid confusion between the driver profiles.

#### Via iDrive:

- 1. "My Vehicle"
- "Driver profiles"
- 3. Select driver profile.
  - The driver profile marked with this symbol can be renamed.
- 4. "Change driver profile name"
- 5. Enter profile name.
- 6. **OK** Select the symbol.

#### Resetting a driver profile

The settings of the active driver profile are reset to their factory settings.

#### Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. Select driver profile.
  - The driver profile marked with this symbol can be reset.
- 4. "Reset driver profile"
- 5. "OK"

#### **Exporting driver profiles**

Most settings of the active driver profile can be exported.

Exporting is helpful when storing and retrieving personal settings, for instance before delivering the vehicle to a workshop. The stored driver profiles can be taken into another vehicle.

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. Select driver profile.



- The driver profile marked with this symbol can be exported.
- 4. "Export driver profile"
- 5. Select a storage device for exporting the driver profile.
  - "USB device" Select the USB storage device, as needed, refer to page 71.
  - Online Via the BMW Connected Drive customer portal.

#### Importing driver profiles

The existing settings of the active driver profile are overwritten with the settings of the imported driver profile.

#### Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. Select the driver profile to be overwritten.
  - The driver profile marked with this symbol can be overwritten.
- 4. "Import driver profile"
- 5. Select a storage device for importing the driver profile.
  - USB storage device: "USB device" Select USB storage device as needed.
  - Online.
- 6. Select the driver profile to be imported.

### **System limits**

A clear assignment between the vehicle key and driver may not be possible in the following cases, for example.

- ▶ The passenger unlocks the vehicle with his or her own vehicle key, but another person is drivina.
- ▶ The driver unlocks the vehicle via Comfort Access and has multiple vehicle keys with him or her.

- ▶ The driver changes, but the vehicle is not locked and unlocked.
- Multiple vehicle keys are located outside of the vehicle.

# Connections

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## Concept

Various connection types are available for using mobile devices in the vehicle. The connection type to select depends on the mobile device and the desired function.

### **General information**

The following overview shows possible functions and the suitable connection types for them. The scope of functions depends on the mobile device.

Function	Connection type
Making calls via the hands-free system.	Bluetooth.
Using phone functions via iDrive.	
Using the smartphone Office functions.	
Playing music from the smart- phone or the audio player.	Bluetooth or USB.
Using compatible apps via iDrive.	Bluetooth or USB.

Function	Connec- tion type
USB storage device:	USB.
Exporting and importing driver profiles.	
Performing software updates.	
Exporting and importing stored trips.	
Playing music.	
Playing videos from the smart- phone or the USB storage de- vice.	USB.
Using the vehicle Internet access.	WiFi hot- spot.
Using Apple CarPlay apps via iDrive and voice operation.	Bluetooth and WiFi.

The following connection types require one-time pairing with the vehicle:

- Bluetooth.
- WiFi hotspot.
- ▶ Apple CarPlay.

Paired devices are automatically recognized later on and connected to the vehicle

# Safety information



#### Marning

Operating the integrated information systems and communication devices while driving can distract from traffic. It is possible to lose control of the vehicle. There is a risk of accident, Only use the systems or devices when the traffic situation allows. As warranted, stop and use the

systems and devices while the vehicle is stationary.

# **Compatible devices**

#### **General information**

Information on mobile devices compatible with the vehicle can be found at www.bmwusa.com/ bluetooth.

Malfunctions may occur with devices not listed or deviating software versions.

### Displaying the vehicle identification number and software part number

When looking for compatible devices, you may have to state the vehicle identification number and the software part number. These numbers can be displayed in the vehicle.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Mobile devices"
- 4. "Settings"
- "Bluetooth® info"
- 6. "System information"

A software update, refer to page 75, can be performed, if needed.

#### **Bluetooth connection**

### **Functional requirements**

- ▶ Compatible device, refer to page 69, with Bluetooth interface.
- ▶ The vehicle key or BMW display key is in the vehicle.
- ▶ The device is ready for operation.

- ▶ Bluetooth is switched on in the vehicle, refer to page 69, and on the device.
- Bluetooth presettings, such as visibility, may be required on the device; refer to the owner's manual of the device.

### Switching on Bluetooth

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. "Bluetooth®"

### **Activating/deactivating** telephone functions

To use all supported functions of a mobile phone, the following functions must be activated prior to pairing the mobile phone with the vehicle.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. Select the desired setting:
  - ▶ "Office"

Activate function to transmit short messages, e-mails, calendars, tasks, notes, and reminders to the vehicle. Costs can be incurred by transmitting all data to the vehicle.

- "Contact images"
  - Activate function to show the contact pictures.
- 6. Move the Controller to the left.

# Pairing the mobile device with the vehicle

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Mobile devices"
- 4. "Connect new device"
- 5. Select functions:
  - ▶ % "Telephone"
  - ▶ ♬ "Bluetooth® audio"
  - ▶ □ "Apps"

The vehicle's Bluetooth name is displayed on the Control Display.

- 6. On the mobile device, search for Bluetooth devices in the vicinity.
  - The Bluetooth name of the vehicle appears on the mobile device display.
  - Select the Bluetooth name of the vehicle.
- Depending on the mobile device, a control number is displayed or the control number must be entered.
  - Compare the control number displayed on the Control Display with the control number on the display of the device.
    - Confirm the control number on the device and on the Control Display.
  - ▶ Enter and confirm the same control number on the device and via iDrive.

The device is connected and displayed in the device list, refer to page 73.

## **Frequently Asked Questions**

All requirements are met and all required steps were completed in the specified order. Despite that, the mobile device does not function as expected.

In this case, the following explanations can help: Why could the mobile phone not be paired or connected?

- ➤ There are too many Bluetooth devices connected to the mobile phone or vehicle.
  - In the vehicle, delete Bluetooth connections with other devices.
  - Delete all known Bluetooth connections from the device list on the mobile phone and start a new device search.
- The mobile phone is in power-save mode or has only a limited remaining battery life.
   Charge the mobile phone.

Why does the mobile phone no longer react?

- ➤ The applications on the mobile phone do not function anymore.
  - Switch the mobile phone off and on again.
- ➤ Too high or too low ambient temperature for mobile phone operation.
  - Do not subject the mobile phone to extreme ambient temperatures.

Why can phone functions not be used via iDrive?

- The mobile phone may not be properly configured, for instance as Bluetooth audio device.
  - Connect the mobile phone with the telephone or additional phone function.

Why are no or not all phone book entries displayed or why are they incomplete?

- Transmission of the phone book entries is not yet complete.
- It is possible that only the phone book entries of the mobile phone or the SIM card are transmitted.
- ▶ It may not be possible to display phone book entries with special characters.
- ▶ It may not be possible to transmit contacts from social networks.
- ➤ The number of phone book entries to be stored is too high.
- Data volume of the contact too large, for instance due to stored information such as notes.
  - Reduce the data volume of the contact.



▶ A mobile phone can only be connected as audio source or as telephone.

Configure the mobile phone and connect it with the telephone or additional phone function.

How can the phone connection quality be improved?

- ▶ Adjust the strength of the Bluetooth signal on the mobile phone, depending on the mobile phone.
- Insert the mobile phone into the wireless charging tray.
- Adjust the volume of the microphone and loudspeakers separately in the sound settings.

If all points in this list have been checked and the required function is still not available, contact the hotline, a dealer's service center or another qualified service center or repair shop.

## **USB** connection

#### **General information**

Mobile devices with a USB port are connected to the USB interface.

- Mobile phones.
- Audio devices such as MP3 players.
- ▶ USB storage devices.

Common file systems are supported. FAT32 and exFAT are the recommended formats.

A connected USB storage device will be supplied with charge current via the USB interface if the device supports this. Follow the maximum charge current of the USB interface.

The following uses are possible on USB interfaces with data transfer:

- Exporting and importing driver profiles, refer to page 65.
- Playing music files via USB audio.
- Playing videos via USB video.

 Loading of software updates, refer to page 75.

Follow the following when connecting:

- Do not use force when plugging the connector into the USB interface.
- Use a flexible adapter cable.
- ▶ Protect the USB storage device against mechanical damage.
- Due to the large number of USB storage devices available on the market, it cannot be guaranteed that every device is operable on the vehicle.
- Do not expose USB storage devices to extreme environmental conditions, such as very high temperatures; refer to the owner's manual of the device.
- Due to the many different compression techniques, proper playback of the media stored on the USB storage device cannot be guaranteed in all cases.
- ▶ To ensure proper transmission of the stored data, do not charge a USB storage device via the onboard socket, when it is connected to the USB interface.
- Depending on how the USB storage device is being used, settings may be required on the USB storage device, refer to the owner's manual of the device.

Not compatible USB media:

- USB hard drives.
- USB hubs.
- ▶ USB memory card readers with multiple slots.
- HFS-formatted USB storage devices.
- Devices such as fans or lamps.

### **Functional requirement**

Compatible device, refer to page 69, with USB interface.



### **Connecting the device**

Connect the USB storage device using a suitable adapter cable to a USB interface, refer to page 258.

The USB storage device is displayed in the device list, refer to page 73.

# WiFi hotspot

#### **General information**

Up to 8 devices can be connected with the hotspot of the vehicle at the same time.

### **Functional requirements**

- Compatible device, refer to page 69, with WiFi interface.
- WiFi activated on the device.
- Registration and data contract with a service provider where required.
- ▶ Internet use is activated for the vehicle.
- Standby state switched on.

## **Activating the WiFi hotspot**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. "Internet hotspot"

# Connecting device to WiFi hotspot

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Connect new device"
- 5. 🛜 "Internet hotspot"

- Hotspot name and hotspot code are displayed on the Control Display.
- Search for WiFi networks on the device. Select network name on the device.
- Enter hotspot code on the device and connect.

The device is displayed in the device list, refer to page 73.

The initial Internet use via the hotspot requires a registration and possibly a data volume purchase from a service provider.

Depending on the country version, data volume can be purchased via the connected mobile device or from the Connected Drive Store.

All devices connected via the hotspot use this data volume.

### **Adjusting**

The network name and hotspot code can be changed. In addition, the network name can be hidden so that it cannot be found by other devices.

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. Press the button.
- 5. ► "Change hotspot key"
   Enter the desired hotspot code.
  - ▶ "Change hotspot name"
    - Enter the desired network name.
  - "Hide hotspot"
     Activate or deactivate the function.
- Confirm the entry of the hotspot code or network name:
  - **OK** Select the symbol.

# **Apple CarPlay preparation**

#### Concept

CarPlay allows certain functions of a compatible Apple iPhone to be used via Siri voice operation and iDrive.

# **Functional requirements**

- ▶ Compatible iPhone, refer to page 69. iPhone 5 or later with iOS 7.1 or later.
- ▶ Corresponding mobile contract.
- Bluetooth, WiFi, and Siri voice operation are activated on the iPhone.
- ▶ Booking the ConnectedDrive service: Apple CarPlay preparation.

# Switching on Bluetooth and **CarPlay**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Mobile devices"
- 4. "Settings"
- 5. Select the following settings:
  - ▶ "Bluetooth®"
  - "Apple CarPlay"

# Pairing the iPhone with CarPlay

Pair the iPhone with the vehicle via Bluetooth, refer to page 70.

Select CarPlay as the function:

"Apple CarPlay"

The iPhone is connected to the vehicle and displayed in the device list, refer to page 73.

# **Operation**

For more information, refer to the Integrated Owner's Manual or the Owner's Manual for Navigation, Entertainment, Communication.

# **Frequently Asked Questions**

All requirements are met and all required steps were completed in the specified order. Despite that, the mobile device does not function as expected.

In this case, the following explanations can help:

The iPhone has already been paired with Apple CarPlay. When a new connection is established, CarPlay can no longer be selected.

- Delete the iPhone concerned from the device. list
- > On the iPhone, delete the vehicle concerned from the list of stored vehicles under Bluetooth and under WiFi.
- Pair the iPhone as a new device.

If the steps listed have been carried out and the required function is still not available: contact the hotline, a dealer's service center or another qualified service center or repair shop.

# Managing mobile devices

#### **General information**

- ▶ After one-time pairing, the devices are automatically recognized and reconnected when standby state is switched on.
- ▶ The data stored on the SIM card or in the mobile phone is transferred to the vehicle after recognition.
- ▶ For some devices, certain settings are necessary, for instance authorization; see the owner's manual of the device.

# Displaying the device list

All devices paired with or connected to the vehicle are displayed in the device list.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Mobile devices"



A symbol indicates, for which function a device is used.

Symbol	Function
8	"Telephone"
§2°	"Additional telephone"
ſ.	"Bluetooth® audio"
	"Apps"
<u>(i</u>	"Internet hotspot"
<b>€</b>	"Apple CarPlay"
	"Screen Mirroring"

# **Configuring the device**

Functions can be activated or deactivated for paired and connected devices.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- "Mobile devices"
- 4. Select the desired device.
- 5. Select the desired setting.

If a function is assigned to a device, the function will be deactivated where appropriate for a device that is already connected and the device will be disconnected.

# **Disconnecting the device**

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Mobile devices"
- Select device.
- 5. "Disconnect device"

The device remains paired and can be connected again, refer to page 74.

# Connecting the device

A disconnected device can be reconnected.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. Select device.
- 5. "Connect device"

The functions that were assigned to the device before disconnecting are assigned to the device when it is reconnected. The functions may be deactivated on a device already connected.

# **Deleting the device**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- Select device.
- "Delete device"

The device is disconnected and removed from the device list.

# Swapping the telephone and additional phone

If two mobile phones are connected to the vehicle, the functions of the phone and additional phone can be switched.

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. "Swap telephone/additional tel."



# Software update

#### **General information**

The vehicle supports a large number of mobile devices, for example mobile phones and MP3 players. Software updates are available for many of the supported devices. The vehicle is kept upto-date via regular vehicle software updates.

Updates and associated, current information is available on the Internet: www.bmw.com/update.

#### Displaying the version of the installed software

The software version installed in the vehicle is displayed.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Software update"
- 4. "Show current version"

If an update has been carried out before, select the desired version to display additional information.

# Updating software via USB

The software may only be updated when the vehicle is stationary.

Via iDrive:

- 1. Store the file for the software update in the main directory of a USB flash drive.
- 2. Connect the USB data storage to a USB interface.
- 3. "My Vehicle"
- 4. "iDrive settings"
- "Software update"
- 6. "Update software"
- 7. "USB"
- 8. "Install software"
- 9. "OK"

- 10. Wait for the update to complete.
- 11. "Shut down system"

If necessary, switch off the engine first.

# Restoring the software version

You can restore the software to the version prior to the last update or to its factory settings.

The software may only be restored when the vehicle is stationary.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Software update"
- 4. "Restore software"
- 5. ▶ "Previous version"
  - The previous software version is restored. "Default software settings"

The first software version is restored.

- "Remove software"
- 7 "OK"
- 8. Wait for restore.
- 9. "Shut down system"

If necessary, switch off the engine first.

# Owner's Manual media

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# **General information**

You can use the following media formats to call up the content in the Owner's Manual:

- ▶ Printed Owner's Manual, refer to page 76.
- ▶ Integrated Owner's Manual in the vehicle, refer to page 76.

# **Printed Owner's Manual**

# Concept

The printed Owner's Manual describes all standard, country-specific, and optional features offered with the series.

# General information

The Owner's Manual for Navigation, Entertainment, and Communication can be obtained as a printed book from the service center.

# **Supplementary Owner's Manuals**

Also follow the Supplementary Owner's Manuals, which are included in addition to the onboard literature.

# **Integrated Owner's Manual** in the vehicle

#### Concept

The Integrated Owner's Manual specifically describes features and functions found in the vehicle.

The Integrated Owner's Manual can be displayed on the Control Display.

# **Selecting the Owner's Manual**



- Press the button
- 2. "My Vehicle"
- "Owner's Manual"
- 4. Select the desired method of accessing the contents

# Scrolling through the Owner's Manual

Turn the Controller, until the next or previous contents are displayed.

#### Context help

#### **General information**

The section of the Owner's Manual relating to the function that is currently selected can be displayed directly.

# Opening via iDrive

Change directly to the Options menu from the function on the Control Display:



Press the button

"Owner's Manual"



#### **Opening when a Check Control** message is displayed

Directly from the Check Control message on the Control Display:

(I) "Owner's Manual"

#### Changing between a function and the Owner's Manual

To switch from a function, for instance radio, to the Owner's Manual on the Control Display and to alternate between the two displays:

- Press the button 1
- 2. "Owner's Manual"
- 3. Select the desired page in the Owner's Manual.
- Press the button again to return to the last displayed function.
- Press the button to return to the page of the Owner's Manual displayed last.

To alternate continuously between the last displayed function and the last displayed page of the Owner's Manual, repeat steps 4 & 5. Opens a new display every time.

# **Programmable memory buttons**

#### General information

The entry points into the Owner's Manual can be stored on the programmable memory buttons, refer to page 52, and called up directly.

#### **Storing**

- 1. Select the desired entry point via iDrive:
  - "Quick reference"
  - "Search by pictures"
  - "Keyword search"
  - ▶ "Animations"

Press the desired programmable memory button and hold for more than 2 seconds.

#### Executing

Press the corresponding button. The owner's manual is directly displayed at the selected entry point.





# Opening and closing

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# Vehicle key

#### General information

Depending on the equipment version, the vehicle is delivered with two vehicle keys or one vehicle key and the BMW display key, refer to page 85.

Each vehicle key contains a replaceable battery, refer to page 83.

Depending on the equipment and country version, various settings, refer to page 96, can be configured for the button functions.

A personal driver profile, refer to page 65, for each vehicle key is stored in the vehicle.

To provide information on maintenance requirements, the service data is stored in the vehicle key, refer to page 340.

To prevent possible locking in of the vehicle key, take the vehicle key with you when exiting the vehicle.

# **Safety information**

#### Marning

People or animals in the vehicle can lock the doors from the inside and lock themselves in. In this case, the vehicle cannot be opened from the outside. There is a risk of injury. Take the vehicle key with you so that the vehicle can be opened from the outside.

#### Marning

For some country versions, unlocking from the inside is only possible with special knowledge.

Persons who spend a lengthy time in the vehicle while being exposed to extreme temperatures are at risk of injury or death. Do not lock the vehicle from the outside when there are people in it.



#### Marning

Unattended children or animals in the vehicle can cause the vehicle to move and endanger themselves and traffic, for instance due to the following actions:

- Pressing the Start/Stop button.
- ▶ Releasing the parking brake.
- > Opening and closing the doors or windows.
- ▶ Engaging selector lever position N.
- > Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the vehicle key with you when exiting and lock the vehicle.

#### **Overview**



- 1 Unlocking
- 2 Locking
- 3 Opening/closing the tailgate
- **4** Press and hold or press three times in quick succession: panic mode

Press briefly: headlight courtesy delay feature

# **Unlocking**

#### **General information**

The behavior of the vehicle when unlocking with the vehicle key depends on the following settings, refer to page 96, for unlocking and locking:

- ▶ If only the driver's door and the fuel filler flap or all access to the vehicle will be unlocked.
- ▶ If the unlocking of the vehicle is confirmed with a light signal or a sound signal.
- If the welcome light, refer to page 160, is switched on when the vehicle is being unlocked.
- If the exterior mirrors are automatically folded out and in when the vehicle is unlocked and locked.
- ▶ If the driver's seat is set to the last position saved in the driver's profile.

# Unlocking the vehicle

T)

Press the button on the vehicle key.

If, due to the settings, only the driver's door and fuel filler flap were unlocked, press the button on the vehicle key again to unlock the other vehicle access points.

In addition, the following functions are executed:

- ➤ The settings stored in the driver profile, refer to page 65, are applied.
- ➤ The interior lights are switched on, unless they were manually switched off. For switching the interior lights on/off manually, refer to page 164.
- With anti-theft protection: Anti-theft protection is switched off.
- ▶ With alarm system: The alarm system, refer to page 97, will be switched off.

After opening one of the front doors, the vehicle is ready for operation, refer to page 42.

The light functions may depend on the ambient brightness.

# **Convenient opening**



Press and hold the button on the vehicle key after unlocking.

The windows and the glass sunroof are opened, as long as the button on the vehicle key is pressed.

#### Locking

#### **General information**

The behavior of the vehicle during locking with the vehicle key depends on the following settings, refer to page 96:

- ▶ If the locking of the vehicle is confirmed with a light signal or a sound signal.
- If the exterior mirrors are automatically folded in and out when the vehicle is locked and unlocked.
- If the headlight courtesy delay feature, refer to page 160, is activated during locking.



#### Locking the vehicle

1. Close the driver's door.



Press the button on the vehicle key.

The following functions are executed:

- ▶ All doors, the tailgate, and the fuel filler flap are locked.
- ▶ With anti-theft protection: Anti-theft protection is switched on. This prevents the doors from being unlocked using the lock buttons or the door openers.
- ▶ With alarm system: The alarm system, refer to page 97, will be switched on.

If the drive-ready state is still switched on when you lock the vehicle, the vehicle horn honks twice. In this case, the drive-ready state must be switched off by means of the Start/Stop button.

# With Comfort Access: convenient closing

#### **Safety information**



#### Warning

With convenient closing, body parts can be jammed. There is a risk of injury. Make sure that the area of movement of the doors is clear during convenient closing.

# Closing



Press and hold the button on the vehicle key in the area close to the vehicle after lockina.

The windows, glass sunroof, and sun protection are closed as long as the button on the vehicle key is pressed.

# Switching on the interior and exterior lights



Press the button on the vehicle key with the vehicle locked.

The function is not available for the first 10 seconds after locking.

- ▶ The interior lights are switched on, unless they were manually switched off. For switching the interior lights on/off manually, refer to page 164.
- Depending on the settings, the exterior lighting, refer to page 160, will be switched on.

The light functions may depend on the ambient brightness.

#### **Tailgate**

#### **General information**

To avoid locking the vehicle key in the vehicle. do not place the vehicle key in the cargo area.

Depending on the vehicle equipment and country version, it is also possible to have the doors unlocked. To perform settings, refer to page 96.

When the trailer socket is in use, the tailgate cannot be opened with the vehicle key or with the button in the car's interior.

#### **Safety information**



#### Warning

Body parts can be jammed when operating the tailgate. There is a risk of injury. Make sure that the area of movement of the tailgate is clear during opening and closing.



#### Marning

The tailgate pivots out when it opens. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the tailgate is clear during opening and closing.



#### ⚠ NOTICE

Sharp-edged or pointed objects can hit the windows and heat conductors while driving. There is a risk of damage to property. Cover the edges and ensure that pointed objects do not hit the windows.

#### **Opening**



Press and hold the button on the vehicle key for approx. 1 second.

#### Panic mode

You can trigger the alarm system if you find yourself in a dangerous situation.



- Press the button on the vehicle key and hold for at least 3 seconds.
- Briefly press the button on the vehicle key three times in succession.

To switch off the alarm: press any button.

# Headlight courtesy delay feature on



Press and hold the button on the vehicle key for approx. 1 second.

It is possible to adjust the duration of the headlight courtesy delay feature, refer to page 160.

# Replacing the battery

- 1. Remove the integrated key from the vehicle key, refer to page 89.
- 2. Place the integrated key underneath the battery compartment cover, arrow 1, and lift the cover with a lever movement of the integrated key, arrow 2.



3. Push battery in the direction of the arrow using a pointed object and lift it out.



- 4. Insert a type CR 2032 battery with the positive side facing up.
- Press the cover closed.
- 6. Push the integrated key into the vehicle key until the integrated key engages.



Have old batteries disposed of by a dealer's service center or another qualified service center or repair shop or take

them to a collection point.

# **Additional vehicle keys**

Additional vehicle keys are available from a service center or another qualified service center or repair shop.





# Loss of vehicle keys

A lost vehicle key can be blocked and replaced by a dealer's service center or another qualified service center or repair shop.

#### **Malfunction**

#### **General information**

A Check Control message, refer to page 143, is displayed.

Vehicle key recognition by the vehicle may malfunction under the following circumstances:

- ► The battery of the vehicle key is discharged. For replacing the battery, refer to page 83.
- Interference of the radio connection from transmission towers or other equipment with high transmitting power.
- Shielding of the vehicle key due to metal objects.
  - Do not transport the vehicle key together with metal objects.
- Interference of the radio connection from mobile phones or other electronic devices in direct proximity to the vehicle key.
  - Do not transport the vehicle key together with electronic devices.
- Interference of radio transmission by a charging process of mobile devices, for instance charging of a mobile phone.
- ➤ The vehicle key is in direct proximity of the wireless charging tray.

Place the vehicle key in a different location.

In the case of interference, the vehicle can be unlocked and locked from the outside with the integrated key, refer to page 89.

# Switching the drive-ready state on via emergency detection of the vehicle key



It is not possible to switch on the drive-ready state if the vehicle key has not been detected.

Proceed as follows in this case:

- Hold the back of the vehicle key against the marked area on the steering column. Pay attention to the display in the instrument cluster.
- If the vehicle key is detected: Switch on drive-ready state within 10 seconds.

If the vehicle key is not recognized, slightly change the position of the vehicle key and repeat the procedure.

# **Frequently Asked Questions**

What precautions can be taken to be able to open a vehicle with an accidentally locked in vehicle key?

- The options provided by the Remote Services of the BMW Connected app include the ability to lock and unlock a vehicle.
  - This requires an active BMW Connected-Drive contract and the BMW Connected app must be installed on a smartphone.
- ▶ Unlocking the vehicle can be requested via the BMW ConnectedDrive Call Center.
  - An active BMW ConnectedDrive contract is required.



#### **General information**

The BMW display key is supplied with an additional mechanical key. If the display key is used, the mechanical key should be carried with you, for instance in the wallet. The mechanical key is used like the integrated key, refer to page 89.

The display key supports all functions of the standard remote control.

In addition, the following functions are also available:

- Display status of doors and windows.
- Display status of the anti-theft warning system.
- Display service information.
- Call up range with available fuel.

# **Safety information**

# 

People or animals in the vehicle can lock the doors from the inside and lock themselves in. In this case, the vehicle cannot be opened from the outside. There is a risk of injury. Take the vehicle key with you so that the vehicle can be opened from the outside.

#### ▲ Warning

For some country versions, unlocking from the inside is only possible with special knowledge.

Persons who spend a lengthy time in the vehicle while being exposed to extreme temperatures are at risk of injury or death. Do not lock the vehicle from the outside when there are people in it.

# Marning

Unattended children or animals in the vehicle can cause the vehicle to move and endanger themselves and traffic, for instance due to the following actions:

- ▶ Pressing the Start/Stop button.
- ▶ Releasing the parking brake.
- Opening and closing the doors or windows.
- ▶ Engaging selector lever position N.
- ▶ Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the vehicle key with you when exiting and lock the vehicle.

#### **Overview**



- 1 Opening/closing the tailgate
- 2 Unlocking
- 3 Press and hold or press three times in quick succession: panic mode

Press briefly: headlight courtesy delay feature

- 4 Locking
- 5 Display
- 6 Back
- 7 Switch the display on/off
- 8 Micro-USB charging socket

# 1

# **Reception range**

The number of available display key functions depends on the distance from the vehicle.

- When you are in close proximity to the vehicle, all functions of the display key are available.
- ➤ The status information can be called up in the extended reception range.

With parked-car heating: the parked-car heating can be operated.

Without parked-car heating: the parked-car ventilation can be operated.

Outside of the reception range of the vehicle, you can display the last transmitted status information from the vehicle.

The symbol is shown on the display if one of the buttons is pressed outside of the reception range.

# **Display**

#### **General information**

The display is divided into the upper status line, the information area, and the lower status line.

# **Upper status line**

The upper status line displays the following information:

- ▶ 🔂 / 🗗 Vehicle secured/vehicle unsecured.
- Set time in the vehicle.
- Charge state of the display key battery.

#### Information area

The information area can be used to access information and perform additional functions.

If the information area contains more than one page, then page indicators are shown beneath the information.

O●O A solid indicator denotes the current page. Swipe to the right or left with a finger to change between the pages.

If further information is available on a page, tap the appropriate symbol.

To return to the original page:  $\footnotemark$  tap on the symbol beneath the display.

#### Lower status line

The lower status line indicates whether or not the display key is within reception range, refer to page 86.

- ▶ "Connected": the display key is within reception range.
- "Updated": the display key is not within reception range. It indicates when the last data transfer from the vehicle took place.

#### Switching on/off

The display will go out automatically after a brief period to conserve battery power.

To hide the display manually:

Press the button on the left side of the display key. For an overview, refer to page 85.

To show the display:

- Press the button on the left side of the display key.
- 2. Then, swipe with your finger from bottom to top to unlock the screen lock.

To switch off the display to increase the usable battery life:

- 1. If necessary, cancel the screen lock.
- 2. Press and hold the button on the left side of the display key for longer than 4 seconds.
- 3. "OK"

To switch the display on:

Press the button on the left side of the display key.



The following information shows how to access the information and functions using the main menus.

Main menu	Information/Function
"Security information"	ਰੇ / ਰੰ
	Door status.
	Alarm system status.
	After alarm triggering: date, time, and reason for triggering the alarm.
	Window status.
	Glass sunroof status.
"Vehicle information"	Maintenance indicators of Condition Based Service CBS, refer to page 340.
	Status of the roadside parking lights.
"Mobility info"	Range with available fuel.
"Precondit. setting"	With parked-car heating: operate parked-car heating, refer to page 247.
	Without parked-car heating: operate parked-car ventilation, refer to page 247.

# **Display key battery**

#### General information

Follow the following information:

- ▶ If the charge state of the display key battery declines, the display is switched off automatically. The battery must be recharged so that the display can be switched back on. The operability of the standard buttons is retained until the battery is completely discharged.
- Charge the battery for at least three hours before using the display key for the first time

- or if the key has not been used for an extended period.
- ▶ The display key can be used during charging via the USB port. If the battery is fully discharged, it may take some time before the display key can be used again.
- Due to the large number of USB chargers available on the market, it cannot be guaranteed that every charger will function properly. The charging duration depends on the charger used.
- Charging via the USB port may heat up the charger and the display key.
  - Charging in the wireless charging tray may heat up the tray and the display key.
  - At higher temperatures, the charge current through the display key may be reduced, and in isolated cases the charge process may be interrupted temporarily.
- ▶ When inserting the display key into the wireless charging tray, make sure there are no objects between it and the wireless charging tray.

# **Safety information**



#### Warning

When charging a device that meets the Qi standard in the wireless charging tray, any metal objects located between the device and the tray can become very hot. If smart cards, memory cards or cards with magnetic strips are placed between the device and the tray, this may impair card function. There is a risk of injury and risk of damage to property. When charging mobile devices, make sure there are no objects between the device and the tray.

# Charging

#### Via USB

Connect the display key via the micro-USB charging socket to a USB port.



# 1

#### Manual transmission: in the center armrest



- 1. Open the center armrest.
- Place the display key into the recess of the wireless charging tray underneath the center armrest.

Make sure that the display is on the side of the clamp and that the lock button points upward.

Close the center armrest.

# Steptronic transmission: in the center console



- 1. Open the tray cover.
- Place the display key into the middle of the wireless charging tray in front of the cup holders.

Ensure that the display is facing up.

3. Close the tray cover.

#### Malfunction

#### **General information**

A Check Control message is displayed.

BMW display key detection by the vehicle may malfunction under the following circumstances:

- ➤ The battery of the display key is discharged. Charge the battery, refer to page 87.
- Interference of the radio connection from transmission towers or other equipment with high transmitting power.
- ➤ Shielding of the display key due to metal objects.
- Interference of the radio connection from mobile phones or other electronic devices in direct proximity.
- Interference of radio transmission by a charging process of mobile devices, for instance charging of a mobile phone.

Do not transport the display key together with metal objects or electronic devices.

In the case of interference, the vehicle can also be unlocked and locked from the outside with the mechanical key.

# Switching on drive-ready state via emergency detection of the BMW display key



It is not possible to switch on the drive-ready state if the display key has not been detected.

Proceed as follows in this case:

- Hold the display key with its back against the marked area on the steering column. Pay attention to the display in the instrument cluster.
- 2. If the display key is detected:

Switch on drive-ready state within 10 seconds.

If the display key is not detected, slightly change the position of the display key and repeat the procedure.

#### Resetting the BMW display key

If the charged display key cannot be switched on anymore or if the display does not respond to entries anymore, the display key can be reset.

Press and hold the following buttons on the display key at the same time for at least 10 seconds until the display is switched off and then on again:





# **Integrated key**

# **General information**

The driver's door can be locked and unlocked without the vehicle key using the integrated key.

The integrated key also fits the glove compartment.

# **Safety information**



For some country versions, unlocking from the inside is only possible with special knowledge.

Persons who spend a lengthy time in the vehicle while being exposed to extreme temperatures are at risk of injury or death. Do not lock the vehicle from the outside when there are people in it.

#### ∧ NOTICE

The door lock is permanently joined with the door. The door handle can be moved. When pulling the door handle with the integrated key inserted, paint or the integrated key can be damaged. There is a risk of damage to property. Remove the integrated key before pulling the outside door handle.


# Removing



Press the button, arrow 1, and pull out the integrated key, arrow 2.

# Locking/unlocking via the door lock

1. Pull and hold the door handle outward with one hand.

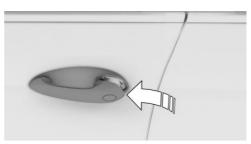

2. Guide one finger of your other hand from the back under the cover and push the cover out.





Use the thumb for counter support to prevent the cover from falling out of the door handle.



- Remove the cover.
- 4. Unlock or lock the door lock using the integrated key.



The other doors must be unlocked or locked from the inside.

# **Alarm system**

The activated alarm system is triggered when the door is opened, if the vehicle has been unlocked via the door lock.

The alarm system is not switched on if the vehicle is locked with the integrated key.

# Buttons for the central locking system

#### **General information**

In the event of a severe accident, the vehicle is automatically unlocked. The hazard warning system and interior lights come on.

#### **Overview**



Buttons for the central locking system.

#### Locking



Press the button with the front doors closed.

- ▶ The fuel filler flap remains unlocked.
- ➤ The vehicle is not secured against theft when locking.

#### **Unlocking**



Press the button.

# **Opening**

Press the button to unlock all the doors.


Pull the door opener above the armrest.

- Front doors: pull the door handle on the door to open the door. The other doors remain locked.
- Back doors: pull twice on the door handle on the door to be opened; the first time unlocks the door, the second time opens it. The other doors remain locked.

# **Comfort Access**

# Concept

The vehicle can be accessed without operating the vehicle key.

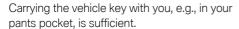

The vehicle automatically detects the vehicle key when it is in close proximity or in the car's interior.

#### **General information**

Comfort Access supports the following functions:

- Unlocking and locking the vehicle from the door handle.
- Convenient closina.
- Open the tailgate.
- Open and close the tailgate with no-touch activation.

# **Functional requirements**

- ▶ To lock the vehicle, the vehicle key must be outside of the vehicle near the doors.
- ▶ The next unlocking and locking cycle is not possible until after approx. 2 seconds.

# **Unlocking**



Grasp the handle of a vehicle door completely.

# Locking

Close the driver's door.



Touch the grooved surface on the handle of a closed vehicle door with your finger for approx. 1 second without grasping the door handle.

# **Convenient closing**

#### Safety information

#### Warning

With convenient closing, body parts can be jammed. There is a risk of injury. Make sure that the area of movement of the doors is clear during convenient closing.

#### Closing



Touch the grooved surface on the handle of a closed vehicle door with your finger and hold it there without grasping the door handle.

In addition to locking, the windows and glass sunroof will be closed





# **Opening the tailgate**

#### **General information**

If the tailgate is opened via Comfort Access. locked doors are not unlocked.

To avoid locking the vehicle key in the vehicle, do not place the vehicle key in the cargo area.

#### Safety information



#### Warning

Body parts can be jammed when operating the tailgate. There is a risk of injury. Make sure that the area of movement of the tailgate is clear during opening and closing.


#### Marning

The tailgate pivots out when it opens. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the tailgate is clear during opening and closing.

#### ⚠ NOTICE

Sharp-edged or pointed objects can hit the windows and heat conductors while driving. There is a risk of damage to property. Cover the edges and ensure that pointed objects do not hit the windows.

#### **Opening**

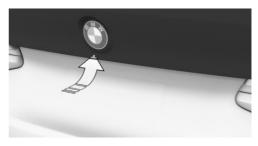

Press the button on tailgate's exterior.

# Touchless opening and closing of the tailgate

#### Concept

The tailgate can be opened and closed with notouch activation using the vehicle key you are carrying. Two sensors detect a forward-directed foot motion in the central rear area and the tailgate is opened and closed.

#### **General information**

To avoid locking the vehicle key in the vehicle, do not place the vehicle key in the cargo area.

If the vehicle key is in the sensor area, the tailgate may open or close inadvertently if you unintentionally move your foot or if a foot movement is detected.

The sensor has an approximate range of 5 ft/1.50 m extending from the rear of the vehicle.

If the tailgate is opened with no-touch activation, locked doors are not unlocked.

# **Safety information**

#### Warning

During no-touch activation, vehicle parts may be touched, such as the hot exhaust gas system. There is a risk of injury. When moving your foot, make sure you have a firm stance and do not touch the vehicle.

#### Marning

Body parts can be jammed when operating the tailgate. There is a risk of injury. Make sure that the area of movement of the tailgate is clear during opening and closing.

#### Marning

The tailgate pivots out when it opens. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the tailgate is clear during opening and closing.

#### ∧ NOTICE

Sharp-edged or pointed objects can hit the windows and heat conductors while driving. There is a risk of damage to property. Cover the edges and ensure that pointed objects do not hit the windows.

# **Functional requirement**

Touchless opening of the tailgate is not possible when the trailer socket is in use.

#### Performing the foot movement

- 1. Stand in the middle behind the vehicle at approx. one arm's length away from the rear of the vehicle.
- 2. Wave a foot under the vehicle in the direction of travel and immediately pull it back. With

this movement, the leg must pass through the ranges of both sensors.



#### **Opening**

Perform the foot movement described earlier.

Before the tailgate opens, the hazard warning system flashes.

Moving your foot again will stop the opening motion, and moving it one more time after that will close the tailgate.

#### Closing

Perform the foot movement described earlier.

The hazard warning system flashes and an acoustic signal sounds.

Moving your foot again will stop the closing motion, and moving it one more time after that will re-open the tailgate.

#### Malfunction

Vehicle key recognition by the vehicle may malfunction under the following circumstances:

- ▶ The battery of the vehicle key is discharged. For replacing the battery, refer to page 83.
- ▶ Interference of the radio connection from transmission towers or other equipment with high transmitting power.
- ▶ Shielding of the vehicle key due to metal obiects.

Do not transport the vehicle key together with metal objects.





▶ Interference of the radio connection from mobile phones or other electronic devices in direct proximity to the vehicle key.

Do not transport the vehicle key together with electronic devices.

Wet or snowy conditions may disrupt the locking request recognition function on the door handles.

In the case of a malfunction, unlock and lock the vehicle using the buttons of the vehicle key or use the integrated key, refer to page 89.

# **Tailgate**

#### General information

To avoid locking the vehicle key in the vehicle, do not place the vehicle key in the cargo area.

Depending on the vehicle equipment and country version, it is also possible to have the doors unlocked. To perform settings, refer to page **96**.

# **Safety information**

# Warning

Body parts can be jammed when operating the tailgate. There is a risk of injury. Make sure that the area of movement of the tailgate is clear during opening and closing.

# Marning

The tailgate pivots out when it opens. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the tailgate is clear during opening and closing.

#### ∧ NOTICE

Sharp-edged or pointed objects can hit the windows and heat conductors while driving. There is a risk of damage to property. Cover the edges and ensure that pointed objects do not hit the windows.

# **Tailgate**

#### General information

When the trailer socket is in use, the tailgate cannot be opened with the vehicle key or with the button in the car's interior.

#### **Opening**

#### General information

When the trailer socket is in use, the tailgate cannot be opened with the vehicle key or with the button in the car's interior.

#### Adjusting the opening height


You can set how far the tailgate should open.

When adjusting the opening height, ensure that there is a clearance of at least 4 in/10 cm above the tailgate.

Via iDrive:

- "Mv Vehicle"
- "Vehicle settings"
- 3. "Doors/Key"
- 4. "Tailgate"
- 5. Monitor the tailgate and set the desired opening height.

#### From the outside

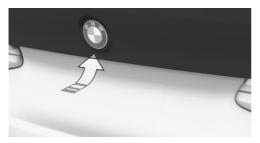

- Without Comfort Access: unlock vehicle. With Comfort Access: unlock the vehicle or have the vehicle key with you. Press the button on tailgate's exterior.
- Press the button on the vehicle key for approx. 1 second.

Depending on the setting, the doors may also be unlocked. Opening with the vehicle key, refer to page 82.

If the vehicle is stationary, the tailgate opens automatically to the adjusted opening height.

#### From the inside



With Steptronic transmission:

Press the button in the driver's door downward.

If the vehicle is locked, selector lever position P must be engaged first.

With manual transmission:

With the vehicle stationary, push the button in the storage compartment of the driver's door downwards twice in quick succession.

The tailgate will be opened to the configured opening height.

#### Interruption of the opening procedure

The opening procedure is interrupted in the following situations:

When the vehicle starts moving.

- ▶ By pressing the button on the outside of the tailgate. Pressing again closes the tailgate.
- ▶ By pressing the button on the inside of the tailgate. Pressing again closes the tailgate.
- By pressing the button on the vehicle key.
   Pressing again continues the opening motion.
- By pressing or pulling the button in the driver's door. Pressing again continues the opening motion.

#### Closing

#### From the outside



With Comfort Access:

Press the button on the inside of the tailgate.

The vehicle will be locked after closing the tailgate. The driver's door must be closed for this purpose and the vehicle key must be outside of the vehicle in the area of the tailgate.

#### From the inside



Pull and hold the button in the driver door.

The vehicle key must be located in the car's interior for this function.

An acoustic signal sounds before the tailgate is closed.

#### Interruption of the closing procedure

The closing procedure is interrupted in the following situations:

- ▶ If the vehicle starts off with a jerky movement.
- ▶ By pressing the button on the outside of the tailgate. Pressing again re-opens the tailgate.
- ▶ By pressing the button on the inside of the tailgate. Pressing again re-opens the tailgate.





▶ By releasing the button in the driver's door. Pulling again and holding continues the closing motion.

#### Malfunction

#### Safety information



#### Marning

With manual operation of a blocked tailgate, it can release itself unexpectedly from the blockage. There is a risk of injury or risk of damage to property. Do not operate the tailgate manually if it is blocked. Have it checked by a dealer's service center or another qualified service center or repair shop.

#### Manual operation

Operate the unlocked tailgate manually with a slow and smooth motion.

To close the tailgate fully, press down lightly only. Closing occurs automatically.

# **Adjusting**

#### **General information**

Depending on the package and country version, various settings are available for the vehicle key functions.

These settings are stored for the driver profile currently used.

# **Unlocking**

#### Doors

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"

- 4. ⋒ "Driver's door" or ⋒ "All doors"
- 5. Select the desired setting:
  - ▶ "Driver's door only"

Only the driver's door and the fuel filler flap are unlocked. Pressing again unlocks the entire vehicle.

"All doors"

The entire vehicle is unlocked.

#### **Tailgate**

Depending on the vehicle equipment and country version, this setting may not be offered.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- 4. Select the symbol.
- 5. Select the desired setting:
  - ▶ "Tailgate"

The tailgate is opened.

"Tailgate and door(s)"

The tailgate is opened and the doors unlocked

#### Adjusting the last seat and mirror position

Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. Select driver profile.
  - The setting can be made for the driver profile marked with this symbol.
- 4. "Last seat position automatic"

When the vehicle is unlocked, the driver's seat and exterior mirrors resume their last set positions.

The most recent position is independent of the positions saved via the seat memory.



#### Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- Deactivate or activate the desired confirmation signals:
  - "Flash for lock/unlock"
     Unlocking is signaled by two flashes, locking by one.
  - With alarm system:
    - "Acoustic signal for lock/unlock"
      Unlocking is signaled by two honks of the horn, locking by one.

# **Automatic locking**

#### Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- 4. Select the desired setting:
  - "Lock automatically"
     The vehicle locks automatically after a while if no door is opened after unlocking.
  - "Lock after starting to drive"
     The vehicle locks automatically after you drive off.

# **Automatic unlocking**

#### Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Kev"
- 4. "Unlock at end of trip"

After drive-ready state is switched off by pressing the Start/Stop button, the locked vehicle is automatically unlocked.

# Folding mirrors automatically

#### Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- 4. "Fold mirrors in when locked"

The exterior mirrors are automatically folded in during locking.

# Establishing idle state after opening the front doors

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- "Turn off after door opening"
   Opening the front doors establishes the idle state, refer to page 41.

# Alarm system

#### **General information**

When the vehicle is locked, the vehicle alarm system reacts to the following changes:

- Opening a door, the hood, or the tailgate.
- Movements in the car's interior.
- Changes in the vehicle tilt, for instance, during attempts at stealing a wheel or when towing the vehicle.
- Disconnected battery voltage.
- Improper use of the socket for OBD Onboard Diagnosis.
- Locking the vehicle while a device is connected to the socket for the OBD Onboard-Diagnosis. For socket for the OBD Onboard Diagnosis, refer to page 341.

The alarm system signals these changes visually and acoustically:





- Acoustic alarm:
  - Depending on local regulations, the acoustic alarm may be suppressed.
- Visual alarm:By flashing the exterior lighting.

# Switching on/off

When you unlock and lock the vehicle, either with the vehicle key or via Comfort Access, the alarm system is switched off and on at the same time

# Opening the doors with the alarm system switched on

The alarm system is triggered when a door is opened if the door was unlocked using the integrated key in the door lock.

Switching off the alarm, refer to page 99.

# Opening the tailgate with the alarm system switched on

The tailgate can be opened even when the alarm system is switched on.

After the tailgate is closed, it is locked and monitored again provided the doors are locked. The hazard warning system flashes once.

#### Panic mode

You can trigger the alarm system if you find yourself in a dangerous situation.



- ▶ Press the button on the vehicle key and hold for at least 3 seconds.
- ▶ Briefly press the button on the vehicle key three times in succession.

To switch off the alarm: press any button.

# Indicator light on the interior mirror



The indicator light flashes briefly every 2 seconds:

The alarm system is switched on.

- ▶ Indicator light flashes for approx. 10 seconds, then it flashes briefly every 2 seconds:
  - Interior motion sensor and tilt alarm sensor are not active, as doors, hood, or tailgate are not correctly closed. Correctly closed access points are secured.
  - When the still open access points are closed, the interior motion sensor and tilt alarm sensor will be switched on.
- ➤ The indicator light goes out after unlocking: The vehicle has not been tampered with.
- ➤ The indicator light flashes after unlocking until drive-ready state is switched on, but no longer than approx. 5 minutes:
  - An alarm has been triggered.

#### Tilt alarm sensor

The tilt of the vehicle is monitored.

The alarm system responds in situations such as attempts to steal a wheel or when the vehicle is towed.

#### **Interior motion sensor**

The windows and the glass sunroof must be closed for the system to function properly.



#### General information

The tilt alarm sensor and interior motion sensor can trigger an alarm, although no unauthorized action occurred.

Possible situations for an unwanted alarm:

- ▶ In automatic vehicle washes.
- In duplex garages.
- During transport on trains carrying vehicles, at sea or on a trailer.
- ▶ With animals in the vehicle
- ▶ When the vehicle is locked after start of fuel-

The tilt alarm sensor and the interior motion sensor can be switched off in such situations.

#### Switching off the tilt alarm sensor and interior motion sensor



Press the button on the vehicle key within 10 seconds as soon as the vehicle is

locked.

The indicator light lights up for approx. 2 seconds and then continues to flash.

The tilt alarm sensor and interior motion sensor are switched off until the vehicle is locked again.

# Switching off the alarm

- ▶ Unlock the vehicle with the vehicle key.
- ▶ Unlock the vehicle with the integrated key and activate the drive-ready state via emergency detection of the vehicle key, refer to page 84.
- ▶ With Comfort Access: when carrying the vehicle key, grasp the driver's door or front passenger door handle completely.

# **Power windows**

# **Safety information**



#### Warning

When operating the windows, body parts and objects can be jammed. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the windows is clear during opening and closing.

#### Overview





Power windows



Safety switch

# **Functional requirements**

The windows can be operated under the following conditions.

- Standby state is established.
- Drive-ready state is activated.
- ▶ The vehicle key is in the car's interior.

# Opening



Press the switch to the resistance point.

The window opens while the switch is being held.



Press the switch beyond the resistance point.







The window opens automatically. Pressing the switch again stops the motion.

Convenient opening with the vehicle key, refer to page 81.

#### Closing

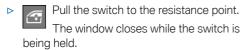

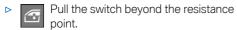

The window closes automatically if the door is closed. Pulling again stops the motion.

Convenient closing with the vehicle key, refer to page 82.

Closing via Comfort Access, refer to page 90.

# Jam protection system

#### Concept

The jam protection prevents objects or body parts becoming jammed between the door frame and window while a window is being closed.

#### General information

If resistance or a blockage is detected while a window is being closed, the closing action is interrupted and the window opens slightly.

#### Safety information



#### Marning

Accessories on the windows such as antennas can impact jam protection. There is a risk of injury. Do not install accessories in the area of movement of the windows.

#### Closing without the jam protection system

In case of danger from the outside or if ice might prevent normal closing, proceed as follows:

Pull the switch past the resistance point and hold it there.

The window closes with limited jam protection. If the closing force exceeds a specific threshold, closing is interrupted.

Pull the switch past the resistance point again within approx. 4 seconds and hold it there.

The window closes without jam protection.

# Safety switch

#### Concept

The safety switch can be used to prevent children, for instance from opening and closing the rear windows using the switches in the rear.

If an accident of a certain severity occurs, the safety function is switched off automatically.

#### Switching on/off



Press the button.

The LED lights up if the safety function is switched on.

# Roller sunblinds, rear side windows



#### Marning

With closed roller sunblinds and open windows, the roller sunblinds may be strained while driving due to the wind. The roller sunblinds may be damaged and vehicle occupants may be harmed. There is a risk of injury. Do not open

the windows while driving if the roller sunblinds are closed.

Pull out the roller sunblind at the strap and hook it onto the bracket.

# **Glass sunroof**

#### **General information**

The glass sunroof and the sun protection are operated using the same switch.

# **Safety information**



#### Marning

Body parts can be jammed when operating the glass sunroof. There is a risk of injury. Make sure that the area of movement of the glass sunroof is clear during opening and closing.

#### Overview





Opening/closing the glass sunroof.

# **Functional requirements**

The glass sunroof and the sun protection can be operated under the following conditions.

Standby state is established.

- Drive-ready state is activated.
- The vehicle kev is in the car's interior.

# Lifting/closing glass sunroof



Push switch briefly upward.

- ▶ The closed glass sunroof tilts and the sun protection opens slightly.
- ▶ The opened glass sunroof closes until it is in the tilted position. The sun protection does not move.
- The tilted glass sunroof closes.

# **Opening/closing the glass** sunroof and sun protection separately



Press the switch in the desired. direction to the resistance point and hold it there.

Holding down the switch opens the sun protection. If the sun protection is already fully open, the glass sunroof opens.

The glass sunroof closes while the switch is being held. If the glass sunroof is already closed or in the tilted position, the sun protection closes.

▶ Press the switch in the desired direction past the resistance point.

The sun protection opens automatically. If the sun protection is already fully open, the glass sunroof opens automatically.

The glass sunroof closes automatically. If the glass sunroof is already closed or in the tilted position, the sun protection closes automatically.

Pressing the switch upward stops the motion.





# Opening/closing the glass sunroof and sun protection together



Briefly press the switch twice in succession in the desired direction past the resistance point.

The glass sunroof and sun protection move together. Pressing

the switch upward stops the motion.

Convenient opening with the vehicle key, refer to page 81.

Closing via Comfort Access, refer to page 90.

# **Comfort position**

In some models, the wind noises in the car's interior are lowest when the glass sunroof is not fully open. In these models, the automatic function initially only opens the glass sunroof up to this comfort position.

Pressing the switch again opens the glass sunroof fully.

# Jam protection system

#### Concept

The jam protection prevents objects or body parts from becoming jammed between the roof and glass sunroof while the glass sunroof is closing.

#### **General information**

If a resistance or blockage is detected while the glass sunroof is closing, the closing operation is interrupted once the roof reaches the half-open position, or it is stopped when closing from the tilted position.

# Closing from the open position without jam protection

If there is an external danger, proceed as follows:



- 1. Close all doors.
- 2. Push the switch forward past the resistance point and hold.
  - The glass sunroof closes with limited jam protection. If the closing force exceeds a specific threshold, closing is interrupted.
- Push the switch forward again past the resistance point and hold until the glass sunroof closes without jam protection. Make sure that the closing area is clear.

# Closing from the raised position without jam protection

If there is an external danger, proceed as follows:



- Close all doors.
- 2. Push the switch forward past the resistance point and hold.


# Initializing after a power interruption

#### **General information**

After a power failure during the opening or closing process, the glass sunroof can only be operated to a limited extent.

The system can be initialized under the following conditions.

- ▶ The vehicle is parked in a horizontal position.
- ▶ The drive-ready state is established.
- ► The external temperature is above 41 °F/5 °C.

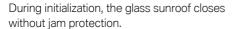

Make sure that the closing area is clear.

# **Initializing the system**



Press the switch up and hold it until initialization is complete.

Initialization begins within 15 seconds.

- ▶ If the glass sunroof is closed, it opens then closes again.
- ▶ If the glass sunroof is open, it first closes, then opens and closes again.

Initialization is complete once the glass sunroof and sun protection have opened then closed again.

# Seats, mirrors, and steering wheel

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# Sitting safely

An ideal seating position that meets the needs of the occupants can make a vital contribution to relaxed, fatique-free driving.

In the event of an accident, the correct seating position plays an important role. Follow the information in the following chapters:

- Seats, refer to page 104.
- Safety belts, refer to page 106.
- ▶ Head restraints, refer to page 108.
- Airbags, refer to page 166.

# Seats, front

# **Safety information**



#### Warning

Seat adjustments while driving can lead to unexpected movements of the seat. Vehicle control could be lost. There is a risk of accident. Only adjust the seat on the driver's side when the vehicle is stationary.

#### Marning

With a backrest inclined too far to the rear, the efficacy of the safety belt can no longer be ensured. There is a risk of sliding under the safety belt in an accident. There is a risk of injuries or danger to life. Adjust the seat prior to starting the trip. Adjust the backrest so that it is in the most upright position as possible and do not adjust again while driving.



#### Marning

There is a risk of jamming when moving the seats. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the seat is clear prior to any adjustment.


# **Electrically adjustable seats**

#### **General information**

The seat adjustment for the driver's seat is stored for the driver profile currently used. When the vehicle is unlocked via the vehicle key, the position is automatically retrieved if the function, refer to page 96, is activated for this purpose.


The current seat position can be stored using the memory function, refer to page 113.

#### **Overview**

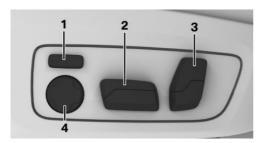


- 1 Backrest width
- 2 Forward/backward, height, seat tilt
- 3 Backrest tilt
- 4 Lumbar support

#### Forward/backward

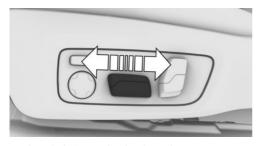


Push switch forward or backward.

# Height

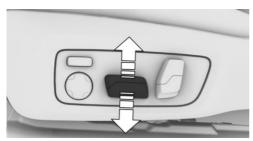


Push switch up or down.

#### Seat tilt

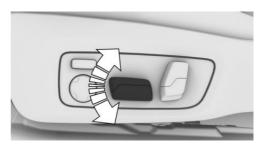


Move switch up or down.

#### **Backrest tilt**

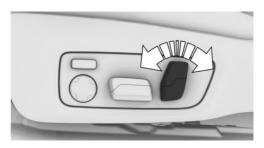

Move switch forward or backward.

# **Thigh support**

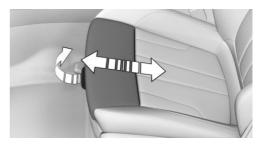

Pull the lever at the front of the seat and push the thigh support forward or back.

# **Lumbar support**

# Concept

The curvature of the seat backrest can be adjusted in a way that it supports the lumbar region



of the spine. The lower back and the spine are supported for upright posture.

#### **Adjusting**



- Press the front/rear section of the button:
  - The curvature is increased/ decreased.
- Press the upper/lower section of the button:

The curvature is shifted up/

#### **Functional limitations**

It may not be possible to adjust the lumbar support at very high and very low temperatures.

#### **Backrest width**

#### Concept

Adjusting the backrest width may improve lateral support when taking corners.

#### **General information**

You can change the backrest width by adjusting the side wings of the backrest.

# Adjusting



- Press the front section of the button:
  - The backrest width decreases.
- Press the rear section of the button:

The backrest width increases.

# **Functional limitations**

It may not be possible to adjust the backrest width at very high and very low temperatures.

# **Rear seats**

#### **General information**

The backrest tilt can be adjusted for the rear seats. The backrest tilt for the center section is adjusted together with the left backrest.

#### **Backrest tilt**



Pull the lever and apply your weight to the backrest or lift it off, as necessary.

After the adjustment, move the backrest slightly forward or back to engage it correctly.

# Safety belts

# Number of safety belts and safety belt buckles

The vehicle is fitted with five safety belts to ensure occupant safety. However, they can only offer protection when adjusted correctly.

The two outer safety belt buckles of the rear seats are intended for the persons sitting on the left and right.

The center safety belt buckle of the rear seats is intended for the person sitting in the middle.

#### **General information**

Always make sure that safety belts are being worn by the occupants before driving off. The airbags supplement the safety belts as an additional safety device. The airbags are not a substitute for safety belts.

The upper shoulder strap's anchorage point will be correct for adult seat occupants of every build if the seat is correctly adjusted.

# **Safety information**

#### Marning

Use of a safety belt to buckle more than one person will potentially defeat the ability of the safety belt to serve its protective function. There is a risk of injuries or danger to life. Do not allow more than one person to wear a single safety belt. Infants and children are not allowed on an occupant's lap, but must be transported and secured in designated child restraint systems.

# Marning

The efficacy of safety gear, including safety belts, can be limited or lost when safety belts are fastened incorrectly. An incorrectly fastened safety belt can cause additional injuries, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injuries or danger to life. Make sure that all occupants are wearing safety belts correctly.

# 🛕 Warning

With a rear backrest that is not locked, the protective function of the middle safety belt is not guaranteed. There is a risk of injuries or danger to life. If you are using the middle safety belt, lock the wider rear seat backrest.

# Marning

The efficacy of safety gear, including safety belts, may not be fully functional or fail in the following situations:

- > The safety belts or safety belt buckles are damaged, soiled, or changed in any other
- Belt tensioners or belt retractors were modified.

Safety belts can be imperceptibly damaged in the event of an accident. There is a risk of injuries or danger to life. Do not modify safety belts. safety belt buckles, belt tensioners, belt retractors or belt anchors and keep them clean. Have the safety belts checked after an accident at the dealer's service center or another qualified service center or repair shop.

# **Correct use of safety belts**

- ▶ Wear the safety belt twist-free and tight to your body over your lap and shoulders.
- ▶ Wear the safety belt deep on your hips over your lap. The safety belt may not press on vour stomach.
- Do not rub the safety belt against sharp edges, or guide it or jam it in across hard or fragile objects.
- Avoid thick clothing.
- Re-tighten the safety belt frequently upward around your upper body.

# **Buckling the safety belt**

- 1. Guide the safety belt slowly over shoulder and hip to put it on.
- 2. Insert the tongue plate into the safety belt buckle. The safety belt buckle must engage audibly.





To ease accessibility to the safety belt buckle, an adjustable slider is available on the belt to help position the buckle when not in use.

When the safety belt is fastened, the driver's and passenger's belt straps are automatically tightened once after driving away.

# Unbuckling the safety belt

- 1. Hold the safety belt firmly.
- 2. Press the red button in the safety belt buckle.
- 3. Guide the safety belt back into its roll-up mechanism.

# Safety belt reminder for driver's seat and front passenger seat

#### Display in the instrument cluster



The indicator light lights up and a signal sounds. Make sure that the safety belts are positioned correctly. The safety belt

reminder can also be activated if objects are placed on the front passenger seat.

#### Safety belt reminder for rear seats

#### **General information**

The safety belt reminder is automatically activated each time the engine starts.

The safety belt reminder is also activated when a passenger unbuckles a rear seat safety belt during the trip.

#### Display in the instrument cluster

The indicator light in the instrument cluster illuminates after the engine is started.

#### **Symbol Description**



Green: the safety belt is buckled on the corresponding rear seat.



Red: the safety belt is not buckled on the corresponding rear seat.

# Safety mode

In critical situations, for instance during an emergency stop, the front safety belts tighten automatically.

If the situation passes without an accident occurring, the belt tension relaxes.

If the belt tension does not loosen automatically, stop the vehicle and unbuckle the safety belt using the red button in the safety belt buckle. Fasten the safety belt before continuing on your trip.

# Front head restraints

# **Safety information**



#### Marning

A missing protective effect due to removed or not correctly adjusted head restraints can cause injuries in the head and neck area. There is a risk of injury.

- ▶ Before driving, install the removed head restraints on the occupied seats.
- > Adjust the head restraint so its center supports the back of the head at as close to eve level as possible.
- > Adjust the distance so that the head restraint is as close as possible to the back of the head. Adjust the distance via the backrest tilt as needed.



# Marning

Body parts can be jammed when moving the head restraint. There is a risk of injury. Make sure that the area of movement is clear when moving the head restraint.

# Marning

Objects on the head restraint reduce the protective effect in the head and neck area. There is a risk of injury.

- ▶ Do not use seat or head restraint covers.
- ▶ Do not hang objects, for instance clothes hangers, directly on the head restraint.
- > Only use accessories that have been determined to be safe for attachment to a head restraint.
- ▶ Do not use any accessories, for instance pillows, while driving.


# Adjusting the height



- ▶ To lower: press the button, arrow 1, and push the head restraint down.
- ▶ To raise: push the head restraint up.

After setting the height, make sure that the head restraint engages correctly.

# Adjusting the distance

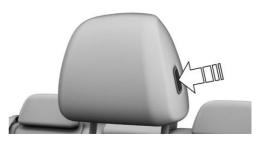

- ▶ Back: press the button and push the head restraint toward the rear.
- > Forward: pull the head restraint toward the front.

After setting the distance, make sure that the head restraint engages correctly.

# Removing

Only remove the head restraint if no one will be sitting in the seat in question.



- 1. Raise the head restraint up against the resistance.
- 2. Press the button, arrow 1, and pull the head restraint out completely.

# Installing

Proceed in the reverse order to install the head. restraint.





# Rear head restraints

# **Safety information**

### ▲ Warning

A missing protective effect due to removed or not correctly adjusted head restraints can cause injuries in the head and neck area. There is a risk of injury.

- ▶ Before driving, install the removed head restraints on the occupied seats.
- ➤ Adjust the head restraint so its center supports the back of the head at as close to eye level as possible.
- Adjust the distance so that the head restraint is as close as possible to the back of the head. Adjust the distance via the backrest tilt as needed.

# **⚠** Warning

Body parts can be jammed when moving the head restraint. There is a risk of injury. Make sure that the area of movement is clear when moving the head restraint.


# ⚠ Warning

Objects on the head restraint reduce the protective effect in the head and neck area. There is a risk of injury.

- ▶ Do not use seat or head restraint covers.
- ▶ Do not hang objects, for instance clothes hangers, directly on the head restraint.
- Only use accessories that have been determined to be safe for attachment to a head restraint.
- ▶ Do not use any accessories, for instance pillows, while driving.

# Folding down the head restraints

To improve the view to the rear, the head restraints can be folded back. Only fold the head restraint back if no one will be sitting in the corresponding seat.

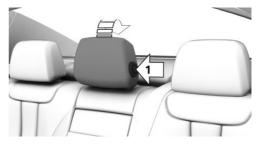

- ➤ To the rear: press the button, arrow 1, and fold the head restraint backward.
- ▶ Forward: fold the head restraint toward the front as far as it will go. Make sure that the head restraint engages correctly.

# Adjusting the height



The height of the outer head restraints can be adjusted.

- ➤ To lower: press the button, arrow 1, and push the head restraint down.
- ▶ To raise: push the head restraint up.

After setting the height, make sure that the head restraint engages correctly.

# Removing

Only remove the head restraint if no one will be sitting in the seat in question.



- 1. Fold down the rear seat backrest, refer to page 268, in question.
- 2. Raise the head restraint up against the resistance.
- 3. Press the button, arrow 1, and pull the head restraint out completely.

### Installing

Proceed in the reverse order to install the head restraint

After the installation, make sure that the head restraint engages correctly.

# **Mirrors**

# **Exterior mirrors**

#### **General information**

The mirror on the front passenger side is more curved than the driver's side mirror.

The mirror setting is stored for the driver profile currently in use. When the vehicle is unlocked via the vehicle key, the position is automatically retrieved if the function, refer to page 96, is activated for this purpose.

The current exterior mirror position can be stored using the memory function, refer to page 113.

# **Safety information**

#### Warning

Objects reflected in the mirror are closer than they appear. The distance to the traffic behind could be incorrectly estimated, for instance while changing lanes. There is a risk of accident. Estimate the distance to the traffic behind by looking over your shoulder.

#### Overview



- Adiustina
- Selecting a mirror, Automatic Curb Monitor
- 3 Folding in and out

# Adjusting electrically



Press the button.

The selected mirror moves along with the button movement.

# Selecting a mirror



To change over to the other mirror: Slide the switch.

#### Malfunction

In case of an electrical malfunction, adjust the mirror by pressing the edges of the mirror glass.





### Folding in and out



#### ∧ NOTICE

Depending on the vehicle width, the vehicle can be damaged in vehicle washes. There is a risk of damage to property. Before washing, fold in the mirrors by hand or with the button.



Press the button.

Folding is only possible up to a speed of approx. 15 mph/20 km/h.

Folding the mirrors in and out is helpful in the following situations:

- ▶ In vehicle washes.
- On narrow roads.

Mirrors that were folded in are folded out automatically at a speed of approx. 25 mph/40 km/h.

#### **Automatic heating**

Both exterior mirrors are automatically heated as needed and when the drive-ready state is switched on.

### **Automatic dimming feature**

The exterior mirror on the driver's side is automatically dimmed. Photocells in the car's interior mirror, refer to page 112, are used to control this

# **Automatic Curb Monitor, exterior** mirror

# Concept

If reverse gear is engaged, the mirror glass on the front passenger side is tilted downward. This improves your view of the curb and other formatting issue - low-lying obstacles when parking, for instance.

### **Activating**

- slide the switch to the driver's side mirror position.
- 2. Engage selector lever position R.

When the trailer socket is in use or trailer towing is activated, the Automatic Curb Monitor is deactivated

### **Deactivating**

Slide the switch to the passenger's side mirror position.

# Interior mirror, manually dimmable



To reduce the blinding effect of the interior mirror, flip the lever forward.

# Interior mirror, automatic dimming feature

#### General information

The interior mirror is dimmed automatically.

Photocells are used for control:

- In the mirror glass.
- On the back of the mirror.

#### Overview



#### **Functional requirements**

- Keep the photocells clean.
- Do not cover the area between the interior. mirror and the windshield.

# Steering wheel


# **Safety information**



#### Marning

Steering wheel adjustments while driving can lead to unexpected steering wheel movements. Vehicle control could be lost. There is a risk of accident. Adjusting the steering wheel while the vehicle is stationary only.

# Manual steering wheel adjustment

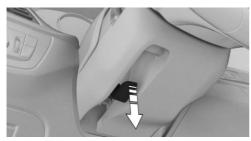

1. Fold the lever down.

#### 2. Move the steering wheel to the preferred height and angle to suit your seating position.

3. Fold the lever back up.

# **Heated steering wheel**

#### Overview





Heated steering wheel

# Switching on/off



Press the button.

A Check Control message is displayed.

If the trip is resumed within approx. 15 minutes after an intermediate stop, the heated steering wheel activates automatically if the function was switched on at the end of the last trip.

# **Memory function**

# Concept

The following settings can be stored and, if necessary, retrieved using the memory function:

- Seat position.
- Exterior mirror position.
- ▶ Height of the Head-up Display.

# General information

Two memory locations with different settings can be set for each driver profile, refer to page 65.



The following settings are not stored:

- Backrest width.
- ▶ Lumbar support.

# **Safety information**



#### Marning

Using the memory function while driving can lead to unexpected seat or steering wheel movements. Vehicle control could be lost. There is a risk of accident. Only retrieve the memory function when the vehicle is stationary.

#### ⚠ Warning

There is a risk of jamming when moving the seats. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the seat is clear prior to any adjustment.

#### Overview



The memory buttons are located on the front doors.

# **Storing**

- 1. Set the desired position.
- Press the button. The writing on the button lights up.
- 3. Press desired button 1 or 2 while the LED is lit. A signal sounds.

# Calling up settings

The stored position is called up automatically.

Press the desired button 1 or 2.

The procedure stops when a switch for setting the seat is pressed or one of the memory buttons is pressed again.

Once underway, adjustment of the seat position on the driver's side is disabled after a short while.

# **Seat heating**

#### Overview

#### **Front**





Seat heating

#### Rear





Seat heating

# **Switching on**



Press the button once for each temperature level

The maximum temperature is reached when three LEDs are lit.

When ECO PRO is activated, refer to page 284, the heating output is reduced.

# **Switching off**



Press and hold the button until the bar display on the climate control display aoes out.

# **Seat heating distribution**

The heating action in the seat cushion and the seat backrest can be distributed in different wavs.

Via iDrive:


- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Climate functions"
- Select a menu item:
  - "Seat heating"
  - "Seat and steering wheel heating"
  - "Seat climate control"
  - "Seat climate / steer, wheel heating"
- 5. Select the desired seat, if needed.
- 6. Press the Controller and turn it to set the seat heating distribution.

# **Active seat ventilation**

# Concept

Integrated fans in the seat and armrest areas provide a comfortable seat temperature.

## **Overview**

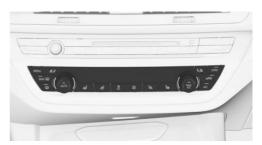



Active seat ventilation

# **Switching on**



Press the button once for each ventilation level.

The highest level is active when three LEDs are

The ventilation switches back by one level after a short time.

# **Switching off**



Press and hold the button until the bar display on the climate control display goes out.

# Individual activation

# Concept

A number of heating and cooling functions can be automatically activated depending on the external temperature.

# General information

The external temperature at which the functions are to be automatically activated can be set via iDrive.

Activation is performed if the external temperature exceeds or falls below the set temperature in the first 2 minutes after drive-ready state has





been switched on. A new alignment is carried out after the settings have been changed.

Depending on the equipment package, the following functions can be automatically activated:

- Seat heating.
- Heated steering wheel.
- Seat ventilation.

If the trip is continued within approx. 15 minutes after a stop, the functions are activated automatically with the levels that were last selected.

# **Functional requirement**

The safety belt of the corresponding seat is buckled.

# **Activating/deactivating**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Climate functions"
- 4. Select a menu item:
  - "Steering wheel heating"
  - "Seat heating"
  - "Seat and steering wheel heating"
  - ▶ "Seat climate control"
  - "Seat climate / steer. wheel heating"
- 5. Select desired seat.
- 6. Select the menu item of the desired function.
- Set the external temperature at which the function is to be activated.
- 8. Set the desired level.



# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# The right place for children

## **Safety information**

#### Marning

Unattended children or animals in the vehicle can cause the vehicle to move and endanger themselves and traffic, for instance due to the following actions:

- ▶ Pressing the Start/Stop button.
- > Releasing the parking brake.
- > Opening and closing the doors or windows.
- ▶ Engaging selector lever position N.
- ▶ Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the vehicle key with you when exiting and lock the vehicle.

## Always transport children in the rear seat

#### General information

Accident research shows that the safest place for children is in the rear seat.

Transport children younger than 13 years of age or shorter than 5 ft/150 cm only in the rear seat in suitable child restraint systems designed for the age, weight and size of the child. Children 13 years of age or older must wear a safety belt as soon as a suitable child restraint system can no longer be used due to their age, weight, or size.

### Safety information



#### Marning

The safety belt cannot be fastened correctly on children shorter than 5 ft, 150 cm without suitable additional child restraint systems. The efficacy of safety gear, including safety belts, can be limited or lost when safety belts are fastened incorrectly. An incorrectly fastened safety belt can cause additional injuries, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injuries or danger to life. Secure children shorter than 5 ft, 150 cm using suitable child restraint systems.

## Children on the front passenger seat

#### General information

Before using a child restraint system on the front passenger seat, ensure that the front, knee, and side airbags on the front passenger side are deactivated. For automatic deactivation of frontseat passenger airbags, refer to page 168.





# Safety information

#### Warning

Active front-seat passenger airbags can injure a child in a child restraint system when the airbags are activated. There is a risk of injury. Make sure that the front-seat passenger airbags are deactivated and that the PASSEN-GER AIRBAG OFF indicator light lights up.

# Installing child restraint **systems**

#### General information

Pay attention to the specifications and the operating and safety information of the child restraint system manufacturer when selecting, installing, and using child restraint systems.

# **Safety information**



#### Warning

The protective effect of child restraint systems and their fastening systems which have been damaged or exposed to an accident can be limited or lost. A child cannot be properly restrained in the event of an accident or braking and evasive maneuvers. There is a risk of injuries or danger to life.

Do not use child restraint systems which have been damaged or exposed to an accident.

If a child restraint system and its fastening system has been damaged or exposed to an accident, have these systems checked and replaced by the dealer's service center or another qualified service center or repair shop.

#### Marning

The stability of the child restraint system is limited or compromised with incorrect seat adjustment or improper installation of the child seat. There is a risk of injuries or danger to life. Make sure that the child restraint system fits securely against the backrest. If possible, adjust the backrest tilt for all affected backrests and correctly adjust the seats. Make sure that seats and backrests are securely engaged or locked. If possible, adjust the height of the head restraints or remove them.

# On the front passenger seat

#### **Deactivating airbags**



### ⚠ Warning

Active front-seat passenger airbags can injure a child in a child restraint system when the airbags are activated. There is a risk of injury. Make sure that the front-seat passenger airbags are deactivated and that the PASSEN-GER AIRBAG OFF indicator light lights up.

Before installing a child restraint system in the front passenger seat, make sure that the front, knee and side airbags on the front passenger side are deactivated.

Deactivate the front-seat passenger airbags automatically, refer to page 168.

### Seat position and height

Before installing a child restraint system, move the front passenger seat as far back as it will go and, if possible, bring it up to medium height. This seat position and height ensure the best possible position for the belt and offers optimal protection in the event of an accident.

If the upper anchor of the safety belt is located in front of the belt guide of the child seat, move the

front passenger seat carefully forward until the best possible belt guide position is reached.

#### **Backrest width**

Adjustable backrest width: before installing a child restraint system in the front passenger seat, open the backrest width completely. Do not change the backrest width again and do not call up a memory position.

# **Child seat security**



The safety belts in the rear and the front passenger safety belt can be permanently locked to fasten child restraint systems.

# Locking the safety belt

- 1. Pull out the belt strap completely.
- 2. Secure the child restraint system with the safety belt.
- 3. Allow the belt strap to be pulled in and pull it tight against the child restraint system. The safety belt is locked.

# Unlocking the safety belt

- 1. Unbuckle the safety belt buckle.
- 2. Remove the child restraint system.
- 3. Allow the belt strap to be pulled in completely.

# **LATCH** child restraint fixing system

#### General information

LATCH: Lower Anchors and Tether for Children. Pay attention to the specifications and the operating and safety information from the child restraint system manufacturer when selecting, installing, and using LATCH child restraint fixing systems.

### Mounts for the lower LATCH anchors

#### General information

The lower anchors may be used to attach the CRS to the vehicle seat up to a combined child and CRS weight of 65 lbs/30 kg when the child is restrained by the internal harnesses.

#### Safety information



#### Warning

If the LATCH child restraint fixing systems are not correctly engaged, the protective effect of the LATCH child restraint fixing system can be limited. There is a risk of injuries or danger to life. Make sure that the lower anchors are securely engaged and that the LATCH child restraint fixing system fits securely against the backrest.





#### **Position**

#### **Symbol**

#### Meaning



The corresponding symbol shows the mounts for the lower I ATCH anchors

Seats equipped with lower anchors are marked with a pair. (2). of LATCH symbols.

For vehicles equipped with a middle seat:

It is not recommended to use the inner lower anchors of standard outer LATCH positions to fasten a child restraint system on the middle seat. Use the vehicle safety belt instead for the middle seat.



Attach to the lower LATCH anchors located behind the indicated covers.

#### For opening:

- 1. Press on the flap, arrow.
- 2. Open flap to the top.

# **Before installing LATCH child** restraint fixing systems

Pull the safety belt away from the area of the child restraint system.

# Assembly of LATCH child restraint fixing systems

- 1. Install child restraint system, see manufacturer's information.
- 2. Ensure that both LATCH anchors are properly connected.

# **Child restraint systems** with tether strap

# **Safety information**



#### ⚠ Warning

If the upper retaining strap is incorrectly used for the child restraint system, the protective effect can be reduced. There is a risk of injury. Make sure that the upper retaining strap does not run over sharp edges and is not twisted as it passes the upper anchor.



# Marning

If the rear backrest is not locked, the protective effect of the child restraint system is limited or there is none. In certain situations, for instance braking maneuvers or in case of an accident. the rear backrest can fold forward. There is a risk of injuries or danger to life. Make sure that the rear backrests are locked.



#### ⚠ NOTICE

The anchors for the upper retaining straps of child restraint systems are only provided for these retaining straps. When other objects are mounted, the anchors can be damaged. There is a risk of damage to property. Only mount child restraint systems to the upper anchors.




#### **Anchors**



The respective symbol shows the anchor for the upper retaining strap. Seats with an upper top tether are marked with this symbol. It can be found on the rear

seat backrest or the rear window shelf.

# Routing the retaining strap

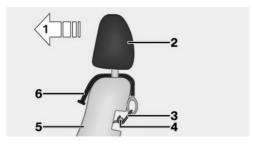

- 1 Direction of travel
- 2 Head restraint
- 3 Hook for upper retaining strap
- 4 Anchor
- 5 Seat backrest
- 6 Upper retaining strap

# Attaching the upper retaining strap to the anchor

- 1. Raise the head restraint, if needed.
- Guide the upper retaining strap between the supports or along both sides of the head restraint to the anchor.

For the middle seat, guide it over or along both sides of the head restraint to the anchor where applicable.

- 3. If there is a retaining strap, run it between the backrest and the cargo cover.
- Attach the hook of the retaining strap to the anchor.
- 5. Tighten the retaining strap by pulling it down.
- 6. Lower and lock head restraints as needed.

# Locking the doors and windows in the rear

#### General information

In certain situations it may be advisable to secure the rear doors and windows, for instance when transporting children.

#### **Doors**



Push the locking lever on the rear doors up.

The door can now be opened from the outside only.

# Safety switch for the rear



Press the button on the driver's door.

This locks various functions so that they cannot be operated from the rear. Safety switch, refer to page 100.



# **Driving**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# **Start/Stop button**

# Concept



Pressing the Start/Stop button switches drive-ready state on or off, refer to page 41.

Steptronic transmission: the drive-ready state is switched on

when you depress the brake pedal while pressing the Start/Stop button.

Pressing the Start/Stop button again switches drive-ready state back off and standby state, refer to page 41, is switched back on.

# **Driving away**

- 1. Switch on drive-ready state.
- 2. Apply drive mode.
- 3. Release the parking brake.
- 4. Drive away.

# **Drive-ready state**

# **Safety information**

#### ♠ DANGER

If the exhaust pipe is blocked or ventilation is insufficient, harmful exhaust gases can enter into the vehicle. The exhaust gases contain pollutants which are colorless and odorless. In enclosed areas, exhaust gases can also accumulate outside of the vehicle. There is danger to life. Keep the exhaust pipe free and ensure sufficient ventilation.

#### Marning

An unsecured vehicle can begin to move and possibly roll away. There is a risk of accident. Before exiting, secure the vehicle against roll-

In order to ensure that the vehicle is secured against rolling away, follow the following:

- Set the parking brake.
- > On uphill grades or on a downhill slope, turn the front wheels in the direction of the curh
- ▷ On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.



#### **∧** NOTICE

In the case of repeated starting attempts or repeated starting in quick succession, the fuel is not burned or is inadequately burned. The catalytic converter can overheat. There is a risk of damage to property. Avoid repeated starting in quick succession.



# Switching on drive-ready state

#### **Steptronic transmission**

- 1. Depress the brake pedal.
- 2. Press the Start/Stop button.

The ignition is activated automatically for a brief time and is stopped as soon as the engine starts.

Most of the indicator/warning lights in the instrument cluster light up for a varied length of time.

## **Diesel engine**

If the engine is cold and temperatures are below approx. 32 °F/0 °C, the start process may be delayed somewhat due to automatic preheating.



A Check Control message with yellow indicator light is displayed.

Depending on the motorization, the full drive power may not be available for few minutes after starting the engine. In this case, the vehicle will not accelerate as usual.

#### **Gasoline engine**

Depending on the motorization, the full drive power may not be available for approximately 30 seconds after starting the engine. In this case, the vehicle will not accelerate as usual.

### Display in the instrument cluster

When drive-ready state is switched on, the tachometer shows the current engine speed.

# Switching off drive-ready state

# **Steptronic transmission**

- Engage selector lever position P with the vehicle stopped.
- Press the Start/Stop button.
   The engine is switched off.
- 3. Set the parking brake.

# **Auto Start/Stop function**

# Concept

The Auto Start/Stop function helps save fuel. The system switches off the engine during a stop, for instance in traffic congestion or at traffic lights. Drive-ready state remains switched on. The engine starts automatically for driving off.

#### **General information**

After each engine start using the Start/Stop button, the Auto Start/Stop function is ready. The function is activated from speeds of approx. 3 mph/5 km/h.

Depending on the selected driving mode, refer to page 139, the system is automatically activated or deactivated.

# **Engine stop**

#### **Functional requirements**

#### Steptronic transmission

The engine is switched off automatically during a stop under the following conditions:

- The selector lever is in selector lever position D.
- The brake pedal remains pressed while the vehicle is stationary or the vehicle is held by Automatic Hold.
- The driver's safety belt is buckled or the driver's door is closed.

# Steptronic transmission: manual engine stop

If the engine was not switched off automatically when the vehicle stopped, the engine can be switched off manually:

- ▶ Press the brake pedal forcefully again from the current pedal position.
- ▶ Engage selector lever position P.



If all functional preconditions are fulfilled, the engine switches off.

# Air conditioner when the engine is switched off

The air flow from the air conditioner is reduced when the engine is switched off.

### Displays in the instrument cluster

#### General information



The display in the tachometer indicates that the Auto Start/Stop function is ready for an Automatic engine start.



The display indicates that the conditions for an automatic engine stop have not been met.

#### Total time with switched-off engine



ECO PRO, refer to page 284, driving mode: depending on the vehicle equipment, the total time that the engine has been switched off using the Auto Start/

Stop function is displayed on an automatic engine stop.

The total time is automatically reset every time the vehicle is refueled.

#### **Functional limitations**

The engine is not switched off automatically in the following situations:

- ▶ In case of a steep downhill grade.
- Brake not engaged strongly enough.
- ➤ The external temperature is high and automatic climate control is running.
- ➤ The car's interior has not yet been heated or cooled to the required level.

- Where there is a risk of window condensation when the automatic climate control is switched on.
- ▶ Engine or other parts not at operating temperature.
- ▶ Engine cooling is required.
- ➤ The wheels are at a sharp angle or the steering wheel is being turned.
- ▶ Vehicle battery is heavily discharged.
- At higher elevations.
- ▶ The hood is unlocked.
- ▶ HDC Hill Descent Control is activated.
- ▶ The parking assistant is activated.
- Stop-and-go traffic.
- Steptronic transmission: selector lever position in N or R.
- ▶ After driving in reverse.
- Use of fuel with high ethanol content.

# Starting the engine

### **Functional requirements**

#### Steptronic transmission

The engine starts automatically under the following preconditions:

- ▶ By releasing the brake pedal.
- ▶ When Automatic Hold is activated: press the accelerator pedal.

### **Driving off**

After the engine starts, accelerate as usual.

# Safety mode

After the engine switches off automatically, it will not start again automatically if any one of the following conditions are met:

- ➤ The driver's safety belt is unbuckled and the driver's door is open.
- The hood was unlocked.

Some indicator lights light up for a varied length of time.

The engine can only be started via the Start/Stop button.

#### **System limits**

Even if driving off was not intended, the deactivated engine starts up automatically in the following situations:

- ▷ Excessive warming of the car's interior when the air conditioning is switched on.
- Excessive cooling of the car's interior when the heating is switched on.
- Where there is a risk of window condensation when the automatic climate control is switched on.
- ▶ The steering wheel is turned.
- Steptronic transmission:
   Change from selector lever position D to N or R.
- Steptronic transmission:
   Change from selector lever position P to N,
   D, or R.
- ▶ Vehicle battery is heavily discharged.
- Start of an oil level measurement.

# Intelligent Auto Start/Stop function

Depending on the vehicle equipment and country-specific version, the vehicle features a variety of sensors for assessing the traffic situation. The Intelligent Auto Start/Stop function uses this information to adapt to various traffic situations in a proactive manner.

For instance, this applies to the following situations:

If a situation is detected in which the stopping time is expected to be very short, the engine is not switched off automatically. A message appears on the Control Display, depending on the situation. ▶ If a situation is detected in which the vehicle needs to drive off immediately, the engine is started automatically.

The function may be restricted if the navigation data is invalid, outdated or not available, for example.

# Activating/deactivating the system manually

#### Concept

The engine is not automatically switched off.

The engine is started during an automatic engine stop.

### **Using the button**





Press the button.

# Steptronic transmission: via selector lever position

The Auto Start/Stop function is also deactivated in selector lever position M/S.

# Via the Driving Dynamics Control

The Auto Start/Stop function is also deactivated in SPORT driving mode of the Driving Dynamics Control.

### **Display**

- LED comes on: auto Start/Stop function is deactivated.
- ▶ LED goes out: auto Start/Stop function is activated.

# Switching off the vehicle during an automatic engine stop

#### General information

During an automatic engine stop, the vehicle can be switched off permanently, for instance when leaving it.

#### Steptronic transmission

- 1. Press the Start/Stop button.
  - Drive-ready state is switched off.
  - Standby state is switched on.
  - Selector lever position P is engaged automatically.
- 2. Set the parking brake.

#### **Automatic deactivation**

#### **General information**

In certain situations, the Auto Start/Stop function is deactivated automatically for safety reasons. for instance if no driver is detected.

#### Malfunction

The Auto Start/Stop function no longer switches off the engine automatically. A Check Control message is displayed. It is possible to continue driving. Have the system checked by a dealer's service center or another qualified service center or repair shop.

# **Parking brake**

# Concept

The parking brake is used to prevent the vehicle from rolling when it is parked.

# **Safety information**

#### Marning

An unsecured vehicle can begin to move and possibly roll away. There is a risk of accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, follow the following:

- Set the parking brake.
- > On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- > On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.



### Marning

Unattended children or animals in the vehicle can cause the vehicle to move and endanger themselves and traffic, for instance due to the following actions:

- ▶ Pressing the Start/Stop button.
- > Releasing the parking brake.
- > Opening and closing the doors or windows.
- ▶ Engaging selector lever position N.
- ▶ Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the vehicle key with you when exiting and lock the vehicle.







Parking brake

# **Setting**

### With a stationary vehicle



Pull the switch.

The LED lights up.



The indicator light in the instrument cluster illuminates red. The parking brake is set.

## While driving

To use as emergency brake while driving: Pull the switch and hold it. The vehicle brakes hard while the switch is being pulled.



The indicator light in the instrument cluster illuminates red, a signal sounds, and the brake lights illuminate.

A Check Control message is displayed.

If the vehicle is slowed down to a speed of approx. 2 mph/3 km/h the parking brake is set.

# Releasing

### **Releasing manually**

1. Switch on drive-ready state.



Steptronic transmission: press the switch while the brake is pressed or selector lever position P is set.

The LED and indicator light go out.

The parking brake is released.

#### Automatic release

The parking brake is released automatically when you drive away.

The LED and indicator light go out.

#### **Automatic Hold**

#### Concept

Steptronic transmission:

This system assists the driver by automatically setting and releasing the brake, such as when moving in stop-and-go traffic.

The vehicle is automatically held in place when it is stationary.

On uphill grades the system prevents the vehicle from rolling backward when driving off.

#### General information

Under the following conditions, the parking brake is automatically engaged:

- Drive-ready state is switched off.
- The driver's door is opened while the vehicle is stationary.
- ➤ The moving vehicle is brought to a standstill using the parking brake.

### **Display**



The indicator light changes from green to red.





# **Safety information**

## Marning

An unsecured vehicle can begin to move and possibly roll away. There is a risk of accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, follow the following:

- Set the parking brake.
- > On uphill grades or on a downhill slope. turn the front wheels in the direction of the curb.
- > On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.

# **△** Warning

Unattended children or animals in the vehicle can cause the vehicle to move and endanger themselves and traffic, for instance due to the following actions:

- ▶ Pressing the Start/Stop button.
- Releasing the parking brake.
- > Opening and closing the doors or windows.
- ▶ Engaging selector lever position N.
- ▶ Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the vehicle key with you when exiting and lock the vehicle.

#### ∧ NOTICE

If the vehicle is stationary, Automatic Hold engages the parking brake and prevents the vehicle from rolling in a vehicle wash. There is a risk of damage to property. Deactivate Automatic Hold prior to entering the vehicle wash.

#### Overview



Automatic Hold

#### **Establishing function readiness of Automatic Hold**

1. Switch on drive-ready state.



Press the button.

The LED lights up.

AUTO H

The indicator light lights up green.

Automatic Hold is functional.

After every new vehicle start, the last selected setting is active.

### **Automatic Hold holding the vehicle**

Function readiness is established and the driver's door is closed.

After stepping on the brake pedal, for instance when stopping at a traffic light, the vehicle is automatically secured against rolling.



The indicator light lights up green.

# **Driving off**

Step on the accelerator pedal to drive off.

The brake is released automatically and the indicator light is no longer illuminated.



# Activating the parking brake automatically

The parking brake is automatically set if driveready state is switched off while the vehicle is being held by Automatic Hold or if the vehicle is exited.



The indicator light changes from green to red.

The parking brake is not set automatically, if the drive-ready state is switched off, while the vehicle is coasting to a halt. Automatic Hold is deactivated.

#### **Switching function readiness off**



Press the button.

The LED goes out.

The indicator light goes out.

AUTO H

Automatic Hold is switched off.

If the vehicle is being held by Automatic Hold, press additionally on the brake pedal, when switching off.

# **Malfunction**

If the parking brake fails or malfunctions, secure the vehicle against rolling before exiting.

A Check Control message is displayed.

Secure the vehicle against rolling away, for instance with a wheel chock, after existing the vehicle.

# After a power failure

To reestablish parking brake functionality after a power failure:

- 1. Switch on standby state.
- 2. Pull the switch while stepping on the brake pedal or selector lever position P is set and then push.

This process may take a few seconds. Some mechanical sounds associated with this process are normal.



The indicator light is no longer illuminated as soon as the parking brake is ready for operation again.

# Turn signal, high beams, headlight flasher

# **Turn signal**

#### Turn signal in exterior mirror

When driving and during operation of the turn signals or hazard warning system, do not fold in the exterior mirrors, so that the signal lights on the exterior mirror are easy to see.

### **Using turn signals**



Press the lever past the resistance point.

# Triple turn signal activation

Lightly tap the lever up or down.

The triple turn signal duration can be adjusted.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Exterior lighting"

- 5. "One-touch turn signal"
- 6. Select the desired setting.

The setting is stored for the driver profile currently used.

#### Signaling briefly

Press the lever to the resistance point and hold it there for as long as you want the turn signal to flash.

# High beams, headlight flasher

Push the lever forward or pull it backward.



- High beams on, arrow 1. The high beams light up when the low beams are switched on.
- ▶ High beams off/headlight flasher, arrow 2.

# Wiper system

### **General information**

Do not use the wipers if the windshield is dry, as this may damage the wiper blades or cause them to become worn more quickly.

# **Safety information**



If the wipers start moving in the folded away state, body parts can be jammed or damage may occur to parts of the vehicle. There is a risk of injury or risk of damage to property. Make

sure that the vehicle is switched off when the wipers are in the folded away state and the wipers are folded in when switching on.

#### ∧ NOTICE

If the wipers are frozen to the windshield, the wiper blades can be torn off and the wiper motor can overheat when switching on. There is a risk of damage to property. Defrost the windshield prior to switching the wipers on.

# Switching on



Press the lever up until the desired position is reached.

- ▶ Resting position of the wipers, position 0.
- Rain sensor, position 1.
- Normal wiper speed, position 2.
- ▶ Fast wiper speed, position 3.

When travel is interrupted with the wiper system switched on: when travel continues, the wipers resume at their previous speed.

# Switching off and brief wipe





- Switching off: press the lever down until it reaches its standard position.
- ▶ Brief wipe: press the lever down from the standard position.

The lever automatically returns to its initial position when released.

#### Rain sensor

### Concept

The rain sensor automatically controls the time between wipes depending on the intensity of the rainfall

#### **General information**

The sensor is located on the windshield, directly in front of the interior mirror.

# **Safety information**

#### ∧ NOTICE

If the rain sensor is activated, the wipers can accidentally start moving in vehicle washes. There is a risk of damage to property. Deactivate the rain sensor in vehicle washes.

# **Activating**



Press the lever up once from its standard position, arrow 1.

Wiping is started.

The LED in the wiper lever is illuminated.

In frosty conditions, wiper operation may not start.

#### **Deactivating**

Press the lever back into the standard position.

### Adjusting the rain sensor sensitivity



Turn the thumbwheel to adjust the sensitivity of the rain sensor.

Upward: high rain sensor sensitivity.

Downward: low rain sensor sensitivity.

# Windshield washer system

## Safety information



# ▲ Warning

The washer fluid can freeze onto the window at low temperatures and obstruct the view. There is a risk of accident. Only use the washer systems, if the washer fluid cannot freeze. Use washer fluid with antifreeze, if needed.



#### ∧ NOTICE

When the washer fluid reservoir is empty, the wash pump cannot work as intended. There is a risk of damage to property. Do not use the washer system when the washer fluid reservoir is empty.

### Cleaning the windshield



Pull the lever.

The system sprays washer fluid on the windshield and activates the wipers briefly.

#### Windshield washer nozzles

The windshield washer nozzles are automatically heated while standby state is switched on.

# **Rear window wiper**

#### Overview



# Switching on

Turn the outer switch upward.

- ▶ Resting position of the wiper, position 0.
- ▶ Intermittent mode, arrow 1. When reverse gear is engaged, the system switches to continuous operation.

#### Clean the rear window

Turn the outer switch in the desired direction.

- ▶ In resting position: turn the switch downward, arrow 3. The switch automatically returns to its idle position when released.
- ▶ In intermittent mode: turn the switch further. arrow 2. The switch automatically returns to its interval position when released.

The function is deactivated if the washer fluid reservoir level is low

### Fold-away position of the wipers

#### Concept

The fold-away position enables the wipers to be folded away from the windshield.

#### General information

Important, for instance when changing the wiper blades or for folding away under frosty conditions.

## Safety information



#### Marning

If the wipers start moving in the folded away state, body parts can be jammed or damage may occur to parts of the vehicle. There is a risk of injury or risk of damage to property. Make sure that the vehicle is switched off when the wipers are in the folded away state and the wipers are folded in when switching on.



#### ∧ NOTICE

If the wipers are frozen to the windshield, the wiper blades can be torn off and the wiper motor can overheat when switching on. There is a risk of damage to property. Defrost the windshield prior to switching the wipers on.

# Folding away the wipers

1. Switch on standby state.

2. Press and hold the wiper lever down, until the wipers stop in a close to vertical position.



3. Fold the wipers all the way away from the windshield.



# Folding down the wipers

After the wipers are folded back down, the wiper system must be reactivated.

- 1. Fold the wipers back down onto the wind-
- 2. Switch on standby state and press and hold the wiper lever down again.
- 3. Wipers return to their resting position and are ready again for operation.

# Washer fluid

### **General information**

All washer nozzles are supplied from one reservoir.

Use a mixture of tap water and windshield washer concentrate. If desired, a windshield washer concentrate containing antifreeze can be used.

Recommended minimum fill quantity: 0.2 US gal/1 liter.

# Safety information

#### Marning

Some antifreeze agents can contain harmful substances and are flammable. There is a risk of fire and a risk of injury. Follow the instructions on the containers. Keep antifreeze away from ignition sources. Do not refill operating materials into different bottles. Store operating materials out of reach of children.

United States: the washer fluid mixture ratio is regulated by the U.S. EPA and many individual states; do not exceed the allowable washer fluid dilution ratio limits that apply. Follow the usage instructions on the washer fluid container.

Use of BMW's Windshield Washer Concentrate or the equivalent is recommended.



#### Warning

Washer fluid can ignite and catch fire on contact with hot engine parts. There is a risk of injury or risk of damage to property. Only add washer fluid when the engine is cooled down. Next, fully close the lid of the washer fluid reservoir.



#### ⚠ NOTICE

Silicon-containing additives in the washer fluid for the water-repelling effect on the windows can lead to damage to the washing system. There is a risk of damage to property. Do not add silicon-containing additives to the washer fluid.



### ∧ NOTICE

Mixing different windshield washer concentrates or antifreeze can damage the washing system. There is a risk of damage to property. Do not mix different windshield washer concentrates or antifreeze. Follow the information and mixing ratios provided on the containers.

#### Overview



The washer fluid reservoir is located in the engine compartment.

#### Malfunction

The use of undiluted windshield washer concentrate or alcohol-based antifreeze can lead to incorrect readings at temperatures below +5 °F/-15 °C.

# **Steptronic transmission**

# Concept

The Steptronic transmission combines the functions of an automatic transmission with the possibility of manual shifting, if needed.

# **Safety information**

#### Marning

An unsecured vehicle can begin to move and possibly roll away. There is a risk of accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, follow the following:

- Set the parking brake.
- > On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- > On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.

# **Selector lever positions**

#### Drive mode D

Selector lever position for normal vehicle operation. All gears for forward travel are activated automatically.

#### R is reverse

Engage selector lever position R only when the vehicle is stationary.

#### Neutral N

The vehicle may be pushed or roll without power, for instance in vehicle washes, refer to page 135, in selector lever position N.

# Parking position P

Selector lever position, for instance for parking the vehicle. The transmission blocks the drive wheels in selector lever position P.

Engage selector lever position P only when the vehicle is stationary.

Selector lever position P is engaged automatically in situations such as the following:

1

- After the drive-ready state is switched off and selector lever position R, D or M/S is engaged.
- ▶ If the driver's safety belt is unbuckled, the driver's door is opened, and the brake pedal is not pressed while the vehicle is stationary and selector lever position D, M/S or R is engaged.
- After the standby state has been switched off when selector lever position N is engaged.

# **Engaging selector lever positions**

#### **General information**

To prevent the vehicle from creeping after you select a drive mode, maintain pressure on the brake pedal until you are ready to start.

#### **Functional requirements**

Only when the drive-ready state is switched on and the brake pedal is depressed is it possible to change from selector lever position P to another selector lever position.

The selection lever position P cannot be changed until all technical requirements are met.

# **Engaging selector lever position D, N, R**

A selector lever lock prevents the following faulty operation:

- Unintentional shifting into selector lever position R.
- Unintentional shifting from selector lever position P into another selector lever position.
- 1. Fasten driver's safety belt.

Press and hold the button to release the selector lever lock.



Push the selector lever in the desired direction, past a resistance point, if needed. The selector lever automatically returns to the center position when released.



### **Engaging selector lever position P**



Press button P.

# Rolling or pushing the vehicle

#### General information

In some situations, the vehicle is to roll without its own power for a short distance, for instance in a vehicle wash, or be pushed.



### **Engaging selector lever position N**

- 1. Switch on drive-ready state while pressing on the brake pedal.
- 2. If necessary, release the parking brake.
- 3. If necessary, switch off Automatic Hold, refer to page 127.
- 4. Depress the brake pedal.
- 5. Touch the selector lever lock and engage selector lever position N.
- 6. Switch off drive-ready state.

In this way, standby state remains switched on, and a Check Control message is displayed.

The vehicle can roll.



#### ∧ NOTICE

Selector lever position P is automatically engaged when standby state is switched off. There is a risk of damage to property. Do not switch standby state off in vehicle washes.

Selector lever position P is engaged automatically after approximately 35 minutes.

If there is a malfunction, you may not be able to change the selector lever position.

Electronically unlock the transmission lock, if needed, refer to page 138.

#### **Kickdown**

Kickdown is used to achieve maximum driving performance.

Step on the accelerator pedal beyond the resistance point at the full throttle position.

# Sport program M/S

# Concept

The shifting points and shifting times in the Sport program are designed for a sportier driving style. The transmission, for instance shifts up later and the shifting times are shorter.

#### **Activating the Sport program**



Press the selector lever to the left from selector lever position D.

The engaged gear is displayed in the instrument cluster, for instance S1.

The sport program of the transmission is acti-

### **Ending the Sport program**

Push the selector lever to the right.

D is displayed in the instrument cluster.

# Manual mode M/S

### Concept

Manual gear-shifting is possible in manual mode.

# **Activating manual mode**

1. Press the selector lever to the left from selector lever position D, arrow 1.



2. Push the selector lever forward or pull it backward, arrows 2.

Manual mode becomes active and the gear is changed.

The engaged gear is displayed in the instrument cluster, for instance M1.

#### **Shifting**

- ▶ To shift down; press the selector lever forward.
- ▶ To shift up: pull the selector lever rearwards.

The transmission continues shifting automatically in certain situations, for instance when speed limits are reached.

#### **Steptronic Sport transmission:** prevent automatic upshifting in M/S manual mode

If driving mode SPORT, refer to page 140, is selected, the Steptronic Sport transmission does not automatically upshift in M/S manual mode once the maximum speed is reached.

Depending on the BMW M drive configuration, this function is active independently of the drivina mode.

In addition, there is no downshifting for kickdown.

### **Ending the manual mode**

Push the selector lever to the right.

D is displayed in the instrument cluster.

### Shift paddles

# Concept

The shift paddles on the steering wheel allow you to shift gears quickly while keeping both hands on the steering wheel.

#### **General information**

#### Shifting

The vehicle only shifts at suitable engine and road speeds.

#### Short-term manual mode

In selector lever position D, actuating a shift paddle switches into manual mode temporarily.

After conservative driving in manual mode without acceleration or shifting via the shift paddles for a certain amount of time, the transmission switches back to automatic mode.

It is possible to switch into automatic mode as follows:

- Pull and hold right shift paddle.
- In addition to the briefly pulled right shift paddle, briefly pull the left shift paddle.

#### Continuous manual mode

In selector lever position S, actuating a shift paddle switches into manual mode permanently.

#### Steptronic Sport transmission

With the appropriate transmission version, the lowest possible gear can be selected by simultaneously activating kickdown and operating the left shift paddles. This is not possible in shortterm manual mode.

## Shifting



- ▶ To shift up: briefly pull right shift paddle.
- ▶ To shift down: briefly pull left shift paddle.
- ▶ The lowest possible gear can be selected by pulling and holding the left shift paddle.

The selected gear is briefly displayed in the instrument cluster, followed by the current gear.



# 1

# Displays in the instrument cluster



The selector lever position is displayed, for example P.

# Electronic unlocking of the transmission lock

#### General information

Electronically unlock the transmission lock to maneuver vehicle from a danger area.

Unlocking is possible, if the starter can spin the engine.

Before unlocking the transmission lock, set the parking brake to prevent the vehicle from rolling away.

### **Engaging selector lever position N**

- 1. Press and hold down brake pedal.
- Press the Start/Stop button. The starter must audibly start. Hold the Start/Stop button pressed.
- With your free hand, press the button on the selector lever, arrow 1, and press the selector lever into selector lever position N and hold, arrow N, until selector lever position N is displayed in the instrument cluster.

A Check Control message is displayed.



4. Release Start/Stop button and selector lever.

- 5. Release brake, as soon as the starter stops.
- 6. Maneuver the vehicle from the danger area and secure it against moving on its own.

For additional information, see the chapter on tow-starting and towing, refer to page 355.

#### **Launch Control**

#### Concept

Launch Control enables optimum acceleration on surfaces with good traction under dry surrounding conditions.

#### **General information**

The use of Launch Control causes premature component wear since this function represents a very heavy load for the vehicle.

Do not use Launch Control during the break-in, refer to page 274, period.

Do not steer the steering wheel when driving off with Launch Control.

## **Functional requirements**

Launch Control is available when the engine is at operating temperature. The engine is at operating temperature after an uninterrupted trip of at least 6 miles/10 km.

#### Start with launch control


1. Switch on drive-ready state.



Press the button.

TRACTION is displayed in the instrument cluster and the indicator light for DSC OFF lights up.

- 3. Engage selector lever position S.
- 4. With the left foot, forcefully press down on the brake.
- Press and hold down the accelerator pedal beyond the resistance point at the full throttle position, kickdown.

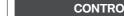

A flag symbol is displayed in the instrument cluster.

6. The starting engine speed adjusts. Within 3 seconds, release the brake.

## Repeated use during a trip

After Launch Control has been used, the transmission must cool down for approx. 5 minutes before Launch Control can be used again. Launch Control adjusts to the surrounding conditions, when used again.

### **After using Launch Control**

To increase vehicle stability, activate DSC Dynamic Stability Control again as soon as possible.

### **System limits**

An experienced driver may be able to achieve better acceleration values in DSC OFF mode.

# **Driving Dynamics Control**

# Concept

The Driving Dynamics Control influences the driving dynamics properties of the vehicle. The vehicle can be adjusted depending on the situation using various driving modes.

#### General information

The following systems are affected, for instance:

- ▶ Engine characteristics.
- ▶ Steptronic transmission.
- Adaptive chassis.
- Steering.
- Adaptive M chassis.
- Display in the instrument cluster.
- Cruise control.

When drive-ready state is switched on, the COMFORT driving mode is selected automatically.

#### Overview



## Displays in the instrument cluster



The selected driving mode is displayed in the instrument cluster.

# **Driving modes**

Button	Driving mode	Configuration
SAGE STORES CONTROL CO	SPORT SPORT PLUS	INDIVIDUAL
	COMFORT	
	ECO PRO	INDIVIDUAL
	ADAPTIVE	

### **Driving modes in detail**

#### **COMFORT**

#### Concept

Balanced tuning between dynamic and efficient driving.

#### Switching on



Press the button repeatedly until COM-FORT is displayed in the instrument

cluster.

# 1

#### **SPORT**

#### Concept

Dynamic tuning for higher agility with an optimized chassis and suspension.

#### Switching on

sport

Press the button repeatedly until SPORT is displayed in the instrument

#### SPORT INDIVIDUAL

#### Concept

Individual settings can be adjusted in the SPORT INDIVIDUAL driving mode.

#### Configuration

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. If necessary, "Driving Experience Control"
- 4. "Configure SPORT INDIVIDUAL"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

Reset SPORT INDIVIDUAL to the standard settings:

"Reset to SPORT STANDARD".

#### **SPORT PLUS**

#### Concept

Dynamic tuning for maximum agility with an adjusted drive.

#### Switching on

SPORT

Press the button repeatedly until SPORT PLUS is displayed in the instru-

ment cluster.

#### **ECO PRO**

#### Concept

Efficient driving setting.

#### Switching on



Press the button repeatedly until ECO PRO is displayed in the instrument clus-

ter.

#### **ECO PRO INDIVIDUAL**

#### Concept

Individual settings can be adjusted in the ECO PRO INDIVIDUAL driving mode.

#### Configuration

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. If necessary, "Driving Experience Control"
- 4. "Configure ECO PRO INDIVIDUAL"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

Reset ECO PRO INDIVIDUAL to the standard settings:

"Reset to ECO PRO STANDARD".

#### **ADAPTIVE**

#### Concept

Comfort-oriented driving mode, whose tuning is automatically modified to the driving situation and driving style.

If the navigation system is active, upcoming road sections are considered.

The function may be restricted if the navigation data is invalid, outdated or not available, for example.





Press the button. ADAPTIVE is displayed in the instrument cluster.

# **INDIVIDUAL** configuration

#### **General information**

The individual configuration of the driving mode is stored for the active driver profile. The last set configuration is activated directly when the driving mode is called up again.

# Activating configuration of the driving mode

Press the button for the desired driving mode several times.





# **Displays**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.


# Instrument cluster

#### **General information**

Depending on the vehicle equipment, it may be possible to deactivate the display change in the instrument cluster via iDrive.

Some of the displays in the instrument cluster may differ from the illustrations in the Owner's Manual.

### **Overview**

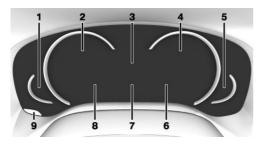

- 1 Fuel gauge 146
  Instrument cluster with enhanced features: range 148
- 2 Speedometer
- **3** Time 148

External temperature 148

Variable displays

Service requirements 148

4 Instrument cluster with enhanced features: tachometer 147
Instrument cluster with enhanced features:

ECO PRO displays 284

- **5** Engine temperature 147
- Navigation display
   Transmission display
   Status, Driving Dynamics Control 139
- 7 Check Control 143 Onboard Computer 152
- 8 Variable displays Speed Limit Info 150 Instrument cluster without enhanced features:

Range 148

9 Reset miles 153

# Instrument cluster with enhanced features: setting the operating mode

### **Concept**

Depending on the equipment, the instrument cluster can be set to three different operating modes in addition to the driving mode.

### **Adjusting**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"



- 5. Select the desired setting:
  - ▶ "STANDARD": all displays on the instrument cluster are active.
  - ▶ "REDUCED" all displays on the instrument cluster are reduced to the essential.
  - "INDIVIDUAL": all displays on the instrument cluster are active. Individual displays can be individually selected.

### **Configuring INDIVIDUAL**

- "Driving mode display": when the driving mode is switched into ECO PRO or SPORT, the instrument cluster automatically switches into the respective view.
- "Speed limit exceeded": if the speed recognized by Speed Limit Info is exceeded, the exceeded range is marked red in the speedometer.

# Instrument cluster without enhanced features: selecting displays in the instrument cluster

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Instrument panel"
- 5. Select the desired setting:
  - With navigation system:
     "Navigation": display the arrow view for the navigation in the instrument cluster.
  - "Road signs": display Speed Limit Info.

# **Check Control**

# Concept

The Check Control system monitors functions in the vehicle and notifies you of malfunctions in the monitored systems.

#### **General information**

A Check Control message is displayed as a combination of indicator or warning lights and text messages in the instrument cluster and, if applicable, in the Head-up Display.

In addition, an acoustic signal may sound and a text message may appear on the Control Display.

# Indicator/warning lights

#### Concept

Indicator/warning lights in the instrument cluster display the status of some functions in the vehicle and indicate when a malfunction is present in the monitored systems.

#### General information

The indicator/warning lights can light up in a variety of combinations and colors.

Several of the lights are checked for proper functioning and light up temporarily when drive-ready state is switched on.

### **Red lights**

#### Safety belt reminder



Indicator light flashes or is illuminated: safety belt on the driver or passenger side is not buckled. The safety belt re-

minder can also be activated if objects are placed on the front passenger seat.

Make sure that the safety belts are positioned correctly.





#### Safety belt reminder for rear seats



The safety belt is not buckled on the corresponding rear seat.

#### Airbag system



Airbag system and belt tensioner may not be working.

Have the vehicle checked immediately by a dealer's service center or another qualified service center or repair shop.

#### Parking brake



The parking brake is set.

For releasing the parking brake, refer to page 127.

#### **Brake system**



Braking system impaired. Continue to drive moderately.



Have the vehicle checked immediately BRAKE by a dealer's service center or another qualified service center or repair shop.

## **Yellow lights**

#### Anti-lock Braking System ABS



The Brake Assistant function may not activate. Avoid abrupt braking. Take the longer braking distance into account.

ABS Have the system immediately checked by a dealer's service center or another

qualified service center or repair shop.

### **DSC Dynamic Stability Control**



The indicator light flashes: DSC controls the drive and braking forces. The vehicle is stabilized. Reduce speed and modify

your driving style to the driving circumstances.

The indicator light lights up: DSC has malfunctioned.

Have the system immediately checked by a dealer's service center or another qualified service center or repair shop.

DSC, refer to page 195.

#### **DSC Dynamic Stability Control is** deactivated or DTC Dynamic Traction Control is activated



DSC is deactivated or DTC is activated. DSC, refer to page 195, and DTC, refer to page 197.

#### Flat Tire Monitor FTM



The Flat Tire Monitor signals a loss of tire inflation pressure in a tire.

Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers. Flat Tire Monitor, refer to page 322.

#### Tire Pressure Monitor TPM



The indicator light lights up: the Tire Pressure Monitor reports a low tire inflation pressure or a flat tire. Follow the information in the Check Control message.

The indicator light flashes and then continuously lights up; no flat tire or loss of tire inflation pressure can be detected.

- ▶ Interference caused by systems or devices with the same radio frequency; after leaving the area of the interference, the system automatically becomes active again.
- ▶ In the case of tires with special approval: TPM was unable to complete the reset. Reset the system again.
- ▶ A wheel without TPM wheel electronics is mounted: have it checked by a dealer's service center or another qualified service center or repair shop as needed.
- ▶ Malfunction: have the system checked by a dealer's service center or another qualified service center or repair shop.

Tire Pressure Monitor, refer to page 315.

#### Steering system



Steering system may not be working. Have the system checked by a dealer's service center or another qualified service center or repair shop.

#### **Emissions**



- ▶ The warning light lights up: Emissions are deteriorating. Have the vehicle checked as soon as possible.
- ▶ The warning light flashes under certain circumstances:

This indicates that there is excessive misfiring in the engine.

Reduce the vehicle speed and have the system checked immediately; otherwise, serious engine misfiring within a brief period can seriously damage emission control components, in particular the catalytic converter.

Socket for Onboard Diagnosis, refer to page 341.

#### **Green lights**

#### Safety belt reminder for rear seats



The safety belt is buckled on the corresponding rear seat.

#### Turn signal



Turn signal switched on.

Unusually rapid flashing of the indicator light indicates that a turn signal bulb has

failed.

Turn signal, refer to page 129.

#### Parking lights, headlight



Parking lights or headlights are switched

Parking light/low beams, automatic headlight control, refer to page 159.

#### Lane departure warning



The indicator light lights up: the system is activated. At least one lane marking was detected and warnings can be is-

sued.

Lane departure warning, refer to page 180.

#### Front fog lights



Front fog lights are switched on. Front fog lights, refer to page 163.

#### **High-beam Assistant**



High-beam Assistant is switched on.

High beams are switched on and off automatically depending on the traffic sit-

uation.

High-beam Assistant, refer to page 162.

#### Automatic Hold

Automatic Hold is activated. The vehicle is automatically held in place when it is stationary.

Automatic Hold, refer to page 127.

#### **Blue lights**

#### High beams




High beams are switched on.

High beams, refer to page 130.

#### 1

#### **Hiding Check Control messages**

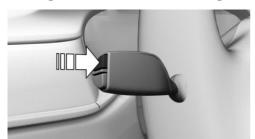

Press the button on the turn signal lever.

#### **Continuous display**

Some Check Control messages are displayed continuously and are not cleared until the malfunction is eliminated. If several malfunctions occur at once, the messages are displayed consecutively.

The messages can be hidden for approx. 8 seconds. After this time, they are displayed again automatically.

#### **Temporary display**

Some Check Control messages are hidden automatically after approx. 20 seconds. The Check Control messages are stored and can be displayed again later.

## **Displaying stored Check Control messages**

Via iDrive:

- 1. "My Vehicle"
- "Vehicle status"
- 3. Move the Controller to the left.
- 5. Select the SMS text message.

#### **Display**

#### **Check Control**



At least one Check Control message is displayed or stored.

#### SMS text messages

SMS text messages in combination with a symbol in the instrument cluster explain a Check Control message and the meaning of the indicator/warning lights.

#### **Supplementary SMS text messages**

Additional information, such as the reason for an error or malfunction or the required action, can be called up via Check Control.

With urgent messages the added text will be automatically displayed on the Control Display.

Depending on the Check Control message, further help can be selected.

Via iDrive:

- 1. "My Vehicle"
- "Vehicle status"
- 3. Move the Controller to the left.
- ↑ "Check Control"
- 5. Select the desired text message.
- 6. Select the desired setting.

#### Messages after trip completion

Certain messages displayed while driving are displayed again after drive-ready state is switched off.

#### **Fuel gauge**

#### Concept

The current fill level of the fuel tank is displayed.



#### **General information**

Vehicle tilt position may cause the display to vary.

Information on refueling, refer to page 292.

## Instrument cluster without enhanced features: display



An arrow beside the fuel pump symbol shows which side of the vehicle the fuel filler flap is on.

## Instrument cluster with enhanced features: display



An arrow beside the fuel pump symbol shows which side of the vehicle the fuel filler flap is on.

The current range is displayed as numerical value.

### Indicator light in the instrument cluster



The yellow indicator light illuminates, once the fuel reserve is reached.

#### **Tachometer**

Always avoid engine speeds in the red warning field. In this range, the fuel supply is reduced to protect the engine.

### Standby state and driveready state



The letters OFF in the tachometer indicate that drive-ready state is switched off and standby state is switched on.



The letters READY in the tachometer indicate that the Auto Start/Stop function is ready to start the engine automatically.

For further information, see Idle state, standby state, and drive-ready state, refer to page 41.

### **Engine temperature**

#### **Display**



- Cold engine: the pointer is at the low temperature end.
   Drive at moderate engine and vehicle speeds.
- Normal operating temperature: the pointer is in the middle or in the lower half of the temperature display.
- Hot engine: the pointer is at the high end of the temperature range. In addition, a Check Control message is displayed.

To check the coolant level, refer to page 338.

### Indicator light in the instrument cluster



A red indicator light is displayed.



#### **External temperature**

#### General information

If the indicator drops to +37 °F/+3 °C or lower, a signal sounds.

A Check Control message is displayed.

There is an increased risk of ice on roads.

#### **Safety information**



#### Marning

Even at temperatures above +37 °F/+3 °C there can be a risk of icy roads, for instance on bridges or shady sections of the road. There is a risk of accident. Modify your driving style to the weather conditions at low temperatures.

#### Time

The time is displayed in the instrument cluster. Setting the time and time format, refer to page 60.

#### Range

#### Concept

The range indicates the distance that can still be covered with the current fuel level.

#### General information

The estimated range available with the remaining fuel is permanently displayed in the instrument cluster.

With a low remaining range, a Check Control message is briefly displayed. With a dynamic driving style, for instance fast cornering, the engine function is not always ensured.

The Check Control message appears continuously below a range of approx. 30 miles/50 km.

#### **Safety information**

#### ∧ NOTICE

With a driving range of less than 30 miles/50 km the engine may no longer have sufficient fuel. Engine functions are not ensured anymore. There is a risk of damage to property. Refuel promptly.

#### Instrument cluster without enhanced features: display



The current range is displayed as numerical value at the bottom of the speedometer.

#### Instrument cluster with enhanced features: display



The current range is displayed as numerical value next to the fuel gauge.

### Service requirements

#### Concept

The function displays the service requirements and the corresponding maintenance scopes.

#### **General information**

After switching on drive-ready state, the instrument cluster briefly displays available driving distance or time to the next scheduled maintenance

A service advisor can read out the current service requirements from your vehicle key.

Some information on service requirements can also be shown on the BMW display key.



#### **Display**

### Detailed information on service requirements

More information on the type of service required may be displayed on the Control Display.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. Move the Controller to the left.
- 4. Service required"

Required maintenance procedures and legally mandated inspections are displayed.

5. Select an entry to call up detailed information.

#### **Symbols**

Symbols

Description

No service is currently required.



The deadline for scheduled maintenance or a legally mandated inspection is approaching.



The service deadline has already passed.

#### **Entering appointment dates**

Enter the dates for the mandatory vehicle inspections.

Make sure that the vehicle's date and time are set correctly.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. Move the Controller to the left.
- 4. Service required"
- 5. "Vehicle inspection"

- 6. "Date:"
- 7. Select the desired setting.

#### **Automatic Service Request**

Data regarding the service status or legally mandated vehicle inspections is automatically transmitted to your dealer's service center before your vehicle is due for service.

You can check when your dealer's service center was notified.

Via iDrive:

- 1. "My Vehicle"
- "Vehicle status"
- 3. Move the Controller to the left.
- 4. "Teleservice Call"

#### **Gear shift indicator**

#### Concept

The system recommends the most efficient gear for the current driving situation.

#### **General information**

Depending on the vehicle equipment and country version, the gear shift indicator is active in the manual mode of the Steptronic transmission and with manual transmission.

## **Steptronic transmission:** displaying

Suggestions to shift up or down are displayed in the instrument cluster.

On vehicles without a gear shift indicator, the engaged gear is displayed.



Example	Description
<b>M3</b>	Efficient gear is set.
<b>2</b> · 3	Shift into efficient gear.

### **Speed Limit Info**

#### **Speed Limit Info**

#### Concept

Speed Limit Info shows the current valid maximum speed in the instrument cluster.

#### **General information**

The camera in the area of the interior mirror detects traffic signs at the edge of the road as well as variable overhead sign posts.

Traffic signs with extra symbols are considered and compared with the vehicle's onboard data. The traffic sign will then be either displayed or ignored depending on the situation in the instrument cluster and the Head-up Display.

With the navigation system, the system takes into account the information stored in the navigation data and also displays speed limits present on routes without signs.

Speed limits when towing a trailer are not shown.

#### **Safety information**




#### Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### **Overview**

#### Camera

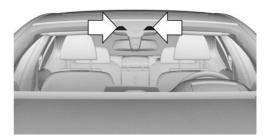

The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror

#### **Displaying Speed Limit Info**

#### **General information**

clean and clear.

Depending on the vehicle equipment, Speed Limit Info is displayed via the operating mode of the instrument cluster or via iDrive.

#### Display via operating mode of the instrument cluster

The Speed Limit Info displays are shown or hidden via the operating mode of the instrument cluster.

The Speed Limit Info is displayed in the following operating modes: "STANDARD" or "INDIVIDUAL"

Speed Limit Info is not displayed in the following operating mode: "REDUCED"

Adjusting the operating mode of the instrument cluster, refer to page 142.

#### Display via iDrive

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"

1

- 4. "Instrument panel"
- 5. "Road signs"

#### **Display**

#### **Speed Limit Info**



Depending on equipment: current speed limit.



Depending on equipment: Speed Limit Info not available.



#### **System limits**

The system may not be fully functional and may provide incorrect information in the following situations:

- ▶ In heavy fog, wet conditions, or snowfall.
- When signs are fully or partially concealed by objects, stickers or paint.
- When driving very close to the vehicle in front of you.
- When driving toward bright lights or strong reflections.
- When the windshield in front of the interior mirror is fogged over, dirty or covered by a sticker, etc.

- If the camera has overheated and been temporarily switched off due to excessively high temperatures.
- In the event of incorrect detection by the camera.
- ▶ If the speed limits or road data stored in the navigation system are incorrect.
- ▶ If the speed limits vary with the time of day and the day of the week.
- In areas not covered by the navigation system.
- ▶ When roads differ from the navigation, such as due to changes in road routing.
- ▶ In case of electronic traffic signs.
- ▶ When passing buses or trucks with traffic signs applied to them.
- ▶ If the traffic signs are non-conforming.
- ▶ When signs that are valid for a parallel road are detected.
- ▶ In the presence of country-specific signs and road configurations.
- During calibration of the camera immediately after vehicle delivery.

#### **Selection lists**

#### **General information**

Depending on your vehicle's equipment, the following can be displayed or operated using the buttons and the thumbwheel on the steering wheel and via the displays in the instrument cluster and the Head-up Display:

- Current audio source.
- Phone redial.



## Activating a list and adjusting the setting



On the right side of the steering wheel, turn the thumbwheel to activate the corresponding list.

- 1. Turn the thumbwheel and select the desired setting.
- 2. Press the thumbwheel.

#### **Display**



Depending on the equipment version, the list in the instrument cluster may differ from the illustration.

## Onboard Computer in the instrument cluster

#### Concept

The Onboard Computer displays different vehicle data in the instrument cluster, such as average values.

#### **Calling up information**



Press the button on the turn signal lever.

Information is displayed in the instrument cluster. Pressing the button repeatedly displays additional information.

#### Information at a glance

The following information can be displayed on the Onboard Computer:

- Miles and trip miles.
- Navigation data.
   When destination guidance is activated in the navigation system.
- Consumption display.
- Average consumption and average speed.
- Average consumption since delivery from the factory.
- ▶ Compass display for the driving direction.

#### Adjusting information for Onboard Computer

For some information of the Onboard Computer, it is possible to set whether it can be called up in the instrument cluster.

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Displays"
- 4. "Instrument panel"

1

- 5. "Onboard info"
- 6. Select the desired setting.

The setting is stored for the driver profile currently used.

#### Information in detail

#### **Odometer and trip odometer**

#### Displaying/resetting miles




Press the knob to display the trip miles.

When the drive-ready state is switched off, miles and trip miles are displayed.

Keep the knob pressed down to reset the trip miles.

#### **Display**

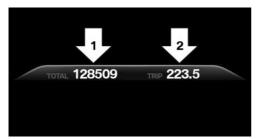

- Odometer, arrow 1.
- ▶ Trip odometer, arrow 2.

#### **Navigation data**

#### **General information**

The estimated time of arrival and the distance remaining to the destination are displayed if a destination is entered in the navigation system before the trip is started.

#### **Display**



- Time of arrival, arrow 1.
- ▶ Distance to destination, arrow 2.

#### **Consumption display**

#### Concept


During energy recovery, the kinetic energy of the vehicle is converted into electric energy during coasting. The vehicle battery is partially charged and fuel consumption can be reduced.

The current consumption displays the current consumption of fuel. Check whether you are currently driving in an efficient and environmentally-friendly manner.

#### General information

Energy recovery and current consumption can be displayed as bar displays in the Onboard Computer.

#### Display

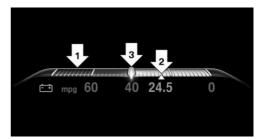

- Energy recovery, arrow 1.
- Average consumption, arrow 2.



▶ Current consumption, arrow 3.


### Average speed and average consumption

#### General information

Average speed and average consumption are calculated for the distance traveled since the last reset in the Onboard Computer.

Periods in which the vehicle is parked with the engine manually stopped are not included in the calculation of the average speed.

#### Resetting average values

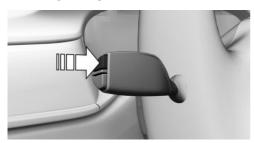

Press and hold the button on the turn signal lever.

#### Display



- ▶ Average speed, arrow 1.
- Average consumption, arrow 2.

## Onboard Computer on the Control Display

#### Concept

The Onboard Computer displays different vehicle data on the Control Display, such as average values.

#### **General information**

Two types of Onboard Computers are available on the Control Display:

- ▶ "Onboard info": average values, such as the consumption, are displayed. The values can be reset individually.
- "Trip computer": the values deliver an overview of a specific route and can be reset as often as necessary.

## Calling up the Onboard Computer or trip computer

Via iDrive:

- 1. "My Vehicle"
- 2. "Driving information"
- 3. "Onboard info" or "Trip computer"

### Resetting the Onboard Computer

Via iDrive:

- 1. "My Vehicle"
- 2. "Driving information"
- 3. "Onboard info"
- 4. "Consumption" or "Speed"
- 5. "OK"

#### Resetting the trip computer

- 1. "My Vehicle"
- 2. "Driving information"

1

- 3. "Trip computer"
- 4. Move the Controller to the left, if needed.
  - ▶ ☐ "Reset": all values are reset.
  - •+A "Automatic reset": all values are reset approx. 4 hours after the vehicle has come to a standstill.
- 5. If necessary, "OK"

### **Sport displays**

#### **General information**

Depending on the vehicle equipment, the current values for performance and torque can be displayed on the Control Display.

#### **Displays**

Via iDrive:

- 1. "My Vehicle"
- 2. "Technology in action"
- 3. "Sport displays"

#### **Speed warning**

#### Concept

A speed limit can be set that when reached will cause a warning to be issued.

#### **General information**

The warning is repeated if the vehicle speed exceeds the set speed limit again, after it has dropped below it by 3 mph/5 km/h.

#### **Adjusting**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Speed warning"
- 4. "Warning at:"

- 5. Turn the Controller until the desired speed is displayed.
- 6. Press the Controller.

#### **Activating/deactivating**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Speed warning"
- 4. "Speed warning"

## Setting your current speed as the speed warning

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Speed warning"
- 4. "Select current speed"

#### Vehicle status

#### **General information**

The status can be displayed and actions performed for several systems.

#### **Opening the vehicle status**

- 1. "My Vehicle"
- 2. "Vehicle status"



#### Information at a glance

Symbols	Description
(1)	"Flat Tire Monitor": status of the Flat Tire Monitor, refer to page 322.
(!)	"Tire Pressure Monitor": status of the Tire Pressure Monitor, refer to page 315.
₹~:	"Engine oil level": Electronic engine oil level check, refer to page 334.
숲	"Diesel exhaust fluid": BMW Advanced Diesel, refer to page 296.
$\triangle$	"Check Control": displaying stored Check Control mes- sages, refer to page 146.
	"Service required": displaying service requirements, refer to page 148.
<b>3</b> (0	"Teleservice Call": Service Request.

### **Head-up Display**

#### Concept

This system projects important information into the driver's field of vision, for instance the speed.

The driver can get information without averting his or her eyes from the road.

#### **General information**

Follow the information on cleaning the Head-up Display, refer to page 361.

#### **Overview**



#### Switching on/off

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Head-Up Display"
- 5. "Head-Up Display"

#### **Display**

#### Overview

The following information is displayed on the Head-up Display:

- Vehicle speed.
- Navigation instructions.
- ▶ Check Control messages.
- ▶ Selection list in the instrument cluster.
- Driver assistance systems.

Some of this information is only displayed briefly as needed.

#### Selecting the view

Various views are available for the Head-up Display.

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"

- 4. "Head-Up Display"
- 5. Select the desired setting:
  - ▶ "STANDARD": all displays in the Head-up Display are active.
  - ▶ "REDUCED": the displays in the Head-up Display are reduced to the minimum.
  - "INDIVIDUAL": all displays in the Head-up Display are active. Individual displays such as Check Control messages can be selected individually.

The setting is stored for the driver profile currently used.

### Selecting displays in the Head-up Display

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Head-Up Display"
- 5. "INDIVIDUAL"
- 6. Select the desired setting.

The setting is stored for the driver profile currently used.

#### **Setting the brightness**

The brightness is automatically adjusted to the ambient brightness.

The basic setting can be adjusted manually.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Head-Up Display"
- 5. "Brightness"
- Turn the Controller until the desired brightness is set.
- 7. Press the Controller.

When the low beams are switched on, the brightness of the Head-up Display can be additionally influenced using the instrument lighting.

#### **Adjusting the height**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Head-Up Display"
- 5. "Height"
- Turn the Controller until the desired height is reached.
- Press the Controller.

The setting is stored for the driver profile currently used.

The height of the Head-up Display can also be stored using the memory function, refer to page 113.

#### **Setting the rotation**

The Head-up Display view can be rotated.

Via iDrive:

- 1. "My Vehicle"
- "iDrive settings"
- 3. "Displays"
- 4. "Head-Up Display"
- 5. "Rotation"
- Turn the Controller until the desired setting is selected.
- 7. Press the Controller.

#### Visibility of the display

The visibility of the displays in the Head-up Display is influenced by the following factors:

- Seat position.
- ▷ Objects on the cover of the Head-up Display.
- Sunglasses with certain polarization filters.
- Wet roads.





Unfavorable light conditions.

If the image is distorted, have the basic settings checked by a dealer's service center or another qualified service center or repair shop.

#### **Special windshield**

The windshield is part of the system.

The shape of the windshield makes it possible to display a precise image.

A film in the windshield prevents double images from being generated.

For this reason, it is strongly suggested to have the special windshield replaced by a dealer's service center or another qualified service center or repair shop, if necessary.



### Lights

## Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

#### **Overview**

#### Switches in the vehicle



The light switch element is located next to the steering wheel.

Symbol	Function
<b></b> ₽D	Front fog lights.
0	Lights off.  Daytime running lights.
∋DQ€	Parking lights.

Symbol	Function
≋Γ <b>Δ</b>	Automatic headlight control.
	Adaptive light functions.
<b></b> ■D	Low beams.
(-; <del>)</del> :	Instrument lighting.
P÷	Right roadside parking light.
⇒P	Left roadside parking light.

## Parking lights, low beams and roadside parking lights

#### **General information**

Position of switch: 0 , **■D** , **■D** 

If the driver's door is opened when the driveready state is switched off, the exterior lighting is automatically switched off.

#### **Parking lights**

Position of switch: **DOS** 

The vehicle is illuminated on all sides.

Do not use the parking lights for extended periods; otherwise, they might drain the battery and it would then be impossible to switch on driveready state.

#### Low beams

Position of switch: **ID** 

The low beams illuminate when drive-ready state is switched on.

#### 1

#### Roadside parking lights

When the vehicle is parked, a one-sided roadside parking light can be switched on.

Durkkan	
Button	Function

P≑

Right roadside parking light on/off.

⋛P

Left roadside parking light on/off.

# Welcome lights and headlight courtesy delay feature

#### **Welcome lights**

#### **General information**

Depending on the equipment, the exterior lighting of the vehicle can be set individually.

#### **Activating/deactivating**


Position of switch: **■D** , **■**C

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Exterior lighting"
- 5. Select the desired setting:
  - "Welcome lights" Individual light functions are switched on for a limited time.
  - ▶ "LED light carpet"

The area next to the vehicle is illuminated for a limited time.

#### **LED light carpet**

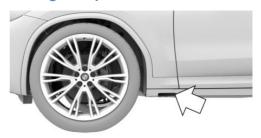

The light source is located in the position indicated.

Keep the light source clean and unobstructed.

#### **Headlight courtesy delay feature**

#### **General information**

The low beams stay lit for a certain time if the high beams are switched on after standby state is switched on.

#### **Setting the duration**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Exterior lighting"
- 5. "Pathway lighting"
- 6. Select the desired setting.

## Automatic headlight control

#### Concept

The low beams are switched on and off automatically depending on the ambient brightness, for example in tunnels, in twilight or if there is precipitation.



#### **General information**

A blue sky with the sun low on the horizon can cause the lights to be switched on.

#### **Activating**

Position of switch:

The indicator light in the instrument cluster is illuminated when the low beams are switched on.

#### **System limits**

The automatic headlight control cannot serve as a substitute for your personal judgment of lighting conditions.

For example, the sensors are unable to detect fog or hazy weather. In these situations, switch the lights on manually.

### **Daytime running lights**

#### **General information**

Position of switch: 0 , €D 0€ , (₺)

The daytime running lights light up when driveready state is switched on. After drive-ready state is switched off, the parking lights light up in position **FD 05**.

#### **Activating/deactivating**

In some countries, daytime running lights are mandatory, so it may not be possible to deactivate the daytime running lights.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Exterior lighting"
- 5. "Daytime running lamps"

The setting is stored for the driver profile currently used.

### **Adaptive light functions**

#### Concept

Adaptive light functions enable dynamic illumination of the roadway.

#### **General information**

The adaptive light functions may consist of one system or multiple systems, depending on the equipment version:

- ▶ Adaptive Light Control, refer to page 161.
- ▶ Cornering light, refer to page 161.

#### **Activating**

Position of switch:

The adaptive light functions are active when the drive-ready state is switched on.

#### **Adaptive Light Control**

Depending on the steering angle and other parameters, the light from the headlight follows the course of the road.

To avoid blinding oncoming traffic, the Adaptive Light Control does not swivel to the opposite lane when the vehicle is at a standstill.

#### **Cornering light**

In tight curves, for instance on mountainous roads or when turning, an additional, cornering light is switched on that lights up the inside of the curve when the vehicle is moving below a certain speed.

The cornering light is automatically switched on depending on the steering angle or, where applicable, the use of turn signals.

When driving in reverse, the cornering lights may be automatically switched on regardless of the steering angle.

#### Adaptive headlight range control

The adaptive headlight range control feature balances out acceleration and braking processes as well as the vehicle load conditions in order to avoid dazzling oncoming traffic. Illumination of the road is optimized.

#### **High-beam Assistant**

#### Concept

The high-beam Assistant detects other traffic participants early on and automatically switches the high beams on or off depending on the traffic situation.


#### General information

The high-beam Assistant ensures that the high beams are switched on, whenever the traffic situation allows. In the low speed range, the high beams are not switched on by the system.

The system responds to light from oncoming traffic and traffic driving ahead of you, and to ambient lighting, for instance in towns and cities.

The high beams can be switched on and off manually at any time.

#### **Activating/deactivating**

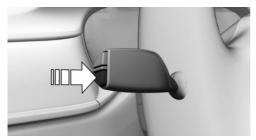

Position of switch:

Press the button on the turn signal lever.



The indicator light in the instrument cluster is illuminated when the low beams are switched on.

The headlights are automatically switched between low beams and high beams.



The blue indicator light in the instrument cluster lights up when the system switches on the high beams.

The high-beam Assistant is deactivated when manually switching the high beams on and off, refer to page 130.

To reactivate the high-beam Assistant, press the button on the turn signal lever.

#### Sensitivity of the high-beam **Assistant**

#### General information

The sensitivity of the high-beam Assistant can be adjusted.

#### **Safety information**



#### Marning

If adjustments have been made or the sensitivity has been modified, oncoming traffic may be momentarily blinded. There is a risk of accident. If adjustments have been made and the sensitivity has been modified, make sure that oncoming traffic is not momentarily blinded. Switch off the high beams manually if required.

#### Adjusting the sensitivity

Pull the turn signal lever for approximately 10 seconds. The system responds more sensitively.

A Check Control message is displayed.



Pull the turn signal lever again for approx. 10 seconds. The sensitivity of the high-beam Assistant is reset to the factory settings.

#### **System limits**

The high-beam Assistant cannot serve as a substitute for the driver's personal judgment of when to use the high beams. In situation that require this, therefore switch off manually.

The system is not fully functional in the following situations, and driver intervention may be necessary:

- ▶ In very unfavorable weather conditions, such as fog or heavy precipitation.
- When detecting poorly-lit road users such as pedestrians, cyclists, horseback riders and wagons; when driving close to train or ship traffic; or at animal crossings.
- ▶ In tight curves, on hilltops or in depressions, in crossing traffic or half-obscured oncoming traffic on highways.
- ▶ In poorly-lit towns and cities or in the presence of highly reflective signs.
- When the windshield in front of the interior mirror is fogged over, dirty or covered with stickers, etc.

### Fog lights

#### **Front fog lights**

#### Concept

The front fog lights work alongside the low beams to illuminate a wider area of the roadway.

#### **Functional requirement**

The low beams must be switched on before switching on the front fog lights.

#### Switching on/off

和

Press the button.

The green indicator light lights up if the front fog lights are switched on.

If the automatic headlight control is activated, the low beams will come on automatically when you switch on the front fog lights.

When the high beams or headlight flasher are activated, the front fog lights are not switched on.

### Instrument lighting

#### **Functional requirement**

The parking lights or low beams must be switched on to adjust the brightness.

#### **Adjusting**



Adjust the brightness with the thumbwheel.

#### **Interior lights**

#### **General information**

Depending on the equipment version, interior lights, footwell lights, entry lights, ambient lighting, and speaker lighting are automatically controlled.





#### **Overview**

#### **Buttons in the vehicle**





Interior lights



Reading lights

### Switching the interior lights on/off



Press the button.

To switch off permanently: press the button and hold for approx. 3 seconds.

The interior lights in the rear of the vehicle can be switched on and off independently. The button is located in the rear roofliner.

### Switching the reading lights on/off



Press the button.

Depending on the vehicle equipment, the reading lights are located next to the interior lights in the front and rear.

#### **Ambient light**

#### **General information**

Depending on the equipment version, lighting can be adjusted for some lights in the car's interior.

#### Switching on/off

The ambient light is switched on when the vehicle is unlocked, and switched off when the vehicle is locked.

If the ambient light was deactivated via iDrive, it will not be switched on when the vehicle is unlocked.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Interior lighting"
- 5. "Ambient lighting"

The selected setting is stored for the driver profile currently used.

#### Selecting the color scheme

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Interior lighting"
- 5. "Color"
- 6. Select the desired setting.

#### **Setting the brightness**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- "Interior lighting"
- 5. "Brightness"
- 6. Select the desired setting.

#### **Dimmed while driving**

- 1. "My Vehicle"
- 2. "Vehicle settings"



- 3. "Lighting"
- 4. "Interior lighting"
- 5. "Dimmed for night driving"

Some lights of the interior lighting are dimmed when the vehicle is driven in the dark.

The selected setting is stored for the driver profile currently used.




### **Safety**

## Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily

available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

#### **Airbags**

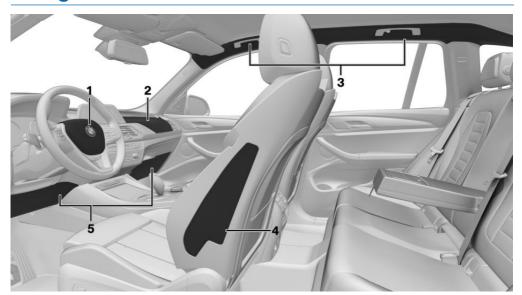

- 1 Front airbag, driver
- 2 Front airbag, front passenger
- 3 Head airbag

- 4 Side airbag
- 5 Knee airbag

#### **Front airbags**

Front airbags help protect the driver and the front passenger by responding to frontal impacts in which safety belts alone would not provide adequate protection.

#### Side airbag

In the event of a side impact, the side airbag protects the side of the body in the chest and lap area.



In the event of a side impact, the head airbag protects the head.

#### **Ejection Mitigation**

The head airbag system is designed as an ejection mitigation countermeasure to reduce the likelihood of ejections of vehicle occupants through side windows during rollovers or side impact events.

#### **Knee airbag**

The knee airbag protects the legs in the event of a frontal impact.

#### **Protective effect**

#### **General information**

Airbags are not triggered in every impact situation, e.g., in less severe accidents.

### Information on optimum effect of the airbags

#### **△** Warning

If the seat position is incorrect or the deployment area of the airbags is impaired, the airbag system cannot provide protection as intended and may cause additional injuries due to triggering. There is a risk of injuries or danger to life. Follow the information on achieving the optimum protective effect of the airbag system.

- ▶ Keep a distance from the airbags.
- Always grasp the steering wheel on the steering wheel rim. Hold your hands at the 3 o'clock and 9 o'clock positions, to keep the risk of injury to your hands or arms as low as possible when the airbag is triggered.
- Make sure that the front passenger is sitting correctly, i.e., keeps his or her feet and legs in the floor area and does not support them on the dashboard.

- Make sure that occupants keep their heads away from the side airbag.
- There should be no additional persons, animals or objects between an airbag and a person.
- Dashboard and windshield on the front passenger side must stay clear - do not attach adhesive labels or coverings and do not attach brackets or cables, for instance for GPS devices or mobile phones.
- Do not apply adhesive materials to the airbag cover panels, do not cover them or modify them in any way.
- Do not use the cover of the front airbag on the front passenger side as a storage area.
- ▶ Do not attach slip covers, seat cushions or other objects to the front passenger seat that are not specifically suited for seats with integrated side airbags.
- ▶ Do not hang pieces of clothing, such as jackets, over the backrests.
- Never modify either the individual components or the wiring in the airbag system. This also applies to steering wheel covers, the dashboard, and the seats.
- Do not remove the airbag system.

Even when you follow all instructions very closely, injury from contact with the airbags cannot be fully ruled out in certain situations.

The ignition and inflation noise may lead to short-term and, in most cases, temporary hearing impairment in sensitive occupants.

Vehicle modifications for a person with disabilities may affect the air bag system; contact BMW Customer Relations for further information.

Warnings and information on the airbags are also found on the sun visors.





#### Functional readiness of the airbag system

#### Safety information

#### Marning

Individual components can be hot after triggering of the airbag system. There is a risk of injury. Do not touch individual components.

#### Warning

Improperly executed work can lead to failure, malfunction or unintentional triggering of the airbag system. In the case of a malfunction, the airbag system might not trigger as intended despite the accident severity. There is a risk of injuries or danger to life. Have the airbag system checked, repaired, dismantled and scrapped by a dealer's service center or another qualified service center or repair shop.

#### Display in the instrument cluster



When drive-ready state is switched on, the warning light in the instrument cluster lights up briefly and thereby indicates the function readiness of the entire airbag system and the belt tensioners.

#### Malfunction



- Warning light does not come on when drive-ready state is switched on.
- ▶ The warning light lights up continuously. Have the system checked.

#### Automatic deactivation of the front-seat passenger airbags

#### Concept

The system reads if the front passenger seat is occupied by measuring the human body's resist-

Front, knee, and side airbag on the front passenger's side are activated or deactivated.

#### **General information**

Before transporting a child on the front passenger seat, refer to the safety information and instructions for children on the front passenger seat, see Children.

#### Safety information



#### Marning

To ensure the front-seat passenger airbag function, the system must be able to detect whether a person is sitting in the front passenger seat. The entire seat cushion area must be used for this purpose. There is a risk of injuries or danger to life. Make sure that the front passenger keeps his or her feet in the floor area.

#### Malfunction of the automatic deactivation system

When transporting older children and adults, the front-seat passenger airbags may be deactivated in certain sitting positions. In this case, the indicator light for the front-seat passenger airbags liahts up.

In this case, change the sitting position so that the front-seat passenger airbags are activated and the indicator light goes out.

If it is not possible to activate the airbags, have the person sit in the rear.

To enable correct recognition of the occupied seat cushion.

- Do not attach covers, cushions, ball mats or other items to the front passenger seat unless they are specifically determined to be safe for use on the front passenger seat.
- Do not place any electronic devices on the front passenger seat if a child restraint system is to be installed on it.
- Do not place objects under the seat that could press against the seat from below.
- No moisture in or on the seat.

#### Indicator light for the front-seat passenger airbags

The indicator light for the front-seat passenger airbag in the roofliner indicates the operating state of the front-seat passenger airbag.

The light indicates whether the airbags are either activated or deactivated.

After drive-ready state is switched on, the light briefly lights up and then indicates whether the airbags are either activated or deactivated.



- ▶ The indicator light lights up when a child is properly seated in a child restraint system or when the seat is empty. The airbags on the front passenger side are not activated.
- ▶ The indicator light does not light up when, for instance a correctly seated person of sufficient size is detected on the seat. The airbags on the front passenger side are activated.

#### **Detected child restraint systems**

The system generally detects children seated in a child restraint system, particularly in child restraint systems required by NHTSA at the point in time when the vehicle was manufactured. After installing a child restraint system, make sure that the indicator light for the front-seat passenger airbags lights up. This indicates that the child restraint system has been detected and the front-seat passenger airbags are not activated.

#### Strength of the driver's and front-seat passenger airbag

The explosive power that activates driver's/frontseat passenger airbags very much depends on the positions of the driver's/front passenger seat.

To maintain the accuracy of this function over the long term, calibrate the front seats as soon as a respective message appears on the Control Display.

#### Calibrating the front seats

#### Warning

There is a risk of jamming when moving the seats. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the seat is clear prior to any adjustment.

A corresponding message appears on the Control Display.

- 1. Press the switch and move the respective seat all the way forward, until it stops.
- 2. Press the switch forward again. The seat still moves forward slightly.
- 3. Readjust the seat to the desired position.

The calibration procedure is completed when the message on the Control Display disappears.

If the message continues to be displayed, repeat the calibration.

If the message does not disappear after a repeat calibration, have the system checked as soon as possible.



#### 1

### **Intelligent Safety**

#### Concept

Intelligent Safety enables central operation of the driver assistance systems.

#### **General information**

Depending on how the vehicle is equipped, Intelligent Safety consists of one or more systems that can help prevent an imminent collision.

- ▶ Front collision mitigation, refer to page 171.
- ▶ Evasion assistance, refer to page 175.
- Person warning with City braking function, refer to page 178.
- ▶ Lane departure warning, refer to page 180.
- Blind spot collision warning, refer to page 184.
- Side collision mitigation, refer to page 187.

#### **Safety information**

#### 

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### **⚠** Warning

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system may not issue warnings or reactions, or these may be issued late or in a manner that is not consistent with their normal use. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### Marning

Due to system limits, individual functions can malfunction during tow-starting/towing with the Intelligent Safety systems activated. There is a risk of accident. Switch all Intelligent Safety

systems off prior to tow-starting/towing.

#### Overview

#### **Button in the vehicle**



8

Intelligent Safety

#### Switching on/off

Some Intelligent Safety systems are automatically active after every departure. Some Intelligent Safety systems activate according to the last setting.

#### **Button Status**

- Button lights up green: all Intelligent Safety systems are switched on.
- Button lights up orange: some Intelligent Safety systems are switched off or currently unavailable.
- Button does not light up: all Intelligent Safety systems are switched off.
- Press the button:
  The menu for the Intelligent Safety system is displayed.

If all Intelligent Safety systems were switched off, all systems are now switched on.

"Configure INDIVIDUAL": depending on the equipment version, the Intelligent Safety systems can be individually configured. The individual settings are activated and stored for the driver profile currently used. As soon as a setting is changed on the menu, all settings of the menu are activated.



Press the button repeatedly. The following settings are switched between:

"ALL ON": all Intelligent Safety systems are switched on. Basic settings are activated for the sub-functions, for instance setting for warning time.

"INDIVIDUAL": the Intelligent Safety systems are switched on according to the individual settings.

Some Intelligent Safety systems cannot be individually switched off.



Press and hold this button:

All Intelligent Safety systems are switched off.

### Front collision mitigation

#### Concept

The system may prevent some accidents. In the event of an accident, the system may reduce impact speed.

The system sounds a warning before an imminent collision and activates brakes independently, if needed.

#### **General information**

Depending on the equipment version, the system is controlled by the following sensors:

- ▶ Camera in the area of the interior mirror.
- Radar sensor in the front bumper.


Intersection collision warning when equipped with a radar sensor: in addition, a warning is issued at intersections and junctions if a risk of collision with crossing traffic is detected.

The approach control warning is available even if cruise control has been deactivated.

With the vehicle approaching another vehicle intentionally, the approach control warning and braking are delayed in order to avoid false system reactions.

The system issues a two-phase warning of a possible risk of collision with vehicles at speeds above approx. 3 mph/5 km/h. The timing of warnings may vary with the current driving situation.

#### **Detection range**

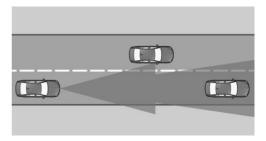

Objects that the system can detect are taken into account.

Intersection collision warning: the system is also able to detect vehicles crossing your direction of travel when these vehicles enter into the detection range of the system.

#### **Safety information**



#### Warning

The system cannot serve as a substitute for the driver's personal judament in assessing visibility and traffic situation. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.



#### **⚠** Warning

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system may not issue warnings or reactions, or these may be issued late or in a manner that is not consistent with their normal use. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### **⚠** Warning

Due to system limits, individual functions can malfunction during tow-starting/towing with the Intelligent Safety systems activated. There is a risk of accident. Switch all Intelligent Safety systems off prior to tow-starting/towing.

#### **Overview**


#### **Button in the vehicle**



3

Intelligent Safety

#### Camera

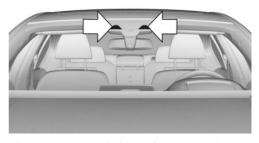

The camera is installed near the interior mirror.

Keep the windshield in front of the interior mirror clean and clear.

#### With radar sensor



The radar sensor is located in the lower area of the front bumper.

Always keep radar sensor clean and unobstructed.

#### Switching on/off

#### Switching on automatically

The system is automatically active after every driving off.

#### Switching on/off manually

Press the button.

The menu for the Intelligent Safety system is displayed.

If all Intelligent Safety systems were switched off, all systems are now switched on.

"Configure INDIVIDUAL": depending on the equipment version, the Intelligent Safety systems can be individually configured. The individual settings are activated and stored for the driver profile currently used. As soon as a setting is changed on the menu, all settings of the menu

9

are activated.

Press the button repeatedly.

The following settings are switched be-

#### tween:

"ALL ON": all Intelligent Safety systems are switched on. Basic settings are activated for the subfunctions.

"INDIVIDUAL": the Intelligent Safety systems are switched on according to the individual settings. Some Intelligent Safety systems cannot be individually switched off.

Press and hold this button.
All Intelligent Safety systems are switched off.

#### **Button Status**



Button lights up green: all Intelligent Safety systems are switched on.



Button lights up orange: some Intelligent Safety systems are switched off or currently unavailable.



Button does not light up: all Intelligent Safety systems are switched off.

#### Setting the warning time

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Intelligent Safety"
- 4. "Frontal Collision Warn."
- 5. Select the desired setting.

The selected time is stored for the driver profile currently used.

#### Warning with braking function

#### **Display**

A warning symbol appears in the instrument cluster and in the Head-up Display if a collision with a detected vehicle is imminent.

#### Symbol Measure



Symbol lights up red: prewarning.

Brake and increase distance.



Symbol flashes red and an acoustic signal sounds: acute warning.

Brake and make an evasive maneuver, if necessary.



Intersection collision warning:

Symbol flashes red and an acoustic signal sounds: acute warning when vehicles cross your direction of travel.



Brake and make an evasive maneuver, if necessary.

#### **Prewarning**

This warning is provided, for instance when there is impending danger of a collision or the distance to the vehicle ahead is too small.

If a prewarning is provided, respond by braking as warranted.

#### Acute warning with braking function

An acute warning is displayed in case of the imminent danger of a collision when the vehicle approaches another object at a high differential speed.

Intervene in the case of an acute warning. If an acute warning is provided, the system may provide assistance, such as through braking, when there is risk of collision.

Acute warnings may be provided even when there has been no prior warning.



#### **Brake intervention, City braking** function

The warning prompts the driver to intervene. If a warning is active, the maximum braking force is used when the brake is applied. The brake pedal must be applied sufficiently quickly and force-

The system may also assist in braking if there is a risk of collision.

When the vehicle is traveling at a low speed, the vehicle may come to a complete stop.

The braking intervention takes place up to approx. 50 mph/80 km/h.

The braking intervention occurs only if vehicle stability has not been restricted, for instance by deactivating the DSC Dynamic Stability Control.

The driver may interrupt the braking intervention function by stepping on the accelerator pedal or by actively moving the steering wheel.

The system's ability to detect objects may be limited in some circumstances. Refer to the information in this Owner's Manual regarding the limitations of the system and actively intervene as warranted.

#### With radar sensor: brake intervention

The warning prompts the driver to intervene. If a warning is active, the maximum braking force is used when the brake is applied. The brake pedal must be applied sufficiently quickly and forcefully.

The system may also assist in braking if there is a risk of collision.

The vehicle can be decelerated to a standstill.

The braking intervention occurs only if vehicle stability has not been restricted, for instance by deactivating the DSC Dynamic Stability Control.

At speeds above approx. 130 mph/210 km/h, the braking intervention occurs as a brief braking pressure. No automatic delay occurs.

The driver may interrupt the braking intervention function by stepping on the accelerator pedal or by actively moving the steering wheel.

Intersection collision warning: brake intervention is not performed in the event of cross traffic.

The system's ability to detect objects may be limited in some circumstances. Refer to the information in this Owner's Manual regarding the limitations of the system and actively intervene as warranted.

#### **System limits**

#### Safety information



#### Marning

The system is designed to operate in certain conditions and circumstances. Due to conditions or other factors, the system may not respond. There may be a risk of accident or risk of damage to property. Actively intervene as warranted. Refer to the information in this Owner's Manual regarding the scope of the system's operation and limitations.

#### **Upper speed limit**

If the vehicle speed exceeds approx.

155 mph/250 km/h, the system is deactivated temporarily. When the vehicle slows down to below this speed, the system is reactivated.

Intersection collision warning: the vehicle responds to crossing traffic if its own speed is below approx. 40 mph/65 km/h.

#### **Detection range**

The system's detection potential is limited.

Thus, a system reaction might not come or might come late.

The following situations may not be detected, for instance:

▶ Slow moving vehicles when you approach them at high speed.

- ▶ Vehicles that suddenly swerve in front of you, or sharply decelerating vehicles.
- ▶ Vehicles with an unusual rear appearance.
- Two-wheeled vehicles ahead of you.
- Intersection collision warning: crossing vehicles if their speed is higher than your own speed.

#### **Functional limitations**

The system may not be fully functional in the following situations:

- ▶ In heavy fog, wet conditions, or snowfall.
- ▶ In tight curves.
- ▶ If the driving stability control systems are limited or deactivated, for instance DSC OFF.
- If the field of view of the camera or the windshield is dirty or covered in the area of the interior mirror.
- If the camera has overheated and been temporarily switched off due to excessively high temperatures.
- ▶ Depending on the equipment: if the radar sensors are dirty or covered.
- Depending on the equipment version: after improperly performed work on the vehicle paint.
- ▷ After improperly performed work on the vehicle paint in the area of the radar sensors.
- Up to 10 seconds after the start of the engine via the Start/Stop button.
- ▶ During calibration of the camera immediately after vehicle delivery.
- If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.

Attaching any objects such as stickers or film in the beam area of the radar sensors will also impact the function of the radar sensors and may even cause them to fail.

#### Warning sensitivity

The more sensitive the warning settings are, for example the warning time, the more warnings are displayed. Therefore, there may also be an excess of premature or unjustified warnings and reactions.

#### **Evasion Assistant**


#### Concept

The system supports the driver in making evasive maneuvers in certain situations, such as when obstacles suddenly appear.

#### **General information**

The system issues a warning and intervenes to support the driver if a lateral evasive maneuver is possible. Sensors monitor and detect the clearance around the vehicle. If the system identifies space alongside the vehicle, it supports an evasive maneuver begun by the driver by safely providing targeted steering support.

#### **Detection range**

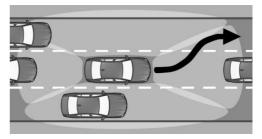

Objects that the system can detect are taken into account.



#### **Safety information**

#### Marning

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### Marning

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system may not issue warnings or reactions, or these may be issued late or in a manner that is not consistent with their normal use. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### Overview

#### Radar sensors

The radar sensors are located in the bumpers.



Front center bumper.




Front side bumper.



Rear bumper.

Always keep the bumper in the area of the radar sensors clean and unobstructed.

#### Camera

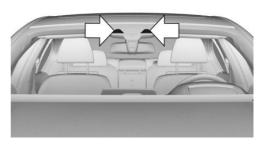

The camera is installed near the interior mirror.

Keep the windshield in front of the interior mirror clean and clear.

#### **Functional requirements**

- ▶ Front collision mitigation, refer to page 171, is switched on
- Sensors detect sufficient clearance around. the vehicle.



The system is automatically active after every driving off.

#### Warning with evasion support

#### Display in the instrument cluster

A warning symbol appears in the instrument cluster and in the Head-up Display if a collision with a detected vehicle is imminent.

#### Symbol Measure



Symbol lights up red: prewarning. Brake and increase distance.



Symbol flashes red and an acoustic signal sounds: acute warning.

Brake and make an evasive maneuver, if necessary.

#### **Acute warning with evasion support**

An acute warning is displayed when there is an imminent danger of collision due to the vehicle approaching another object at a high speed. Intervene in the case of an acute warning. The

system is designed to provide assistance by taking evasive action when there is a risk of collision.

Acute warnings may be provided even when there has been no prior warning.

#### **System limits**

#### **Safety information**



#### 🛕 Warning

The system is designed to operate in certain conditions and circumstances. Due to conditions or other factors, the system may not respond. There may be a risk of accident or risk of damage to property. Actively intervene as warranted. Refer to the information in this Owner's Manual regarding the scope of the system's operation and limitations.

#### **Detection range**

The system's detection potential is limited.

Thus, a system reaction might not come or might come late.

The following situations may not be detected, for example:

- ▶ Slow moving vehicles when you approach them at high speed.
- ▶ Vehicles that suddenly swerve in front of you, or sharply decelerating vehicles.
- ▶ Vehicles with an unusual rear appearance.
- ➤ Two-wheeled vehicles ahead of you.

#### **Functional limitations**

The system may not be fully functional in the following situations:

- ▶ In heavy fog, wet conditions, or snowfall.
- In tight curves.
- ▶ If the driving stability control systems are limited or deactivated, for instance DSC OFF.
- ▶ If the field of view of the camera or the windshield is dirty or covered in the area of the interior mirror.
- ▶ If the camera has overheated and been temporarily switched off due to excessively high temperatures.
- Depending on the equipment: if the radar sensors are dirty or covered.
- > After improperly performed work on the vehicle paint.
- ▶ Up to 10 seconds after the start of the engine via the Start/Stop button.
- During calibration of the camera immediately after vehicle delivery.
- ▶ If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.



### **Person warning with City** braking function

#### Concept

The system may prevent some accidents with pedestrians. When driving at city speeds, the system will issue a warning if there is imminent risk of a collision with pedestrians, and support with a braking function.


#### **General information**

The system is active at speeds of approx. 3 mph/5 km/h up to approx. 40 mph/65 km/h.

The system reacts to people who are within the detection range of the system.

The camera in the area of the interior mirror controls the system.

#### **Detection range**

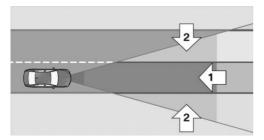

The detection area in front of the vehicle is divided into two areas:

- ▶ Central area, arrow 1, directly in front of the
- Expanded area, arrow 2, to the right and left of the central area.

A collision is imminent if pedestrians are located within the central area. A warning is issued about pedestrians who are located within the extended area only if they are moving in the direction of the central area.

#### **Safety information**

#### Marning

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### Marning

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system may not issue warnings or reactions, or these may be issued late or in a manner that is not consistent with their normal use. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### Warning

Due to system limits, individual functions can malfunction during tow-starting/towing with the Intelligent Safety systems activated. There is a risk of accident, Switch all Intelligent Safety systems off prior to tow-starting/towing.

#### Overview


#### **Button in the vehicle**





Intelligent Safety

#### Camera

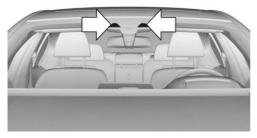

The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

#### Switching on/off

#### Switching on automatically

The system is automatically active after every driving off.

#### Switching on/off manually

Press the button.

The menu for the Intelligent Safety system is displayed.

If all Intelligent Safety systems were switched off, all systems are now switched on.

"Configure INDIVIDUAL": depending on the equipment version, the Intelligent Safety systems can be individually configured. The individual settings are activated and stored for the driver profile currently used. As soon as a setting is changed on the menu, all settings of the menu are activated.

8

Press the button repeatedly.

The following settings are switched be-

tween:

"ALL ON": all Intelligent Safety systems are switched on. Basic settings are activated for the subfunctions.

"INDIVIDUAL": the Intelligent Safety systems are switched on according to the individual settings. Some Intelligent Safety systems cannot be indi-

Press and hold this button.

All Intelligent Safety systems are switched off.

#### **Button Status**

vidually switched off.



Button lights up green: all Intelligent Safety systems are switched on.



Button lights up orange: some Intelligent Safety systems are switched off or currently unavailable.



Button does not light up: all Intelligent Safety systems are switched off.

#### Warning with braking function

#### **Display**

If a collision with a detected person is imminent, a warning symbol appears on the instrument cluster and in the Head-up Display.



The red symbol is displayed and a signal sounds.



Alternatively, depending on the vehicle equipment, a red warning triangle lights up in the instrument cluster.

Intervene immediately by braking or make an evasive maneuver

#### **Braking intervention**

The warning prompts the driver to intervene. If a warning is active, the maximum braking force is used when the brake is applied. This requires the brake pedal to be depressed sufficiently quickly and forcefully.





If there is a risk of collision, the system may also assist with braking.

When the vehicle is traveling at a low speed, the vehicle may come to a complete stop.

The braking intervention occurs only if vehicle stability has not been restricted, for instance by deactivating the DSC Dynamic Stability Control.

The driver may interrupt the braking intervention function by stepping on the accelerator pedal or by actively moving the steering wheel.

The system's ability to detect objects may be limited in some circumstances. Refer to the information in this Owner's Manual regarding the limitations of the system and actively intervene as warranted.

#### **System limits**

#### **Safety information**

#### ⚠ Warning

The system is designed to operate in certain conditions and circumstances. Due to conditions or other factors, the system may not respond. There may be a risk of accident or risk of damage to property. Actively intervene as warranted. Refer to the information in this Owner's Manual regarding the scope of the system's operation and limitations.

#### **Detection range**

The detection potential of the camera is limited.

Thus, a warning might not be issued or be issued late.

The following situations may not be detected, for instance:

- Partially covered pedestrians.
- Pedestrians that are not detected as such because of the viewing angle or contour.
- Pedestrians outside of the detection range.

▶ Pedestrians having a body size less than 32 in/80 cm.

#### **Functional limitations**

The system may not be fully functional or may not be available in the following situations:

- ▶ In heavy fog, wet conditions, or snowfall.
- ▶ In tight curves.
- If the driving stability control systems are deactivated, for instance DSC OFF.
- If the field of view of the camera or the windshield is dirty or covered in the area of the interior mirror.
- If the camera has overheated and been temporarily switched off due to excessively high temperatures.
- ▶ Up to 10 seconds after the start of the engine via the Start/Stop button.
- During calibration of the camera immediately after vehicle delivery.
- If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.
- When it is dark outside.

#### Lane departure warning

#### Concept

The lane departure warning alerts when the vehicle on roads with lane markings is about to leave the lane.

#### **General information**

This camera-based system warns starting at a minimum speed.

The minimum speed is country-specific and is displayed in the menu for the intelligent Safety systems.

Warnings are issued by means of a steering wheel vibration. The severity of the steering wheel vibration can be adjusted.



The time of the warning may vary depending on the current driving situation.

The system does not provide a warning if the turn signal is set before leaving the lane.

Vehicles with side collision mitigation: if in the speed range up to 130 mph/210 km/h a lane marking is crossed, the system intervenes with a brief active steering intervention in addition to vibrating. The system thus helps keep the vehicle in the lane.

# **Safety information**



# Marning

The system cannot serve as a substitute for the driver's personal judgment in assessing road and traffic safety. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate. Do not jerk the steering wheel in response to a warning.

# Marning

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system may not issue warnings or reactions, or these may be issued late or in a manner that is not consistent with their normal use. There is a risk of accident, Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

# **Functional requirements**

The camera must detect the lane markings for the lane departure warning to be active.

# Overview


# Button in the vehicle





Intelligent Safety

## Camera

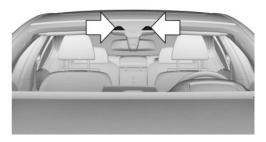

The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

# Switching on/off

# Switching on automatically

The lane departure warning activates automatically after departure if the function was switched on at the end of the last trip.

# Switching on/off manually

Press the button.

The menu for the Intelligent Safety system is displayed.

If all Intelligent Safety systems were switched off, all systems are now switched on.

1

"Configure INDIVIDUAL": depending on the equipment version, the Intelligent Safety systems can be individually configured. The individual settings are activated and stored for the driver profile currently used. As soon as a setting is changed on the menu, all settings of the menu are activated.

Press the button repeatedly.

The following settings are switched be-

tween:

"ALL ON": all Intelligent Safety systems are switched on. Basic settings are activated for the subfunctions.

"INDIVIDUAL": the Intelligent Safety systems are switched on according to the individual settings.

Some Intelligent Safety systems cannot be individually switched off.

Press and hold this button.

All Intelligent Safety systems are switched off.

# **Button Status**

- Button lights up green: all Intelligent Safety systems are switched on.
- Button lights up orange: some Intelligent Safety systems are switched off or currently unavailable.
- Button does not light up: all Intelligent Safety systems are switched off.

# Setting the warning frequency

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Intelligent Safety"
- 4. "Lane Departure Warn."
- Select the desired setting.

- "Always": the system issues a warning whenever a hazardous situation is detected.
- "Reduced": some warnings are suppressed depending on the situation, for instance during passing without a turn signal or when purposely driving over lane markings in curves.
- ▶ "Off": no warnings are issued.

The selected setting is stored for the driver profile currently used.

# Setting the intensity of the steering wheel vibration

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Steering wheel vibration"
- 4. Select the desired setting.

The setting is applied to all Intelligent Safety systems and stored for the driver profile currently used.

# Vehicles with side collision mitigation: turn steering intervention on/off

The steering intervention can be switched on and off separately for blind spot collision warning and lane departure warning.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Intelligent Safety"
- 4. "Steering intervention"

The selected setting is stored for the driver profile currently used.

# Display in the instrument cluster



The symbol illuminates green: at least one lane marking was detected and warnings can be issued.

# **Warning function**

# If you leave the lane

If you leave the lane and if a lane marking has been detected, the steering wheel vibrates in accordance with the steering wheel vibration setting.

If the turn signal is switched on before a lane change, a warning is not issued.

# With side collision mitigation

When in the speed range up to 130 mph/210 km/h a lane marking is crossed. the system intervenes with a brief active steering intervention in addition to vibrating. The steering intervention helps keep the vehicle in the lane. The steering intervention can be noticed on the steering wheel and can be manually overridden at any time.

# **Warning signal**

Depending on the equipment version: In the event of multiple active steering interventions by the system within 3 minutes without the driver's intervention at the steering wheel, an acoustic warning will sound. A short warning signal will sound at the second steering intervention. Beginning with the third steering intervention, an continuous warning will sound.

In addition, a Check Control message is displayed.

The warning signal and Check-Control message are an encouragement to pay closer attention to the lane.

# With trailer towing

If the trailer power socket is in use or trailer towing is activated, for instance during operation

with trailer or bicycle rack, no steering intervention takes place.

# **End of warning**

The warning is canceled in the following situations:

- ▶ Automatically after approx. 3 seconds.
- ▶ When returning to your own lane.
- When braking hard.
- When using the turn signal.
- ▶ If DSC Dynamic Stability Control intervenes.

# **System limits**

# Safety information



# Warning

The system is designed to operate in certain conditions and circumstances. Due to conditions or other factors, the system may not respond. There may be a risk of accident or risk of damage to property. Actively intervene as warranted. Refer to the information in this Owner's Manual regarding the scope of the system's operation and limitations.

# **Functional limitations**

The system may not be fully functional in the following situations:

- ▶ In heavy fog, wet conditions, or snowfall.
- ▶ In the event of missing, worn, poorly visible, merging, diverging, or multiple lane markings such as in construction areas.
- ▶ When lane markings are covered in snow, ice, dirt or water.
- ▶ In tight curves or on narrow lanes.
- When lane markings are covered by objects.
- When driving very close to the vehicle in front of you.



- ▶ If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.
- ▶ If the field of view of the camera or the windshield is dirty or covered in the area of the interior mirror
- ▶ If the camera has overheated and been temporarily switched off due to excessively high temperatures.
- Up to 10 seconds after the start of the engine via the Start/Stop button.
- During calibration of the camera immediately after vehicle delivery.


A Check Control message is displayed when the system is not fully functional.

# **Blind spot collision warning**

# Concept

Blind spot collision warning detects vehicles in the blind spot or vehicles approaching from behind in the adjacent lane. A warning is issued in various gradations in these situations.

# **General information**

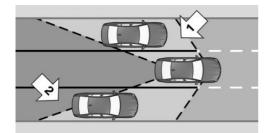

Two radar sensors in the rear bumper monitor the area behind and next to the vehicle when traveling faster than a minimum speed.

The minimum speed is shown in the menu for the intelligent Safety systems.

The system indicates whether there are vehicles in the blind spot, arrow 1, or approaching from behind in the adjacent lane, arrow 2.

The light in the exterior mirror lights up dimmed.

Before you change lanes after setting the turn signal, the system issues a warning in the situations described above.

The light in the exterior mirror flashes and the steering wheel vibrates.

Vehicles with side collision mitigation; at speeds between 45 mph/70 km/h and

130 mph/210 km/h, the system can intervene with a brief active steering intervention and help to return the vehicle into the lane

# Safety information

# Marning

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

# Warning

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system may not issue warnings or reactions, or these may be issued late or in a manner that is not consistent with their normal use. There is a risk of accident, Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

# **Overview**

# **Button in the vehicle**



Intelligent Safety

# Radar sensors



The radar sensors are located in the rear bumper.

Always keep the bumper in the area of the radar sensors clean and unobstructed.

# Switching on/off

# Switching on automatically

Blind spot collision warning is automatically activated after departure if the function was switched on at the end of the last trip.

# Switching on/off manually

Press the button.

The menu for the Intelligent Safety system is displayed.

If all Intelligent Safety systems were switched off, all systems are now switched on.

"Configure INDIVIDUAL": depending on the equipment version, the Intelligent Safety systems can be individually configured. The individual settings are activated and stored for the driver profile currently used. As soon as a setting is changed on the menu, all settings of the menu are activated.

Press the button repeatedly.

The following settings are switched be-

"ALL ON": all Intelligent Safety systems are switched on. Basic settings are activated for the subfunctions.


"INDIVIDUAL": the Intelligent Safety systems are switched on according to the individual settings.


Some Intelligent Safety systems cannot be individually switched off.

Press and hold this button.
All Intelligent Safety systems are switched off.

# **Button Status**

tween:

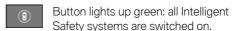

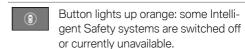

Button does not light up: all Intelligent Safety systems are switched off.

# **Setting the warning time**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Intelligent Safety"
- 4. "Blind Spot Detection"
- 5. Select the desired setting.



"Off": with this setting, no warning is output.

The setting is stored for the driver profile currently used.

# Setting the intensity of the steering wheel vibration

Via iDrive:

- 1. "My Vehicle"
- "Vehicle settings"
- 3. "Steering wheel vibration"
- 4. Select the desired setting.

The setting is applied to all Intelligent Safety systems and stored for the driver profile currently used.

# Vehicles with side collision mitigation: switching steering intervention on/off

The steering intervention can be switched on and off separately for blind spot collision warning and lane departure warning.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Intelligent Safety"
- 4. "Steering intervention"

The setting is stored for the driver profile currently used.

# **Warning function**

# **Light in the exterior mirror**



# **Prewarning**

The dimmed light in the exterior mirror indicates when there are vehicles in the blind spot or approaching from behind.

# **Acute warning**

If the turn signal is switched on while a vehicle is in the critical zone, the steering wheel vibrates briefly and the light in the exterior mirror flashes brightly.

The warning stops when the turn signal is switched off, or the other vehicle leaves the critical zone.

# With side collision mitigation

If at speeds between 45 mph/70 km/h and 130 mph/210 km/h the vibrating steering wheel is ignored and the lane marking crossed, the system intervenes with a brief active steering intervention. The steering intervention helps return the vehicle into the lane. The steering intervention can be noticed on the steering wheel and can be manually overridden at any time.

# Flashing of the light

A flashing of the light during vehicle unlocking serves as system self-test.

# System limits

# Safety information



# Warning

The system is designed to operate in certain conditions and circumstances. Due to conditions or other factors, the system may not respond. There may be a risk of accident or risk of damage to property. Actively intervene as warranted. Refer to the information in this Owner's Manual regarding the scope of the system's operation and limitations.



# **Upper speed limit**

If the vehicle speed exceeds approx. 155 mph/250 km/h, the system is deactivated temporarily.

If the vehicle speed falls below approx. 155 mph/250 km/h, the system once again responds according to the setting.

# **Functional limitations**

The system may not be fully functional in the following situations:

- ▶ When a vehicle is approaching at a speed much faster than your own.
- ▶ In heavy fog, wet conditions, or snowfall.
- ▶ In tight curves or on narrow lanes.
- ▶ If the bumper is dirty, iced up, or covered, for instance by stickers.
- After improperly performed work on the vehicle paint.
- If cargo protrudes.

Attaching any objects such as stickers or film in the beam area of the radar sensors will also impact the function of the radar sensors and may even cause them to fail.

For vehicles with side collision mitigation, the steering intervention can be limited, for instance in the following situation:

- In the event of missing, worn, poorly visible, merging, diverging, or multiple lane markings such as in construction areas.
- ▶ When lane markings are covered in snow, ice, dirt or water.
- ▶ When lane markings are not white.
- ▶ When lane markings are covered by objects.
- ▶ When driving very close to the vehicle in front of you.
- If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.

- If the field of view of the camera or the windshield is dirty or covered in the area of the interior mirror.
- If the camera has overheated and been temporarily switched off due to excessively high temperatures.
- ▶ Up to 10 seconds after the start of the engine via the Start/Stop button.
- During calibration of the camera immediately after vehicle delivery.

A Check Control message is displayed when the system is not fully functional.

If the trailer power socket is in use or trailer towing is activated, for instance during operation with trailer or bicycle rack, the system cannot be switched on. A Check Control message is displayed.

# **Displaying warnings**


Depending on the selected warning settings, for instance warning time, more warnings can be displayed. However, there may also be an excess of premature warnings of critical situations.

# Side collision mitigation

# Concept

The system helps to avoid imminent side collisions.

# **General information**

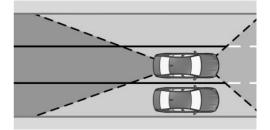

Four radar sensors in the bumpers monitor the area next to the vehicle in the speed range from



approx. 45 mph/70 km/h to approx. 130 mph/210 km/h.

The front camera determines the lane marking positions.

If, for instance another vehicle is detected next to the vehicle and if there is a risk of collision with this vehicle, the system helps avoid the collision via steering intervention.

# **Safety information**

# Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

# Marning

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system may not issue warnings or reactions, or these may be issued late or in a manner that is not consistent with their normal use. There is a risk of accident, Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

# **Functional requirements**

The camera must detect the lane markings for the side collision mitigation with steering intervention to be active.

# Overview

# Button in the vehicle






Intelligent Safety

# Radar sensors

The radar sensors are located in the bumpers.



Front bumper.

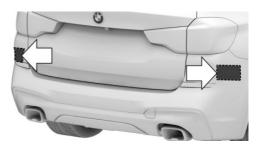


## Rear bumper.

Always keep the bumper in the area of the radar sensors clean and unobstructed



## Camera

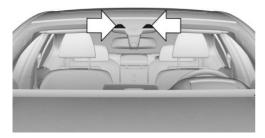

The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

# Switching on/off

# Switching on automatically

The side collision mitigation activates automatically after departure if the function was switched on at the end of the last trip.

# Switching on/off manually

Press the button.

The menu for the Intelligent Safety system is displayed.

If all Intelligent Safety systems were switched off, all systems are now switched on.

"Configure INDIVIDUAL": depending on the equipment version, the Intelligent Safety systems can be individually configured. The individual settings are activated and stored for the driver profile currently used. As soon as a setting is changed on the menu, all settings of the menu are activated.

Press the button repeatedly.

The following settings are switched between:

"ALL ON": all Intelligent Safety systems are switched on. Basic settings are activated for the subfunctions.

"INDIVIDUAL": the Intelligent Safety systems are switched on according to the individual settings. Some Intelligent Safety systems cannot be individually switched off.

Press and hold this button.

All Intelligent Safety systems are switched off.

# **Button Status**

Button lights up green: all Intelligent Safety systems are switched on.

Button lights up orange: some Intelligent Safety systems are switched off or currently unavailable.

Button does not light up: all Intelligent Safety systems are switched off.

# **Warning function**

# Light in the exterior mirror



# If there is a risk of collision

If there is a risk of collision, the light in the exterior mirror flashes and the steering wheel vibrates. An active steering intervention takes place to prevent collisions and maintain the vehicle within its own lane. The steering intervention can be noticed on the steering wheel and can be manually overridden at any time.



# **System limits**

# Safety information

# Marning

The system is designed to operate in certain conditions and circumstances. Due to conditions or other factors, the system may not respond. There may be a risk of accident or risk of damage to property. Actively intervene as warranted. Refer to the information in this Owner's Manual regarding the scope of the system's operation and limitations.

# **Functional limitations**

The system may not be fully functional in the following situations:

- ▶ When a vehicle is approaching at a speed much faster than your own.
- ▶ In heavy fog, wet conditions, or snowfall.
- ▶ In tight curves or on narrow lanes.
- ▶ If the bumper is dirty, iced up, or covered, for instance by stickers.
- > After improperly performed work on the vehicle paint.
- ▶ If cargo protrudes.
- ▶ In the event of missing, worn, poorly visible, merging, diverging, or multiple lane markings such as in construction areas.
- ▶ When lane markings are covered in snow, ice, dirt or water.
- ▶ When lane markings are covered by objects.
- ▶ When driving very close to the vehicle in front of you.
- ▶ If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.
- ▶ If the field of view of the camera or the windshield is dirty or covered in the area of the interior mirror

- ▶ If the camera has overheated and been temporarily switched off due to excessively high temperatures.
- ▶ Up to 10 seconds after the start of the engine via the Start/Stop button.
- During calibration of the camera immediately after vehicle delivery.

Attaching any objects such as stickers or film in the beam area of the radar sensors will also impact the function of the radar sensors and may even cause them to fail.

A Check Control message is displayed when the system is not fully functional.


If the trailer power socket is in use or trailer towing is activated, for instance during operation with trailer or bicycle rack, the system cannot be switched on, A Check Control message is displayed.

# **Rear collision preparation**

# Concept

The system reacts to vehicles approaching from hehind

# General information

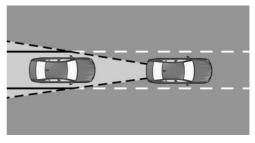

Two radar sensors in the rear bumper monitor the area behind the vehicle.

When a vehicle approaches from the rear at a certain speed, the system responds as follows: ▶ Active Protection, refer to page 192: when a collision seems to be unavoidable, PreCrash functions are triggered.

# **Safety information**



# Marning

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.



# Warning

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system may not issue warnings or reactions, or these may be issued late or in a manner that is not consistent with their normal use. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

# Overview

# Radar sensors



The radar sensors are located in the rear bumper.

Always keep the bumper in the area of the radar sensors clean and unobstructed.

# Switching on/off

The system is automatically active after every driving off.

The system is deactivated in the following situa-

- When driving in reverse.
- ▶ If the trailer power socket is in use or trailer towing is activated, for instance during operation with trailer or bicycle rack.

# **System limits**

The system may not be fully functional in the following situations:

- When a vehicle is approaching at a speed much faster than your own.
- ▶ When the approaching vehicle approaches slowly.
- ▶ In heavy fog, wet conditions, or snowfall.
- ▶ In tight curves or on narrow lanes.
- ▶ If the bumper is dirty, iced up, or covered, for instance by stickers.
- ▶ If the field of view of the sensors is covered, e.g., by garage walls, hedges or snow hills.
- If cargo protrudes.

# **Brake force display**

# Concept

Additional brake lights indicate emergency braking to the traffic behind. This can reduce the risk of a rear-end collision.



# General information



- During normal brake application, the outer brake lights light up.
- During heavy brake application, the inner brake lights additionally light up.

# **Active Protection**

# Concept

Active Protection prepares occupants and the vehicle for a possible accident in critical driving or collision situations.

# General information

Active Protection consists of various PreCrash functions, which can vary depending on the equipment.

The system is used to detect certain critical driving situations that might lead to an accident. This includes the following critical driving situations:

- ▶ Emergency stop.
- Severe understeering.
- Severe oversteering.

Certain functions of several systems can, within the system limits, lead to Active Protection triggering:

- > Front collision mitigation: automatic brake intervention.
- ▶ Front collision mitigation: Brake Assistant
- ▶ Rear collision preparation; detection of imminent rear collisions.

# **Safety information**

# Marning

The system cannot serve as a substitute for the driver's personal judgment. Due to the system limits, critical situation could not be detected reliably or in time. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

# **Function**

When the safety belt is fastened, the driver's and passenger's belt straps are automatically tightened once after driving away.

In accident-critical situations, the following individual functions become active as needed:

- Automatic pretensioning of the front safety
- Automatic window closing up to a narrow gap.
- Automatic closing of the panoramic glass sunroof, including sun protection.
- ▶ For vehicles equipped with comfort seats in the front; automatic positioning of the backrest for the front passenger seat.

After a critical driving situation without an accident, the front safety belts are loosened again.


If the belt tension does not loosen automatically. stop the vehicle and unbuckle the safety belt using the red button in the buckle. Fasten the safety belt before continuing on your trip.

All other systems can be restored to the desired settina.

# PostCrash - iBrake

# Concept

In the event of an accident, the system can bring the vehicle to a halt automatically without inter-

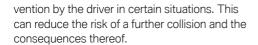

# At standstill

After coming to a halt, the brake is released automatically.

# Harder vehicle braking

In certain situations, it can be necessary to bring the vehicle to a halt more quickly than the Brake Assistant allows.

To do this, quickly apply extra force to the brake. For a brief period, the braking pressure will be higher than the braking pressure that is achieved by the automatic braking function. This interrupts automatic braking.

# Interrupting automatic braking

It can be necessary to interrupt automatic braking in certain situations, for instance for an evasive maneuver.

Interrupt automatic braking:

- By pressing the brake pedal.
- By pressing the accelerator pedal.

# **Fatigue alert**

# Concept

The system can detect decreasing alertness or fatigue of the driver during long, monotonous trips, for instance on highways. In this situation, it is recommended that the driver takes a break.

# **Safety information**



# Marning

The system cannot serve as a substitute for the driver's personal judgment in assessing one's physical state. An increasing lack of alertness or fatigue may not be detected or not be detected in time. There is a risk of accident, Make sure that the driver is rested and alert. Adjust driving style to traffic conditions.

# **Function**

The system is switched on each time drive-ready state is switched on.

After travel has begun, the system monitors certain aspects of the driver's behavior, so that decreasing alertness or fatigue can be detected.

This procedure takes the following criteria into account:

- Personal driving style, for instance steering
- Driving conditions, for instance time, length of trip.

Starting at approx. 43 mph/70 km/h, the system is active and can also display a recommendation to take a break.

# **Break recommendation**

# Switching on/off, adjusting

The fatigue alert is active automatically with each switching on of drive-ready state and can thus display a break recommendation.

The break recommendation can also be switched on or off and adjusted via iDrive.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Driver attention control"
- 4. Select the desired setting:
  - ▶ "Off": no break recommendation is made.
  - ▶ "Standard": the break recommendation is made with a defined value.
  - ▶ "Sensitive": the break recommendation is issued earlier.





# **Display**

If the driver becomes less alert or fatigued, a message is displayed in the Control Display with the recommendation to take a break.

During the display, various settings can be selected.

After a break, another recommendation to take a break cannot be displayed until after approximately 45 minutes.

# **System limits**

The function may be limited in the following situations and may issue an incorrect warning or no warning at all:

- ▶ When the clock is set incorrectly.
- ▶ When the vehicle speed is mainly below about 43 mph/70 km/h.
- With a sporty driving style, such as during rapid acceleration or when cornering fast.
- ▶ In active driving situations, such as when changing lanes frequently.
- ▶ When the road surface is poor.
- ▶ In the event of strong side winds.

The system is reset approx. 45 minutes after parking the vehicle, for instance in the case of a break during longer trips on highways.



# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# Anti-lock Braking System ABS

ABS prevents locking of the wheels during braking.

The vehicle maintains its steering power even during full brake applications, thus increasing active safety.

ABS is operational every time you start the engine.

# **Brake assistant**

When you apply the brakes rapidly, this system automatically boosts the vehicle braking capability to the furthest possible extent. It reduces the braking distance to a minimum during an emergency stop. This system utilizes all of the capabilities provided by the Antilock Brake System ABS.

Do not reduce the pressure on the brake pedal for the duration of the emergency stop.

# Adaptive brake assistant

In combination with Active Cruise Control, this system ensures that the brakes respond even more rapidly when braking in critical situations.

# **Drive-off assistant**

# Concept

This system supports driving off on uphill grades.

# **Driving off**

- 1. Hold the vehicle in place with the foot brake.
- Release the foot brake and drive off without delay.

After the foot brake is released, the vehicle is held in place for approx. 2 seconds.

Depending on the vehicle loading or when a trailer is used, the vehicle may roll back slightly.

# **DSC Dynamic Stability Control**

# Concept

Within the physical limits, the system helps to keep the vehicle on a steady course by reducing engine speed and by braking the individual wheels.

# **General information**

DSC detects the following unstable driving conditions, for instance:

- ▶ Fishtailing, which can lead to oversteering.
- ▶ Loss of traction of the front wheels, which can lead to understeering.



# **Safety information**

# Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropri-

# Marning

When driving with a roof load, for instance with roof-mounted luggage rack, the vehicle's center of gravity is higher, which increases the risk of the vehicle tipping in critical driving situations. There may be a risk of accident or risk of damage to property. Do not deactivate DSC Dynamic Stability Control when driving with roof load

# Overview

# **Button in the vehicle**





DSC OFF

# **Deactivating/activating DSC**

# **General information**

When DSC is deactivated, driving stability is reduced during acceleration and when driving in curves.

To increase vehicle stability, activate DSC again as soon as possible.

# **Deactivating DSC**



Hold the button down until DSC OFF is displayed in the instrument cluster and the DSC OFF indicator light is illuminated.

# **Activating DSC**



Press the button.

DSC OFF and the DSC OFF indicator light go out.

# **Display**

# In the instrument cluster

When DSC is deactivated, DSC OFF is displayed in the instrument cluster.

# Indicator/warning lights



The indicator light lights up: DSC is deactivated.



The indicator light flashes: DSC controls the drive and braking forces.

The indicator light lights up: DSC has malfunctioned.

# **DTC Dynamic Traction Control**

# **Concept**

DTC is a version of the DSC Dynamic Stability Control where forward momentum is optimized.

The system ensures maximum headway on special road conditions or loose road surfaces, for instance unplowed snowy roads, but with somewhat limited driving stability.

# **General information**

When DTC is activated, the vehicle has maximum traction. Driving stability is limited during acceleration and when driving in curves.

You may find it useful to briefly activate DTC in the following situations:

- When driving in slush or on uncleared, snowcovered roads.
- ▶ When driving off from deep snow or loose ground.
- ▶ When driving with snow chains.

# **Overview**

# **Button in the vehicle**





DSC OFF

# **Activating/deactivating DTC**

# **Activating DTC**

Press the button.

TRACTION is displayed in the instrument cluster and the indicator light for DSC OFF lights up.

# **Deactivating DTC**

₽ OFF

Press the button again.

TRACTION and the DSC OFF indicator light go out.

# **Display**

# Display in the instrument cluster

If DTC is activated, TRACTION is displayed in the instrument cluster.

# **Indicator/warning lights**



The indicator light lights up: DTC is activated.

# **Automatic program change**

The system automatically switches to "DSC ON" in the following situations:

- ▶ If Active Cruise Control with Stop&Go function ACC is activated.
- ▶ On a braking intervention by the Intelligent Safety systems.
- ▶ The vehicle has a flat tire.

# **xDrive**

# **Concept**

xDrive is the all-wheel-drive system of the vehicle. The interaction of xDrive and DSC Dynamic Stability Control further optimizes traction and driving dynamics. xDrive variably distributes the





driving forces to the front and rear axles as demanded by the driving situation and road surface.

# **Display on the Control Display**

# **Displaying xDrive view**

Via iDrive:

- 1. "My Vehicle"
- 2. "Technology in action"
- 3. "xDrive status"

The following information is displayed:

- ▶ With a navigation system: compass display for the driving direction.
- ▶ Pitch attitude with degree indication and percentage.
- ▶ Transverse gradient with degree indication.
- ▶ Graphic display for the steering angle.

# Automatic Differential Brake

The system controls the driving force by automatic braking intervention on individual wheels. The function corresponds to a differential lock: the system detects if a wheel begins to spin, because of loose road surface, for instance and automatically brakes it.

The driving force is diverted to the wheel with better traction.

As a result, the engine force is transferred more efficiently to the wheels during accelerations.

# **HDC Hill Descent Control**

# Concept

Hill Descent Control, HDC, is a downhill control feature that controls the vehicle speed on steep downhill grades, for instance when driving on unpaved roads.

When the system is active, the vehicle moves at the speed set by the driver, without the driver having to depress the brake pedal.

While HTC is controlling the speed, the system automatically distributes the braking force to the individual wheels. This improves vehicle drivability and stability. If necessary, the Antilock Brake System prevents the wheels from locking.

# **General information**

Hill Descent Control can be activated at speeds below approx. 25 mph/40 km/h.

Speeds can be set between approx. 2 mph/3 km/h and approx. 20 mph/30 km/h. When the vehicle is moving downhill, the system reduces the speed to the set value, within the physical limits.

# **Overview**

# **Button in the vehicle**





HDC

# **Activating HDC**



Press the button. The LED above the button lights up.

Speeds between approx. 2 mph/3 km/h and approx. 20 mph/30 km/h are adopted as the desired speed.

Emergency braking function, Active PDC: the emergency braking function, refer to page 216, is deactivated.





A symbol and the selected desired speed are displayed.

- ▶ Green display: HDC is active, the system is reducing the vehicle speed.
- Gray display: HDC is on standby.

# Display in the Head-up Display

The HDC status can also be displayed in the Head-up Display.

# Increasing or decreasing vehicle speed

# Using the cruise control rocker switch

The desired speed can be changed using the cruise control rocker switch on the steering wheel.



- > Press the rocker switch up: the speed increases gradually.
- Press the rocker switch up and hold: the speed increases while the rocker switch is pressed.
- Press the rocker switch down: the speed decreases gradually.
- Press the rocker switch down and hold: the speed decreases while the rocker switch is pressed.

# Using the brake pedal

While HDC is controlling the speed, the set desired speed can be reduced by depressing the brake pedal.

# **Deactivating HDC**



Press the button again. The LED goes out. HDC is automatically deactivated above approx. 25 mph/40 km/h.

# Malfunction

If a malfunction occurs, a message is displayed in the instrument cluster.

# Variable sport steering

The variable sport steering facilitates a direct and agile driving style with little steering effort. The variable sports steering works independently of the current speed, varying the steering ratio in line with the steering angle.



# **Driver assistance systems**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# **Cruise control**

# Concept

Using this system, a desired speed can be adjusted using the buttons on the steering wheel. The system maintains the desired speed. The system accelerates and brakes automatically as needed.

# General information

Depending on the vehicle setting, the cruise control settings may change under certain conditions. For instance, acceleration can change depending on the driving mode.

# **Safety information**



# Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic

closely and actively intervene where appropri-



# Marning

The use of the system can lead to an increased risk of accidents in the following situations, for instance:

- ▶ On winding roads.
- In heavy traffic.
- ▷ On slippery roads, in fog, snow, or wet conditions, or on a loose road surface.

There may be a risk of accident or risk of damage to property. Only use the system if driving at constant speed is possible.



# Warning

The desired speed can be incorrectly adjusted or called up by mistake. There is a risk of accident. Adjust the desired speed to the traffic conditions. Watch traffic closely and actively intervene where appropriate.

# Overview

# **Buttons on the steering wheel**

# **Button Function**



Cruise control on/off, refer to page 201.



Pause cruise control, refer to page 201.

Continue cruise control with the last setting, refer to page 202.

# **Button Function**



Store speed, refer to page 201.



Rocker switch:

Set speed, refer to page 201.

# Switching cruise control on/off

# Switching on



Press the button on the steering wheel.

The indicator lights in the instrument cluster light up and the mark in the speedometer is set to the current speed.

Cruise control is active. The current speed is maintained and stored as desired speed.

DSC Dynamic Stability Control is switched on, if necessary.

# **Switching off**



Press the button on the steering wheel.

The displays go out. The stored desired speed is deleted.

# Pausing cruise control

# Interrupting manually



When active, press the button.

# Interrupting automatically

The system is automatically interrupted in the following situations, for example:

- ▶ When the driver applies the brakes.
- Steptronic transmission: when selector lever position D is disengaged.
- Dynamic Traction Control DTC is activated or DSC Dynamic Stability Control is deactivated.
- ▶ If DSC Dynamic Stability Control intervenes.

▶ When SPORT PLUS is activated with Driving Dynamics Control.

# **Setting the speed**

# Maintaining and storing the speed



Press the rocker switch up or down once while the system is interrupted.

When the system is switched on, the current speed is maintained and stored as the desired speed.

The stored speed is displayed, refer to page 202, in the speedometer and briefly in the instrument cluster.

DSC Dynamic Stability Control is switched on, if necessary.

The speed can also be stored by pressing a button.

SET

Press the button.

# **Changing the speed**



Press the rocker switch up or down repeatedly until the desired speed is set.

If active, the displayed speed is stored and the vehicle reaches the stored speed when the road is clear.

- ▶ Each time the rocker switch is pressed to the resistance point, the desired speed increases or decreases by 1 mph/1 km/h.
- ▶ Each time the rocker switch is pressed past the resistance point, the desired speed changes by a maximum of 5 mph/10 km/h.
  - The maximum speed that can be set depends on the vehicle.
- Pressing the rocker switch to the resistance point and holding it accelerates or decelerates the vehicle without requiring pressure on the accelerator pedal.
  - After the rocker switch is released, the vehicle maintains its final speed. Pressing the switch beyond the resistance point causes the vehicle to accelerate more rapidly.

# **Continuing cruise control**

An interrupted cruise control can be continued by calling up the stored speed.

Make sure that the difference between current speed and stored speed is not too large before calling up the stored speed. Otherwise, unintentional braking or accelerating may occur.



Press the button with the system interrupted.

Cruise control is continued with the stored values.

In the following cases, the stored speed value is deleted and cannot be called up again:

- ▶ When the system is switched off.
- ▶ When drive-ready state is switched off.

# Displays in the instrument cluster

# Display in the speedometer



- Green marking: system is active, the marking indicates the desired speed.
- Orange/white marking: system is interrupted, the marking indicates the stored speed.
- ▶ No marking: system is switched off.

# **Indicator light**



- ▶ Indicator light green: system is active.
- ▶ Gray indicator light: the system has been interrupted.
- ▶ No indicator light: system is switched off.

# Status display



The selected desired speed is hidden after a brief time.

# **Displays in the Head-up Display**

Some system information can also be displayed in the Head-up Display.



The symbol is displayed when the set desired speed is reached.

# **System limits**

The desired speed is also maintained downhill. The speed may not be maintained on uphill grades if the engine power is insufficient.

In ECO PRO driving mode, the vehicle may exceed or drop below the set desired speed in some situations, for instance on downhill or uphill grades.





# Concept

Using this system, a desired speed and a distance to a vehicle ahead can be adjusted using the buttons on the steering wheel.

The system maintains the desired speed on clear roads. For this purpose, the vehicle accelerates or brakes automatically.

If a vehicle is driving ahead of you, the system adjusts the speed of your vehicle so that the set distance to the vehicle ahead is maintained. The speed is adjusted as far as the given situation allows.

# **General information**

A radar sensor is located in the front bumper and a camera on the interior mirror to detect vehicles driving ahead of you.

Depending on the vehicle setting, the cruise control settings may change under certain conditions. For instance, acceleration can change depending on the driving mode.

The distance can be adjusted in several steps. For safety reasons, it depends on the respective speed.

If the vehicle ahead of you brakes to a halt, and then proceeds to drive again within a brief period, the system is able to detect this within the given system limits.

# **Safety information**

## 🛕 Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic

closely and actively intervene where appropri-

# Marning

An unsecured vehicle can begin to move and possibly roll away. There is a risk of accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, follow the following:

- ▷ Set the parking brake.
- > On uphill grades or on a downhill slope. turn the front wheels in the direction of the curb.
- > On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.



# Warning

The desired speed can be incorrectly adjusted or called up by mistake. There is a risk of accident. Adjust the desired speed to the traffic conditions. Watch traffic closely and actively intervene where appropriate.

# Marning

Risk of accident due to too high speed differences to other vehicles, for instance in the following situations:

- ▶ When fast approaching a slowly moving vehicle.
- ▶ Vehicle suddenly swerving into own lane.
- ▶ When fast approaching standing vehicles.

There is a risk of injuries or danger to life. Watch traffic closely and actively intervene where appropriate.

# 1

# **Overview**

# **Buttons on the steering wheel**

# **Button Function**



Cruise control on/off, refer to page 204.



Store/maintain speed, refer to page 205.



Pause cruise control, refer to page 205.

Continue cruise control with the last setting, refer to page 206.



Without steering and traffic jam assistant:

Increase the distance, refer to page 206.



Without steering and traffic jam assistant:

Reduce distance, refer to page 206.



With steering and traffic jam assistant: Adjust distance, refer to page 206.



Rocker switch:

Set speed, refer to page 205.



With steering and traffic jam assistant: Steering and traffic jam assistant on/ off, refer to page 210.


# Radar sensor



The radar sensor is located in the front bumper.

Always keep radar sensor clean and unobstructed.

## Camera

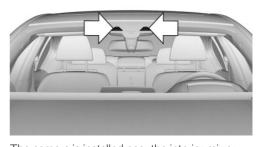

The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

# Area of application

The system is best used on well-constructed roads. The system is functional at speeds beginning at approx. 20 mph/30 km/h.

The maximum speed that can be set is limited and, e.g., depends on the vehicle and the vehicle equipment version.

Higher speeds can be selected if the system is switched to cruise control without distance control.

The system can also be activated when stationary.

# Switching on/off and interrupting cruise control

# **Switching on**



Press the button on the steering wheel.

The indicator lights in the instrument cluster light up and the mark in the speedometer is set to the current speed.

Cruise control is active. The current speed is maintained and stored as desired speed.

DSC Dynamic Stability Control is switched on, if necessary.

# **Switching off**

To switch off the system while standing, step on brake pedal at the same time.



Press the button on the steering wheel.

The displays go out. The stored desired speed is deleted.

# Interrupting manually



When active, press the button on the steering wheel.

If interrupting the system while stationary, press on the brake pedal at the same time.

# Interrupting automatically

The system is automatically interrupted in the following situations:

- ▶ When the driver applies the brakes.
- ▶ When selector lever position D is disengaged.
- Dynamic Traction Control DTC is activated or DSC Dynamic Stability Control is deactivated.
- ▶ If DSC Dynamic Stability Control intervenes.
- If the safety belt is unbuckled and the driver's door is opened while the vehicle is standing still.
- If the system has not detected objects for an extended period, for instance on a road with very little traffic without curb or shoulder markings.
- If the detection range of the radar is impaired, for instance by dirt or heavy fog.
- After a longer stationary period when the vehicle has been braked to a stop by the system.

# **Setting the speed**

# Maintaining and storing the speed



Press the rocker switch up or down once while the system is interrupted.

When the system is switched on, the current speed is maintained and stored as the desired speed.

The stored speed is displayed, refer to page 207, in the speedometer and briefly in the instrument cluster.

DSC Dynamic Stability Control is switched on, if necessary.

The speed can also be stored by pressing a button.



Press the button.

# Changing the speed



Press the rocker switch up or down repeatedly until the desired speed is set.

If active, the displayed speed is stored and the vehicle reaches the stored speed when the road is clear.





- ▶ Each time the rocker switch is pressed to the resistance point, the desired speed increases or decreases by 1 mph/1 km/h.
- ▶ Each time the rocker switch is pressed past the resistance point, the desired speed changes by a maximum of 5 mph/10 km/h.

Hold the rocker switch in position to repeat the action.

# Adjusting the distance

# Safety information

# **△** Warning

The system cannot serve as a substitute for the driver's personal judgment. Due to the system limits, braking can be late. There may be a risk of accident or risk of damage to property. Be aware to the traffic situation at all times. Adjust the distance to the traffic and weather conditions and maintain the prescribed safety distance, possibly by braking.

# Without steering and traffic jam assistant: reducing distance



Press the button repeatedly until the desired distance is set.

Instrument cluster will display selected distance, refer to page 207.

# Without steering and traffic jam assistant: increasing distance



Press the button repeatedly until the desired distance is set.

Instrument cluster will display selected distance, refer to page 207.

# With steering and traffic jam assistant: adjusting distance



Press the button repeatedly until the desired distance is set.

# **Continuing cruise control**

An interrupted cruise control can be continued by calling up the stored speed.

Make sure that the difference between current speed and stored speed is not too large before calling up the stored speed. Otherwise, unintentional braking or accelerating may occur.



Press the button with the system inter-

Cruise control is continued with the stored values.

In the following cases, the stored speed value is deleted and cannot be called up again:

- ▶ When the system is switched off.
- ▶ When drive-ready state is switched off.

# Changing between cruise control with/without distance control

# Safety information



# Warning

The system does not react to traffic driving ahead of you, but instead maintains the stored speed. There may be a risk of accident or risk of damage to property. Adjust the desired speed to the traffic conditions and brake as needed.

# Changing to cruise control without distance control

Distance control can be switched off and on when driving with cruise control activated.



With steering and traffic jam assistant: press and hold this button.



Without steering and traffic jam assistant:

Press and hold this button.



Press and hold this button.

In order to switch back to Cruise control with distance control, press the button again.

After switching, a Check Control message is displayed.

# Displays in the instrument cluster

# Display in the speedometer



- Green marking: system is active, the marking indicates the desired speed.
- Orange/white marking: system is interrupted, the marking indicates the stored speed.
- ▶ No marking: system is switched off.

# **Status display**



The selected desired speed is hidden after a brief time.

# Distance to vehicle ahead of you

Selected distance to the vehicle ahead of you is shown.

# Symbol

# **Description**



Distance 1



Distance 2



Distance 3



Distance 4

This value is set automatically after the system is switched on.



System interrupted.



No distance control display, as the accelerator pedal is being pressed.

# **Detected vehicle**

# Symbol

# **Description**



Green symbol:

A vehicle has been detected ahead of you. The system maintains the set distance to the vehicle in front.





As soon as the detected vehicle drives off, the vehicle symbol in the distance indicator will move away.

To accelerate, activate ACC, for instance by briefly stepping on the accelerator pedal or pressing the rocker switch.

# **Indicator/warning lights**

# Symbol Description



Vehicle symbol flashes:

The conditions are not adequate for the system to work.

The system was deactivated but applies the brakes until you actively resume control by pressing on the brake pedal or accelerator pedal.



The vehicle symbol and distance bars flash red and an acoustic signal sounds:

Brake and make an evasive maneuver, if necessary.

# **Displays in the Head-up Display**

# **Desired speed**

Some system information can also be displayed in the Head-up Display.



The symbol is displayed when the set desired speed is reached.

# **Distance information**



The symbol is displayed when the distance from the vehicle traveling ahead is too short.


The distance information is active in the following situations:

Active Cruise Control switched off.

- ▶ Display in the Head-up Display selected, refer to page 156.
- Distance too short.
- ▶ Speed greater than approx. 40 mph/70 km/h.

# **System limits**

# **Detection range**

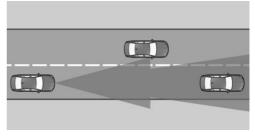

The detection capacity of the system and the automatic braking capacity are limited.


Two-wheeled vehicles for instance might not be detected.

## **Deceleration**

The system does not decelerate in the following situations:

- ▶ For pedestrians or similarly slow-moving road users.
- ▶ For red traffic lights.
- For cross traffic.
- ▶ For oncoming traffic.

# **Swerving vehicles**

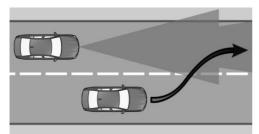

A vehicle driving in front of you is not detected until it is completely within the same lane as your vehicle


If a vehicle driving ahead of you suddenly swerves into your lane, the system may not be able to automatically restore the selected distance. It may not be possible to restore the selected distance in certain situations, including if you are driving significantly faster than vehicles driving ahead of you, for instance when rapidly approaching a truck. When a vehicle driving ahead of you is reliably detected, the system requests that the driver intervene by braking and carrying out evasive maneuvers, if needed.

# Cornering



If the desired speed is too high for a curve, the speed is reduced slightly, although curves cannot be anticipated in advance. Therefore, drive into a curve at an appropriate speed.

The system has a limited detection range. Situations can arise in tight curves where a vehicle driving ahead will not be detected or will be detected very late.

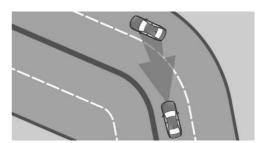

When you approach a curve the system may briefly report vehicles in the next lane due to the bend of the curve. If the system decelerates you may compensate it by briefly accelerating. After releasing the accelerator pedal the system is reactivated and controls speed independently.

# **Driving off**

In some situations, the vehicle cannot drive off automatically; for example:

- On steep uphill grades.
- ▶ In front of bumps in the road.
- ▶ With a heavy trailer.

In these cases, step on the accelerator pedal.

# Weather

The following restrictions can occur under unfavorable weather or light conditions:

- ▶ Poorer vehicle recognition.
- Short-term interruptions for vehicles that are already recognized.

Examples of unfavorable weather or light conditions:

- ▶ Wet conditions.
- ▶ Snowfall.
- ▶ Slush.
- ▶ Fog.
- Glare.

Drive attentively, and react to the current traffic situation. If necessary, intervene actively, for instance by braking, steering or evading.



# **Engine power**

The desired speed is also maintained downhill. The speed may not be maintained on uphill grades if the engine power is insufficient.

In ECO PRO driving mode, the vehicle may intentionally exceed or drop below the set desired speed in some situations, for instance on downhill or uphill grades.

# Malfunction

# Radar sensor

The system cannot be activated if the radar sensor is not aligned correctly. This may be caused by damage incurred, for instance during parking.

A Check Control message is displayed if the system fails.

Have the system checked by a dealer's service center or another qualified service center or repair shop.

The system may be impaired when the detection range of the radar sensor is partially covered such as by the license plate holder.

## Camera

The function for detecting and responding when approaching stationary vehicles may be limited in the following situations:

- During calibration of the camera immediately after vehicle delivery.
- ▶ If the camera is malfunctioning or dirty. A Check Control message is displayed.

# Steering and traffic jam assistant

# Concept

The system assists the driver in keeping the vehicle within the lane. For this purpose, the system executes supporting steering movements, for instance when driving in a curve.

# General information

The system determines the position of the lane markings and the vehicle driving ahead using five radar sensors and a camera.

Depending on the speed, the system orients itself according to the lane markings or vehicles in

Sensors on the steering wheel detect whether the steering wheel is being touched.

# **Safety information**



# Marning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropri-

# Overview

# **Button on the steering wheel**

# **Button Function**



Steering and traffic jam assistant on/ off, refer to page 211.

# Radar sensors


The radar sensors are located in the bumpers.



Front center bumper.




Front side bumper.

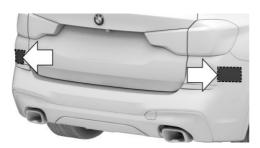

Rear bumper.

Always keep the bumper in the area of the radar sensors clean and unobstructed.

# Camera

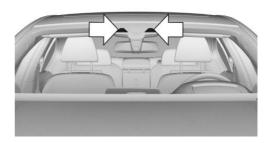

The camera is installed near the interior mirror.

Keep the windshield in front of the interior mirror clean and clear.

# **Functional requirements**

- ▶ Speed below 130 mph/210 km/h.
- Sufficient lane width.
- Above approx. 43 mph, 70 km/h: lane marking on both sides is detected.
- Below approx. 43 mph, 70 km/h: lane marking on both sides or a vehicle driving ahead is detected.
- ▶ Hands on the steering wheel rim.
- Wide curves.
- ▶ Drive in the center of the lane.
- ▶ Turn signal switched off.
- ➤ The sensor system calibration process is complete.

# Switching on/off

# **Switching on**



Press the button on the steering wheel.



Steering wheel symbol lights up gray.

The system is on standby and does not manipulate steering.

System activates automatically as soon as all function conditions are fulfilled, refer to page 211.







Steering wheel symbol lights up green. The system is active.

With the system switched on, the person warning with City braking function and the side collision mitigation are active.

# **Switching off**



Press the button on the steering wheel.

The indicator goes out.

The system does not perform supportive steering wheel movements.

# Interrupting automatically

The system is automatically interrupted in the following situations:

- ▶ At a speed above 130 mph/210 km/h.
- ▶ When the steering wheel is released.
- ▶ When you manipulate steering.
- When you leave your own lane.
- ▶ When the turn signal is switched on.
- ▶ When the lane is too narrow.
- ▷ If for a particular time no lane marking is detected and there is no vehicle driving in front.



Steering wheel symbol lights up gray.

The system is on standby and does not manipulate steering.

System activates automatically as soon as all function conditions are fulfilled, refer to page 211.

# Displays in the instrument cluster

# Symbol Description Gray steering wheel symbol: The system is on standby. Green steering wheel symbol: The system is activated. Yellow steering wheel symbol and a signal sounds, if applica-

ble:



Green steering wheel symbol and lane marking symbol:

The system supports the driver in keeping the vehicle within the lane.

System interruption is imminent.



Green steering wheel symbol, gray lane marking symbol:

No lane marking detected, the vehicle follows the vehicle ahead

The limits of steering support when cornering may have been reached.



# **Symbol**

# **Description**



Yellow steering wheel symbol:

The hands are not grasping the steering wheel. The system is still active.



Red steering wheel symbol and a signal sounds:

The hands are not grasping the steering wheel. System interruption is imminent

The system does not perform supportive steering wheel movements.

With Active Cruise Control, the system may reduce the speed.

# **Displays in the Head-up Display**

All system information can also be displayed in the Head-up Display.

# Lane change assistant

# Concept

The system additionally supports the driver when changing lanes on multilane roads.

# **Functional requirements**


- ▶ The functional requirements of the steering and traffic jam assistant are fulfilled, refer to page 211.
- Driving on a road without pedestrians or cyclists and with physical barriers to oncoming traffic, such as crash barriers.
- Lane markings have been detected.
- Sensor system of the system is active and a vehicle approaching from the rear can be detected.
- ▶ Blind spot collision warning and steering intervention are switched on, refer to page 184.

▶ Speed between approx. 43 mph, 70 km/h and approx. 110 mph, 180 km/h.

# **Changing lanes**

- 1. Ensure that the traffic situation permits changing lanes.
- 2. Press the turn indicator lever, refer to page 129, in the required direction to the pressure point for signaling briefly.

Steering support in the required direction can be detected a short time later.

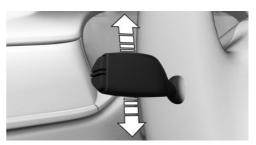

After the lane change, the system helps keep the vehicle in the new lane.

# Canceling a lane change

The lane change can be canceled by steering into the opposite direction.

# **System limits**

# General information

The system cannot be activated or meaningfully used in certain situations.

# **Safety information**



# Warning

The system is designed to operate in certain conditions and circumstances. Due to conditions or other factors, the system may not respond. There may be a risk of accident or risk of damage to property. Actively intervene as warranted. Refer to the information in this Own-

er's Manual regarding the scope of the system's operation and limitations.

# Hands on the steering wheel

The sensors cannot detect hand-steering wheel contact in the following situations:

- Driving with gloves.
- Protective covers on the steering wheel.

# **Narrow lanes**

When driving within narrow lanes, the system cannot be activated or effectively used, for instance in the following situations:

- In construction areas.
- In rescue lanes.
- Within city limits.

# Weather

The following restrictions can occur under unfavorable weather or light conditions:

- Poorer recognition of vehicles and lane markings.
- ▶ Short-term interruptions for vehicles that are already recognized.

Examples of unfavorable weather or light conditions:

- Wet conditions.
- Snowfall.
- Slush.
- ▶ Fog.
- Glare.

Drive attentively, and react to the current traffic situation. If necessary, intervene actively, for instance by braking, steering or evading.

# **PDC Park Distance Control**

# Concept

PDC is a support when parking. Objects that you are approaching slowly in front of or behind the vehicle are indicated by signal tones and a display on the Control Display.

With Parking Assistant: obstacles on the side of the vehicle that are detected by the sensors of the parking assistant, may also be reported by the side protection function, refer to page 217.

# General information

The ultrasound sensors for distance measurements are located in the bumpers and possibly on the sides of the vehicle.

The range, depending on the obstacle and environmental conditions, is approx. 6 ft/2 m.

An acoustic warning sounds in case of an impending collision at a distance to the object of approx. 27 in/70 cm.

For objects behind the vehicle, the acoustic warning is already issued at a distance to the object of approx. 5 ft/1.50 m.

# **Safety information**



# Marning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of accident, Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.



# Marning

Due to high speeds when PDC Park Distance Control is activated, the warning can be delaved due to physical circumstances. There is a risk of injury or risk of damage to property. Avoid approaching an object too fast. Avoid driving off fast while PDC Park Distance Control is not yet active.

# Overview

# **Button in the vehicle**





Park assistance button

## Ultrasound sensors



Ultrasound sensors of the PDC, for instance in the bumpers.

# **Functional requirements**

Ensure full functionality:

- Do not cover sensors, for instance with stickers, bicycle racks.
- ▶ Keep the sensors clean and unobstructed.

# Switching on/off

# Switching on automatically

The system switches on automatically in the following situations:

- ▶ If selector lever position R is engaged when the engine is running.
- ▶ While approaching detected obstacles if the speed is slower than approx. 2.5 mph/4 km/h. The activation distance depends on the situation in auestion.

You may switch automatic activation when obstacles are detected on and off.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Parking"
- 4. "Automatic PDC activation": depending on the vehicle equipment.
- "Automatic PDC activation"

The setting is stored for the driver profile currently used.

Depending on equipment, an additional camera view is also switched on.

# Automatic deactivation during forward travel

The system switches off when a certain driving distance or speed is exceeded.

Switch the system back on, if needed.

# Switching on/off manually



Press the park assistance button.

- ▶ On: the LED lights up.
- Off: the LED goes out.

The rearview camera image is displayed if the reverse gear is engaged when pressing the park assistance button.





# Warning

# Signal tones

## General information

An intermittent tone indicates when the vehicle is approaching an object. For instance, if an object is detected to the left rear of the vehicle, a signal tone sounds from the left rear speaker.

The shorter the distance to the object, the shorter the intervals.

If the distance to a detected object is less than approx. 10 inches/25 cm, a continuous tone is sounded.

If there are objects in front of and behind the vehicle at the same time, with a distance smaller than approx. 10 in/25 cm, an alternating constant tone will sound.

Steptronic transmission: the intermittent tone and constant tone are switched off if the selector lever position P is engaged.

The intermittent tone is switched off after a short time when the vehicle is stationary.

## Volume

The ratio of the PDC signal tone volume to the entertainment volume can be adjusted.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Tone"
- 4. "Volume settings"
- 5. "PDC"
- 6. Set the desired value.

The setting is stored for the driver profile currently used.

# Visual warning



The approach of the vehicle to an object is shown on the Control Display. Objects that are farther away are already displayed on the Control Display before a signal sounds.

The display appears as soon as PDC is activated.

The range of the sensors is represented in the colors green, yellow and red.

Pathway lines are faded in for better estimation of the required space.

When the image of the rearview camera is displayed, the switch can be made to PDC or to a different view with obstacle markings as needed:

rc "Rear view camera"

Cross traffic warning, refer to page 234: depending on the equipment, it is warned in the PDC display against vehicles approaching in the front or rear from the side


# With parking assistant and Steptronic transmission: emergency braking function, Active PDC

# Concept

The emergency braking function of PDC initiates an emergency braking in case of acute risk of collision.

# **General information**

Due to system limits, a collision cannot be prevented under all circumstances.

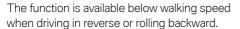

A press of the accelerator pedal interrupts the braking intervention.

After emergency braking to a stop, further creeping toward an obstacle is possible. To creep toward the obstacle, lightly press the accelerator pedal and release it again.

If the accelerator pedal is heavily depressed, the vehicle drives off as usual. Manual braking is possible at any time.

The system uses the ultrasound sensors of PDC and parking assistant.

# **Safety information**



#### Marning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. There is a risk of accident. Adjust driving style to traffic conditions, Watch traffic and vehicle surroundings closely and actively intervene where appropriate.

### **Activating/deactivating the system**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Parking"
- 4. "Active PDC with braking interv."
- 5. "Active PDC with braking interv."

The setting is stored for the driver profile currently used.

### **System limits**

The system cannot be used in the following situations, for example:

 When Hill Descent Control, refer to page 198, is active, the emergency braking function is deactivated.

When driving with a trailer.

If required, deactivate the system via iDrive where applicable.

# With Parking Assistant: side protection

#### Concept

The system warns of obstacles on the side of the vehicle.

#### General information

The system uses the ultrasound sensors of PDC and parking assistant.

# **Display**



To protect the sides of the vehicle, obstacle markings are displayed on the sides of the vehi-

- Color markings: warning against detected obstacles.
- ▶ Gray markings, hatched area: no obstacles were detected
- No markings, black area: the area next to the vehicle was not yet captured.

### Limits of side protection

The system only displays stationary obstacles that were previously detected by sensors while passing them.

The system does not detect whether an obstacle moves later on. If the vehicle is stationary, the markings are shown in black after a certain time.





The area next to the vehicle must be newly captured.

Side protection is not available, if the trailer power socket is in use or trailer towing is activated.

### System limits

#### Safety information



#### Warning

The system is designed to operate in certain conditions and circumstances. Due to conditions or other factors, the system may not respond. There may be a risk of accident or risk of damage to property. Actively intervene as warranted. Refer to the information in this Owner's Manual regarding the scope of the system's operation and limitations.

#### With trailer or trailer power socket in use

With a trailer, a trailer power socket in use or when trailer towing is activated, the rear PDC functions will be switched off.



White symbol is displayed.

Depending on the vehicle equipment, the range of the sensors is shown as a

shaded area on the Control Display.

### Limits of ultrasonic measurement

Ultrasonic measurements might not function in the following situations:

- ▶ For small children and animals.
- ▶ For persons with certain clothing, for instance coats.
- ▶ With external interference of the ultrasound. for instance from passing vehicles or loud machines.
- ▶ When sensors are dirty, iced over, damaged or out of position.

- Under certain weather conditions such as high relative humidity, wet conditions, snowfall, extreme heat, or strong wind.
- ▶ With tow bars and trailer couplings of other vehicles.
- ▶ With thin or wedge-shaped objects.
- ▶ With moving objects.
- ▶ With elevated, protruding objects such as ledges.
- With objects with corners, edges, and smooth surfaces.
- ▶ With objects with a fine surface structure such as fences.
- ▶ For objects with porous surfaces.
- ▶ With small and low objects, for instance hoxes.
- With obstacles and persons at the edge of the lane.
- ▶ With soft obstacles or obstacles covered in foam material.
- ▶ With plants and bushes.
- ▶ Low objects already displayed, for instance curbs, can move into the blind area of the sensors before or after a continuous tone sounds.
- Cargo that extends beyond the perimeter of the vehicle is not taken into account by the system.

# **False warnings**

The system may issue a warning under the following conditions even though there is no obstacle within the detection range:

- In heavy rain.
- ▶ When sensors are very dirty or covered with
- When sensors are covered in snow.
- On rough road surfaces.
- On uneven surfaces, such as speed bumps.

- In large buildings with right angles and smooth walls, for instance in underground garages.
- ▶ In automatic vehicle washes.
- Due to heavy exhaust.
- ▶ When the trailer hitch cover is not on straight.
- Due to other ultrasound sources, for instance sweeping machines, high pressure steam cleaners or neon lights.

To prevent false alarms, switch off automatic PDC activation on obstacle detection, refer to page 215, for instance in automatic vehicle washes.

#### **Malfunction**

A Check Control message is displayed.



White symbol is displayed, and the range of the sensors is dimmed on the Control Display.

PDC has failed. Have the system checked by a dealer's service center or another qualified service center or repair shop.

# Without Surround View: rearview camera

# Concept

The rearview camera provides assistance in parking and maneuvering backwards. The area behind the vehicle is shown on the Control Display.

# **Safety information**



#### Warning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. There is a risk of accident. Adjust driving style to traffic conditions. Watch

traffic and vehicle surroundings closely and actively intervene where appropriate.

#### **Overview**


# Depending on the vehicle equipment: button in the vehicle





Park assistance button

#### Camera

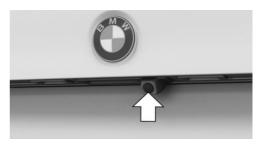

The camera lens is located in the handle of the tailgate.

The image quality may be impaired by dirt. If necessary, clean the camera lens.

# Switching on/off

# Switching on automatically

The system is switched on automatically if selector lever position R is engaged when the engine is running.





# Automatic deactivation during forward travel

The system switches off when a certain driving distance or speed is exceeded.

Switch the system back on, if needed.

# Depending on the vehicle equipment: switching on/off manually



Press the park assistance button.

- ▷ On: the LED lights up.
- ▶ Off: the LED goes out.

The parking assistance functions are shown on the Control Display.

#### Switching the view via iDrive

If the rearview camera view is not displayed, change the view via iDrive:

- 1. Move the Controller to the left, if needed.
- 2. FR "Rear view camera"

The rearview camera image is displayed.

# **Functional requirements**

- ▶ The rearview camera is switched on.
- ▶ The tailgate is fully closed.
- ▶ Keep the recording range of the camera clear. Protruding cargo or roof rack systems can limit the detection range of the camera.
- Trailers that are not connected at a trailer socket can limit the detection range of the camera.

# **Assistance functions**

#### **General information**

More than one assistance function can be active at the same time.

The assistance functions can be manually activated.

▶ "Parking aid lines".

Pathway lines and turning radius lines are displayed, refer to page 220.

▶ 🧗 "Obstacle marking".


Depending on the vehicle equipment, the obstacles detected by PDC Park Distance Control are displayed, refer to page 221, by markings.

▶ J "Trailer hitch - zoom".

A zoomed image of the trailer hitch is displayed, refer to page 221.

# **Parking aid lines**

#### **Pathway lines**

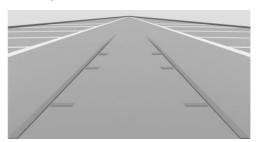

Pathway lines help you to estimate the space required when parking and maneuvering on level roads.

Pathway lines depend on the steering angle and are continuously adjusted to the steering wheel movements.

#### **Turning radius lines**



Turning radius lines can only be superimposed on the camera image together with pathway lines.


Turning radius lines show the course of the smallest possible turning radius on a level road.

Only one turning radius line is displayed after the steering wheel is turned past a certain angle.

# Parking using pathway and turning radius lines

- Position the vehicle so that the red turning radius line leads to within the limits of the parking space.
- 2. Turn the steering wheel to the point where the green pathway line covers the corresponding turning radius line.

# **Obstacle marking**

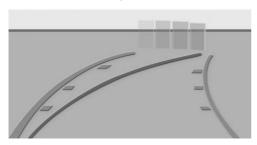

Depending on the vehicle equipment, obstacles behind the vehicle are detected by the PDC Park Distance Control sensors.

Obstacle markings can be faded into the image of the rearriew camera.

The colored thresholds of the obstacle markings match the markings of the PDC Park Distance Control.

#### Zoom on trailer hitch

To make it easier to attach a trailer, you can zoom in on the view of the trailer hitch.



Two static circle segments show the distance between the trailer and the trailer hitch

A docking line dependent on the steering angle helps with aiming for the trailer with the trailer hitch.

When zooming in, remember that the view may no longer show certain obstacles.

# Setting brightness and contrast via iDrive

With the rearview camera switched on:

- 1. Move the Controller to the left.
- 2. ▷ ⊹ "Brightness"
  - ▶ "Contrast"
- 3. Set the desired value.

# **System limits**

#### Deactivated camera

If the camera is deactivated, for instance if the tailgate is open, the camera image is displayed hatched in gray.



### **Detection of objects**

Very low obstacles as well as high, protruding objects such as ledges may not be detected by the system.

Depending on the vehicle equipment, some assistance functions also consider data from the PDC Park Distance Control.

Follow the notes in the PDC Park Distance Control chapter.

The objects displayed on the Control Display may be closer than they appear. Do not estimate the distance from the objects on the display.

# **Surround View with Parking Assistant Plus**

### Concept

The system provides assistance in parking and maneuvering. The area around the vehicle is shown on the Control Display.

#### **General information**

Several cameras capture the area from different selectable perspectives. In addition, assistance functions, for instance guidelines, can be faded into the display.

The following camera perspectives can be displayed:

- Automatic camera perspective, refer to page 223: the system shows the camera perspective suitable for the respective driving situation.
- ▶ Rearview camera, refer to page 223: for representing the areas behind the vehicle.
- ▶ Right-hand and left-hand side view, refer to page 226: for representing the areas on the sides of the vehicle.
- Camera perspective movable via iDrive, refer to page 223.
- ▶ Panorama View, refer to page 227: to present cross traffic, for instance at junctions

and driveways, depending on the currently engaged gear.

Depending on the view, the environment around the vehicle or a part of it is depicted.

# **Safety information**



#### Marning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. There is a risk of accident. Adjust driving style to traffic conditions, Watch traffic and vehicle surroundings closely and actively intervene where appropriate.

#### Overview

#### **Buttons in the vehicle**





Park assistance button




Panorama View

#### **Cameras**



Front camera

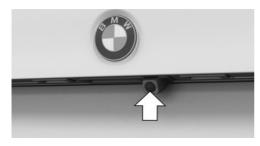

Rearview camera



One camera is located at the bottom of each exterior mirror housing.

The image quality may be impaired by dirt on the camera lenses. If required, clean the camera lenses.

# Switching on/off

# Switching on automatically

The system is switched on automatically if selector lever position R is engaged when the engine is running. See Park Distance Control, PDC.

The camera perspective suitable for the respective driving situation is displayed.

# Switching on/off manually



Press the park assistance button.

- ▷ On: the LED lights up.
- ▶ Off: the LED goes out.

The rearview camera cannot be switched off if the reverse gear is engaged.


# Automatic deactivation during forward travel

The system switches off when a certain driving distance or speed is exceeded.

Switch the system back on, if needed.

# **Camera perspective**

#### **Overview**

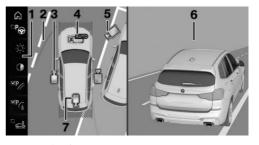

- 1 Function bar
- 2 Selection window
- 3 Side view
- 4 Automatic camera perspective
- 5 Movable camera perspective
- 6 Camera image
- 7 Rearview camera

#### Selection window

The individual camera perspectives can be selected in the selection window via iDrive.





#### Side view

The side view can be selected for the right or left vehicle side.

This view helps when positioning the vehicle at the curb or with other obstacles on the side by displaying the side surroundings.

The side view looks from rear to front and in case of danger, focuses automatically on possible obstacles.

#### **Automatic camera perspective**

The automatic camera perspective shows a steering-dependent view in the respective driving direction.

This perspective adapts to the respective driving situation.

As soon as obstacles are detected, the view changes to a fixed display of the area in front or at the rear behind the bumper or, if necessary, changes to a side view.

When reverse gear is engaged, the automatic camera perspective is closed and the system uses a fixed perspective of the rearview camera. If necessary, manually select the automatic camera perspective when reverse gear is engaged. The automatic camera perspective will be retained for the current parking maneuver.

### Movable camera perspective

With selection of the movable camera perspective, a circle appears on the Control Display.

By turning the Controller or via touch function, specified perspectives on the circle can be selected.

The current perspective is marked with a camera symbol.

With BMW Gesture Control: the movable camera perspective can be moved around the circle using BMW Gesture Control, refer to page 53.

To leave the circle, move the Controller sideways and press or tap the active camera symbol via the touchscreen.

#### Rearview camera

This view shows the picture of the rearview camera.

#### **Function bar**

Assistance functions, refer to page 224, can be activated via the function bar and settings applied.

- ▶ Parking Assistant", refer to page 229.
- ▶ ∵ "Brightness", refer to page 228.
- ▶ Prarking aid lines", refer to page 225.
- ▶ Pa "Obstacle marking", refer to page 225.
- ▶ J "Trailer hitch zoom", refer to page 225.
- ▶ "Car wash", refer to page 225.
- ▶ ⑤ "Settings": apply settings, for instance to use the activation points for Panorama View.

#### **Assistance functions**

#### **General information**

More than one assistance function can be active at the same time.

The following assistance functions can be manually activated:


- ▶ Prarking aid lines".
- ▶ ¶ "Obstacle marking".
- "Trailer hitch zoom".
- ▶ <u>◄</u> "Car wash".

The following assistance functions are automatically displayed:

- Side protection, refer to page 226.
- ▶ Door opening angle, refer to page 226.



#### **Pathway lines**

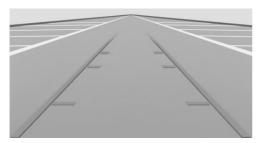

Pathway lines help you to estimate the space required when parking and maneuvering on level roads.

Pathway lines depend on the steering angle and are continuously adjusted to the steering wheel movements.

#### **Turning radius lines**



Turning radius lines can only be superimposed on the camera image together with pathway lines.


Turning radius lines show the course of the smallest possible turning radius on a level road.

Only one turning radius line is displayed after the steering wheel is turned past a certain angle.

# Parking using pathway and turning radius lines

 Position the vehicle so that the red turning radius line leads to within the limits of the parking space. 2. Turn the steering wheel to the point where the green pathway line covers the corresponding turning radius line.

### **Obstacle marking**

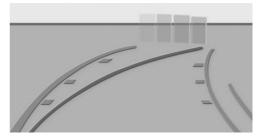

Obstacles behind the vehicle are detected by the PDC Park Distance Control sensors.

Obstacle markings can be shown in the camera image.

The colored thresholds of the obstacle markings match the markings of the PDC Park Distance Control.

#### Vehicle wash view



The vehicle wash view assists when entering a vehicle wash by displaying the floor and the vehicle's own track.

#### Zoom on trailer hitch

To make it easier to attach a trailer, you can zoom in on the view of the trailer hitch.







Two static circle segments show the distance between the trailer and the trailer hitch.

A docking line dependent on the steering angle helps with aiming for the trailer with the trailer hitch.

Show the trailer hitch via iDrive, refer to page 224.

When zooming in, remember that the view may no longer show certain obstacles.

#### Side protection

#### Concept

The system warns of obstacles on the side of the vehicle.

#### Display



To protect the sides of the vehicle, obstacle markings are displayed on the sides of the vehicle.

- ▶ No markings: no obstacles were detected.
- Color markings: warning against detected obstacles.

#### Limits of side protection

The system only displays stationary obstacles that were previously detected by sensors while passing them.

The system does not detect whether an obstacle moves later on. For this reason, at standstill, the markings are not shown anymore in the display after a certain time. The area next to the vehicle must be newly captured.

#### Door opening angle

#### Concept

If obstacle marking is activated, the system indicates fixed obstacles that obstruct the opening angles of the doors.

The system does not provide a warning of approaching traffic.



Steptronic transmission: the maximum opening angles of the doors are displayed in selector lever position P.

As soon as the vehicle begins moving, the opening angles are replaced by parking aid lines.

#### Limits of the display

The vehicle surroundings are displayed with distorted image for technical reasons.

Even if the symbols for the door opening angles do not cross other objects on the Control Display, the following needs to be noted when parking next to other objects:

Because of the perspective, higher, protruding objects may be closer than they appear on the Control Display.

#### **Panorama View**

#### Concept



The system provides an early look at cross traffic at blind driveways and intersections.

#### **General information**

Road users concealed by obstacles to the left and right of the vehicle can only be detected relatively late from the driver's seat. The cameras in the front and rear capture the sideways traffic area to improve the view.

Yellow lines in the screen display mark the front and rear end of the vehicle.

The camera image shows different levels of distortion in some areas and is thus not suitable for distance estimations.

### **Display on the Control Display**



Press the button when the engine is running.

Depending on the driving direction, the image of the respective camera is displayed:

- ▶ "front": front camera image.
- "rear": rear camera image.

Depending on the vehicle equipment, cross traffic warning, refer to page 234, can additionally warn against oncoming vehicles using radar sensors.

# With navigation system: activation points

#### Concept

Positions where Panorama View should switch on automatically can be stored as activation points provided that a GPS signal is received.

#### **General information**

Up to ten activation points can be stored.

Activation points can be used when driving forward for the front camera.

#### Storing activation points

- 1. Drive to the position at which the system is to be switched on, and stop.
- - Press the button.
- 3. Move the Controller to the left.
- 4. \*\* "Add activation point"

  The current position is displayed.
- 5. "Add activation point"

Activation points are, if possible, stored with town/city and street address, or else with the GPS coordinates.

#### Using activation points

The use of activation points can be switched on and off.

- 윤
- Press the button.
- 2. Move the Controller to the left.
- 3. 🕲 "Settings"
- 4. "Panorama view, GPS-based"
- 5. "Panorama view, GPS-based"

# Displaying activation points



- Press the button.
- 2. Move the Controller to the left.
- 3. ► "Show activation points"



A list of all activation points is displayed.

#### Renaming or deleting activation points



1. Press the button.

- 2. Move the Controller to the left.
- 3. ► "Show activation points" A list of all activation points is displayed.
- 4. Select an activation point as needed.
- 5. ▶ "Rename"
  - ▶ "Delete this activation point"
  - ▶ "Delete all activation points"

# Setting brightness and contrast

Brightness and contrast can be adjusted with Surround View or Panorama View switched on.

Via iDrive:

- 1. Move the Controller to the left.
- 2. ▷ 🌣 "Brightness"
  - ▶ "Contrast"
- Set the desired value.

### **Functional limitations**

The system can be used only to a limited extent in the following situations:

- ▶ In poor light.
- In case of soiled cameras.
- ▶ With a door open.
- With the tailgate open.
- ▶ With exterior mirrors folded in.

Gray hatched areas with symbol, for instance open door, in the camera image mark areas that are currently not displayed.

# **System limits**

#### Non-visible areas

Because of the camera angle, the areas under the vehicle cannot be viewed by the cameras.

### **Detection of objects**

Very low obstacles as well as high, protruding objects such as ledges may not be detected by the system.

Some assistance functions also consider data from the PDC Park Distance Control.

Follow, refer to page 214, the notes in the PDC Park Distance Control chapter.

The objects displayed on the Control Display may be closer than they appear. Do not estimate the distance from the objects on the display.

#### Malfunction

A camera malfunction is displayed on the Control Display.



A yellow symbol is displayed and the recording range of the malfunctioning camera is displayed in black on the Control

Display.

#### Remote 3D View

### Concept

With the proper equipment, the BMW Connected App and the camera images from Surround View can be used to display the vehicle surroundings on a mobile device such as a smartphone.

The function displays a momentary view of the situation.

# **Functional requirements**

- Data transmission must be activated, refer to page **64**.
- ▶ BMW Connected App must be installed on the mobile device



Via iDrive:

- 1. With the standby state switched on: "My Vehicle"
- 2. "iDrive settings"
- 3. "Data privacy"
- 4. "Remote 3D View"


#### **Functional limitations**

The system may not be fully functional or may not be available in the following situations:

- ▶ In poor light.
- ▶ In case of soiled cameras.
- ▶ With a door or the tailgate open. Dark fields in the display indicate areas that are not recorded by the system.
- ▶ With exterior mirrors folded in.
- ▶ When other camera functions are being performed in the vehicle.
- ▶ When the vehicle moves faster than walking
- ▶ It may not be possible to use the function in every country.
- ▶ For reasons of data protection, the function can only be used three times within two hours.

# **Parking Assistant**

# Concept

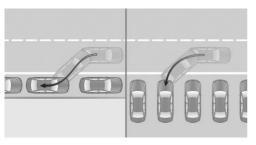

The system supports parking in the following situations:

- ▶ When parking parallel to the road, parallel parking.
- ▶ When reverse parking diagonally to the road, diagonal parking. The system orients itself with the middle of the parking space during diagonal parking.

#### General information

#### Handling

Parking assistant handling is divided into three steps:

- Switching on and activating.
- Parking space search.
- Parking.

System status and instructions on required actions are displayed on the Control Display.

Ultrasound sensors measure parking spaces on both sides of the vehicle

### Steptronic transmission

The parking assistant calculates the best possible parking line and takes control of the following functions during the parking procedure:

- Steering.
- Accelerating and braking.
- Changing the gears.

Press and hold the park assistance button for the duration of the parking procedure.

Parking is automatic.

# **Safety information**



#### Marning

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic conditions. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of accident. Adjust





driving style to traffic conditions. Watch traffic closely and actively intervene where appropri-



#### Warning

If the trailer hitch is used, the parking assistant can cause damage due to covered sensors. There may be a risk of accident or risk of damage to property. The parking assistant should not be used during trailer towing or if the trailer hitch is used, for instance bicycle rack.



#### ∧ NOTICE

The parking assistant can steer the vehicle over or onto curbs. There is a risk of damage to property. Watch traffic closely and actively intervene where appropriate.

The safety information for PDC Park Distance Control, refer to page 214, and for opening the tailgate, refer to page 94, applies in addition.

#### Overview


#### **Button in the vehicle**





Park assistance button

#### Ultrasound sensors

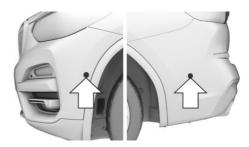

With the four side ultrasound sensors, arrows, and the ultrasound sensors of PDC Park Distance Control in the bumpers, the parking spaces are measured and the distances to obstacles determined.

# **Functional requirements**

#### Ultrasound sensors

Ensure full functionality:

- ▶ Do not cover sensors, for instance with stickers.
- ▶ Keep the sensors clean and unobstructed.

# For measuring parking spaces

- Maximum speed while driving forward approx. 22 mph/35 km/h.
- ▶ Maximum distance to row of parked vehicles: 5 ft/1.5 m.

### Suitable parking space

General information:

- ▶ Gap behind an object that has a min. length of 1.7 ft/0.5 m.
- ▶ Gap between two objects with a minimum length of approx. 1.7 ft/0.5 m.

Parallel parking to the road:

- ▶ Min. length of gap between two objects: your vehicle's length plus approx. 2.6 ft/0.8 m.
- ▶ Minimum depth: approx. 5 ft/1.5 m.

Diagonal parking:

1

- ▶ Minimum width of the gap: own vehicle's width plus approx. 2.3 ft/0.7 m.
- ▶ Minimum depth: your vehicle's length. The depth of diagonal parking spaces must be estimated by the driver. Due to technical limitations, the system is only able to approximate the depth of diagonal parking spaces.

#### For parking

- Doors and tailgate are closed.
- ▶ The parking brake is released.
- When parking in parking spaces on the driver's side, the corresponding turn signal must be switched on.

Steptronic transmission:

Driver's safety belt is fastened.

# Switching on and activating

# Switching on with the button



Press the park assistance button. The LED lights up.

The current status of the parking space search is indicated on the Control Display.

Parking assistant is activated automatically.

### Switching on with reverse gear

Shift into reverse.

The current status of the parking space search is indicated on the Control Display.

To activate: Po "Parking Assistant"

# **Display on the Control Display**

#### System activated/deactivated

Sym- bol	Meaning
P⊕	Gray: the system is not available. White: the system is available but not activated.
<b>P</b> ⊗∕	The system is activated.

# Parking space search and system status



- Symbol P on the vehicle image: the parking assistant is activated and the parking space search is active.
- Control Display shows suitable parking spaces at the edge of the road next to the vehicle symbol. When the parking assistant is active, suitable parking spaces are highlighted in color and a signal sounds. Switch signal tone on/off, refer to page 233.
- If a diagonal or parallel parking space is clearly detected, the system automatically adjusts the suitable parking method. In the case of parking spaces suitable for parallel and diagonal parking, a selection menu is displayed. In this case, the desired parking method must be selected manually.





The parking procedure is active. Steering control has been taken over by system.

 Parking space search is always active whenever the vehicle is moving forward slow and straight, even if the system is deactivated.
 When the system is deactivated, the displays on the Control Display are shown in gray.

# Parking using the parking assistant

#### **Parking**

Switching on and activating the parking assistant.

Engage the reverse gear and activate the system or press the parking assistance button, refer to page 231, on the Control Display.

Parking assistant is activated.

 Pass the row of parked vehicles at a speed of up to approx. 22 mph/35 km/h and at a distance of maximum 5 ft/1.5 m.

The status of the parking space search and possible parking spaces are displayed on the Control Display, refer to page 231.

3. Confirm the suggested parking space for the parking procedure: switch on the turn signal on the corresponding side.

The system takes over the steering.

Follow the instructions on the Control Display.

Steptronic transmission:


Press and hold the park assistance button for the duration of the parking procedure. At the end of the parking procedure, the P selector lever position is set.

The end of the parking procedure is indicated on the Control Display.

Adjust the parking position yourself, if needed.

#### Interrupting manually

The parking assistant can be interrupted at any time:

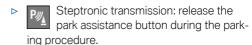

▶ Parking Assistant" Select the symbol on the Control Display.

#### Interrupting automatically

The system is interrupted automatically in the following situations:

- ▶ If the driver grasps the steering wheel or takes over steering.
- Possibly on snow-covered or slippery road surfaces.
- ▶ When there are obstacles that are hard to overcome, such as curbs.
- ▶ When there are obstacles that suddenly appear.
- ▶ If the PDC Park Distance Control displays clearances that are too small.
- ▶ If a maximum number of parking attempts or the time taken for parking is exceeded.
- ▶ When switching to another function on the Control Display.

Steptronic transmission:

- ▶ When the park assistance button is released.
- ▶ If the tailgate is open.
- ▶ If doors are open.
- When setting the parking brake.
- During acceleration.
- When the brake pedal remains pressed for an extended period while the vehicle is stationary.
- ▶ When unfastening the driver's safety belt.

A Check Control message is displayed.



An interrupted parking procedure can be continued. if needed.

Reactivate the parking assistant, refer to page 231, and follow the instructions on the Control Display.

# **Switching off**

The system can be switched off manually:



Press the park assistance button.

# Switching signal tone for suitable parking spaces on/off

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Parking"
- 4. "Parking Assistant"
- 5. "Sound if parking space detected"

The setting is stored for the driver profile currently used.

# **System limits**

# **Safety information**



#### Marning

The system is designed to operate in certain conditions and circumstances. Due to conditions or other factors, the system may not respond. There may be a risk of accident or risk of damage to property. Actively intervene as warranted. Refer to the information in this Owner's Manual regarding the scope of the system's operation and limitations.

# No parking assistance

The parking assistant does not offer assistance in the following situations:

- In tight curves.
- When towing a trailer.
- ▶ For diagonal parking spaces.

#### **Functional limitations**

The system may not be fully functional in the following situations:

- On bumpy road surfaces such as gravel roads.
- On slippery ground.
- On steep uphill or downhill grades.
- With accumulations of leaves/snow in the parking space.
- ▶ With a mounted emergency wheel.
- ▶ In case of changes to an already-measured parking space.
- ▶ With ditches or edges, for instance an edge of a port.

#### Limits of ultrasonic measurement

Ultrasonic measurements might not function in the following situations:

- ▶ For small children and animals.
- ▶ For persons with certain clothing, for instance coats.
- ▶ With external interference of the ultrasound, for instance from passing vehicles or loud machines.
- ▶ When sensors are dirty, iced over, damaged or out of position.
- ▶ Under certain weather conditions such as high relative humidity, wet conditions, snowfall, extreme heat, or strong wind.
- ▶ With tow bars and trailer couplings of other vehicles.
- ▶ With thin or wedge-shaped objects.
- With moving objects.
- ▶ With elevated, protruding objects such as ledges.



- ▶ With objects with corners, edges, and smooth surfaces.
- With objects with a fine surface structure such as fences.
- ▶ For objects with porous surfaces.
- ▶ With small and low objects, for instance boxes.
- ▶ With obstacles and persons at the edge of
- ▶ With soft obstacles or obstacles covered in foam material.
- With plants and bushes.
- ▶ Low objects already displayed, for instance curbs, can move into the blind area of the sensors before or after a continuous tone sounds
- Cargo that extends beyond the perimeter of the vehicle is not taken into account by the system.

Parking spaces that are not suitable may be detected or suitable parking spaces may not be detected at all.

#### Malfunction

A Check Control message is displayed.


The parking assistant failed. Have the system checked by a dealer's service center or another qualified service center or repair shop.

# **Cross traffic warning**

# Concept

At blind driveways or when driving out of diagonal parking spaces, approaching cross traffic is detected sooner by the system than is possible from the driver's seat.

#### **General information**

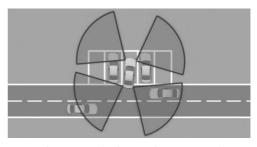

Two radar sensors in the rear bumper monitor the area behind the vehicle.

The system indicates approaching traffic.

Depending on the vehicle equipment, the traffic area in front of the vehicle is monitored as well. Two additional radar sensors are located in the front bumpers.

# **Safety information**

#### Marning

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

# Overview

#### **Button in the vehicle**





Park assistance button

#### Radar sensors



The radar sensors are located in the rear bumper.



Depending on the vehicle equipment, two additional radar sensors are located in the front bumpers.

Always keep the bumper in the area of the radar sensors clean and unobstructed.

# Switching on/off

# Activating/deactivating the system



1. Press the park assistance button.

- 2. Move the Controller to the left.
- 3. Settings"
- "Cross traffic alert"
- "Activate function"

# Switching on automatically

If the system was activated on the Control Display, it is automatically switched on as soon as PDC Park Distance Control or Panorama View is active and a gear is engaged.

If reverse gear is engaged, the rear system is switched on.

Depending on the vehicle equipment, the front system is switched on when a forward gear is engaged.

### Switching off automatically

The system is automatically switched off in the following situations:

- ▶ When the speed exceeds walking speed.
- ▶ With the steering and traffic jam assistant active: when a certain driving distance is exceeded.
- ▶ With an active parking operation of the parking assistant.

# **Warning**

#### General information

The respective display is called up on the Control Display. A signal tone may sound and the light in the exterior mirror may flash.

### Light in the exterior mirror




The light in the exterior mirror flashes if vehicles are detected by the rear sensors and your own vehicle is moving backwards.



# 1

# Display in the PDC Park Distance Control view

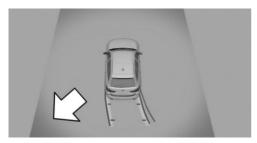


In the PDC Park Distance Control view, the respective boundary area flashes red, if vehicles are detected by the sensors.

- ▶ In tight curves.
- ▶ If the bumper is dirty, iced up, or covered, for instance by stickers.
- ▶ If the field of view of the sensors is covered, e.g., by garage walls, hedges or snow hills.
- ▶ If cargo protrudes.
- ▶ If crossing objects move at a very slow speed.
- ▶ If other objects are in the capture range of the sensors, that hide cross traffic.

If the trailer power socket is in use or trailer towing is activated, for instance during operation with trailer or bicycle rack, cross traffic warning is not available for the area behind the vehicle.

# Display in the camera view

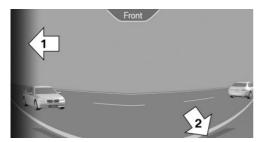

The respective boundary area, arrow 1, in the camera view flashes red, if vehicles are detected by the sensors.

Yellow lines, arrow 2, mark the bumper of your own vehicle.

### **Acoustic warning**

In addition to the optical indicator, a warning signal sounds if your own vehicle moves into the respective direction.

# **System limits**

The system may not be fully functional in the following situations:

- ▶ If the speed of the approaching vehicle is very high.
- ▶ In heavy fog, wet conditions, or snowfall.



# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# **Adaptive chassis**

### **Concept**

This system reduces undesirable vehicle motion when using a dynamic driving style or traveling on uneven road surfaces.

#### **General information**

This enhances the driving dynamics and driving comfort depending on the road surface condition and driving style.

### **Tuning**

The system offers several different damping settings.

The damping settings are assigned to the different driving modes of the Driving Dynamics Control, refer to page 139.

Driving mode	Damper tuning
COMFORT	Balanced out
ECO PRO	
SPORT	Firm

# **Adaptive M chassis**

### Concept

The Adaptive M chassis is a controllable sport chassis/suspension. This system reduces undesirable vehicle motion when using a dynamic driving style or traveling on uneven road surfaces.

This enhances the driving dynamics and driving comfort depending on the road surface condition and driving style.

#### General information

The system offers several different damping settings.

The damping settings are assigned to the different driving modes of the Driving Dynamics Control, refer to page 139.

Driving mode	Damper tuning
SPORT	Firm
SPORT PLUS	Firm
COMFORT/ECO PRO	Balanced out

# **Performance Control**

Performance Control enhances the agility of the vehicle.

To increase maneuverability, wheels are braked individually when a sporty driving style is used. The resulting braking power is simultaneously largely compensated by an engine intervention.





# Climate control

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# Interior air quality

The air quality in the vehicle is improved by the following components:

- ▶ Emission tested passenger compartment.
- Microfilter.
- ▶ Air conditioning system to control the temperature, air flow and recirculated-air mode.

Depending on the equipment specification:

- ▶ Microfilter/activated-charcoal filter.
- lonization.
- Fragrancing.
- Automatic recirculated-air control AUC.
- Parked-car ventilation.

# **Automatic climate control**


#### Overview

#### **Buttons in the vehicle**



#### **Climate control functions**

Button	Function
64	Temperature, refer to page 239.
AIC	Climate control operation, refer to page 239.
AUTO	AUTO program, refer to page 239.
	Recirculated-air mode, refer to page 240.
% %°	Air flow, manual, refer to page 240.
	Air distribution, manual, refer to page 240.

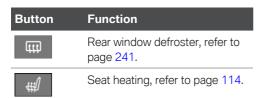

# Switching on/off

#### Switching on

Press any button except for the following:

- Rear window defroster.
- Left side of air flow button.
- Seat heating.

#### **Switching off**



Press and hold the left button until the system switches off.

# **Temperature**

### Concept

The automatic climate control achieves the set temperature as quickly as possible, if needed, by using the maximum cooling or heating capacity, and then keeps it constant.

# **Adjusting**



Turn the wheel to set the desired temperature.

Do not rapidly switch between different temperature settings. Otherwise, the automatic climate

control will not have sufficient time to adjust the set temperature.

# Air conditioning

#### Concept

The air in the car's interior will be cooled and dehumidified and, depending on the temperature setting, warmed again.

The car's interior can only be cooled with the drive-ready state switched on.

### Switching on/off

Press the button.

The LED is illuminated with air conditioning switched on.

Air conditioning is switched on with the engine running.

Depending on the weather, the windshield and side windows may fog up briefly when driveready state is switched on.

The cooling function is switched on automatically with the AUTO program.

When using the automatic climate control, condensation water develops and collects underneath the vehicle.

### **AUTO** program

# Concept

The AUTO program cools, ventilates or heats the car's interior automatically.

The air distribution and temperature are controlled automatically depending on the temperature in the car's interior and the desired temperature setting including the selected intensity of the air flow.

# Switching on/off

AUTO

Press the button.

The LED is illuminated with the AUTO program switched on.

Depending on the selected temperature and outside influences, the air is directed to the wind-





shield, side windows, upper body, and into the floor area.

The air conditioning, refer to page 239, is switched on automatically with the AUTO program.

Point the side vents toward the side windows.

The AUTO program is switched off automatically, when manual air distribution is set.

### Recirculated-air mode

#### Concept

You may react to unpleasant odors or pollutants in the immediate environment by temporarily suspending the supply of outside air. The system then recirculates the air flow within the vehicle.

#### **Operation**

Press the button:

The LED is illuminated when recirculated-air mode is switched on. The supply of outside air is shut off.

When recirculated-air mode is switched off, fresh air is directed into the vehicle's interior.

To prevent window fogging, recirculated-air mode switches off automatically after a certain amount of time, depending on the environmental conditions.

With constant recirculated-air mode, the air quality in the car's interior deteriorates and window fogging increases.

If there is window condensation, switch off recirculated-air mode or defog the windows, refer to page 240.

# Adjusting the air flow manually

# Concept

The air flow for climate control can be adjusted manually.

#### **Operation**



Press the left or right side of the button: to decrease or increase air flow.

The intensity is indicated by LEDs. The highest level is active when seven LEDs are lit.

The air flow of the automatic climate control may be reduced automatically to save battery power.

# Adjusting the air distribution manually

#### Concept

The air distribution for climate control can be adjusted manually.

### **Operation**



Turn the wheel to select the desired program or the desired intermediate setting.

- Windows.
- Upper body region.
- Windows, upper body region, and floor area.
- ▶ Iloor area.

# To defrost windows and remove condensation

### Concept

Ice and condensation are quickly removed from the windshield and the front side windows.

# **Adjusting**

Make the following settings to defrost the windows and remove condensation:

- Direct the air distribution onto the windows.
- ▶ Increasing the air flow.
- ▶ Increase the temperature.



### Rear window defroster



Press the button. The LED lights up.

The function is available with the engine running. The rear window defroster switches off automatically after a certain period of time.

#### **Microfilter**

The microfilter removes dust and pollen from the incoming air.


Have this filter changed during vehicle maintenance, refer to page 340.

# Automatic climate control with enhanced features

### **Overview**

AIC

# **Buttons in the vehicle**

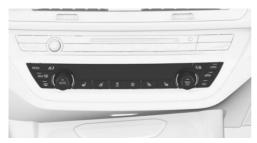

#### **Climate control functions**

Button	Function
AUTO	Temperature, refer to page 242.

Climate control operation, refer to page 242.

Button	Function
MAX A/C	Maximum cooling, refer to page 242.
AUTO	AUTO program, refer to page 242.
	Recirculated-air mode, refer to page 243.
% % % % % % % % % % % % % % % % % % %	Air flow, manual, refer to page 244.
€,•	Air distribution, manual, refer to page 244.
SYNC	SYNC program, refer to page 244.
MAX	Defrost and defog window, refer to page 244.
(tt)	Rear window defroster, refer to page 245.
Æ	Active seat ventilation, refer to page 115.
#	Seat heating, refer to page 114.
MENU	Opening the Climate menu, refer to page 241.
	For the following settings, for instance: upper body temperature adjustment, parked-car ventilation.

# **Opening the Climate menu**



Press the button.

The Climate menu is displayed.

All the climate control functions which can adjusted via iDrive can be called up via the Climate menu, e.g., upper body temperature adjustment, parked-car ventilation.





# Switching on/off

### **Switching on**

Press any button except for the following:

- Rear window defroster.
- ▶ Left side of air flow button.
- ▶ SYNC program.
- Seat heating.
- Seat ventilation.

### **Switching off**



Press and hold the left button until the system switches off.

### **Temperature**

#### Concept

The automatic climate control achieves the set temperature as quickly as possible, if needed, by using the maximum cooling or heating capacity, and then keeps it constant.

### **Adjusting**



Turn the wheel to set the desired temperature.

Do not rapidly switch between different temperature settings. Otherwise, the automatic climate

control will not have sufficient time to adjust the set temperature.

# Air conditioning

# Concept

The air in the car's interior will be cooled and dehumidified and, depending on the temperature setting, warmed again.

The car's interior can only be cooled with the drive-ready state switched on.

# Switching on/off

Press the button.

The LED is illuminated with air conditioning switched on.

Air conditioning is switched on with the engine running.

Depending on the weather, the windshield and side windows may fog up briefly when driveready state is switched on.

The cooling function is switched on automatically with the AUTO program.

When using the automatic climate control, condensation water develops and collects underneath the vehicle.

# **Maximum cooling**

### Concept

The system is set to the lowest temperature, optimum air flow and recirculated-air mode with the drive-ready state switched on.

#### **General information**

The function is available with external temperatures above approx. 32  $^{\circ}$ F/0  $^{\circ}$ C and with the drive-ready state switched on.

# Switching on/off

MAX A/C

Press the button.

The LED is illuminated with the system switched on.

Air flows out of the vents to the upper body region. The vents need to be open for this.

Adjust air flow on the driver's side with the program active.

# **AUTO** program

# Concept

The AUTO program cools, ventilates or heats the car's interior automatically.

The air distribution and temperature are controlled automatically depending on the temperature in the car's interior and the desired temperature setting including the selected intensity of the air flow.

### Switching on/off

AUTO

Press the button.

The LED is illuminated with the AUTO program switched on.

Depending on the selected temperature, the intensity of the AUTO program, and outside influences, the air is directed to the windshield, side windows, upper body, and into the floor area.

The air conditioning, refer to page 242, is switched on automatically with the AUTO program.

Point the side vents toward the side windows.

At the same time, a condensation sensor controls the program so as to prevent window condensation as much as possible.

The AUTO program is switched off automatically, when manual air distribution is set.

### **Intensity**

With the AUTO program switched on, the intensity can be adjusted. This changes the automatic control for the air flow and air distribution.



Press the left or right side of the button: to decrease or increase intensity.



Press the lower or upper side of the button: decrease or increase intensity.

The selected intensity is shown on the display of the automatic climate control.

# Automatic recirculated-air control AUC

# Concept

The automatic recirculated-air control AUC recognizes odors or pollutants in the outside air.

The outside air supply is shut off and the interior air is recirculated.

#### **General information**

If the system is activated, a sensor detects pollutants in the outside air and controls the shut-off automatically.

If the system is deactivated, outside air continuously flows into the car's interior.

With constant recirculated-air mode, the air quality in the car's interior deteriorates and window fogging increases.

# Switching on/off

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Climate functions"
- 4. If necessary, "Air quality"
- 5. "Automatic air recirculation"

If there is window condensation, switch off recirculated-air mode or defog the windows, refer to page 244.

# Recirculated-air mode

# Concept

You may react to unpleasant odors or pollutants in the immediate environment by temporarily suspending the supply of outside air. The system then recirculates the air flow within the vehicle.

### **Operation**



Press the button:

The LED is illuminated when recirculated-air mode is switched on. The supply of outside air is shut off.

When recirculated-air mode is switched off, fresh air is directed into the vehicle's interior.





With constant recirculated-air mode, the air quality in the car's interior deteriorates and window fogging increases.

To prevent window fogging, recirculated-air mode switches off automatically after a certain amount of time, depending on the environmental conditions.

If there is window condensation, switch off recirculated-air mode or defog the windows, refer to page 244.

# Adjusting the air flow manually

### Concept

The air flow for climate control can be adjusted manually.

#### **General information**

To adjust the air flow manually switch off AUTO program first.

#### **Operation**



Press the left or right side of the button: to decrease or increase air flow.

The selected air flow is shown on the display of the automatic climate control.

The air flow of the automatic climate control may be reduced automatically to save battery power.

# **Controlling the air distribution manually**

# Concept

The air distribution for climate control can be adjusted manually.

# **Operation**



Press the button repeatedly to select a program:

▶ Windows, upper body region, and floor area.

- Upper body region and floor area.
- Floor area.
- Windows and floor area.
- ▶ Windows: driver's side only.
- Windows and upper body.
- Upper body region.

The selected air distribution is shown on the display of the automatic climate control.

If there is window condensation, defog the windows, refer to page 244.

# **SYNC** program

#### Concept

The following settings of the driver's side can be transferred to the front-passenger side and the rear:

- Temperature.
- Air distribution

### Switching on/off

SYNC Press the button.

The LED is illuminated with the SYNC program switched on.

The program is switched off automatically if the settings on the front passenger side or in the rear are changed.

The program is switched off automatically if the settings on the front passenger side or in the rear are changed.

# To defrost windows and remove condensation

# Concept

Ice and condensation are quickly removed from the windshield and the front side windows.

# Switching on/off



Press the button.

The LED is illuminated with the system switched on.

The air flow can be adjusted manually with the system switched on.



If there is window condensation, press the button or switch on the air condi-

tioning to utilize the condensation sensor. Make sure that air can flow to the windshield.

#### Rear window defroster



Press the button. The LED lights up.

The function is available with the engine running. The rear window defroster switches off automatically after a certain period of time.

# Microfilter/activated-charcoal filter

The microfilter removes dust and pollen from the incoming air.

The activated-charcoal filter also removes gaseous pollutants from the outside air that enters the vehicle.

Have this combined filter changed during vehicle maintenance, refer to page 340.

# **Ventilation**

# Concept

The air flow directions can be individually adjusted.

# Adjusting the ventilation

#### **General information**

The air flow directions can be adjusted for direct or indirect ventilation.

Open the vents and position them to ensure effective climate control.

#### **Direct ventilation**


The air flow is directed towards the passengers. The air flow heats or cools noticeably, depending on the adjusted temperature.

#### Indirect ventilation

The air flow is not directed towards the passengers. The car's interior is warmed or cooled indirectly, depending on the set temperature.

#### Front ventilation

#### **Overview**

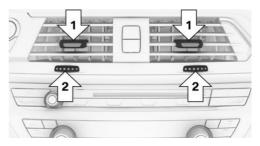

- Lever for changing the air flow direction, arrow 1.
- ➤ Thumbwheel for variable opening and closing of the vents, arrow 2.

# Varying the temperature of the ventilation

#### **General information**

The temperature of the ventilation in the upper body area can be varied.

The temperature is individually adjusted, e.g. colder toward blue, warmer toward red.

The air flow of the ventilation in the upper body region heats or cools noticeably, depending on the adjusted temperature.

This does not change the set interior temperature for the driver and front passenger.






#### **Adjusting**

#### Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. If necessary, "Climate functions"
- 4. "Temperature adjustment, upper body"
- 5. Set the desired temperature.
  - ▶ Toward blue: colder.
  - ▶ Toward red: warmer.

# Ventilation in rear, center

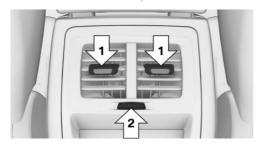

- Lever for changing the air flow direction, arrow 1.
- ➤ Thumbwheel for variable opening and closing of the vents, arrow 2.

# Rear automatic climate control

#### **Overview**

#### **Buttons in the vehicle**



#### **Climate control functions**

Button	Function
▼ ▲	Temperature, refer to page 247.
AUTO	AUTO program, refer to page 247.
=, •	Air distribution, manual, refer to page 247.
OFF	Switches off the system, refer to page 246.
#	Seat heating, refer to page 114.

# Climate control functions in detail

### Switching on/off

#### Via iDrive

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Climate functions"
- 4. "Rear climate"

The rear automatic climate control is not ready for operation if the automatic climate control is switched off or if the function for defrosting the windows and removing condensation is active.

#### Using the button: switching on

Press any button except for the following:

- ▶ OFF button.
- Seat heating.

#### Using the button: switching off



Press the button.



#### Concept

The automatic climate control achieves the set temperature as quickly as possible, if needed, by using the maximum cooling or heating capacity, and then keeps it constant.

#### **Adjusting**



Press the left or right side of the button: to decrease or increase temperature.

The selected temperature is shown on the display of the automatic climate control.

Do not rapidly switch between different temperature settings. Otherwise, the automatic climate control will not have sufficient time to adjust the set temperature.

#### **AUTO** program

#### Concept

Air flow, air distribution and temperature are controlled automatically.

#### Switching on/off



Press the button.

The LED is illuminated with the AUTO program switched on.

Depending on the selected temperature and outside influences, the air is directed to the upper body and into the floor area.

# Adjusting the air distribution manually

#### Concept

The air distribution for climate control can be adjusted manually.

#### Operation



Press the button repeatedly to select a program:

- Upper body region.
- Upper body region and floor area.
- Floor area.

# Parked-car ventilation

# Concept

The car's interior can be cooled or heated before driving off with the parked-car ventilation. Depending on set temperature and ambient temperature, the car's interior is ventilated or possibly heated using the residual engine heat.

#### **General information**

The system can be switched on and off directly or via a preset departure time.

The activation time is determined based on the external temperature. The system promptly switches on before the selected departure time.

# **Functional requirements**

- ➤ The vehicle is in idle state or standby state and not in drive-ready state.
- ▶ Battery is sufficiently charged. If parked-car ventilation is switched on, the vehicle battery will be discharged. Thus, limit the maximum activation time to save the vehicle battery. The system will be available again after the engine is started or after a short trip.
- ▶ Make sure that the vehicle's date and time are set correctly.
- ▶ Open the vents to allow air to flow out.

# 1

# Switching on/off directly

#### **General information**

There are different ways to switch the system on or off.

The system switches off automatically after a certain period of time. The system continues to run for some time after being switched off.

### **Using the button**

#### General information

When the vehicle is in standby state, the parkedcar ventilation can be switched on or off via the automatic climate control buttons.

#### Switching on

Press any button except:

- Rear window defroster.
- Left side of air flow button.
- Seat heating.
- SYNC program.
- ▶ MENU.

#### Switching off



Press and hold the left side of the but-

The system switches off after leaving and locking the vehicle.

#### Via iDrive

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. If necessary, "Climate functions"
- 4. "Comfort ventilation" or "Comfort heating/ ventilation"
- 5. "Activate now"

#### Via BMW display key

#### Switching on

- Switch on the display of the BMW display key.
- 2. "Precondit. setting"
- 3. Tap the \( \mathbb{S} \) symbol or the \( \mathbb{S} \) symbol.
- 4. "Activate now"
- 5. "Start"

#### Switching off

- Switch on the display of the BMW display key.
- 2. "Precondit. setting"
- 3. Tap the \mathscr{A} symbol or the \mathscr{A} symbol.
- 4. "Stop"

### **Display**

Symbol on the automatic climate control indicates the system is switched on.

REST is displayed on the automatic climate control. The residual engine heat is used.

# Departure time

### Concept

Different departure times can be set to ensure a comfortable interior temperature in the vehicle at the time of departure.

One-time departure time: the time can be set.

The system is switched on once.

Departure time with weekday: time and day of the week can be set.

On the desired weekdays, the system will be switched on promptly before the set departure time.

The departure time is preselected in two steps:

- Set departure times.
- Activate departure times.

A minimum of 10 minutes should pass between setting/activating the departure time and the planned departure time to allow a sufficient period of time for the climate control.

### Setting the departure time

#### Via iDrive

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. If necessary, "Climate functions"
- "Comfort ventilation" or "Comfort heating/ ventilation"
- 5. Select the desired departure time.
- 6. Set the departure time.
- 7. Select day of the week, if needed.

#### Via BMW display key

- Switch on the display of the BMW display key.
- 2. "Precondit. setting"
- 3. Tap the \mathscr{C} symbol or the \mathscr{C} symbol.
- 4. Select the desired departure time.
- 5. Set the departure time.
- 6. Select day of the week, if needed.
- 7. "OK"

# Activating the departure time

#### **Functional requirement**

If a departure time is to influence the switching on of parked-car ventilation, the respective departure time must be activated first.

#### Via iDrive

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. If necessary, "Climate functions"
- "Comfort ventilation" or "Comfort heating/ ventilation"

- 5. "For departure time"
- 6. Activate the desired departure time.

#### Via BMW display key

- Switch on the display of the BMW display key.
- 2. "Precondit. setting"
- 3. Tap the & symbol or the & symbol.
- 4. Tap on the symbol.
- 5. Activate the desired departure time.

#### **Display**

So The symbol on the automatic climate control signals an activated departure time.

# **Ambient air package**

# **Concept**

The Ambient Air Package can be used to clean and scent the interior air with high-quality fragrances.

lonization is used to clean the air from suspended particles. Together with the selected fragrance, ionization contributes to well-being and relaxation while driving.

### **General information**

Two different fragrances can be selected in the vehicle. A variety of other fragrances is possible by replacing the fragrance cartridges.

The following criteria can influence the perception of scents in the car's interior:

- Automatic climate control settings.
- Temperature and air humidity.
- Time of day and season.
- Physical condition of the vehicle occupants, for instance fatique.

BMW recommends the use of genuine BMW fragrance cartridges.





The genuine BMW fragrance cartridges are not suitable for refilling. When a cartridge is empty, replace it with a new fragrance cartridge.

# **Safety information**



#### Warning

Refilled genuine BMW fragrance cartridges can cause the emission of harmful substances, malfunctions, and damage to the system. There is a risk of injury or risk of damage to property. Do not refill genuine fragrance cartridges. When a cartridge is empty, replace it with a new fragrance cartridge.

#### Ionization

#### Concept

lonization cleans the car's interior air of suspended particles.

### Switching on/off

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Climate functions"
- 4. If necessary, "Air quality"
- 5. "lonization"

The climate control display indicates that ionization is switched on.

# **Fragrancing**

#### **General information**

Fragrancing is done at intervals in order to avoid a habituation effect.

Two fragrance cartridges in the vehicle allow switching between the fragrances.

The fragrance cartridges are located in the glove compartment.

To ensure a pleasant fragrance inside of the vehicle when starting the trip, fragrancing can occur prior to the trip. The system is automatically switched on with the parked-car ventilation if fragrancing was switched on at the end of the last trip.

#### **Functional requirements**

- ▶ Fragrance cartridges are sufficiently filled.
- ▶ Interior temperature between 41 °F/+5 °C and 104 °F/+40 °C.
- Open the vents to allow the fragrance to flow out.

#### Selecting the fragrance

Two different fragrances can be selected in the vehicle.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- "Climate functions"
- 4. "Fragrance"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

### Switching fragrancing on/off, adjusting intensity

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Climate functions"
- 4. "Fragrance"
- 5. "Level"
- 6. Select the desired setting.

# **Display**

The illustrations on the Control Display show the actual filling level of the fragrance cartridges.

#### Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Climate functions"
- "Fragrance"
   The fill level of the current fragrance is displayed.
- 5. Select the desired setting.


When an empty fragrance cartridge is indicated, the cartridge still contains a fluid carrying the fragrance. However, it is not sufficient for fragrancing.

When a fragrance cartridge requires replacement, a Check Control message is displayed

#### **Inserting fragrance cartridges**

The fragrance cartridges are located in the glove compartment.

- 1. Open the glove compartment, refer to page 260.
- 2. Press on the bottom of the cartridge holder. The cartridge holder slides down.

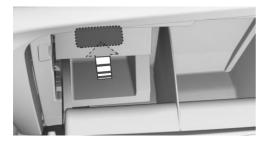

Remove the cover of the fragrance cartridge.
 Hold the cover on the top to slide it from the fragrance cartridge.



4. Insert the removed cover on the back side of the fragrance cartridge.



5. Position fragrance cartridge such that the chip faces away from the cartridge holder.







Insert the fragrance cartridge without pressure into the cartridge holder. The cartridge snaps lightly into place.




- Push the cartridge holder up, until it engages.
   Make sure that no objects press against the cartridge holder from below, otherwise the function of the ambient air package could be impacted.
- 8. Close the glove compartment.

### Removing the fragrance cartridge

The fragrance cartridges are located in the glove compartment.

- 1. Open the glove compartment, refer to page 260.
- 2. Press on the bottom of the cartridge holder. The cartridge holder slides down.

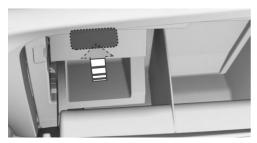

3. Pull desired fragrance cartridge from the holder.

Fragrance cartridge, arrow 1: first fragrance indicated on the Control Display.

Fragrance cartridge, arrow 2: second fragrance indicated on the Control Display.



4. Pull desired fragrance cartridge from the holder.



### Recycling



Empty fragrance cartridges can be taken to a dealer's service center or another qualified service center or repair shop for

recycling.



# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# **Integrated Universal Remote Control**

#### Concept

The integrated Universal Remote Control in the interior mirror can operate up to 3 functions of remote-controlled systems such as garage door drives, barriers, or lighting systems.

#### **General information**

The Integrated Universal Remote Control replaces up to 3 different hand-held transmitters. To operate the remote control, the buttons on the interior mirror must be programmed with the desired functions. The hand-held transmitter for the particular system is required in order to program the remote control.

Before selling the vehicle, delete the stored functions for the sake of security.

If possible, do not install the antenna of the remote-controlled system, e.g. the garage door drive, near metal objects to ensure the best possible operation.

### **Safety information**



#### 🗥 Warning

The operation of remote-controlled systems with the integrated universal remote control, such as the garage door, may result in injury, for example, body parts becoming jammed in a garage door. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the respective system is clear during programming and operation. Also follow the safety information of the hand-held transmitter.

### Compatibility



If this symbol is printed on the packaging or in the owner's manual of the system to be controlled, the system is generally

compatible with the integrated Universal Remote Control.

Additional questions are answered by:

- A dealer's service center or another qualified service center or repair shop.
- www.homelink.com on the Internet.

HomeLink is a registered trademark of Gentex Corporation.





# Control elements on the interior mirror



- ▶ Buttons, arrow 1.
- ▶ LED, arrow 2.
- ➤ The hand-held transmitter, arrow 3, is required for programming.

#### **Programming**

#### General information

The battery of the hand-held transmitter must be fully charged at the time of programming to ensure an optimal range of the integrated universal remote control.

- 1. Switch on standby state.
- 2. Initial setup:

Press and hold the two outer buttons on the interior mirror simultaneously for approximately 10 seconds until the LED flashes green rapidly. This erases all programming of the buttons on the interior mirror.

- Press the interior mirror button to be programmed. The LED on the interior mirror will slowly begin flashing orange.
- Hold the hand-held transmitter for the system to be used approx. 1 to 12 in/2.5 to 30 cm away from the buttons on the interior mirror. The required distance depends on the handheld transmitter.
- 5. Press and hold the button of the desired function on the hand-held transmitter.

Canada: if programming with the hand-held transmitter was interrupted, hold down the interior mirror button and repeatedly press and release the hand-held transmitter button for 2 seconds.

6. ▶ The LED lights up green: programming completed.

Release the button.

➤ The LED flashes fast: programming is not complete.

Press the button on the interior mirror for 2 seconds and release. Perform this procedure three times to complete the programming procedure.

If the integrated universal remote control remains nonoperational, continue with the special features for change code wireless systems.

▶ LED does not flash green after 60 seconds: programming not completed.

Repeat steps 3 to 6.

To program other functions on other buttons, repeat steps 3 to 5.

# Special feature of the rolling code wireless system

If you are unable to operate the remote-controlled system after repeated programming, please check if the system to be controlled features a rolling code radio system.

Refer to the owner's manual for the system.

For systems with a rolling code radio system, the integrated Universal Remote Control and the system also have to be synchronized.

Please read the owner's manual to find out how to synchronize the system.

Synchronizing is easier with the aid of a second person.



- 1. Park the vehicle within range of the remotecontrolled system.
- 2. Program the relevant button on the interior mirror as described.
- 3. Locate and press the synchronizing button on the system being programmed, e.g. at the garage gate. You have approx. 30 seconds for the next step.
- 4. Hold down the programmed button on the interior mirror for approximately 3 seconds and then release it. If necessary, repeat this step up to three times in order to finish synchronization. Once synchronization is complete, the programmed function will be carried out.

#### Reprogramming individual **buttons**

- 1. Switch on standby state.
- 2. Press and hold the interior mirror button to be programmed.
- 3. As soon as the LED on the interior mirror flashes orange after approx. 20 seconds, release the button.
- 4. Hold the hand-held transmitter for the system to be used approx. 1 to 12 in/2.5 to 30 cm away from the buttons on the interior mirror. The required distance depends on the handheld transmitter.
- 5. Press and hold the button of the desired function on the hand-held transmitter.
  - Canada: if programming with the hand-held transmitter was interrupted, hold down the interior mirror button and repeatedly press and release the hand-held transmitter button for 2 seconds.
- 6. The LED can light up in different ways.
  - ▶ The LED lights up green: the programming procedure is completed.
    - Release the button.

- ▶ The LED flashes fast: the hand-held transmitter was detected but programming is not complete.
  - Press the button on the interior mirror for 2 seconds and release. Perform this procedure three times to complete the programming procedure.
  - If the integrated universal remote control remains nonoperational, continue with the special features for change code wireless systems.
- ▶ LED does not flash green after 60 seconds: programming not completed. Repeat steps 3 to 6.

#### **Operation**

#### Warning

The operation of remote-controlled systems with the integrated universal remote control, such as the garage door, may result in injury, for example, body parts becoming jammed in a garage door. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the respective system is clear during programming and operation. Also follow the safety information of the hand-held transmitter.

The system, such as the garage door, can be operated using the button on the interior mirror while the drive-ready or standby state is switched on. To do this, hold down the button within receiving range of the system until the function is activated. The interior mirror LED stays lit while the wireless signal is being transmitted.

#### **Deleting stored functions**

All stored functions will be deleted. The functions cannot be deleted individually.

Press and hold the two outer buttons on the interior mirror simultaneously for approximately





10 seconds until the LED on the interior mirror flashes green rapidly.

### **Sun visor**

#### Glare shield

Fold the sun visor down or up.

#### Glare shield from the side

#### **Folding out**

- 1. Fold the sun visor down.
- 2. Unhook it from the holder and swing it to the side.

#### Folding up

Proceed in the reverse order to close the sun visor.

## **Vanity mirror**

A vanity mirror is located in the sun visor behind a cover. When the cover is opened, the mirror lighting switches on.

# **Ashtray**

#### Front center console

#### **Opening**

Slide the cover forward.



2. The ashtray is located in a cup holder. Fold the ashtray cover upward.



#### **Emptying**



Pull the ashtray with the closed cover out of the cup holder.

# **Cigarette lighter**

#### **Safety information**



#### Marning

Contact with the hot heating element or the hot socket of the cigarette lighter can cause burns. Flammable materials can ignite if the cigarette lighter falls down or is held against the objects. There is a risk of fire and injuries. There is a risk of damage to property. Take hold of the cigarette lighter by its handle. Make sure that children do not use the cigarette lighter.



#### ∧ NOTICE

If metal objects fall into the socket, they can cause a short circuit. There is a risk of damage to property. Replace the cigarette lighter or socket cover again after using the socket.

#### Front center console



Slide the cover forward.



The cigarette lighter is located between the cup holders.

### **Operation**



Push in the cigarette lighter.

The cigarette lighter can be removed as soon as it pops back out.

### **Sockets**

#### **Concept**

The lighter socket can be used as a socket for electrical equipment when standby and driveready state are switched on.

#### General information

The total load of all sockets must not exceed 140 watts at 12 volts.

Do not damage the socket by using non-compatible connectors.

### **Safety information**



#### Marning

Devices and cables in the unfolding area of the airbags, such as portable navigation devices, can hinder the unfolding of the airbag or be thrown around in the car's interior during unfolding. There is a risk of injury. Make sure that devices and cables are not in the airbag's area of unfolding.



#### ∧ NOTICE

Battery chargers for the vehicle battery can work with high voltages and currents, which means that the 12 volt on-board network can be overloaded or damaged. There is a risk of damage to property. Only connect battery chargers for the vehicle battery to the starting aid terminals in the engine compartment.



#### ⚠ NOTICE

If metal objects fall into the socket, they can cause a short circuit. There is a risk of damage to property. Replace the cigarette lighter or socket cover again after using the socket.



#### Front center console



Slide the cover forward.



A socket is located between the cup holders. Pull off the cover.

## In the cargo area



A socket is located on the right side in the cargo area. Unfold the cover.

## **USB** interface

#### General information

Follow the information regarding the connection of mobile devices to the USB interface in the section on USB connections, refer to page 71.

#### In the center armrest



A USB interface is located in the center armrest. Properties:

- ▶ USB port Type C.
- ▶ For charging of mobile devices.
- ▶ Charge current: max. 3 A.
- ▶ With navigation system: for data transfer.

#### In the center console



#### ⚠ NOTICE

Objects in the storage compartment, e.g., large USB connectors, may block or damage the cover when it is being opened or closed. There is a risk of damage to property. Make sure that the area of movement of the cover is clear while opening and closing it.

For charging of mobile devices.Charge current: 3 A per connection.



Slide the cover forward.



A USB interface is located in the center console.

#### Properties:

- ▶ USB port Type A
- ▶ For charging mobile devices and for data transfer.
- ▶ Charge current when equipped with telephone service: max. 2.1 A.

#### In the rear center console



A USB interface with two USB ports is located in the center console in the rear.

#### Properties:

▶ USB port Type C.





# Storage compartments

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# **Safety information**

# Warning

Loose objects or devices with a cable connection to the vehicle, for instance mobile phones, can be thrown into the car's interior while driving, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Secure loose objects or devices with a cable connection to the vehicle in the car's interior.

#### ∧ NOTICE

Anti-slip pads such as anti-slip mats can damage the dashboard. There is a risk of damage to property. Do not use anti-slip pads.

# Storage compartments

The following storage compartments are available in the car's interior:

▶ Glove compartment on the front passenger side, refer to page 260.

- ▶ Glove compartment on the driver's side, refer to page 261.
- ▶ Compartments in the doors, refer to page 261.
- ▶ Storage compartment in the center console, refer to page 261.
- ▶ Center armrest, refer to page 262.
- ▶ Storage compartment in the rear center console, refer to page 262.
- Pockets on the backrests of the front seats.

# Glove compartment

#### Front passenger side

#### Safety information

#### Warning

Folded open, the glove compartment protrudes in the car's interior. Objects in the glove compartment can be thrown into the car's interior while driving, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Always close the glove compartment immediately after using it.

#### **Opening**



Pull the handle.

The light in the glove compartment switches on.

#### Closing

Fold cover closed.

#### Locking

The glove compartment can be locked with an integrated key. This prevents access to the glove compartment.

After the glove compartment is locked, the vehicle key can be handed over without the integrated key, for instance when the vehicle is parked by valet parking.

#### Driver's side

#### **Safety information**



#### Marning

Folded open, the glove compartment protrudes in the car's interior. Objects in the glove compartment can be thrown into the car's interior while driving, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Always close the glove compartment immediately after using it.

#### **Opening**



Pull the handle.

#### Closing

Fold cover closed.

# Compartments in the doors

#### General information

There are storage compartments in the doors.

### **Safety information**

#### Marning

Breakable objects, such as glass bottles or glasses, can break in the event of an accident or a braking or evasive maneuver. Broken glass can be scattered in the car's interior. There is a risk of injury or risk of damage to property. Do not use any breakable objects while driving. Only stow breakable objects in closed storage compartments.

# Storage compartment in the center console

#### **Opening**



Slide the cover forward.

#### Closina

Slide the cover rearward.

## 1

# Storage compartment in the rear center console

The rear center console contains one or two storage compartments.

#### **Center armrest**

#### **Front**

#### **General information**

A storage compartment is located in the center armrest between the seats.

#### **Opening**



Press the button.

#### Closing

Press cover down until it engages.

# **Cup holders**

#### **Safety information**



Unsuitable containers in the cup holders may damage the cup holders or be thrown about the car's interior in the event of an accident, an evasive maneuver, or forceful braking. Spilled liquids can distract from the traffic conditions and lead to an accident. Hot drinks can damage

the cup holder or lead to scalding. There is a risk of injury or risk of damage to property. Do not force objects into the cup holder. Use lightweight, shatterproof, and sealable containers. Do not transport hot beverages.

#### **Front**

#### **Opening**



Slide the cover forward.



Two cup holders are located in the center console.

#### Closing

Slide the cover rearward.



#### **Safety information**



#### ∧ NOTICE

With an open cup holder, the center armrest cannot be folded back up. There is a risk of damage to property. Press back the covers before the center armrest is folded up.

#### **Opening**

- 1. Fold the center armrest forward.
- Press the button.



### Closing

Press both covers inward back against each other.

#### Clothes hooks

# **Safety information**



#### Warning

Clothing articles on the clothes hooks can obstruct the view while driving. There is a risk of accident. When suspending clothing articles from the clothes hooks, ensure that they will not obstruct the driver's view.

#### Warning

Improper use of the clothes hooks can lead to a risk of objects flying about during braking and evasive maneuvers. There is a risk of injury and risk of damage to property. Only hang lightweight objects, for instance clothing articles, from the clothes hooks.

#### General information

The clothes hooks are located in the grab handles in the rear.



# Cargo area

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# Loading

#### **Safety information**

#### Marning

High gross weight can overheat the tires, damage them internally and cause a sudden drop in tire inflation pressure. Driving characteristics may be negatively impacted, reducing lane stability, lengthening the braking distances and changing the steering response. There is a risk of accident. Pay attention to the permitted load capacity of the tires and never exceed the permitted gross weight.

## Marning

Loose objects or devices with a cable connection to the vehicle, for instance mobile phones, can be thrown into the car's interior while driving, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Secure loose objects or devices with a cable connection to the vehicle in the car's interior.

#### Marning

Improperly stowed objects can shift and be thrown into the car's interior, for instance in the event of an accident or during braking and evasive maneuvers. Vehicle occupants can be hit and injured. There is a risk of injury. Stow and secure objects and cargo properly.

#### ∧ NOTICE

Fluids in the cargo area can cause damage. There is a risk of damage to property. Make sure that no fluids leak in the cargo area.

#### **Steps for Determining Correct Load Limit**

- 1. Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs" on your vehicle's placard.
- 2. Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- 3. Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs
- 4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1.400 lbs and there will be five 150 lbs passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs  $(1,400 - 750 (5 \times 150) = 650 \text{ lbs})$
- 5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
- 6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your ve-

hicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

#### Load



The maximum load is the sum of the weight of the occupants and the cargo.

The greater the weight of the occupants, the less cargo that can be transported.

## Stowing and securing cargo


- Cover sharp edges and corners on the cargo.
- ▶ Heavy cargo: stow as far forward as possible, directly behind and at the bottom of the rear passenger seat backrests.
- Very heavy cargo: stow as far forward as possible, directly behind and at the bottom of the rear passenger seat backrests. When the rear seat is not occupied, secure each of the outer safety belts in the opposite buckle.
- ▶ If necessary, fold down the rear backrests to stow large cargo.
- Do not stack cargo above the top edge of the backrests.
- ▶ Use the cargo area partition net, refer to page 270, to protect occupants. Make sure that objects cannot penetrate the cargo area partition net.
- ▶ Smaller and lighter cargo: secure with ratchet straps or with a cargo net or draw straps.
- Larger and heavy cargo: secure with cargo straps.

# Lashing eyes in the cargo area

#### General information

Attach load securing aids, such as lashing straps, tensioning straps, draw straps or cargo nets, to the lashing eyes in the cargo area.

#### **Fixed lashing eyes**

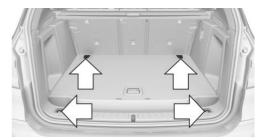

There are four lashing eyes in the cargo area for securing cargo.

The front lashing eyes are located under covers.


# Movable lashing eyes



To secure the cargo there are additional movable lashing eyes in the cargo area.

The lashing eyes may be located underneath the cargo floor panel. The lashing eyes can be inserted into the openings in the rails.



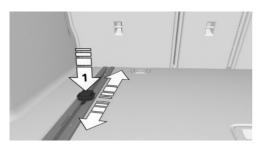

To slide the lashing eyes, press the button, arrow 1. Make sure that the lashing eyes latch at the new position.

# Storage compartments in the cargo area

#### **Multi-function hook**

#### **General information**


A multi-function hook is located on the left or right side in the cargo area.

#### **Safety information**



Improper use of the multi-function hooks can lead to a risk of objects flying about during braking and evasive maneuvers, for example. There is a risk of injury and risk of damage to property. Only hang lightweight objects, such as shopping bags, from the multi-function hooks. Only transport heavy luggage in the cargo area if it has been appropriately secured.

#### Folding down

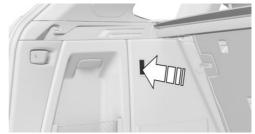

Press on the multi-function hook and turn until it engages.

#### Retaining function for the cargo floor panel

The cargo floor panel can be hooked onto the right-hand multi-function hook.


Without storage compartment package:

1. Fold the rear part of the cargo floor panel forward.




2. Lift the cargo floor panel up until it is over the multi-function hook.

- 3. Fold down the multi-function hook, refer to page 266.
- 4. Lower the cargo floor panel, arrow 1, until it is resting on the multi-function hook, arrow 2.

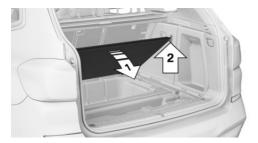

With storage compartment package:

- 1. Fold down the multi-function hook, refer to page 266.
- 2. Lift the cargo floor panel.
- 3. Release the loop from the cargo floor panel.
- 4. Attach the loop, arrow 1, on the multi-function hook, arrow 2.

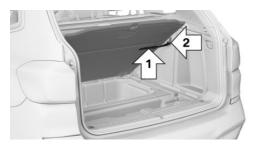

#### **Tensioning strap**

A tensioning strap is available on the left side trim for fastening small objects.

#### Net

Small objects can be stowed in the net on the left side.

# Storage compartment on the left side

#### **General information**

A storage compartment is located on the left side in the cargo area.

#### **Opening**



Pull the handle.

# Storage compartment on the right side

#### **General information**

Depending on the vehicle equipment, a storage compartment is located on the right side.

### **Opening**



Pull the handle.

## Storage compartment below cargo floor panel

#### **General information**

There is a storage compartment under the cargo floor panel.



Fold up the cargo floor panel.

# Enlarging the cargo area

#### Concept

Depending on the vehicle equipment, the cargo area can be enlarged as follows:

- ▶ The rear seat backrests can be folded down.
- The rear seat backrests can be moved into an upright loading position using the cargo setting.

#### General information

The rear seat backrest is divided at a ratio of 40-20-40. The side rear seat backrests and the center section can be folded down separately.

Depending on the vehicle equipment, the rear seat backrests can be folded down from the rear or from the cargo area.

### **Safety information**

#### Warning

Danger of jamming with folding down the backrests. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the rear backrest and the of the head restraint is clear prior to folding down.



#### Warning

If a rear seat backrest is not locked, unsecured cargo can be thrown about the car's interior; for instance, in the event of an accident, braking or an evasive maneuver. There is a risk of injury. Make sure that the rear seat backrest is locked after folding it back.



#### Marning

The stability of the child restraint system is limited or compromised with incorrect seat adjustment or improper installation of the child seat. There is a risk of injuries or danger to life. Make sure that the child restraint system fits securely against the backrest. If possible, adjust the backrest tilt for all affected backrests and correctly adjust the seats. Make sure that seats and backrests are securely engaged or locked. If possible, adjust the height of the head restraints or remove them.



#### ⚠ Warning

Once the rear seat backrest has been folded down, the locking bracket protrudes into the car's interior. There is a risk of damage to property. When the rear seat backrest is folded down, pay attention to the protruding locking bracket and keep this area unobstructed.



#### ⚠ NOTICE

Vehicle parts can be damaged when folding down the rear backrest. There is a risk of damage to property. Make sure that the area of movement of the rear backrest including head restraint is clear when folding down.

# Folding down the rear seat backrest from the rear



Pull the lever and fold the rear seat backrest forward

# Folding down the rear seat backrest from the cargo area



Pull the lever inside the cargo area.


Left lever: the left and center rear seat backrests fold forward.

Right lever: the right rear seat backrest folds forward.

## Folding down the center section

1. Fold down the center head restraint.

Press the button and pull the center section forward.

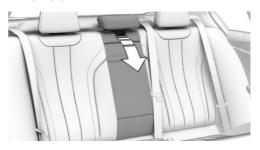

### **Cargo position**

#### **General information**

The rear seat backrests can be moved into an upright loading position individually. An adjustment in several tilt stages is possible as needed.

The backrest tilt for the center section is adjusted together with the left backrest.

#### **Adjusting**

1. Pull the lever and hold it there.



Adjust the tilt of the rear seat backrest if required.

After the adjustment, move the backrest slightly forward or back to engage it correctly.

## 1

# Cargo cover

## **Safety information**

#### ⚠ Warning

Loose objects or devices with a cable connection to the vehicle, for instance mobile phones, can be thrown into the car's interior while driving, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Secure loose objects or devices with a cable connection to the vehicle in the car's interior.


### ▲ Warning

A cargo cover that snaps back quickly can jam body parts or cause damage. There is a risk of injury or risk of damage to property. Do not let the cargo cover snap back into place.

#### ▲ NOTICE

A cargo cover hooked in incorrectly can cause damage. There is a risk of damage to property. Hook the cargo cover on both sides.


## Closing

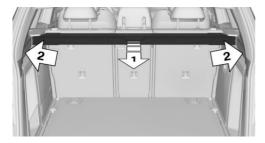

Pull out the cargo cover, arrow 1, and hook both sides into the brackets, arrow 2.

### Removing

The cover can be removed to load bulky luggage.

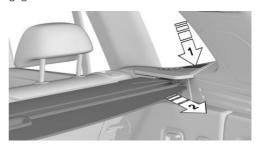

Press the release button, arrow 1, and pull the cargo cover out toward the rear, arrow 2.

The cargo cover can be stowed in the storage compartment under the cargo floor panel.

#### Installing

Slide the cover forward horizontally into the two side brackets. Make sure that the cover audibly engages on both sides.

# Cargo area partition net

#### **General information**


The cargo area partition net can be installed in two different positions in the vehicle.



- 1. Fold down the rear seat backrests, refer to page 268.
- 2. Open the front lids up on the roof frame until they engage.



Insert each of the two top retaining pins of the cargo area partition net into the receptacles until they reach the stop, arrow 1, and push them forward.

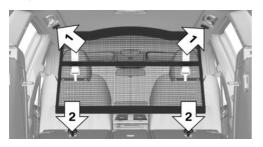


4. Attach the cargo area partition net with the lower two hooks into the two eyes on the folded-down rear seat backrest, arrows 2. You may need to lift the rear seat backrests slightly in order to do this.

# With the rear seat backrest upright

- 1. Remove the cargo cover, refer to page 270.
- 2. Open the rear lids up on the roof frame until they engage.



Insert each of the two top retaining pins of the cargo area partition net into the receptacles until they reach the stop, arrow 1, and push them forward.

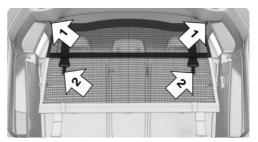

4. Attach the cargo area partition net with the upper two hooks into the two eyes on the rear seat backrest, arrows 2.

# Ski and snowboard bag

The ski and snowboard bag is contained in a protective jacket in the cargo area.

Follow the installation and owner's manual included in the protective jacket.

Depending on the vehicle equipment: remove the emergency wheel from the vehicle to mount the ski and snowboard bag.







# Things to remember when driving

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# **Breaking-in period**

#### General information

Moving parts need to begin working together smoothly.

The following instructions will help you to achieve a long vehicle life and good efficiency.

During break-in, do not use the Launch Control, refer to page 138.

### **Safety information**



#### Warning

Due to new parts and components, safety and driver assistance systems can react with a delay. There is a risk of accident. After installing new parts or with a new vehicle, drive conservatively and intervene early if necessary. Observe the break-in procedures of the respective parts and components.

#### Engine, transmission, and axle drive

#### Up to 1,200 miles/2,000 km

Do not exceed the maximum engine and road speed:

- ▶ For gasoline engine 4,500 rpm and 100 mph/160 km/h.
- ▶ For diesel engine 3,500 rpm and 93 mph/150 km/h.

Avoid full load or kickdown under all circumstances.

#### From 1,200 miles/2,000 km

The engine and vehicle speed can gradually be increased

#### Tires

Tire traction is not optimal due to manufacturing circumstances when tires are brand-new; they achieve their full traction potential after a break-in time.

Drive conservatively for the first 200 miles/300 km.

#### **Brake system**

Brake discs and brake pads only reach their full effectiveness after approx. 300 miles/500 km. Drive moderately during this break-in period.

#### Following part replacement

Observe the break-in procedures again, if components mentioned above are replaced.



# **Driving on poor roads**

#### Concept

Because of its greater ground clearance, the vehicle can be driven on a variety of road types and qualities.

All-wheel drive can help improve forward momentum.

### **Safety information**



#### ∧ NOTICE

Objects in unpaved areas, for instance stones or branches, can damage the vehicle. There is a risk of damage to property. Do not drive on unpaved terrain.

#### When driving on poor roads

For your own safety, for the safety of passengers and of the vehicle, heed the following points:

- ▶ Familiarize yourself with the vehicle before drivina.
- Do not take risks when driving.
- Adjust the speed to the road surface conditions. The steeper and more uneven the road surface, the slower the speed should be.
- ▶ When driving on steep uphill or downhill grades: add engine oil and coolant up to near the MAX mark.
- ▶ On steep downhill grades, use Hill Descent Control HDC.
- Avoid that the chassis bottom coming in contact with the ground.
  - The ground clearance is no more than 7.8 inches/20 cm and can vary according to the vehicle's load.
- ▶ When wheels continue to spin, depress the accelerator so that driving stability control systems can distribute the driving force to the wheels. Activate DTC Dynamic Traction Control if available.

#### After a trip on poor roads

After a trip on poor roads, check wheels and tires for damage to maintain driving safety. Clear heavy soiling from the body.

# **General driving notes**

#### Closing the tailgate

#### Safety information



#### Marning

An open tailgate protrudes from the vehicle and can endanger occupants and other traffic participants or damage the vehicle in the event of an accident, braking or evasive maneuvers. In addition, exhaust fumes may enter the car's interior. There is a risk of injury or risk of damage to property. Do not drive with the tailgate open.

#### Driving with the tailgate open

If driving with the tailgate open cannot be avoided:

- Close all windows and the glass sunroof.
- Greatly increase the air flow from the vents.
- Drive moderately.

#### Hot exhaust gas system



#### Marning

During driving operation, high temperatures can occur underneath the vehicle body, for instance caused by the exhaust gas system. If combustible materials, such as leaves or grass, come in contact with hot parts of the exhaust gas system, these materials can ignite. There is a risk of injury or risk of damage to property. Do not remove the heat shields installed and never apply undercoating to them. Make sure that no combustible materials can come in contact with hot vehicle parts in driving operation, idle or

during parking. Do not touch the hot exhaust gas system.

#### **Exhaust gas particulate filter**

#### Concept

The exhaust gas particulate filter collects soot particles. The soot particles are burned at high temperatures to clean the exhaust gas particulate filter as necessary.

#### **General information**

During several minutes of cleaning the following may occur:

- ▶ Temporarily, the engine may run less smoothly.
- ▶ A somewhat higher engine speed is necessary to reach usual performance.
- > A slight amount of smoke coming from the exhaust system, even after the engine is switched off.
- ▶ Noises, such as those caused by the radiator fan running, even several minutes after the engine is switched off.

After-running of the radiator fan for several minutes is normal even after short trips.

#### Mobile communication devices in the vehicle



#### Marning

Vehicle electronics and mobile phones can influence one another. There is radiation due to the transmission operations of mobile phones. There is a risk of injury or risk of damage to property. If possible, in the car's interior use only mobile phones with direct connections to an exterior antenna in order to exclude mutual interference and deflect the radiation from the car's interior.

#### **Hydroplaning**

On wet or slushy roads, a wedge of water can form between the tires and road surface.

This phenomenon is referred to as hydroplaning. It is characterized by a partial or complete loss of contact between the tires and the road surface. ultimately undermining your ability to steer and brake the vehicle.

#### **Driving through water**

#### General information

When driving through water, follow the following:

- Drive through calm water only.
- ▶ Drive through water only if it is not deeper than maximum 19.6 inches/50 cm.
- Drive through water no faster than walking speed, up to 3 mph/5 km/h.

#### **Safety information**



#### ∧ NOTICE

When driving too quickly through too deep water, water can enter into the engine compartment, the electrical system or the transmission. There is a risk of damage to property. When driving through water, do not exceed the maximum indicated water level and the maximum speed for driving through water.

#### **Braking safely**

#### General information

The vehicle is equipped with the Antilock Brake System ABS as a standard feature.

Perform an emergency stop in situations that reauire such.

Steering is still responsive. You can still avoid any obstacles with a minimum of steering effort.



Pulsation of the brake pedal and sounds from the hydraulic circuits indicate that the Antilock Brake System ABS is in its active mode.

In certain braking situations, the perforated brake discs can emit functional noises. However, functional noises have no effect on the performance and operational reliability of the brake.

#### Objects in the area around the pedals



#### Marning

Objects in the driver's floor area can limit the pedal distance or block a depressed pedal. There is a risk of accident. Stow objects in the vehicle such that they are secured and cannot enter into the driver's floor area. Use floor mats that are suitable for the vehicle and can be safely attached to the floor. Do not use loose floor mats and do not layer several floor mats. Make sure that there is sufficient clearance for the pedals. Ensure that the floor mats are securely fastened again after they were removed, for instance for cleaning.

### **Driving in wet conditions**

When roads are wet, salted, or in heavy rain, gently press the brake pedal every few miles.

Ensure that this action does not endanger other traffic

The heat generated during braking dries brake discs and brake pads and protects them against corrosion.

In this way braking efficiency will be available when you need it.

#### Hills

#### General information

Drive long or steep downhill gradients in the gear that requires least braking effort. Otherwise, the brakes may overheat and reduce brake efficiency.

You can increase the engine's braking effect by shifting down, going all the way to first gear, if needed.

#### Safety information



#### 🗥 Warning

Light but consistent brake pressure can lead to high temperatures, brakes wearing out and possibly even brake failure. There is a risk of accident. Avoid placing excessive stress on the brake system.

#### Warning

In idle state or with the engine switched off, safety functions, for instance engine braking effect, braking assistance and steering assistance, may not be available. There is a risk of accident. Do not attempt to drive in idle state or with the engine switched off.

#### Brake disc corrosion

Corrosion on the brake discs and contamination on the brake pads are increased by the following circumstances:

- Low mileage.
- Extended periods when the vehicle is not used at all.
- Infrequent use of the brakes.
- Aggressive, acidic, or alkaline cleaning agents.

Corrosion buildup on the brake discs will cause a pulsating effect on the brakes in their response generally this cannot be corrected.

#### Condensation water under the parked vehicle

When using the automatic climate control, condensation water develops and collects underneath the vehicle.



# Roof-mounted luggage rack

#### General information

Installation only possible with roof rack.
Roof racks are available as special accessories.

#### **Mounting**

Follow the installation instructions of the roof rack.

Be sure that adequate clearance is maintained for tilting and opening the glass sunroof.

#### Loading

Because roof-mounted luggage racks raise the vehicle's center of gravity when loaded, they have a major effect on vehicle handling and steering response.

Therefore, note the following when loading and driving:

- ▶ Do not exceed the approved roof/axle loads and the approved gross vehicle weight.
- Be sure that adequate clearance is maintained for tilting and opening the glass sunroof.
- Distribute the roof load uniformly.
- ▶ The roof load should not extend past the loading area.
- Always place the heaviest pieces on the bottom.
- Secure the roof luggage firmly, for instance using ratchet straps.
- ▶ Do not let objects project into the opening path of the tailgate.
- Drive cautiously and avoid sudden acceleration and braking maneuvers. Take corners gently.

# **Driving on racetracks**

Higher mechanical and thermal loads during racetrack operation lead to increased wear. This wear is not covered by the warranty. The vehicle is not designed for use in motor sports competition.



# **Trailer towing**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

### **General information**

The permissible trailer loads, axle loads, drawbar node weights, and the permissible gross vehicle weight are specified in the technical data.

The vehicle is equipped with an enhanced suspension system on the rear axle and, depending on the vehicle type, with a more powerful cooling system.

# **Before driving**

#### **Drawbar nose weight**

The maximum load of the towing vehicle is lowered by the weight of the trailer hitch and the drawbar nose weight. The drawbar nose weight increases the vehicle weight. Do not exceed the approved gross vehicle weight of the towing vehicle.

#### Loading

Distribute cargo as evenly as possible on the cargo area.

Stow the load as low and close to the trailer axle as possible. A low center of gravity in the trailer

increases the driving safety of the entire vehicle-trailer combination.

Do not exceed the approved gross vehicle weight of the trailer and the permissible trailer load of the vehicle. The smaller value applies in each case.

#### Tire inflation pressure

Note the tire inflation pressure of the vehicle and trailer.

For the vehicle, the tire inflation pressure for higher loads applies.

Information regarding the tire inflation pressure, refer to page 300.

For the trailer, the specifications of the manufacturer apply.

#### Flat Tire Monitor FTM

After correcting the tire inflation pressure or hitching/unhitching a trailer, initialize the Flat Tire Monitor, refer to page 322.

#### **Tire Pressure Monitor TPM**

After correcting the tire inflation pressure or hitching/unhitching a trailer, reset the Tire Pressure Monitor, refer to page 315.

#### **Exterior mirrors**

Exterior mirrors, which allow the driver to see both rear corners of the trailer, are available as special accessories from a dealer's service center or another qualified service center or repair shop.

#### Power consumption

#### **General information**

Before starting to drive, check the function of the trailer tail lights.

Keep the activation times of the electronic systems/power consumers short when towing a camper to save the vehicle battery power.

#### Trailer tail lights

- ▶ Turn signals/brake lights: 54 watts per side.
- Rear lights: 100 watts in total.
- ▶ Backup light: 54 watts in total.

# **Towing a trailer**

#### General information

When driving with a trailer or load carrier and the trailer socket not in use, some driver assistance systems may have functional limitations or may malfunction.

To prevent malfunctions, activate trailer towing, refer to page 281.

When the trailer socket is in use or trailer towing is activated, some driver assistance systems are unavailable, or available to a limited extent, A Check Control message is displayed where applicable.

#### **Safety information**



#### Marning

Depending on the design and loading of trailers, they may begin swinging at speeds exceeding approx. 50 mph/80 km/h. There may be a risk of accident or risk of damage to prop-

Adapt your speed when driving with a trailer. Immediately brake in the case of swinging. Apply necessary steering corrections as carefully as possible.

#### ⚠ Warning

The tire inflation pressure must be adjusted to the increased axle load in trailer towing. Driving with too low tire inflation pressure can damage the tires. There may be a risk of accident or risk of damage to property. Do not exceed a speed of 60 mph / 100 km/h. Increase the tire inflation pressure of the towing vehicle by 0.2 bar. Note the maximum possible tire inflation pressure indicated on the tire.

### **Uphill grades**

#### General information

In the interest of safety and to avoid hindering the smooth flow of traffic, the towing of trailers is permissible on uphill grades up to 12 %.

If higher trailer loads are approved at a later point in time, the gradient limit is 8 %.

#### Starting on uphill grades

The parking brake is automatically released when the accelerator pedal is activated.

In order to prevent rolling back during starting, use the parking brake.



Pull and release switch before starting

The parking brake is set.

2. Accelerated enough to start off.

#### Hills

A vehicle-trailer combination has the tendency to swing more readily on hills.

Manually shift down to the next-lowest gear before driving on a hill and drive downhill slowly.



## High loads and external temperatures



#### ⚠ NOTICE

On long trips with heavy trailer loads, high external temperatures and low tank content, the fuel system can overheat, which reduces the engine performance. There is a risk of damage to property. Refuel promptly. On long trips with heavy trailer loads and high external temperatures, ensure that the fuel tank is more than 1/4 full.

## **Trailer stabilization control**

#### Concept

This system supports the driver in stopping the swinging of a trailer.

The trailer stabilization control detects swinging and automatically brakes the vehicle quickly to leave the critical speed range and stabilize the vehicle-trailer combination.

#### **General information**

If the trailer power socket is in use but a trailer has not been hitched, the system can become active in certain driving situations, such as when using a bicycle rack with lighting.

## **Functional requirement**

The system is functional at speeds beginning at approx. 40 mph/65 km/h while a trailer is being towed and the trailer power socket is in use.

# **System limits**

The system cannot intervene or not intervene in time in the following situations, for instance:

▶ If a trailer jackknifes suddenly, for instance on slippery roads or loose surfaces.

- ▶ If a trailer with a high center of gravity tilts, before swinging is detected.
- ▶ If DSC Dynamic Stability Control is deactivated or has malfunctioned.
- ▶ When the power consumption of a trailer is too low, e.g., due to tail lights in LED technology, to be detected by the system.

# **Activating trailer towing**

### Concept

When driving with a trailer or load carrier and the trailer socket not in use, some driver assistance systems may have functional limitations or may malfunction. To prevent malfunctions, activate trailer towing.

#### **Activating trailer towing**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Trailer mode"
- 4. Activate trailer towing.

### Mount for trailer hitch

#### General information



The mount for the trailer hitch is located on the rear of the vehicle.

Information on suitable trailer hitches is found on the underside of the mount, see arrow.



Follow the Maintenance Instructions, refer to page 361.

## **Safety information**



#### **△** Warning

During driving operation, high temperatures can occur underneath the vehicle body, for instance caused by the exhaust gas system. Contact with the hot components can cause burns. There is a risk of injury. Do not touch hot components. Do not perform work in the vicinity of hot components until after they have cooled down.

### Removing the cover




Pull the cover out of the back of the mount, and stow it in the vehicle.

#### **Trailer connector**



The socket is located to the left of the mount for the trailer hitch.

## Fittings for trailer safety chain

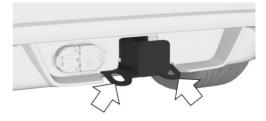

There are two fittings on the mount for the trailer hitch for securing the trailer safety chain.

Secure the trailer safety chain to the fittings for increased safety when driving with a trailer.

Ensure that the trailer safety chain can move freely and is not dragging on the ground.

#### **Brake Controller**

The vehicle manufacturer recommends that you have a Brake Controller installed by a dealer's service center or another qualified service center or repair shop.

Information on installing a Brake Controller can be obtained from a dealer's service center or another qualified service center or repair shop.



# Saving fuel

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# **Reducing fuel consumption**

#### **General information**

The vehicle contains advanced technologies for the reduction of consumption and emission values.

Fuel consumption depends on a number of different factors.

Carrying out certain measures, such as a moderate driving style and regular maintenance, can influence fuel consumption and the environmental impact.

#### Remove unnecessary cargo

Additional weight increases fuel consumption.

# Remove attached parts following use

Remove auxiliary mirrors, roof-mounted or rear luggage racks which are no longer required following use.

Attached parts on the vehicle impair the aerodynamics and increase the fuel consumption.

# Close the windows and glass sunroof

Driving with the glass sunroof and windows open results in increased air resistance and raises fuel consumption.

#### **Tires**

#### General information

Tires can affect consumption in various ways, for instance tire size may influence consumption.

# Check the tire inflation pressure regularly

Check and, if needed, correct the tire inflation pressure at least twice a month and before starting on a long trip.

Low tire inflation pressure increases rolling resistance and thus raises fuel consumption and tire wear.

#### **Drive away without delay**

Do not wait for the engine to warm-up while the vehicle remains stationary. Start driving right away, but at moderate engine speeds.

This is the quickest way of warming the cold engine up to operating temperature.

#### Look well ahead when driving

Driving smoothly and proactively reduces fuel consumption.

Avoid unnecessary acceleration and braking.

By maintaining a suitable distance to the vehicle driving ahead of you.

#### **Avoid high engine speeds**

Driving at low engine speeds lowers fuel consumption and reduces wear.



If necessary, observe the vehicle's gear shift indicator, refer to page 149.

### **Use coasting conditions**

When approaching a red light, take your foot off the accelerator and let the vehicle coast to a halt.

For going downhill take your foot off the accelerator and let the vehicle roll.

The flow of fuel is interrupted while coasting.

# Switch off the engine during longer stops

#### Switching off the engine

Switch off the engine during longer stops, for instance at traffic lights, railroad crossings or in traffic congestion.

#### **Auto Start/Stop function**

The Auto Start/Stop function of the vehicle automatically switches off the engine during a stop.

If the engine is switched off and then restarted rather than leaving the engine running constantly, fuel consumption and emissions are reduced. Savings can begin within a few seconds of switching off the engine.

In addition, fuel consumption is also determined by other factors, such as driving style, road conditions, maintenance or environmental factors.

# Switch off any functions that are not currently needed

Functions such as seat heating and the rear window defroster require a lot of energy and increase fuel consumption, especially in city and stop-and-go traffic.

Switch off these functions if they are not needed.

The ECO PRO driving mode supports the energy conserving use of comfort features. These functions are automatically deactivated partially or completely.

#### Have maintenance carried out

Have the vehicle maintained regularly to achieve optimal vehicle efficiency and service life. BMW recommends that maintenance work be performed by a BMW service center.

For information on the BMW Maintenance System, refer to page 340.

#### **ECO PRO**

#### Concept

ECO PRO supports a driving style that saves on consumption. For this purpose, the engine control and comfort features, for instance the climate control output, are adjusted.

Steptronic transmission: under certain conditions the engine is automatically decoupled from the transmission in the D selector lever position. The vehicle continues traveling with the engine idling to reduce consumption. The D selector lever position remains engaged.

In addition, context-sensitive information, ECO PRO tips, are displayed to assist with an efficient driving style.

The achieved extended range is displayed in the instrument cluster as bonus range.

### **General information**

The system includes the following EfficientDynamics functions and EfficientDynamics displays:

- ▶ ECO PRO bonus range, refer to page 286.
- ▶ ECO PRO climate control, refer to page 285.
- ▶ Coasting driving condition, refer to page 287.
- ▶ Driving style analysis, refer to page 288.



#### **Overview**





**Button** 

### **Activating ECO PRO**



Press the button. ECO PRO is displayed in the instrument cluster.

# Configuring ECO PRO INDIVIDUAL

# Opening via the Driving Dynamics Control

- 1. Activate ECO PRO.
- 2. "Configure ECO PRO INDIVIDUAL"

#### **Opening via iDrive**

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Driving Experience Control"
- 4. "Configure ECO PRO INDIVIDUAL"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

# Activating/deactivating ECO PRO functions

The following ECO PRO functions can be activated/deactivated:

- "ECO PRO speed warning"
- ▶ "Coasting"

- "ECO PRO seat climate control"
- "ECO PRO climate control"
- ▶ "ECO PRO sight"

Settings are stored for the driver profile currently used.

#### **ECO PRO limit**

- ▶ Activate the ECO PRO limit:
  - "ECO PRO speed warning"
  - An ECO PRO tip is displayed if the speed of the set ECO PRO limit is exceeded.
- Adjust the ECO PRO limit speed:
  - "Tip at:"

Select the desired speed.

#### Coasting

Efficiency can be optimized by disengaging the engine and coasting with the engine idling.

Deactivate the function to use the braking effect of the engine when traveling downhill.

#### **ECO PRO seat climate control**

The output of seat heating and, where applicable, seat ventilation is reduced when ECO PRO is activated.

#### **ECO PRO climate control**

Climate control is set to be efficient.

This means, it is possible to deviate slightly from the set temperature or to heat or cool the car's interior more slowly, to economize on consumption

The mirror heating is made available when external temperatures are very cold.

#### **ECO PRO Sight**

The output of exterior mirror heating and rear window defroster is reduced.

#### Resetting the settings

Reset FCO PRO INDIVIDUAL to the standard settinas:

"Reset to ECO PRO STANDARD"

### Display in the instrument cluster

#### **General information**

When ECO PRO driving mode is activated, the display switches to a special configuration.

Some of the displays may differ from the display in the instrument cluster.

#### **ECO PRO bonus range**



A modified driving style helps you extend your driving distance.

The range extension can be displayed as the bonus range in the instrument cluster.

The bonus range is shown in the range display. Depending on the equipment, the blue bar segments symbolize the gained range in stages.


If the bonus range appears in gray, the current driving style is inefficient.

The display turns blue as soon as all conditions for efficient driving are met.

The bonus range is automatically reset every time the vehicle is refueled.

#### **Consumption display**

#### Instrument cluster without enhanced features

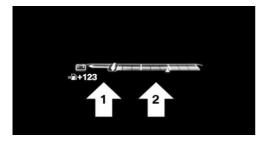

#### Instrument cluster with enhanced features



#### Information about the current driving style

A pointer in the consumption display informs about the current driving style:

- ▶ The current consumption in relation to the average consumption is displayed.
- ▶ Pointer in the area of arrow 1: display of the energy recovered by coasting or when brak-
- ▶ Pointer in the area of arrow 2: display when accelerating.

If the acceleration is inefficient, the area between the average consumption and the current consumption is colored red.

In addition, the following information is displayed, depending on the situation:

- Depending on the equipment: the total distance driven while coasting, refer to page 288.
- ▶ The total time that the engine has been switched off, refer to page 124, during automatic engine stops.
- ▶ A gear shift indicator, refer to page 149, recommending the use of a more efficient gear.

### Indications on the Control **Display**

#### **Displaying Efficient Dynamics** information

The current efficiency of the ECO PRO functions can be displayed on the Control Display.

#### Via iDrive:

- 1. "My Vehicle"
- 2. "Technology in action"
- 3. "EfficientDynamics"
- 4. Select the symbol.

The following functions are displayed:

- Auto Start/Stop function.
- Energy recovery.
- Coasting.

#### **Displaying consumption history**

The following functions can be shown on the Control Display:

- Average consumption.
- ▶ The distance traveled while coasting.
- ▶ The duration for which the Auto Start/Stop function has switched off the engine.

#### Via iDrive:

- 1. "My Vehicle"
- 2. "Technology in action"
- 3. "EfficientDynamics"
- 4. Select the symbol.

Vertical bars show consumption for the selected route.

### **Selecting route length**

Via iDrive:



- 2. "Scaling:"
- 3. Select the desired setting.

#### Resetting consumption history

Via iDrive:



"Reset consumption history"

# Coasting

Saving fuel

#### Concept

Under certain conditions the engine is automatically decoupled from the transmission in the D selector lever position. The vehicle continues traveling with the engine idling to reduce consumption. Selector lever position D remains engaged.

This driving condition is referred to as coasting.

As soon as you step on the brake or accelerator pedal, the engine is automatically coupled again.

#### General information

Coasting is a component of the ECO PRO drivina mode.

Coasting is automatically activated when ECO PRO mode is called via the Driving Dynamics Control.

A proactive driving style helps the driver to use the function often and supports the efficient effect of coasting.

#### **Functional requirements**

The function is available in the speed range from approximately 30 mph/50 km/h to 100 mph/160 km/h when the following conditions are met:

- Accelerator pedal not depressed.
- Brake pedal not depressed or only slightly depressed.
- ▶ The selector lever is in selector lever position D.
- Engine and transmission are at operating temperature.

### **Operation via shift paddles**

#### Concept

The coasting driving condition can be influenced with the shift paddles.



#### **(i)**

# Activating/deactivating coasting via shift paddles

- 1. Shift to the highest gear by pulling the right shift paddle.
- 2. To activate coasting mode, actuate the right shift paddle again.

To deactivate, actuate the left shift paddle.

## **Display**

# Instrument cluster without enhanced features



The mark in the consumption display below the tachometer is located at the zero point and is backlit in blue. The tachometer approximately indicates idle

speed.

# Instrument cluster with enhanced features




The mark in the consumption display is located at the zero point and is backlit in blue.

The distance traveled is indicated in coasting mode.

#### **Display on the Control Display**

The coasting mode is displayed in EfficientDynamics while driving.

The distance traveled in coasting mode is shown in the consumption history. The counter is reset with every refueling.

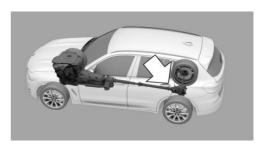

Color code blue: coasting mode.

# **Display EfficientDynamics** information

Via iDrive:

- 1. "My Vehicle"
- 2. "Technology in action"
- 3. "EfficientDynamics"

### **System limits**

The function is not available under one of the following conditions.

- DSC OFF or TRACTION activated.
- ▶ Driving in the dynamic limit range and on steep uphill or downhill grades.
- Battery charge status temporarily too low or vehicle electrical system drawing excessive current.
- Trailer towing.

# **Driving style analysis**

#### **Concept**

The function helps develop an especially efficient driving style and to conserve fuel.

For this purpose, the driving style is analyzed. The assessment is done in various categories and is displayed on the Control Display.

This display will help you adjust your driving style and save some fuel.



### **General information**

The current trip is assessed.

To assist with an efficient driving style, ECO PRO tips are displayed during driving.

The range of the vehicle can be extended by adjusting your driving style.

This gain in range is displayed as a bonus range in the instrument cluster and on the Control Display.

# **Functional requirement**


This function is available in ECO PRO mode.

# Calling up ECO PRO Driving style analysis

Via iDrive:

- 1. "My Vehicle"
- 2. "Technology in action"
- 3. "Driving style analysis"

# **Display on the Control Display**

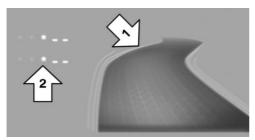

The display of the ECO PRO Driving style analysis consists of a symbolized route and a lookup table.

The road symbolizes the efficiency of the driving style. The more efficient the driving style, the smoother the depicted route becomes, arrow 1.

The table of values contains stars. The more efficient the driving style, the more stars are included in the table, arrow 2, and the faster the bonus range increases.

If, on the other hand, the driving style is inefficient, a more wavy road and a reduced number of stars are displayed.







# Refueling

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# **General information**

Follow the fuel recommendation, refer to page 294, prior to refueling.

In vehicles with a diesel engine, the filler neck is designed for refueling at diesel fuel pumps.

# Safety information



#### ∧ NOTICE

With a driving range of less than 30 miles/50 km the engine may no longer have sufficient fuel. Engine functions are not ensured anymore. There is a risk of damage to property. Refuel promptly.

# **Fuel cap**

# **Opening**


1. To open the fuel filler flap, press on the rear edge, arrow. The fuel filler flap opens.



2. Turn the fuel cap counterclockwise.



3. Place the fuel cap in the bracket attached to the fuel filler flap.

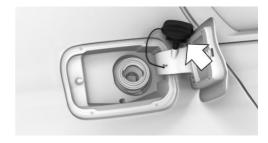



# Closing



#### Warning

The retaining strap of the fuel cap can be jammed and crushed during closing. The cap cannot be correctly closed. Fuel or fuel vapors can escape. There is a risk of injury or risk of damage to property. Pay attention that the retaining strap is not jammed or crushed when closing the cap.

- 1. Fit the cap and turn it clockwise until you clearly hear a click.
- 2. Press on the fuel filler flap until it engages.

# **Emergency unlocking**

It may be necessary in certain situations to unlock the fuel filler flap manually, for instance with an electrical fault.

Have fuel filler flap unlocked by a dealer's service center or another qualified service center or repair shop.

# Follow the following when refueling

### General information

When refueling, insert the filler nozzle completely into the filler pipe. Lifting up the fuel pump nozzle during refueling causes:

- Premature switching off.
- Reduced return of the fuel vapors.

The fuel tank is full when the filler nozzle clicks off the first time.

Make sure that the fuel cap is closed properly after refueling, otherwise the emissions warning light may light up.

Follow safety regulations posted at the gas station.

# **Safety information**



#### ∧ NOTICE

Fuels are toxic and aggressive. Overfilling of the fuel tank can damage the fuel system. Painted surfaces may be damaged by contact with fuel. Escaping fuel can harm the environment. There is a risk of damage to property. Avoid overfilling.



# **Fuel**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# **Fuel recommendation**

### **General information**

Depending on the region, many gas stations sell fuel that has been customized to winter or summer conditions. Fuel that is available in winter, for instance helps make a cold start easier.

# Gasoline

#### **General information**

For the best fuel efficiency, the gasoline should be sulfur-free or very low in sulfur content.

Fuels that are marked on the gas pump as containing metal must not be used.

Fuels with a maximum ethanol content of 25 %, i. e. E10 or E25, may be used for refueling.

Ethanol should meet the following quality standards:

US: ASTM 4806-xx

CAN: CGSB-3.511-xx

xx: comply with the current standard in each case.

# **Safety information**

#### CAUTION

The use of poor-quality fuels may result in harmful engine deposits or damage. Additionally, problems relating to drivability, starting and stalling, especially under certain environmental conditions such as high ambient temperature and high altitude, may occur.

If drivability problems are encountered, we recommend switching to a high quality gasoline brand and a higher octane grade — AKI number — for a few tank fills. To avoid harmful enaine deposits, it is highly recommended to purchase gasoline from Top Tier retailers.

Failure to comply with these recommendations may result in the need for unscheduled maintenance.



#### ⚠ NOTICE

Even small quantities of the wrong fuel or wrong fuel additives can damage the fuel system and engine. Furthermore, the catalytic converter is permanently damaged. There is a risk of damage to property. Do not refuel or add the following in the case of gasoline engines:

- ▶ Leaded gasoline.
- ▶ Metallic additives, for instance manganese

Do not press the Start/Stop button after refueling with the wrong fuel. Contact a dealer's service center or another qualified service center or repair shop.



#### ∧ NOTICE

Incorrect fuels can damage the fuel system and the engine. There is a risk of damage to property. Do not use fuels with a higher percentage of ethanol than recommended. Do not refuel with fuels containing methanol, e.g. M5 to M100.

#### ∧ NOTICE

Fuel that does not comply with the minimum quality can compromise engine function or cause engine damage. There is a risk of damage to property. Do not fill with fuel that does not comply with the minimum quality.

### Recommended fuel grade

BMW recommends AKI 91.

Refuel with this gasoline to achieve the rated performance and consumption values.

# Minimum fuel grade

BMW recommends AKI 89.

If you use gasoline with this minimum AKI Rating, the engine may produce knocking sounds when starting at high external temperatures. This has no effect on the engine life.

### Diesel

# **Safety information**



#### ⚠ NOTICE

Even small quantities of the wrong fuel or wrong fuel additives can damage the fuel system and engine. There is a risk of damage to property.

Follow the following for diesel engines:

- ▶ Use only Ultra-Low Sulfur Diesel.
- ▷ Do not refuel with pure methyl ester.

- > Only refuel with biodiesel with a maximum of B5/5 % according to ASTM D975.
- Do not use gasoline.
- ▶ The vehicle manufacturer recommends only using diesel additives which have been classified as suitable.

Do not press the Start/Stop button after refueling with the wrong fuel. Contact a dealer's service center or another qualified service center or repair shop.

#### Low-Sulfur Diesel

The engine of your BMW is designed for diesel with low sulfur content:

Ultra-Low Sulfur Diesel ASTM D 975-xx. xx: comply with the current standard in each case.

Use only Ultra-Low Sulfur Diesel.

The fraction of biodiesel in the fuel must not exceed 5 %, referred to as B5. Do not use gasoline. If you do fill the tank with the wrong fuel, for instance gasoline, do not start the engine as this may damage the engine.

In the case of incorrect refueling, contact a service center or another qualified service center or repair shop or Roadside Assistance.

If the fuel pump nozzle does not fit in the filler pipe of your BMW, please check to ensure that you are refueling at a diesel fuel pump that is equipped with a diesel fuel pump nozzle.

In the event the Ultra-Low Sulfur Diesel fuel cannot be fully inserted into the fuel filler neck. please contact BMW Roadside Assistance for instructions on how to add fuel. For more information on Roadside Assistance, refer to page 352.



# BMW recommends Shell Quality Fuels

# **BMW Advanced Diesel**

# Concept

BMW Advanced Diesel reduces nitrogen oxides in the diesel emissions by injecting diesel exhaust fluid into the exhaust system. A chemical reaction takes place inside the catalytic converter that minimizes nitrogen oxides.

#### **General information**

The vehicle has a tank that must be refilled.

To be able to establish the drive-ready state as usual, there must be an adequate amount of diesel exhaust fluid.

Diesel exhaust fluid can be refilled at any time.

Diesel exhaust fluid is available at many gas stations.

If possible, refill diesel exhaust fluid using a fuel pump, refer to page 297.

# Diesel exhaust fluid at low temperatures

Due to its physical properties, it is possible that the diesel exhaust fluid may need to be replenished more frequently if exposed to temperatures under +23 °F/-5 °C.

At temperatures below +12 °F/-11 °C, it may only be possible to measure and display the filling level after a short drive. The range displayed may reduce significantly.

At low temperatures, add diesel exhaust fluid only immediately before driving off.

# Displays in the instrument cluster

#### Reserve level indicator

The reserve level indicator in the instrument cluster notifies you if there is a low level of reducing agent in the tank.

Do not run down the tank for disel exhaust fluid until it is completely empty, as it will not be possible to restore the drive-ready state after switching off the engine.



A yellow warning light is illuminated in the instrument cluster: fill level too low. The remaining range is displayed in the instrument cluster. Immediately refill

with diesel exhaust fluid.

#### Diesel exhaust fluid on minimum



Tank for reducing agent is empty. Immediately add at least 2.7 US gal/10 liters of reducing agent. The engine will continue to run as long as it is not switched

off and all other operating conditions are satisfied; sufficient fuel, for instance.

# System malfunction

A Check Control message is displayed when there is a system not working.

Visit the nearest dealer's service center or another qualified service center or repair shop.

# Have the diesel exhaust fluid replenished

BMW recommends that diesel exhaust fluid be added by the dealer's service center within the course of regular maintenance.

In addition, it may be necessary to have the fluid replenished several times between maintenance appointments under particular circumstances, for instance if the vehicle is driven in a particularly sporty style or if it is operated with a trailer.

The diesel exhaust fluid must be replenished as soon as the reserve level indicator appears in the instrument cluster to avoid not being able to reestablish the drive-ready state.

# Replenishing diesel exhaust fluid yourself in exceptional cases

#### General information

You can replenish Diesel exhaust fluid yourself in exceptional cases, for instance to get to your scheduled service.

#### Safety information

#### Marning

Small amounts of ammonia fumes can escape when opening the diesel exhaust fluid container. Ammonia fumes have a pungent odor and irritate skin, mucous membranes, and eves. There is a risk of injury. Do not inhale escaping ammonia fumes. Avoid the contact of articles of clothing, skin or eyes with diesel exhaust fluid. Do not swallow any diesel exhaust fluid. Keep children away from diesel exhaust fluids.

# Marning

Operating materials, for instance oils, greases, coolants, fuels, can contain harmful ingredients. There is a risk of injuries or danger to life. Follow the instructions on the containers. Avoid the contact of articles of clothing, skin or eyes with operating materials. Do not refill operating materials into different bottles. Store operating materials out of reach of children.

#### ∧ NOTICE

The diesel exhaust fluid ingredients are very aggressive. There is a risk of damage to property. Avoid contact of diesel exhaust fluid with surfaces of the vehicle.

#### Suitable diesel exhaust fluid

- Recommended: BMW Diesel Exhaust Fluid. With this bottle and its special adapter, diesel exhaust fluid can be replenished simply and safely.
- ▶ Alternatively recommended: NOx Diesel exhaust fluid AUS 32.

Diesel exhaust fluid can be purchased at a service center or another qualified service center or repair shop.

### Refill quantity

When the reserve level indicator starts, add at least 1.3 US gal/5 liters.

# Tank for diesel exhaust fluid



The fuel cap for diesel exhaust fluids is next to the fuel cap for the fuel tank.

# Adding diesel exhaust fluid at the fuel pump

#### General information

When refueling, insert the filler nozzle completely into the filler pipe. Lifting up the fuel pump nozzle during refueling causes:



- Premature switching off.
- Overflow of diesel exhaust fluid.

The tank for diesel exhaust fluid is full when the filler nozzle clicks off the first time.

Depending on the filling nozzle, it may not be possible to fill the tank for the diesel exhaust fluid completely.

Follow safety regulations posted at the gas station.

#### Adding diesel exhaust fluid

- 1. Open the fuel filler flap, refer to page 292.
- 2. Turn the fuel cap of the diesel exhaust fluid tank counterclockwise and remove.



3. Place the fuel cap in the bracket attached to the fuel filler flap.



 Using the fuel pump nozzle, add at least the recommended refilling quantity, refer to page 297. The fuel tank is full when the filler nozzle clicks off the first time.



- 5. Replace the fuel cap and turn it clockwise.
- 6. Press on the fuel filler flap until it engages.

# Adding diesel exhaust fluid using a bottle

- 1. Open the fuel filler flap, refer to page 292.
- 2. Turn the fuel cap of the diesel exhaust fluid tank counterclockwise and remove.
- 3. Place the fuel cap in the bracket attached to the fuel filler flap.



4. Place the bottle on it and turn it clockwise as far as it will go.



5. Press the bottle down.



The vehicle tank will be filled.

The tank is full when the fill level in the bottle no longer changes. It is not possible to overfill.



6. Pull back the bottle and unscrew it.



- 7. Replace the fuel cap and turn it clockwise.
- 8. Press on the fuel filler flap until it engages.

# Filling with an incorrect fluid

#### General information

A Check Control message is displayed when an incorrect fluid is added.

In the case that an incorrect fluid was refilled. contact a dealer's service center or another qualified service center or repair shop.

#### Safety information



#### Warning

After adding an incorrect fluid, for instance antifreeze for washer fluid, the system can heat and ignite. There is a risk of fire and injuries. Do not add incorrect fluids. Do not start the engine after adding an incorrect fluid.

### After filling diesel exhaust fluid

#### Reserve level indicator



The reserve level indicator will still appear along with the remaining range after refilling.

The drive-ready state can be established.

After several minutes of driving, the reserve level indicator goes out.

#### Diesel exhaust fluid on minimum



After filling, the indicator is still displayed.

The drive-ready state can only be established after the indicator aoes out.

- 1. Press the Start/Stop button three times. The indicator goes out after approx. 1 minute.
- 2. Press the Start/Stop button and switch on the drive-ready state.

# Disposing of bottles



Have bottles for diesel exhaust fluid disposed of by a dealer's service center or another qualified service center or repair

shop or take them to a collection point.

Do not dispose of empty bottles with household waste unless this is permitted by local regulations



# Wheels and tires

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# Tire inflation pressure

#### General information

The tire characteristics and tire inflation pressure influence the following:

- The service life of the tires.
- Road safety.
- Driving comfort.
- ▶ Fuel consumption.

# **Safety information**



#### Warning

A tire with too little or no tire inflation pressure may heat up significantly and sustain damage. This will have a negative impact on aspects of handling, such as steering and braking response. There is a risk of accident. Regularly check the tire inflation pressure, and correct it as needed, for instance twice a month and before a long trip.

# Tire inflation pressure specifications

### In the tire inflation pressure table

The tire inflation pressure table, refer to page 302, contains all tire inflation pressure specifications for the specified tire sizes at the ambient temperature. The tire inflation pressure values apply to tire sizes approved by the manufacturer of the vehicle for the vehicle type.

To identify the correct tire inflation pressure, please note the following:

- Tire sizes of your vehicle.
- Maximum permitted driving speed.

#### On the Control Display

The current tire inflation pressure values and the intended tire inflation pressure values for the mounted tires can be displayed on the Control Display.

To ensure that they are displayed correctly, the tire sizes must be stored in the system and must have been set, refer to page 315, for the mounted tires.

The current tire inflation pressure value is located on each tire.

The reference tire inflation pressure value is located in the lower area of the Control Display.

# Checking the tire inflation pressure

#### General information

Tires heat up while driving. The tire inflation pressure increases with the tire temperature.

Tires have a natural, consistent loss of tire inflation pressure.

The displays of inflation devices may under-read by up to 0.1 bar/2 psi.



# Checking using tire inflation pressure specifications in the tire inflation pressure table

The tire inflation pressure specifications in the tire inflation pressure table only relate to cold tires or tires at the same temperature as the ambient temperature.

Only check the tire inflation pressure levels when the tires are cold, i.e.:

- Driving range of max. 1.25 miles/2 km has not been exceeded.
- If the vehicle has not moved again for at least 2 hours after a trip.

Check the tire inflation pressure of the emergency wheel in the cargo area regularly, and correct it as needed.

- 1. Determine the intended tire inflation pressure levels for the mounted tires.
- 2. Check the tire inflation pressure in all four tires, using a pressure gage, for example.
- Correct the tire inflation pressure if the actual tire inflation pressure deviates from the intended tire inflation pressure.
- Check whether all valve caps are screwed onto the tire valves.

# Checking using the tire inflation pressure specifications on the Control Display

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. (!) "Tire Pressure Monitor"
- Check whether the current tire inflation pressure levels deviate from the intended tire pressure value.
- Correct the tire inflation pressure if the actual tire inflation pressure deviates from the intended tire inflation pressure.

# After correcting the tire inflation pressure

With runflat tires:

Reinitialize the Flat Tire Monitor.

With Tire Pressure Monitor TPM:

The corrected tire inflation pressures are applied automatically. Make sure that the correct tire settings have been made.

With tires that cannot be found in the tire pressure values on the Control Display, reset the Tire Pressure Monitor TPM.

# Tire inflation pressures up to 100 mph/160 km/h

For speeds of up to 100 mph/160 km/h and for optimum driving comfort, note the pressure values in the tire inflation pressure table, refer to page 302, and adjust as necessary.



These pressure values can also be found on the tire inflation pressure label on the driver's door pillar.

Do not exceed a speed of 100 mph/160 km/h.



Tire size

# Tire inflation pressure values up to 100 mph/160 km/h

Pressure specifications

# X3 xDrive30i, X3 sDrive30i

	in bar/PSI	
Specifications in bar/PSI with cold tires	† † † †+	<b>†</b> /0
245/50 R 19 105 H XL A/S 245/50 R 19 105 W XL 245/50 R 19 105 V XL M+S	2.2 / 32	2.6 / 38
225/60 R 18 104 H XL A/S 225/60 R 18 104 H XL M+S	2.2 / 32	2.6 / 38
245/45 R 20 103 V XL M+S	2.2 / 32	2.7 / 39
F.: 245/45 R 20 103 Y XL	2.2 / 32	-
R.: 275/40 R 20 106 Y XL	-	2.5 / 36
F.: 245/45 R 20 103 W XL	2.2 / 32	-
R.: 275/40 R 20 106 W XL	-	2.5 / 36
F.: 245/40 R 21 100 Y XL	2.4 / 35	-

Tire size	Pressur in bar/P	e specifications SI
R.: 275/35 R 21 103 Y XL	-	2.8 / 41
Emergency wheel:	Speed up to a max. of 50 mph / 80 km/h	
T 135/80 R 18 104 M	4.2 / 60	

### X3 M40i

Tire size	Pressure spe in bar/PSI	cifications
Specifications in bar/PSI with cold tires	† † † † + †	
245/50 R 19 105 H XL A/S 245/50 R 19 105 W XL 245/50 R 19 105 V XL M+S	2.2 / 32	2.5 / 36
245/45 R 20 103 V XL M+S	2.2 / 32	2.7 / 39
F.: 245/45 R 20 103 W XL	2.2 / 32	-
R.: 275/40 R 20 106 W XL	-	2.5 / 36
F.: 245/45 R 20 103 Y XL	2.2 / 32	-
R.: 275/40 R 20 106 Y XL	-	2.5 / 36
F.: 245/40 R 21 100 Y XL	2.4 / 35	-



Tire size	Pressure specifications in bar/PSI	
R.: 275/35 R 21 103 Y XL	- 2.8 / 41	
Emergency wheel:	Speed up to a max. of 50 mph / 80 km/h	
T 135/80 R 18 104 M	4.2 / 60	

# Tire inflation pressures at max. speeds above 100 mph/160 km/h

# ▲ Warning

In order to drive at maximum speeds in excess of 100 mph/160 km/h, please observe, and, if necessary, adjust tire pressures for speeds exceeding 100 mph/160 km/h from the relevant table on the following pages. Otherwise, tire damage and accidents could occur.

For speeds over 100 mph/160 km/h and for optimum driving comfort, note the pressure values in the tire inflation pressure table, refer to page 303, and adjust as necessary.

# Tire inflation pressure values over 100 mph/160 km/h

# X3 xDrive30i, X3 sDrive30i

Without high-speed tuning feature

Tire size	Pressure sp in bar/PSI	ecifications
Specifications in bar/PSI with cold tires	<b>* * * * * *</b>	<b>X</b> /Ø
225/60 R 18 104 H XL A/S 245/50 R 19 105 H XL A/S 245/50 R 19 105 W XL 225/60 R 18 104 H XL M+S 245/50 R 19 105 V XL M+S 245/45 R 20 103 V XL M+S	2.6 / 38	3.1 / 45
F.: 245/45 R 20 103 Y XL	2.4 / 35	-
R.: 275/40 R 20 106 Y XL	-	2.7 / 39
F.: 245/45 R 20 103 W XL	2.7 / 39	-
R.: 275/40 R 20 106 W XL	-	3.1 / 45
F.: 245/40 R 21 100 Y XL	2.6 / 38	-
R.: 275/35 R 21 103 Y XL	-	2.9 / 42
Emergency wheel: T 135/80 R 18 104 M	Speed up to a 50 mph / 80 k 4.2 / 60	

With high-speed tuning feature



Tire size	Pressure spe bar/PSI	ecifications in
Specifications in bar/PSI with cold tires	† † † † + †	
245/50 R 19 105 W XL	2.6 / 38	3.2 / 46
F.: 245/45 R 20 103 Y XL	2.4 / 35	-
R.: 275/40 R 20 106 Y XL	-	2.7 / 39
F.: 245/45 R 20 103 W XL	2.7 / 39	-
R.: 275/40 R 20 106 W XL	-	3.1 / 45
F.: 245/40 R 21 100 Y XL	2.6 / 38	-
R.: 275/35 R 21 103 Y XL	-	2.9 / 42
Emergency wheel:	Speed up to a max. of 50 mph / 80 km/h	
T 135/80 R 18 104 M	4.2 / 60	

# X3 M40i

Without high-speed tuning feature

Tire size	Pressure sp in bar/PSI	ecifications
Specifications in bar/PSI with cold	<b>** * * * *</b> * * * * * * * * * * * * * *	<b>*</b> /©
tires		
245/50 R 19 105 H XL A/S 245/50 R 19 105 W XL 245/50 R 19 105 V XL M+S 245/45 R 20 103 V XL M+S	2.6 / 38	3.1 / 45
F.: 245/45 R 20 103 Y XL	2.4 / 35	-
R.: 275/40 R 20 106 Y XL	-	2.7 / 39
F.: 245/45 R 20 103 W XL	2.7 / 39	-
R.: 275/40 R 20 106 W XL	-	3.1 / 45
F.: 245/40 R 21 100 Y XL	2.6 / 38	-
R.: 275/35 R 21 103 Y XL	-	2.9 / 42
Emergency wheel: T 135/80 R 18 104 M	Speed up to a 50 mph / 80 k 4.2 / 60	

With high-speed tuning feature



Tire size	Pressure spe bar/PSI	ecifications in
Specifications in bar/PSI with cold tires	* * * * * * * * * * * * * * * * * * *	
0.45/50.D.40	0.7.400	0.4740
245/50 R 19 105 W XL	2.7739	3.4 / 49
F.: 245/45 R 20 103 Y XL	2.5 / 36	-
R.: 275/40 R 20 106 Y XL	-	2.8 / 41
F.: 245/45 R 20 103 W XL	2.9 / 42	-
R.: 275/40 R 20 106 W XL	-	3.3 / 48
F.: 245/40 R 21 100 Y XL	2.8 / 41	-
R.: 275/35 R 21 103 Y XL	-	3.1 / 45
Emergency wheel:	Speed up to a max. of 50 mph / 80 km/h	
T 135/80 R 18 104 M	4.2 / 60	

# Tire identification marks

#### Tire size

245/45 R 18 96 Y

245: nominal width in mm

45: aspect ratio in %

R: radial tire code

18: rim diameter in inches

96: load rating, not for ZR tires

Y: speed rating, before the R on ZR tires

# Maximum tire load

Maximum tire load is the maximum permissible weight for which the tire is approved.

Locate the maximum tire load on the tire sidewall and the Gross Axle Weight Rating - GAWR - on the certification label on the driver door B-pillar. Divide the tire load by 1.1. It must be greater than one-half of the vehicle's Gross Axle Weight Rating – GAWR. Note, front vs. rear GAWR and tire loads, respectively.

# **Speed letter**

Designation	Maximum speed
Q	up to 100 mph/160 km/h
R:	up to 106 mph/170 km/h
S	up to 112 mph/180 km/h
Т	up to 118 mph/190 km/h
Н	up to 131 mph/210 km/h
V	up to 150 mph/240 km/h
W	up to 167 mph/270 km/h
Υ	up to 186 mph/300 km/h

### Tire Identification Number

DOT-Code: DOT xxxx xxx 2119

xxxx: manufacturer code for the tire brand

xxx: tire size and tire design

2119: tire age

Tires with DOT codes meet the guidelines of the U.S. Department of Transportation.

# Tire age

#### Recommendation

Regardless of the tire tread, replace tires at least every 6 years.



#### Manufacture date

You can find the manufacture date of the tire on the tire's sidewall.

Designation	Manufacture date
DOT 2119	21st week, 2019

# **Uniform Tire Quality Grading**

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

E.g.: Treadwear 200; Traction AA; Temperature

# **DOT Quality Grades**

Treadwear

Traction AA A B C

Temperature A B C

All passenger vehicle tires must conform to Federal Safety Requirements in addition to these arades.

#### **Treadwear**

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. E.g., a tire graded 150 would wear one and one-half, 1 g, times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

# **Traction**

The traction grades, from highest to lowest, are AA, A, B, and C.

Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

# **Temperature**

The temperature grades are A, the highest, B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades Band A represent higher levels of performance on the laboratory test wheel than the minimum required by law.



### ⚠ Warning

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

# **RSC - Run-flat tires**

Run-flat tires, refer to page 309, are labeled with a circular symbol containing the letters RSC marked on the sidewall.

#### M+S

Winter and all-season tires with better cold weather performance than summer tires.



# Tire tread

#### Summer tires

Do not drive with a tire tread of less than 0.12 in/3 mm, otherwise there is an increased risk of hydroplaning.

#### Winter tires

Do not drive with a tire tread of less than 0.16 in/4 mm, as such tires are less suitable for winter operation.

# Minimum tread depth



Wear indicators are distributed around the tire's circumference and have the legally required minimum height of 0.063 inches/1.6 mm.

The positions of the wear indicators are marked on the tire sidewall with TWI, Tread Wear Indicator.

# **Tire damage**

# **General information**

Inspect your tires regularly for damage, foreign objects lodged in the tread, and tread wear.

Driving over rough or damaged road surfaces, as well as debris, curbs and other obstacles can cause serious damage to wheels, tires and suspension parts. This is more likely to occur with low-profile tires, which provide less cushioning between the wheel and the road. Be careful to avoid road hazards and reduce your speed, especially if your vehicle is equipped with low-profile tires.

Indications of tire damage or other vehicle malfunctions:

- Unusual vibrations.
- Unusual tire or running noises.
- Unusual handling such as a strong tendency to pull to the left or right.

Damage can be caused by the following situations, for instance:

- Driving over curbs.
- Road damage.
- Tire inflation pressure too low.
- ▶ Vehicle overloading.
- Incorrect tire storage.

# **Safety information**



#### Warning

Damaged tires can lose tire inflation pressure, which can lead to loss of vehicle control. There is a risk of accident. If tire damage is suspected while driving, immediately reduce speed and stop. Have wheels and tires checked. For this purpose, drive carefully to the nearest dealer's service center or another qualified service center or repair shop. Have vehicle towed or transported as needed. Do not repair damaged tires, but have them replaced.

### ⚠ Warning

Tires can become damaged by driving over obstacles, e.g., curbs or road damage, at high speed. Larger wheels have a smaller tire crosssection. The smaller the tire cross-section, the higher the risk of tire damage. There is a danger of accidents and property damage. If possible, avoid driving over objects or road conditions that may damage tires, or drive over them slowly and carefully.



# **Changing wheels and tires**

# Mounting and wheel balancing

Have mounting and wheel balancing carried out by a dealer's service center or another qualified service center or repair shop.

#### Wheel and tire combination

#### General information

You can ask the dealer's service center or another qualified service center or repair shop about the correct wheel/tire combination and wheel rim versions for the vehicle.

# Safety information

# Marning

Wheels and tires which are not suitable for your vehicle can damage parts of the vehicle, for instance due to contact with the body due to tolerances despite the same official size rating. There is a risk of an accident. The manufacturer of your vehicle strongly suggests that you use wheels and tires that have been recommended by the vehicle manufacturer for your vehicle type.

# Marning

Mounted steel wheels can cause technical problems, for instance independent loosening of the lug bolts, damage to the brake discs. There is a risk of accident. Do not mount steel wheels.

# Marning

Incorrect wheel/tire combinations will have a negative impact on the vehicle's handling and on the function of a variety of systems, such as the Anti-lock Brake System or Dynamic Stability Control. There is a risk of accident. To maintain good handling and vehicle response, use only tires with a single tread configuration from a single manufacturer. The manufacturer of the vehicle recommends that you use wheels and tires that have been recommended by the vehicle manufacturer for your vehicle type. Following tire damage, have the original wheel/tire combination remounted on the vehicle as soon as possible.

#### Recommended tire brands



For each tire size, the manufacturer of the vehicle recommends certain tire brands. The tire brands can be identified by a star on the tire sidewall.

# **New tires**

Tire traction is not optimal due to manufacturing circumstances when tires are brand-new: they achieve their full traction potential after a break-in time.

Drive conservatively for the first 200 miles/300 km.

# Retreaded tires



Retreaded tires can have different tire casing structures. With advanced age the service life can be limited. There is a risk of an accident. The manufacturer of your vehicle does not recommend the use of retreaded tires.



The manufacturer of the vehicle does not recommend the use of retreaded tires.

#### Winter tires

# **General information**

Winter tires are recommended for operating on winter roads.

Although so-called all-season M+S tires provide better winter traction than summer tires, they usually do not provide the same level of performance as winter tires.

### **Safety information**



#### Marning

If the vehicle is equipped with an M Sport differential and all-weather tires on 19 inch rims. this can alter handling, for instance the vehicle may swerve off course. There may be a risk of accident or risk of damage to property. If the vehicle is equipped with an M Sport differential, do not fit all-weather tires on 19 inch rims.

# Maximum speed of winter tires

If the maximum speed of the vehicle is higher than the permissible speed for the winter tires. then attach a label showing the permissible maximum speed in the field of view. The label is available from a dealer's service center or another qualified service center or repair shop.

With winter tires mounted, observe and do not exceed the permissible maximum speed.

# **Changing runflat tires**

For your own safety, use only runflat tires. No spare tire is available in the case of a flat tire. Further information is available from a dealer's service center or another qualified service center or repair shop.

# Rotating wheels between axles



#### Marning

Rotating tires between the axles on vehicles with different tire sizes or rim sizes on the front and rear axles can cause damage to the tires and the vehicle. There is a risk of accident, Do not rotate the tires between the axles on vehicles with different tire sizes or rim sizes on the front and rear axles.

Different wear patterns can occur on the front and rear axles depending on individual driving conditions. The tires can be rotated in pairs between the axles to achieve even wear. Further information is available from a dealer's service center or another qualified service center or repair shop. After rotating, check the tire pressure and correct, if needed,

# **Storing tires**

### Tire inflation pressure

Do not exceed the maximum tire inflation pressure indicated on the side wall of the tire.

# Storage

Store wheels and tires in a cool, dry and dark place.

Always protect tires against all contact with oil, grease, and solvents.

Do not leave tires in plastic bags.

Remove dirt from wheels or tires.

# **Run-flat tires**

# Concept

Run-flat tires permit continued driving under restricted conditions even in the event of a complete loss of tire inflation pressure.



# General information

The wheels consist of tires that are self-supporting, to a limited degree, and possibly special rims.

The support of the sidewall allows the tire to remain drivable to a restricted degree in the event of a tire inflation pressure loss.

Follow the instructions for continued driving with a flat tire.

# **Safety information**



#### Marning

Your vehicle handles differently with a run-flat tire with no or low inflation pressure; for instance, your lane stability when braking is reduced, braking distances are longer and the self-steering properties will change. There is a risk of accident. Drive moderately and do not exceed a speed of 50 mph/80 km/h.



#### Warning

Heavy trailers can start swinging when continuing to drive with a flat tire. There may be a risk of accident or risk of damage to property. Do not exceed a speed of 35 mph/60 km/h when driving with a trailer and a flat tire. Immediately brake in the case of swinging. Apply necessary steering corrections as carefully as possible.

#### Label



The tires are marked on the tire sidewall with RSC Run-flat System Component.

# Repairing a flat tire

# Safety measures

- Park the vehicle as far away as possible from passing traffic and on solid ground.
- ▶ Switch on the hazard warning system.
- Secure the vehicle against rolling away by setting the parking brake.
- > Turn the steering wheel until the front wheels are in the straight-ahead position and engage the steering wheel lock.
- ▶ Have all vehicle occupants get out of the vehicle and ensure that they remain outside the immediate area in a safe place, such as behind a quardrail.
- ▶ If necessary, set up a warning triangle at an appropriate distance.

# **Mobility System**

# Concept

With the Mobility System, minor tire damage can be sealed temporarily to enable continued travel. To accomplish this, sealant is pumped into the tires, which seals the damage from the inside.



#### **General information**

- Follow the instructions on using the Mobility System found on the compressor and sealant container.
- Use of the Mobility System may be ineffective if the tire puncture measures approx. 1/8 inches/4 mm or more.
- Contact a dealer's service center or another qualified service center or repair shop if the tire cannot be made drivable.
- Do not remove foreign bodies that have penetrated the tire. Only remove foreign objects if they are visibly protruding from the tire.
- ▶ Pull the speed limit sticker off the sealant container and apply it to the steering wheel.
- ➤ The use of a sealant can damage the TPM wheel electronics. In this case, have the electronics checked and replaced at the next opportunity.
- ➤ The compressor can be used to check the tire inflation pressure.

#### **Overview**


# **Storage**



The Mobility System is located in the compartment under the cargo floor panel.

Fold up the cargo floor panel.


#### Sealant container

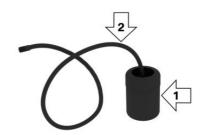

- Sealant container, arrow 1.
- ▶ Filling hose, arrow 2.

Observe use-by date on the sealant container.

# Compressor

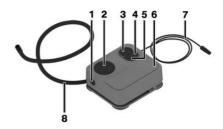

- 1 Sealant container unlocking
- 2 Sealant container holder
- **3** Tire pressure gage
- 4 Reduce tire inflation pressure button
- 5 On/off switch
- 6 Compressor
- 7 Connector/cable for socket
- 8 Connection hose

# Safety measures

- ▶ Park the vehicle as far away as possible from passing traffic and on solid ground.
- ▶ Switch on the hazard warning system.
- Secure the vehicle against rolling away by setting the parking brake.

- Turn the steering wheel until the front wheels are in the straight-ahead position and engage the steering wheel lock.
- Have all vehicle occupants get out of the vehicle and ensure that they remain outside the immediate area in a safe place, such as behind a guardrail.
- ▶ If necessary, set up a warning triangle at an appropriate distance.

# Filling the tire with sealant

# **Safety information**

# **⚠** DANGER

If the exhaust pipe is blocked or ventilation is insufficient, harmful exhaust gases can enter into the vehicle. The exhaust gases contain pollutants which are colorless and odorless. In enclosed areas, exhaust gases can also accumulate outside of the vehicle. There is danger to life. Keep the exhaust pipe free and ensure sufficient ventilation.

# **⚠** NOTICE

The compressor can overheat during extended operation. There is a risk of damage to property. Do not run the compressor for more than 10 minutes

# **Filling**

Shake the sealant container.



2. Pull filling hose completely out of the cover of the sealant container. Do not kink the hose.



Slide the sealant container into the holder on the compressor housing, ensuring that it engages audibly.



4. Screw the filling hose of the sealant container onto the tire valve of the nonworking wheel.





5. With the compressor switched off, insert the plug into the power socket inside the vehicle.



6. With standby state switched on or the engine running, switch on the compressor.



Let the compressor run for max. 10 minutes to fill the tire with sealant and achieve a tire inflation pressure of approx. 2.0 bar.

While the tire is being filled with sealant, the tire inflation pressure may sporadically reach approx. 5 bar. Do not switch off the compressor at this point.

# Checking and adjusting the tire inflation pressure

# Checking

- 1. Switch off the compressor.
- 2. Read the tire inflation pressure on the tire pressure gage.

To continue the trip, a tire inflation pressure of at least 2 bar must be reached.

# Removing and stowing the sealant container

- 1. Unscrew the filling hose of the sealant container from the tire valve.
- 2. Press the red unlocking device.
- 3. Remove the sealant container from the compressor.
- 4. Wrap and store the sealant container in suitable material to avoid dirtying the cargo area.

# Minimum tire inflation pressure is not reached

- Pull the connector out of the power socket inside the vehicle.
- 2. Drive 33 ft/10 m forward and back to distribute the sealant in the tire.
- Screw the connection hose of the compressor directly onto the tire valve stem.



Insert the connector into the power socket inside the vehicle.



- 5. With standby state switched on or the engine running, switch on the compressor.
  - If a tire inflation pressure of at least 2 bar cannot be reached, contact your dealer's service



center or another qualified service center or repair shop.

If a tire inflation pressure of at least 2 bar is reached, see Minimum tire inflation pressure is reached.

- 6. Unscrew the connection hose of the compressor from the tire valve.
- Pull the connector out of the power socket inside the vehicle.
- 8. Stow the Mobility System in the vehicle.

# Minimum tire inflation pressure is reached

- 1. Unscrew the connection hose of the compressor from the tire valve.
- Pull the connector out of the power socket inside the vehicle.
- 3. Stow the Mobility System in the vehicle.
- Immediately drive approx. 5 miles/10 km to ensure that the sealant is evenly distributed in the tire.

Do not exceed a speed of 50 mph/80 km/h. If possible, do not drive at speeds less than 12 mph/20 km/h.

# **Adjustment**

- 1. Stop at a suitable location.
- 2. Screw the connection hose of the compressor directly onto the tire valve stem.



3. Insert the connector into the power socket inside the vehicle.



- 4. Correct the tire inflation pressure to at least 2.0 bar.
  - ▶ Increase tire inflation pressure: with standby state switched on or the engine running, switch on the compressor.
  - ▶ Reduce tire inflation pressure: press the button on the compressor.
- 5. Unscrew the connection hose of the compressor from the tire valve.
- 6. Pull the connector out of the power socket inside the vehicle.
- 7. Stow the Mobility System in the vehicle.

# **Continuing the trip**

Do not exceed the maximum permissible speed of 50 mph/80 km/h.

Reinitialize the run-flat tires, refer to page 322.

Reset the Tire Pressure Monitor TPM, refer to page 315.

Replace the nonworking tire and the sealant container of the Mobility System promptly.



# **Snow chains**

# **Safety information**

#### Warning

With the mounting of snow chains on unsuitable tires, the snow chains can come into contact with vehicle parts. There may be a risk of accident or risk of damage to property. Only mount snow chains on tires that are designated by their manufacturer as suitable for the use of snow chains.

#### Marning

Insufficiently tight snow chains may damage tires and vehicle components. There may be a risk of accident or risk of damage to property. Make sure that the snow chains are always sufficiently tight. Re-tighten as needed according to the snow chain manufacturer's instructions.

# Fine-link snow chains

The manufacturer of the vehicle recommends the use of fine-link snow chains. Certain types of fine-link snow chains have been tested by the manufacturer of the vehicle and recommended as road-safe and suitable.

Information regarding suitable snow chains is available from a dealer's service center or another qualified service center or repair shop.

### Use

Use only in pairs on the rear wheels, equipped with the tires of the following size:

- ▶ 225/60 R 18.
- ≥ 245/50 R 19.

Follow the snow chain manufacturer's instructions.

Do not initialize the Flat Tire Monitor after mounting snow chains, as doing so may result in incorrect readings.

Do not reset the Tire Pressure Monitor TPM after mounting snow chains, as doing so may result in incorrect readings.

When driving with snow chains, briefly activate Dynamic Traction Control DTC to optimize the forward momentum.

# Maximum speed with snow chains

Do not exceed a speed of 30 mph/50 km/h when using snow chains.

# **Tire Pressure Monitor TPM**

# Concept

The system monitors tire inflation pressure in the four mounted tires. The system warns you if there is a loss of pressure in one or more tires.

### General information

Sensors in the tire valves measure the tire inflation pressure and tire temperature.

Using the tire settings in iDrive, the system can automatically display the specified target pressures and compare them with the actual tire inflation pressures.

If tires are being used that are not specified on the tire inflation pressure details on the vehicle, refer to page 300, such as tires with special approval, the system needs to be actively reset. The system will then take over the actual tire inflation pressures as the target pressures.

When operating the system, also note the additional information found in the Tire inflation pressure, refer to page 300, chapter.



# **Safety information**

#### Warning

The display of the target pressures is not a substitute for the tire inflation pressure details on the vehicle. Incorrect entries in the tire settings can lead to incorrect target tire inflation pressure values. In this case, it cannot be guaranteed that the notification of a loss of tire inflation pressure will be reliable. There is a risk of injury and risk of damage to property. Ensure that the tire sizes of the mounted tires are displayed correctly and match the details on the tires and on the vehicle.

# **Functional requirements**

The following conditions must be met for the system; otherwise, reliable flagging of a loss of tire inflation pressure is not assured:

- ▶ Every time a tire or wheel is changed, the correct details on the mounted tires must be entered in the tire settings, refer to page 316.
- > TPM does not activate until after driving for a few minutes:
  - > After a tire or wheel replacement.
  - ▶ Reset, for tires without special approval.
  - After changing the tire setting.
- ▶ For tires with special approval:
  - ▶ After a tire or wheel replacement, a reset was performed with the correct tire inflation pressure.
  - ▶ After the tire inflation pressure was adiusted to a new value, a reset was performed.
- ▶ Wheels with TPM wheel electronics.

# **Tire settings**

### **General information**

The tire sizes of the mounted tires can be gathered from the tire inflation pressure details on the vehicle, refer to page 300, or directly on the tires.

The tire details do not need to be re-entered when the tire inflation pressure is corrected.

For summer and winter tires, the tire details entered last are stored. After a tire or wheel replacement, the settings of the tire sets used last can be selected.

# **Changing settings**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. "Tire settings"
- 4. (!) "Tire Pressure Monitor"
- 5. Selecting tires:
  - "Summer tires"
  - ▶ "Winter tires/all-season tires"
- 6 "Current:"
- 7. Select the tire type that is mounted on the rear axle:
  - ▶ Tire size, e.g., 245/45 R18 96 Y.
  - ▶ For tires with special approval: "Other tire".

For further proceeding, see perform a reset section.

- 8. Select the maximum road speed that will be used with the tires.
- 9. "Confirm settings"

The measurement of the current tire inflation pressure is started. The measurement progress is displayed.

# Status display

#### **Current status**

The system status can be displayed on the Control Display, e.g., whether or not the system is active.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. (!) "Tire Pressure Monitor"

The current status is displayed.

# **Current tire inflation pressure**

The current tire inflation pressure is displayed for each tire.

The current tire inflation pressures may change during driving operation or depending on the external temperature.

### **Current tire temperature**

Depending on the model, the current tire temperatures are displayed.

The current tire temperatures may change while driving or due to the external temperature.

# **Target pressure**

The target pressure for the tires on the front and rear axles is displayed.

The specified target pressures take the influence of driving operation and external temperature on the tire temperature into account. The appropriate target pressure is always displayed, independent of the weather situation, tire temperatures and driving times.

The displayed target pressure may change and may differ from the tire inflation pressure details on the door pillar of the driver's door. The tire inflation pressure can thus be corrected to the value of the displayed target pressures.

The target pressure is immediately adjusted if the vehicle load is changed in the tire settings.

### **Tire conditions**

#### **General information**

Tire and system status are indicated by the color of the wheels and a SMS text message on the Control Display.

### All wheels green

- ➤ The system is active and bases warnings on the displayed target pressures.
- ▶ For tires with special approval: the system is active and bases warnings on the tire inflation pressures stored during the last reset.

### One to four yellow wheels

A flat tire or major drop in the tire inflation pressure has occurred in the indicated tires.

### **Gray wheels**

It may not be possible to identify tire inflation pressure losses.

Possible causes:

- Malfunction.
- During tire inflation pressure measurement, after confirmation of the tire settings.
- ▶ For tires with special approval: the system is being reset.

# For tires with special approval: performing a reset

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- "Tire Pressure Monitor"
- 4. Make sure that correct tire settings, refer to page 316, have been made.
- Switch on drive-ready state and do not drive off
- 6. Reset tire inflation pressure: "Perform reset".
- 7. Drive away.



The wheels are displayed in gray and the following is displayed "Resetting Tire Pressure Monitor...".

After a travel time of several minutes, the set tire inflation pressures are accepted as the target tire inflation pressures. The reset is completed automatically while driving.

After a successfully completed reset, the wheels on the Control Display are shown in green and the following is displayed: "Tire Pressure Monitor active. See label for recommended pressures.".

You may interrupt this trip at any time. When you continue the reset resumes automatically.

# Messages: for tires without special approval

#### **General information**

A low tire inflation pressure may cause the DSC Dynamic Stability Control to be switched on.

# **Safety information**



#### Marning

A damaged regular tire with low or missing tire inflation pressure impacts handling, such as steering and braking response. Run-flat tires can maintain limited stability. There is a risk of accident. Do not continue driving if the vehicle is equipped with normal tires. Follow the information on run-flat tires and continued driving with these tires.

# If a tire inflation pressure check is required

#### Message

A symbol with a Check Control message appears on the Control Display.

#### Symbol Possible cause



Inflation was not carried out according to specifications, e.g., when the tire has not been sufficiently inflated or in the case of a natural steady tire pressure loss.

#### Measure

Check the tire pressure and correct as needed.

#### If the tire inflation pressure is too low

#### Message



A yellow warning light is illuminated in the instrument cluster.

In addition, a symbol with a Check Control message appears on the Control Display.

#### Symbol Possible cause



There is a tire inflation pressure loss.

#### Measure

- 1. Reduce the vehicle speed. Do not exceed a speed of 80 mph/130 km/h.
- 2. At the next opportunity, for instance at a gas station, check the tire inflation pressure in all four tires and correct if necessary.

# If there is a significant loss of tire inflation pressure

#### Message



A yellow warning light is illuminated in the instrument cluster.

In addition, a symbol with the affected tire appears in a Check Control message on the Control Display.



#### Symbol Possible cause



There is a flat tire or a major loss in tire inflation pressure.

#### Measure

- Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers.
- 2. Check whether the vehicle is fitted with normal tires or run-flat tires.
  - Run-flat tires, refer to page 309, are labeled with a circular symbol containing the letters RSC marked on the tire's sidewall.
- 1. Read the description on What to do in case of a flat tire, refer to page 320.

# Messages: for tires with special approval

#### **General information**

A low tire inflation pressure may cause the DSC Dynamic Stability Control to be switched on.

# **Safety information**



#### Marning

A damaged regular tire with low or missing tire inflation pressure impacts handling, such as steering and braking response. Run-flat tires can maintain limited stability. There is a risk of accident. Do not continue driving if the vehicle is equipped with normal tires. Follow the information on run-flat tires and continued driving with these tires.

# If a tire inflation pressure check is required

#### Message

A symbol with a Check Control message appears on the Control Display.

# Sym- Possible cause bol



Inflation was not carried out according to specifications, e.g., the tire has not been sufficiently inflated.

The system has detected a wheel change, but no reset was done.

The tire inflation pressure has fallen below the level of the last reset.

No reset was performed for the system. The system issues a warning based on the tire inflation pressures stored during the last reset.

#### Measure

- 1. Check the tire pressure and correct as needed.
- 2. Perform a system reset.

# If the tire inflation pressure is too low

#### Message



A yellow warning light is illuminated in the instrument cluster.

In addition, a symbol with a Check Control message appears on the Control Display.

#### Symbol Possible cause



There is a tire inflation pressure loss.

No reset was performed for the system. The system issues a warning based on the tire inflation pressures stored during the last reset.

#### Measure

- 1. Reduce the vehicle speed. Do not exceed a speed of 80 mph/130 km/h.
- At the next opportunity, for instance at a gas station, check the tire inflation pressure in all four tires and correct if necessary.



Reset the system.

# If there is a significant loss of tire inflation pressure

#### Message



A yellow warning light is illuminated in the instrument cluster.

In addition, a symbol with the affected tire appears in a Check Control message on the Control Display.

#### Symbol Possible cause



There is a flat tire or a major loss in tire inflation pressure.

No reset was performed for the system. The system issues a warning based on the tire inflation pressures stored during the last reset.

#### Measure

- 1. Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers.
- 2. Check whether the vehicle is fitted with normal tires or run-flat tires.
  - Run-flat tires, refer to page 309, are labeled with a circular symbol containing the letters RSC marked on the tire's sidewall.
- 1. Read the description on What to do in case of a flat tire, refer to page 320.

# Actions in the event of a flat tire

#### Normal tires

1. Identify the damaged tire.

Check the tire inflation pressure in all four tires, for instance using the tire pressure gage of a flat tire kit.

For tires with special approval: if the tire inflation pressure in all four tires is correct, the

TPM may not have been reset. In this case, perform the reset.

If tire damage cannot be found, contact a dealer's service center or another qualified service center or repair shop.

2. Repair the flat tire, e.g., with a flat tire kit or by changing the wheel.

Use of sealant, for instance from the flat tire kit. may damage the TPM wheel electronics. Have the electronics replaced at the next opportunity.

#### **Run-flat tires**

#### Safety information



#### Warning

Your vehicle handles differently with a run-flat tire with no or low inflation pressure; for instance, your lane stability when braking is reduced, braking distances are longer and the self-steering properties will change. There is a risk of accident. Drive moderately and do not exceed a speed of 50 mph/80 km/h.



### ⚠ Warning

Heavy trailers can start swinging when continuing to drive with a flat tire. There may be a risk of accident or risk of damage to property. Do not exceed a speed of 35 mph/60 km/h when driving with a trailer and a flat tire. Immediately brake in the case of swinging. Apply necessary steering corrections as carefully as possible.

#### Maximum speed

You may continue driving with a damaged tire at speeds up to 50 mph/80 km/h.



#### Continued driving with a flat tire

Follow the following when continuing to drive with a damaged tire:

- Avoid sudden braking and steering maneuvers.
- 2. Do not exceed a speed of 50 mph/80 km/h.
- 3. Check the tire inflation pressure in all four tires at the next opportunity.

# Possible driving range with a depressurized tire

The distance for which it may be possible to drive safely varies depending on how the vehicle is loaded and used, e.g., speed, road conditions, external temperature. The driving range may be less but may also be more if an economical driving style is used.

If the vehicle is loaded with an average weight and used under favorable conditions, the distance for which it may be safe to drive may be up to 50 miles/80 km.

#### Vehicle handling with damaged tires

Vehicles driven with a damaged tire will handle differently, potentially leading to conditions such as the following:

- Greater likelihood of swerving off course.
- Longer braking distances.
- ▶ Changed self-steering properties.

Modify your driving style. Avoid abrupt steering maneuvers or driving over obstacles, for instance curbs or potholes.

#### Final tire failure

Vibrations or loud noises while driving can indicate the final failure of a tire.

Reduce speed and stop; otherwise, pieces of the tire could come loose and cause an accident.

Do not continue driving. Contact a dealer's service center or another qualified service center or repair shop.

# **System limits**

#### **Temperature**

The tire inflation pressure depends on the tire's temperature.

Driving or exposure to the sun will increase the tire's temperature, thus increasing the tire inflation pressure.

The tire inflation pressure is reduced when the tire temperature falls again.

These circumstances may cause a warning when temperatures fall very sharply.

Following a temperature-related warning, the target pressures are displayed on the Control Display again after a short distance.

#### Sudden tire pressure loss

The system cannot indicate sudden serious tire damage caused by external circumstances.

### Failure performing a reset

Tires with special approval: the system will not function correctly if a reset was not performed, for example a flat tire may be indicated although the tire inflation pressures are correct.

#### **Malfunction**

# Message



The yellow warning light flashes and is then illuminated continuously. A Check Control message is displayed. It may not

be possible to identify tire pressure losses.

#### Measure

- A wheel without TPM wheel electronics is mounted: have the wheels checked, if needed.
- A wheel without TPM wheel electronics, such as an emergency wheel, is mounted: have the wheels checked, if needed.
- Malfunction: have the system checked.

- Interference caused by systems or devices with the same radio frequency: after leaving the area of the interference, the system automatically becomes active again.
- ▶ For tires with special approval: the system was unable to complete the reset. Perform a system reset again.

# Declaration according to NHTSA/ **FMVSS 138 Tire Pressure Monitoring System**

Each tire, including the spare (if provided) should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.) As an added safety feature. your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if underinflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale. Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly, Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

# Flat Tire Monitor FTM

# Concept

The system detects tire inflation pressure loss on the basis of rotation speed differences between the individual wheels while driving.

In the event of a tire inflation pressure loss, the diameter and therefore the rotational speed of the corresponding wheel changes. The difference will be detected and reported as a flat tire.

The system does not measure the actual inflation pressure in the tires.

# **Functional requirements**

The following conditions must be met for the system; otherwise, reliable flagging of a loss of tire inflation pressure is not assured:

- ▶ After a tire or wheel replacement, an initialization was performed with the correct tire inflation pressure.
- ▶ After the tire pressure was adjusted to a new value, an initialization was performed.

# Status display

The current status of the flat tire monitor can be displayed, for instance whether the RPA is active. Via iDrive:

1. "My Vehicle"



- 2. "Vehicle status"
- 3. (!) "Flat Tire Monitor"

The status is displayed.

# **Initialization required**

An initialization must be performed in the following situations:

- ▶ After the tire inflation pressure has been ad-
- > After a tire or wheel replacement.

# **Performing initialization**

When initializing, the set tire inflation pressures serve as reference values in order to detect a flat tire. Initialization is started by confirming the tire inflation pressures.

Do not initialize the system when driving with snow chains.

Via iDrive:

- 1. "My Vehicle"
- "Vehicle status"
- "Flat Tire Monitor"
- 4. Switch on drive-ready state and do not drive
- 5. Start the initialization with: "Perform reset"
- 6. Drive away.

The initialization is completed while driving, which can be interrupted at any time.

The initialization automatically continues when driving resumes.

# Messages

#### **General information**

When a flat tire is indicated, DSC Dynamic Stability Control is switched on, if needed.

# Safety information

#### Warning

A damaged regular tire with low or missing tire inflation pressure impacts handling, such as steering and braking response. Run-flat tires can maintain limited stability. There is a risk of accident. Do not continue driving if the vehicle is equipped with normal tires. Follow the information on run-flat tires and continued driving with these tires.

#### Indication of a flat tire



A yellow warning light is illuminated in the instrument cluster.

In addition, a symbol with a Check Control message appears on the Control Display.

#### Symbol Possible cause



There is a flat tire or a major loss in tire inflation pressure.

#### Measure

- 1. Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers.
- 2. Check whether the vehicle is fitted with normal tires or run-flat tires.

Run-flat tires, refer to page 309, are labeled with a circular symbol containing the letters RSC marked on the tire's sidewall.

# Actions in the event of a flat tire

#### **Normal tires**

1. Identify the damaged tire.

To do this, check the tire inflation pressure in all four tires, for instance using the tire pressure gage of a flat tire kit.



If the tire inflation pressure in all four tires is correct, the Flat Tire Monitor may not have been initialized. In this case, initialize the system.

If identification of flat tire damage is not possible, please contact a dealer's service center or another qualified service center or repair shop.

2. Repair the flat tire, e.g., with a flat tire kit or by changing the wheel.

#### **Run-flat tires**

#### Safety information



#### Marning

Your vehicle handles differently with a run-flat tire with no or low inflation pressure; for instance, your lane stability when braking is reduced, braking distances are longer and the self-steering properties will change. There is a risk of accident. Drive moderately and do not exceed a speed of 50 mph/80 km/h.

# Marning

Heavy trailers can start swinging when continuing to drive with a flat tire. There may be a risk of accident or risk of damage to property. Do not exceed a speed of 35 mph/60 km/h when driving with a trailer and a flat tire. Immediately brake in the case of swinging. Apply necessary steering corrections as carefully as possible.

#### Maximum speed

You may continue driving with a damaged tire at speeds up to 50 mph/80 km/h.

#### Continued driving with a flat tire

Follow the following when continuing to drive with a damaged tire:

- 1. Avoid sudden braking and steering maneu-
- 2. Do not exceed a speed of 50 mph/80 km/h.
- 3. Check the tire inflation pressure in all four tires at the next opportunity.

If the tire inflation pressure in all four tires is correct, the Flat Tire Monitor may not have been initialized. In this case, initialize the system.

#### Possible driving range with a depressurized tire

The distance for which it may be possible to drive safely varies depending on how the vehicle is loaded and used, e.g., speed, road conditions, external temperature. The driving range may be less but may also be more if an economical driving style is used.

If the vehicle is loaded with an average weight and used under favorable conditions, the distance for which it may be safe to drive may be up to 50 miles/80 km.

#### Vehicle handling with damaged tires

Vehicles driven with a damaged tire will handle differently, potentially leading to conditions such as the following:

- Greater likelihood of swerving off course.
- Longer braking distances.
- Changed self-steering properties.

Modify your driving style. Avoid abrupt steering maneuvers or driving over obstacles, for instance curbs or potholes.

#### Final tire failure

Vibrations or loud noises while driving can indicate the final failure of a tire.

Reduce speed and stop; otherwise, pieces of the tire could come loose and cause an accident.



Do not continue driving. Contact a dealer's service center or another qualified service center or repair shop.

#### **System limits**

The system could be delayed or malfunction in the following situations:

- ▶ A natural, even tire inflation pressure loss in all four tires will not be recognized. Therefore, check the tire inflation pressure regularly.
- Sudden serious tire damage caused by external circumstances cannot be recognized in advance.
- ▶ When the system has not been initialized.
- When driving on a snowy or slippery road sur-
- ▶ Sporty driving style: spinning traction wheels, high lateral acceleration (drifting).
- ▶ When driving with snow chains.

## **Changing wheels/tires**

#### **General information**

When using run-flat tires or a flat tire kit, a wheel does not always need to be changed immediately when there is a loss of tire inflation pressure due to a flat tire.

If needed, the tools for changing wheels are available as accessories from a dealer's service center or another qualified service center or repair shop.

#### **Safety information**



#### A DANGER

The vehicle jack is only provided for short-term lifting of the vehicle for wheel changes. Even if all safety measures are observed, there is a risk of the raised vehicle falling, if the vehicle jack tips over. There is a risk of injuries or danger to life. If the vehicle is raised, do not lie under the vehicle and do not start the engine.



#### ♠ DANGER

Supports such as wooden blocks under the vehicle jack reduce the capacity of the vehicle jack to bear weight. They have the potential to exert too much strain on the vehicle jack, causing it to tip over and the vehicle to fall. There is a risk of injuries or danger to life. Do not place supports under the vehicle jack.



#### Warning

The jack, issued by the vehicle manufacturer, is provided in order to perform a wheel change in the event of a breakdown. The jack is not designed for frequent use; for example, changing from summer to winter tires. Using the jack frequently may cause it to become jammed or damaged. There is a risk of injury and risk of damage to property. Only use the jack to attach an emergency or spare wheel in the event of a breakdown.



#### Warning

On soft, uneven or slippery ground, for example snow, ice, tiles, etc., the vehicle jack can slip away. There is a risk of injury. If possible. change the wheel on a flat, solid, and slip-resistant surface.



#### Marning

The vehicle jack is optimized for lifting the vehicle and for the jacking points on the vehicle only. There is a risk of injury. Do not lift any other vehicle or cargo using the vehicle jack.



#### ▲ Warning

If the vehicle jack is not inserted into the jacking point provided for this purpose, the vehicle may be damaged or the vehicle jack may slip when it is being cranked up. There is a risk of injury or risk of damage to property. When cranking up the vehicle jack, ensure that it is inserted in the jacking point next to the wheel housing.

#### Marning

A vehicle that is raised on a vehicle jack may fall off of the jack if lateral forces are exerted on it. There is a risk of injury and risk of damage to property. While the vehicle is raised, do not exert lateral forces on the vehicle or pull abruptly on the vehicle. Have a stuck wheel removed by a dealer's service center or another qualified service center or repair shop.

# Securing the vehicle against rolling

#### **General information**

The vehicle manufacturer recommends to additionally secure the vehicle against rolling away when changing a wheel.

#### On a level surface



Place wheel chocks or other suitable objects in front and behind the wheel that is diagonal to the wheel to be changed.

#### On a slight downhill gradient



If you need to change a wheel on a slight downhill grade, place chocks and other suitable objects, for instance a rock, under the wheels of both the front and rear axles against the rolling direction.


#### Lug bolt lock

#### Concept

The wheel lug bolts have a special coding. The lug bolts can only be released with the adapter which matches the coding.

#### **Overview**

The adapter of the lug bolt lock is in the onboard vehicle tool kit or in a storage compartment close to the onboard vehicle tool kit.

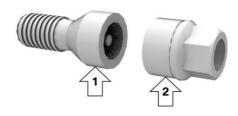

- ▶ Lug bolt, arrow 1.
- Adapter, arrow 2.

#### **Unscrewing**

- 1. Attach the adapter to the lug bolt.
- 2. Unscrew the lug bolt.



3. Remove the adapter after unscrewing the lug bolt.


#### **Screwing on**

- Attach the adapter to the lug bolt. If necessary, turn the adapter until it fits on the lug bolt.
- 2. Screw on the lug bolt. The tightening torque is 140 Nm.
- Remove the adapter and stow it after screwing on the lug bolt.

#### Preparing the vehicle

- ▶ Park the vehicle on solid and non-slip ground at a safe distance from traffic.
- ▶ Switch on the hazard warning system.
- Set the parking brake.
- ▶ Engage a gear or move the selector lever to position P.
- As soon as permitted by the traffic flow, have all vehicle occupants get out of the vehicle and ensure that they remain outside the immediate area in a safe place, such as behind a guardrail.
- Depending on the vehicle equipment, get wheel change tools and, if necessary, the emergency wheel from the vehicle.
- If necessary, set up a warning triangle or portable hazard warning light at an appropriate distance.
- ▶ Secure the vehicle additionally against rolling.
- Loosen the lug bolts a half turn.

# Jacking points for the vehicle jack

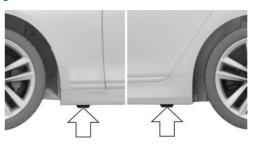

The jacking points for the vehicle jack are located at the indicated positions.



#### Jacking up the vehicle

#### Marning

Hands and fingers can be jammed when using the vehicle jack. There is a risk of injury. Comply with the described hand position and do not change this position while using the vehicle iack.

1. Hold the vehicle jack with one hand, arrow 1, and grasp the vehicle jack crank or lever with your other hand, arrow 2.



2. Insert the vehicle jack into the rectangular recess of the jacking point closest to the wheel to be changed.






3. Extend the vehicle jack by turning the vehicle jack crank or lever clockwise.



- 4. Take your hand away from the vehicle jack as soon as the vehicle jack is under load and continue turning the vehicle jack crank or lever with one hand.
- 5. Make sure that the vehicle jack foot stands vertically and at a right angle beneath the jacking point.



6. Make sure that the vehicle jack foot stands vertically and perpendicularly beneath the jacking point after extending the vehicle jack.

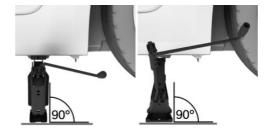

7. Crank the vehicle up, until the vehicle jack is with the entire surface on the ground and the relevant wheel is maximum 1.2 inches/3 cm above ground.

#### Mounting a wheel

Mount one emergency wheel only, as required.

- 1. Unscrew the lug bolts.
- 2. Remove the wheel.
- 3. Put the new wheel or emergency wheel on and screw in at least two lug bolts in a crosswise pattern until hand-tight.
  - If non-original light-alloy wheels of the vehicle manufacturer are mounted, the accompanying lug bolts may have to be used as well.
- 4. Hand-tighten the remaining lug bolts and tighten all lug bolts well in a crosswise pattern.
- 5. Turn the vehicle jack crank counterclockwise to retract the vehicle jack and lower the vehicle.
- 6. Remove the vehicle jack and stow it securely.

#### After the wheel change

- 1. Tighten the lug bolts crosswise. The tightening torque is 101 lbs ft/140 Nm.
- 2. Stow the nonworking wheel in the cargo area, if necessary.
  - The nonworking wheel cannot be stored under the cargo floor panel because of its size.
- 3. Check tire inflation pressure at the next opportunity and correct as needed.
- 4. Reinitialize the Flat Tire Monitor. Reset the Tire Pressure Monitor TPM.
- 5. Check to make sure the lug bolts are tight with a calibrated torque wrench.
- 6. Have the damaged tire replaced at the nearest dealer's service center or another qualified service center or repair shop.

## **Emergency wheel**

#### Concept

In the event of a flat tire, the emergency wheel can be used in place of the wheel with the defective tire. The emergency wheel is only intended for temporary use until the defective tire/wheel has been replaced.

#### General information

Mount one emergency wheel only.


Also check the tire inflation pressure of the emergency wheel in the cargo area regularly, and correct it as needed.

#### **Safety information**

#### Marning

The emergency wheel has particular dimensions. When driving with an emergency wheel, changed driving properties may occur, for instance reduced lane stability when braking, longer braking distance, and changed self-steering properties in the limit area. There is a risk of accident. Drive moderately and do not exceed a speed of 50 mph/80 km/h.

#### **Overview**

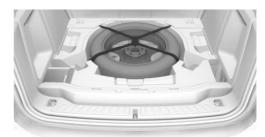

The emergency wheel and the wheel change tools are located in the cargo area under the cargo floor panel.

#### Removing the emergency wheel


- 1. Fold the rear part of the cargo floor panel forward.
- 2. Lift the cargo floor panel up and attach it to the folded-down multi-function hook.



#### 3. Remove the cover.



4. Open the ratchet strap at the clasp, arrow 1.

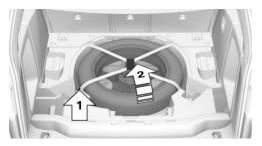

5. Remove the emergency wheel from the storage well, arrow 2.

#### Inserting the emergency wheel

- 1. Place the emergency wheel in the storage well.
- 2. Tie the ratchet strap. Make sure that it is correctly and firmly seated.
- 3. Install the cover.
- 4. Lift the cargo floor panel up slightly and fold in the multi-function hook.
- 5. Lower the cargo floor panel and fold it toward the rear.




# **Engine compartment**

## Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily

available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

#### **Overview**

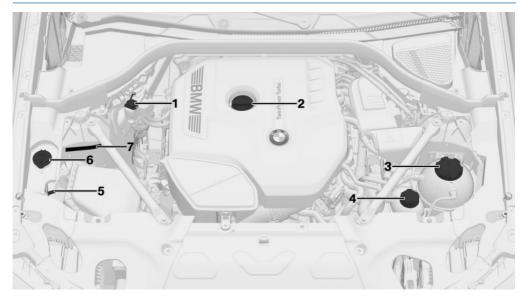

- Jump-starting, positive battery terminal
- 2 Oil filler neck
- 3 Coolant reservoir, engine
- 4 Coolant reservoir, auxiliary cooling

- Jump-starting, negative battery terminal
- 6 Filler neck for washer fluid
- 7 Vehicle identification number.



#### Hood

#### **Safety information**

#### Warning

Improperly executed work in the engine compartment can damage vehicle components and impair vehicle functions. There is a risk of an accident and damage to property. Have work in the engine compartment performed by a dealer's service center or another qualified service center or repair shop.

#### Warning

The engine compartment accommodates moving components. Certain components in the engine compartment can also move with the vehicle switched off, for instance the radiator fan. There is a risk of injury. Do not reach into the area of moving parts. Keep articles of clothing and hair away from moving parts.

#### Marning

There are protruding parts, for instance locking hook, on the inside of the hood. There is a risk of injury. If the hood is open, pay attention to protruding parts and keep clear of these areas.

#### Warning

An incorrectly locked hood can open while driving and restrict visibility. There is a risk of accident. Stop immediately and correctly close the hood.

#### Marning

Body parts can be jammed when opening and closing the hood. There is a risk of injury. Make sure that the area of movement of the hood is clear during opening and closing.

#### ⚠ NOTICE

Folded-away wipers can be jammed when the hood is opened. There is a risk of damage to property. Make sure that the wipers with the wiper blades mounted are folded down onto the windshield before opening the hood.

#### ⚠ NOTICE

When the hood is closed, it must engage on both sides. Pressing again can damage the hood. There is a risk of damage to property. Open the hood again and then close it energetically. Avoid pressing again.

#### **Opening**

1. Pull lever, arrow 1. Hood is unlocked.



- 2. After the lever is released, pull the lever again, arrow 2.
  - Hood can be opened.
- 3. Be careful of protruding parts on the hood.



#### **Closing**



Energetically close the hood from approx. 20 in/50 cm.

The hood must engage on both sides.



# **Engine oil**

## Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

#### **General information**

The engine oil consumption is dependent on your driving style and driving conditions.

Therefore, regularly check the engine oil level after refueling by taking a detailed measurement.

The engine oil consumption can increase in the following situations, for instance:

- Sporty driving style.
- Break-in of the engine.
- ▶ Idling of the engine.
- With use of engine oil types that are classified as not suitable.

Different Check Control messages appear on the Control Display depending on the engine oil level.

## Safety information



#### ∧ NOTICE

An engine oil level that is too low causes engine damage. There is a risk of damage to property. Immediately add engine oil.

#### ∧ NOTICE

Too much engine oil can damage the engine or the catalytic converter. There is a risk of damage to property. Do not add too much engine oil. When too much engine oil is added, have the engine oil level corrected by a dealer's service center or another qualified service center or repair shop.

#### Electronic oil measurement

#### General information

The electronic oil measurement has two measuring principles:

- Monitoring.
- Detailed measurement.

When making frequent short-distance trips or using a dynamic driving style, for instance when taking curves aggressively, regularly perform a detailed measurement.

#### **Monitoring**

#### Concept

The engine oil level is monitored electronically while driving and can be shown on the Control Display.

If the engine oil level is outside its permissible operating range, a Check Control message is displayed.



A red indicator light indicates that the engine oil pressure is too low.

#### **Functional requirements**

A current measured value is available after approx. 30 minutes of normal driving.



#### Displaying the engine oil level

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. \ "Engine oil level"

The engine oil level is displayed.

#### **System limits**

When making frequent short-distance trips or using a dynamic driving style, it may not be possible to calculate a measured value. In this case, the measured value for the last, sufficiently long trip is displayed.

#### **Detailed measurement**

#### Concept

The engine oil level is checked when the vehicle is stationary and displayed via a scale.

If the engine oil level is outside its permissible operating range, a Check Control message is displayed.

#### **General information**

During the measurement, the idle speed is increased somewhat.

#### **Functional requirements**

- Vehicle is parked in a horizontal position.
- ▶ Steptronic transmission: selector lever in selector lever position N or P and accelerator pedal not depressed.
- ▶ Engine is running and is at operating temperature.

#### Performing a detailed measurement

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. Engine oil level"

- 4. "Measure engine oil level"
- "Start measurement"

The engine oil level is checked and displayed via a scale.

## Adding engine oil

#### General information

Only add engine oil when the message is displayed in the instrument cluster. The quantity to be added is indicated in the message shown on the Control Display.

Only add suitable types of engine oil, refer to page 336.

Safely park the vehicle and switch off drive-ready state before adding engine oil.

Take care not to add too much engine oil.

#### **Safety information**



#### Warning

Operating materials, for instance oils, greases, coolants, fuels, can contain harmful ingredients. There is a risk of injuries or danger to life. Follow the instructions on the containers. Avoid the contact of articles of clothing, skin or eyes with operating materials. Do not refill operating materials into different bottles. Store operating materials out of reach of children.



#### ∧ NOTICE

An engine oil level that is too low causes engine damage. There is a risk of damage to property. Immediately add engine oil.





#### ∧ NOTICE

Too much engine oil can damage the engine or the catalytic converter. There is a risk of damage to property. Do not add too much engine oil. When too much engine oil is added, have the engine oil level corrected by a dealer's service center or another qualified service center or repair shop.

#### Overview

The oil filler neck is located in the engine compartment, refer to page 331.

#### Adding engine oil

- 1. Open the hood, refer to page 332.
- 2. Open the lid counterclockwise.



- 3. Add engine oil.
- 4. Close the lid.

# Engine oil types to add

#### General information

The engine oil quality is critical for the life of the engine.

Only add the types of engine oil which are listed.

#### **Safety information**



#### ∧ NOTICE

Oil additives can damage the engine. There is a risk of damage to property. Do not use oil additives.



#### ∧ NOTICE

Incorrect engine oil can cause malfunctions in the engine or damage it. There is a risk of damage to property. When selecting an engine oil, make sure that the engine oil has the correct oil rating.

#### Suitable engine oil types

Add engine oils that meet the following oil rating standards:

#### Gasoline engine

BMW Longlife-01 FE.

BMW Longlife-14 FE+.

BMW Longlife-17 FE+.

#### **Diesel engine**

BMW Longlife-12 FE.

#### Alternative engine oil types

If an engine oil suitable for continuous use is not available, up to 1 US quart/liter of an engine oil with the following oil rating can be added:

#### Oil rating

API SL.

API SM.

API SN.



#### Viscosity grades

#### Viscosity grades

SAE 0W-20.

SAF 0W-30.

Viscosity grade SAE 0W-20 is not suitable for diesel engines.

More information about suitable oil ratings and viscosity grades of engine oils can be requested from a dealer's service center or another qualified service center or repair shop.

#### **Engine oil change**



#### ∧ NOTICE

Engine oil that is not changed in timely fashion can cause increased engine wear and thus engine damage. There is a risk of damage to property. Do not exceed the service data indicated in the vehicle.

The vehicle manufacturer recommends that you have a dealer's service center or another qualified service center or repair shop change the engine oil.

BMW recommends Original BMW Engine Oil.



## Coolant

## Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

#### **General information**

Coolant consists of water and additives.

Not all commercially available additives are suitable for the vehicle. Information about suitable additives is available from a dealer's service center or another qualified service center or repair shop.

## Safety information



#### Warning

With the engine hot and the cooling system open, coolant can escape and lead to scalding. There is a risk of injury. Only open the cooling system with the engine cooled down.



#### Warning

Additives are harmful and incorrect additives can damage the engine. There is a risk of injury and risk of damage to property. Do not allow additives to come into contact with skin, eyes or articles of clothing. Use suitable additives only.

#### **Coolant level**

#### General information

Vehicles with gasoline engine feature two cooling circuits. Always check the coolant levels of both coolant reservoirs and refill as needed.

The coolant level is indicted using minimum and maximum markings. Depending on the coolant reservoir, the minimum and maximum markings are located at different locations.

Depending on the engine installation, the coolant reservoir is located on the right side or the left side of the engine compartment, refer to page 331.

#### Checking the coolant level on the side markings

- 1. Let the engine cool.
- 2. Open the hood, refer to page 332.
- 3. The coolant level is correct if it lies between the minimum and maximum marks on the coolant reservoir.

Symbol	Meaning
$\nabla$	Maximum.
Δ	Minimum.

#### Checking the coolant level in the filler neck

- 1. Let the engine cool.
- 2. Open the hood, refer to page 332.
- 3. Turn the lid of the coolant reservoir slightly counterclockwise to allow any excess pressure to dissipate, then open it.
- 4. Open the coolant reservoir lid.



5. The coolant level is correct if it lies between the minimum and maximum marks in the filler. neck.



6. Close the lid.

#### **Adding**

- 1. Let the engine cool.
- 2. Open the hood, refer to page 332.
- 3. Turn the lid of the coolant reservoir slightly counterclockwise to allow any excess pressure to dissipate, then open it.
- 4. Open the coolant reservoir lid.
- 5. If the coolant is low, slowly add coolant up to the specified level; do not overfill.
- 6. Close the lid.
- 7. Have the cause of the coolant loss eliminated as soon as possible.

## **Disposal**



Comply with the relevant environmental protection regulations when disposing of coolant and coolant additives.



## **Maintenance**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

#### **BMW** maintenance system

The maintenance system indicates required maintenance measures, and thereby provides support in maintaining road safety and the operational reliability of the vehicle.

In some cases, scopes and intervals of the maintenance system may vary according to the country version. Replacement work, spare parts, fuels and lubricants, and wear materials are calculated separately. Further information is available from a dealer's service center or another qualified service center or repair shop.

# Condition Based Service CBS

#### Concept

Sensors and special algorithms take into account the driving conditions of the vehicle. CBS uses these to calculate the need for maintenance.

The system makes it possible to adapt the amount of maintenance corresponding to your user profile.

#### **General information**

Information on service requirements, refer to page 148, can be displayed on the Control Display.

#### Service data in the vehicle key

Information on the required maintenance is continuously stored in the vehicle key. The service center can read this data out and suggest a maintenance scope for the vehicle.

Therefore, hand the service advisor the vehicle key with which the vehicle was driven most recently.

#### Storage periods

Storage periods during which the vehicle battery was disconnected are not taken into account.

If this occurs, have a dealer's service center or another qualified service center or repair shop update the time-dependent maintenance procedures, such as checking brake fluid and, if necessary, changing the engine oil and the microfilter/ activated-charcoal filter.

# Service and Warranty Information Booklet for US models and Warranty and Service Guide Booklet for Canadian models

Please consult your Service and Warranty Information Booklet for US models and Warranty and Service Guide Booklet for Canadian models for additional information on service requirements.

The manufacturer of your vehicle recommends that maintenance and repair be performed by a service center or another qualified service center



or repair shop. Records of regular maintenance and repair work should be retained.

#### Socket for OBD Onboard **Diagnosis**

#### **General information**

Devices connected to the OBD socket trigger the alarm system when the vehicle is locked. Remove any devices connected at the OBD socket before locking the vehicle.

#### **Safety information**



#### ∧ NOTICE

The socket for Onboard Diagnosis is an intricate component intended to be used in conjunction with specialized equipment to check the vehicle's primary emissions system. Improper use of the socket for Onboard Diagnosis, or contact with the socket for Onboard Diagnosis for other than its intended purpose, can cause vehicle malfunctions and creates risks of personal and property damage. Given the foregoing, the manufacture of your vehicle strongly recommends that access to the socket for Onboard Diagnosis be limited to a dealer's service center or another qualified service center or repair shop or other persons that have the specialized training and equipment for purposes of properly utilizing the socket for Onboard Diagnosis.

#### **Position**



There is an OBD socket on the driver's side for checking the primary components in the vehicle's emissions.

#### **Emissions**



- ▶ The warning light lights up: Emissions are deteriorating. Have the vehicle checked as soon as possible.
- ▶ The warning light flashes under certain circumstances:

This indicates that there is excessive misfiring in the engine.

Reduce the vehicle speed and have the system checked immediately; otherwise, serious engine misfiring within a brief period can seriously damage emission control components, in particular the catalytic converter.



# Replacing components

#### Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

#### Vehicle tool kit

The onboard vehicle tool kit is located under the cargo floor panel.

#### Wiper blades

#### **Safety information**



#### ∧ NOTICE

The window may sustain damage if the wiper falls onto it without the wiper blade installed. There is a risk of damage to property. Hold the wiper firmly when changing the wiper blade. Do not fold or switch on the wiper without a wiper blade installed.

#### ∧ NOTICE

Folded-away wipers can be jammed when the hood is opened. There is a risk of damage to property. Make sure that the wipers with the wiper blades mounted are folded down onto the windshield before opening the hood.

#### Replace front wiper blades

- 1. To change the wiper blades, fold up the wiper arms, refer to page 132.
- 2. Lift the wiper all the way off of the windshield.



3. Press the button, arrow 1, and pull out the wiper blade, arrow 2.



- 4. Insert the new wiper blade and press it on until it you hear it snap into the holder.
- 5. Fold down the wipers.



#### Replacing the rear wiper blade

The wiper blade is engaged at the end of the wiper arm.

1. Lift off the wiper fully and pull off the wiper blade, arrow.



- 2. Attach a new wiper blade. The wiper blade must engage audibly.
- 3. Fold down the wipers.

## **Lights and bulbs**

#### **General information**

#### **Lights and bulbs**

Lights and bulbs make an essential contribution to vehicle safety.

Some items of equipment use light-emitting diodes installed behind a cover as a light source. These light-emitting diodes are related to conventional lasers and are officially designated as Class 1 light-emitting diodes.

The manufacturer of the vehicle recommends that you let a dealer's service center or another qualified service center or repair shop perform the work in case of a malfunction.

A spare light box is available from a dealer's service center or another qualified service center or repair shop.

Follow the safety information, refer to page 343.

#### Headlight glass

Condensation can form on the inside of the headlight glass in cool or humid weather. When driving with the lights switched on, the condensation evaporates after a short time. The headlight glass does not need to be changed.

If despite driving with the headlights switched on, increasing humidity forms, for instance water droplets in the light, have the headlights checked.

#### **Safety information**

#### Warning

Bulbs can get hot during operation. Contact with the bulbs can cause burns. There is a risk of injury. Only change bulbs after they have cooled off.



#### ⚠ Warning

Work on switched-on lighting systems can cause short circuits. There is a risk of injury or risk of damage to property. When working on the lighting system, switch off the lights in question. If necessary, heed the bulb manufacturer's instructions.



#### Warning

Intensive brightness can irritate or damage the retina of the eye. There is a risk of injury. Do not look directly into the headlights or other light sources. Do not remove the LED covers.



#### ∧ NOTICE

Dirty bulbs have a reduced service life. There is a risk of damage to property. Do not hold new bulbs with your bare hands. Use a clean cloth or something similar, or hold the bulb by its hase.



#### **Front lights**

#### **LED** headlights


#### General information

Follow the safety information, refer to page 343.

The low-beam headlights, side lights, and daytime running lights and the turn signals in the exterior mirror feature LED technology.

In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.

#### Overview

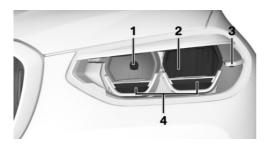

- 1 High beams/headlight flasher
- 2 Low beams
- 3 Turn signal
- 4 Daytime running lights/parking lights

#### Turn signal, bulb replacement

#### General information

Follow the safety information, refer to page 343. 24-watt bulb, PY24W

#### Replacing a bulb

 In the wheel house, press the two retainer tabs and fold down the cover.



2. Unscrew and remove the bulb holder.



- 3. Press the bulb gently into the bulb holder, turn counterclockwise and remove it.
- 4. Insert the new bulb.
- 5. Mount the bulb holder.
- 6. Mount the lid.

#### High beams, bulb replacement

#### **General information**

Follow the safety information, refer to page 343. 55-watt bulb, H7.



#### Replacing a bulb

- 1. Open the hood, refer to page 332.
- 2. Unscrew the lid counterclockwise and remove it.



3. Pull the bulb holder out past the spring resistance point.



- 4. Pull off the bulb.
- 5. Insert the new bulb and attach the cover in the reverse order.

Make sure that the connector is correctly seated.

# LED headlights with enhanced features


#### **General information**

Follow the safety information, refer to page 343.

All front lights are designed with LED technology, with the exception of the two turn signals.

In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.

#### Overview

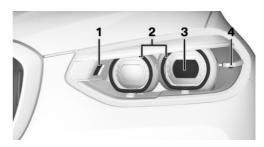

- 1 Cornering light
- 2 Daytime running lights/parking lights
- 3 Low beams/high beams
- 4 Turn signal

#### Turn signal, bulb replacement

#### General information

Follow the safety information, refer to page 343. 24-watt bulb, PY24W



#### Replacing a bulb

1. In the wheel house, press the two retainer tabs and fold down the cover.



2. Unscrew and remove the bulb holder.



- 3. Press the bulb gently into the bulb holder, turn counterclockwise and remove it.
- 4. Insert the new bulb.
- 5. Mount the bulb holder.
- 6. Mount the lid.

#### **Adaptive LED headlights**

Follow the safety information, refer to page 343. All lights feature LED technology.

In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.

#### **LED** front fog lights

Follow the safety information, refer to page 343.

LED front fog lights are made using LED technology.

In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.

#### **Tail lights**

#### **General information**


Follow the safety information, refer to page 343.

With LED headlights or LED headlights with enhanced features: the rear light features LED technology.

With Adaptive LED headlights: all tail lights feature LED technology.

In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.

#### **Overview**

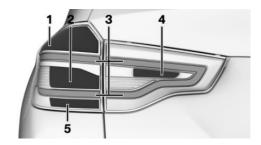

- 1 Brake light
- 2 Turn signal
- 3 Tail lights
- 4 Reversing lights
- 5 Lower brake lights

#### Exterior tail lights, bulb replacement

#### **General information**

Follow the safety information, refer to page 343. Brake lights, turn signal: 21-watt bulb, P21W. Lower brake lights: 21 W bulb, H21W.

Replacing components

#### Removing the exterior tail light

- 1. Open the tailgate.
- Use the screwdriver from the onboard vehicle tool kit to loosen the clip, arrow 1, and remove the cover, arrow 2.




3. Release both nuts.




4. Open the cover on the side trim in the cargo area, arrow, and remove the warning triangle, refer to page 351.



5. Loosen the screw and remove the holder.

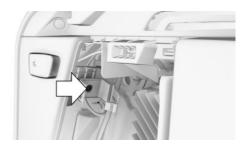

6. Remove the connector, arrow 1, and loosen the screw, arrow 2.

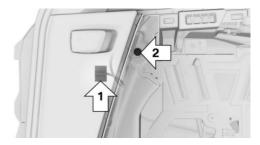

7. Detach the tail light from the body.

#### Replacing the bulbs

1. Loosen the four fasteners on the bulb holder, arrow 1, and detach the bulb holder from the tail light, arrow 2.



- 2. Press the bulb gently into the bulb holder, turn counterclockwise and remove it.
- Proceed in the reverse order to insert the new bulb and attach the bulb holder. Make sure that the bulb holder is engaged in all fasteners.



#### Installing the tail light

- 1. Install the tail light in reverse order of removal and attach the connector.
- 2. Install the holder for the warning triangle and attach the warning triangle.
- 3. Close the cover on the side trim in the cargo area.
- 4. Fasten the cover with the clip.


#### Reversing light in the tailgate

#### General information

Follow the safety information, refer to page 343. 21-watt bulb, H21W.

#### Access to the light

- 1. Open the tailgate.
- 2. Pull out the cover at the recessed grip, arrow.

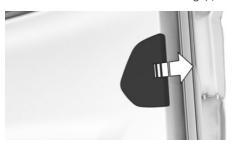

#### Changing the bulb

- 1. Pull the bulb holder out of the reflector.
- 2. Press the bulb gently into the bulb holder, turn counterclockwise and remove it.
- 3. To insert the new bulb and attach the bulb holder, proceed in reverse order of removal.

#### Vehicle battery

#### General information

The battery is maintenance-free.

More information about the battery can be requested from a dealer's service center or another qualified service center or repair shop.

#### Safety information



#### ⚠ Warning

Vehicle batteries that are not compatible can damage vehicle systems and impair vehicle functions. There is a risk of an accident and damage to property. Only vehicle batteries that are compatible with your vehicle type should be installed in your vehicle. Information on compatible vehicle batteries is available at your dealer's service center.

#### Register the battery to the vehicle

The manufacturer of the vehicle recommends that you have a service center or another qualified service center or repair shop register the vehicle battery to the vehicle after the battery has been replaced. Once the battery has been registered again, all comfort features will be available without restriction and any Check Control messages displayed which relate to comfort features will disappear.

#### Charging the battery

#### General information

Make sure that the battery is always sufficiently charged to guarantee that the battery remains usable for its full service life.



A discharged battery is indicated by a red indicator light.

Charge the battery in the following situations:

- ▶ When the inspection glass on the top of the battery is black.
- ▶ When the take-off performance is insufficient.



The following circumstances can have a negative effect on the performance of the battery:

- Frequent short-distance drives.
- ➤ The vehicle is not used for more than a month.

#### Safety information



#### ∧ NOTICE

Battery chargers for the vehicle battery can work with high voltages and currents, which means that the 12 volt on-board network can be overloaded or damaged. There is a risk of damage to property. Only connect battery chargers for the vehicle battery to the starting aid terminals in the engine compartment.

#### Charging the battery

Charge the battery only when the engine is off and via the starting aid terminals, refer to page 355, in the engine compartment.

#### Power failure

After a power loss, some equipment needs to be newly initialized or individual settings updated, for example:

- ▶ Memory function: store the positions again.
- ▶ Time: update.
- Date: update.
- Glass sunroof: initialize the system.

#### **Disposing of old batteries**



Have old batteries disposed of by a dealer's service center or another qualified service center or repair shop or take

them to a collection point.

Maintain the filled battery in an upright position for transport and storage. Secure the battery so that it does not tip over during transport.

#### **Fuses**

#### General information

The fuses are located at different places in the vehicle

#### **Safety information**



#### Warning

Incorrect and repaired fuses can overload electrical lines and components. There is a risk of fire. Never attempt to repair a blown fuse. Do not replace a nonworking fuse with a substitute of another color or amperage rating.

#### In the car's interior

The fuses are located in the car's interior in the front passenger floor area behind a cover.



Loosen fasteners, arrows, and open cover.

The fuse box is located on the front right.

#### In the cargo area

The fuses are located in the cargo area on the right side behind a cover.





Open the cover on the right side trim.

The fuse box is located behind the sound insulation.

Information on the fuse types and locations, as well as the positions of any other fuse boxes, is available on the Internet: www.bmw.com/fuse-card.

Where applicable, information on the fuse types and locations is also found on a separate sheet in the fuse box.

#### **Additional fuse boxes**

Additional fuse boxes are located in the vehicle. In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.

#### **Replacing fuses**

The vehicle manufacturer recommends that you have a dealer's service center or another qualified service center or repair shop replace the fuses.



## **Breakdown assistance**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **Hazard warning flashers**



The button is located in the center console.

The red light in the button flashes when the hazard warning flashers are activated.

#### Warning triangle

The warning triangle is located behind the lefthand cover in the cargo area.

1. Open the cover on the left side trim.



Open the bracket and take the warning triangle out in the direction of the car's interior.



#### First-aid kit

#### **General information**

Some of the articles have a limited service life.

Check the expiration dates of the contents regularly and replace any expired items promptly.



#### **Storage**



The first-aid kit is located behind the left-hand cover in the cargo area.

To open, pull on the handle.

#### **BMW Roadside Assistance**

#### Concept

Contact the BMW Group Roadside Assistance if assistance is needed in the event of a breakdown.

#### **General information**

In the event of a breakdown, data on the vehicle's condition is sent to the vehicle manufacturer.

There are various ways of making contact.

- Via a Check Control message, refer to page 146.
- Calling with a mobile phone.
- ▶ Via the BMW Connected app.

#### Requirements

- Active ConnectedDrive contract, equipment with intelligent emergency call or BMW ConnectedDrive services.
- ▶ Cellular network reception.
- > Standby state is switched on.

#### **Starting**

If the vehicle is equipped with Teleservices, support is offered through Teleservice Diagnosis.

Via iDrive:

- 1. "ConnectedDrive"
- 2. "BMW Assist"
- 3. "BMW Roadside Assistance"

The contact to the Roadside Assistance of the manufacture is established.

A telephone number is displayed, if needed. Select to dial the telephone number on a connected mobile phone.

#### **Teleservice Diagnosis**

Teleservice Diagnosis enables the wireless transmission of detailed vehicle data that is important for vehicle diagnosis. This data is transmitted automatically.

#### **Teleservice Help**

Depending on the country, the Teleservice Help enables a more in-depth diagnosis of the vehicle via wireless transmission.

You can launch Teleservice Help by requesting it through the Service Specialist.

- 1. Park the vehicle in a safe place.
- 2. Set the parking brake.
- 3. Control Display is switched on.
- 4. "Teleservice Help"

The driving ability of the vehicle can be restored for specific functions.

If this is not possible, further measures will be initiated, for instance Roadside Assistance will be informed.



#### **BMW Accident Assistance**

#### Concept

BMW Group Accident Assistance can be contacted if assistance is needed in the event of an accident.

#### **General information**

If the vehicle sensors detect a minor to moderately severe accident, which did not trigger any airbags, a Check Control message appears on the instrument cluster. In addition, a text message appears on the Control Display.

When BMW Accident Assistance is activated, data on the vehicle's condition is sent to BMW.

#### Requirements

- Active ConnectedDrive contract, equipment with intelligent emergency call or BMW ConnectedDrive services.
- Cellular network reception.
- Standby state is switched on.

#### **Starting BMW Accident Assistance**

#### If an accident is detected automatically

A text message relating to BMW Accident Assistance appears on the Control Display.

The connection can be established directly:

"BMW Accident Assist."

The Check Control message for BMW Accident Assistance can also be called up from the stored Check Control messages, refer to page 146, for a certain length of time.

#### Starting manually

BMW Accident Assistance can also be contacted independently of the automatic accident detection function.

#### Via iDrive:

- "ConnectedDrive"
- 2. "BMW Assist"
- "BMW Accident Assistance" Follow the displays on the Control Display. A voice connection is established.
- 4. "Fnd call"

The voice connection can be terminated.

## **Emergency Request**

#### Intelligent emergency call

#### Concept

In case of an emergency, an Emergency Request can be triggered automatically by the system or manually.

#### General information

Only press the SOS button in an emergency.

The Intelligent Assist system establishes a connection with the BMW Response Center.

For technical reasons, the Emergency Request cannot be guaranteed under unfavorable conditions

#### Overview





SOS button.



#### **Functional requirements**

- Standby state is switched on.
- ▶ The Assist system is functional.
- ▶ If the vehicle is equipped with intelligent emergency call: the SIM card integrated in the vehicle has been activated.

#### **Automatic triggering**

Under certain conditions, for instance if the airbags trigger, an Emergency Request is automatically initiated immediately after an accident of corresponding severity. Automatic Collision Notification is not affected by pressing the SOS button.

#### Manual triggering

- 1. Tap the cover.
- 2. Press and hold the SOS button until the LED in the area of the button illuminates green.
- ▶ The LED is illuminated green when an Emergency Request has been initiated.
  - If a cancel prompt appears on the Control Display, the Emergency Request can be aborted.
  - If the situation allows, wait in your vehicle until the voice connection has been established.
- ▶ The LED flashes green when a connection to the BMW Response Center has been established.
  - The BMW Response Center then makes contact with you and takes further steps to help you.
  - Even if you are unable to respond, the BMW Response Center can take further steps to help you under certain circumstances.

For this, data is transmitted to the BMW Response Center which serves to determine the necessary rescue measures. For instance, the current position of the vehicle, if it can be established.

Even if you can no longer hear the BMW Response Center through the loudspeakers, the BMW Response Center may still be able to hear you.

The BMW Response Center ends the Emergency Request.

#### **Jump-starting**

#### **General information**

If the battery is discharged, the engine can be started using the battery of another vehicle and two jumper cables. Only use jumper cables with fully insulated clamp handles.

#### **Safety information**



#### ♠ DANGER

Contact with live components can lead to an electric shock. There is a risk of injuries or danger to life. Do not touch any components that are under voltage.



#### Warning

If the jumper cables are connected in the incorrect order, sparking may occur. There is a risk of injury. Pay attention to the correct order during connection.



#### ∧ NOTICE

In the case of body contact between the two vehicles, a short circuit can occur during jumpstarting. There is a risk of damage to property. Make sure that no body contact occurs.

#### **Preparation**

- 1. Check whether the battery of the other vehicle has a voltage of 12 volts. The voltage information can be found on the battery.
- 2. Switch off the engine of the assisting vehicle.



3. Switch off any electronic systems/power consumers in both vehicles.

#### Starting aid terminals



The starting aid terminal in the engine compartment acts as the battery's positive terminal. Open the cover of the starting aid terminal.



A special connection on the body acts as the battery negative terminal.

#### Connecting the cables

Before you begin, switch off all unnecessary electronic systems/power consumers, such as the radio, on the assisting and receiving vehicle.

- 1. Open the cover of the starting aid terminal.
- 2. Attach one terminal clamp of the positive jumper cable to the positive terminal of the battery, or to the corresponding starting aid terminal of the vehicle providing assistance.
- 3. Attach the terminal clamp on the other end of the cable to the positive terminal of the battery, or to the corresponding starting aid terminal of the vehicle to be started.

- 4. Attach one terminal clamp of the negative jumper cable to the negative terminal of the battery, or to the corresponding engine or body ground of assisting vehicle.
- 5. Attach the second terminal clamp to the negative terminal of the battery, or to the corresponding engine or body ground of the vehicle to be started.

#### Starting the engine

Never use spray fluids to start the engine.

- 1. Start the engine of the assisting vehicle and let it run for several minutes at an increased idle speed.
  - If the vehicle to be started has a diesel engine: let the engine of the assisting vehicle run for approx. 10 minutes.
- 2. Start the engine of the vehicle that is to be started in the usual way.
  - If the first starting attempt is not successful, wait a few minutes before making another attempt in order to allow the discharged battery to recharge.
- 3. Let both engines run for several minutes.
- 4. Disconnect the jumper cables in the reverse order.

Check the battery and recharge, if needed.

#### **Tow-starting and towing**

#### **Safety information**



#### Warning

Due to system limits, individual functions can malfunction during tow-starting/towing with the Intelligent Safety systems activated. There is a risk of accident. Switch all Intelligent Safety systems off prior to tow-starting/towing.



#### **Steptronic transmission:** transporting the vehicle

#### **General information**

The vehicle is not permitted to be towed.

#### **Safety information**



#### ⚠ NOTICE

The vehicle can be damaged when towing the vehicle with a single lifted axle. There is a risk of damage to property. The vehicle should only be transported on a loading platform.



#### ∧ NOTICE

The vehicle can become damaged when lifting and securing it.

There is a risk of damage to property.


- ▶ Lift the vehicle using suitable means.
- > Do not lift or secure the vehicle by its tow fitting, body parts, or suspension parts.

#### Pushing the vehicle

To remove a broken-down vehicle from the danger area, it can be pushed for a short distance.

For rolling or pushing the vehicle, refer to page 135.

#### Tow truck

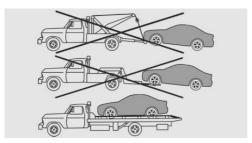

The vehicle should only be transported on a loading platform.

#### **Towing other vehicles**

#### **General information**

Switch on the hazard warning system, depending on local regulations.

If the electrical system has failed, clearly identify the vehicle being towed by placing a sign or a warning triangle in the rear window.

#### Safety information



#### Marning

If the approved gross vehicle weight of the towing vehicle is lighter than the vehicle to be towed, the tow fitting can tear off or it will not be possible to control the vehicle's response. There is a risk of accident. Make sure that the gross vehicle weight of the towing vehicle is heavier than the vehicle to be towed.



#### ⚠ NOTICE

If the tow bar or tow rope is attached incorrectly, damage to other vehicle parts can occur. There is a risk of damage to property. Correctly attach the tow bar or tow rope to the tow fitting.

#### Tow bar

The tow fittings used should be on the same side on both vehicles.

Should it prove impossible to avoid mounting the tow bar at an offset angle, please follow the following:

- Maneuvering capability is limited going around corners.
- ▶ The tow bar will generate lateral forces if it is secured with an offset

#### Tow rope

When starting to tow the vehicle, make sure that the tow rope is taut.

Use nylon ropes or straps, which will enable the vehicle to be towed without jerking.

#### **Tow fitting**

#### **General information**



The screw-in tow fitting should always be carried in the vehicle.

The tow fitting can be screwed in at the front or rear of the vehicle

The tow fitting is found in the onboard vehicle tool kit, refer to page 342.

- ▶ Use only the tow fitting provided with the vehicle and screw it all the way in.
- ▶ Use the tow fitting for towing on paved roads
- ▶ Avoid lateral loading of the tow fitting, for instance do not lift the vehicle by the tow fitting.

#### **Safety information**



#### ⚠ NOTICE

If the tow fitting is not used as intended, there may be damage to the vehicle or to the tow fitting. There is a risk of damage to property. Follow the notes on using the tow fitting.

#### Screw thread for tow fitting



Press on the mark on the edge of the cover to push it out.

For covers which have an opening instead of a marking, pull the cover out by the opening.

#### **Tow-starting**

Do not tow-start the vehicle.

Start the engine by jump-starting, refer to page 354, if possible.

Have the reasons for the starting difficulties corrected by a dealer's service center or another qualified service center or repair shop.



## Care

## Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## Washing the vehicle

#### General information

Regularly remove foreign objects such as leaves in the area below the windshield when the hood is raised.

Wash your vehicle frequently, particularly in winter. Intense soiling and road salt can damage the vehicle.

#### Steam blaster and high-pressure washer

#### Safety information



#### ⚠ NOTICE

When cleaning with high-pressure washers, components can be damaged due to the pressure or temperatures being too high. There is a risk of damage to property. Maintain sufficient distance and do not spray too long continuously. Follow the operating instructions for the high-pressure washer.

#### **Distances and temperature**

- Maximum temperature: 140 °F/60 °C.
- ▶ Minimum distance from sensors, cameras, seals: 12 inches/30 cm.
- ▶ Minimum distance from glass sunroof: 31.5 in/80 cm.

#### **Automatic vehicle washes**

#### Safety information



#### ⚠ NOTICE

Improper use of automatic vehicle washes can cause damage to the vehicle. There is a risk of damage to property. Follow the following instructions:

- those that use soft brushes in order to avoid paint damage.
- > Avoid vehicle washes with guide rails higher than 4 in/10 cm to avoid damage to the chassis.
- ▷ Observe the tire width of the guide rail to avoid damage to tires and rims.
- > Fold in exterior mirrors to avoid damage to the exterior mirrors
- ▶ Deactivate the wiper and, if necessary, rain sensor to avoid damage to the wiper system.

#### Driving into a vehicle wash with a **Steptronic transmission**

#### Safety information



#### ∧ NOTICE

Selector lever position P is automatically engaged when standby state is switched off. There is a risk of damage to property. Do not switch standby state off in vehicle washes.

#### General information

In a vehicle wash, the vehicle must be able to roll freely.

To roll or push the vehicle, refer to page 135.

Some vehicle washes do not permit persons in the vehicle. The vehicle cannot be locked from the outside when in selector lever position N. A. signal sounds when an attempt is made to lock the vehicle.

#### Driving out of a vehicle wash

Ensure that the vehicle key is in the car. Switch on drive-ready state, refer to page 122.

#### **Headlights**

Do not rub wet headlights dry and do not use abrasive or acidic cleaning agents.

Soak areas that have been dirtied, for instance from insects, with shampoo and wash off with

Thaw ice with de-icing spray; do not use an ice scraper.

#### After washing the vehicle

After washing the vehicle, apply the brakes briefly to dry them; otherwise, braking action can be reduced. The heat generated during braking dries brake discs and brake pads and protects them against corrosion.

Completely remove all residues on the windows, to minimize loss of visibility due to smearing and to reduce wiper noises and wiper blade wear.

#### Vehicle care

#### Vehicle care products

#### **General information**

BMW recommends using vehicle care and cleaning products from BMW. Suitable care products are available from a dealer's service center or another qualified service center or repair shop.

#### Safety information



#### Marning

Cleansers can contain substances that are dangerous and harmful to your health. There is a risk of injury. When cleaning the interior, open the doors or windows. Only use products intended for cleaning vehicles. Follow the instructions on the container.

#### Vehicle paint

#### **General information**

Regular care contributes to driving safety and value retention. Environmental influences in areas with elevated air pollution or natural contaminants, such as tree resin or pollen can affect the vehicle's paintwork. Tailor the frequency and extent of your vehicle care to these influences.

Aggressive substances such as spilled fuel, oil, grease or bird droppings, must be removed immediately to prevent the finish from being altered or discolored

#### Matte finish

Only use cleaning and care products suitable for vehicles with matte finish.

# Leather care

Remove dust from the leather regularly, using a cloth or vacuum cleaner.

Otherwise, particles of dust and road grime chafe in pores and folds, and lead to increased wear and premature degradation of the leather sur-

To guard against discoloration, such as from clothing, clean leather and provide leather care roughly every two months.

Clean light-colored leather more frequently because soiling on such surfaces is substantially more visible.

Use leather care products; otherwise, dirt and grease will gradually break down the protective layer of the leather surface.

#### **Upholstery material care**

#### **General information**

Vacuum the upholstery regularly with a vacuum cleaner.

If upholstery is very dirty, for instance with beverage stains, use a soft sponge or microfiber cloth with a suitable interior cleaner.

Clean the upholstery down to the seams using large sweeping motions. Avoid rubbing the material vigorously.

#### Safety information



#### ⚠ NOTICE

Open Velcro® fasteners on articles of clothing can damage the seat covers. There is a risk of damage to property. Ensure that any Velcro® fasteners are closed.

#### **Caring for special components**

#### **Light-alloy wheels**

When cleaning the vehicle, use only neutral wheel cleaners having a pH value from 5 to 9. Do not use abrasive cleaning agents or steam jets above 140 °F/60 °C. Follow the manufacturer's instructions.

Aggressive, acidic or alkaline cleaning agents can destroy the protective layer of adjacent components, such as the brake disc.

After cleaning, apply the brakes briefly to dry them. The heat generated during braking dries brake discs and brake pads and protects them against corrosion.

#### Chrome surfaces

Carefully clean components such as the radiator grille or door handles with plenty of water, possibly with shampoo added, particularly when they have been exposed to road salt.

#### **Rubber components**

Environmental influences can cause surface soiling of rubber parts and a loss of gloss. Use only water and suitable cleaning agents for cleaning.

Treat especially worn rubber parts with rubber care agents at regular intervals. When cleaning rubber seals, do not use any silicon-containing vehicle care products in order to avoid damage or noises.

#### Fine wood parts

Clean fine wood facing and fine wood components only with a moist rag. Then dry with a soft cloth.

#### Kenaf

Only treat parts made of Kenaf fibers using suitable care products.

#### Plastic components



#### ⚠ NOTICE

Cleansers that contain alcohol or solvents, such as lacquer thinners, heavy-duty grease removers, fuel, or such, can damage plastic parts. There is a risk of damage to property. Clean

with a microfiber cloth. Dampen the cloth lightly with water, if needed.

Clean with a microfiber cloth.

Dampen the cloth lightly with water, if needed. Do not soak the roofliner.

#### Safety belts



#### Marning

Chemical cleansers can destroy the safety belt webbing. Missing protective effect of the safety belts. There is a risk of injuries or danger to life. Use only a mild soapy solution for cleaning the safety belts.

Dirty belt straps impede the reeling action and thus have a negative impact on safety.

Use only a mild soapy solution for cleaning the installed belt straps.

Safety belts should only be allowed to retract if they are dry.

### Carpets and floor mats



#### Warning

Objects in the driver's floor area can limit the pedal distance or block a depressed pedal. There is a risk of accident. Stow objects in the vehicle such that they are secured and cannot enter into the driver's floor area. Use floor mats that are suitable for the vehicle and can be safely attached to the floor. Do not use loose floor mats and do not layer several floor mats. Make sure that there is sufficient clearance for the pedals. Ensure that the floor mats are securely fastened again after they were removed, for instance for cleaning.

The floor mats can be removed from the car's interior for cleaning.

If the floor carpets are very dirty, clean with a microfiber cloth and water or a textile cleaner. To

prevent matting of the carpet, rub back and forth in the direction of travel only.

#### Mount for trailer hitch

Keep the mount clean.

Regularly grease or oil bearings and sliding surfaces with resin-free greases or oils.

Before using steam cleaners or high pressure cleaners on the vehicle, remove the ball head and insert the cover into the mount.

#### Sensors and camera lenses

To clean sensors and camera lenses, use a cloth moistened with a small amount of glass detergent.

### Displays, screens, and protective glass of the Head-up Display



#### NOTICE

Chemical cleansers, moisture or fluids of any kind can damage the surface of displays and screens. There is a risk of damage to property. Clean with a clean, antistatic microfiber cloth.



#### ⚠ NOTICE

The surface of displays can be damaged with improper cleaning. There is a risk of damage to property. Avoid pressure that is too high and do not use any scratching materials.


Clean with a clean, antistatic microfiber cloth.

Clean the protective glass of the Head-up Display, refer to page 156, using a microfiber cloth and commercially available dish-washing soap.

### Long-term vehicle storage

When the vehicle is shut down for longer than three months, special measures must be taken. Further information is available from a dealer's service center or another qualified service center or repair shop.



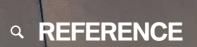

Technical data	304
Appendix	367
Everything from A to Z	368

### REFEREN

## **Technical data**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily

available in your vehicle, for instance, due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

### **General information**

The technical data and specifications in the Owner's Manual are used as guidance values. The vehicle-specific data can deviate from this, for instance due to the selected special equipment, country version or country-specific meas-

urement method. Detailed values can be found in the approval documents, on labels on the vehicle or can be obtained from a dealer's service center or another qualified service center or repair shop.

### **Dimensions**

The dimensions can vary depending on the model version, equipment or country-specific measurement method.

The specified heights do not take into account attached parts, for instance a roof antenna, roof

racks or spoiler. The heights can deviate, for instance due to the selected special equipment, tires, load and chassis version.

BMW X3		
Width with mirrors	in/mm	84.2/2,138
Width without mirrors	in/mm	74.4-74.7/1,891-1,897
Height	in/mm	66/1,676
Length	in/mm	185.9-186.1/4,722-4,726
Wheelbase	in/mm	112.8/2,864
Smallest turning radius diam.	ft/m	39.4-39.7/12.0-12.1

## Weights

X3 sDrive30i		
Approved gross vehicle weight	lbs/kg	5,203/2,360
Load	lbs/kg	893/405
Approved front axle load	lbs/kg	2,403/1,090
Approved rear axle load	lbs/kg	3,020/1,370

X3 xDrive30i			
Approved gross vehicle weight	lbs/kg	5,291/2,400	
Load	lbs/kg	893/405	
Approved front axle load	lbs/kg	2,557/1,160	
Approved rear axle load	lbs/kg	3,064/1,390	

X3 M40i powered by BMW M		
Approved gross vehicle weight	lbs/kg	5,412/2,455
Load	lbs/kg	915/415
Approved front axle load	lbs/kg	2,624/1,190
Approved rear axle load	lbs/kg	3,075/1,395

## **Trailer towing**

### X3 sDrive30i

Details about possible increases or a reduced trailer load can be requested from a dealer's service center or another qualified service center or repair shop

Trailer load without brakes	lbs/kg	1,653/750
Trailer load with brakes on uphill grades of up to 12 %	lbs/kg	4,409/2,000
Maximum drawbar nose weight	lbs/kg	441/200
Approved rear axle load	lbs/kg	3,020/1,370
Approved gross vehicle weight	lbs/kg	5,203/2,360

### X3 xDrive30i

Details about possible increases or a reduced trailer load can be requested from a dealer's service center or another qualified service center or repair shop

Trailer load without brakes	lbs/kg	1,653/750
Trailer load with brakes on uphill grades of up to 12 %	lbs/kg	4,409/2,000
Maximum drawbar nose weight	lbs/kg	441/200
Approved rear axle load	lbs/kg	3,064/1,390
Approved gross vehicle weight	lbs/kg	5,291/2,400

### X3 M40i powered by BMW M

Details about possible increases or a reduced trailer load can be requested from a dealer's service center or another qualified service center or repair shop

Trailer load without brakes	lbs/kg	1,653/750
Trailer load with brakes on uphill grades of up to 12 %	lbs/kg	4,409/2,000
Maximum drawbar nose weight	lbs/kg	441/200
Approved rear axle load	lbs/kg	3,075/1,395
Approved gross vehicle weight	lbs/kg	5,412/2,455

## **Capacities**

BMW X3			
Fuel tank, approx.	US gal/liters	17.2/65.0	

Observe further information on fuel quality, refer to page 294.

REFERENCE

# **Appendix**

Any updates to the Owner's Manual of the vehicle are listed here.

# Updates made after the editorial deadline

The following chapters were updated in the printed version of the Owner's Manual after the editorial deadline for the Integrated Owner's Manual in the vehicle had closed:

Safety: Lane Departure Warning.

Opposite to the information in the Integrated Owner's Manual in the vehicle, the following functions are not available:

- ▶ Back-up assistant.
- ▶ Parking assistant with maneuvering function.

# **Everything from A to Z**

### Index

A/C button, see Air conditioning 242 ABS, Antilock Brake System 195 Acceleration Assistant, see Launch Control 138 Accessories and parts 10 Accident Assistance 353 Accident prevention, see Active Protection 192 ACC, see Active Cruise Control with Stop&Go function 203 Activated charcoal filter 245 Activation, trailer towing 281 Active Cruise Control with Stop&Go function, ACC 203 Active damping control, see Adaptive suspension 237 Active Guard, see Intelligent Safety 170 Active PDC, see Emergency brake function 216 Active Protection 192 Active seat ventilation 115 Adaptive brake assistant 195 Adaptive brake lights, see Brake force display 191 Adaptive Light Control 161 Adaptive M chassis 237 ADAPTIVE, see Driving Dynamics Control 140 Adaptive suspension 237 Additives, engine oil types 336 After run of fan, see Exhaust gas particulate filter 276 Airbags 166 Airbags, indicator and warning light 168 Air circulation, see Recirculated-air mode 240, 243 Air conditioning 239, 242 Air distribution, manual 240, 244 Air flow, automatic climate control 240, 244 Air outlets, see Ventilation 245 Air pressure, tires 300

Alarm, unintentional 99 All-season tires, see Winter tires 309 All-wheel-drive, see xDrive 197 Amazon Alexa Car Integration 58 Ambient air package 249 Ambient light 164 Antifreeze, see Washer fluid 133 Antilock Brake System, ABS 195 Anti-slip control, see DSC 195 Anti-theft protection, locking 81 Anti-theft protection, see Lug bolt lock 326 Apple CarPlay preparation, connection to the vehicle 73 Approach control warning with City braking function 171 Approved axle load 365 Approved total weight 365 Apps, see Owner's Handbook for Navigation, Entertainment, Communication 8 Ashtray 256 Assistance when driving off, see Drive-off assistant 195 Assistance with breakdown 351 AUC Automatic Recirculating Air Control 243 Audio, see Owner's Manual for Navigation, Entertainment and Communication 8 AUTO H button, see Parking brake 126 Automatic activation, see Individual activation 115 Automatic climate control 238, 241 Automatic cruise control with Stop&Go function 203 Automatic Curb Monitor, exterior mirror 112 Automatic deactivation, front-seat passenger airbaas 168 Automatic Differential Brake 198 Automatic headlight control 160 Automatic Hold, see Parking brake 126 Automatic locking 97 Automatic Recirculating Air Control AUC 243

Alarm system 97

Brake lights, brake force display 191

Automatic transmission, see Steptronic trans-

mission 134	Brake lights, see Lights and bulbs 343
Automatic unlocking 97	Brake pads, see Brake system 274
Automatic vehicle wash 358	Brake system 274
AUTO program, automatic climate con-	Braking, information 276
trol 239, 242	Breakdown assistance 351, 352
AUTO program, intensity 243	Breakdown, see FTM Flat Tire Monitor 322
Auto Start/Stop function 123	Breaking in 274
Average speed and average consumption 154	Break recommendation, see Fatigue alert 193
Axle loads, weights 365	Brightness, Control Display 62
,	Bulb replacement, see Lights and bulbs 343
В	Buttons on the steering wheel 36
	Button, SOS, see Intelligent emergency call 353
Backrest curvature, see Lumbar support 105	Button, Start/Stop 122
Backrest, seats 104	Bypassing, see Jump-starting 354
Backrest tilt 105	= ) p = = = = = = = = = = = = = = = = =
Backrest tilt, rear seats 106	C
Backrest, width 106	
Bad road trips 275	Cable for tow-starting/towing 356
Bandages, see First-aid kit 351	Calendar, see Owner's Handbook for Navigation,
Bar for tow-starting/towing 356	Entertainment, Communication 8
Battery, disposing of 349	California Proposition 65 Warning 10
Battery, vehicle 348	Calling up mirror adjustment 96
Being towed, see Tow-starting and towing 355	Calling up seat adjustment 96
Belts, see Safety belts 106	Camera-based assistance systems, see Intelli-
Beverage holder, see Cup holders 262	gent Safety 170
Biodiesel 295	Camera-based cruise control, see Active Cruise
Blind spot collision warning 184	Control with Stop&Go function 203
Blocking, power window, see Safety switch 100	Camera lenses, care 361
Bluetooth connection 69	Camera, rearview camera, without Surround
Blu-ray, see Owner's Handbook for Navigation,	View 219
Entertainment, Communication 8	Camera, see Surround View 222
BMW Advanced Diesel 296	Can holder, see Cup holders 262
BMW Assist, see Owner's Manual for Navigation,	Care, Head-up Display 361
Entertainment and Communication 8	Care of displays, screens 361
BMW display key 85	Care, see Washing the vehicle 358
BMW display key, malfunction 88	Care, vehicle 359
BMW Gesture Control 53	Cargo area 264
BMW maintenance system 340	Cargo area, enlarging 268
Bonus range, ECO PRO 286	Cargo area, loading, see Stowing cargo 265
Bottle holder, see Cup holders 262	Cargo area partition net 270
Brake assistant 195	Cargo area, storage compartments 266
Brake assistant, adaptive 195	Cargo cover 270
Brake Controller 282	Cargo, stowing and securing 265
Brake discs, see Brake system 274	Cargo straps, see Lashing eyes in the cargo
Brake force display 191	area 265

Carpet, care 361	Coasting with idling engine 287
CarPlay, connection to the vehicle 73	Cold starting, see Starting the engine 122
Car seats, see Transporting children safely 117	Combination switch, see Turn signals 129
Cartridge replacement, see Ambient air pack-	Combination switch, see Washer/wiper sys-
age 249	tem 130
Car washing 358	Comfort Access 90
Catalytic converter, see Hot exhaust gas sys-	COMFORT, see Driving Dynamics Control 139
tem 275	Communication, see Owner's Manual for Naviga
CBS Condition Based Service 340	tion, Entertainment and Communication 8
Cell phone, see Owner's Manual for Navigation,	Compact wheel, see Emergency wheel 329
Entertainment and Communication 8	Comparison of entries, see Entry comparison 44
Center armrest 262	Compartments, doors 261
Center armrest, front 262	Compatible devices, see Suitable devices 69
Center console 38	Compressor 311
Central Information Display (CID), see Control	Computer, see Onboard Computer in the instru-
Display 46	ment cluster 152
Central locking system 90	Concierge Service, see Owner's Handbook for
Central screen, see Control Display 46	Navigation, Entertainment, Communication 8
Changes, technical, see For Your Own Safety 9	Condensation water under the parked vehi-
Changing parts 342	cle 277
Changing wheels 325	Condensation, windshield 240, 244
Changing, wheels and tires 308	Condition Based Service CBS 340
Chassis number, see Vehicle identification num-	Confirmation signal from the vehicle 97
ber 14	ConnectedDrive, see Owner's Manual for Navi-
Check Control 143	gation, Entertainment and Communication 8
Children, seating position 117	Connecting, electrical devices, see Sockets 257
Children, transporting safely 117	Connecting, mobile devices 0
Child restraint system LATCH 119	Consumption display, ECO PRO 286
Child restraint systems, mounting 118	Consumption, see Current consumption 153
Child restraint systems, see Transporting chil-	Contacts, see Owner's Handbook for Navigation
dren safely 117	Entertainment, Communication 8
Child safety locks 121	Container for washer fluid 133
Child seat, mounting 118	Continued driving with a flat tire 321, 324
Child seats, see Transporting children	Control Display 46
safely 117	Control Display, settings 60
Chrome-plated surfaces, care 360	Controller 46
Chrome surfaces, care 360	Control systems, driving stability 195
Digarette lighter 256	Convenient closing, remote control 82
Digarette lighter, front 257	Convenient opening, vehicle key 81
Cleaning displays, screens 361	Coolant 338
Cleaning, Head-up Display 361	Coolant level 338
Climate control 238, 241	Coolant temperature 147
Clothes hooks 263	Cooling, maximum 242
Coasting 287	Cooling system 338
Coasting with engine decoupled, see Coast-	Cornering light 161
ing 287	Corrosion on brake discs 277
" '9 <del></del> '	Controller on branc aloud ZII

Cosmetic mirror 256	Dimmable exterior mirrors 112
Cross traffic warning 234	Dimmable interior mirror 112
Cruise control 200	Direct dial buttons, see Programmable memory
Cruise control, active with Stop&Go func-	buttons 52
tion 203	Direction indicator, see Turn signals 129
Cruise control with distance control, see Active	Display and input 44
Cruise Control with Stop&Go function 203	Display in the windshield, see Head-up Dis-
Cruise control without distance control, see	play 156
Cruise control 200	Display key 85
Cruising range 148	Display key, malfunction 88
Cup holder 262	Display key, see BMW display key 85
Cup holder, front 262	Display lighting, see Instrument lighting 163
Cup holder, rear 263	Displays 142
Current consumption, Onboard Computer, con-	Displays and symbols 8
sumption indicator, Onboard Computer 153	Displays, ECO PRO 286
, ,	Displays, screens 361
D	Disposal, coolant 339
	Disposal, vehicle battery 349
Damage, tires 307	Distance control, see PDC 214
Damping control, active, see Adaptive suspen-	Distance to destination, Onboard Computer 153
sion 237	Divided screen view, see Split screen 45
Data memory 11	Door opening angle, Surround View 224
Data protection, settings 64	Downhill control, see HDC Hill Descent Con-
Data, see Deleting personal data 64	trol 198
Data, technical 364	Drawbar nose weight 365
Date 61	Drive-off assistant 195
Daytime running lights 161	Drive-off assistant, see DSC 195
DCC, see Cruise control 200	Driver assistance, see Intelligent Safety 170
Defrosting, see Defrosting windshield 240, 244	Drive-ready state, idle state, and standby
Defrosting, windshield 240, 244	state 41
Deleting personal data 64	Drive-ready state, see Starting the engine 122
Departure time, parked-car ventilation 248	Driver Fatigue Detector 193
Destination distance, Onboard Computer 153	Driver profiles 65
Device, connecting 0	Driver profiles, welcome screen 65
Device list 73	Driving Assistant, see Intelligent Safety 170
Diagnosis connection 341	Driving comfort 237
Diesel exhaust fluid, adding 296	Driving Dynamics Control 139
Diesel exhaust fluid at low temperatures 296	Driving instructions, breaking in 274
Diesel exhaust fluid on minimum 296	Driving mode, ECO PRO 284
Diesel exhaust fluid, see BMW Advanced Die-	Driving mode, see Driving Dynamics Con-
sel 296	trol 139
Diesel fuel 295	Driving notes, general 275
Diesel particulate filter, see Exhaust gas particu-	Driving on bad roads 275
late filter 276	Driving stability control systems 195
Digital clock 148	Driving style analysis, ECO PRO 288
Dimensions 364	Driving tips 275

Engine oil types to add 336

Engine start, jump-starting 354

Engine start, see Drive-ready state 122

tion 8

Fine wood parts, care 360

for Navigation, Entertainment, Communica-

First-aid kit 351	Gasoline particulate filter, see Exhaust gas partic
Fittings for trailer safety chain, trailer towing 282	ulate filter 276
Flat tire, changing wheels 325	Gear change, Steptronic transmission 134
Flat tire, continued driving 321, 324	Gear shift indicator 149
Flat tire message, FTM 323	General driving notes 275
Flat tire message, TPM 318	General settings 60
Flat Tire Monitor FTM 322	Gesture Control 53
Flat tire, repairing 310	Gestures, see BMW Gesture Control 53
Flat tire, see Tire Pressure Monitor TPM 315	Glare shield, see Sun visor 256
Flat tire warning light, FTM 323	Glass sunroof, electric 101
Flat tire warning light, TPM 318	Glass sunroof, initialize the system 102
Flooding 276	Glove compartment 260
Floor carpet, care 361	GPS geolocation, vehicle position 61
Floor mats, care 361	GPS, navigation, see Owner's Handbook for
Fold-away position of the wipers 132	Navigation, Entertainment, Communication 8
Foot brake 276	Gross weight, permissible for trailer towing 365
For Your Own Safety 9	
Fragrance cartridge, see Ambient air package 249	Н
Fragrance, see Ambient air package 249	Handbrake, see Parking brake 126
Fragrancing, see Ambient air package 249	Hand-held transmitter, alternating code 254
Front airbags 166	Hands-free device, see Owner's Handbook for
Front collision mitigation 171	Navigation, Entertainment, Communication 8
Front fog lights 163	Hazard warning flashers 351
Front fog lights, see Lights and bulbs 343	HDC Hill Descent Control 198
Front lights, see Lights and bulbs 343	Head airbags 167
Front-seat passenger airbags, automatic deacti-	Headlight control, automatic 160
vation 168	Headlight courtesy delay feature 160
Front-seat passenger airbags, indicator light 169	Headlight courtesy delay feature, switching
Front seats 104	on 83
FTM Flat Tire Monitor 322	Headlight flasher 130
Fuel 294	Headlight glass 343
Fuel cap 292	Headlights, care 359
Fuel filler flap 292	Headlights, see Lights and bulbs 343
Fuel filler flap, unlocking manually 293	Head restraints, front 108
Fuel gauge 146	Head restraints, rear 110
Fuel quality 294	Head-up Display 156
Fuel recommendation 294	Head-up Display, care 361
Fuel, tank capacity 366	Head-up Display, see Memory function 113
Fuses 349	Heated steering wheel 113
	Heated steering wheel, individual activation 115
G	Heavy cargo, stowing 265
	Height, vehicle 364
Garage door opener, see Integrated Universal	High-beam Assistant 162
Remote Control 253	High beams 130

Gasoline 294

High beams/low beams, see High-beam Assis-	Instrument lighting 163
tant 162	Integrated key 89
Hill Descent Control HDC 198	Integrated Owner's Manual in the vehicle 76
Hills 277	Integrated Universal Remote Control 253
Hill start assistant, see Drive-off assistant 195	Intelligent Auto Start/Stop function 125
Holder for beverages, see Cup holders 262	Intelligent emergency call 353
HomeLink, see Integrated Universal Remote	Intelligent Safety 170
Control 253	Intended use 9
Homepage 8	Intensity, AUTO program 243
Hood 332	Interior equipment 253
Horn 36	Interior lights 163
Hot exhaust gas system 275	Interior lights during unlocking 81
Hotline, see Owner's Handbook for Navigation,	Interior lights with the vehicle locked 82
Entertainment, Communication 8	Interior mirror 111
Humidity in the headlight, see Headlight	Interior mirror, automatic dimming feature 112
glass 343	Interior motion sensor 98
Hydroplaning 276	Internet connection 72
	Internet hotspot 72
1	Internet page 8
	Intersection collision warning, see Front collision
iBrake – PostCrash 192	mitigation 171
Ice warning, see External temperature 148	Interval display, see Service requirements 148
lcy roads, see External temperature 148	IOM, see Integrated Owner's Manual in the vehi-
Identification marks, tires 305	cle 76
Identification number, see Vehicle identification	Ionization, see Ambient air package 249
number 14	
Idle state, standby state, and drive-ready	J
state 41	
iDrive 44	Jacking points for the vehicle jack 327
Indicator and warning lights, see Check Con-	Jam protection system, glass sunroof 102
trol 143	Jam protection system, windows 100
Individual activation 115	Joystick, Steptronic transmission 134
Individual air distribution 240, 244	Jump-starting 354
Individual settings, see Driver profiles 65	Jump-starting terminals 355
Inductive charging of a smartphone, see Wireless	ournp starting terminals 555
charging tray, see Owner's Manual for Naviga-	K
tion, Entertainment, Communication 8	K
Inflation pressure monitor, see Tire Pressure	Kanaf aara 260
Monitor TPM 315	Kenaf, care 360
Inflation pressure, tires 300	Keyless Go, see Comfort Access 90
Inflation pressure warning FTM, tires 322	Key, mechanical 89
Information 8	Key, see BMW display key 85
Initialization, Flat Tire Monitor FTM 323	Key, see Vehicle key 80
Initialization, Tire Pressure Monitor TPM 317	Kickdown, Steptronic transmission 134
Input and display 44	Knee airbag 167
Instrument cluster 142	
mod arriorit oldotor 1-12	

L	Luggage rack, see Roof-mounted luggage rack 278
Label on recommended tires 308	Lumbar support 105
Lane change assistant 213	
Lane control assistant, see Steering and traffic	M
jam assistant 210	
Lane control assistant with active side collision	Maintenance 340
protection, see Side collision mitigation 187	Maintenance requirements, see Condition Based
Lane departure warning 180	Service CBS 340
Lane lines, Surround View 224	Maintenance, see Service requirements 148
Lane threshold, warning 180	Maintenance system, BMW 340
Language, setting on the Control Display 60	Make-up mirror 256
Lashing eyes in the cargo area 265	Malfunction, BMW display key 88
LATCH child restraint fixing system 119	Malfunction displays, see Check Control 143
Launch Control 138	Malfunction, vehicle key 84
Leather care 360	Managing devices 73
LED light carpet, see Welcome light 160	Manual air distribution 240, 244
Length, vehicle 364	Manual air flow 240, 244
Letters and numbers, entering 49	Manual brake, see Parking brake 126
License plate light, see Lights and bulbs 343	Manual mode, Steptronic transmission 134
Light-alloy wheels, care 360	Manual operation, fuel filler flap 293
Light control, adaptive 161	Map update, see Owner's Handbook for Naviga-
Lighter, cigarettes 256	tion, Entertainment, Communication 8
Lighting 159	Marking, run-flat tire 309
Light in the exterior mirror, see Blind spot colli-	Matte finish 359
sion warning 184	Maximum cooling 242
Light in the exterior mirror, see Cross traffic	Maximum speed display, see Speed Limit
warning 234	Info 150
Light replacement, see Lights and bulbs 343	Maximum speed of winter tires 309
Lights 159	M chassis, adaptive 237
Lights and bulbs 343	Measurement, units of 61
Light switch 159	Media of the Owner's Manual 76
List of all messages 62	Medical supplies, see First-aid kit 351
Load 265	Memory function 113
Loading 264	Menu, instrument cluster, see Selection
Location, vehicle position 61	lists 151
Locking, automatic 97	Menus, operating, see iDrive 44
Locking, see Opening and Closing 80	Messages 62
Locking, settings 96	Messages, see Check Control 143
Locking, vehicle key 81	Microfilter 241, 245
Lock, lug bolts 326	Minimum tread depth, tires 307
Low beams 159	Mirror 111
Low beams, automatic, see High-beam Assis-	Mirror, see Memory function 113
tant 162	Mobile communication devices in the vehi-
Lower back support 105	cle 276
Lug bolt lock 326	Mobile devices, managing 73

Mobile phone, connecting 0 Mobile phone, see Owner's Manual for Navigation, Entertainment and Communication 8 Mobility System 310 Mode, ECO PRO 284 Modifications, technical, see For Your Own Safety 9 Monitor, see Control Display 46 Mount for trailer hitch, care 361 Mounting for trailer hitch 281 Mounting of child restraint systems 118 MP3 player, see Audio, see Owner's Handbook for Navigation, Entertainment, Communication 8 Multi-function hook 266 Multifunction steering wheel, buttons 36 Multimedia, see Owner's Manual for Navigation, Entertainment and Communication 8 Music hard disk, see Owner's Handbook for Navigation, Entertainment, Communication 8	Oil, adding 335 Oil change 337 Oil change interval, see Service requirements 148 Oil filler neck 335 Oil level, checking electronically 334 Oil types to add, engine 336 Onboard Computer in the instrument cluster 152 Onboard Computer on the Control Display 154 Onboard Diagnosis OBD 341 Onboard Diagnosis OBD 341 Onboard literature, printed 76 Onboard vehicle tool kit 342 On-call service, see Accident Assistance 353 On-call service, see Breakdown assistance 352 Online Entertainment, see Owner's Handbook for Navigation, Entertainment, Communication 8 Opening and closing 80 Operating concept, iDrive 44 Operating via the Controller 48 Operation via touchscreen 50
Navigation data, Onboard Computer 153 Navigation, see Owner's Manual for Navigation, Entertainment and Communication 8 Neck restraints, front, see Head restraints 108 Neck restraints, rear, see Head restraints 110	Outside air, see AUC 243 Overheating of engine, see Coolant temperature 147 Overwintering, see Long-term vehicle storage 361 Owner's Manual, printed 76
Net, cargo area 267 Neutral cleaner, see Light-alloy wheels 360	Р
New wheels and tires 308  Nose weight, see Drawbar nose weight 365  Notes, see Owner's Handbook for Navigation, Entertainment, Communication 8  No-touch opening and closing of the tailgate 92  Nylon rope for tow-starting/towing 356	Paint, vehicle 359 Pairing, mobile devices, see Connections 0 Panic alarm, see Panic mode 98 Panic mode 98 Panorama View, see Surround View 222 Panoramic glass sunroof, see Glass sunroof 10
0	Parallel Parking Assistant 229 Park Distance Control PDC 214
OBD Onboard Diagnosis 341 Obstacle marking, rearview camera 220 Obstacle marking, Surround View 224 Octane rating, see Recommended fuel grade 295 Odometer and trip odometer 153 Oil 334	Parked-car ventilation 247 Parking aid, see PDC 214 Parking Assistant 229 Parking Assistant Plus, see Surround View 222 Parking Assistant, see Parking Assistant 229 Parking, Automatic Hold, see Parking brake 126 Parking brake 126

Parking lights 159	Rain sensor 131
Particulate filter, see Exhaust gas particulate fil-	Rapeseed-oil methyl ester RME 295
ter 276	Rear automatic climate control 246
Partition net 270	Rear collision preparation 190
Parts and accessories 10	Rear collision warning, see Rear collision prepa-
Passenger's side mirror, tilting, see Automatic	ration 190
Curb Monitor 112	Rear lights, see Lights and bulbs 343
Pathway lines, rearview camera 220	Rear seat backrests, folding down 268
PDC Park Distance Control 214	Rear seat backrest tilt 106
Performance Control 237	Rear seats 106
Performance display, see Sport displays 155	Rearview camera, see Surround View 222
Personal data, deleting 64	Rearview camera, without Surround View 219
Personal profile, see Driver profiles 65	Rear window defroster 241, 245
Person warning with City braking function 178	Rear window wiper, operation 132
Phone, connecting 0	Recirculated-air filter, see Microfilter/activated-
Plastic parts, care 360	charcoal filter 245
PostCrash – iBrake 192	Recirculated-air mode 240, 243
Power failure 349	Recommended fuel grade 295
Power windows 99	Recommended tire brands 308
Pressure monitor, see Tire Pressure Monitor	Refueling 292
TPM 315	Remote 3D View 228
Pressure, tires 300	Remote control for audio, see Owner's Hand-
Pressure warning FTM, tires 322	book for Navigation, Entertainment, Communi-
Printed onboard literature 76	cation 8
Profiles, see Driver profiles 65	Remote control, see Vehicle key 80
Programmable memory buttons, iDrive 52	Remote control, universal 253
Protective function, glass sunroof, see Jam pro-	Remote services, app, see Owner's Handbook
tection system 102	for Navigation, Entertainment, Communica-
Protective function, windows, see Jam protec-	tion 8
tion system 100	Removable ball head 281
Push-and-turn reel, see Controller 46	Replacing bulbs, see Lights and bulbs 343
	Replacing LEDs, see Lights and bulbs 343
Q	Replacing light-emitting diodes, see Lights and
	bulbs 343
Queuing Assistant, see Steering and traffic jam	Replacing parts 342
assistantTraffic Jam Assist, see Steering and	Replacing the battery, vehicle key 83
traffic jam assistant 210	Replacing, wheels and tires 308
	Reporting safety malfunctions 15
R	RES CNCL button, see Active Cruise Control
	with Stop&Go function 203
Racing track 278	RES CNCL button, see Cruise control 200
Radiator fan, see Exhaust gas particulate fil-	Reserve warning, see Range 148
ter 276	Resetting, Tire Pressure Monitor TPM 317
Radiator fluid 338	Retreaded tires 308
Radio, see Owner's Manual for Navigation, En-	Reversing lights, bulb replacement, see Lights
tertainment and Communication 8	and bulbs 343

RME rapeseed-oil methyl ester 295	Securing, cargo 265
Roadside Assistance, see Accident Assis-	Selection list in instrument cluster 151
tance 353	Selector lever, Steptronic transmission 134
Roadside Assistance, see Breakdown assis-	Self-supporting tires, see Run-flat tires 309
tance 352	Sensors, care 361
Roadside parking lights 160	Service and warranty 11
Roller sunblinds, rear side windows 100	Service Center, see Accident Assistance 353
Rolling code hand-held transmitter 254	Service requirements 148
RON recommended fuel grade 295	Service requirements, see Condition Based
Roofliner 40	Service CBS 340
Roof-mounted luggage rack 278	Services, ConnectedDrive, see Owner's Manual
Rope for tow-starting/towing 356	for Navigation, Entertainment and Communica-
Route, navigation, see Owner's Handbook for	tion 8
Navigation, Entertainment, Communication 8	SET button, see Active Cruise Control with
RSC Run-flat System Component, see Run-flat	Stop&Go function 203
tires 309	SET button, see Cruise control 200
RTTI, see Owner's Handbook for Navigation, En-	Set speed, see Active Cruise Control with
tertainment, Communication 8	Stop&Go function 203
Rubber components, care 360 Run-flat tire 309	Settings, Control Display 60
Rull-liat tile 309	Settings, locking/unlocking 96 Shift paddles on the steering wheel 134
S	Side airbag 166
3	Side collision mitigation 187
Safa braking 276	Side protection, Surround View 224
Safe braking 276 Safety belt reminder for driver's seat and front	Side protection without Surround View 217
passenger seat 108	Signaling, horn 36
Safety belt reminder for the rear seats 108	Signals when unlocking, see Confirmation sig-
Safety belts 106	nals from the vehicle 97
Safety belts, care 361	Sitting safely 104
Safety locks, doors, and windows 121	Sizes, see Dimensions 364
Safety package, see Active Protection 192	Ski and snowboard bag 271
Safety switch, windows 100	Slide/tilt glass roof, see Glass sunroof 101
Safety systems, see Airbags 166	Smallest turning radius 364
Safety systems, see Intelligent Safety 170	Smartphone, connecting 0
Saving fuel 283	Smartphone, see Owner's Manual for Navigation,
Screen, see Control Display 46	Entertainment and Communication 8
Screwdriver, see Onboard vehicle tool kit 342	Smartphone, using via voice activation 58
Sealant, see Mobility System 310	Smoker's package 256
Seat heating 114	SMS, see Short messages, see Owner's Hand-
Seat heating, individual activation 115	book for Navigation, Entertainment, Communi-
Seating position for children 117	cation 8
Seat, see Memory function 113	SMS text message, supplementary 146
Seats, front 104	Snow chains 315
Seats, rear 106	Socket for OBD Onboard Diagnosis 341
Seat ventilation, active 115	Sockets 257
Seat ventilation, individual activation 115	Software update 75

Soot particulate filter, see Exhaust gas particulate filter 276	Steptronic Sport transmission, see Steptronic transmission 134
SOS button, see Intelligent emergency call 353	Steptronic transmission 134
Sound output, see Owner's Handbook for Navi-	Storage compartment, center console 261
gation, Entertainment, Communication 8	Storage compartments, cargo area 266
Spare tire, see Emergency wheel 329	Storage compartments, locations 260
Special equipment, see Vehicle features and op-	Storage, tires 309
tions 9	Storing the vehicle 361
Speed limit display, see Speed Limit Info 150	Stowing, cargo 265
Speed Limit Info 150	Straps for cargo, see Lashing eyes in the cargo
Speed, see Average speed and average con-	area 265
sumption 154	Suitable devices 69
Speed warning 155	Suitable mobile phones 69
Split screen 45	Summer tires, tread 307
Sport chassis/suspension, see Adaptive M chas-	Sun visor 256
sis 237	Supplementary Owner's Manuals 76
Sport displays 155	Supplementary SMS text message 146
SPORT INDIVIDUAL, see Driving Dynamics	Surround View 222
Control 139	Suspension settings, see Driving Dynamics Con-
SPORT PLUS, see Driving Dynamics Con-	trol 139
trol 139	Swinging of trailer, see Trailer stabilization con-
Sport program, Steptronic transmission 134	trol 281
SPORT, see Driving Dynamics Control 139	Switches, see Cockpit 36
Sport steering, variable 199	Switch for driving dynamics, see Driving Dynam-
Stability control systems 195	ics Control 139
Standard equipment, see Vehicle features and options 9	Switching off the engine, see Drive-ready state 122
Standby state, idle state and drive-ready	Symbols and displays 8
state 41	SYNC program, automatic climate control 244
Start/stop, automatic function 123	_
Start/Stop button 122	Т
Starting aid terminals 355	
Starting, see Drive-ready state 122	Tachometer 147
Starting the engine, see Drive-ready state 122 Stations, AM/FM, see Owner's Handbook for	Tailgate, opening and closing with no-touch activation 92
Navigation, Entertainment, Communication 8	Tailgate, remote control 82
Status control display, tires 317	Tail lights, see Lights and bulbs 343
Status field symbols 45	Technical changes, see For Your Own Safety 9
Status information, iDrive 45	Technical data 364
Status of Owner's Manual 9	Telephone, see Owner's Manual for Navigation,
Status, vehicle 155	Entertainment and Communication 8
Steering and traffic jam assistant 210	Teleservices, see Owner's Handbook for Naviga-
Steering wheel, adjusting 113	tion, Entertainment, Communication 8
Steering wheel, buttons 36	Television, TV, see Owner's Handbook for Navi-
Steering wheel, see Memory function 113	gation, Entertainment, Communication 8

Temperature, automatic climate con-
trol 239, 242
Temperature display, see External tempera-
ture 148
Temperature, engine oil 147
Tensioning straps, cargo area 267
Theft alarm system, see Alarm system 97
Thigh support, sport seat 105
Tilt alarm sensor 98
Tilt, backrest 105
Tilting, passenger's side mirror, see Automatic
Curb Monitor 112
Time 60
Time of arrival, Onboard Computer 153
Tire brands, recommended 308
Tire damage 307
Tire identification marks 305
Tire inflation pressure 300
Tire inflation pressure monitor, see FTM Flat
Tire Monitor 322
Tire pressure 300
Tire Pressure Monitor TPM 315
Tire repair kit, see Mobility System 310
Tires and wheels 300
Tires, changing 308
Tire sealant, see Mobility System 310
Tire settings 316
Tires, run-flat 309
Tire tread 307
Tone, see Owner's Manual for Navigation, Enter-
tainment and Communication 8
Tool 342
Torque display, see Sport displays 155
Touchpad 51
Touchscreen 50
Tow bar 356
Tow fitting 357
Towing 355
Tow rope 356
Tow-starting 355
TPM Tire Pressure Monitor 315
Traction control 197
TRACTION, driving dynamics 197
Traffic bulletins, see Owner's Handbook for Navi-
gation, Entertainment, Communication 8

Trailer hitch, rearview camera 220 Trailer hitch, removable ball head 281 Trailer hitch, Surround View 224 Trailer loads 365 Trailer stabilization control 281 Trailer towing 279 Trailer towing, activation 281 Trailer towing, technical data 365 Transmission lock, electronic unlocking 138 Transmission, see Steptronic transmission 134 Transporting children safely 117 Travel information, see Onboard Computer on the Control Display 154 Tread, tires 307 Trip computer 154 Triple turn signal activation 129 Trip odometer 153 Trip recorder, see Trip odometer 153 Turning circle 364 Turning circle line, Surround View 224 Turning radius lines, rearview camera 220 Turn signal, indicator light 145 Turn signals, bulb replacement, see Lights and bulbs 343 Turn signals, high beams, headlight flasher 129 TV, see Owner's Handbook for Navigation, Entertainment, Communication 8 U Ultra-Low Sulfur Diesel 295 Unintentional alarm, avoiding 99 Units of measurement 61 Universal remote control 253 Unlock button, Steptronic transmission 134

Units of measurement 61
Universal remote control 253
Unlock button, Steptronic transmission 134
Unlocking, automatic 97
Unlocking, see Opening and Closing 80
Unlocking, settings 96
Unlocking, vehicle key 81
Unpaved roads, cross-country trips 275
Updates made after the editorial deadline 9
Update, software 75
Upholstery material care 360
USB connection 71
USB interface, position in vehicle 258
Used battery, disposing of 349

Trailer hitch, care 361

Use, intended 9 Warning and indicator lights, see Check Con-V Warning light in the exterior mirror, see Blind spot collision warning 184 Warning light in the exterior mirror, see Cross Vanity mirror 256 traffic warning 234 Variable sport steering 199 Warning messages, see Check Control 143 Vehicle battery 348 Warning triangle 351 Vehicle breakdown, see Breakdown assis-Warranty 10 tance 351 Washer fluid 133 Vehicle, breaking in 274 Washer nozzles, windshield 132 Vehicle care 359 Washer system 130 Vehicle care products 359 Washing the vehicle 358 Vehicle features and options 9 Wash view, Surround View 224 Vehicle identification number 14 Water on roads 276 Vehicle key, additional 83 Water, see Condensation water under the parked Vehicle key, integrated key 89 vehicle 277 Vehicle key, loss 84 Website 8 Vehicle key, malfunction 84 Weights 365 Vehicle key, opening/closing 80 Welcome light during unlocking 81 Vehicle key, replacing the battery 83 Welcome lights 160 Vehicle key with display, malfunction 88 Welcome screen, driver profiles 65 Vehicle key with display, see BMW display Wheelbase, vehicle 364 key 85 Wheel cleaner, light-alloy wheels 360 Vehicle paint 359 Wheels and tires 300 Vehicle position, vehicle location 61 Wheels, changing 308 Vehicle status 155 Wheels, see FTM Flat Tire Monitor 322 Vehicle storage 361 Width, vehicle 364 Vehicle wash 358 WiFi connection 72 Vehicle wash, automatic 358 WiFi hotspot, see Internet connection 72 Vehicle, washing 358 Window, defrosting 240, 244 Ventilation 245 Windows, powered 99 Ventilation, see Parked-car ventilation 247 Windshield, defrosting 240, 244 Venting, see Ventilation 245 Windshield washer fluid, see Washer fluid 133 Vent. see Ventilation 245 Windshield washer nozzles 132 Video, see Owner's Manual for Navigation, En-Windshield washer system, see Washer/wiper tertainment and Communication 8 system 130 VIN. see Vehicle identification number 14 Windshield wiper, see Wiper system 130 Voice activation system 56 Winter storage, see Long-term vehicle stor-Voice command response, see Owner's Handage 361 book for Navigation, Entertainment, Communi-Winter tires 309 cation 8 Winter tires, tread 307 Wiper blades, replacing 342 W Wiper fluid, see Washer fluid 133 Wiper, fold-away position 132

Wiper, see Washer/wiper system 130

Warning against cross traffic 234



Wiper system 130

Wireless charging of a smartphone, see Wireless charging tray, see Owner's Manual for Navigation, Entertainment, Communication 8 Wireless charging tray, see Owner's Manual for Navigation, Entertainment, Communication 8 Wood parts, care 360 Wordmatch principle, see Entry comparison 44 Working in, engine compartment 332 Wrench, see Onboard vehicle tool kit 342



xDrive 197

01402666926 ue

# California Proposition 65 Warning

For vehicles sold in California:

### **California Proposition 65 Warning**



### WARNING

Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.



### WARNING

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- · Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.
   For more information go to www.P65warnings.ca.gov/diesel.

