

HANDBOOK



PEUGEOT 208



PEUGEOT



On-line handbook

You can find your handbook on the PEUGEOT website, under "Personal space".

This personal space offers advice and other useful information for the care and maintenance of your vehicle.

Referring to the handbook on-line also gives you access to the latest information available, easily identified by the bookmark, associated with this symbol:



Please note the following point:

The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system. Please note this specific warning. It is advisable to contact a PEUGEOT dealer to be shown the recommended equipment and accessories.



If the "Personal space" function is not available on the PEUGEOT public website for your country, you can find your handbook at the following address:
<http://public.servicebox.peugeot.com>

Select:

- The Vehicle documentation link in the home page (no registration is needed),
- the language,
- the vehicle, its body style,
- the print edition of your handbook appropriate for the date of registration of your vehicle.

You have access to your handbook on line, together with the latest information, identified by the symbol:



WELCOME

Thank you for choosing a 208.

This handbook has been designed to enable you to make the most of your vehicle in all situations. Therefore, on the first few pages, you will find a summary followed by a quick reference guide intended to make it easier for you to become familiar with your vehicle.

All of the details specific to your vehicle, comfort, safety, practical information, are then presented in this handbook, to increase your appreciation of the vehicle and to help you make the most of it.

Key

Your vehicle is fitted with only some of the equipment described in this document, depending on its trim level, version and the specification for the country in which it was sold.

! Warning:

this symbol marks warnings which it is essential to observe for your own safety, for the safety of others or to avoid any risk of damaging your vehicle.

i Information:

this symbol draws your attention to additional information for better use of your vehicle.



Protection of the environment:

this symbol accompanies advice relating to protection of the environment.



Page reference:

this symbol invites you to refer to the pages which provide details of the function.

Familiarisation	Access	Driving
Eco-driving	Remote control key Alarm Electric windows Boot Panoramic sunroof	Starting - Stopping the engine Manual parking brake Manual gearbox Gear shift indicator 5-speed electronic gearbox 6-speed electronic gearbox Automatic gearbox Stop & Start Hill start assist Speed limiter Cruise control Park Assist Parking sensors
Monitoring	1	2
Instrument panels Indicator and warning lamps Gauges and indicators Trip computer Trip computer with touch screen Setting the date and time	21 23 33 38 40 43	3
Comfort	Visibility	4
Front seats Rear seats Rear seats Steering wheel adjustment Mirrors Ventilation Heating Manual air conditioning Dual-zone digital air conditioning Front demist - defrost Rear screen demist - defrost Interior fittings Boot fittings	57 60 62 63 64 66 68 68 70 73 74 78	5
	Lighting controls LED lamps Daytime running lamps Automatic illumination of headlamps Headlamp adjustment Cornering lighting Wiper controls Automatic rain sensitive wipers Courtesy lamp Interior mood lighting	111 115 115 117 118 119 120 122 124 125


Safety	6	Checks	8	Audio equipment and telematics	
Direction indicators	126	Bonnet	190	Emergency or assistance	215
Hazard warning lamps	126	Petrol engines	191	Touch screen	217
Emergency or assistance call	127	Diesel engines	192	Audio system / Bluetooth	279
Horn	127	Fuel tank	193	Audio system	305
ESC system	128	Misfuel prevention (Diesel)	195		
Front seat belts	131	Running out of fuel (Diesel)	197		
Airbags	134	Checking levels	198		
Child seats	138	Checks	201		
Deactivating the passenger's front airbag	140				
ISOFIX child seats	144				
Child lock	148				
Practical information	7	Technical data	9	Visual search	
Temporary puncture repair kit	149	Petrol engines	203		
Changing a wheel	155	Petrol weights	205		
Snow chains	162	Diesel engines	208		
Changing a bulb	163	Diesel weights	210		
Changing a fuse	170	Dimensions	213		
Battery	176	Identification markings	214		
Electrical energy economy mode	179				
Changing a wiper blade	180				
Towing the vehicle	181				
Towing a trailer	183				
Fitting roof bars	185				
Advice on care and maintenance	186				
Accessories	187				
				Alphabetical index	

Exterior

Stop & Start

This system puts the engine temporarily into standby during stops in the traffic (red lights, traffic jams, etc...). The engine restarts automatically as soon as you want to move off. Perfectly suited to urban use, the Stop & Start system reduces fuel consumption, exhaust emissions and the noise level when stationary.

ⓘ 96

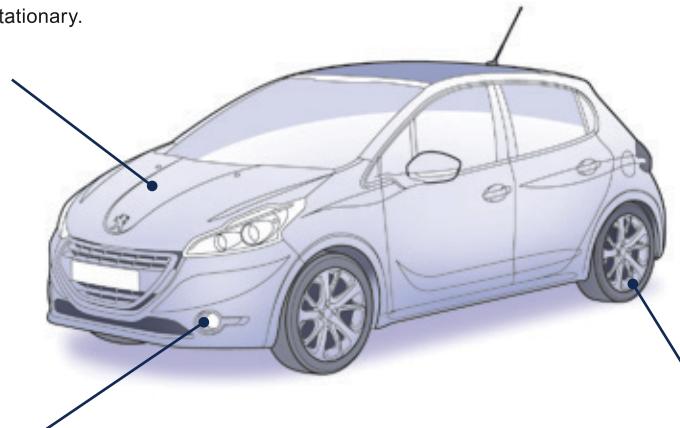

Cornering lighting

At low speed this system provides additional lighting in corners, at junctions, when parking..., making use of the corresponding front foglamp.

Park Assist

This is an active parking system that detects a parking space then controls the steering to park the vehicle.

ⓘ 119


ⓘ 105

Exterior

Temporary puncture repair kit

This kit is a complete system consisting of a compressor and a sealant cartridge, to allow the temporary repair of a tyre.

149

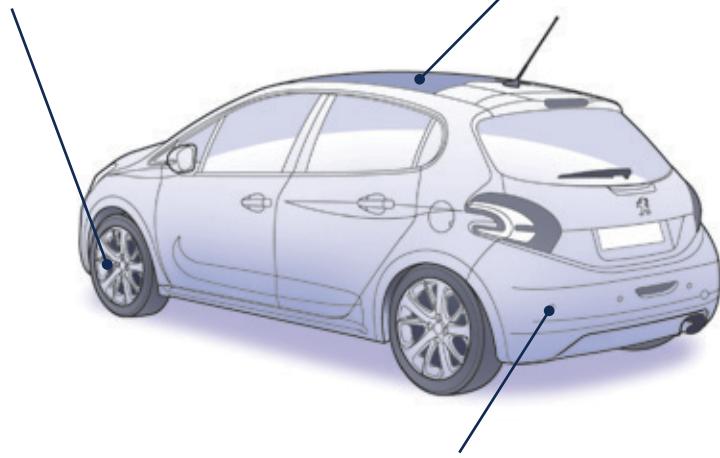

Panoramic sunroof

Equipped with configurable light guides, this glazed roof provides incomparable visibility and lighting in the passenger compartment.

56

Rear parking sensors

This system provides a warning when manoeuvring backwards by detecting obstacles located behind the vehicle.

109

Access

Remote control key



- A. Unfolding / Folding the key.
- B. Unlocking the vehicle.
Deactivating the alarm.

Other functions...


- C. Locking the vehicle.

Locating the vehicle.


Activating the alarm.

Locking and unlocking of the vehicle is signalled by rapid flashing of the direction indicators for about two seconds.

Fuel tank

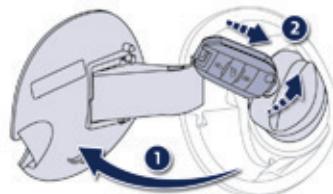


1. Opening the fuel filler flap.
2. Removing the fuel filler cap.

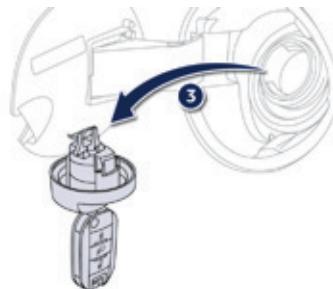

3. Hooking the fuel filler cap.
Tank capacity: approximately 50 litres.

Bonnet

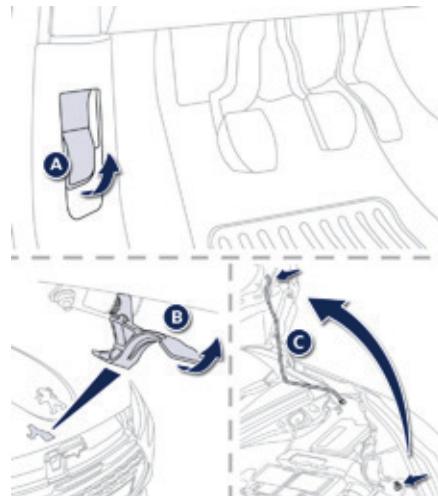

- A. Interior release lever.
- B. Exterior safety catch.
- C. Bonnet stay.


190

Interior

Interior mood lighting

This subdued passenger compartment lighting improves visibility inside the vehicle in low lighting conditions. It comprises several lamps, located below the instrument panel, in the footwells, in the courtesy lamp and on each side of the panoramic sunroof.

▶ 125

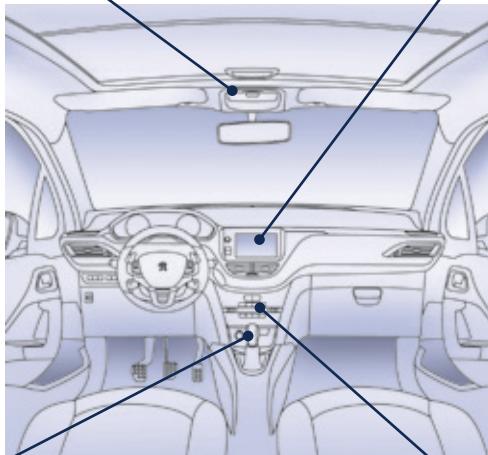

Electronic gearbox

This gearbox provides driving that combines a completely automatic mode and a manual mode.

5-speed

▶ 85

6-speed

▶ 89

Audio and communication systems

These systems benefit from the latest technology: MP3 compatible audio systems, USB player, Bluetooth hands-free system, satellite navigation system with colour screen, auxiliary inputs, Hi-Fi audio system, ...

Touch screen

▶ 217

Bluetooth audio system

▶ 279

Audio system

▶ 305


Dual-zone digital air conditioning

After setting the desired level of comfort, the system then automatically controls this level according to the ambient conditions.

▶ 70

Instruments and controls

1. Cruise control / speed limiter controls.
2. Steering mounted controls for the touch screen.
3. Lighting and direction indicator stalk
4. Wiper / screenwash / trip computer stalk.
5. Bonnet release lever.
6. Steering wheel adjustment control.
7. Driver's front airbag.
Horn.
8. Headlamp height adjustment.
9. Switch panel.
10. Side adjustable air vents.
11. Front side window demisting/defrosting vent.
12. Instrument panel.
13. Windscreen demisting/defrosting vent.
14. Sunshine sensor.
15. Glove box / Passenger's front airbag deactivation.
16. Passenger's front airbag.
17. Multifunction screen / Audio system.
18. Central adjustable air vents.
19. Central locking and hazard warning buttons.
20. Heating / air conditioning controls.
21. 12 V accessory socket.
USB port / auxiliary socket.
22. Open storage.
Cup holder.
23. Gear lever.
24. Central armrest with storage.
25. Parking brake.

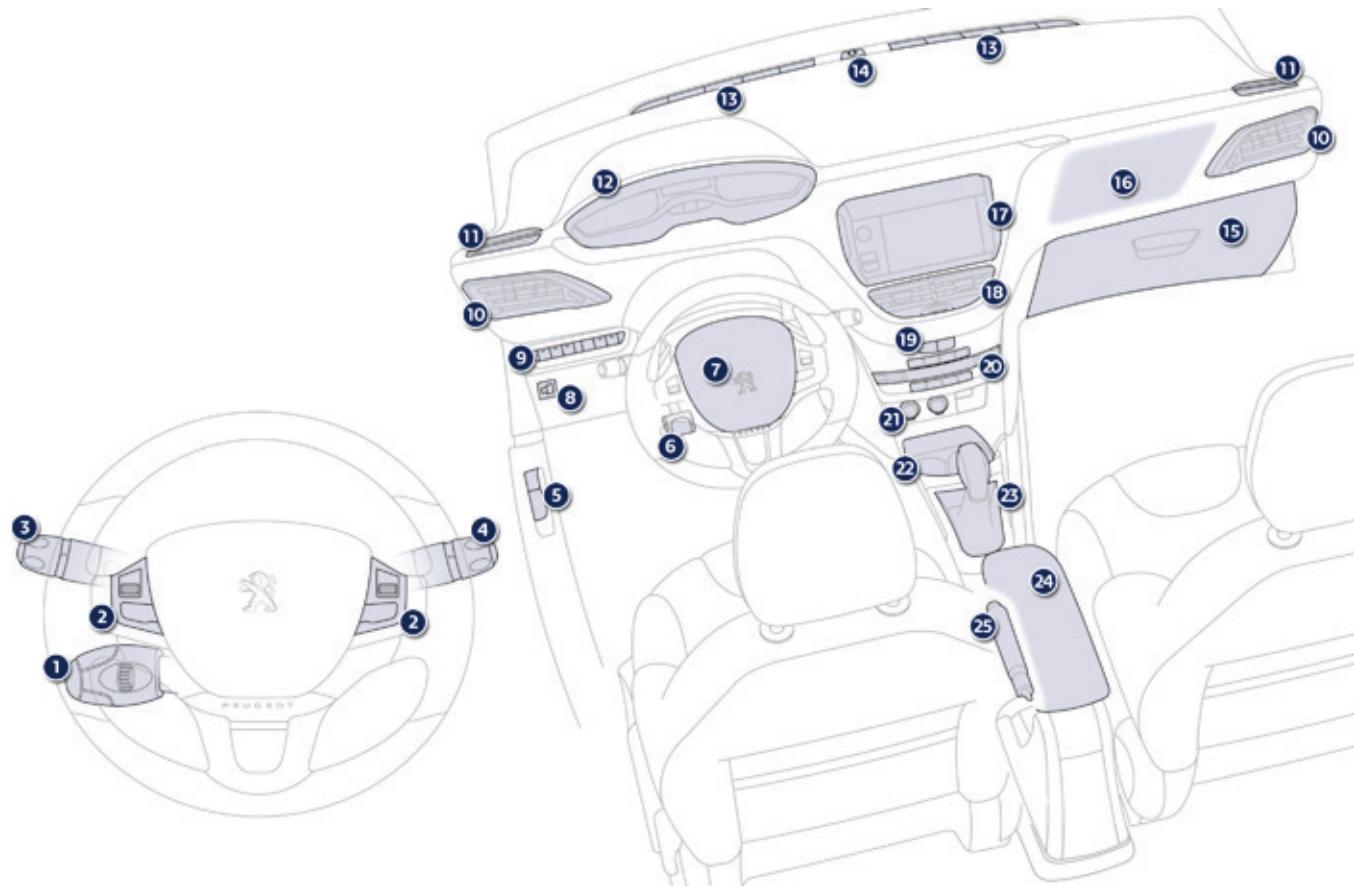


Sitting comfortably

Front seats

Manual adjustments

1. Seat forwards-backwards adjustment.
2. Seat cushion height adjustment.
3. Backrest angle adjustment.
4. Head restraint height adjustment.

57

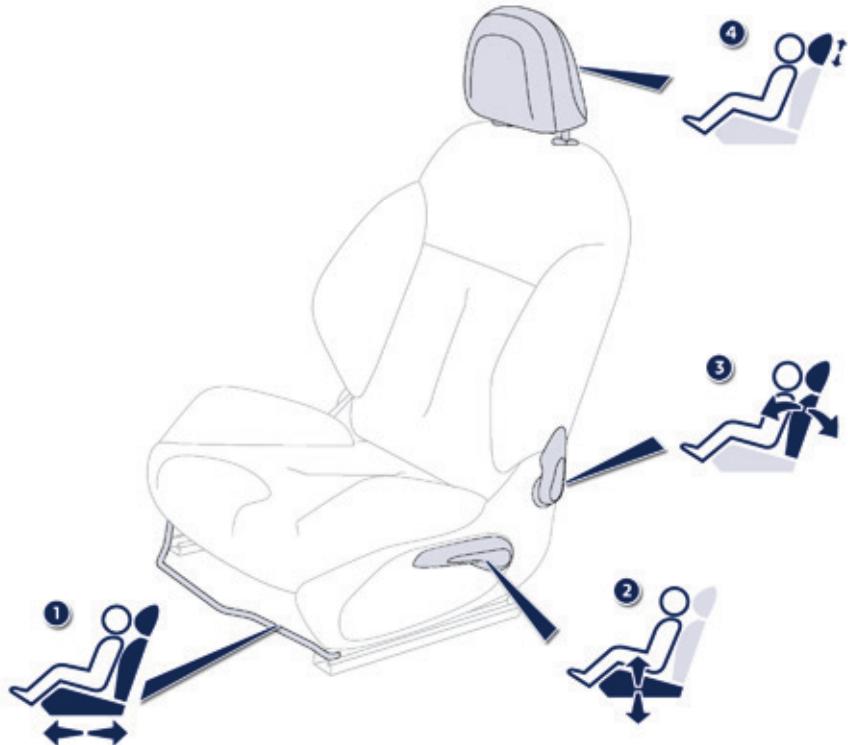

Sitting comfortably


Head restraint adjustment



To raise the head restraint, pull it upwards.
To lower it, press the lug **A** and down on the head restraint at the same time.

58

Steering wheel adjustment

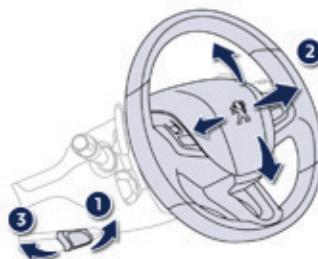


1. Release the adjustment mechanism.
2. Adjust for height and reach.
3. Lock the adjustment mechanism.



For reasons of safety, these operations must only be carried out with the vehicle stationary.

63

Correct driving position

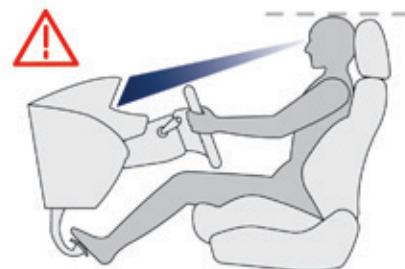

Before taking to the road and to make the most of the special ergonomics of your driving position, carry out these adjustments in the following order:


- height of the head restraint,
- backrest angle,
- cushion height,
- longitudinal position of the seat,
- reach and then height of the steering wheel,
- the interior and door mirrors.



Once these adjustments have been made, ensure that from your driving position you can see the "head-up" instrument panel clearly, over the reduced diameter steering wheel.

Sitting comfortably

Door mirrors

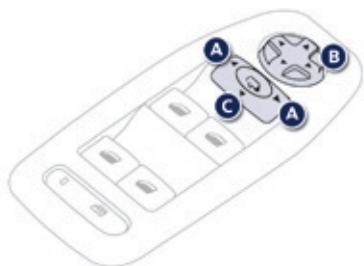


Adjustment

- A. Selection of the mirror.
- B. Adjusting the position of the mirror glass.
- C. De-selection of the mirror.

64

i Other functions...
Folding / Unfolding.

Rear view mirror

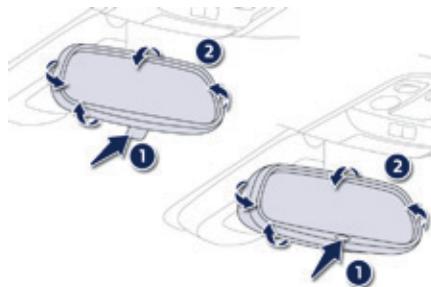

Manual day/night type


- 1. Selecting the "day" position of the rear view mirror.
- 2. Rear view mirror adjustment.

Automatic day/night type

- 1. Automatic detection of day/night mode.
- 2. Rear view mirror adjustment.

65

Front seat belts

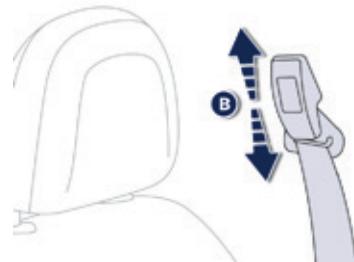


- A. Fastening.
- B. Height adjustment (5-door).

131

Seeing clearly

Lighting

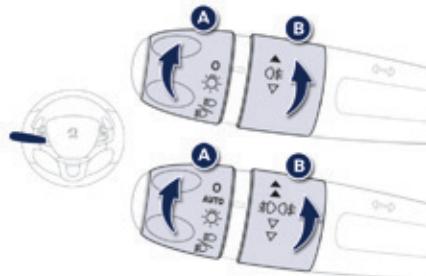

Ring A

O Lighting off.

AUTO

Automatic illumination of headlamps.



Sidelamps.



Dipped / main beam headlamps.

Ring B




Rear foglamps.

or



Front and rear foglamps.

Wipers

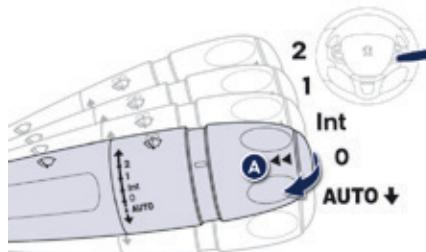

Control stalk A: windscreen wipers

2. Fast wipe.

1. Normal wipe.

Int. Intermittent wipe.

0. Park.

AUTO Automatic wiping.




Single wipe: Brief pull on the stalk towards.

Screenwash: Long pull on stalk towards you.



120

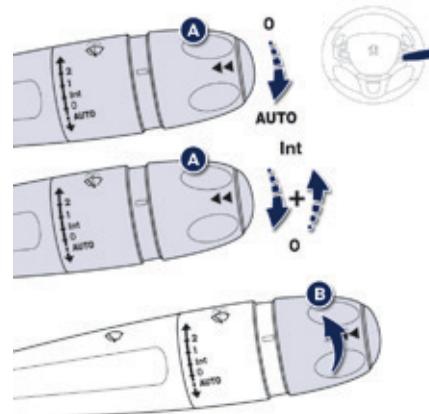

Switching on "AUTO" mode

☞ Briefly push the stalk downwards.

Switching off "AUTO" mode

☞ Briefly push the stalk downwards or place the stalk in another position: Int, 1 or 2.



122

Ring B: rear wiper

O Park.

Int Intermittent wipe.

Screenwash.



121

Ventilation


Recommended interior settings

I require...	Heating or Manual air conditioning				
	Air distribution	Air flow	Air recirculation/ Intake of exterior air	Temperature	Manual AC
HOT					
COLD					ON
DEMISTING DEFROSTING					ON

Digital air conditioning: use the automatic mode in preference by pressing the "AUTO" button.


Monitoring

Instrument panels

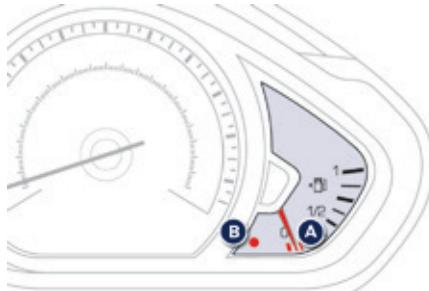

On switching on, the dial needles go to the extent of their travel then return to 0.


- With the ignition on, the needle should indicate the fuel remaining.
- With the engine running, the associated low level warning lamp should go off.

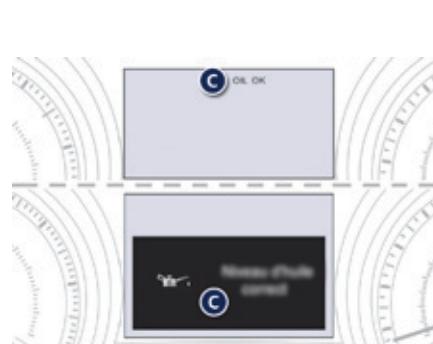

- With the ignition on, the instrument panel screen should indicate the engine oil level. If the levels are not correct, top up the level which is low.

21

Warning lamps

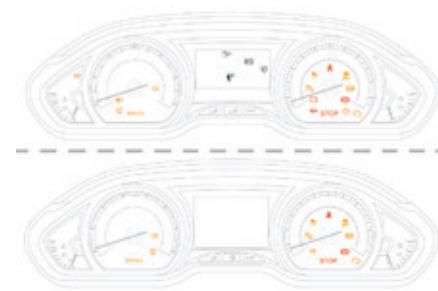


- With the ignition on, the orange and red warning lamps come on.
- With the engine running, these warning lamps should go off.

If a warning lamp remains on, refer to the page concerned.

23

Monitoring Switch panel

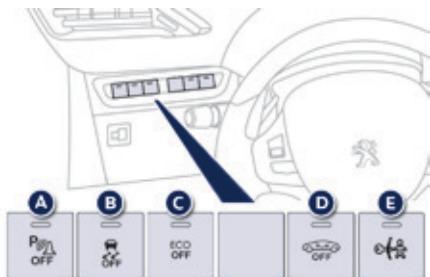

Illumination of the lamp indicates the status of the corresponding function.

A. Activation of the Park Assist system.
or
Deactivation of rear parking sensors.

106/107, 110

B. Deactivation of the DSC/ASR system.

130

C. Deactivation of the Stop & Start system.

97


D. Volumetric alarm monitoring off.

52

E. Electric child lock on.

148

Passenger safety Front passenger's airbag

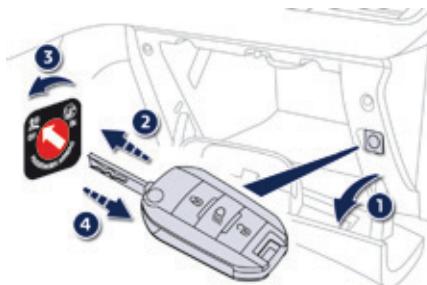

1. Open the glove box.
2. Insert the key.
3. Select position:
"ON" (activation), with front passenger or "forwards facing" child seat,
"OFF" (deactivation), with "rear facing" child seat.
4. Remove the key keeping the switch in the new position.

135

Front seat belts and passenger's front airbag



A. Front seat belts not fastened or unfastened warning lamp.

B. Airbag fault warning lamp.

32

C. Front passenger's airbag deactivation warning lamp.

27

Driving safely

Stop & Start

Going into engine STOP mode

ECO The "ECO" warning lamp comes on in the instrument panel and the engine goes into standby:

- for **Diesel engines**:
 - with a **manual gearbox**, at speeds below 12 mph (20 km/h), when you place the gear lever into neutral, and you release the clutch pedal,
 - with an **electronic gearbox**, at speeds below 4 mph (6 km/h), when you press the brake pedal or you place the gear lever into position **N**.
- for **petrol engines**, vehicle stationary.

In certain circumstances, STOP mode may not be available; the "ECO" warning lamp flashes for a few seconds, then goes off.

96


Going into engine START mode

ECO The "ECO" warning lamp goes off and the engine restarts:

- **with a manual gearbox**, when you press the clutch pedal,
- **with an electronic gearbox**:
 - with the gear lever in position **A** or **M**, when you release the brake pedal,
 - or with the gear lever in position **N** and brake pedal released, when you place the gear lever into position **A** or **M**,
 - or when you engage reverse.

In certain circumstances, START mode may be invoked automatically; the "ECO" warning lamp flashes for a few seconds, then goes off.

97

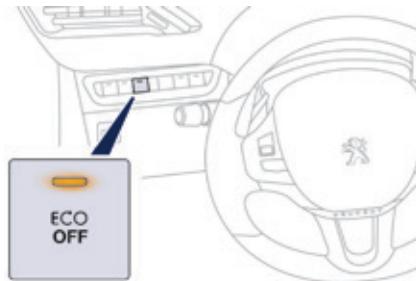

Deactivation / Reactivation

You can deactivate the system at any time by pressing the "ECO OFF" button; the button's warning lamp comes on.


i The system is automatically reactivated every time the engine is started with the key.

! Before refuelling or doing anything under the bonnet, you must switch off the ignition with the key.

97

Driving safely

Speed limiter "LIMIT"

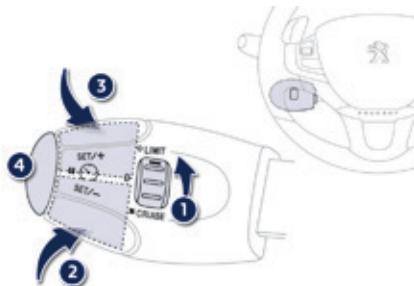


1. Selecting speed limiter mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Speed limiter On / Off.

The values must be set with the engine running.

 100


Cruise control "CRUISE"

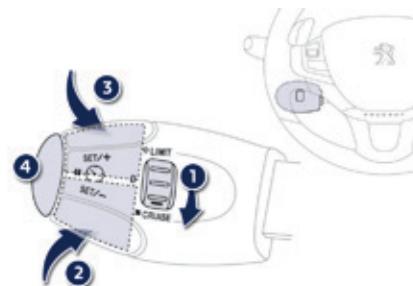

1. Selecting cruise control mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Cruise control Off / Resume.

In order to be programmed or activated, the vehicle speed must be higher than 25 mph (40 km/h), with at least 4th gear engaged on a manual gearbox (2nd gear on an electronic or automatic gearbox).

 102

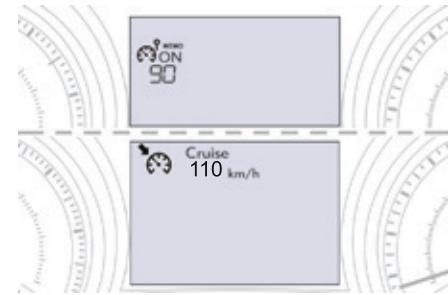

Display in the instrument panel

The cruise control or speed limiter mode appears in the instrument panel when it is selected.



Eco-driving

Eco-driving is a range of everyday practices that allow the motorist to optimise their fuel consumption and CO₂ emissions.

Optimise the use of your gearbox

With a manual gearbox, move off gently and change up without waiting. During acceleration change up early.

With an automatic or electronic gearbox, give preference to automatic mode and avoid pressing the accelerator pedal heavily or suddenly.

The gear shift indicator invites you engage the most suitable gear: as soon as the indication is displayed in the instrument panel, follow it straight away.

For vehicles fitted with an electronic or automatic gearbox, this indicator appears only in manual mode.

Drive smoothly

Maintain a safe distance between vehicles, use engine braking rather than the brake pedal, and press the accelerator progressively. These practices contribute towards a reduction in fuel consumption and CO₂ emissions and also helps reduce the background traffic noise.

If your vehicle has cruise control, make use of the system at speeds above 25 mph (40 km/h) when the traffic is flowing well.

Control the use of your electrical equipment

Before moving off, if the passenger compartment is too warm, ventilate it by opening the windows and air vents before using the air conditioning. Above 30 mph (50 km/h), close the windows and leave the air vents open.

Remember to make use of equipment that can help keep the temperature in the passenger compartment down (sunroof and window blinds...).

Switch off the air conditioning, unless it has automatic regulation, as soon as the desired temperature is attained.

Switch off the demisting and defrosting controls, if not automatic.

Switch off the heated seat as soon as possible.

Switch off the headlamps and front foglamps when the level of light does not require their use.

Avoid running the engine before moving off, particularly in winter; your vehicle will warm up much faster while driving.

As a passenger, if you avoid connecting your multimedia devices (film, music, video game...), you will contribute towards limiting the consumption of electrical energy, and so of fuel.

Disconnect your portable devices before leaving the vehicle.

Limit the causes of excess consumption

Spread loads throughout the vehicle; place the heaviest items in the bottom of the boot, as close as possible to the rear seats.

Limit the loads carried in the vehicle and reduce wind resistance (roof bars, roof rack, bicycle carrier, trailer...). Use a roof box in preference.

Remove roof bars and roof racks after use.

At the end of winter, remove snow tyres and refit your summer tyres.

Observe the recommendations on maintenance

Check the tyre pressures regularly, when cold, referring to the label in the door aperture, driver's side.

Carry out this check in particular:

- before a long journey,
- at each change of season,
- after a long period out of use.

Don't forget the spare wheel and the tyres on any trailer or caravan.

Have your vehicle serviced regularly (engine oil, oil filter, air filter, passenger compartment filter...) and observe the schedule of operations recommended in the warranty and maintenance record.

When refuelling, do not continue after the third cut-off of the nozzle to avoid any overflow.

At the wheel of your new vehicle, it is only after the first 1 800 miles (3 000 kilometres) that you will see the fuel consumption settle down to a consistent average.

LCD instrument panel



Dials and screens

1. Engine coolant temperature gauge.
2. Rev counter (x 1 000 rpm or tr/min), graduation according to engine (petrol or Diesel).
3. Engine oil level indicator*.
4. Gear shift indicator for a manual gearbox or gear lever position and gear for an electronic or automatic gearbox.
5. Digital speedometer (mph or km/h). This can be switched off with a long press on **B**.


6. Cruise control or speed limiter settings.
7. Service indicator, then total distance recorder (miles or km). These functions are displayed successively on switching on the ignition.
8. Trip distance recorder (miles or km).
9. Analogue speedometer (mph or km/h).
10. Fuel gauge.

Control buttons

- General lighting dimmer.
- Recalling the service information. Resetting the function selected (service indicator or trip distance recorder). Setting the time.
- Switching the digital speedometer on and off.

* Depending on version.

Active matrix instrument panel

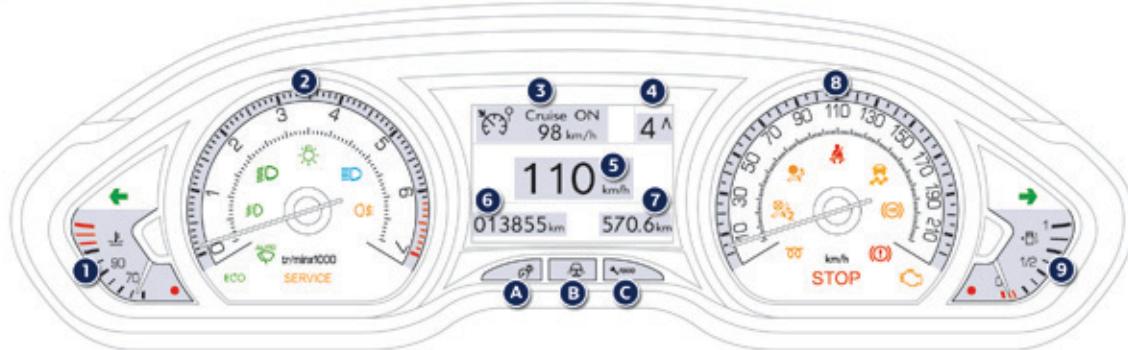

Dials and screens

1. Engine coolant temperature gauge.
2. Rev counter (x 1 000 rpm or tr/min), graduation according to engine (petrol or Diesel).
3. Cruise control or speed limiter settings.
4. Gear shift indicator for a manual gearbox or gear lever position and gear for an electronic or automatic gearbox.
5. Speedometer (mph or km/h).
6. Service indicator, then total distance recorder (miles or km). These functions are displayed successively on switching on the ignition.
7. Trip distance recorder (miles or km).
8. Analogue speedometer (mph or km/h).
9. Fuel gauge.

Control buttons

- Main lighting dimmer.
- Instrument panel mood lighting.
- Recall of the service information. Reset the selected function (service indicator or trip distance recorder).

Indicator and warning lamps

Visual indicators informing the driver that a system is switched on (indicator or deactivation lamp) or has a fault (warning lamp).



When the ignition is switched on

Certain warning lamps come on for a few seconds in the instrument panel and/or instrument panel screen when the vehicle's ignition is switched on.

When the engine is started, these same warning lamps should go off.

If they remain on, before moving off, refer to the information on the warning lamp concerned.

Associated warnings

The switching on of certain warning lamps may be accompanied by an audible signal and a message in the instrument panel or multifunction screen.

The warning lamps may come on continuously (fixed) or flash.



Certain warning lamps may come on in one of two modes. Only by relating the type of lighting to the operating status of the vehicle can it be ascertained whether the situation is normal or whether a fault has occurred.

Operation indicator lamps

If one of the following indicator lamps comes on in the instrument panel and/or instrument panel screen, this confirms that the corresponding system has come into operation.

Warning / indicator lamp	State	Cause	Action / Observations
 Left-hand direction indicator	flashing with buzzer.	The lighting stalk is pushed down.	
 Right-hand direction indicator	flashing with buzzer.	The lighting stalk is pushed up.	
 Sidelamps	fixed.	The lighting stalk is in the "Sidelamps" position.	
 Dipped beam headlamps	fixed.	The lighting stalk is in the "Dipped beam headlamps" position.	
 Main beam headlamps	fixed.	The lighting stalk is pulled towards you.	Pull the stalk to return to dipped beam headlamps.
 Front foglamps	fixed.	The front foglamps are switched on.	Turn the ring on the stalk rearwards twice to switch off the front foglamps.
 Rear foglamp	fixed.	The rear foglamp is switched on.	Turn the ring on the stalk rearwards to switch off the rear foglamp.

 For more information on the lighting controls, refer to the corresponding section.

Warning / indicator lamp	State	Cause	Action / Observations
 Diesel engine pre-heating	fixed.	The ignition switch is at the 2nd position (ignition on).	Wait until the warning lamp goes off before starting. The period of illumination of the warning lamp is determined by the climatic conditions (up to about thirty seconds in extreme climatic conditions). If the engine does not start, switch the ignition off and then on, wait until the warning lamp goes off again, then start the engine.
 Parking brake	fixed.	The parking brake is applied or not properly released.	Release the parking brake to switch off the warning lamp, keeping your foot on the brake pedal. Observe the safety recommendations. For further information on the parking brake, refer to the "Parking brake" section.
 Foot on the brake pedal	fixed.	The brake pedal must be pressed.	With an electronic gearbox, press the brake pedal to start the engine (lever in position N). With an automatic gearbox, with the engine running, press the brake pedal before releasing the parking brake, to unlock the lever and come out of position P . If you wish to release the parking brake without pressing the brake pedal, this warning lamp will remain on.
	flashing.	With an electronic gearbox, if you hold the vehicle on an incline using the accelerator for too long, the clutch overheats.	Use the brake pedal and/or the parking brake.

Warning / indicator lamp	State	Cause	Action / Observations
 Foot on the clutch*	fixed.	In the STOP mode of Stop & Start, changing to START mode is refused because the clutch pedal is not fully down.	You must declutch fully to allow the change to engine START mode.
 Automatic wiping	fixed.	The wiper control is pushed downwards.	Automatic front wiping is activated. To deactivate automatic wiping, operate the control stalk downwards or put the stalk into another position.
 Stop & Start	fixed.	When the vehicle stops (red lights, traffic jams, ...) the Stop & Start system has put the engine into STOP mode.	The warning lamp goes off and the engine restarts automatically in START mode, as soon as you want to move off.
	flashes for a few seconds, then goes off.	STOP mode is temporarily unavailable. or START mode is invoked automatically.	For more information on special cases with STOP mode and START mode, refer to the "Stop & Start" section.

* Except for the active matrix instrument panel.

Deactivation indicator lamps

If one of the following indicator lamps comes on, this confirms that the corresponding system has been switched off intentionally. This is may be accompanied by an audible signal and a message in the screen.

Warning / indicator lamp	State	Cause	Action / Observations
 Passenger's airbag system	fixed.	<p>The control, located in the glove box, is set to the OFF position. The passenger's front airbag is deactivated. In this case you can install a "rear facing" child seat.</p>	<p>Set the control to the ON position to activate the passenger's front airbag. In this case, do not fit a child seat in the rear-facing position.</p>

Warning lamps

When the engine is running or the vehicle is being driven, illumination of one of the following warning lamps indicates a fault which requires action on the part of the driver.

Any fault resulting in the illumination of a warning lamp must be investigated further by reading the associated message in the screen.

If you encounter any problems, contact a PEUGEOT dealer or a qualified workshop.

Warning / indicator lamp		State	Cause	Action / Observations
STOP	STOP	fixed, associated with another warning lamp.	It is associated with the engine oil pressure or the engine coolant temperature.	Stop as soon as it is safe to do so. Park, switch off the ignition and call a PEUGEOT dealer or qualified workshop.
SERVICE	Service	fixed, associated with another warning lamp.	Major faults have occurred.	Refer to the section on this warning lamp and you must then contact a PEUGEOT dealer or qualified workshop.
		fixed associated with a message (if a display screen is fitted).	Faults have occurred for which there is no specific warning lamp.	Identify the fault by reading the message shown in the screen (if a display screen is fitted) and refer to the corresponding section: <ul style="list-style-type: none"> - engine oil level alert, - risk of blockage of the particle emissions filter (Diesel). - Diesel fuel additive level (Diesel with particle emissions filter), You must contact a PEUGEOT dealer or a qualified workshop.

Warning / indicator lamp	State	Cause	Action / Observations
	Braking fixed.	The braking system fluid level has dropped significantly.	You must stop as soon as it is safe to do so. Top up with brake fluid listed by PEUGEOT. If the problem persists, have the system checked by a PEUGEOT dealer or a qualified workshop.
		fixed, associated with the ABS warning lamp.	The electronic brake force distribution (EBFD) system has a fault. You must stop as soon as it is safe to do so. Have it checked by a PEUGEOT dealer or a qualified workshop.
	Maximum coolant temperature fixed with the needle in the red zone.	The temperature of the cooling system is too high.	Stop as soon as it is safe to do so. Wait until the engine has cooled down before topping up the level, if necessary. If the problem persists, contact a PEUGEOT dealer or a qualified workshop.
	Anti-lock Braking System (ABS) fixed.	The anti-lock braking system has a fault.	The vehicle retains conventional braking. Drive carefully at reduced speed and contact a PEUGEOT dealer or a qualified workshop without delay.


Warning / indicator lamp	State	Cause	Action / Observations
 Dynamic stability control (DSC/ASR)	flashing.	The DSC/ASR regulation is operating.	The system optimises traction and improves the directional stability of the vehicle in the event of loss of grip or trajectory.
	fixed.	The DSC/ASR system has a fault.	Have it checked by a PEUGEOT dealer or a qualified workshop.
 Engine autodiagnosis system	fixed.	The emission control system has a fault.	The warning lamp should go off when the engine is started. If it does not go off, contact a PEUGEOT dealer or qualified workshop without delay.
	flashing.	The engine management system has a fault.	Risk of destruction of the catalytic converter. Have it checked by a PEUGEOT dealer or a qualified workshop.
	fixed, associated with the SERVICE warning lamp.	A minor engine fault has been detected.	Have it checked by a PEUGEOT dealer or a qualified workshop.
	fixed, associated with the STOP warning lamp.	A major engine fault has been detected.	You must stop as soon as it is safe to do so. Park, switch off the ignition and contact a PEUGEOT dealer or a qualified workshop.

Warning / indicator lamp	State	Cause	Action / Observations
 Low fuel level	fixed with the needle in the red zone.	<p>There remains approximately 5 litres of fuel in the tank. At this point, you begin to use the fuel reserve.</p>	<p>Refuel as soon as possible to avoid running out of fuel. This warning lamp will come on every time the ignition is switched on, until a sufficient addition of fuel is made.</p>
	flashing with the needle in the red zone.	There remains very little fuel in the tank.	<p>Fuel tank capacity: approximately 50 litres. Never continue to drive until you run out of fuel, as this could damage the emission control and injection systems.</p>
 Engine oil pressure	fixed.	There is a fault with the engine lubrication system.	<p>You must stop as soon it is safe to do so. Park, switch off the ignition and contact a PEUGEOT dealer or a qualified workshop.</p>
 Battery charge	fixed.	The battery charging circuit has a fault (dirty or loose terminals, slack or cut alternator belt, ...).	<p>The warning lamp should go off when the engine is started. If it does not go off, contact a PEUGEOT dealer or a qualified workshop.</p>

Warning / indicator lamp	State	Cause	Action / Observations
	Door(s) open fixed, associated with a message identifying the door, if the speed is below 6 mph (10 km/h).	A door or the boot is still open.	Close the door or boot.
		fixed, associated with a message identifying the door, and accompanied by an audible signal if the speed is above 6 mph (10 km/h).	
	Seat belt(s) not fastened / unfastened fixed then flashing accompanied by an increasing audible signal.	A seat belt has not been fastened or has been unfastened.	Pull the strap then insert the tongue in the buckle.
	Airbags on temporarily.	This lamp comes on for a few seconds when you turn on the ignition, then goes off.	This lamp should go off when the engine is started. If it does not go off, contact a PEUGEOT dealer or a qualified workshop.
		fixed.	One of the airbag or seat belt pretensioner systems has a fault.
	Power steering fixed.	The power steering has a fault.	Drive carefully at reduced speed. Have it checked by a PEUGEOT dealer or a qualified workshop.

Gauges and indicators

Coolant temperature gauge

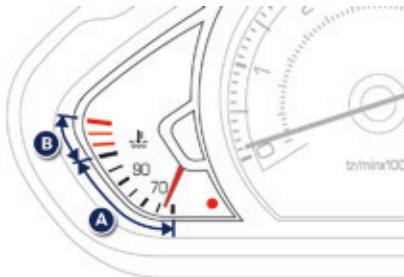

After driving for a few minutes, the temperature and pressure in the cooling system increase.

To top up the level:

- ☞ wait for the engine to cool,
- ☞ unscrew the cap slightly to allow the pressure to drop,
- ☞ when the pressure has dropped, remove the cap,
- ☞ top up the level to the "MAX" mark.

With the engine running, when the needle is:

- in zone **A**, the temperature is correct,
- in zone **B**, the temperature is too high; the maximum temperature and the central **STOP** warning lamps come on, accompanied by an audible signal and a warning message in the screen.

You MUST stop as soon as it is safe to do so.

Wait a few minutes before switching off the engine.


Contact a PEUGEOT dealer or a qualified workshop.



Be aware of the risk of burns when topping up the cooling system. Do not fill above the maximum level (indicated on the header tank).

Lighting dimmer control


System for the manual adjustment of the brightness of the instrument panel and the touch screen to suit the ambient light level.

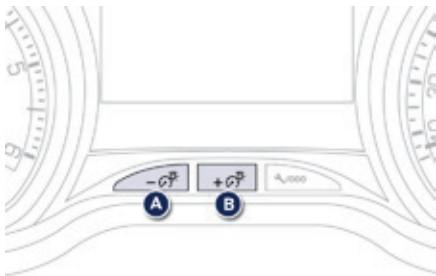

Two buttons

With the headlamps on, press button **B** to increase the brightness of the instruments and controls and the interior mood lighting or button **A** to reduce it.

As soon as the lighting reaches the required level of brightness, release the button.

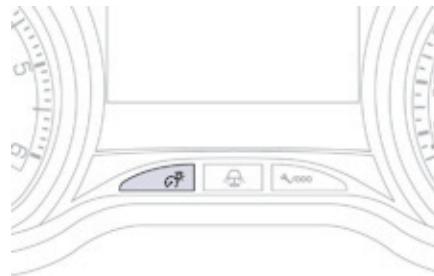

One button

Activation

- ☞ press the button to adjust the brightness of the instruments and controls,
- ☞ release the button when the desired level is attained.

Switching off

When the vehicle lighting is off or in day mode (daytime running lamps on), pressing the button has no effect.



Touch screen


- ☞ Press **MENU** to display the "**MAIN MENU**" then select "**Preferences**".
- ☞ Select "**System Configuration**" then "**Brightness**".
- ☞ Press "**Turn off screen**". The screen goes off completely.
Press the screen again (anywhere on the surface) to activate it.

Service indicator

System which informs the driver when the next service is due, in accordance with the manufacturer's servicing schedule.

The point at which the service is due is calculated from the last indicator zero reset. It is determined by two parameters:

- the distance travelled,
- the time elapsed since the last service.

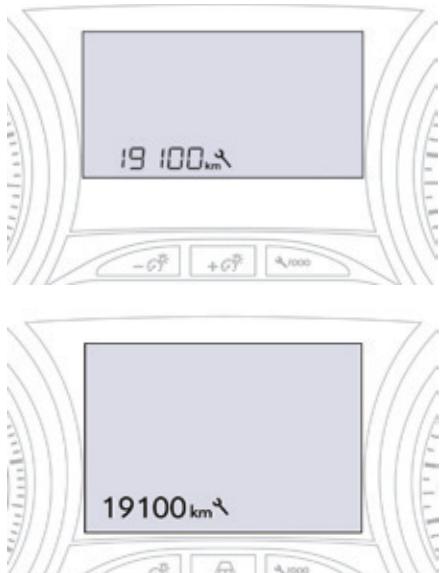

More than 1 800 miles (3 000 km) remain before the next service is due

When the ignition is switched on, no service information appears in the screen.

Between 600 miles (1 000 km) and 1 800 miles (3 000 km) remain before the next service is due

For 7 seconds after the ignition is switched on, the spanner symbolising the service operations comes on. The distance recorder display line indicates the distance remaining before the next service is due.

Example: 1 700 miles (2 800 km) remain before the next service is due.

For 7 seconds after the ignition is switched on, the screen indicates:



7 seconds after the ignition is switched on, **the spanner goes off**; the distance recorder resumes its normal operation. The screen then indicates the total and trip distances.



Less than 600 miles (1 000 km) remain before the next service is due

Example: 560 miles (900 km) remain before the next service is due.

For 7 seconds after the ignition is switched on, the screen indicates:



7 seconds after the ignition is switched on, the distance recorder resumes its normal operation. **The spanner remains on** to indicate that a service must be carried out soon.



Service overdue

For 7 seconds after the ignition is switched on, **the spanner flashes** to indicate that the service must be carried out as soon as possible.

Example: the service is overdue by 186 miles (300 km).

For 7 seconds after the ignition is switched on, the screen indicates:




7 seconds after the ignition is switched on, the distance recorder resumes its normal operation. **The spanner remains on.**



i The distance remaining may be weighted by the time factor, depending on the driving conditions.

Therefore, the spanner may also come on if you have exceeded the period since the last service, indicated in the **servicing and warranty booklet**.

Service indicator zero reset

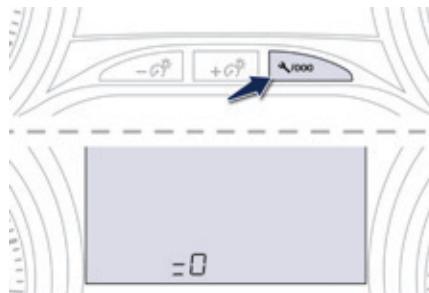

After each service, the service indicator must be reset to zero.

The procedure for resetting to zero is as follows:

- ☞ switch off the ignition,
- ☞ press and hold the trip distance recorder zero reset button,
- ☞ switch on the ignition; the distance recorder display begins a countdown,
- ☞ when the display indicates "=0", release the button; the spanner disappears.

i Following this operation, if you wish to disconnect the battery, lock the vehicle and wait at least five minutes for the zero reset to be taken into account.

Retrieving the service information

You can access the service information at any time.


- ☞ Press the trip distance recorder zero reset button.
- ☞ The service information is displayed for a few seconds, then disappears.

Mileage recorder



The total mileage is displayed in zone **A** of the screen and the trip mileage in zone **B**.

Trip recorder zero reset

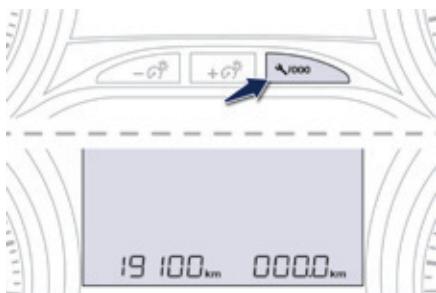

With the trip mileage displayed, press the button for a few seconds.

 
Engine oil level indicator*

System which informs the driver whether the engine oil level is correct or not.


This information is indicated for a few seconds when the ignition is switched on, after the service information.



The level read will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.




Oil level correct

 

Oil level incorrect

This is indicated by the flashing of "OIL" or by the display of a dedicated message in the instrument panel.

 If the low oil level is confirmed by a check using the dipstick, the level must be topped up to avoid damage to the engine.



Oil level indicator fault

This is indicated by the flashing of "OIL__" or by the display of a dedicated message in the instrument panel. Contact a PEUGEOT dealer or a qualified workshop.

Dipstick

Refer to the "Checks" section to locate the dipstick and the oil filler cap on your engine. There are 2 marks on the dipstick:




- **A** = max; never exceed this level,
- **B** = min; top up the level via the oil filler cap, using the grade of oil suited to your engine.

* Depending on version.


Trip computer

System that gives you information on the journey in progress (range, fuel consumption...).

Instrument panel screen

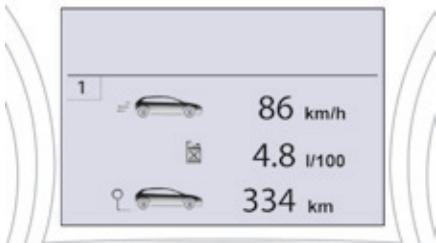

Information display

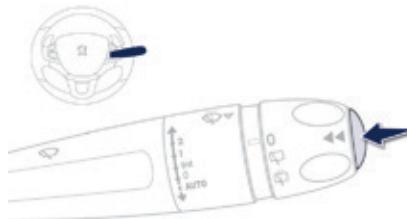

☞ Press the button on the end of the **wiper control stalk** to display the various tabs in succession.

- The current information tab with:
 - the range,
 - the current fuel consumption,
 - the Stop & Start time counter.


1

- Trip "1" with:
 - the average speed,
 - the average fuel consumption,
 - the distance travelled, for the first trip.

2

- Trip "2" with:
 - the average speed,
 - the average fuel consumption,
 - the distance travelled, for the second trip.

Trip reset

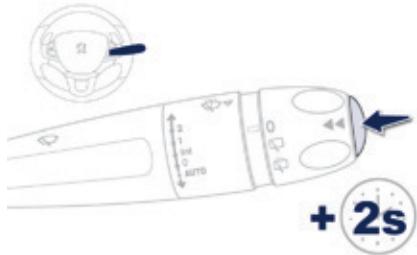

☞ When the trip required is displayed, press the control for more than two seconds or use the left hand thumb wheel of the steering mounted controls.


Trips "1" and "2" are independent but their use is identical.

For example, trip "1" can be used for daily figures, and trip "2" for monthly figures.

Trip computer with touch screen

System which provides current information concerning the trip (range, fuel consumption...).

Information display

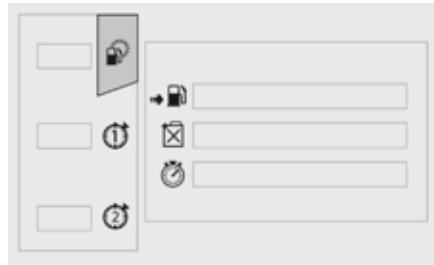

- ☞ Press **MODE** located on the touch screen front panel, to display the various tabs.
- ☞ Select the desired tab using your finger.



- The current fuel consumption tab with:
 - the range,
 - the current fuel consumption,
 - the Stop & Start time counter.




- The trip "1" tab with:
 - the distance travelled,
 - the average fuel consumption,
 - the average speed,
 - for the first trip.



- The trip "2" tab with:
 - the distance travelled,
 - the average fuel consumption,
 - the average speed,
 - for the second trip.

Trip reset

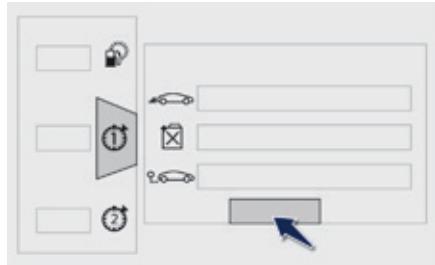

000

- When the desired trip is displayed, press the reset zone, located at bottom right of the touch screen.

Trips "1" and "2" are independent but their use is identical.

For example, trip "1" can be used for daily figures, and trip "2" for monthly figures.

Trip computer, a few definitions



Range

(miles or km)

The distance which can still be travelled with the fuel remaining in the tank (related to the average fuel consumption over the last few miles (kilometres) travelled).



This value may vary following a change in the style of driving or the relief, resulting in a significant change in the current fuel consumption.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).



If dashes are displayed continuously while driving in place of the digits, contact a PEUGEOT dealer or a qualified workshop.



Current fuel consumption

(mpg or l/100 km or km/l)

Calculated over the last few seconds.



This function is only displayed from 20 mph (30 km/h).



Average fuel consumption

(mpg or l/100 km or km/l)

Calculated since the last trip computer reset.



Average speed

(mph or km/h)

Calculated since the last trip computer reset.



Distance travelled

(miles or km)

Calculated since the last trip computer reset.



Stop & Start time counter

(minutes / seconds or hours / minutes)

If your vehicle is fitted with Stop & Start, a time counter calculates the time spent in STOP mode during a journey.

It resets to zero every time the ignition is switched on with the key.

Setting the date and time

Touch screen



MENU



Press **MENU** to display the **MAIN MENU** then select "**Preferences**".

Select "**Date & Time**".



Select "**System configuration**".

12:24

Select the date or time displayed, use the keypad to adjust the setting, then "**Confirm**".


LCD instrument panel



- ☞ Press this button to display the following settings successively:
 - hours,
 - minutes,
 - 12 or 24 hour format.

Remote control key


System which permits central unlocking or locking of the vehicle using the lock or from a distance. It is also used to locate and start the vehicle, as well as providing protection against theft.

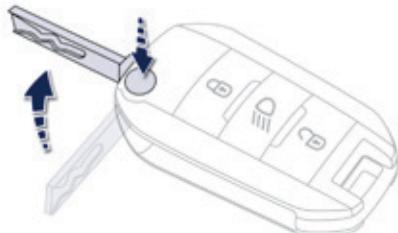

Unfolding the key

- ☞ First press this button to unfold the key.

Unlocking the vehicle Complete unlocking

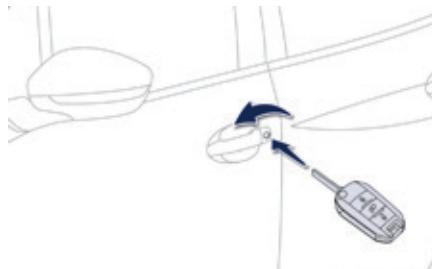

i Unlocking is confirmed by rapid flashing of the direction indicators for approximately two seconds. According to version, the door mirrors unfold at the same time.

Using the key

- ☞ Turn the key to the front of the vehicle to unlock the vehicle.

Using the remote control



- ☞ Press the open padlock to unlock the vehicle.

Selective unlocking



Complete unlocking is activated by default.
This is set via the configuration menu.


Using the remote control



- ☞ To unlock the driver's door only press the open padlock once.
- ☞ To unlock the other doors and the boot, press the open padlock again.

i Unlocking is confirmed by rapid flashing of the direction indicators for approximately two seconds.
According to version, the door mirrors unfold at the same time as the first unlocking action.

Locking the vehicle Normal locking

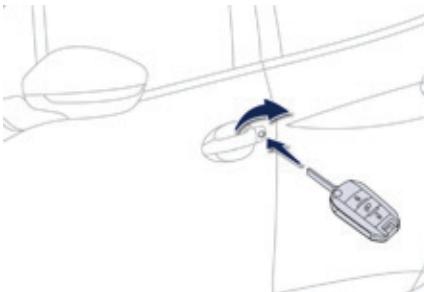

Using the key

- ☞ Turn the key towards the rear of the vehicle to lock the vehicle completely.

Using the remote control



- ☞ Press the closed padlock to lock the vehicle completely.

Maintaining the locking action (key or remote control) automatically closes the windows.




Locking is confirmed by fixed lighting of the direction indicators for approximately two seconds.
According to version, the door mirrors fold at the same time.



! Driving with the doors locked could make access to the cabin by the emergency services more difficult in the event of an emergency.
As a safety measure (children on board), never leave the vehicle without taking your key, even for a short period.

! If one of the doors or the boot is still open or if an electronic key has been left inside the vehicle, the central locking does not take place. When the vehicle is locked, if it is unlocked inadvertently, it will relock automatically after about thirty seconds unless a door is opened.

The folding and unfolding of the door mirrors by the remote control can be deactivated by a PEUGEOT dealer or a qualified workshop.

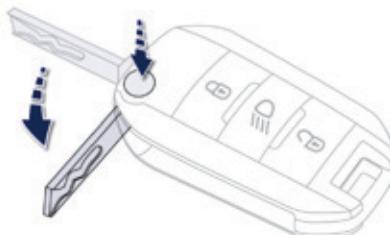

Folding the key

☞ First press this button to fold the key.

! If you do not press the button when folding the key, there is a risk of damage to the mechanism.

Locating your vehicle



- ☞ Press the closed padlock to locate your locked vehicle in a car park.

This is indicated by lighting of the courtesy lamps and flashing of the direction indicators for a few seconds.

Guide-me-home lighting



Make a long press this button to operate the guide-me-home lighting (switching on the sidelamps, dipped beams and number plate lamps).

A second press before the end of the timed period cancels the guide-me-home lighting.

Anti-theft protection

Electronic engine immobiliser

The key contains an electronic chip which has a special code. When the ignition is switched on, this code must be recognised in order for starting to be possible.

This electronic engine immobiliser locks the engine management system a few minutes after the ignition is switched off and prevents starting of the engine by anyone who does not have the key.


SERVICE In the event of a fault, you are informed by illumination of this warning lamp, an audible signal and a message in the screen.

In this case, your vehicle will not start; contact a PEUGEOT dealer as soon as possible.



Keep safely, away from your vehicle, the label attached to the keys given to you on acquisition of the vehicle.

Locking / unlocking from the inside

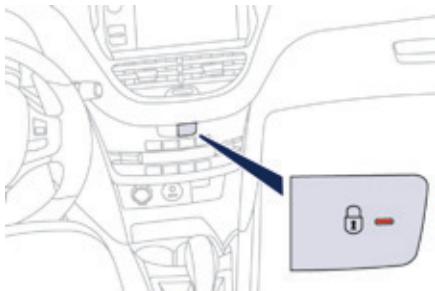

- ☞ Press the switch.
This allows the doors and the boot to be locked or unlocked.

i If one of the doors is open, the doors are not locked.

! **When locking / deadlocking from outside**

When the vehicle is locked or deadlocked from outside, the switch does not operate.

- ☞ After normal locking, pull the interior door lever to unlock the vehicle.
- ☞ After deadlocking, you have to use the remote control or the key to unlock the vehicle.

Automatic central locking of the doors

The doors can lock automatically while driving (speed above 6 mph [10 km/h]).

To turn this function on or off (on by default).

- ☞ press and hold the button until there is an audible signal and/or a message in the screen.


! Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.

Secondary control

For mechanically locking and unlocking the doors in the event of a fault with the central locking system or a battery failure.

Driver's door

Insert the key in the lock to lock or unlock the door.

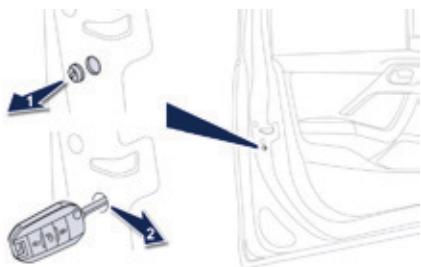

Passenger doors

- ☞ On the rear doors, check that the child lock is not on.
- ☞ Remove the black cap located on the edge of the door, using the key.
- ☞ Insert the key into the aperture without forcing, then without turning, move the latch sideways towards the inside of the door.
- ☞ Remove the key and refit the cap.

Remote control problem

Following disconnection of the vehicle battery, replacement of the remote control battery or in the event of a remote control malfunction, you can no longer unlock, lock or locate your vehicle.


- ☞ First of all, use the key in the lock to unlock or lock your vehicle.
- ☞ Then, reinitialise the remote control. If the problem persists, contact a PEUGEOT dealer as soon as possible.

Reinitialisation

- ☞ Switch off the ignition.
- ☞ Turn the key to position **2 (Ignition)**.
- ☞ Press the closed padlock immediately for a few seconds.
- ☞ Switch off the ignition and remove the key from the ignition switch.

The remote control is fully operational again.

Changing the battery

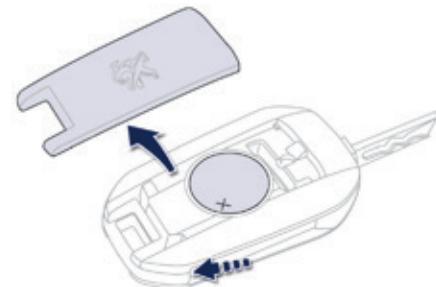

Battery ref.: CR1620 / 3 volts.

SERVICE

- If the battery is flat, you are informed by lighting of this warning lamp in the instrument panel, an audible signal and a message in the screen.
- ☞ Unclip the cover using a screwdriver in the cutout.
- ☞ Remove the cover.
- ☞ Extract the flat battery from its location.
- ☞ Place the new battery into its location observing the original direction.
- ☞ Clip the cover in place.



Do not throw the remote control batteries away, they contain metals which are harmful to the environment. Take them to an approved collection point.

! Lost keys

Go to a PEUGEOT dealer with the vehicle's registration document, your personal identification documents and if possible the key code label. The PEUGEOT dealer will be able to look up the key code and the transponder code required to order a new key.

Remote control

The high frequency remote control is a sensitive system; do not operate it while it is in your pocket as there is a possibility that it may unlock the vehicle, without you being aware of it.

Do not repeatedly press the buttons of your remote control out of range and out of sight of your vehicle. You run the risk of stopping it from working and the remote control would have to be reinitialised.

No remote control can operate when the key is in the ignition switch, even when the ignition is switched off, except for reinitialisation.

Locking the vehicle

Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency. As a safety precaution, never leave children alone in the vehicle, except for a very short period.

In all cases, it is essential to remove the key from the ignition switch when leaving the vehicle.


Anti-theft protection

Do not make any modifications to the electronic engine immobiliser system; this could cause malfunctions.

When purchasing a second-hand vehicle

Have the pairing of all of the keys in your possession checked by a PEUGEOT dealer, to ensure that only your keys can be used to open and start the vehicle.

Alarm

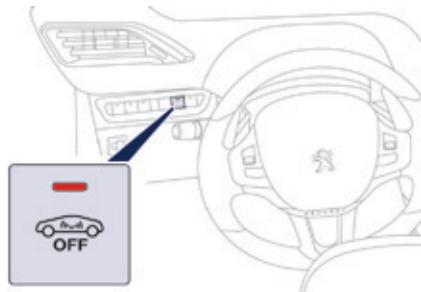

System which protects and provides a deterrent against theft and break-ins. It provides the following types of monitoring:

- Exterior perimeter

The system checks for opening of the vehicle. The alarm is triggered if anyone tries to open a door, the boot, the bonnet...

- Interior volumetric

The system checks for any variation in the volume in the passenger compartment. The alarm is triggered if anyone breaks a window, enters the passenger compartment or moves inside the vehicle.

- Tilt (only on the GTi model)

The system checks for any change in the attitude of the vehicle. The alarm is triggered if the vehicle is lifted, moved or knocked.



Self-protection function

The system checks for the putting out of service of its components. The alarm is triggered if the battery, the central control or the wires of the siren are put out of service or damaged.

For all work on the alarm system, contact a PEUGEOT dealer or a qualified workshop.

Locking the vehicle with full alarm system

2

Activation

☞ Switch off the ignition and get out of the vehicle.



☞ Press the locking button on the remote control.



The monitoring system is active: the indicator lamp in the button flashes once per second.

After the locking button on the remote control is pressed, the exterior perimeter monitoring is activated after a delay of 5 seconds and the interior volumetric monitoring after a delay of 45 seconds.

If an opening (door, boot...) is not closed fully, the vehicle is not locked but the exterior perimeter monitoring will be activated after a delay of 45 seconds at the same time as the interior volumetric monitoring.

Deactivation



☞ Press the unlocking button on the remote control.



The alarm system is deactivated: the indicator lamp in the button goes off.

Locking the vehicle with exterior perimeter monitoring only

Deactivate the interior volumetric monitoring to avoid unwanted triggering of the alarm in certain cases such as:

- leaving a pet in the vehicle,
- leaving a window partially open,
- washing your vehicle.

Deactivation of the interior volumetric monitoring



- ☞ Switch off the ignition.
- ☞ Within ten seconds, press the button until the indicator lamp is on continuously.
- ☞ Get out of the vehicle.
- ☞ Press the locking button on the remote control immediately.



The exterior perimeter monitoring alone is activated: the indicator lamp in the button flashes once per second.

i To be effective, this deactivation must be carried out each time the ignition is switched off.

Reactivation of the interior volumetric monitoring



- ☞ Press the unlocking button on the remote control to deactivate the exterior perimeter monitoring.



- ☞ Press the locking button on the remote control to activate all the monitoring functions.



The indicator lamp in the button again flashes once per second.

Triggering of the alarm

This is indicated by sounding of the siren and flashing of the direction indicators for thirty seconds.

The monitoring functions remain active until the alarm has been triggered eleven times in succession.



When the vehicle is unlocked using the remote control, rapid flashing of the indicator lamp in the button informs you that the alarm was triggered during your absence. When the ignition is switched on, this flashing stops immediately.

Failure of the remote control

To deactivate the monitoring functions:

- ☞ Unlock the vehicle using the key in the driver's door lock.
- ☞ Open the door; the alarm is triggered.
- ☞ Switch on the ignition; the alarm stops. The indicator lamp in the button goes off.

Locking the vehicle without activating the alarm

- ☞ Lock or deadlock the vehicle using the key in the driver's door lock.

Malfunction

When the ignition is switched on, fixed illumination of the indicator lamp in the button indicates a malfunction of the system.

Have it checked by a PEUGEOT dealer or a qualified workshop.

Automatic activation*

2 minutes after the last door or the boot is closed, the system is activated automatically.

- ☞ To avoid triggering the alarm on entering the vehicle, first press the unlocking button on the remote control.

* According to country.

Electric windows



1. Left hand front electric window.
2. Right hand front electric window.
3. Right hand rear electric window.
4. Left hand rear electric window.
5. Deactivating the rear electric window switches.

Manual operation

To open or close the window, press or pull the switch gently. The window stops as soon as the switch is released.

Automatic one-touch operation (depending on version)

To open or close the window, press or pull the switch fully: the window opens or closes completely when the switch is released. Pressing the switch again stops the movement of the window.

The electric window switches remain operational for approximately one minute after the key has been removed.

Once this time has elapsed, the electric windows will not operate. To reactivate them, switch the ignition on again.

Safety anti-pinch (depending on version)

When the window rises and meets an obstacle, it stops and immediately partially lowers again. In the event of unwanted opening of the window when closing automatically, press the switch until the window opens completely, then pull the switch immediately until the window closes. Continue to hold the switch for approximately one second after the window has closed. The safety anti-pinch function is not active during this operation.

2

Deactivating the rear window controls



For the safety of your children, press switch 5 to prevent operation of the windows of the rear doors, irrespective of their position.

With the warning lamp on, the rear switches are deactivated. With the warning lamp off, the switches are active.

Reinitialising the electric windows

Following reconnection of the battery, the safety anti-pinch function must be reinitialised. The safety anti-pinch is not active during these operations:

- lower the window completely, then raise it, it will rise in steps of a few centimetres each time the switch is pressed. Repeat the operation until the window closes completely,
- press and hold the switch upwards for at least one second after reaching this position, window closed.



Always remove the key when leaving the vehicle, even for a short time. In the event of contact during operation of the windows, you must reverse the movement of the window. To do this, press the switch concerned. When operating the passenger electric window switches, the driver must ensure that no one is preventing correct closing of the windows. The driver must ensure that the passengers use the electric windows correctly. Be aware of children when operating the windows.

Boot Opening



- After unlocking the boot or the vehicle using the remote control or the key, press the opening control, then raise the tailgate.

Closing

- Lower the tailgate using the interior grab handle.
- If necessary, press down on the tailgate to fully close it.

If the tailgate is not closed correctly:




- **when the engine is running**, this warning lamp comes on, accompanied by the display of an alert message for a few seconds,
- **when the vehicle is moving** (speed above 6 mph (10 km/h)), this warning lamp comes on, accompanied by an audible signal and the display of an alert message for a few seconds.

Tailgate release

System for mechanical unlocking of the boot in the event of a central locking malfunction.

2

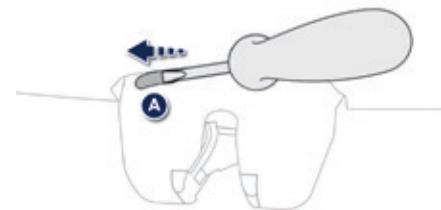

Unlocking

- Fold back the rear seats to gain access to the lock from inside the boot.
- Insert a small screwdriver into hole **A** of the lock to unlock the tailgate.


Panoramic sunroof

System which comprises configurable light guides and a panoramic tinted glass area to increase the light and visibility in the passenger compartment. It is fitted with a manual blind in two parts to maintain a comfortable temperature.


Opening



- ☞ Take the blind by its handle and push it rearwards to the required position.

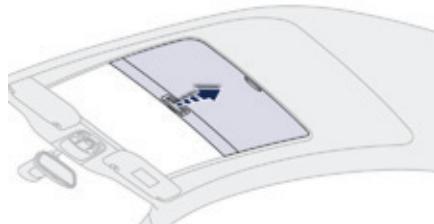

Closing

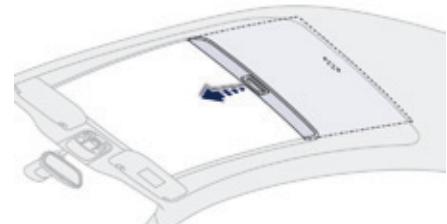

- ☞ Take the blind by its handle and pull it forwards to the required position.

Front seats with manual adjustments

As a safety measure, seat adjustments should only be carried out when stationary.

Forwards-backwards



- ☞ Raise the control and slide the seat forwards or backwards.

Height



- ☞ Pull the control upwards to raise or push it downwards to lower, as many times as required, to obtain the position required.

Seat backrest angle




- ☞ Push the control rearwards.

3

! Before moving the seat backwards, ensure that there is nothing that might prevent the full travel of the seat, so as to avoid the risk of jamming the seat caused by the presence of objects on the floor behind the seat or rear passengers. If the seat jams, stop the movement immediately.

Head restraint height

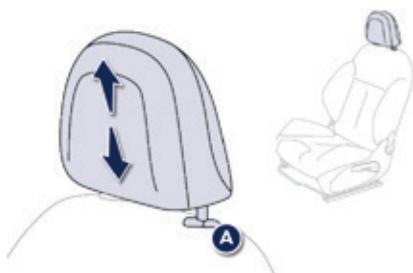

- ☞ To raise the head restraint, pull it upwards.
- ☞ To remove the head restraint, press the lug **A** and pull the head restraint upwards.
- ☞ To put the head restraint back in place, engage the head restraint stems in the openings keeping them in line with the seat back.
- ☞ To lower the head restraint, press the lug **A** and the head restraint at the same time.

! The head restraint is fitted with a frame with notches which prevents it from lowering; this is a safety device in case of impact.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.
Never drive with the head restraints removed; they must be in place and adjusted correctly.


Access to the rear seats (3-door)



- ☞ Pull **only** this control upwards to fold the seat back and move the seat forward. When put back in place, the seat returns to its initial position.

! Ensure that no person or object prevents the seat slide from returning to its initial position; the return to this position is necessary for longitudinal locking.
Check that the seat belt has reeled in correctly so as to not impede access for passengers to the rear seats.

Heated seats control

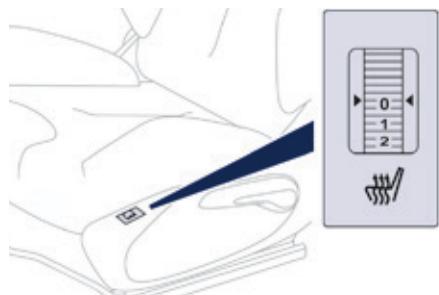

With the engine running, the front seats can be heated separately.

☞ Use the adjustment dial, placed on the side of each front seat, to switch on and select the level of heating required:

0: Off.

1: Low.

2: Medium.

3: High.

Front armrest

Comfort and storage system for the driver and front passenger.

Storage



☞ For access to the closed storage box, lift the lever to open the lid.




☞ For access to the open storage box below the armrest, lift the complete armrest towards the rear.

3

Rear bench seat

Bench seat with fixed one-piece cushion and folding one-piece backrest.

Folding the backrest

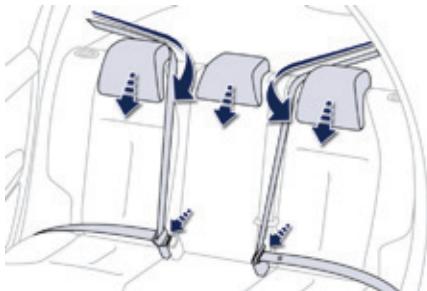

- ☞ Move the front seats forward if necessary.
- ☞ Position the outer seat belts on the backrest and buckle them.
- ☞ Place the head restraints in the low position.




- ☞ Press both controls **1** simultaneously to release the seat backrest **2**.
- ☞ Fold the seat backrest **2** on to the cushion **3**.

! When folding the seat, the centre seat belt should not be fastened, but laid out flat on the seat.

i The rear seat cushion does not fold, just the seat backrest can be folded to increase the boot loading space.

Repositioning the seat backrest

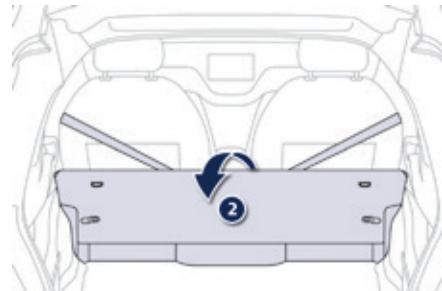


- ☞ Straighten the seat backrest **2** and secure it.
- ☞ Check that the red indicators, located next to the controls **1**, are no longer visible.
- ☞ Unbuckle and return the outer seat belts to the sides of the backrest.

! When repositioning the backrest, ensure that the seat belts are not trapped.

Rear head restraints

These have one position for use (up) and a stowed position (down).

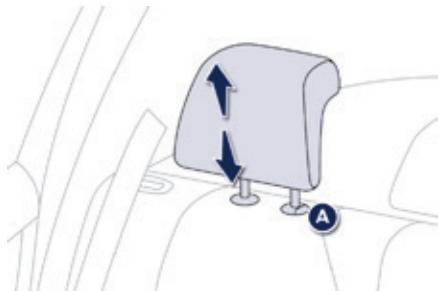

They can be removed and are interchangeable side to side.

To remove a head restraint:

- ☞ pull the head restraint upwards to the stop,
- ☞ then, press the lug **A**.




Never drive with the head restraints removed; they must be in place and correctly adjusted.

Rear seats


Bench seat with fixed one-piece cushion and split backrest (left hand 2/3, right hand 1/3) which can be folded individually to adapt the load space in the boot.

Folding the backrest

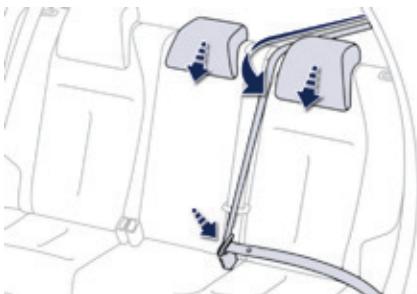

- ☞ Move the corresponding front seat forward if necessary.
- ☞ Check that the corresponding outer seat belt is positioned correctly against the backrest and buckle it.
- ☞ Place the head restraints in the low position.


! When folding the seat, the centre seat belt should not be fastened, but laid out flat on the seat

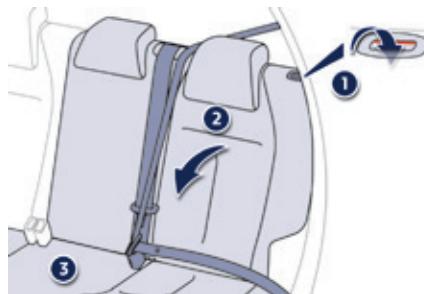

- ☞ Press control 1 to release the seat backrest 2.
- ☞ Fold the seat backrest 2 on to the cushion.

i The rear seat cushion does not fold, just the seat backrest can be folded to increase the boot loading space.

Repositioning the seat backrest

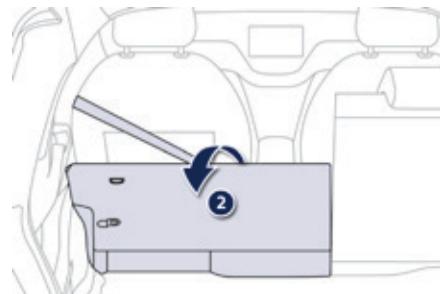


- ☞ Straighten the seat backrest 2 and secure it.
- ☞ Check that the red indicator, located next to the control 1, is no longer visible.
- ☞ Unbuckle and reposition the outer seat belt on the side of the backrest.

! When repositioning the seat backrest, take care not to trap the seat belts.

Steering wheel adjustment

3

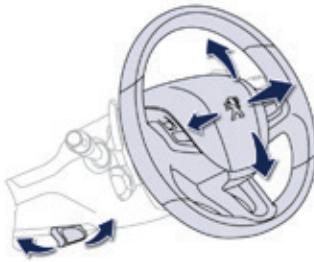

- ☞ **When stationary**, pull the control lever to release the adjustment mechanism.
- ☞ Adjust the height and reach to suit your driving position.
- ☞ Push the control lever to lock the adjustment mechanism.



As a safety precaution, these operations should only be carried out with the vehicle stationary.

Mirrors

Door mirrors

Each fitted with an adjustable mirror glass providing the lateral rearward vision necessary for overtaking or parking. They can also be folded for parking in confined spaces.


Demisting - Defrosting




Demisting-defrosting of the door mirrors operates with the engine running, by switching on the heated rear screen.

For more information on demisting and defrosting the rear screen, refer to the corresponding section.

Manual model

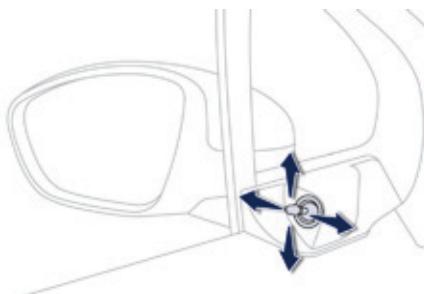

Electric model

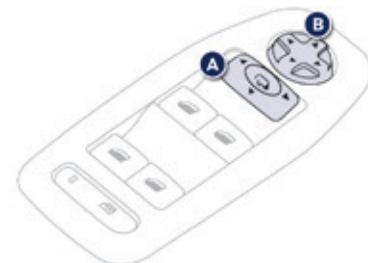

Adjustment

- Move the lever in all four directions to adjust the mirror.

Folding

- When parked, fold the mirror manually to protect it.

Unfolding

- Before moving off, unfold the mirror.

Adjustment

- Move control **A** to the right or to the left to select the corresponding mirror.
- Move control **B** in all four directions to adjust.
- Return control **A** to the central position.



The objects observed are, in reality, closer than they appear. Take this into account in order to correctly judge the distance of vehicles approaching from behind.

Folding

- Automatic: lock the vehicle using the remote control or the key.
- Manual: with the ignition on, pull control **A** rearwards.

i If the mirrors are folded using control **A**, they will not unfold when the vehicle is unlocked. Pull again on control **A**.

Unfolding

- Automatic: unlock the vehicle using the remote control or the key.
- Manual: with the ignition on, pull control **A** rearwards.

i The folding and unfolding of the door mirrors using the remote control can be deactivated by a PEUGEOT dealer or a qualified workshop.


Fold the mirrors when putting your vehicle through an automatic car wash.

If necessary, it is possible to fold the mirrors manually.

Rear view mirror

Adjustable mirror providing a central rearward view.

Equipped with an anti-dazzle system, which darkens the mirror glass and reduces the nuisance to the driver caused by the sun, headlamps from other vehicles...

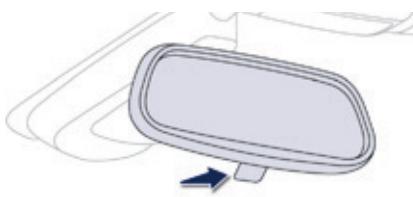

Manual day/night model


Adjustment

☞ Adjust the mirror so that the glass is directed correctly in the "day" position.

Day / night position

- ☞ Pull the lever to change to the "night" anti-dazzle position.
- ☞ Push the lever to change to the normal "day" position.

! As a safety measure, the mirrors should be adjusted to reduce the "blind spot".

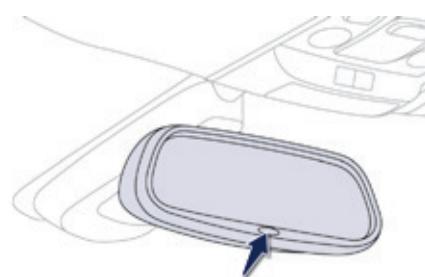

Automatic day/night model

By means of a sensor, which measures the light from the rear of the vehicle, this system automatically and progressively changes between the day and night uses.

i In order to ensure optimum visibility during your manoeuvres, the mirror lightens automatically when reverse gear is engaged.

Ventilation

Air intake

The air circulating in the passenger compartment is filtered and originates either from the outside via the grille located at the base of the windscreen or from the inside in air recirculation mode.


Air intake flow

The incoming air follows various paths depending on the controls selected by the driver:

- direct arrival in the passenger compartment (air intake),
- passage through a heating circuit (heating),
- passage through a cooling circuit (air conditioning).

Control panel

The controls of this system are grouped together on control panel **A** on the centre console.

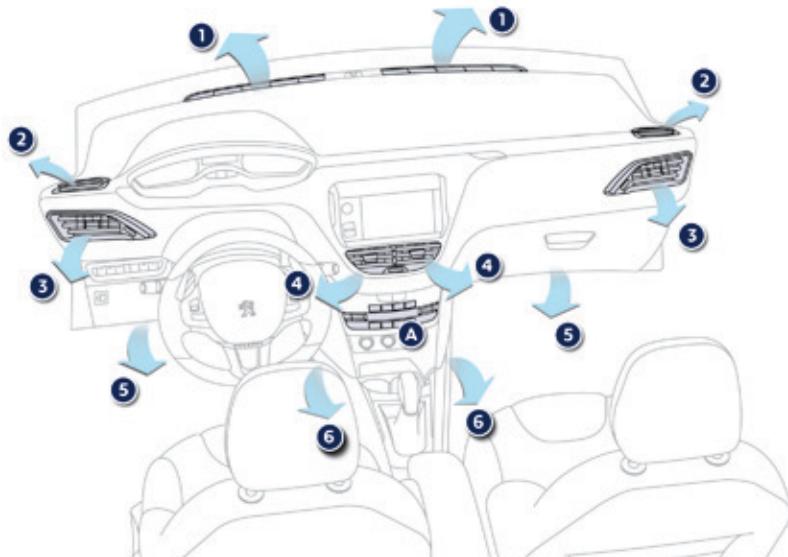

Air distribution

1. Windscreen demisting-defrosting vents.
2. Front side window demisting-defrosting vents.
3. Side adjustable air vents.
4. Central adjustable air vents.
5. Air outlets to the front footwells.
6. Air outlets to the rear footwells.

Recommendations for ventilation and air conditioning

i In order for these systems to be fully effective, follow the operation and maintenance guidelines below:

- ☞ To obtain an even air distribution, take care not to obstruct the exterior air intake grilles located at the base of the windscreen, the nozzles, the vents and the air outlets, as well as the air extractor located in the boot.
- ☞ Do not cover the sunshine sensor, located on the dashboard; this is used for regulation of the air conditioning system.
- ☞ Operate the air conditioning system for at least 5 to 10 minutes, once or twice a month to keep it in perfect working order.
- ☞ Ensure that the passenger compartment filter is in good condition and have the filter elements replaced regularly.

We recommend the use of a combined passenger compartment filter. Thanks to its special active additive, it contributes to the purification of the air breathed by the occupants and the cleanliness of the passenger compartment (reduction of allergic symptoms, bad odours and greasy deposits).

- ☞ To ensure correct operation of the air conditioning system, you are also advised to have it checked regularly as recommended in the warranty and maintenance record.
- ☞ If the system does not produce cold air, switch it off and contact a PEUGEOT dealer or a qualified workshop.

When towing the maximum load on a steep gradient in high temperatures, switching off the air conditioning increases the available engine power and so improves the towing ability.

 If after an extended stop in sunshine, the interior temperature is very high, first ventilate the passenger compartment for a few moments.

Put the air flow control at a setting high enough to quickly change the air in the passenger compartment.

The air conditioning system does not contain chlorine and does not present any danger to the ozone layer.


The condensation created by the air conditioning results in a discharge of water under the vehicle which is perfectly normal.

3

i Stop & Start

The heating and air conditioning systems only work when the engine is running. To maintain a comfortable temperature in the passenger compartment, you can temporarily deactivate the Stop & Start system (see the corresponding section).

Heating / Ventilation

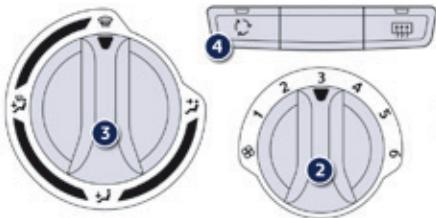

1. Temperature adjustment.
2. Air flow adjustment.
3. Air distribution adjustment.
4. Air intake/ air recirculation.
5. Air conditioning On / Off.


Temperature adjustment



☞ Turn the dial from blue (cold) to red (hot) to adjust the temperature to your requirements.

Manual air conditioning

The air conditioning system only operates with the engine running.

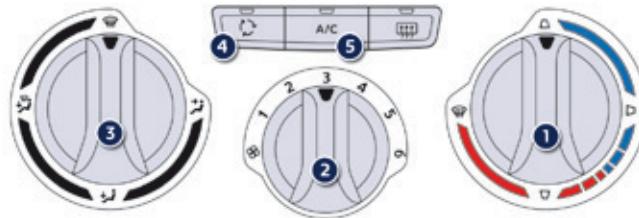

Air flow adjustment



☞ Turn the dial from position **1** to position **6** to obtain a comfortable air flow.

i If you put the air flow control in position **0** (system off), the temperature is no longer controlled. However, a slight flow of air can still be felt, resulting from the movement of the vehicle.

Air distribution adjustment



Windscreen and side windows.



Windscreen, side windows and footwells.



Footwells.



Central and side vents.



The air distribution can be adapted by placing the dial in an intermediate position.

Air intake / Air recirculation

The recirculation of interior air insulates the passenger compartment from exterior odours and smoke.

Return to exterior air intake as soon as possible to prevent deterioration of the air quality and the formation of mist.



☞ Press the button to recirculate the interior air. The indicator lamp comes on to confirm this.

☞ Press the button again to allow fresh air into the passenger compartment. The indicator lamp goes off to confirm this.

Air conditioning On / Off



The air conditioning is designed to operate effectively in all seasons, with the windows closed.

It enables you to:

- lower the temperature, in summer,
- increase the effectiveness of the demisting in winter, above 3 °C.

Switching on

☞ Press the "A/C" button, the button's indicator lamp comes on.



The air conditioning does not operate when the air flow adjustment control 2 is in position "0".

To obtain cooled air more quickly, you can use recirculation of interior air for a few moments. Then return to fresh air intake.

Switching off


☞ Press the "A/C" button again, the button's indicator lamp goes off.

Switching off may affect comfort levels (humidity, condensation).

Dual-zone digital air conditioning

The air conditioning can only operate with the engine running.

Automatic operation

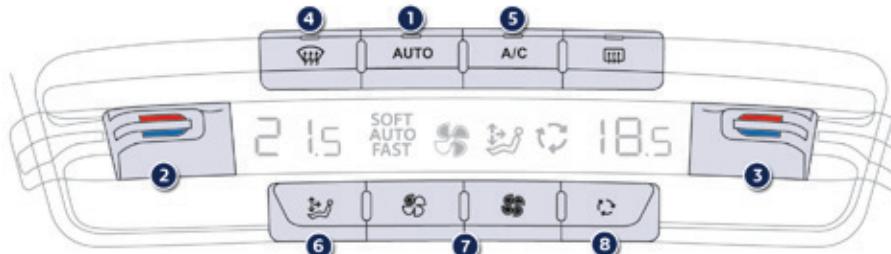

1. Automatic comfort programme.
2. Temperature adjustment on driver's side.
3. Temperature adjustment on passenger's side.
4. Automatic visibility programme.
5. Air conditioning On/Off.
6. Air distribution adjustment.
7. Air flow adjustment.
8. Air intake/ Air recirculation.

Automatic comfort programme

Three modes are provided for the driver and for the front passenger to select their desired level of comfort in the passenger compartment.

AUTO

☞ Press the "AUTO" button repeatedly. The indicator lamp comes on at the first press; the mode activated appears in the digital air conditioning screen:

i When the engine is cold, to prevent too great a distribution of cold air, the air flow will only reach its optimum level gradually.

In cold weather, it favours the distribution of warm air to the windscreen, the side windows and the footwells only.

**SOFT
AUTO**

Provides soft and quiet operation by limiting air flow.

AUTO

Offers the best compromise between a comfortable temperature and quiet operation.

**AUTO
FAST**

Provides strong and effective air flow.

Temperature adjustment

The driver and front passenger can each set the temperature to suit their requirements. The value indicated in the screen corresponds to a level of comfort and not to a temperature in degrees Celsius or Fahrenheit.



- ☞ Press the button **2** or **3** down (blue) reduce the value or up (red) to increase it.

A setting around 21 enables you to obtain an optimum level of comfort. Depending on your requirements, a setting between 18 and 24 is usual. In addition, it is recommended that you avoid a left/right setting difference of more than 3.

i On entering the vehicle, if the interior temperature is much colder or warmer than the comfort value, there is no need to alter the value displayed in order to obtain the required level of comfort. The system corrects the temperature difference automatically and as quickly as possible.

Automatic visibility programme



See "Front demisting-defrosting".

Resuming manual control

Depending on your requirements, you can make a different selection from that offered by the system by changing a setting. The other functions will still be controlled automatically. When you modify a setting, the indicator lamp in the "**AUTO**" button goes off.



- ☞ Press the "**AUTO**" button again to return to the automatic comfort programme.



i For maximum cooling or heating of the passenger compartment, you can exceed the minimum value of 14 or the maximum value of 28.

- ☞ Push the switch **2** or **3** down until "**LO**" is displayed or up until "**HI**" is displayed.

Air conditioning On/Off



The air conditioning is designed to operate efficiently in all seasons, with the windows closed.

It allows you:

- in summer, to lower the temperature,
- in winter, above 3 °C, to improve demisting.

Switching on

- ☞ Press the "**A/C**" button, the associated indicator lamp comes on.

The air conditioning cannot operate when the air flow is set to off.

Switching off

- ☞ Press the "**A/C**" button again; the associated indicator lamp goes off.

Switching off may cause some problems (humidity, misting).

Air distribution adjustment



- ☞ Press this button several times in succession to direct the air flow in turn towards:
 - the windscreen, the side windows and the footwells,
 - the windscreen and side windows (demisting or defrosting),
 - the central and side vents,
 - the central vents, the side vents and the footwells,
 - the footwells.

Air flow adjustment



The air flow symbol (a fan) appears in the screen. It is filled in progressively in relation to the value required.



- ☞ Press this "full fan" button to increase the air flow.
- ☞ Press this "empty fan" button to reduce the air flow.

Air intake/Air recirculation



- ☞ Press this button to recirculate the interior air. The indicator lamp in the button comes on and the air recirculation symbol is displayed.
- Air recirculation prevents exterior odours and smoke from entering the passenger compartment. It is activated automatically when operating the screen wash.
- ☞ As soon as possible, press this button again to permit the intake of exterior air and prevent misting. The indicator lamp in the button goes off.



Avoid prolonged operation in interior air recirculation mode (risk of misting and of deterioration of the air quality).

Switching the system off



- ☞ Press the "empty fan" air flow button until the fan symbol disappears and "---" appears.

This action switches off all of the functions of the air conditioning system.

The temperature is no longer maintained at a comfortable level. However, a slight flow of air, due to the movement of the vehicle, can still be felt.



Avoid driving for too long with the system switched off (risk of misting and of deterioration of the air quality). Pressing the "full fan" button reactivates the system with the settings prior to deactivation.

Front demist - defrost



These markings on the control panel indicate the control positions for rapid demisting or defrosting of the windscreens and side windows.

With manual air conditioning

- ☞ Put the air flow, temperature and distribution controls to the dedicated marked position.
- ☞ Press the "A/C" button for air conditioning; the indicator lamp in the button comes on.

With dual-zone digital air conditioning

Automatic visibility programme

- ☞ Select this programme to demist or defrost the windscreens and side windows as quickly as possible.

The system automatically manages the air conditioning, air flow and air intake, and provides optimum distribution towards the windscreens and side windows.

- ☞ To stop the programme, press either the "visibility" button again or "AUTO", the warning lamp on the button goes off and the warning lamp in the "AUTO" button comes on.

The system reverts to the previous settings.



With Stop & Start, when demisting has been activated, the STOP mode is not available.

Rear screen demist - defrost



The control button is located on the air conditioning system control panel.

3

Switching on

The rear screen demisting/defrosting can only operate when the engine is running.

- ☞ Press this button to demist/defrost the rear screen and (depending on version) the door mirrors. The indicator lamp associated with the button comes on.

Switching off

The demisting/defrosting switches off automatically to prevent an excessive consumption of current.


- ☞ It is possible to stop the demisting/defrosting operation before it is switched off automatically by pressing the button again. The indicator lamp associated with the button goes off.




- ☞ Switch off the demisting/defrosting of the rear screen and door mirrors as soon as appropriate, as lower current consumption results in reduced fuel consumption.

Interior fittings

- 1. Illuminated glove box**
(see details on the following page)
- 2. Large storage compartment (without audio system)**
- 3. 12 V accessory socket (120 W)**
Observe the maximum power rating to avoid damaging your accessory.
- 4. USB port / Auxiliary socket**
(see details on following pages)
- 5. Open storage compartments**
- 6. Cup holder**
- 7. Central armrest**
- 8. Door pockets**

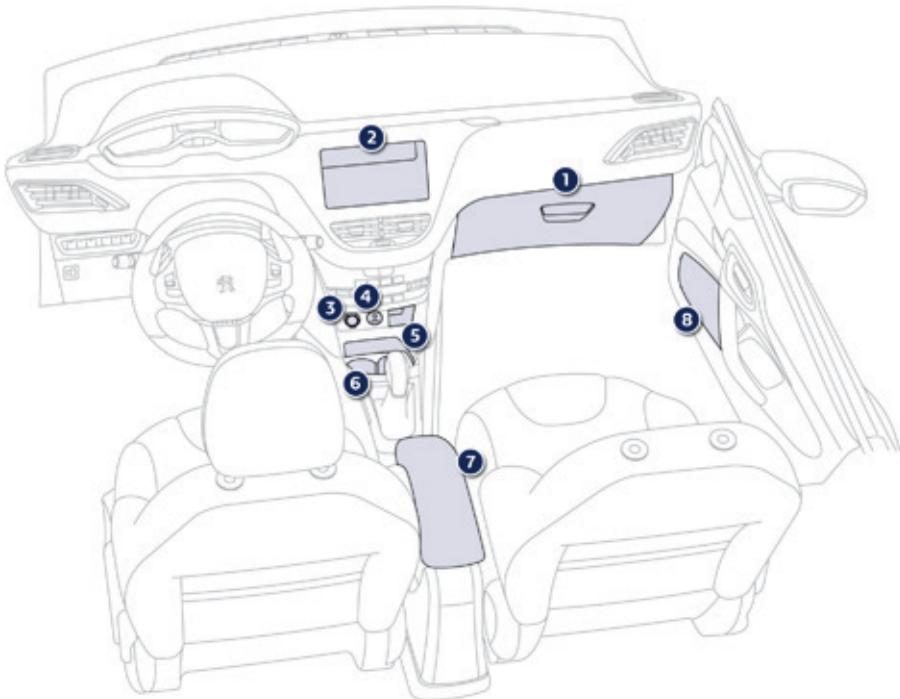

Glove box

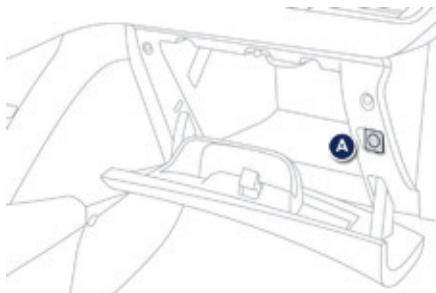

It has dedicated locations for storing a water bottle, the vehicle's handbook pack...

Its lid has locations for a pair of glasses...

☞ To open the glove box, raise the handle.

It is illuminated when the lid is opened*.

It houses the passenger's front airbag deactivation switch **A**.

12 V accessory socket



☞ To connect a 12 V accessory (maximum power: 120 Watts), lift the cover and connect a suitable adaptor.

* Depending on version.

USB port / Jack auxiliary socket



This connection box, consisting of a JACK auxiliary socket and a USB port, is located on the centre console.

It allows the connection of portable device, such as a digital audio player of the iPod® type or a USB memory stick.

It reads the audio files which are transmitted to your audio system and played via the vehicle's speakers.

You can manage these files using the steering mounted controls or the audio system control panel and display them in the instrument panel screen.


When the USB port is used, the portable device charges automatically.

i For more information on the use of this system, refer to the "Audio equipment and telematics" section.

Mats

Removable carpet protection.

Fitting

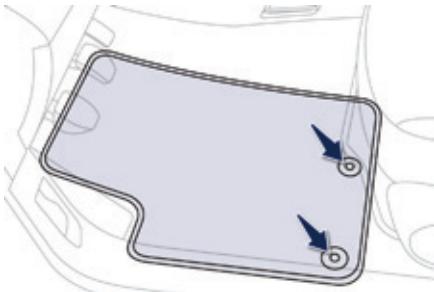

When fitting the mat for the first time, on the driver's side use only the fixings provided in the wallet attached.

The other mats are simply placed on the carpet.

Removal

To remove the mat on the driver's side:

- ☞ move the seat as far back as possible,
- ☞ unclip the fixings,
- ☞ remove the mat.

Refitting

To refit the mat on the driver's side:

- ☞ position the mat correctly,
- ☞ refit the fixings by pressing,
- ☞ check that the mat is secured correctly.



To avoid any risk of jamming of the pedals:


- only use mats which are suited to the fixings already present in the vehicle; these fixings must be used,
- never fit one mat on top of another.

The use of mats not approved by PEUGEOT may interfere with access to the pedals and hinder the operation of the cruise control / speed limiter.


The mats approved by PEUGEOT have two fixings located below the seat.

Boot fittings


1. **Rear parcel shelf**
(see following page for details)
2. **Hooks**
(see following page for details)
3. **Boot lamp**
4. **Retaining strap**
5. **Stowing rings (depending on version)**

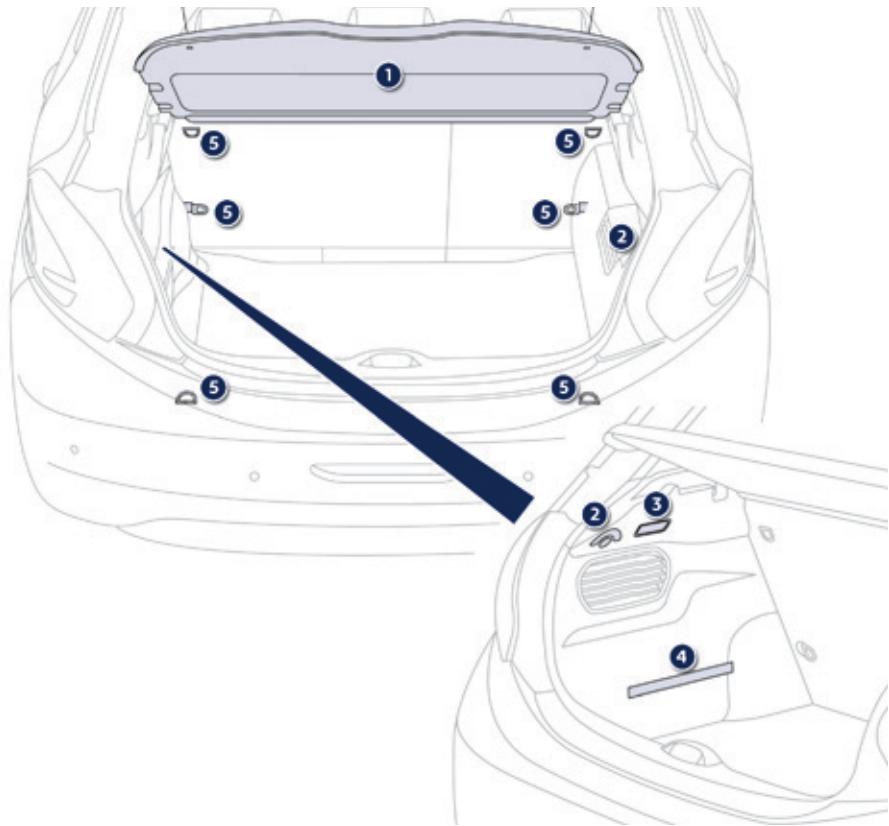

Rear parcel shelf

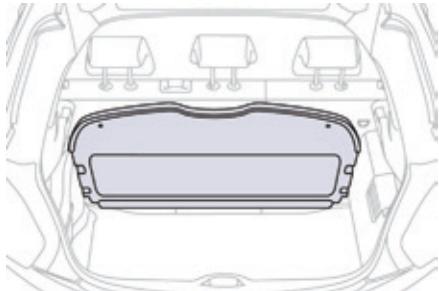

Hooks

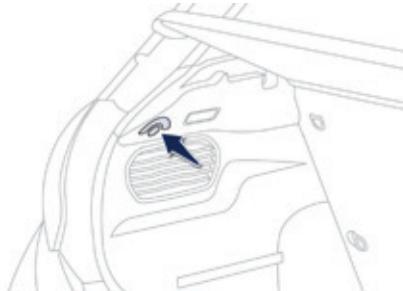

To remove the shelf:

- ☞ unhook the two cords,
- ☞ raise the shelf slightly, then remove it.

You have two storage options:


- either upright behind the front seats,
- or upright behind the rear seats.

Warning triangle (stowing)

The location for stowing a folded triangle or its box is under the front seat.



Before getting out of your vehicle to assemble the triangle and place it on the road, put on your high visibility vest.

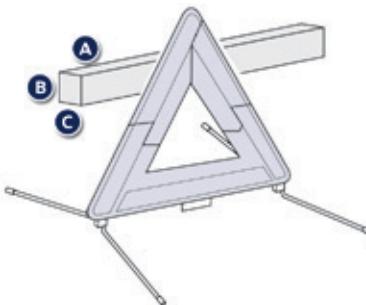

The dimensions of the triangle (once folded) or its storage box must be:

- **A:** length = **438** mm,
- **B:** height = **56** mm,
- **C:** width = **38** mm.

Refer to the manufacturer's instructions for use of the triangle.

Placing the triangle in the road

- ☞ Place the triangle at a distance behind the vehicle, as shown in the table below, according to the type of road and the level of ambient light.

Distance from your vehicle (in metres)		
Road		Motorway
Day	Night	
50 m	80 m	150 m

The triangle is available as an accessory, contact a PEUGEOT dealer or a qualified workshop.



These are the internationally recognised values. Use the triangle in line with local driving regulations.


Starting - Stopping the engine

With a **manual gearbox**, put the gear lever in neutral.

With an **electronic gearbox**, put the gear lever at **N**.

With an **automatic gearbox**, put the gear lever at **P** or **N**.

Starting the engine

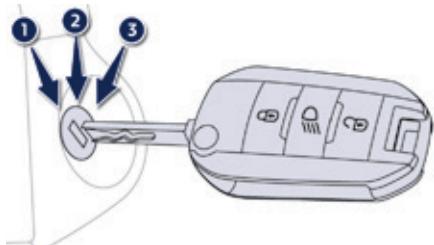

- ☞ Insert the key in the ignition switch. The system recognises the starting code.
- ☞ Turn the key fully towards the dashboard to position **3 (Starting)**.
- ☞ When the engine starts, release the key.

Switching the engine off

- ☞ Immobilise the vehicle.
- ☞ Turn the key fully towards you to position **1 (Stop)**.
- ☞ Remove the key from the ignition switch.

! Free-wheeling

For safety reasons, do not free-wheel. When free-wheeling, some vehicle functions will no longer be active.

! Switching off the engine leads to a loss of braking assistance.

! A heavy object (key fob...), attached to the key and weighing down on its shaft in the ignition switch, could cause a malfunction.

4



i Key left in the "Ignition on" position

On opening the driver's door, an alert message is displayed, accompanied by an audible signal, to remind you that the key is still in the ignition switch at position **1 (Stop)**.

If the key has been left in the ignition switch at position **2 (Ignition on)**, the ignition will be switched off automatically after one hour.

To switch the ignition back on, turn the key to position **1 (Stop)**, then back to position **2 (Ignition on)**.

Manual parking brake

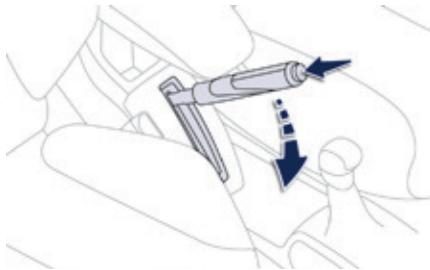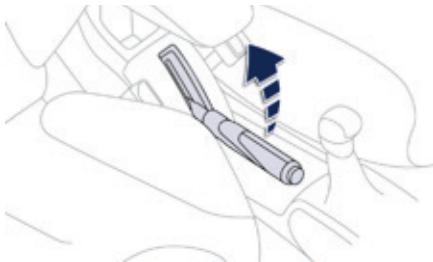

Application

- Pull the parking brake lever up to immobilise your vehicle.

Release

- Pull the parking brake lever up gently, press the release button then lower the lever fully.




When parking on a slope, direct your wheels against the kerb, apply the parking brake, engage a gear and switch off the ignition.



When the vehicle is being driven, if this warning lamp and the **STOP** warning lamp come on, accompanied by an audible signal and a message in the screen, indicating that the parking brake is still on or has not been fully released.

5-speed manual gearbox

Engaging reverse gear

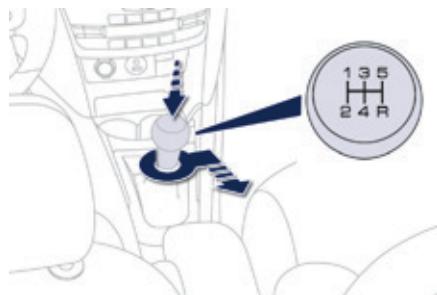

☞ Push the gear lever to the right then backwards.

! Only engage reverse gear when the vehicle is stationary with the engine at idle.

i As a safety precaution and to facilitate starting of the engine:
 - always select neutral,
 - press the clutch pedal.


6-speed manual gearbox

Engaging 5th or 6th gear

☞ Move the lever fully to the right to engage 5th or 6th gear.

! Only engage reverse gear when the vehicle is stationary with the engine at idle.

Engaging reverse gear

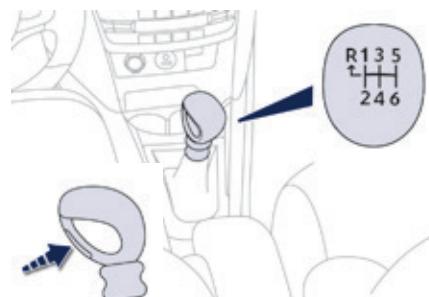

☞ Press the gear knob trigger and move the gear lever to the left then forwards.

i As a safety precaution and to facilitate starting of the engine:
 - always select neutral,
 - press the clutch pedal.

Gear shift indicator

System which reduces fuel consumption by recommending the most appropriate gear.

Operation

Depending on the driving situation and your vehicle's equipment, the system may advise you to skip one (or more) gear(s). You can follow this instruction without engaging the intermediate gears.

The gear engagement recommendations must not be considered compulsory. In fact, the configuration of the road, the amount of traffic and safety remain determining factors when choosing the best gear. Therefore, the driver remains responsible for deciding whether or not to follow the advice given by the system.


This function cannot be deactivated.

i With an electronic or automatic gearbox, the system is only active in manual mode.


Example:



- You are in third gear.

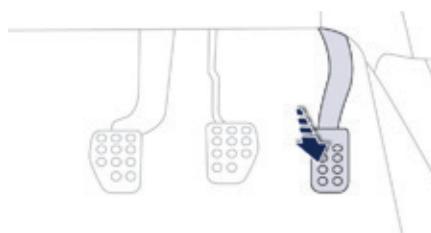

- You press the accelerator pedal.

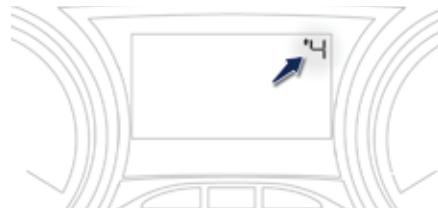

- The system may suggest that you engage a higher gear.



The information appears in the instrument panel in the form of an arrow.

i On vehicle fitted with a manual gearbox, the arrow may be accompanied by the gear recommended.

i The system adapts its gear change recommendation according to the driving conditions (slope, load, ...) and the demands of the driver (power, acceleration, braking, ...).

The system never suggests:

- engaging first gear,
- engaging reverse gear,

5-speed electronic gearbox

Five-speed electronically controlled gearbox which offers a choice between the comfort of automatic operation or the pleasure of manual gear changing.


Three driving modes are offered:

- **automated** mode for automatic control of the gears by the gearbox, without any action by the driver.
- **manual** mode for sequential gear changing by the driver, using the gear lever or the steering mounted control paddles
- **auto sequential** mode for overtaking, for example, remaining in the automated mode while using the functions of the manual mode.

!

Do not drive with your hand resting on the gear lever, as there is a risk of damaging the gearbox.

Gear lever

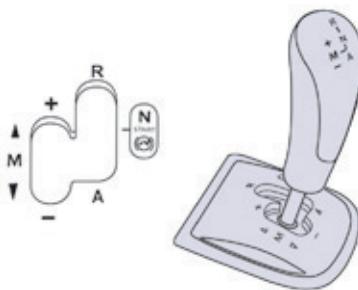

R. Reverse

With your foot on the brake, move the lever forwards to select this position.

N. Neutral

With your foot on the brake, select this position to start the engine.

A. Automated mode

Move the lever backwards to select this mode.

M. + / - Manual mode with sequential gear changing

Move the lever backwards, then to the left to select this mode, then:

- push forwards to change up a gear,
- or push backwards to change down a gear.

Steering mounted controls



4

Change up paddle.

Press the back of the steering wheel "+" paddle to change up a gear.

Change down paddle.

Press the back of the steering wheel "-" paddle to change down a gear.



The steering mounted paddles do not permit the selection of neutral or the engaging and disengaging of reverse gear.

Display in the instrument panel



Gear lever positions

N. Neutral

R. Reverse

1, 2, 3, 4, 5. Gears in manual mode

AUTO. This comes on when the automated mode is selected. It switches off on changing to manual mode.



Place your **foot on the brake** when this warning lamp flashes (e.g.: starting the engine).



There is an audible signal on engagement of reverse.

Moving off

- Select position **N**.
- Press the brake pedal fully.

- Start the engine.



N appears in the instrument panel.

i **N** flashes in the instrument panel screen if the gear lever is not in position **N** on starting.

- Select first gear (position **M** or **A**) or reverse (position **R**)
- Release the parking brake.



M or **A** appears in the instrument panel.

You must press the brake pedal firmly while starting the engine.

Stopping - Moving off on a slope

When stopping on a slope, do not use the accelerator to immobilise the vehicle; apply the parking brake.

i When moving off on a slope, accelerate gradually while releasing the parking brake.

Manual mode

- After starting the vehicle, select position **M** to change to manual mode.



AUTO disappears and the gears engaged appear in succession in the instrument panel.

The gear change commands are only carried out if the engine speed permits.

When driving at low speed, on approaching a stop sign or traffic lights for example, the gearbox changes down to first gear automatically.

Automated mode

- Following use of manual mode, select position **A** to return to automated mode.



AUTO and the gear engaged appear in the instrument panel.

The gearbox then operates in auto-adaptive mode, without any action on the part of the driver. It continuously selects the most suitable gear for:

- optimisation of fuel consumption,
- the driving style,
- the road conditions,
- the vehicle load.

i For best acceleration, when overtaking another vehicle for example, press the accelerator pedal firmly to pass the point of resistance.

"Auto sequential" mode

In automated mode, you can resume control temporarily at any time using the steering mounted control paddles.

The use of these paddles permits manual selection of the gears in situations which require a more rapid change-down than in the automated mode (arrival at a roundabout, leaving a car park with a steep gradient, overtaking...).

The gearbox engages the required gear if the engine speed permits. **AUTO** remains displayed in the instrument panel.

After a few moments, the gearbox resumes automatic control of the gears.

Creep function* (moving without use of the accelerator)

This function makes manoeuvring the vehicle smoother at low speeds (when parking, in a traffic jam, ...).

With the engine running at idle, brakes released and **A**, **M** or **R** selected, the vehicle moves as soon as you take your foot of the brake pedal (even if you do not touch the accelerator pedal).

For your safety, this function is activated only if you press the brake pedal while engaging forward drive or reverse.

It is deactivated on opening the driver's door. Close the door, then press the brake or accelerator pedal to reactivate the function.

i The vehicle does not move without pressing the accelerator pedal if the gear lever had stayed in position **N** for more than **2 seconds**, with the engine running and the brake pedal was not pressed before selecting the position **A**, **M** or **R**.

! Never leave children unsupervised inside the vehicle with the engine running.

* Only on petrol engines.

Stopping the vehicle

Before switching off the engine, you can change to position **N** to be in neutral. In this case, **you must apply the parking brake** to immobilise the vehicle.

Reinitialisation

Following disconnection of the battery, the gearbox must be reinitialised.

- ☞ Switch on the ignition.



AUTO and - appear in the instrument panel.

- ☞ Select position **N**.



- ☞ Press the brake pedal firmly.

- ☞ Wait approximately 30 seconds until **N** or a gear appears in the instrument panel.



- ☞ Release the brake pedal.

The gearbox is operational again.

Operating fault

SERVICE With the ignition on, if this warning lamp comes on and **AUTO** flashes, accompanied by an audible signal and a message in the screen, this indicates a gearbox fault.

Have it checked by a PEUGEOT dealer or a qualified workshop.

! Never select neutral **N** while the vehicle is moving.

Only engage reverse gear **R** when the vehicle is immobilised, with your foot on the brake pedal.

In all cases, you must apply the parking brake to immobilise the vehicle.

6-speed electronic gearbox


Six-speed electronic gear control gearbox which offers a choice between the comfort of fully automatic operation or the pleasure of manual gear changing.

There are two driving modes:

- **automated** mode for automatic control of the gears by the gearbox,
- **manual** mode for sequential gear changing by the driver.

In automated mode, it remains possible to change gear manually by using the steering mounted control paddles when required, when overtaking, for example.

Gear lever

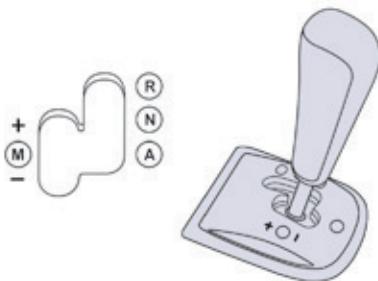

Steering mounted control paddles



4

R. Reverse

- ☞ With your foot on the brake, lift the lever and push forwards.

N. Neutral.

- ☞ With your foot on the brake, select this position to start.

A. Automated mode.

- ☞ Move the lever backwards to select this mode.

M. + / -. Manual mode with sequential gear changing.

- ☞ Move the lever to the left to select this mode, then:
 - push it forwards to change up,
 - or pull it backwards to change down.

+. Change up paddle.

- ☞ Press the back of the "+" steering mounted paddle to change up a gear.

-. Change down paddle.

- ☞ Press the back of the "-" steering mounted paddle to change down a gear.



Do not drive with your hand resting on the gear lever as there is a risk of damaging the gearbox.



The steering mounted paddles cannot be used to select neutral, or to engage or disengage reverse gear.

Display in the instrument panel



Gear lever positions

N. Neutral

R. Reverse

1, 2, 3, 4, 5, 6. Gears in manual mode

AUTO. This comes on when the automated mode is selected. It switches off on changing to manual mode.



Place your **foot on the brake** when this warning lamp is flashing (for example, when starting the engine).



Engagement of reverse gear is accompanied by an audible signal.

Moving off

- Select position **N**.
- Press the brake pedal down fully.

- Start the engine.



N appears in the instrument panel screen.

i **N** flashes in the instrument panel, accompanied by an audible signal and a message in the instrument panel screen, if the gear lever is not in position **N** on starting.



Foot on brake flashes on the instrument panel, accompanied by an audible signal and a message in the instrument panel screen, if the brake pedal is not pressed firmly on starting.

- Select automated mode (position **A**), manual mode (position **M**), or reverse (position **R**).

- Release the parking brake.



Take your foot off the brake pedal, then accelerate.

AUTO and **1**, **1** or **R** appears in the instrument panel screen.

Automated mode

- After starting the vehicle, select position **A** for enter automated mode.



AUTO and the gear engaged appear in the instrument panel screen.

The gearbox is then operating in auto-active mode, without any action on the part of the driver. It continuously selects the most suitable gear, depending on the:

- style of driving,
- profile of the road.



For optimum acceleration, for example when overtaking another vehicle, press the accelerator pedal firmly past the point of resistance.

Manual gear changing



You can change gear manually to overtake, for example, while still remaining in automatic mode.

- Operate the + or - steering mounted control paddle.

The gearbox engages the gear requested if the engine speed permits. **AUTO** is still displayed in the instrument panel.

After a few moments without any action on the controls, the gearbox resumes automatic control of the gears.

Manual mode

- When the vehicle has moved off, select position **M** to change to manual mode.
- Pull the lever towards the + sign to change up a gear.
- Push the lever towards the - sign to change down a gear.

 The gears engaged appear successively in the instrument panel screen.

The gear change requests are only carried out if the engine speed permits.

It is not necessary to release the accelerator during gear changes.

When braking or slowing down, the gearbox changes down automatically to permit acceleration in the correct gear.

 At very low speed, if reverse gear is requested, this will only be taken into account when the vehicle is immobilised. A warning lamp appears in the instrument panel screen.

 On sharp acceleration, the gearbox will not change up unless the driver acts on the gear lever or the steering mounted paddles.

Never select neutral **N** while the vehicle is moving.

Only engage reverse gear **R** when the vehicle is immobilised with the brake pedal pressed.

Creep function (moving without use of the accelerator)

This function makes manoeuvring the vehicle smoother at low speeds (when parking, in a traffic jam, ...).

With the engine running at idle, brakes released and **A**, **M** or **R** selected, the vehicle moves as soon as you take your foot of the brake pedal (even if you do not touch the accelerator pedal).

For your safety, this function is activated only if you press the brake pedal while engaging forward drive or reverse.

It is deactivated on opening the driver's door. Close the door, then press the brake or accelerator pedal to reactivate the function.

i The vehicle does not move without pressing the accelerator pedal if the gear lever had stayed in position **N** for more than **2 seconds**, with the engine running and the brake pedal was not pressed before selecting the position **A**, **M** or **R**.

! Never leave children unsupervised inside the vehicle with the engine running.

Stopping the vehicle

Before switching off the engine, you can choose to:

- move to position **N** to engage neutral,
- leave the gear engaged; in this case, it will not be possible to move the vehicle.

In both cases, you must apply the parking brake to immobilise the vehicle.

! When immobilising the vehicle, with the engine running, you must place the gear lever in neutral **N**.

Before carrying out any work in the engine compartment, check that the gear lever is in neutral **N** and that the parking brake is applied.

Operating fault

SERVICE With the ignition on, the flashing of this warning lamp and the flashing of **AUTO**, accompanied by an audible signal and a message in the instrument panel screen, indicates a malfunction of the gearbox. Have it checked by PEUGEOT or a qualified workshop.


! You must press the brake pedal firmly when starting the engine. Whatever the circumstances, you must manually apply the parking brake to immobilise the vehicle.

Automatic gearbox

Four-speed automatic gearbox which offers a choice between the comfort of fully automatic operation, enhanced by sport and snow programmes, or manual gear changing. There are therefore four driving modes:


- **automatic** operation for electronic management of the gears by the gearbox,
- **sport** programme for a more dynamic style of driving,
- **snow** programme to improve driving when traction is poor,
- **sequential** operation for manual changing of the gears by the driver.

Gear selection gate

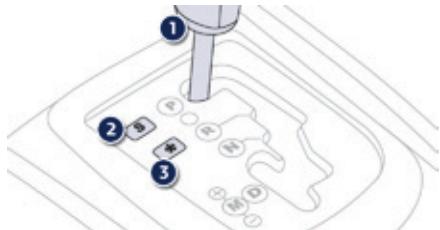

1. Gear lever.
2. Button "S" (sport).
3. Button "*" (snow).

Gear lever

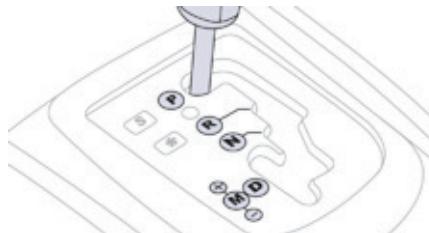

- P.** Park.
 - Immobilisation of the vehicle, parking brake on or off.
 - Starting the engine.
- R.** Reverse.
 - Reversing manoeuvres, vehicle stationary, engine at idle.
- N.** Neutral.
 - Immobilisation of the vehicle, parking brake on.
 - Starting the engine.
- D.** Automatic operation.
- M + / -.** Manual operation with sequential changing of the four gears.
 - ☞ Push forwards to change up through the gears.
or
 - ☞ Pull backwards to change down through the gears.

Displays in the instrument panel



4

When you move the lever in the gate to select a position, the corresponding indicator is displayed in the instrument panel.

- P.** Park
- R.** Reverse
- N.** Neutral
- D.** Drive (Automatic driving)
- S.** Sport programme
- ※.** Snow programme
- 1 2 3 4.** Gears engaged during manual operation
- Invalid value during manual operation

Foot on brake

☞ Press the brake pedal when this indicator lamp is displayed in the instrument panel (e.g.: starting the engine).

Moving off

- ☞ Apply the parking brake.
- ☞ Select position **P** or **N**.
- ☞ Start the engine.

If this procedure is not followed, there is an audible signal, accompanied by the display of an warning message.

-  With the engine running, press the brake pedal.
- ☞ Release the parking brake.
- ☞ Select position **R**, **D** or **M**.
-  Gradually release the brake pedal.

The vehicle moves off immediately.

 If position **N** is selected inadvertently while driving, allow the engine to return to idle then select position **D** to accelerate.

 When the engine is running at idle, with the brakes released, if position **R**, **D** or **M** is selected, the vehicle moves even without the accelerator being pressed.

When the engine is running, never leave children in the vehicle without supervision.

When carrying out maintenance with the engine running, apply the parking brake and select position **P**.

Automatic operation

- ☞ Select position **D** for **automatic** changing of the four gears.

The gearbox then operates in auto-adaptive mode, without any intervention on the part of the driver. It continuously selects the most suitable gear according to the style of driving, the profile of the road and the load in the vehicle.

For maximum acceleration without touching the gear lever, press the accelerator pedal down fully (kick down). The gearbox changes down automatically or maintains the gear selected until the maximum engine speed is reached. On braking, the gearbox changes down automatically to provide efficient engine braking.

If you release the accelerator sharply, the gearbox will not change to a higher gear for safety reasons.

 Never select position **N** while the vehicle is moving.

Never select positions **P** or **R** unless the vehicle is completely stationary.

Sport and snow programmes

These two special programmes supplement the automatic operation in very specific conditions of use.

Sport programme "S"

- ☞ Press button "S", after starting the engine. The gearbox automatically favours a dynamic style of driving.



S appears in the instrument panel.

Snow programme "※"

- ☞ Press button "※", after starting the engine. The gearbox adapts to driving on slippery roads.

This programme improves starting and drive when traction is poor.



※ appears in the instrument panel.

Return to automatic operation

- ☞ At any time, press the button selected again to quit the programme engaged and return to auto-adaptive mode.

Manual operation

- ☞ Select position **M** for **sequential** changing of the four gears.
- ☞ Push the lever towards the + sign to change up a gear.
- ☞ Pull the lever towards the - sign to change down a gear.

It is only possible to change from one gear to another if the vehicle speed and engine speed permit; otherwise, the gearbox will operate temporarily in automatic mode.



D disappears and the gears engaged appear in succession in the instrument panel.

If the engine speed is too low or too high, the gear selected flashes for a few seconds, then the actual gear engaged is displayed.

It is possible to change from position **D** (automatic) to position **M** (manual) at any time. When the vehicle is stationary or moving very slowly, the gearbox selects gear **M1** automatically.

The sport and snow programmes do not operate in manual mode.

Invalid value during manual operation



This symbol is displayed if a gear is not engaged correctly (selector between two positions).

Stopping the vehicle

Before switching off the engine, you can engage position **P** or **N** to place the gearbox in neutral. In both cases, apply the parking brake to immobilise the vehicle.



If the lever is not in position **P**, when the driver's door is opened or approximately 45 seconds after the ignition is switched off, a warning message appears in the screen.

- ☞ Return the lever to position **P**; the message disappears.

Operating fault

SERVICE When the ignition is on, the lighting of this warning lamp, accompanied by an audible signal and a message in the multifunction screen, indicates a gearbox fault. In this case, the gearbox switches to back-up mode and is locked in 3rd gear. You may feel a substantial knock when changing from **P** to **R** and from **N** to **R**. This will not cause any damage to the gearbox.

Do not exceed 60 mph (100 km/h), local speed restrictions permitting.

Contact a PEUGEOT dealer or a qualified workshop as soon as possible.



There is a risk of damage to the gearbox:

- if you press the accelerator and brake pedals at the same time,
- if you force the movement of the gear lever from the **P** position to another position when the battery is flat.

To reduce fuel consumption when at a prolonged standstill with the engine running (traffic jam...), put the gear lever in the **N** position and apply the parking brake.

Stop & Start

The Stop & Start system puts the engine temporarily into standby - STOP mode - during stops in the traffic (red lights, traffic jams, or other...).

The engine restarts automatically - START mode - as soon as you want to move off. The restart takes place instantly, quickly and silently.

Perfect for urban use, the Stop & Start system reduces fuel consumption and exhaust emissions as well as the noise level when stationary.

Operation

Going into engine STOP mode



The "ECO" warning lamp comes on in the instrument panel and the engine goes into standby:

- for **Diesel engines**:
 - with a **manual gearbox**, at speeds below 12 mph (20 km/h), when you place the gear lever into neutral, and you release the clutch pedal,
 - with an **electronic gearbox**, at speeds below 5 mph (8 km/h), when you press the brake pedal or place the gear lever into position **N**,
- for **petrol engines**, with the vehicle stationary.



A time counter calculates the sum of the periods in STOP mode during a journey. It rests itself to zero every time the ignition is switched on with the key.



For your comfort, during parking manoeuvres, STOP mode is not available for a few seconds after coming out of reverse gear. STOP mode does not affect the functionality of the vehicle, such as for example, braking, power steering...



Never refuel with the engine in STOP mode; you must switch off the ignition with the key.

Special cases: STOP mode not available

STOP mode is not invoked when:

- the driver's door is open,
- the driver's seat belt is not fastened,
- the vehicle has not exceeded 6 mph (10 km/h) since the last engine start using the key,
- the engine is needed to maintain a comfortable temperature in the passenger compartment,
- demisting is active,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed to assure control of a system.



The "ECO" warning lamp flashes for a few seconds then goes off.

This operation is perfectly normal.

Going into engine START mode

ECO The "ECO" warning lamp goes off and the engine starts:

- **with a manual gearbox**, when you depress the clutch pedal,
- **with an electronic gearbox**:
 - gear lever in position **A** or **M**, when you release the brake pedal,
 - or gear lever in position **N** and the brake pedal released, when you place the gear lever into position **A** or **M**,
 - or when you engage reverse gear.

Special cases: START invoked automatically


For reasons of safety and for your comfort, START mode is invoked automatically when:

- you open the driver's door,
- you unfasten the driver's seat belt,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed for control of a system.

ECO The "ECO" warning lamp flashes for a few seconds, then goes off.

This operation is perfectly normal.

Deactivation

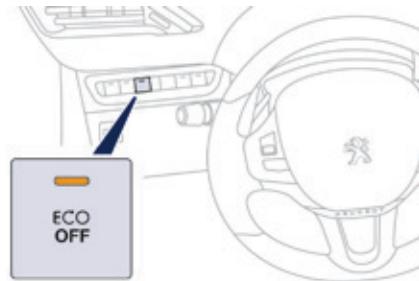

4

At any time, press the "ECO OFF" switch to deactivate the system.

This is confirmed by the switch warning lamp coming on accompanied by a message in the screen.




If the system has been deactivated in STOP mode, the engine restarts immediately.

Reactivation

Press the "ECO OFF" switch again. The system is active again; this is confirmed by the switch warning lamp going off, accompanied by a message in the screen.

i The system is reactivated automatically at every new start using the key.

Operating fault

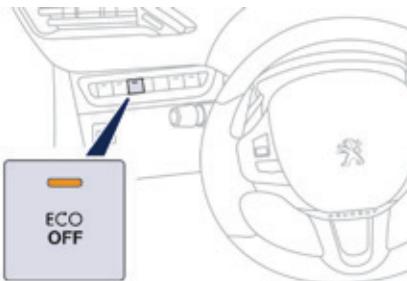

In the event of a fault with the system, the "ECO OFF" switch warning lamp flashes then comes on continuously.

Have it checked by a PEUGEOT dealer or a qualified workshop.


In the event of a fault in STOP mode, the vehicle may stall. All of the warning lamps come on. It is then necessary to switch off the ignition and start the engine again using the key.

Maintenance

! Before doing anything under the bonnet, deactivate the Stop & Start system to avoid any risk of injury resulting from automatic operation of START mode.

This system requires a battery with a special specification and technology (reference numbers available from a PEUGEOT dealer or a qualified workshop).

Fitting a battery not listed by PEUGEOT introduces the risk of malfunction of the system.

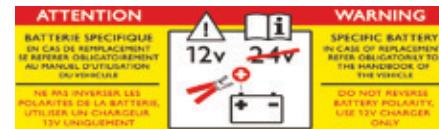

! The Stop & Start system makes use of advanced technology. All work on this type of battery must be done by a PEUGEOT dealer or a qualified workshop.

Hill start assist


System which keeps your vehicle immobilised temporarily (approximately 2 seconds) when starting on a gradient, the time it takes to move your foot from the brake pedal to the accelerator pedal.

This function is only active when:

- the vehicle is completely stationary, with your foot on the brake pedal,
- when certain conditions of gradient are met,
- with the driver's door closed.

The hill start assist function cannot be deactivated.

Operation

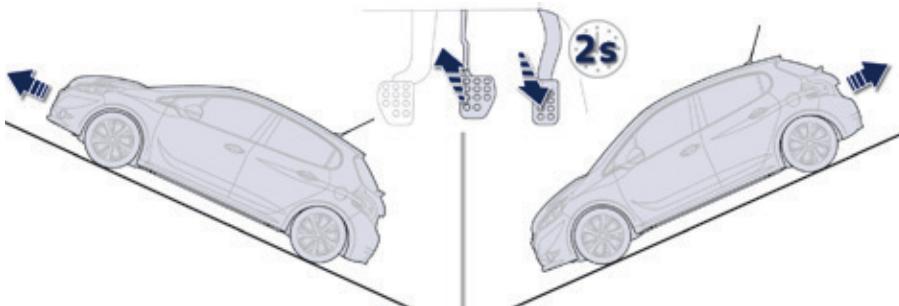

4

On an ascending slope, the vehicle is held for a brief moment when you release the brake pedal:

- if you are in first gear or neutral with a manual gearbox*,
- if you are in position **A** or **M** with an electronic gearbox,
- if you are in position **D** or **M** with an automatic gearbox.

On a descending slope, with the vehicle stationary and reverse gear engaged, the vehicle is held for a brief moment when you release the brake pedal.

Operating fault



If a fault occurs with the system, these warning lamps come on. Contact a PEUGEOT dealer or a qualified workshop to have the system checked.

! Do not leave the vehicle while it is being held in the hill start assist phase. If you need to leave the vehicle while the engine is running, apply the parking brake manually then ensure that the parking brake warning lamp is on (not flashing) in the instrument panel.

* Depending on version.

Speed limiter

System which prevents the vehicle from exceeding the speed programmed by the driver.

When the programmed speed limit is reached, pressing the accelerator pedal in the normal manner no longer has any effect.

The speed limiter is **switched on** manually: the programmed speed must be at least 20 mph (30 km/h).

The speed limiter is **switched off** by manual operation of the control.

The programmed speed can be exceeded temporarily by pressing the accelerator firmly. To return to the programmed speed, simply slow down to a speed below the programmed speed.


The programmed speed remains in the memory when the ignition is switched off.

i The speed limiter cannot, in any circumstances, replace the need to respect speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

Steering mounted controls



1. Selection of speed limiter mode.

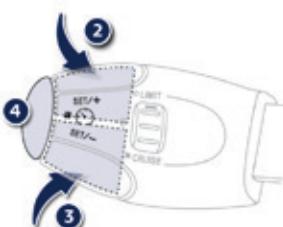

2. Increase the programmed value.
3. Decrease the programmed value.
4. Speed limiter On / Off.


Displays in the instrument panel



The programmed information is grouped together in the instrument panel screen.

5. Speed limiter on/off indication.
6. Speed limiter mode selection indication.
7. Programmed speed value.
8. Selection of a memorised speed setting.

Programming

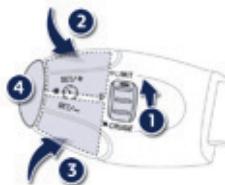

☞ Turn thumb wheel **1** to the "LIMIT" position: the speed limiter mode is selected but is not switched on (PAUSE).

You do not have to switch the speed limiter on in order to set the speed.

☞ Set the speed value by pressing button **2** or **3**.

You can then change the programmed speed using buttons **2** and **3**:

- by + or - 1 mph (km/h) = short press,
- by + or - 5 mph (km/h) = long press,
- in steps of + or - 5 mph (km/h) = maintained press.

☞ Switch the speed limiter on by pressing button **4**.

☞ Switch the speed limiter off by pressing button **4**: the display confirms that it has been switched off (PAUSE).

☞ Switch the speed limiter back on by pressing button **4** again.

Exceeding the programmed speed

Pressing the accelerator pedal to exceed the programmed speed will not have any effect unless you press the pedal **firmly** past the **point of resistance**.

The speed limiter is deactivated temporarily and the programmed speed, which is still displayed, flashes.

Returning to the programmed speed, by means of intentional or unintentional deceleration of the vehicle, automatically cancels the flashing of the programmed speed.

Leaving limiter mode


☞ Turn thumb wheel **1** to the "0" position: the speed limiter mode is deselected. The display returns to the distance recorder.

Operating fault

4



In the event of a speed limiter fault, the speed is cleared resulting in flashing of the dashes. Have it checked by a PEUGEOT dealer or a qualified workshop.

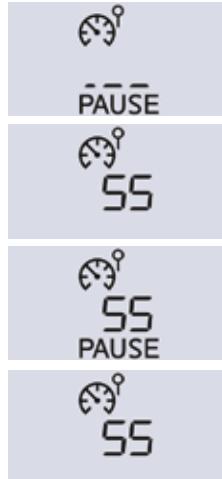

! On a steep descent or in the event of sharp acceleration, the speed limiter will not be able to prevent the vehicle from exceeding the programmed speed. To avoid any risk of jamming of the pedals:

- ensure that the mat is positioned correctly,
- do not fit one mat on top of another.

Cruise control

System which automatically maintains the speed of the vehicle at the value programmed by the driver, without any action on the accelerator pedal.

The cruise control is **switched on** manually: it requires a minimum vehicle speed of 25 mph (40 km/h), as well as the engagement of:


- fourth gear on a manual gearbox,
- second gear on an electronic or automatic gearbox, in manual sequential mode,
- position **A** on an electronic gearbox or position **D** on an automatic gearbox.

The cruise control is **switched off** manually or by pressing the brake or clutch pedal or on triggering of the electronic stability system for safety reasons.


It is possible to exceed the programmed speed temporarily by pressing the accelerator pedal. To return to the programmed speed, simply release the accelerator pedal.

Switching off the ignition cancels any programmed speed value.

Steering mounted controls

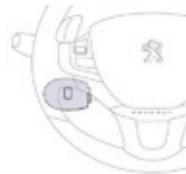

1. Selection of cruise control mode.

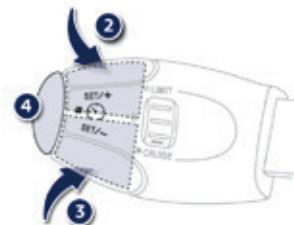

2. Increase the programmed value.
3. Decrease the programmed value.
4. Cruise control Off / Resume.

Displays in the instrument panel




The programmed information is grouped together in the instrument panel screen.

5. Cruise control stopped/resumed indication.
6. Cruise control mode selection indication.
7. Programmed speed value.
8. Selecting a memorised speed setting.

i The cruise control cannot, in any circumstances, replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

Programming

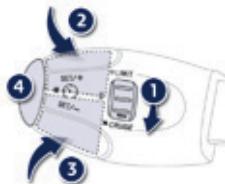

- Turn thumb wheel 1 to the "CRUISE" position: the cruise control mode is selected but is not switched on (PAUSE).
- Set the programmed speed by accelerating to the required speed, then press button 2 or 3.

You can then change the programmed speed using buttons 2 and 3:

- by + or - 1 mph (km/h) = short press,
- by + or - 5 mph (km/h) = long press,
- in steps of + or - 5 mph (km/h) = maintained press.
- Switch off the cruise control by pressing button 4: the screen confirms that it has been switched off (PAUSE).
- Switch the cruise control back on by pressing button 4 again.

Exceeding the programmed speed


Intentional or unintentional exceeding of the programmed speed results in flashing of this speed in the screen.

Return to the programmed speed, by means of intentional or unintentional deceleration of the vehicle, automatically cancels the flashing of the speed.

Leaving cruise control mode

- Turn thumb wheel 1 to the "0" position: the cruise control mode is deselected. The display returns to the distance recorder.

Operating fault

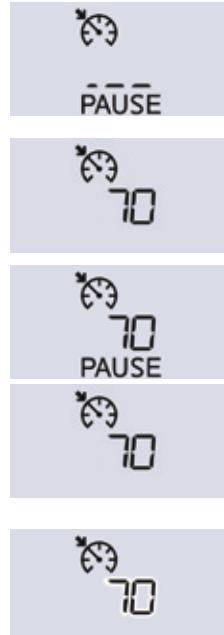

In the event of a cruise control malfunction, the speed is cleared resulting in flashing of the dashes. Have it checked by a PEUGEOT dealer or a qualified workshop.



When the cruise control is switched on, be careful if you maintain the pressure on one of the programmed speed changing buttons: this may result in a very rapid change in the speed of your vehicle.

Do not use the cruise control on slippery roads or in heavy traffic.

On a steep descent, the cruise control will not be able to prevent the vehicle from exceeding the programmed speed. To avoid any risk of jamming of the pedals:

- ensure that the mat is positioned correctly,
- never fit one mat on top of another.

Memorising speeds

This memorisation of speeds applies to both the speed limiter and the cruise control.

You can memorise up to 5 speed settings in the system. By default, a few speeds are already memorised.

Memorisation




MENU

- ☞ Go to the main menu by pressing **MENU**.
- ☞ Select the "Preferences" menu then "Vehicle".
- ☞ Select the "Vehicle configuration" menu then "Speeds memorised".
- ☞ Choose the speed setting you want to modify then select "Modify speed".
- ☞ Enter the desired speed and press confirm to save the modifications.



For safety reasons, the driver must carry out these operations when stationary.

Selection

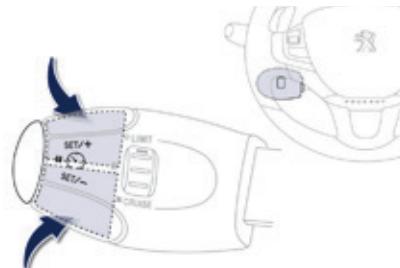

To select a memorised speed:

- ☞ press and hold button "+" or "-"; the system stops at the closest memorised speed,
- ☞ press and hold button "+" or "-" again to select another memorised speed.

A reminder of the speed and the state of the system (on / off) is displayed in the instrument panel.

Park Assist

This system provides active assistance with parking, detecting a parking space then controlling the steering to park in the space.

It controls the steering while the driver manages the accelerator, brakes, gears and clutch (manual gearbox). During phases of entry into and exit from a parking space, the system provides visual and audible information to the driver in order to make the manoeuvre safe. It may be necessary to move forwards and backwards more than once.

! The Park Assist system cannot in any circumstances replace the care and responsibility of the driver. The driver must remain in control of their vehicle ensuring that the space remains clear during the manoeuvre. In some circumstances, the sensors may not detect small obstacles located in their blind spots.


! During a manoeuvre the steering wheel turns quickly: do not hold the steering wheel, do not place your hand between the spokes of the steering wheel and take care with loose and bulky clothing, scarves, handbags... There is a risk of injury.

i For entry into a parking space (parallel parking) the system does not detect spaces which are clearly much smaller or larger than the size of the vehicle. This "parking assistance" system is activated automatically during manoeuvres; it is therefore possible that a symbol comes on in the screen, accompanied by an audible signal, without affecting the manoeuvre.

i Changing tyre sizes (out-size tyres, winter tyres, ...) can interfere with the correct operation of the parking assistance system.

i When Park Assist is activated, it prevents a change to STOP mode of Stop & Start. In STOP mode, activation of Park Assist restarts the engine.


The driver can take control at any time by gripping the steering wheel.

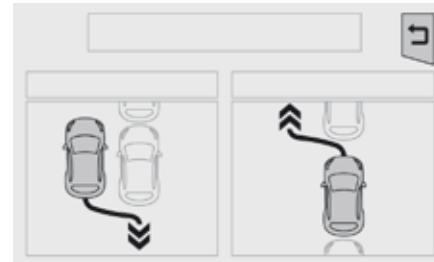


The system provides assistance in entering and exiting a parking space when parallel parking.

Entering a parking space


- When you have identified a free space, reduce the speed of the vehicle to a maximum of 12 mph (20 km/h).

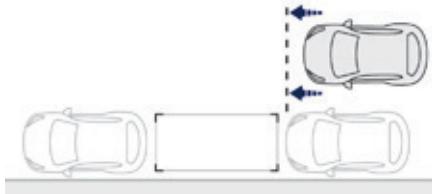

- Position your vehicle before this space.

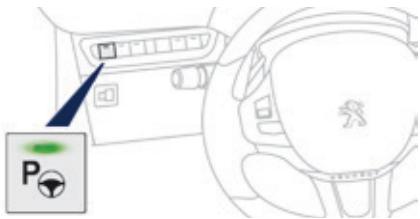

- Press this control to activate the Park Assist system. A message is displayed in the screen. The indicator lamp in the control remains off.
- Select the enter parking space manoeuvre. The indicator lamp in the control comes on.

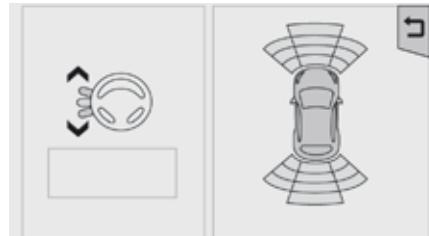

- Operate the direction indicator on the parking side.




- Move your vehicle forward until a new message is displayed.




- Move forwards alongside the parking space at a speed below 12 mph (20 km/h) to measure it, keeping at a distance of between 0.5 and 1.5 metres from the row of parked vehicles.


Once measurement is complete, if the space is large enough a message indicates that parking is possible.

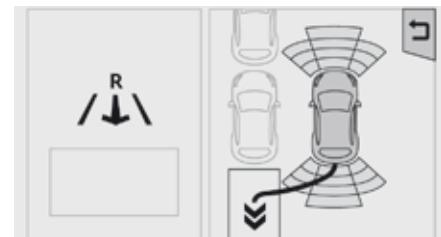

- Select reverse and release the steering wheel.

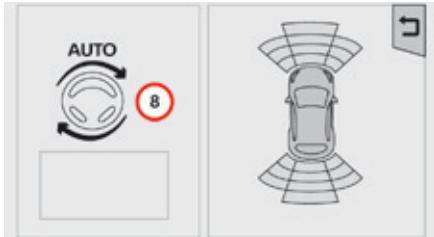

The assisted parking manoeuvre is in progress. Without exceeding 5 mph (8 km/h), continue the manoeuvres following the information given by the "parking assistance" system, until the end of manoeuvre message is displayed. The indicator lamp in the control goes off, accompanied by a audible signal.

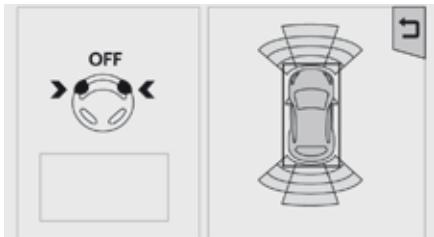


The driver takes back control of the vehicle's steering.

Exit from a parking space

- When you want to exit from a parallel parking space, start the engine.



- With the vehicle stationary, press this control to activate the Park Assist system. A message is displayed in the screen. The indicator lamp in the control remains off.
- Select the exit parking space manoeuvre. The indicator lamp in the control comes on.
- Operate the direction indicator on the exit from parking side. The direction indicator warning lamp flashes in the instrument panel throughout the manoeuvre, whatever the position of the stalk.
- Select a forward or reverse gear then release the steering wheel.

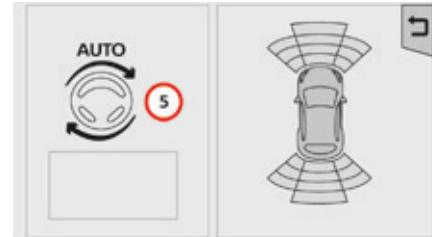

The assisted exit from parking manoeuvre is in progress. Without exceeding 5 mph (8 km/h), continue the manoeuvres following the information given by the "parking assistance" system, until the end of manoeuvre message is displayed. The manoeuvre is complete once the front wheels of the vehicle are out of the parking space. The indicator lamp in the control goes off, accompanied by a audible signal.



The driver takes back control of the vehicle's steering.


Deactivation

The system is deactivated automatically:

- on switching off the ignition,
- if the engine stalls,
- if no manoeuvre is started within 5 minutes of selection of the type of manoeuvre,
- after a prolonged stop of the vehicle during a manoeuvre,
- if the road wheel anti-spin regulation (ASR) is triggered,
- if the speed of the vehicle exceeds the stated limit,
- when the driver interrupts movement of the steering wheel,
- if the driver presses the Park Assist control,
- if correct positioning of the vehicle is not possible (too many manoeuvres needed to insert or extract the vehicle),
- if the driver's door is open,
- if one of the front wheels encounters an obstacle.

! If the system is deactivated during a manoeuvre, the drive should reactivate it manually to repeat the measurement.

A message is displayed in the screen.

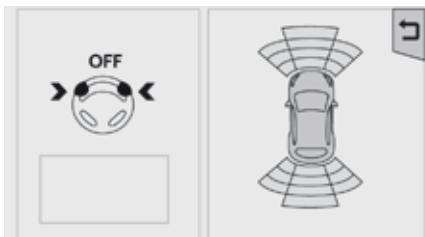

The driver then takes back control of the vehicle's steering.

Switching off

The system is switched off automatically:

- when towing a trailer,
- if the driver's door is opened,
- if the speed of the vehicle is above 42 mph (70 km/h).

To switch the system off for a prolonged period, contact a PEUGEOT dealer or a qualified workshop.

Operating faults

SERVICE In the event of a fault with the system, this warning lamp is displayed in the instrument panel and/or a message appears in the screen, accompanied by an audible signal (short beep). The indicator lamp in the control flashes for a few seconds. If the problem occurs while using the system, the indicator lamp goes off.



In the event of a fault with the power steering, these warning lamps come on in the instrument panel.


Contact a PEUGEOT dealer or a qualified workshop.

! If the lateral distance between your vehicle and the space is too great, the system may not be able to measure the space. Anything projecting beyond the envelope of the vehicle (long or wide load) is not taken into account by the Park Assist system during a manoeuvre.

i In bad weather and in winter, ensure that the sensors are not covered by road dirt, ice or snow.

In the event of a fault, have the system checked by a PEUGEOT dealer or a qualified workshop.

Parking sensors

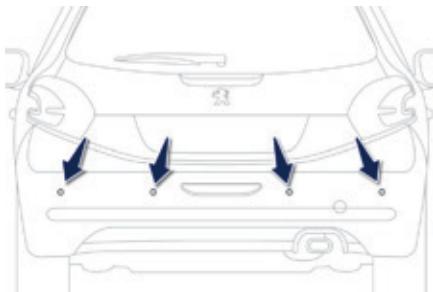


This system indicates the proximity of an obstacle (person, vehicle, tree, gate, etc.) which comes within the field of detection of sensors located in the bumper. Certain types of obstacle (stake, roadworks cone, etc.) detected initially will no longer be detected at the end of the manoeuvre due to the presence of blind spots.

! This function cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.

Rear parking sensors

The system is switched on by engaging reverse gear. This is accompanied by an audible signal. The system is switched off when you come out of reverse gear.

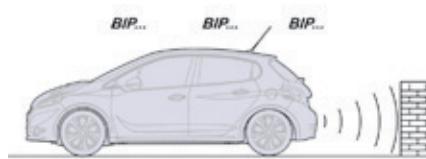

Audible assistance

The proximity information is given by an intermittent audible signal, the frequency of which increases as the vehicle approaches the obstacle. The sound emitted by the speaker (right or left) indicates the side on which the obstacle is located. When the distance between the vehicle and the obstacle becomes less than approximately thirty centimetres, the audible signal becomes continuous.



4

Visual assistance

This supplements the audible signal by displaying bars in the multifunction screen which move progressively nearer to the vehicle. When the obstacle is near, the "Danger" symbol is displayed in the screen.

Deactivation / Activation of the rear parking sensors



The function is deactivated by pressing this switch. The indicator lamp in the switch comes on. Pressing this switch again reactivates the function. The indicator lamp in the switch goes off.

i The function will be deactivated automatically if a trailer is being towed or a bicycle carrier is fitted (vehicle fitted with a towbar or bicycle carrier recommended by PEUGEOT).

Operating fault

SERVICE

In the event of a malfunction of the system, when reverse gear is engaged this warning lamp is displayed in the instrument panel and/or a message appears in the screen, accompanied by an audible signal (short beep). Contact a PEUGEOT dealer or a qualified workshop.



In bad weather or in winter, ensure that the sensors are not covered with mud, ice or snow. When reverse gear is engaged, an audible signal (long beep) indicates that the sensors may be dirty. Certain sound sources (motorcycle, lorry, pneumatic drill, etc.) may trigger the audible signals of the parking sensor system.

Lighting controls

System for selection and control of the various front and rear lamps providing the vehicle's lighting and signalling.

Main lighting

The vehicle has various lamps:

- sidelamps, to be seen,
- dipped beam headlamps to see without dazzling other drivers,
- main beam headlamps to see clearly when the road is clear,
- directional headlamps for improved visibility when cornering.

Additional lighting

Other lamps are installed to fulfil the requirements of particular driving conditions:

- a rear foglamp to better signal the presence of the vehicle in foggy conditions,
- front foglamps with cornering lighting,
- daytime running lamps to be seen during the day,
- guide-me-home and welcome lighting for leaving and entering to the vehicle.

Automatic lighting functions

Various automatic lighting functions are also available depending on options:


- guide-me-home lighting,
- cornering lighting,
- welcome lighting,
- daytime running lamps,
- automatic illumination of headlamps.




In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

Selection ring for main lighting mode

Turn the ring to position the symbol required facing the mark.

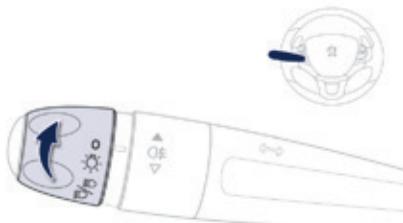


Model without AUTO lighting

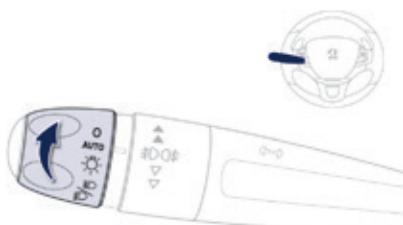

Model with AUTO lighting

	Lighting off.
	Automatic illumination of headlamps.
	Sidelamps only.
	Dipped or main beam headlamps.

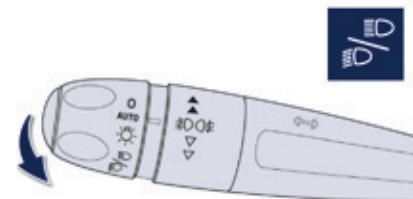

Dipping the headlamps

Pull the stalk to switch the lighting between dipped / main beam headlamps.


In the lighting off and sidelamps modes, the driver can switch on the main beam headlamps temporarily ("headlamp flash") by maintaining a pull on the stalk.

Displays

Illumination of the corresponding indicator lamp in the instrument panel confirms the lighting switched on.

Foglamps selection ring

The foglamps operate with dipped and main beam headlamps.

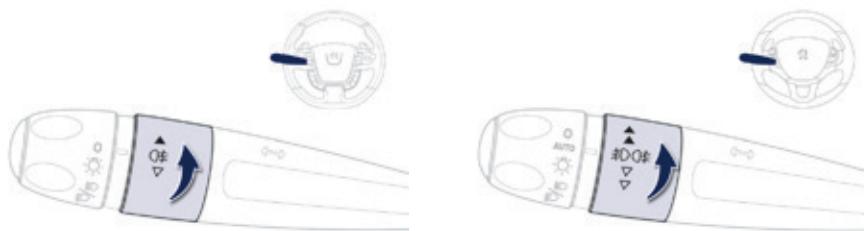

Rear foglamp only



To switch it on, turn the ring forwards.

When the lighting is switched off automatically (with AUTO model), the foglamp and the dipped beam headlamps will remain on.

To switch it off, turn the ring rearwards.

Front foglamps and rear foglamp

Rotate and release the ring:

- ☞ forwards a first time to switch on the front foglamps,
- ☞ forwards a second time to switch on the rear foglamp,
- ☞ rearwards a first time to switch off the rear foglamp,
- ☞ rearwards a second time to switch off the front fog lamps.

When the headlamps switch off with automatic illumination of headlamps (AUTO model) or when the dipped beam headlamps are switched off manually, the foglamps and sidelamps remain on.

☞ Turn the ring rearwards to switch off the foglamps, the sidelamps will then switch off.



In good or rainy weather, both day and night, the front foglamps and the rear foglamp are prohibited. In these situations, the power of their beams may dazzle other drivers. They should only be used in fog or snow.
In these weather conditions, it is your responsibility to switch on the foglamps and dipped beam headlamps manually as the sunshine sensor may detect sufficient light.
Do not forget to switch off the front foglamps and the rear foglamp when they are no longer necessary.

i Switching off the lamps when the ignition is switched off

On switching off the ignition, all of the lamps turn off immediately, except for dipped beam if guide-me-home lighting is activated.


i Switching on the lamps after the ignition is switched off

To reactivate the lighting control, rotate the ring to the "0" position - lamps off, then to the desired position.

On opening the driver's door a temporary audible signal warns the driver that the lighting is on.

The lamps, with the exception of the sidelamps, switch off automatically after a maximum duration of thirty minutes to prevent discharging of the battery.

LED lamps

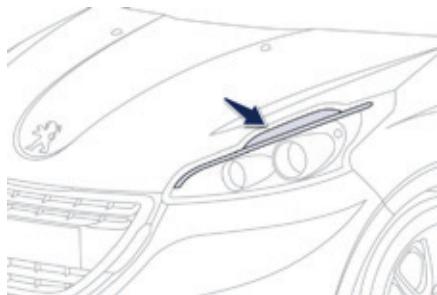

They come on when the engine is started. Depending on the country of sale, they are used for:

- daytime running lamps* in day mode and sidelamps in night mode (they are brighter when daytime running lamps),
- or
- sidelamps in day and night mode.

* Function that can be set in the vehicle configuration menu.

Daytime running lamps

Daytime lighting, compulsory in certain countries, which comes on automatically when the engine is started making the vehicle more visible to other users.

This function is assured:


- in countries where it is imposed by regulations, by illumination of the dipped beam headlamps with the sidelamps and number plate lamps; this function cannot be deactivated.
- for other countries where it is provided, by the use of dedicated lamps (bulbs or LEDs); this function can be activated or deactivated via the vehicle configuration menu.

The lighting control stalk must be placed in the "0" or "AUTO" (day mode) position. Deactivation of the daytime running lamps is effective after operation of the lighting control stalk or after the next engine start; activation is effective immediately.

The instruments and controls (instrument panel, multifunction screen, air conditioning control panel, ...) are not illuminated, except in night mode with manual or automatic illumination of headlamps.

Manual guide-me-home lighting

Temporarily keeping the dipped beam headlamps on after the vehicle's ignition has been switched off makes the driver's exit easier when the light is poor.

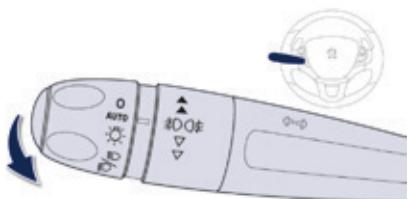

Switching on

- With the ignition off, "flash" the headlamps using the lighting stalk.
- A further "headlamp flash" switches the function off.




Manual guide-me-home lighting is also available from the remote control lighting button (see the "Remote control" section).

Switching off

The manual guide-me-home lighting switches off automatically after a set time.

Parking lamps

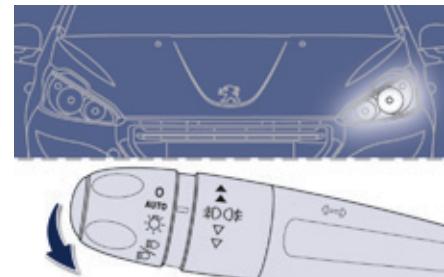

Side markers for the vehicle by illumination of the sidelamps on the traffic side only.


- Within one minute of switching off the ignition, operate the lighting control stalk up or down depending on the traffic side (for example: when parking on the left; lighting control stalk upwards; the right hand sidelamps are on).

This is confirmed by an audible signal and illumination of the corresponding direction indicator warning lamp in the instrument panel. To switch off the parking lamps, return the lighting control stalk to the middle position or switch on the ignition.

Automatic illumination of headlamps

The sidelamps and dipped beam headlamps are switched on automatically, without any action on the part of the driver, when a low level of external light is detected or in certain cases of activation of the windscreen wipers.

As soon as the brightness returns to a sufficient level or after the windscreen wipers are switched off, the lamps are switched off automatically.

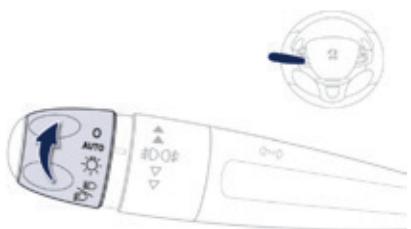

Switching on

- Turn the ring to the "AUTO" position.
Activation of the function is accompanied by a message in the screen.

Switching off

- Turn the ring to another position.
Deactivation of the function is accompanied by a message in the screen.

Automatic guide-me-home lighting

Association with the automatic lighting provides the guide-me-home lighting with the following additional options:

- selection of the lighting duration of 15, 30 or 60 seconds,
- automatic activation of guide-me-home lighting when the automatic illumination of headlamps is in operation.

Programming



The duration of the guide-me-home lighting can be set in the vehicle configuration menu.

Operating fault


SERVICE In the event of a fault with the sunshine sensor, the lighting comes on, this warning lamp is displayed in the instrument panel and/or a message appears in the screen, accompanied by an audible signal. Contact a PEUGEOT dealer or a qualified workshop.



In fog or snow, the sunshine sensor may detect sufficient light. In this case, the lighting will not come on automatically.

Do not cover the sunshine sensor, coupled with the rain sensor and located in the centre of the windscreen behind the rear view mirror; the associated functions would no longer be controlled.

Headlamp adjustment

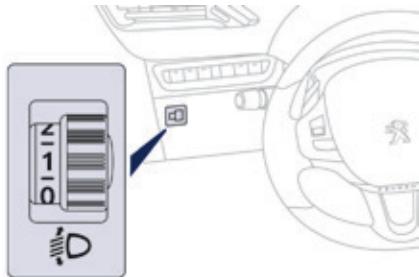

To avoid causing a nuisance to other road users, the headlamp beams should be adjusted according to the load in the vehicle.


- 0.** 1 or 2 people in the front seats.
 - Intermediate setting.
- 1.** 5 people.
 - 5 people + maximum authorised load.
- 2.** Driver + maximum authorised load.

i Travelling abroad


If using your vehicle in a country that drives on the other side of the road, the headlamps must be adjusted to avoid dazzling on-coming drivers.
Contact a PEUGEOT dealer or a qualified workshop.

i The initial setting is position "0".


Cornering lighting

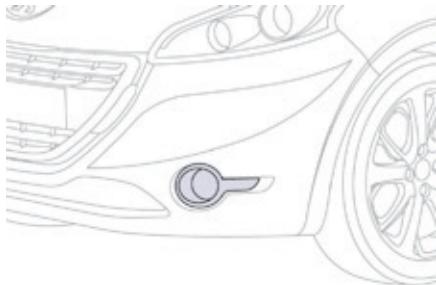

With dipped or main beams, this function makes use of the beam from a front foglamp to illuminate the inside of a bend, when the vehicle speed is below 25 mph (approximately 40 km/h) (urban driving, winding road, intersections, parking manouevres...).

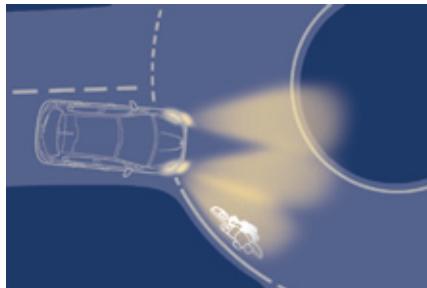

with cornering lighting

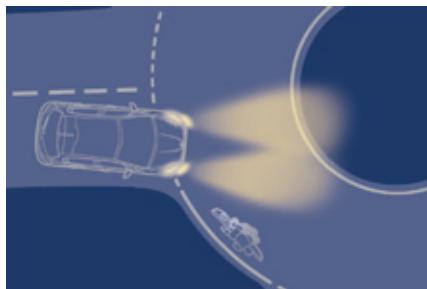

without cornering lighting

Switching on

The system operates:

- when the corresponding direction indicator is switched on, or
- from a certain angle of rotation of the steering wheel.

Switching off

The system does not operate:

- below a certain angle of rotation of the steering wheel,
- above 25 mph (40 km/h),
- when reverse gear is engaged.

Programming



The system is activated or deactivated in the vehicle configuration menu.

The system is activated by default.

Wiper controls

The vehicle's front and rear wipers are designed to improve the driver's visibility progressively according to the climatic conditions.


Programming

Various automatic wiper control modes are also available according to the following options:


- automatic rain sensitive windscreen wipers,
- rear wiping on engaging reverse gear.

Manual controls

The wipers are controlled directly by the driver.

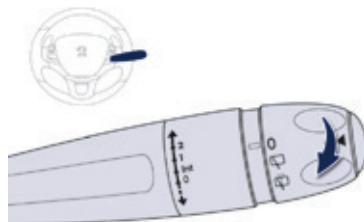

Model without AUTO wiping

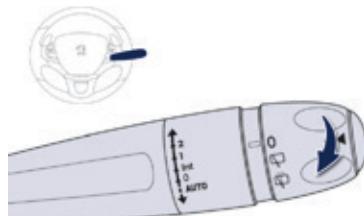


Model with AUTO wiping

Windscreen wipers

Wiping speed:

2	fast (heavy rain),
1	normal (moderate rain),
Int	intermittent (proportional to the speed of the vehicle),
0	park,
	single wipe (press down and release),
AUTO 	automatic (press down and release), single wipe (pull the stalk briefly towards you).

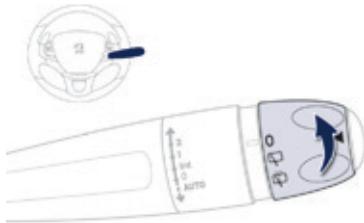

Rear wiper

Rear wiper selection ring:



park,



intermittent wipe,



wash-wipe (set duration).



If a significant accumulation of snow or ice is present, or when using a bicycle carrier on the boot, deactivate the automatic rear wiper via the vehicle configuration menu.

Reverse gear

When reverse gear is engaged, the rear wiper will come into operation if the windscreen wipers are operating.

Programming



The function is activated or deactivated via the vehicle configuration menu.



This function is activated by default.

Windscreen wash

Pull the wiper stalk towards you. The windscreen wash, then the windscreen wipers, operate for a pre-determined time.

Automatic rain sensitive windscreen wipers

The windscreen wipers operate automatically, without any action on the part of the driver, if rain is detected (sensor behind the rear view mirror), adapting their speed to the intensity of the rainfall.

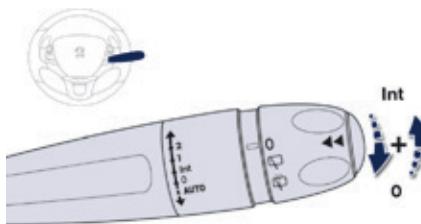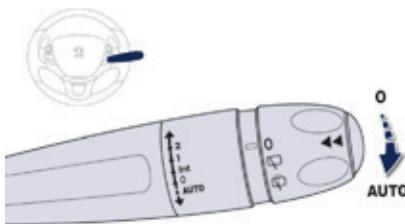

Switching on



AUTO Briefly push the control stalk downwards.
This warning lamp comes on in the instrument panel and a message is displayed.

Switching off



Briefly push the control stalk downwards again, or place the control stalk in another position (Int, 1 or 2).

This warning lamp goes off in the instrument panel and a message is displayed.

i The automatic rain sensitive windscreen wipers must be reactivated by pushing the control stalk downwards, if the ignition has been off for more than one minute.

Special position of the windscreen wipers

Operating fault


If a fault occurs with the automatic rain sensitive wipers, the wipers will operate in intermittent mode.

Have it checked by PEUGEOT dealer or a qualified workshop.



Do not cover the rain sensor, linked with the sunshine sensor and located in the centre of the windscreen behind the rear view mirror.

Switch off the automatic rain sensitive wipers when using an automatic car wash. In winter, it is advisable to wait until the windscreen is completely clear of ice before activating the automatic rain sensitive wipers.

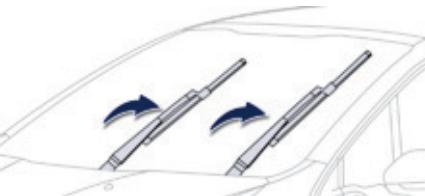

This position permits release of the windscreen wiper blades.

It is used for cleaning or replacement of the blades. It can also be useful, in winter, to detach the blades from the windscreen.


- ☞ Any action on the wiper stalk in the minute after switching off the ignition places the blades vertically on the screen.
- ☞ To park the blades again, switch on the ignition and operate the wiper stalk.



To maintain the effectiveness of the "flat-blade" type of wiper blades, it is advisable to:

- handle them with care,
- clean them regularly using soapy water,
- avoid using them to retain cardboard on the windscreen,
- replace them at the first signs of wear.

Courtesy lamp

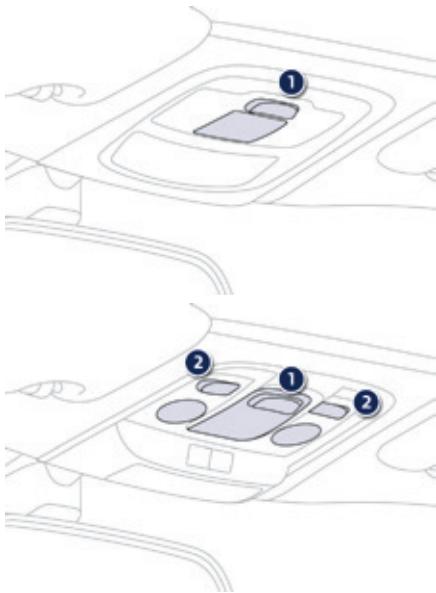

1. Front courtesy lamp
2. Map reading lamps



In this position, the courtesy lamp comes on gradually:

- when the vehicle is unlocked,
- when the key is removed from the ignition,
- when opening a door,
- when the remote control locking button is pressed, in order to locate your vehicle.

It switches off gradually:

- when the vehicle is locked,
- when the ignition is switched on,
- 30 seconds after the last door is closed.



Permanently off.



Permanent lighting.



With the "permanent lighting" mode, the lighting time varies according to the circumstances:

- with the ignition off, approximately ten minutes,
- in energy economy mode, approximately thirty seconds,
- with the engine running, unlimited.

Front map reading lamps



With the ignition on, press the corresponding switch.



Take care to avoid leaving anything in contact with the courtesy lamp.

Interior mood lighting

The dimmed passenger compartment lighting improves visibility in the vehicle when the light is poor.



Switching off

The interior mood lighting switches off automatically when the sidelamps are switched off.




Switching on

At night, interior mood light emitting diodes - LEDs (courtesy lamp, instrument panel, footwells, panoramic sunroof...) come on automatically when the sidelamps are switched on.

Settings

Illumination of the centre console and panoramic sunroof can be set from the audio system.

Direction indicators

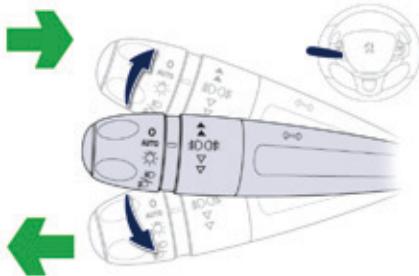

- ☞ Lower the lighting control stalk fully when moving to the left.
- ☞ Raise the lighting control stalk fully when moving to the right.

i If you forget to cancel the direction indicators for more than twenty seconds, the volume of the audible signal will increase if the speed is above 40 mph (60 km/h).


Three flashes

Move the stalk briefly upwards or downwards, without going beyond the point of resistance; the corresponding direction indicators will flash 3 times.

i This function can be used at any speed, but it is particularly useful for changing lane on fast roads.

Hazard warning lamps

A visual warning by means of the direction indicators to alert other road users to a vehicle breakdown, towing or accident.

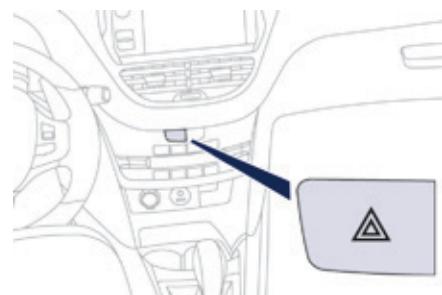

- ☞ Press this button, the direction indicators flash.

They can operate with the ignition off.


Automatic operation of hazard warning lamps

When braking in an emergency, depending on the deceleration, the hazard warning lamps come on automatically.

They switch off automatically the first time you accelerate.

- ☞ You can also switch them off by pressing the button.

Emergency or assistance call

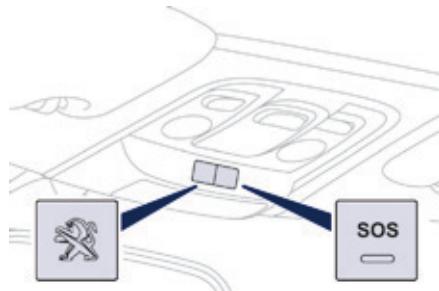


This system allows you to make an emergency or assistance call to the emergency services or to the dedicated PEUGEOT service.

For more information on the use of this function, refer to the "Audio equipment and telematics" section.

Horn

Audible warning system to alert other road users to an imminent danger.

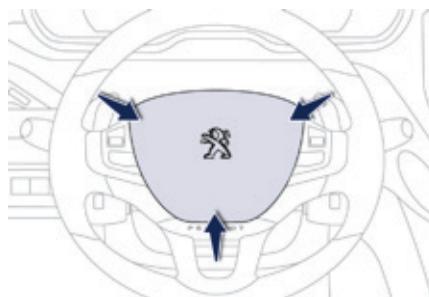

☞ Press the central part of the multifunction steering wheel.

i Use the horn moderately and only in the following circumstances:
- immediate danger,
- overtaking a cyclist or pedestrian,
- approaching a location lacking visibility.

Electronic stability control (ESC)

A set of the following Electronic Stability systems:

- anti-lock braking system (ABS) and electronic brake force distribution (EBFD),
- emergency braking assistance,
- wheel anti-slip regulation (ASR) or traction control,
- dynamic stability control (DSC).

Definitions

Anti-lock braking system (ABS) and electronic brake force distribution (EBFD)

This system improves the stability and manoeuvrability of your vehicle when braking and provides improved control in corners, in particular on poor or slippery road surfaces. The ABS prevents wheel lock in the event of emergency braking.

The electronic brake force distribution system manages the braking pressure wheel by wheel.

Anti-slip regulation (ASR)

The ASR system (also known as Traction Control) optimises traction in order to avoid wheel slip by acting on the brakes of the driving wheels and on the engine. It also improves the directional stability of the vehicle on acceleration.

Emergency braking assistance

In an emergency, this system enables you to reach the optimum braking pressure more quickly and therefore reduce the stopping distance.

It is triggered in relation to the speed at which the brake pedal is pressed. This is felt by a reduction in the resistance of the pedal and an increase in the effectiveness of the braking.

Dynamic stability control (DSC)

If there is a difference between the path followed by the vehicle and that required by the driver, the DSC monitors each wheel and automatically acts on the brake of one or more wheels and on the engine to return the vehicle to the required path, within the limits of the laws of physics.

Operation

Anti-lock braking system (ABS) and electronic brake force distribution (EBFD)


 When this warning lamp comes on, accompanied by an audible signal and a message, it indicates that there is a fault with the ABS, which could cause loss of control of the vehicle when braking.

 When this warning lamp comes on, coupled with the **STOP** warning lamp, accompanied by an audible signal and a message, it indicates that there is a fault with the electronic brake force distribution (EBFD), which could cause loss of control of the vehicle when braking.
You must stop as soon as it is safe to do so.
In both cases, contact a PEUGEOT dealer or a qualified workshop.

 When changing wheels (tyres and rims), make sure that these are approved for your vehicle.
Normal operation of the ABS may make itself felt by slight vibrations of the brake pedal.

 **In emergency braking, press very firmly without releasing the pressure.**

Dynamic stability control (DSC) and anti-slip regulation (ASR)

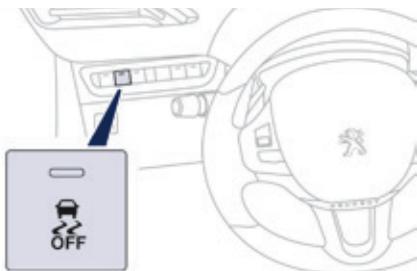

Activation

These systems are activated automatically each time the vehicle is started.

As soon as they detect a problem of grip or trajectory, these systems act on the operation of the engine and brakes.



This is indicated by flashing of this warning lamp in the instrument panel.

Deactivation

In exceptional conditions (starting a vehicle which is bogged down, stuck in snow, on soft ground...), it may be advisable to deactivate the DSC system, so that the wheels can move freely and regain grip.



But it is recommended that the system be reactivated as soon as possible.

- ☞ Press this switch.

The indicator lamp in the switch comes on: the DSC system no longer acts on the operation of the engine.

Reactivation

The system is reactivated automatically each time the ignition is switched back on or from 30 mph (50 km/h), except for 1.6 litre THP 155 and THP 200 petrol engines.



- ☞ Press this switch again to reactivate it manually.

Operating fault



If this warning lamp comes on, accompanied by an audible signal and a message in the screen, this indicates a fault with the system.


Contact a PEUGEOT dealer or a qualified workshop to have the system checked.




! The DSC system offers exceptional safety in normal driving, but this should not encourage the driver to take extra risks or drive at high speed. The correct operation of the system depends on observation of the manufacturer's recommendations regarding the wheels (tyres and rims), the braking components, the electronic components and the PEUGEOT assembly and operation procedures. After an impact, have the system checked by a PEUGEOT dealer or a qualified workshop.

Seat belts

Front seat belts

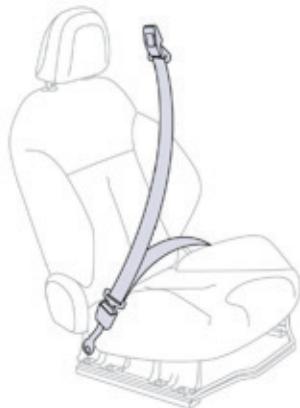

The front seat belts are fitted with a pretensioning and force limiting system. This system improves safety in the front seats in the event of a front or side impact. Depending on the severity of the impact, the pretensioning system instantly tightens the seat belts against the body of the occupants. The pretensioning seat belts are active when the ignition is on. The force limiter reduces the pressure of the seat belt on the chest of the occupant, so improving their protection.

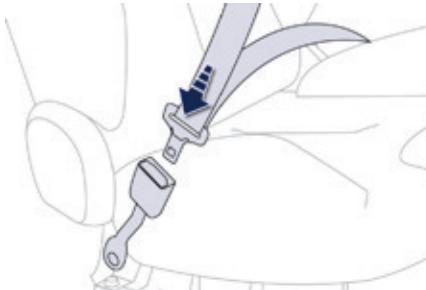


Fastening

- ☞ Pull the strap, then insert the tongue in the buckle.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.

Unfastening

- ☞ Press the red button on the buckle.
- ☞ Guide the seat belt as it reels in.

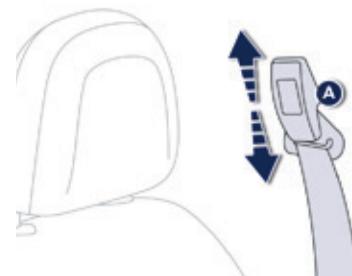

Height adjustment (5-door)

- ☞ To lower the attachment point, squeeze the control A and slide it downwards.
- ☞ To raise the attachment point, slide the control A upwards.


Seat belt not fastened / unfastened warning lamp in the instrument panel



When the ignition is switched on, this warning lamp comes on in the instrument panel.

It remains on for a certain time if the front passenger has not fastened their seat belt. Once this period has elapsed, the warning lamp goes off if the driver's seat belt is fastened. From approximately 12 mph (20 km/h) this warning lamp flashes for two minutes accompanied by an audible signal of increasing volume. Once these two minutes have elapsed, this warning lamp remains on until the driver and/or the front passenger fastens their seat belt.

Rear seat belts

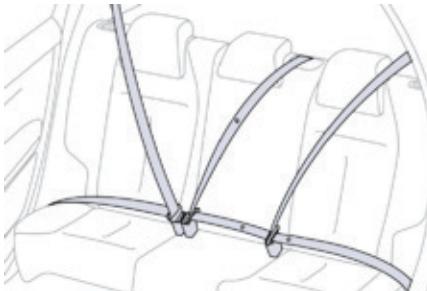

The rear seats are each fitted with a three-point seat belt, with force limiter and, for the outer seats, an effort limiter.

Fastening

- ☞ Pull the strap, then insert the tongue in the buckle.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.

Unfastening

- ☞ Press the red button on the buckle.
- ☞ Guide the seat belt as it reels in.
- ☞ On the outer seat belts, raise the bar to the top of the backrest to prevent the tongue from knocking against the side trim.

Seat belt unfastened warning lamp in the instrument panel



From approximately 12 mph (20 km/h) and for two minutes, this warning lamp flashes, accompanied by an audible signal of increasing volume, when one or more rear passengers unfasten their seat belt.

Once these two minutes have elapsed, this warning lamp remains on until the one or more rear passengers fasten their seat belt.

i The driver must ensure that passengers use the seat belts correctly and that they are all restrained securely before setting off.

Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

Do not interchange the seat belt buckles as they will not fulfil their role fully.

The seat belts are fitted with an inertia reel permitting automatic adjustment of the length of the strap to your size. The seat belt is stowed automatically when not in use. Before and after use, ensure that the seat belt is reeled in correctly.

The lower part of the strap must be positioned as low as possible on the pelvis. The upper part must be positioned in the hollow of the shoulder.

The inertia reels are fitted with an automatic locking device which comes into operation in the event of a collision, emergency braking or if the vehicle rolls over. You can release the device by pulling firmly on the strap and releasing it so that it reels in slightly.

In order to be effective, a seat belt must:

- be tightened as close to the body as possible,
- be pulled in front of you with a smooth movement, checking that it does not twist,
- be used to restrain only one person,
- not bear any trace of cuts or fraying,
- not be converted or modified to avoid affecting its performance.

In accordance with current safety regulations, for all repairs on your vehicle, go to a qualified workshop with the skills and equipment needed, which a PEUGEOT dealer is able to provide.

Have your seat belts checked regularly by a PEUGEOT dealer or a qualified workshop, particularly if the straps show signs of damage.

Clean the seat belt straps with soapy water or a textile cleaning product, sold by PEUGEOT dealers.

After folding or moving a seat or rear bench seat, ensure that the seat belt is positioned and reeled in correctly.

Recommendations for children

Use a suitable child seat if the passenger is less than 12 years old or shorter than one and a half metres.

Never use the same seat belt to secure more than one person.

Never allow a child to travel on your lap.

In the event of an impact

Depending on the nature and seriousness of the impact, the pretensioning device may be deployed before and independently of the airbags. Deployment of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

In all cases, the airbag warning lamp comes on.

Following an impact, have the seat belts system checked, and if necessary replaced, by a PEUGEOT dealer or a qualified workshop.

Airbags

System designed to maximise the safety of the occupants (with the exception of the rear centre passenger) in the event of violent collisions.


The airbags supplement the action of the force-limiting seat belts (with the exception of the centre rear passenger).

If a collision occurs, the electronic detectors record and analyse the front and side impacts sustained in the impact detection zones:

- in the case of a serious impact, the airbags are deployed instantly and contribute towards better protection of the occupants of the vehicle (with the exception of the rear centre passenger); immediately after the impact, the airbags deflate rapidly so that they do not hinder visibility or the exit of the occupants,
- in the case of a minor or rear impact or in certain roll-over conditions, the airbags will not be deployed; the seat belt alone contributes towards ensuring your protection in these situations.

! **The airbags do not operate when the ignition is switched off.**

This equipment will only deploy once. If a second impact occurs (during the same or a subsequent accident), the airbag will not be deployed again.

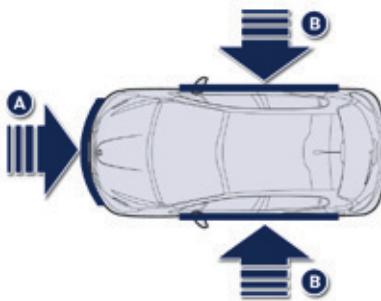


Impact detection zones

- A. Front impact zone.
- B. Side impact zone.

i Deployment of the airbag(s) is accompanied by a slight emission of smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system. This smoke is not harmful, but sensitive individuals may experience slight irritation. The noise of the detonation may result in a slight loss of hearing for a short time.

Front airbags

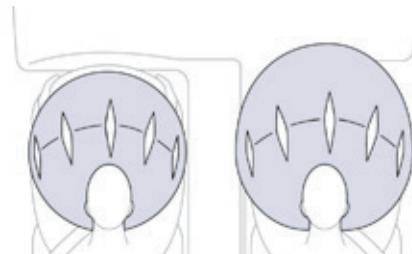

System which protects the driver and front passenger in the event of a serious front impact in order to limit the risk of injury to the head and thorax.

The driver's airbag is fitted in the centre of the steering wheel; the front passenger's airbag is fitted in the dashboard above the glove box.

Deployment

The airbags are deployed, except the passenger's front airbag if it has been deactivated, in the event of a serious front impact to all or part of the front impact zone **A**, in the longitudinal centreline of the vehicle on a horizontal plane and directed from the front to the rear of the vehicle.

The front airbag inflates between the thorax and head of the front occupant of the vehicle and the steering wheel, driver's side, and the dashboard, passenger's side to cushion their forward movement.



Deactivation

Only the passenger's front airbag can be deactivated:

- ☞ **with the ignition off**, insert the key into the passenger airbag deactivation switch, turn it to the "**OFF**" position,
- ☞ then, remove the key keeping the switch in the new position.



This warning lamp comes on in the instrument panel when the ignition is on and until the airbag is reactivated.



To assure the safety of your child, the passenger's front airbag must be deactivated when you install a "rear facing" child seat on the front passenger seat. Otherwise, the child would risk being seriously injured or killed if the airbag were deployed.

Reactivation

When you remove the child seat, **with the ignition on**, turn the switch to the "**ON**" position to reactivate the airbag and so assure the safety of your front passenger in the event of an impact.

Operating fault



If this warning lamp comes on in the instrument panel, accompanied by an audible warning and a message in the screen, contact a PEUGEOT dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



If this warning lamp flashes, contact a PEUGEOT dealer or a qualified workshop. The passenger's front airbag may no longer be deployed in the event of a serious impact.



In the event of a fault, identified by the illumination of at least one of the two airbag warning lamps, do not install a passenger (adult or child) at the front. Have it checked by a PEUGEOT dealer or qualified workshop.

Lateral airbags




System which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest, between the hip and the shoulder. Each lateral airbag is fitted in the seat backrest frame, door side.

Deployment

The lateral airbags are deployed unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The lateral airbag inflates between the hip and shoulder of the front occupant of the vehicle and the corresponding door trim panel.

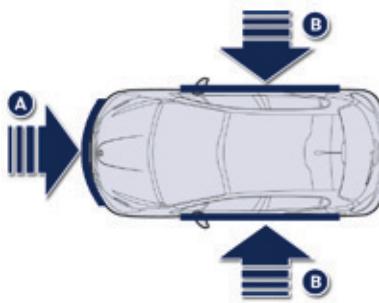

Impact detection zones

- A. Front impact zone.
- B. Side impact zone.

Deployment

The curtain airbag is deployed at the same time as the corresponding lateral airbag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The curtain airbag inflates between the front or rear occupant of the vehicle and the windows.

Operating fault



If this warning lamp comes on in the instrument panel, accompanied by an audible signal and a message in the screen, contact a PEUGEOT dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.

Curtain airbags

System which protects the driver and passengers (with the exception of the rear centre passenger) in the event of a serious side impact in order to limit the risk of injury to the side of the head. Each curtain airbag is built into the pillars and the upper passenger compartment area.



In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be deployed.

In the event of a rear or front collision, the airbag is not deployed.

! For the airbags to be fully effective, observe the following safety rules:

Sit in a normal upright position.

Wear a correctly adjusted seat belt.

Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system must be carried out by a PEUGEOT dealer or a qualified workshop.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is deployed cannot be ruled out. The bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Passengers must not place their feet on the dashboard.

If possible, do not smoke as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.

Lateral airbags

Use only approved covers on the seats, compatible with the deployment the lateral airbags. For information on the range of seat covers suitable for your vehicle, you can contact a PEUGEOT dealer.

Refer to the "Accessories" section.

Do not fix or attach anything to the seat backs (clothing...). This could cause injury to the chest or arms if the lateral airbag is deployed.

Do not sit with the upper part of the body any nearer to the door than necessary.

Curtain airbags

Do not fix or attach anything to the roof. This could cause injury to the head if the curtain airbag is deployed.

If fitted on your vehicle, do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.

General points relating to child seats

Although one of PEUGEOT main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please observe the following recommendations:

- in accordance with European regulations, **all children under the age of 12 or less than one and a half metres tall must travel in approved child seats suited to their weight**, on seats fitted with a seat belt or ISOFIX mountings*,
- **statistically, the safest seats in your vehicle for carrying children are the rear seats,**
- **a child weighing less than 9 kg must travel in the "rearward facing" position both in the front and in the rear.**



PEUGEOT recommends that children should travel in the **outer rear seats** of your vehicle:

- "rearward facing" up to the age of 3,
- "forward facing" over the age of 3.

Child seat at the rear

"Rearward facing"

When a "rearward facing" child seat is installed **on a rear passenger seat**, move the vehicle's front seat forwards and straighten the backrest so that the "rearward facing" child seat does not touch the vehicle's front seat.

"Forward facing"


When a "forward facing" child seat is installed **on a rear passenger seat**, move the vehicle's front seat forwards and straighten the backrest so that the legs of the child in the "forward facing" child seat do not touch the vehicle's front seat.



- ! Ensure that the seat belt is correctly tensioned.
For child seats with a support leg, ensure that this is in firm contact with the floor. If necessary, adjust the front seat of the vehicle.

* The rules for carrying children are specific to each country. Refer to the legislation in force in your country.

Child seat in the front

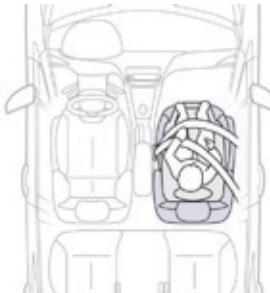

"Rearward-facing"

When a "rearward-facing" child seat is installed on the **front passenger seat**, adjust the seat to the fully back and highest position, with the backrest straightened.

The passenger airbag must be deactivated. Otherwise, **the child would risk being seriously injured or killed if the airbag were to inflate.**

"Forward-facing"

When a "forward-facing" child seat is installed on the **front passenger seat**, adjust the vehicle's seat to the fully back and highest position with seat backrest straightened and leave the passenger's airbag activated.

- i** Ensure that the seat belt is correctly tensioned.
Ensure that the child seat is not in contact with a part of the vehicle other than the passenger seat.

Passenger seat in the fully back and highest position.

6


Deactivating the passenger's front airbag

! Never install a rearward facing child restraint system on a seat protected by an active front airbag. This could cause the death of the child or serious injury.

The warning label present on both sides of the passenger's sun visor repeats this advice. In line with current legislation, the following tables contain this warning in all of the languages required.



Passenger airbag OFF

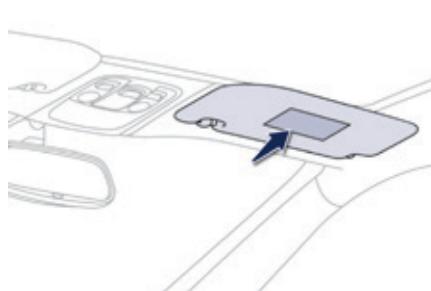

▶ For information on deactivating the passenger's front airbag, refer to the "Airbags" section.

Child seats recommended by PEUGEOT

PEUGEOT offers a complete range of recommended child seats which are secured using a **three point seat belt**.

Group 0+: from birth to 13 kg



L1

"RÖMER Baby-Safe Plus"

Installed in the rearward facing position.

Groups 2 and 3: from 15 to 36 kg



L4

"KLIPPAN Optima"

From 22 kg (approximately 6 years), the booster is used on its own.

6



L5

"RÖMER KIDFIX"

Can be fitted to the vehicle's ISOFIX mountings.

The child is restrained by the seat belt.

Locations for child seats secured with the seat belt

In accordance with the European regulation, this table indicates the options for the installation of child seats secured using the seat belt and universally approved (a) in relation to the weight of the child and the seat in the vehicle.

Weight of the child / indicative age					
Seat	Less than 13 kg (groups 0 (b) and 0+) Up to 1 year approx	From 9 to 18 kg (group 1) From 1 to 3 years approx	From 15 to 25 kg (group 2) From 3 to 6 years approx	From 22 to 36 kg (group 3) From 6 to 10 years approx	
Front passenger seat (c)					
- with height adjustment		U(R) U*	U(R) U*	U(R) U*	U(R) U*
- without height adjustment					
Outer rear seats (d)		U	U	U	U
Centre rear seat (d)		U	U	U	U

U: seat suitable for the installation of a child seat secured using the seat belt and universally approved "rearward facing" and/or "forward facing".

U(R): as for **U**, the vehicle seat must be adjusted to the highest and fully back position.

U*: as for **U**, straightening the backrest.

(a) universal child seat: child seat which can be installed in all vehicles using the seat belt.

(b) group 0: from birth to 10 kg. Infant car seats and "car cots" cannot be installed on the front passenger seat.

(c) consult the legislation in force in your country before installing your child on this seat.

(d) to install a child seat on a rear seat, rearward or forward facing, move the front seat forward, then straighten the backrest to allow enough room for the child seat and the child's legs.

! Remove and stow the head restraint before fitting a child seat with a backrest to a passenger seat. Refit the head restraint when the child seat is removed.

Advice on child seats

! The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Ensure that there is no seat belt or seat belt buckle under the child seat, as this could destabilise it.

Remember to fasten the seat belts or the child seat harnesses keeping the slack relative to the child's body to a minimum, even for short journeys.

When installing a child seat using the seat belt, ensure that the seat belt is tightened correctly on the child seat and that it secures the child seat firmly on the seat of your vehicle. If your passenger seat is adjustable, move it forwards if necessary.

At rear seating positions, always leave sufficient space between the front seat and:

- a "rearward facing" child seat,
- the child's feet for a child seat fitted "forward facing".

To do this, move the front seat forwards and, if necessary, move its backrest into the upright position.

For optimum installation of the "forward-facing" child seat, ensure that the back of the child seat is as close as possible to the backrest of the vehicle's seat, in contact if possible.

You must remove the head restraint before installing a child seat with backrest to a passenger seat.

Ensure that the head restraint is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking. Refit the head restraint when the child seat is removed.

Children at the front

The legislation on carrying children on the front passenger seat is specific to each country. Refer to the legislation in force in your country.

Deactivate the passenger airbag when a "rearward-facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs.

PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, do not leave:

- a child or children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.



To prevent accidental opening of the doors and rear windows, use the "Child lock".

Take care not to open the rear windows by more than one third.


To protect young children from the rays of the sun, fit side blinds on the rear windows.

"ISOFIX" mountings

Your vehicle has been approved in accordance with the **latest ISOFIX regulation**.
The seats, represented below, are fitted with regulation ISOFIX mountings:

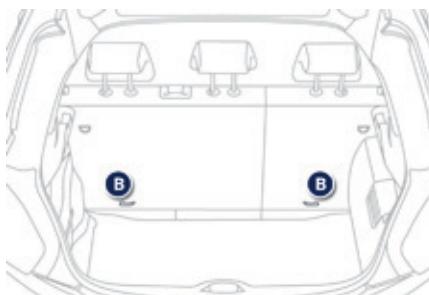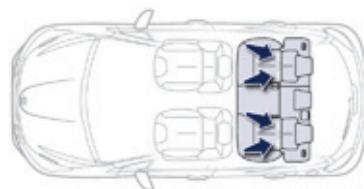

- a ring **B** behind the seat for fixing the upper strap, referred to as the **Top Tether**.

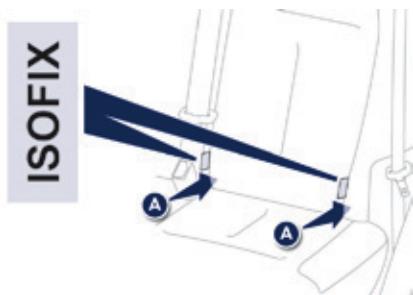

There are three rings for each seat:

- two rings **A**, hidden between the padding of vehicle seat backrest and cushion, directly below the "ISOFIX" label,

The top tether is used to secure the upper strap of child seats that have one. This arrangement limits the forward tipping of the child seat in the event of a front impact.

This ISOFIX mounting system provides fast, reliable and safe fitting of the child seat in your vehicle.

When fitting an ISOFIX child seat to the left hand rear seat, before fitting the seat, first move the centre rear seat belt towards the middle of the vehicle, so as to avoid the seat interfering with the operation of the seat belt.

The **ISOFIX child seats** are fitted with two latches which are secured on the two rings **A**.

Some seats also have an **upper strap**, known as the Top Tether, which is attached to ring **B**.

To secure the child seat to the top tether:

- remove and stow the head restraint before installing the child seat in this seating position (refit it once the child seat has been removed),
- pass the upper strap of the child seat over the top of the seat backrest, centred between the apertures for the head restraint rods,
- fix the hook of the upper strap to the ring **B**,
- tighten the upper strap.



The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.



Follow the instructions for fitting child seats contained in the seat manufacturer's installation guide.



For information on the possibilities for installing ISOFIX child seats in your vehicle, refer to the summary table.

ISOFIX child seat recommended by PEUGEOT and approved for your vehicle

RÖMER Duo Plus ISOFIX (size category B1)

Group 1: from 9 to 18 kg



Is installed in the forward facing position.

Is attached to the rings **A** and the upper ring **B**, referred to as the Top Tether, using an upper strap.
Three seat body angles: sitting, reclining, lying down.



This seat can be used on seats not fitted with ISOFIX mountings.

In this case, it must be attached to the vehicle's seat using the three-point seat belt.

Adjust the front seat of the vehicle so that the child's feet do not touch the backrest.

Follow the instructions for fitting child seats contained in the seat manufacturer's installation guide.

Locations for ISOFIX child seats

In accordance with European Regulations, this table indicates the options for installing ISOFIX child seats on seats in the vehicle fitted with ISOFIX mountings.

In the case of universal and semi-universal ISOFIX child seats, the ISOFIX size category, determined by a letter from **A** to **G**, is indicated on the child seat next to the ISOFIX logo.

Type of ISOFIX child seat	Weight of the child / indicative age									
	Less than 10 kg (group 0) Up to approx. 6 months		Less than 10 kg (group 0) Less than 13 kg (group 0+) Up to approx. 1 year			From 9 to 18 kg (group 1) From approx. 1 to 3 years				
	Infant car seat		"rearward facing"			"rearward facing"		"forward facing"		
ISOFIX size category	F	G	C	D	E	C	D	A	B	B1
Front passenger seat 	Not ISOFIX									
Outer rear seats 	X		IL-SU*	IL-SU		IL-SU*	IL-SU	IUF IL-SU		
Centre rear seat 	Not ISOFIX									

IUF: seat suitable for the installation of an Isofix **Universal** seat, "Forward facing" secured using the upper strap.

IL-SU: seat suitable for the installation of an Isofix **Semi-Universal** seat either:

- "rear facing" fitted with an upper strap or a support leg,
- "forward facing" fitted with a support leg,
- an infant car seat fitted with an upper strap or a support leg.

For advice on securing of the upper strap, refer to the paragraph "ISOFIX mountings".

X: seat not suitable for the installation of a child seat for the weight group indicated.

* Vehicle seat in a particular position: move the passenger seat forward.




Remove and stow the head restraint before installing a child seat on a passenger seat.

Refit the head restraint once the child seat has been removed.

Manual child lock

Mechanical system to prevent opening of the rear door using its interior lever.

The control is located on the edge of each rear door.

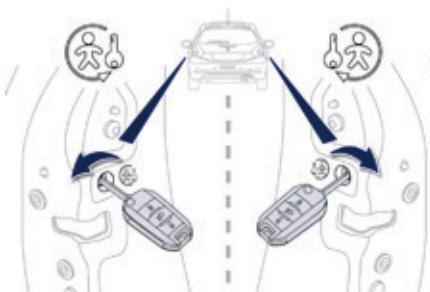

Locking


- ☞ Using the ignition key, turn the red control as far as it will go:
 - to the left on the left-hand rear door,
 - to the right on the right-hand rear door.

Unlocking

- ☞ Using the ignition key, turn the red control as far as it will go:
 - to the right on the left-hand rear door,
 - to the left on the right-hand rear door.

Electric child lock

Remote control system to prevent opening of the rear doors using their interior controls.

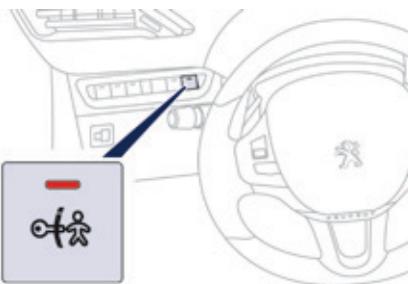

Switching on

- ☞ With the ignition on, press this button. The indicator lamp in the button comes on, accompanied by a message to confirm that the child lock is on.

This indicator lamp remains on until the child lock is switched off.

It is still possible to open the doors from the outside and operate the rear electric windows from the driver's control panel.

Switching off

- ☞ With the ignition on, press this button again.

The indicator lamp in the button goes off, accompanied by a message to confirm that the child lock is off.

This indicator lamp remains off while the child lock is switched off.

! Any other status of the indicator lamp indicates a fault with the electric child lock.

Have it checked by a PEUGEOT dealer or a qualified workshop.

! This system is independent and in no circumstances does it take the place of the central locking control.

Check the status of the child lock each time you switch on the ignition.

Always remove the key from the ignition when leaving the vehicle, even for a short time.

Temporary puncture repair kit

Complete system consisting of a compressor and a sealant cartridge which permits **temporary repair** of a tyre so that you can drive to the nearest garage. It is designed to repair most punctures which could affect the tyre, located on the tyre tread or shoulder.



Access to the kit



This kit is installed in the storage box, under the boot floor.

List of tools

All of these tools are specific to your vehicle and can vary according to equipment. Do not use them for other purposes.

1. 12 V compressor.
Contains a sealant cartridge for the temporary repair of a tyre and can also be used for adjusting tyre pressures.
2. Removable towing eye.

i For more information on the removable towing eye, refer to the "Towing the vehicle" section.

Description of the kit



- A. "Sealant" or "Air" position selector.
- B. On "I" / off "O" switch.
- C. Deflation button.
- D. Pressure gauge (in bar and p.s.i.).
- E. Compartment housing:
 - a cable with adaptor for 12 V socket,
 - various inflation adaptors for accessories, such as balls, bicycle tyres...




- F. Sealant cartridge.
- G. White pipe with cap for repair.
- H. Black pipe for inflation.
- I. Speed limit sticker.

i The speed limit sticker I must be affixed to the vehicle's steering wheel to remind you that a wheel is in temporary use. Do not exceed a speed of 50 mph (80 km/h) when driving with a tyre repaired using this type of kit.

i The vehicle's electric system allows the connection of a compressor for long enough to inflate a tyre after a puncture repair or for inflating a small inflatable accessory.

Repair procedure

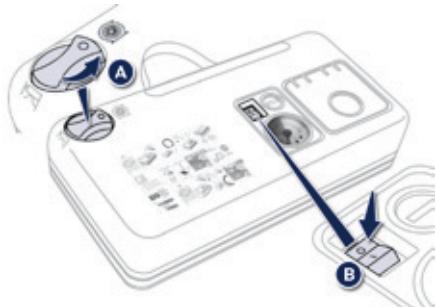


1. Sealing


- ☞ Switch off the ignition.
- ☞ Turn the selector **A** to the "sealant" position.
- ☞ Check that the switch **B** is in position "O".



i Avoid removing any foreign bodies which have penetrated into the tyre.

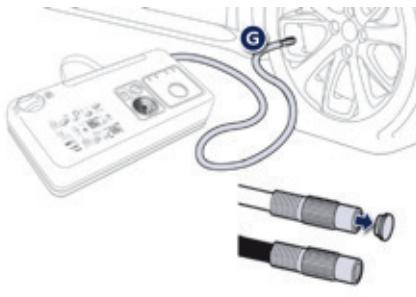


- ☞ Uncoil the white pipe **G** fully.
- ☞ Unscrew the cap from the white pipe.
- ☞ Connect the white pipe to the valve of the tyre to be repaired.

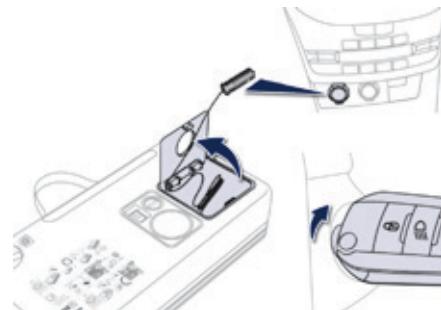


- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket.
- ☞ Start the vehicle and leave the engine running.

! Take care, this product is harmful (e.g. ethylene-glycol, colophony...) if swallowed and causes irritation to the eyes. Keep this product out of the reach of children.

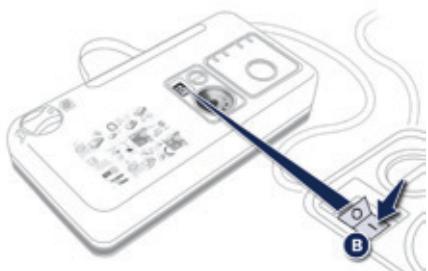


Switch on the compressor by moving the switch **B** to position "I" until the tyre pressure reaches 2.0 bars. The sealant is injected into the tyre under pressure; do not disconnect the pipe from the valve during this operation (risk of splashing).

i Do not start the compressor before connecting the white pipe to the tyre valve: the sealant product would be expelled through the pipe.

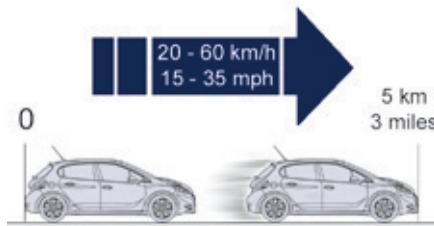

- Remove the kit and screw the cap back on the white pipe. Take care to avoid staining your vehicle with traces of fluid. Keep the kit to hand.
- Drive immediately for approximately three miles (five kilometres), at reduced speed (between 15 and 35 mph (20 and 60 km/h)), to plug the puncture.
- Stop to check the repair and the tyre pressure using the kit.

i If after around 5 to 7 minutes the pressure is not attained, this indicates that the tyre is not repairable; contact a PEUGEOT dealer or a qualified workshop for assistance.

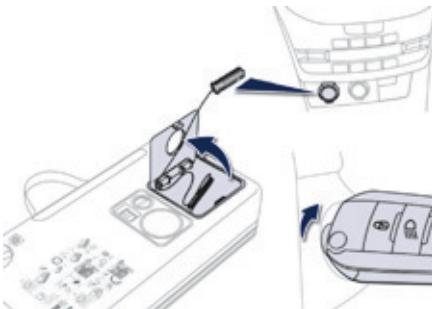

2. Inflation

- ☞ Turn the selector **A** to the "air" position.
- ☞ Uncoil the black pipe **H** fully.
- ☞ Connect the black pipe to the valve of the wheel.



- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket.
- ☞ Start the vehicle again and leave the engine running.



As soon as possible, go to a PEUGEOT dealer or a qualified workshop. You must inform the technician that you have used this kit. After inspection, the technician will advise you on whether the tyre can be repaired or if it must be replaced.

- ☞ Adjust the pressure using the compressor (to inflate: switch **B** in position "I"; to deflate: switch **B** in position "O" and press button **C**), in accordance with the vehicle's tyre pressure label (located on the left hand door aperture).

A loss of pressure indicates that the puncture has not been fully plugged; contact a PEUGEOT dealer or qualified workshop for assistance.

- ☞ Remove and stow the kit.
- ☞ Drive at reduced speed (50 mph [80 km/h] max) limiting the distance travelled to approximately 120 miles (200 km).

Removing the cartridge




- ☞ Stow the black pipe.
- ☞ Detach the angled base from the white pipe.
- ☞ Support the compressor vertically.
- ☞ Unscrew the cartridge from the bottom.



Beware of discharges of fluid.
The expiry date of the fluid is indicated on the cartridge.
The sealant cartridge is designed for single use; even if only partly used, it must be replaced.
After use, do not discard the cartridge into the environment, take it to an authorised waste disposal site or a PEUGEOT dealer.
Do not forget to obtain a new sealant cartridge, available from PEUGEOT dealers or from a qualified workshop.

Checking tyre pressures / inflating accessories

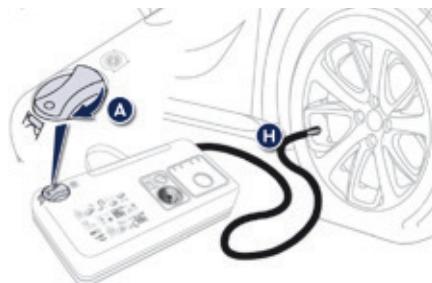

You can also use the compressor, without injecting any product, to:

- check or adjust the pressure of your tyres,
- inflate other accessories (balls, bicycle tyres...).



- ☞ Turn the selector **A** to the "Air" position.
- ☞ Uncoil the black pipe **H** fully.
- ☞ Connect the black pipe to the valve of the wheel or accessory.
If necessary, fit one of the adaptors supplied with the kit first.



- ☞ Connect the compressor's electrical connector to the vehicle's 12 V socket.
- ☞ Start the vehicle and let the engine run.
- ☞ Adjust the pressure using the compressor (to inflate: switch **B** in position "I"; to deflate: switch **B** in position "O" and press button **C**), according to the vehicle's tyre pressure label or the accessory's pressure label.
- ☞ Remove the kit then stow it.

Changing a wheel

Procedure for changing a faulty wheel for the spare wheel using the tools provided with the vehicle.


Access to the tools



The tools are installed in the boot under the floor.

To gain access to them:

- ☞ open the boot,
- ☞ lift the floor and remove it.
- ☞ remove the carrier box containing the tools.

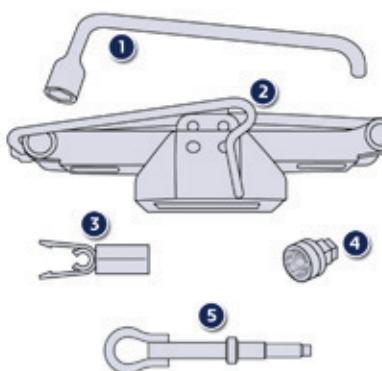

List of tools*

All of these tools are specific to your vehicle and can vary according to the level of equipment. Do not use them for other purposes.


1. Wheelbrace.
For removing the wheel trim and removing the wheel bolts.
2. Jack with integral handle.
For raising the vehicle.

* Depending on country of sale.

Access to the spare wheel

i Wheel with trim

When refitting the wheel, refit the trim starting by placing its notch facing the valve and press around its edge with the palm of your hand.

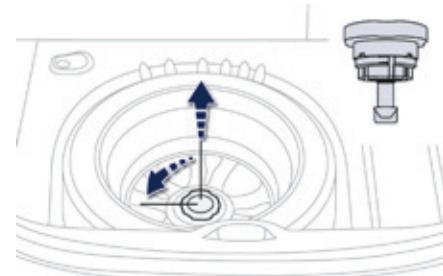


The spare wheel is installed in the boot under the floor.

According to country, the spare wheel may be steel, alloy or of the "space-saver" type.

To gain access to it, refer to the paragraph "Access to the tools" on the previous page.

Taking out the wheel

- ☞ Unscrew the yellow central bolt.
- ☞ Raise the spare wheel towards you from the rear.
- ☞ Take the wheel out of the boot.

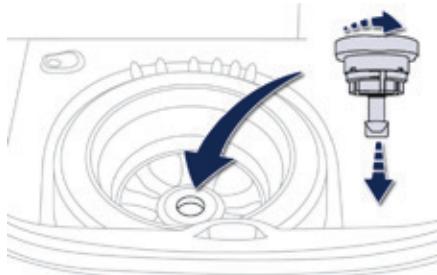

Putting the wheel back in place

- ☞ Put the wheel back in its housing.
- ☞ Unscrew the yellow central bolt by a few turns then put it in place in the centre of the wheel.
- ☞ Tighten fully until the central bolt clicks to retain the wheel correctly.
- ☞ Put the box back in the centre of the wheel and clip it in place.



Removing a wheel

i Parking the vehicle

Immobilise the vehicle where it does not block traffic: the ground must be level, stable and not slippery.

Apply the parking brake, switch off the ignition and engage first gear* to block the wheels.



Check that the parking brake warning lamps in the instrument panel come on. The occupants must get out of the vehicle and wait where they are safe. Never go underneath a vehicle raised using a jack; use an axle stand.

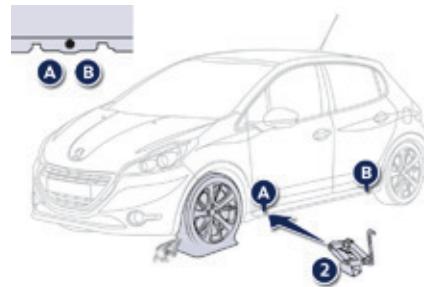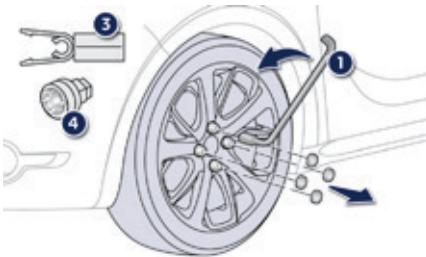

List of operations

- ☞ Remove the bolt cover from each of the bolts using the tool 3 (according to equipment).
- ☞ Fit the security socket 4 on the wheelbrace 1 to slacken the security bolt (if fitted).
- ☞ Slacken the other bolts using the wheelbrace 1 only.
- ☞ Place the foot of the jack 2 on the ground and ensure that it is directly below the front A or rear B location provided on the underbody, whichever is closest to the wheel to be changed.

* position R for an electronic gearbox; P for an automatic gearbox.

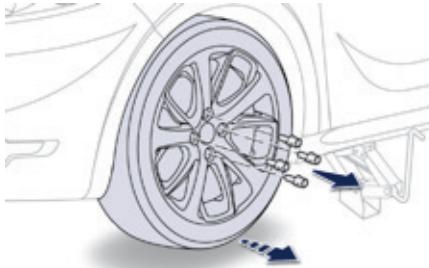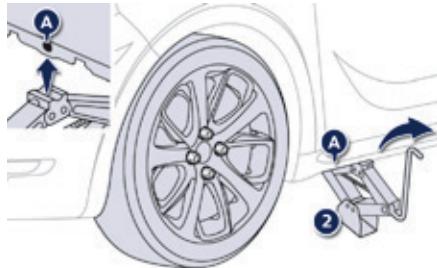

- ☞ Extend the jack **2** until it comes into contact with the location **A** or **B** used; the contact surface **A** or **B** on the vehicle must be inserted into the central part of the head of the jack.
- ☞ Raise the vehicle until there is sufficient space between the wheel and the ground to admit the spare (not punctured) wheel easily.
- ☞ Remove the bolts and store them in a clean place.
- ☞ Remove the wheel.



Ensure that the jack is stable. If the surface is slippery or loose, the jack may slip or drop - Risk of injury! Take care to position the jack only at the location **A** or **B** under the vehicle, ensuring that the contact surface on the vehicle is well centred on the head of the jack. Otherwise there is a risk of damage to the vehicle and/or of the jack dropping - Risk of injury!

Fitting a wheel



i Fitting the "space-saver" spare wheel

If your vehicle is fitted with alloy wheels, when tightening the bolts on fitting, it is normal to notice that the washers do not come into contact with the "space-saver" spare wheel. The wheel is secured by the conical surface of each bolt.

After changing a wheel

To store the punctured wheel in the boot correctly, first remove the central cover. When using the "space-saver" type spare wheel, do not exceed 50 mph (80 km/h).


Have the tightening of the bolts and the pressure of the spare wheel checked by a PEUGEOT dealer or a qualified workshop without delay.

Have the punctured wheel repaired and refitted to the vehicle as soon as possible.



List of operations

- ☞ Put the wheel in place on the hub.
- ☞ Screw in the bolts fully by hand.
- ☞ Pre-tighten the security bolt using the wheelbrace 1 fitted with the security socket 4 (if your vehicle has them).
- ☞ Pre-tighten the other bolts using the wheelbrace 1 only.

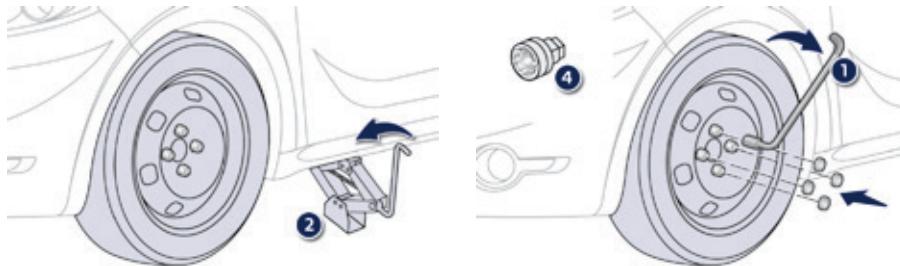

- ☞ Lower the vehicle fully.
- ☞ Fold the jack **2** and detach it.
- ☞ Tighten the security bolt using the wheelbrace **1** fitted with the security socket **4** (if your vehicle has them).
- ☞ Tighten the other bolts using the wheelbrace **1** only.
- ☞ Refit the bolt covers on each of the bolts (according to equipment).
- ☞ Store the tools in the box.

Snow chains

In wintry conditions, snow chains improve traction as well as the behaviour of the vehicle when braking.

i The snow chains must be fitted only to the front wheels. They must never be fitted to "space-saver" type spare wheels.

Use only the chains designed to be fitted to the type of wheel fitted to your vehicle:

Original tyre size	Maximum link size.
185/65 R15	9 mm
195/55 R16	
205/45 R17	7 mm

For more information on snow chains, contact a PEUGEOT dealer or a qualified workshop.

i Take account of the legislation in force in your country on the use of snow chains and the maximum running speed authorised.

Advice on installation

- ☞ If you have to fit the chains during a journey, stop the vehicle on a flat surface on the side of the road.
- ☞ Apply the parking brake and position any wheel chocks to prevent movement of your vehicle.
- ☞ Fit the chains following the instructions provided by the manufacturer.
- ☞ Move off gently and drive for a few moments, without exceeding 30 mph (50 km/h).
- ☞ Stop your vehicle and check that the snow chains are correctly tightened.

i Avoid driving on roads that have been cleared of snow, to avoid damaging your vehicle's tyres and the road surface. It is recommended that before you leave, you practise fitting the snow chains on a level and dry surface. If your vehicle is fitted with alloy wheels, check that no part of the chain or its fixings is in contact with the wheel rim.

Changing a bulb

! The headlamps are fitted with polycarbonate glass with a protective coating:

- ☞ do not clean them using a dry or abrasive cloth, nor with a detergent or solvent product,
- ☞ use a sponge and soapy water or a pH neutral product,
- ☞ when using a high pressure washer on persistent marks, do not keep the lance directed towards the lamps or their edges for too long, so as not to damage their protective coating and seals.



Changing a bulb should only be done after the headlamp has been switched off for a few minutes (risk of serious burns).

- ☞ Do not touch the bulb directly with your fingers, use a lint-free cloth.

It is imperative to use only anti-ultraviolet (UV) type bulbs to avoid damaging the headlamp.

Always replace a failed bulb with a new bulb with the same type and specification.

Front lamps

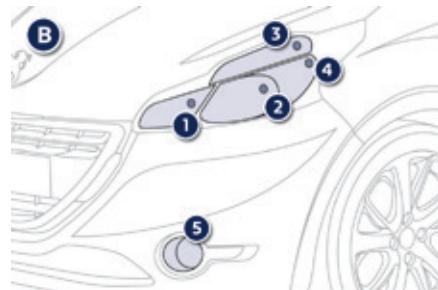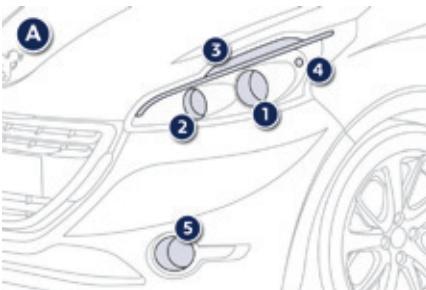


A. Model with light guide

1. Main beam headlamps (H7-55W).
2. Dipped beam headlamps (H7-55W).
3. Daytime running lamps / sidelamps (light emitting diodes - LEDs).
4. Direction indicators (PWY-24W).
5. Front foglamps (directional according to version) (H11-55W).

B. Model without light guide


1. Main beam headlamps (H7-55W).
2. Dipped beam headlamps (H7-55W).
3. Daytime running lamps / sidelamps (W5-5W).
4. Direction indicators (PWY-24W).
5. Front foglamps (directional according to version) (H11-55W).

i In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

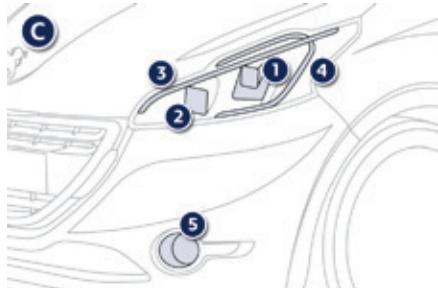

C. GTi model

1. Main beam headlamps (H7-55W).
2. Dipped beam headlamps (H7-55W).
3. Daytime running lamps / sidelamps (light emitting diodes - LEDs).
4. Direction indicators (light emitting diodes - LEDs).
5. Front foglamps (directional according to version) (H11-55W).

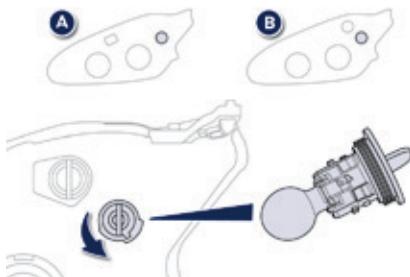


Changing direction indicator bulbs

i Rapid flashing of the direction indicator warning lamp (right or left) indicates the failure of a bulb on that side.

- ☞ Turn the bulb holder a quarter of a turn and extract it.
- ☞ Pull out the bulb and change it.


To reassemble, carry out these operations in reverse order.

i Amber coloured bulbs, such as the direction indicators, must be replaced with bulbs of identical specifications and colour.
When refitting, close the protective cover carefully to preserve the sealing of the headlamp.

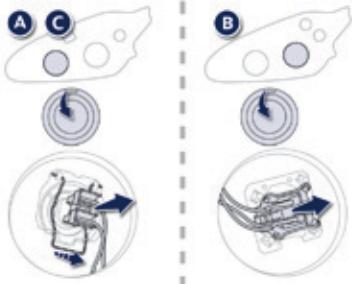


Changing dipped beam headlamp bulbs

- ☞ Remove the protective cover by pulling on the tab.
- ☞ Disconnect the bulb connector.
- ☞ Spread the spring to release the bulb (model A).
- ☞ Extract the bulb and change it.

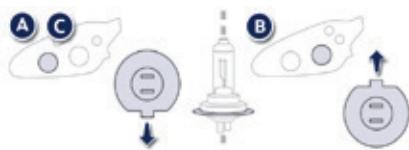


To reassemble, carry out these operations in reverse order, positioning the alignment lug at the bottom (model A) or at the top (model B).

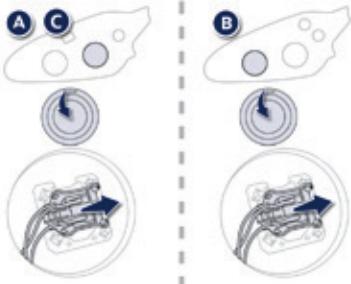


Changing main beam headlamp bulbs

- ☞ Remove the protective cover by pulling on the tab.
- ☞ Disconnect the bulb connector.
- ☞ Pull out the bulb and replace it.

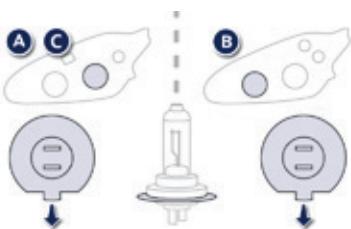


To reassemble, carry out these operations in reverse order, positioning the alignment lug at the bottom.

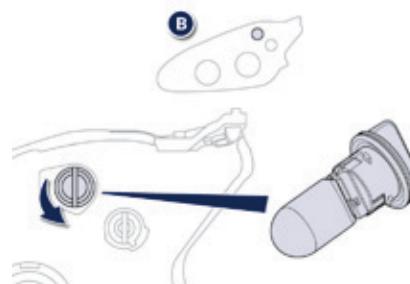

Changing daytime running lamp / sidelamp bulbs


- ☞ Turn the bulb holder a quarter turn and pull it out.
- ☞ Pull out the bulb and replace it.

To reassemble, carry out these operations in reverse order.

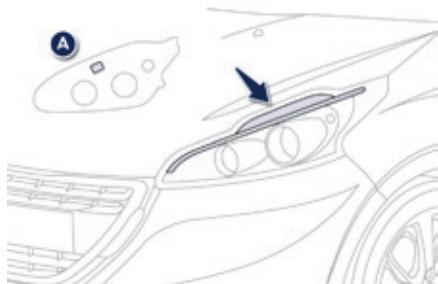

Changing the daytime running lamps / sidelamps (light-emitting diodes - LEDs)

For the replacement of this type of LED lamp, contact a PEUGEOT dealer or a qualified workshop.

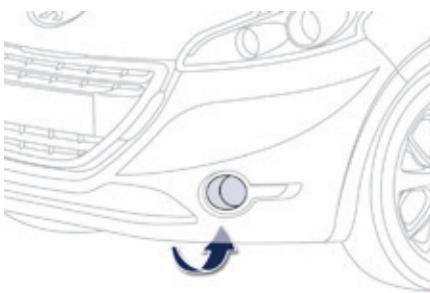


Changing front foglamp / directional lamps

- ☞ Access to the front foglamp is through the orifice below the bumper.
- ☞ Disconnect the bulb holder connector by pressing on the top of the tongue.
- ☞ Extract the bulb holder by pressing on the two clips (top and bottom).
- ☞ Replace the module.




To reassemble, carry out these operations in reverse order. To obtain this module, contact a PEUGEOT dealer or a qualified workshop. You can also contact a PEUGEOT dealer or a qualified workshop for this replacement.

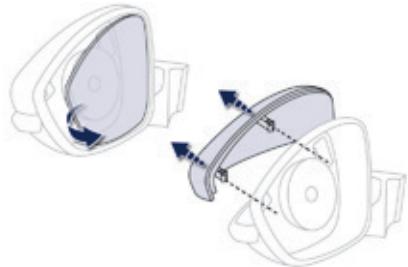


Changing integrated direction indicator side repeater bulbs

- ☞ Insert a flat screwdriver between the mirror glass and its base.
- ☞ Use the screwdriver as a lever to extract the mirror glass.
- ☞ Unclip the mirror shell by pressing on the two retaining clips.
- ☞ Press the central tongue and remove the side repeater.
- ☞ Pull the bulb holder out and replace the failed bulb.


To reassemble, carry out these operations in reverse order.
You should contact a PEUGEOT dealer or a qualified workshop for the replacement of these bulbs.

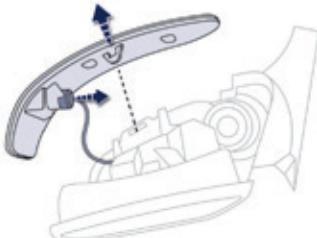


Rear lamps

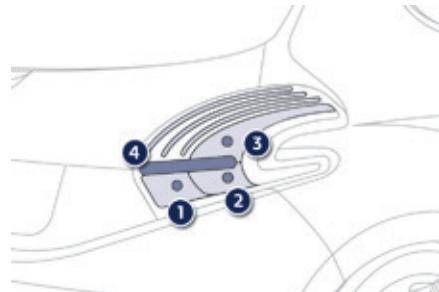

1. Brake lamps (P21W).
2. Reversing lamps (R10W).
3. Direction indicators (PY21W amber).
4. Sidelamps (light emitting diodes - LEDs).

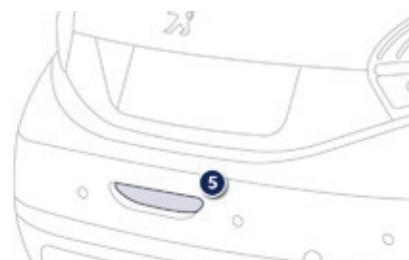

5. Foglamp (P21W).

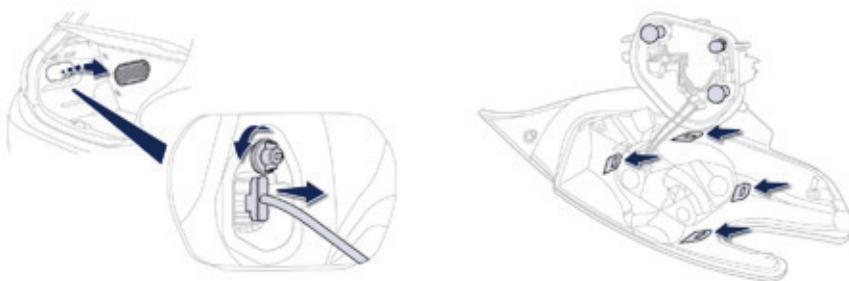

Changing the light emitting diode-LED lamps

For replacement, contact a PEUGEOT dealer or qualified workshop.


Changing brake lamp, reversing lamp and direction indicator bulbs

These three bulbs are changed from inside the boot:

- ☞ open the boot,
- ☞ remove the access grille from the corresponding side trim panel,
- ☞ slacken and remove the nut,
- ☞ disconnect the lamp unit connector,
- ☞ unclip the lamp unit carefully extract it pulling in line towards the outside,
- ☞ press the four tabs and remove the bulb holder,
- ☞ turn the bulb a quarter of a turn and change it.

To reassemble, carry out these operations in reverse order.


Take care to engage the lamp unit in its guides, while keeping it in line with the vehicle. Tighten sufficiently to ensure sealing, but without damaging the lamp.

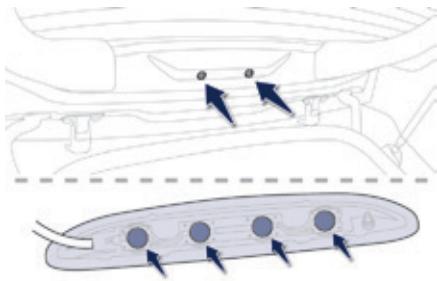

Changing the third brake lamp bulbs

- ☞ Unscrew the fixing pins on each side of the lamp, without removing them completely.
- ☞ Push on the screws to unclip the lamp.
- ☞ Disconnect the lamp connector.
- ☞ Remove the lamp from the outside.
- ☞ Turn the bulb holder which corresponds to the faulty bulb one quarter of a turn and remove it.
- ☞ Pull the bulb and change it.

To refit, carry out these operations in reverse order.

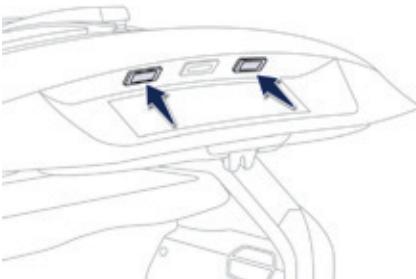

Number plate lamps

To facilitate the removal of the lamp, carry out this operation with the tailgate half open.

- ☞ Insert a thin screwdriver into the lens cutout.
- ☞ Push it outwards.
- ☞ Remove the lens.
- ☞ Change the faulty bulb.

To refit, press on the lens to clip it in place.



Changing a foglamp bulb

Access is by passing a hand under the bumper.


- ☞ Turn the bulb holder a quarter of a turn and pull it out.
- ☞ Disconnect the connector on the bulb holder.
- ☞ Pull the bulb out and change it.

To refit, carry out these operations in reverse order.

You can also contact a PEUGEOT dealer or a qualified workshop for the replacement of these bulbs.


Changing a fuse

Access to the tools

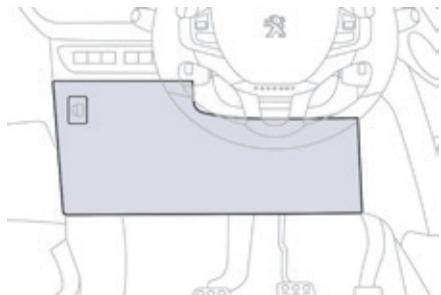

The extraction tweezer is fitted to the back of the dashboard fusebox cover.

- ☞ unclip the cover by pulling at the top left, then right,
- ☞ disengage the cover completely and turn it over,

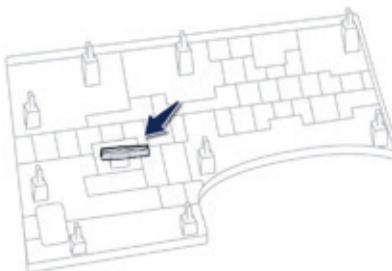

- ☞ remove the carrier on which the tweezer is fitted.

Changing a fuse


Before changing a fuse:

- ☞ the cause of the failure must be identified and rectified,
- ☞ all electrical consumers must be switched off,
- ☞ the vehicle must be immobilised with the ignition off,
- ☞ identify the failed fuse using the tables and layout drawings in the following pages.

To replace a fuse, you must:

- ☞ use the special tweezer to extract the fuse from its housing and check the condition of its filament.
- ☞ always replace the failed fuse with a fuse of the same rating (same colour); using a different rating could cause faults (risk of fire).

If the fuse fails again soon after replacement, have the vehicle's electrical system checked by a PEUGEOT dealer or a qualified workshop.

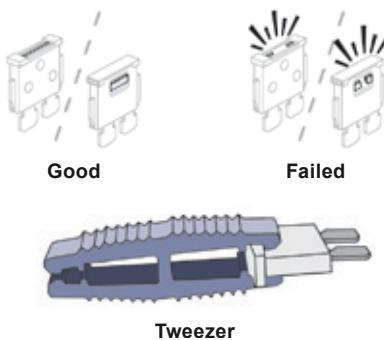


! The replacement of a fuse not shown in the tables below may cause a serious malfunction of your vehicle. Contact a PEUGEOT dealer or a qualified workshop.

Installing electrical accessories

Your vehicle's electrical system is designed to operate with standard or optional equipment. Before installing other electrical equipment or accessories on your vehicle, contact a PEUGEOT dealer or a qualified workshop.

! PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying malfunctions resulting from the installation of accessories not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular when the combined consumption of all of the additional equipment connected exceeds 10 milliamperes.

Dashboard fuses

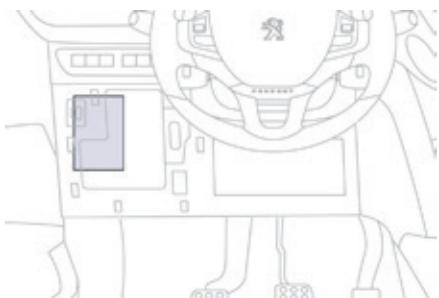


The fusebox is placed in the lower dashboard (left-hand side).


Access to the fuses

- ☞ Refer to the paragraph "Access to the tools".

Fuse tables



Fuse N°	Rating	Functions
F2	5 A	Door mirrors, headlamps, diagnostic socket.
F9	5 A	Alarm.
F10	5 A	Independent telematic unit, trailer interface.
F11	5 A	Electrochrome rear view mirror, additional heating.
F13	5 A	Hi-Fi amplifier, parking sensors.
F16	15 A	Front 12 V socket.
F17	15 A	Audio system, audio system (accessory).
F18	20 A	Touch screen.

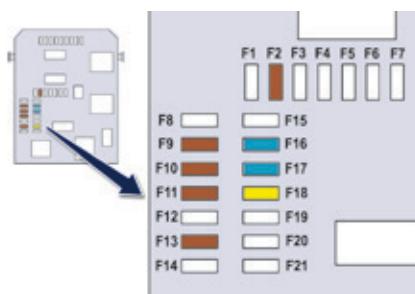

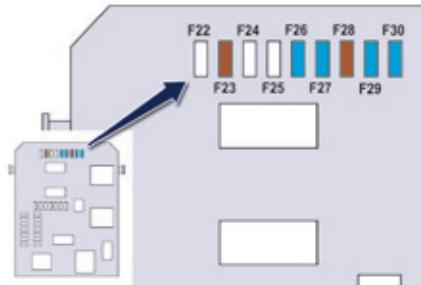


Fuse N°	Rating	Functions
F23	5 A	Glove box lamp, courtesy mirror, map reading lamps.
F26	15 A	Horn.
F27	15 A	Screenwash pump.
F28	5 A	Anti-theft.
F29	15 A	Air conditioning compressor.
F30	15 A	Rear wiper.

Fuses behind the glove box

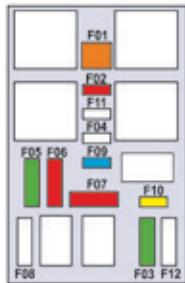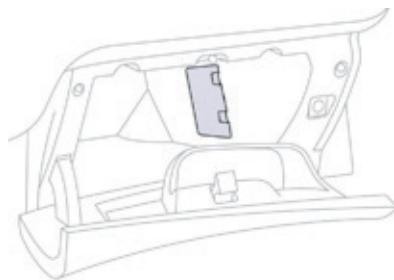

Fuse N°	Rating	Functions
F01	40 A	Heated rear window.
F02	10 A	Heated door mirrors.
F03	30 A	Front one-touch windows.
F04	-	Not used.
F05	30 A	Rear one-touch windows.
F06	10 A	Folding door mirrors.
F07	10 A	Folding door mirrors.
F08	-	Not used.
F09	15 A	Front heated seats.
F10	20 A	Hi-Fi amplifier.
F11	-	Not used.
F12	-	Not used.

Engine compartment fuses

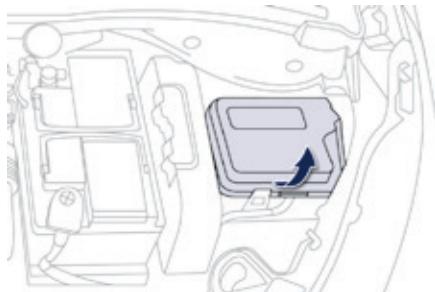


The fusebox is placed in the engine compartment near the battery (left-hand side).

Access to the fuses

- ☞ Unclip the cover.
- ☞ Change the fuse (see corresponding paragraph).
- ☞ When you have finished, close the cover carefully to ensure correct sealing of the fusebox.

Fuse table


Fuse N°	Rating	Functions
F16	15 A	Front foglamps.
F18	10 A	Right hand main beam headlamp.
F19	10 A	Left hand main beam headlamp.
F25	30 A	Headlamp wash relay (accessory).
F29	40 A	Front wiper motor.
F30	80 A	Pre-heater plugs (Diesel).

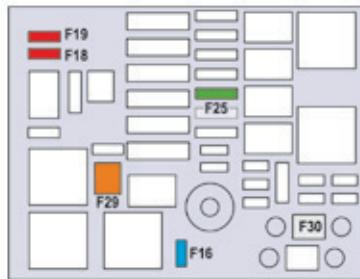


Battery

Procedure for charging your battery when it is flat or for starting the engine using another battery.

Access to the battery

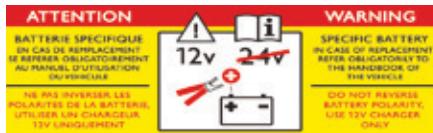

! The presence of this label indicates the use of a 12 V lead-acid battery with special technology and specification, for which the involvement of a PEUGEOT dealer or qualified workshop is required when replacing or disconnecting the battery. Failure to observe this recommendation may cause premature wear of the battery.

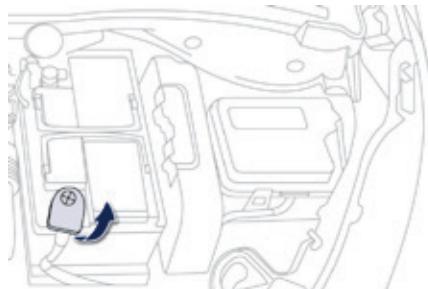


The battery is located under the bonnet. To gain access to it:

- ☞ open the bonnet using the interior release lever, then the exterior safety catch,
- ☞ secure the bonnet stay,
- ☞ remove the plastic cover on the (+) terminal.

! After refitting the battery, the Stop & Start system will only be active after several hours depending on the climatic conditions and the state of charge of the battery (up to about 8 hours).

Disconnecting the (+) cable

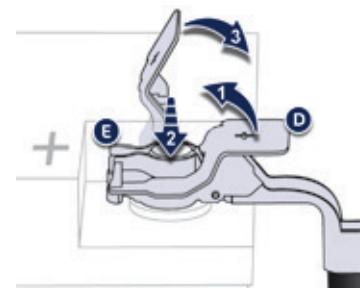

☞ Raise the locking tab D fully to release the cable terminal clamp E.

Reconnecting the (+) cable

☞ Position the open clamp E of the cable on the positive post (+) of the battery.

☞ Press vertically on the clamp E to position it correctly on the battery.

☞ Lock the clamp by spreading the positioning lug and then lowering the tab D.


! Do not apply excessive force on the tab as locking will not be possible if the clamp is not positioned correctly; start the procedure again.

Starting using another battery

When your vehicle's battery is discharged, the engine can be started using a slave battery (external or on another vehicle) and jump lead cables.

i First check that the slave battery has a nominal voltage of 12 V and a capacity at least equal to that of the discharged battery.

! Do not try to start the engine by connecting a battery charger. Do not disconnect the (+) terminal when the engine is running.

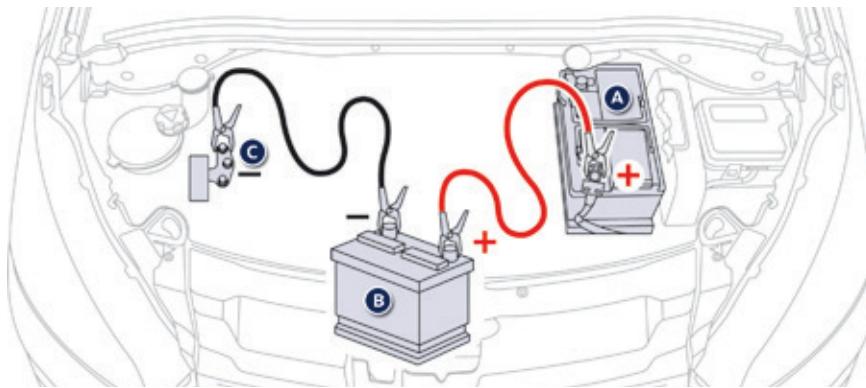

- ☞ Connect the red cable to the positive terminal (+) of the flat battery **A**, then to the positive terminal (+) of the slave battery **B**.
- ☞ Connect one end of the green or black cable to the negative terminal (-) of the slave battery **B** (or earth point on the other vehicle).
- ☞ Connect the other end of the green or black cable to the earth point **C** on the broken down vehicle (or on the engine mounting).
- ☞ Start the engine of the vehicle with the good battery and leave it running for a few minutes.
- ☞ Operate the starter on the broken down vehicle and let the engine run. If the engine does not start straight away, switch off the ignition and wait a few moments before trying again.
- ☞ Wait until the engine returns to idle then disconnect the jump lead cables in the reverse order.

Charging the battery using a battery charger

- Disconnect the battery from the vehicle.
- Follow the instructions for use provided by the manufacturer of the charger.
- Connect the battery starting with the negative terminal (-).
- Check that the terminals and connectors are clean. If they are covered with sulphate (whitish or greenish deposit), remove them and clean them.

 The Stop & Start battery does not have to be disconnected for charging.

 The batteries contain harmful substances such as sulphuric acid and lead. They must be disposed of in accordance with regulations and must not, in any circumstances, be discarded with household waste. Take used remote control batteries and vehicle batteries to a special collection point.

 It is advisable to disconnect the battery if the vehicle is to be left unused for more than one month.

 Protect your eyes and face before handling the battery. All operations on the battery must be carried out in a well ventilated area and away from naked flames and sources of sparks, so as to avoid the risk of explosion or fire. Do not try to charge a frozen battery; the battery must first be thawed out to avoid the risk of explosion. If the battery has been frozen, before charging have it checked by a PEUGEOT dealer or a qualified workshop who will check that the internal components have not been damaged and the casing is not cracked, which could cause a leak of toxic and corrosive acid. Do not reverse the polarity and use only a 12 V charger. Do not disconnect the terminals while the engine is running. Do not charge the batteries without disconnecting the terminals first. Wash your hands afterwards.

Do not push the vehicle to start the engine if you have an electronic or automatic gearbox.

Before disconnecting the battery

Wait 2 minutes after switching off the ignition before disconnecting the battery. Close the windows and the doors before disconnecting the battery.

Following reconnection of the battery

Following reconnection of the battery, switch on the ignition and wait 1 minute before starting to permit initialisation of the electronic systems. However, if problems remain following this operation, contact a PEUGEOT dealer or a qualified workshop. Referring to the corresponding section, you must yourself reinitialise:

- the remote control key,
- the on-board satellite navigation system.

Load reduction mode

System which manages the use of certain functions according to the level of charge remaining in the battery.

When the vehicle is being driven, the load reduction function temporarily deactivates certain functions, such as the air conditioning, the heated rear screen...

The deactivated functions are reactivated automatically as soon as conditions permit.

Electrical energy economy mode

System which manages the duration of use of certain functions to retain a sufficient level of charge in the battery.

After the engine has stopped, you can still use functions such as the audio and telematics system, windscreen wipers, dipped beam headlamps, courtesy lamps, etc. for a maximum combined duration of about thirty minutes.

Switching to economy mode

Once this time has elapsed, a message appears in the screen indicating that the vehicle has switched to economy mode and the active functions are put on standby. If a telephone call is being made at this time, it will be maintained for around 10 minutes with the Bluetooth hands-free system of your audio system.

Exiting economy mode

These functions are reactivated automatically next time the vehicle is driven.


- ☞ To restore these functions immediately, start the engine and let it run for at least five minutes.

7



A flat battery prevents the engine from starting (refer to the corresponding section).

Changing a wiper blade

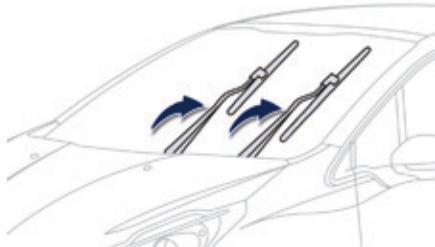

Before removing a front wiper blade

- Within one minute after switching off the ignition, operate the wiper stalk to position the wiper blades vertically on the windscreen.

Removing

- Raise the corresponding wiper arm.
- Unclip the wiper blade and remove it.

Fitting

- Put the corresponding new wiper blade in place and clip it.
- Fold down the wiper arm carefully.


After fitting a front wiper blade

- Switch on the ignition.
- Operate the wiper stalk again to park the wiper blades.

Towing the vehicle

Procedure for having your vehicle towed or for towing another vehicle using a removable towing eye.

Access to the tools

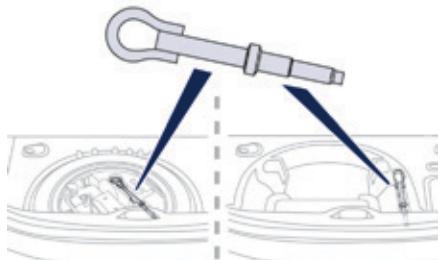

The towing eye is installed in the boot under the floor.

To gain access to it:

- ☞ open the boot,
- ☞ lift the floor and remove it,
- ☞ remove the towing eye from the holder.

! General recommendations

Observe the legislation in force in your country.

Ensure that the weight of the towing vehicle is higher than that of the towed vehicle.

The driver must remain at the wheel of the towed vehicle and must have a valid driving licence.

When towing a vehicle with all four wheels on the ground, always use an approved towing bar; rope and straps are prohibited.


The towing vehicle must move off gently.

When towing a vehicle with the engine off, there is no longer any power assistance for braking or steering.

In the following cases, you must always call on a professional recovery service:

- vehicle broken down on a motorway or fast road,
- four-wheel drive vehicle,
- when it is not possible to put the gearbox into neutral, unlock the steering, or release the parking brake,
- towing with only two wheels on the ground,
- where there is no approved towing bar available...

Towing your vehicle

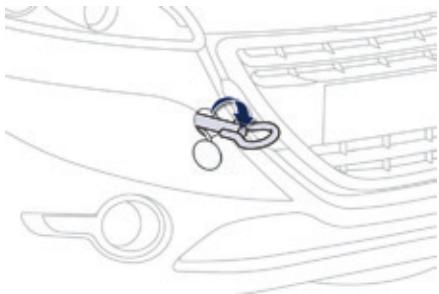


- ☞ On the front bumper, unclip the cover by inserting the flat end of the towing eye in the bottom of the cover.
- ☞ Screw the towing eye in fully.
- ☞ Install the towing bar.

i ☞ Place the gear lever in neutral (position **N** on an electronic or automatic gearbox). Failure to observe this instruction could result in damage to certain components (braking, transmission...) and the absence of braking assistance the next time the engine is started.

- ☞ Unlock the steering by turning the key in the ignition one notch and release the parking brake.
- ☞ Switch on the hazard warning lamps on both vehicles.
- ☞ Move off gently, drive slowly and for a short distance.

Towing another vehicle

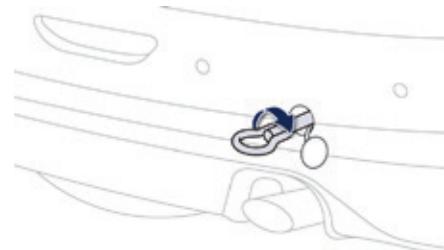

- ☞ On the rear bumper, unclip the cover by pressing at the bottom.
- ☞ Screw the towing eye in fully.
- ☞ Install the towing bar.
- ☞ Switch on the hazard warning lamps on both vehicles.
- ☞ Move off gently, drive slowly and for a short distance.

Towing a trailer



Towbar suitable for the attachment of a trailer or installation of a bicycle carrier, with additional lighting and signalling.

Your vehicle is primarily designed for transporting people and luggage, but it may also be used for towing a trailer.

i We recommend the use of genuine PEUGEOT towbars and their harnesses that have been tested and approved from the design stage of your vehicle, and that the fitting of the towbar is entrusted to a PEUGEOT dealer or a qualified workshop. If the towbar is not fitted by a PEUGEOT dealer, it is imperative that it is fitted in accordance with the vehicle manufacturer's instructions.

i Driving with a trailer places greater demands on the towing vehicle and the driver must take particular care.

Driving advice

Distribution of loads

- ☞ Distribute the load in the trailer so that the heaviest items are as close as possible to the axle and the nose weight approaches the maximum permitted without exceeding it.

Air density decreases with altitude, thus reducing engine performance. Above 1 000 metres, the maximum towed load must be reduced by 10 % for every 1 000 metres of altitude.

Refer to the "Technical data" section for details of the weights and towed loads which apply to your vehicle.

Side wind

- ☞ Take into account the increased sensitivity to side wind.

Cooling

Towing a trailer on a slope increases the temperature of the coolant. As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

- ☞ To lower the engine speed, reduce your speed.

The maximum towed load on a long incline depends on the gradient and the ambient temperature.

In all cases, keep a check on the coolant temperature.



- ☞ If the warning lamp and the **STOP** warning lamp come on, stop the vehicle and switch off the engine as soon as possible.

Braking

Towing a trailer increases the braking distance. To avoid overheating of the brakes on a long mountain type of descent, the use of engine braking is recommended.

Tyres

- ☞ Check the tyre pressures of the towing vehicle and of the trailer, observing the recommended pressures.

Lighting


- ☞ Check the electrical lighting and signalling on the trailer.



The rear parking sensors will be deactivated automatically if a genuine PEUGEOT towbar is used.

Fitting roof bars

When fitting transverse roof bars, take care to position them correctly on the retaining pins located in the door apertures.

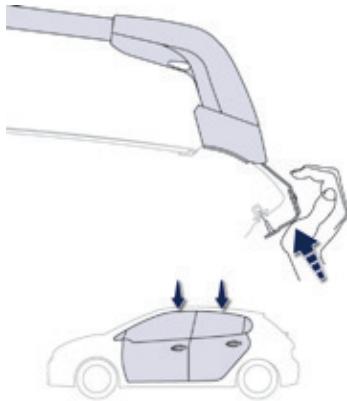

Use accessories recommended by PEUGEOT observing the manufacturer's recommendations and fitting instructions so as to avoid the risk of damaging the body (deformation, scratches, ...).



Do not exceed the maximum authorised load, shown in the instructions for the roof bars.

If the height exceeds 40 cm, adapt the speed of the vehicle to the profile of the road to avoid damaging the roof bars and the fixings on the roof.

Be sure to refer to national legislation in order to comply with the regulations for transporting objects which are longer than the vehicle.

Advice on care and maintenance

Recommendations on the care and maintenance of your vehicle are given in the warranty and maintenance record.

Matt paint

If your vehicle is finished with a clear matt lacquer, please observe the following recommendations to avoid damaging the paintwork by the use of an inappropriate cleaning procedures.

These recommendations are also valid for alloy road wheels finished with clear matt lacquer.



- Never clean the vehicle without water.
- Never wash your vehicle in an automatic roller brush car wash.
- Never polish the vehicle body, nor the alloy wheels. Doing this will make the paintwork shiny.
- Do not use paint cleaners, abrasive products or paint polishing or preserving products (such as wax, for example) on the paintwork. These products are only suitable for bright finishes. Application of these products on vehicles with a matt finish will seriously damage the paint surface of the vehicle, giving rise to irreversible shiny or stained areas.
- Never use a high pressure jet wash with a lance fitted with a brush, this may scratch the paintwork.
- Never select a wash programme that finishes with a hot wax cycle.

We recommend the use of a high pressure jet wash, or at least a water hose with a high output.

We recommend that the vehicle be rinsed using de-ionised water.

Use only a microfibre cloth to dry the vehicle. It must be clean and used without heavy pressure.

Lightly wipe off any fuel stains present on the bodywork using a soft cloth, then leave to dry. From the range of cleaning and maintenance products in the "TECHNATURE" range recommended and approved by PEUGEOT, use only the insect remover and car shampoo, which are the only products to be used on the bodywork.

The insect remover can also be used to remove minor marks (for example: finger marks...). Always have paint repairs done by a PEUGEOT dealer or a qualified workshop.

Accessories

A wide range of accessories and genuine parts is available from the PEUGEOT dealer network. These accessories and parts have been tested and approved for reliability and safety. They are all adapted to your vehicle and benefit from PEUGEOT's recommendation and warranty.

Conversion kits

You can obtain an "Enterprise" kit to convert a trade vehicle to a private car and vice-versa.

"Transport solutions":

boot liner with dividers, luggage net, roof bars, bicycle carrier on roof bars, ski carrier, roof box...



Tow bar, which must be fitted by PEUGEOT dealer or a qualified workshop.

"Security":

anti-theft alarm, window engraving, wheel security bolts, child seats and booster cushions, breathalyzer, first aid kit, warning triangle, high visibility jacket, stolen vehicle tracking system, temporary puncture repair kit, snow chains, non-slip covers, front foglamps kit...

"Comfort":

door deflectors, side blinds and rear blind, cigarette lighter, boot dividers, coat hanger fixed to head restraint, front centre armrest, under shelf storage, front and rear parking sensors...

"Styling":

aluminium gear lever knob, spoiler, styling strips, alloy wheels, trims, chromed mirror shells, body kit, three styling kits (Ligne S, Street and Graffic), stickers, interior and exterior mirror shells, parking brake lever grips, alloy wheels, alloy wheel caps...

"Protection":

mats*, seat covers compatible with lateral airbags, mud flaps, side protection rubbing strips, bumper protection rubbing strips, aluminium or PVC door aperture finishers...

- * To avoid any risk of jamming of the pedals:
 - ensure that the mat is positioned and secured correctly,
 - never fit one mat on top of another.

"Multimedia":

audio systems, portable satellite navigation systems, semi-integral support for portable satellite navigation system, hands-free kit, CD changer, speakers, DVD player, connection kit for MP3 or CD player, USB Box, Wi-Fi on-board...

Installation of radio communication transmitters

Before installing any after-market radio communication transmitter, you can contact a PEUGEOT dealer for the specification of transmitters which can be fitted (frequency, maximum power, aerial position, specific installation requirements), in line with the Vehicle Electromagnetic Compatibility Directive (2004/104/EC).

By visiting a PEUGEOT dealer, you can also obtain products for cleaning and maintenance (exterior and interior) - including ecological products in the "TECHNATURE" range, topping up products (screenwash...), touch-up pens and paint aerosols for the exact colour of your vehicle, refills (cartridge for the temporary puncture repair kit...), ...

 Depending on the legislation in force in the country, certain safety equipment may be compulsory: high visibility safety vests, warning triangles, breathalyzers, spare bulbs, spare fuses, a fire extinguisher, a first aid kit, mud flaps at the rear of the vehicle.

 The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system and excessive electrical consumption.
Please note this precaution. You are advised to contact a PEUGEOT representative to be shown the range of recommended equipment and accessories.

PEUGEOT & TOTAL

Partners in performance and protection of the environment

Innovation at the service of performance

The TOTAL Research and Development teams develop lubricants for PEUGEOT which satisfy the requirements of the latest technical innovations incorporated in PEUGEOT vehicles. This ensures that you obtain the best performance and the maximum engine life.

Reduced exhaust emissions

TOTAL lubricants are formulated to optimise the efficiency of engines and the protection of the emissions post-treatment systems. It is crucial to observe the servicing recommendations made by PEUGEOT to ensure correct operation.




8

Bonnet


! Before doing anything under the bonnet, switch off the Stop & Start system to avoid any risk of injury resulting from an automatic change to START mode.

Opening

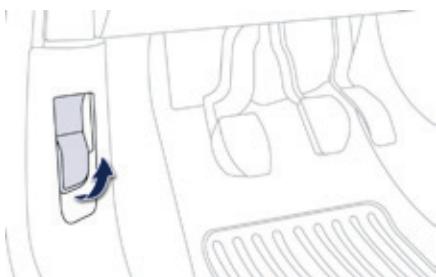


i The location of the interior release lever prevents opening of the bonnet when the left hand front door is closed.

- ☞ Open the left hand front door.
- ☞ Pull the release lever, located at the bottom of the door aperture, towards you.

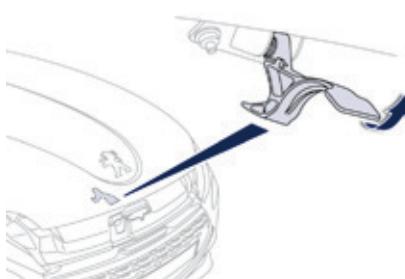

- ☞ Lift the safety catch and raise the bonnet.

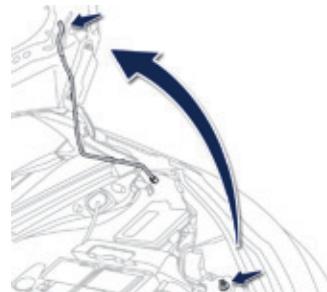

- ☞ Unclip the stay from its housing and place it in the support slot to hold the bonnet open.

! Do not open the bonnet under very windy conditions. When the engine is hot, handle the exterior safety catch and the stay with care (risk of burns).

! Because of the presence of electrical equipment under the bonnet, it is recommended that exposure to water (rain, washing, ...) be limited.


Closing

- ☞ Take the stay out of its support slot.
- ☞ Clip the stay back into its housing.
- ☞ Lower the bonnet and release it at the end of its travel.
- ☞ Pull the bonnet to check that it has latched correctly.

Petrol engines

The various caps and covers allow access for checking the levels of the various fluids and for replacing certain components.


1. Screenwash reservoir.
2. Coolant reservoir.
3. Brake fluid reservoir.
4. Battery / Fuses.
5. Fusebox.
6. Air filter.
7. Engine oil dipstick.
8. Engine oil filler cap.

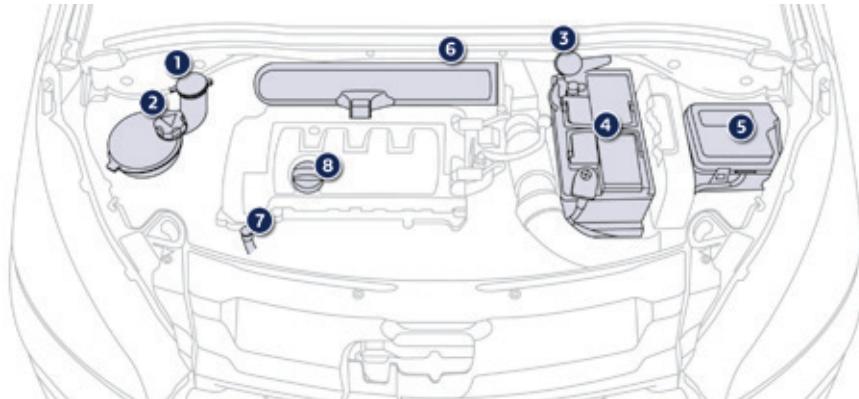

Diesel engines

The various caps and covers allow access for checking the levels of the various fluids, for replacing certain components and for priming the fuel system.

1. Screenwash reservoir.
2. Coolant reservoir.
3. Brake fluid reservoir.
4. Battery / Fuses.
5. Fusebox.
6. Air filter.
7. Engine oil dipstick.
8. Engine oil filler cap.

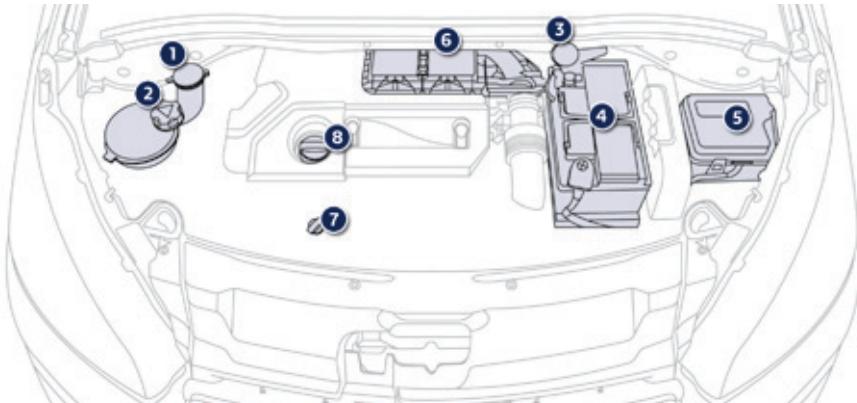

Fuel tank

Fuel tank capacity: approximately 50 litres.


Low fuel level

 When the fuel tank minimum level is reached this warning lamp comes on in the instrument panel. There remains **approximately 5 litres** of fuel in the tank. When the warning lamp flashes, there is **very little fuel left**.


You must refuel as soon as possible to avoid running out of fuel.

If you run out of fuel (Diesel), refer to the "Running out of fuel - Diesel" section.

Filling

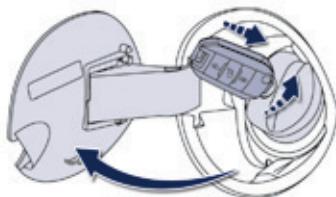

A self-adhesive label on the inner face of the filler flap reminds you of the type of fuel to use depending on your engine.
Additions of fuel must be of at least 5 litres to be registered by the fuel gauge.

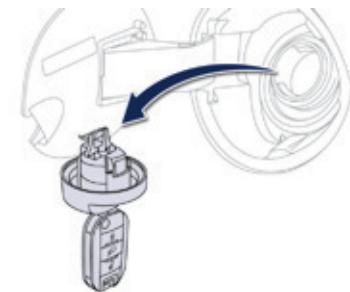

To fill the tank safely:

- ☞ **the engine must be switched off,**
- ☞ open the fuel filler flap,
- ☞ insert the key in the cap, then turn it to the left,
- ☞ remove the cap and hook it onto the clip located on the inside of the flap,
- ☞ fill the tank, **but do not continue after the 3rd cut-off of the pump**; this could cause malfunctions.

! With Stop & Start, never refuel with the system in STOP mode; you must switch off the ignition with the key.

i The key cannot be removed from the lock until the cap is refitted. Removing the filler cap may cause an inrush of air. This vacuum is perfectly normal and results from the sealing of the system.

Fuel supply cut-off

When you have filled the tank:

- ☞ put the cap back in place,
- ☞ turn the key to the right, then remove it from the cap,
- ☞ close the flap.

Your vehicle is fitted with a safety system that cuts off the supply of fuel in the event of an impact.




If you have put in the wrong fuel for the engine of your vehicle, you must have the fuel tank drained and filled with the correct fuel before starting the engine.

Misfuel prevention (Diesel)*

Mechanical device which prevents filling the tank of a Diesel vehicle with petrol. It avoids the risk of engine damage that can result from filling with the wrong fuel.

Located in the filler neck, the misfuel prevention device appears when the filler cap is removed.

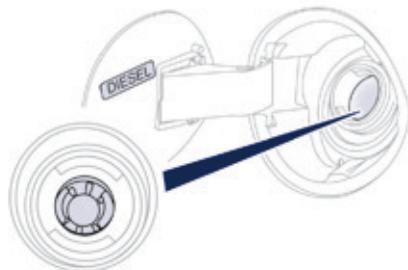

Operation

When a petrol filler nozzle is introduced into the fuel filler neck of your Diesel vehicle, it comes into contact with the flap. The system remains closed and prevents filling.

Do not persist but introduce a Diesel type filler nozzle.

i It remains possible to use a fuel can to fill the tank.
In order to ensure a good flow of fuel, do not place the nozzle of the fuel can in direct contact with the flap of the misfuel prevention device and pour slowly.

Travelling abroad

As Diesel fuel pump nozzles may be different in other countries, the presence of the misfuel prevention device may make refuelling impossible. Before travelling abroad, we recommend that you check with the PEUGEOT dealer network, whether your vehicle is suitable for the fuel pumps in the country in which you want to travel.

* According to country of sale.

Quality of the fuel used for petrol engines

The petrol engines are perfectly compatible with E10 or E24 type petrol biofuels (containing 10 % or 24 % ethanol), conforming to European standards EN 228 and EN 15376. E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293. For Brazil only, special vehicles are marketed to run on fuels containing up to 100 % ethanol (E100 type).



Quality of the fuel used for Diesel engines

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester). The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Contact a PEUGEOT dealer or a qualified workshop.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).

Running out of fuel (Diesel)

On vehicle fitted with HDi engines, the fuel system must be primed if you run out of fuel; refer to the engine compartment view on the "Diesel engine" section.

If the tank on your vehicle is fitted with a misfuel prevention device, refer to the corresponding section.

i If the engine does not start first time, don't keep trying. Start the procedure again from the beginning.

1.4 litre HDi engine

- ☞ Fill the fuel tank with at least five litres of diesel.
- ☞ Open the bonnet.
- ☞ Press and release the priming pump until resistance is felt (there may be resistance on the first press).
- ☞ Operate the starter until the engine starts.
- ☞ Close the bonnet.

1.6 litre HDi engine

- ☞ Fill the fuel tank with at least five litres of diesel.
- ☞ Open the bonnet.
- ☞ If necessary, unclip the styling cover for access to the priming pump.
- ☞ Squeeze and release the priming pump repeatedly until resistance is felt (there may be resistance at the first press).
- ☞ Operate the starter until the engine starts (if the engine does not start at the first attempt, wait around 15 seconds before trying again).
- ☞ If the engine does not start after a few attempts, operate the priming pump again then start the engine.
- ☞ Clip the styling cover back in place.
- ☞ Close the bonnet.

Checking levels

Check all of these levels regularly, in line with the warranty and maintenance record. Top them up if necessary, unless otherwise indicated. If a level drops significantly, have the corresponding system checked by a PEUGEOT dealer or a qualified workshop.

 Take care when working under the bonnet, as certain areas of the engine may be extremely hot (risk of burns) and the cooling fan could start at any time (even with the ignition off).

Oil level



The check is carried out either when the ignition is switched on using the oil level indicator in the instrument panel, or using the dipstick.

It will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.



It is normal to top up the oil level between two services (or oil changes). PEUGEOT recommends that you check the level, and top up if necessary, every 3 000 miles (5 000 kms).

After topping up the oil, the check when switching on the ignition with the oil level indicator in the instrument panel is not valid during the 30 minutes after topping up.

Engine oil change

Refer to the warranty and maintenance record for details of the interval for this operation.

In order to maintain the reliability of the engine and emission control system, the use of additives in the engine oil is prohibited.

Oil specification

The oil must be the correct grade for your engine and conform to the manufacturer's recommendations.

Brake fluid level



The brake fluid level should be close to the "MAX" mark. If it is not, check the brake pad wear.

Changing the fluid

Refer to the warranty and maintenance record for details of the interval for this operation.

Fluid specification

The brake fluid must conform to the manufacturer's recommendations.

Coolant level



The coolant level should be close to the "MAX" mark but should never exceed it.

When the engine is warm, the temperature of the coolant is regulated by the fan.

The cooling fan may start after switching off the engine: take care with articles and clothing that might become caught by the fan blades.

In addition, as the cooling system is pressurised, wait at least one hour after switching off the engine before carrying out any work.

To avoid any risk of scalding, unscrew the cap by two turns to allow the pressure to drop. When the pressure has dropped, remove the cap and top up the level.

Changing the coolant

The coolant does not have to be replaced at routine services.

Fluid specification

The coolant must conform to the manufacturer's recommendations.

Screenwash fluid level



Top up the level when necessary.

Fluid specification

For optimum cleaning and to avoid freezing, this fluid must not be topped up or replaced with plain water. In wintry conditions, it is recommended that you use an ethyl alcohol or methanol based fluid.

Diesel additive level (Diesel engine with particle emission filter)

SERVICE A low additive level is indicated by illumination of the service warning lamp, accompanied by an audible warning and a message in the screen (if a display screen is fitted).

Topping up

This additive must be topped up by a PEUGEOT dealer or a qualified workshop without delay.

Used products



Avoid prolonged contact of used oil or fluids with the skin.
Most of these fluids are harmful to health or indeed very corrosive.



Do not discard used oil or fluids into sewers or onto the ground.
Take used oil to a PEUGEOT dealer or a qualified workshop (France) or to an authorised waste disposal site.

Checks


Unless otherwise indicated, check these components in accordance with the warranty and maintenance record and according to your engine. Otherwise, have them checked by a PEUGEOT dealer or a qualified workshop.

12 V battery



The battery does not require any maintenance. However, check that the terminals are clean and correctly tightened, particularly in summer and winter.

When carrying out work on the battery, refer to the "12 V battery" section for details of the precautions to be taken before disconnecting the battery and following its reconnection.

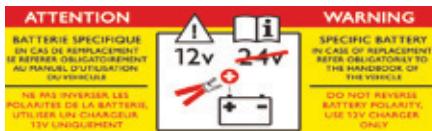

The presence of this label, in particular with the Stop & Start system, indicates the use of a specific 12 V lead-acid battery with special technology and specification. The involvement of a PEUGEOT dealer or a qualified workshop is essential when replacing or disconnecting the battery.

Air filter and passenger compartment filter



Refer to the warranty and maintenance record for details of the replacement intervals for these components.

Depending on the environment (e.g. dusty atmosphere) and the use of the vehicle (e.g. city driving), **replace them twice as often if necessary**. A clogged passenger compartment filter may have an adverse effect on the performance of the air conditioning system and generate undesirable odours.

Oil filter



Replace the oil filter each time the engine oil is changed. Refer to the warranty and maintenance record for details of the replacement interval for this component.

Particle emissions filter (Diesel)



The start of saturation of the particle filter is indicated by the fixed illumination of this warning lamp accompanied by a warning message in the screen (if a display screen is fitted).

As soon as the traffic conditions permit, regenerate the filter by driving at a speed of at least 40 mph (60 km/h) until the warning lamp goes off.

If the warning lamp stays on, this indicates a low additive level.



On a new vehicle, the first particle filter regeneration operations may be accompanied by a "burnt" smell, which is perfectly normal. Following prolonged operation of the vehicle at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust on acceleration. This does not affect the behaviour of the vehicle or the environment.

Manual gearbox



The gearbox does not require any maintenance (no oil change). Refer to the warranty and maintenance record for the details of the level checking interval for this component.

Electronic gearbox



The gearbox does not require any maintenance (no oil change). Refer to the warranty and maintenance record for details of the checking interval for this component.

Automatic gearbox



The gearbox does not require any maintenance (no oil change). Refer to the warranty and maintenance record for details of the level checking interval for this component.

Brake pads



Brake wear depends on the style of driving, particularly in the case of vehicles used in town, over short distances. It may be necessary to have the condition of the brakes checked, even between vehicle services. Unless there is a leak in the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

Brake disc wear



For information on checking brake disc wear, contact a PEUGEOT dealer or a qualified workshop.

Parking brake



If excessive travel or a loss of effectiveness of this system is noticed, the parking brake must be checked, even between two services. Checking this system must be done by a PEUGEOT dealer or a qualified workshop.



Only use products recommended by PEUGEOT or products of equivalent quality and specification. In order to optimise the operation of units as important as those in the braking system, PEUGEOT selects and offers very specific products. After washing the vehicle, dampness, or in wintry conditions, ice can form on the brake discs and pads: braking efficiency may be reduced. Make light brake applications to dry and defrost the brakes.

Petrol engines and gearboxes

Engine	1 litre VTi 68 hp	1.2 litre VTi 82 hp		1.2 litre e-VTi 82 hp	1.2 litre THP 110 hp
Gearbox	Manual (5-speed)	Manual (5-speed)	Electronic (5-speed)	Electronic (5-speed)	Manual (5-speed)
Cubic capacity (cc)	999	1 199		1 199	1 199
Bore x stroke (mm)	71 x 84.1	75 x 90.5		75 x 90.5	75 x 90.5
Max power: EU standard (kW)*	50	60		60	-
Max power engine speed (rpm)	6 000	5 750		5 750	-
Max torque: EU standard (Nm)	95	118		118	-
Max torque engine speed (rpm)	3 000	2 750		2 750	-
Fuel	Unleaded	Unleaded		Unleaded	Unleaded
Catalytic converter	Yes	Yes		Yes	Yes
Oil capacities (in litres)					
Engine (with filter replacement)	3.13	3.13		3.13	-

* The maximum power corresponds to the type approved value on a test bed, under conditions defined by European legislation (directive 1999/99/EC).

Petrol engines and gearboxes

Engine	1.4 litre VTi 95 hp	1.6 litre VTi 120 hp		1.6 litre THP 155 hp	1.6 litre THP 200 hp
Gearbox	Manual (5-speed)	Manual (5-speed)	Automatic (4-speed)	Manual (6-speed)	Manual (6-speed)
Cubic capacity (cc)	1 397	1 598	1 598	1 598	1 598
Bore x stroke (mm)	77 x 75	77 x 85.8	77 x 85.8	77 x 85.8	77 x 85.8
Max power: EU standard (kW)*	70	88	88	115	147
Max power engine speed (rpm)	6 000	6 000	6 000	6 000	5 800
Max torque: EU standard (Nm)	136	160	160	240	275
Max torque engine speed (rpm)	4 000	4 250	4 250	1 400	1 700
Fuel	Unleaded	Unleaded	Unleaded	Unleaded	Unleaded
Catalytic converter	Yes	Yes	Yes	Yes	Yes
Oil capacities (in litres)					
Engine (with filter replacement)	4.25	4.25	4.25	4.25	4.25

* The maximum power corresponds to the type approved value on a test bed, under conditions defined by European legislation (directive 1999/99/EC).

Petrol weights and towed loads (in kg)

Engine	1 litre VTi 68 hp		1.2 litre VTi 82 hp			
Gearbox	Manual (5-speed)		Manual (5-speed)		Electronic (5-speed)	
Body	3-door	5-door	3-door	5-door	3-door	5-door
- Unladen weight	960	975	960	975	1 060	1 075
- Kerb weight*	1 035	1 050	1 035	1 050	1 135	1 150
- Gross vehicle weight (GVW)	1 485		1 530		1 530	
- Gross train weight (GTW) on a 12 % gradient	1 935		2 350		2 350	
- Braked trailer (within GTW limit) on a 10 % or 12 % gradient	450		820		820	
- Braked trailer** (with load transfer within the GTW limit)	760		1 150		1 150	
- Unbraked trailer	450		520		520	
- Recommended nose weight	30		46		46	

* The kerb weight is equal to the unladen weight + driver (75 kg).

** The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

Petrol weights and towed loads (in kg)

Engine	1.2 litre e-VTi 82 hp		1.2 litre THP 110 hp		1.4 litre VTi 95 hp	
Gearbox	Electronic (5-speed)		Manual (5-speed)		Manual (5-speed)	
Body	3-door	5-door	3-door	5-door	3-door	5-door
- Unladen weight	965	980	1 060	1 070	1 055	1 070
- Kerb weight*	1 040	1 055	1 135	1 145	1 130	1 145
- Gross vehicle weight (GVW)	1 540		1 600	1 612	1 590	
- Gross train weight (GTW) on a 12% gradient	2 040		2 560	2 572	2 530	
- Braked trailer (within GTW limit) on a 10% or 12% gradient	500		960		940	
- Braked trailer** (with load transfer within the GTW limit)	500		1 150		1 150	
- Unbraked trailer	500		-		570	
- Recommended nose weight	46		-		46	

* The kerb weight is equal to the unladen weight + driver (75 kg).

** The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

Petrol weights and towed loads (in kg)

Engine	1.6 litre VTi 120 hp				1.6 litre THP 155 hp	1.6 litre THP 200 hp
Gearbox	Manual (5-speed)		Automatic (4-speed)		Manual (6-speed)	Manual (6-speed)
Body	3-door	5-door	3-door	5-door	3-door	3-door
- Unladen weight	1 080	1 090	1 080	1 090	1 090	1 160
- Kerb weight*	1 155	1 165	1 155	1 165	1 165	1 235
- Gross vehicle weight (GVW)	1 605		1 627		1 640	1 650
- Gross train weight (GTW) on a 12% gradient	2 565		2 577		2 570	2 580
- Braked trailer (within GTW limit) on a 10% or 12% gradient	960		950		930	930
- Braked trailer** (with load transfer within the GTW limit)	1 150		1 150		1 150	1 150
- Unbraked trailer	580		580		580	580
- Recommended nose weight	46		46		46	46

* The kerb weight is equal to the unladen weight + driver (75 kg).

** The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

Diesel engines and gearboxes

Engine	1.4 litre HDi 68 hp	1.4 litre e-HDi 68 hp	1.6 litre HDi 75 hp	1.6 litre HDi 92 hp
Gearbox	Manual (5-speed)	Electronic (5-speed)	Manual (5-speed)	Manual (5-speed)
Cubic capacity (cc)	1 398	1 398	1 560	1 560
Bore x stroke (mm)	73.7 x 82	73.7 x 82	75 x 88.3	75 x 88.3
Max power: EU standard (kW)*	50	50	55	68
Max power engine speed (rpm)	4 000	4 000	4 000	4 000
Max torque: EU standard (Nm)	160	160	185	230
Max torque engine speed (rpm)	2 000	2 000	1 500	1 750
Fuel	Diesel	Diesel	Diesel	Diesel
Catalytic converter	Yes	Yes	Yes	Yes
Particle emission filter	Yes	Yes	Yes	Yes
Oil capacities (in litres)				
Engine (with filter replacement)	3.75	3.75	3.75	3.75

* The maximum power corresponds to the type approved value on a test bed, under conditions defined by European legislation (directive 1999/99/EC).

Diesel engines and gearboxes

Engine	1.6 litre e-HDi 92 hp		1.6 litre e-HDi 115 hp
Gearbox	Manual (5-speed)	Electronic (6-speed)	Manual (6-speed)
Cubic capacity (cc)	1 560		1 560
Bore x stroke (mm)	75 x 88.3		75 x 88.3
Max power: EU standard (kW)*	68		84
Max power engine speed (rpm)	4 000		3 600
Max torque: EU standard (Nm)	230		270
Max torque engine speed (rpm)	1 750		1 750
Fuel	Diesel		Diesel
Catalytic converter	Yes		Yes
Particle emission filter	Yes		Yes
Oil capacities (in litres)			
Engine (with filter replacement)	3.75		3.75

* The maximum power corresponds to the type approved value on a test bed, under conditions defined by European legislation (directive 1999/99/EC).

Diesel weights and towed loads (in kg)

Engine	1.4 litre HDi 68 hp		1.4 litre e-HDi 68 hp		1.6 litre HDi 75 hp
Gearbox	Manual (5-speed)		Electronic (5-speed)		Manual (5-speed)
Body	3-door	5-door	3-door	5-door	5-door
- Unladen weight	1 035	1 050	1 045	1 050	1 170
- Kerb weight*	1 110	1 125	1 120	1 125	1 245
- Gross vehicle weight (GVW)	1 580		1 580		1 625
- Gross train weight (GTW) on a 12% gradient	1 980		2 080		2 595
- Braked trailer (within GTW limit) on a 10% or 12% gradient	400		500		970
- Braked trailer** (with load transfer with the GTW limit)	675		725		1 150
- Unbraked trailer	400		500		-
- Recommended nose weight	29		29		-

* The kerb weight is equal to the unladen weight + driver (75 kg).

** The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

Diesel weights and towed loads (in kg)

Engines	1.6 litre HDi 92 hp		1.6 litre e-HDi 92 hp			
Gearboxes	Manual (5-speed)		Manual (5-speed)		Electronic (6-speed)	
Body	3-door	5-door	3-door	5-door	3-door	5-door
- Unladen weight	1 120	1 140	1 067	1 080	1 075	1 090
- Kerb weight*	1 195	1 215	1 142	1 155	1 150	1 165
- Gross vehicle weight (GVW)	1 625		1 625		1 640	
- Gross train weight (GTW) on a 12% gradient	2 595		2 595		2 610	
- Braked trailer (within GTW limit) on a 10% or 12% gradient	970		970		970	
- Braked trailer** (with load transfer with the GTW limit)	1 150		1 150		1 150	
- Unbraked trailer	-		570		580	
- Recommended nose weight	-		46		46	

* The kerb weight is equal to the unladen weight + driver (75 kg).

** The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

Diesel weights and towed loads (in kg)

Engine	1.6 litre e-HDI 115 hp	
Gearbox	Manual (6-speed)	
Body	3-door	5-door
- Unladen weight	1 075	1 090
- Kerb weight*	1 150	1 165
- Gross vehicle weight (GVW)		1 665
- Gross train weight (GTW) on a 12% gradient		2 645
- Braked trailer (within GTW limit) on a 10% or 12% gradient		980
- Braked trailer** (with load transfer with the GTW limit)		1 150
- Unbraked trailer		580
- Recommended nose weight		46

* The kerb weight is equal to the unladen weight + driver (75 kg).





** The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).



High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

Dimensions (in mm)

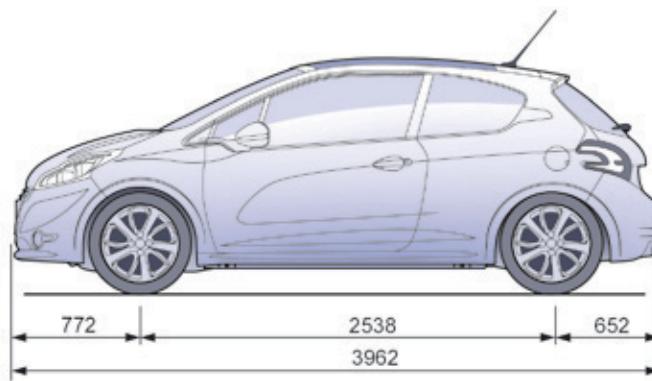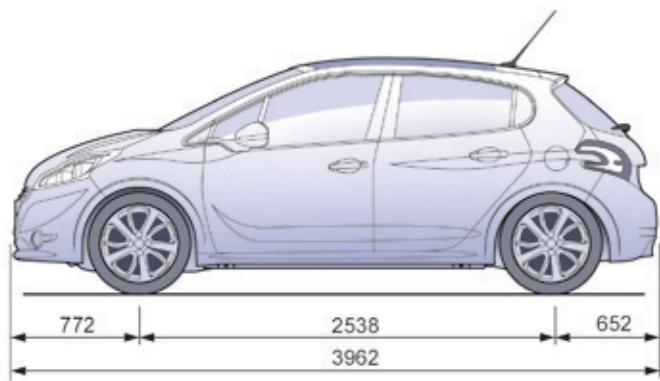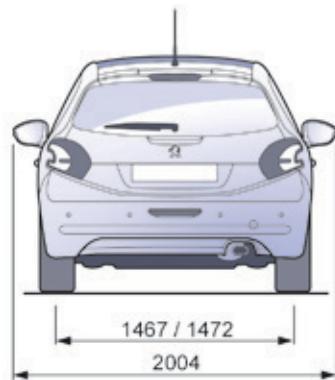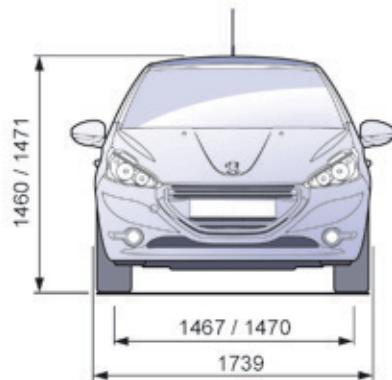

Identification markings

Various visible markings for the identification of your vehicle.

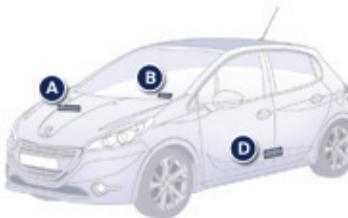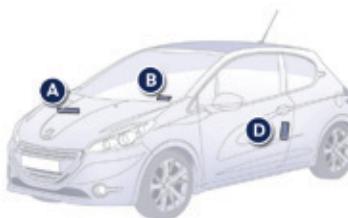

A. Vehicle Identification Number (VIN) under the bonnet.

This number is engraved on the bodywork near the damper support.

B. Vehicle identification Number (VIN) on the windscreen lower crossmember.

This number is indicated on a self-adhesive label which is visible through the windscreen.

C. Manufacturer's label.

The VIN is indicated on a self-destroying label affixed to the middle pillar, on the passenger's side.

D. Tyre/paint label.

This label is fitted to the middle pillar, on the driver's side.

It bears the following information:

- the tyre inflation pressures with and without load,
- the tyre sizes,
- the inflation pressure of the spare wheel,
- the paint colour code.

i The tyre pressures must be checked when the tyres are cold, at least once a month.



Low tyre pressures increase fuel consumption.



EMERGENCY OR ASSISTANCE CALL

EMERGENCY OR ASSISTANCE CALL

PEUGEOT Connect SOS



In an emergency, press this button for more than 2 seconds. Flashing of the green LED and a voice message confirm that the call has been made to the "PEUGEOT Connect SOS" centre*.

The green LED remains on (without flashing) when communication is established. It goes off at the end of communication.

Pressing this button again immediately cancels the request. The green LED goes off. Cancellation is confirmed by a voice message.

To cancel a call, tell the "PEUGEOT Connect SOS" call centre that the call was a mistake.

"PEUGEOT Connect SOS" immediately locates your vehicle, starts communication with you in your language**, and where necessary sends the appropriate public emergency services**. In countries where the service is not available, or when the locating service has been expressly declined, the call sent directly to the emergency services (112) without the vehicle location.

 If an impact is detected by the airbag control unit, and independently of the deployment of any airbags, an emergency call is made automatically.

* Subject to the general conditions for the service available from dealers and to technological and technical limitations.

** Depending on the geographical cover of "PEUGEOT Connect SOS", "PEUGEOT Connect Assistance" and the official national language selected by the owner of the vehicle.

The list of countries covered and PEUGEOT CONNECT services services is available from dealers or at www.peugeot.co.uk.

PEUGEOT Connect Assistance



Press this button for more than 2 seconds to request assistance if the vehicle breaks down. A voice message confirms that the call has been made**.

Pressing this button again immediately cancels the request. The cancellation is confirmed by a voice message.

Operation of the system



When the ignition is switched on, the green LED comes on for 3 seconds indicating that the system is operating correctly.



If the orange LED flashes: there is a system fault.

If the orange LED is on continuously: the backup battery must be replaced.

In either case, contact a PEUGEOT dealer.

If you purchased your vehicle outside the PEUGEOT dealer network, we invite you to have a dealer check the configuration of these services and, if desired, modified to suit your wishes. In a multi-lingual country, configuration is possible in the official national language of your choice.

For technical reasons and in particular to improve the quality of "PEUGEOT CONNECT services" services to customers, the manufacturer reserves the right to carry out updates to the vehicle's on-board telematic system.



Touch screen

SATELLITE NAVIGATION SYSTEM

MULTIMEDIA AUDIO SYSTEM

BLUETOOTH TELEPHONE

CONTENTS

01	General operation	p. 218
02	First steps - Control panel	p. 219
03	Steering mounted controls	p. 220
04	PEUGEOT CONNECT APPS	p. 221
05	Navigation: navigation guidance, traffic, map, settings	p. 222
06	Media: photos, radio, music, settings	p. 240
07	Communication: bluetooth, contacts, call log, settings	p. 256
08	Settings: system, vehicle, sound	p. 266
	Frequently asked questions	p. 272



The system is protected in such a way that it will only operate in your vehicle.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off following the activation of the energy economy mode.

01 GENERAL OPERATION



Press **MODE** several times in succession for access to the following displays:

"Radio"



(or audio source being listened to: CD, USB, Auxiliary)



OR

"Telephone"

(if call in progress)

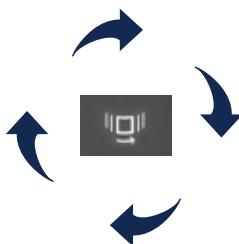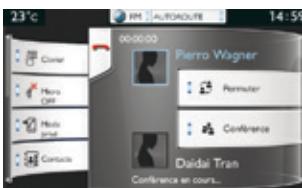

"Trip computer"

(refer to the "Instruments and controls" section)



"Map"

(if navigation guidance in progress)



These screens are the representation of a colour scheme.
To change the colour scheme, refer to the "**SETTINGS**" section.



The screen is the "resistive" type. It is necessary to press firmly, particularly for "flick" gestures (scrolling through a list, moving the map...). A simple wipe will not be enough. Pressing with more than one finger is not recognised.
The screen can be used when wearing gloves. This technology allows use under all temperatures.



In very hot conditions, the system may go into stand-by (screen and sound completely off) for a minimum period of 5 minutes.




Use a finger in the areas offered in the screen.

02 FIRST STEPS



Following prolonged operation in sunny conditions, the volume may be limited to protect the system. The return to normal operation takes place when the temperature in the passenger compartment drops.

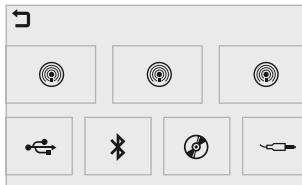

Selecting the audio source (depending on version):

- "FM" / "AM" / "DAB"** radio wavebands.
- "USB" memory stick.
- CD player (located in the glove box* on left hand drive, available as an accessory to be fitted under the passenger seat on right hand drive).
- Telephone connected by Bluetooth and Bluetooth multimedia distribution (streaming).
- Media player connected to the auxiliary socket (jack, cable not supplied).

Volume adjustment (each source is independent, including "Traffic announcements (TA)" and navigation instructions).

Press to mute the sound.



MODE: selection of the type of permanent display.



Short cut: return to the screen showing the carousel of audio sources.

Short cut: return to the radio screen.



Selecting the "**MAIN MENU**":

- "**Navigation**" for navigation settings and to select a destination (depending on version).
- "**Media**" to select radio, MP3 music (from a USB memory stick), view photos.
- "**Communications**" to connect a telephone by Bluetooth so as to make telephone calls safely or to connect to the Internet.
- "**Settings**" to enter settings for the radio, the vehicle or audio.

Press **MENU** again to quit the "**MAIN MENU**" and return to the permanent display.




To clean the screen, use a soft non-abrasive cloth (spectacles cloth) without any additional product.

Do not use sharp objects on the touch screen. Do not touch the touch screen with wet hands.

* Depending on equipment.

03 STEERING MOUNTED CONTROLS

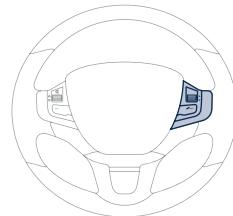

	<ul style="list-style-type: none">- Press: mute / restore sound.
	<ul style="list-style-type: none">- Increase volume.
	<ul style="list-style-type: none">- Decrease volume.
	<ul style="list-style-type: none">- Press: change the audio source: Radio, Media.



	<ul style="list-style-type: none">- Rotation. Radio: automatic selection of next / previous frequency. Media: previous / next track. Menus: movement- Press. Radio: pre-set radio stations. Menus: confirm. Audio source: confirm selection
	<ul style="list-style-type: none">- Incoming call: answer call.- Call in progress: Telephone menu (contacts, call log). End call.- Radio: display the list of stations. Media: display the list of albums / tracks.

04 PEUGEOT CONNECT APPS




PEUGEOT CONNECT APPS is a service that delivers real-time driving assistance applications giving access to useful information such as the state of the traffic, risk areas, fuel prices, the availability of parking places, tourist sites, weather conditions, correct addresses... It includes access to the mobile network related to the use of the applications. "PEUGEOT CONNECT APPS" is provided by a subscription taken out with a PEUGEOT dealer, available according to country and the type of touch screen; it can also be taken out after handover of the vehicle.



1 Plug the "PEUGEOT CONNECT APPS" connection key into the USB port.



2 Using "Plug & Play", the key is recognised automatically and allows display of the interface giving access to the applications.

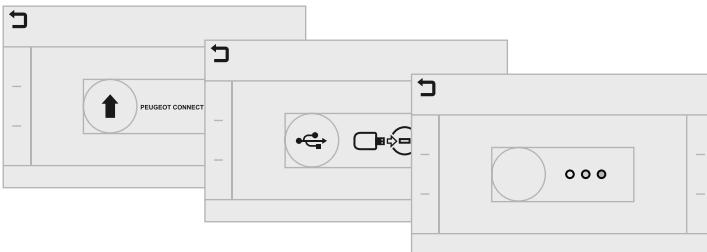

The applications use vehicle data such as the current speed, mileage, remaining fuel range or even GPS position to provide pertinent information.




For safety reasons, some functions can only be used when stationary.



The "MyPeugeot" application is a link between the user, the manufacturer and the dealer network.


It allows the customer to know everything about their vehicle: servicing, accessory range, service contracts taken out. It also makes possible the sending of the vehicle's mileage to the "MyPeugeot" site, or to identify a dealer.

05 NAVIGATION

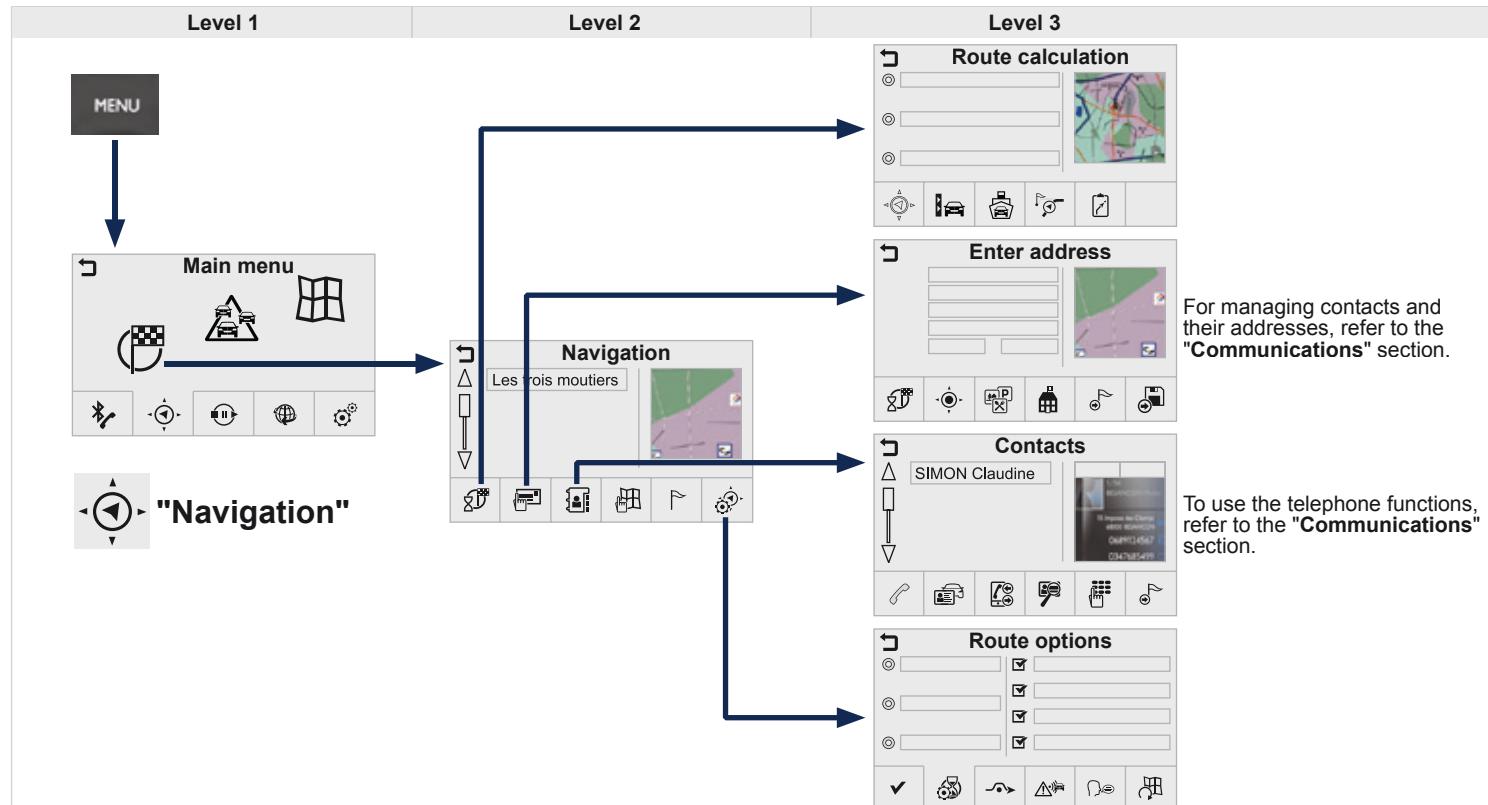

Level 1	Level 2	Level 3	Comments
  Navigation  GPS Navigation 	 Route calculation  Choose from the list of recent destinations.	 Fastest	Choose the navigation criteria. The map displays the route chosen according to these criteria.
		 Shortest	
		 Time/Distance compromise	
		 Include toll roads	
		 Include ferries	
	 Address  Enter address 	 Pass close to waypoints	Address settings.
		 Itinerary	
		 Start navigation	
		 Curr. location	
		 Points of Interest	
  	 Town centre	Save the current address.	
		 As waypoint	
		 Save	
		 Calculate the route	
			After choosing the address, start the route calculation.
 Settings  Route options 	 Navigate to	After choosing a contact in the list, press to calculate the route.	

05 NAVIGATION

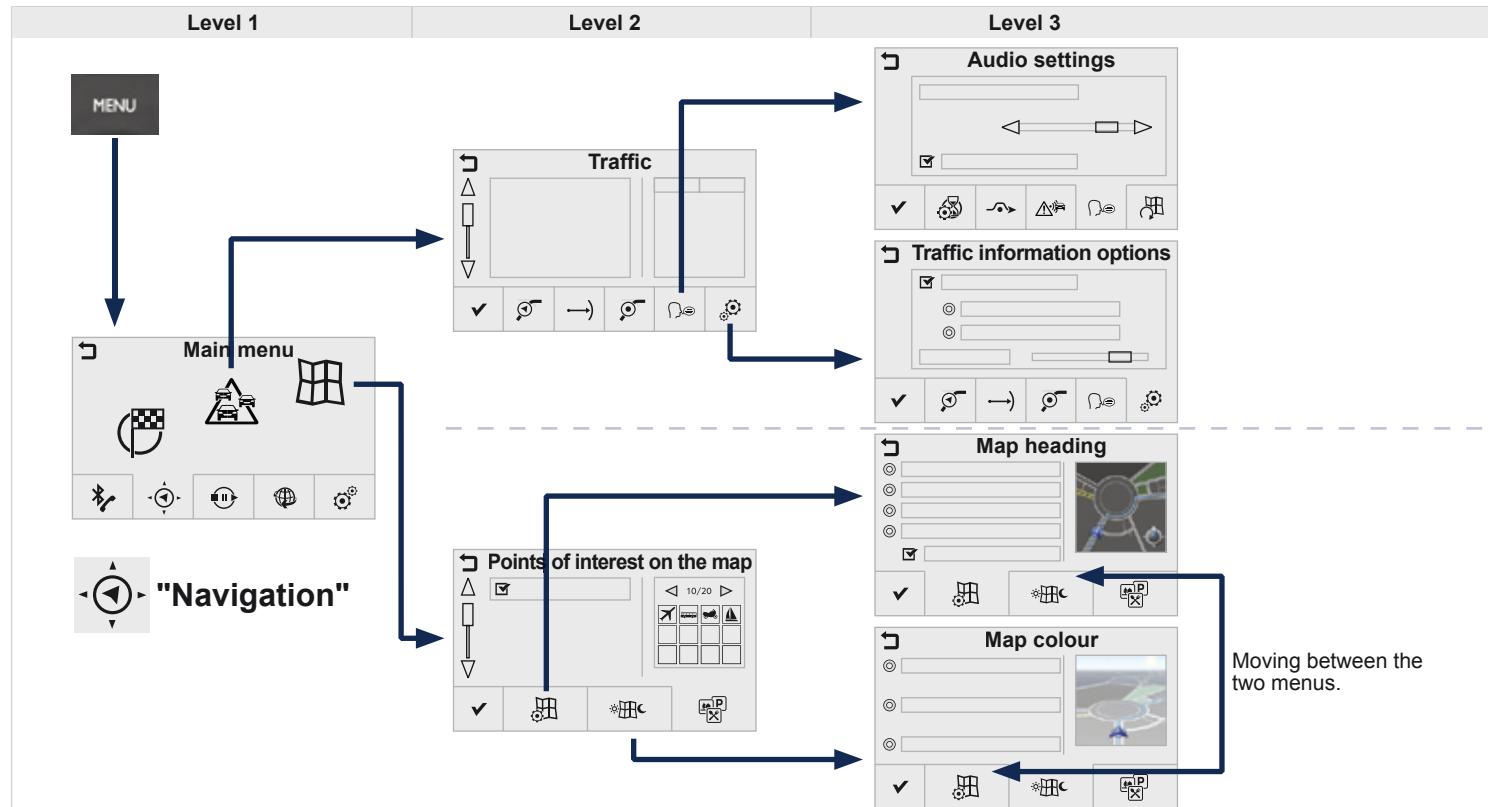

Level 1	Level 2	Level 3	Comments
 Navigation  Traffic	 Along the route		Refine the list of traffic information on the itinerary, within a radius of 30 miles (50 km) or at the destination.
	 Near		
	 Around		
	 Read message  Audio settings 	 Criteria	
		 Diversion	
		 Risk areas	
		 Voice	
		 Maps	
		 Confirm	
	 Settings  Traffic info options 	 Along the route	Set the choice for messages and the filtering radius.
		 Near	
		 Around	
		 Read message	
		 Settings	
		 Confirm	
 Navigation  Map  Points of interest on the map	 Map heading		Choose the display and orientation of the map.
	 Map colour		Choose the display of the map.
	 Points of Interest		List of categories available. After choosing the category, select the points of interest.
		 Confirm	Save the settings.

05 NAVIGATION - GUIDANCE

Choosing a destination

Towards a new destination

1 Press **MENU** to display the "MAIN MENU" then select "Navigation".



 
2 Select "Navigation GPS".



3 Select "Address".



4 Select the "Country:" from the list offered then in the same way:
the "City:" or its post code, the "Road:",
the "N°:.". Confirm each time.



5 Select "Save" to save the address entered as a contact entry.
The system allows up to 200 entries.

5 Select "Guide".



6 Choose the navigation criteria: "**Fastest**" or the **Shortest**" or "**Time/Distance compromise**".
The route is displayed in the map (on the right).



7 Choose the restriction criteria: "**Tollroads**", "**Ferries**", "**Near**".



8 Select "**Confirm**" or press the screen (blue arrow) to start navigation guidance.



i To delete navigation information, press on "**Settings**" then "**Stop navigation**".



To restore the navigation information press on "**Settings**" then "**Restart navigation**".



05 NAVIGATION - GUIDANCE

Towards one of the recent destinations

1

Press **MENU** to display the "**MAIN MENU**" then select "**Navigation**".



 
2

Select "**Navigation GPS**".



3

Select an address from the list offered.



4

Select "**Guide**".

Select the criteria then "**Confirm**" or press the screen (blue arrow) to start guidance.



Towards a contact in the directory

i

Navigation towards a contact imported from a telephone is only possible if the address entered is compatible with the system.

1

Press **MENU** to display the "**MAIN MENU**" then select "**Navigation**".



2

Select "**Navigation GPS**".



 
3

Select "**Contacts**".



4

Select a destination from the contacts in the list offered.



5

Select "**Navigate to**".

Select the criteria then "**Confirm**" to start guidance.



05 NAVIGATION - GUIDANCE

Towards GPS coordinates

- 1 Press **MENU** to display the "MAIN MENU" then select "Navigation". 
- 2 Select "Navigation GPS". 
- 3 Select "Address". 
- 4 Enter the "Longitude:" then the "Latitude:". 
- 5 Select "Guide".
Select the criteria then "Confirm" or press the screen (blue arrow) to start guidance. 

Towards a point on the map

- 1 Press **MENU** to display the "MAIN MENU" then select "Navigation". 
- 2 Select "Navigation GPS". 
- 3 Select "From map". 
- 4 Zoom in on the map then select the point. 
- 5 A long press displays the surrounding tourist attractions. 

05 NAVIGATION - GUIDANCE

Towards points of interest (POI)

1

Press **MENU** to display the "**MAIN MENU**" then select "**Navigation**".



2

Select "**GPS Navigation**".



3

Select "**Address**".



4

Select "**Pts of Interest**".



5

Select a category from the list offered (the categories are presented on following pages).



Points of Interest (POI) show all of the locations of services nearby (hotels, retail outlet, airports, ...).

6

Select a point of interest from the list offered.



7a

Select "**Search**".



or

7b

Select "**Along the route**" or "**Near**" or "**At a destination**" or "**At an address**" to filter the points of interest.



8

Select a point of interest from the list offered.



9

Select "**Guide**".

 
Select the criteria then "**Confirm**" to start guidance.



05 NAVIGATION - GUIDANCE

List of main points of interest (POI)

Public transport




Rest areas



Shopping centres



 Business centres



Service stations



Hotels



Restaurants



An annual mapping update allows new points of interest to be presented to you.

You can also update the Risk areas / Danger areas every month.

The detailed procedure is available on:

<http://peugeot.navigation.com>

05 NAVIGATION - GUIDANCE

Risk area settings

1

Press **MENU** to display the "**MAIN MENU**" then select "**Navigation**".



2

Select "**Navigation GPS**".



3

Select "**Settings**".



4

Select "**Risk areas**".



5

It is then possible to activate risk area alerts, then choose:

- "With audible alert"
- "Warnings only when navigating"
- "Alert setting": the choice of timing allows the time before giving a speed camera alert to be defined.

6

Select "**Confirm**".



!

These functions are only available if risk areas have been downloaded and installed on the system.

05 NAVIGATION - GUIDANCE

Adding a waypoint

1 Press **MENU** to display the "MAIN MENU" then select "Navigation".



2 Select "Navigation GPS".



3 Select "Waypoints".



4 Select "Add".



5 Select "Address".



6 The address of the waypoint is entered in the same way as a destination, so enter the "City:" or post code, the "Road:" and the "N°:". Confirm each time.

▼	FRANCE
▼	PARIS
▼	Bvd Hossein
N°:	20



Then select "As waypoint".

7 Select "Guide".

Select the criteria then "Confirm" to start guidance and give the general direction of the navigation route.



Organising waypoints

4 To organise waypoints, carry out the previous operations 1 to 3 again (Adding a waypoint).



5 Select the waypoint that you want to move in the order.



6a Select "Up".



6b Select "Down".



6c Select "Delete".

7 Select "Road map" to view the changes made to the route.



05 NAVIGATION - GUIDANCE

Route options

Calculation criteria

1

Press **MENU** to display the "**MAIN MENU**" then select "**Navigation**".



2

Select "**Navigation GPS**".



3

Select "**Settings**".



4

Select "**Criteria**".



5

It is then possible to choose:

- the navigation criteria: "**Fastest**", "**Shortest**", "**Time/Distance compromise**",
- the exclusion criteria: "**Include tollroads**", "**Include ferries**", "**Pass close to waypoints**", "**Take traffic into account**".

6

Select "**Confirm**".



05 TRAFFIC

Traffic information

Display of messages

- 1 Press **MENU** to display the "MAIN MENU" then select "Navigation".




- 2 Select "Traffic".



- 3 Set the "Along the route", "Near", "Around" filters to fine-tune the list.
Press again to remove the filter.



- 4 Select the message from the list offered.
Select "Map" or "Details" for more information.

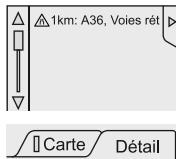

i TMC (Traffic Message Channel) messages contain information on traffic and weather conditions, received in real time and transmitted to the driver in the form of audible announcements and symbols on the navigation map.

Setting the filters

- 1 Press **MENU** to display the "MAIN MENU" then select "Navigation".
Select "Traffic".



- 2 Select "Settings".



- 3 Select:
 - "Warn of new messages"
 - "Traffic messages only"
 - "All messages".Then enter the filter radius.



- 4 Select "Confirm".



i We recommend a filter radius of:

- 12 miles (20 km) in urban areas,
- 30 miles (50 km) on motorways.

05 TRAFFIC

Main traffic symbols

1 Red and yellow triangle: traffic information, for example:



Modified signs



Narrow carriageway



Slippery surface



Accident



Delay



Roadworks



Risk of explosion



Road closed



Demonstration



Danger



No entry



Traffic jam

2 Black and blue triangle: general information, for example:



Weather reports



Traffic reports



Wind



Fog



Parking



Snow / ice

Receiving TA messages

1 Press the **MODE** until the "RADIO" display is obtained.



2 Select "TA".

TA

3 Select "Traffic announcements (TA)".

4 Select "Confirm".

✓

i The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

05 TRAFFIC

Diversion from a route

1

Press from **MENU** to display the "**MAIN MENU**" then select "**Navigation**".



2

Select "**Navigation GPS**".



3

Select "**Settings**".



4

Select "**Diversion**".



5

Select the diversion distance by pressing + or -.



6

Select "**Recalculate route**". The route will be modified in time and distance.



7

Select "**Confirm**".



8

The route may be diverted following the reception of a traffic information message.

05 MAP

Map management

Selecting the points of interest displayed on the map

1

Press **MENU** to display the "**MAIN MENU**" then select "**Navigation**".



2

Select "**Map**".



3

Select "**Points of Interest**".



 
4

Select a category from the list offered (the categories are given on previous pages).



5

Select the points of interest from the list for them to be displayed in the screen.



6

Select "**Confirm**".



05 MAP

Map orientation

- 1 Press **MENU** to display the "MAIN MENU" then select "Navigation".



- 2 Select "Map".



- 3 Select "Map heading".



- 4

Select:

- "**Flat map view**" to display the map in 2D,
- "**Perspective map view**" to display a perspective view.

With "**Flat map view**":

- "**North heading**" to keep the map always North up,
- "**Vehicle heading**" to have the map follow the direction of travel,

Then "**Confirm**" to save the modifications.



Map colour

- 1 Press **MENU** to display the "MAIN MENU" then select "Navigation".



- 2 Select "Map".



- 3 Select "Map colour".



- 4 Select:

- "**Automatic day/night mode**" to have the brightness of the map adjusted automatically according to the ambient light level, using the vehicle's sunshine sensor,
- "**Map in day mode**" to have the map always in day mode,
- "**Map in night mode**" to have the map always in night mode.

Then "**Confirm**" to save the modifications.



Street names are visible on the map from the 100 m scale.

05 SETTINGS

Navigation speech synthesis

Volume / Street names

1

Press **MENU** to display the "MAIN MENU" then select "**Settings**".



2

Select "**Audio**".



3

Select "**Voice**".



4


Adjust "**Voice synthesiser volume**" and/or "**State street names**" (spoken during navigation guidance).

5

Select "**Confirm**".




06 MEDIA

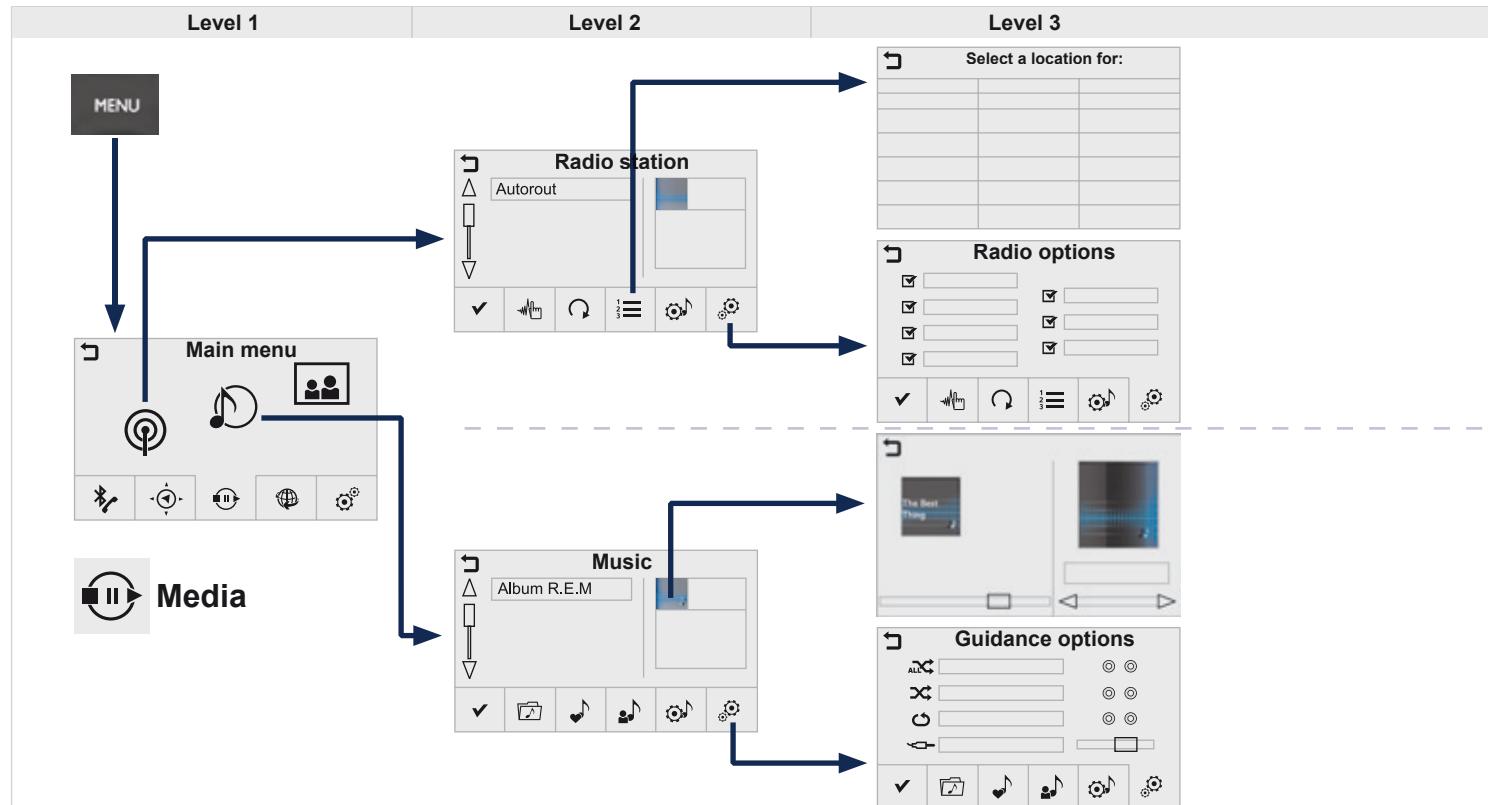

Level 1	Level 2	Level 3	Comments
 Media  Radio  Radio station →	 Frequency		Enter the desired radio frequency.
	 Update		Update the list of stations received.
	 Memory	Bookmark	Press a radio station to select it.
		Music	
		News	
	 Audio settings		Adjust the sound distribution in the vehicle.
	 Settings  Radio options →	<input checked="" type="checkbox"/> Alternative frequencies (RDS) <input checked="" type="checkbox"/> Radio text data display (TXT) <input checked="" type="checkbox"/> DAB-FM automatic station tracking <input checked="" type="checkbox"/> Traffic warnings (TA) <input checked="" type="checkbox"/> Traffic reports and transport flashes <input checked="" type="checkbox"/> News and sport programming <input checked="" type="checkbox"/> Newsflashes and special events	Activate or deactivate options.
		<input checked="" type="checkbox"/> Confirm	
 Media  Music →	 Folder		Press twice on the folder to go down a level. Press ▲ or the Back button to go up a level.
	 Playlist		
	 Genre		
	 Settings		
	 Guidance options	 Random (all tracks):  Random (current album):  Loop:  Auxiliary source amplification:	Choose the play settings.
	 Music / Album selection		Choose an album using the sleeve art which is displayed.
	<input checked="" type="checkbox"/> Confirm		Save the settings.

06 MEDIA

Level 1

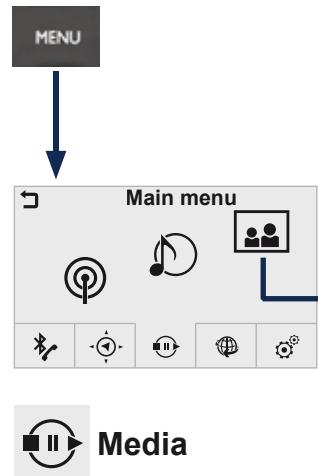

Level 2



Level 3



Level 1	Level 2	Level 3	Comments
 Media  Photo  Photos 	 Full screen		Display the selected photo full screen.
	 Rotate		Turn the photo 90°.
	 Select all		Select all the photos in the list. Press again to deselect them.
	 Slideshow	 Previous photo.	Display the photos in turn full screen.
		 Pause / Play.	
		 Next photo.	
	 Confirm		Save the settings.

06 RADIO

Selecting a station

OR

1a

Press **MENU** to display the "MAIN MENU" then select "Media".



2a

Select "Radio".



3a

Select a radio station from the list offered.



1b

Select "Update" to refresh the list.



1b

Press the **MODE** button until **RADIO** is displayed.



 
2b

If necessary, select changing the source.



3b

Select "FM Radio" or "AM Radio".



!

The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

06 RADIO

Changing a radio frequency

OR

1a

Press **MENU** to display the "MAIN MENU" then select "Media".



2a

Select "Radio".



3a

By manual frequency search



Press "**Frequency**", then enter the frequency using the keypad and confirm.

105.5 MHz



1b

Select changing source.



2b

Select "FM Radio" or "AM Radio".



3b

By alphabetical list

Press the current radio band then choose the radio station from the list offered.

FRANCE BLEU

3c

By automatic frequency search

Press **◀** or **▶** to move the cursor for an automatic search down or up for a radio frequency.

107.7 MHz



06 RADIO

Presetting a station

1 Select a radio station or frequency (refer to the corresponding section).

2 From the permanent display, press "Memory".



3 Select a number in the list to preset the previously chosen radio station.
A long press on this number presets (memorises) the station.



Recall pre-set stations

Press **MENU** to display the "MAIN MENU" then select "Media".



Select "Radio".



Select "Memory".



06 RADIO

Activating / Deactivating RDS

1

Press the **MODE** button until the **RADIO / MEDIA** display is obtained.



2

Select "RDS".



3

Select **Alternative frequencies (RDS)**.



4

Select **Confirm**.



i

RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

06 RADIO

Preset stations, buttons 1 to 15.

Short press: select the preset radio station.


Long press: preset a radio station.

Any thumbnail broadcast by the station.

Previous "Multiplex".

Presentation of the radio station.

Previous radio station.

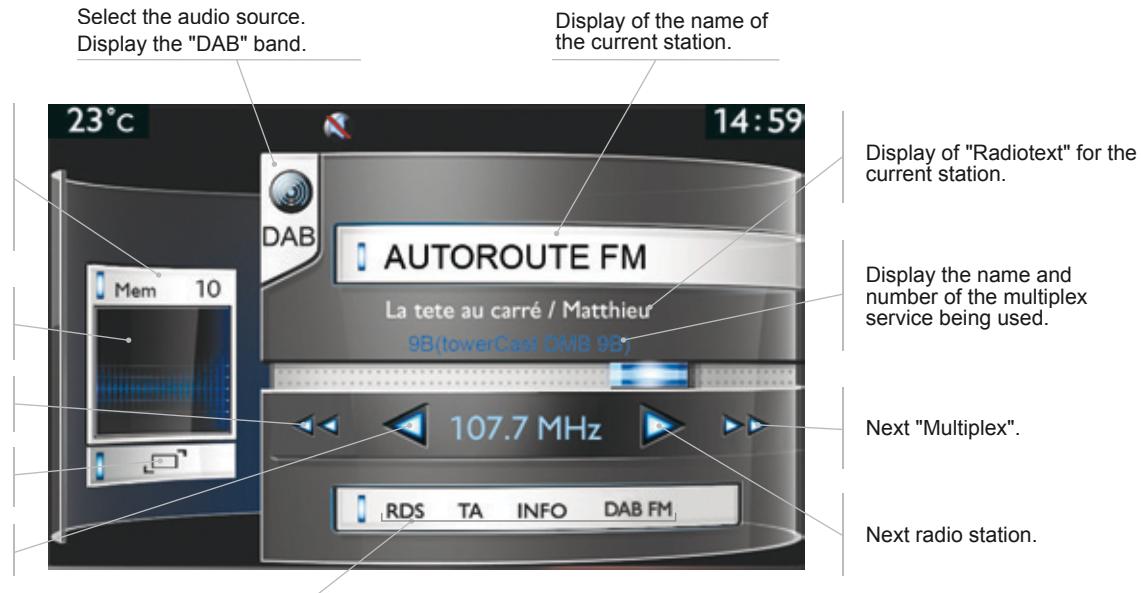

If the "DAB" radio station being listened to is not available on "FM", the "DAB FM" option is greyed out.

06 RADIO

DAB (Digital Audio Broadcasting) Digital radio



Digital radio provides higher quality reception and also the graphical display of information for the radio station. The different "multiplexes" provide you with a choice of stations displayed in alphabetical order.

1

Press **MENU** to display the "**MAIN MENU**" then select "**Media**".



 
2

Select "**RADIO**".



3

Select the radio in the list offered.



4

Select change of source.



5

Select "**DAB Radio**".



Digital radio - DAB / FM automatic station tracking



"DAB" does not cover 100% of the territory.

When the digital radio signal is weak, "DAB / FM auto tracking" allows you to continue listening to the same station, by automatically switching to the corresponding "FM" analogue station (if there is one).

1

Press **MENU** to display the "**MAIN MENU**" then select "**Media**".



2

Select "**RADIO**".



3

Select "**Settings**".



4

Select "**DAB-FM automatic station tracking**" then "**Confirm**".



If "DAB / FM auto tracking" is activated, there is a difference of a few seconds when the system switches to "FM" analogue radio with sometimes a variation in volume.

When the digital signal is restored, the system automatically changes back to "DAB".



If the "DAB" station being listened to is not available on "FM" ("DAB / FM" option greyed out), or "DAB / FM auto tracking" is not activated, the sound will cut out while the digital signal is too weak.

06 MUSIC

CD, MP3 CD, USB player, auxiliary input



Insert the CD in the player, insert the USB memory stick in the USB player or connect the USB peripheral to the USB port using a suitable cable (not supplied).

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick. However, the system memorises these lists and if they are not modified, the loading time will be shorter.



Selection of source

- 1 Press the **MODE** button until the **RADIO / MEDIA** display is obtained.




- 2 Select changing source then choose the source.



It is also possible to change source from the top bar.



The steering mounted **SRC** (source) button can be used to go to the next media source, available if the source is active.
Press the **OK** button to confirm the selection.

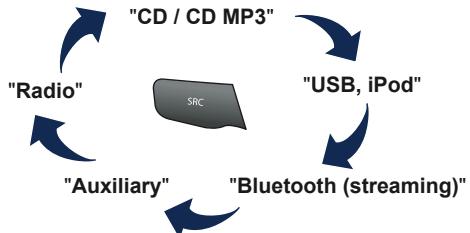

06 MUSIC

CD, MP3 CD / USB player

Information and advice



The audio equipment will only play audio files with ".wma, .aac, .flac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.
It also supports VBR (Variable Bit Rate) mode.
No other type of file (.mp4...) can be played.
WMA files must be of the standard wma 9 type.
The sampling rates supported are 11, 22, 44 and 48 KHz.



 
It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ü) to avoid any playing and displaying problems.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.
If the disc is recorded in another format it may not be played correctly.
It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.
In the particular case of a multi-session CD, the Joliet standard is recommended.



The system supports USB mass storage devices, Blackberry® devices or Apple® players via the USB port. The adaptor cable is not supplied.
Control of the peripheral device is with the audio system controls.
Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).



In order to be read, a USB memory stick must be formatted FAT 16 or 32.



The system does not support the operation of two identical devices connected at the same time (two memory sticks, two Apple® players) but it is possible to connect one memory stick and one Apple® player at the same time.



It is recommended that official Apple® USB cables are used to ensure correct operation.

06 MUSIC

Selecting a track to play

Previous track.		
Next track.		
Previous folder.		
Next folder.		
Pause.		
List of USB or CD tracks and folders.		
Up or down in the list.		
Confirm, next menu level.		
Up one menu level.		

06 MUSIC

Connecting APPLE® players

1

Connect the Apple® player to the USB port using a suitable cable (not supplied).
Play starts automatically.



2

Control is via the audio system.

i

The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).

The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

i

Copies of photos and album artwork are not compatible with the audio system. These appear only with a USB memory stick.

!

The version of software in the audio system may not be compatible with the generation of your Apple® player.
The list of devices compatible with software versions is available from PEUGEOT dealers.

Audio streaming



Streaming allows audio files on your telephone to be played via the vehicle's speakers.

1

Connect the telephone: see the "Communications" section, then "Bluetooth".
Choose the "Audio" or "All" profile.

2

If play does not start automatically, it may be necessary to start the audio playback from the telephone.
Control is from the peripheral device or by using the audio system buttons.


!

Once connected in streaming mode, the telephone is considered to be a media source.
It is recommended that you activate "Repeat" on the Bluetooth peripheral.

06 MUSIC

Using the auxiliary input (AUX) (cable not supplied)

1 Connect the portable device (MP3 player...) to the auxiliary JACK socket using an audio cable.

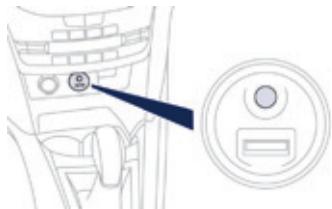

2

Press the **MODE** button until the **RADIO** display is obtained.



3

Select changing the source.



4

Select the **AUXILIARY** source.



i

First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.
Display and management of the controls are via the portable device.

06 SETTINGS

Audio

1

Press **MENU** to display the "**MAIN MENU**", then select "**Preferences**".



2

Select "**Audio**".



3

Select "**Ambience**" or "**Balance**".



!

The distribution (or spatialisation using the Arkamys® system) of sound is an audio process that allows the audio quality to be adapted to the number of listeners in the vehicle.

!

The audio settings (**Ambience**, **Bass**, **Treble** and **Loudness**) are different and independent for each sound source.
The settings for distribution and balance are common to all sources.

!

- "**Ambience**" (choice of 6 musical ambiances)
- "**Bass**"
- "**Treble**"
- "**Loudness**" (Activate/Deactivate)
- "**Balance**" ("**Driver**", "**All passengers**", "**Front speakers only**")

i


On-board audio: Arkamys® Sound Staging.

With Sound Staging, the driver and passengers are immersed in an "audio scene" recreating the natural atmosphere of an auditorium: truly a part of the scene and its surroundings.

This new sensation is made possible by software in the audio system which processes the digital signals from the media players (radio, CD, MP3...) without changing the audio settings. This processing takes account of the characteristics of the passenger compartment to produce optimum results.


The Arkamys® software installed in your audio system processes the digital signal from the media players (radio, CD, MP3, ...) and recreates a natural musical scene, with harmonious placement of instruments and voices in the space in front of passengers, level with the windscreen.

07 COMMUNICATION

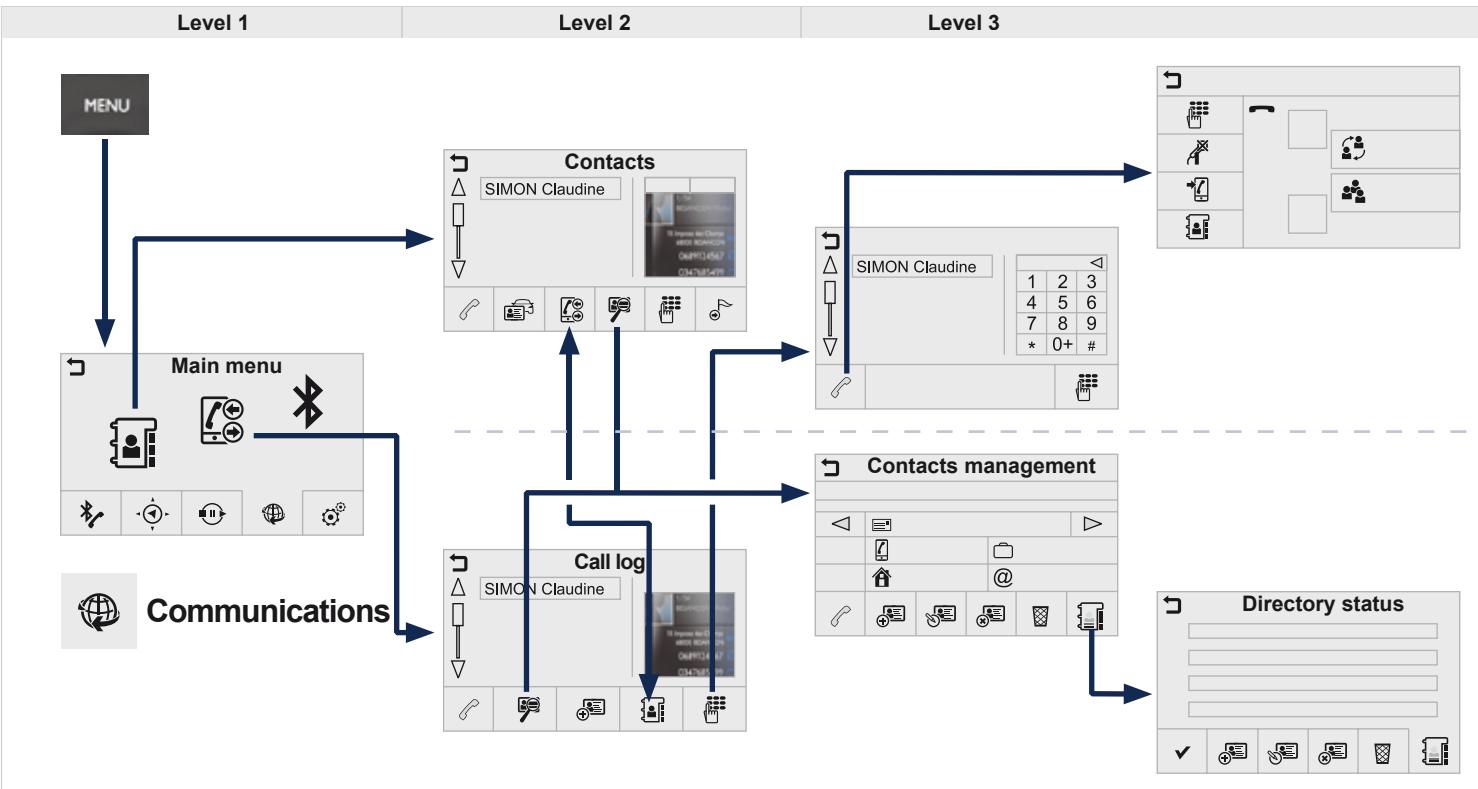

Level 1	Level 2	Level 3	Comments
 Communications  Contacts 	 See contacts	Map	Press a number to start a call or on the address to start navigation.
		Info	
	 Call log		Consult the Call log and the contacts saved in the vehicle.
	 Consult		
	 Keypad		Enter a number using the keypad.
	 Guide		Start navigation towards the selected contact, using their address.
	 Call Enter a number using the keypad.	Keypad	"Micro OFF": switches off the microphone temporarily so that your contact cannot hear your conversation with a passenger.
		Micro OFF	"Privacy mode": switch to your mobile for a private conversation or to leave the vehicle without ending the call.
		Privacy mode	"Swap": change contact while maintaining the current contact.
		Contacts	"Conference": accept the incoming call to allow communication between all.
		Swap	
 Communications  Call log 	 Consult Contacts management 	New	Create a new contact.
		Modify	Modify the displayed contact.
		Delete	Delete the displayed contact.
		Delete	Delete all information on the displayed contact.
		Status	Used or free contacts, percentage used of internal directory and Bluetooth contacts.
		Call	After making choices, start the call.
		Add contact	Add a new contact.
	 Contacts		
	 Keypad		
	 Call		After making choices, start the call.

07 COMMUNICATION

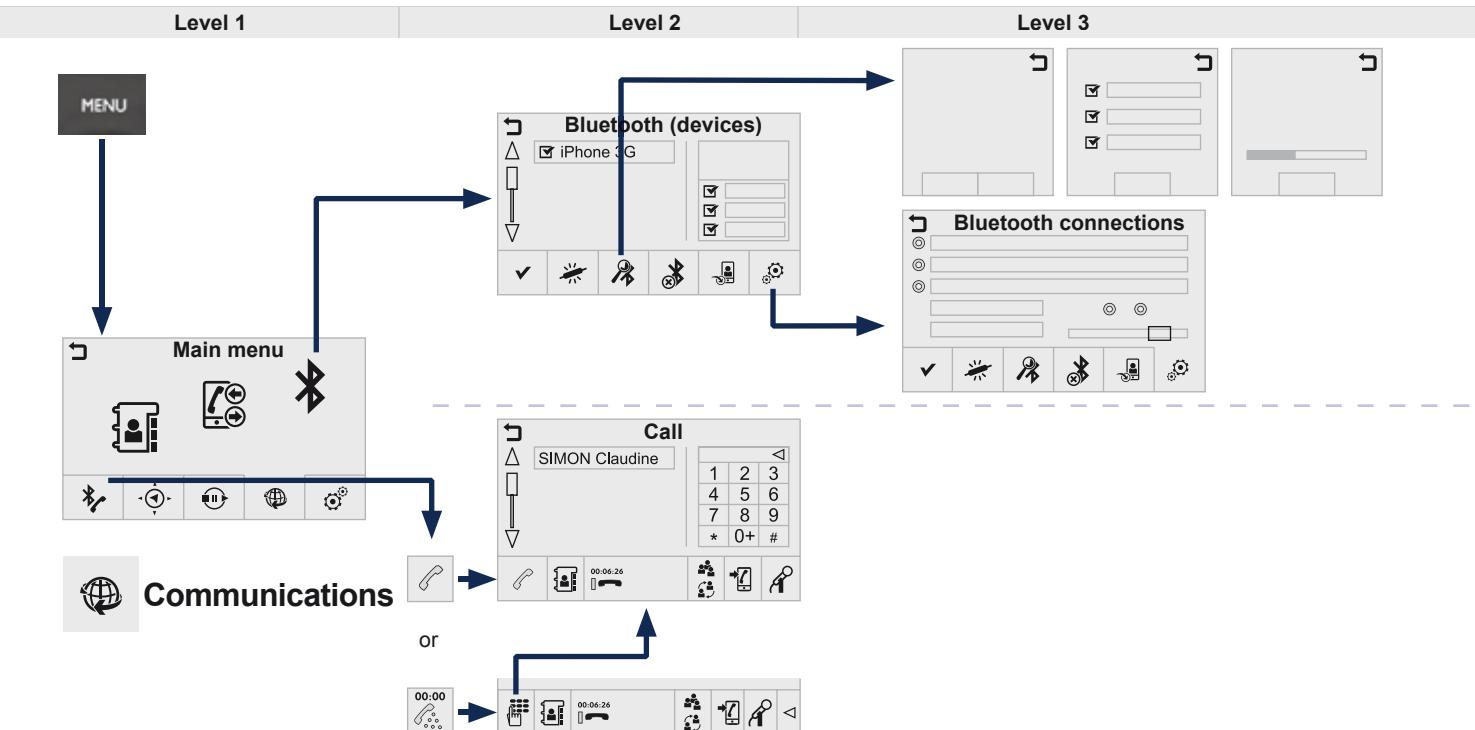

During a call (short cut menu).

Level 1		Level 2		Level 3		Comments			
  <p>Communications ↓ Bluetooth ↓ Bluetooth (devices) →</p>		Connect	Telephone Audio Streaming Internet		Connect/disconnect the selected telephone.				
			All profiles Telephone (hands free)		Start the search for another peripheral.				
			Audio Streaming						
		Delete			Delete the selected telephone.				
		Update			Import the contacts from the selected telephone to store them in the audio system.				
		Settings / Bluetooth connections			Bluetooth settings.				
		Confirm			Save the settings.				
		Call			Enter a number using the keypad. Then press to start the call.				
		Contacts			List of contacts.				
		Hang up			Hang up the current call.				
		Swap / Conference call			Change contact while maintaining the current contact. Accept the incoming call and allow communication with all.				
		Micro OFF			Switch off the microphone temporarily.				
		Privacy mode			Switch to your mobile for a private conversation.				
		Quit			Quit this menu.				

07 BLUETOOTH

Pairing a Bluetooth telephone First connection

1 Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).



2 Press **MENU** to display the "**MAIN MENU**" then select "**Communications**".




3 Select "**Bluetooth**".



4 Select **Search**.
The list of peripherals detected is displayed.



5 Select the name of the desired peripheral from the list and **Confirm**.

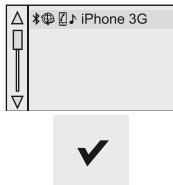

! For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio unit must be carried out with the **vehicle stationary**.

6 The system offers to connect the telephone:

- in "**All profiles**" (for selection of both profiles).
- in "**Telephone (hands free)**" profile (telephone only).
- in "**Audio Streaming**" profile (streaming: playing music files on the telephone),
Select and confirm.

! The "**Hands-free**" profile should be used in preference if "**Streaming**" is not desired.

! The ability of the system to connect with only one profile depends on the telephone. The two profiles may both connect by default.

! Visit www.peugeot.co.uk for more information (compatibility, additional help, ...).

07 BLUETOOTH



The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.

7

Choose a code for the connection then "Confirm".



8

Enter the same code on the telephone then accept the connection.



9

The telephone is added to the list.



10

Then accept automatic connection on the telephone to allow the telephone to reconnect automatically every time the vehicle is started.



Depending on the type of telephone, the system will ask you to accept or not the transfer of your contacts.



If not, select "**Update**".



On return to the vehicle, the last telephone connected automatically reconnects, within around 30 seconds after switching on the ignition (Bluetooth activated and visible).

To modify the automatic connection mode, remove the pairing and pair the telephone again with the desired mode.

07 BLUETOOTH

Receiving a call

1

An incoming call is announced by a ring and a superimposed display in the screen.

2a

Make a short press on the steering mounted **TEL** button to accept an incoming call.



2b

Make a long press on the steering mounted **TEL** button to reject the call.

or

Select "**End call**".



Managing paired telephones

1

Press **MENU** to display the "**MAIN MENU**" then select "**Communications**".



2

Select "**Bluetooth**".



3


Select the name of the peripheral in the list.



4

Select:

- "**Connect**" or "**Disconnect**" to connect or disconnect the Bluetooth connection with the peripheral selected.
- "**Delete**" to remove it from the list.

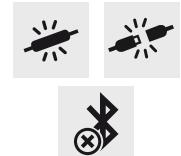

Select "**Settings**" for Bluetooth visibility, automatic call acceptance, importing contacts.



07 CONTACTS

Making a call

Calling a new number

- 1 Press **MENU** to display the "**MAIN MENU**" then select "**Communications**".



- 2 Select "**Contacts**".



- 3 Select "**Keypad**".



- 4 Enter the phone number using the keypad then "**Call**" to start the call.



Shortcut:
Press **MENU** to display the "**MAIN MENU**" then select the telephone.
Select or enter a number and then press "**Call**" to start the call.



Use of the telephone is not recommended while driving. We recommended that you park safely or make use of the steering mounted controls.

Calling a contact

- 1 Press **MENU** to display the "**MAIN MENU**" then select the telephone.



 
Or make a long press on the steering mounted **TEL** button.



- 2 Select "**Contacts**".




- 3 Select the desired contact from the list offered.



- 4 Select "**CALL**".



 Select the mobile or home line in the "**Info**" section.



07 CALL LOG

Calling a recently dialled number

1

Press **MENU** to display the "**MAIN MENU**" then select "**Communications**".



 
2

Select "**Call log**".



3

Select the desired contact from the list offered.



i

It is always possible to make a call directly from the telephone; park the vehicle first as a safety measure.

Ending a call

1

Select the telephone in the screen.
or



Or make a long press on the steering mounted **TEL** button.
or



Press the **MODE** button until the **TELEPHONE** display is obtained.



2

Select "**End call**".



07 SETTINGS

Ringtones

1

Press **MENU** to display the "**MAIN MENU**" then select "**Preferences**".



2

Select "**Audio**".



3

Select "**Ringtones**".



4

You can select the ringtone used and adjust its volume.

5

Select "**Confirm**".



Managing contacts / entries

1

Press **MENU** to display the "**MAIN MENU**" then select "**Communications**".



2

Select "**Contacts**".



3

Select "**Files**".



4

Select:

- "**New**" to add a new contact.
- "**Modify**" to edit the selected contact.
- "**Delete**" to delete the selected contact.
- "**Delete all**" to delete all of the information for the selected contact.




5

Select "**Directory information**" for the number of entries used, available, ...




08 SETTINGS

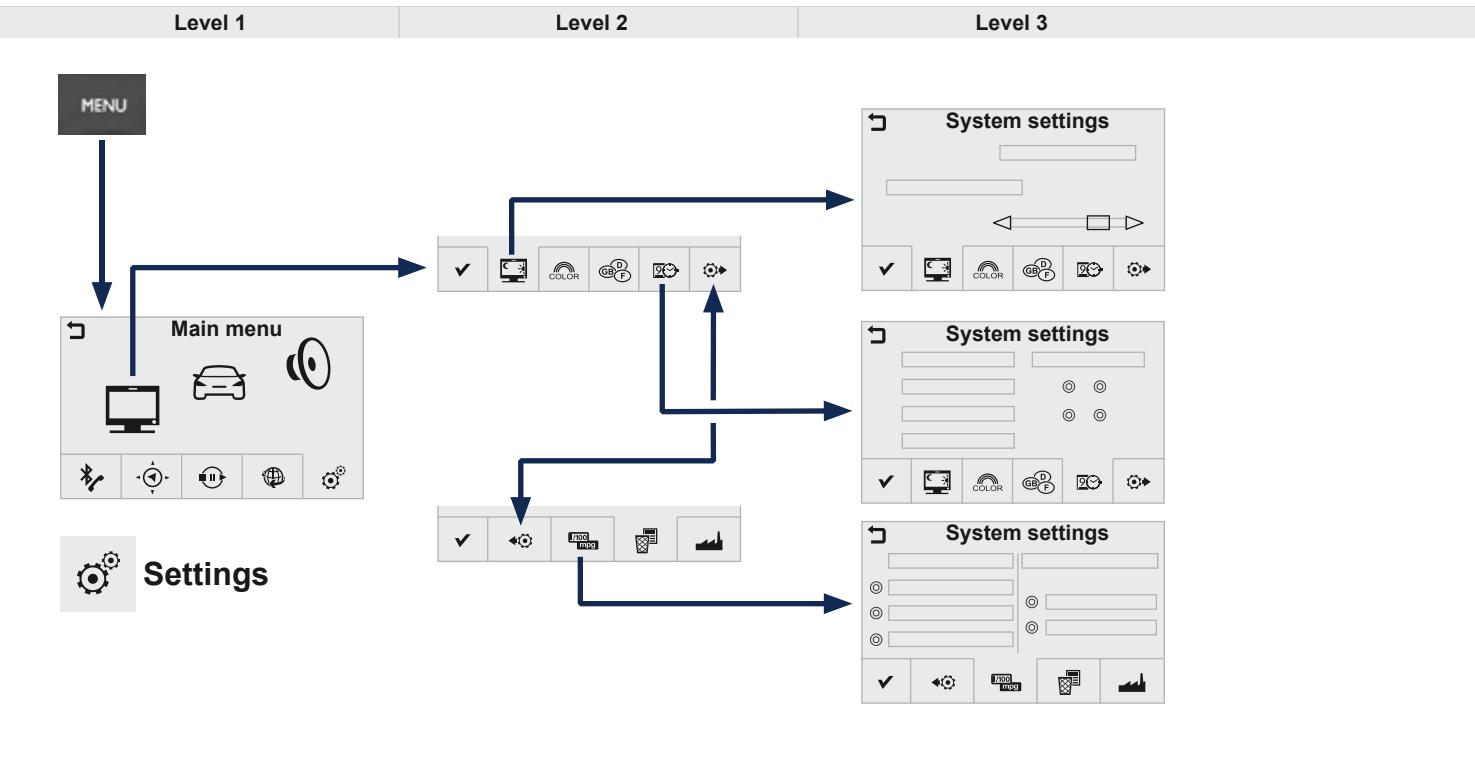

Level 1	Level 2	Level 3	Comments	
 Settings  System configuration  System settings 	 Brightness	Turn off screen	Set the brightness.	
		Adjust daytime brightness:		
		Animations and scrolling:		
	 Skins	Change the environment.		
	 Languages	Select the language.		
		 Date & Time	GPS Synchronisation:	
			Set the date and time.	
	 Other	Time format: Continue with other system settings		
	 Units	Set the units for the display of distance, fuel consumption and temperature.		
	 Delete data	Select the desired data in the list then press Delete.		
	 Settings	Factory settings.		
	 Confirm	Save the settings.		

08 SETTINGS

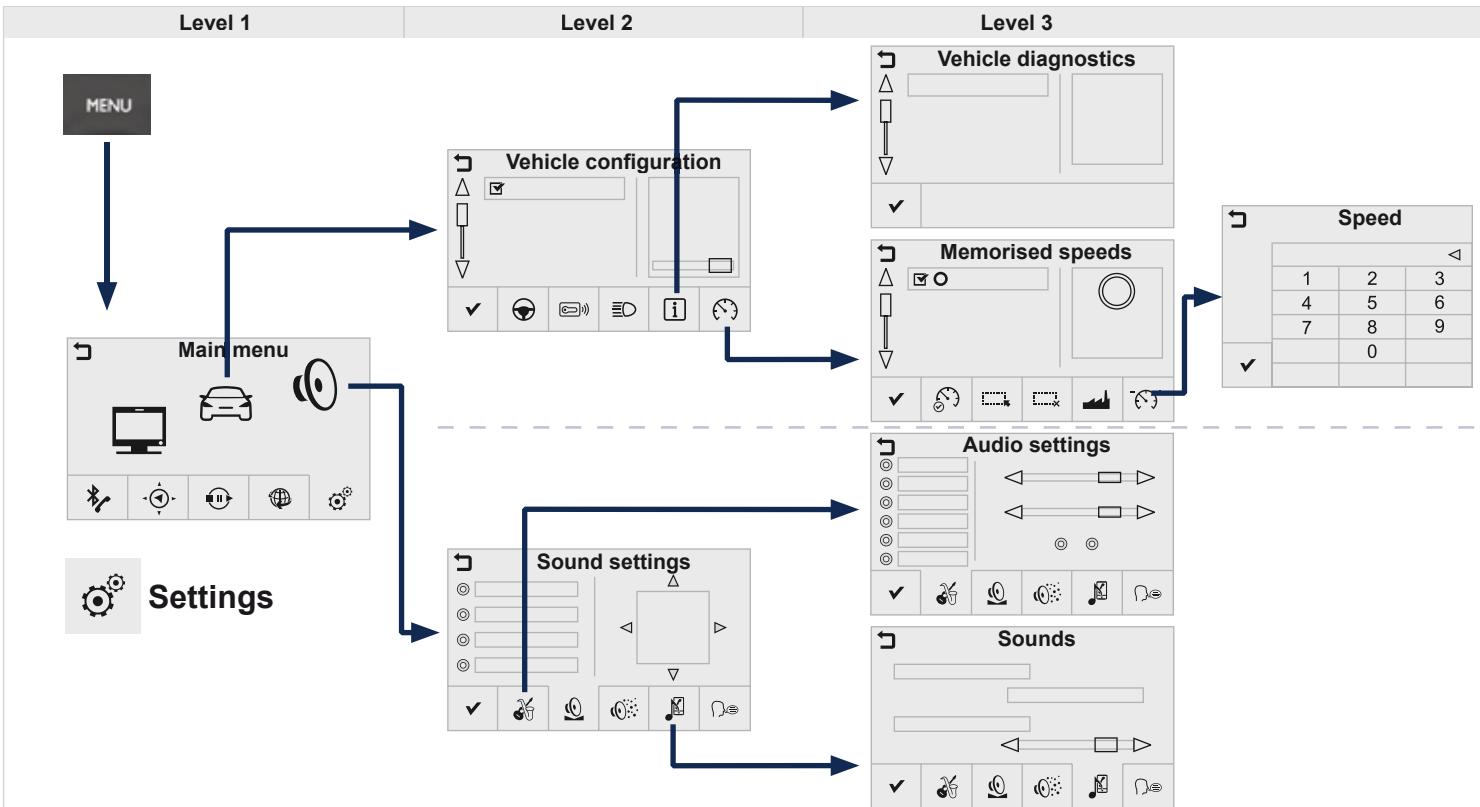

Level 1		Level 2		Level 3		Comments				
   Settings ↓ Vehicle settings ↓ Vehicle configuration →	    Driving assistance Access Lighting Diagnostics / Vehicle diagnostics					Choose from the categories, if no family is chosen, the complete list of functions is displayed.				
						List of faults detected (according to version).				
		 Speeds	     	Activate Select all Deselect all Values Modify Confirm		With the speed(s) checked, press to store these speeds. Press again to deactivate.				
						Select or deselect all speeds.				
						Programme the speeds with the default values.				
						Modify the selected speed.				
						Save the options.				
						Save the settings.				
  Settings ↓ Sound settings →	 Ambience	  	Bass Treble Loudness							
	 Balance			Set the position of the sound in the vehicle using the Arkamys system.						
	 Effects			Choose the volume or activate it according to vehicle speed.						
	 Ringtones	 Ringtone Ringtone volume:	Ringtone Ringtone volume:	Choose the ringtone and volume when the telephone rings.						
	 Voice synthesis			Chose the volume for the voice and announcement of street names.						
	 Confirm			Save the settings.						

08 SETTINGS

System

Modifying system settings

1

Press **MENU** to display the "MAIN MENU" then select " **Preferences**".



2

Select "**System configuration**".



3


Select "**Other**" to display the other settings.



3

Select:

- "**Brightness**" to switch off the screen or adjust the brightness.
- "**Languages**" to change the language.
- "**Units**" to change the units used for distance, fuel consumption and temperature.
- "**Date & Time**" to change the time zone, synchronisation with GPS, time and its format and then the date.

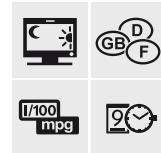

i

Select "**Delete data**" to delete the list of recent destinations, personal points of interest, contacts in the list.



Choose the item then select "**Delete**".

Select "**Recent destinations**" then press on "**Delete**" and confirm with the message.



4

Select "**Factory settings**" to return to the original settings.



 
08 SETTINGS

Vehicle

Modifying its settings

1

Press **MENU** to display the "**MAIN MENU**" then select "**Preferences**".



2

Select "**Vehicle**".



3

Choose the setting from the list to see its description and, depending on version, modify the setting.

Then select the setting to activate it.



4

Select "**Confirm**" to save the settings.



Select "**Driving**" and/or "**Access**" and/or "**Lighting**" to filter the categories.
Deselect all to have the complete list.



FREQUENTLY ASKED QUESTIONS

The following table groups together the answers to the most frequently asked questions concerning your audio system.

QUESTION	ANSWER	SOLUTION
Navigation, guidance		
The route calculation is not successful.	The guidance criteria may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the guidance criteria on the Navigation Menu, "Guidance options"\ "Define calculation criteria".
I am unable to enter my post code.	The system only accepts post codes of up to 5 characters.	
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
The risk areas audible warning does not work.	The audible warning is not active.	Activate audible warnings in the Guidance options menu, "Navigation - guidance", "Set parameters for risk areas".
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Traffic info" function in the list of guidance criteria.
I receive a Risk area alert which is not on my route.	Other than guidance, the system announces all Risk areas positioned in a cone located in front of the vehicle. It may provide an alert for a Risk area located on nearby or parallel roads.	Zoom in on the map to view the exact position of the Risk area. Select "On the route" to no longer receive alerts other than guidance or to reduce the time for the announcement.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the "Geographic filter" settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the SETUP button, then select "GPS coverage").
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.
Telephone, Bluetooth		
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	<ul style="list-style-type: none"> - Check that your telephone's Bluetooth function is switched on. - Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone at www.peugeot.co.uk (services) .
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	
CD, MP3		
The CD is ejected automatically or is not played by the player.	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.</p> <p>The CD has been recorded in a format that is not compatible with the player (udf, ...).</p> <p>The CD is protected by an anti-pirating protection system which is not recognised by the audio system.</p>	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: refer to the advice in the "AUDIO" section. - The audio system's CD player does not play DVDs. - Some recorded CDs will not be played by the audio system because they are not of the correct quality.
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

FREQUENTLY ASKED QUESTIONS


QUESTION	ANSWER	SOLUTION
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	
Radio		
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	
	Some radio stations send other information in place of their name (the title of the song for example).	
The name of the radio station changes.	The system interprets this information as the name of the station.	

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Settings, configuration		
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings for Volume, Bass, Treble, Equalizer and Loudness can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings for (Volume, Bass, Treble, Equalizer, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Fr-Re balance, Le-Ri balance) to the middle position, select the "None", musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
With the engine off, the system switches off after a few minutes of use.	<p>When the engine is switched off, the system's operating time depends on the battery charge.</p> <p>The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.</p>	Start the vehicle's engine to increase the battery charge.
USB, portable player, connection key		
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
When I connect my iPhone as telephone and to the USB port at the same time, I am unable to play the music files.	When the iPhone connects automatically as a telephone, it forces the streaming function. The streaming function takes the place of the USB function which is then not useable, there is a period without sound of the track being played with Apple® players.	Disconnect and reconnect to the USB port (the USB function takes priority over streaming).

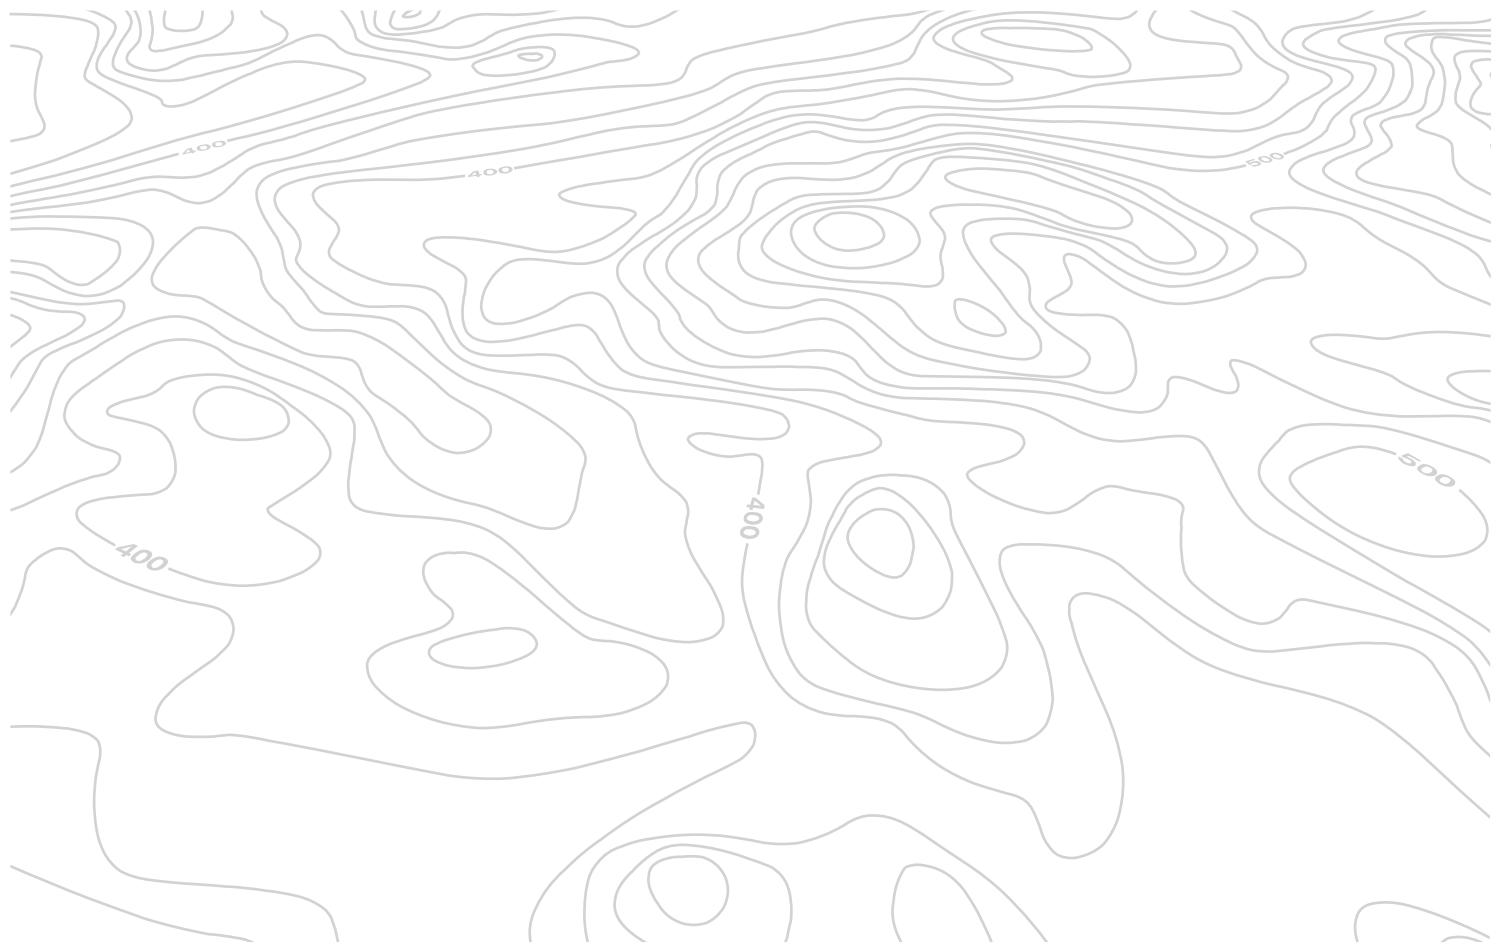



AUDIO SYSTEM / BLUETOOTH



For safety reasons, the driver must only carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off after activation of energy economy mode.

CONTENTS

01 First steps	p. 280
02 Steering mounted controls	p. 281
03 Radio	p. 282
04 Audio	p. 285
05 Using the telephone	p. 291
06 Audio settings	p. 297
07 Configuration	p. 298
08 Screen menu map	p. 299
Frequently asked questions	p. 300

01 FIRST STEPS

Select the source:

- FM1, FM2, AM, CD, USB, AUX, Streaming.

- accept an incoming call.

Long press:

- open the calls log for the telephone connected.
- or end a call if in progress.

Adjust audio settings:

sound ambience, treble, bass, loudness, distribution, left/right balance, front/rear balance, automatic volume.

On / Off and volume adjustment.

Abandon the current operation.

Go up one level (menu or folder).

Eject CD.



Display the list of stations received, the CD/USB tracks or folders.

Long press: update the list of stations received.

Open the main menu.

Automatic search for a lower / higher radio frequency.

Select previous / next CD, USB track.


Navigation in a list.

Press and hold: fast forwards or backwards.

Select a preset radio station.
Radio: long press: preset a radio station.

Other than radio: see the corresponding sections.

02 STEERING MOUNTED CONTROLS

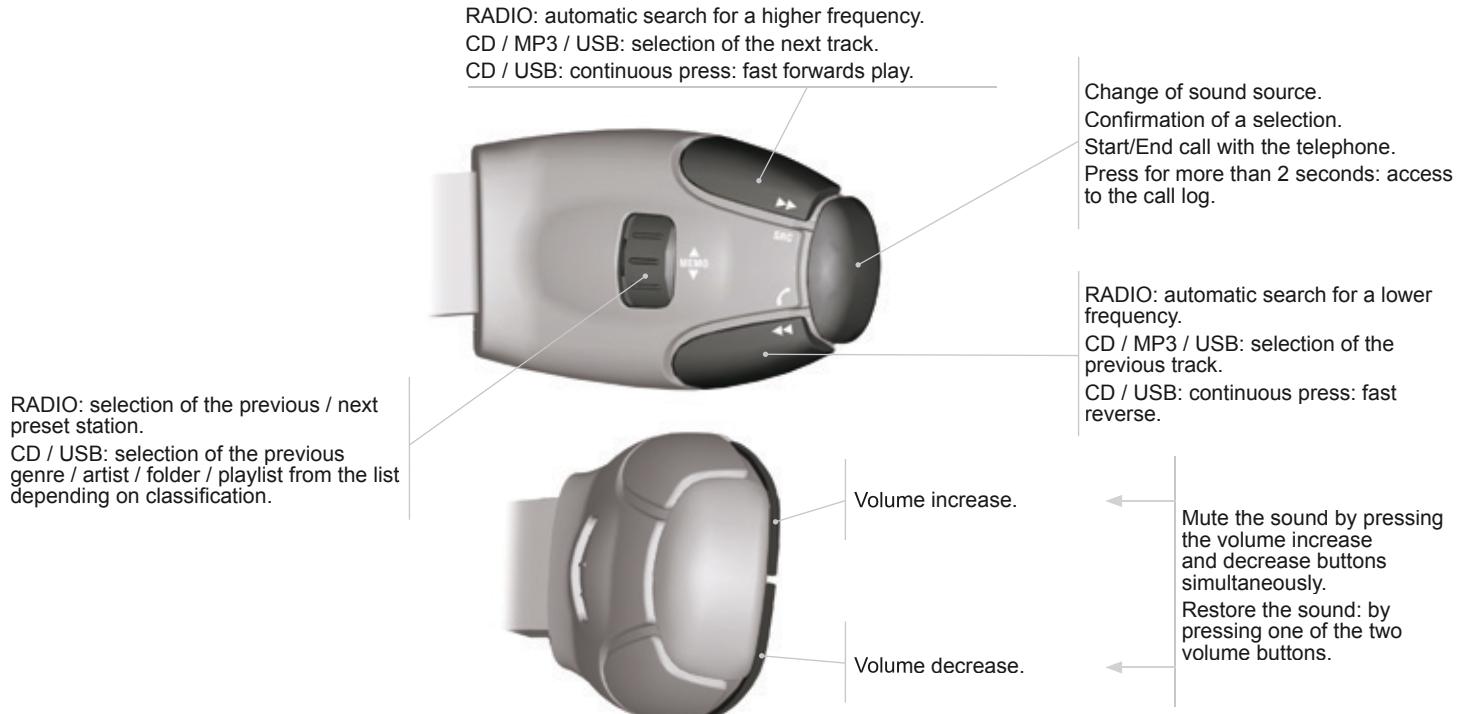

03 RADIO

Radio



The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking (alternative frequencies) mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

Presetting and selecting a station

1



 
Press **SRC/TEL** repeatedly and select the FM1, FM2 or AM waveband.




2



Make a long press on one of the buttons to preset the station being listened to. The name of the station is displayed and an audible signal confirms the preset.



 Press a button to listen to the corresponding preset station.



When recalling a preset station, if the reception of the station is poor, the radio will try to find a frequency transmitting the same programme and a message appears in the screen.

Managing the list



A long press on **LIST** builds or updates the list of stations; audio reception is cut momentarily.



1



 
Press **LIST** to display the list of stations received in alphabetical order.



2




Select the desired radio station and confirm by pressing "**OK**".



3



 A press changes to the next or previous letter (e.g. A, B, D, F, G, J, K, ...).



03 RADIO


RDS

Entering a frequency manually

1



Press **MENU**, select "Radio", then select "Write freq.".

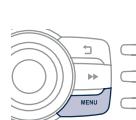

2



Press + or - to select the desired frequency and confirm with "OK".



i

RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

1



 
With source FM1 or FM2, press **MENU** then select "Radio".



2



Select or deselect "RDS" to activate or deactivate RDS then confirm with "OK" to save the setting.



03 RADIO

Receiving TA messages



The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1



 
Press **MENU**, select "Radio".



2



Select or deselect "**TA**" to activate or deactivate the reception of traffic messages.



Displaying RADIO TEXT

 


Radio text is information transmitted by the radio station related to the current programme or song.

1



With the radio displayed on the screen, press **MENU** then select "Radio".



2

Select or deselect "**TXT**" to activate or deactivate the display of Radio Text.

04 AUDIO

Audio CD

Playing a CD



Insert 12 cm diameter circular compact discs only.

Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.

Without pressing the **EJECT** button, insert a CD in the player, play begins automatically.

1



 
To play a disc which has already been inserted, press the **SRC/TEL** button several times until CD play is displayed.



2



Press one of the buttons to select a track on the CD.
Press and hold one of the buttons for fast forward or backward.



04 AUDIO

CD, USB

Information and advice



The audio system will only play files with ".mp3", ".wma" and ".wav" on a CD and can play files with ".ogg" extension only on USB.



A high compression rate can adversely affect sound quality.



The playlists accepted on CD, MP3, iPod and USB connection are types ".m3u" and ".wpl".

The number of files recognised is limited to 5 000 in 500 folders on a maximum of 8 levels.



On a single disc, the CD player can read up to 255 MP3 files spread over 8 folder levels with a maximum of 192 folders. However, it is recommended that this be kept to 2 levels so as to limit the time taken to access and play the CD.

During play, the folder structure is not observed.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select standards ISO 9660 level 1.2 or Joliet.

If the disc is recorded in another format, it may not be played correctly. It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



Do not connect a hard disk or USB device other than audio players to the USB port. This may cause damage to your installation.

04 AUDIO

CD, USB

Playing a compilation



Insert an MP3 compilation in the CD player or connect a memory stick to the USB port.



The system creates playlists (temporary memory) the creation time for which can take from a few seconds to several minutes.

The playlists are updated every time the ignition is switched off or a USB memory stick is connected.

Play starts automatically after a period which depends on the capacity of the USB memory stick.



 
At a first connection, the order suggested is by folder. When connecting again, the order previously chosen is retained.




To play a disc or memory stick which has already been inserted, press **SRC/TEL** several times in succession and select "CD" or "USB".




Press one of the buttons to select the next or previous track.






 
Press one of the buttons to select the next or previous folder in the order chosen.



 Press and hold one of the buttons for fast forwards or backwards.



04 AUDIO
    
<p>5</p>  <p>Press LIST to display the structure of the folders in the compilation.</p> 	<p>9</p>  <p>Press MENU, select "Media" then select or deselect "TA" to activate or deactivate reception of traffic messages.</p> 
<p>6</p>  <p>Select a line in the list.</p> 	<p>10</p>  <p>Select the play mode: "Normal", "Random", "Random all" or "Repeat".</p> 
<p>7</p>  <p>Jump a page.</p> 	  <p>Return to the top level of the folder structure to select the type of tracks.</p> <ul style="list-style-type: none">- By Folders (CD or USB): all folders containing audio files recognised on the peripheral device, in alphabetical order without following the folder structure.- By Artist (USB only): all of the artist names defined in the ID3 Tags, in alphabetical order.- By Genre (USB only): all of the genres defined in the ID3 Tags.- By Playlist (CD or USB): if playlists have been saved.
<p>8</p>  <p>Up a level in the menu.</p> 	

04 AUDIO

APPLE® player or portable player



The audio files on a Mass Storage portable player* can be heard through the vehicle's speakers by connecting it to the USB port (cable not supplied).



Management of the device is via the audio system controls; refer to the "**CD, USB**" section.



The Apple® player must be updated regularly for the best connection.



The playlists are those defined in the Apple® player.



The Apple® player must be generation 3 or later.

* Check your player's manual.

04 AUDIO

Streaming - Playing audio files via Bluetooth



Depending on the compatibility of the phone



Streaming allows music files on a telephone to be heard via the vehicle's speakers.
The telephone must support the appropriate Bluetooth® profiles (profiles A2DP / AVRCP).

1



Connect the telephone: see the "USING THE TELEPHONE" section.

2



Activate the streaming source by pressing **SRC/TEL**. Control of playback is via the audio system. The contextual information can be displayed in the screen.



In certain cases, playing of the audio files must be initiated from the telephone.



The audio quality depends on the quality of the transmission from the telephone.

05 USING THE TELEPHONE

Pairing a Bluetooth telephone / First connection



The services offered depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Consult your telephone's manual and your operator to find out which services are available to you.



For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be carried out with the vehicle stationary and the ignition on.



Visit www.peugeot.co.uk for more information (compatibility, more help, ...).



 
It is not possible to pair more than 5 telephones. Press **MENU** and select "**Bluetooth**". Select "**BT management**". If 5 telephones are already paired, select the telephone to be deleted by pressing "**OK**" and select "**Delete**" (refer to "Managing connections").



Activate the telephone's Bluetooth function and ensure that it is set as visible to all (refer to the telephone instructions).



Press **MENU** then select "**Bluetooth**".




Select "**Search**".



A window is displayed with "**Searching device**".



 Select the telephone to be paired from the list and confirm with "**OK**". Only one telephone can be paired at a time.



05 USING THE TELEPHONE



In some cases, the Bluetooth address of the telephone may appear instead of the name of the telephone.

6



A virtual keypad is displayed on the screen: choose a 4 digit code then confirm with **OK**.

7

A message is displayed on the screen of the telephone: enter the same code and confirm.



If pairing fails, try again; the number of attempts is not limited.

8

Accept the connection to the telephone.

9

A message appears in the screen to confirm the result of the connection.

!

Pairing can also be initiated from the telephone by searching for detected Bluetooth devices.

!

The directory and the calls list can be accessed after the synchronisation period (if the telephone is compatible). Automatic connection must be configured in the telephone to allow the connection each time the vehicle is started.

05 USING THE TELEPHONE

Managing connections

 
1




Press **MENU** then select "**Bluetooth**".



2



 Select "**BT management**" and confirm. The list of paired telephones is displayed.



Indicates connection of the audio profile.

 


Indicates connection of the hands-free profile.

3




Select a telephone and confirm "**OK**".



4



 Then select or deselect:
- "**Tel.**" : hands-free connection
- "**Audio**": play audio files
"**OK**" to confirm the choice.
Select "**Delete**" to delete the pairing.




05 USING THE TELEPHONE

Making a call - Recently called numbers*

1



Make along press on **SRC/TEL** to display the calls list.

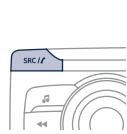


i

For access to the calls list, it is also possible to press **MENU**, select "Telephone", then select "Call", and finally select "Calls list".

2




In the list of calls, select the number and choose "Missed calls", "Dialed calls" or "Answered calls".

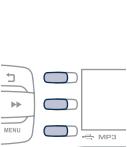

3



 
Navigation in the calls list.



4



 
Previous or next page in the calls list.



5



 "OK" starts the call.



i


The calls list includes the calls sent from and by from the vehicle via the connected telephone.

It is possible to make a call directly from the telephone; stop the vehicle as a safety measure.




* Depending on the compatibility of the telephone.

05 USING THE TELEPHONE

Making a call - From the directory

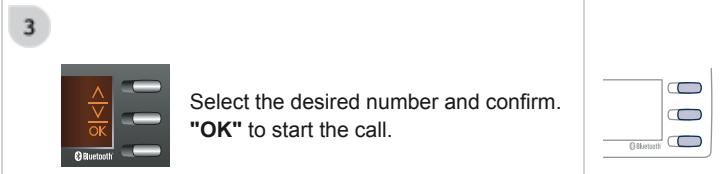

Receiving a call

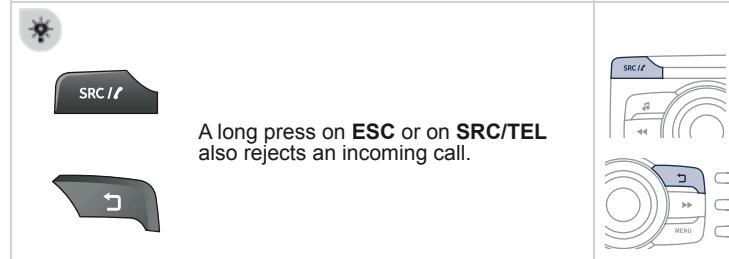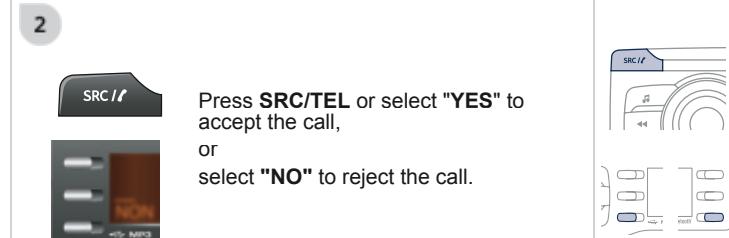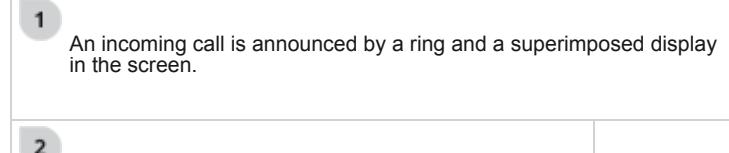


05 USING THE TELEPHONE

Managing calls

1a Hang up



 In the contextual menu, select "Hang up" to end the call.



A long press on **SRC/TEL** also ends the call.



 
1b Secret - Mute

(so that the caller cannot hear)



In the contextual menu:

- select "**Micro OFF**" to switch off the microphone.
- select "**Micro OFF**" to switch the microphone on again.




1c Combined mode

(to leave the vehicle without ending the call)



In the contextual menu:

 - select "**Combined mode**" to transfer the call to the telephone.
- select "**Combined mode**" to transfer the call to the vehicle.



In certain cases, the combined mode has to be activated from the telephone.

The Bluetooth connection will be restored automatically if the ignition has been switched off, then on again (depending on the compatibility of the telephone).


06 AUDIO SETTINGS

1



Press to display the audio settings menu.

Press to go to the next setting.

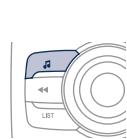

2

The settings available are:

- AMBIANCE: BASS, TREBLE and LOUDNESS.
- BALANCE (left/right balance), FADER (front/rear balance)
- SOUND DIST. (driver or passenger).
- AUTO VOLUME.

!

The distribution, or spatialisation of sound, is an audio process which allows the sound quality to be improved according to the setting chosen, corresponding to the position of the listeners in the vehicle.

i

The AMBIANCE, TREBLE and BASS audio settings are different and independent for each sound source.

07 CONFIGURATION

Display and language settings

1



 
Press **MENU** then "Config.".




2a




Select "**Displaying**" to activate or deactivate scrolling text.



2b

 

 
Select "**Language**" to modify the display language.




2c



 
Select "**Version**" for information on the software.



2d

 

 Select "**System**" when you want to install an update. Information can be obtained from a PEUGEOT dealer.



08 SCREEN MENU MAP(S)

MENU

1 Radio

2 TA

2 RDS

2 TXT

2 Write freq.

Media

2 Normal

2 Random

2 Random all

2 Repeat

2 TA

Telephone

1 Call

2 Directory

3 Calls list

4 Missed calls

4 Dialed calls

4 Answered calls

2 Phone status

Bluetooth

1 BT management

2 Search

Config.

1 Time

2 Displaying

3 Scrolling text

Language

2 Deutsch

3 English

3 Español

3 Français

3 Italiano

3 Nederlands

3 Português

3 Português-Brasil

3 Русский

3 Türkçe

2 Version

2 System

FREQUENTLY ASKED QUESTIONS

The following tables contain answers to the most frequently asked questions.

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (volume, bass, treble, ambience, loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (volume, bass, treble, ambience, loudness) are adapted to the sources listened to. It is advisable to adjust audio settings (bass, treble, Front-Rear balance, Left-Right balance) to the middle position, select the musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
When changing the settings for treble and bass, the ambience setting is deselected. When changing the ambience setting, treble and bass are reset to zero.	Choosing an ambience imposes settings for treble and bass. Modifying one without the other is only possible with a personalised ambience.	Modify the treble and bass settings or the ambience setting to obtain the desired sound quality.
When changing the balance setting, distribution is deselected.	Choosing the "driver" distribution setting imposes a balance setting.	Modify the balance setting or the distribution setting to obtain the desired sound quality.

FREQUENTLY ASKED QUESTIONS


QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 MHz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
Traffic announcement TA is displayed. I do not receive any traffic information.	The radio station does not broadcast traffic information.	Tune to a radio station which broadcasts traffic information.
The stored stations are not found (no sound, 87.5 MHz is displayed...).	An incorrect waveband is selected.	Press the SRC/TEL button to return to the waveband (FM1 or FM2) on which the stations are stored.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none">- Check that the CD is inserted in the player the right way up.- Check the condition of the CD: the CD cannot be played if it is too damaged.- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.- The audio equipment's CD player does not play DVDs.- Due to their quality level, certain writeable CDs will not be played by the audio system.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio settings (bass, treble, ambience) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.
The Bluetooth connection is cut.	The battery of the peripheral may not be sufficiently charged.	Recharge the battery of the peripheral device.
The message "USB device error" is displayed on the screen.	The USB memory stick is not recognised. The memory stick may be corrupt.	Reformat the memory stick to FAT 16 or FAT 32.
A telephone connects automatically, disconnecting another telephone.	Automatic connection overrides manual connection.	Modify the telephone settings to remove automatic connection.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
An iPod is not recognised when connecting to the USB port.	The iPod is of a generation that is not compatible with the USB.	
The hard disk or device is not recognised when connecting to the USB port.	Some hard disks and devices need a power supply greater than is provided by the audio system.	Connect the device to the 230 V socket, the 12 V socket or an external power supply. Caution: ensure that the device does not transmit a voltage greater than 5 V (risk of destruction of the system).
When streaming, the sound cuts momentarily.	Some telephones prioritise connection of the "hands-free" profile.	Delete the "hands-free" connection profile to improve streaming.
In "Random all" play, not all of the tracks are played.	In "Random all" play, the system can only take into account up to 999 tracks.	
With the engine off, the audio system switches off after a few minutes of use.	When the engine is switched off, the audio system operating time depends on the battery charge. The switch-off is normal: the audio system switches to economy mode and switches off to prevent discharging the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio system switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.

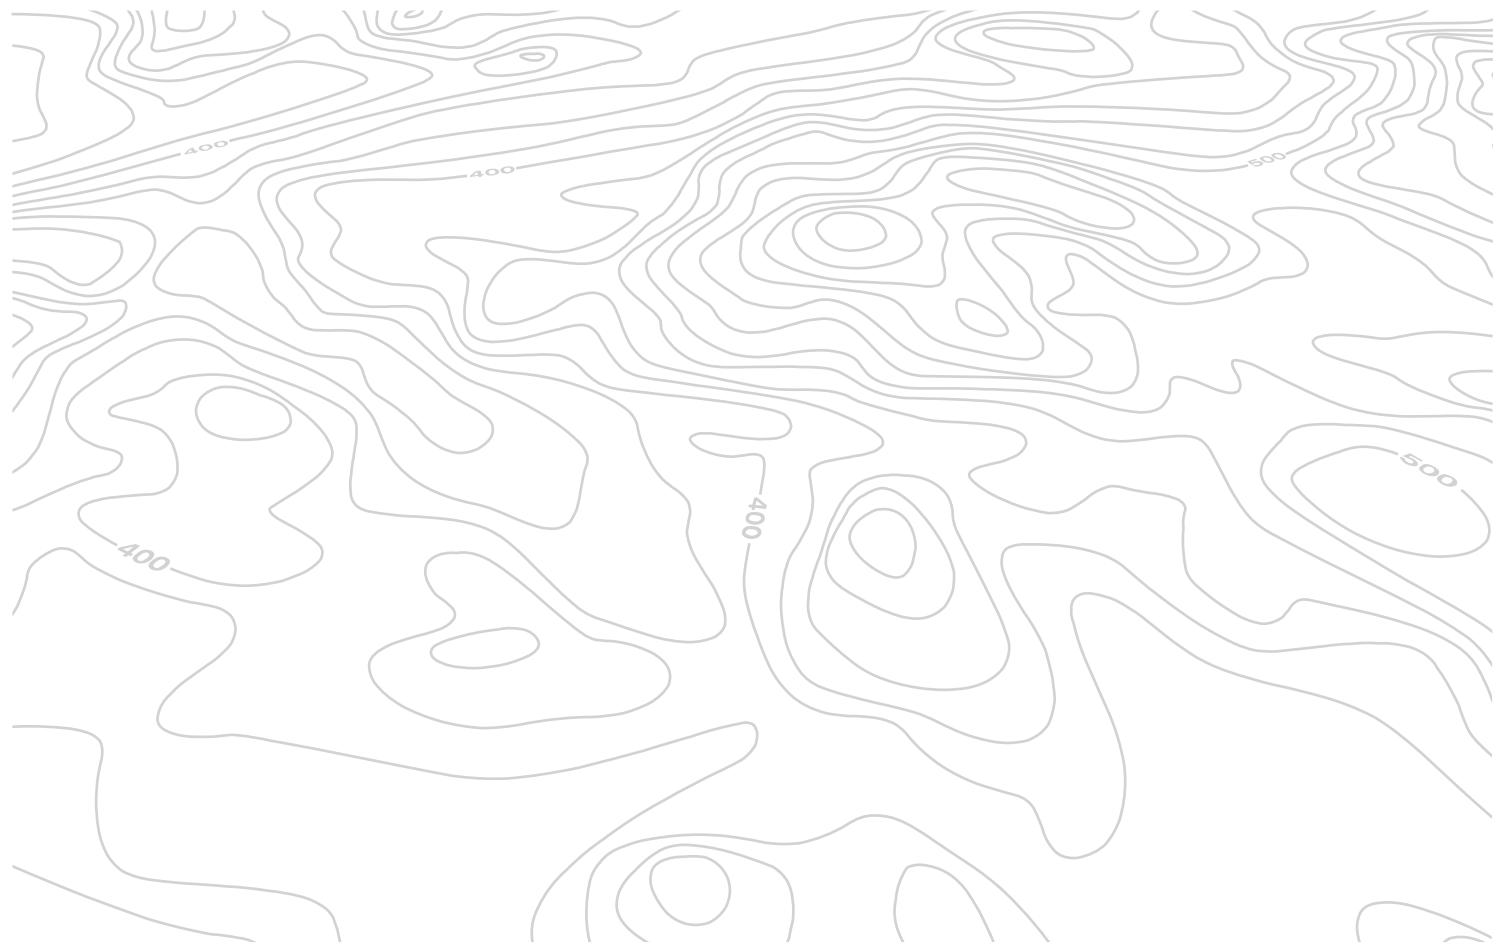



AUDIO SYSTEM



For safety reasons, the driver must only carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off after activation of economy mode.

CONTENTS

01 First steps	p.	306
02 Steering mounted controls	p.	307
03 Audio system	p.	308
04 Audio settings	p.	316
05 Screen menu map	p.	317
Frequently asked questions	p.	318

01 FIRST STEPS

Selection of source:
FM1, FM2, AM, CD, AUX.

Adjust audio settings:
sound ambience, treble, bass,
loudness, left/right balance,
automatic volume.

Abandon the current
operation.
Go up one level (menu or
folder).

Automatic search for a lower/
higher radio frequency.
Select the previous/next CD
track.
Navigation in a list.
Press and hold: fast forward
or backward.

Eject CD.



On / Off and
volume adjustment.


Display the list of stations received,
the CD/MP3 tracks or MP3 folders.
Long press: update the list of
stations received.

Manual search step by step
for a lower/higher radio
frequency.
Select the previous/next
MP3 track.
Navigation in a list.

Open the main menu.

Select a preset radio station.
Radio: long press: preset a radio
station.

02 STEERING MOUNTED CONTROLS

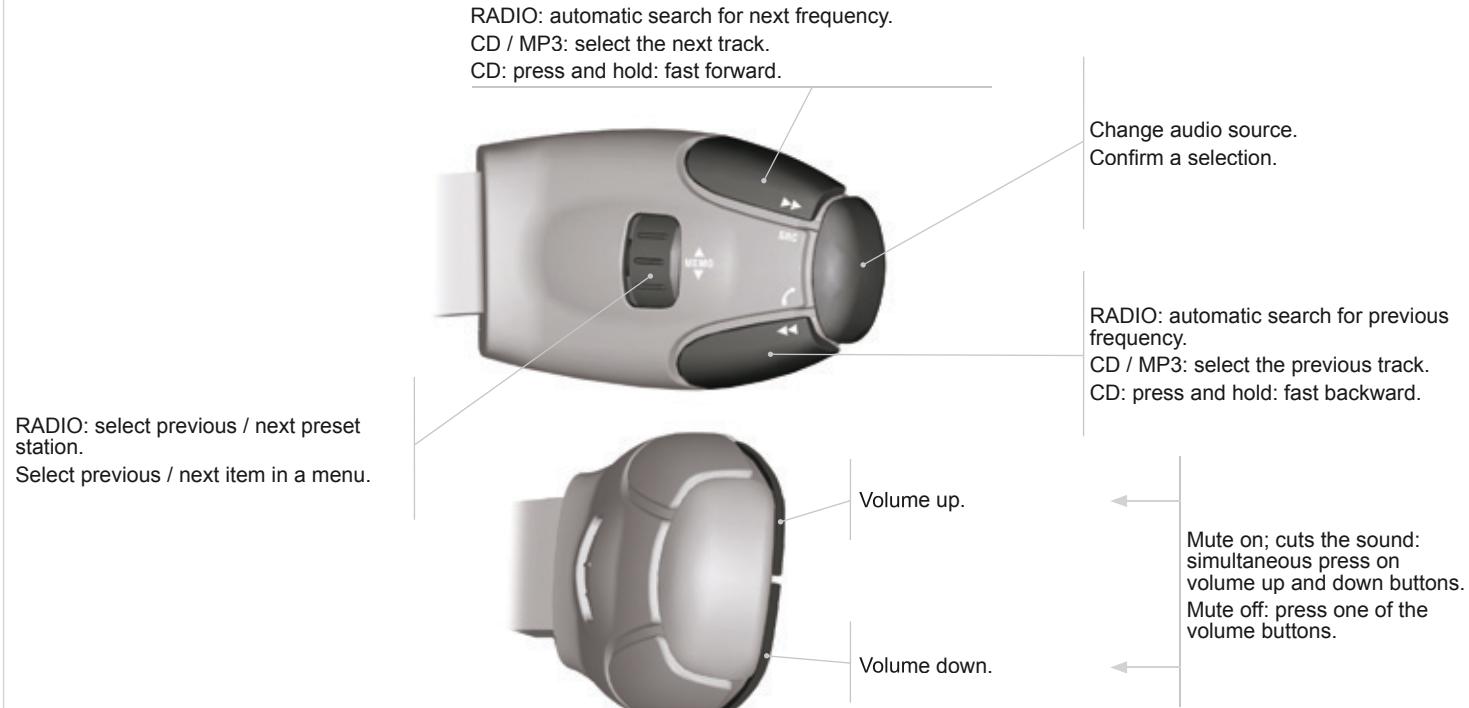

03 AUDIO

Radio

 
Selecting a station



The external environment (hills, buildings, tunnels, basement car parks) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio equipment.




1 Press the **SRC/BAND** button several times in succession and select the FM1, FM2 or AM waveband.




Selecting a preset station



 1 Make a long press on a button to preset the station being listened to. The name of the station is displayed and an audible signal confirms that it has been preset.



 2 Press a button to listen to the corresponding preset station.



Press **LIST** to display the list of stations received, in alphabetical order.



 
 
Select the desired radio station then confirm by pressing **OK**.



Press to change to the next or previous letter (e.g. A, B, D, F, G, J, K, ...).



1 Make a long press on **LIST** to construct or update the list of stations; the sound is interrupted temporarily.



03 AUDIO

RDS

 
i

RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage by an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

1



Press **MENU**.



2



Select "**Radio**" then confirm by pressing **OK**.
Select "**RDS**" then confirm by pressing **OK**.



3



Select "**On**" or "**Off**" to switch **RDS** on or off, then confirm with **OK** to save the selection.



Receiving TA messages

 
i

The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1



Press **MENU** to switch on or off the reception of traffic announcements.



2



Select "**Radio**" then confirm by pressing **OK**.
Select "**Traffic TA**" then confirm by pressing **OK**.



3



Select "**On**" or "**Off**" to switch the reception of traffic announcements on or off, then confirm by pressing **OK** to save the selection.



03 AUDIO

Display RADIO TEXT

 
!

Radio Text is information transmitted by the radio station on the station or on the song being played.

1



Press **MENU**.



2



Select "**Radio**" or "**Media**" (depending on the current sound source) then confirm by pressing **OK**.
Select "**RADIO TEXT**" then confirm by pressing **OK**.



3



Select "**On**" or "**Off**" to switch radio text on or off, then confirm with **OK** to save the selection.



Audio CD

Playing a CD



Insert 12 cm diameter circular compact discs only.

 
Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.

Without pressing the **EJECT** button, insert a CD in the player, play begins automatically.

1




To play a disc which has already been inserted, press the **SRC/BAND** button several times in succession until "**CD**" is displayed.



2



 Press one of the buttons to select a track on the CD.



Press and hold one of the buttons for fast forward or backward.

03 AUDIO

CD

Information and advice



The audio system can only play files with ".mp3", ".wma" or ".wav" extensions.



A high compression level can degrade the sound quality.



It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ü) to avoid any playing or displaying problems.



Playlists accepted are types .m3u and .pls.
The system can recognise up to 5 000 files in 500 folders on 8 levels.



On a given disc, the CD player can read up to 255 MP3 files spread over 8 levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played.
The folder structure is not observed during playback.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select standards ISO 9660 level 1, 2 or Joliet.

If the disc is recorded in another format, it may not be played correctly.
It is recommended that the same recording standard is always used for a given disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.

03 AUDIO

CD

Playing a compilation

!



Insert an MP3 compilation on the CD player.

 


The system constitutes playlists (in temporary memory) which may take between a few seconds to several minutes.

1



To play a disc already inserted, press **SRC/BAND** several times in succession until "CD" is displayed.



2



Press one of the buttons to select the previous or next track.



3



Press one of the buttons to select the previous or next folder depending on the classification selected.



4



Press and hold one of the buttons for fast forward or backward.




03 AUDIO

5



Press **LIST** to display the compilation folder structure.

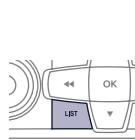

6




Select a line in the list.



7



Jump a page.

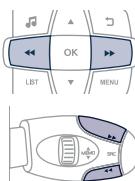

8



Select a folder /Playlist.
Start play of the track selected.



9



Go back one level.



Go back to the first level to select the track classification:
- By **Folders**: all folders containing audio files recognised on the peripheral, in alphabetical order, ignoring the folder structure.
- By **Playlist**: depending on the playlists saved.

03 AUDIO

Auxiliary socket (AUX)

Auxiliary JACK socket



The auxiliary Jack socket permits the connection of a portable device.

 
1

Connect the portable device to the auxiliary Jack socket using a suitable cable (not supplied).

2



Press the **SRC/BAND** button successively and select "AUX".



3

 
First adjust the volume on your portable device.



4



Then adjust the volume of the audio system.



5

The display and management of controls is on the portable device.



03 AUDIO

Play mode

!

The play modes available are:

- Normal: the tracks are played in order, depending on the classification of the selected files.
- Random: the tracks in an album or folder are played in a random order.
- Random all: all of the tracks saved in the media are played in random order.
- Repeat: the tracks played are only those from the current album or folder.

1



 
Press **MENU**.



2




Select "Media" then confirm by pressing **OK**.



3



Select the desired play mode and confirm with **OK** to save the changes.

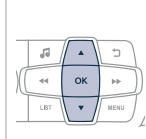

04 AUDIO SETTINGS

1



Press  to display the audio settings menu.



2


The settings available are:

- AMBIANCE,
- BASS,
- TREBLE,
- LOUDNESS,
- BALANCE (L/R),
- AUTO VOLUME.

3



Select the settings to adjust.

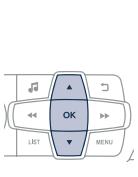

4



Adjust the setting then confirm by pressing **OK**.



!

The AMBIANCE, TREBLE and BASS settings are different and independent for each sound source.

05 SCREEN MENU MAP(S)



MAIN FUNCTION

OPTION A

1 Option A1

2 Option A2

OPTION B...

MENU

Radio

1 Traffic TA

2 RDS

2 Radio Text

Media

1 Play

2 Normal

3 Random

3 Random all

3 Repeat

2 Radio Text

Displaying

1 Scroll Text

Unit

1 Celsius

2 Farhenheit

Language

FREQUENTLY ASKED QUESTIONS

The following tables contain answers to the most frequently asked questions.

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambiance, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (Volume, Bass, Treble, Ambiance, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Fader, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
When changing the settings for treble and bass, the ambiance setting is deselected. When changing the ambiance setting, treble and bass are reset to zero.	Choosing an ambiance imposes settings for treble and bass. Modifying one without the other is not possible.	Modify the treble and bass settings or the ambiance setting to obtain the desired sound quality.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 MHz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Switch on the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Switch off the RDS function if the phenomenon is too frequent and always on the same route.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station does not broadcast traffic information.	Tune to a radio station which broadcasts traffic information.
The stored stations are not found (no sound, 87.5 MHz is displayed...).	An incorrect waveband is selected.	Press the SRC button to return to the waveband (AM, FM1, FM2) on which the stations are stored.


FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the "Audio" section. - The audio system's CD player does not play DVDs. - Due to their quality level, certain writeable CDs will not be played by the audio system.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio settings (bass, treble, ambiance) are unsuitable.	Set the treble or bass level to 0, without selecting an ambiance.
In "Random all" play, not all of the tracks are played.	In "Random all" play, the system can only take into account up to 999 tracks.	
With the engine off, the audio system switches off after a few minutes of use.	When the engine is switched off, the audio system operating time depends on the battery charge. The switch-off is normal: the audio system switches to economy mode and switches off to prevent discharging the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio system switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.


Exterior

Remote control key	44-50	
- opening / closing		
- anti-theft protection		
- guide-me-home lighting		
- starting		
- battery		
Lighting controls	111-117	
LED lamps	115	
Daytime running lamps	115	
Headlamp beam adjustment	118	
Cornering lighting	119	
Changing bulbs	163-167	
- front lamps		
- foglamps		
- direction indicator repeaters		
Door mirrors	64-65	
Doors	44-49	
- opening / closing		
- central locking		
- emergency control		
Alarm	51-52	
Electric windows	53-54	
Panoramic sunroof	56	
Roof bars	185	
Accessories	187-188	
Wipers	120-123	
Changing a wiper blade	123, 180	
Boot	55	
- opening / closing		
- emergency release		
Temporary puncture repair kit	149-154	
Park Assist	105-108	
Parking sensors	109-110	
Towbar	183-184	
Towing	181-182	
Changing bulbs	167-169	
- rear lamps		
- 3 rd brake lamp		
- number plate lamps		
- foglamp		
Fuel tank, misfuel prevention	193-196	
Running out of Diesel fuel	197	


Interior

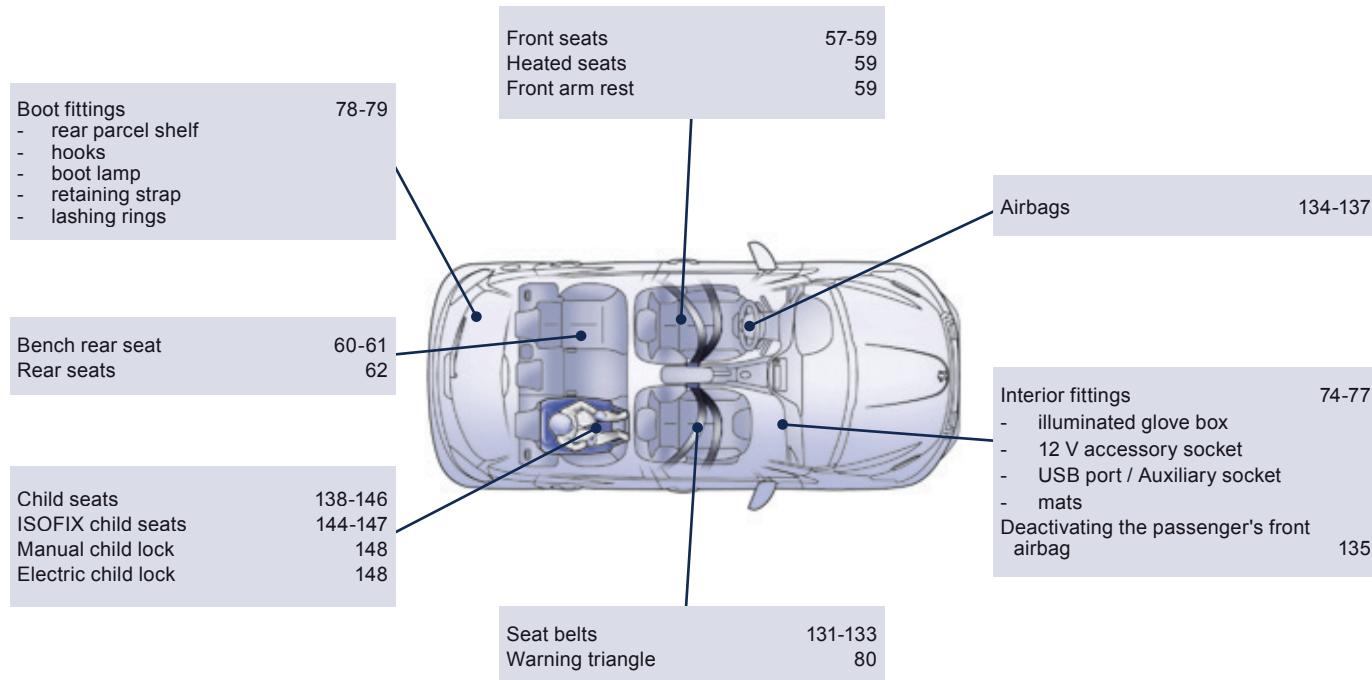

Instruments and controls

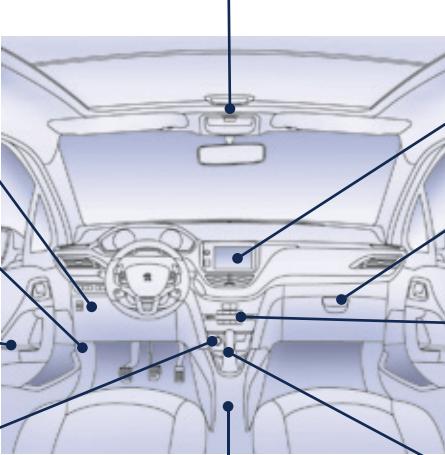Courtesy lamps	124			Touch screen	217-278
Interior mood lighting	125			Bluetooth audio system	279-304
Rear view mirror	65			Audio system	305-320
Emergency or assistance call	127, 215			Setting the date/time	43
Dashboard fuses	170-173	Glove box fuses	174		
Opening the bonnet	190	Heating, ventilation	66-68		
Door mirrors	64-65	Manual air conditioning	68-69		
Electric windows, deactivating	53-54	Dual-zone air conditioning	70-72		
USB port / Auxiliary socket	76	Front demist / defrost	73		
Manual parking brake	82	Rear screen demist / defrost	73		
		Manual gearbox	83		
		Gear shift indicator	84		
		5-speed electronic gearbox	85-88		
		6-speed electronic gearbox	89-92		
		Automatic gearbox	93-95		
		Stop & Start	96-98		
		Hill start assist	99		

Instruments and controls (cont.)

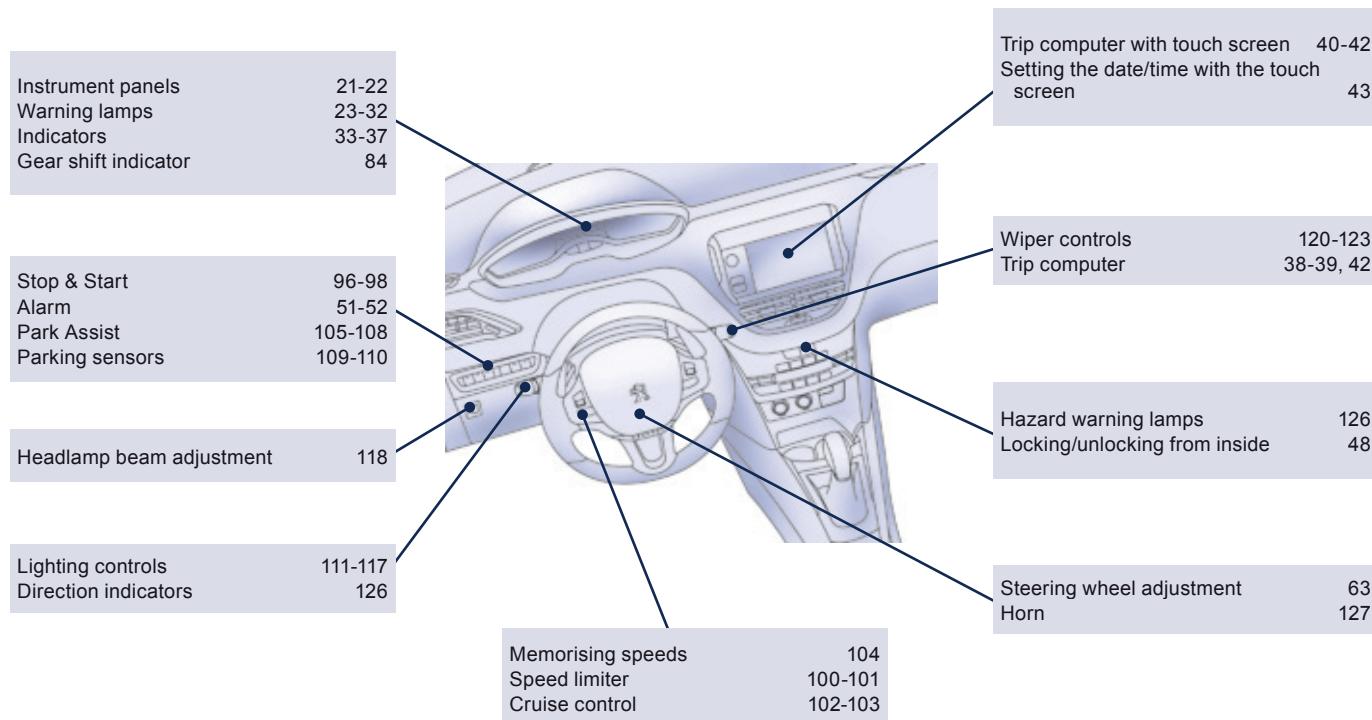


Maintenance - Technical data

Checking levels	198-200
- oil	
- brake fluid	
- coolant	
- screenwash fluid	
- additive (Diesel with particle emissions filter)	
Checking components	201-202
- battery	
- air / passenger compartment filter	
- oil filter	
- particle emissions filter (Diesel)	
- brake pads / discs	

Changing bulbs	163-169
- front	
- rear	


Running out of fuel, Diesel	197
-----------------------------	-----

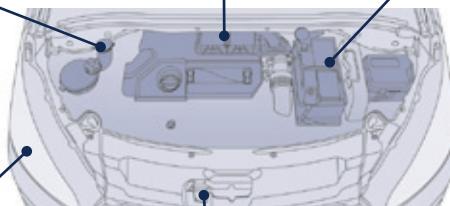

Opening the bonnet	190
Under the bonnet, petrol	191
Under the bonnet, Diesel	192
Petrol engines	203-204
Diesel engines	208-209

12V battery	176-178
Load reduction, economy mode	179
Engine compartment fuses	170-171, 175

Petrol weights	205-207
Diesel weights	210-212

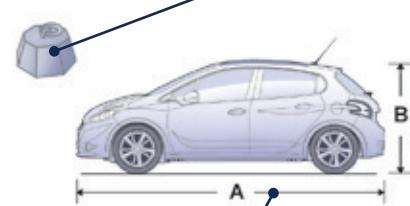

Identification markings	214
Dimensions	213

A

Accessories	187
Accessory socket, 12V	75
Access to rear seats (3-door)	58
Adjusting headlamps	118
Adjusting head restraints	58
Adjusting seat belt height	131
Adjusting the steering wheel	63
Advice on care and maintenance	186
Airbags	32, 134
Airbags, curtain	136, 137
Airbags, front	134, 137
Airbags, lateral	136, 137
Air conditioning	19
Air conditioning, digital	14, 67, 70, 73
Air conditioning, manual	14, 67, 68, 73
Air distribution adjustment	70
Air filter	201
Air flow	66
Air flow adjustment	68, 72
Air intake	70
Air recirculation	69, 72
Air vents	66
Alarm	51
Alloy wheels	186
Anti-lock braking system (ABS)	128
Anti-theft	47
Armrest, front	59, 74
Assistance call	127, 215, 216
Assistance, emergency braking	128
Audible warning	127
Audio cable	254, 289, 314
Audio streaming (Bluetooth)	250, 253, 290
Audio system	305
Automatic illumination of headlamps	112, 117
Automatic operation of hazard warning lamps	126
Automatic rain sensitive windscreen wipers	120, 122
Auxiliary sockets	76, 250, 253, 254, 289, 314

B

Battery	176-178, 201
Battery, charging	178
Battery, remote control	49, 50
Bluetooth (hands-free)	260, 291
Bluetooth (telephone)	260, 291
Bonnet	190
Bonnet stay	190
Boot	55
Brake discs	202
Brake lamps	167, 168
Brake pads	202
Braking assistance system	128

C

Capacity, fuel tank	193
CD	250, 285-287, 310, 312
CD MP3	250, 285-287, 312
Central locking	45
Changing a bulb	163, 167, 168
Changing a fuse	170
Changing a wheel	155-161
Changing a wiper blade	123, 180
Changing the date	43
Changing the remote control battery	49
Changing the time	43
Checking levels	198-200
Checking the engine oil level	37, 198
Checking tyre pressures (using the kit)	154
Checks	190-202
Child lock	148
Children	133, 135, 138-148
Child seats	138-147
Child seats, conventional	141
Cleaning (advice)	186
Closing the boot	55
Closing the doors	45

D

DAB (Digital Audio Broadcasting)	248, 249
Date (setting)	43
Daytime running lamps	115, 163-165
Deactivating the passenger airbag	135
Defrosting	68, 73
Demisting	68, 73
Dials and gauges	21, 22
Diesel additive level	200
Digital Audio Broadcasting (DAB)	248, 249
Dimensions	213
Dipped beam	111, 163-165
Dipstick	37, 198
Directional lighting	119
Direction indicators	116, 126, 163, 164, 167, 168
Door pockets	74
Driving economically	19
Dynamic stability control (DSC)	30, 128, 130

E

EBA (Emergency braking assistance)	128
Eco-driving	19
Economy mode	179

G

Electric window controls	53
Electronic brake force distribution (EBFD)	128
Electronic engine immobiliser	47, 50
Electronic gearbox	19, 85, 89, 96, 178, 202
Emergency boot release	55
Emergency call	127, 215, 216
Emergency starting	177
Emergency warning lamps	80, 126
Energy economy mode	179
Engine compartment	191, 192
Engine compartment fusebox	175
Engine, Diesel	192, 196, 197, 208
Engine oil level indicator	37, 198
Engine, petrol	191, 196, 203
Engines	203, 208
Environment	19, 49, 200
Equipment settings	270

F

Filling with fuel	193-196
Fitting a wheel	158
Fitting roof bars	185
Fittings, boot	78
Flashing indicators	113, 166, 169
Foglamps, front	113, 119, 163, 164
Foglamps, rear	163, 164
Folding/unfolding the door mirrors	65
Frequency (radio)	245, 247
Front seats	57
Fuel	19, 196
Fuel consumption	19
Fuel filler flap	193, 195
Fuel gauge	21, 22, 193
Fuel tank	193, 195
Fusebox, dashboard	172
Fuses	170

H

Halogen headlamps	163, 164
Hands-free kit	260, 291
Hazard warning lamps	126
Head restraints, front	58
Head restraints, rear	61
Heated seats	59
Heating	14, 68, 70
Height and reach adjustment, steering wheel	63
Hill start assist	99
Hooks	79

I

Identification plates	214
Ignition	81
Indicators, direction	116, 126, 164
Inflating accessories (using the kit)	154
Inflating tyres	19, 214
Inputs for audio system	76, 250, 289, 314
Instrument panels	21, 22

J

Jack	155
JACK socket	76, 254

K

Keeping children safe	133, 135, 138-148
Key in ignition warning	81
Key with remote control	44-50

L

Labels, identification	214
Lamps, warning and indicator	23-32
LED daytime running lamps	115, 163-165
Level, brake fluid	198
Levels and checks	190-202
Lighting bulbs (replacement)	163-169
Lighting control stalk	111, 116
Lighting, guide-me home	47, 116, 117
Lighting, interior	124, 125

Lighting on reminder	114
Loading	19, 185
Load reduction mode	179
Locating your vehicle	47
Locking the boot	55
Low fuel level	193

M

Main beam	111, 163-165
Maintenance	19
Maintenance (advice)	186
Map reading lamps	124
Markings, identification	214
Mat	77
Menu	222, 224, 240, 242, 256, 258, 266, 299, 317
Mirror, rear view	65
Mirrors, door	64
Misfuel prevention	195
Mountings for ISOFIX seats	144
MP3 CD	250, 285-287, 310, 312

N

Number plate lamps	169
--------------------------	-----

Oil filter	201
Oil level	37, 198
Opening the bonnet	190
Opening the boot	55
Opening the doors	44
Opening the fuel filler flap	193
Opening the panoramic sunroof blind	56
Operation indicator lamps	23-32

O

Radio	244, 282, 308
RDS	247, 283, 309
Rear foglamp	113, 166, 169
Rear screen (demisting)	73
Recharging the battery	178
Reduction of electrical load	179
Regeneration of the particle emissions filter	201

R

Reinitialising the remote control	49
Remote control	44-50
Removing a wheel	158
Removing the mat	77
Repair kit, puncture	149
Replacing bulbs	163-169
Replacing fuses	170-175
Replacing the air filter	201
Replacing the oil filter	201
Replacing the passenger compartment filter	201
Replacing wiper blades	123, 180
Resetting the service indicator	36
Reversing lamps	167, 168
Risk areas (update)	230
Roof bars	185
Roof blind	56
Routine checks	201, 202
Running out of fuel (Diesel)	197

P

Paint colour code	214
Paintwork, matt	186
Panoramic sunroof	56
Parcel shelf, rear	79
Park Assist	105
Parking brake	82, 202
Parking lamps	116
Parking sensors, rear	109
Particle emission filter	199-201
Passenger compartment filter	201
PEUGEOT CONNECT APPS	221
PEUGEOT Connect Assistance	216
PEUGEOT Connect SOS	216
Player, CD MP3	250, 285-287, 310, 312
Port, USB	76, 288
Priming the fuel system	197
Protecting children	133, 135, 138-148
Puncture	149

S

Safety for children	133, 135, 138-148
Screen, instrument panel	38, 40
Screen menu	222, 224, 240, 242, 256, 258, 266, 299, 317

V

Vehicle identification 214
 Ventilation 14, 66-68

W

Warning lamps 29-32
 Warning triangle 80
 Washing (advice) 186
 Wash-wipe, rear 121
 Weights 205, 210
 Window controls 53
 Wiper control stalk 120-122
 Wiper, rear 121
 Wipers 26, 120, 122

U

Unlocking 44
 Unlocking the boot 55
 Update risk areas 230
 Updating the date 43
 Updating the time 43
 USB 76, 250

T

Table of weights 205, 210
 Tables of engines 203, 208
 Tables of fuses 170
 Tank, fuel 193, 195

This handbook describes all of the equipment available in the whole range.

Your vehicle will be fitted with some of this equipment described in this document, depending on its trim level, version and the specification for the country in which it is sold.

The descriptions and illustrations are given without any obligation. Automobiles PEUGEOT reserves the right to modify the technical specifications, equipment and accessories without having to update the current handbook.

This document is an integral part of your vehicle. It should be passed on to the new user in the event of sale or transfer.

Automobiles PEUGEOT declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

Reproduction or translation of all or part of this handbook is prohibited without written authorisation from Automobiles PEUGEOT.

For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a PEUGEOT dealer is able to provide.

Printed in the EU



diadeis



PEUGEOT

Automobiles PEUGEOT - Siège Social : 75, avenue de la Grande-Armée 75016 PARIS

Tél. 33 (0)1 40 66 55 11 - Fax 33 (0)1 40 66 54 14

Adresse postale : Automobiles PEUGEOT B.P. 01 75761 PARIS cedex 16 - Adresse Internet : <http://www.peugeot.com>

Société Anonyme au capital de 171 284 850 Euros - R.C.S. PARIS B 552 144 503. SIRET 552 144 503 00018. APE 341 Z

Anglais

10-13

