

EXTERIOR

Welcome lighting

This additional exterior and interior lighting, controlled remotely, makes your approach to the vehicle easier when the light is poor.



Panoramic sunroof

This roof provides incomparable visibility and light in the passenger compartment.



Directional lighting

This lighting automatically provides additional visibility when cornering.



Grip control

This special traction control system improves the traction of 2 wheel drive vehicles in snow, mud and sand.



EXTERIOR

Temporary tyre repair kit

This kit is a complete system, consisting of a compressor and an integrated sealant, for the temporary repair of a tyre.



165

When using an automatic car wash:

- unscrew the aerial,
- fold back the mirrors.



Lower tailgate

This lower tailgate permits remarkable accessibility and makes the loading of bulky objects easier.



83

Visual and audible front and/or rear parking sensors

This system warns you if an obstacle is detected behind or in front of the vehicle in reverse or forward gear.



155

OPENING

Remote control key



A. Unfolding/Folding the key.



Normal locking
(press once; fixed lighting of
the direction indicators).

or



Deadlocking the vehicle
(press twice in succession;
fixed lighting of the direction
indicators).



Complete or selective unlock-
ing of the vehicle
(rapid flashing of the direction
indicators).



Welcome lighting




When the light is poor, detected by
a sensor, the remote switching on of
the dipped headlamps and sidelamps
makes your approach to the vehicle
easier.

This function can be programmed via
the configuration menu.



Fuel tank

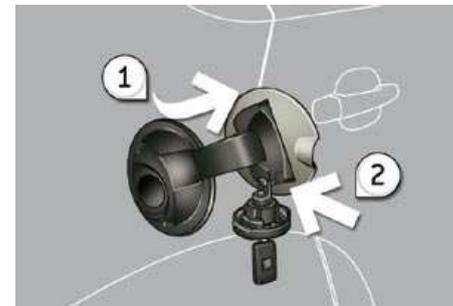


1. Opening the fuel filler flap.
2. Opening and hooking the fuel filler
cap.

The type of fuel to be used is indicated
on the inner face of the fuel filler flap.
Capacity of the tank: approximately
60 litres.




OPENING

Boot

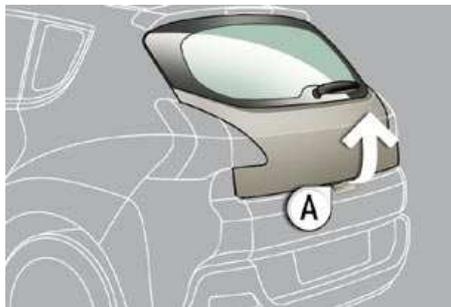

Opening

- ☞ After unlocking the vehicle using the remote control or the key, press the handle **A** and lift the tailgate.

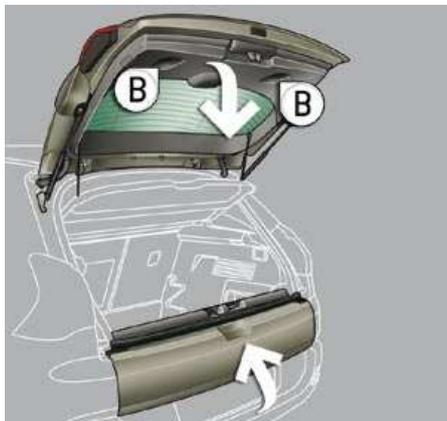


Closing

- ☞ After closing the lower tailgate, pull the handle **B** downwards to guide the tailgate.




82

Lower tailgate

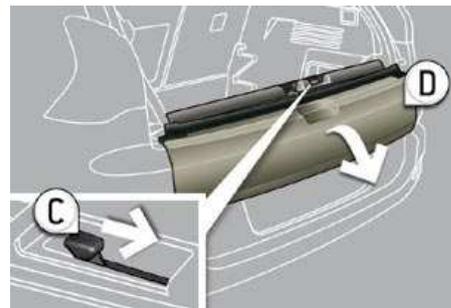

Opening

- ☞ Push the handle **C** to the right and tilt the tailgate **D**.

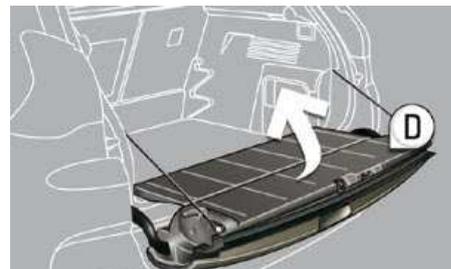

Closing

- ☞ Raise the tailgate **D**, push it fully to close it, check that it is locked correctly.



83

INTERIOR

Head-up display


This system projects certain information into the field of vision of the driver: speed, cruise control/speed limiter and Distance alert.



Electric parking brake

This combines the functions of **automatic application** on switching off the engine and **automatic release** on acceleration.

Manual application/release is possible.

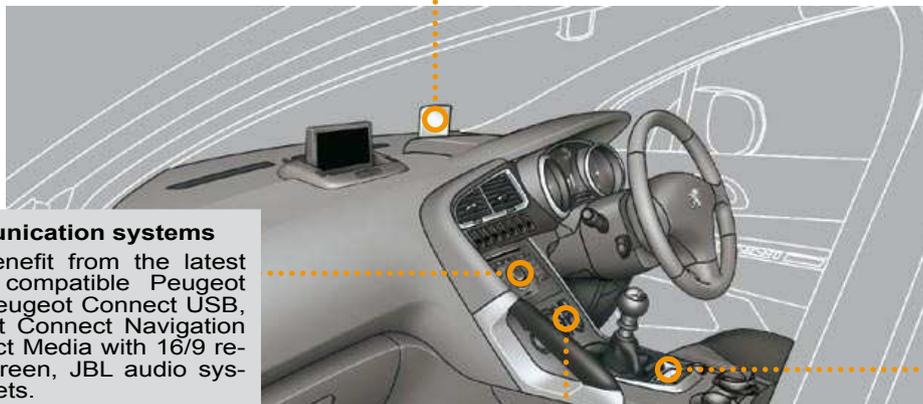

Audio and communication systems

These systems benefit from the latest technology: MP3 compatible Peugeot Connect Sound, Peugeot Connect USB, Bluetooth, Peugeot Connect Navigation or Peugeot Connect Media with 16/9 retractable colour screen, JBL audio system, auxiliary sockets.

Peugeot Connect Media 203

Peugeot Connect Navigation 243

Peugeot Connect Sound 273

Peugeot Connect USB 224, 280

Bluetooth 229, 261, 283


PEUGEOT Assistance 201

Dual-zone digital air conditioning

This systems allows different levels of comfort to be set for the driver and front passenger. It then controls these level automatically according to the ambient conditions.




INSTRUMENTS AND CONTROLS

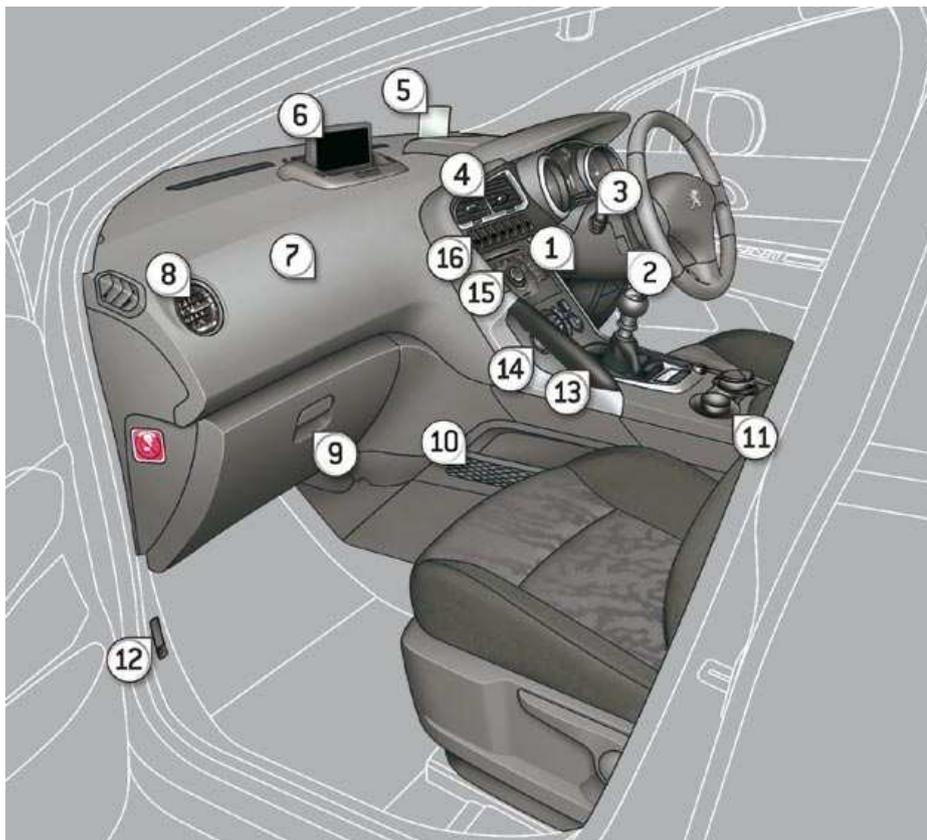

1. Steering wheel adjustment control.
2. Cruise control/speed limiter switches.
3. Lighting and direction indicators control stalk.
4. Central adjustable air vents.
5. Head-up display.
6. Multifunction screen.
7. Passenger's airbag.
8. Side adjustable air vent.
9. Glove box - Audio/video sockets - Passenger's airbag deactivation.
10. Storage compartment with net.
11. Grip control switch.
12. Bonnet release.
13. Grab handle.
14. Heating/air conditioning controls.
15. Audio and telematics system.
16. Buttons:
 - head-up display,
 - hazard warning lamps,
 - Distance alert,
 - central locking.



INSTRUMENTS AND CONTROLS

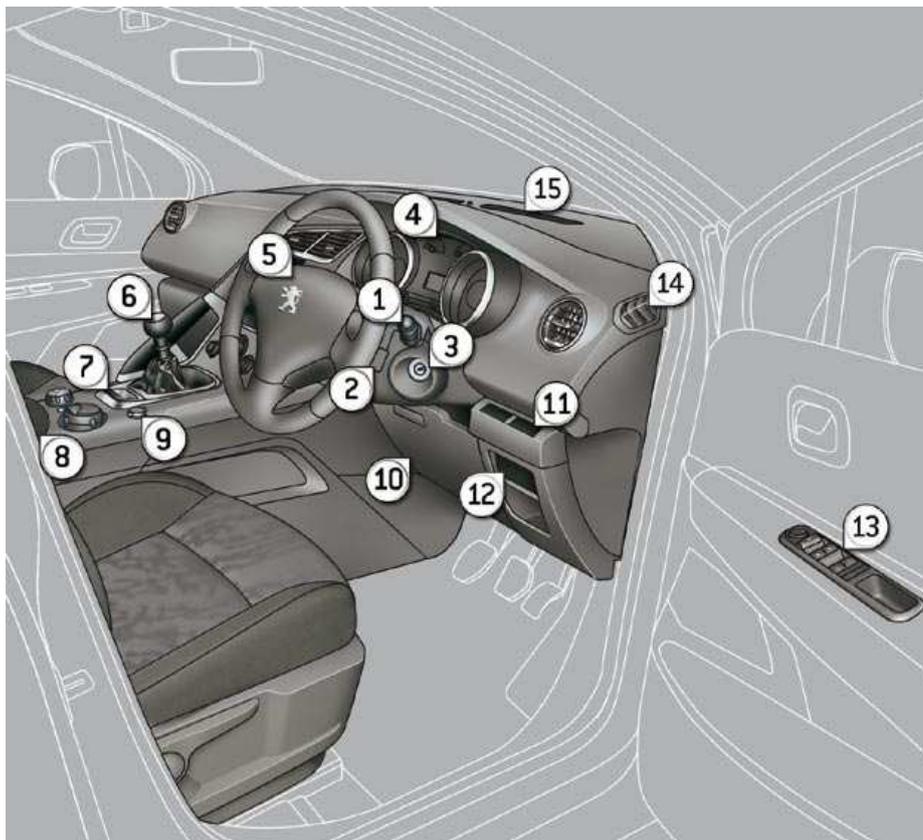

1. Wipers/wash-wipe/trip computer control stalk.
2. Audio and telematics system steering mounted control.
3. Steering lock and ignition.
4. Instrument panel.
5. Driver's airbag.
Horn.
6. Gear lever.
7. Electric parking brake.
8. Front armrest - Peugeot Connect USB and/or JACK auxiliary socket.
9. 12 V accessories socket.
10. Driver's storage compartment (Handbook).
11. Alarm button.
Parking sensors button.
Dynamic stability control button (ESP/ASR).
12. Manual headlamp adjustment.
Instrument panel navigator associated with the Peugeot Connect Media.
13. Door mirror controls.
Electric window controls.
Child lock.
14. Front side window demisting vent.
15. Windscreen demisting vent.



SITTING COMFORTABLY

Driver's seat

Forwards-backwards




Height




Seat back angle



Manual adjustment

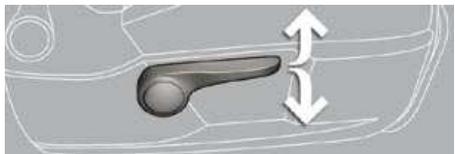


Electric adjustment

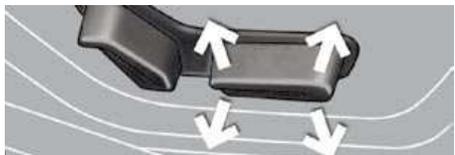


SITTING COMFORTABLY

Front seats


Head restraint height and angle

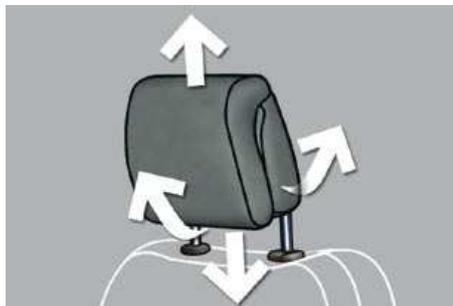

Lumbar

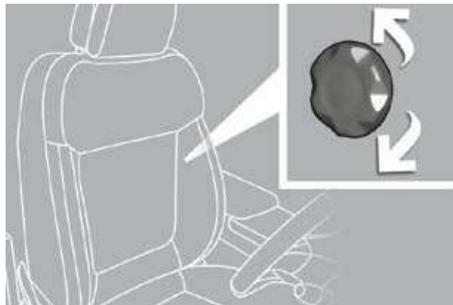

Steering wheel adjustment

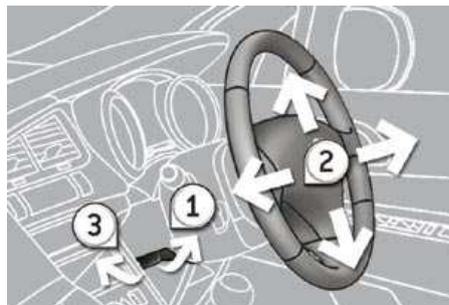


1. Unlock the control.
2. Adjust for height and reach.
3. Lock the control.

As a safety precaution, these operations must only be carried out when stationary.



Table position (front passenger seat)

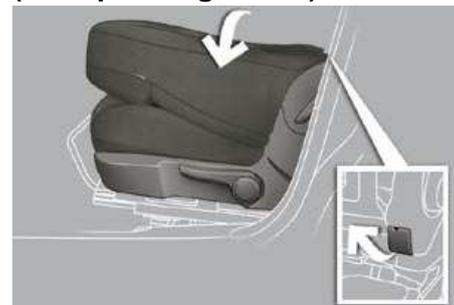

To place objects on the table or to make the loading of long objects in the vehicle easier.



Front armrest




This incorporates the Peugeot Connect USB and/or a JACK auxiliary socket.



SITTING COMFORTABLY

Door mirrors

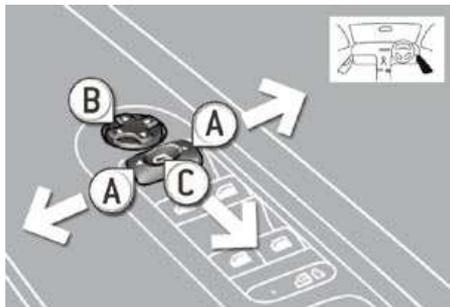

Adjustment


- A. Selection of the mirror to be adjusted.
- B. Adjustment of the position of the mirror in the four directions.



Also...


- C. Folding/Unfolding.

Rear view mirror

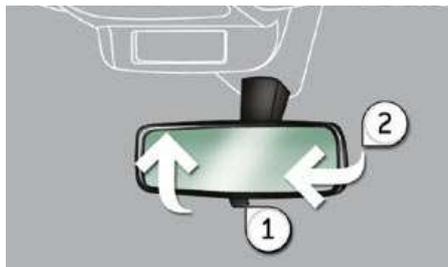

Manual model

1. Selection of the "day" position of the mirror.
2. Adjustment of the mirror.

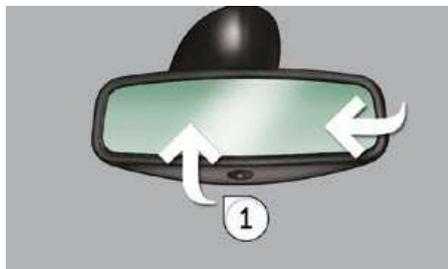


Automatic day/night model


1. Adjustment of the mirror.



Front seat belts

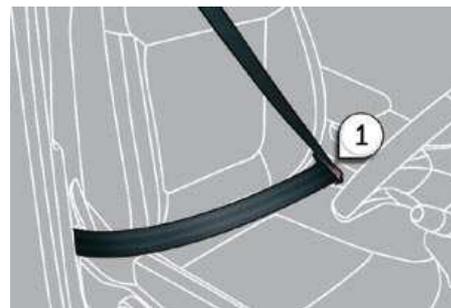

1. Fastening of the buckle.

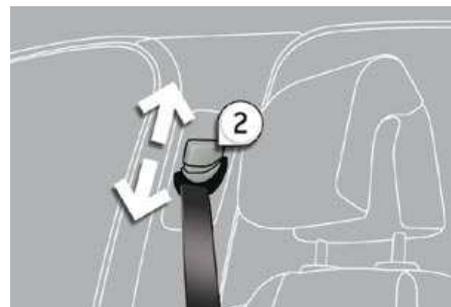


2. Height adjustment.



SEEING CLEARLY

Lighting

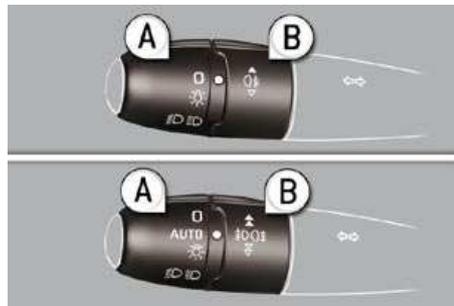

Ring A

- 0** Lighting off.
- AUTO** Automatic illumination of headlamps.
-  Sidelamps.
-  Dipped/main beam headlamps.

Ring B


-  Rear foglamp.

or

-  Front and rear foglamps.



Direction indicators

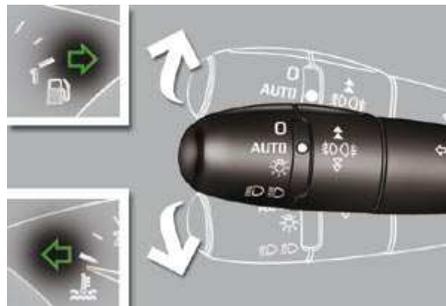

Raise or lower the lighting stalk passing the point of resistance; the corresponding direction indicators will flash for as long as the stalk remains in this position.


"Motorway" function

Press the lighting stalk up or down once, without passing the point of resistance; the corresponding direction indicators will flash three times.

This function can be used at any speed, but it is particularly useful when changing lane on high-speed roads.



Wipers

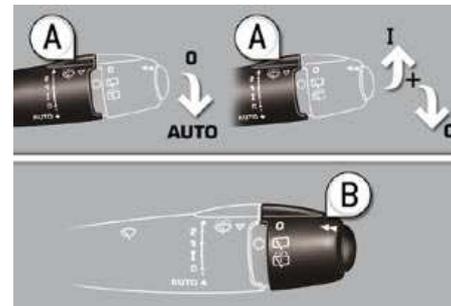

Stalk A: windscreen wipers

Switching on "AUTO"

-  Press the stalk down and release it.

Switching off "AUTO"

-  Push the stalk up and return it to position "0".





Ring B: rear wiper

- 0** Park.
-  Intermittent wipe.
-  Wash-wipe.



VENTILATION

Recommended interior settings

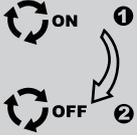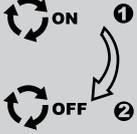
I require...	Heating or Manual Air Conditioning				
	Air distribution	Air flow	Air recirculation/ Intake of outside air	Temperature	Manual A/C
HOT					
COLD					ON
DEMISTING DEFROSTING					ON

Digital air conditioning: we recommend use of the fully automatic mode by pressing the "AUTO" button.



MONITORING

Instrument panel

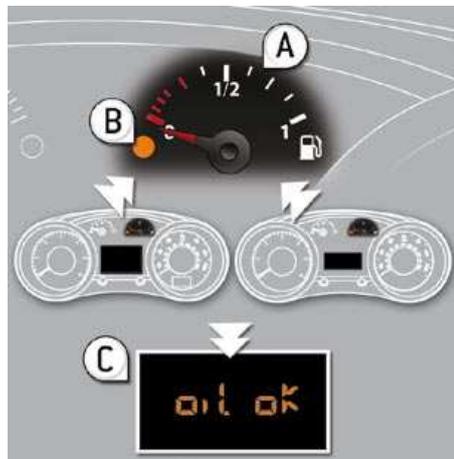

- A. With the ignition on, the needle should indicate the level of fuel remaining.
- B. With the engine running, its associated low level warning light should switch off.
- C. With the ignition on, the oil level indicator should display "OIL OK" for a few seconds.

If the levels are not correct, top up the levels which are low.



Warning lamps




1. With the ignition on, the orange and red warning lamps come on.
2. With the engine running, these warning lamps should switch off.

If warning lamps remain on, refer to the page concerned.



Switch panels

Lower

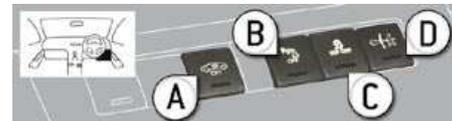

Lighting of the indicator lamp indicates the status of the corresponding function.

- | | | |
|--|--|---------|
| A. Interior volumetric protection alarm. | | 76 |
| B. Visual and audible parking sensors. | | 155 |
| C. ESP OFF (without Grip control). | | 120 |
| D. Child lock | | 79, 117 |


Central



- | | | |
|--------------------------|--|-----|
| E. Head-up display. | | 139 |
| F. Hazard warning lamps. | | 118 |
| G. Distance alert. | | 141 |
| H. Central locking. | | 72 |

PASSENGER SAFETY


Passenger's front airbag

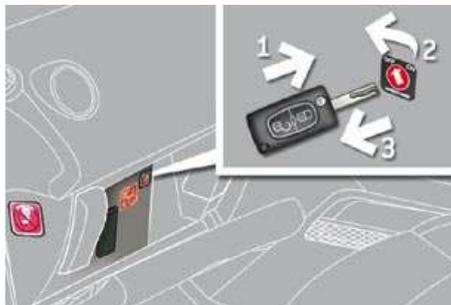

1. Insert the key.
2. Select the position:
"OFF" (deactivation), with "rear facing" child seat,
"ON" (activation), with front passenger or "forwards facing" child seat.
3. Remove the key keeping the switch in the new position.




Seat belts and passenger's front airbag

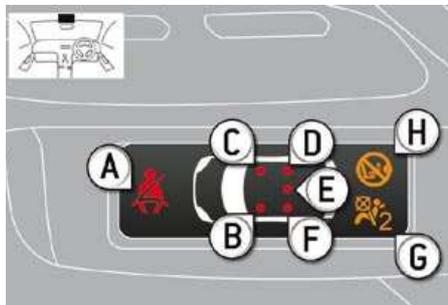

- A. Front and/or rear seat belts not fastened/unfastened warning lamp.
- B. Front left seat belt warning lamp.
- C. Front right seat belt warning lamp.
- D. Rear right seat belt warning lamp.
- E. Rear centre seat belt warning lamp.
- F. Rear left seat belt warning lamp.
- G. Passenger's front airbag deactivated warning lamp.
- H. Passenger's front airbag activated warning lamp.



Child lock (locking of the rear doors)

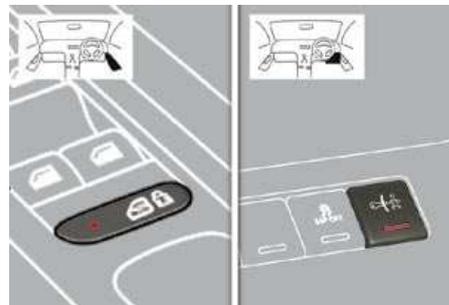


Lighting of the indicator lamp indicates the status of the corresponding function.



ARRANGE YOUR BOOT

3 position adjustable boot

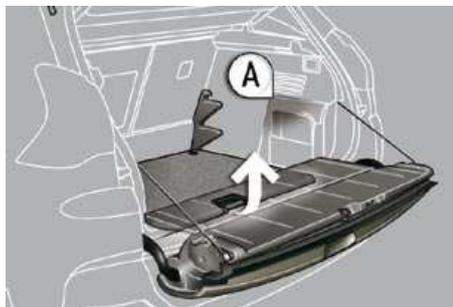

Low position (150 kg max).



Intermediate position (100 kg max).



High position (50 kg max) with the lower tailgate closed to isolate the lower part of the boot.



To release the floor, push slightly forwards then raise.

Use the stops **A**, placed on each side of the boot to change the height of the floor more easily.




From the high position, place the floor in this position (at an angle), two stops support it to allow access underneath it or to the spare wheel.

ARRANGE YOUR BOOT


Rear seats



- ☞ Place the adjustable floor in the **intermediate position**.
- ☞ Check that nothing is preventing the seat backs from folding (front seats sufficiently advanced, head restraints, seat belts, ...).
- ☞ Check also that no object on or under the seat could hinder its movement.

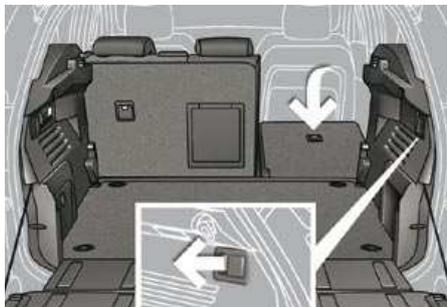

- ☞ Pull the control of the 1/3 section, from the boot.

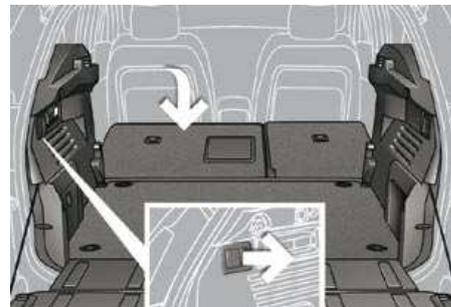

- ☞ Pull the control of the 2/3 section, from the boot.
- The seats are aligned with the adjustable floor and the lower tailgate.



DRIVING SAFELY

Electric parking brake



Manual application/release

The parking brake can be **applied manually** by **pulling** the control **A**.

When the ignition is on, the parking brake can be **released** manually by **pressing the brake pedal** and **pulling** then **releasing** the control **A**.



Before getting out of the vehicle, check that the braking warning lamp (**red!**) and the warning lamp **P** on the control **A**, are on (not flashing)



If you get out of your vehicle with the engine running, apply the parking brake manually.



Automatic application/release

Press the accelerator and release the clutch, the parking brake is released automatically and progressively on acceleration.

When the **engine is switched off**, the parking brake is **applied** automatically.



If this warning lamp is lit on the instrument panel, the automatic application/release are **deactivated**.




Before getting out of the vehicle, check that the braking warning lamp (**red!**) and the warning lamp **P** on the control **A** are on (not flashing).



Do not leave a child alone in the vehicle with the ignition on; they could release the parking brake.

Hill start assist

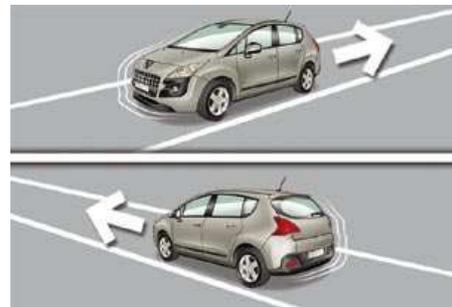

Your vehicle is equipped with a system which keeps it immobile for a short time (approximately 2 seconds) to assist you when starting on a hill, the time required for you to move your foot from the brake pedal to the accelerator pedal.

This function is only active:


- when the vehicle has been immobilised completely with your foot on the brake pedal,
- on certain gradients,
- when the driver's door is closed.




Do not get out of the vehicle during the hill start assist temporary hold phase.

DRIVING SAFELY


Head-up display

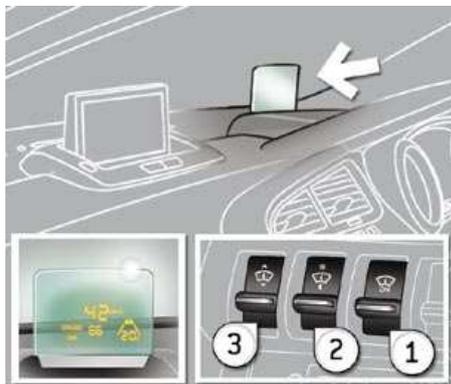

1. Head-up display on/off.
2. Brightness adjustment.
3. Display height adjustment.

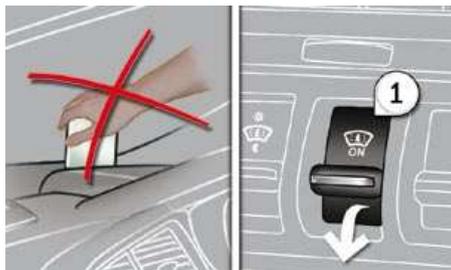

Distance alert

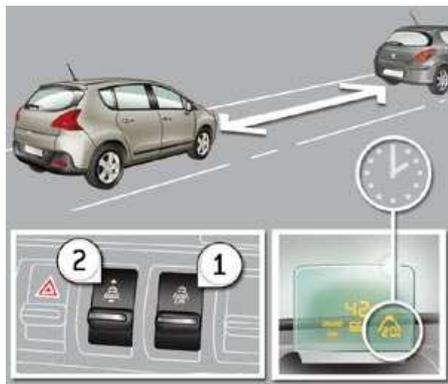

1. Distance alert on/off.
2. Alert value increase/decrease.



The adjustments must be made with the engine running and the vehicle stationary.

Grip control



ESP (normal mode).



Snow.



All terrain.



Sand.




ESP OFF.



DRIVING SAFELY

Speed limiter "LIMIT"

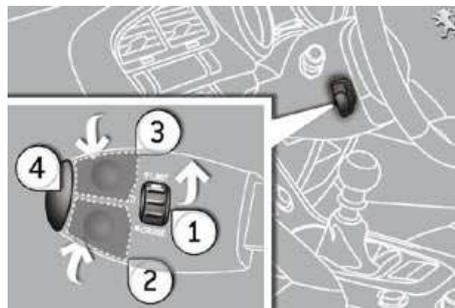

1. Limiter mode Selection/Off.
2. Decreasing the programmed value.
3. Increasing the programmed value.
4. Speed limiter On/Off.




The values must be set with the engine running.



143

Cruise control "CRUISE"

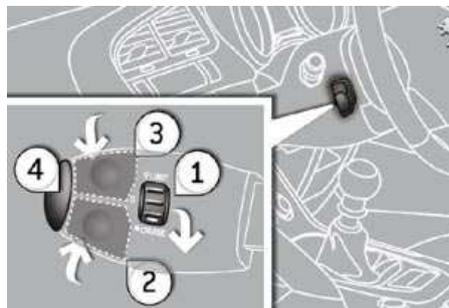

1. Cruise control mode Selection/Off.
2. Programming a speed/Decreasing the programmed value.
3. Programming a speed/Increasing the programmed value.
4. Cruise control Off/Resume.




In order to be programmed or activated, the vehicle speed must be higher than 25 mph (40 km/h), with at least fourth gear engaged on the manual gearbox (second gear for the 6-speed electronic gear control gearbox or automatic gearbox).



145

Display on the instrument panel

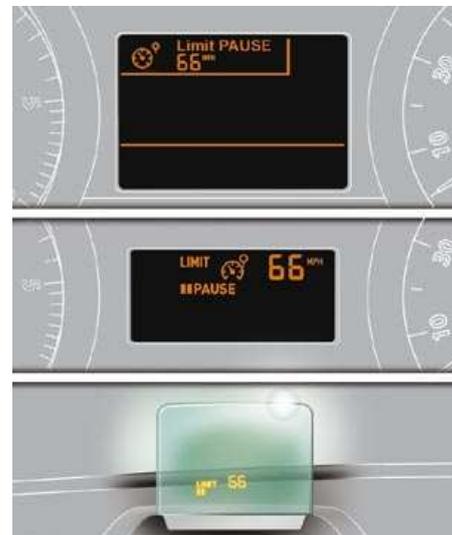

The cruise control or speed limiter mode appears on the instrument panel when it is selected.



Cruise control




Speed limiter


DRIVING SAFELY

6-speed electronic gear control gearbox

This 6-speed gearbox offers a choice between the comfort of fully automatic operation or the pleasure of manual gear changing.

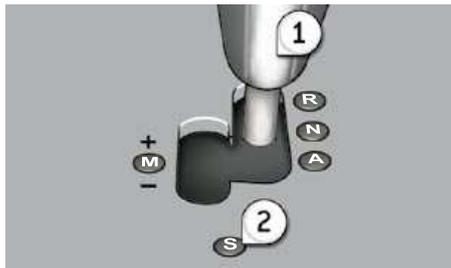

1. Gear lever.
2. Button "S" (sport).

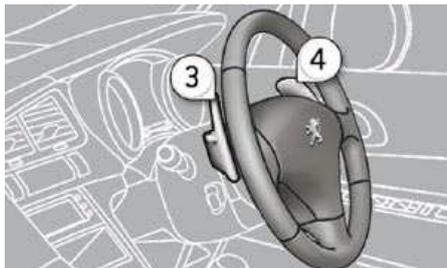


3. Steering mounted "-" paddle.
4. Steering mounted "+" paddle.

Moving off

- ☞ Select position **N** and press the brake pedal firmly while starting the engine.
- ☞ Engage first gear (position **A** or **M**) or reverse (position **R**) using the gear lever **1**.
- ☞ Take your foot off the brake pedal then accelerate.

"Tiptronic - Porsche system" gearbox

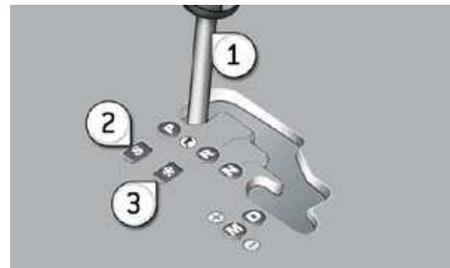

This six-speed gearbox offers a choice between the comfort of fully automatic operation or the pleasure of manual gear changing.

1. Gear lever.
2. Button "S" (sport).
3. Button "*" (snow).

Moving off

- ☞ Select position **P** or **N** and press the brake pedal firmly while starting the engine.
- ☞ Select position **R**, **D** or **M**.
- ☞ Take your foot off the brake pedal, then accelerate.

INSTRUMENT PANELS



Panel grouping together the vehicle operation indication dials and warning lamps.


Dials

1. **Rev counter.**
Indicates the engine speed (x 1 000 rpm).
2. **Coolant temperature.**
Indicates the temperature of the engine coolant ($^{\circ}$ Celsius).
3. **Fuel level.**
Indicates the quantity of fuel remaining in the tank.
4. **Speedometer.**
Indicates the current speed of the moving vehicle (mph or km/h).
5. **Screen.**
6. **Display zero reset or service indicator re-display button.**
Resets the selected function to zero (trip distance recorder or service indicator) or displays the service indicator again.
7. **Instrument panel lighting rheostat.**
Adjusts the brightness of the lighting of the instruments and controls, if the vehicle lighting is on.



For more information, refer to the paragraph relating to the button or function and its associated display.

Screen(s)

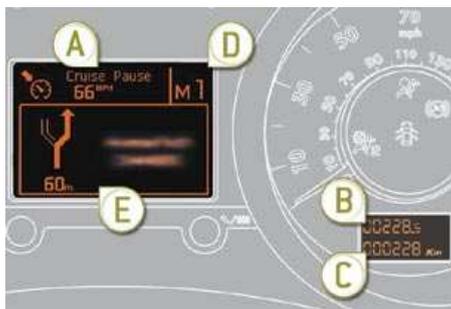

A. Speed limiter

or

Cruise control.

(mph or km/h)

B. Trip distance recorder.

(miles or km)

C. Service indicator.

(miles or km) or,

Engine oil level indicator.

or


distance recorder.

(miles or km)

D. 6-speed electronic gear control or automatic gearbox.


E. Warning messages and function status messages, trip computer, GPS navigation information, menus (with Peugeot Connect Media).

Instrument panel navigator associated with the Peugeot Connect Media

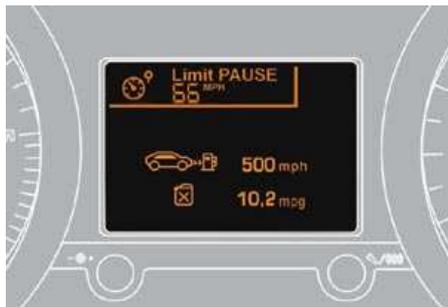

This group of buttons permits:

- **when stationary**, configuration of the vehicle's equipment and the screen settings (languages, units...),
- **while driving**, scrolling of the active functions (trip computer, navigation...).

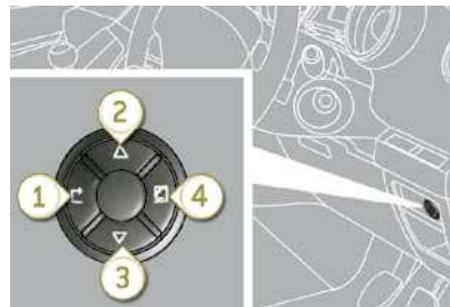

Controls

There are four buttons to control the large 16/9 screen in the instrument panel:

1. access the main menu, confirm the selection,
2. move up through the menu,
3. move down through the menu,
4. return to the previous display, exit from the menu.



The main menu and its associated functions can only be accessed when stationary, via buttons 1 to 4.


A message appears on the screen, above a certain speed threshold, indicating that the main menu cannot be displayed.

The trip computer displays can only be accessed while driving, via buttons 2 and 3 (refer to the "Trip computer" paragraph).

Main menu

- ☞ Press button 1 for access to the main menu and select one of the following functions:
 - "Vehicle parameters",
 - "Choice of language",
 - "Choice of units".
- ☞ Press button 2 or 3 to move in the screen.
- ☞ Press button 1 again to confirm the selection.

Vehicle parameters

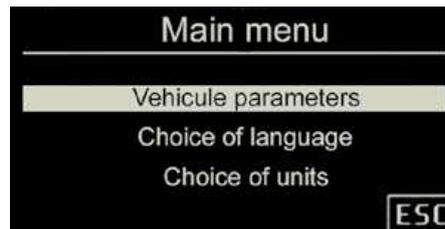

This menu allows you to activate or deactivate certain driving and comfort equipment (according to country):

- wiper linked with reverse gear (refer to the "Visibility" section),
- selective unlocking (refer to the "Access" section),
- guide-me-home and welcome lighting (refer to the "Visibility" section),
- interior mood lighting (refer to the "Visibility" section),
- daytime running lamps (refer to the "Visibility" section),
- directional headlamps (refer to the "Visibility" section),
- automatic or manual parking brake (refer to the "Driving" section).

Choice of language

This menu allows you to select the display language: Deutsch, English, Espanol, Français, Italiano, Nederlands, Portugues, Türkçe*.

Choice of units

This menu allows you to select the units: temperature (°Celsius or °Fahrenheit) and fuel consumption (l/100 km, mpg or km/l).

Indicator and warning lamps

Visual indicators informing the driver that a system is in operation (operation or deactivation indicator lamps) or of the occurrence of a fault (warning lamp).

When the ignition is switched on

Certain warning lamps come on for a few seconds when the vehicle's ignition is switched on.

When the engine is started, these same warning lamps should switch off.

If they remain on, before moving off, refer to the information on the warning lamp concerned.

Associated warnings

The switching on of certain warning lamps may be accompanied by an audible signal and a message on the multifunction screen.



The warning lamps may come on continuously (fixed) or flash.

Certain warning lamps may come on in two different modes. Only by relating the type of lighting to the operating status of the vehicle can it be ascertained whether the situation is normal or whether a fault has occurred.

* According to country.



The main menu and its associated functions can only be accessed when stationary, via buttons 1 to 4.


A message appears on the screen, above a certain speed threshold, indicating that the main menu cannot be displayed.

The trip computer displays can only be accessed while driving, via buttons 2 and 3 (refer to the "Trip computer" paragraph).

Main menu

- ☞ Press button 1 for access to the main menu and select one of the following functions:
 - "Vehicle parameters",
 - "Choice of language",
 - "Choice of units".
- ☞ Press button 2 or 3 to move in the screen.
- ☞ Press button 1 again to confirm the selection.

Vehicle parameters

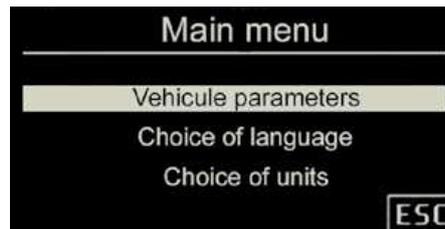

This menu allows you to activate or deactivate certain driving and comfort equipment (according to country):

- wiper linked with reverse gear (refer to the "Visibility" section),
- selective unlocking (refer to the "Access" section),
- guide-me-home and welcome lighting (refer to the "Visibility" section),
- interior mood lighting (refer to the "Visibility" section),
- daytime running lamps (refer to the "Visibility" section),
- directional headlamps (refer to the "Visibility" section),
- automatic or manual parking brake (refer to the "Driving" section).

Choice of language

This menu allows you to select the display language: Deutsch, English, Espanol, Français, Italiano, Nederlands, Portugues, Türkçe*.

Choice of units

This menu allows you to select the units: temperature (°Celsius or °Fahrenheit) and fuel consumption (l/100 km, mpg or km/l).

Indicator and warning lamps

Visual indicators informing the driver that a system is in operation (operation or deactivation indicator lamps) or of the occurrence of a fault (warning lamp).

When the ignition is switched on

Certain warning lamps come on for a few seconds when the vehicle's ignition is switched on.

When the engine is started, these same warning lamps should switch off.

If they remain on, before moving off, refer to the information on the warning lamp concerned.

Associated warnings

The switching on of certain warning lamps may be accompanied by an audible signal and a message on the multifunction screen.



The warning lamps may come on continuously (fixed) or flash.

Certain warning lamps may come on in two different modes. Only by relating the type of lighting to the operating status of the vehicle can it be ascertained whether the situation is normal or whether a fault has occurred.

* According to country.

Operation indicator lamps

If one of the following indicator lamps comes on, this confirms that the corresponding system has come into operation.

Warning lamp		is on	Cause	Action/Observations
	Left-hand direction indicator	flashing with buzzer.	The lighting stalk is pushed down.	
	Right-hand direction indicator	flashing with buzzer.	The lighting stalk is pushed up.	
	Sidelamps	fixed.	The lighting stalk is in the "Sidelamps" position.	Turn the control to the desired position.
	Dipped beam headlamps	fixed.	The lighting stalk is in the "Dipped beam headlamps" position.	Turn the control to the desired position
	Main beam headlamps	fixed.	The lighting stalk is pulled towards you.	Pull the stalk to return to dipped beam headlamps.
	Front foglamps	fixed.	The front foglamps are switched on.	Turn the ring on the stalk rearwards twice to switch off the front foglamps.
	Rear foglamps	fixed.	The rear foglamps are switched on.	Turn the ring on the stalk rearwards to switch off the rear foglamps.

Warning lamp		is on	Cause	Action/Observations
	Diesel engine pre-heating	fixed.	The ignition switch is at the 2nd position (ignition on).	Wait until the warning lamp has switched off before starting. The duration for which the warning lamp is on is determined by the climatic conditions.
	Electric parking brake	fixed.	The electric parking brake is applied.	Release the electric parking brake to switch off the warning lamp: with your foot on the brake pedal, pull the electric brake control. Observe the safety recommendations. For further information about the electric parking brake, refer to the "Driving" section.
	Deactivation of the automatic functions of the electric parking brake	fixed.	The "automatic application" (on switching off the engine) and "automatic release" functions are deactivated or faulty.	Activate the function (according to country) via the vehicle configuration menu or contact a PEUGEOT dealer.
	Foot on the brake pedal	fixed.	The brake pedal must be pressed.	Press the brake pedal to start the engine with the 6-speed electronic gear control gearbox (lever in position N) or automatic gearbox (lever in position P). If you wish to release the parking brake without pressing the brake pedal, this warning lamp will remain on.
		flashing.	In the case of an electronic gear control gearbox, if you hold the vehicle on an incline using the accelerator for too long, the clutch overheats.	Use the brake pedal and/or the electric parking brake.

Deactivation indicator lamps

If one of the following indicator lamps comes on, this confirms that the corresponding system has been switched off intentionally. This is accompanied by an audible signal and a message on the multifunction screen.

Warning lamp		is on	Cause	Action/Observations
	Passenger's airbag system	fixed.	<p>The control, located in the glove box, is set to the OFF position.</p> <p>The passenger's front airbag is deactivated.</p> <p>In this case you can install a "rear facing" child seat.</p>	<p>Set the control to the ON position to activate the passenger's front airbag. In this case, do not fit a child seat in the rear-facing position.</p> <p>The passenger's airbag system is put into service automatically when the vehicle is started (ON position).</p>
	Dynamic stability control (ESP/ASR)	fixed.	<p>The Grip control button or dial (located at the bottom right of the dashboard!) is operated. The indicator lamp comes on.</p> <p>The ESP/ASR is deactivated.</p> <p>ESP: electronic stability programme.</p> <p>ASR: anti-skid regulation.</p>	<p>Press the button to activate the ESP/ASR or turn the Grip control dial to ESP. The indicator lamp goes out.</p> <p>From approximately 30 mph (50 km/h), the system is reactivated automatically.</p> <p>The ESP/ASR system is activated automatically when the vehicle is started.</p>

Warning lamps

When the engine is running or the vehicle is being driven, the switching on of one of the following warning lamps indicates a fault which requires action on the part of the driver.

Any fault resulting in the switching on of a warning lamp must be investigated further by reading the associated message on the multifunction screen.

If you encounter any problems, do not hesitate to contact a PEUGEOT dealer.

Warning lamp		is on	Cause	Action/Observations
	STOP	fixed, associated with another warning lamp, accompanied by an audible signal and a message on the screen.	It is associated with a punctured wheel, the braking system, the power steering, the engine oil pressure or the engine coolant temperature.	Stop as soon as it is safe to do so. Park, switch off the ignition and call a PEUGEOT dealer.
	Service	temporarily.	A minor fault has occurred for which there is no specific warning lamp.	Identify the fault by reading the message shown on the screen, such as, for example: <ul style="list-style-type: none"> - the closing of the doors, boot or bonnet, - the engine oil level, - the screenwash level, - the remote control battery, - the tyre pressures, - saturation of the particle emission filter (Diesel). For any other faults, contact a PEUGEOT dealer.
		fixed.	A major fault has occurred for which there is no specific warning lamp.	Identify the fault by reading the message shown on the screen and contact a PEUGEOT dealer.
	Electric parking brake	flashing.	The electric parking brake is not applied automatically.	You must stop immediately where it is safe to do so. Park on level ground, switch off the ignition and contact a PEUGEOT dealer.

Warning lamp		is on	Cause	Action/Observations
 + Electric parking brake fault		fixed.	The electric parking brake is faulty.	Contact a PEUGEOT dealer without delay. The parking brake can be released manually. For further information about the electric parking brake, refer to the "Driving" section.
	Braking	fixed.	The braking system fluid level has dropped significantly.	Top up with brake fluid recommended by PEUGEOT. If the problem persists, have the system checked by a PEUGEOT dealer.
 +		fixed, associated with the electric parking brake fault warning lamp, if the parking brake is released.	The braking circuit is faulty.	Stop as soon as it is safe to do so. Park, switch off the ignition and contact a PEUGEOT dealer.
 +		fixed, associated with the ABS warning lamp.	The electronic brake force distribution (EBFD) system has a fault.	Have it checked by a PEUGEOT dealer.
	Anti-lock Braking System (ABS)	fixed.	The anti-lock braking system has a fault.	The vehicle retains conventional braking. Drive carefully at reduced speed and contact a PEUGEOT dealer without delay.
	Dynamic stability control (ESP/ASR)	flashing.	The ESP/ASR regulation is active.	The system optimises traction and improves the directional stability of the vehicle.
		fixed.	Unless it has been deactivated with the indicator lamp on the button on, the ESP/ASR system is faulty.	Have it checked by a PEUGEOT dealer.

Warning lamp		is on	Cause	Action/Observations
	Engine autodiagnosis system	fixed.	The emission control system has a fault.	This lamp should switch off when the engine is started. If it does not switch off, contact a PEUGEOT dealer urgently.
		flashing.	The engine management system has a fault.	Risk of destruction of the catalytic convertor. Have it checked by a PEUGEOT dealer.
	Low fuel level	fixed with the needle in the red zone.	When it first comes on there remains approximately 6 litres of fuel in the tank. At this point, you begin to use the fuel reserve.	Refuel as soon as possible to avoid running out of fuel. This warning lamp will come on every time the ignition is switched on, until a sufficient addition of fuel is made. Fuel tank capacity: approximately 60 litres . Never continue to drive until you run out of fuel, as this could damage the emission control and injection systems.
	Maximum coolant temperature	fixed with the needle in the red zone.	The temperature of the cooling system is too high.	Stop as soon as it is safe to do so. Wait until the engine has cooled down before topping up the level, if necessary. If the problem persists, contact a PEUGEOT dealer.
	Engine oil pressure	fixed.	There is a fault with the engine lubrication system.	Stop as soon it is safe to do so. Park, switch off the ignition and contact a PEUGEOT dealer.
	Battery charge	fixed.	The battery charging circuit has a fault (dirty or loose terminals, slack or cut alternator belt, ...).	This lamp should switch off when the engine is started. If it does not switch off, contact a PEUGEOT dealer.

Warning lamp		is on	Cause	Action/Observations
	Door(s) open	fixed if the speed is below 6 mph (10 km/h).	A door, the boot, the lower tailgate or the bonnet (with alarm only) is still open.	Close the door or boot.
		fixed and accompanied by an audible signal if the speed is above 6 mph (10 km/h).		
	Seat belt not fastened/unfastened	fixed then flashing accompanied by an increasing audible signal.	The driver and/or the front passenger has not fastened or has unfastened their seat belt.	Pull the strap then insert the tongue in the buckle.
	Airbags	temporarily.	This lamp comes on for a few seconds when you turn on the ignition, then switches off.	This lamp should switch off when the engine is started. If it does not switch off, contact a PEUGEOT dealer.
		fixed.	One of the airbag or seat belt pretensioner systems has a fault.	Have it checked by a PEUGEOT dealer.
	Water in Diesel	fixed.	The diesel filter contains water.	Risk of damage to the injection system on Diesel engines. Contact a PEUGEOT dealer without delay.
	Directional headlamps	flashing.	The directional headlamps system is faulty.	Have it checked by a PEUGEOT dealer.
	Deflated wheel	fixed.	The pressure in one or more wheels is too low.	Check the pressure of the tyres as soon as possible. This check should preferably be carried out when the tyres are cold.

Warning lamp		is on	Cause	Action/Observations
	Particle emissions filter (Diesel)	fixed, associated temporarily with lighting of the service warning lamp.	This indicates that the particle emissions filter is starting to become saturated.	As soon as driving conditions allow, regenerate the filter by driving at a speed of at least 35 mph (60 km/h) until the service warning lamp switches off.
		fixed, associated temporarily with lighting of the service warning lamp.	This indicates the minimum level for the Diesel fuel additive reservoir.	Have the reservoir topped up as soon as possible by a PEUGEOT dealer.

Coolant temperature indicator



With the engine running, when the needle is:

- in zone **A**, the temperature is correct,
- in zone **B**, the temperature is too high; the max temperature warning lamp **1** and the central **STOP** warning lamp come on, accompanied by an audible signal and a message on the multifunction screen.

You MUST stop as soon as it is safe to do so.

Wait a few minutes before switching off the engine.

Consult a PEUGEOT dealer.


After driving for a few minutes, the temperature and pressure in the cooling system increase.

To top up the level:

- ☞ wait for the engine to cool,
- ☞ unscrew the cap by two turns to allow the pressure to drop,
- ☞ when the pressure has dropped, remove the cap,
- ☞ top up the level to the "MAX" mark.

Warning lamp		is on	Cause	Action/Observations
	Particle emissions filter (Diesel)	fixed, associated temporarily with lighting of the service warning lamp.	This indicates that the particle emissions filter is starting to become saturated.	As soon as driving conditions allow, regenerate the filter by driving at a speed of at least 35 mph (60 km/h) until the service warning lamp switches off.
		fixed, associated temporarily with lighting of the service warning lamp.	This indicates the minimum level for the Diesel fuel additive reservoir.	Have the reservoir topped up as soon as possible by a PEUGEOT dealer.

Coolant temperature indicator

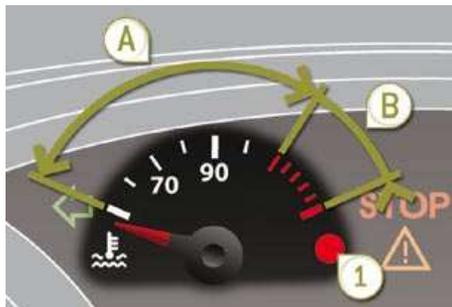

With the engine running, when the needle is:

- in zone **A**, the temperature is correct,
- in zone **B**, the temperature is too high; the max temperature warning lamp **1** and the central **STOP** warning lamp come on, accompanied by an audible signal and a message on the multifunction screen.

You MUST stop as soon as it is safe to do so.

Wait a few minutes before switching off the engine.

Consult a PEUGEOT dealer.

After driving for a few minutes, the temperature and pressure in the cooling system increase.

To top up the level:

- ☞ wait for the engine to cool,
- ☞ unscrew the cap by two turns to allow the pressure to drop,
- ☞ when the pressure has dropped, remove the cap,
- ☞ top up the level to the "MAX" mark.

Service indicator

System which informs the driver when the next service is due, in accordance with the manufacturer's servicing schedule.

The point at which the service is due is calculated from the last indicator zero reset. It is determined by two parameters:

- the distance travelled,
- the time elapsed since the last service.



More than 1 800 miles (3 000 km) remain before the next service is due

When the ignition is switched on, no service information appears on the display.

Between 600 miles (1 000 km) and 1 800 miles (3 000 km) remain before the next service is due

For 5 seconds after the ignition is switched on, the spanner symbolising the service operations comes on. The distance recorder display line indicates the distance remaining before the next service is due.

Example: 2 800 km remain before the next service is due.

For 5 seconds after the ignition is switched on, the display indicates:



5 seconds after the ignition is switched on, **the spanner is switched off**; the distance recorder resumes its normal operation. The display then indicates the total and trip distances.



Less than 600 miles (1 000 km) remain before the next service is due

Example: 900 km remain before the next service is due.

For 5 seconds after the ignition is switched on, the display indicates:



5 seconds after the ignition is switched on, the distance recorder resumes its normal operation. **The spanner remains on** to indicate that a service must be carried out soon.



Service overdue

For 5 seconds after the ignition is switched on, **the spanner flashes** to indicate that the service must be carried out as soon as possible.

Example: the service is overdue by 300 miles (km).

For 5 seconds after the ignition is switched on, the display indicates:




5 seconds after the ignition is switched on, the distance recorder resumes its normal operation. **The spanner remains lit.**



The distance remaining may be weighted by the time factor, depending on the driver's driving habits.

Therefore, the spanner may also come on if you have exceeded the two year service interval.

Service indicator zero reset

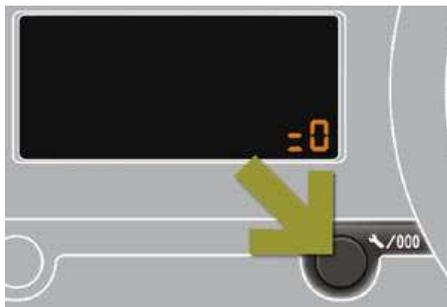

After each service, the service indicator must be reset to zero.

The procedure for resetting to zero is as follows:

- ☞ switch off the ignition,
- ☞ press and hold the trip distance recorder zero reset button,
- ☞ switch on the ignition; the distance recorder display begins a count-down,
- ☞ when the display indicates "**=0**", release the button; the spanner disappears.



Following this operation, if you wish to disconnect the battery, lock the vehicle and wait at least five minutes for the zero reset to be taken into account.

Retrieving the service information

You can access the service information at any time.

- ☞ Press the trip distance recorder zero reset button.
The service information is displayed for a few seconds, then disappears.

Engine oil level indicator

System which informs the driver whether the engine oil level is correct or not.



This information is indicated for a few seconds when the ignition is switched on, after the service information.



The level read will only be correct if the vehicle is on level ground and the engine has been off for more than 15 minutes.

Oil level correct



Lack of oil



This is indicated by the flashing of "OIL", linked with the service warning lamp, accompanied by an audible signal and a message on the multifunction screen.

If the lack of oil is confirmed by a check using the dipstick, it is essential that the level is topped up to prevent damage to the engine.


Oil level indicator fault



This is indicated by the flashing of "OIL --". Consult a PEUGEOT dealer.

Dipstick

Refer to the "Checks" section to locate the dipstick and the oil filler cap on your engine.

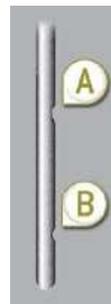

There are 2 marks on the dipstick:

- **A** = max; never exceed this level (risk of damage to the engine),
- **B** = min; top up the level via the oil filler cap, using the grade of oil suited to your engine.

Total distance recorder

System which measures the total distance travelled by the vehicle during its life.



The total and trip distances are displayed for thirty seconds when the ignition is switched off, when the driver's door is opened and when the vehicle is locked or unlocked.

Trip distance recorder

System which measures a distance travelled during a day or other period since it was reset to zero by the driver.



- With the ignition on, press the button until zeros appear.

Lighting rheostat

System for manual adjustment of the brightness of the instrument panel in relation to the exterior brightness.



Activation

When the vehicle lighting is on:

- press the button to change the brightness of the instrument panel,
 - when the lighting reaches the minimum setting, release the button, then press again to increase it,
- or
- when the lighting reaches the maximum setting, release the button, then press again to reduce it,
 - when the lighting reaches the level of brightness required, release the button.



When the vehicle lighting is on, you cannot switch the instrument panel lighting off but you can adjust it to minimum.

Deactivation

When the lighting is off, or in day mode on vehicles fitted with daytime running lamps, pressing the button does not have any effect.

MONOCHROME SCREEN A (WITHOUT AUDIO EQUIPMENT)



Displays on the screen

This displays the following information:

- time,
- date,
- ambient temperature* (this flashes if there is a risk of ice),
- status of the openings (doors, boot, ...),
- trip computer (refer to the end of the section).

Warning messages (e.g.: "Emission control system faulty") or information messages (e.g.: "Boot open") may appear temporarily. Some can be cleared by pressing the **"ESC"** button.

Controls



There are three display control buttons:

- **"ESC"** to abandon the operation in progress,
- **"MENU"** to scroll through the menus or sub-menus,
- **"OK"** to select the menu or sub-menu required.

Main menu



- ☞ Press the **"MENU"** button to scroll through the various menus of the **main menu**:
 - vehicle configuration,
 - options,
 - display settings,
 - languages,
 - units.
- ☞ Press the **"OK"** button to select the menu required.

* With air conditioning only.



Vehicle configuration



Once the "Vehicle configuration" menu has been selected, you can activate or deactivate the following equipment (according to country):

- wiper linked with reverse gear (refer to the "Visibility" section),
- selective unlocking (refer to the "Access" section),
- "guide-me-home" and welcome lighting (refer to the "Visibility" section),
- interior mood lighting (refer to the "Visibility" section),
- daytime running lamps (refer to the "Visibility" section),
- directional headlamps (refer to the "Visibility" section),
- automatic or manual parking brake (refer to the "Driving" section),
- ...

Options

Once the "Options" menu has been selected, you can start diagnostics of the status of the equipment (active, not active, faulty).

Display settings

Once the "Display settings" menu has been selected, you can gain access to the following settings:

- year,
- month,
- day,
- hour,
- minutes,
- 12 or 24 hour mode.



Once you have selected a setting, press the "OK" button to change its value.



Wait for approximately ten seconds without any action to allow the changed data to be recorded or press the "ESC" button to cancel.

The screen then returns to the normal display.

Languages

Once the "Languages" menu has been selected, you can change the language used by the display (Français, Italiano, Nederlands, Portugues, Portugues-Brasil, Türkçe, Deutsch, English, Espanol).

Units

Once the "Units" menu has been selected, you can change the units for:

- temperature (°C or °F),
- fuel consumption (l/100 km, mpg or km/l).



For safety reasons, configuration of the multifunction screen by the driver must only be done when stationary.

MONOCHROME SCREEN A (WITH AUDIO EQUIPMENT)



Displays on the screen

This displays the following information:

- time,
- date,
- ambient temperature* (this flashes if there is a risk of ice),
- status of the openings (doors, boot, ...),
- audio sources (radio, CD, ...),
- trip computer (refer to the end of the section).

Warning messages (e.g.: "Emission control system faulty") or information messages (e.g.: "Boot open") may appear temporarily. Some can be cleared by pressing the "ESC" button.

* With air conditioning only.

Controls



From the audio equipment control panel, you can:

- ☞ press the "MENU" button to gain access to the **main menu**,
- ☞ press the "▲" or "▼" buttons to scroll through the items on the screen,
- ☞ press the "MODE" button to change the permanent application (trip computer, audio source, ...),
- ☞ press the "◀◀" or "▶▶" buttons to change a setting value,
- ☞ press the "OK" button to confirm, or
- ☞ press the "ESC" button to abandon the operation in progress.

Main menu



- ☞ Press the "MENU" button for access to the **main menu**, then press the "▲" or "▼" buttons to scroll through the various menus:
 - radio-CD,
 - vehicle configuration,
 - options,
 - display settings,
 - languages,
 - units.
- ☞ Press the "OK" button to select the menu required.

Radio-CD

With the audio equipment switched on, once the "Radio-CD" menu has been selected you can activate or deactivate the functions linked with use of the radio (RDS, REG), the CD or the CD changer (introscan, shuffle, CD repeat).

 For more information on the "Radio-CD" application, refer to the "Audio and Telematics" section.



Vehicle configuration



Once the "Vehicle Configuration" menu has been selected, you can activate or deactivate the following equipment (according to country):

- wiper linked with reverse gear (refer to the "Visibility" section),
- selective unlocking (refer to the "Accesses" section),
- guide-me-home and welcome lighting (refer to the "Visibility" section),
- interior mood lighting (refer to the "Visibility" section),
- daytime running lamps (refer to the "Visibility" section),
- directional headlamps (refer to the "Visibility" section),
- automatic or manual parking brake (refer to the "Driving" section),
- ...

Options

Once the "Options" menu has been selected, you can start diagnostics of the status of the equipment (active, not active, faulty).

Display settings

Once the "Display settings" menu has been selected, you can gain access to the following settings:

- year,
- month,
- day,
- hour,
- minutes,
- 12 or 24 hour mode.



☞ Once you have selected a setting, press the "◀" or "▶" buttons to change its value.



☞ Press the "▲" or "▼" buttons to switch respectively to the previous or next setting.

☞ Press the "OK" button to record the change and return to the normal display or press the "ESC" button to cancel.

Languages

Once the "Languages" menu has been selected, you can change the language used by the display (Français, Italiano, Nederlands, Portugues, Portugues-Brasil, Türkçe, Deutsch, English, Español).

Units


Once the "Units" menu has been selected, you can change the units of the following parameters:

- temperature (°C or °F),
- fuel consumption (l/100 km, mpg or km/l).



For safety reasons, configuration of the multifunction screen by the driver must only be done when stationary.

MONOCHROME SCREEN C (WITH PEUGEOT CONNECT SOUND)

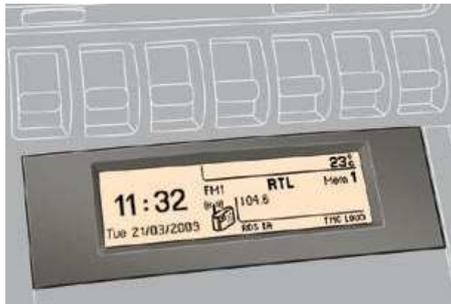

Displays on the screen


This displays the following information:

- time,
- date,
- ambient temperature* (this flashes if there is a risk of ice),
- status of the openings (doors, boot...),
- audio sources (radio, CD...),
- trip computer (refer to the end of the section).

Warning messages (e.g.: "Emission control system faulty") or information messages (e.g.: "Automatic headlamp lighting activated") may appear temporarily. These can be cleared by pressing the **"ESC"** button.

* With air conditioning only.

Controls

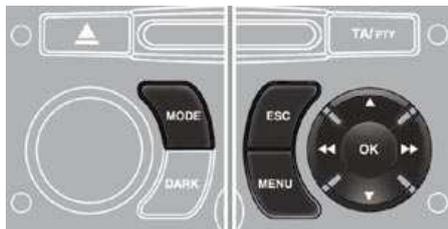

From the audio equipment control panel, you can:

- ☞ press the **"MENU"** button to gain access to the **main menu**,
 - ☞ press the **"▲"** or **"▼"** buttons to scroll through the items on the screen,
 - ☞ press the **"MODE"** button to change the permanent application (trip computer, audio source...),
 - ☞ press the **"◀"** or **"▶"** buttons to change a setting value,
 - ☞ press the **"OK"** button to confirm,
- or
- ☞ press the **"ESC"** button to abandon the operation in progress.

Main menu



- ☞ Press the **"MENU"** button for access to the **main menu**:
 - audio functions,
 - trip computer (refer to the end of the section),
 - personalisation-configuration,
 - telephone (Bluetooth system).
- ☞ Press the **"▲"** or **"▼"** button to select the menu required, then confirm by pressing the **"OK"** button.

"Audio functions" menu

With the audio equipment switched on, once this menu has been selected you can activate or deactivate the functions linked with use of the radio (RDS, REG, RadioText) or the CD or CD changer (introscan, shuffle, CD repeat).



For more information on the "Audio functions" application, refer to the Peugeot Connect Sound part of the "Audio and Telematics" section.



"Trip computer" menu

Once this menu has been selected, you can consult information concerning the status of the vehicle (alert log, status of the functions...).

Alert log

This summarises the active warning messages, displaying them in succession on the multifunction screen

Status of functions

This summarises the active or inactive status of the functions present on the vehicle.


Enter the distance to the destination

This allows you to enter an approximate value for the distance to the final destination.


- ☞ Press the **"MENU"** button to gain access to the general menu.
- ☞ Press the arrows, then the **"OK"** button to select the **"Trip computer"** menu.



- ☞ On the **"Trip computer"** menu, select one of the following applications:

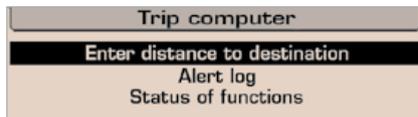

"Personalisation-Configuration" menu

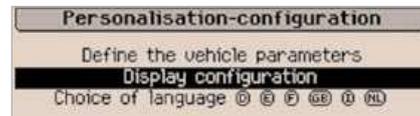


Once this menu has been selected, you can gain access to the following functions:

- define the vehicle parameters,
- display configuration,
- choice of language.

Define the vehicle parameters


Once this menu has been selected, you can activate or deactivate the following equipment (according to country):

- wiper linked with reverse gear (refer to the "Visibility" section),
- selective unlocking (refer to the "Access" section),
- "guide-me-home" lighting (refer to the "Visibility" section).
- interior mood lighting (refer to the "Visibility" section),
- daytime running lamps (refer to the "Visibility" section),
- directional headlamps (refer to the "Visibility" section),
- automatic or manual parking brake (refer to the "Driving" section),
- ...

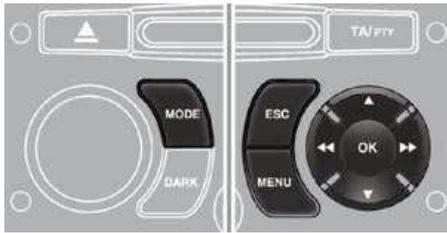


Example: setting of the duration of the "guide-me-home" lighting


- ☞ Press the "▲" or "▼" buttons, then the "OK" button to select the menu required.

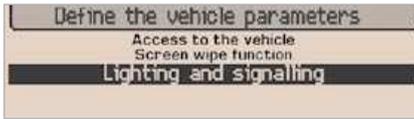

- ☞ Press the "▲" or "▼" buttons, then the "OK" button to select the "Guide-me-home headlamps" line.

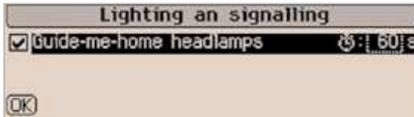

- ☞ Press the "◀" or "▶" buttons to set the value required (15, 30 or 60 seconds), then press the "OK" button to confirm.

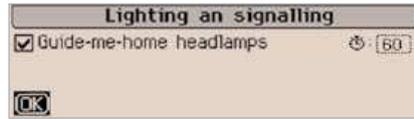

- ☞ Press the "▲" or "▼" buttons, then the "OK" button to select the "OK" box and confirm or press the "ESC" button to cancel.

Display configuration

Once this menu has been selected, you can gain access to the following settings:

- brightness-video setting,
- date and time setting,
- selection of the units.

Choice of language

Once this menu has been selected, you can change the screen display language (Deutsch, English, Español, Français, Italiano, Nederlands, Portugues, Portugues-Brasil, Türkçe*).

* According to country.

"Telephone" menu



With the audio equipment switched on, once this menu has been selected you can configure your Bluetooth hands-free kit (pairing), consult the various telephone directories (calls log, services...) and manage your communications (pick up, hang up, call waiting, secret mode...).



For more information on the "Telephone" application, refer to the Peugeot Connect Sound part of the "Audio and Telematics" section.



For safety reasons, configuration of the multifunction screen by the driver must only be done when stationary.

16/9 RETRACTABLE COLOUR SCREEN (WITH PEUGEOT CONNECT NAVIGATION)



Displays on the screen

When the screen is unfolded, it displays the following information automatically and directly:

- time,
- date,
- altitude,
- ambient temperature (the value displayed flashes if there is a risk of ice),
- doors check,
- warning and vehicle function status messages, displayed temporarily,
- audio functions,
- trip computer information,
- satellite navigation system information.

Controls



From the Peugeot Connect Navigation control panel, to select one of the applications:

- ☞ press the dedicated **"RADIO"**, **"MUSIC"**, **"NAV"**, **"TRAFFIC"**, **"SETUP"** or **"PHONE"** button for access to the corresponding menu,
- ☞ turn the navigator to move the selection,
- ☞ press the navigator to confirm the selection,
- or
- ☞ press the **"ESC"** button to abandon the current operation and return to the previous display.



For operation of the retractable screen (opening, closing, adjustment of the position, etc.), refer to the paragraph "Access to the retractable screen".



For more information on these applications, refer to the "Audio and Telematics" section.

"SETUP" menu



Press the **"SETUP"** button for access to the **"SETUP"** menu. This allows you to select from the following functions:

- "Languages",
- "Date and time",
- "Display",
- "Vehicle parameters",
- "Units",
- "System".

Languages

This menu allows you to select the language used by the display: Deutsch, English, Espanol, Français, Italiano, Nederlands, Polski, Portugues, Türkçe*.

Date and time

This menu allows you to set the date and time, the format of the date and the format of the time (refer to the "Audio and Telematics" section or to the specific user guide given to you with the other owner's documents).

Display

This menu allows you to set the brightness of the screen, the screen colour scheme and the colour of the map (day/night or auto mode).

Vehicle parameters

This menu allows you to activate or deactivate certain driving and comfort equipment (according to country):

- wiper linked with reverse gear (refer to the "Visibility" section),
- selective unlocking (refer to the "Access" section),
- guide-me-home and welcome lighting (refer to the "Visibility" section),
- interior mood lighting (refer to the "Visibility" section),
- daytime running lamps (refer to the "Visibility" section),
- directional headlamps (refer to the "Visibility" section),
- automatic or manual parking brake (refer to the "Driving" section),
- ...

Units

This menu allows you to select the units: temperature (°C or °F) and fuel consumption (km/l, l/100 or mpg).

System

This menu allows you to restore the factory configuration, display the software version and activate scrolling text.



For safety reasons, configuration of the multifunction screen by the driver must only be done when stationary.

* According to country.

16/9 HIGH DEFINITION RETRACTABLE COLOUR SCREEN (WITH PEUGEOT CONNECT MEDIA)



Displays on the screen

When the screen is unfolded, it displays the following information automatically and directly:

- time,
- date,
- altitude,
- ambient temperature (the value displayed flashes if there is a risk of ice),
- audio functions,
- telephone and address book information,
- satellite navigation system information.

Controls



From the Peugeot Connect Media control panel, to select one of the applications:

- ☞ press the dedicated **"RADIO"**, **"MEDIA"**, **"NAV"**, **"TRAFFIC"**, **"ADDR BOOK"** or **"SETUP"** button for access to the corresponding menu,
- ☞ turn the navigator to move the selection,
- ☞ press the navigator to confirm the selection,
or
- ☞ press the **"ESC"** button to abandon the current operation and return to the previous display.



For more information on these applications, refer to the "Audio and Telematics" section or to the specific user guide given to you with the other owner's documents.



For operation of the retractable screen (opening, closing, adjustment of the position, etc.), refer to the paragraph "Access to the retractable screen".

"SETUP" menu



☞ Press the **"SETUP"** button for access to the **"SETUP"** menu. This allows you to select from the following functions:

- "Languages and voice functions",
- "Date and time",
- "Display",
- "Units",
- "System".

Language and voice functions

This menu allows you to:

- select the language used by the screen (Deutsch, English, Espanol, Français, Italiano, Nederlands, Polski, Portugues, Türkçe*),
- select the voice recognition parameters (activation/deactivation, advice on use, personal voice programming, etc.),
- set the volume of the voice synthesiser.

Date and time

This menu allows you to set the date and time, the format of the date and the format of the time (refer to the "Audio and Telematics" section or to the specific user guide given to you with the other owner's documents).

Display

This menu allows you to set the brightness of the screen, the screen colour scheme and the colour of the map (day/night or auto mode).

Units

This menu allows you to select the units: temperature (°C or °F) and distance (miles or km).


System parameters

This menu allows you to restore the factory configuration, display the software version and activate scrolling text.



For safety reasons, configuration of the multifunction screen by the driver must only be done when stationary.

* According to country.

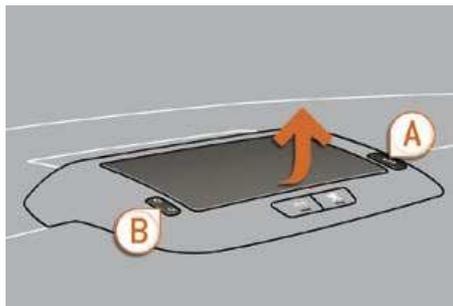

Access to the retractable screen

This screen is opened and stored automatically.

However, you can also open it, store it and adjust it using the various manual controls:

- opening or storing by means of control **A**,
- angle adjustments by means of control **B**.

It is also fitted with safety auto-reverse protection.

Opening the screen

☞ With the screen stored, press control **A** to open it.

The screen opens automatically when the ignition is switched on, when the audio and telematics system is switched on, when an outgoing telephone call is made, when a voice command is given and when a warning message linked with the STOP warning lamp is received.



If you close the screen during operation of the audio and telematics system, it will re-open automatically when an outgoing telephone call is made, when a voice command is given or when a warning message linked with the STOP warning lamp is received.

Closing the screen

☞ With the screen open, press control **A** to store it.

The screen is stored automatically when the ignition is switched off, after approximately three seconds, if the audio and telematics system is off.

Safety auto-reverse


If the screen meets an obstacle as it opens or closes, the movement stops immediately and is reversed by a few millimetres.

After clearing the obstacle, issue the command required again.



If you wish the screen to open or close automatically when the audio and telematics system is switched on or off, the screen must not be closed when the audio and telematics system is operating.

Adjusting the position of the screen

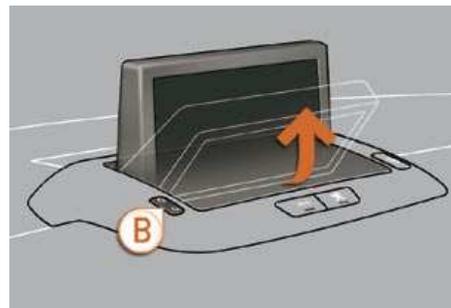

When the screen is open, you can adjust it precisely in different ways:

☞ press the corresponding part of control **B** to move the screen towards you or towards the windscreen,

or

☞ push or pull the screen gently by hand.

Storing the position of the screen

The system has four pre-set positions in its memory.

Each time the screen is closed, the system stores the last position of the screen.

Each time the screen is re-opened, the system returns the screen to the pre-set position closest to that stored.


TRIP COMPUTER

System which provides current information concerning the trip travelled (range, fuel consumption...).

Monochrome screen A



Data displays

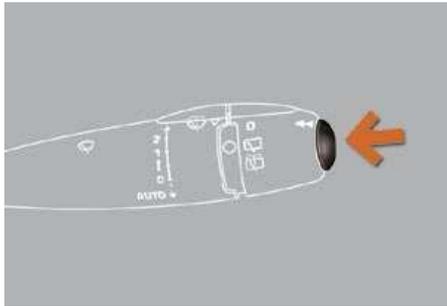

Press the button, located at the end of the **wiper stalk**, to display the various items of trip computer data in succession.


The trip computer provides the following information:

- range,
- current fuel consumption,
- distance travelled,
- average fuel consumption,
- average speed.



The next press then returns you to the normal display.

Zero reset

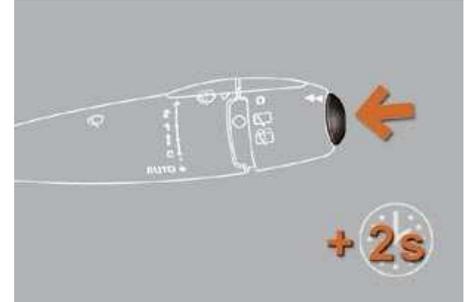

Press the control for more than two seconds to reset to zero the distance travelled, the average fuel consumption and the average speed.

A few definitions...



Range

(miles or km)

This indicates the distance which can still be travelled with the fuel remaining in the tank in relation to the average fuel consumption over the last few miles (kilometres) travelled.



This value may vary following a change in the style of driving or the relief, resulting in a significant change in the current fuel consumption.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).



If dashes are displayed continuously while driving in place of the digits, contact a PEUGEOT dealer.



Current fuel consumption

(mpg or l/100 km or km/l)

This is the average fuel consumption during the last few seconds.



This function is only displayed from 20 mph (30 km/h).



Average fuel consumption

(mpg or l/100 km or km/l)

This is the average fuel consumption since the last trip computer zero reset.



Average speed

(mph or km/h)

This is the average speed calculated since the last trip computer zero reset (ignition on).



Distance travelled

(miles or km)

This indicates the distance travelled since the last trip computer zero reset.



Distance remaining to destination

(miles or km)

This is the distance remaining to be travelled to the final destination. It is either calculated instantly by the navigation system, if guidance is activated, or entered by the user.

If the distance is not entered, dashes are displayed in place of the digits.

TRIP COMPUTER

System which provides current information concerning the trip (range, consumption...).

Monochrome screen C



16/9 colour screen - Peugeot Connect Navigation




Instrument panel screen - Peugeot Connect Media




Data displays

With the screen C or the colour screen (Peugeot Connect Navigation)

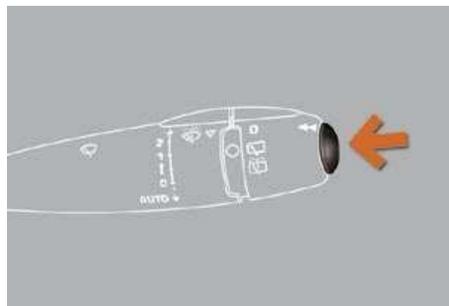

Press the button, located at the end of the **wiper stalk**, to display the various trip computer tabs in succession.

With the instrument panel screen (Peugeot Connect Media)

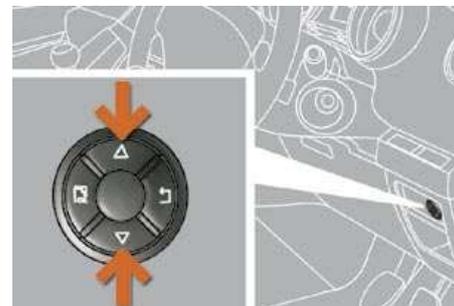

Press the up and down arrows on the navigator, associated with the Peugeot Connect Media, to display the various trip computer tabs in succession.



Depending on your vehicle's equipment, the trip computer information appears on the multifunction screen or on the instrument panel screen.



- The current information tab with:
 - the range,
 - the current fuel consumption,
 - the distance remaining to be travelled.



- The trip "1" tab with:
 - the distance travelled,
 - the average fuel consumption,
 - the average speed, for the first trip.




- The trip "2" tab with:
 - the distance travelled,
 - the average fuel consumption,
 - the average speed, for the second trip.

- ☞ Pressing the button again takes you to a black screen.
A further press returns you to the normal display.

Trip zero reset

With the screen C or the colour screen (Peugeot Connect Navigation)

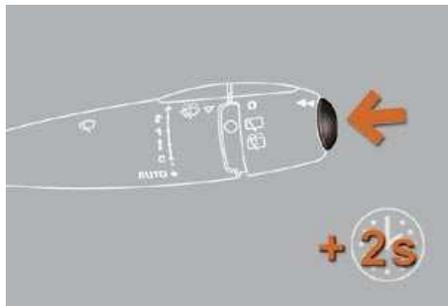

- ☞ When the trip required is displayed, press the control for more than two seconds.

With the instrument panel screen (Peugeot Connect Media)



- ☞ When the required trip is displayed, press the "OK" button on the navigator, associated with the Peugeot Connect Media, for more than two seconds.

Trips "1" and "2" are independent but their use is identical.

Trip "1" permits, for example, daily calculations, and trip "2" monthly calculations.

A few definitions...



Range

(miles or km)

This indicates the distance which can still be travelled with the fuel remaining in the tank in relation to the average fuel consumption over the last few miles (kilometres) travelled.



This value may vary following a change in the style of driving or the relief, resulting in a significant change in the current fuel consumption.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).



If dashes are displayed continuously while driving in place of the digits, contact a PEUGEOT dealer.



Current fuel consumption

(mpg or l/100 km or km/l)

This is the average fuel consumption during the last few seconds.



This function is only displayed from 20 mph (30 km/h).



Average fuel consumption

(mpg or l/100 km or km/l)

This is the average fuel consumption since the last trip computer zero reset.



Average speed

(mph or km/h)

This is the average speed calculated since the last trip computer zero reset (ignition on).



Distance travelled

(miles or km)

This indicates the distance travelled since the last trip computer zero reset.




Distance remaining to destination

(miles or km)

This is the distance remaining to be travelled to the final destination. It is either calculated instantly by the navigation system, if guidance is activated, or entered by the user.

If the distance is not entered, dashes are displayed in place of the digits.

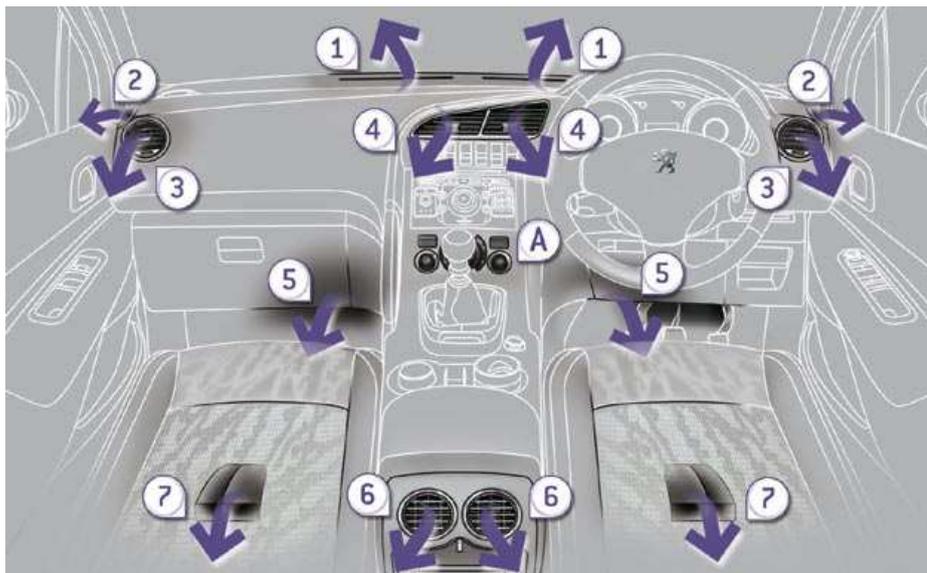

VENTILATION

System which creates and maintains good conditions of comfort and visibility in the vehicle's passenger compartment.

Air intake

The air circulating in the passenger compartment is filtered and originates either from the outside via the grille located at the base of the windscreen or from the inside in air recirculation mode.

Controls

The incoming air follows various routes depending on the controls selected by the driver.

The temperature control enables you to obtain the level of comfort required by mixing the air of the various circuits.

The air distribution control enables you to diffuse the air making use of several air vents.

The air flow control enables you to increase or reduce the speed of the ventilation blower.

These controls are grouped together on control panel **A** on the centre console. Depending on the model, the functions offered are:

- the level of thermal comfort required,
- air flow,
- air distribution,
- demisting/defrosting,
- manual or digital air conditioning controls.

Air distribution

1. Windscreen demisting/defrosting vents.
2. Front side window demisting/defrosting vents.
3. Side adjustable air vents.
4. Central adjustable air vents.
5. Air outlets to the front footwells.
6. Adjustable air vents for the rear passengers.
7. Air outlets to the rear footwells.

RECOMMENDATIONS FOR VENTILATION AND AIR CONDITIONING



In order for these systems to be fully effective, follow the operation and maintenance guidelines below:

- ☞ If the interior temperature remains very high after the vehicle has been parked in the sun for a considerable time, first ventilate the passenger compartment for a few minutes.

Place the air flow control at a sufficient level to provide an adequate renewal of air in the passenger compartment.

- ☞ To obtain an even air distribution, take care not to obstruct the exterior air intake grilles located at the base of the windscreen, the nozzles, the vents and the air outlets, as well as the air extractor located in the boot.
- ☞ Use in preference the intake of exterior air as prolonged use of the air recirculation may cause misting of the windows and side windows.
- ☞ Do not cover the sunshine sensor, located on the dashboard; this is used for regulation of the automatic air conditioning system.
- ☞ Operate the air conditioning system for 5 to 10 minutes, once or twice a month to keep it in perfect working order.
- ☞ Ensure that the passenger compartment filter is in good condition and have the filter elements replaced regularly (refer to the "Checks" section).

We recommend the use of a combined passenger compartment filter. Thanks to its second special active filter, it contributes to the purification of the air breathed by the occupants and the cleanliness of the passenger compartment (reduction of allergic symptoms, bad odours and greasy deposits).

- ☞ To ensure correct operation of the air conditioning system, you are also advised to have it checked regularly.
- ☞ If the system does not produce cold air, do not use it and contact a PEUGEOT dealer.

When towing the maximum load on a steep gradient in high temperatures, switching off the air conditioning saves engine power and improves towing capacity.

The condensation created by the air conditioning results in a discharge of water under the vehicle which is perfectly normal.



The air conditioning system does not contain chlorine and does not present any danger to the ozone layer.

MANUAL AIR CONDITIONING



The air conditioning can only operate with the engine running.

1. Temperature adjustment



☞ Turn the dial from blue (cold) to red (hot) to adjust the temperature to your requirements.

2. Air flow adjustment



☞ Turn the dial from position 1 to position 5 to obtain a comfortable air flow.



☞ If you place the air flow control in position 0 (deactivation of the system), the temperature is no longer maintained at a comfortable level. However, a slight flow of air, due to the movement of the vehicle, can still be felt.

3. Air distribution adjustment



Windscreen and side windows.



Windscreen, side windows and front-rear footwells.



Footwells, front-rear (closing the vents increases the flow to the footwells).



Central, side and rear vents.



The air distribution can be adapted by placing the dial in an intermediate position.

4. Air intake/Air recirculation

The intake of exterior air limits misting of the windscreen and side windows.

The recirculation of interior air insulates the passenger compartment from exterior odours and smoke.

Return to exterior air intake as soon as possible to prevent deterioration of the air quality and demisting performance.



☞ Press the button to recirculate the interior air. The indicator lamp comes on to confirm this.

☞ Press the button again to permit the intake of exterior air. The indicator lamp switches off to confirm this.



Demisting/defrosting



The marking on the control panel indicates the position of the controls to quickly demist or defrost the windscreen and side windows:

- ☞ place the air intake control **4** in the "Exterior air intake" position (indicator lamp off),
- ☞ place the air distribution dial **3** in the "Windscreen position",
- ☞ place the air flow dial **2** in position 5 (maximum),
- ☞ place the temperature dial **1** in the red position (hot),
- ☞ switch on the air conditioning by pressing the "A/C" button.

5. Air conditioning On/Off



The air conditioning is designed to operate effectively in all seasons, with the windows closed.

It enables you to:

- lower the temperature, in summer,
- increase the effectiveness of the demisting in winter, above 0 °C.

Switching on

- ☞ Press the "A/C" button, the associated indicator lamp comes on.

The air conditioning does not operate when the air flow adjustment control 2 is in position "0".

Switching off

- ☞ Press the "A/C" button again, the associated indicator lamp switches off.

REAR SCREEN DEMIST/DEFROST



The control button is located on the air conditioning system control panel.

Switching on

The rear screen demist/defrost can only operate when the engine is running.

- ☞ Press this button to demist/defrost the rear screen and the door mirrors. The indicator lamp associated with the button comes on.

Switching off

The demist/defrost switches off automatically to prevent an excessive consumption of current.

- ☞ It is possible to stop the demist/defrost operation before it is switched off automatically by pressing the button again. The indicator lamp associated with the button switches off.



- ☞ Switch off the demist/defrost of the rear screen and door mirrors as soon as it is no longer necessary as lower current consumption results in reduced fuel consumption.



Demisting/defrosting



The marking on the control panel indicates the position of the controls to quickly demist or defrost the windscreen and side windows:

- ☞ place the air intake control **4** in the "Exterior air intake" position (indicator lamp off),
- ☞ place the air distribution dial **3** in the "Windscreen position",
- ☞ place the air flow dial **2** in position 5 (maximum),
- ☞ place the temperature dial **1** in the red position (hot),
- ☞ switch on the air conditioning by pressing the "A/C" button.

5. Air conditioning On/Off



The air conditioning is designed to operate effectively in all seasons, with the windows closed.

It enables you to:

- lower the temperature, in summer,
- increase the effectiveness of the demisting in winter, above 0 °C.

Switching on

- ☞ Press the "A/C" button, the associated indicator lamp comes on.

The air conditioning does not operate when the air flow adjustment control 2 is in position "0".

Switching off

- ☞ Press the "A/C" button again, the associated indicator lamp switches off.

REAR SCREEN DEMIST/DEFROST



The control button is located on the air conditioning system control panel.

Switching on

The rear screen demist/defrost can only operate when the engine is running.

- ☞ Press this button to demist/defrost the rear screen and the door mirrors. The indicator lamp associated with the button comes on.

Switching off

The demist/defrost switches off automatically to prevent an excessive consumption of current.

- ☞ It is possible to stop the demist/defrost operation before it is switched off automatically by pressing the button again. The indicator lamp associated with the button switches off.



- ☞ Switch off the demist/defrost of the rear screen and door mirrors as soon as it is no longer necessary as lower current consumption results in reduced fuel consumption.

DUAL-ZONE DIGITAL AIR CONDITIONING



The air conditioning only operates when the engine is running.

Automatic operation

1. Automatic comfort programme



☞ Press the **"AUTO"** button. The indicator lamp on the button comes on.

We recommend the use of this mode: it permits automatic and optimised adjustment of all of the functions, passenger compartment temperature, air flow, air distribution and air recirculation, in accordance with the comfort value that you have chosen.

This system is designed to operate effectively in all seasons, with the windows closed.



By means of the air quality sensor, the system also optimises the air quality.



To prevent too great a distribution of cold air when the engine is cold, the air flow will reach its optimum level gradually.

In cold weather, it favours the distribution of warm air to the windscreen, side windows and footwells only.

2-3. Driver-passenger side adjustment



The driver and front passenger can each adjust the temperature to their requirements.

The value indicated on the display corresponds to a level of comfort and not to a temperature in degrees Celsius or Fahrenheit.

☞ Turn control **2** or **3** to the left or to the right respectively to decrease or increase this value.

A setting around the value 21 provides optimum comfort. However, depending on your requirements, a setting between 18 and 24 is normal.

You are advised to avoid a left/right setting difference of more than 3.



On entering the vehicle, if the interior temperature is much colder or warmer than the comfort value, there is no need to change the value displayed in order to obtain the comfort required more quickly. The system corrects the difference in temperature automatically and as quickly as possible.

4. Automatic visibility programme



The automatic comfort programme may not be sufficient to quickly demist or defrost the windscreen and side windows (humidity, several passengers, ice, etc.).

☞ In this case, select the automatic visibility programme.

The system automatically controls the air conditioning, the air flow and the air intake and provides optimum distribution of the ventilation to the windscreen and side windows.

☞ To switch it off, press the **"visibility"** button again or press the **"AUTO"** button, the indicator lamp on the button switches off or the indicator lamp on the **"AUTO"** button comes on.

Manual operation

If you wish, you can make a different choice from that offered by the system by changing a setting. The other functions will still be controlled automatically.

- Pressing the **"AUTO"** button returns the system to completely automatic operation.



For maximum cooling or heating of the passenger compartment, it is possible to exceed the minimum value 14 or the maximum value 28.

- Turn control **2** or **3** to the left until **"LO"** (low) is displayed or to the right until **"HI"** (high) is displayed.

5. Air conditioning On/Off



- Press this button to switch off the air conditioning.

Switching the system off could result in some discomfort (humidity, condensation).

- Press this button again to return to automatic operation of the air conditioning. The indicator lamp on the **"A/C"** button comes on.

6. Air distribution adjustment



- Press one or more buttons to direct the air flow towards:

- the windscreen and side windows (demisting or defrosting),
- the windscreen, the side windows and the vents,
- the windscreen, the side windows, the vents and the footwells,
- the vents and the footwells,
- the vents,
- the footwells,
- the windscreen, the side windows and the footwells.

7. Air flow adjustment



- Turn this control to the left to decrease the air flow or to the right to increase the air flow.

The air flow indicator lamps, between the two fans, come on progressively in relation to the value requested.

8. Air recirculation



This button activates the recirculation of air in the passenger compartment and can permit automatic operation.

Shutting off/Intake of air (automatic mode)



The automatic mode has an exterior air quality sensor. It analyses the air and isolates the passenger compartment from the outside when it detects the presence of pollutants (e.g. in a tunnel). In this case, it activates the air recirculation automatically.



Press this button, the indicator lamp comes on.

Shutting off the intake of air (manual mode)



Press this button to recirculate the interior air, the indicator lamp comes on.

Air recirculation enables the passenger compartment to be isolated from exterior odours and smoke.



Avoid prolonged recirculation of interior air (risk of condensation and deterioration of the air quality).

Intake of air (manual mode)



Press this button to permit the intake of outside air and prevent condensation, the indicator lamp switches off.

The air quality sensor is not active.

9. Mono-zone/Dual-zone



Press this button to equalise the comfort value on the passenger side with that on the driver's side (mono-zone). The indicator lamp on the button comes on.

Switching the system off

Turn the air flow control to the left until all of the indicator lamps switch off.

This action switches off all of the functions of the system.

Temperature related comfort is no longer guaranteed but a slight flow of air, due to the movement of the vehicle, can still be felt.

Turn the air flow dial to the right or press the "AUTO" button to reactivate the system with the values set before it was switched off.



Avoid driving for prolonged periods with the system off.

FRONT SEATS

Seat consisting of a seat cushion, a seat back and a head restraint which can all be adjusted to adapt your position for ease of driving and comfort.

Manual adjustments

Forwards-backwards adjustment


- ☞ Raise the control and slide the seat forwards or backwards.

Driver's or passenger's seat height adjustment

- ☞ Pull the control upwards to raise or push it downwards to lower, as many times as necessary, to obtain the position required.

Seat back angle adjustment

- ☞ Push the control rearwards.

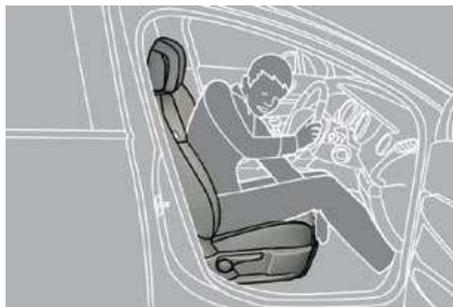


DRIVER'S ELECTRIC SEAT

Seat consisting of a seat cushion, a seat back and a head restraint which can all be adjusted to adapt your position for ease of driving and comfort.

Forwards-backwards adjustment

- ☞ Push the control forwards or rearwards to slide the seat.

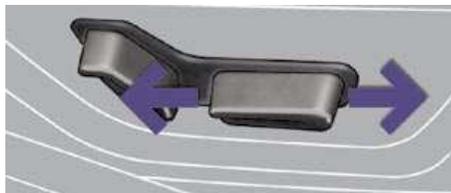

Seat cushion height and angle adjustment

- ☞ Tilt the rear part of the control upwards or downwards to obtain the required height.
- ☞ Tilt the front part of the control upwards or downwards to obtain the required angle.



The electrical functions of the driver's seat are active approximately one minute after opening the front door. They are deactivated approximately one minute after the ignition is switched off and in economy mode.

To reactivate them, switch on the ignition.

Seat back angle adjustment


- ☞ Tilt the control forwards or rearwards to adjust the angle of the seat back.



Additional adjustments

Head restraint height and angle adjustment

- ☞ To raise the head restraint, pull it forwards and upwards at the same time.
- ☞ To remove the head restraint, press the lug **A** and pull the head restraint upwards.
- ☞ To put the head restraint back in place, engage the head restraint stems in the openings keeping them in line with the seat back.
- ☞ To lower the head restraint, press the lug **A** and the head restraint at the same time.
- ☞ To adjust the angle of the head restraint, tilt its lower part forwards or rearwards.

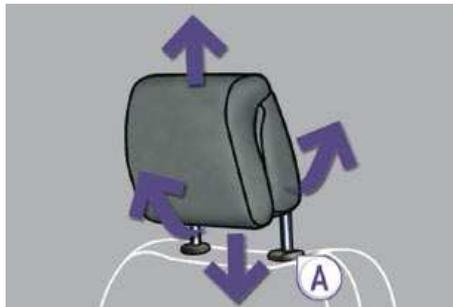


The head restraint is fitted with a frame with notches which prevents it from lowering; this is a safety device in case of impact.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.

Never drive with the head restraints removed; they must be in place and adjusted correctly.

Lumbar adjustment

- ☞ Turn the dial to obtain the correct lumbar position.

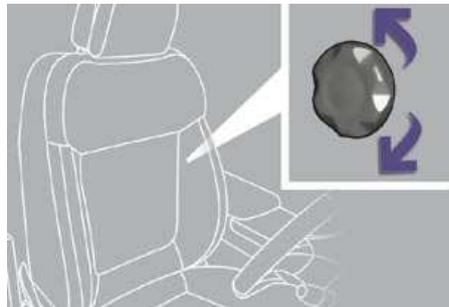

Heated seats control

With the engine running, the front seats can be heated separately.

- ☞ Use the adjustment dial, placed on the side of each front seat, to switch on and select the level of heating required:

0: Off.


1: Low.

2: Medium.

3: High.



Table position, front passenger seat

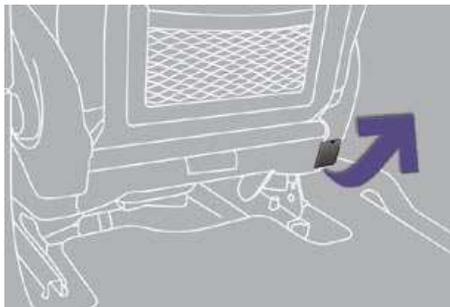

Folding the seat back

- ☞ Check that no object, either on or underneath the seat, could hinder its movement.
- ☞ To make the operation easier, place the head restraint in the low position or remove it (if the seat is in the fully forward position).
- ☞ Lift the control, located behind the seat, then guide the seat back forwards.

When the seat back is in this position, the seat behind it and the centre rear seat must not be occupied.

This position, associated with that of the rear seats, allows you to transport long objects inside the vehicle.

The maximum weight on the seat is 30 kg.

Returning the seat to the normal position


- ☞ Lift the control, located behind the seat, then guide the seat back rearwards until it locks.

REAR SEATS

Bench seat the left-hand (2/3) or right-hand (1/3) section of which can be folded to adapt the boot load space.

Rear head restraints

These have a high position (comfort and safety) and a low position (rear visibility).

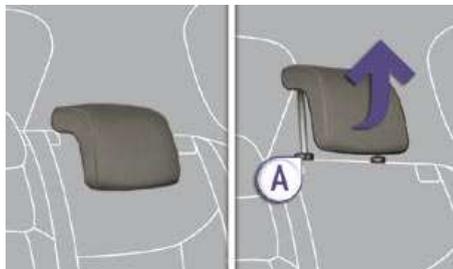

They can also be removed.

To remove a head restraint:

- ☞ pull the head restraint fully upwards,
- ☞ then, press the lug **A**.





Never drive with rear passengers when the head restraints are removed; the head restraints must be in place and in the high position.

Folding the seat from the boot

Each section of the bench seat (1/3 or 2/3) has its own control to release the seat back and its seat cushion from the boot.


- ☞ Check that nothing is preventing the seat back from folding (head restraint, seat belts, ...),
- ☞ check also that no object on or under the seat could hinder its movement,
- ☞ pull the control from the boot.

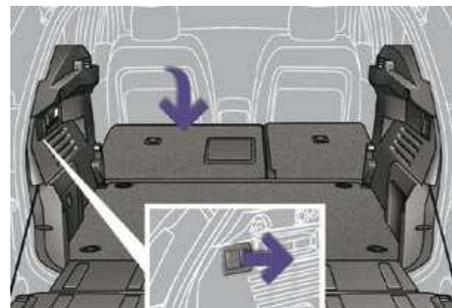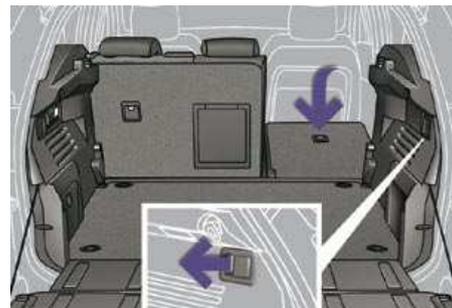

Folding the seat from the rear

Check that no object, either on or underneath the seat, could hinder its movement.


- ☞ Move the corresponding front seat forwards if necessary,
- ☞ check that the seat belt is positioned correctly on the side of the seat back,
- ☞ place the head restraints in the low position or remove them if necessary,
- ☞ pull the control **1** forwards to release the seat back **2** which tilts easily onto the seat cushion **3**.

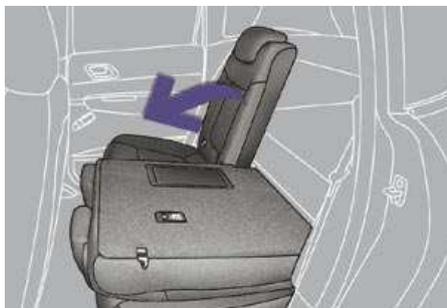

Returning the seat back to its original position

- ☞ Put the seat back in the upright position and secure it, the seat cushion also returns to its original position,
- ☞ check that the red indicator, located at the control **1**, is no longer visible,
- ☞ refit the head restraints or put them back in place.

When returning the rear seat back to its original position, take care not to trap the seat belts and ensure that their buckles are positioned correctly.

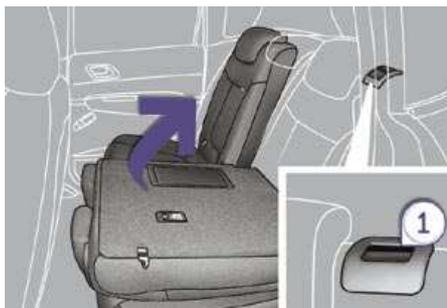

i The seat cushion lowers to be covered by the seat back; this leaves a flat boot floor, if the adjustable floor is in the intermediate position.

MIRRORS




Door mirrors

Each fitted with an adjustable mirror glass permitting the lateral rearward vision necessary for overtaking or parking. They can also be folded for parking in confined spaces.

Demisting - Defrosting

If your vehicle is fitted with heated mirrors, the demisting-defrosting operates with the engine running, by switching on the heated rear screen (refer to the "Rear screen demist-defrost" page).

Adjustment

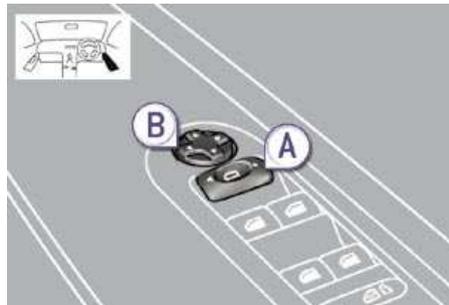

- ☞ Move control **A** to the right or to the left to select the corresponding mirror.
- ☞ Move control **B** in all four directions to adjust.
- ☞ Return control **A** to the central position.



The objects observed are, in reality, closer than they appear.

Take this into account in order to correctly judge the distance of vehicles approaching from behind.

Folding

- Automatic: lock the vehicle using the remote control or the key.
- Manual: with the ignition on, pull control **A** rearwards.



If the mirrors are folded using control **A**, they will not unfold when the vehicle is unlocked. Pull again on control **A**.

Unfolding

- Automatic: unlock the vehicle using the remote control or the key.
- Manual: with the ignition on, pull control **A** rearwards.



The folding and unfolding of the door mirrors using the remote control can be deactivated by a PEUGEOT dealer.


Fold the mirrors when putting your vehicle through an automatic car wash.

Rear view mirror

Adjustable mirror providing a central rearward view.

Equipped with an anti-dazzle system, useful in poor light.

Manual day/night model

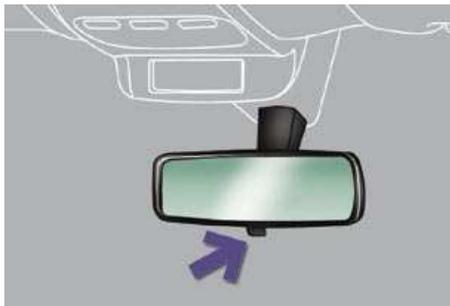

Adjustment

- ☞ Adjust the mirror so that the glass is directed correctly in the "day" position.

Day/night position

- ☞ Pull the lever to change to the "night" anti-dazzle position.
- ☞ Push the lever to change to the normal "day" position.



As a safety precaution, the mirrors must be adjusted to reduce the "blind spot".

Automatic day/night model




By means of a sensor, which measures the light from the rear of the vehicle, this system automatically and progressively changes between the day and night uses.

It has an anti-dazzle system which darkens the mirror glass: this reduces any driver discomfort caused by the light beam of following vehicles, the sun...



In order to guarantee optimum visibility during your manoeuvres, the mirror lightens automatically when reverse gear is engaged.

STEERING WHEEL ADJUSTMENT

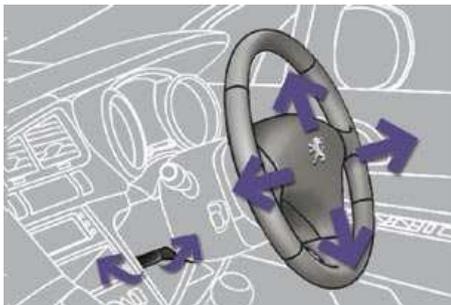

- ☞ **When stationary**, pull the control lever to release the steering wheel.
- ☞ Adjust the height and reach to suit your driving position.
- ☞ Push the control lever to lock the steering wheel.



As a safety precaution, these operations should only be carried out while the vehicle is stationary.

REMOTE CONTROL KEY

System which permits central unlocking or locking of the vehicle using the lock or from a distance. It is also used to locate and start the vehicle, as well as providing protection against theft.



Unlocking the vehicle

Unfolding the key



- ☞ First press this button to unfold the key.

Complete unlocking using the remote control



- ☞ Press the open padlock to unlock the vehicle.

Complete unlocking using the key

- ☞ Turn the key to the left in the driver's door lock to unlock the vehicle.

Unlocking is confirmed by rapid flashing of the direction indicators for approximately two seconds.

According to version, the door mirrors unfold at the same time.

Selective unlocking using the remote control



- ☞ Press the open padlock once to unlock the driver's door only.
- ☞ Press the open padlock again to unlock the other doors and the boot.


Selective unlocking using the key

- ☞ Turn the key to the left in the driver's door lock once to unlock the driver's door only.
- ☞ Turn the key to the left in the driver's door lock again to unlock the other doors and the boot.

Each unlocking is confirmed by rapid flashing of the direction indicators for approximately two seconds.

According to version, the door mirrors unfold at the same time as the first unlocking action.

The selective unlocking is only available on versions fitted with deadlocking.

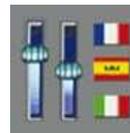

The complete or selective unlocking parameter is set via the multifunction screen configuration menu.

Complete unlocking is activated by default.

Locking the vehicle

Normal locking using the remote control



☞ Press the closed padlock to lock the vehicle completely.

☞ Press the closed padlock for more than two seconds to close the windows automatically in addition to locking (according to version).

Normal locking using the key

☞ Turn the key to the right in the driver's door lock to lock the vehicle completely.

Locking is confirmed by fixed lighting of the direction indicators for approximately two seconds.

According to version, the door mirrors fold at the same time.



If one of the doors or the boot is still open, the central locking does not take place.

When the vehicle is locked, if it is unlocked inadvertently, it will relock automatically after thirty seconds unless a door is opened.



The folding and unfolding of the door mirrors using the remote control can be deactivated by a PEUGEOT dealer.

Deadlocking using the remote control



☞ Press the closed padlock to lock the vehicle completely or press the closed padlock for more than two seconds to close the windows automatically in addition to locking (according to version).

☞ Press the closed padlock again within five seconds to deadlock the vehicle.

Deadlocking using the key

☞ Turn the key to the right in the driver's door lock to lock the vehicle completely and hold it in this position for more than two seconds to close the windows automatically in addition to locking (according to version).

☞ Turn the key to the right again within five seconds to deadlock the vehicle.

Deadlocking is confirmed by fixed lighting of the direction indicators for approximately two seconds.

According to version, the door mirrors fold at the same time.



Deadlocking renders the exterior and interior door controls inoperative.

It also deactivates the manual central control button.

Therefore, never leave anyone inside the vehicle when it is deadlocked.



Folding the key



☞ First press this button to fold the key.

Locating your vehicle

☞ Press the closed padlock to locate your locked vehicle in a car park.

This is indicated by lighting of the direction indicators for a few seconds.

Anti-theft protection

Electronic engine immobiliser

The key contains an electronic chip which has a special code. When the ignition is switched on, this code must be recognised in order for starting to be possible.

This electronic engine immobiliser locks the engine management system a few minutes after the ignition is switched off and prevents starting of the engine by anyone who does not have the key.




In the event of a malfunction, you are informed by lighting of this warning lamp, an audible signal and a message on the multifunction screen.

In this case, your vehicle does not start; contact a PEUGEOT dealer as soon as possible.

Starting the vehicle

- ☞ Insert the key in the ignition switch. The system recognises the starting code.
- ☞ Turn the key fully towards the dashboard to position **3 (Starting)**.
- ☞ When the engine starts, release the key.

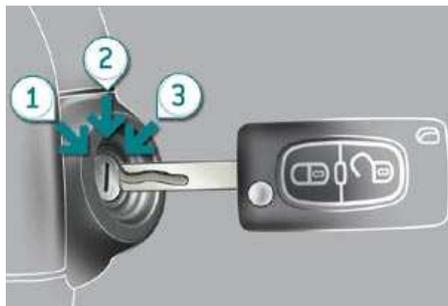

Switching the vehicle off

- ☞ Immobilise the vehicle.
- ☞ Turn the key fully towards you to position **1 (Stop)**.
- ☞ Remove the key from the ignition switch.

Energy economy mode

After switching off the engine (position **1-Stop**), you can still use functions such as the audio and telematics system, the wipers, the dipped headlamps, the courtesy lamps, etc. for a maximum combined period of thirty minutes.



For more information, refer to the "Practical information - Energy economy mode" section.



A heavy object (key fob...), attached to the key and weighing down on its shaft in the ignition switch, could cause a malfunction.

Remote control problem

Following disconnection of the vehicle battery, replacement of the remote control battery or in the event of a remote control malfunction, you can no longer unlock, lock or locate your vehicle.

- ☞ First of all, use the key in the lock to unlock or lock your vehicle.
- ☞ Then, reinitialise the remote control.


If the problem persists, contact a PEUGEOT dealer as soon as possible.

Reinitialisation

- ☞ Switch off the ignition.
- ☞ Turn the key to position **2 (Ignition)**.
- ☞ Press the closed padlock immediately for a few seconds.
- ☞ Switch off the ignition and remove the key from the ignition switch.

The remote control is fully operational again.

Changing the battery

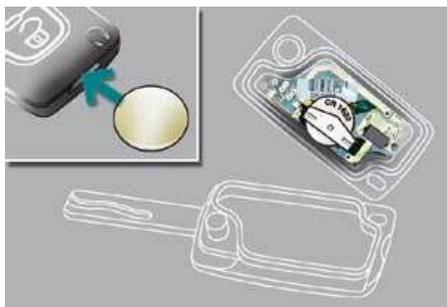

Battery ref.: CR1620/3 volts.

This replacement battery is available from PEUGEOT dealers.



If the battery is flat, you are informed by lighting of this warning lamp, an audible signal and a message on the multifunction screen.

- ☞ Unclip the casing using a coin at the notch.
- ☞ Slide the flat battery out of its location.
- ☞ Slide the new battery into its location observing the original direction.
- ☞ Clip the casing.
- ☞ Reinitialise the remote control.



Lost keys

Visit a PEUGEOT dealer with the vehicle's V5 registration document and your personal identification documents.

The PEUGEOT dealer will be able to retrieve the key code and the transponder code required to order a replacement key.

Remote control

The high frequency remote control is a sensitive system; do not operate it while it is in your pocket as there is a possibility that it may unlock the vehicle, without you being aware of it.

Do not repeatedly press the buttons of your remote control out of range and out of sight of your vehicle. You run the risk of stopping it from working and the remote control would have to be reinitialised.

The remote control does not operate when the key is in the ignition, even when the ignition is switched off, except for reinitialisation.

Locking the vehicle

Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.

As a safety precaution (with children on board), remove the key from the ignition when you leave the vehicle, even for a short time.

Anti-theft protection

Do not make any modifications to the electronic engine immobiliser system; this could cause malfunctions.

When purchasing a second-hand vehicle

Have the key codes memorised by a PEUGEOT dealer, to ensure that the keys in your possession are the only ones which can start the vehicle.



Do not throw the remote control batteries away, they contain metals which are harmful to the environment.

Take them to an approved collection point.

Anti-theft protection

Electronic engine immobiliser

The key contains an electronic chip which has a special code. When the ignition is switched on, this code must be recognised in order for starting to be possible.

This electronic engine immobiliser locks the engine management system a few minutes after the ignition is switched off and prevents starting of the engine by anyone who does not have the key.




In the event of a malfunction, you are informed by lighting of this warning lamp, an audible signal and a message on the multifunction screen.

In this case, your vehicle does not start; contact a PEUGEOT dealer as soon as possible.

Starting the vehicle

- ☞ Insert the key in the ignition switch. The system recognises the starting code.
- ☞ Turn the key fully towards the dashboard to position **3 (Starting)**.
- ☞ When the engine starts, release the key.

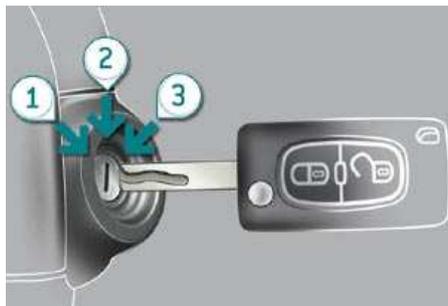

Switching the vehicle off

- ☞ Immobilise the vehicle.
- ☞ Turn the key fully towards you to position **1 (Stop)**.
- ☞ Remove the key from the ignition switch.

Energy economy mode

After switching off the engine (position **1-Stop**), you can still use functions such as the audio and telematics system, the wipers, the dipped headlamps, the courtesy lamps, etc. for a maximum combined period of thirty minutes.



For more information, refer to the "Practical information - Energy economy mode" section.



A heavy object (key fob...), attached to the key and weighing down on its shaft in the ignition switch, could cause a malfunction.

ALARM

System which protects and provides a deterrent against the theft of your vehicle. It provides two types of protection, exterior and interior, as well as an anti-tamper function.

Exterior perimeter protection

The system detects opening of the vehicle.

The alarm is triggered if anyone tries to enter the vehicle by forcing a door, the boot or the bonnet.

Interior volumetric protection

The system detects any variation in the volume in the passenger compartment.

The alarm is triggered if anyone breaks a window or moves inside the vehicle.

If you wish to leave a pet in the vehicle or a window partially open, deactivate the interior volumetric protection.

Anti-tamper function


The system detects the putting out of service of its components.

The alarm is triggered if anyone tries to put the wires of the siren, the central control or the battery out of service.



Do not make any modifications to the alarm system, this could cause malfunctions.

Locking the vehicle with full alarm

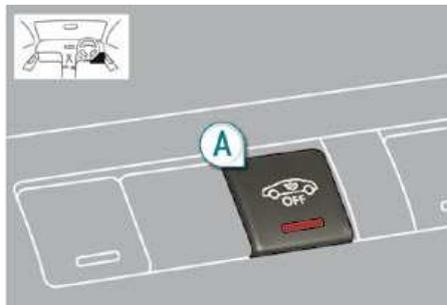

Activation

- ☞ Switch off the ignition and get out of the vehicle.
- ☞ Lock or deadlock the vehicle using the locking button on the remote control.

The alarm is activated; the indicator lamp on button **A** flashes once per second.

Deactivation

- ☞ Unlock the vehicle using the unlocking button on the remote control.
- The alarm is deactivated; the indicator lamp on button **A** switches off.

Locking the vehicle with exterior protection alarm only

Deactivation of the interior volumetric protection

- ☞ Switch off the ignition.
- ☞ Within ten seconds, press button **A** until the indicator lamp is lit continuously.
- ☞ Get out of the vehicle.
- ☞ Lock or deadlock the vehicle using the locking button on the remote control.

The exterior protection alarm alone remains activated; the indicator lamp on button **A** flashes once per second.



To be effective, this deactivation must be carried out each time the ignition is switched off.

Reactivation of the interior volumetric protection

- ☞ Unlock the vehicle using the unlocking button on the remote control.
- ☞ Relock the vehicle using the remote control.

The alarm is activated again with both types of protection; the indicator lamp on button **A** switches off.

Triggering

This is indicated by sounding of the siren and flashing of the direction indicators for approximately thirty seconds.

After it has been triggered, the alarm is again operational.



If the alarm is triggered ten times in succession, the eleventh time will result in it becoming inactive.

If the indicator lamp on button **A** flashes rapidly, this indicates that the alarm was triggered during your absence. When the ignition is switched on, this flashing stops immediately.

To avoid triggering the alarm when washing your vehicle, lock it using the key in the driver's door lock.

Do not activate the alarm before disconnecting the battery, otherwise the siren will sound.

Failure of the remote control

- ☞ Unlock the vehicle using the key in the driver's door lock.
- ☞ Open the door; the alarm is triggered.
- ☞ Switch on the ignition; the alarm stops.

Locking the vehicle without activating the alarm

- ☞ Lock or deadlock the vehicle using the key in the driver's door lock.

Malfunction

When the ignition is switched on, lighting of the indicator lamp on button **A** for ten seconds indicates a siren fault.

Have it checked by a PEUGEOT dealer.

Automatic operation*


Depending on the legislation in force in your country, one of these cases may occur:

- 45 seconds after the vehicle is locked using the remote control, the alarm is activated, regardless of the status of the doors and boot.
 - 2 minutes after the last door or the boot is closed, the alarm is activated.
- ☞ To avoid triggering the alarm on entering the vehicle, first press the unlocking button on the remote control.

* According to country.

ELECTRIC WINDOWS

System intended to open or close a window manually or automatically. Fitted with a safety anti-pinch system and a system for deactivation in the event of misuse of the rear controls.

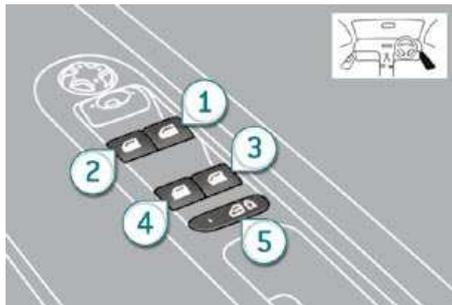

1. Driver's electric window control.
2. Passenger's electric window control.
3. Rear right electric window control.
4. Rear left electric window control.
5. Deactivation of the rear electric window and door controls.

One-touch electric windows

There are two options:

- **manual mode**
 - ☞ Press or pull the control gently. The window stops when the control is released.

- **automatic mode**
 - ☞ Press or pull the control firmly. The window opens or closes fully when the control is released.
 - ☞ Pressing the control again stops the movement of the window.



The electric window controls remain operational for approximately 45 seconds after the ignition is switched off or until the vehicle is locked after a front door is opened.

If one of the passenger windows cannot be operated from the driver's door control pad, carry out the operation from the control pad of the passenger door concerned, and vice versa.



After approximately ten consecutive complete opening/closing movements of the window, a protection function is activated to prevent damage to the electric window motor.

After this, you have approximately one minute within which to close the window.

Once the window is closed, the controls will become available again after approximately 40 minutes.

Safety anti-pinch

When the window rises and meets an obstacle, it stops and partially lowers again.



If the window cannot be closed (for example, in the presence of ice), immediately after the movement is reversed:

- ☞ press and hold the control until the window opens fully,
- ☞ then pull the control immediately and hold it until the window closes,
- ☞ continue to hold the control for approximately one second after the window has closed.

The safety anti-pinch function is not operational during these operations.

Reinitialisation

If a window does not rise automatically, its operation must be reinitialised:

- ☞ pull the control until the window stops,
- ☞ release the control and pull it again, repeat these operations until the window closes fully,
- ☞ continue to hold the control for approximately one second after the window has closed,
- ☞ press the control to lower the window automatically to the low position,
- ☞ when the window has reached the low position, press the control again for approximately one second.

The safety anti-pinch function is not operational during these operations.

Deactivation of the rear electric window and door controls



- ☞ For the safety of your children, with the ignition on, press control 5 to deactivate the rear electric window controls regardless of their position.

It is still possible to open the doors from the outside and operate the rear electric windows from the driver's control pad.



Indicator lamp on, the rear controls are deactivated.
Indicator lamp off, the rear controls are activated.



This control also deactivates the interior controls for the rear doors (refer to the section "Child safety - § Electric child lock").



Any other status of the indicator lamp indicates a malfunction of the electric child lock. Have it checked by a PEUGEOT dealer.

Always remove the key from the ignition when leaving the vehicle, even for a short time.

If an obstacle is encountered during operation of the electric windows, you must reverse the movement of the window. To do this, press the control concerned.

When the driver operates the controls for the passengers' electric windows, they must ensure that no one is preventing correct closing of the windows.


The driver must ensure that the passengers use the electric windows correctly.

Be aware of children when operating the windows.

DOORS


Opening

From outside

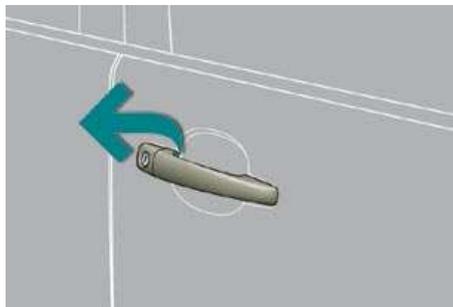

- ☞ After unlocking the vehicle completely using the remote control or the key, pull the door handle.

From inside

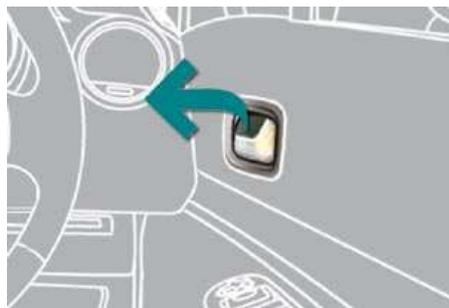

- ☞ Pull the door control (front or rear) to open the door; this unlocks this vehicle completely.



The interior door controls do not operate when the vehicle is deadlocked.

Closing


When a door is not closed correctly:



- **when the engine is running**, this warning lamp comes on, accompanied by a message on the multifunction screen for a few seconds,
- **when the vehicle is moving** (speed higher than 6 mph (10 km/h)), this warning lamp comes on, accompanied by an audible signal and a message on the multifunction screen for a few seconds.

Manual centralised control

System which provides full manual locking or unlocking of the doors from the inside.

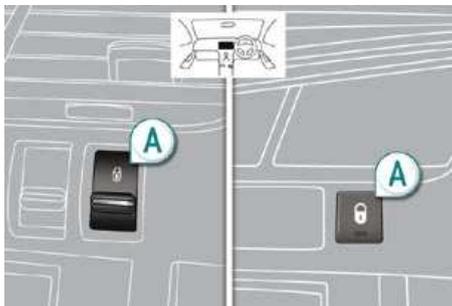

Locking

☞ Press button **A** to lock the vehicle. The red indicator lamp on the button comes on.



If one of the doors is open, the central locking from the inside does not take place.

Unlocking

☞ Press button **A** again to unlock the vehicle. The red indicator lamp on the button switches off.



If the vehicle is locked or deadlocked from the outside, the red indicator lamp flashes and button **A** is inactive.


☞ In this case, use the remote control or the key to unlock the vehicle.

Automatic centralised control

System which provides full automatic locking or unlocking of the doors and boot while driving, if they are closed correctly.

You can activate or deactivate this function.

Activation

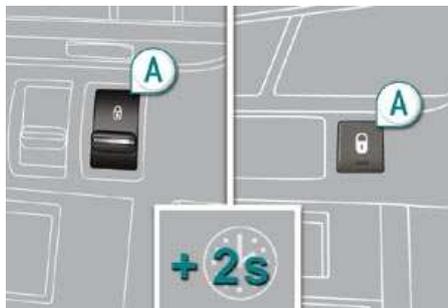

☞ Press button **A** for more than two seconds.



A confirmation message appears on the multifunction screen, accompanied by an audible signal.

Deactivation

☞ Press button **A** again for more than two seconds.

A confirmation message appears on the multifunction screen, accompanied by an audible signal.

Locking

When the speed exceeds 6 mph (10 km/h), the doors and boot lock automatically.

If one of the doors is open, the automatic central locking does not take place.

If the boot is open, the automatic central locking of the doors is active.

Unlocking

☞ Above 6 mph (10 km/h), press button **A** to unlock the doors and boot temporarily.



In the event of an impact, the doors unlock automatically.

Emergency control

System which locks or unlocks the doors mechanically in the event of a malfunction of the battery or of the central locking.

Locking the driver's door

- ☞ Insert the key in the lock, then turn it to the right.

Unlocking the driver's door

- ☞ Insert the key in the lock, then turn it to the left.

Locking the front and rear passenger doors




- ☞ Insert the key in the lock, located on the edge of the door, then turn it **one eighth of a turn**.

Unlocking the front and rear passenger doors


- ☞ Pull the interior door opening control.

BOOT

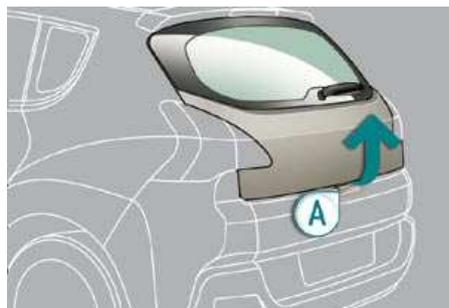

Opening

- ☞ After unlocking the vehicle using the remote control or the key, press the handle **A** and raise the tailgate.

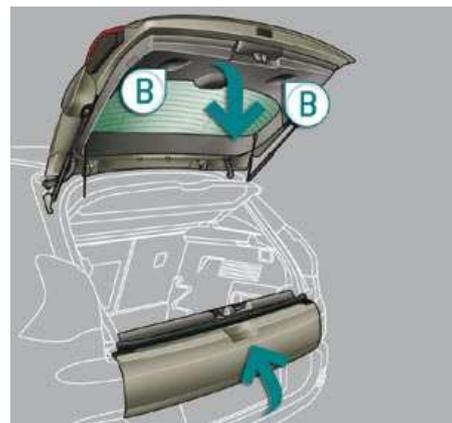

Closing

- ☞ Close the lower tailgate.
- ☞ Pull the handle **B** downwards to guide the tailgate.

Emergency control

System which locks or unlocks the doors mechanically in the event of a malfunction of the battery or of the central locking.

Locking the driver's door

- ☞ Insert the key in the lock, then turn it to the right.

Unlocking the driver's door

- ☞ Insert the key in the lock, then turn it to the left.

Locking the front and rear passenger doors




- ☞ Insert the key in the lock, located on the edge of the door, then turn it **one eighth of a turn**.

Unlocking the front and rear passenger doors


- ☞ Pull the interior door opening control.

BOOT

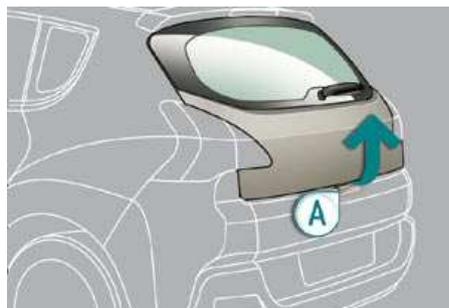

Opening


- ☞ After unlocking the vehicle using the remote control or the key, press the handle **A** and raise the tailgate.

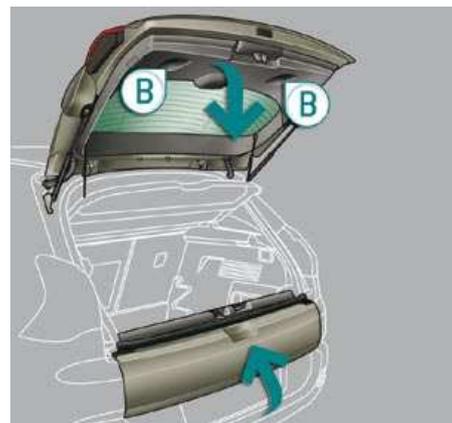

Closing


- ☞ Close the lower tailgate.
- ☞ Pull the handle **B** downwards to guide the tailgate.

LOWER TAILGATE

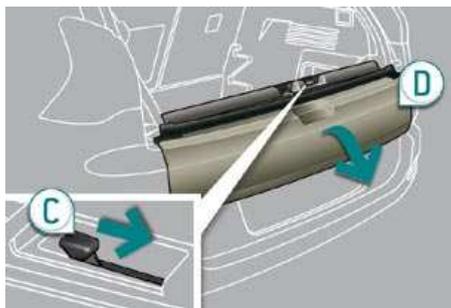

Opening

- ☞ Push the handle **C** to the right and tilt the tailgate **D** gently.

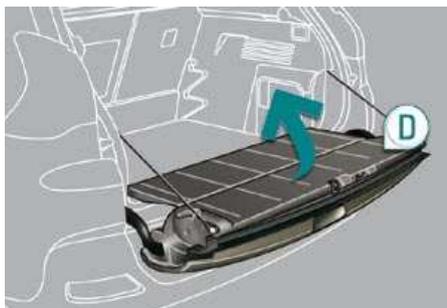

Closing

- ☞ Raise the tailgate **D**, push it fully to close it, check that it is secured correctly.



Before opening the boot, ensure that no one is within the radius of opening.

For reasons of safety, correct operation and compliance with regulations, do not drive with the boot and the lower tailgate open.

If the battery is disconnected, the boot cannot be opened.

Do not climb onto the lower tailgate and do not subject it to heavy knocks, it may be damaged.

Always close the lower tailgate and check that it is secured correctly before closing the boot.

When closing the lower tailgate, ensure that no person or object is in the proximity of the moving parts to avoid any risk of injury or damage.



Do not open the lower tailgate when a towbar is fitted.



Maximum authorised weight on the lower tailgate when open: **200 kg**.

FUEL TANK

Capacity of the tank: approximately 60 litres.

Low fuel level



When the fuel tank minimum level is reached, this warning lamp comes on on the instrument panel, accompanied by an audible signal and a message on the multifunction screen.

When the lamp first comes on, you have **approximately 6 litres** of fuel remaining.



You must refuel to avoid running out of fuel.

If you run out of fuel (Diesel), refer also to the "Checks" section.

Refueling

A label affixed to the inside of the filler flap reminds you of the type of fuel to be used according to your engine.

More than 5 litres of fuel must be added in order to be registered by the fuel gauge.




The key cannot be removed from the lock until the cap is put back on the tank.

Opening the cap may trigger an inrush of air. This vacuum, which is completely normal, is caused by the sealing of the fuel system.

To fill the tank safely:

- ☞ **it is essential that the engine is switched off,**
- ☞ open the fuel filler flap,
- ☞ insert the key in the cap, then turn it to the left,

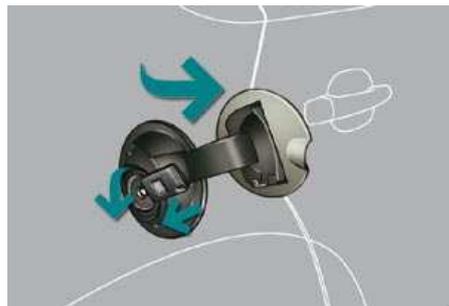

- ☞ remove the cap and secure it on the hook, located on the inside of the flap,
- ☞ fill the tank, but **do not continue after the 3rd cut-off of the nozzle;** this could cause malfunctions.



When refueling is complete:

- ☞ put the cap back in place,
- ☞ turn the key to the right, then remove it from the cap,
- ☞ close the filler flap.

Operating fault

A malfunction of the fuel gauge is indicated by the return to zero of the fuel level indicator needle.

Have it checked by a PEUGEOT dealer.

Quality of the fuel used for petrol engines

The petrol engines are perfectly compatible with E10 type petrol biofuels (containing 10 % ethanol), conforming to European standards EN 228 and EN 15376.

E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

For Brazil only, special vehicles are marketed to run on fuels containing up to 100 % ethanol (E100 type).

Quality of the fuel used for Diesel engines

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Consult a PEUGEOT dealer.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).



SP95
E10



SP98



DIESEL

LIGHTING CONTROLS

System for selection and control of the various front and rear lamps providing the vehicle's lighting.

Main lighting

The various front and rear lamps of the vehicle are designed to adapt the lighting progressively in relation to the climatic conditions and so improve the driver's visibility:

- sidelamps, to be seen,
- dipped beam headlamps to see without dazzling other drivers,
- main beam headlamps to see clearly when the road is clear,
- directional headlamps for improved visibility when cornering.

Additional lighting

Other lamps are installed to fulfil the requirements of particular driving conditions:


- a rear foglamp to be seen from a distance,
- front foglamps for even better visibility,
- daytime running lamps to be seen during the day.

Programming


Various automatic lighting control modes are also available according to the following options:

- guide-me-home lighting,
- automatic lighting,
- directional headlamps.

Model without AUTO lighting

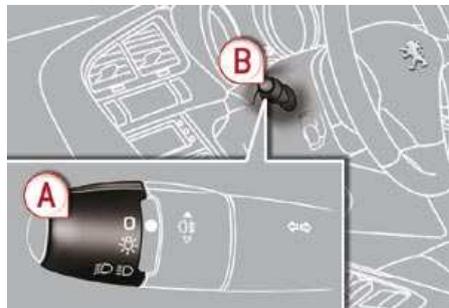

Model with AUTO lighting

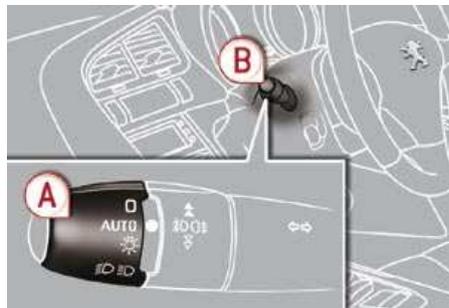

Manual controls

The lighting commands are issued directly by the driver by means of the ring **A** and the stalk **B**.

- A.** Main lighting mode selection ring: turn it to position the symbol required facing the mark.

 Lamps off.

AUTO Automatic illumination of headlamps.

 Sidelamps only.

 Dipped headlamps or main beam headlamps.


- B.** Stalk for switching headlamps: pull to switch the lighting between dipped headlamps/main beam headlamps.

In the lamps off and sidelamps modes, the driver can switch on the main beam headlamps temporarily ("headlamp flash") by maintaining a pull on the stalk.


Displays

Lighting of the corresponding indicator lamp on the instrument panel confirms the switching on of the lighting selected.


Model with rear foglamp only

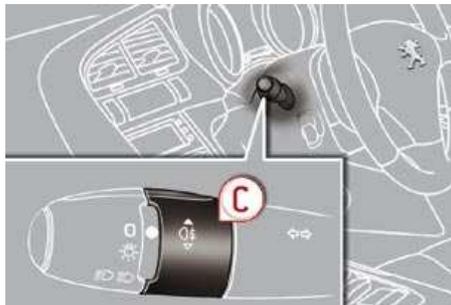

Model with front and rear foglamps

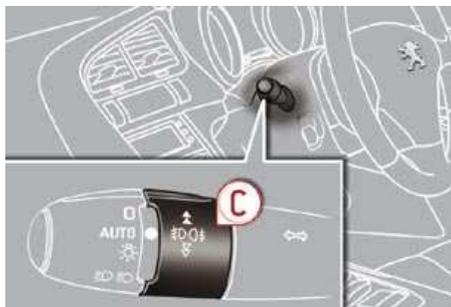

C. Fog lamps selection ring.

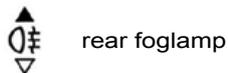


rear foglamp

This operates with the dipped beam headlamps and main beam headlamps.

- ☞ To switch on the foglamp, turn the ring **C** forwards.
- ☞ To switch off the foglamp, turn the ring **C** rearwards.

When the lighting is switched on automatically (with AUTO model), the dipped headlamps and sidelamps remain on until the rear foglamp is switched off.

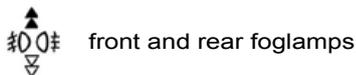

front and rear foglamps

The rear foglamp operates with the dipped beam and main beam headlamps.

The front foglamps also operate with the sidelamps.

- ☞ To switch on the rear foglamp, turn the ring **C** forwards.
- ☞ To switch on the front foglamps, turn the ring **C** forwards again.
- ☞ To switch off the rear foglamp, turn the ring **C** rearwards.
- ☞ To switch off the front foglamps, turn the ring **C** rearwards again.

When the lighting is switched on automatically (with AUTO model), the dipped headlamps and sidelamps remain on until the rear foglamp is switched off.

When the lighting is switched off automatically (with AUTO model) or when the dipped headlamps are switched off manually, the foglamps and the sidelamps will remain on.



In good or rainy weather, by both day and night, the front foglamps and the rear foglamp are prohibited. In these situations, the power of their beams may dazzle other drivers.

Do not forget to switch off the front foglamps and the rear foglamp when they are no longer necessary.

Lighting on buzzer

When the ignition is switched off, all of the lamps switch off automatically, unless "guide-me-home lighting" is activated.

If the lighting is switched on manually after switching off the ignition, there is an audible signal when a front door is opened to warn the driver that they have forgotten to switch off the vehicle's lighting, with the ignition off.



In some climatic conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

Daytime running lamps

System which permits switching on of the special lamps at the front (low power), so that you can be seen during the daytime.

The daytime running lamps come on automatically when the vehicle is started, if fitted*.

The instruments and controls (multi-function screen, air conditioning control panel, ...) are not lit, except when the lighting is switched on manually or automatically.

Programming



In countries in which this function is not imposed by regulations, you can activate or deactivate it via the multifunction screen configuration menu.

In countries in which it is imposed by regulations:

- by default, this function is activated,
- the sidelamps and the number plate lamps are also switched on*.

* According to country.

Manual guide-me-home lighting

Temporarily keeping the dipped beam headlamps on after the vehicle's ignition has been switched off makes the driver's exit easier when the light is poor.



Switching on

- ☞ With the ignition off, "flash" the headlamps using the lighting stalk.
- ☞ A further "headlamp flash" switches the function off.

Switching off

The manual guide-me-home lighting switches off automatically after a set time.

EXTERIOR WELCOME LIGHTING

The remote switching on of the lighting makes your approach to the vehicle easier in poor light. It is activated according to the level of light detected by the brightness sensor.

Switching on



- ☞ Press the open padlock on the remote control.

The dipped beam headlamps and the sidelamps come on; your vehicle is also unlocked.

Switching off

The exterior welcome lighting switches off automatically after a set time, when the ignition is switched on or on locking the vehicle.

Programming



The lighting duration is selected via the multifunction screen configuration menu.




The duration of the welcome lighting is associated with and identical to that of the automatic guide-me-home lighting.

Automatic illumination of headlamps

The sidelamps and dipped beam headlamps are switched on automatically, without any action on the part of the driver, when a low level of external light is detected or in certain cases of activation of the windscreen wipers.

As soon as the brightness returns to a sufficient level or after the windscreen wipers are switched off, the lamps are switched off automatically.

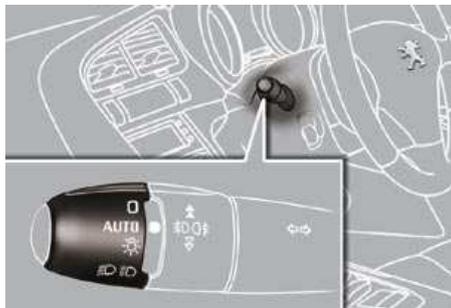

Activation

- ☞ Turn the ring to the **"AUTO"** position. The automatic illumination of headlamps is accompanied by a message on the multifunction screen.

Deactivation

- ☞ Turn the ring to another position. Deactivation is accompanied by a message on the multifunction screen.

Associated with the automatic "Guide-me-home" lighting

Association with the automatic lighting provides the "guide-me-home" lighting with the following additional options:

- selection of the lighting duration of 15, 30 or 60 seconds in the vehicle parameters on the multifunction screen configuration menu,
- automatic activation of "guide-me-home" lighting when automatic lighting is in operation.

Operating fault



In the event of a malfunction of the brightness sensor, the lighting comes on, this warning lamp is displayed on the instrument panel and/or a message appears on the multifunction screen, accompanied by an audible signal.

Consult a PEUGEOT dealer.



In fog or snow, the brightness sensor may detect sufficient light. Therefore, the lighting will not come on automatically.

Do not cover the brightness sensor, coupled with the rain sensor and located in the centre of the windscreen behind the rear view mirror; the associated functions would no longer be controlled.

MANUAL ADJUSTMENT OF HALOGEN HEADLAMPS



To avoid causing a nuisance to other road users, the height of the halogen headlamps should be adjusted in relation to the load in the vehicle.

- 0.** 1 or 2 people in the front seats.
- 3 people.
- 1.** 5 people.
- Intermediate setting.
- 2.** 5 people + maximum authorised load.
- Intermediate setting.
- 3.** Driver + maximum authorised load.



The initial setting is position **"0"**.



In some climatic conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

Daytime running lamps

System which permits switching on of the special lamps at the front (low power), so that you can be seen during the daytime.

The daytime running lamps come on automatically when the vehicle is started, if fitted*.

The instruments and controls (multi-function screen, air conditioning control panel, ...) are not lit, except when the lighting is switched on manually or automatically.

Programming



In countries in which this function is not imposed by regulations, you can activate or deactivate it via the multifunction screen configuration menu.

In countries in which it is imposed by regulations:

- by default, this function is activated,
- the sidelamps and the number plate lamps are also switched on*.

* According to country.

Manual guide-me-home lighting

Temporarily keeping the dipped beam headlamps on after the vehicle's ignition has been switched off makes the driver's exit easier when the light is poor.



Switching on

- ☞ With the ignition off, "flash" the headlamps using the lighting stalk.
- ☞ A further "headlamp flash" switches the function off.

Switching off

The manual guide-me-home lighting switches off automatically after a set time.

EXTERIOR WELCOME LIGHTING

The remote switching on of the lighting makes your approach to the vehicle easier in poor light. It is activated according to the level of light detected by the brightness sensor.

Switching on



- ☞ Press the open padlock on the remote control.

The dipped beam headlamps and the sidelamps come on; your vehicle is also unlocked.

Switching off

The exterior welcome lighting switches off automatically after a set time, when the ignition is switched on or on locking the vehicle.

Programming



The lighting duration is selected via the multifunction screen configuration menu.




The duration of the welcome lighting is associated with and identical to that of the automatic guide-me-home lighting.

Automatic illumination of headlamps

The sidelamps and dipped beam headlamps are switched on automatically, without any action on the part of the driver, when a low level of external light is detected or in certain cases of activation of the windscreen wipers.

As soon as the brightness returns to a sufficient level or after the windscreen wipers are switched off, the lamps are switched off automatically.

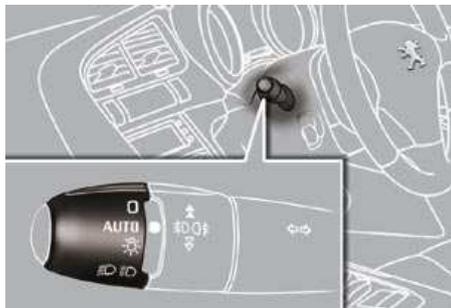

Activation

- ☞ Turn the ring to the **"AUTO"** position. The automatic illumination of headlamps is accompanied by a message on the multifunction screen.

Deactivation

- ☞ Turn the ring to another position. Deactivation is accompanied by a message on the multifunction screen.

Associated with the automatic "Guide-me-home" lighting

Association with the automatic lighting provides the "guide-me-home" lighting with the following additional options:

- selection of the lighting duration of 15, 30 or 60 seconds in the vehicle parameters on the multifunction screen configuration menu,
- automatic activation of "guide-me-home" lighting when automatic lighting is in operation.

Operating fault



In the event of a malfunction of the brightness sensor, the lighting comes on, this warning lamp is displayed on the instrument panel and/or a message appears on the multifunction screen, accompanied by an audible signal.

Consult a PEUGEOT dealer.



In fog or snow, the brightness sensor may detect sufficient light. Therefore, the lighting will not come on automatically.

Do not cover the brightness sensor, coupled with the rain sensor and located in the centre of the windscreen behind the rear view mirror; the associated functions would no longer be controlled.

MANUAL ADJUSTMENT OF HALOGEN HEADLAMPS




To avoid causing a nuisance to other road users, the height of the halogen headlamps should be adjusted in relation to the load in the vehicle.

0. 1 or 2 people in the front seats.
- 3 people.
1. 5 people.
- Intermediate setting.
2. 5 people + maximum authorised load.
- Intermediate setting.
3. Driver + maximum authorised load.



The initial setting is position **"0"**.

AUTOMATIC ADJUSTMENT OF THE XENON HEADLAMPS

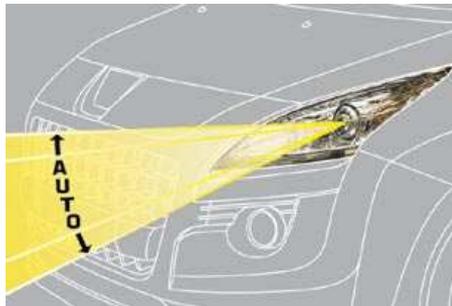

In order to avoid causing a nuisance to other road users, this system corrects the height of the xenon headlamps beam automatically and when stationary, in relation to the load in the vehicle.



If a malfunction occurs, this warning lamp is displayed on the instrument panel, accompanied by an audible signal and a message on the multifunction screen.

The system then places your headlamps in the lowest position.



If a malfunction occurs, do not touch the xenon bulbs. Consult a PEUGEOT dealer.

DIRECTIONAL LIGHTING

When the dipped or main beam headlamps are on, this function enables the light beams to provide improved lighting of the side of the road when cornering.

The use of this function, from approximately 12 mph (20 km/h) and associated with the xenon headlamps only, considerably improves the quality of your lighting when cornering.


with directional lighting



without directional lighting



Programming

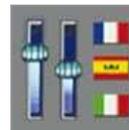

The function is activated or deactivated via the multi-function screen configuration menu.

Operating fault



If a malfunction occurs, this warning lamp flashes on the instrument panel, accompanied by a message on the multifunction screen.

Consult a PEUGEOT dealer.



When stationary or moving at very low speed or when reverse gear is engaged, the function is inactive.

The status of the function remains in the memory when the ignition is switched off.

WIPER CONTROLS

System for selection and control of the various front and rear wiping modes for the elimination of rain and cleaning.


The vehicle's front and rear wipers are designed to improve the driver's visibility progressively according to the climatic conditions.

Programming


Various automatic wiper control modes are also available according to the following options:

- automatic rain sensitive windscreen wipers,
- rear wiping on engaging reverse gear.

Model with intermittent wiping

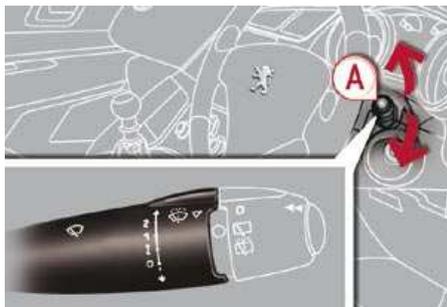

Model with AUTO wiping

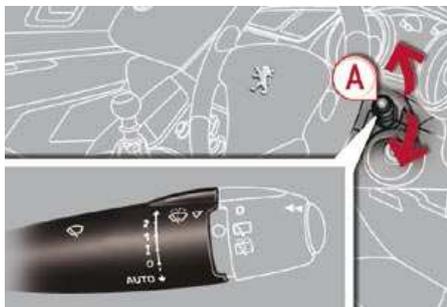

Manual controls

The wiper commands are issued directly by the driver by means of the stalk **A** and the ring **B**.


Windscreen wipers

A. wiping speed selection stalk:

- 2** fast (heavy rain),
 - 1** normal (moderate rain),
 - I** intermittent (proportional to the speed of the vehicle),
 - 0** park,
 - ↓** single wipe (press downwards),
- or

AUTO ↓ automatic, then single wipe (see following page).

Rear wiper

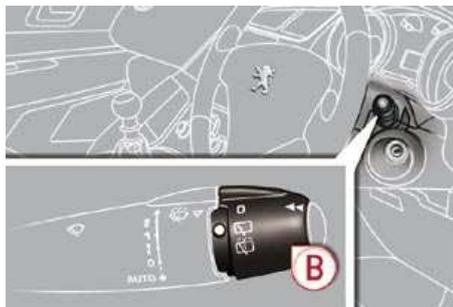

B. rear wiper selection ring:

-  park,
-  intermittent wipe,
-  wash-wipe (set duration).

Reverse gear

When reverse gear is engaged, the rear wiper will come into operation if the windscreen wipers are operating.

Programming



The function is activated or deactivated via the multifunction screen configuration menu.

This function is activated by default.



If a significant accumulation of snow or ice is present, or when using a bicycle carrier on the boot, deactivate the automatic rear wiper via the multifunction screen configuration menu.

Windscreen and headlamp wash



Pull the windscreen wiper stalk towards you. The windscreen wash then the windscreen wipers operate for a fixed period.

The headlamp washers only operate when the **dipped beam headlamps are on**.

Screenwash/headlamp wash low




In the case of vehicles fitted with headlamp washers, when the minimum level of the reservoir is reached, this warning lamp is displayed on the instrument panel, accompanied by an audible signal and a message on the multifunction screen.

Next time you stop, fill the screenwash/headlamp wash reservoir.

The warning lamp is displayed when the ignition is switched on, or every time the stalk is operated, until the reservoir is filled.

Automatic rain sensitive windscreen wipers


The windscreen wipers operate automatically, without any action on the part of the driver, if rain is detected (sensor behind the rear view mirror), adapting their speed to the intensity of the rain-fall.

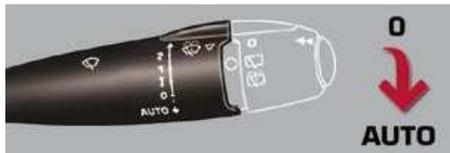

Activation

This is controlled manually by the driver by pushing the stalk downwards to the "AUTO" position.

It is accompanied by a message on the multifunction screen.

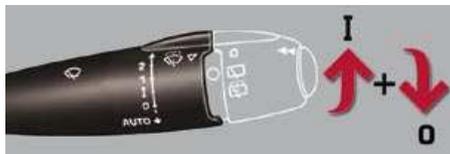

Switching off

This is controlled manually by the driver by moving the stalk upwards then returning it to position "0".

It is accompanied by a message on the multifunction screen.




The automatic rain sensitive wipers must be reactivated if the ignition has been off for more than one minute, by pushing the stalk downwards.

Operating fault

If an automatic wiping malfunction occurs, the wipers will operate in intermittent mode.

Have it checked by a PEUGEOT dealer.

Special position of the windscreen wipers

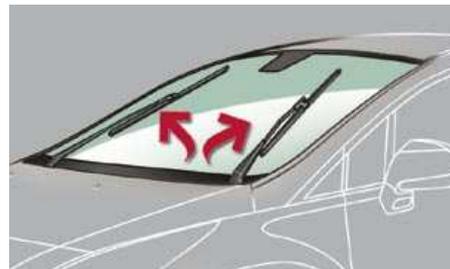

This position permits release of the windscreen wiper blades.

It is used for cleaning or replacement of the blades. It can also be useful, in winter, to detach the blades from the windscreen.

In the moment following switching off of the ignition, any action on the stalk positions the wipers vertically on the windscreen.



Do not cover the rain sensor, linked with the brightness sensor and located in the centre of the windscreen behind the rear view mirror.

Switch off the automatic rain sensitive wipers when using an automatic car wash.

In winter, to avoid damaging the wiper blades, it is advisable to wait until the windscreen is completely clear of ice before activating the automatic rain sensitive wipers.




To park the wipers after this has been done, switch on the ignition and operate the stalk.

For maintain the effectiveness of the "flat-blade" wiper blades, it is advisable to:

- handle them with care,
- clean them regularly using soapy water,
- avoid using them to retain cardboard on the windscreen.
- replace them at the first signs of wear.

Automatic rain sensitive windscreen wipers


The windscreen wipers operate automatically, without any action on the part of the driver, if rain is detected (sensor behind the rear view mirror), adapting their speed to the intensity of the rain-fall.

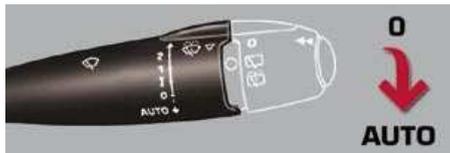

Activation

This is controlled manually by the driver by pushing the stalk downwards to the "AUTO" position.

It is accompanied by a message on the multifunction screen.

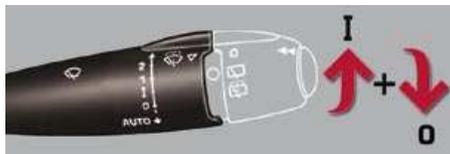

Switching off

This is controlled manually by the driver by moving the stalk upwards then returning it to position "0".

It is accompanied by a message on the multifunction screen.




The automatic rain sensitive wipers must be reactivated if the ignition has been off for more than one minute, by pushing the stalk downwards.

Operating fault

If an automatic wiping malfunction occurs, the wipers will operate in intermittent mode.

Have it checked by a PEUGEOT dealer.

Special position of the windscreen wipers

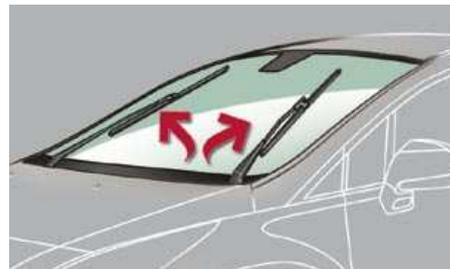

This position permits release of the windscreen wiper blades.

It is used for cleaning or replacement of the blades. It can also be useful, in winter, to detach the blades from the windscreen.

In the moment following switching off of the ignition, any action on the stalk positions the wipers vertically on the windscreen.



Do not cover the rain sensor, linked with the brightness sensor and located in the centre of the windscreen behind the rear view mirror.

Switch off the automatic rain sensitive wipers when using an automatic car wash.

In winter, to avoid damaging the wiper blades, it is advisable to wait until the windscreen is completely clear of ice before activating the automatic rain sensitive wipers.




To park the wipers after this has been done, switch on the ignition and operate the stalk.

For maintain the effectiveness of the "flat-blade" wiper blades, it is advisable to:


- handle them with care,
- clean them regularly using soapy water,
- avoid using them to retain cardboard on the windscreen.
- replace them at the first signs of wear.

COURTESY LAMPS

1. Front courtesy lamp
2. Map reading lamps

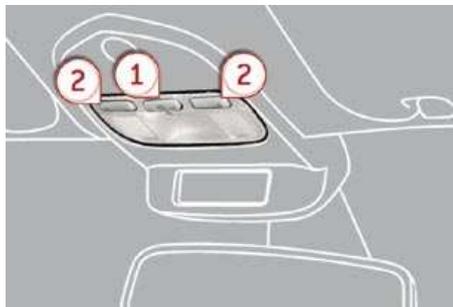

3. Rear side reading lamps
4. Rear courtesy lamp

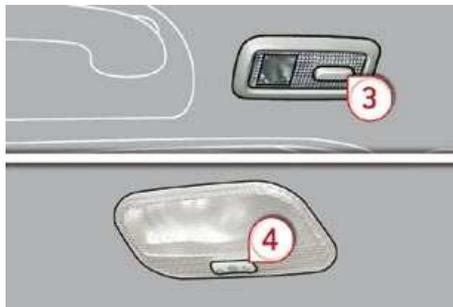

Take care not to place anything in contact with the courtesy lamps.

Front and rear courtesy lamps



In this position, the courtesy lamp comes on gradually:

- when the vehicle is unlocked,
- when the key is removed from the ignition,
- when a door is opened,
- when the remote control locking button is activated, in order to locate your vehicle.

It switches off gradually:

- when the vehicle is locked,
- when the ignition is switched on,
- 30 seconds after the last door is closed.



Permanently off.



Permanent lighting.



With the "permanent lighting" mode, the duration of lighting varies depending on the context:

- with the ignition off, approximately ten minutes,
- in energy economy mode, approximately thirty seconds,
- with the engine running, unlimited.



When the front courtesy lamp is in the "permanent lighting" position, the rear courtesy lamp will also come on, unless it is in the "permanently off" position.

To switch off the rear courtesy lamp, place it in the "permanently off" position.

Map reading lamps

- ☞ With the ignition on, press the corresponding switch.

Rear side reading lamps

- ☞ With the ignition on, the first press of the reading lamp switch switches on the reading lamp in "permanent lighting" mode.
- ☞ Following a second press, it comes on:

- when the vehicle is unlocked,
- when the key is removed from the ignition,
- when a door is opened,
- when the remote control locking button is pressed, in order to locate your vehicle.

It switches off gradually:

- when the vehicle is locked,
- when the ignition is switched on,
- 30 seconds after the last door is closed.

DOOR MIRROR SPOTLAMPS



To make your approach to the vehicle easier, these illuminate:

- the zones facing the driver's and passenger's doors,
- the zones forward of the door mirrors and rearward of the front doors.

Switching on

The spotlamps come on:

- when you unlock the vehicle,
- when you remove the key from the ignition,
- when you open a door,
- when you use the remote control.

Switching off

They are timed to go out automatically.

INTERIOR WELCOME LIGHTING

The remote switching on of the passenger compartment lighting makes your approach to the vehicle easier in poor light. It operates with the automatic lighting.

Switching on

- ☞ Press the open padlock on the remote control.

The courtesy lamps come on; your vehicle is also unlocked.

Switching off

The interior welcome lighting switches off automatically after a set time or when one of the doors is opened.

Programming




The function is activated or deactivated via the multi-function screen configuration menu.



The duration of the welcome lighting is associated with and identical to that of the automatic guide-me-home lighting.

INTERIOR MOOD LIGHTING

The dimmed passenger compartment lighting improves visibility in the vehicle when the light is poor.

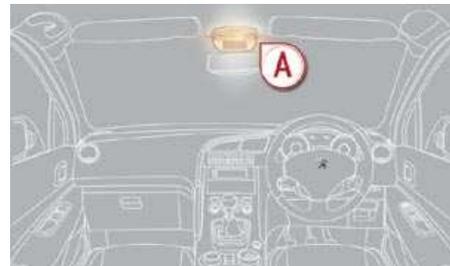

Switching on


At night, the front courtesy lamp mood lamp **A** comes on automatically when the sidelamps are switched on.

Switching off

The interior mood lighting switches off automatically when the sidelamps are switched off.

FOOTWELL LIGHTING


The soft lighting provided by the footwell lamps improves visibility in the vehicle when the light is poor.

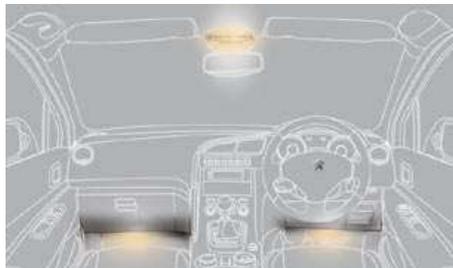

Activation

Its operation is identical to that of the courtesy lamps. The lighting comes on when one of the doors is opened.

BOOT LAMP

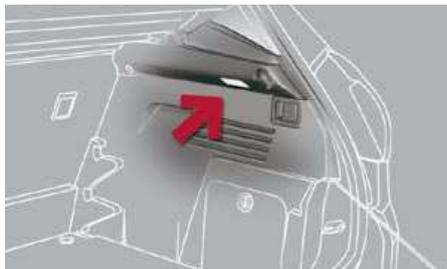

This comes on automatically when the boot is opened and switches off automatically when the boot is closed.



Different lighting times are available:

- when the ignition is off, approximately ten minutes,
- in energy economy mode, approximately thirty seconds,
- when the engine is running, no limit.

TORCH



Portable lamp, fitted in the boot wall, which can be used to light the boot or as a torch.



For the torch function, refer to the "Fittings - § Torch" section.

Operation

Once engaged firmly in its location, it comes on automatically when the boot is opened and switches off automatically when the boot is closed.

It operates with NiMH type rechargeable batteries.

It has a battery life of approximately 45 minutes and recharges while you are driving.




Observe the polarities when fitting the rechargeable batteries.

Never replace the rechargeable batteries with normal single-use batteries.

FOOTWELL LIGHTING


The soft lighting provided by the footwell lamps improves visibility in the vehicle when the light is poor.

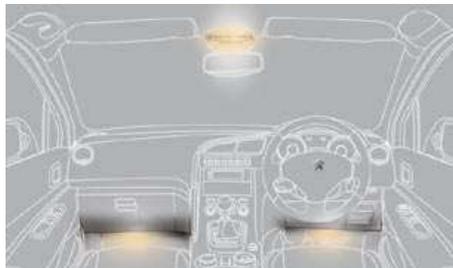

Activation

Its operation is identical to that of the courtesy lamps. The lighting comes on when one of the doors is opened.

BOOT LAMP

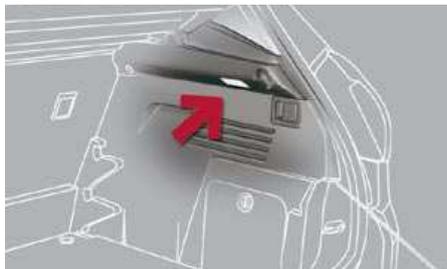

This comes on automatically when the boot is opened and switches off automatically when the boot is closed.



Different lighting times are available:

- when the ignition is off, approximately ten minutes,
- in energy economy mode, approximately thirty seconds,
- when the engine is running, no limit.

TORCH



Portable lamp, fitted in the boot wall, which can be used to light the boot or as a torch.



For the torch function, refer to the "Fittings - § Torch" section.

Operation

Once engaged firmly in its location, it comes on automatically when the boot is opened and switches off automatically when the boot is closed.

It operates with NiMH type rechargeable batteries.

It has a battery life of approximately 45 minutes and recharges while you are driving.



Observe the polarities when fitting the rechargeable batteries.


Never replace the rechargeable batteries with normal single-use batteries.

Torch

This is a removable lamp, incorporated in the boot wall, which can be used to light the boot or as a torch.



For the boot lighting function, refer to the "Visibility - § Boot lighting" section.

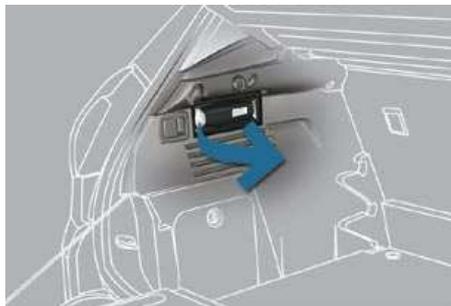

Operation


This torch operates with NIMH type rechargeable batteries.

It has a battery life of approximately 45 minutes and charges while you are driving.



Observe the polarities when fitting the batteries.

Never replace the rechargeable batteries with normal single-use batteries.

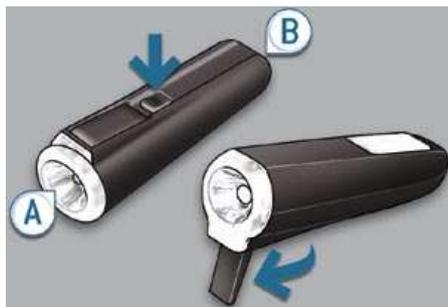

Use

- ☞ Extract the torch from its location pulling the side of the torch **A**.
- ☞ Press the switch, located on the back, to switch the torch on or off.
- ☞ Unfold the support, located on the back, to set down and raise the torch; for example, when changing a wheel.

Storing


- ☞ Put the torch back in place in its location starting with the narrow part **B**.
If you have forgotten to switch off the torch, this switches it off automatically.




If the torch is not engaged correctly, it may not charge and may not come on when the boot is opened.

Rear side blinds

Fitted on the rear windows, these protect your young children from the sun.

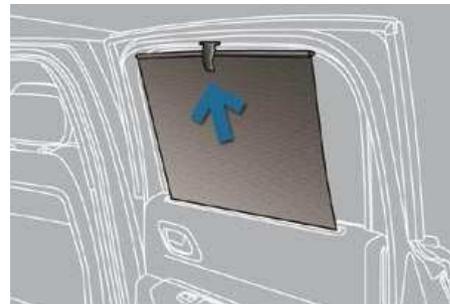


- ☞ Pull the blind by the central tab.
- ☞ Position the blind attachment on the hook.

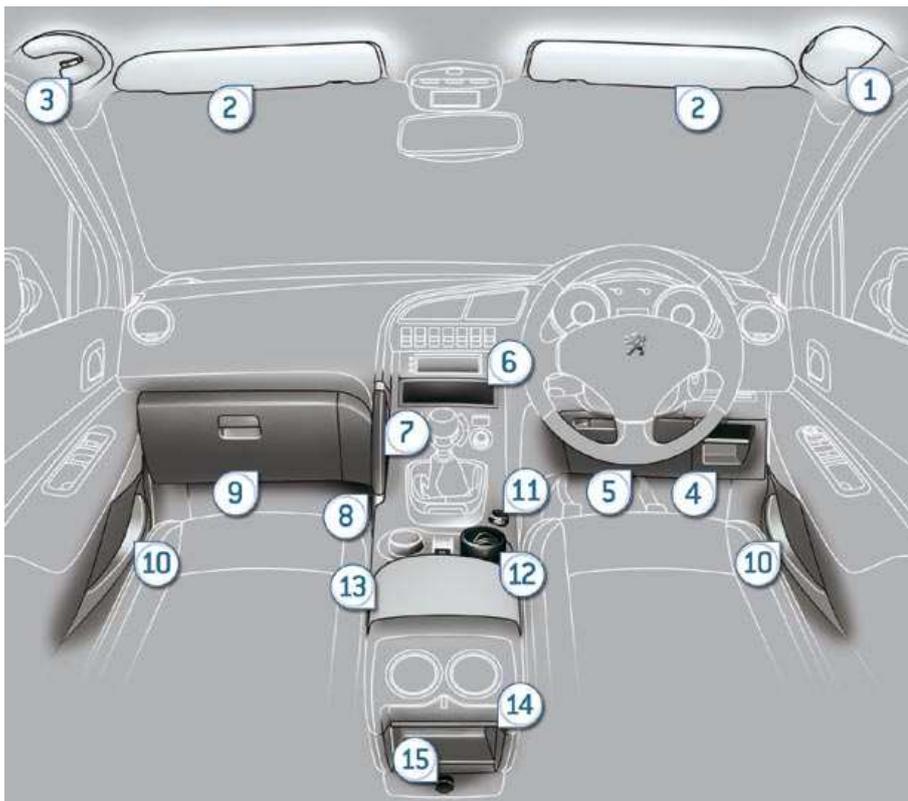

INTERIOR FITTINGS

1. Spectacles storage
2. Sun visor
3. Grab handle with coat hook
4. Storage compartment
5. Storage compartment under the steering wheel
6. Storage compartment
7. Console handle
8. Storage compartment with net
9. Illuminated glove box
10. Door trays
11. Front 12 V accessories socket (120 W)
12. Cup holder, portable ashtray
13. Front armrest with storage compartment
14. Storage compartment
15. Rear 12 V accessories socket (120 W)

SUN VISOR

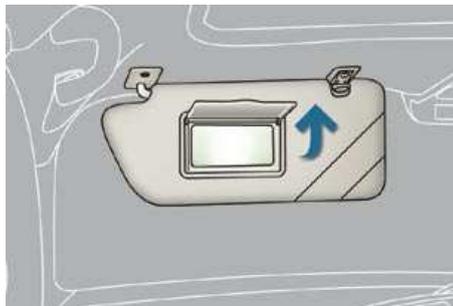


Component which protects against sunlight from the front or the side, also equipped with an illuminated courtesy mirror.

- ☞ With the ignition on, raise the concealing flap; the mirror is lit automatically.

This sun visor is also equipped with a ticket holder.

DRIVER'S STORAGE COMPARTMENTS

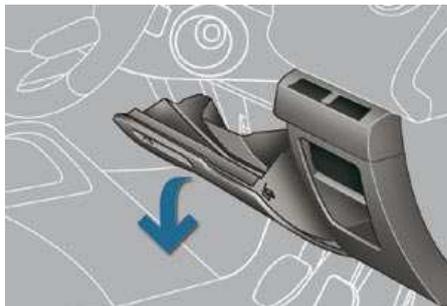

Storage box

This has storage areas for the hand-book pack, ...

- ☞ To open, pull the handle then tilt the box.

Card holder

This can be used for a toll payment ticket or parking card, for example.

Coin storage

Storage

ILLUMINATED GLOVE BOX



This has storage areas, audio sockets for a portable player and a location for the SIM card (only with Peugeot Connect Media), ...

- ☞ To open the glove box, raise the handle.

The lamp comes on when the lid is opened.



To connect a portable player or a SIM card, refer to the "Audio and telematics" section.

FRONT ARMREST

Comfort and storage device for the driver and front passenger.

- ☞ Raise the cover on the left.

Storage



A ventilation outlet distributes cooled air.

PEUGEOT CONNECT USB



This connection box, consisting of an auxiliary socket and/or USB port, is located in the front armrest (under the cover).

It permits the connection of portable equipment, such as a digital audio player of the iPod® type or a USB memory stick.

It reads the audio file formats (MP3, OGG, WMA, WAV, ...) which are transmitted to your audio equipment and played via the vehicle's speakers.


You can manage these files using the steering mounted controls or the audio equipment control panel and display them on the multifunction screen.

When the USB port is used, the portable equipment charges automatically.



For more information on the use of this equipment, refer to the "Audio and Telematics" section.

12 V ACCESSORIES SOCKETS

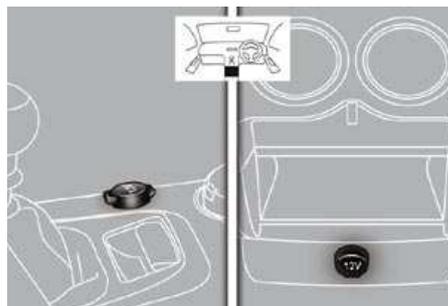

- ☞ To connect a 12 V accessory (max power: 120 Watts), remove the cover and connect a suitable adaptor.

Exceeding the maximum power could result in damage to your accessory.


PORTABLE ASHTRAY



- ☞ Pull the cover to open the ashtray.
- ☞ To empty it, remove the ashtray by pulling it upwards.

MATS

Removable carpet protection.

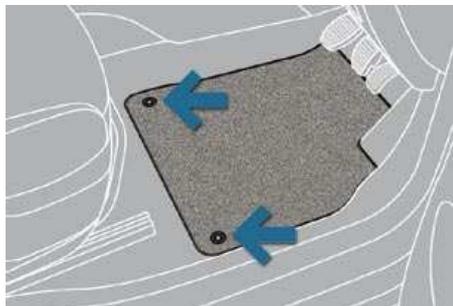

Fitting

When fitting the mat for the first time, on the driver's side use only the fixings provided in the wallet attached.

The other mats are simply placed on the carpet.

Removal

To remove the mat on the driver's side:

- ☞ move the seat as far back as possible,
- ☞ unclip the fixings,
- ☞ remove the mat.

Refitting

To refit the mat on the driver's side:

- ☞ position the mat correctly,
- ☞ refit the fixings by pressing,
- ☞ check that the mat is secured correctly.



To avoid any risk of jamming of the pedals:

- only use mats which are suited to the fixings already present in the vehicle; it is imperative that these are used,
- never fit one mat on top of another.

REAR MULTIMEDIA



Multimedia system permitting the connection of any external portable system: Ipod Video, games consoles, DVD player, ...



Two separate **video** sources can be connected via the RCA connectors (yellow).



The video is displayed on two 7" screens, integrated in the head restraints.



Two separate **audio** sources can be connected via the RCA connectors (red and white).



The audio is heard through two wireless headphones with Bluetooth technology which operate with rechargeable batteries.


The **A/B** button allows you to pair the headphones with the screen: **A** left-hand side, **B** right-hand side.

You have a 12 V charger with two outputs permitting simultaneous charging of both headphones.

It is also possible to connect a 3rd set of Bluetooth headphones.

Set-up

- ☞ With the engine running, connect your portable system to the RCA connectors (e.g. with AV1 on the left).
- ☞ Press the system's ON/OFF button, the indicator lamp comes on and the AV1 indicator lamps come on.
- ☞ Press and hold the ON/OFF button on the headphones, the indicator lamp on the headphones flashes in blue.
- ☞ Press and hold the system's ON/OFF button, the pairing with the headphones is complete when the blue indicator lamps on the headphones and on the system (in the shape of headphones) are lit continuously.
- ☞ Press the ON/OFF buttons on the screens if you have a video source.
- ☞ Start playing your portable system.

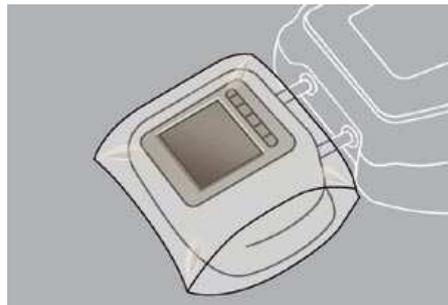

If your seat is in the table position, position a cover to avoid damaging the screen.

These covers also conceal each screen.

STORAGE UNDER THE REAR FOOTWELL



Depending on the configuration, the vehicle has storage compartments under the footwell, located in front of the rear seats. They can be accessed via clipped flaps with a handle **A**.

REAR ARMREST

Comfort and storage device for the rear passengers.




☞ Lower the rear armrest for a more comfortable position.

The armrest incorporates two cup holders.

SKI FLAP


Device for storing and transporting long objects.

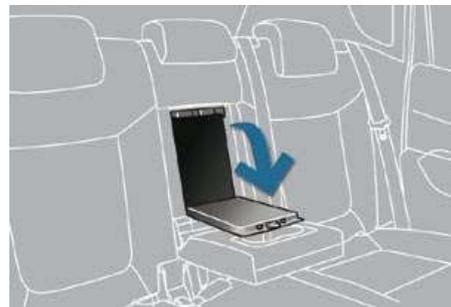

Opening

- ☞ Lower the rear armrest.
- ☞ Pull the flap handle downwards.
- ☞ Lower the flap.
- ☞ Load the objects from inside the boot.

SUN VISOR

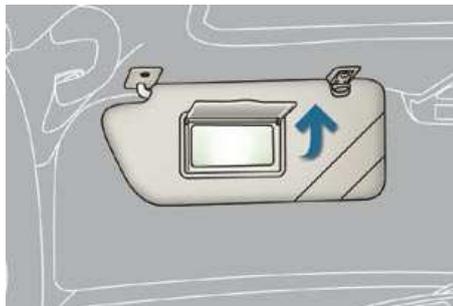


Component which protects against sunlight from the front or the side, also equipped with an illuminated courtesy mirror.

☞ With the ignition on, raise the concealing flap; the mirror is lit automatically.

This sun visor is also equipped with a ticket holder.

DRIVER'S STORAGE COMPARTMENTS

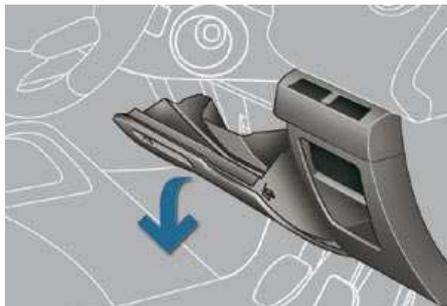

Storage box

This has storage areas for the hand-book pack, ...

☞ To open, pull the handle then tilt the box.


Card holder

This can be used for a toll payment ticket or parking card, for example.

Coin storage

Storage

ILLUMINATED GLOVE BOX

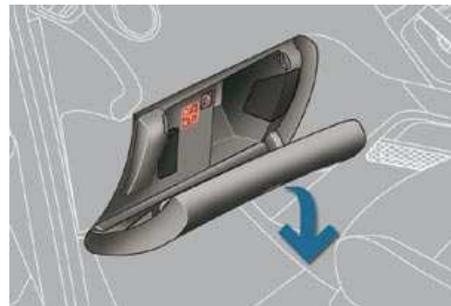

This has storage areas, audio sockets for a portable player and a location for the SIM card (only with Peugeot Connect Media), ...

☞ To open the glove box, raise the handle.

The lamp comes on when the lid is opened.



To connect a portable player or a SIM card, refer to the "Audio and telematics" section.

FRONT ARMREST

Comfort and storage device for the driver and front passenger.

- ☞ Raise the cover on the left.

Storage



A ventilation outlet distributes cooled air.

PEUGEOT CONNECT USB



This connection box, consisting of an auxiliary socket and/or USB port, is located in the front armrest (under the cover).

It permits the connection of portable equipment, such as a digital audio player of the iPod® type or a USB memory stick.

It reads the audio file formats (MP3, OGG, WMA, WAV, ...) which are transmitted to your audio equipment and played via the vehicle's speakers.


You can manage these files using the steering mounted controls or the audio equipment control panel and display them on the multifunction screen.

When the USB port is used, the portable equipment charges automatically.



For more information on the use of this equipment, refer to the "Audio and Telematics" section.

12 V ACCESSORIES SOCKETS

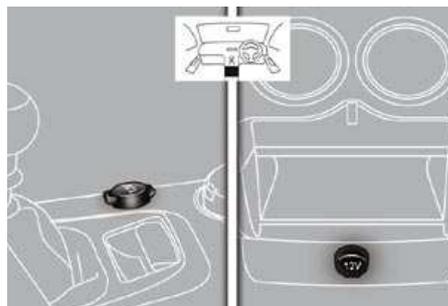

- ☞ To connect a 12 V accessory (max power: 120 Watts), remove the cover and connect a suitable adaptor.

Exceeding the maximum power could result in damage to your accessory.


PORTABLE ASHTRAY



- ☞ Pull the cover to open the ashtray.
- ☞ To empty it, remove the ashtray by pulling it upwards.

MATS

Removable carpet protection.

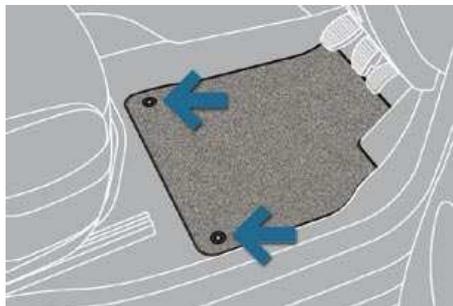

Fitting

When fitting the mat for the first time, on the driver's side use only the fixings provided in the wallet attached.

The other mats are simply placed on the carpet.

Removal

To remove the mat on the driver's side:

- ☞ move the seat as far back as possible,
- ☞ unclip the fixings,
- ☞ remove the mat.

Refitting

To refit the mat on the driver's side:

- ☞ position the mat correctly,
- ☞ refit the fixings by pressing,
- ☞ check that the mat is secured correctly.



To avoid any risk of jamming of the pedals:

- only use mats which are suited to the fixings already present in the vehicle; it is imperative that these are used,
- never fit one mat on top of another.

REAR MULTIMEDIA



Multimedia system permitting the connection of any external portable system: Ipod Video, games consoles, DVD player, ...



Two separate **video** sources can be connected via the RCA connectors (yellow).



The video is displayed on two 7" screens, integrated in the head restraints.



Two separate **audio** sources can be connected via the RCA connectors (red and white).



The audio is heard through two wireless headphones with Bluetooth technology which operate with rechargeable batteries.

The **A/B** button allows you to pair the headphones with the screen: **A** left-hand side, **B** right-hand side.

You have a 12 V charger with two outputs permitting simultaneous charging of both headphones.

It is also possible to connect a 3rd set of Bluetooth headphones.

Set-up


- ☞ With the engine running, connect your portable system to the RCA connectors (e.g. with AV1 on the left).
- ☞ Press the system's ON/OFF button, the indicator lamp comes on and the AV1 indicator lamps come on.
- ☞ Press and hold the ON/OFF button on the headphones, the indicator lamp on the headphones flashes in blue.
- ☞ Press and hold the system's ON/OFF button, the pairing with the headphones is complete when the blue indicator lamps on the headphones and on the system (in the shape of headphones) are lit continuously.
- ☞ Press the ON/OFF buttons on the screens if you have a video source.
- ☞ Start playing your portable system.



If your seat is in the table position, position a cover to avoid damaging the screen.

These covers also conceal each screen.

STORAGE UNDER THE REAR FOOTWELL

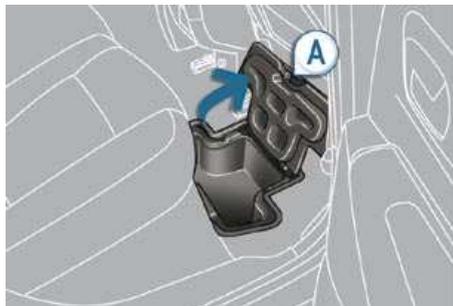

Depending on the configuration, the vehicle has storage compartments under the footwell, located in front of the rear seats. They can be accessed via clipped flaps with a handle **A**.

REAR ARMREST

Comfort and storage device for the rear passengers.




☞ Lower the rear armrest for a more comfortable position.

The armrest incorporates two cup holders.

SKI FLAP

Device for storing and transporting long objects.

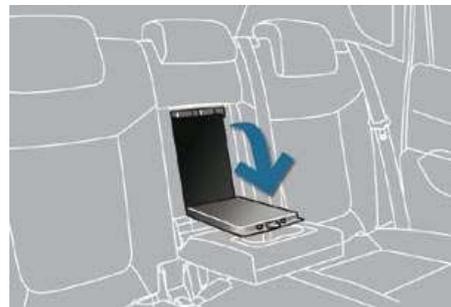


Opening

- ☞ Lower the rear armrest.
- ☞ Pull the flap handle downwards.
- ☞ Lower the flap.
- ☞ Load the objects from inside the boot.

PANORAMIC SUNROOF

Component which has a tinted glass panoramic surface to increase the light and visibility in the passenger compartment.

Fitted with an electric blind in several sections to improve temperature and noise related comfort.

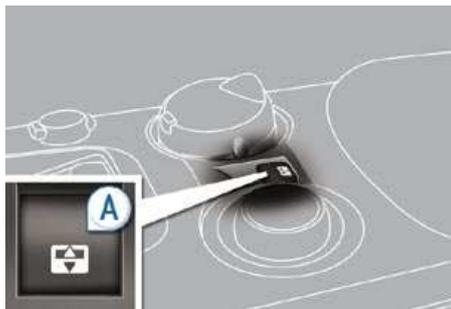


One-touch electric blind

There are two options for opening and closing:

- manual mode

- ☞ Pull or press control **A** gently.
The blind stops when you release the control.

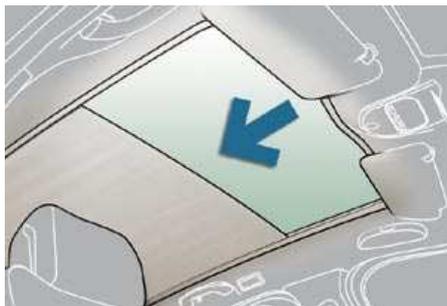

- automatic mode

- ☞ Pull or press control **A** firmly.
One press opens or closes the blind completely.
Pressing the control again stops the blind.

Safety anti-pinch

In automatic mode and at the end of its travel, if the blind meets an obstacle while closing it stops and moves back slightly.

Reinitialisation: if the blind's supply is cut off while it is moving, the safety anti-pinch must be reinitialised:

- ☞ press the control until the blind is fully closed,
- ☞ continue to press for at least 3 seconds.
A slight movement of the blind will then be noticeable, confirming the reinitialisation.



If the blind re-opens during a closing manoeuvre, and immediately after it stops:

- ☞ pull the control until the blind is fully open,
- ☞ press the control until the blind is fully closed.

The safety anti-pinch function is not operational during these operations.



If the blind meets an obstacle during operation, you must reverse the movement of the blind. To do this, press the control concerned.

When the driver operates the blind control, he must ensure that no one is preventing correct closing of the blind.

The driver must ensure that passengers use the blind correctly.


Be aware of children when operating the blind.

BOOT FITTINGS


1. Load space cover
2. Hooks
3. 12 V accessories socket (120 W)
4. Torch
5. Rear seats folding controls
6. Adjustable boot (3 position floor)
7. Stowing rings on the floor
8. Luggage retaining net
9. Storage trays



Rear parcel shelf

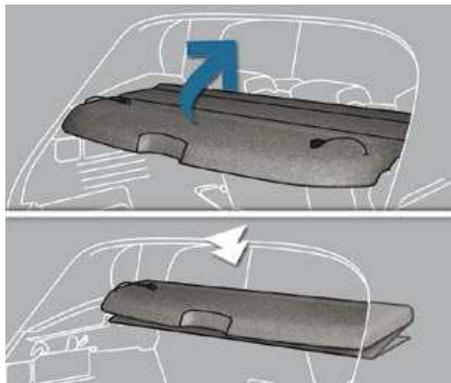


This consists of three sections which can be folded back on each other.

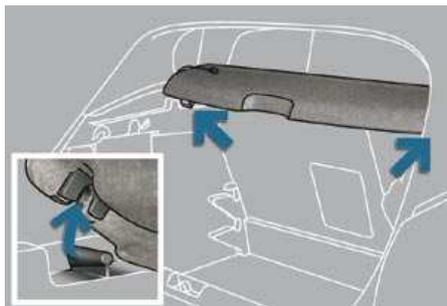


To fold it:

- ☞ unhook the two cords,
- ☞ fold it concertina-style to the rear seats.

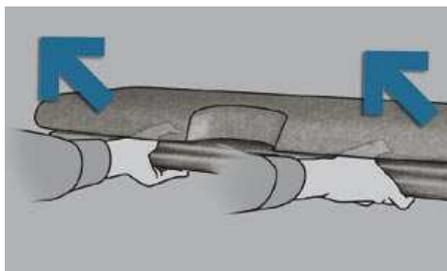

To remove it:

- ☞ fold the rear parcel shelf as described above,
- ☞ unclip the fixings on the left and on the right by pushing gently,
- ☞ place your hands as shown on the illustration then pull the assembly towards you,

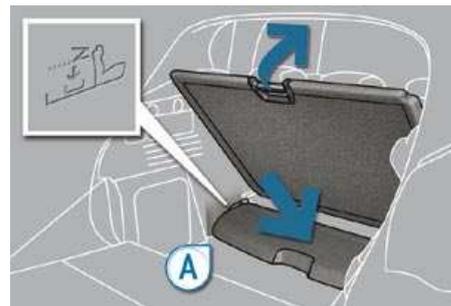


To store it at the bottom of the boot:

- ☞ remove the rear parcel shelf as described above,
- ☞ place the floor at an angle,
- ☞ place the rear parcel shelf in its location (recess marked **A**), at bottom of the boot,
- ☞ the rear parcel shelf will be protected if you place the floor in the intermediate position.

To put it back in place:

- ☞ take hold of the rear parcel shelf with both hands then place it on its support,
- ☞ unfold it to the boot pillars,
- ☞ hook the two cords,
- ☞ if necessary, press on the top of the rear parcel shelf, on the left and on the right, to engage the fixings.

Hooks

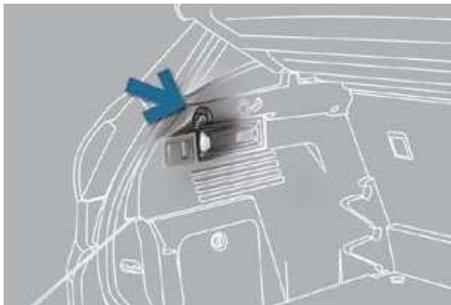


The hooks permit the securing of shopping bags.



When changing a wheel


The hooks permit easy access to the spare wheel by retaining the boot carpet by means of the two cords.

12 V accessories socket

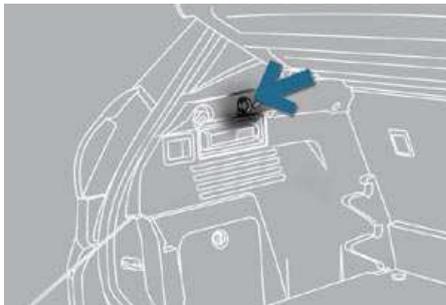

- ☞ In order to connect a 12 V accessory (max power: 120 Watts), remove the cap and connect the appropriate adaptor.
- ☞ Turn the key to the ignition position.

Luggage retaining net

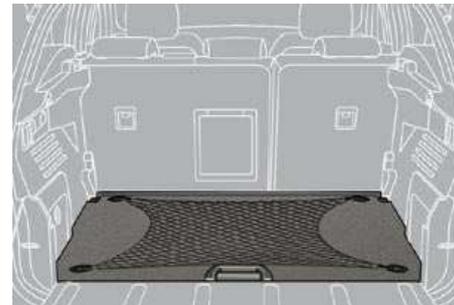


Hooked onto the stowing rings on the movable boot floor, this enables you to secure your luggage.

Observe the loads indicated on the side of the boot, in accordance with the position of the movable floor.

For safety reasons in case of sharp braking, we recommend that heavy objects are placed on the floor as close as possible to the back of the rear seats.

Storage box

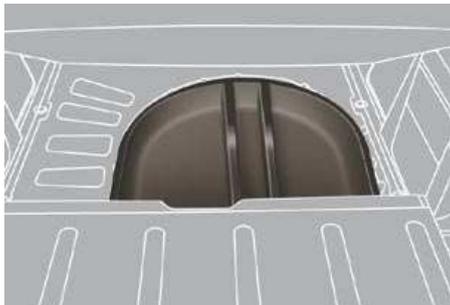


☞ Raise the boot carpet, hooking the two cords on the hooks, then gain access to the storage box.

Depending on the configuration, this has areas for storing:

- a box of spare bulbs,
- a first aid kit,
- a tyre repair kit,
- two warning triangles,
- ...

CD changer

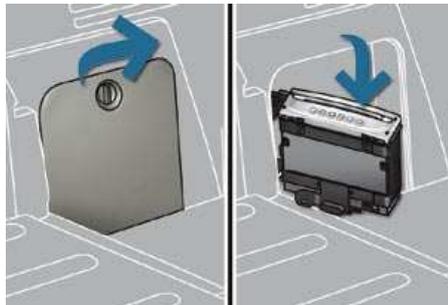

This holds up to 6 discs.

Access


- Place the floor in the low position.
- Remove the flap by turning its button.
- Pivot the changer towards you then change the discs, one by one.
- Put the changer back in its location.
- Close the flap correctly to prevent the changer from coming out of its location while driving.



The use of copied compact discs may cause faults.

Insert circular compact discs only.

Adjustable boot floor

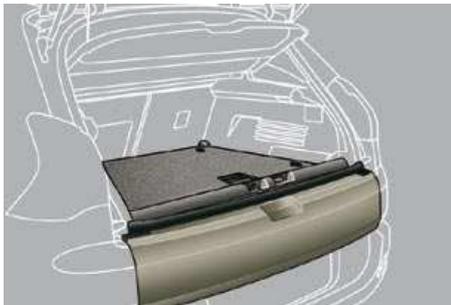

This three position floor allows you to optimise the volume of the boot by means of the guides placed on the sides:

- High position (50 kg max): the floor is level with the closed lower tailgate.

You can load objects while keeping an area protected and isolated.

- Intermediate position (100 kg max): the floor is level with the open lower tailgate.

You obtain a flat floor to the front seats when the rear seats are in the retracted position.

- Low position (150 kg max): maximum boot volume.



To place and support the floor at an angle:

- ☞ From the high position, raise the floor towards the load space cover.
- ☞ Do not hesitate to pass the two retractable stops then place the floor back on these two stops.

The floor is equipped with four stowing rings to secure your luggage, observing the loads indicated (in the boot).



To change the height of the floor:


- ☞ Push the floor fully forwards then, with the help of the support stops **A**, move the floor to the position required.

Torch

This is a removable lamp, incorporated in the boot wall, which can be used to light the boot or as a torch.



For the boot lighting function, refer to the "Visibility - § Boot lighting" section.

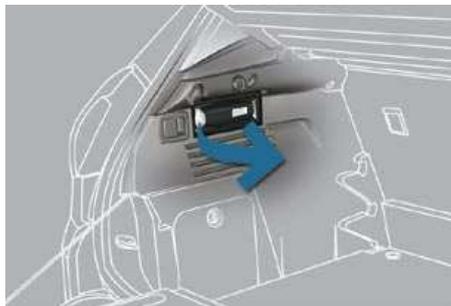

Operation


This torch operates with NIMH type rechargeable batteries.

It has a battery life of approximately 45 minutes and charges while you are driving.



Observe the polarities when fitting the batteries.

Never replace the rechargeable batteries with normal single-use batteries.

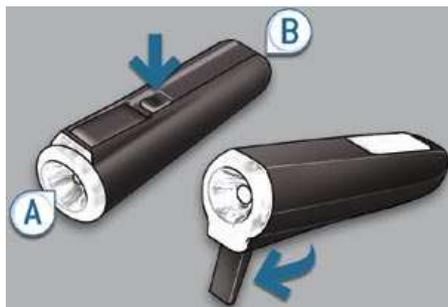

Use

- ☞ Extract the torch from its location pulling the side of the torch **A**.
- ☞ Press the switch, located on the back, to switch the torch on or off.
- ☞ Unfold the support, located on the back, to set down and raise the torch; for example, when changing a wheel.

Storing


- ☞ Put the torch back in place in its location starting with the narrow part **B**.
If you have forgotten to switch off the torch, this switches it off automatically.



If the torch is not engaged correctly, it may not charge and may not come on when the boot is opened.


Rear side blinds

Fitted on the rear windows, these protect your young children from the sun.

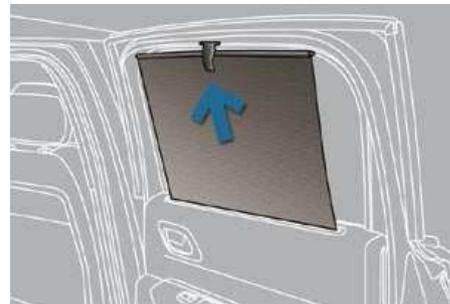


- ☞ Pull the blind by the central tab.
- ☞ Position the blind attachment on the hook.

Rear parcel shelf

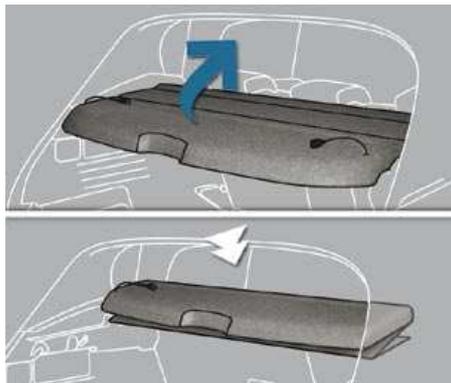


This consists of three sections which can be folded back on each other.

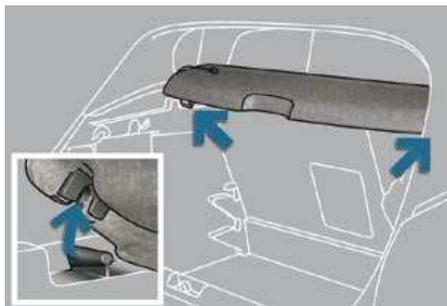


To fold it:

- ☞ unhook the two cords,
- ☞ fold it concertina-style to the rear seats.

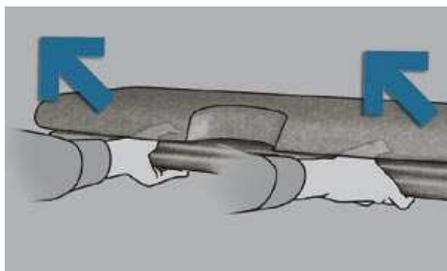

To remove it:

- ☞ fold the rear parcel shelf as described above,
- ☞ unclip the fixings on the left and on the right by pushing gently,
- ☞ place your hands as shown on the illustration then pull the assembly towards you,

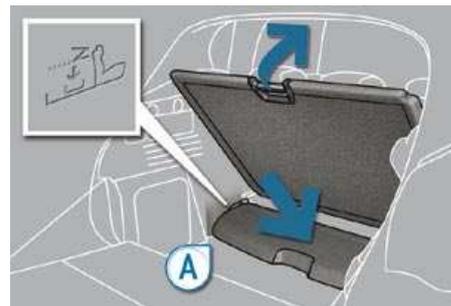


To store it at the bottom of the boot:

- ☞ remove the rear parcel shelf as described above,
- ☞ place the floor at an angle,
- ☞ place the rear parcel shelf in its location (recess marked **A**), at bottom of the boot,
- ☞ the rear parcel shelf will be protected if you place the floor in the intermediate position.

To put it back in place:

- ☞ take hold of the rear parcel shelf with both hands then place it on its support,
- ☞ unfold it to the boot pillars,
- ☞ hook the two cords,
- ☞ if necessary, press on the top of the rear parcel shelf, on the left and on the right, to engage the fixings.

Hooks

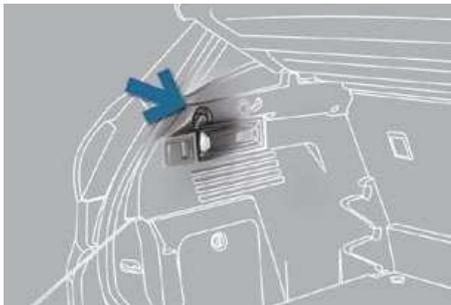


The hooks permit the securing of shopping bags.



When changing a wheel


The hooks permit easy access to the spare wheel by retaining the boot carpet by means of the two cords.

12 V accessories socket

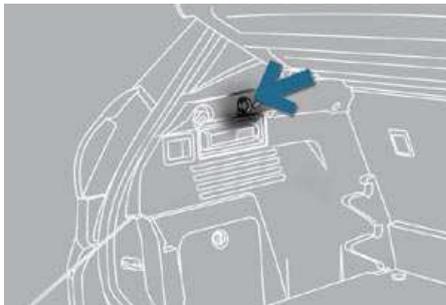

- ☞ In order to connect a 12 V accessory (max power: 120 Watts), remove the cap and connect the appropriate adaptor.
- ☞ Turn the key to the ignition position.

Luggage retaining net

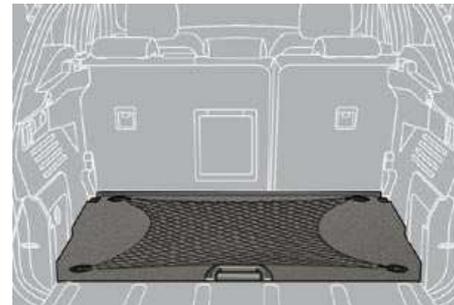

Hooked onto the stowing rings on the movable boot floor, this enables you to secure your luggage.

Observe the loads indicated on the side of the boot, in accordance with the position of the movable floor.

For safety reasons in case of sharp braking, we recommend that heavy objects are placed on the floor as close as possible to the back of the rear seats.

Storage box




☞ Raise the boot carpet, hooking the two cords on the hooks, then gain access to the storage box.

Depending on the configuration, this has areas for storing:

- a box of spare bulbs,
- a first aid kit,
- a tyre repair kit,
- two warning triangles,
- ...

CD changer

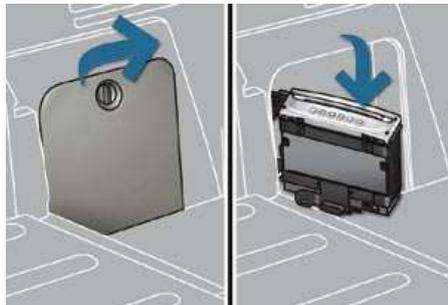

This holds up to 6 discs.

Access

- Place the floor in the low position.
- Remove the flap by turning its button.
- Pivot the changer towards you then change the discs, one by one.
- Put the changer back in its location.
- Close the flap correctly to prevent the changer from coming out of its location while driving.



The use of copied compact discs may cause faults.

Insert circular compact discs only.

Adjustable boot floor



This three position floor allows you to optimise the volume of the boot by means of the guides placed on the sides:

- High position (50 kg max): the floor is level with the closed lower tailgate.

You can load objects while keeping an area protected and isolated.

- Intermediate position (100 kg max): the floor is level with the open lower tailgate.

You obtain a flat floor to the front seats when the rear seats are in the retracted position.

- Low position (150 kg max): maximum boot volume.



To place and support the floor at an angle:

- ☞ From the high position, raise the floor towards the load space cover.
- ☞ Do not hesitate to pass the two retractable stops then place the floor back on these two stops.

The floor is equipped with four stowing rings to secure your luggage, observing the loads indicated (in the boot).



To change the height of the floor:


- ☞ Push the floor fully forwards then, with the help of the support stops **A**, move the floor to the position required.

Torch

This is a removable lamp, incorporated in the boot wall, which can be used to light the boot or as a torch.



For the boot lighting function, refer to the "Visibility - § Boot lighting" section.

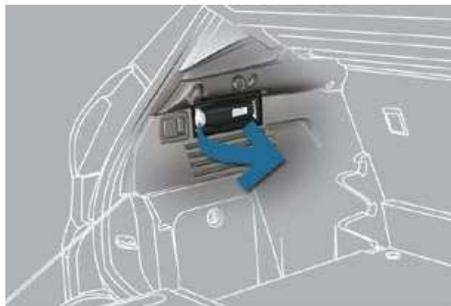

Operation


This torch operates with NIMH type rechargeable batteries.

It has a battery life of approximately 45 minutes and charges while you are driving.



Observe the polarities when fitting the batteries.

Never replace the rechargeable batteries with normal single-use batteries.

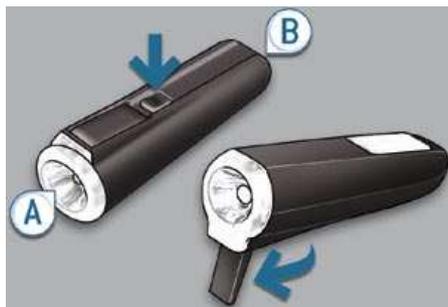

Use

- ☞ Extract the torch from its location pulling the side of the torch **A**.
- ☞ Press the switch, located on the back, to switch the torch on or off.
- ☞ Unfold the support, located on the back, to set down and raise the torch; for example, when changing a wheel.

Storing


- ☞ Put the torch back in place in its location starting with the narrow part **B**.
If you have forgotten to switch off the torch, this switches it off automatically.



If the torch is not engaged correctly, it may not charge and may not come on when the boot is opened.

Rear side blinds

Fitted on the rear windows, these protect your young children from the sun.

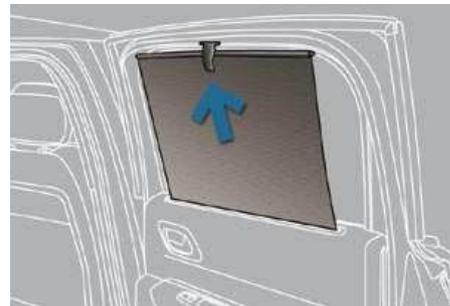

- ☞ Pull the blind by the central tab.
- ☞ Position the blind attachment on the hook.

GENERAL POINTS RELATING TO CHILD SEATS

Although one of PEUGEOT's main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please observe the following recommendations:

- in accordance with European regulations, **all children under the age of 12 or less than one and a half metres tall must travel in approved child seats suited to their weight**, on seats fitted with a seat belt or ISOFIX mountings*,
- **statistically, the safest seats in your vehicle for carrying children are the rear seats**,
- **a child weighing less than 9 kg must travel in the "rearwards-facing" position both in the front and in the rear.**



PEUGEOT recommends that children should travel in the **rear seats** of your vehicle:

- **"rearwards-facing"** up to the age of 2,
- **"forwards-facing"** over the age of 2.

CHILD SEAT IN THE FRONT

"Rearwards-facing"

When a "rearwards-facing" child seat is installed on the **front passenger seat**, it is essential that the passenger airbag is deactivated. Otherwise, **the child would risk being seriously injured or killed if the airbag were to inflate.**




"Forwards-facing"

When a "forwards-facing" child seat is installed on the **front passenger seat**, adjust the vehicle's seat to the intermediate longitudinal position with the seat back upright and leave the passenger airbag activated.




Intermediate longitudinal position

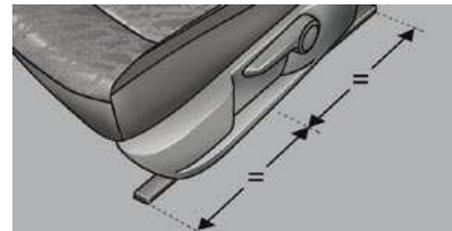

* The rules for carrying children are specific to each country. Refer to the current legislation in your country.



Passenger air bag OFF

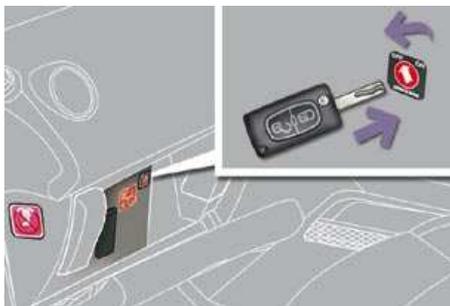

For more information on deactivating the airbag, refer to the "Safety" section then "Airbags".

CHILD SEATS RECOMMENDED BY PEUGEOT

PEUGEOT offers a complete range of recommended child seats which are secured using a **three point seat belt**:

Group 0+: from birth to 13 kg



L1
"RÖMER/BRITAX Baby-Safe Plus".
Installed in the rearwards-facing position.

Group 1: from 9 to 18 kg



L2
"RÖMER Duo Plus ISOFIX".

Groups 1, 2 and 3: from 9 to 36 kg



L3
"KIDDY Life".
The use of the restraining cushion is compulsory for the transportation of young children (from 9 to 18 kg).

Groups 2 and 3: from 15 to 36 kg




L4
"RECARO Start".



L5
"KLIPPAN Optima".
From the age of 6 years (approximately 22 kg), the booster is used on its own.



Passenger air bag OFF

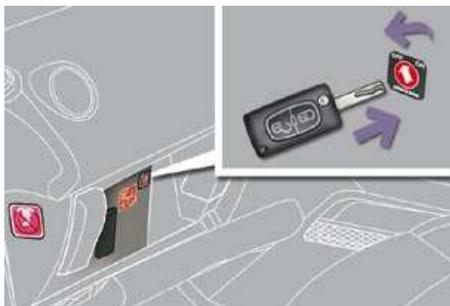

For more information on deactivating the airbag, refer to the "Safety" section then "Airbags".

CHILD SEATS RECOMMENDED BY PEUGEOT

PEUGEOT offers a complete range of recommended child seats which are secured using a **three point seat belt**:

Group 0+: from birth to 13 kg



L1
"RÖMER/BRITAX Baby-Safe Plus".
Installed in the rearwards-facing position.

Group 1: from 9 to 18 kg



L2
"RÖMER Duo Plus ISOFIX".

Groups 1, 2 and 3: from 9 to 36 kg



L3
"KIDDY Life".
The use of the restraining cushion is compulsory for the transportation of young children (from 9 to 18 kg).

Groups 2 and 3: from 15 to 36 kg



L4
"RECARO Start".



L5
"KLIPPAN Optima".
From the age of 6 years (approximately 22 kg), the booster is used on its own.

INSTALLING CHILD SEATS ATTACHED USING THE SEAT BELT

In accordance with European regulations, this table indicates the options for installing child seats secured using a seat belt and universally approved **(a)** in accordance with the weight of the child and the seat in the vehicle:

Seat	Weight of the child and indicative age			
	Under 13 kg (groups 0 (b) and 0+) Up to approx 1 year	From 9 to 18 kg (group 1) 1 to 3 years approx	From 15 to 25 kg (group 2) 3 to 6 years approx	From 22 to 36 kg (group 3) 6 to 10 years approx
Front passenger seat (c) with height adjuster 	U (R)	U (R)	U (R)	U (R)
Front passenger seat (c) without height adjuster 	X	X	X	X
Outer rear seats 	U*	U*	U*	U*
Centre rear seat 	L1	L2, L3, L4	L3, L4, L5	L3, L4, L5

a: universal child seat, child seat that can be installed in all vehicles using a seat belt.

b: group 0, from birth to 10 kg. Shells seats and baby carriers cannot be installed in the front passenger seat.

c: consult the legislation in force in your country before installing your child on this seat.

U: seat suitable for the installation of a child seat secured using a seat belt and universally approved, "rearwards-facing" and/or "forwards-facing".

U (R): idem **U**, with the vehicle's seat adjusted to the highest position and as far back as possible.

L: only the child seats indicated can be installed on the seat concerned (according to country).

X: seat position not suitable for installation of a child seat for the weight class indicated.

* Do not install a child seat with a **stay** if your vehicle is fitted with storage compartment flaps under the footwells.



ADVICE ON CHILD SEATS

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Remember to fasten the seat belts or the child seat harnesses keeping the slack relative to the child's body to a minimum, even for short journeys.

When installing a child seat using the seat belt, ensure that the seat belt is tightened correctly on the child seat and that it secures the child seat firmly on the seat of your vehicle.

For optimum installation of the "forwards-facing" child seat, ensure that the back of the child seat is in contact with the back of the vehicle's seat and that the head restraint does not cause any discomfort.

If the head restraint has to be removed, ensure that it is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking.

Children under the age of 10 must not travel in the "forwards-facing" position on the front passenger seat, unless the rear seats are already occupied by other children, cannot be used or are absent.

Deactivate the passenger airbag when a "rearwards-facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs.

PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, do not leave:

- a child or children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To prevent accidental opening of the doors and rear windows, use the "Child lock".


Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds on the rear windows.

"ISOFIX" MOUNTINGS


Your vehicle has been approved in accordance with the **new ISOFIX regulation**.

The seats, represented below, are fitted with regulation ISOFIX mountings:

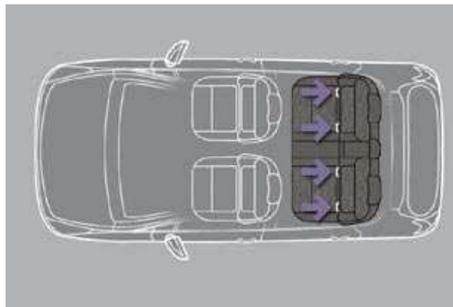

There are three rings for each seat:

- two rings **A**, located between the vehicle seat back and cushion, indicated by a label,
- a ring **B**, behind the seat, referred to as the **TOP TETHER** for fixing the upper strap.

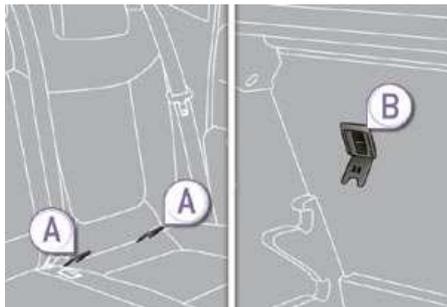

This ISOFIX mounting system guarantees you fast, reliable and safe fitting of the child seat in your vehicle.

The **ISOFIX child seats** are fitted with two locks which are secured easily on the two rings **A**.

Some also have an **upper strap** which is attached to ring **B**.

To attach this strap, raise the vehicle seat's head restraint then pass the hook between its rods. Then fix the hook on ring **B** and tighten the upper strap.

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

For information regarding the ISOFIX child seats which can be installed in your vehicle, consult the summary table for the location of the ISOFIX child seats.



ISOFIX CHILD SEAT RECOMMENDED BY PEUGEOT AND APPROVED FOR YOUR VEHICLE

RÖMER Duo Plus ISOFIX (size category B1)

Group 1: from 9 to 18 kg



Installed in the forwards-facing position.

Fitted with an upper strap to be secured on the upper ring **B**, referred to as the TOP TETHER.

Three seat body angles: sitting, reclining, lying.



This child seat can also be used on seats which are not fitted with ISOFIX mountings.

In this case, it must be attached to the vehicle seat using the three point seat belt.

Follow the instructions for fitting the child seat given in the seat manufacturer's installation guide.

LOCATIONS FOR INSTALLING ISOFIX CHILD SEATS

In accordance with European Regulations, this table indicates the options for installing ISOFIX child seats on seats in the vehicle fitted with ISOFIX mountings.

In the case of universal and semi-universal ISOFIX child seats, the ISOFIX size category, determined by a letter from **A** to **G**, is indicated on the child seat next to the ISOFIX logo.

	Weight of the child/indicative age									
	Less than 10 kg (group 0) Up to approx. 6 months		Less than 10 kg (group 0) Less than 13 kg (group 0+) Up to approx. 1 year			From 9 to 18 kg (group 1) From approx. 1 to 3 years				
Type of ISOFIX child seat	Shell		"rearwards-facing"			"rearwards-facing"		"forwards-facing"		
ISOFIX size category	F	G	C	D	E	C	D	A	B	B1
Front passenger seat 	X		X			X		X		
Outer rear seats 	X		IL-SU*			IL-SU*		IUF* IL-SU*		
Centre rear seat 	X		X			X		X		

IUF: seat suitable for the installation of an Isofix **U**niversal seat, "Forwards-facing" secured using the top belt.

IL-SU: seat suitable for the installation of an Isofix **S**emi-Universal seat either:

- "rearwards-facing" fitted with a top belt or a stay,
- "forwards-facing" fitted with a stay,
- a shell seat fitted with an upper strap or a stay.

For advice on securing of the top belt, refer to the paragraph "Isofix mountings".

X: seat not suitable for the installation of a child seat or shell for the weight group indicated.


* Do not install a child seat with a **stay** if your vehicle is fitted with storage compartment flaps under the footwells.



MANUAL CHILD LOCK

Mechanical system to prevent opening of the rear door using its interior control. The control is located on the edge of each rear door.

Locking

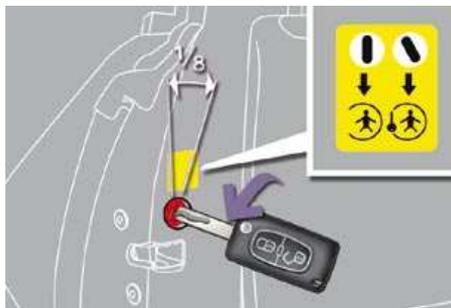

- ☞ Turn the red control one eighth of a turn to the left using the ignition key.


Unlocking

- ☞ Turn the red control one eighth of a turn to the right using the ignition key.

ELECTRIC CHILD LOCK

Remote control system to prevent opening of the rear doors using their interior controls and use of the rear electric windows.

Activation

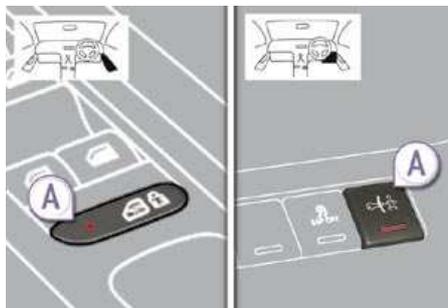

- ☞ With the ignition on, press button **A**. The indicator lamp on button **A** comes on. This indicator lamp remains on until the child lock is deactivated. It is still possible to open the doors from the outside and operate the rear electric windows from the driver's control pad.

Deactivation

- ☞ With the ignition on, press button **A** again.

The indicator lamp on button **A** switches off.

This indicator lamp remains off until the child lock is activated.



Any other status of the indicator lamp indicates a malfunction of the electric child lock. Have it checked by a PEUGEOT dealer.



This system is independent and in no circumstances does it take the place of the central locking control.

Check the status of the child lock each time you switch on the ignition. Always remove the key from the ignition when leaving the vehicle, even for a short time.

In the event of a serious impact, the electric child lock is deactivated automatically to permit the exit of the rear passengers.

DIRECTION INDICATORS

Selection of the left or right direction indicators to signal a change of direction of the vehicle.



- ☞ Lower the lighting control stalk fully when moving to the left.
- ☞ Raise the lighting control stalk fully when moving to the right.




If you forget to cancel the direction indicators for more than twenty seconds, the volume of the audible signal will increase if the speed is above 40 mph (60 km/h).

"Motorway" function

Move the stalk briefly upwards or downwards, without going beyond the point of resistance; the corresponding direction indicators will flash 3 times.

HAZARD WARNING LAMPS

A visual warning by means of the direction indicators to alert other road users to a vehicle breakdown, towing or accident.

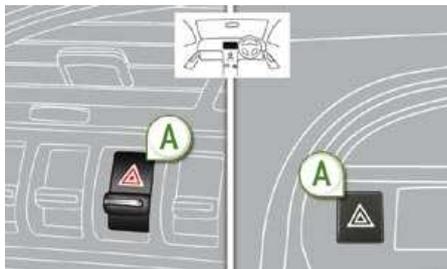

- ☞ Tilt or press button **A**, the direction indicators flash. They can operate with the ignition off.

Automatic lighting of hazard warning lamps

When braking in an emergency, depending on the deceleration, the hazard warning lamps come on.

They will switch off automatically the first time you accelerate.


- ☞ If they do not, press button **A** to switch the direction indicators off.



As a safety precaution in a traffic jam, switch on the hazard warning lamps if you are the last in the queue.

HORN

Audible warning to alert other road users to an imminent danger.

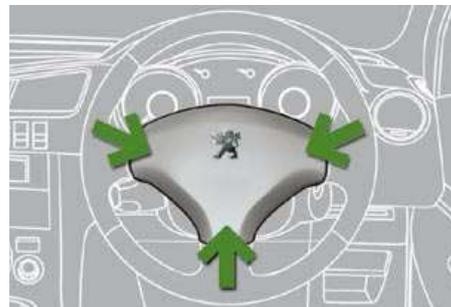

- ☞ Press one of the spokes of the steering wheel.



Use the horn moderately and only in the following cases:

- immediate danger,
- when approaching an area where there is no visibility.

TYRE UNDER-INFLATION DETECTION

System which automatically checks the pressure of the tyres while driving.



Sensors fitted in each valve trigger a warning in the event of malfunction (speed above 12 mph (20 km/h)).

The spare wheel is not fitted with a sensor.



The tyre under-inflation detection system is an aid to driving which does not replace the need for the driver to be vigilant or to drive responsibly.

Flat tyre



This warning lamp is displayed on the instrument panel and/or a message appears on the multifunction screen, accompanied by an audible signal, to locate the wheel concerned.

- ☞ Check the tyre pressures as soon as possible.

This check must be carried out when the tyres are cold.

Puncture

STOP

The **STOP** warning lamp comes on, accompanied by an audible signal and a message on the multifunction screen locating the wheel concerned.

- ☞ Stop immediately, avoiding any sudden movement of the steering wheel and the brakes.
- ☞ Change the damaged wheel (punctured or very deflated tyre), and have the tyre pressure checked as soon as possible.

Sensor(s) not detected or faulty

A message appears on the multifunction screen, accompanied by an audible signal, to locate the wheel or wheels which are not detected or to indicate a fault in the system.

Contact a PEUGEOT dealer to replace the faulty sensor(s).



This message is also displayed when one of the wheels is away from the vehicle (being repaired) or when one or more wheels without a sensor are fitted.



All repairs and changing of tyres on a wheel fitted with this system must be carried out by a PEUGEOT dealer.

If, when changing a tyre, you install a wheel which is not detected by your vehicle (example: fitting of snow tyres), you must have the system re-initialised by a PEUGEOT dealer.



This system does not eliminate the need to have the tyre pressure checked regularly (refer to the "Identification markings" paragraph) to ensure that the optimum dynamic performance of the vehicle is maintained and prevent premature wear of the tyres, particularly in arduous driving conditions (heavy load, high speed).

The tyre pressures must be checked cold, at least once a month. Remember to check the pressure of the spare wheel.

The tyre under-inflation detection system may experience temporary interference due to radioelectric emissions on a frequency close to that used by the system.

ELECTRONIC STABILITY PROGRAMME (ESP)

Electronic stability programme (ESP) incorporating the following systems:

- the anti-lock braking system (ABS) and the electronic brake force distribution system (EBFD),
- the emergency braking assistance,
- the traction control (ASR),
- the dynamic stability control (DSC).

Definitions

Anti-lock braking system (ABS) and electronic brake force distribution system (EBFD)

This system improves the stability and manoeuvrability of your vehicle when braking and offers improved control, in particular on poor or slippery road surfaces.

The ABS prevents wheel lock in the event of emergency braking.

The electronic brake force distribution system manages the braking pressure wheel by wheel.

Emergency braking assistance

In an emergency, this system enables you to reach the optimum braking pressure more quickly and therefore reduce the stopping distance.

It is triggered in relation to the speed at which the brake pedal is pressed. This is felt by a reduction in the resistance of the pedal and an increase in the effectiveness of the braking.

Anti-skid regulation (ASR)

The ASR system (also known as Traction Control) optimises traction in order to avoid wheel slip by acting on the brakes of the driving wheels and on the engine. It also improves the directional stability of the vehicle on acceleration.

Dynamic stability control (DSC)

If there is a difference between the path followed by the vehicle and that required by the driver, the DSC monitors each wheel and automatically acts on the brake of one or more wheels and on the engine to return the vehicle to the required path, within the limits of the laws of physics.

Operation

Anti-lock braking system (ABS) and electronic brake force distribution (EBFD)



When this warning lamp comes on, accompanied by a buzzer and a message, it indicates that there is a malfunction of the ABS, which can cause a loss of control of the vehicle when braking.



When this warning lamp comes on, connected to the **STOP** warning lamp, accompanied by a buzzer and a message, it indicates that there is a malfunction of the electronic brake force distribution (EBFD), which can cause a loss of control of the vehicle when braking.

Stop immediately.

In both cases, consult a PEUGEOT dealer.



When changing wheels (tyres and rims), make sure that these are approved.

Normal operation of the ABS may make itself felt by slight vibrations of the brake pedal.



In emergency braking, press very firmly without releasing the pressure.

ELECTRONIC STABILITY PROGRAMME (ESP)

Electronic stability programme (ESP) incorporating the following systems:

- the anti-lock braking system (ABS) and the electronic brake force distribution system (EBFD),
- the emergency braking assistance,
- the traction control (ASR),
- the dynamic stability control (DSC).

Definitions

Anti-lock braking system (ABS) and electronic brake force distribution system (EBFD)

This system improves the stability and manoeuvrability of your vehicle when braking and offers improved control, in particular on poor or slippery road surfaces.

The ABS prevents wheel lock in the event of emergency braking.

The electronic brake force distribution system manages the braking pressure wheel by wheel.

Emergency braking assistance

In an emergency, this system enables you to reach the optimum braking pressure more quickly and therefore reduce the stopping distance.

It is triggered in relation to the speed at which the brake pedal is pressed. This is felt by a reduction in the resistance of the pedal and an increase in the effectiveness of the braking.

Anti-skid regulation (ASR)

The ASR system (also known as Traction Control) optimises traction in order to avoid wheel slip by acting on the brakes of the driving wheels and on the engine. It also improves the directional stability of the vehicle on acceleration.

Dynamic stability control (DSC)

If there is a difference between the path followed by the vehicle and that required by the driver, the DSC monitors each wheel and automatically acts on the brake of one or more wheels and on the engine to return the vehicle to the required path, within the limits of the laws of physics.

Operation

Anti-lock braking system (ABS) and electronic brake force distribution (EBFD)



When this warning lamp comes on, accompanied by a buzzer and a message, it indicates that there is a malfunction of the ABS, which can cause a loss of control of the vehicle when braking.



When this warning lamp comes on, connected to the **STOP** warning lamp, accompanied by a buzzer and a message, it indicates that there is a malfunction of the electronic brake force distribution (EBFD), which can cause a loss of control of the vehicle when braking.

Stop immediately.

In both cases, consult a PEUGEOT dealer.




When changing wheels (tyres and rims), make sure that these are approved.

Normal operation of the ABS may make itself felt by slight vibrations of the brake pedal.



In emergency braking, press very firmly without releasing the pressure.

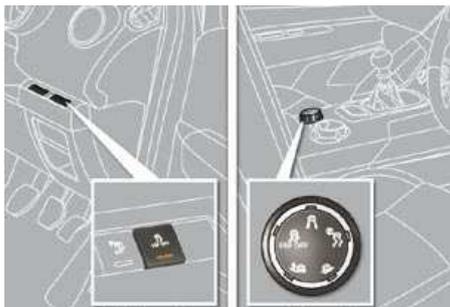

Dynamic stability control (DSC)

Activation

This system is activated automatically each time the vehicle is started.


It comes into operation in the event of a grip or trajectory problem.



This is indicated by flashing of this warning lamp on the instrument panel.

Deactivation


In exceptional conditions (starting a vehicle which is bogged down, stuck in snow, on soft ground...), it may be advisable to deactivate the DSC system, so that the wheels can move freely and regain grip.

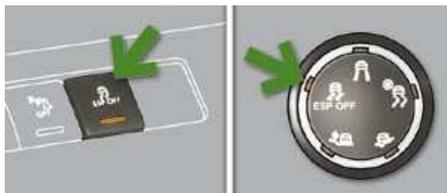

Press the "ESP OFF" button or, according to version, turn the dial to this position.



This warning lamp and the indicator lamp on the button or on the dial come on: the DSC system no longer acts on the operation of the engine.

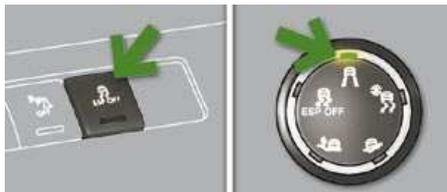

Reactivation

The system is reactivated automatically each time the ignition is switched back on or from 30 mph (50 km/h).



Press the "ESP OFF" button again or, according to version, turn the dial to this position, to reactivate it manually.

Operating fault



If this warning lamp comes on, accompanied by an audible signal and a message on the multifunction screen, this indicates a malfunction of the system.

Contact a PEUGEOT dealer to have the system checked.



The DSC system offers exceptional safety in normal driving, but this should not encourage the driver to take extra risks or drive at high speed.

The correct functioning of the system depends on observation of the manufacturer's recommendations regarding the wheels (tyres and rims), the braking components, the electronic components and the assembly and repair procedures used by PEUGEOT dealers.

After an impact, have the system checked by a PEUGEOT dealer.

GRIP CONTROL


Special patented traction control system which improves traction on snow, mud and sand.

This system is combined with all-season M+S (Mud and Snow: 215/60 R16) tyres which offer an excellent compromise between safety, grip and traction.

This system, the operation of which has been optimised for each situation, allows you to manoeuvre in most conditions of poor grip (encountered during touring use).

The accelerator pedal should be pressed sufficiently to allow the system to use the power of the engine. The electronics will ensure optimum management of the various parameters. Operation at high engine speeds is completely normal.

Each time the ignition is switched off, the system returns to standard mode (ESP).

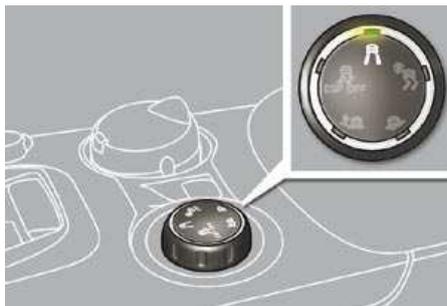

ESP mode

Standard mode which is calibrated for a low level of wheel spin, based on the different levels of grip normally encountered on the road.



☞ Place the dial in this position.




Snow mode

Mode which adapts its strategy to the conditions of grip encountered for each of the two front wheels on moving off.

When moving, the system optimises wheel spin to provide the best acceleration possible for the grip available.



☞ Place the dial in this position.

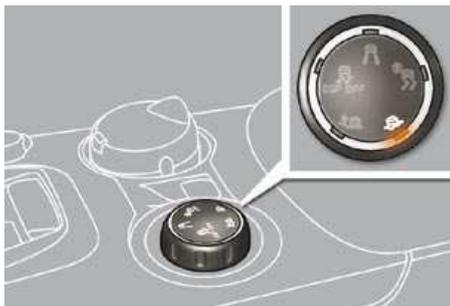


All-terrain mode (mud, wet grass, ...)

Mode which, when moving off allows considerable spin on the wheel with the least grip to optimise clearing of the mud and regain grip. At the same time, the wheel with the most grip is controlled in such a way as to pass as much torque as possible.

When moving, the system optimises wheel spin to respond to the driver's requirements as fully as possible.



Place the dial in this position.

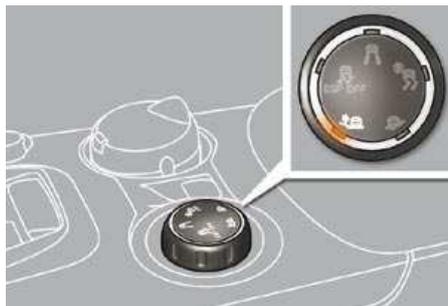

Sand mode

Mode which allows little spin on the two driving wheels at the same time to allow the vehicle to move forward and limit the risks of getting stuck in the sand.



Place the dial in this position.

Do not use the other modes on sand as the vehicle may become stuck.

ESP OFF mode



Place the dial in this position.

This mode is active up to 30 mph (50 km/h).



Driving advice

Your vehicle is designed principally to drive on tarmac roads but it allows you to drive on other less passable terrain occasionally.

However, it does not permit all-terrain activities such as:

- crossing and driving on terrain which could damage the under-frame or strip away components (fuel pipe, fuel cooler, ...) due to obstacles or stones in particular,
- driving on terrain with steep gradients and poor grip,
- crossing a stream.

SEAT BELTS




Fastening



- ☞ Pull the strap, then insert the tongue in the buckle.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.

Height adjustment

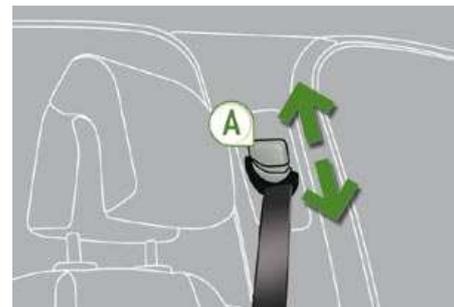

- ☞ To adjust the anchorage point, squeeze the control **A** and slide it until you find a notch.

Front seat belts

The front seat belts are fitted with a pretensioning and force limiting system.

This system improves safety in the front seats in the event of a front impact. Depending on the severity of the impact, the pretensioning system instantly tightens the seat belts against the body of the occupants.

The pretensioning seat belts are active when the ignition is on.

The force limiter reduces the pressure of the seat belt on the chest of the occupant, so improving their protection.

Unfastening

- ☞ Press the red button on the buckle.
- ☞ Guide the seat belt as it reels in.


Front seat belt not fastened/unfastened warning lamp



When the ignition is switched on, this warning lamp comes on on the seat belt and passenger's front air bag warning lamps display, if the driver and/or the front passenger has not fastened their seat belt.

From approximately 12 mph (20 km/h) this warning lamp flashes for two minutes accompanied by an audible signal. Once these two minutes have elapsed, this warning lamp remains on until the driver and/or the front passenger fastens their seat belt.

Seat belt not fastened/unfastened warning lamps display

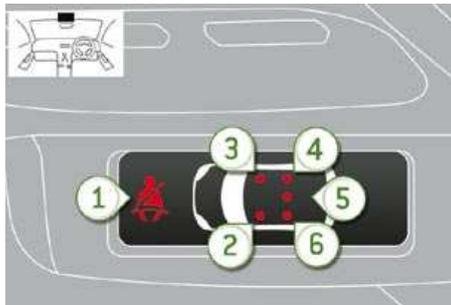

1. Front and/or rear seat belts not fastened/unfastened warning lamp.
2. Front left seat belt warning lamp.
3. Front right seat belt warning lamp.
4. Rear right seat belt warning lamp.
5. Rear centre seat belt warning lamp.
6. Rear left seat belt warning lamp.

The corresponding warning lamp **2** or **3** comes on in red on the seat belt and passenger's front air bag warning lamps display if the seat belt is not fastened or is unfastened.

Rear seat belts

The rear seats are each fitted with a three-point inertia reel seat belt with force limiter (with the exception of the rear centre seat).

Fastening

- ☞ Pull the strap, then insert the tongue in the buckle.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.

Unfastening

- ☞ Press the red button on the buckle.
- ☞ Guide the seat belt as it reels in.


Seat belt unfastened warning lamp



This warning lamp comes on on the seat belt and passenger's front airbag warning lamps display, when one or more rear passengers unfasten their seat belt.

From approximately 12 mph (20 km/h), this warning lamp flashes for two minutes accompanied by an audible signal. Once these two minutes have elapsed, this warning lamp remains on until the one or more rear passengers fasten their seat belt.

Seat belt unfastened warning lamps display

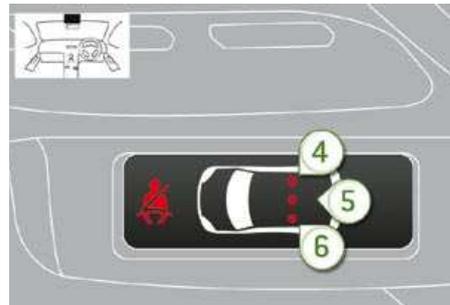

When the ignition is switched on, with the engine running or when the vehicle is moving at less than 12 mph (20 km/h), the corresponding warning lamps **4**, **5** and **6** come on in red for approximately 30 seconds, if the seat belt is not fastened.

When the vehicle is moving at more than 12 mph (20 km/h), the corresponding warning lamp **4**, **5** or **6** comes on in red, accompanied by an audible signal and a message on the multifunction screen, if a rear passenger has unfastened their seat belt.



The driver must ensure that passengers use the seat belts correctly and that they are all restrained securely before setting off.

Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

Do not invert the seat belt buckles as they will not fulfil their role fully.

The seat belts are fitted with an inertia reel permitting automatic adjustment of the length of the strap to your size. The seat belt is stored automatically when not in use.

Before and after use, ensure that the seat belt is reeled in correctly.

The lower part of the strap must be positioned as low as possible on the pelvis.

The upper part must be positioned in the hollow of the shoulder.

The inertia reels are fitted with an automatic locking device which comes into operation in the event of a collision, emergency braking or if the vehicle rolls over. You can release the device by pulling firmly on the strap and releasing it so that it re-winds slightly.

In order to be effective, a seat belt must:

- be tightened as close to the body as possible,
- be pulled in front of you with a smooth movement, checking that it does not twist,
- be used to restrain only one person,
- not bear any trace of cuts or fraying,
- not be converted or modified to avoid affecting its performance.

In accordance with current safety regulations, all repairs and checks must be carried out by a PEUGEOT dealer who guarantees that the work is carried out correctly.

Have your seat belts checked regularly by a PEUGEOT dealer and particularly if the straps show signs of damage.

Clean the seat belt straps with soapy water or a textile cleaning product, sold by PEUGEOT dealers.

After folding or moving a seat or rear bench seat, ensure that the seat belt is positioned and reeled in correctly.

Recommendations for children

Use a suitable child seat if the passenger is less than 12 years old or shorter than one and a half metres.

Never use the same seat belt to secure more than one person.

Never allow a child to travel on your lap.

In the event of an impact

Depending on the nature and seriousness of the impacts, the pre-tensioning device may be triggered before and independently of the airbags. Triggering of the pre-tensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system. In all cases, the airbag warning lamp comes on.

Following an impact, have the seat belts system checked, and if necessary replaced, by a PEUGEOT dealer.

AIRBAGS

System designed to maximise the safety of the occupants (with the exception of the rear centre passenger) in the event of violent collisions. It supplements the action of the force-limiting seat belts (with the exception of the rear centre passenger).

If a collision occurs, the electronic detectors record and analyse the front and side impacts sustained in the impact detection zones:


- in the case of a serious impact, the airbags are triggered instantly and protect the occupants of the vehicle (with the exception of the rear centre passenger); immediately after the impact, the airbags deflate rapidly so that they do not hinder visibility or the exit of the occupants,
- in the case of a minor or rear impact or in certain roll-over conditions, the airbags will not be triggered; the seat belt alone is sufficient to provide optimum protection in these situations.



The airbags do not operate when the ignition is switched off.

This equipment will only deploy once. If a second impact occurs (during the same or a subsequent accident), the airbag will not be triggered again.

Impact detection zones

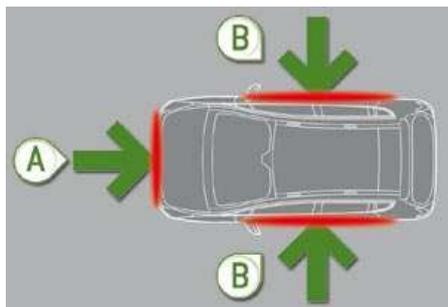

- A.** Front impact zone.
B. Side impact zone.



Triggering of the airbag(s) is accompanied by a slight emission of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.


This smoke is not harmful, but sensitive individuals may experience slight irritation.

The noise of the detonation may result in a slight loss of hearing for a short time.

Front airbags

System which protects the driver and front passenger in the event of a serious front impact in order to limit the risk of injury to the head and chest.

The driver's airbag is incorporated in the centre of the steering wheel; the front passenger's airbag is incorporated in the dashboard above the glove box.

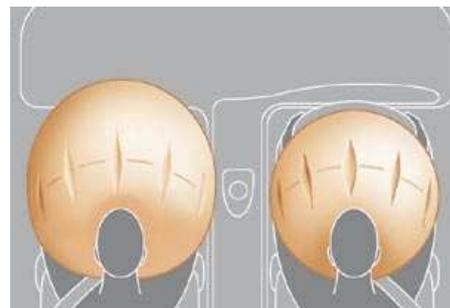

Activation

The airbags are triggered simultaneously, unless the passenger's front airbag is deactivated, in the event of a serious front impact to all or part of the front impact zone **A**, in the longitudinal centreline of the vehicle on a horizontal plane and directed from the front to the rear of the vehicle.

The front airbag inflates between the front occupant of the vehicle and the dashboard to cushion his forward movement.

Deactivation

Only the passenger's front airbag can be deactivated:

- ☞ **with the ignition off**, insert the key in the passenger airbag deactivation switch 1,
- ☞ turn it to the **"OFF"** position,
- ☞ then, remove the key keeping the switch in the new position.



According to version, this warning lamp comes on either on the instrument panel or on the seat belt and passenger's front airbag warning lamps display when the ignition is on and until the airbag is reactivated.



To assure the safety of your child, it is imperative that the passenger's front airbag is deactivated when you install a "rear facing" child seat on the front passenger seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were triggered.

Reactivation

When you remove the child seat, turn the switch 1 to the **"ON"** position to reactivate the airbag and so assure the safety of your front passenger in the event of an impact.



With the ignition on, this warning lamp comes on on the seat belt and passenger's front airbag warning lamps display for approximately one minute, if the passenger's front airbag is activated.

Operating fault



If this warning lamp comes on on the instrument panel, accompanied by an audible warning and a message on the multifunction screen, contact a PEUGEOT dealer to have the system checked. The airbags may no longer be triggered in the event of a serious impact.



If this warning lamp flashes, contact a PEUGEOT dealer. The passenger's front airbag may no longer be triggered in the event of a serious impact.



If at least one of the two airbag warning lamps come on continuously, do not install a child seat on the front passenger seat.

Have the system checked by a PEUGEOT dealer.



For the airbags to be fully effective, observe the following safety rules:

Sit in a normal upright position.

Wear a correctly adjusted seat belt.

Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system is strictly forbidden unless it is carried out by qualified personnel of the PEUGEOT dealer network.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is triggered cannot be ruled out. The bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Passengers must not place their feet on the dashboard.

If possible, do not smoke as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.

Lateral airbags

Use only approved covers on the seats. These will not hinder inflation of the lateral airbags. Consult a PEUGEOT dealer.

Do not fix or attach anything to the seat backs (clothing...). This could cause injury to the chest or arms if the lateral airbag is triggered.

Do not sit with the upper part of the body any nearer to the door than necessary.

Curtain airbags

Do not fix or attach anything to the roof. This could cause injury to the head if the curtain airbag is triggered.

Do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.

Lateral airbags

System which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest.

Each lateral airbag is fitted in the front, in the outer side of the seat back frame.




Activation

The lateral airbags are triggered unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The lateral airbag inflates between the front occupant of the vehicle and the corresponding door panel.

Impact detection zones

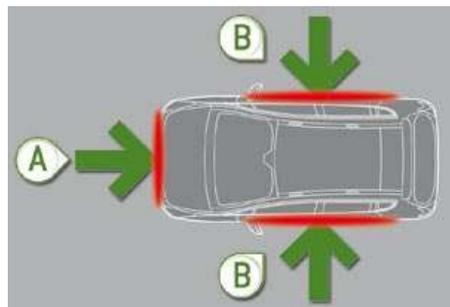

- A. Front impact zone.
- B. Side impact zone.

Curtain airbags

System which protects the driver and passengers (with the exception of the rear centre passenger) in the event of a serious side impact in order to limit the risk of injury to the side of the head.

Each curtain airbag is built into the pillars and the upper passenger compartment area.

Activation

The curtain airbag is triggered at the same time as the corresponding lateral airbag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The curtain airbag inflates between the front or rear occupant of the vehicle and the windows.

Operating fault



If this warning lamp comes on on the instrument panel, accompanied by an audible signal and a message on the multifunction screen, contact a PEUGEOT dealer to have the system checked. The airbags may no longer be triggered in the event of a serious impact.



In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be triggered.

In the event of a rear or front collision, the airbag is not triggered.



For the airbags to be fully effective, observe the following safety rules:

Sit in a normal upright position.

Wear a correctly adjusted seat belt.

Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system is strictly forbidden unless it is carried out by qualified personnel of the PEUGEOT dealer network.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is triggered cannot be ruled out. The bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Passengers must not place their feet on the dashboard.

If possible, do not smoke as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.

Lateral airbags

Use only approved covers on the seats. These will not hinder inflation of the lateral airbags. Consult a PEUGEOT dealer.

Do not fix or attach anything to the seat backs (clothing...). This could cause injury to the chest or arms if the lateral airbag is triggered.


Do not sit with the upper part of the body any nearer to the door than necessary.

Curtain airbags

Do not fix or attach anything to the roof. This could cause injury to the head if the curtain airbag is triggered.

Do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.

ELECTRIC PARKING BRAKE

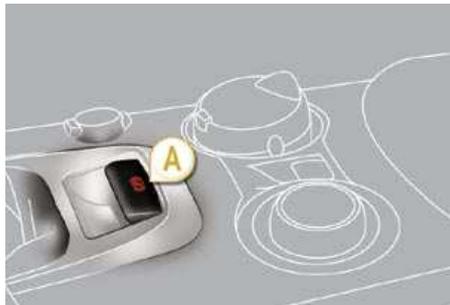

The electric parking brake combines 2 operational modes:

- **Automatic application/release**

Application is automatic when the engine stops, release is automatic on use of the accelerator (activated by default),

- **Manual application/release**

The parking brake can be applied/released manually by pulling control **A**.



If this warning lamp on the instrument panel comes on, the automatic mode is deactivated.

Programming the mode

Depending on the country of registration of the vehicle, the automatic application when the engine is switched off and the automatic release when you press the accelerator can be deactivated.




Activation/deactivation is performed using the configuration menu, refer to the "Multifunction screens" section.

The parking brake is then applied and released manually. When the driver's door is opened, a beep is heard and a message is displayed if the brake is not applied.



Deactivation is recommended in particularly cold conditions (ice) and during towing (break-down, caravan...)

Manual application

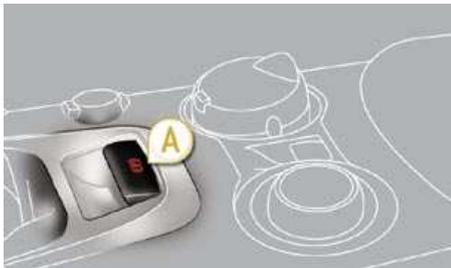

With the vehicle stationary, to apply the parking brake whether the engine is running or off, **pull** on control **A**.

The application of the parking brake is confirmed by:

- lighting of the braking warning lamp and of the warning lamp **P** on the control **A**,



- display of the message "Handbrake on".

When the driver's door is opened with the engine running, a beep is heard and a message is displayed if the parking brake has not been applied, unless the selector lever is in position **P** (Park) in the case of an automatic gearbox.



Before leaving the vehicle, check that parking brake warning lamp on the instrument panel is on, not flashing.

Manual release

With the ignition on or the engine running, to release the parking brake, **press** on the **brake pedal** or the **accelerator**, **pull then release** control **A**.

The full application of the parking brake is confirmed by:



- extinction of the braking warning lamp and of the warning lamp **P** on control **A**,



- display of the message "Handbrake off".



If you pull control **A** without pressing the brake pedal, the parking brake will not be released and a warning lamp will light up on the instrument panel.

Maximum application

If necessary, you can utilise **maximum application** of the parking brake. It is obtained by means of a **long pull** on control **A**, until you see the message "Handbrake on" and a beep is heard.

Maximum application is essential:

- in the case of a vehicle towing a caravan or a trailer, if the automatic functions are activated but you are applying the parking brake manually,
- when the gradient you are parked on is variable in its effect (e.g. on a ferry, in a lorry, during towing),



In the case of towing, a loaded vehicle or parking on a gradient, make a maximum application of the parking brake then turn the front wheels towards the pavement and engage a gear when you park.

After a maximum application, the release time will be longer.

Automatic application, engine off

With the vehicle stationary, the parking brake **is automatically applied when the engine is switched off**.

The application of the parking brake is confirmed by:



- lighting of the braking warning lamp and of the warning lamp **P** on control **A**,



- display of the message "Handbrake on".

An operation sound will confirm to you the application/release of your electric parking brake.



Before leaving the vehicle, check that parking brake warning lamp on the instrument panel is permanently lit.

Never leave a child alone inside the vehicle with the ignition on, as they could release the parking brake.

In the case of towing, a loaded vehicle or parking on a gradient, turn the front wheels towards the pavement and engage a gear when you park.

Automatic release

The electric parking brake **releases automatically and progressively** when you press the accelerator:

☞ **Manual gearbox:** press down fully on the clutch pedal, engage first gear or reverse, press on the accelerator pedal and move off.

☞ **Electronic gear control gearbox:** select position **A**, **M** or **R** then press on the accelerator pedal.

☞ **Automatic gearbox:** select position **D**, **M** or **R** then press on the accelerator pedal.

Full release of the parking brake is confirmed by:



- extinction of braking warning lamp and of the warning lamp **P** on control **A**,



- displaying of the message "Handbrake off".



When stationary, with the engine running, do not press the accelerator pedal unnecessarily, as you may release the parking brake.

To immobilise the vehicle, engine running

With the engine running and the vehicle stationary, in order to immobilise the vehicle it is essential to manually apply the parking brake by **pulling** on control **A**.

The application of the parking brake is confirmed by:



- lighting of the braking warning lamp and of the warning lamp **P** on control **A**,



- display of the message "Handbrake on".

When the driver's door is opened, a beep is heard and a message is displayed if the parking brake has not been applied, unless the selector lever is in position **P** (Park) in the case of an automatic gearbox.



Before leaving the vehicle, check that parking brake warning lamp on the instrument panel is on, not flashing.




Particular situations

In certain situations (e.g. starting the engine), the parking brake can automatically alter its force. This is normal operation.

To advance your vehicle a few centimetres without starting the engine, but with the ignition on, press on the brake pedal and release the parking brake **by pulling** then **releasing** control **A**. The full release of the parking brake is confirmed by the extinction of warning lamp on control **A** and of the warning lamp on the instrument panel and the displaying of the message "Handbrake off".

If the parking brake malfunctions **while applied** or if the battery runs flat, an emergency release is always possible.

Emergency braking

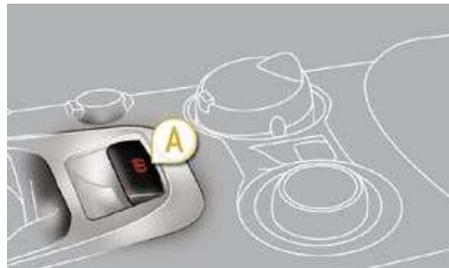

In the event of a failure of the main service brake or in an exceptional situation (e.g. driver taken ill, under instruction, etc) a continuous pull on control **A** will stop the vehicle.

The electronic stability programme (ESP) provides stability during emergency braking.

If the emergency braking malfunctions, one of the following messages will be displayed:

- "Parking brake faulty".
- "Parking brake control faulty".




If a failure of the ESP system is signalled by the lighting of this warning lamp, then braking stability is not guaranteed.

In this event, stability must be assured by the driver by repeating alternate "pull release" actions on control **A**.



The emergency braking must only be used in exceptional circumstances.

Emergency release

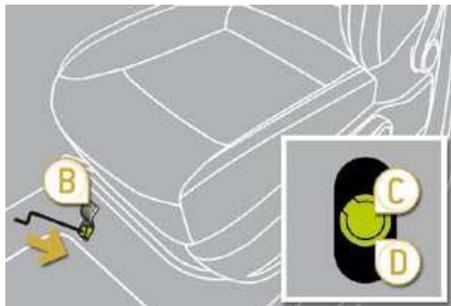

Front left seat moved back fully.

In the event of the electric parking brake malfunctioning or the battery running flat, an emergency manual device can release the parking brake.

- ☞ Immobilise the vehicle (or keep it stationary, if the brake pedal is pressed), with the engine running, by engaging first gear (manual gearbox), position **P** (automatic gearbox) or **M** or **R** (6-speed electronic gear control gearbox).
- ☞ Switch off the engine but leave the ignition on. If it is impossible to immobilise the vehicle, do not action the control and urgently contact a PEUGEOT dealer.
- ☞ Fetch the two vehicle blocks and the release device, located under the boot carpet (see "Changing a wheel" in the "Practical information" section).
- ☞ Immobilise the vehicle by placing blocks at the front and at the rear of one of the rear wheels.
- ☞ Slide the front left-hand seat back as far as possible.
- ☞ Lift up the floor plug **B** in the carpet under the seat.
- ☞ Pierce the protective cover **C** on the tube **D** with the release device.
- ☞ Place the release device in the tube **D**.
- ☞ Turn the release device **clockwise**. **For safety reasons**, it is **essential** to continue turning the device as far as it will go or until you hear a knocking noise. The parking brake is released.
- ☞ Remove the release device and store it with the blocks in the toolbox.
 - The operation of the parking brake reinitialises when the ignition is switched off then on again. If the reinitialisation of the parking brake proves impossible, contact a PEUGEOT dealer.
 - The subsequent time required for application may be longer than during normal operation.



For safety reasons, after this manoeuvre it is essential to contact a PEUGEOT dealer urgently to replace the protective cover.

Following an emergency unlocking, immobilisation of the vehicle is no longer guaranteed once the manual emergency release has been deployed and the manual control does not allow the re-application of your parking brake.

Take no action, either on control **A**, or stopping starting the engine while the release device is engaged.

Take care not to allow moisture or dust in the proximity of the protective cover.

HILL START ASSIST

System which keeps your vehicle immobilised temporarily (approximately 2 seconds) when starting on a gradient, the time it takes to move your foot from the brake pedal to the accelerator pedal.

This function is only active when:

- the vehicle is completely stationary, with your foot on the brake pedal,
- in particular conditions on a slope,
- with the driver's door closed.

The hill start assist function cannot be deactivated.

Operation



On an ascending slope, with the vehicle stationary, the vehicle is held for a brief moment when you release the brake pedal:

- provided you are in first gear or neutral on a manual gearbox,
- provided you are in **A** or **M** on an electronic gear control gearbox,
- provided you are in **D** or **M** on an automatic gearbox.



On a descending slope, with the vehicle stationary and reverse gear engaged, the vehicle is held for a brief moment when you release the brake pedal.



Do not exit the vehicle while it is being held in the hill start assist phase.

If you need to exit the vehicle with the engine running, apply the parking brake manually then ensure that the parking brake warning lamp and the warning lamp **P** on the lever (of the electric brake) are permanently on.

Operating fault



If a malfunction of the system occurs, these warning lamps come on. Contact a PEUGEOT dealer to have the system checked.

Operating faults

If the electric parking brake fault warning lamp comes on together with one or more of the warning lamps presented in these tables, place the vehicle in a safe condition (on level ground, gear engaged) and contact a PEUGEOT dealer without delay.

Situations	Consequences
<p>Display of the message "Parking brake fault" and of the following warning lamps:</p> 	<ul style="list-style-type: none"> - The automatic functions are deactivated. - Hill start assist is not available. - The electric parking brake can only be used manually.
<p>Display of the message "Parking brake fault" and of the following warning lamps:</p> 	<ul style="list-style-type: none"> - Manual release of the electric parking brake is only available by pressing the accelerator pedal and releasing the control. - Hill start assist is not available. - The automatic functions and the manual application are still available.
<p>Display of the message "Parking brake fault" and of the following warning lamps:</p>  <p>and possibly</p>  <p>flashing</p>	<ul style="list-style-type: none"> - The automatic functions are deactivated. - Hill start assist is not available. <div style="border: 1px solid #ccc; padding: 10px; margin-top: 10px;"> <p> To apply the electric parking brake:</p> <ul style="list-style-type: none"> ☞ Immobilise the vehicle and switch off the ignition. ☞ Pull the control for at least 5 seconds or until application is complete. <p>☞ Switch on the ignition and check the switching on of the electric parking brake warning lamps.</p> <p>The application is slower than during normal operation.</p> <p>To release the electric parking brake:</p> <ul style="list-style-type: none"> ☞ Switch on the ignition. ☞ Pull the control and hold it for approximately 3 seconds then release it. <p>If the braking warning lamp is flashing or if the warning lamps do not come on with the ignition on, these procedures will not work. Place the vehicle on level ground and have it checked by a PEUGEOT dealer.</p> </div>

Situations	Consequences
Display of the message "Parking brake control fault - auto parking brake activated" and of the following warning lamps:	<ul style="list-style-type: none"> - Only the automatic application on switching off the engine and automatic release on acceleration functions are available. - The manual application/release of the electric parking brake and the emergency braking are not available.
<div style="text-align: center;">  </div> <p>and possibly</p> <div style="text-align: center;">  </div> <p>flashing</p>	
Battery fault	<ul style="list-style-type: none"> - If the battery warning lamp comes on you must stop immediately as soon as the traffic allows. Stop and immobilise your vehicle (if necessary, place the two chocks under the wheels). - Apply the electric parking brake before switching off the engine.




Particular situations

In certain situations (e.g. starting the engine), the parking brake can automatically alter its force. This is normal operation.

To advance your vehicle a few centimetres without starting the engine, but with the ignition on, press on the brake pedal and release the parking brake **by pulling** then **releasing** control **A**. The full release of the parking brake is confirmed by the extinction of warning lamp on control **A** and of the warning lamp on the instrument panel and the displaying of the message "Handbrake off".

If the parking brake malfunctions **while applied** or if the battery runs flat, an emergency release is always possible.

Emergency braking

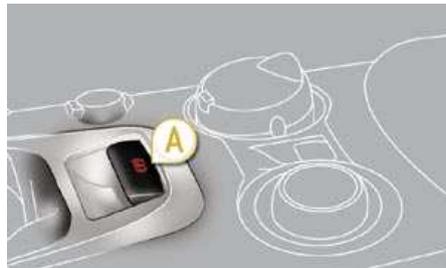

In the event of a failure of the main service brake or in an exceptional situation (e.g. driver taken ill, under instruction, etc) a continuous pull on control **A** will stop the vehicle.

The electronic stability programme (ESP) provides stability during emergency braking.

If the emergency braking malfunctions, one of the following messages will be displayed:

- "Parking brake faulty".
- "Parking brake control faulty".




If a failure of the ESP system is signalled by the lighting of this warning lamp, then braking stability is not guaranteed.

In this event, stability must be assured by the driver by repeating alternate "pull release" actions on control **A**.



The emergency braking must only be used in exceptional circumstances.

Emergency release

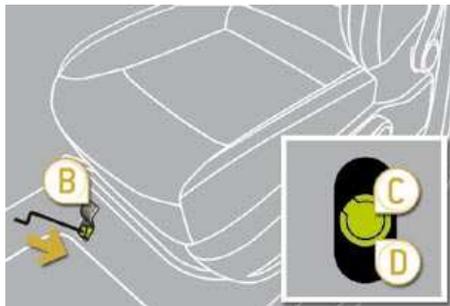

Front left seat moved back fully.

In the event of the electric parking brake malfunctioning or the battery running flat, an emergency manual device can release the parking brake.

- ☞ Immobilise the vehicle (or keep it stationary, if the brake pedal is pressed), with the engine running, by engaging first gear (manual gearbox), position **P** (automatic gearbox) or **M** or **R** (6-speed electronic gear control gearbox).
- ☞ Switch off the engine but leave the ignition on. If it is impossible to immobilise the vehicle, do not action the control and urgently contact a PEUGEOT dealer.
- ☞ Fetch the two vehicle blocks and the release device, located under the boot carpet (see "Changing a wheel" in the "Practical information" section).
- ☞ Immobilise the vehicle by placing blocks at the front and at the rear of one of the rear wheels.
- ☞ Slide the front left-hand seat back as far as possible.
- ☞ Lift up the floor plug **B** in the carpet under the seat.
- ☞ Pierce the protective cover **C** on the tube **D** with the release device.
- ☞ Place the release device in the tube **D**.
- ☞ Turn the release device **clockwise**. **For safety reasons**, it is **essential** to continue turning the device as far as it will go or until you hear a knocking noise. The parking brake is released.
- ☞ Remove the release device and store it with the blocks in the toolbox.
 - The operation of the parking brake reinitialises when the ignition is switched off then on again. If the reinitialisation of the parking brake proves impossible, contact a PEUGEOT dealer.
 - The subsequent time required for application may be longer than during normal operation.



For safety reasons, after this manoeuvre it is essential to contact a PEUGEOT dealer urgently to replace the protective cover.

Following an emergency unlocking, immobilisation of the vehicle is no longer guaranteed once the manual emergency release has been deployed and the manual control does not allow the re-application of your parking brake.

Take no action, either on control **A**, or stopping starting the engine while the release device is engaged.

Take care not to allow moisture or dust in the proximity of the protective cover.

HILL START ASSIST

System which keeps your vehicle immobilised temporarily (approximately 2 seconds) when starting on a gradient, the time it takes to move your foot from the brake pedal to the accelerator pedal.

This function is only active when:

- the vehicle is completely stationary, with your foot on the brake pedal,
- in particular conditions on a slope,
- with the driver's door closed.

The hill start assist function cannot be deactivated.

Operation



On an ascending slope, with the vehicle stationary, the vehicle is held for a brief moment when you release the brake pedal:

- provided you are in first gear or neutral on a manual gearbox,
- provided you are in **A** or **M** on an electronic gear control gearbox,
- provided you are in **D** or **M** on an automatic gearbox.



On a descending slope, with the vehicle stationary and reverse gear engaged, the vehicle is held for a brief moment when you release the brake pedal.



Do not exit the vehicle while it is being held in the hill start assist phase.


If you need to exit the vehicle with the engine running, apply the parking brake manually then ensure that the parking brake warning lamp and the warning lamp **P** on the lever (of the electric brake) are permanently on.

Operating fault



If a malfunction of the system occurs, these warning lamps come on. Contact a PEUGEOT dealer to have the system checked.


HEAD-UP DISPLAY

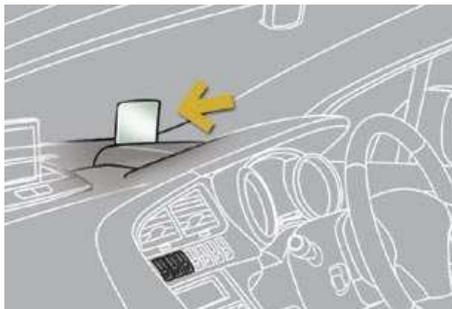

System which projects various information onto a transparent strip in the field of vision of the driver so that they do not have to take their eyes off the road.

This system operates when the engine is running and the settings are stored when the ignition is switched off.


Buttons

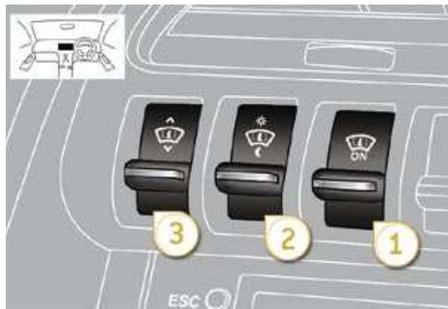

1. Head-up display on/off.
2. Brightness adjustment.
3. Display height adjustment.


The strip is activated by pressing one of the buttons.

Displays during operation

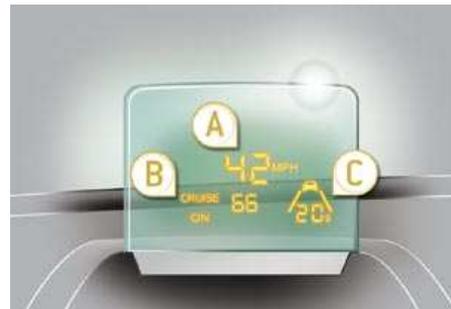


Once the system has been activated, the following information is grouped together on the head-up display:

- A.** The speed of your vehicle.
- B.** Cruise control/speed limiter information.
- C.** Distance alert information (according to version).

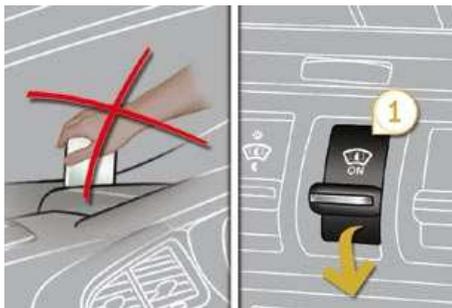

Activation/Deactivation

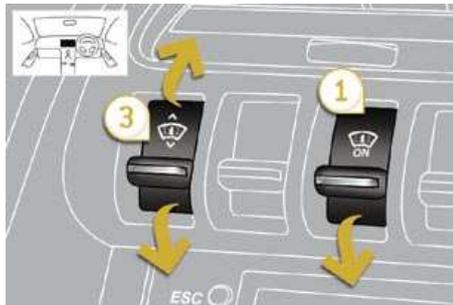


- ☞ With the engine running, press button 1. The activated/deactivated status when the engine was switched off is retained when the engine is switched on again.

Height adjustment

- ☞ With the engine running, adjust the display to the required height using button 3:
 - up to move the display up,
 - down to move the display down.

Brightness adjustment

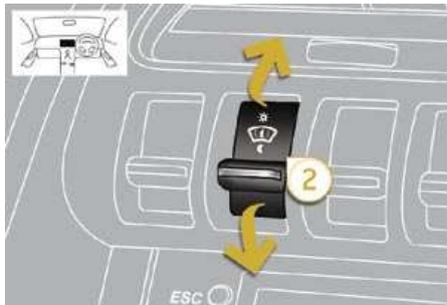

- ☞ With the engine running, adjust the brightness of the information using button 2:
 - up to increase the brightness,
 - down to decrease the brightness.



We recommend that adjustments are only made using these buttons when the vehicle is stationary.

When stationary or while driving, no objects should be placed around the transparent strip (or on its cover) to avoid blocking the strip output and preventing its correct operation.



In certain extreme weather conditions (rain and/or snow, bright sunshine, ...) the head-up display may not be legible or may suffer temporary interference.


Certain glasses (sunglasses, spectacles or polarised lenses) may hamper reading of the information.

To clean the transparent strip, which is made of organic glass, use a clean, soft cloth (such as a spectacles cloth or microfibre cloth). Do not use a dry or abrasive cloth or detergent or solvent products as these could scratch the strip or damage the anti-reflection coating.

DISTANCE ALERT

Driving aid which informs the driver of the time interval (in seconds) separating them from the vehicle in front when the driving conditions are stable.


It does not detect stationary vehicles and does not carry out **any action** on your vehicle.

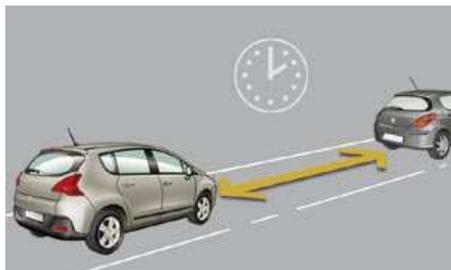

For the safety time to be observed, refer to the current legislation or highway code recommendations in your country. The system operates when the speed of your vehicle is higher than 45 mph (70 km/h) and below 90 mph (150 km/h). It has a programmable visual alert which remains in the memory when the ignition is switched off.


This system is a driving aid and cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.

Buttons

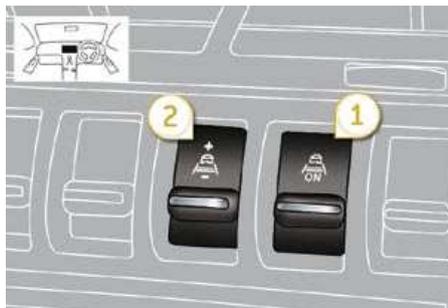

1. On/off.
2. Alert value increase (+)/decrease (-).

Displays during operation

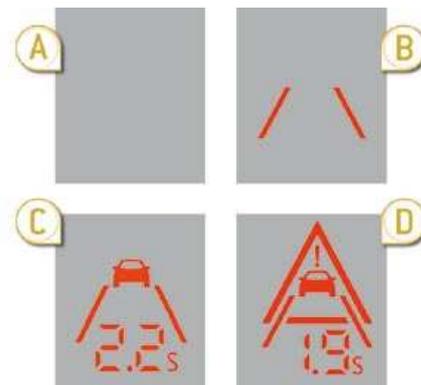


The information is grouped together on the head-up display.

Once the system has been activated:

- A. The speed of your vehicle is outside the operating range.
- B. Your vehicle is within the operating range but no vehicle has been detected.
- C. The vehicle in front of you has been detected.
The current time separating you from this vehicle is displayed permanently.
- D. The time between your vehicle and the vehicle in front is less than the programmed alert value (it flashes).

Activation

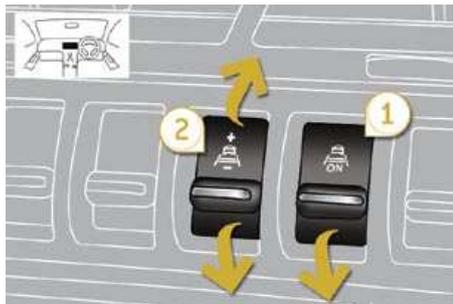

☞ Press button **1**, the indicator lamp comes on.

The system is activated but will only operate from 45 mph (70 km/h).

Programming the alert value

- ☞ Select the alert value required using button **2**, in steps of 0.1 second:
- up to increase: "+",
 - down to decrease: "-".

Example with a value of 2 seconds:



The alert value can be programmed to between 0.9 second and 2.5 seconds. The visual alert can be deactivated by programming a value of 0 second.

Alert



When the time (in seconds) between your vehicle and the vehicle in front is less than the programmed time (alert value), a visual alert flashes.



A safety time of 2 seconds is recommended in normal driving conditions (correct traction and speed) to avoid a collision in the event of emergency braking.

Deactivation

- ☞ Press button **1** to deactivate the system, the indicator lamp switches off.

Reactivation

- ☞ Press button **1** again to reactivate the system.
The last value programmed is retained and the indicator lamp comes on.

Operating limits

The system switches to standby automatically if the sensor does not detect the vehicle in front correctly (very difficult weather conditions, sensor misadjusted, ...). A message is displayed on the multifunction screen.

The vehicle being followed may not be detected in certain conditions such as, for example:

- when turning,
- when changing lane,
- when the vehicle in front is either too far ahead (maximum range of the sensor: 100 m) or stationary (in a traffic jam, ...),

When the vehicle being followed is much too near (time between the two vehicles less than 0.5 seconds), the display remains fixed at 0.5 seconds.



If the indicator lamp on button **1** flashes, have the system checked by a PEUGEOT dealer.

This system is not an anti-collision radar and it does not act of the movement of your vehicle. It provides information but cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.

SPEED LIMITER

System which prevents the vehicle from exceeding the speed programmed by the driver.

When the programmed speed limit is reached, pressing the accelerator pedal no longer has any effect unless it is pressed firmly, which permits temporary exceeding of the programmed speed.

To return to the programmed speed, simply slow down to a speed below the programmed speed by releasing the accelerator.

The speed limiter is **switched on** manually: it requires a programmed speed of at least 20 mph (30 km/h).


The speed limiter is **switched off** by manual operation of the control.

The programmed speed remains in the memory when the ignition is switched off.



The speed limiter cannot, in any circumstances, replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.


Steering mounted controls

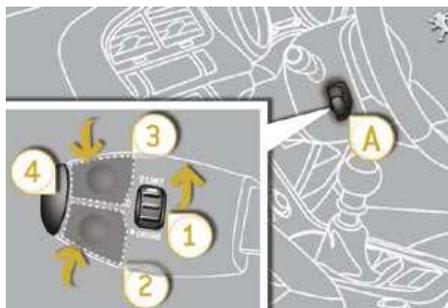

The controls of this system are grouped together on stalk **A**.

1. Speed limiter mode selection dial
2. Programmed value decrease button
3. Programmed value increase button
4. Speed limiter on/off button

Displays on the instrument panel

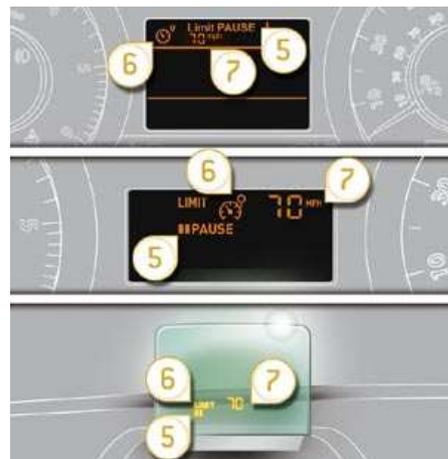

The programmed information is grouped together on the instrument panel screen.


5. Speed limiter on/off indication
6. Speed limiter mode selection indication
7. Programmed speed value



This information also appears in the head-up display.

For more information on the head-up display, refer to this "Driving" section.

Programming

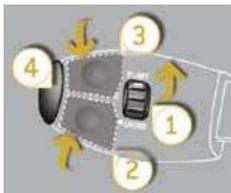

☞ Turn dial **1** to the "**LIMIT**" position: the speed limiter mode is selected but is not switched on (OFF).

You do not have to switch the speed limiter on in order to set the speed.

☞ Set the speed value by pressing button **2** or **3** (e.g.: 55 mph (90 km/h)).

You can then change the programmed speed using buttons **2** and **3**:

- by + or - 1 mph (km/h) = short press,
- by + or - 5 mph (km/h) = long press,
- in steps of + or - 5 mph (km/h) = maintained press.

☞ Switch the speed limiter on by pressing button **4**.

☞ Switch the speed limiter off by pressing button **4**: the display confirms that it has been switched off (OFF).


☞ Switch the speed limiter back on by pressing button **4** again.

Exceeding the programmed speed

Pressing the accelerator pedal to exceed the programmed speed will not have any effect unless you press the pedal **firmly** past the **point of resistance**.

The speed limiter is deactivated temporarily and the programmed speed, which is still displayed, flashes.

Returning to the programmed speed, by means of intentional or unintentional deceleration of the vehicle, automatically cancels the flashing of the programmed speed.

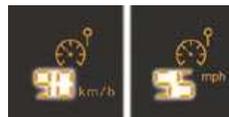

Return to normal driving

☞ Turn dial **1** to the "**0**" position: the speed limiter mode is deselected. The display returns to the distance recorder.

Operating fault

In the event of a speed limiter malfunction, the speed is cleared resulting in flashing of the dashes.

Have the system checked by a PEUGEOT dealer.



On a steep descent or in the event of sharp acceleration, the speed limiter will not be able to prevent the vehicle from exceeding the programmed speed.

To avoid any risk of jamming of the pedals:

- ensure that the mat is positioned correctly,
- do not fit one mat on top of another.

CRUISE CONTROL

System which automatically maintains the speed of the vehicle at the value programmed by the driver, without any action on the accelerator pedal.

The cruise control is **switched on** manually: it requires a minimum vehicle speed of 25 mph (40 km/h) and the engaging:

- of fourth gear on the manual gearbox,
- of second gear on the electronic gear control gearbox or automatic gearbox, in sequential driving mode,
- of position **A** on the electronic gear control gearbox or **D** on the automatic gearbox.


The cruise control is **switched off** manually or by pressing the brake or clutch pedal or on triggering of the ESP system for safety reasons.

It is possible to exceed the programmed speed temporarily by pressing the accelerator pedal.

To return to the programmed speed, simply release the accelerator pedal.

Switching off the ignition cancels any programmed speed value.

Steering mounted controls

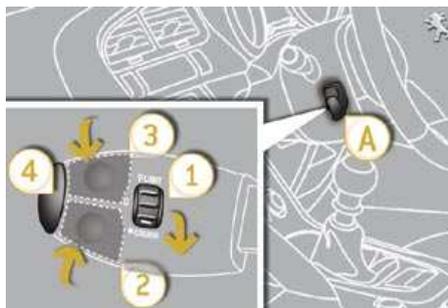


The controls of this system are grouped together on lever **A**.

1. Cruise control mode selection dial
2. Speed programming/programmed value decrease button
3. Speed programming/programmed value increase button
4. Cruise control off/resume button



The cruise control cannot, in any circumstances, replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

Displays on the instrument panel

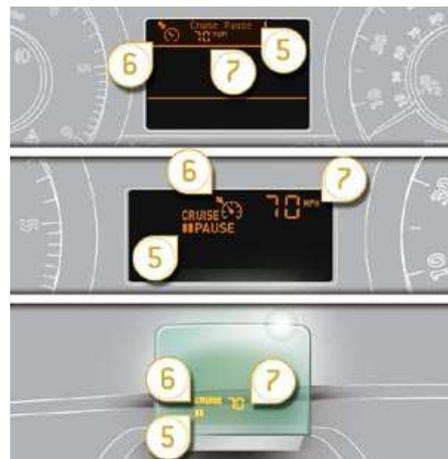

The programmed information is grouped together on the instrument panel display.


5. Cruise control off/resume indication
6. Cruise control mode selection indication
7. Programmed speed value



This information also appears in the head-up display.

For more information on the head-up display, refer to this "Driving" section.

Programming

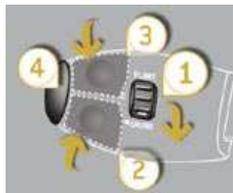

- ☞ Turn dial **1** to the **"CRUISE"** position: the cruise control mode is selected but is not switched on (OFF).
- ☞ Set the programmed speed by accelerating to the required speed, then press button **2** or **3** (e.g.: 70 mph (110 km/h)).

You can then change the programmed speed using buttons **2** and **3**:

- by + or - 1 mph (km/h) = short press,
- by + or - 5 mph (km/h) = long press,
- in steps of + or - 5 mph (km/h) = maintained press.

☞ Switch off the cruise control by pressing button **4**: the display confirms that it has been switched off (OFF).

☞ Switch the cruise control back on by pressing button **4** again.

Exceeding the programmed speed

Intentional or unintentional exceeding of the programmed speed results in flashing of this speed on the display.

Return to the programmed speed, by means of intentional or unintentional deceleration of the vehicle, automatically cancels the flashing of the speed.

Return to normal driving

☞ Turn dial **1** to the **"0"** position: the cruise control mode is deselected. The display returns to the distance recorder.



Operating fault

In the event of a cruise control malfunction, the speed is cleared resulting in flashing of the dashes.

Have it checked by a PEUGEOT dealer.



When the cruise control is switched on, be careful if you maintain the pressure on one of the programmed speed changing buttons: this may result in a very rapid change in the speed of your vehicle.

Do not use the cruise control on slippery roads or in heavy traffic.

On a steep descent, the cruise control will not be able to prevent the vehicle from exceeding the programmed speed.

To avoid any risk of jamming of the pedals:

- ensure that the mat is positioned correctly,
- never fit one mat on top of another.

6-SPEED MANUAL GEARBOX

Engaging reverse gear

- ☞ Raise the ring under the knob and push the gear lever to the left then forwards.



Only engage reverse gear when the vehicle is stationary with the engine at idle.



As a safety precaution and to facilitate starting of the engine:

- always select neutral,
- press the clutch pedal.

GEAR SHIFT INDICATOR*

System which reduces fuel consumption by advising the driver to change up on vehicles fitted with a manual gearbox.

Operation

The system intervenes only when driving economically.

Depending on the driving situation and your vehicle's equipment, the system may advise you to skip one or more gears. You can follow this instruction without engaging the intermediate gears.

The gear engagement recommendations must not be considered compulsory. In fact, the configuration of the road, the amount of traffic and safety remain determining factors when choosing the best gear. Therefore, the driver remains responsible for deciding whether or not to follow the advice given by the system.

This function cannot be deactivated.



In the case of driving which makes particular demands on the performance of the engine (firm pressure on the accelerator pedal, for example, when overtaking...), the system will not recommend a gear change.

The system never suggests:

- engaging first gear,
- engaging reverse gear,
- engaging a lower gear.

Example:

- You are in third gear.



- You press the accelerator pedal moderately.



- The system may suggest that you engage a higher gear, if appropriate.



The information appears in the form of an arrow on the instrument panel display.

Depending on your vehicle's equipment, this arrow may be accompanied by the recommended gear.

This equipment will become available during the year.

* According to engine.

6-SPEED ELECTRONIC GEAR CONTROL GEARBOX


Six-speed electronic gear control gearbox which offers a choice between the comfort of fully automatic operation or the pleasure of manual gear changing.

Therefore, three driving modes are offered:

- **automatic** mode for automatic control of the gears by the gearbox,
- **sequential** mode for manual changing of the gears by the driver,
- **auto sequential** mode to overtake, for example, remaining in automatic mode while using the functions of the sequential mode.


A **Sport** function is available in automatic or sequential mode for a more dynamic style of driving.

Gear lever

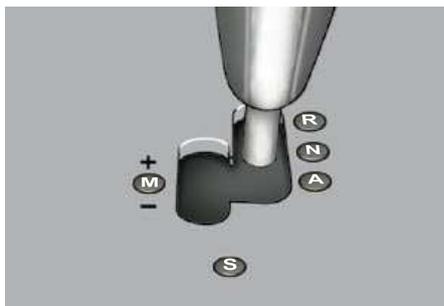

- R.** Reverse.
 - ☞ With your foot on the brake, move the lever upwards to select this position.
- N.** Neutral.
 - ☞ With your foot on the brake, select this position to start.
- A.** Automatic mode.
 - ☞ Move the lever downwards to select this mode.
- M.** +/- Sequential mode with manual changing of the gears.
 - ☞ Move the lever downwards then to the left to select this mode, then:
 - push the lever forwards to change up a gear,
 - or pull the lever rearwards to change down a gear.
- S.** Sport function.
 - ☞ Press this button to activate or deactivate this function.

Steering mounted controls

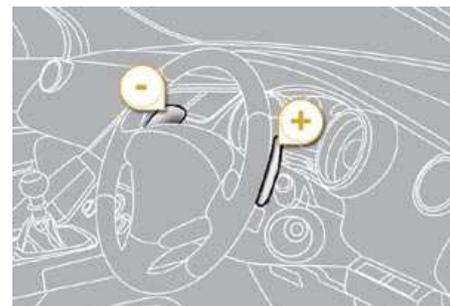


- +**. Change up paddle to the right of the steering wheel.
 - ☞ Press the back of the "+" steering mounted paddle to change up a gear.
- . Change down paddle to the left of the steering wheel.
 - ☞ Press the back of the "-" steering mounted paddle to change down a gear.



The steering mounted paddles do not permit the selection of neutral or the engaging or disengaging of reverse gear.

Displays on the instrument panel

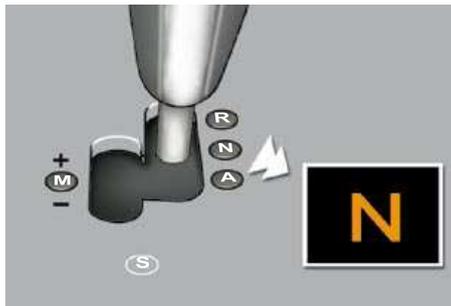

Gear lever positions

N. Neutral

R. Reverse

1, 2, 3, 4, 5, 6. Gears in sequential mode

AUTO. This comes on when the automatic mode is selected. It switches off on changing to sequential mode.

S. Sport (Sport function)



☞ Place your **foot on the brake** when this warning lamp flashes (e.g.: when starting the engine).



An audible signal is heard when reverse gear is engaged.

Moving off

- ☞ Select position **N**.
- ☞ Press the brake pedal down fully.
- ☞ Start the engine.



N appears on the instrument panel screen.



N flashes on the instrument panel, accompanied by an audible signal and a message on the multifunction screen, if the gear lever is not in position **N** on starting.

Foot on brake flashes on the instrument panel, accompanied by an audible signal and a message on the multifunction screen, if the brake pedal is not pressed on starting.

- ☞ Select first gear (position **M** or **A**) or reverse (position **R**).
- ☞ Release the parking brake unless it is programmed to automatic mode.
- ☞ Take your foot off the brake pedal, then accelerate.



AUTO and **1** or **R** appear on the instrument panel screen.

Sequential mode

- ☞ When the vehicle has moved off, select position **M** to change to sequential mode.



AUTO disappears and the gears engaged appear in succession on the instrument panel screen.

The gear change requests are only carried out if the engine speed permits.

It is not necessary to release the accelerator during gear changes.

When braking or slowing down, the gearbox changes down automatically to permit reacceleration of the vehicle in the correct gear.



At very low speed, if reverse gear is requested, this will only be taken into account when the vehicle is immobilised. The **Foot on brake** warning lamp may flash on the instrument panel to prompt you to brake.

At high speed, if reverse gear is requested, the **N** indicator lamp will flash and the gearbox will change to neutral automatically. To engage a gear again, return the lever to position **A** or **M**.



On sharp acceleration, the gearbox will not change up unless the driver acts on the gear lever or the steering mounted paddles.

Never select neutral **N** while the vehicle is moving.

Only engage reverse gear **R** when the vehicle is immobilised with the brake pedal pressed.

Automatic mode

Following use of the sequential mode, select position **A** to return to the automatic mode.



AUTO and the gear engaged appear on the instrument panel screen.

The gearbox is then operating in auto-active mode, without any action on the part of the driver. It continuously selects the most suitable gear in relation to the following parameters:

- style of driving,
- profile of the road.



For optimum acceleration, for example when overtaking another vehicle, press the accelerator pedal firmly past the point of resistance.

"Auto sequential mode"

This mode enables you to overtake, for example, remaining in automatic mode while using the functions of the sequential mode.

Operate the **+** or **-** steering mounted paddle.

The gearbox engages the gear requested if the engine speed permits. **AUTO** is still displayed on the instrument panel.

After a few moments without any action on the controls, the gearbox resumes automatic control of the gears.



Sport function

- Following selection of the sequential mode or automatic mode, press button **S** to activate the Sport function which offers you a more dynamic style of driving.



S appears next to the gear engaged on the instrument panel screen.

- Press button **S** again to deactivate the function.

S is then cleared from the instrument panel screen.



The gearbox returns to normal mode automatically each time the ignition is switched off.

Stopping the vehicle

Before switching off the engine, you can choose to:

- move to position **N** to engage neutral,
- leave the gear engaged; in this case, it will not be possible to move the vehicle.

In both cases, it is essential that you apply the parking brake to immobilise the vehicle.



When immobilising the vehicle, with the engine running, it is essential to place the gear lever in neutral **N**.

Before carrying out any work in the engine compartment, check that the gear lever is in neutral **N** and that the parking brake is applied.

Operating fault



With the ignition on, if this warning lamp comes on and **AUTO** flashes, accompanied by an audible signal and a message on the multifunction screen, this indicates a malfunction of the gearbox.

Have it checked by a PEUGEOT dealer.



It is essential to press the brake pedal when starting the engine.

When parking, it is essential to apply the parking brake to immobilise the vehicle, whatever the circumstances.


"PORSCHE TIPTRONIC SYSTEM" AUTOMATIC GEARBOX

Six speed automatic gearbox which offers a choice between the comfort of fully automatic operation, enhanced by sport and snow programmes, or manual gear changing.

Therefore, four driving modes are offered:

- **automatic** operation for electronic management of the gears by the gearbox,
- **sport** programme for a more dynamic style of driving,
- **snow** programme to improve driving when traction is poor,
- **manual** operation for sequential changing of the gears by the driver.

Gear selection gate

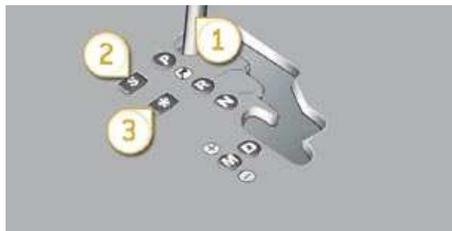

1. Gear lever.
2. Button "S" (sport).
3. Button "*" (snow).

Gear lever



- P.** Park.
 - Immobilisation of the vehicle, parking brake on or off.
 - Starting the engine.
 - R.** Reverse.
 - Reversing manoeuvres, vehicle stationary, engine at idle.
 - N.** Neutral.
 - Immobilisation of the vehicle, parking brake on.
 - Starting the engine.
 - D.** Automatic operation.
 - M.+/-** Manual operation with sequential changing of the six gears.
 - ☞ Press forwards to change up through the gears.
- or
- ☞ Press rearwards to change down through the gears.

Displays on the instrument panel



When you move the lever in the gate to select a position, the corresponding indicator lamp is displayed on the instrument panel.

- P.** Park
- R.** Reverse
- N.** Neutral
- D.** Drive (Automatic driving)
- S.** Sport programme
- *** Snow programme
- 1 to 6.** Gear engaged during manual operation
- Invalid value during manual operation

Moving off

- ☞ With your foot on the brake, select position **P** or **N**.
- ☞ Start the engine.

If this procedure is not followed, an audible signal is heard, accompanied by a message on the multifunction screen.

- ☞ With the engine running, press the brake pedal.
- ☞ Release the parking brake, unless it is programmed to automatic mode.
- ☞ Select position **R**, **D** or **M**,
- ☞ Gradually release the brake pedal.

The vehicle moves off immediately.



If position **N** is engaged inadvertently while driving, allow the engine to return to idle then engage position **D** to accelerate.



When the engine is running at idle, with the brakes released, if position **R**, **D** or **M** is selected, the vehicle moves even without the accelerator being pressed.

When the engine is running, never leave children in the vehicle without supervision.

When carrying out maintenance with the engine running, apply the parking brake and select position **P**.

Automatic operation

- ☞ Select position **D** for **automatic** changing of the six gears.

The gearbox then operates in auto-adaptive mode, without any intervention on the part of the driver. It continuously selects the most suitable gear according to the style of driving, the profile of the road and the load in the vehicle.

For maximum acceleration without touching the lever, press the accelerator pedal down fully (kick down). The gearbox changes down automatically or maintains the gear selected until the maximum engine speed is reached.

On braking, the gearbox changes down automatically to provide efficient engine braking.

If you release the accelerator sharply, the gearbox will not change to a higher gear for safety reasons.



Never select position **N** while the vehicle is moving.

Never select positions **P** or **R** unless the vehicle is completely stationary.

Sport and snow programmes

These two special programmes supplement the automatic operation in very specific conditions of use.

Sport programme "S"

- ☞ Press button "**S**", after starting the engine.

The gearbox automatically favours a dynamic style of driving.



S appears on the instrument panel.

Snow programme "❄"

- ☞ Press button "❄", after starting the engine.

The gearbox adapts to driving on slippery roads.

This programme improves starting and drive when traction is poor.



❄ appears on the instrument panel.

Return to automatic operation

- ☞ At any time, press the button selected again to quit the programme engaged and return to auto-adaptive mode.

Manual operation

- ☞ Select position **M** for **sequential** changing of the six gears.
- ☞ Push the lever towards the **+** sign to change up a gear.
- ☞ Pull the lever towards the **-** sign to change down a gear.

It is only possible to change from one gear to another if the vehicle speed and engine speed permit; otherwise, the gearbox will operate temporarily in automatic mode.



D disappears and the gears engaged appear in succession on the instrument panel.

In the event of under-revving or over-revving, the gear selected flashes for a few seconds, then the actual gear engaged is displayed.

It is possible to change from position **D** (automatic) to position **M** (manual) at any time.

When the vehicle is stationary or moving very slowly, the gearbox selects gear **M1** automatically.

The sport and snow programmes do not operate in manual mode.

Invalid value during manual operation



This symbol is displayed if a gear is not engaged correctly (selector between two positions).

Stopping the vehicle

Before switching off the engine, you can engage position **P** or **N** to place the gearbox in neutral.

In both cases, apply the parking brake to immobilise the vehicle, unless it is programmed to automatic mode.



If the lever is not in position **P**, when the driver's door is opened or approximately 45 seconds after the ignition is switched off, an audible signal is heard and a message appears.

- ☞ Return the lever to position **P**; the audible signal stops and the message disappears.

Operating fault



When the ignition is on, the lighting of this warning lamp, accompanied by an audible signal and a message on the multifunction screen, indicates a gearbox malfunction.

In this case, the gearbox switches to back-up mode and is locked in 3rd gear. You may feel a substantial knock when changing from **P** to **R** and from **N** to **R**. This will not cause any damage to the gearbox.

Do not exceed 60 mph (100 km/h), local speed restrictions permitting.

Have it checked by a PEUGEOT dealer. This warning lamp may also come on if a door is opened.




You risk damaging the gearbox:

- if you press the accelerator and brake pedals at the same time,
- if you force the lever from position **P** to another position when the battery is flat.

To reduce fuel consumption when stationary for long periods with the engine running (traffic jam...), position the gear lever at **N** and apply the parking brake, unless it is programmed in automatic mode.

VISUAL AND AUDIBLE FRONT AND/OR REAR PARKING SENSORS

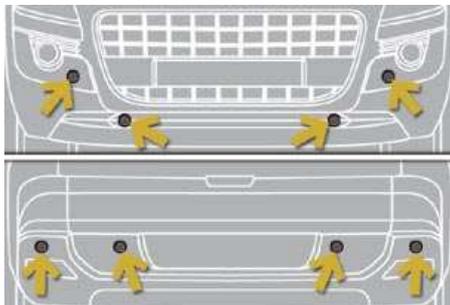


System consisting of four proximity sensors, installed in the front and/or rear bumper.

It detects any obstacle (person, vehicle, tree, barrier...) located behind the vehicle, however, it will not be able to detect obstacles located immediately below the bumper.



An object, such as a stake, a roadworks cone or any other similar object may be detected at the start of the manoeuvre but may no longer be detected when the vehicle moves nearer to it.

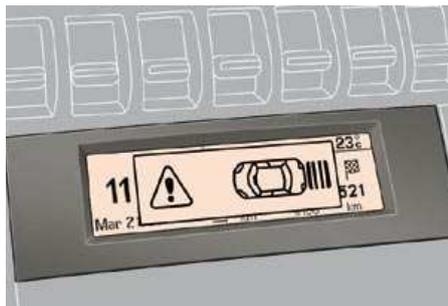

The parking sensors are **switched on**:

- by engaging reverse gear,
- at a speed below 6 mph (10 km/h) in forward gear.

This is accompanied by an audible signal and display of the vehicle on the multifunction screen.



The proximity information is indicated by:

- an audible signal which becomes more rapid as the vehicle approaches the obstacle,
- a diagram on the multifunction screen, with blocks which move closer to the vehicle.

The obstacle is located in relation to the emission of the audible signal by the speakers; front or rear and right or left.

When the distance between the vehicle and the obstacle is less than approximately thirty centimetres, the audible signal becomes continuous and/or the "Danger" symbol appears, depending on the multifunction screen version.


The parking sensors are **switched off**:

- when you exit reverse gear,
- when the speed is higher than 6 mph (10 km/h) in forward gear,
- when the vehicle has been stationary for more than three seconds in forward gear.



The parking sensor system cannot, in any circumstances, replace the need for vigilance and responsibility on the part of the driver.

Deactivation

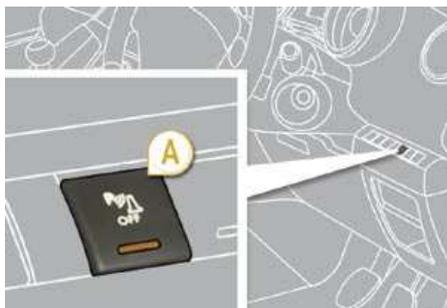

- ☞ Press button **A**, the warning lamp comes on, the system is fully deactivated.



The system will be deactivated automatically when a trailer is being towed or when a bicycle carrier is fitted (vehicle fitted with a towbar or bicycle carrier recommended by PEUGEOT).

Reactivation

- ☞ Press button **A** again, the warning lamp switches off, the system is reactivated.

Operating fault



If an operating fault occurs, this warning lamp is displayed on the instrument panel and/or a message appears on the multifunction screen, accompanied by an audible signal (short beep), when reverse gear is engaged. Consult a PEUGEOT dealer.




In bad weather or in winter, ensure that the sensors are not covered with mud, ice or snow. When reverse gear is engaged, an audible signal (long beep) indicates that the sensors may be dirty. When the vehicle is being driven at a speed below approximately 6 mph (10 km/h), certain sources of noise (motorcycles, lorries, pneumatic drills, ...) may trigger the parking sensor audible signals.


BONNET

Opening


- ☞ Open the front left door.
- ☞ Pull the interior bonnet release lever **A**, located at the bottom of the door frame.

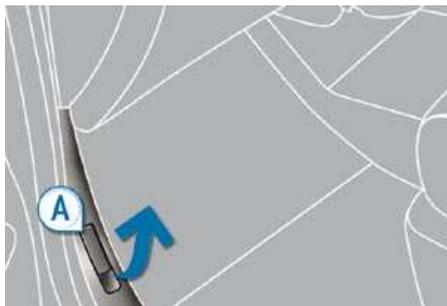

- ☞ Push the exterior safety catch **B** to the left and raise the bonnet.

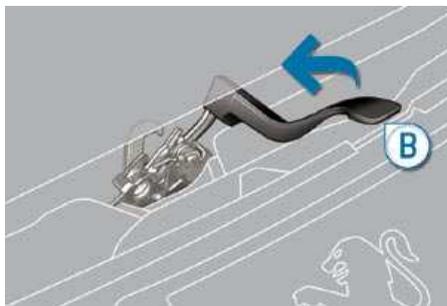

- ☞ Unclip the stay **C** from its housing.
- ☞ Fix the stay in the notch to hold the bonnet open.

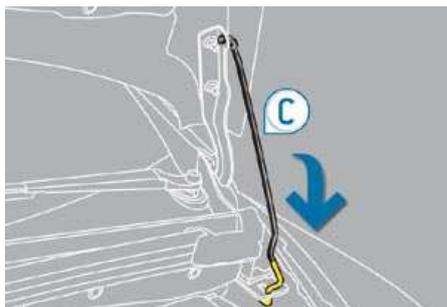

The location of the interior bonnet release lever prevents opening of the bonnet while the front left door is closed.

When the engine is hot, handle the exterior safety catch and the bonnet stay with care (risk of burns).


Closing

- ☞ Take the stay out of the support notch.
- ☞ Clip the stay in its housing.
- ☞ Lower the bonnet and release it at the end of its travel.
- ☞ Pull on the bonnet to check that it is secured correctly.

RUNNING OUT OF FUEL (DIESEL)

If your vehicle is fitted with an HDI engine, the fuel system must be primed if you run out of fuel.

This system consists of a priming pump and, according to engine (see graphic and explanations below), a transparent pipe and a bleed screw under the bonnet (refer to the corresponding graphic).

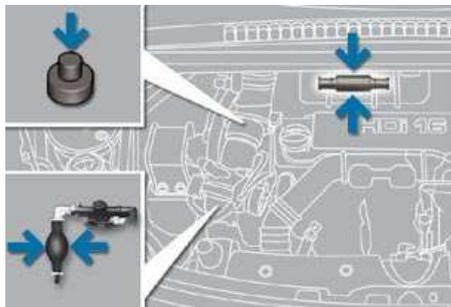

1.6 litre Turbo HDI 16V engine

- ☞ Fill the fuel tank with at least five litres of diesel.
- ☞ Open the bonnet.
- ☞ Operate the priming pump until it hardens.
- ☞ Operate the starter until the engine starts.
- ☞ Close the bonnet.



If the engine does not start at the first attempt, do not try again.

Operate the priming pump again, then the starter.


2 litre Turbo HDI 16V engine

- ☞ Fill the fuel tank with at least five litres of diesel.
- ☞ Open the bonnet.
- ☞ Unclip the style cover for access to the priming pump.
- ☞ Slacken the bleed screw.
- ☞ Squeeze and release the priming pump until fuel appears in the transparent pipe with the green connector.
- ☞ Retighten the bleed screw.
- ☞ Operate the starter until the engine starts.
- ☞ Put the style cover back in position and clip it in place.
- ☞ Close the bonnet.



If the engine does not start at the first attempt, do not try again.

Operate the priming pump again, then the starter.

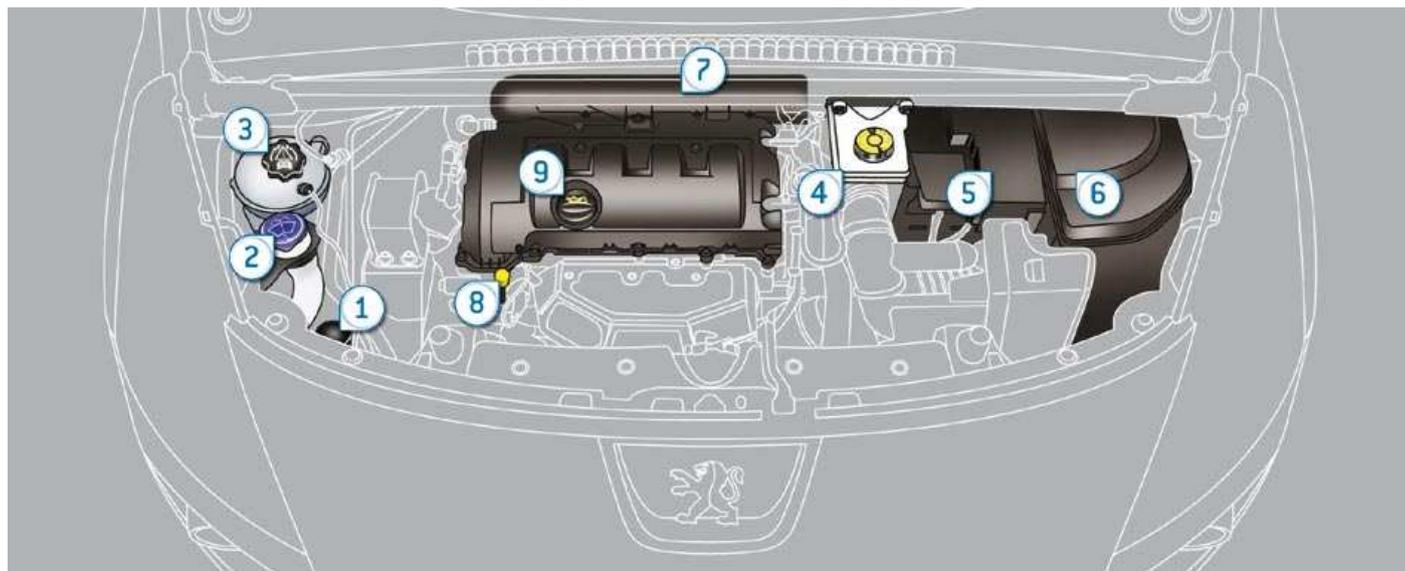


PETROL ENGINES

The various caps and covers allow access for checking the levels of the various fluids and for replacing certain components.

- | | | |
|--|---------------------------|---------------------------|
| 1. Power steering reservoir. | 4. Brake fluid reservoir. | 7. Air filter*. |
| 2. Screenwash and headlamp wash reservoir. | 5. Battery/Fuses. | 8. Engine oil dipstick. |
| 3. Coolant reservoir. | 6. Fusebox. | 9. Engine oil filler cap. |

* According to engine.

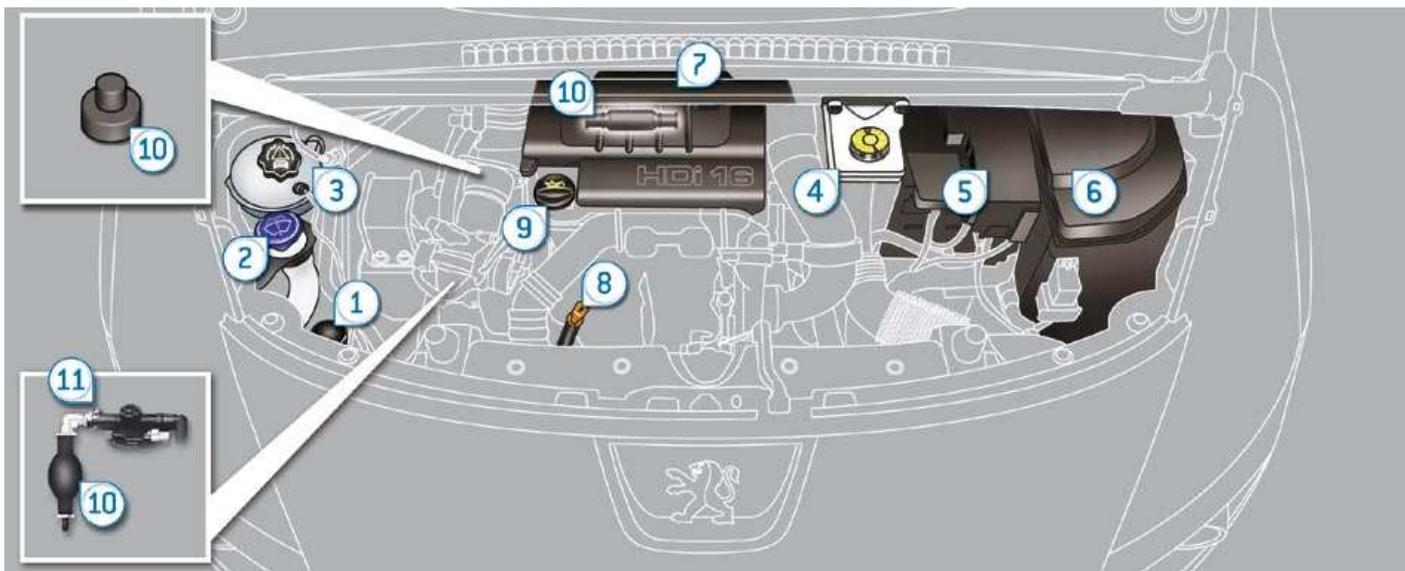

DIESEL ENGINES

The various caps and covers allow access for checking the levels of the various fluids, for replacing certain components and for priming the fuel system.

- | | | |
|--|---------------------------|---------------------------|
| 1. Power steering reservoir. | 4. Brake fluid reservoir. | 8. Engine oil dipstick. |
| 2. Screenwash and headlamp wash reservoir. | 5. Battery/Fuses. | 9. Engine oil filler cap. |
| 3. Coolant reservoir. | 6. Fusebox. | 10. Priming pump*. |
| | 7. Air filter*. | 11. Bleed screw*. |

* According to engine.

CHECKING LEVELS

Check all of these levels regularly and top them up if necessary, unless otherwise indicated.

If a level drops significantly, have the corresponding system checked by a PEUGEOT dealer.



When working under the bonnet, take care, as certain areas of the engine may be extremely hot (risk of burns).

Oil level



The reading will only be correct if the vehicle is on level ground and the engine has been off for more than 15 minutes.

The check is carried out either when the ignition is switched on using the oil level indicator on the instrument panel, or using the dipstick.

Engine oil change

Refer to the Warranty and Maintenance Record for details of the interval for this operation.

In order to maintain the reliability of the engine and emission control system, the use of additives in the engine oil is prohibited.

Oil specification

The oil must correspond to your engine and conform to the manufacturer's recommendations.

Brake fluid level



The brake fluid level should be close to the "MAX" mark. If it is not, check the brake pad wear.

Changing the fluid

Refer to the Warranty and Maintenance Record for details of the interval for this operation.

Fluid specification

The brake fluid must conform to the manufacturer's recommendations and fulfil the DOT4 standards.

Power steering fluid level



The power steering fluid level should be close to the "MAX" mark. Unscrew the cap, with the engine cold, to check the level.

Coolant level



The coolant level should be close to the "MAX" mark but should never exceed it.

When the engine is warm, the temperature of the coolant is regulated by the fan. This can operate with the ignition off.

On vehicles which are fitted with a particle emission filter, the fan may operate after the vehicle has been switched off, even if the engine is cold.

In addition, as the cooling system is pressurised, wait at least one hour after switching off the engine before carrying out any work.

To avoid any risk of scalding, unscrew the cap by two turns to allow the pressure to drop. When the pressure has dropped, remove the cap and top up the level.

Changing the coolant

The coolant does not have to be changed.

Fluid specification

The coolant must conform to the manufacturer's recommendations.

Screenwash and headlamp wash fluid



In the case of vehicles fitted with headlamp washers, the minimum level of this fluid is indicated by an audible signal and a message on the multifunction screen.

Top up the level when you stop the vehicle.

Fluid specification

For optimum cleaning and to avoid freezing, this fluid must not be topped up with or replaced with water.

Diesel additive level (Diesel engine with particle emission filter)

A low additive level is indicated by lighting of the service warning lamp, accompanied by an audible warning and a message on the multifunction screen.

Topping up

This additive must be topped up by a PEUGEOT dealer without delay.

Used products



Avoid prolonged contact of used oil or fluids with the skin.

Most of these fluids are harmful to health or indeed very corrosive.



Do not discard used oil or fluids into sewers or onto the ground.

Take used oil to a PEUGEOT dealer (France) or an authorised waste disposal site.

CHECKS

Unless otherwise indicated, check these components in accordance with the Warranty and Maintenance Record and according to your engine.

Otherwise, have them checked by a PEUGEOT dealer.

Battery



The battery does not require any maintenance.

However, check that the terminals are clean and correctly tightened, particularly in summer and winter.

When carrying out work on the battery, refer to the "Practical information" section for details of the precautions to be taken before disconnecting the battery and following its reconnection.

Air filter



Refer to the Warranty and Maintenance Record for details of the replacement intervals for these components.

Depending on the environment (e.g. dusty atmosphere) and the use of the vehicle (e.g. city driving), **replace them twice as often if necessary** (refer to the "Engines" paragraph).

Oil filter



Replace the oil filter each time the engine oil is changed.

Refer to the Warranty and Maintenance Record for details of the replacement interval for this component.

Dust filter/Anti-odour filter (activated carbon)

Your vehicle is fitted with a filter which traps certain dust and limits odours in the ventilation and air conditioning.

Refer to the Warranty and Maintenance Record for its replacement interval.

Do not hesitate to change it if you notice unpleasant odours, contact a PEUGEOT dealer.

A clogged passenger compartment filter may reduce the performance of the air conditioning system and produce unpleasant odours.

Particle emission filter (Diesel)

It is imperative that the maintenance of the particle emission filter is carried out by a PEUGEOT dealer.



Following prolonged operation of the vehicle at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust on acceleration. This does not affect the behaviour of the vehicle or the environment.

Diesel additive level (Diesel engine with particle emission filter)

A low additive level is indicated by lighting of the service warning lamp, accompanied by an audible warning and a message on the multifunction screen.

Topping up

This additive must be topped up by a PEUGEOT dealer without delay.

Used products



Avoid prolonged contact of used oil or fluids with the skin.

Most of these fluids are harmful to health or indeed very corrosive.



Do not discard used oil or fluids into sewers or onto the ground.

Take used oil to a PEUGEOT dealer (France) or an authorised waste disposal site.

CHECKS

Unless otherwise indicated, check these components in accordance with the Warranty and Maintenance Record and according to your engine.

Otherwise, have them checked by a PEUGEOT dealer.

Battery



The battery does not require any maintenance.

However, check that the terminals are clean and correctly tightened, particularly in summer and winter.

When carrying out work on the battery, refer to the "Practical information" section for details of the precautions to be taken before disconnecting the battery and following its reconnection.

Air filter



Refer to the Warranty and Maintenance Record for details of the replacement intervals for these components.

Depending on the environment (e.g. dusty atmosphere) and the use of the vehicle (e.g. city driving), **replace them twice as often if necessary** (refer to the "Engines" paragraph).

Oil filter



Replace the oil filter each time the engine oil is changed.

Refer to the Warranty and Maintenance Record for details of the replacement interval for this component.

Dust filter/Anti-odour filter (activated carbon)

Your vehicle is fitted with a filter which traps certain dust and limits odours in the ventilation and air conditioning.

Refer to the Warranty and Maintenance Record for its replacement interval.

Do not hesitate to change it if you notice unpleasant odours, contact a PEUGEOT dealer.

A clogged passenger compartment filter may reduce the performance of the air conditioning system and produce unpleasant odours.

Particle emission filter (Diesel)

It is imperative that the maintenance of the particle emission filter is carried out by a PEUGEOT dealer.



Following prolonged operation of the vehicle at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust on acceleration. This does not affect the behaviour of the vehicle or the environment.

Manual gearbox



The gearbox does not require any maintenance (no oil change).

Refer to the Warranty and Maintenance Record for the details of the level checking interval for this component.

6-speed electronic gear control gearbox



The gearbox does not require any maintenance (no oil change).

Refer to the Warranty and Maintenance Record for details of the checking interval for this component.

Automatic gearbox



The gearbox does not require any maintenance (no oil change).

Refer to the Warranty and Maintenance Record for details of the level checking interval for this component.

Brake pads



Brake wear depends on the style of driving, particularly in the case of vehicles used in town, over short distances. It may be necessary to have the

condition of the brakes checked, even between vehicle services.

Unless there is a leak in the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

Brake disc wear status



For information relating to checking the brake disc wear status, contact a PEUGEOT dealer.



Only use products recommended by PEUGEOT or products of equivalent quality and specifications.


In order to optimise the operation of units as important as the braking system, PEUGEOT selects and offers very specific products.

To avoid damaging the electrical units, the use of a high pressure washer in the engine compartment is strictly **prohibited**.

TEMPORARY PUNCTURE REPAIR KIT

Complete system consisting of a compressor and an incorporated sealant cartridge which permits **temporary repair** of the tyre so that you can drive to the nearest garage.

Access to the kit

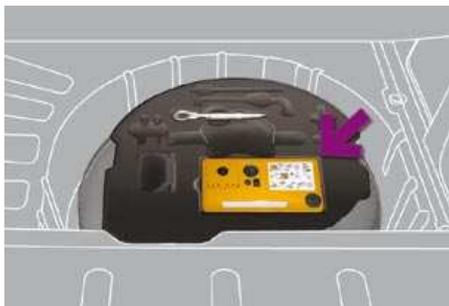

The kit is located in the boot under the floor. It is installed in the tool box, located under the storage box.

List of tools



All of these tools are specific to your vehicle. Do not use them for other purposes.

1. 12 V compressor.
Contains a sealant for temporary repair of the tyre and permits adjustment of the tyre pressure.
2. Two chocks to chock the vehicle.
3. Socket for security bolts (located in the glove compartment).
Permits adaptation to the special security bolts.

Other accessories



4. Removable towing eye.

➤ Refer to the paragraph "Towing the vehicle".

5. Electric parking brake emergency release control.

➤ Refer to "Electric parking brake" in the "Driving" section.

Using the kit

This procedure, comprising several steps, must be carried out in full.

- ☞ Switch off the ignition.
- ☞ Turn the selector **A** to the "SEALANT" position.
- ☞ Check that the switch **B** is in position "0".



- ☞ Connect the white pipe **C** to the valve of the tyre to be repaired.
- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket.



- ☞ Affix the speed limitation sticker to the vehicle's steering wheel to remind you that a wheel is in temporary use.
- ☞ Start the vehicle and leave the engine running.



This repair kit is available from PEUGEOT dealers.


It is designed to repair most punctures which could affect the tyre, located on the tyre tread or shoulder. Avoid removing any foreign bodies which have penetrated the tyre.

- ☞ Switch on the compressor by moving the switch **B** to position "1" until the tyre pressure reaches 2.0 bars.
- ☞ Remove the kit, taking care to avoid staining your vehicle with traces of fluid. Keep the kit to hand.



i If after around 5 to 7 minutes the pressure is not attained, this indicates that the tyre is not repairable; contact a PEUGEOT dealer for assistance.

- ☞ Drive immediately for approximately three miles (five kilometres), at reduced speed (between 15 and 35 mph [20 and 60 km/h]), to plug the puncture.
- ☞ Stop to check the repair and the tyre pressure using the kit.

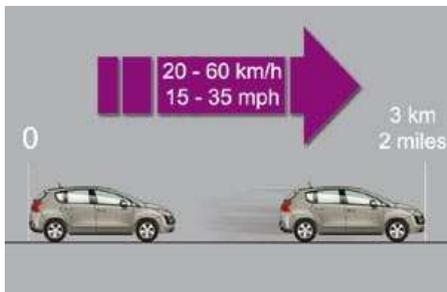

- ☞ Turn the selector **A** to the AIR position.
- ☞ Connect the black pipe **D** to the valve of the wheel.




i **Checking/Adjusting tyre pressures**

You can use this kit to inflate other accessories such as a ball or bicycle tyres.

To do this, turn the selector to the "Inflation (AIR)" position, connect the black pipe with the appropriate adaptor to the accessory to be inflated, then follow the rest of the procedure below as far as removal of the kit.

You can also use this kit for routine checking and adjustment of the tyre pressures on your vehicle. For this, carry out just the following 6 points.

- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket.
- ☞ Start the vehicle again and leave the engine running.

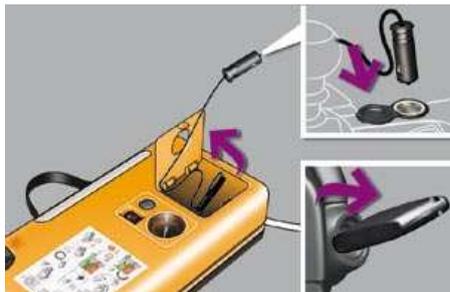

- ☞ Adjust the pressure using the compressor (to inflate: switch **B** in position "1"; to deflate: switch **B** in position "0" and press button **E**), in accordance with the vehicle's tyre pressure label (located on the left hand door aperture).

A loss of pressure indicates that the puncture has not been fully plugged; contact a PEUGEOT dealer for assistance.

- ☞ Remove and stow the kit.



- ☞ Drive at reduced speed (50 mph [80 km/h] max) limiting the distance travelled to approximately 120 miles (200 km).



- ☞ Visit a PEUGEOT dealer as soon as possible.

After inspection of the tyre, a technician will be able to advise you whether the tyre can be repaired or must be replaced.



Take care, this product is harmful (e.g. ethylene-glycol, colophony, ethanediol...) if swallowed and causes irritation to the eyes. Keep it out of reach of children. The expiry date of the fluid is indicated on the cartridge.

The sealant cartridge is designed for single use; even if only partly used, it must be replaced.

To remove the cartridge, unscrew it completely at its cap and pull off.

After use, do not discard the cartridge into the environment, take it to an authorised waste disposal site or a PEUGEOT dealer.


Do not forget to obtain a new sealant cartridge, available from PEUGEOT dealers.




Tyre under-inflation detection

If the vehicle is fitted with tyre under-inflation detection, the under-inflation warning lamp will remain on after the wheel has been repaired until the system is reinitialised by a PEUGEOT dealer.

With the JBL bass unit

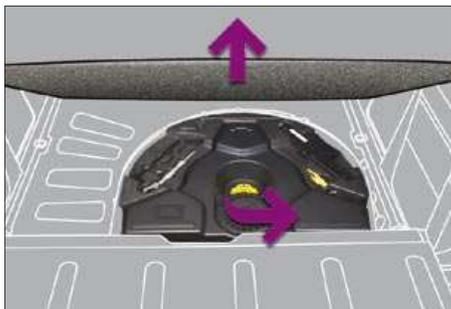

- ☞ To make the operation easier, remove the adjustable boot floor,
- ☞ unscrew the yellow central bolt,

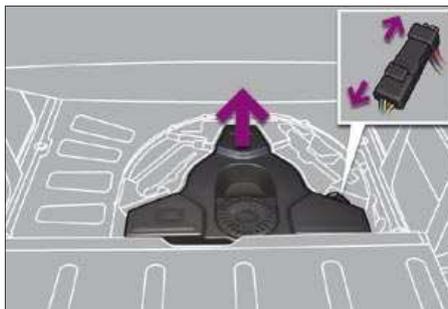


- ☞ remove the bass unit disconnecting the electrical harness,
- ☞ remove the polystyrene storage box.

CHANGING A WHEEL

Procedure for changing a faulty wheel for the spare wheel using the tools provided with the vehicle.

Access to the tools

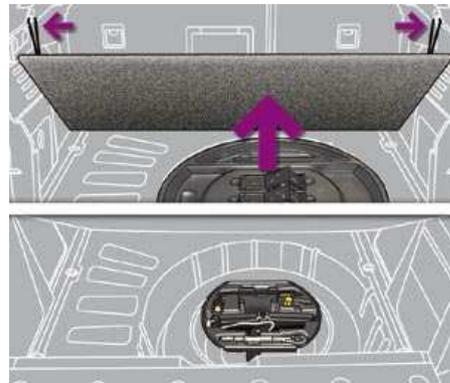


The tools are installed in the boot under the floor.


To gain access to them:

- ☞ open the boot,
- ☞ place the adjustable boot floor at an angle (refer to the "Fittings" section),
- ☞ raise the floor,
- ☞ secure it by hooking its cord on the hook on the rear parcel shelf support,
- ☞ remove the polystyrene storage box,
- ☞ unclip by pulling upwards then remove the box containing the tools.

With the JBL bass unit

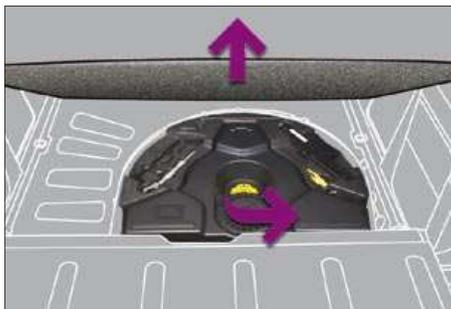

- ☞ To make the operation easier, remove the adjustable boot floor,
- ☞ unscrew the yellow central bolt,

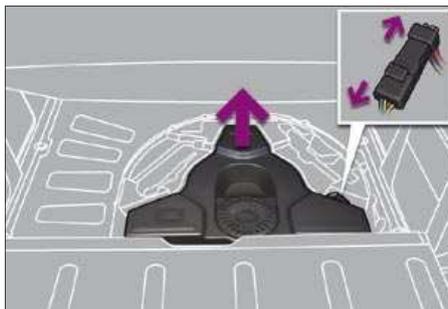


- ☞ remove the bass unit disconnecting the electrical harness,
- ☞ remove the polystyrene storage box.

CHANGING A WHEEL

Procedure for changing a faulty wheel for the spare wheel using the tools provided with the vehicle.

Access to the tools

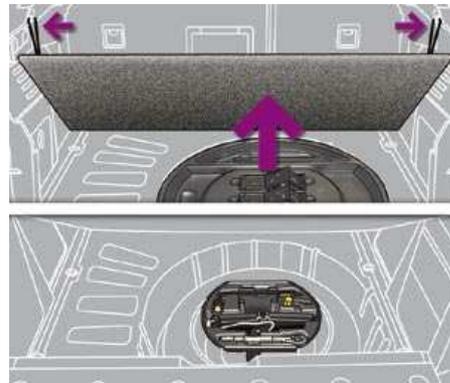


The tools are installed in the boot under the floor.

To gain access to them:

- ☞ open the boot,
- ☞ place the adjustable boot floor at an angle (refer to the "Fittings" section),
- ☞ raise the floor,
- ☞ secure it by hooking its cord on the hook on the rear parcel shelf support,
- ☞ remove the polystyrene storage box,
- ☞ unclip by pulling upwards then remove the box containing the tools.

List of tools

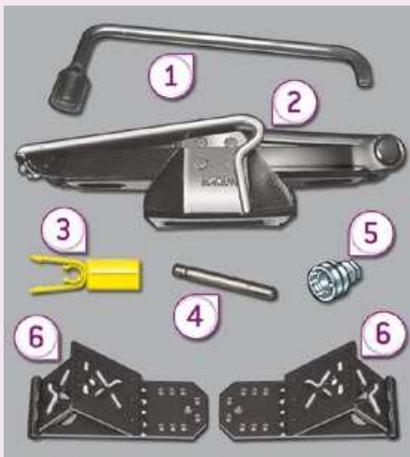

All of these tools are specific to your vehicle. Do not use them for other purposes.

1. Wheelbrace.
For removal of the wheel trim and removal of the wheel fixing bolts.
2. Jack with integral handle.
For raising the vehicle.
3. "Bolt cover" tool (according to equipment).
For removal of the bolt protectors (covers) on alloy wheels.
4. Centring guide.
For refitting an alloy wheel to the hub.

5. Socket for the security bolts (located in the glove box).
For adaptation of the wheelbrace to the special "security" bolts.
6. Two chocks to immobilise the vehicle.

Other accessories



7. Removable towing eye.
Refer to the paragraph "Towing the vehicle".
8. Electric brake emergency release control.
Refer to "Electric parking brake" in the "Driving" section.




Wheel with trim

When removing the wheel, detach the trim first using the wheelbrace **1** pulling at the valve passage hole.

When refitting the wheel, refit the trim starting by placing its notch facing the valve and press around its edge with the palm of your hand.

Access to the spare wheel

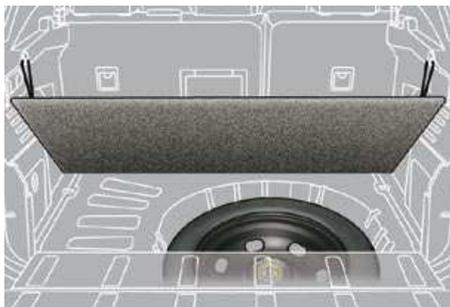


The spare wheel is installed in the boot under the floor.

According to country, the spare wheel may be steel, alloy or of the "space-saver" type.

To gain access to it, refer to the paragraph "Access to the tools" on the previous page.


Taking out the wheel

- ☞ Unscrew the yellow central bolt.
- ☞ Raise the spare wheel towards you from the rear.
- ☞ Take the wheel out of the boot.

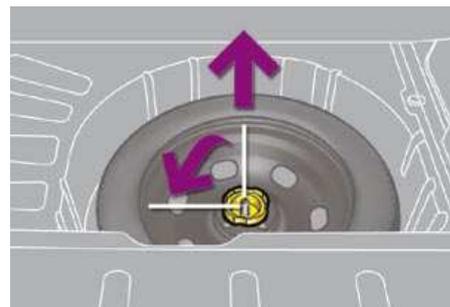

Putting the wheel back in place

- ☞ Put the wheel back in its housing.
- ☞ Unscrew the yellow central bolt by a few turns then put it in place in the centre of the wheel.
- ☞ Tighten fully until the central bolt clicks to retain the wheel correctly.

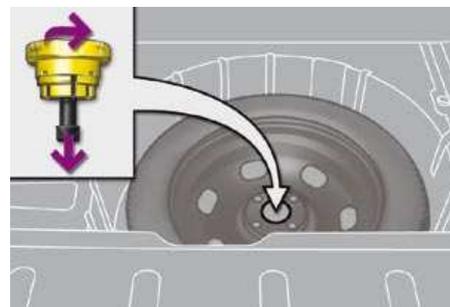

- ☞ Put the box back in place in the centre of the wheel and clip it.
- ☞ Put the polystyrene storage box back in place.




Tyre under-inflation detection

The spare wheel is not fitted with a sensor. The punctured wheel must be repaired by a PEUGEOT dealer.



Removing a wheel

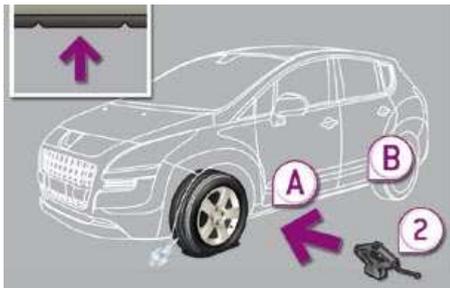

Parking the vehicle

Immobilise the vehicle where it does not block traffic: the ground must be level, stable and non-slippery ground.

Apply the parking brake unless it has been programmed to automatic mode, switch off the ignition and engage first gear* to lock the wheels.

Check that the braking warning lamp and the **P** warning lamp on the parking brake control come on.

If necessary, place a chock under the wheel diagonally opposite the wheel to be changed.


The occupants must get out of the vehicle and wait where they are safe.

Never go underneath a vehicle raised using a jack; use an axle stand.


* position **R** for the electronic gear control manual gearbox; **P** for the automatic gearbox.

List of operations

- Remove the chromed bolt cover from each of the bolts using the tool **3** (according to equipment).
- Fit the security socket **5** on the wheelbrace **1** to slacken the security bolt.
- Slacken the other bolts using the wheelbrace **1** only.

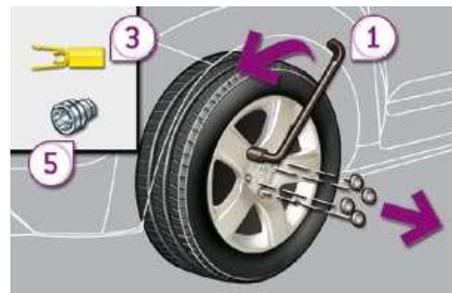


- Place the jack **2** in contact with one of the two front **A** or rear **B** locations provided on the underbody, whichever is closest to the wheel to be changed.
- Extend the jack **2** until its base plate is in contact with the ground. Ensure that the centreline of the jack base plate is directly below the location **A** or **B** used.

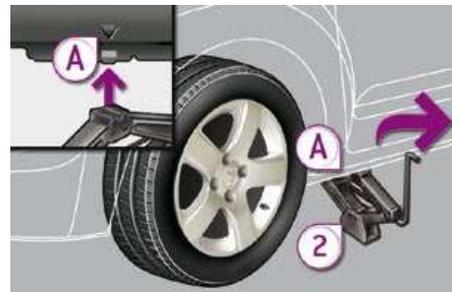

- Raise the vehicle until there is sufficient space between the wheel and the ground to admit the spare (not punctured) wheel easily.
- Remove the bolts and store them in a clean place.
- Remove the wheel.



Fitting a wheel

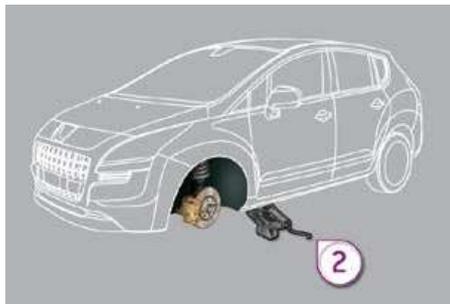

Fitting the "space-saver" spare wheel

If your vehicle is fitted with alloy wheels, when tightening the bolts on fitting it is normal to notice that the washers do not come into contact with the "space-saver" spare wheel. The wheel is secured by the conical contact of each bolt.

After changing a wheel

To store the punctured wheel in the boot correctly, first remove the central cover.


When using the "space-saver" type spare wheel, do not exceed 50 mph (80 km/h).

Have the tightening of the bolts and the pressure of the spare wheel checked by a PEUGEOT dealer without delay.

Have the punctured wheel repaired and replace it on the vehicle as soon as possible.

List of operations


- ☞ Put the wheel in place on the hub using the centring guide 4.
- ☞ Screw in the bolts by hand to the stop.
- ☞ Pre-tighten the security bolt using the wheelbrace 1 fitted with the security socket 5.
- ☞ Pre-tighten the other bolts using the wheelbrace 1 only.

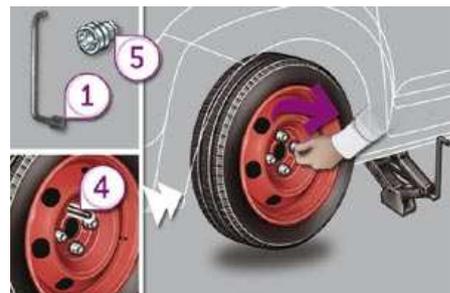

- ☞ Lower the vehicle fully.
- ☞ Fold the jack 2 and detach it.



- ☞ Tighten the security bolt using the wheelbrace 1 fitted with the security socket 5.
- ☞ Tighten the other bolts using the wheelbrace 1 only.
- ☞ Refit the chromed bolt covers on each of the bolts (according to equipment).
- ☞ Store the tools in the box.

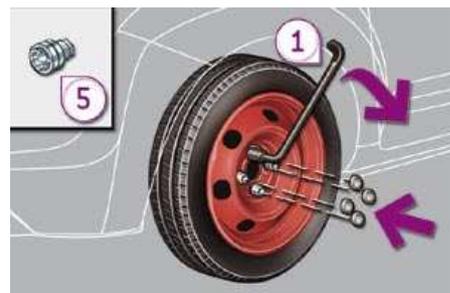


CHANGING A BULB

Procedure for replacing a faulty bulb without the use of tools.


Front lamps

Model with halogen headlamps

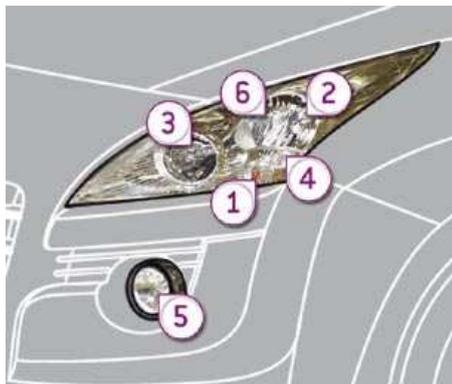

1. Direction indicators (HP24-24W).
2. Dipped beam headlamps (H7-55W).
3. Main beam headlamps (H7-55W).
4. Daytime running lamps (HP24-24W).
5. Foglamps (PS24-24W).
6. Sidelamps (W5-5W).

Model with xenon and directional headlamps

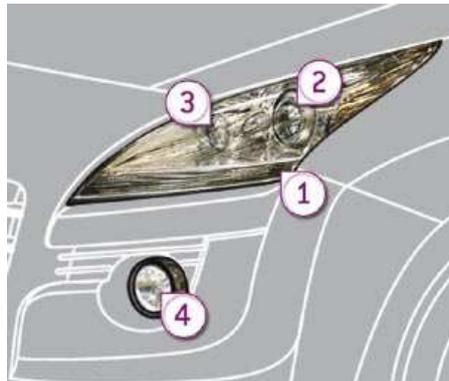

1. Direction indicators (HP24-24W).
2. Dipped/main beam headlamps (D1S-35W).
3. Daytime running lamps/ sidelamps (P21/5W).
4. Foglamps (PS24-24W).



Risk of electrocution

Xenon bulbs (D1S-35W) must be replaced by a PEUGEOT dealer.



The headlamps are fitted with polycarbonate glass with a protective coating:

- ✎ do not clean them using a dry or abrasive cloth, nor with a detergent or solvent product,
- ✎ use a sponge and soapy water,
- ✎ when using a high pressure washer on persistent marks, do not direct at the lamps or their outlines for too long, so as not to damage their protective coating and seals.

- ✎ Do not touch the bulb directly with your fingers, use lint-free cloths.

Changing a halogen bulb should only be done after the headlamp has been switched off for a few minutes (risk of serious burns).


It is imperative to use only anti-ultra-violet (UV) type bulbs in order not to damage the headlamp.

Changing direction indicator bulbs



Consult a PEUGEOT dealer.


Changing dipped headlamp bulbs

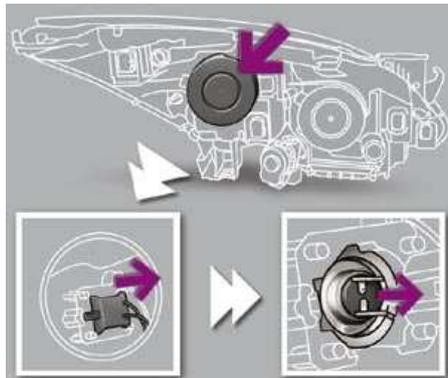

- ☞ Remove the protective plastic cover by pulling on the tab.
- ☞ Disconnect the bulb connector.
- ☞ Extract the bulb by pulling and change it.

To refit, carry out these operations in reverse order.

Changing main beam headlamp and sidelamp bulbs

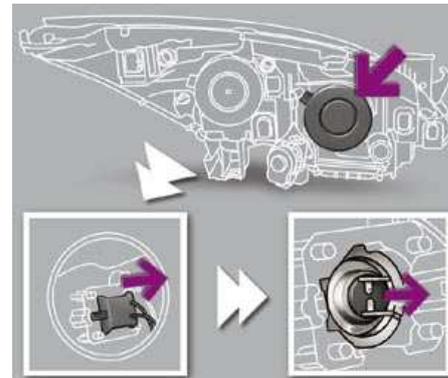

- ☞ Remove the protective plastic cover by pulling on the tab.
- ☞ Disconnect the bulb connector.
- ☞ Remove the bulb by pulling and change it.

To refit, carry out these operations in reverse order.



Changing dipped beam and main beam headlamp bulbs (xenon model)

D1S xenon bulbs must be changed by a PEUGEOT dealer as there is a risk of electrocution.

It is recommended that the D1S bulbs are changed at the same time when one of them fails.

Changing sidelamp bulbs (xenon model)

- ☞ Remove the protective plastic cover by pulling on the tab.
- ☞ Disconnect the bulb connector.
- ☞ Remove the bulb by pulling and change it.


To refit, carry out these operations in reverse order.



Changing daytime running lamp bulbs

Consult a PEUGEOT dealer.

Changing integrated direction indicator side repeaters

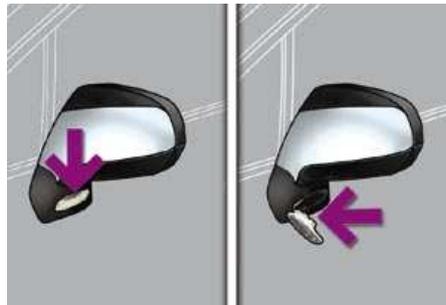

- ☞ Insert a screwdriver towards the centre of the repeater between the repeater and the base of the mirror.
- ☞ Tilt the screwdriver to extract the repeater and remove it.
- ☞ Disconnect the repeater connector.


To refit, carry out these operations in reverse order.

Contact a PEUGEOT dealer to obtain replacement repeaters.




You can also contact a PEUGEOT dealer to have these bulbs changed.

Changing foglamp bulbs

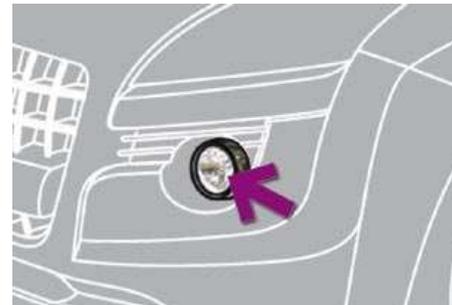

Consult a PEUGEOT dealer.


Rear lamps

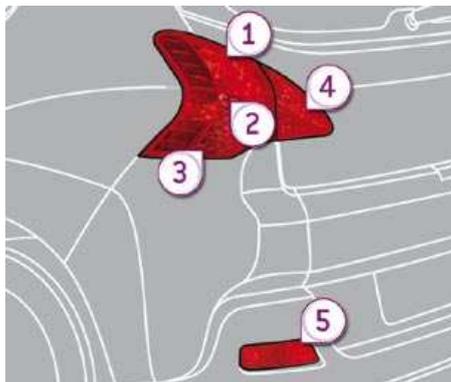


1. Brake lamps/sidelamps (P21-5W).
2. Reversing lamps (P21W).
3. Direction indicators (PY21W-21W).
4. Sidelamps (P5-5W).
5. Foglamps (P21W).

Changing brake lamp/sidelamp, reversing lamp and direction indicator bulbs

- ☞ Remove the plastic cover.
- ☞ Remove the two lamp unit fixing nuts.
- ☞ Extract the lamp unit carefully from the outside.
- ☞ Disconnect the electrical connector.

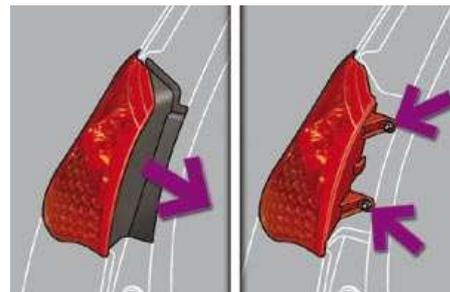


- ☞ Press the six tabs and remove the bulb holder.

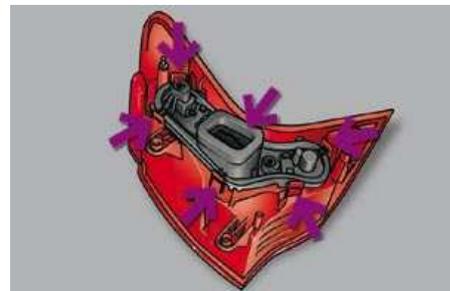


- ☞ Turn the bulb a quarter of a turn and change it.

To refit, carry out these operations in reverse order.

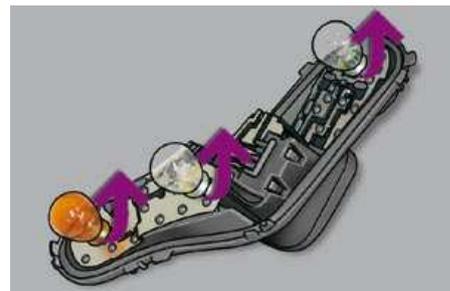


Changing sidelamp bulbs (boot)

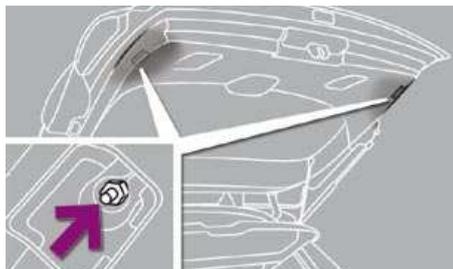

- ☞ Open the boot.
- ☞ Remove the plastic flap using a screwdriver.
- ☞ Remove the lamp fixing nut.
- ☞ Turn the bulb a quarter of a turn and change it.


To refit, carry out these operations in reverse order.

Changing foglamp bulbs

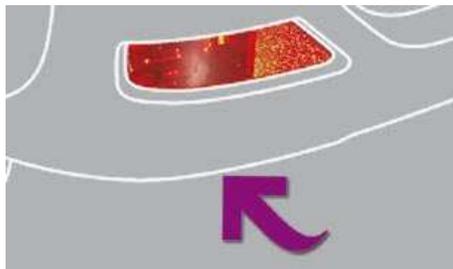


- ☞ Reach under the bumper.
- ☞ Turn the bulb a quarter of a turn and change it.

Changing the third brake lamp bulb

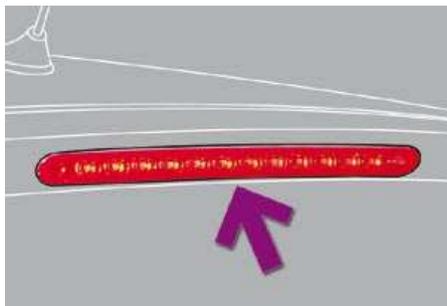


- ☞ Open the boot and remove the upper seal.
- ☞ Unscrew the two nuts.
- ☞ Press the threaded pins while supporting the lamp from the outside.
- ☞ Disconnect the connector and remove the screenwash pipe.

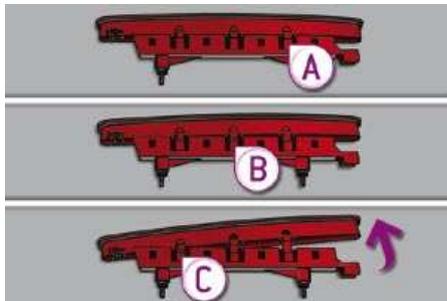

- ☞ Press the pairs of clips **A** then **B** then **C** to detach and gain access to the bulb holder.


Changing the number plate lamp bulbs (W5-5W)

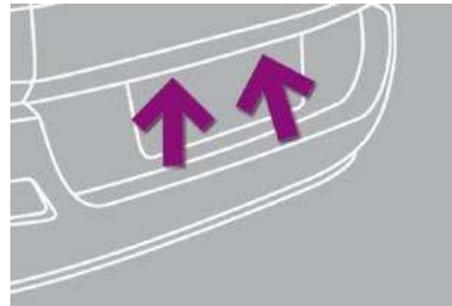

- ☞ Insert a thin screwdriver into one of the outer holes of the lens.
- ☞ Push it outwards to unclip.
- ☞ Remove the lens.
- ☞ Pull the bulb and change it.

CHANGING A FUSE

Procedure for replacing a faulty fuse with a new fuse to rectify a failure of the corresponding function.

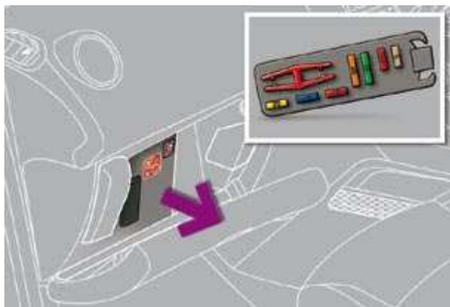

Access to the tools

The extraction pliers and the spare fuses are installed on the back of the dashboard fusebox cover.

To gain access to them:

- ☞ remove the cover completely,
- ☞ remove the pliers.

Changing a fuse

Before changing a fuse, the cause of the failure must be identified and rectified.

- ☞ Identify the faulty fuse by checking the condition of its filament.



Correct

Incorrect

- ☞ Use the special pliers to extract the fuse from its housing.
- ☞ Always replace the faulty fuse with a fuse of the same rating.
- ☞ Check the correspondence between the number etched on the box, the rating etched on the fuse and the tables below.



Installing electrical accessories

Your vehicle's electrical system is designed to operate with standard or optional equipment.



Before installing other electrical equipment or accessories on your vehicle, contact a PEUGEOT dealer.



PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying malfunctions resulting from the installation of accessories not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular when the combined consumption of all of the additional equipment connected exceeds 10 milliamperes.

Dashboard fuses

The fusebox is placed in the lower dashboard (left-hand side).

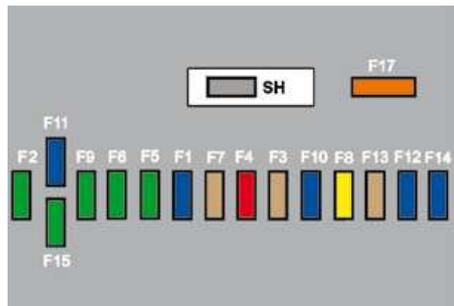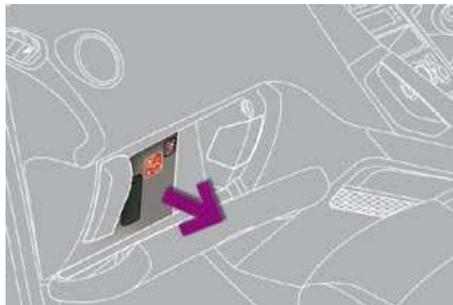


Fuse tables

Fuse N°	Rating (A)	Functions
F1	15	Rear wiper.
F2	-	Not used.
F3	5	Airbag control unit.
F4	10	Electrochromatic rear view mirror, air conditioning, switching and protection unit, rear multimedia.
F5	30	Front one-touch electric windows.
F6	30	Rear one-touch electric windows.
F7	5	Front and rear courtesy lamps, map reading lamps, rear reading lamps, sun visor lighting, glove box lighting, centre armrest lighting, boot 12 V relay control.

Access to the fuses

☞ refer to the paragraph "Access to the tools".

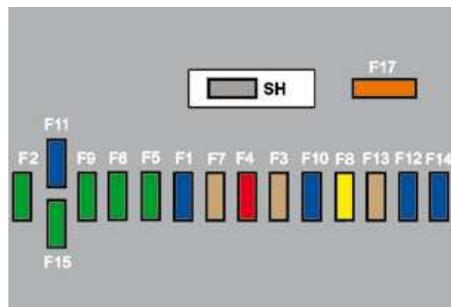


Fuse N°	Rating (A)	Functions
F8	20	Audio equipment, audio/telephone, CD changer, multifunction screen, tyre under-inflation detection, alarm siren, alarm control unit, telematic unit, service module (with Peugeot Connect Media).
F9	30	Front 12 V socket, cigar lighter, rear 12 V socket.
F10	15	Steering mounted controls.
F11	15	Low current ignition switch.
F12	15	Trailer presence, rain/brightness sensor, supply for fuses F32, F34, F35.
F13	5	Engine fusebox, airbag control unit.
F14	15	Instrument panel, instrument panel screen, supply for fuse F33.
F15	30	Locking and deadlocking.
F17	40	Heated rear screen, supply for fuse F30.
SH	-	PARC shunt.

Fuse N°	Rating (A)	Functions
F29	30	Boot 12 V socket.
F30	5	Heated door mirrors.
F31	15	Refrigerator socket.
F32	5	Electronic gear control gearbox gear lever.
F33	10	Head-up display, Bluetooth system, air conditioning.
F34	5	Seat belt warning lamps display.
F35	10	Parking sensors, Hi-Fi amplifier authorisation.
F36	10	Trailer fusebox control unit, driver's door control pad.
F37	20	Hi-Fi amplifier.
F38	30	Driver's electric seat.
F39	20	Panoramic sunroof blind.
F40	-	Not used.


Engine compartment fuses

The fusebox is placed in the engine compartment near the battery (left-hand side).

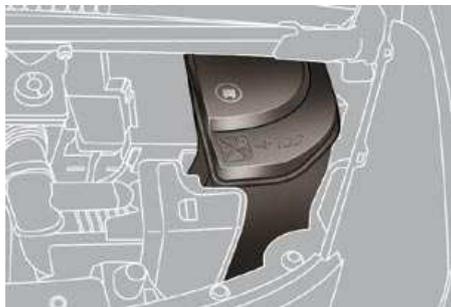


Access to the fuses

- ☞ Unclip the cover.
- ☞ Change the fuse (see corresponding paragraph).
- ☞ When you have finished, close the cover carefully to ensure correct sealing of the fusebox.

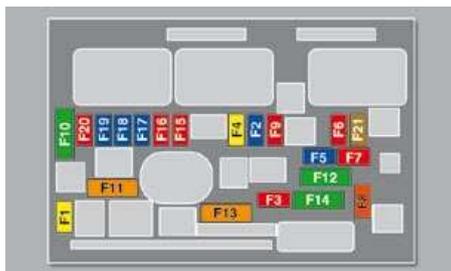


Fuse table

Fuse N°	Rating (A)	Functions
F1	20	Engine control unit supply, injection pump and EGR electrovalves (2 l HDI 16V), injectors (2 l HDI 16V).
F2	15	Horn.
F3	10	Front/rear wash-wipe.
F4	10	Daytime running lamps.
F5	15	Purge canister, turbine discharge and Turbo pressure regulation electrovalves (1.6 l THP 16V), oil vapour heater (1.6 l THP 16V), diesel heater (1.6 l HDI 16V).
F6	10	Diagnostic socket, directional headlamps, particle emission filter pump (Diesel), Distance alert, engine coolant level detector, mirror adjustment control.
F7	10	Power steering control unit, automatic gearbox, directional headlamps height adjustment motor.
F8	20	Starter motor control.
F9	10	Clutch and brake pedal switches.
F10	30	Engine control unit actuators (petrol: ignition coils, electrovalves, oxygen sensors, injectors, heaters, fuel pump, electronic thermostat) (Diesel: electrovalves, heaters).
F11	40	Air conditioning blower.

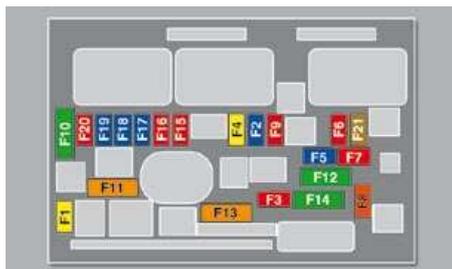

Fuse N°	Rating (A)	Functions
F12	30	Windscreen wipers slow/fast speed.
F13	40	Built-in systems interface supply (ignition positive).
F14	30	Air pump.
F15	10	Right-hand main beam headlamp.
F16	10	Left-hand main beam headlamp.
F17	15	Left-hand dipped headlamp.
F18	15	Right-hand dipped headlamp.
F19	15	Oil vapour heater (1.6 l VTi 16V), Turbo pressure regulation electrovalve (Diesel), engine coolant level detector (Diesel).
F20	10	Electronic thermostat, variable timing electrovalves, Turbo pressure regulation electrovalve (Diesel), engine coolant level detector (Diesel).
F21	5	Fan assembly relay supply, Valvetronic relay control (1.6 l VTi 16V), Turbo cooling (1.6 l THP 16V), air flow sensor (1.6 l HDI 16V).

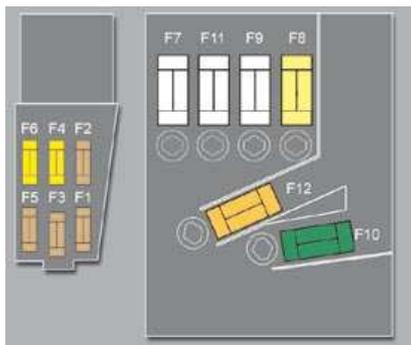
Table of mini and midi-fuses above the battery

Fuse N°	Rating (A)	Functions
F1	-	Not used.
F2	5	Dual function brake switch.
F3	5	Battery charge unit.
F4	25	ABS/ESP electrovalves.
F5	5	ABS/ESP control unit.
F6	15	Automatic gearbox, electronic gear control gearbox.
F7*	80	Power steering electropump assembly.
F8*	60	Fan assembly.
F9*	70/30	Pre-heat unit (Diesel), Valvetronic electric motor (1.6 l THP 16V).
F10*	40	ABS/ESP electropump assembly.
F11*	100	Switching and protection unit.
F12*	30	Electronic gear control gearbox electropump assembly.

Table of maxi-fuses


Fuse N°	Rating (A)	Functions
MF1*	-	Not used.
MF2*	30	Trailer fusebox.
MF3*	50	Passenger compartment fusebox.
MF4*	80	Built-in systems interface.
MF5*	80	Built-in systems interface.
MF6*	30	Electric parking brake.
MF7*	30	Heated front seats.
MF8*	20	Headlamp wash.

* The maxi-fuses provide additional protection for the electrical systems. All work on the maxi-fuses must be carried out by a PEUGEOT dealer.

BATTERY

Procedure for charging your battery when it is flat or for starting the engine using another battery.

Access to the battery

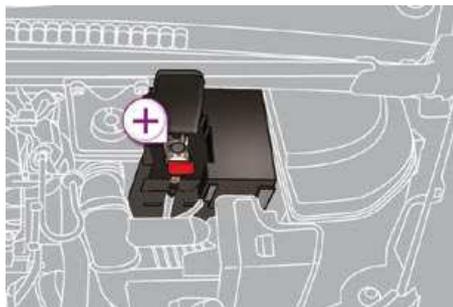


The battery is located under the bonnet. To gain access to it:


- ☞ open the bonnet using the interior release lever, then the exterior safety catch,
- ☞ secure the bonnet stay,
- ☞ remove the plastic cover to gain access to the two terminals,
- ☞ unclip the fusebox to remove the battery, if necessary.

Starting using another battery

- ☞ Connect the red cable to the positive terminal (+) of the flat battery **A**, then to the positive terminal (+) of the slave battery **B**.

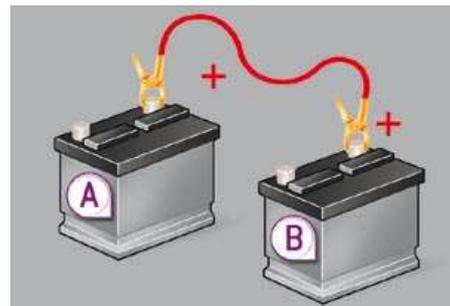


- ☞ Connect one end of the green or black cable to the negative terminal (-) of the slave battery **B**.
- ☞ Connect the other end of the green or black cable to the earth point **C** on your vehicle (engine mounting).
- ☞ Operate the starter, let the engine run.
- ☞ Wait until the engine returns to idle and disconnect the cables.

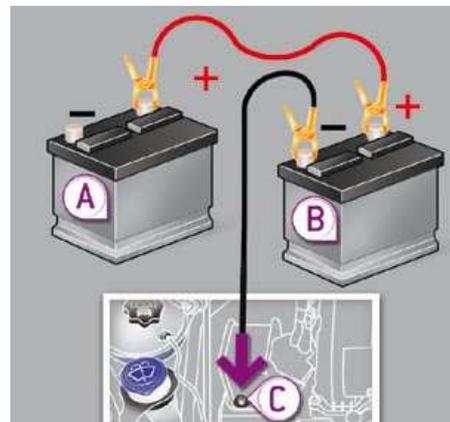

Disconnecting the cables

- ☞ Raise the locking tab fully.

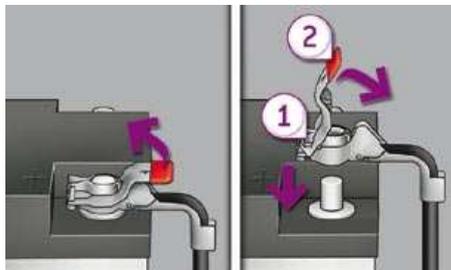

Reconnecting the cables

- ☞ Position the open clip **1** of the cable on the positive terminal (+) of the battery.
 - ☞ Press vertically on the clip **1** to position it correctly against the battery.
 - ☞ Lock the clip by lowering the tab **2**.
- Do not force the tab as locking will not be possible if the clip is not positioned correctly; start the procedure again.

Charging the battery using a battery charger

- ☞ Disconnect the battery from the vehicle.
- ☞ Follow the instructions for use provided by the manufacturer of the charger.
- ☞ Reconnect starting with the negative terminal (-).
- ☞ Check that the terminals and connectors are clean. If they are covered with sulphate (whitish or greenish deposit), remove them and clean them.



The batteries contain harmful substances such as sulphuric acid and lead. They must be disposed of in accordance with regulations and must not, in any circumstances, be discarded with household waste.

Take used remote control batteries and vehicle batteries to a special collection point.



It is advisable to disconnect the battery if the vehicle is to be left unused for more than one month.



Do not disconnect the terminals while the engine is running.

Do not charge the batteries without disconnecting the terminals first.

Do not push the vehicle to start the engine if it is fitted with a 6-speed electronic gear control gearbox or an automatic gearbox.

Before disconnecting the battery

Wait 2 minutes after switching off the ignition before disconnecting the battery. Close the windows and the doors before disconnecting the battery.

Following reconnection of the battery

Following reconnection of the battery, switch on the ignition and wait 1 minute before starting to permit initialisation of the electronic systems. However, if problems remain following this operation, contact a PEUGEOT dealer.

Referring to the corresponding section, you must yourself reinitialise:

- the remote control key,
- the panoramic sunroof blind,
- the GPS satellite navigation system.

LOAD REDUCTION MODE

System which manages the use of certain functions according to the level of charge remaining in the battery.

When the vehicle is being driven, the load reduction function temporarily deactivates certain functions, such as the air conditioning, the heated rear screen...

The deactivated functions are reactivated automatically as soon as conditions permit.

ENERGY ECONOMY MODE

System which manages the duration of use of certain functions to conserve a sufficient level of charge in the battery.

After the engine has stopped, you can still use functions such as the audio and telematics system, windscreen wipers, dipped beam headlamps, courtesy lamps, etc. for a maximum combined duration of thirty minutes.

Switching to economy mode

Once the thirty minutes are over, a message appears on the multi-function screen indicating that the vehicle has switched to economy mode and the active functions are put on standby.



If the telephone is being used at this time:

- it will be maintained for 5 minutes with the hands-free kit of your Peugeot Connect Sound or Peugeot Connect Navigation,
- it will still be possible to finish the call with the Peugeot Connect Media.

Exiting economy mode

These functions are reactivated automatically next time the vehicle is driven.

☞ In order to resume the use of these functions immediately, start the engine and let it run:

- for less than ten minutes, to use the equipment for approximately five minutes,
- for more than ten minutes, to use the equipment for up to approximately thirty minutes.




Let the engine run for the duration specified to ensure that the battery charge is sufficient.

Do not repeatedly and continuously restart the engine in order to charge the battery.

A flat battery prevents the engine from starting (refer to the "Battery" paragraph).

CHANGING A WIPER BLADE

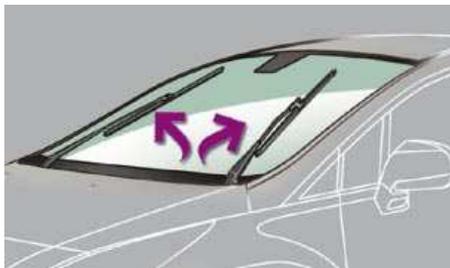

Before removing a front wiper blade

- ☞ Within one minute after switching off the ignition, operate the wiper stalk to position the wiper blades vertically on the windscreen.

Removing

- ☞ Raise the corresponding wiper arm.
- ☞ Unclip the wiper blade and remove it.

Fitting

- ☞ Put the corresponding new wiper blade in place and clip it.
- ☞ Fold down the wiper arm carefully.


After fitting a front wiper blade

- ☞ Switch on the ignition.
- ☞ Operate the wiper stalk again to park the wiper blades.

TOWING THE VEHICLE

Procedure for having your vehicle towed or for towing another vehicle using a removable towing eye.

Access to the tools

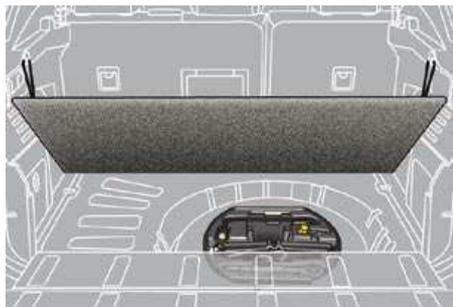


The towing eye is installed in the boot under the floor.

To gain access to it:

- ☞ open the boot,
- ☞ raise the floor,
- ☞ secure it by hooking the cords on the hooks on the rear parcel shelf support,
- ☞ remove the polystyrene box,
- ☞ remove the towing eye from the holder.

Towing your vehicle

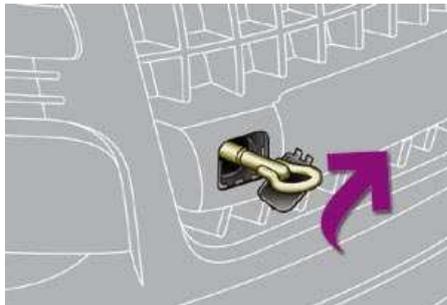


- ☞ On the front bumper, unclip the cover by pressing at the bottom.
- ☞ Screw the towing eye in fully.
- ☞ Install the towing bar.
- ☞ Switch on the hazard warning lamps on the towed vehicle.



- ☞ Place the gear lever in neutral (position **N** on the electronic gear control gearbox or automatic gearbox).

Failure to observe this special condition could result in damage to certain braking components and the absence of braking assistance the next time the engine is started.

Towing another vehicle

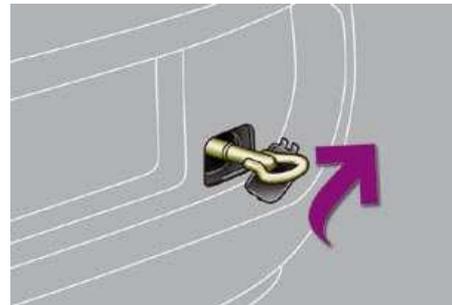

- ☞ On the rear bumper, unclip the cover by pressing at the bottom.
- ☞ Screw the towing eye in fully.
- ☞ Install the towing bar.
- ☞ Switch on the hazard warning lamps on the towed vehicle.



- ☞ When towing with all four wheels on the ground, always use a towing bar.

When towing with only two wheels on the ground, always use professional lifting equipment.

When towing with the engine off, there is no longer any braking or steering assistance.

TOWING A TRAILER, A CARAVAN, ETC.

Towbar suitable for the attachment of a trailer or caravan with additional lighting and signalling.



Your vehicle is primarily designed for transporting people and luggage, but it may also be used for towing a trailer.



We recommend the use of genuine PEUGEOT towbars and their harnesses that have been tested and approved from the design stage of your vehicle, and that the fitting of the towbar is entrusted to a PEUGEOT dealer.

If the trailer is not fitted by a PEUGEOT dealer, it is imperative that it is fitted using the electrical pre-equipment installed at the rear of the vehicle, in accordance with the manufacturer's instructions.

Driving with a trailer subjects the towing vehicle to more significant stress and its driver must be particularly careful.

Driving advice

Distribution of loads

☞ Distribute the load in the trailer so that the heaviest items are as close as possible to the axle and the nose weight approaches the maximum permitted without exceeding it.

Air density decreases with altitude, thus reducing engine performance. Above 1 000 metres, the maximum towing load must be reduced by 10 % and so on for every 1 000 metres of altitude.

Refer to the "Technical Data" section for details of the weights and towing loads which apply to your vehicle.

Side wind

☞ Take into account the increased sensitivity to side wind.

Cooling

Towing a trailer on a slope increases the temperature of the coolant.

As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

☞ To lower the engine speed, reduce your speed.

The maximum towing load on a long slope depends on the gradient and the ambient temperature.

In all cases, pay attention to the coolant temperature.



☞ If the warning lamp and the **STOP** warning lamp come on, stop the vehicle and switch off the engine as soon as possible.

Braking

Towing a trailer increases the braking distance.

Tyres

☞ Check the tyre pressures of the towing vehicle and of the trailer, observing the recommended pressures.

Lighting

☞ Check the electrical lighting and signalling on the trailer.



The rear parking sensors will be deactivated automatically if a genuine PEUGEOT towbar is used.

FITTING ROOF BARS



When fitting transverse roof bars, use the four quick-fit fixings provided for this purpose:

- ☞ lift the concealing flaps,
- ☞ open the fixing covers on each bar using the key,
- ☞ put each fixing in place and lock them on the roof one by one,
- ☞ close the fixing covers on each bar using the key.



Maximum authorised weight on the roof rack, for a loading height not exceeding 40 cm (with the exception of bicycle carriers): **65 kg**.

If the height exceeds 40 cm, adapt the speed of the vehicle to the profile of the road to avoid damaging the roof bars and the fixings on the roof.

Be sure to refer to national legislation in order to comply with the regulations for transporting objects which are longer than the vehicle.

ACCESSORIES

You can obtain a wide range of accessories and original parts from the PEUGEOT network.

These accessories and parts have been tested and approved for reliability and safety.

They are all adapted to your vehicle and benefit from PEUGEOT's recommendation and warranty.


The product range offered by PEUGEOT Accessories is structured around 5 categories: PROTECTION - TOURING - IN-CAR TECHNOLOGY - STYLING - UNIVERSAL:

"Protection":



anti-theft alarm, window engraving, wheel security bolts, first aid kit, warning triangle, high visibility jacket, stolen vehicle tracking system, dog guard, snow chains.

FITTING ROOF BARS

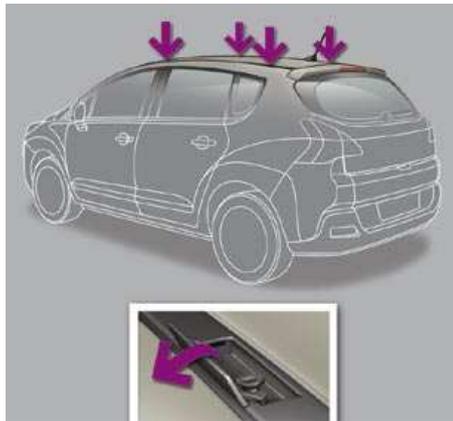

When fitting transverse roof bars, use the four quick-fit fixings provided for this purpose:

- ☞ lift the concealing flaps,
- ☞ open the fixing covers on each bar using the key,
- ☞ put each fixing in place and lock them on the roof one by one,
- ☞ close the fixing covers on each bar using the key.



Maximum authorised weight on the roof rack, for a loading height not exceeding 40 cm (with the exception of bicycle carriers): **65 kg**.

If the height exceeds 40 cm, adapt the speed of the vehicle to the profile of the road to avoid damaging the roof bars and the fixings on the roof.

Be sure to refer to national legislation in order to comply with the regulations for transporting objects which are longer than the vehicle.

ACCESSORIES

You can obtain a wide range of accessories and original parts from the PEUGEOT network.

These accessories and parts have been tested and approved for reliability and safety.

They are all adapted to your vehicle and benefit from PEUGEOT's recommendation and warranty.

The product range offered by PEUGEOT Accessories is structured around 5 categories: PROTECTION - TOURING - IN-CAR TECHNOLOGY - STYLING - UNIVERSAL:

"Protection":



anti-theft alarm, window engraving, wheel security bolts, first aid kit, warning triangle, high visibility jacket, stolen vehicle tracking system, dog guard, snow chains.

"Touring":



mats*, boot tray, luggage net, fixed coat hook on head restraint, stainless steel or carbon door sills.

For leisure pursuits: roof bars, bicycle carrier on towbar, bicycle carrier on roof bars, ski carrier, roof box, booster seats and child seats, side blinds, under shelf storage.

Trailer towbar which must be fitted by the PEUGEOT network.

"In-car technology":



audio systems, amplifiers, satellite navigation systems, Bluetooth hands-free system, CD changer, speakers, DVD player, USB Box, front and rear parking sensors, additional Bluetooth wireless headphones, Bluetooth audio headphones mains charger.

* To avoid any risk of jamming of the pedals:

- ensure that the mat is positioned and secured correctly,
- never fit one mat on top of another.



Installation of radiocommunication transmitters

It is advisable to contact a representative of the PEUGEOT marque before installing accessory radiocommunication transmitters with an external aerial on your vehicle.

The PEUGEOT network will provide you with the specifications (frequency band, maximum output power, aerial position, special installation conditions) of the transmitters which can be fitted, in accordance with the Vehicle Electromagnetic Compatibility Directive (2004/104/CE).

"Styling":



seat covers compatible with lateral airbags, leather gear lever knob, foglamps, door deflectors, spoiler, styling strips, alloy wheels, trims, chrome-plated door handle shells.

"Universal":



screenwash, interior and exterior maintenance and cleaning products.

You can obtain "Van" conversion kits to convert a private vehicle into a van.



Depending on the country in which the vehicle is sold, it is compulsory to have a high visibility jacket, warning triangle and spare bulbs available in the vehicle.



The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system.

Please note this specific warning. You are advised to contact a representative of the Marque to be shown the range of recommended equipment and accessories.

ENGINES AND GEARBOXES

Petrol engines	1.6 litre 16V VTi 120 hp		1.6 litre 16V THP 156 hp	
	Manual (5-speed)	Manual (6-speed)	Manual (6-speed)	Automatic (6-speed)
Cubic capacity (cc)	1 598		1 598	
Bore x stroke (mm)	77 x 85.8		77 x 85.8	
Max power: EU standard (kW)	88		115	
Max power engine speed (rpm)	6 000		6 000	
Max torque: EU standard (Nm)	160		240	
Max torque engine speed (rpm)	4 250		1 400	
Fuel	Unleaded		Unleaded	
Catalytic converter	yes		yes	
OIL CAPACITIES (in litres)				
Engine (with filter replacement)	4.25		4.25	
Gearbox - Final drive	-		-	

ENGINES AND GEARBOXES

Diesel engine	1.6 litre Turbo HDi 110 hp		2 litre Turbo HDi 150 hp	2 litre Turbo HDi 163 hp
	Manual (6-speed)	Electronic gear control (6-speed)	Manual (6-speed)	Automatic (6-speed)
Cubic capacity (cc)	1 560		1 997	
Bore x stroke (mm)	75 x 88.3		85 x 88	
Max power: EU standard (kW)	82		110/120	
Max power engine speed (rpm)	4 000		3 750	
Max torque: EU standard (Nm)	270		320/340	
Max torque engine speed (rpm)	1 750		2 000	
Fuel	Diesel		Diesel	
Catalytic converter	yes		yes	
Particle emission filter	yes		yes	
OIL CAPACITIES (in litres)				
Engine (with filter replacement)	3.75		-	
Gearbox - Final drive	-		-	

WEIGHTS AND TOWED LOADS (in kg)

Petrol engines	1.6 litre 16V VTi 120 hp		1.6 litre 16V THP 156 hp	
	Manual (5-speed)	Manual (6-speed)	Manual (6-speed)	Automatic (6-speed)
- Unladen weight	1 399	1 459		1 480
- Kerb weight*	1 474	1 534		1 555
- Payload	621		561	
- Gross vehicle weight (GVW)	2 020	2 020		2 030
- Gross train weight (GTW) on a 12 % gradient	3 220	3 426		3 530
- Braked trailer (within GTW limit) on a 10 % or 12 % gradient	1 200		1 400	
- Braked trailer** (with load transfer within the GTW limit)	1 500		1 500	
- Unbraked trailer	735		750	
- Recommended nose weight	70		70	

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

* The kerb weight is equal to the unladen weight + driver (75 kg).

** The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

WEIGHTS AND TOWED LOADS (in kg)

Diesel engines	1.6 litre Turbo HDi 16V 110 hp		2 litre Turbo HDi 16V 150 hp	2 litre Turbo HDi 16V 163 hp
	Manual (6-speed)	Electronic gear control (6-speed)	Manual (6-speed)	Automatic (6-speed)
- Unladen weight		1 425	1 529	1 539
- Kerb weight*		1 500	1 604	1 614
- Payload		595	551	561
- Gross vehicle weight (GVW)		2 026	2 086	2 105
- Gross train weight (GTW) on a 12 % gradient		3 120	3 480	3 500
- Braked trailer (within GTW limit) on a 10 % or 12 % gradient	1 100	900	1 400	
- Braked trailer** (with load transfer with the GTW limit)	1 300	1 100	1 500	
- Unbraked trailer		750	750	
- Recommended nose weight		70	70	

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.


The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

* The kerb weight is equal to the unladen weight + driver (75 kg).

** The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

DIMENSIONS (IN MM)

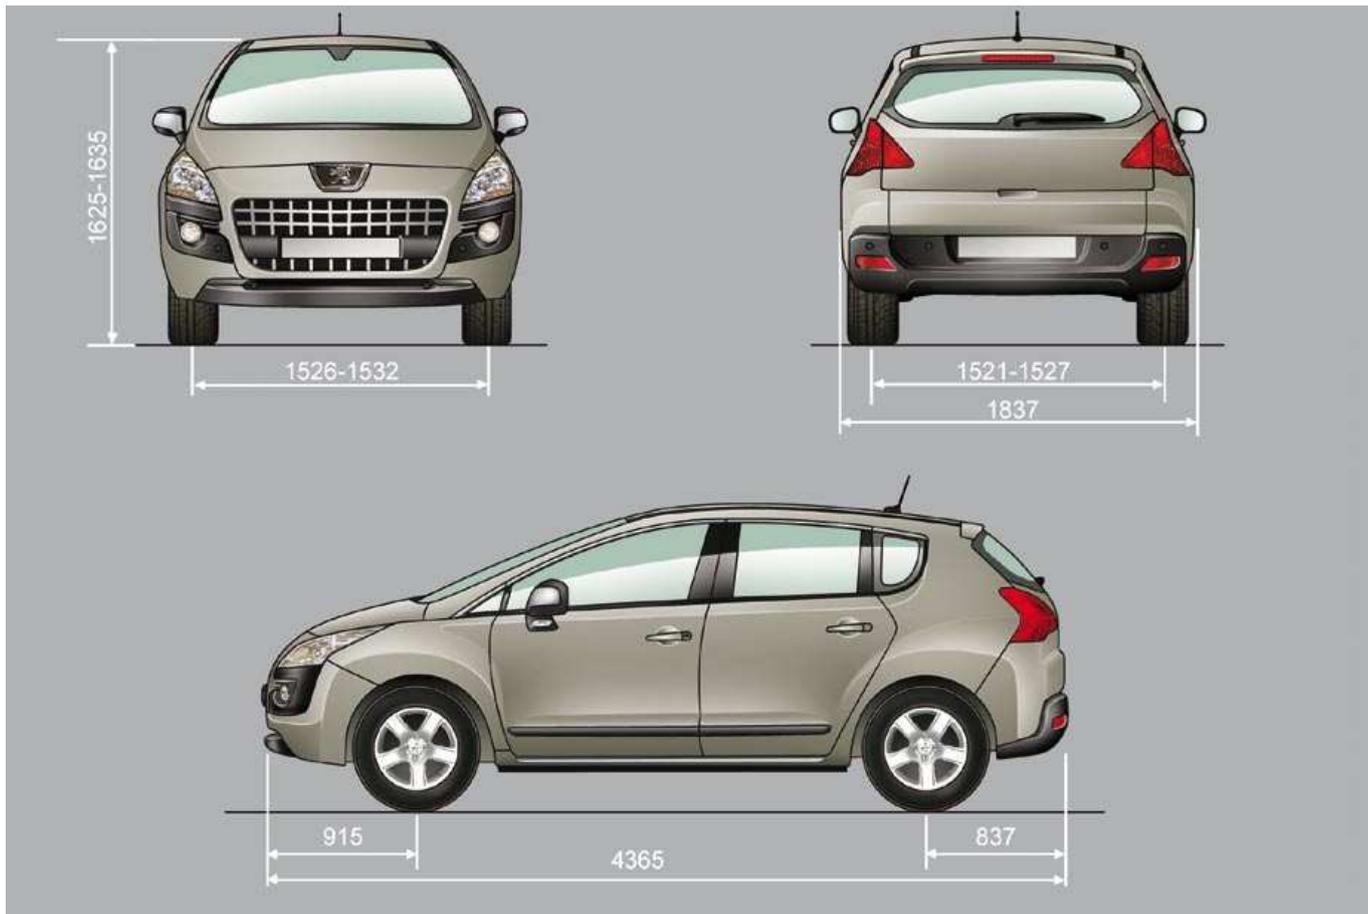

IDENTIFICATION MARKINGS

Various visible markings for the identification and tracking of your vehicle.

A. Vehicle Identification Number (VIN) under the bonnet.

This number is engraved on the bodywork near the damper support.

B. Vehicle identification Number (VIN) on the windscreen lower crossmember.

This number is indicated on a self-adhesive label which is visible through the windscreen.

C. Manufacturer's label.


The VIN is indicated on a self-destroying label affixed to the door aperture, on the right-hand side.

D. Tyre/paint label.

This label is affixed to the door aperture, on the driver's side.

It bears the following information:

- the tyre inflation pressures with and without load,
- the wheel rim and tyre sizes,
- the brands of tyre recommended by the manufacturer,
- the inflation pressure of the spare wheel,
- the paint colour code.

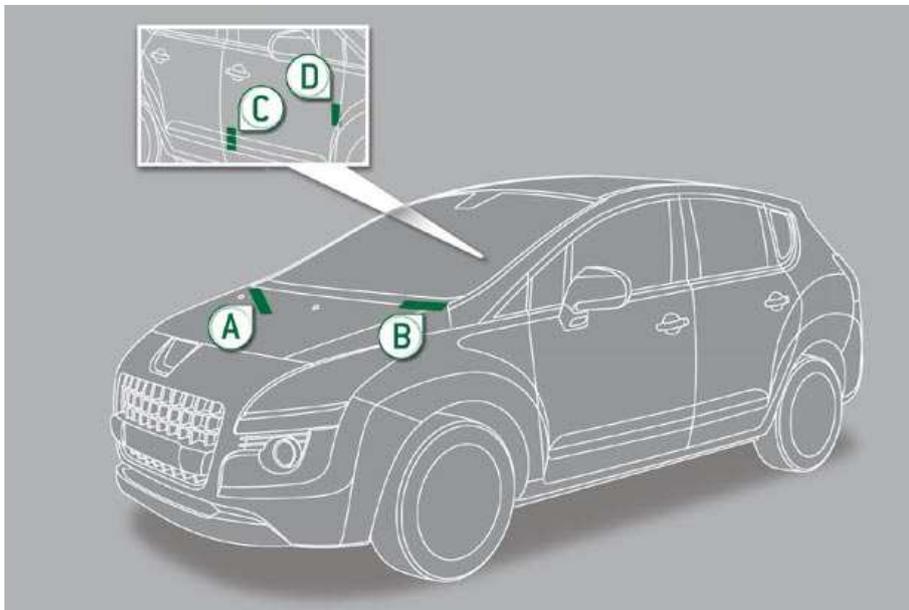

The inflation pressures must be checked when the tyres are cold, at least once a month.



If the inflation pressures are too low, this increases fuel consumption.

EMERGENCY OR ASSISTANCE CALL

EMERGENCY CALL



In an emergency, press this button for more than 2 seconds. Flashing of the green diode and a voice message confirm that the call has been made to the PEUGEOT Emergency team*.

Pressing this button again immediately cancels the request. The green diode switches off.

The green diode remains on (without flashing) when communication is established. It switches off at the end of communication.

This call is dealt with by the PEUGEOT Emergency team which receives locating information from the vehicle and can send a detailed alert to the appropriate emergency services. In countries in which the team is not operational, or when the locating service has been expressly refused, the call is dealt with directly by the emergency services (112) without the vehicle location.



If an impact is detected by the airbag ECU, and independently of any triggering of the airbags, an emergency call is made automatically.

* This service is subject to conditions and availability. Consult a PEUGEOT dealer.

ASSISTANCE CALL



Press this button for more than 2 seconds to request assistance if the vehicle breaks down. A voice message confirms that the call has been made*.

Pressing this button again immediately cancels the request. The cancellation is confirmed by a voice message.

OPERATION OF THE SYSTEM



When the ignition is switched on, the green indicator lamp comes on for 3 seconds indicating that the system is operating correctly.



If the orange indicator lamp flashes: there is a system malfunction. If the orange indicator lamp is lit continuously: the backup battery must be replaced. In both cases, consult a PEUGEOT dealer.

EMERGENCY OR ASSISTANCE CALL using PEUGEOT Connect Media

EMERGENCY CALL



! Warning - the emergency call and the services are only active if the internal telephone is used with a valid SIM card. With a Bluetooth telephone and without a SIM card, these services are not operational.



In an emergency, press the SOS button until an audible signal is heard and a "Confirmation/Cancellation" screen is displayed (if valid SIM card inserted). A call is made* to the PEUGEOT Emergency team which receives locating information from the vehicle and can send a detailed alert to the relevant emergency services.

In countries in which the team is not operational, or when the locating service has been expressly rejected, the call is sent to the emergency services (112).

! If an impact is detected by the airbag control unit, and independently of the triggering of any airbags, an emergency call is made automatically. The message "Deteriorated emergency call" associated with flashing of the orange indicator lamp indicates a malfunction. Consult a PEUGEOT dealer.

* This service is subject to conditions and availability. Consult a PEUGEOT dealer.

ASSISTANCE CALL



Press this button for access to PEUGEOT services*.



Select "Customer call" to request any information about the PEUGEOT marque.

CUSTOMER CALL




Select "PEUGEOT Assistance" to make a breakdown assistance call.

PEUGEOT ASSISTANCE



* These services and options are subject to conditions and availability.

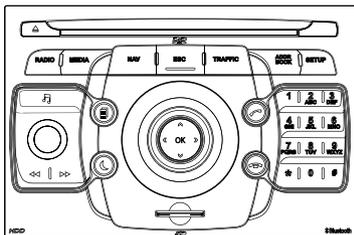

Peugeot Connect Media

MULTIMEDIA AUDIO EQUIPMENT/BLUETOOTH TELEPHONE

GPS EUROPE

CONTENTS

- **01 First steps** p.204
- **02 Voice commands and steering mounted controls** p.206
- **03 General operation** p.209
- **04 Navigation - Guidance** p.213
- **05 Traffic information** p.221
- **06 Radio** p.223
- **07 Music media players** p.224
- **08 Using the telephone** p.229
- **09 Configuration** p.233
- **10 Screen menu map** p.234
- **Frequently asked questions** p.238



The Peugeot Connect Media is protected in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact a PEUGEOT dealer for configuration of the system.




For safety reasons, it is imperative that the driver carries out operations which require prolonged attention while the vehicle is stationary. When the engine is switched off and to prevent discharging of the battery, the Peugeot Connect Media switches off following the activation of the Energy Economy mode.



Certain functions described in this handbook will become available during the course of the year.

01 FIRST STEPS

Peugeot Connect Media CONTROL PANEL

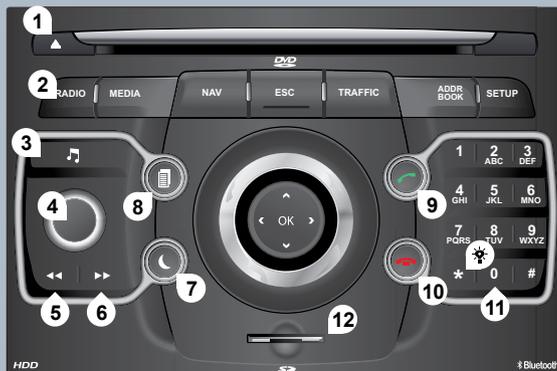

Short press: clears the last character.



Long press: activates voice recognition.

1. CD eject.
2. RADIO: access to the "Radio" Menu. Display the list of stations in alphabetical order (FM waveband) or frequency order (AM waveband).
MEDIA: access to the "Media" Menu (Audio CD, Jukebox, External Device). Display the list of tracks. Change of source.
NAV: access to the "Navigation" Menu and display of the last destinations.
ESC: abandon the operation in progress. Long press: return to the main display.
TRAFFIC: access to the "Traffic" Menu (function described in detail in sections 02 and 10).

ADDR BOOK: access to the "Address book" Menu (function described in detail in section 10).


SETUP: access to the "SETUP" Menu (configuration) (function described in detail in sections 02 and 10). Long press: GPS coverage.

3. Audio settings (Balance/Fader, Bass/Treble, Musical Ambience...).
4. Volume adjustment (each source is independent, including message and navigation alert). Long press: reinitialisation of the system. Short press: mute.
5. Automatic search for a radio station on a lower frequency. Selection of the previous CD or MP3 track.

6. Automatic search for a radio station on a higher frequency. Selection of the next CD or MP3 track.
7. Normal display or black screen.
8. Selection of the successive display on the screen of "MAP"/"NAV" (if navigation is in progress)/"TEL" (if a conversation is in progress)/"RADIO" or "MEDIA" currently being played.
9. PICK UP: access to the "Phone" menu. With Bluetooth connection, accept an incoming call.
10. HANG UP: access to the "Phone" menu. Hang up the current call or refuse an incoming call, with Bluetooth connection.
11. Entering of numbers or letters on the alpha-numeric keypad, pre-selection of 10 radio frequencies.
12. SD card reader.

01 FIRST STEPS

Peugeot Connect Media NAVIGATOR

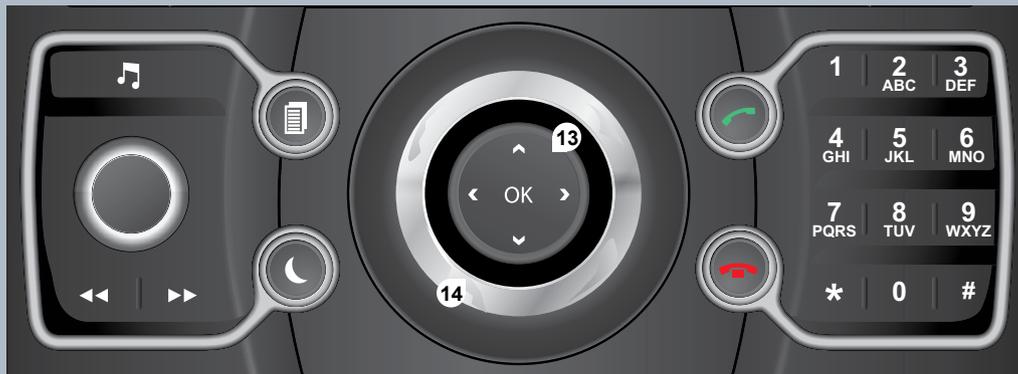

13. OK: confirmation of the highlighted item on the screen.

- 4-direction navigator: press to the left/right.

When the "RADIO" screen is displayed: selection of the previous/next frequency.

When "MEDIA" is displayed: selection of the previous/next track.

When "MAP" or "NAV" is displayed: horizontal movement of the map.

- 4-direction navigator: press up/down.

When "RADIO" is displayed: selection of the previous/next radio station on the list.

When the "MEDIA" screen is displayed: selection of the MP3 directory.

When "MAP" or "NAV" is displayed: vertical movement of the map.

Switch to the next or previous page of a menu.
Movement on the virtual keypad displayed.

14. Rotation of the ring:

When the "RADIO" screen is displayed: selection of the previous/next radio station on the list.

When the "MEDIA" screen is displayed: selection of the previous/next CD or MP3 track.

When "MAP" or "NAV" is displayed: front/rear map zoom.

Movement of the menu selection cursor.

02 VOICE COMMANDS AND STEERING MOUNTED CONTROLS


STEERING MOUNTED CONTROLS

Wiper stalk: display of "RADIO" and "MEDIA".

Lighting stalk: activation of the voice command by means of a short press; indication of the current navigation instruction by means of a long press.

RADIO: selection of the next stored station.
Audio CD: selection of the next track.
If "MEDIA" is displayed on the screen:
MP3 CD/CARD/JUKEBOX: selection of the next directory.
Selection of the next entry in the address book.

RADIO: automatic search for a higher frequency.
CD/SD CARD/JUKEBOX: selection of the next track.
CD/SD CARD/JUKEBOX: continuous press: fast forward play.

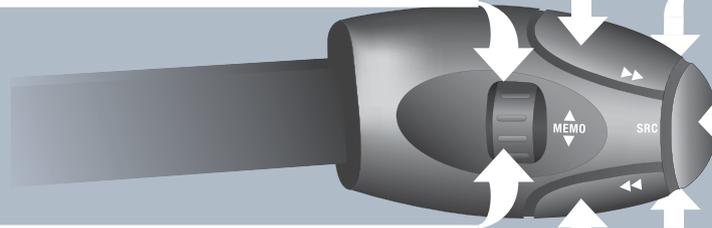

RADIO: selection of the previous stored station.
Audio CD: selection of the previous track.
If "MEDIA" is displayed on the screen:
MP3 CD/SD CARD/JUKEBOX: selection of the previous directory.
Selection of the previous entry in the address book.

Volume increase.

- Change the sound source.
- Make a call from the address book.
- Pick up/Hang up the telephone.
- Press for more than 2 seconds: access to the address book.

Mute: by pressing the volume increase and decrease buttons simultaneously.

Restore the sound: by pressing one of the two volume buttons.

Volume decrease.

RADIO: automatic search for a lower frequency.
CD/SD CARD/JUKEBOX: selection of the previous track.
CD/SD CARD/JUKEBOX: continuous press: fast backward play.

02 VOICE COMMANDS AND STEERING MOUNTED CONTROLS

VOICE COMMANDS - VOICE RECO. INITIATION



1 Before using the system for the first time, you are advised to listen to, say and repeat the instructions for use.

2 Press the **SETUP** button and select the "Language & Speech" function. Turn the ring and select "Voice control". Activate voice recognition. Select "Tutorial".



The phrases to be spoken according to the context are indicated in the tables below.
Speak and Peugeot Connect Media acts.



A short press activates voice recognition.
A long press on this button activates voice recognition.



CONTEXT	SAY	ACTION
GENERAL	Help address book Help voice control Help media Help navigation Help telephone Help radio Cancel Correction	Access to the address book help Access to the voice reco help Access to the media management help Access to the guidance, navigation help Access to the telephone help Access to the radio help To cancel a voice command which is in progress Request to correct the last voice recognition carried out Clear
RADIO	Select station Station <tts:stationName> Read out station list Enter frequency Select wave band AM FM TA on TA off	Select a radio station Select a radio station using its RDS description <tts:station Name> from the RADIO list Listen to the list of stations available Listen to the frequency of the current radio station Choose the frequency waveband (AM or FM) Change the frequency waveband to AM Change the frequency waveband to FM Activate the Traffic Info (TA) Deactivate the Traffic Info
NAVIGATION	Destination input Voice advice off Voice advice on Save address Start guidance Abort guidance Navigate entry POI Search	Command to enter a new destination address Deactivate the spoken guidance instructions Activate the spoken guidance instructions Save an address in the address book Start guidance (once the address has been entered) Stop the guidance Start guidance to a file in the address book Start guidance to a point of interest

02 VOICE COMMANDS AND STEERING MOUNTED CONTROLS

VOICE COMMANDS - VOICE RECO. INITIATION



CONTEXT	SAY	ACTION
MEDIA	Media Select media Single slot Jukebox USB External device SD-Card Track <1 - 1 000> Folder <1 - 1 000>	Select the MEDIA source Choose a source Select the CD player source Select the Jukebox source Select the USB reader source Select the audio AUX input source Select the SD card source Select a specific track (number between 1 and 1 000) on the active MEDIUM Select a Folder (number between 1 and 1 000) on the active MEDIUM
TELEPHONE	Phone menu Enter number Phone book Dial Save number Accept Reject	Open the Telephone Menu Enter a telephone number to be called Open the phone book Make a call Save a number in the phone book Accept an incoming call Refuse an incoming call
ADDRESS BOOK	Address book menu Call <entry> Navigate <entry>	Open the address book Call file using its description <file> as described in the address book Start guidance to an address in the address book using its description <file>

03 GENERAL OPERATION


DISPLAY ACCORDING TO THE CONTEXT

Press the MODE button several times in succession to gain access to the following displays:

RADIO/MUSIC MEDIA/VIDEO



TELEPHONE (If a conversation is in progress)

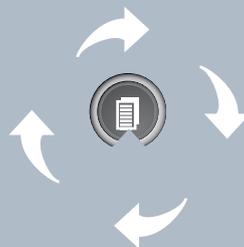

FULL SCREEN MAP



NAVIGATION (If guidance is in progress)



SETUP:

access to the "SETUP" Menu: system language* and voice functions*, voice initialisation (section 09), date and time*, display, unit and system parameters.

* Available according to model.



TRAFFIC:

access to the Traffic Menu: display of the current traffic alerts.



MEDIA:

"DVD-audio" menu
"DVD-Video" menu



Long press: access to the GPS coverage and to the demonstration mode.

For maintenance of the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, without any additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section of this handbook.

03 GENERAL OPERATION

DISPLAY ACCORDING TO THE CONTEXT



Pressing OK gives access to short-cut menus according to the display on the screen.

NAVIGATION (IF GUIDANCE IS IN PROGRESS):

- 1 ABORT GUIDANCE
- 1 REPEAT ADVICE
- 1 BLOCK ROAD
- 2 UNBLOCK
- 2 MORE
- 2 LESS
- 2 CALCULATE
- 2 ZOOM/SCROLL
- 2 BROWSE ROUTE
- 1 ROUTE INFO
- 2 SHOW DESTINATION
- 2 TRIP INFO
- 3 Route type



- 3 Avoid
- 3 Satellites
- 3 Stopovers
- 2 BROWSE ROUTE
- 2 ZOOM/SCROLL
- 1 VOICE ADVICE
- 1 ROUTE OPTIONS
- 2 ROUTE TYPE
- 2 ROUTE DYNAMICS
- 2 AVOIDANCE CRITERIA
- 2 RECALCULATE

TELEPHONE:

- 1 END CALL
- 1 HOLD CALL
- 1 DIAL
- 1 DTMF-TONES
- 1 PRIVATE MODE
- 1 MICRO OFF

MUSIC MEDIA PLAYERS:

- 1 TA
- 1 PLAY OPTIONS
- 2 NORMAL ORDER
- 2 RANDOM TRACK
- 2 SCAN
- 1 SELECT MEDIA

RADIO:

- 1 IN FM MODE
- 2 TA
- 2 RDS
- 2 RADIOTEXT
- 2 REGIONAL PROG.
- 2 AM
- 1 IN AM MODE
- 2 TA
- 2 REFRESH AM LIST
- 2 FM

03 GENERAL OPERATION

DISPLAY ACCORDING TO THE CONTEXT



FULL SCREEN MAP:

1 ABORT GUIDANCE/RESUME GUIDANCE

1 SET DESTINATION/ADD STOPOVER

1 POIS NEARBY

1 POSITION INFO



2 OPTIONS

3 Navigate to

3 Dial

3 Save position

3 Zoom/Scroll

1 MAP SETTINGS

2 2D MAP

2 2.5D MAP

2 3D MAP

2 NORTH UP

2 HEADING UP

1 ZOOM/SCROLL

AUDIO DVD (LONG PRESS):

1 STOP

2 GROUP

3 Group 1..2/n

2 PLAY OPTIONS

3 Normal order/Random track/Scan

1 TA

2 SELECT MEDIA

VIDEO DVD (LONG PRESS):

1 PLAY

2 STOP

2 DVD MENUS

3 DVD menu

3 DVD top menu

3 List of titles

3 List of chapters

2 DVD OPTIONS

3 Audio

3 Subtitles

3 Angle

Examples:



Peugeot Connect Media IS:

- the map setting which allows the map to be displayed flat, in perspective or in 3D.

Flat map



Map in perspective



Map in 3D



- configuration of the system by means of voice commands.



04 NAVIGATION - GUIDANCE

SELECTING A DESTINATION

The "NAVIGATION" voice commands are listed in section 09. During guidance, a long press on the end of the lighting stalk repeats the last guidance instruction.

1



Press the NAV button.



4



Select the "Address input" function and press OK to confirm.

ADDRESS INPUT



The list of the last 20 destinations appears under the Navigation Menu function.

2



Press the NAV button again or select the Navigation Menu function and press OK to confirm.

NAVIGATION MENU



5



Once the country has been selected, turn the ring and select the town function. Press OK to confirm.



6



Select the letters of the town one by one confirming each time by pressing OK.



3



Select the "Destination input" function and press OK to confirm.

DESTINATION INPUT



A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed via the LIST button on the virtual keypad.

04 NAVIGATION - GUIDANCE

It is possible to scroll the map using the 4-direction navigator. It is possible to select its orientation via the short-cut menu of the "Full screen map". Press OK then select "Map Settings" and confirm.

7



Turn the ring and select OK. Press OK to confirm.



To speed up the process, the post code can be entered directly after selecting the "Postal code" function. Use the virtual keypad to enter the letters and digits.

8



Repeat steps 5 to 7 for the "Street" and "House number" functions.



Select the "Save to address book" function to record the address entered in a directory file. Press OK to confirm the selection. The Peugeot Connect Media permits the recording of more than 4 000 contact files.



To delete a destination; from steps 1 to 3, select "Choose from last destinations". A long press on one of the destinations displays a list of actions from which you can select:

DELETE ENTRY

DELETE LIST

9



Then select "Start route guidance" and the press OK to confirm.

START ROUTE GUIDANCE



10



Select the route type: "Fast route", "Short route", or "Optimized route" and press OK to confirm.



11



Select the road with the colour corresponding to the route chosen and press OK to confirm and start guidance.



It is also possible to select a destination via "Choose from address book" or "Choose from last destinations", by selecting a junction, a town centre, geographic coordinates, or directly on the "Map".

CHOOSE FROM ADDRESS BOOK

CHOOSE FROM LAST DESTINATIONS

04 NAVIGATION - GUIDANCE

ROUTE OPTIONS

When the map is displayed on the screen, you can select "Map Settings" then "2D Map/2.5D Map/ 3D Map/North Up/Heading Up". The display of buildings in 3D mode depends on the progress in town mapping.

1



Press the NAV button.



2



Press the NAV button again or select the Navigation Menu function and press OK to confirm.

NAVIGATION MENU



3



Select the "Route options" function and press OK to confirm.

ROUTE OPTIONS



4



Select the "Route type" function and press OK to confirm. This function allows you to change the route type.

ROUTE TYPE



5



Select the "Route dynamics" function. This function provides access to the "Traffic independent", "Semi-dynamic" and "Dynamic" options.

ROUTE DYNAMICS



6



Select the "Avoidance criteria" function. This function provides access to the "Avoid" options (motorways, toll roads, ferries, tunnels).

AVOIDANCE CRITERIA



7



Turn the ring and select the "Recalculate" function to take into account the route options selected. Press OK to confirm.

RECALCULATE



04 NAVIGATION - GUIDANCE

ADDING A STOPOVER

Stopovers can be added to or deleted from the route once the destination has been selected.

1



Press the NAV button.



2



Press the NAV button again or select the "Navigation" Menu function and press OK to confirm.

"NAVIGATION" MENU



3



Select the "Stopovers" function and press OK to confirm.

STOPOVERS



4



Select the "Add stopover" function (5 stopovers maximum) and press OK to confirm.

ADD STOPOVER



5



Enter a new address, for example.

ADDRESS INPUT



6



Once the new address has been entered, select "Start route guidance" and press OK to confirm.

START ROUTE GUIDANCE



7



Position the stopover on the list and press OK to confirm.



8

Repeat operations 1 to 7 as many times as necessary then select "Recalculate" and press OK to confirm.



To change the stopovers, repeat operations 1 to 3 and select "Rearrange route" (select a stopover, delete it or move it on the list using the ring to change the order, confirm its new position and finish with "Recalculate").

04 NAVIGATION - GUIDANCE

SEARCHING FOR POINTS OF INTEREST (POI)

The points of interest (POIs) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

1



Press the NAV button.



2



Press the NAV button again or select the Navigation Menu function and press OK to confirm.

NAVIGATION MENU



3



Select the "POI search" function and press OK to confirm.

POI SEARCH



4



Select the "POI nearby" function to search for POIs around the vehicle.

POI NEARBY



5



Select the "POI near destination" function to search for POIs near the point of arrival of the route.

POI NEAR DESTINATION



6



Select the "POI in city" function to search for POIs in the city required. Select the country then enter the name of the city using the virtual keypad.

POI IN CITY



A list of cities present in the country selected can be accessed via the LIST button on the virtual keypad.

7



Select the "POI in country" function to search for POIs in the country required.

POI IN COUNTRY



8



Select the "POI near route" function to search for POIs near the route.

POI NEAR ROUTE



04 NAVIGATION - GUIDANCE

This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.



LIST OF PRINCIPAL POINTS OF INTEREST (POI)

-  Service station
-  LPG station
-  Garage
-  PEUGEOT
-  Motor racing circuit
-  Covered car park
-  Car park
-  Rest area
-  Hotel
-  Restaurant
-  Refreshment area
-  Picnic area
-  Cafeteria

-  Airport
-  Railway station
-  Bus station
-  Port
-  Industrial estate
-  Supermarket
-  Bank
-  Vending machine
-  Tennis court
-  Swimming pool
-  Golf course
-  Winter sports resort
-  Theatre

-  Cinema
-  Camp site
-  Theme parks
-  Hospital
-  Pharmacy
-  Police station
-  School
-  Post office
-  Museum
-  Tourist information
-  Automatic speed camera*
-  Red light camera*
-  Risk area*

* According to availability in the country.

04 NAVIGATION - GUIDANCE

UPDATING THE RISK AREAS POIs

1



Download the "Risk areas POIs" update file onto an SD card or USB stick from the Internet. This service is available on www.peugeot.fr or www.peugeot.co.uk.

i

The files must be copied to the root on the chosen medium.

2



Insert the medium (SD card or USB stick) containing the POI database into the system's SD card reader or USB reader.

3



Press NAV, select Navigation Menu, then "Settings", then "Update personal POI".

NAVIGATION MENU

SETTINGS

UPDATE PERSONAL POI



4



Select the medium ("USB" or "SD-Card") used and press OK.



5

Successful downloading is confirmed by a message.

6

The system restarts.

i

The Risk Areas POIs version is available on the SETUP\System menu.

04 NAVIGATION - GUIDANCE

SPOKEN INSTRUCTION SETTINGS

1



When the navigation is displayed on the screen, press OK then select or deselect "Voice advice" to activate or deactivate the spoken guidance instructions. Use the volume button to adjust the volume.



i

The volume of the Risk Areas POIs alert can only be adjusted during this type of alert.

POINTS OF INTEREST AND RISK AREAS SETTINGS

1



Press the NAV button.



2



Press the NAV button again or select the Navigation Menu function and press OK to confirm.

NAVIGATION MENU



3



Select the "Settings" function and press OK to confirm.

SETTINGS



4



Select the "POI categories on Map" function to select the POIs to be displayed on the map by default.

POI CATEGORIES ON MAP



5



Select "Set parameters for risk areas" to gain access to the "Display on map", "Visual alert" and "Sound alert" functions.

SET PARAMETERS FOR RISK AREAS



05 TRAFFIC INFORMATION

CONFIGURE THE FILTERING AND DISPLAYING OF THE TMC MESSAGES

The TMC (Traffic Message Channel) messages provide information relating to traffic and weather conditions, received in real time and transmitted to the driver audibly and visually on the navigation map.

The guidance system can then suggest an alternative route.

1



Press the TRAFFIC button.



The list of TMC messages appears under the Traffic Menu sorted in order of proximity.

2



Press the TRAFFIC button again or select the Traffic Menu function and press OK to confirm.



TRAFFIC MENU

3



Select "Select preferred list" MESSAGE FILTERING and press OK to confirm.



4



Select the filter of your choice:

MESSAGES ON ROUTE

ALL WARNING MESSAGES

ONLY WARNINGS ON ROUTE

ALL MESSAGES



5



Select "Geo. Filter".

GEO. FILTER



When all of the messages on the route are selected, the addition of a geographic filter is recommended (within a radius of 3 miles (5 km) for example) to reduce the number of messages displayed on the map. The geographic filter follows the movement of the vehicle.



The filters are independent and their results are concealed. We recommend:

- a filter over 6 miles (10 km) around the vehicle in heavy traffic,
- a filter over 30 miles (50 km) around the vehicle or a filter on the route on motorway journeys.

05 TRAFFIC INFORMATION

PRINCIPAL TMC SYMBOLS

1 Black and blue triangle: general information, for example:



2 Red and yellow triangle: traffic information, par example:




RECEIVING TA MESSAGES

i The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, Jukebox, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.


1  With the current audio source displayed on the screen, press the dial.



2 The shortcut menu for the source appears and gives access to:

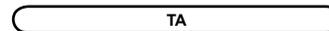

3  Select Traffic Announcements (TA) and press the dial to confirm and go to the associated settings.

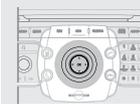

06 RADIO

The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS following mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a failure of the audio equipment.

SELECTING A STATION

1



Press the RADIO button to display the list of stations received locally sorted in alphabetical order. Select the station required by turning the ring and press to confirm.



While listening to the radio, press buttons « and » for the automatic search for a lower or higher frequency.



When the "RADIO" screen is displayed, turn the ring or use the 4-direction navigator to select the previous or next station on the list.



Press one of the buttons on the numeric keypad for more than 2 seconds to store the current station. A bleep confirms that it has been stored. Press the button on the numeric keypad to recall the stored radio station.

RDS - REGIONAL MODE

1




When the current radio station is displayed on the screen, press OK.



2

The radio source short-cuts menu appears and provides access to the following short-cuts:

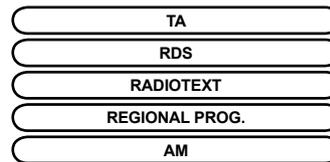

3



Select the function required and press OK to confirm to gain access to the corresponding settings.



The RDS, if displayed, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

07 MUSIC MEDIA PLAYERS

CD, MP3/WMA CD, MP3/WMA SD CARD/USB READER INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1, 2 & 2.5 Audio Layer 3 and the WMA format, an abbreviation of Windows Media Audio and the property of Microsoft, are audio compression standards which permit the recording of several tens of music files on a single disc.



Connecting an iPod:
To play MP3 type files, connect the iPod using the USB port (limited functions).
To play iTunes files, connect the iPod using the auxiliary socket (AUX).



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.
If the disc is recorded in another format it may not be played correctly.
It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.
In the particular case of a multi-session CD, the Joliet standard is recommended.



In order to be read, a USB memory stick must be formatted to FAT 32.



The audio equipment will only play audio files with the extension ".mp3" with a speed of between 8 Kbps and 320 Kbps and the extension ".wma" with a speed of between 5 Kbps and 384 Kbps. It also supports the VBR (Variable Bit Rate) mode. No other type of file (.mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.



During play, exit the "SD-Card" or "USB" source before removing the SD card or the USB memory stick from its reader.



To avoid any risk of theft, remove the SD card or the USB memory stick when you leave your vehicle with the roof open.

07 MUSIC MEDIA PLAYERS

SELECTING/PLAYING CD, MP3/WMA CD, MP3/WMA SD CARD/ USB READER

MP3 CDs, SD cards or USB peripherals are the compatible sources.

1

Insert the audio or MP3 CD in the player, the SD card in the card reader or the USB peripheral in the USB reader. Play begins automatically.



!

The list of tracks or MP3/WMA files appears under "Media" Menu.

2



Press this button.



3



When the "MEDIA" screen is displayed, turn the ring up or down to select the previous or next compatible source.



4



Press the MEDIA button.



5



Press the MEDIA button again or select the "Media" Menu function and press OK to confirm.

"MEDIA" MENU



6



Select the "Select media" function and press OK to confirm.

SELECT MEDIA



7



Select the music source required. Press OK to confirm. Play begins.



!

The playing and displaying of an MP3/WMA compilation may depend on the recording programme and/or the parameters used. We recommend the ISO 9660 recording standard.

07 MUSIC MEDIA PLAYERS

JUKEBOX COPYING A CD, A USB STICK OR AN SD CARD ONTO THE HARD DISK

When copying is in progress, switching off the ignition will interrupt the process but it will resume directly when the ignition is switched on again.

1




Insert an audio/MP3 CD, a USB memory stick or an SD card.



!

Check that the active MEDIA source is that of the medium used (CD, USB or SD card).

2

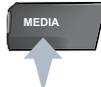

Press the MEDIA button. Press the MEDIA button again or select Media Menu and press OK to confirm.



3



Select "Jukebox management" then "Add files" and press OK at each step to confirm.

ADD FILES



4



Select "Add files from MP3-Disc" for example and press OK to validate.

ADD FILES FROM MP3-DISC



5



Select the tracks required then "Rip selection" or select all of the tracks using "Rip all".



6



Select "[New folder]" to create a new folder or select an existing folder (created previously).

[NEW FOLDER]



7



"Do you want to change the names of the tracks that will be ripped?": select "Yes" to change them or "No".

YES NO



8



To copy an MP3 CD, then select "Real time ripping", "Fast ripping"/ "High quality (192 kbit/sec)" or "Standard quality (128 kbit/sec)" then select "Start ripping".



9



Confirm the warning message by pressing "OK" to start the copy.

OK



07 MUSIC MEDIA PLAYERS

JUKEBOX RENAMING OR DELETING AN ALBUM

! Check that the active source is not the Jukebox in order to be able to rename or delete a track/folder.

1 Activate the playing of a source other than the Jukebox (CD, radio, etc...).

2  Press the MEDIA button.



3  Press the MEDIA button again or select Media Menu and press OK to confirm.



4  Select "Jukebox management" and press OK to confirm.

JUKEBOX MANAGEMENT



5  Select "Modify content" and press OK confirm.

MODIFY CONTENT



JUKEBOX LISTENING TO THE JUKEBOX

1  Press the MEDIA button. Press the MEDIA button again or select Media Menu and press OK to confirm.



2  Select "Jukebox management" and press OK to confirm.



3  Select "Play options" and press OK to confirm. Select "Folders & Files" or "Playlists" then press OK to confirm.



 Press the ESC button to return to the first file level. Playlists can be created in the Jukebox. Media Menu> Jukebox management> Create new playlist. Add the tracks required one by one then save the change. The "Playlists" play mode must then be selected.

07 MUSIC MEDIA PLAYERS


VIEWING A VIDEO DVD

- 1 Insert the DVD in the player. Play begins automatically.



- 2  If the DVD does not appear on the screen, press the MODE button to gain access to the "MEDIA" screen which displays the DVD screen.

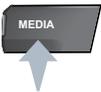

- 3  Press the MEDIA button to gain access to the DVD menu at any time, or to the functions of the Media Menu which adjust the video (brightness/contrast, image format...).




-  The 4-direction navigator and the chromed ring allow you to move the DVD selection cursor. Change chapter by pressing the ►► or ◀◀ button.

-  Select the video source required ("DVD-Video", "External device (AV)"). Press OK to confirm. Play begins.

USING AN EXTERNAL DEVICE (AUX) AUDIO/VIDEO/RCA CABLE NOT SUPPLIED

- 1 Connect the portable equipment (MP3 player, camcorder, camera...) to the RCA socket (white and red for audio; red and yellow for video) in the glove box using a JACK/RCA audio cable.

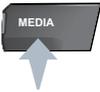- 2  Press the MEDIA button then press it again or select the "Media" Menu function and press OK to confirm.



-  If the external device is not activated, select "Ext. Device (Aux) management" to activate it.

- 3  Select "Select media" then "External device (AV)" and press OK to activate it.

EXTERNAL DEVICE



- 4  Select the AUX music source and press OK to confirm. Play begins automatically.



-  The display and management of the controls is via the portable equipment.

08 USING THE TELEPHONE

CHOOSING BETWEEN THE BLUETOOTH TELEPHONE/INTERNAL TELEPHONE

1



To activate the Bluetooth telephone or the internal telephone, press PICK UP TEL.



2



Select Phone menu, then "Select phone" then choose between "Telephone off", "Use Bluetooth phone" or "Use internal phone". Press OK at each step to confirm.



!

The system can only be connected to one Bluetooth telephone and one SIM card (Internal telephone) at the same time. In this case, the phone book is synchronised with the Bluetooth telephone.

08 USING THE TELEPHONE

CONNECTING A BLUETOOTH TELEPHONE

* The services available via the telephone depend on the network, the SIM card and the compatibility of the Bluetooth equipment used. Refer to your telephone's manual and your operator to check which services you have access to. A list of mobile telephones which offer the best range of services is available from dealers.



For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the Peugeot Connect Media must be carried out with the vehicle stationary and the ignition on.

1

Activate the telephone's Bluetooth function. The last telephone connected is reconnected automatically.



2



Press the TEL button.



3



If no telephone is connected, the system prompts you to "Connect phone". Select "Yes" and press OK to confirm.



The list of telephones connected previously (4 maximum) appears on the multifunction screen. Select the telephone required then select "Connect phone" for a new connection. Select "Delete pairing" to cancel the connection to the telephone.

4



For a first connection, select "Search phone" and press OK to confirm. Then select the name of the telephone.

SEARCH PHONE



5



Enter the authentication code on the telephone. The code to be entered is displayed on the screen.



Once the telephone has been connected, the Peugeot Connect Media can synchronise the address book and the call list. This synchronisation may take a few minutes*.

1



To change the telephone connected, press the TEL button, then select Phone menu, then "Select phone" then "Connect Bluetooth phone" then select the telephone required or "Search phone". Press OK at each step to confirm.



08 USING THE TELEPHONE

USING THE INTERNAL TELEPHONE WITH SIM CARD


If you have declined to use the internal telephone for personal calls, you can still connect a Bluetooth telephone to receive your calls on the vehicle's audio system.

1



Extract the holder by pressing the eject button.

2

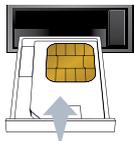

Install the SIM card in the holder and then insert it in the slot.

3

To remove the SIM card, repeat step 1.

!

For safety reasons and because they require prolonged attention on the part of the driver, the SIM card installation operations must be carried out when stationary.

1



Enter the PIN code on the keypad then select OK and confirm.

REMEMBER PIN



When entering your PIN code, tick the "Remember PIN" tab to allow use of the telephone without having to enter this code when it is used subsequently.

2



The system asks "Do you want to switch to the internal phone?", select "Yes" if you wish to use your SIM card for your personal calls. Otherwise, only the emergency call and the services will use the SIM card.



Once the SIM card has been installed, the system can synchronise the address book and the call list. This synchronisation may take a few minutes.

08 USING THE TELEPHONE

RECEIVING A CALL

1 An incoming call is announced by a ring and a superimposed display on the screen.

2 Select the "Yes" tab to accept or "No" to refuse and confirm by pressing OK.



YES NO



The PICK UP TEL button accepts, the HANG UP TEL button refuses the incoming call.

3 To hang up, press the HANG UP TEL button or press OK and select "End call" then confirm by pressing OK.



END CALL



Press the end of the steering mounted control to accept the call or end the call in progress.



MAKING A CALL

1 Press the PICK UP TEL button.



The list of the last 20 calls made and received in the vehicle appears under "Phone" menu. You can select a number and press OK to make the call.

2 Select the "Phone" menu function and press OK to confirm.



"PHONE" MENU



3 Select "Dial number", then dial the telephone number using the virtual keypad.



DIAL NUMBER



It is also possible to select a number from the address book. You can select "Dial from address book". The Peugeot Connect Media can record up to 4 096 entries.

Press the end of the steering mounted control for more than two seconds to open the address book.

09 CONFIGURATION

SETTING THE DATE AND TIME

This function provides access to the options in the SETUP menu.

Principle of the "Synchronise with GPS" (GMT):

1. Confirm the "Synchronise with GPS" selection, the time is then set to GMT universal time, the date is also updated.
 2. Using the 4-direction navigator, move the cursor to the time fields and press OK.
 3. You can then use the ring to set the time to the time zone of your choice.
- Take care when changing between summer/winter time, the time zone must be changed again manually.

! This setting operation must be carried out if the battery has been disconnected.

1  Press the SETUP button.



2  Select the "Date & Time" function and press OK to confirm.

DATE & TIME



3  Select the "Set date & time" function and press OK to confirm.

SET DATE & TIME



4  Set the parameters using the ring and move on to the next using the 4-direction navigator. Press OK to confirm.



5  Select the "Date format" function and press OK to confirm. Select the format required using the ring and press OK to confirm.



6  Select the "Time format" function and press OK to confirm. Select the format required using the ring and press OK to confirm.



 Pressing the SETUP button for more than 2 seconds permits access to:

DESCRIPTION OF THE UNIT

GPS COVERAGE

DEMO MODE

10 SCREEN MENU MAP



1 MAIN FUNCTION

- 2 CHOICE A
- 3 choice A1
- 3 choice A2
- 2 CHOICE B...

TRAFFIC

1 "TRAFFIC" MENU

2 SELECT PREFERRED LIST

- 3 Messages on route
- 3 Only warnings on route
- 3 All warning messages
- 3 All messages
- 3 Geo. Filter
 - 4 Deactivate PIN
 - 4 Within 2 miles (3 km)
 - 4 Within 3 miles (5 km)
 - 4 Within 6 miles (10 km)
 - 4 Within 30 miles (50 km)

2 READ OUT SETTINGS

- 3 On confirmation
- 3 Incoming messages

2 TMC STATION INFORMATION

MEDIA

1 "MEDIA" MENU

2 SELECT MEDIA

- 3 Audio CD/MP3-Disc/DVD-Audio/DVD-Video
- 3 Jukebox (Folders & Files)
- 3 SD-Card
- 3 USB
- 3 External device (audio/AV)

2 JUKEBOX MANAGEMENT

- 3 Add files
- 3 Create folder
- 3 Modify content
- 3 Edit playlist
- 3 Play options
 - 4 Folders & Files
 - 4 Playlists
- 3 Memory capacity

2 SOUND SETTINGS

- 3 Refer to the "Sound settings" menu details of which are shown on the next page.

2 VIDEO SETTINGS

- 3 Aspect ratio
- 3 Menu language
- 3 Display
 - 4 Brightness
 - 4 Contrast
 - 4 Colour
- 3 AUX standard
- 3 Reset video settings
- 2 EXT. DEVICE (AUX) MANAGEMENT
 - 3 Off/Audio/Audio and Video (AV)



1 "RADIO" MENU

2 WAVEBAND

3 FM

3 AM

2 MANUAL TUNE

2 SOUND SETTINGS

3 Refer to the "Sound settings" menu below.

1 "SOUND SETTINGS" MENU

2 BALANCE/FADER

2 BASS/TREBLE

2 EQUALIZER

3 Linear

3 Classic

3 Jazz

3 Rock/Pop

3 Techno

3 Vocal

2 MUTE REAR SPEAKERS

2 LOUDNESS

2 SPEED DEPENDENT VOLUME

2 RESET SOUND SETTINGS



1 "NAVIGATION" MENU

2 ABORT GUIDANCE/RESUME GUIDANCE

2 DESTINATION INPUT

3 Address input

4 Country

4 City

4 Street

4 House number

4 Start route guidance

4 Postal code

4 Save to address book

4 Intersection

4 City district

4 Geo position

4 MAP

3 Navigate HOME

3 Choose from last destinations

3 Choose from address book

2 STOPOVERS

3 Add stopover

4 Address input

4 Navigate HOME

4 Choose from address book

4 Choose from last destinations

3 Rearrange route

3 Replace stopover

3 Delete stopover

3 Recalculate

4 Fast route

4 Short route

4 Optimized route

2 POI SEARCH

3 POI nearby

3 POI near destination

3 POI in city

3 POI in country

3 POI near route

2 ROUTE OPTIONS

3 Route type

4 POI near destination

4 Short route

4 Optimized route

4 Subscr. service

2 **SETTINGS**

3 **Route dynamics**

4 Traffic independent

4 Semi-dynamic

4 Dynamic

3 **Avoidance criteria**

4 Avoid motorways

4 Avoid toll roads

4 Avoid tunnels

4 Avoid ferries

3 **Recalculate**



1 **"ADDRESS BOOK" MENU**

2 **CREATE NEW ENTRY**

2 **SHOW MEMORY STATUS**

2 **EXPORT ADDRESS BOOK**

2 **DELETE ALL VOICE ENTRIES**

2 **DELETE ALL ENTRIES**

2 **DELETE FOLDER "MY ADDRESSES"**



1 **"PHONE" MENU**

2 **DIAL NUMBER**

2 **DIAL FROM ADDRESS BOOK**

2 **CALL LISTS**

2 **MESSAGES**

2 **SELECT PHONE**

3 **Telephone off**

3 **Use Bluetooth phone**

3 **Use internal phone**

3 **Connect Bluetooth phone**

4 search phone

5 Disconnect phone

5 Rename phone

5 Delete pairing

5 Delete all pairings

5 Show details

2 **SETTINGS**

3 **Automatic answering system**

3 **Select ring tone**

3 **Phone/Ring tone volume**

3 **Enter mailbox number**

3 **Internal phone settings**

3 **Automatically accept call**

3 **Signal waiting call (?)**

3 **Show status**

3 **Activate waiting call**

3 **Deactivate waiting call**

3 **Call forward (?)**

3 **Show status**

3 **Activate call forward**

3 **Deactivate call forward**

3 **Suppress own number**

3 **Select network**

3 **Set network automatically**

3 **Set network manually**

3 **Search for networks**

3 **PIN settings**

3 **Change PIN**

4 **Activate PIN**

4 **Deactivate PIN**

3 **Remember PIN**

3 **SIM-card memory status**



1 "SETUP" MENU

2 LANGUAGE & SPEECH

3 Menu language

4 Deutsch

4 English

4 Español

4 Français

4 Italiano

4 Nederlands

4 Polski

4 Portuguese

3 Voice control

4 Voice control active

4 Tutorial

5 Basics

5 Examples

5 Tips

4 Speaker adaptation

5 New speaker adaptation

5 Delete speaker adaptation

3 Voice output volume

3

2 DATE & TIME

3 Set date & time

3 Date format

3 Time format

2 DISPLAY

3 Brightness

3 Colour

4 Steel

4 Blue light (only in day mode)

4 Orange Ray

4 Blue Flame

3 MAP colour

4 Day mode for MAP

4 Night mode for MAP

4 Auto. Day/Night for MAP

2 UNITS

3 Temperature

4 Celsius

4 Fahrenheit

3 Metric/Imperial

4 km

4 Miles

2 SYSTEM

3 Factory reset

3 Software version

3 Automatic scrolling

FREQUENTLY ASKED QUESTIONS

The table below groups together the answers to the most frequently asked questions concerning the Peugeot Connect Media.


QUESTION	ANSWER	SOLUTION
<p>There is a difference in sound quality between the different audio sources (radio, CD...).</p>	<p>For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).</p>	<p>Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "Linear" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.</p>
<p>The CD is ejected automatically or is not played by the player.</p>	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.</p> <p>The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.</p>	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the "Audio" section. - The audio equipment's CD player does not play DVDs. - Due to inadequate quality, certain recorded CDs will not be played by the audio system.
<p>The CD player sound is poor.</p>	<p>The CD used is scratched or of poor quality.</p>	<p>Insert good quality CDs and store them in suitable conditions.</p>
	<p>The audio equipment settings (bass, treble, ambiences) are unsuitable.</p>	<p>Set the treble or bass level to 0, without selecting an ambience.</p>

QUESTION	ANSWER	SOLUTION
<p>The stored stations do not function (no sound, 87.5 Mhz is displayed...)</p>	<p>An incorrect waveband is selected.</p>	<p>Press RADIO, select Radio Menu then "Waveband" to return to the waveband on which the stations are stored.</p>
<p>The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).</p>	<p>The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.</p>	<p>Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.</p>
	<p>The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.</p>	<p>This phenomenon is normal and does not indicate a failure of the audio equipment.</p>
	<p>The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).</p>	<p>Have the aerial checked by a PEUGEOT dealer.</p>
<p>Sound cut-outs of 1 to 2 seconds in radio mode.</p>	<p>During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.</p>	<p>Deactivate the "RDS" function by means of the short-cut menu if the phenomenon is too frequent and always on the same route.</p>
<p>With the engine off, the system switches off after a few minutes of use.</p>	<p>When the engine is switched off, the system's operating time depends on the battery charge.</p> <p>The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.</p>	<p>Start the vehicle's engine to increase the battery charge.</p>

QUESTION	ANSWER	SOLUTION
<p>The "TA" box is ticked. However, certain traffic jams along the route are not indicated in real time.</p>	<p>On starting, it is several minutes before the system begins to receive the traffic information.</p>	<p>Wait until the traffic information is being received correctly (displaying of the traffic information symbols on the map).</p>
	<p>In certain countries, only major routes (motorways...) are listed for the traffic information.</p>	<p>This phenomenon is normal. The system is dependent on the traffic information available.</p>
<p>The time taken to calculate a route sometimes seems longer than usual.</p>	<p>The performance of the system may slow down temporarily if a CD/DVD is being copied onto the Jukebox at the same time as a route is being calculated.</p>	<p>Wait until the CD/DVD has been copied or stop the copying before starting the guidance function.</p>
<p>I receive a speed camera alert for a speed camera which is not on my route.</p>	<p>The system announces all speed cameras positioned in a cone located in front of the vehicle. It may detect speed cameras located on nearby or parallel roads.</p>	<p>Zoom in on the map to view the exact position of the speed camera.</p>
<p>The speed camera audible warning does not work.</p>	<p>The audible warning is not active.</p>	<p>Activate the audible warning on Navigation Menu, Settings, Set parameters for risk areas.</p>
	<p>The alert volume is set to minimum.</p>	<p>Increase the volume of the alert when passing a speed camera.</p>
<p>Does the emergency call function work without a SIM card?</p>	<p>No, as certain national regulations impose the presence of a SIM card in order to make an emergency call.</p>	<p>Insert a valid SIM card in the slot.</p>
<p>The altitude is not displayed.</p>	<p>On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.</p>	<p>Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the SETUP button, then select "GPS coverage").</p>
	<p>Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.</p>	<p>This phenomenon is normal. The system is dependent on the conditions of reception of the GPS signal.</p>

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The exclusion criteria may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the exclusion criteria on the Navigation Menu ("Route options" - "Avoidance criteria").
There is a long waiting period following the insertion of a CD.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take a few seconds.	This phenomenon is normal.
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the equipment may not be visible.	<ul style="list-style-type: none"> - Check that your telephone's Bluetooth function is switched on. - Check that your telephone is visible.
	The Bluetooth telephone is not compatible with the system.	A list of compatible Bluetooth mobile telephones is available from the dealer network.
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the Peugeot Connect Media, to maximum if required, and increase the volume of the telephone if necessary.
The system does not play the DVD.	The region protection may not be compatible.	Insert DVDs which have compatible region protection.
I cannot copy the CD to the Jukebox.	The wrong source is selected.	Change the active source to CD.
	The CD is copy-protected.	It is normal that a protected CD cannot be copied.

QUESTION	ANSWER	SOLUTION
<p>The system does not receive SMS.</p>	<p>The Bluetooth mode does not permit sending of the SMS to the system.</p>	<p>Use your SIM card and the internal telephone.</p>
	<p>The SIM card used is a twin card.</p>	<p>Use the original SIM card to receive the SMS.</p>
<p>I cannot update the hazardous location POIs.</p>	<p>The Navigation Menu - "Update personal POI" is not displayed.</p>	<p>Check that the medium used for the update (SD card or USB stick) is inserted correctly.</p>
	<p>An error message is displayed at the end of the procedure.</p>	<ul style="list-style-type: none"> - Start the procedure again in full. - Consult a PEUGEOT dealer if the problem persists. - Check that the data on the MEDIUM is supplied by an official partner of PEUGEOT.
<p>The voice frequencies (DTMF) are not active when I am communicating and I press numbers on the keypad.</p>	<p>The numeric buttons on the keypad are only active for calls if the display is in telephone mode.</p>	<p>To activate them, press the MODE button until the telephone is displayed on the screen.</p>
<p>An accident area which does not concern me is displayed on the screen.</p>	<p>The accident areas are displayed near a point defined on the map and in relation to a direction of travel.</p>	<p>The alert may be triggered when travelling under a road or near a road which has a speed camera.</p>

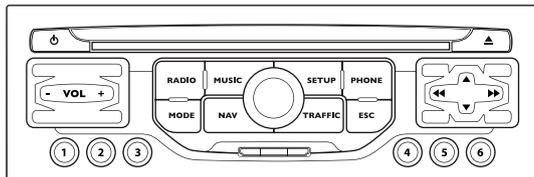

Peugeot Connect Navigation

MULTIMEDIA AUDIO EQUIPMENT/BLUETOOTH TELEPHONE
GPS EUROPE BY SD CARD



The Peugeot Connect Navigation is protected in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact a PEUGEOT dealer for configuration of the system.



For safety reasons, it is imperative that the driver carries out operations which require prolonged attention while the vehicle is stationary. When the engine is switched off and to prevent discharging of the battery, the Peugeot Connect Navigation switches off following the activation of the Energy Economy mode.




Certain functions described in this handbook will become available during the year.

CONTENTS

- **01 First steps** p.244
- **02 Steering mounted controls** p.245
- **03 General operation** p.246
- **04 Navigation - Guidance** p.248
- **05 Traffic information** p.255
- **06 Radio** p.257
- **07 Music media players** p.258
- **08 Bluetooth telephone** p.261
- **09 Configuration** p.263
- **10 Trip computer/vehicle parameter** p.264
- **11 Screen menu map** p.265
- **Frequently asked questions** p.268

01 FIRST STEPS

Peugeot Connect Navigation CONTROL PANEL

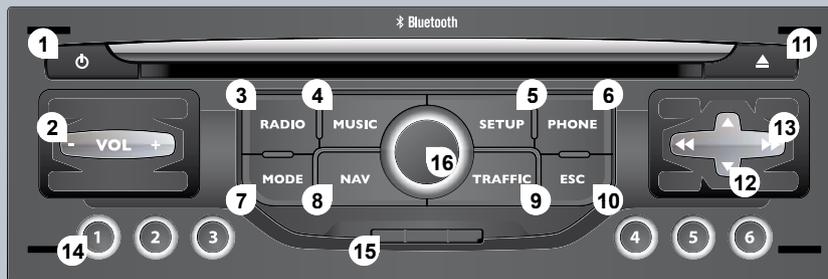

1. Engine not running
 - Short press: on/off.
 - Long press: CD pause, mute for the radio.Engine running
 - Short press: CD pause, mute for the radio.
 - Long press: reinitialisation of the system.
2. Volume adjustment (each source is independent, including navigation messages and alerts).
3. Access to the "Radio" Menu. Display the list of stations.
4. Access to the "Music" Menu. Display the tracks.
- 3-4. Long press: access to the audio settings: front/rear and left/right balance, bass/treble, equalizer, loudness, automatic volume adjustment, initialise the settings.
5. Access to the "SETUP" Menu.
Long press: access to the GPS coverage and the demonstration mode.
6. Access to the "Phone" Menu. Display the call list.
7. Access to the "MODE" Menu.
Selection of the successive display of:
Radio, Map, NAV (if navigation is in progress), Telephone (if a conversation is in progress), Trip Computer.
Long press: display of a black screen (DARK).
8. Access to the "Navigation" Menu. Display the last destinations.
9. Access to the "Traffic" Menu. Display the current traffic alerts.
10. ESC: abandon the operation in progress.
11. CD eject.
12. Selection of the previous/next radio station from the list.
Selection of the previous/next CD.
Selection of the previous/next MP3 directory.
Selection of the previous/next page of a list.
13. Selection of the previous/next radio station.
Selection of the previous/next CD or MP3 track.
Selection of the previous/next line of a list.
14. Buttons 1 to 6:
Selection of the stored radio station.
Selection of the CD in the CD changer.
Long press: store the current radio station.
15. Reader for navigation SD card only.
16. Dial for selection of the screen display and according to the context of the menu.
Short press: contextual menu or confirmation.
Long press: specific contextual menu of the list displayed.

02 STEERING MOUNTED CONTROLS

RADIO: selection of the next stored station.
CD CHANGER: selection of the next CD.
Selection of the next entry in the address book.

RADIO: selection of the previous stored station.
CD CHANGER: selection of the previous CD.
Selection of the previous entry in the address book.

RADIO: change to the next radio station on the list.
Long press: automatic search for a higher frequency.
CD/CD CHANGER: selection of the next track.
CD/CD CHANGER: continuous press: fast forward play.

Volume increase.

- Change the sound source.
- Make a call from the address book.
- Pick up/Hang up the telephone.
- Press for more than 2 seconds: access to the address book.

Volume decrease.

Mute: by pressing the volume increase and decrease buttons simultaneously.


Restore the sound: by pressing one of the two volume buttons.

RADIO: change to the previous radio station on the list.
Long press: automatic search for a lower frequency.
CD/CD CHANGER: selection of the previous track.
CD/CD CHANGER: continuous press: fast backward play.

03 GENERAL OPERATION

Press the MODE button several times in succession for access to the following menus:

RADIO/MUSIC MEDIA PLAYERS

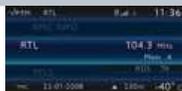


TELEPHONE

(If a conversation is in progress)



TRIP COMPUTER

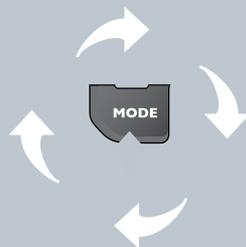

FULL SCREEN MAP



NAVIGATION

(If guidance is in progress)



SETUP:

system language*, date and time*, display, vehicle settings*, unit and system settings, "Demo mode".

* Available according to model.



TRAFFIC:

TMC information and messages.



For cleaning the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, with no additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section.

03 GENERAL OPERATION

DISPLAY ACCORDING TO THE CONTEXT



A press on the OK dial gives access to short-cut menus according to the display on the screen.

NAVIGATION (IF GUIDANCE IS IN PROGRESS):

- 1 ABORT GUIDANCE
- 1 REPEAT ADVICE
- 1 BLOCK ROAD
- 1 ROUTE INFO
- 2 SHOW DESTINATION
- 2 TRIP INFO
- 3 Route type
- 3 Avoid
- 3 Satellites
- 1 ZOOM/SCROLL
- 1 VOICE ADVICE
- 1 ROUTE OPTIONS

TELEPHONE:

- 1 END CALL
- 1 HOLD CALL
- 1 DIAL
- 1 DTMF-TONES
- 1 PRIVATE MODE
- 1 MICRO OFF

MUSIC MEDIA PLAYERS:

- 1 TRAFFIC INFO (TA)
- 1 PLAY OPTIONS
- 2 NORMAL ORDER
- 2 RANDOM TRACK
- 2 REPEAT FOLDER
- 2 SCAN
- 1 SELECT MUSIC

RADIO:

- 1 IN FM MODE
- 2 TRAFFIC INFO (TA)
- 2 RDS
- 2 RADIOTEXT
- 2 REGIONAL PROG.
- 2 AM
- 1 IN AM MODE
- 2 TA
- 2 REFRESH AM LIST
- 2 FM

FULL SCREEN MAP:

- 1 ABORT GUIDANCE/RESUME GUIDANCE
- 1 SET DESTINATION
- 1 POIS NEARBY
- 1 POSITION INFO
- 1 MAP SETTINGS
- 1 ZOOM/SCROLL

04 NAVIGATION - GUIDANCE

SELECTING A DESTINATION

Insert the SD card in the front panel reader and leave it there to use the Navigation functions. The navigation SD card data must not be modified. Map data updates are available from PEUGEOT dealers.

1



Press the NAV button.



4



Select the "Address input" function and press the dial to confirm.

ADDRESS INPUT



The list of the last 20 destinations appears under the Navigation Menu function.

2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

NAVIGATION MENU



5



Once the country has been selected, turn the dial and select the town function. Press the dial to confirm.



6



Select the letters of the town one by one confirming each time by pressing the dial.



A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed via the LIST button on the virtual keypad.

04 NAVIGATION - GUIDANCE

To clear a destination; from steps 1 to 3, select "Choose from last destinations". A long press on one of the destinations displays a list of actions from which you can select:
Delete entry
Delete list

7



Turn the dial and select OK.
Press the dial to confirm.



To speed up the process, the post code can be entered directly after selecting the "Postal code" function.
Use the virtual keypad to enter the letters and digits.

8



Repeat steps 5 to 7 for the "Street" and "House number" functions.



Select the "Save to address book" function to record the address entered in a directory file. Press the dial to confirm the selection. Peugeot Connect Navigation allows up to 4 000 contact files to be recorded.

9



During guidance, pressing the end of the lighting stalk repeats the last guidance instruction.




10



Then select "Start route guidance" and press the dial to confirm.

START ROUTE GUIDANCE

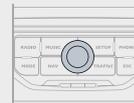

Select the route type: "Fast route", "Short route" or "Optimized route" and press the dial to confirm.
It is also possible to select a destination via "Choose from address book" or "Choose from last destinations".

CHOOSE FROM ADDRESS BOOK

CHOOSE FROM LAST DESTINATIONS



You can zoom in/zoom out on the map using the dial.
It is possible to scroll the map or select its orientation via the short-cut menu of the FULL SCREEN MAP. Press the dial then select "Map settings".

04 NAVIGATION - GUIDANCE

ROUTE OPTIONS


The route selected by the Peugeot Connect Navigation audio/telephone depends directly on the route options.

Changing these options may change the route completely.

1



Press the NAV button.

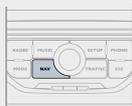

2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

NAVIGATION MENU



3



Select the "Route options" function and press the dial to confirm.

ROUTE OPTIONS



4



Select the "Route type" function and press the dial to confirm. This function allows you to change the route type.

ROUTE TYPE



5



Select the "Route dynamics" function. This function gives access to the "Traffic independent" or "Semi-dynamic" options.

ROUTE DYNAMICS



6



Select the "Avoidance criteria" function. This function provides access to the AVOID options (motorways, toll roads, ferries).

AVOIDANCE CRITERIA



7



Turn the dial and select the "Recalculate" function to take into account the route options selected. Press the dial to confirm.

RECALCULATE



04 NAVIGATION - GUIDANCE


ADDING A STOPOVER

Stopovers can be added to the route once the destination has been selected.

1



Press the NAV button.

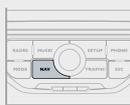

2



Press the NAV button again or select the "Navigation" Menu function and press the dial to confirm.

"NAVIGATION" MENU



3



Select the "Stopovers" function and press the dial to confirm.

STOPOVERS



4



Select the "Add stopover" function (5 stopovers maximum) and press the dial to confirm.

ADD STOPOVER




5



Enter a new address, for example.

ADDRESS INPUT

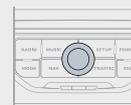

6



Once the new address has been entered, select OK and press the dial to confirm.

OK



7



Select "Recalculate" and press the dial to confirm.

RECALCULATE




The stopover must be completed or deleted in order for the guidance to continue to the next destination. Otherwise, the Peugeot Connect Navigation will always return you to the previous stopover.

04 NAVIGATION - GUIDANCE

SEARCHING FOR POINTS OF INTEREST (POI)

The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

1 Press the NAV button.

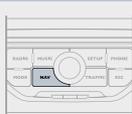

2 Press the NAV button again or select the Navigation Menu function and press the dial to confirm.



NAVIGATION MENU



3 Select the "POI search" function and press the dial to confirm.



POI SEARCH



4 Select the "POI nearby" function to search for POIs around the vehicle.



POI NEARBY



5 Select the "POI near destination" function to search for POIs near the point of arrival of the route.



POI NEAR DESTINATION



6 Select the "POI in city" function to search for POIs in the city required. Select the country then enter the name of the city using the virtual keypad.



POI IN CITY



A list of cities present in the country selected can be accessed via the LIST button on the virtual keypad.

7 Select the "POI in country" function to search for POIs in the country required.



POI IN COUNTRY



8 Select the "POI near route" function to search for POIs near the route.



POI NEAR ROUTE



04 NAVIGATION - GUIDANCE

LIST OF PRINCIPAL POINTS OF INTEREST (POI)

-  Service station
-  LPG station
-  Garage
-  PEUGEOT
-  Motor racing circuit
-  Covered car park
-  Car park
-  Rest area
-  Hotel
-  Restaurant
-  Refreshment area
-  Picnic area
-  Cafeteria

-  Airport
-  Railway station
-  Bus station
-  Port
-  Industrial estate
-  Supermarket
-  Bank
-  Vending machine
-  Tennis court
-  Swimming pool
-  Golf course
-  Winter sports resort
-  Theatre



This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.

-  Cinema
-  Camp site
-  Theme parks
-  Hospital
-  Pharmacy
-  Police station
-  School
-  Post office
-  Museum
-  Tourist information
-  Automatic speed camera*
-  Red light camera*
-  Risk area*

* According to availability in the country.


04 NAVIGATION - GUIDANCE

NAVIGATION SETTINGS

1



Press the NAV button.

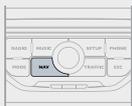

2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

NAVIGATION MENU



3



Select the "Settings" function and press the dial to confirm.

SETTINGS



4



Select the "Navi volume" function and turn the dial to set the volume of each voice synthesiser (traffic information, alert messages...).

NAVI VOLUME



The volume of the Risk Areas POIs alert can only be adjusted during this type of alert.

5



Select the "POI categories on Map" function to select the POIs to be displayed on the map by default.

POI CATEGORIES ON MAP




6



Select "Set parameters for risk areas" to gain access to the "Display on map", "Visual alert" and "Sound alert" functions.

SET PARAMETERS FOR RISK AREAS

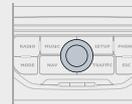

i

UPDATING THE RISK AREAS POIS

This requires an SDHC (High Capacity) compatible reader. Download the update file from the Internet (www.peugeot.fr or www.peugeot.co.uk).

Open this file and copy the extracted documents to the DATABASE folder on the SD card, replacing the existing files.

05 TRAFFIC INFORMATION

CONFIGURE THE FILTERING AND DISPLAY OF TMC MESSAGES


TMC (Traffic Message Channel) messages contain information on traffic and weather conditions, received in real time and transmitted to the driver in the form of audible announcements and symbols on the navigation map.

The navigation system can then suggest an alternative route to avoid a traffic problem.

1



Press the TRAFFIC button.

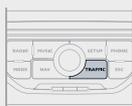

The list of TMC messages appears under the Traffic Menu sorted in order of proximity.

2



Press the TRAFFIC button again or select the Traffic Menu function and press the dial to confirm.

TRAFFIC MENU



3



Select the filter of your choice:

MESSAGES ON ROUTE

ALL WARNING MESSAGES

ONLY WARNINGS ON ROUTE

ALL MESSAGES

The messages appear on the map and on the list.
To exit, press ESC.



4



Select the "Geo. Filter" function and press the dial to confirm.

GEO. FILTER



5



Then select the radius of the filter in miles (km) required in accordance with the route, press the dial to confirm.
When all of the messages on the route are selected, the addition of a geographical filter is recommended (within a radius of 3 miles (5 km) for example) to reduce the number of messages displayed on the map.
The geographical filter follows the movement of the vehicle.



The filters are independent and their results are cumulative.
We recommend a filter on the route and a filter around the vehicle of:

- 2 miles (3 km) or 3 miles (5 km) for a region with heavy traffic,
- 6 miles (10 km) for a region with normal traffic,
- 30 miles (50 km) for long journeys (motorway).

05 TRAFFIC INFORMATION

PRINCIPAL TMC SYMBOLS

1 Black and blue triangle: general information, for example:




2 Red and yellow triangle: traffic information, par example:




RECEIVING TA MESSAGES

i The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, Jukebox, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1  With the current audio source displayed on the screen, press the dial.

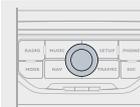

2 The shortcut menu for the source appears and gives access to:

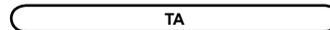

3  Select Traffic Announcements (TA) and press the dial to confirm and go to the associated settings.



06 RADIO


The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS following mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a failure of the audio equipment.

SELECTING A STATION

1



Press the RADIO button to display the list of stations received locally sorted in alphabetical order. Select the station required by turning the dial and press to confirm.

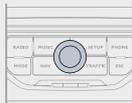

While listening to the radio, press one of the buttons to select the previous or next station on the list.



A long press of one of the buttons starts the automatic search for a station with a lower or higher frequency.



Press one of the buttons on the numeric keypad for more than 2 seconds to store the current station. Press the button on the numeric keypad to recall the stored radio station.

RDS - REGIONAL MODE

1




When the current radio station is displayed on the screen, press the dial.



2


The radio source short-cuts menu appears and provides access to the following short-cuts:

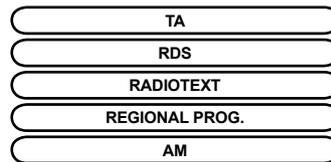

3



Select the function required and press the dial to confirm to gain access to the corresponding settings.

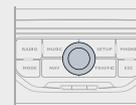

RDS, if displayed, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

07 MUSIC MEDIA PLAYERS

CD, MP3/WMA CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1, 2 & 2.5 Audio Layer 3 and the WMA format, an abbreviation of Windows Media Audio and the property of Microsoft, are audio compression standards which permit the recording of several tens of music files on a single disc.



The Peugeot Connect Navigation will only play audio files with the extension ".mp3" with a speed of between 8 Kbps and 320 Kbps and the extension ".wma" with a speed of between 5 Kbps and 384 Kbps. It also supports the VBR (Variable Bit Rate) mode. No other type of file (.mp4, .m3u...) can be played.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.
If the disc is recorded in another format it may not be played correctly.
It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.
In the particular case of a multi-session CD, the Joliet standard is recommended.



It is advisable to restrict file names to 20 characters, without using special characters (e.g.: " " ? ; ù) to avoid any play or display problems.

07 MUSIC MEDIA PLAYERS

SELECTING/PLAYING MUSIC CD, MP3/WMA CD

1



Press the MUSIC button.



4



Select the music source required:
CD, MP3/WMA CD. Press the dial to
confirm. Play begins.




!

The list of tracks or MP3/WMA files appears under "Music" Menu.

5



Press the up or down button to select
the next/previous folder.

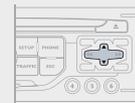

2



Press the MUSIC button again or
select the "Music" Menu function and
press the dial to confirm.


"MUSIC" MENU



6



Press one of the buttons to select a
music track.
Press and hold one of the buttons for
fast forward or rewind play.

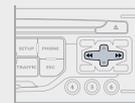

3



Select the "Select music" function and
press the dial to confirm.

SELECT MUSIC




The playing and displaying of an MP3/WMA compilation may
depend on the recording programme and/or the settings used.
We recommend the ISO 9660 file standard.

07 MUSIC MEDIA PLAYERS

USING THE EXTERNAL INPUT (AUX) JACK/USB AUDIO CABLE NOT SUPPLIED

1

Connect the portable equipment (MP3/WMA player...) to the JACK audio socket or to the USB port, using a suitable audio cable.

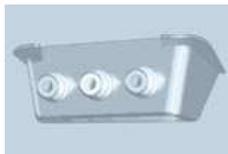

2



Press the MUSIC button then press it again or select the Music Menu function and press the dial to confirm.

MUSIC MENU



3



Select the "External device" function and press the dial to activate it.

EXTERNAL DEVICE



4



Select the AUX music source and press the dial to confirm. Play begins automatically.




The display and management of the controls is via the portable equipment.

CD CHANGER PLAYING A CD (NOT MP3/WMA COMPATIBLE)

1



Insert one or more CDs in the changer. Press the MUSIC button.

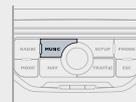

2



Press the MUSIC button again or select the Music Menu function and press the dial to confirm.

MUSIC MENU



3



Select the "Select music" function and press the dial to confirm.

SELECT MUSIC



4



Select the "CD Changer" music source and press the dial to confirm.

CD CHANGER



5



Press one of the buttons on the numeric keypad to select the corresponding CD.



08 BLUETOOTH TELEPHONE



CONNECTING A TELEPHONE

* The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you. A list of mobile telephones with the best level of compatibility is available from the dealer network.

! For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the Peugeot Connect Navigation must be carried out with the vehicle stationary. The ignition must be on.

1 Activate the telephone's Bluetooth function. The last telephone connected is reconnected automatically.




2  Press the PHONE button.



The list of telephones connected previously (4 maximum) appears on the multifunction screen. Select the telephone required for a new connection.

3  For a first connection, select "Search phone" and press the dial to confirm. Then select the name of the telephone.

SEARCH PHONE

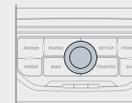


4  Enter the authentication code on the telephone. The code to be entered is displayed on the screen.



i Once the telephone has been connected, Peugeot Connect Navigation can synchronise the address book and the call list. This synchronisation may take a few minutes*.

1  To change the telephone connected, press the PHONE button, then select Phone Menu and press the dial to confirm.

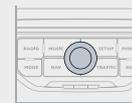

2  Select "Connect phone". Select the telephone and press to confirm.

CONNECT PHONE



08 BLUETOOTH TELEPHONE

RECEIVING A CALL

1 An incoming call is announced by a ring and a superimposed display on the multifunction screen.

2 Select the "Yes" tab to accept or "No" to refuse and confirm by pressing the dial.



YES NO



3 To hang up, press the PHONE button or press the dial and select "End call" then confirm by pressing the dial.




END CALL



Press the end of the steering mounted control to accept the call or end the call in progress.

MAKING A CALL

1 Press the PHONE button.

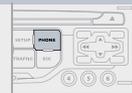

The list of the last 20 calls made and received in the vehicle appears under "Phone" Menu. You can select a number and press the dial to make the call.

2 Select the "Phone" Menu function and press the dial to confirm.



"PHONE" MENU

Select "Dial number", then dial the telephone number using the virtual keypad.

DIAL NUMBER



It is also possible to select a number from the address book. You can select "Dial from address book". The Peugeot Connect Navigation can record up to 4 000 entries. Press the end of the steering mounted control for more than two seconds to gain access to the address book.



To delete a number, press the PHONE button then press and hold on a call number to display a list of actions including:
Delete entry
Delete list


09 CONFIGURATION

SETTING THE DATE AND TIME

The SETUP function gives access to the following options: System language, Date & Time, Display (Brightness, Colour, Map colour), Vehicle, Units, System.

! These settings must be re-entered if the battery has been disconnected.

1 Press the SET UP button.

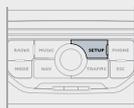

2 Select the "Date & Time" function and press the dial to confirm.



DATE & TIME



3 Select the "Set date & time" function and press the dial to confirm.



SET DATE & TIME




4 Set the parameters one by one using the direction arrows and confirm by means of the dial.



5



Select the "Date format" function and press the dial to confirm.

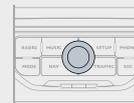

6



Confirm the format required using the dial.
Select the "Time format" function and press the dial to confirm.



Confirm the format required using the dial.
Pressing the SET UP button for more than 2 seconds gives access to:

DESCRIPTION OF THE UNIT

GPS COVERAGE

DEMO MODE

10 TRIP COMPUTER/VEHICLE PARAMETERS

TRIP COMPUTER

1

Press the MAIN button or press the MODE button several times in succession until the trip computer is displayed.



- The "vehicle" tab:
The range, the current fuel consumption and the distance remaining.
- The "1" (trip 1) tab with :
The average speed, the average fuel consumption and the distance travelled calculated over route "1".
- The "2" (trip 2) tab with the same functions for a second route.



Each press of the button at the end of the wiper stalk displays the different trip computer information in succession, according to the screen.

A FEW DEFINITIONS

i

Range: displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average fuel consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a PEUGEOT dealer.

Current fuel consumption: only calculated and displayed above 20 mph (30 km/h).

Average fuel consumption: this is the average fuel consumption since the last trip computer zero reset.

Distance travelled: calculated since the last trip computer zero reset.

Distance remaining to the destination: calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

Average speed: this is the average speed calculated since the last trip computer zero reset (ignition on).

11 SCREEN MENU MAP



1 MAIN FUNCTION

- 2 CHOICE A
- 3 choice A1
- 3 choice A2
- 2 CHOICE B...



1 "TRAFFIC" MENU

- 2 MESSAGES ON ROUTE
- 2 ONLY WARNINGS ON ROUTE
- 2 ALL WARNING MESSAGES
- 2 ALL MESSAGES
- 2 GEO. FILTER
 - 3 Within 2 miles (3 km)
 - 3 Within 3 miles (5 km)
 - 3 Within 6 miles (10 km)
 - 3 Within 30 miles (50 km)
 - 3 Within 60 miles (100 km)



1 "MUSIC" MENU

- 2 SELECT MUSIC
- 2 SOUND SETTINGS
 - 3 Balance/Fader
 - 3 Bass/Treble
 - 3 Equalizer
 - 4 Linear
 - 4 Classic
 - 4 Jazz
 - 4 Rock/Pop
 - 4 Techno
 - 4 Vocal
 - 3 Loudness
- 3 Speed dependent volume
- 3 Reset sound settings



1 "RADIO" MENU

- 2 WAVEBAND
 - 3 FM
 - 3 AM
- 2 MANUAL TUNE
- 2 SOUND SETTINGS
 - 3 Balance/Fader
 - 3 Bass/Treble
 - 3 Equalizer
 - 4 Linear
 - 4 Classic
 - 4 Jazz
 - 4 Rock/Pop
 - 4 Techno
 - 4 Vocal
 - 3 Loudness
- 3 Speed dependent volume
- 3 Reset sound settings



1 "NAVIGATION" MENU

2 **ABORT GUIDANCE/RESUME GUIDANCE**

2 **DESTINATION INPUT**

3 **Address input**

4 Country

4 City

4 Street

4 House number

4 Start route guidance

4 Postal code

4 Save to address book

4 Intersection

4 City district

4 Geo position

4 MAP

3 **Navigate HOME**

3 **Choose from address book**

3 **Choose from last destinations**

3 **TMC station information**

2 **STOPOVERS**

3 **Add stopover**

4 Address input

4 Navigate HOME

4 Choose from address book

4 Choose from last destinations

3 **Rearrange route**

3 **Replace stopover**

3 **Delete stopover**

3 **Recalculate**

4 Fast route

4 Short route

4 Optimized route

2 **POI SEARCH**

3 **POI nearby**

3 **POI near destination**

3 **POI in city**

3 **POI in country**

3 **POI near route**

2 **ROUTE OPTIONS**

3 **Route type**

4 Fast route

4 Short route

4 Optimized route

3 **Route dynamics**

4 Traffic independent

4 Semi-dynamic

3 **Avoidance criteria**

4 Avoid motorways

4 Avoid toll roads

4 Avoid ferries

3 **Recalculate**

2 **SETTINGS**

3 **Navi volume**

3 **POI categories on MAP**

3 **Set parameters for risk areas**

4 Display on MAP

4 Visual alert

4 Sound alert



- 1 **"PHONE" MENU**
- 2 **DIAL NUMBER**
- 2 **DIAL FROM ADDRESS BOOK**
- 2 **CALL LISTS**
- 2 **CONNECT PHONE**
 - 3 **Search phone**
 - 3 **Phones connected**
 - 4 Disconnect phone
 - 4 Rename phone
 - 4 Delete pairing
 - 4 Delete all pairings
 - 4 Show details
- 2 **SETTINGS**
 - 3 **Select ring tone**
 - 3 **Phone/Ring tone volume**
 - 3 **Enter mailbox number**



- 1 **"SETUP" MENU**
- 2 **SYSTEM LANGUAGE***
 - 3 **Deutsch**
 - 3 **English**
 - 3 **Español**
 - 3 **Français**
 - 3 **Italiano**
 - 3 **Nederlands**
 - 3 **Polski**
 - 3 **Portuguese**
- 2 **DATE & TIME***
 - 3 **Set date & time**
 - 3 **Date format**
 - 3 **Time format**
- 2 **DISPLAY**
 - 3 **Brightness**
 - 3 **Colour**
 - 4 Pop titanium
 - 4 Toffee
 - 4 Blue steel
 - 4 Technogrey

- 4 **Dark blue**
- 3 **MAP colour**
 - 4 Day mode for MAP
 - 4 Night mode for MAP
 - 4 Auto. Day/Night for MAP
- 2 **VEHICLE***
 - 3 **Vehicle information**
 - 4 Alert log
 - 4 Status of functions
- 2 **UNITS**
 - 3 **Temperature**
 - 4 Celsius
 - 4 Fahrenheit
 - 3 **Metric/Imperial**
 - 4 Kilometres (Consumption: l/100)
 - 4 Kilometres (Consumption: km/l)
 - 4 Miles (Consumption: MPG)
- 2 **SYSTEM**
 - 3 **Factory reset**
 - 3 **Software version**
 - 3 **Automatic scrolling**

* Available according to model.


FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
<p>There is a difference in sound quality between the different audio sources (radio, CD...).</p>	<p>For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).</p>	<p>Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the Linear musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.</p>
<p>The CD is ejected automatically or is not played by the player.</p>	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.</p> <p>The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.</p>	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the Audio section. - The audio equipment's CD player does not play DVDs. - Because of their quality level, certain writeable CDs will not be played by the audio system.
<p>The CD player sound is poor.</p>	<p>The CD used is scratched or of poor quality.</p>	<p>Insert good quality CDs and store them in suitable conditions.</p>
	<p>The audio equipment settings (bass, treble, ambiences) are unsuitable.</p>	<p>Set the treble or bass level to 0, without selecting an ambience.</p>

QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...)	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
With the engine off, the audio equipment switches off after a few minutes of use.	When the engine is switched off, the audio equipment operating time depends on the battery charge. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.

QUESTION	ANSWER	SOLUTION
<p>The TA box is ticked. However, certain traffic jams along the route are not indicated in real time.</p>	<p>On starting, it is several minutes before the system begins to receive the traffic information.</p>	<p>Wait until the traffic information is being received correctly (displaying of the traffic information symbols on the map).</p>
	<p>In certain countries, only major routes (motorways...) are listed for the traffic information.</p>	<p>This phenomenon is normal. The system is dependent on the traffic information available.</p>
<p>The time taken to calculate a route sometimes seems longer than usual.</p>	<p>The performance of the system may slow down temporarily if a CD is being copied onto the Jukebox at the same time as a route is being calculated.</p>	<p>Wait until the CD has been copied or stop the copying before starting the guidance function.</p>
<p>I receive a speed camera alert for a camera which is not on my route.</p>	<p>The system announces all speed cameras located in a conical zone forward of the vehicle. It may detect speed cameras on nearby or parallel roads.</p>	<p>Zoom the map to view the exact position of the speed camera.</p>
<p>The audible speed camera alert is not working.</p>	<p>Audible alerts are not active.</p>	<p>Activate audible alerts in Navigation Menu, Settings, Set parameters for risk areas.</p>
	<p>The alert volume level is set to minimum.</p>	<p>Increase the speed camera alert volume.</p>
<p>The altitude is not displayed.</p>	<p>On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 3 satellites correctly.</p>	<p>Wait until the system has started up completely. Check that there is a GPS coverage of at least 3 satellites (long press on the SETUP button, then select GPS coverage).</p>
	<p>Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.</p>	<p>This phenomenon is normal. The system is dependent on the conditions of reception of the GPS signal.</p>
<p>The route is not calculated successfully.</p>	<p>The exclusion criteria may conflict with the current location (exclusion of toll roads on a motorway with tolls).</p>	<p>Check the exclusion criteria.</p>

QUESTION	ANSWER	SOLUTION
There is a long waiting time after inserting a CD.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.).	This may take a few seconds. This phenomenon is normal.
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be deactivated or the equipment may not be visible.	<ul style="list-style-type: none"> - Check that your telephone's Bluetooth function is activated. - Check that your telephone is visible.
A telephone connected by Bluetooth is inaudible.	The volume level depends on both the system and the telephone.	Increase the Peugeot Connect Navigation volume setting, possibly to maximum, and increase the telephone volume level if necessary.

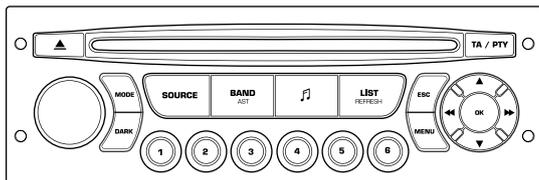

Peugeot Connect Sound

AUDIO EQUIPMENT/BLUETOOTH



Your Peugeot Connect Sound is coded in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact your PEUGEOT dealer for configuration of the system.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary. When the engine is switched off and to prevent discharging of the battery, the audio equipment may switch off after a few minutes.

CONTENTS

- **01 First steps** p.274
- **02 Steering mounted controls** p.275
- **03 Main menu** p.276
- **04 Audio** p.277
- **05 Peugeot Connect USB** p.280
- **06 Bluetooth** p.283
- **07 Configuration** p.285
- **08 Trip computer** p.286
- **09 Screen menu map** p.287
- **Frequently asked questions** p.289

01 FIRST STEPS



1. On/Off and volume adjustment.
2. CD eject.
3. Selection of the display on the screen from the following modes:
Audio (AUDIO), Trip Computer (TRIP) and Telephone (TEL) functions.
4. Selection of source: radio, audio CD/MP3 CD, CD changer, USB, auxiliaryJack connection, Streaming.
5. Selection of FM1, FM2, FMast and AM wavebands.
6. Setting audio options: front/rear balance, left/right balance, loudness, sound ambience.
7. Display the list of local stations, of the tracks on the CD or of the MP3 folders.
8. Abandon current operation.
9. TA (Traffic Announcement) function on/off.
Long press: access to the PTY (Types of radio programme) mode.
10. Confirmation.
11. Automatic search for a lower/higher frequency.
Selection of previous/next CD, MP3 or USB track.
12. Selection of a lower/higher radio frequency.
Selection of the previous/next MP3 folder.
Selection of the previous/next USB equipment folder/genre/artist/playlist.
13. Display the general menu.
14. Buttons 1 to 6:
Selection of a stored radio station.
Long press: store a station.
15. The DARK button changes the display on the screen to improve driving comfort at night.
1st press: lighting the upper band only.
2nd press: display of a black screen.
3rd press: return to the standard display.

02 STEERING MOUNTED CONTROLS

RADIO: selection of the previous stored station.
CD CHANGER: selection of the previous CD.
USB: selection of the previous genre/artist/
directory from the classification list.
Selection of the previous item on a menu.

RADIO: automatic search for a higher frequency.
CD/CD CHANGER/MP3/USB: selection of the
next track.
CD/CD CHANGER/USB: continuous press: fast
forwards play.
Selection of the previous item.

Volume increase.

- Change of sound source.
- Confirmation of a selection.
- Pick up/Hang up the telephone.
- Press for more than 2 seconds:
access to the telephone menu.


Mute: by pressing
the volume increase
and decrease buttons
simultaneously.

The sound is restored by
pressing one of the two
volume buttons.

RADIO: selection of the next stored station.
CD CHANGER: selection of the next CD.
USB: selection of the next genre/artist/
directory from the classification list.
Selection of the next item on a menu.

RADIO: automatic search for a lower frequency.
CD/CD CHANGER/MP3/USB: selection of the
previous track.
CD/CD CHANGER/USB: continuous press:
rewind play.
Selection of the next item.

Volume decrease.

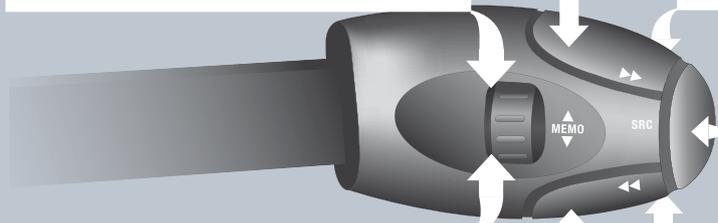

03 MAIN MENU

AUDIO FUNCTIONS: radio, CD, USB, options.

TELEPHONE: Bluetooth hands-free, pairing, management of a call.

> MONOCHROME SCREEN C



TRIP COMPUTER: entering of distances, alerts, status of functions.

PERSONALISATION-CONFIGURATION: vehicle parameters, display, languages.

> MONOCHROME SCREEN A



For a detailed global view of the menus available, refer to the "Screen menu map" section of this chapter.

04 AUDIO



The external environment (hills, buildings, tunnels, basement car parks) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio equipment.

RADIO SELECTING A STATION

1  Press the SOURCE button several times in succession and select the radio.




2  Press the BAND AST button to select a waveband: FM1, FM2, FMast, AM.



3  Briefly press one of the buttons to carry out an automatic search of the radio stations.



4  Press one of the buttons to carry out a manual search of the radio stations.

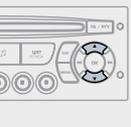


  Press the LIST REFRESH button to display the list of stations received locally (30 stations maximum). To update this list, press for more than two seconds.




RDS


1  Press the MENU button.

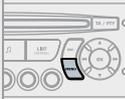

2  Select AUDIO FUNCTIONS then press OK.

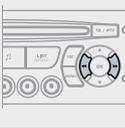

3  Select the FM WAVEBAND PREFERENCES function then press OK.

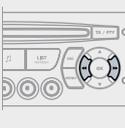

4  Select ACTIVATE FREQUENCY FOLLOWING (RDS) then press OK. RDS appears on the display.



! The RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

04 AUDIO


CD PLAYING A CD

 Insert circular compact discs only. Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player. Without pressing the EJECT button, insert a CD in the player, play begins automatically.

1  To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.




2  Press one of the buttons to select a track on the CD.

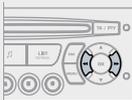

! Press the LIST REFRESH button to display the list of tracks on the CD.

3  Press and hold one of the buttons for fast forward or backward.

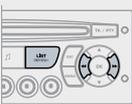

MP3 CD PLAYING AN MP3 COMPILATION

 Insert an MP3 compilation in the player. The audio equipment searches for all of the music tracks, which may take anything between a few seconds and several tens of seconds, before play begins.

! On a single disc, the CD player can read up to 255 MP3 files spread over 8 directory levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played. While the CD is being played, the directory flow chart is not followed. All of the files are displayed on a single level.

1  To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.



2  Press one of the buttons to select a track on the CD.



! Press the LIST REFRESH button to display the list of directories of the MP3 compilation.

3  Press and hold one of the buttons for fast forward or backward play.



04 AUDIO

MP3 CD INFORMATION AND ADVICE

! The MP3 format, an abbreviation of MPEG 1.2 & 2.5 Audio Layer 3, is an audio compression standard which permits the recording of several tens of music files on a single disc.

 In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select standards ISO 9660 level 1.2 or Joliet. If the disc is recorded in another format, it may not be played correctly. It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality. In the particular case of a multi-session CD, the Joliet standard is recommended.

 The audio equipment will only play files with the extension ".mp3" with a sampling rate of 22.05 KHz or 44.1 KHz. No other type of file (.wma, .mp4, .m3u...) can be played.

 It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ù) to avoid any playing or displaying problems.

! Empty CDs are not recognised and may damage the system.

AUDIO/MP3 CD CHANGER* PLAYING A CD

1



Insert the CDs in a multi-slot changer one by one.
On a single slot changer, press LOAD, select the number of the CD, then insert the CD, or press and hold LOAD and insert the CDs one by one.



2




Press the SOURCE button several times in succession and select CD CHANGER. Press one of the buttons on the numeric keypad to select the corresponding CD.



3



Press one of the buttons to select a track on the CD.
Press and hold one of the buttons for fast forwards or rewind play.

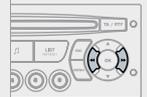

* According to availability on the vehicle.

05 PEUGEOT CONNECT USB

USING THE PEUGEOT CONNECT USB

1

This unit consists of a USB port and a Jack socket*. The audio files are transmitted from portable equipment such as a digital player or a USB memory stick to your Peugeot Connect Sound to be listened to via the vehicle's speakers.



2

USB key (1.1, 1.2 and 2.0) or iPod® of generation 5 or later:

- USB memory sticks should be formatted FAT or FAT 32 (NTFS not supported),
- the iPod® lead is essential,
- navigation through the file database is by means of the steering wheel controls,
- the iPod® software should be regularly updated for the best connection.



3

Other iPod® players of earlier generations and players using the MTP protocol*:

- play via Jack-Jack lead only (not supplied),
- navigation through the file database is from the portable equipment.



The list of compatible equipment and the compression rates supported are available from PEUGEOT dealers.

CONNECTING A USB MEMORY STICK

1



Connect the memory stick to the port, directly or using a lead. If the audio equipment is switched on, the USB source is detected as soon as it is connected. Play begins automatically after a delay which depends on the capacity of the USB stick. The file formats recognised are .mp3 (mpeg1 layer 3 only), .wma (standard 9 only, 128 kbits/sec compression), .wav and .ogg. The playlists types accepted are m3u, .pls, .wpl.

!

The system puts together playlists (temporary memory) created over a period which depends on the capacity of the USB equipment. The other sources are available during this time. The playlists are updated each time the ignition is switched off or each time a USB memory stick is connected. When connecting for the first time, the classification suggested is by folder. When you reconnect, the classification selected previously is retained.

* According to vehicle.

05 PEUGEOT CONNECT USB

USING THE PEUGEOT CONNECT USB


2

Press and hold LIST to display the different classifications. Select by Folder/Artist/Genre/Playlist, press OK to select the classification required, then press OK again to confirm.

OK




- by Folder: all folders containing audio files recognised on the peripheral device, classified in alphabetical order without following the flow chart.
- by Artist: all of the artist names defined in the ID3 Tags, classified in alphabetical order.
- by Genre: all of the genres defined in the ID3 Tags.
- by Playlist: in accordance with the playlists recorded on the USB device.

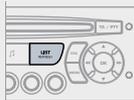

3




Press LIST briefly to display the previously selected classification. Navigate through the list using the left/right and up/down buttons. Confirm the selection by pressing OK.

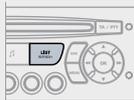

4



Press one of these buttons to gain access to the previous/next track on the classification list currently being played. Press and hold one of the buttons for fast forward or backward play.

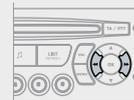

5



Press one of these buttons to gain access to the previous/next Genre, Folder, Artist or Playlist on the classification list currently being played.



CONNECTING AN iPod® VIA THE USB PORT

1

The lists available are Artist, Genre and Playlist (as defined on the iPod®). Selection and Navigation are described in steps 1 to 5 above.

!

Do not connect a hard disk or USB devices other than audio equipment to the USB port. This could damage your installation.

05 PEUGEOT CONNECT USB

USING THE AUXILIARY INPUT (AUX) JACK SOCKET OR USB PORT (according to vehicle)



The auxiliary input, JACK or USB, allows the connection of portable equipment (MP3 player...).



Do not connect a single piece of equipment via the JACK socket and the USB port at the same time.

1

Connect the portable equipment (MP3 player...) to the JACK socket or to the USB port, using a suitable cable (not supplied).



2



Press the SOURCE button several times in succession and select AUX.



ADJUSTING THE VOLUME OF THE AUXILIARY SOURCE

1


First adjust the volume of your portable equipment.



2



Then adjust the volume of your audio equipment.

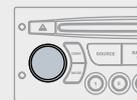

The controls are displayed and managed via the portable equipment.



06 BLUETOOTH



BLUETOOTH TELEPHONE SCREEN C

The services offered depend on the network, the SIM card and the compatibility of the Bluetooth equipment used.
Consult your telephone's manual and your operator to find out which services are available to you.
A list of mobile telephones which offer the best range of services is available from the network.
Consult a PEUGEOT dealer.

PAIRING A TELEPHONE

! For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio equipment must be carried out with the vehicle stationary and the ignition on.

1 Activate the telephone's Bluetooth function.



2  Press the MENU button.



3  In the menu, select:
- Bluetooth telephone function - Audio
- Bluetooth configuration
- Perform a Bluetooth search



4 A window is displayed with "Searching...".

5 The first 4 telephones recognised are displayed in this window.

! The TELEPHONE menu permits access to the following functions in particular: Directory*, Call list, Pairing management.

* If your telephone is fully compatible.

6 Select the telephone to be connected from the list. Only one telephone can be connected at a time.

7 A virtual keypad is displayed on the screen: enter a code with at least 4 digits. Confirm by pressing OK.



8 A message is displayed on the screen of the telephone chosen: to accept the pairing, enter the same code on the telephone, then confirm by pressing OK.



9 If pairing fails, the number of attempts is not limited.

10 "Pairing of Name_telephone successful" appears on the screen. The automatic connection authorised is only active after the telephone has been configured. The directory and the call list can be accessed after the synchronisation period.

! The pairing can also be initiated from the telephone.


06 BLUETOOTH

BLUETOOTH AUDIO STREAMING (AVAILABLE DURING THE YEAR)

RECEIVING A CALL

- 1 An incoming call is announced by a ring and a superimposed display on the multifunction screen.

- 2  Select the YES tab on the display using the buttons and confirm by pressing OK.

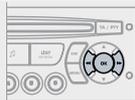

- 2  Press the steering mounted control OK to accept the call.



MAKING A CALL

- 1 From the Bluetooth telephone function Audio menu, select Manage the telephone call then Call, Call list or Directory.

- 2 Press the end of the steering mounted control for more than two seconds to gain access to your directory.
Or
To dial a number, use your telephone's keypad, with the vehicle stationary.



- 1  Wireless transmission of the telephone's music files via the audio equipment. The telephone must be able to manage the appropriate bluetooth profiles (Profiles A2DP/AVRCP).

- 1 Initiate the pairing between the telephone and the vehicle. This pairing can be initiated from the vehicle's telephone function menu or via the telephone's keypad. See steps 1 to 10 on the previous pages. During the pairing phase, the vehicle must be stationary with the key in the ignition.



- 2 Select the telephone to be connected from the telephone function menu. The audio system connects to a newly paired telephone automatically.

- 3  Activate the streaming source by pressing the SOURCE button*. The tracks to be played can be controlled as usual via the buttons on the Radio control panel and the steering wheel controls**. The contextual information can be displayed on the screen.



* In certain cases, playing of the Audio files must be initiated from the keypad.

** If the telephone supports the function.

07 CONFIGURATION




SETTING THE DATE AND TIME SCREEN C

1




Press the MENU button.

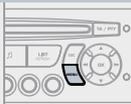

2




Using the arrows, select
PERSONALISATION
CONFIGURATION.

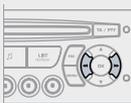

3




Press to confirm the selection.

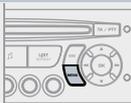

4




Using the arrows, select DISPLAY
CONFIGURATION.

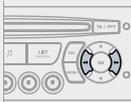

5




Press to confirm the selection.

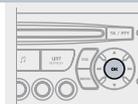

6



Using the arrows, select ADJUST
DATE AND TIME.

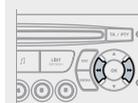

7




Press to confirm the selection.



8



Adjust the settings one by one
confirming by pressing the OK button.
Next select the OK tab on the screen
then confirm.

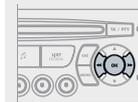

08 TRIP COMPUTER



Each press of the button, located at the end of the wiper stalk, displays the different trip computer information in succession, depending on the screen.



- the "vehicle" tab with:
 - the range, the current fuel consumption and the distance remaining to the destination,
- the "1" tab (trip 1) with:
 - the average speed, the average consumption and the distance travelled calculated over trip "1",
- the "2" tab (trip 2) with the same information for a second trip.



Zero reset

When the required trip is displayed, press the control for more than two seconds.

A FEW DEFINITIONS

Range: displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average fuel consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a PEUGEOT dealer.

Current fuel consumption: only calculated and displayed above 20 mph (30 km/h).

Average fuel consumption: this is the average fuel consumption since the last trip computer zero reset.

Distance travelled: calculated since the last trip computer zero reset.

Distance remaining to the destination: calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

Average speed: this is the average speed calculated since the last trip computer zero reset (ignition on).

09 SCREEN MENU MAP

monochrome A



- 1 MAIN FUNCTION
- 2 CHOICE A
 - 3 Choice A1
 - 3 Choice A2
- 2 CHOICE B...

1 RADIO-CD

2 RDS SEARCH

2 REG MODE

2 CD REPEAT

2 RANDOM PLAY

1 VEHICLE CONFIG*

2 REV WIPE ACT

2 GUIDE LAMPS

1 OPTIONS

2 DIAGNOSTICS

3 consult

3 abandon

1 UNITS

2 TEMPERATURE: °CELSIUS/°FAHRENHEIT

2 FUEL CONSUMPTION: KM/L - L/100 - MPG

1 DISPLAY ADJUST

2 YEAR

2 MONTH

2 DAY

2 HOUR

2 MINUTES

2 12 H/24 H MODE

1 LANGUAGE

2 FRANCAIS

2 ITALIANO

2 NEDERLANDS

2 PORTUGUES

2 PORTUGUES-BRASIL

2 DEUTSCH

2 ENGLISH

2 ESPANOL

monochrome C



Press the OK dial for access to short-cut menus according to the display on the screen:

RADIO

1 activate/deactivate RDS

1 activate/deactivate REG mode

1 activate/deactivate radiotext

CD/MP3 CD/CD CHANGER

1 activate/deactivate Intro

1 activate/deactivate track repeat (the entire current CD for CD or CD Changer, the entire current folder for MP3 CD or MP3 Changer)

1 activate/deactivate random play (the entire current CD for CD or CD Changer, the entire current folder for MP3 CD, all of the folders of the current CD for MP3 Changer)

USB

1 activate/deactivate track repeat (of the current folder/artist/genre/playlist)

1 activate/deactivate random play (of the current folder/artist/genre/playlist)

* The parameters vary according to vehicle.

09 SCREEN MENU MAP

monochrome A



- 1 RADIO-CD
- 2 RDS SEARCH
- 2 REG MODE
- 2 CD REPEAT
- 2 RANDOM PLAY
- 1 VEHICLE CONFIG*
- 2 REV WIPE ACT
- 2 GUIDE LAMPS
- 1 OPTIONS
- 2 DIAGNOSTICS
- 3 consult
- 3 abandon
- 1 UNITS
- 2 TEMPERATURE: °CELSIUS/°FAHRENHEIT
- 2 FUEL CONSUMPTION: KM/L - L/100 - MPG



- 1 MAIN FUNCTION
- 2 CHOICE A
- 3 Choice A1
- 3 Choice A2
- 2 CHOICE B...

1 DISPLAY ADJUST

- 2 YEAR
- 2 MONTH
- 2 DAY
- 2 HOUR
- 2 MINUTES
- 2 12 H/24 H MODE

1 LANGUAGE

- 2 FRANCAIS
- 2 ITALIANO
- 2 NEDERLANDS
- 2 PORTUGUES
- 2 PORTUGUES-BRASIL
- 2 DEUTSCH
- 2 ENGLISH
- 2 ESPANOL

* The parameters vary according to vehicle.

monochrome C



Press the OK dial for access to short-cut menus according to the display on the screen:

RADIO

- 1 activate/deactivate RDS
- 1 activate/deactivate REG mode
- 1 activate/deactivate radiotext

CD/MP3 CD/CD CHANGER

- 1 activate/deactivate Intro
- 1 activate/deactivate track repeat (the entire current CD for CD or CD Changer, the entire current folder for MP3 CD or MP3 Changer)

- 1 activate/deactivate random play (the entire current CD for CD or CD Changer, the entire current folder for MP3 CD, all of the folders of the current CD for MP3 Changer)

USB

- 1 activate/deactivate track repeat (of the current folder/artist/genre/playlist)
- 1 activate/deactivate random play (of the current folder/artist/genre/playlist)

09 SCREEN MENU MAP

monochrome C



Pressing the MENU button displays:



1 AUDIO FUNCTIONS

2 FM BAND PREFERENCES

3 alternative frequencies (RDS)

4 activate/deactivate

3 regional mode (REG)

4 activate/deactivate

3 radio-text information (RDTXT)

4 activate/deactivate

2 PLAY MODES

3 album repeat (RPT)

4 activate/deactivate

3 track random play (RDM)

4 activate/deactivate



1 TRIP COMPUTER

2 ENTER DISTANCE TO DESTINATION

3 Distance: x miles

2 ALERT LOG

3 Diagnostics

2 STATUS OF THE FUNCTIONS*

3 Functions activated or deactivated



1 PERSONALISATION-CONFIGURATION

2 DEFINE THE VEHICLE PARAMETERS*

2 DISPLAY CONFIGURATION

3 video brightness adjustment

4 normal video

4 inverse video

4 brightness (- +) adjustment

3 date and time adjustment

3 day/month/year adjustment

4 hour/minute adjustment

4 choice of 12 h/24 h mode

3 choice of units

4 l/100 km - mpg - km/l

4 °Celsius/°Fahrenheit

2 CHOICE OF LANGUAGE



1 BLUETOOTH TELEPHONE

2 BLUETOOTH CONFIGURATION

3 Connect/Disconnect a device

3 Telephone function

3 Audio Streaming function

4 Consult the paired device

4 Delete a paired device

4 Perform a Bluetooth search

2 CALL

3 Calls list

4 Directory

2 MANAGE THE TELEPHONE CALL

3 Terminate the current call

3 Activate private mode

* The parameters vary according to vehicle.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
<p>There is a difference in sound quality between the different audio sources (radio, CD...).</p>	<p>For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).</p>	<p>Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.</p>
<p>The CD is ejected automatically or is not played by the player.</p>	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.</p> <p>The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.</p>	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the "Audio" section. - The audio equipment's CD player does not play DVDs. - Due to their quality level, certain writeable CDs will not be played by the audio system.
<p>The message "USB peripheral error" is displayed on the screen.</p>	<p>The Bluetooth connection is cut.</p>	<p>The battery of the peripheral may not be sufficiently charged.</p>
	<p>Recharge the battery of the peripheral device.</p>	<p>The USB memory stick is not recognised. The memory stick may be corrupt. Reformat the memory stick.</p>
<p>The CD player sound is poor.</p>	<p>The CD used is scratched or of poor quality.</p>	<p>Insert good quality CDs and store them in suitable conditions.</p>
	<p>The audio equipment settings (bass, treble, ambiences) are unsuitable.</p>	<p>Set the treble or bass level to 0, without selecting an ambience.</p>

QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station is not part of the regional traffic information network.	Tune to a radio station which broadcasts traffic information.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
With the engine off, the audio equipment switches off after a few minutes of use.	When the engine is switched off, the audio equipment operating time depends on the battery charge. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio equipment switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.