


OWNER'S HANDBOOK



CITROËN C4 PICASSO  
CITROËN GRAND C4 PICASSO



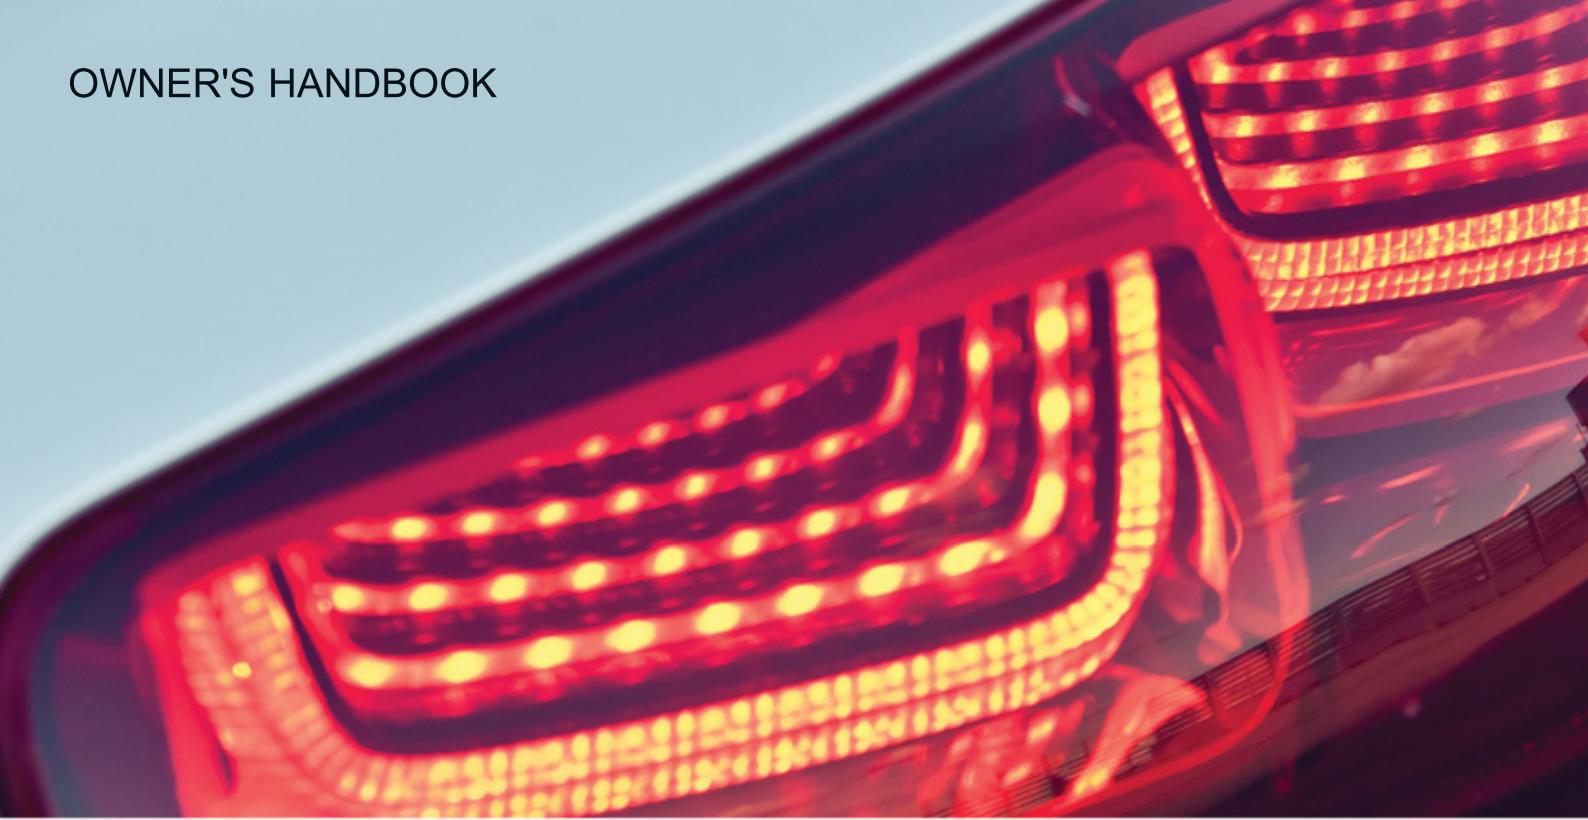

## On-line owner's handbook

You can find your handbook on the CITROËN website, under "MyCitroën".

This personal and customisable space allows you to establish direct and special contact with CITROËN.



If the "MyCitroën" function is not available on the CITROËN public website for your country, you can find your handbook at the following address:  
<http://service.citroen.com>

Referring to the owner's handbook on-line also gives you access to the latest information available, easily identified by the bookmark, associated with this symbol:



Select:

- The Vehicle documentation link in the home page (no registration is needed),
- the language,
- the vehicle, its body style,
- the print edition of your handbook appropriate for the date of registration of your vehicle.

You have access to your handbook on line, together with the latest information, identified by the symbol:



We draw your attention to the following...

Your vehicle is fitted with only some of the equipment described in this document, depending on the trim level, version and the specifications for the country in which it is sold.

The fitting of electrical equipment or accessories which are not recommended by CITROËN may result in a failure of your vehicle's electronic system. Please note this specific warning and contact a CITROËN dealer to be shown the recommended equipment and accessories.

#### Key

-  safety warning
-  additional information
-  contributes to the protection of the environment
-  refer to the page indicated

#### Key

This key will enable you to identify the special features of your vehicle:



CITROËN has a presence on every continent, a complete product range, bringing together technology and a permanent spirit of innovation, for a modern and creative approach to mobility. We thank you and congratulate you on your choice.

At the wheel of your new vehicle, getting to know each system, each control, each setting, makes your trips, your journeys more comfortable and more enjoyable.

Happy motoring!




NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur

Familiarisation	Access	Driving	
	2	4	
Eco-driving			
Monitoring	1	3	
7-inch touch screen tablet	26	Front seats	84
Instrument panels	33	Rear seats	92
Indicator and warning lamps	38	Seat modularity	99
Adjustment buttons	54	Mirrors	101
Setting the date and time	57	Steering wheel adjustment	103
Trip computer	59	Ventilation	104
		Heating	106
		Manual dual-zone air conditioning	107
		Dual-zone digital air conditioning	109
		Rear screen demist - defrost	115
		Scented air freshener	116
		Interior fittings	118
		Rear multimedia	127
		Starting-switching off the engine with the electronic key	135
		Starting-switching off the engine with the "Keyless Entry and Starting" system	137
		Electric parking brake	141
		Hill start assist	148
		5-speed manual gearbox	149
		6-speed manual gearbox	149
		6-speed electronic gearbox system	150
		Automatic gearbox	154
		Gear shift indicator	159
		Stop & Start	160
		Display of inter-vehicle time	163
		Speed limiter	168
		Cruise control	171
		Active cruise control	174
		Collision risk alert	182
		Lane departure warning system	185
		Blind spot sensors	186
		Parking sensors	189
		Reversing camera	191
		360 Vision	192
		Park Assist	194

Visibility	5	Practical information	7	Technical data	9
Lighting controls	202	Temporary puncture repair kit	260	Petrol engines	323
Automatic illumination of headlamps	207	Changing a wheel	268	Petrol weights	324
Automatic headlamp dipping	208	Snow chains	278	Diesel engines	325
Daytime running lamps	210	Changing a bulb	279	Diesel weights	328
Headlamp adjustment	211	Changing a fuse	288	Dimensions	331
Directional lighting	213	12 V battery	295	Identification markings	333
Wiper controls	214	Energy economy mode	298		
Screenwash	216	Changing a wiper blade	299		
Automatic rain sensitive wipers	217	Towing the vehicle	300		
Courtesy lamps	219	Towing a trailer	302		
Panoramic sunroof	220	Roof bars	304		
Interior mood lighting	221	Very cold climate screen	306		
		Accessories	307		
Safety	6	Checks	8	Audio and telematics	
Direction indicators	222	Bonnet	310	Emergency or assistance	335
Hazard warning lamps	222	Petrol engines	311	Touch screen tablet	337
Horn	222	Diesel engines	312		
Emergency or assistance call	223	Fuel	313		
Warning triangle	223	Misfuel prevention (Diesel)	315		
Tyre under-inflation detection	224	Running out of fuel (Diesel)	317		
ESC system	227	Checking levels	318		
Seat belts	230	Checks	321		
Airbags	235			Alphabetical index	■
Child seats	241				
ISOFIX mountings	252				
Child lock	259			Visual search	■

# Exterior

## Electronic key: Keyless Entry and Starting

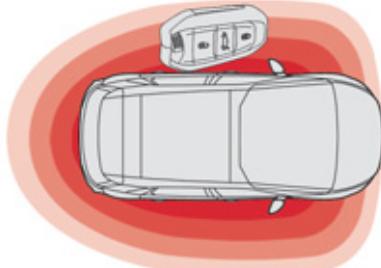

A system that allows the unlocking, locking and starting of the vehicle by keeping the key on your person and in the defined zone.

64

## Distance alert

Using a radar located at the front of the vehicle, this system provides:

- the **Display of the inter-vehicle time**, to help the driver maintain a safe distance between their vehicle and the one in front,

163

- the triggering of a **Collision risk alert**, to warn the driver, in certain driving conditions, that their vehicle is at risk of collision with the vehicle in front.

182




## Active cruise control

This system makes it possible, in addition to automatically holding the vehicle at a speed programmed by the driver, to maintain a safe distance from the vehicle in front, by using engine braking only. A radar is located at the front of the vehicle.

The driver can also programme an inter-vehicle time to maintain.

174

# Exterior

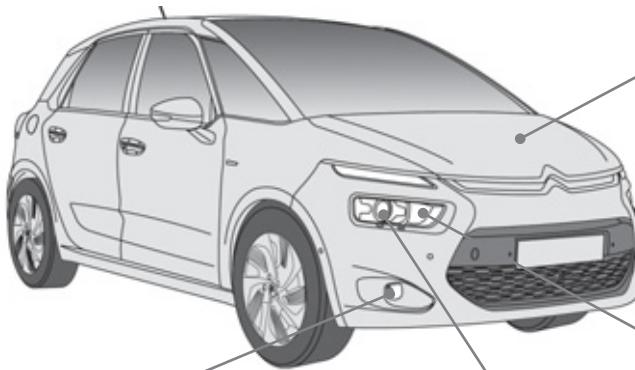

## Cornering lighting

At low speed, this additional lighting increases the driver's field of vision in corners, junctions, when parking... by switching on the corresponding front foglamp.

## Directional lighting

This lighting system automatically turns the beams of the headlamps in the direction of a corner, to improve the quality of the lighting.

213

212

## Stop & Start

This system puts the engine temporarily into standby during stops in the traffic (traffic lights, traffic jams, etc...). The engine restarts automatically as soon as you want to move off. The Stop & Start system reduces fuel consumption and exhaust emissions, as well as noise levels when stationary.

160

## Automatic headlamps

System that automatically dips the headlamps according to the lighting and traffic conditions, using a camera located in the interior rear view mirror.


208

# Exterior

## Reversing camera

This system is activated automatically on engaging reverse and provides an image in the instrument panel.

191

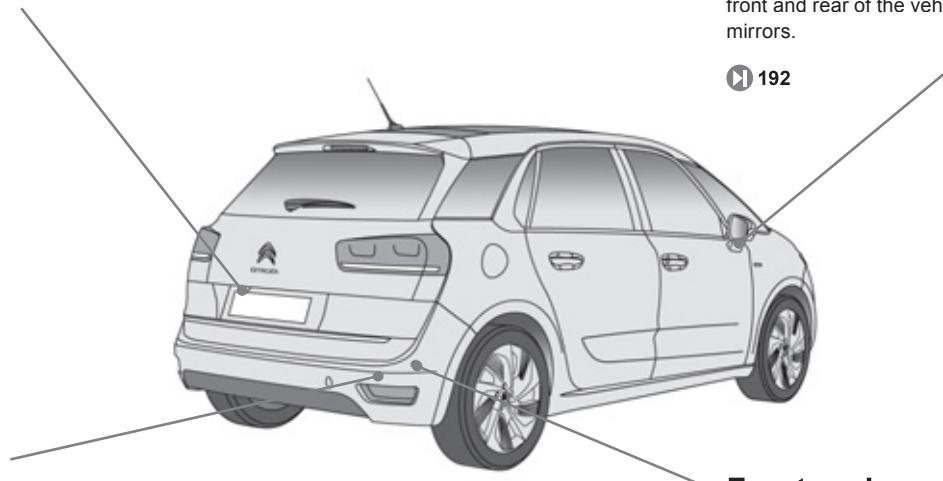

## Park Assist

This system provides active assistance when parking: it detects a parking space and then controls the vehicle's steering to park the vehicle.

194

## 360 Vision

This system provides an image in the instrument panel of the near surroundings of your vehicle, using cameras located at the front and rear of the vehicle and under the door mirrors.

192

## Front and rear parking sensors

This system provides warnings when manoeuvring forwards and backwards by detecting obstacles in front of and behind the vehicle.


189

# Exterior

## Blind spot sensors

In certain driving conditions, this system detects the presence of vehicles in the blind spots. You are alerted by the illumination of a warning lamp in the corresponding mirror.

186

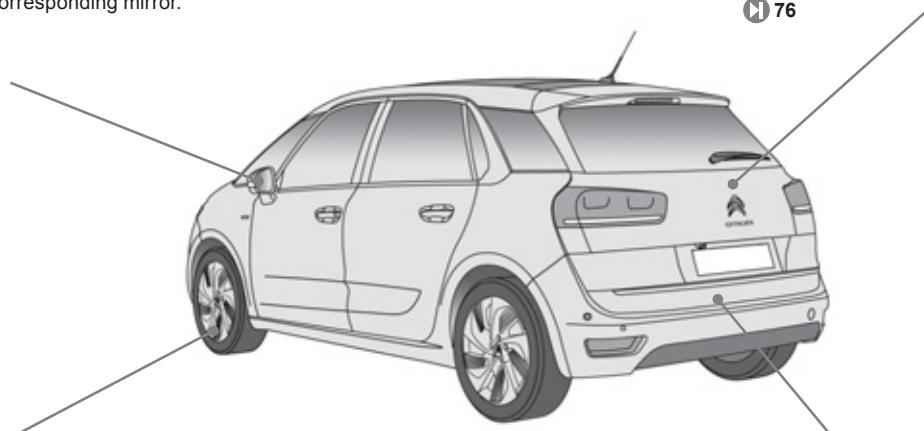

## Under-inflation detection

This system continuously monitors the pressures in the tyres and alerts you in the event of an under-inflated tyre.

224

## Motorised tailgate

This system simplifies the opening and closing of the boot by means of motorisation of the tailgate.

76


## Temporary puncture repair kit

This kit is a complete system, consisting of a compressor and a sealant cartridge, for the temporary repair of a tyre.

260

# Access


## Electronic key - Remote control

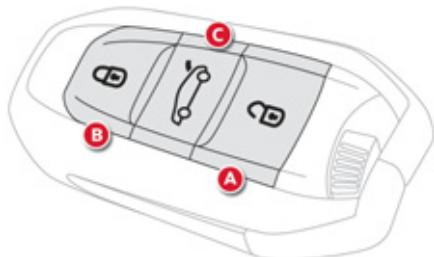

- A. Unlocking the vehicle.
- B. Locking the vehicle.
- C. Unlocking of the vehicle and, depending on version, release of or opening the motorised tailgate.


▶ 61

## Keyless Entry and Starting

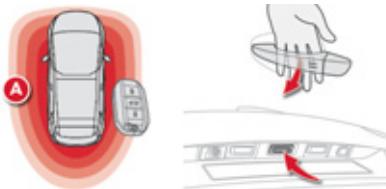

### Unlocking - opening

With the electronic key on your person, in the defined zone **A**, pass a hand behind one of the front door handles to unlock the vehicle, then pull the door handle to open the door or press the opening control on the tailgate.

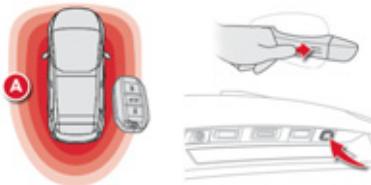

### Locking

With the electronic key in the defined zone **A**, press with a finger or thumb on one of the front door handles (at the markings) to lock the vehicle or on the opening control on the tailgate.

▶ 64

## Motorised tailgate

This system allows the tailgate to be opened remotely using motorisation.

The motorisation of the tailgate can be activated or deactivated.

Ensure that there is enough space behind the vehicle for the movement of the tailgate.

▶ 76

## Fuel tank



With the vehicle unlocked, press on the rear of the filler flap to open it.

Tank capacity: around 57 litres (petrol) or 55 litres (Diesel).

▶ 313

# Interior

## Panoramic sunroof

This glazed roof increases the light in the passenger compartment. It is fitted with an electric blind.

▶ 220



## Massage system

This system provides a lumbar massage for a period of about 60 minutes. The massage is delivered in 6 cycles of 10 minutes each.

▶ 89

## Electric parking brake

It combines the functions of automatic application on switching off the engine and automatic release when moving off. The driver can intervene at any time to apply or release the parking brake, by operating the control lever.

▶ 141

## 7-inch touch screen tablet

It provides access to the heating and air conditioning controls, to settings for vehicle systems, to controls for the audio, navigation and telematic systems and to the display configuration settings...

▶ 26


## Electric leg rest

It provides additional comfort for the front passenger.

▶ 90


# Interior

1. Bonnet release lever.
2. Fusebox.
3. Steering wheel adjustment controls.
4. Door mirror controls.  
Electric window controls.
5. Side adjustable air vents.  
Side window demisting vents.
6. Quarter light demisting windows.
7. Driver's airbag.  
Horn.
8. Courtesy lamp and map reading lamps.
9. Panoramic glass roof panel blind control.
10. CITROËN Localised Emergency Call -  
CITROËN Localised Assistance Call  
(depending on country of sale).
11. Windscreen demisting/defrosting vent.
12. Scented air freshener.
13. Central adjustable air vents.
14. Passenger's airbag.
15. Glove box.
16. Central storage.  
Audio sockets, 12V accessory socket  
(120 W max), 230V socket (120 W max).
17. Storage below steering wheel (handbook  
pack).
18. Gear lever (manual gearbox).
19. Console (fixed/removable).
20. Storage or rear multi-media.  
Rear 12 V accessory socket (120 W max.).

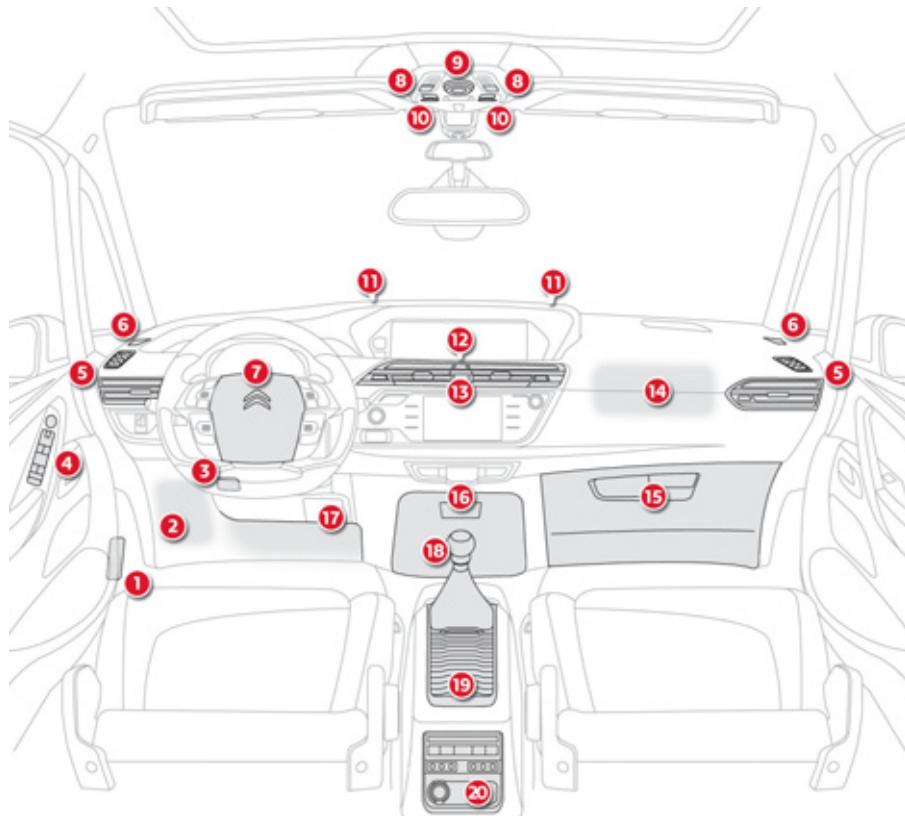

# Instruments and controls

1. Headlamp height adjustment.
2. Deactivation of volumetric alarm monitoring, or  
Ticket holder.
3. Lighting and direction indicator stalk
4. Steering mounted controls (6-speed electronic gearbox system/automatic gearbox).
5. Speed limiter / cruise control / active cruise control controls.
6. Other steering mounted controls (depending on equipment).
7. Audio system, telephone and navigation (depending on equipment) steering mounted controls.
8. Gear selector lever (electronic gearbox system/automatic gearbox).
9. START/STOP button (engine starting).
10. Wiper / screenwash / trip computer stalk.
11. Electronic key reader.
12. Instrument panel.
13. Hazard warning lamps.
14. Touch screen tablet controls.
15. Deactivation of the DSC system.
16. Electric parking brake control.
17. Central locking control.

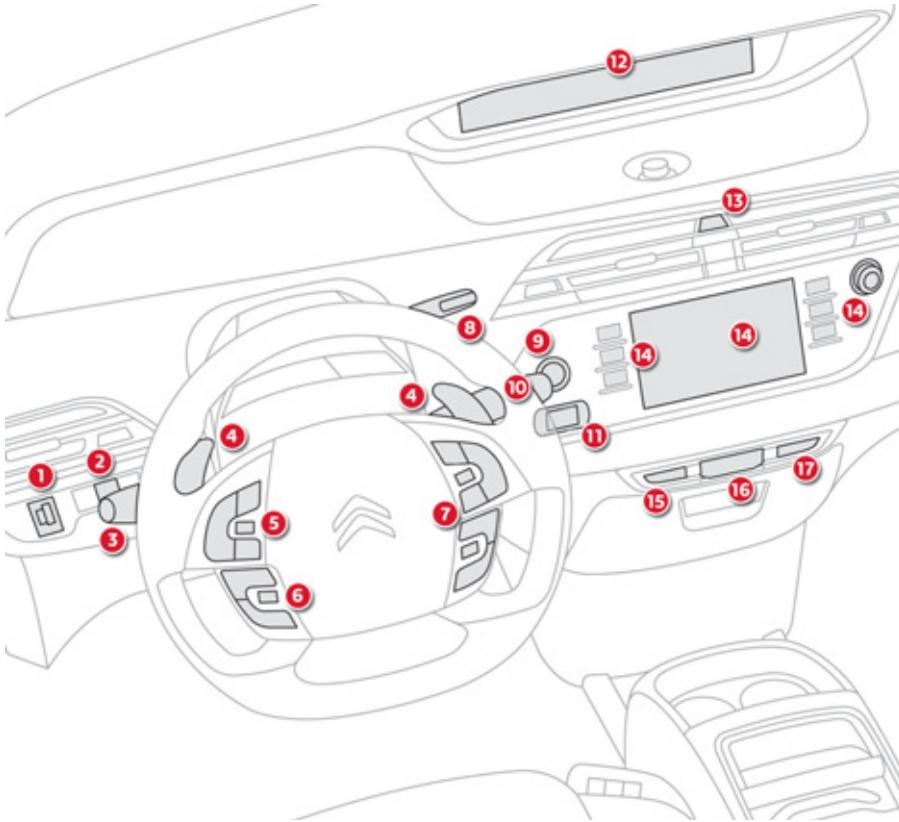

# Sitting comfortably

## Driver's seat

### Manual adjustments

1. Adjustment of the backrest angle of the driver's seat.
2. Adjustment of the cushion height of the driver's seat.
3. Forwards-backwards adjustment.

84

### Electric adjustments

1. Adjustment of the cushion angle and height, and forwards-backwards position.
2. Adjustment of the backrest angle.

86


#### **i** Other functions...

- Lumbar adjustment.
- Massage function.
- Heated seats.



# Sitting comfortably

## Head restraint adjustment

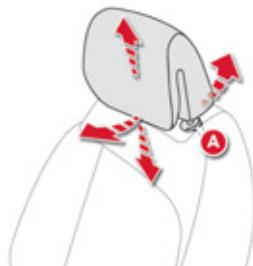


To raise it, pull it upwards.

To lower it, press on the lug **A** and on the head restraint at the same time.

To incline it, move the bottom forwards or backwards.

88

## Steering wheel adjustment

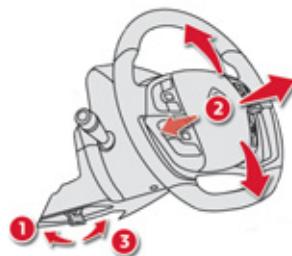


1. Release.
2. Adjust for height and reach.
3. Lock.



As a safety precaution, these operations must only be carried out when stationary.

103

## Correct driving position

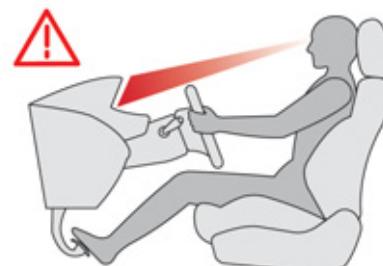

Before taking to the road, adjust in the following order:


- the position of the driver's seat (longitudinal, height),
- the height of the driver's head restraint,
- the height and reach of the steering wheel.



Once these adjustments have been made, check that you can see the instrument panel clearly from your driving position.

# Sitting comfortably

## Door mirrors

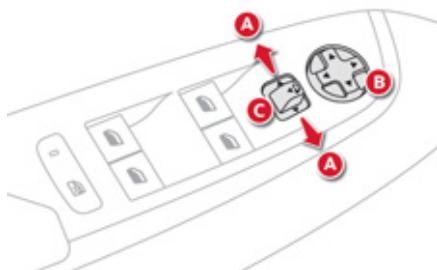

### Adjustment


- A. Selection of the mirror to adjust.
- B. Adjustment of the mirror position in four directions.
- C. De-selection of the mirror.

101

### **i** Other functions available...

- Folding / Unfolding.
- Automatic dipping of the mirror in reverse for parking.
- Blind spot monitoring.

## Rear view mirror

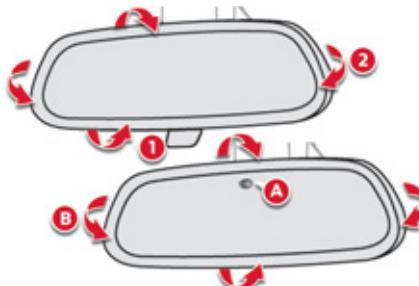

### Manual day/night model

1. Selection of the "day" position of the mirror.
2. Adjustment of the mirror.



### Automatic day/night model

- A. Brightness detection in automatic day/night mode.
- B. Adjustment of the mirror.

102

# Sitting comfortably


## Front seat belts

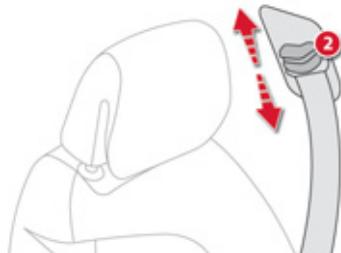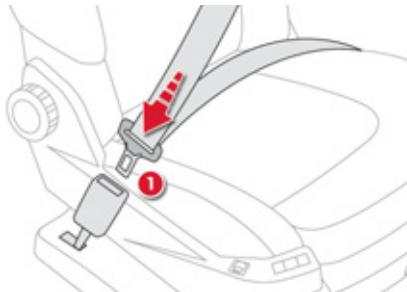

1. Fastening the buckle.
2. Height adjustment  
Squeeze the control to slide it.

230, 231

## Centre rear seat belt in the 2<sup>nd</sup> row (fastening)

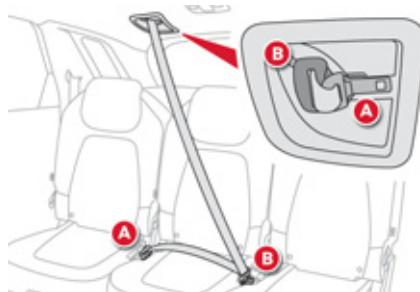

- Pull the webbing and insert the tongue **A** in the right hand buckle.
- Insert tongue **B** in the left hand buckle.

231, 232

## Outer rear seat belts (stowing)





Guide the belt in and place the tongue on the magnet of the outer anchorage.

231, 232

# Seeing clearly

## Lighting

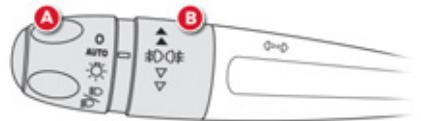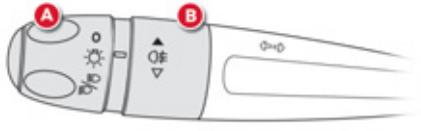

### Ring A

- O** Lighting off/daytime running lamps.
- AUTO** Automatic illumination of headlamps.
- 💡** Sidelamps.
- 💡** Dipped / main beam headlamps.


203

### Ring B

- 💡** Rear foglamps only.
- 💡** Front and rear foglamps.

204


## Wipers

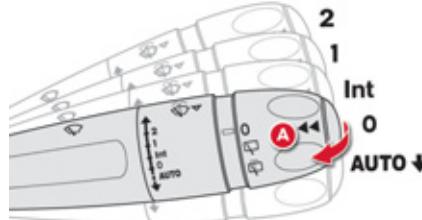

### Stalk A: windscreen wipers

- 2. Fast wipe.
- 1. Normal wipe.
- Int. Intermittent wipe.
- 0. Off.
- AUTO** Automatic wiping.
- ↓ Single wipe: pull the stalk briefly towards you.

214

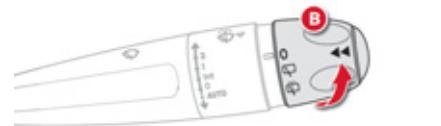

### Switching on "AUTO"

- ☞ Press the stalk downwards.

### Switching off "AUTO"

- ☞ Press the stalk downwards again or place the stalk in another position (Int, 1 or 2).

217


### Ring B: rear wiper

- O** Park.
- Intermittent wipe.
- Wash-wipe.

215

# Passenger safety

## Passenger's front airbag

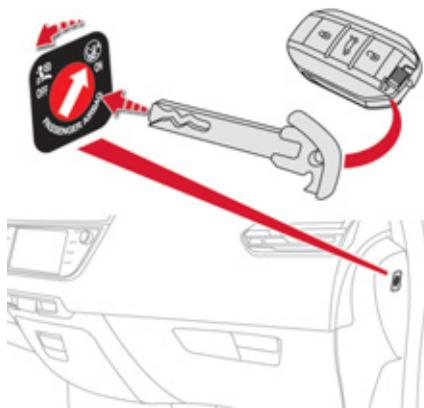

1. Insert the key (integral to the electronic key).
2. Select the position:  
"OFF" (deactivation), with "rear facing" child seat,  
"ON" (activation), with front passenger or  
"forwards facing" child seat.
3. Remove the key keeping the switch in the new position.

236


## Seat belt warning lamps



- A. Warning lamp for not fastened (front seat belts) and unfastened (all seat belts).
- B. Seat belt location indicator.

233

## Manual child lock

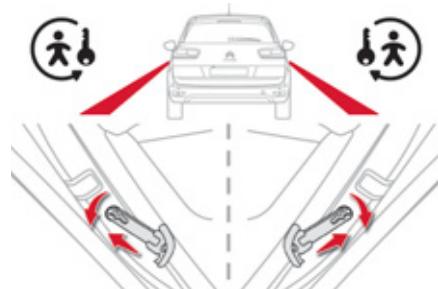

This manual device prevents opening of the rear doors by the interior door handles. The control is located on the edge of each rear door.

259

# Driving safely


## 7-inch touch screen tablet

### Operation

Use the buttons arranged on each side of the touch screen tablet for access to the menus, then press on the virtual buttons in the touch screen tablet.

- ▶ From the primary page, use this button for access to the secondary page.
- ◀ Use this button to return to the primary page.
- ≡ Use this button for access to additional information and to the settings for certain functions.
- ✓ Use this button to confirm.
- ✗ Use this button to quit.

26

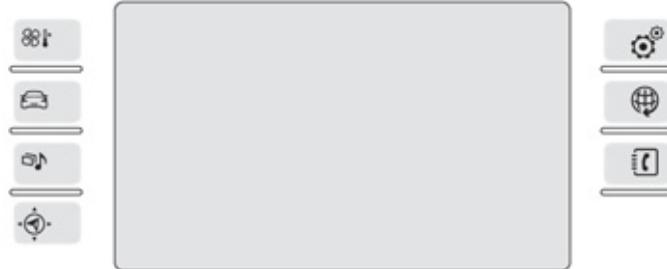

### Touch screen tablet menus

 "Air conditioning".	 "Connected services".	
 "Driving assistance".	 "Telephone".	
 "Media".	<p><b>!</b> Do not use pointed objects on the touch screen tablet. Do not touch the screen with wet hands.</p>	
 "Navigation".	<p><b>i</b> Use a clean soft cloth to clean the touch screen tablet.</p>	
 "Configuration".		

# Driving safely

## Starting the engine



### With the electronic key

- ☞ Place the gear selector lever at **N** for vehicles with an electronic gearbox, **P** or **N** for vehicles with an automatic gearbox or neutral for vehicles with a manual gearbox.
- ☞ Insert the electronic key in the reader.
- ☞ Press the brake pedal on vehicles with electronic gearbox or depress the clutch pedal fully on vehicles with manual gearbox.
- ☞ Press the "START/STOP" button briefly. The steering column unlocks and the engine starts.



### With the Keyless Entry and Starting system

- ☞ Place the gear selector lever at **N** for vehicles with an electronic gearbox, **P** or **N** for vehicles with an automatic gearbox or neutral for vehicles with a manual gearbox
- ☞ With the electronic key inside the vehicle (it is not necessary to place it in the reader), press the brake pedal on vehicles with electronic gearbox or depress the clutch pedal fully on vehicles with manual gearbox.
- ☞ Press the "START/STOP" button briefly. The steering column unlocks and the engine starts.

135

Maintain pressure on the brake pedal until the engine starts.

137

# Switching off the engine

## With the electronic key

- ☞ Immobilise the vehicle.
- ☞ Place the gear selector lever at **N** for vehicles with an electronic gearbox, **P** or **N** for vehicles with an automatic gearbox or neutral for vehicles with a manual gearbox.
- ☞ Press the "START/STOP" button briefly. The engine stops and the steering column locks.
- ☞ Remove the electronic key from the reader.

136

## With the Keyless Entry and Starting system

- ☞ Immobilise the vehicle.
- ☞ Place the gear selector lever at **N** for vehicles with an electronic gearbox, **P** or **N** for vehicles with an automatic gearbox or neutral for vehicles with a manual gearbox.
- ☞ With the electronic key inside the vehicle, press the "START/STOP" button. The engine stops and the steering column locks.

138

# Driving safely

## Electric parking brake



### Manual application / release

**Manual application** of the parking brake is possible by briefly **pulling** the control lever. With the ignition on or the engine running, press the brake pedal and while maintaining this pressure, briefly **push** the control lever to **release** the parking brake.

### Automatic application / release

**i** First ensure that the engine is running and the driver's door is properly closed.

The parking brake is released automatically and progressively with the movement of the vehicle.

With the vehicle at rest, the parking brake is applied automatically on switching off the ignition by pressing the START/STOP button.



If this warning lamp is on in the instrument panel, the **automatic application / release** is **deactivated**; apply and release the parking brake manually.



Before leaving the vehicle, check that the brake warning lamp in the instrument panel and the **P** warning lamp in the control lever are **on fixed (not flashing)**.

**141**

# Driving safely

## 6-speed electronic gearbox system



### Gear selector positions

- R** Reverse.
- N** Neutral.
- A** Automated mode.
- M** Manual mode

Using the steering-mounted control paddles "A" and "B":

- changing gear in manual mode,
- temporarily taking control in automated mode.



## Automatic gearbox



### Gear selector positions

- P** Park.
- R** Reverse.
- N** Neutral.
- D** Automatic mode.
- M** Manual mode.

Using the steering-mounted control paddles "A" and "B":

- changing gear in manual mode,
- temporarily taking control in automatic mode.

## Starting

- ☞ Check that the gear selector is in position **N**.
- ☞ Press firmly on the brake pedal and press the "START/STOP" button.

150

## Starting

- ☞ Check that the gear selector is in position **P** or **N**.
- ☞ Press firmly on the brake pedal and press the "START/STOP" button.

To come out of position **P**, press the brake pedal before moving the gear selector.

154

# Driving safely

## Stop & Start

### Going into engine STOP mode

#### ECO

The "ECO" warning lamp comes on in the instrument panel and the engine automatically goes into standby:

- **with a manual gearbox**, at speeds below 12 mph (20 km/h), when you put the selector lever into neutral, and you release the clutch pedal,
- **with a 6-speed electronic gearbox**, at speeds below 5 mph (8 km/h), when you press the brake pedal or when you put the selector lever in position **N**.
- **with an automatic gearbox**, with the vehicle stationary, when you press the brake pedal or when you put the selector lever in position **N**.

In some circumstances, STOP mode may not be available; the "ECO" warning lamp flashes for few seconds, then goes off.

#### 160

### Going into engine START mode

#### ECO

The "ECO" warning lamp goes off and the engine restarts automatically:

- **with a manual gearbox**, when you **fully** depress the clutch pedal,
- **with a 6-speed electronic gearbox**:
  - selector lever in position **A** or **M**, when you release the brake pedal,
  - or selector lever in position **N** and brake pedal released, when you change to position **A** or **M**,
  - or when you engage reverse.
- **with an automatic gearbox**:
  - selector lever in position **D** or **M**, when you release the brake pedal,
  - or selector lever in position **N** and brake pedal released, when you change to position **D** or **M**,
  - or when you engage reverse.

#### 161


# Driving safely

## Steering wheel with integrated controls



### Controls for speed limiter / cruise control / active cruise control

168, 171, 174

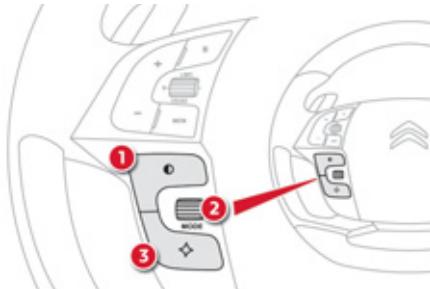

### Other controls

1. Black panel (black screen).
2. Control of the display mode of the type 2 instrument screen.
3. Courtesy lamp on / off.


56

35, 37

219

or  
Park Assist

194

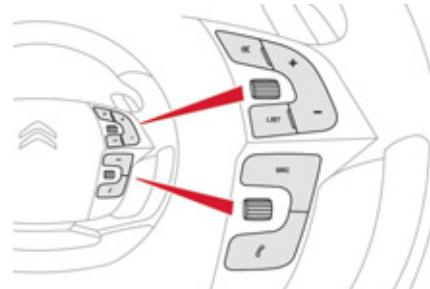

### Audio system controls

or

### Audio system and telephone controls

341

### Audio system, navigation and telephone controls

341

## Eco-driving

Eco-driving is a range of everyday practices that allow the motorist to optimise their fuel consumption and CO<sub>2</sub> emissions.

### Optimise the use of your gearbox

With a manual gearbox, move off gently and change up without waiting. During acceleration change up early.

With an automatic or electronic gearbox, give preference to automatic mode and avoid pressing the accelerator pedal heavily or suddenly.

The gear shift indicator invites you to change up: as soon as the indication to change up is displayed in the instrument panel, follow it straight away.

With an electronic or automatic gearbox, this indicator appears only in manual mode.

### Drive smoothly

Maintain a safe distance between vehicles, use engine braking rather than the brake pedal, and press the accelerator progressively. These practices contribute towards a reduction in fuel consumption and CO<sub>2</sub> emissions and also helps reduce the background traffic noise.

If your vehicle has cruise control, make use of the system at speeds above 25 mph (40 km/h) when the traffic is flowing well.

### Control the use of your electrical equipment

Before moving off, if the passenger compartment is too warm, ventilate it by opening the windows and air vents before using the air conditioning. Above 30 mph (50 km/h), close the windows and leave the air vents open.

Remember to make use of equipment that can help keep the temperature in the passenger compartment down (sunroof and window blinds...).

Switch off the air conditioning, unless it has automatic digital regulation, as soon as the desired temperature is attained.

Switch off the demisting and defrosting controls, if not automatic.

Switch off the heated seat as soon as possible.

Switch off the headlamps and front foglamps when the level of light does not require their use.

Avoid running the engine before moving off, particularly in winter; your vehicle will warm up much faster while driving.

As a passenger, if you avoid connecting your multimedia devices (film, music, video game...), you will contribute towards limiting the consumption of electrical energy, and so of fuel.

Disconnect your portable devices before leaving the vehicle.

## Limit the causes of excess consumption

Spread loads throughout the vehicle; place the heaviest items in the bottom of the boot, as close as possible to the rear seats.

Limit the loads carried in the vehicle and reduce wind resistance (roof bars, roof rack, bicycle carrier, trailer...). Use a roof box in preference. Remove roof bars and roof racks after use.

At the end of winter, remove snow tyres and refit your summer tyres.

## Observe the recommendations on maintenance

Check the tyre pressures regularly, when cold, referring to the label in the door aperture, driver's side.

Carry out this check in particular:

- before a long journey,
- at each change of season,
- after a long period out of use.

Don't forget the spare wheel and the tyres on any trailer or caravan.

Have your vehicle serviced regularly (engine oil, oil filter, air filter...) and observe the schedule of operations recommended by the manufacturer.

When refuelling, do not continue after the third cut-off of the nozzle to avoid any overflow.

At the wheel of your new vehicle, it is only after the first 1 800 miles (3 000 kilometres) that you will see the fuel consumption settle down to a consistent average.

# 7-inch touch screen tablet

The 7-inch touch screen tablet gives access to:

- the heating/air conditioning controls,
- menus for adjusting settings for vehicle functions and systems,
- audio and display configuration menus,
- audio system and telephone controls and the display of associated information, and, depending on equipment, allows:
- the display of alert messages and the visual parking sensors information,
- access to the controls for the navigation system and Internet services, and the display of associated information.



**For reasons of safety, the driver should only carry out operations that require close attention, with the vehicle stationary.**  
Some functions are not accessible when driving.

## General operation

### Recommendations

It is necessary to press firmly, particularly for "flick" gestures (scrolling through lists, moving the map...).

A light wipe is not enough.

The tablet does not recognise pressing with more than one finger.

This technology allows use at all temperatures and when wearing gloves.

Do not use pointed objects on the touch screen tablet.

Do not touch the tablet screen with wet hands.

Use a soft clean cloth to clean the tablet touch screen.

### Principles

Use the buttons on either side of the screen for access to the menus, then press the virtual buttons in the touch screen.

Each menu is displayed over one or two pages (primary page and secondary page).



Use this button to go to the secondary page.



Use this button to return to the primary page.



After a few moments with no action on the secondary page, the primary page is displayed automatically.



Use this button for access to additional information and to the settings for certain functions.



Use this button to confirm.



Use this button to quit.

## Touch screen tablet menus

### State of indicator lamps

Some buttons contain an indicator lamp that gives the state of the corresponding function. Green indicator: you have switched on the corresponding function. Orange indicator: you have switched off the corresponding function.



1. Access to the "Air conditioning" menu.  
Allows adjustment of the various settings for temperature, air flow... See the sections on "Heating", "Manual air conditioning" and "Digital air conditioning".
2. Access to the "Driving assistance" menu.  
Allows certain functions to be switched on and off and their settings adjusted.
3. Access to the "Media" menu.  
See the Audio and telematics section.
4. Access to the "Navigation" menu.  
See the Audio and telematics section.
5. Access to the "Configuration" menu  
Allows configuration of the display and the system.
6. Access to the "Connected services\*" menu.  
See the Audio and telematics section.
7. Access to the "Telephone" menu.  
See the Audio and telematics section.
8. Adjustment of volume / mute.  
See the Audio and telematics section.

\* Depending on equipment.

## "Driving assistance" menu

The functions with settings that can be adjusted are detailed in the table below.

Button	Corresponding function	Comments
	<b>Speed settings</b>	Memorisation of speeds for use with the speed limiter or cruise control.
	<b>Under-inflation initialisation</b>	Reinitialisation of the under-inflation system.
	<b>Park Assist</b>	Activation of the Park Assist function.
	<b>Stop &amp; Start</b>	Deactivation of the function.
	<b>Blind spot sensors</b>	Activation of the function.
	<b>360 vision</b>	Activation of the function then choice of options.

Button	Corresponding function	Comments
	<b>Vehicle settings</b>	<p>Access to other functions with settings that can be adjusted. The functions are grouped together under three tabs:</p> <ul style="list-style-type: none"><li>- <b>"Driving assistance"</b><ul style="list-style-type: none"><li>• "Automatic rear wiper in reverse" (Activation of rear wiper linked to reverse gear; see the "Visibility" section),</li><li>• "Auto mirror dipping in reverse" (automatic dipping of door mirrors in reverse; see the "Comfort" section).</li></ul></li><li>- <b>"Lighting"</b><ul style="list-style-type: none"><li>• "Guide-me-home lighting" (Automatic guide-me-home lighting; see the "Visibility" section),</li><li>• "Welcome lighting" (Exterior welcome lighting; see the "Visibility" section),</li><li>• "Adaptive lighting" (Cornering lighting / Directional lighting; see the "Visibility" section),</li><li>• "Mood lighting" (mood lighting; see the "Visibility" section).</li></ul></li><li>- <b>"Vehicle access"</b><ul style="list-style-type: none"><li>• "Tailgate motorisation" (Automatic operation of the tailgate; see the Access section),</li><li>• "Driver slip action" (Selective unlocking of the driver's door; see the Access section).</li></ul></li></ul>

Button	Corresponding function	Comments
<b>CHECK</b>	<b>Diagnostic</b>	List of current alerts.
	<b>Lane departure warning system</b>	Activation of the function.
	<b>Parking sensors</b>	Deactivation of the function.
	<b>Inter-vehicle time</b>	Activation of the function.
	<b>Automatic headlamp dipping</b>	Activation of the function.


## "Configuration" menu

The functions available through this menu are detailed in the table below.

Button	Corresponding function	Comments
	<b>Audio settings</b>	Adjustment of volume, balance...
	<b>Colour schemes</b>	Choice of a colour scheme.
	<b>Interactive help</b>	Simplified instructions.
	<b>Turn off screen</b>	Turns the screen off.
	<b>Brightness</b>	Adjustment of brightness.
		

Button	Corresponding function	Comments
	<b>System settings</b>	Choice of units: - temperature (°Celsius or °Fahrenheit) - distance and fuel consumption (l/100 km, mpg or km/l).
	<b>Time/Date</b>	Setting the date and time.
	<b>Languages</b>	Choice of language used (for the touch screen tablet and the type 2 instrument panel): French, English, Italian, Spanish, German, Dutch, Portuguese, Polish, Turkish, Russian.
	<b>Screen settings</b>	Adjustment of the display settings (scrolling of text, animations...)
	<b>Calculator</b>	Displays the calculator.
	<b>Calendar</b>	Displays the calendar.

# Type 1 instrument panel

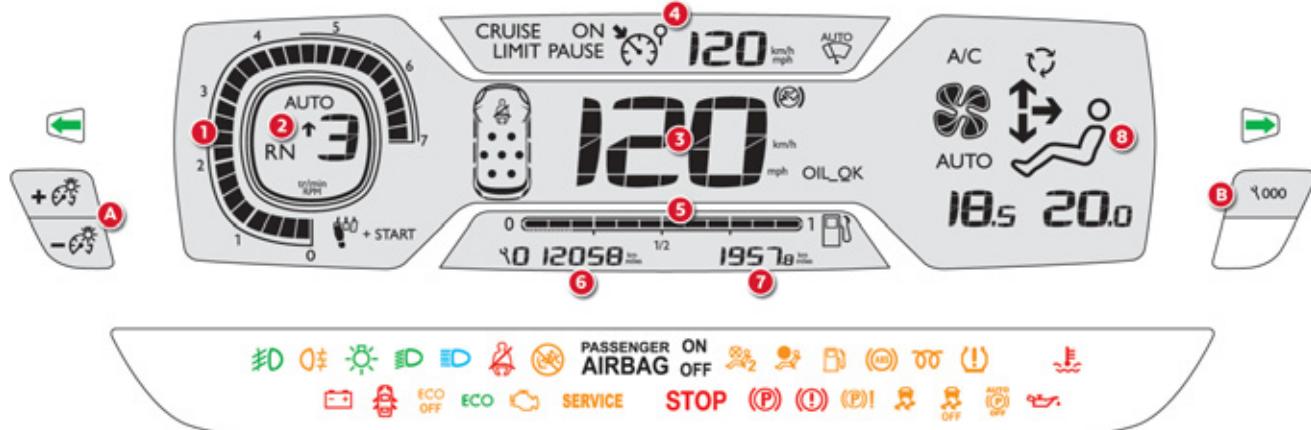

## Dials and screens

- Rev counter (x 1 000 rpm or tr/min), graduation according to engine (petrol or Diesel).
- Gear shift indicator, selector position and gear for an electronic or automatic gearbox.
- Digital speedometer (mph or km/h).
- Cruise control or speed limiter settings.
- Fuel gauge.
- Service indicator, then total mileage recorder (miles or km). These functions are displayed in turn when the ignition is switched on.
- Trip mileage recorder (miles or km).
- Repeat of air conditioning information.


## Control buttons

- Main lighting dimmer buttons.
- Recall servicing information. Reset the function selected to zero (service indicator or trip recorder).

## Type 2 instrument panel

This instrument panel is presented in the form of a 12-inch panoramic HD screen.

It can be personalised. Depending on the display mode selected, some information can be hidden (see "Personalisation of the instrument panel").

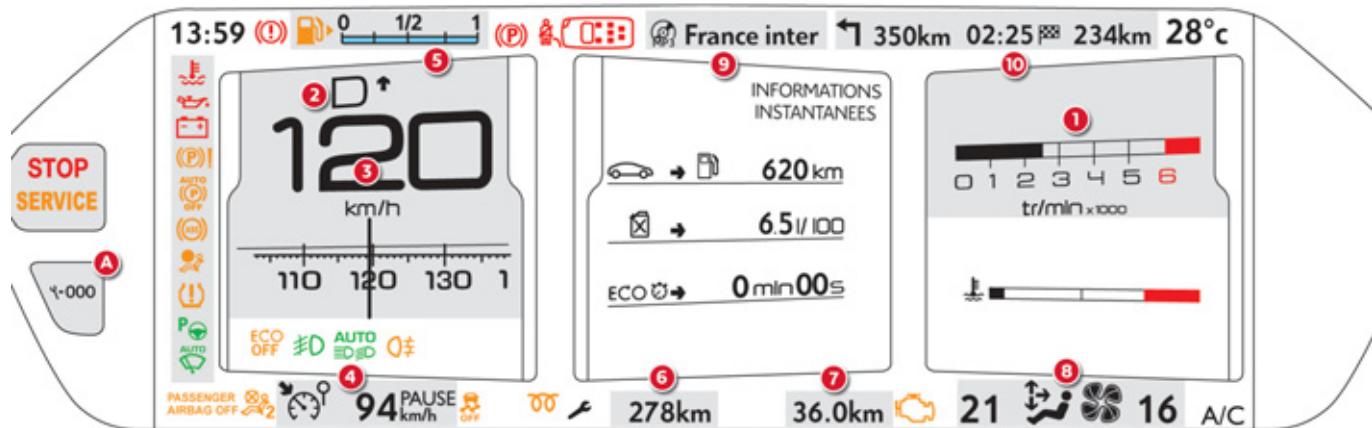


### Dials and screens

- Rev counter (x 1000 tr/min or rpm) ("DIALS" mode).
- Gear shift indicator, position of the selector lever and the gear on an electronic or automatic gearbox.
- Digital speedometer (mph or km/h).
- Cruise control or speed limiter setting.
- Fuel gauge.
- Total distance recorder (miles or km).
- Trip distance recorder (miles or km).
- Repeat of the air conditioning settings.
- Repeat of the current media or telephone information.
- Repeat of the navigation information.

### Control button

- Recall servicing information. Reset the function selected to zero (service indicator or trip recorder).

## Display zones

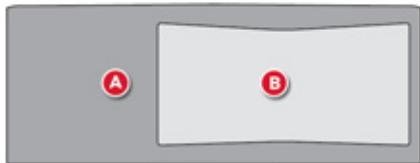

Whatever the display mode or colour scheme chosen, the instrument panel contains

- a fixed display zone **A** with:
  - the speedometer,
  - the warning lamps,
  - the fuel gauge,
  - the various repeated information and alert messages.
- a configurable display zone **B**.

Most of the warning lamps do not have a fixed position.

The warning and indicator lamps in the left hand column are displayed from top to bottom in order of importance.

For certain functions that have indicator lamps for both on and off, there is just one dedicated location.

## Personalisation of the type 2 instrument panel

You can modify the appearance of the instrument panel, by choosing:

- a colour scheme,
- a display mode.

### Choosing a colour scheme


It depends on the colour scheme chosen for the touch screen tablet. To modify it with the vehicle stationary:

- ☞ select the "**Configuration**" menu of the touch screen tablet,
- ☞ press the "**Color schemes**" button,
- ☞ choose a colour scheme,
- ☞ confirm.


The system restarts to take account of the modifications to the touch screen tablet and the instrument panel.

### Choosing the display mode

Each mode corresponds to the type of information displayed in the configurable area.

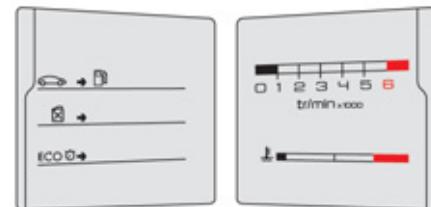


- "**DIALS**": permanent display of the trip computer, rev counter and coolant temperature indicator.

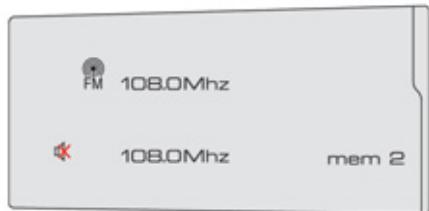

- "MEDIA": display of information related to the media being played or the radio.
- "NAVIGATION": display of information related to the navigation in progress (map and instructions).
- "PHOTOS": display of the photo selected in the "Media" menu of the touch screen tablet.




- "DRIVING": used for the display of the inter-vehicle time and information related to the active cruise control.  
The recommended speed is displayed in the central part.  
The driver remains responsible for observing the driving regulations.

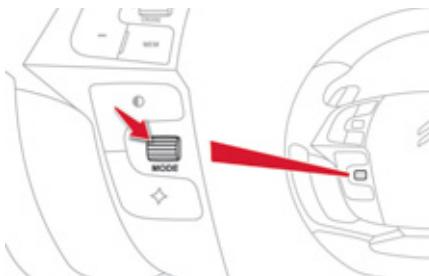

To modify the display mode of the instrument panel:

- ☞ turn the wheel on the left of the steering wheel to display and run through the different modes in the right hand part of the instrument panel,

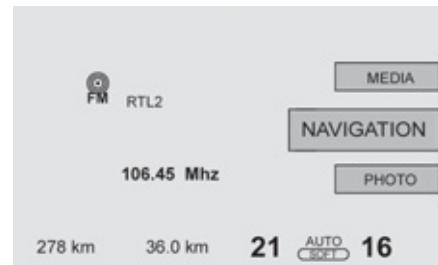

- ☞ once the selected display mode appears in the central window, press the wheel to confirm your choice.
- ☞ The new mode is applied immediately.

## Indicator and warning lamps

Visual indicators informing the driver that a system is in operation, switched off or has a fault.

### When the ignition is switched on

Certain warning lamps come on for a few seconds in the instrument panel when the vehicle's ignition is switched on.

When the engine is started, these same warning lamps should go off.

If they remain on, before moving off, refer to the information on the warning lamp concerned.

### Associated warnings

The switching on of certain warning lamps may be accompanied by an audible signal and a message.

The warning lamps may come on continuously (fixed) or flash.



Certain warning lamps may come on in one of two modes: fixed (continuous) or flashing.

Only by relating the type of illumination to the operation of the vehicle can it be determined whether the situation is normal or a fault has occurred. In the event of a fault, the illumination of the warning lamp may be accompanied by a message.

Refer to the tables on the following pages for more information.



The position of the warning lamps in the type 2 instrument panel depends on the colour scheme selected.

## Operation indicator lamps

If one of the following indicator lamps comes on in the instrument panel, this confirms that the corresponding system has come into operation.

Warning / indicator lamp		State	Cause	Action / Observations
	Left-hand direction indicator	flashing with buzzer.	The lighting stalk is pushed down.	
	Right-hand direction indicator	flashing with buzzer.	The lighting stalk is pushed up.	
	Sidelamps	fixed.	The lighting stalk is in the "Sidelamps" position.	
	Dipped beam headlamps	fixed.	The lighting stalk is in the "Dipped beam headlamps" position.	
	Main beam headlamps	fixed.	The lighting stalk is pulled towards you.	Pull the stalk to return to dipped beam headlamps.

Warning / indicator lamp	State	Cause	Action / Observations
 <b>Automatic headlamp dipping</b>	fixed.	<p>The lighting control stalk is in the "AUTO" position, pulled towards you, and the function is activated ("Driving assistance" menu). The system is in dipped beam mode as there is sufficient ambient light and/or the traffic conditions do not allow illumination of main beam.</p>	<p>The camera, located in the door mirror, manages the operation of main beam, depending on the ambient lighting and driving conditions.</p> <p>Pulling the lighting stalk again to deactivate. For more information on this function, refer to the Visibility section.</p>
		<p>The lighting control stalk is in the "AUTO" position, pulled towards you, and the function is activated ("Driving assistance" menu). The system is in main beam mode as the ambient lighting and traffic conditions allow it.</p>	
 <b>Front foglamps</b>	fixed.	The front foglamps are switched on.	Turn the ring on the stalk rearwards twice to switch off the front foglamps.
 <b>Rear foglamps</b>	fixed.	The rear foglamps are switched on.	Turn the ring on the stalk rearwards to switch off the rear foglamps.

 For more information on the lighting controls, refer to the corresponding section.

Warning / indicator lamp	State	Cause	Action / Observations
 Diesel engine pre-heating	fixed.	The "START/STOP" switch has been pressed (ignition on).	<p>Wait until the warning lamp goes off before starting. Once it goes off, starting is immediate, on condition that you maintain pressure on the brake pedal for an electronic or automatic gearbox, or the clutch pedal is pressed fully down for a manual gearbox.</p> <p>The period of illumination of the warning lamp is determined by the ambient conditions (up to about thirty seconds in extreme conditions).</p> <p>If the engine does not start, switch the ignition off and then on, wait until the warning lamp goes off again, then start the engine.</p>
 Electric parking brake	fixed.	The electric parking brake is applied.	<p>Release the electric parking brake to switch off the warning lamp: with your foot on the brake pedal, briefly push the electric parking brake control lever.</p> <p>Observe the safety recommendations.</p> <p>For more information on the electric parking brake, refer to the corresponding section.</p>
 Blind spot sensors	fixed.	The blind spot monitoring function has been activated.	For more information, refer to the corresponding section.
 Park Assist	fixed.	The Park Assist function has been activated.	For more information, refer to the corresponding section.

Warning / indicator lamp	State	Cause	Action / Observations
 <b>AUTO</b> Automatic wiping	fixed.	The wiper control is pushed downwards.	Automatic front wiping is activated. To deactivate automatic wiping, operate the control stalk downwards or put the stalk into another position.
 <b>Passenger airbag system</b>	fixed.	<p>The control switch, located at the passenger's end of the dashboard, is in the "ON" position.</p> <p>The passenger's front airbag is activated.</p> <p>In this case, do not install a rearwards-facing child seat on the front passenger seat.</p>	Turn the control switch to the "OFF" position to deactivate the front passenger's airbag. In this case you can install a rearwards-facing child seat.
 <b>Stop &amp; Start</b>	fixed.	When the vehicle stops (red lights, traffic jams, ...) the Stop & Start system has put the engine into STOP mode.	The warning lamp goes off and the engine restarts automatically in START mode, as soon as you want to move off.
	flashes for a few seconds, then goes off.	STOP mode is temporarily unavailable. or START mode is invoked automatically.	For more information on special cases with STOP mode and START mode, refer to the "Stop & Start" section.

## Deactivation indicator lamps

If one of the following indicator lamps comes on, this confirms that the corresponding system has been switched off intentionally. This is may be accompanied by an audible signal and the display of a message.

Warning / indicator lamp	State	Cause	Action / Observations
 <b>Passenger's airbag system</b>	fixed.	<p>The control switch, located at the right hand end of the dashboard is set to the <b>OFF</b> position.</p> <p>The passenger's front airbag is deactivated.</p>	<p>Set the control to the "ON" position to activate the passenger's front airbag.</p> <p>In this case, do not fit a child seat in the rearward-facing position.</p>
 <b>Dynamic stability control (DSC/ASR)</b>	fixed.	<p>The button, located on the centre console, is pressed. Its indicator lamp is on.</p> <p>The DSC/ASR is deactivated.</p> <p>DSC: dynamic stability control.</p> <p>ASR: anti-slip regulation.</p>	<p>Press the button to activate the DSC/ASR. Its indicator lamp goes off.</p> <p>The DSC/ASR system is activated automatically when the vehicle is started.</p> <p>If deactivated, the system is reactivated automatically from around 30 mph (50 km/h).</p>
 <b>Stop &amp; Start</b>	fixed.	The Stop & Start has been deactivated.	Reactivate the function via the "Driving assistance" menu.

## Warning lamps

When the engine is running or the vehicle is being driven, illumination of one of the following warning lamps indicates a fault which requires action on the part of the driver.

Any fault resulting in the illumination of a warning lamp must be investigated further using the associated message.

If you encounter any problems, contact a CITROËN dealer or a qualified workshop.

Warning / indicator lamp	State	Cause	Action / Observations
<b>STOP</b>	<b>STOP</b>	fixed, associated with another warning lamp, accompanied by an audible signal and a message.	Illumination of this warning lamp is related to a serious fault detected with the braking or power steering systems, the electrical system, or with engine lubrication or cooling or a puncture.  Stop as soon as it is safe to do so as the engine may cut out. Park, switch off the ignition and call a CITROËN dealer or a qualified workshop.

Warning / indicator lamp		State	Cause	Action / Observations
<b>SERVICE</b>	Service	on temporarily.	A minor fault has occurred for which there is no specific warning lamp.	<p>Identify the fault by means of the associated message, such as:</p> <ul style="list-style-type: none"> <li>- opening of a door, the boot or bonnet,</li> <li>- low engine oil level,</li> <li>- low screenwash/headlamp wash fluid level,</li> <li>- discharged remote control battery,</li> <li>- low tyre pressures,</li> <li>- saturation of the particle emission filter (PEF) on Diesel vehicles.</li> </ul> <p>For more information on the PEF, refer to the "Checks - particle emissions filter" section.</p> <p>For any other faults, contact a CITROËN dealer or a qualified workshop.</p>
		fixed.	A major fault has occurred for which there is no specific warning lamp.	Identify the fault by reading the message and contact a CITROËN dealer or a qualified workshop.

Warning / indicator lamp	State	Cause	Action / Observations
 <b>Electric parking brake</b>	flashing.	When driving: the electric parking brake is not fully released.	Fully release the parking brake by a quick press on the control lever. If the warning persist, stop as soon as it is safe to do so. Contact a CITROËN dealer or a qualified workshop.
		When stationary: parking brake applied, the system does guarantee immobilisation of the vehicle (when parking on a very steep slope, for example).	Secure the immobilisation of the vehicle by engaging a gear with a manual or electronic gearbox, by placing the gear selector in position <b>P</b> with an automatic gearbox, or by fitting a chock to one of the wheels.
 <b>Electric parking brake fault</b>	fixed.	The electric parking brake has a fault.	Contact a CITROËN dealer or a qualified workshop without delay. The parking brake can be released manually. For more information on the electric parking brake, refer to the corresponding section.
 <b>Deactivation of the automatic functions of the electric parking brake</b>	fixed.	The "automatic application" (on switching off the engine) and "automatic release" functions are deactivated or faulty. In the event of a fault, illumination of this warning lamp is accompanied by a message.	To reactivate the automatic functions, refer to the "Electric parking brake" section. Contact a CITROËN dealer or a qualified workshop if automatic application / release is not possible. The parking brake can be released manually. For more information on the electric parking brake, refer to the corresponding section.

Warning / indicator lamp	State	Cause	Action / Observations
 <b>Braking</b>	fixed.	The braking system fluid level has dropped significantly.	You must stop as soon as it is safe to do so. Top up with brake fluid listed by CITROËN. If the problem persists, have the system checked by a CITROËN dealer or a qualified workshop.
 + 		fixed, associated with the ABS warning lamp.	The electronic brake force distribution (EBFD) system has a fault. You must stop as soon as it is safe to do so. Have it checked by a CITROËN dealer or a qualified workshop.
	<b>Anti-lock Braking System (ABS)</b>	fixed.	The anti-lock braking system has a fault. The vehicle retains conventional braking. Drive carefully at reduced speed and contact a CITROËN dealer or a qualified workshop without delay.
	<b>Dynamic stability control (DSC/ASR)</b>	flashing.	The DSC/ASR regulation is operating. The system optimises traction and improves the directional stability of the vehicle.
		fixed.	Unless it has been deactivated (button pressed and its indicator lamp on) the DSC/ASR system has a fault. Have it checked by a CITROËN or a qualified workshop.
	<b>Engine autodiagnosis system</b>	flashing.	The engine management system has a fault. Risk of destruction of the catalytic converter. Have it checked by a CITROËN dealer or a qualified workshop.
	fixed.	The emission control system has a fault. The warning lamp should go off when the engine is started. If it does not go off, contact a CITROËN dealer or qualified workshop without delay.	

Warning / indicator lamp	State	Cause	Action / Observations
 <b>Low fuel level</b>	fixed, accompanied by an audible signal and a message.	When it first comes on there remains <b>approximately 6 litres of fuel</b> in the tank. You are then using the fuel reserve.	You must refuel as soon as possible to avoid running out of fuel. Until sufficient fuel is added, this warning lamp will come on every time the ignition is switched on, accompanied by an audible signal and a message. This audible signal and message are repeated with increasing frequency as the drops towards "0". Fuel tank capacity: approximately 57 litres (petrol) or 55 litres (Diesel). Never continue to drive until you run out of fuel as this could damage the emission control and injection systems.
 <b>Seat belt(s) not fastened / unfastened</b>	fixed or flashing accompanied by an audible signal.	A seat belt has not been fastened or has been unfastened.	Pull the strap then insert the tongue in the buckle.
 <b>Airbags</b>	on temporarily.	This lamp comes on for a few seconds when you turn on the ignition, then goes off.	This lamp should go off when the engine is started. If it does not go off, contact a CITROËN dealer or a qualified workshop.
	fixed.	One of the airbag or seat belt pretensioner systems has a fault.	Have it checked by a CITROËN dealer or a qualified workshop.
 <b>Passenger airbag system</b>	flashing.	The passenger airbag system has a fault.	Do not have a passenger seated in the front passenger seat Have it checked by a CITROËN dealer or a qualified workshop.

Warning / indicator lamp	State	Cause	Action / Observations
	<b>Directional headlamps</b>	flashing.	The directional headlamps system has a fault. Have it checked by a CITROËN dealer or a qualified workshop.
	<b>Door(s) open*</b>	fixed, associated with a message identifying the door, if the speed is below 6 mph (10 km/h).	A door or the boot is still open. Close the door or boot.
		fixed, associated with a message identifying the door, and accompanied by an audible signal if the speed is above 6 mph (10 km/h).	
	<b>Battery charge</b>	fixed.	The battery charging circuit has a fault (dirty or loose terminals, slack or cut alternator belt, ...). The warning lamp should go off when the engine is started. If it does not go off, contact a CITROËN dealer or a qualified workshop.
	<b>Maximum coolant temperature</b>	fixed red.	The temperature of the cooling system is too high. Stop as soon as it is safe to do so. Wait until the engine has cooled down before topping up the level, if necessary. If the problem persists, contact a CITROËN dealer or qualified workshop.
	<b>Engine oil pressure</b>	fixed.	There is a fault with the engine lubrication system. You must stop as soon it is safe to do so. Park, switch off the ignition and contact a CITROËN dealer or a qualified workshop.

\* Only with the type 1 instrument panel.


Warning / indicator lamp	State	Cause	Action / Observations
 <b>Under-inflation</b>	fixed.	The pressure in one or more wheels is too low.	<p>Check the pressure of the tyres as soon as possible. This check should preferably be carried out when the tyres are cold.</p> <p>You must reinitialise the system after the adjustment of one or more tyre pressures and after changing one or more wheels.</p>
	+ <b>SERVICE</b>	flashing then fixed, accompanied by the Service warning lamp.	<p>The system has fault: the tyre pressures are no longer monitored.</p> <p>Check the tyre pressures as soon as possible. Have the system checked by a CITROËN dealer or a qualified workshop.</p>
 <b>Foot on the brake pedal*</b>	fixed.	The brake pedal is not pressed.	<p>With an electronic gearbox, press the brake pedal to start the engine (lever in position N).</p> <p>If you wish to release the parking brake without pressing the brake pedal, this warning lamp will remain on.</p> <p>With an automatic gearbox, press the brake pedal to move the gear selector out of position P.</p>
	flashing.	With an electronic gearbox, if you hold the vehicle on an incline using the accelerator for too long, the clutch overheats.	Use the brake pedal and/or the parking brake.
 <b>Foot on the clutch*</b>	fixed.	In the STOP mode of Stop & Start, changing to START mode is refused because the clutch pedal is not fully down.	You must declutch fully to allow the change to engine START mode.

\* Only with the type 1 instrument panel

## Service indicator

System which informs the driver when the next service is due, in accordance with the manufacturer's servicing schedule. The point at which the service is due is calculated from the last indicator zero reset. It is determined by two parameters:

- the distance travelled,
- the time elapsed since the last service.

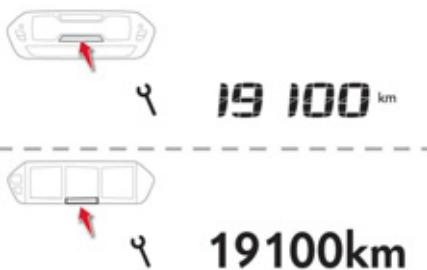

### More than 1 800 miles (3 000 km) remain before the next service is due

When the ignition is switched on, no service information appears in the screen.

### Between 600 miles (1 000 km) and 1 800 miles (3 000 km) remain before the next service is due

For 5 seconds after the ignition is switched on, the spanner symbolising the service operations comes on. The distance recorder display line indicates the distance remaining before the next service is due.

**Example:** 1 700 miles (2 800 km) remain before the next service is due.

For 5 seconds after the ignition is switched on, the screen indicates:



5 seconds after the ignition is switched on, the spanner goes off; the distance recorder resumes its normal operation. The screen then indicates the total and trip distances.



### Less than 600 miles (1 000 km) remain before the next service is due

**Example:** 560 miles (900 km) remain before the next service is due.

For 5 seconds after the ignition is switched on, the screen indicates:



5 seconds after the ignition is switched on, the distance recorder resumes its normal operation.

**The spanner remains on** to indicate that a service must be carried out soon.



## Service overdue

For 5 seconds after the ignition is switched on, the **spanner flashes** to indicate that the service must be carried out as soon as possible.

**Example:** the service is overdue by 186 miles (300 km).


For 5 seconds after the ignition is switched on, the screen indicates:



5 seconds after the ignition is switched on, the distance recorder resumes its normal operation. **The spanner remains on.**

**i** The distance remaining may be weighted by the time factor, depending on the driving conditions.

Therefore, the spanner may also come on if you have exceeded the period since the last service, indicated in the **servicing and warranty booklet**.

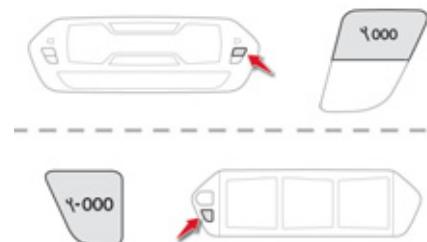

## Service indicator zero reset

After each service, the service indicator must be reset to zero.

The procedure for resetting to zero is as follows:

- ☞ switch off the ignition,
- ☞ press and hold the trip distance recorder zero reset button,
- ☞ switch on the ignition; the distance recorder display begins a countdown,
- ☞ when the display indicates "=0", release the button; the spanner disappears.

**i** Following this operation, if you wish to disconnect the battery, lock the vehicle and wait at least five minutes for the zero reset to be taken into account.

## Retrieving the service information

You can access the service information at any time.


- ☞ Press the trip distance recorder zero reset button.

The service information is displayed for a few seconds, then disappears.

## Engine oil level indicator


System which informs the driver whether the engine oil level is correct or not. This information is indicated for a few seconds when the ignition is switched on, after the service information.

**i** The level read will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.

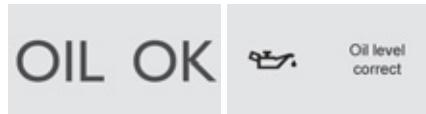


### Oil level correct

This is indicated by a message in the instrument panel.

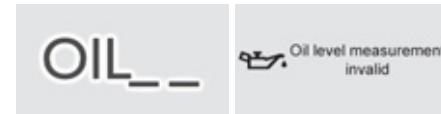

### Oil level indicator fault

This is indicated by a message in the instrument panel. Contact a CITROËN dealer or a qualified workshop.

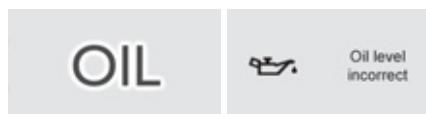

### Oil level incorrect

This is indicated by a message in the instrument panel.  
If the low oil level is confirmed by a check using the dipstick, the level must be topped up to avoid damage to the engine.




There are 2 marks on the dipstick:

- **A** = max; never exceed this level,
- **B** = min; top up the level via the oil filler, using the grade of oil suited to your engine.

## Distance recorders

The total and trip distances are displayed for thirty seconds when the ignition is switched off, when the driver's door is opened and when the vehicle is locked or unlocked.

**i** To conform to legislation in the country you are crossing, change the units of distance (miles or km) via the configuration menu.

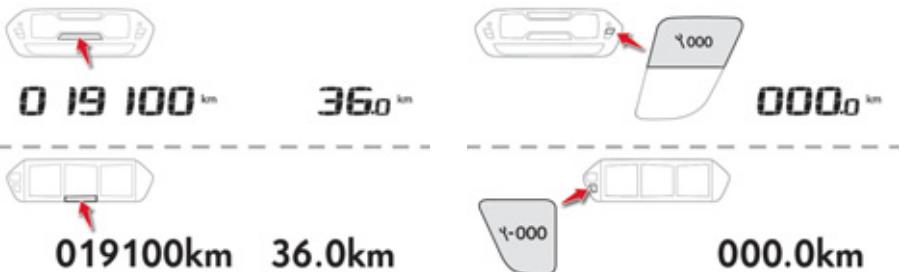

### Total distance recorder

System which measures the total distance travelled by the vehicle since its first registration.

### Trip distance recorder


System which measures a distance travelled during a day or other period since it was reset to zero by the driver.

- With the ignition on, press the button until zeros appear.

## Lighting dimmer control

Allows the manual adjustment of the brightness of the instrument panel and touch screen tablet to suit the ambient light level.


Operates only when the vehicle lighting is on, with the exception of the daytime running lamps.

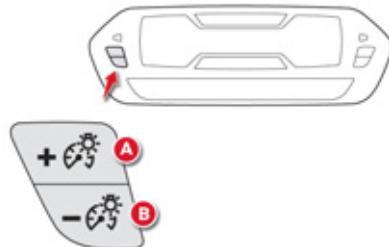

### Two buttons

With the headlamps on, press button **B** to increase the brightness of the instruments and controls and the interior mood lighting or button **A** to reduce it.

As soon as the lighting reaches the required level of brightness, release the button.

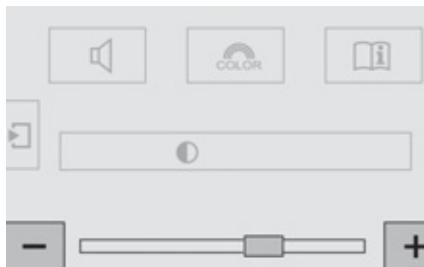

### Touch screen tablet


- Press on the "Configuration" menu.
- Adjust the brightness by pressing on the "+" or "-" buttons.

## Black screen (black panel)

System allowing certain displays in the instrument panel to be switched off for night driving.

The instrument panel remains on with the vehicle speed, the gear selected in an electronic or automatic gearbox, cruise control or speed limiter information, if in use, and the low fuel alerts as appropriate.


If there is an alert or a change in a function or to a setting, the black panel mode is interrupted.

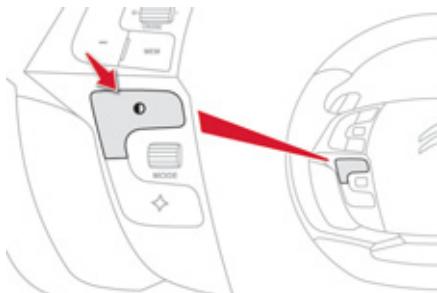

### Using the steering mounted control:


- ☞ With the vehicle lighting on, press this button again to activate the black panel.
- ☞ Press this button again to deactivate it.

## Black screen (touch screen tablet)

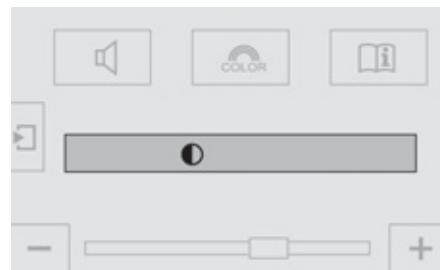

- ☞ Press on the "Configuration" menu.
- ☞ Press the "Turn off screen" button. The screen in the touch screen tablet goes off. Press the screen again (anywhere on its surface) to switch it on again.


# Setting the date and time

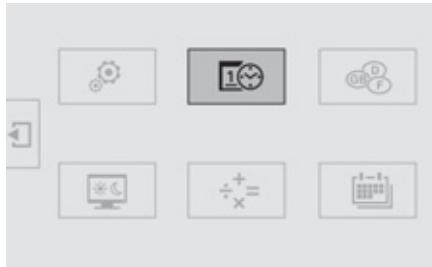

☞ Select the "Configuration" menu.



☞ From the secondary page, select "Time/Date".

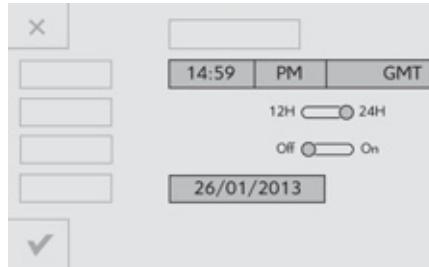

☞ Select "Adjust time" or "Adjust date" and modify the settings using the number pad, then confirm.



☞ Press "Confirm" to quit.




# Trip computer

## Type 1 instrument panel

System that gives you information on the journey in progress (range, fuel consumption...).

The information is accessible in the "Driving assistance" menu.

### Information display in the touch screen tablet

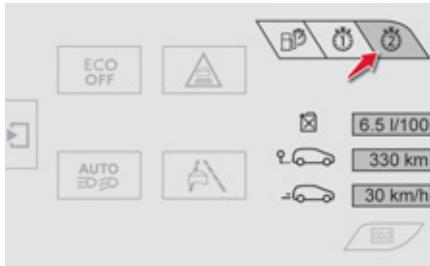

Permanent display:

☞ Select the "Driving assistance" menu.

The trip computer information is displayed in the primary page of the menu.

☞ Press one of the buttons to display the desired tab.

Temporary display in a new window:

☞ Press the end of the wiper control stalk for access to the information and display the different tabs.



- The current fuel consumption tab with:
  - the range,
  - the current fuel consumption,
  - the Stop & Start time counter.



- The trip "1" tab with:
  - the distance travelled.
  - the average fuel consumption,
  - the average speed,
  - for the first trip.



- The trip "2" tab with:
  - the distance travelled.
  - the average fuel consumption,
  - the average speed,
  - for the second trip.

### Trip reset



☞ When the desired trip is displayed, press the reset button or on the end of the wiper control stalk.

Trips "1" and "2" are independent but their use is identical.


For example, trip "1" can be used for daily figures, and trip "2" for monthly figures.

# Trip computer

## Type 2 instrument panel


### Information display in the instrument panel

The display of trip computer information is permanent when you select the "DIALS" display mode.

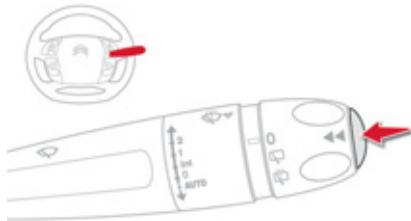


For all other display modes, pressing the end of the wiper stalk displays this information in a new window.

☞ Press the button on the end of the **wiper control stalk** to display the various tabs in succession.

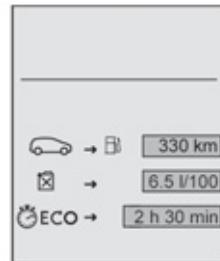

- The current information tab with:
  - the range,
  - the current fuel consumption,
  - the Stop & Start time counter.
- Trip "1" with:
  - the average speed,
  - the average fuel consumption,
  - the distance travelled,
  - for the first trip.
- Trip "2" with:
  - the average speed,
  - the average fuel consumption,
  - the distance travelled,
  - for the second trip.

### Trip reset

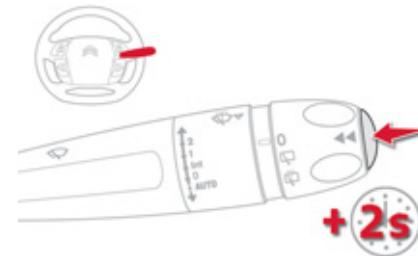

☞ When the trip required is displayed, press the control for more than two seconds or use the left hand thumb wheel of the steering mounted controls.

Trips "1" and "2" are independent but their use is identical.

For example, trip "1" can be used for daily figures, and trip "2" for monthly figures.

## Trip computer, a few definitions



### Range

(miles or km)

The distance which can still be travelled with the fuel remaining in the tank (related to the average fuel consumption over the last few miles (kilometres) travelled).



This value may vary following a change in the style of driving or the relief, resulting in a significant change in the current fuel consumption.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).



If dashes are displayed continuously while driving in place of the digits, contact a CITROËN dealer or a qualified workshop.



### Current fuel consumption

(mpg or l/100 km or km/l)

Calculated over the last few seconds.



This function is only displayed from 20 mph (30 km/h).



### Average fuel consumption

(mpg or l/100 km or km/l)

Calculated since the last trip computer reset.



### Average speed

(mph or km/h)

Calculated since the last trip computer reset.



### Distance travelled

(miles or km)

Calculated since the last trip computer reset.




### Stop & Start time counter

(minutes / seconds or hours / minutes)

If your vehicle is fitted with Stop & Start, a time counter calculates the time spent in STOP mode during a journey.

It resets to zero every time the ignition is switched on with the START/STOP button.

# Electronic key Remote control

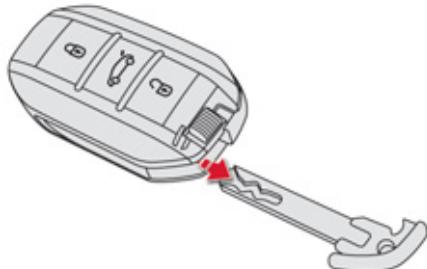


System which permits remote locking or unlocking of the vehicle as well as opening the boot and, depending on version, operation of the alarm. It also allows the location and starting of the vehicle as well as providing protection against theft.

The electronic key includes an integral back-up emergency key.

## Unlocking the vehicle

### Complete unlocking

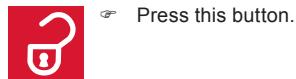

☞ Press this button.

### Selective unlocking

- ☞ To unlock only the driver's door, press this button once.
- ☞ To unlock the other doors and the boot, press this button again.

The setting of the selective unlocking is done in the "Driving assistance" menu, then "Vehicle settings".

Complete unlocking is activated by default.

## Unlocking the vehicle and opening the boot



☞ Make a long press on this button to unlock the vehicle and, depending on version, release the tailgate or open the motorised tailgate.

Settings for the motorised tailgate can be adjusted in the "Driving assistance" menu, then "Vehicle settings".

Motorised operation is activated by default.



The direction indicators flash for a few seconds. The door mirror spot lamps come on. Depending on version, the door mirrors unfold, the welcome lighting comes on, the alarm is deactivated.

## Locking the vehicle

### Normal locking



- ☞ Press this button.  
Holding the button allows the windows to be raised to the desired position.



- Ensure that nothing could prevent the correct closing of the windows.  
Be aware of children when operating the windows.



- The direction indicators come on for a few seconds.  
Depending on your version, the door mirrors fold, the alarm is activated.



- If a door or the boot is not properly closed, locking does not take place. Nevertheless, the alarm (if fitted) will be fully activated after around 45 seconds. If the vehicle is unlocked by mistake and no action is taken on the doors or boot, the vehicle will lock itself again automatically after about thirty seconds. If the alarm had already been activated, it will not be reactivated automatically.



- The automatic folding and unfolding of the door mirrors can be deactivated by a CITROËN dealer or a qualified workshop.

## Locating your vehicle

### Deadlocking

- ! Deadlocking renders the interior door controls inoperative.  
It also deactivates the manual central locking button.  
Therefore, never leave anyone inside the vehicle when it is deadlocked.

This function allows you to identify your vehicle from a distance, particularly in poor light. Your vehicle must be locked.



☞ Press this button.


This will switch on the courtesy lamps and the direction indicators will flash for about 10 seconds.

☞ With the vehicle unlocked, press this button.

☞ Within five seconds, press this button again to deadlock the vehicle.



# "Keyless Entry and Starting" system

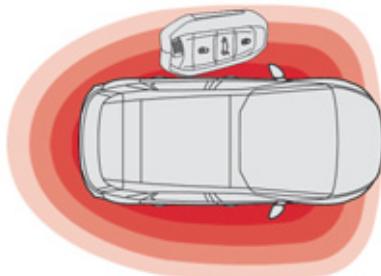


System that allows the opening, closing and starting of the vehicle while keeping the electronic key on your person.

**i** The electronic key can also be used as a remote control; refer to the "Key / remote control" section.

**i** For reasons of safety and theft protection, do not leave your electronic key in the vehicle, even when you are close to it. It is recommended that you keep it on your person: in a pocket, bag, ...

## Unlocking the vehicle

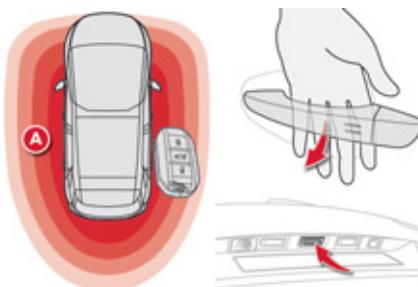

## Complete unlocking

**☞** With the electronic key on your person and in the defined zone **A**, pass your hand behind the door handle of one of the front doors to unlock the vehicle or press the tailgate opening control. Pull the door handle to open the door.

## Selective unlocking


- ☞** To unlock only the drivers door, with the electronic key on your person, pass your hand behind the driver's door handle. Pull the door handle to open.
- ☞** To unlock the complete vehicle, pass your hand behind one of the door handle of the front passenger door with the electronic key close to the passenger door, or press the tailgate opening control with the electronic key close to the rear of the vehicle.

Activation or deactivation of the selective unlocking is done in the "**Driving assistance**" menu, then "**Vehicle settings**".

By default, complete unlocking is activated.

**i** The direction indicators flash for a few seconds. Depending on version, the door mirrors unfold, the welcome lighting comes on, the alarm is deactivated.

## Locking the vehicle

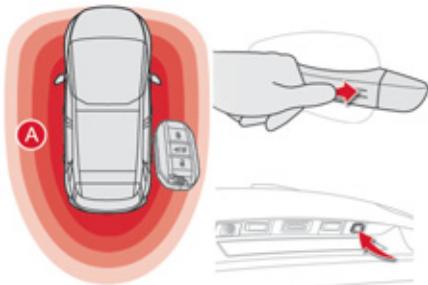

### Normal locking


- With the electronic key in the defined zone **A**, press with a finger or thumb on one of the door handles (at the markings) or press the locking button on the tailgate. Maintaining pressure allows the windows to be raised to the desired position.



Ensure that nothing could prevent the correct operation of the windows. Be aware of children when operating the windows.



The direction indicators come on for a few seconds. Depending on your version, the door mirrors fold, the alarm is activated.

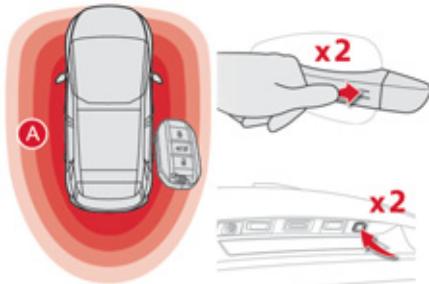

## Deadlocking

! Deadlocking renders the interior door controls inoperative. It also deactivates the manual central control button. Therefore, never leave anyone inside the vehicle when it is deadlocked.

By the doors:

- ☞ With the electronic key in the defined zone A, press a finger or thumb on one of the front door handles (at the markings) or the locking button located on the tailgate to lock the vehicle.
- ☞ Within five seconds, press the door handle or the locking button located on the tailgate again to deadlock the vehicle.

**i** If one of the doors or the boot is still open or if the electronic key for the Keyless Entry and Starting system has been left inside the vehicle, the central locking does not take place. However, the alarm (if present) will be fully activated after about 45 seconds.

If the vehicle is unlocked by mistake and with no action on the doors or boot, the vehicle will lock again automatically after about thirty seconds.

If the alarm had been activated previously, it will not be reactivated automatically.

The automatic folding and unfolding of the door mirrors can be deactivated by a CITROËN dealer or a qualified workshop.



**!** As a safety measure (children on board), never leave the vehicle without taking the key for the Keyless Entry and Starting system, even for a short period. Be aware of the risk of theft when the key for the Keyless Entry and Starting system is in one of the defined zones with the vehicle unlocked.

**i** In order to preserve the battery in the electronic key and the vehicle's battery, the "Hands-free" functions are put into long-term standby after 21 days without use. To restore these functions, press one of the remote control buttons or start the engine with the electronic key in the reader (see the "Starting with the Keyless Entry and Starting system" section).

**!** Accumulations (water, dust, grime, salt...) on the inner surface of the door handle may affect detection. If cleaning the inner surface of the door handle using a cloth does not restore detection, contact a CITROËN dealer or a qualified workshop. A sudden splash of water (stream of water, high pressure jet washer, ...) may be identified by the system as the desire to open the vehicle.

# Emergency procedure

## Emergency unlocking/locking using the integral key

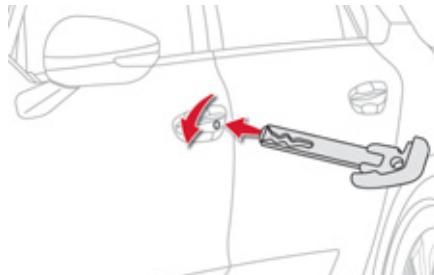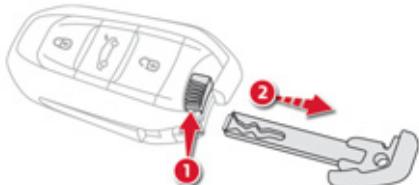

The integral key is used to lock and unlock the vehicle when the electronic key cannot operate and in the event of a fault with the Keyless Entry and Starting system:

- cell battery flat, vehicle battery discharged or disconnected, ...
- vehicle located in an area with strong electromagnetic signals.

☞ Press and hold the latch **1** to extract the integral key **2**.

The integral key is also used to deactivate/reactivate the passenger's airbag.


It provides a backup means of locking the passenger doors.

It also allows locking of the vehicle without activation of the alarm.

### Unlocking

☞ Turn the key towards the front of the vehicle to unlock the vehicle.

**i** Depending on your version, the direction indicators flash for a few seconds, the door mirrors unfold and the welcome lighting comes on. If the alarm was activated, the siren will sound on opening the door with the key (in the remote control). It stops when the ignition is switched on.

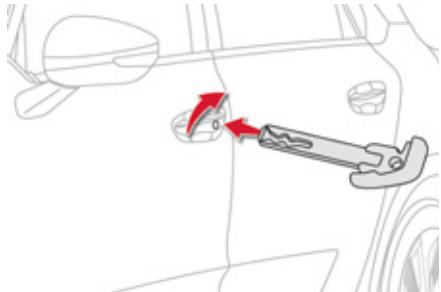

## Normal locking

- Turn the key towards the rear of the vehicle to lock the vehicle completely.



Depending on your version, the direction indicators flash for a few seconds, the door mirrors fold.


## Deadlocking

- Turn the key towards the rear in the driver's door lock to lock the vehicle completely.
- Turn the key towards the rear again within five seconds to deadlock the vehicle.



If your vehicle has an alarm, this function is not activated by locking with the integral key.


## Remote control problem - reinitialisation

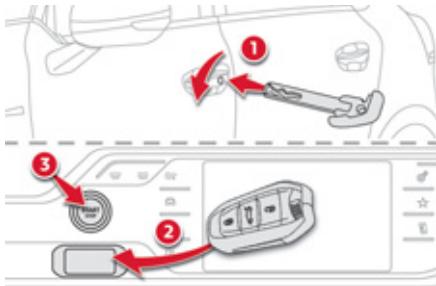

Following disconnection of the vehicle battery, replacement of the remote control battery or in the event of a remote control malfunction, you can no longer unlock, lock or locate your vehicle.

- ☞ Place the mechanical key (integral with the remote control) in the lock to unlock your vehicle.
- ☞ Place the electronic key in the reader.
- ☞ Switch on the ignition by pressing START/STOP.

The electronic key is fully operational again. If the problem persists, contact a CITROËN dealer or a qualified workshop as soon as possible.

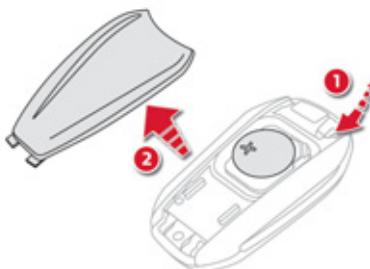

### Changing the battery of the electronic key

Battery ref.: CR2032 / 3 volts.

A message appears in the instrument panel screen when replacement of the battery is needed.

- ☞ Unclip the cover using a small screwdriver at the cutout.
- ☞ Lift off the cover.
- ☞ Remove the flat battery from its location.
- ☞ Fit the new battery into its location observing the original direction of fitment.
- ☞ Clip the cover onto the casing.



Do not throw the remote control batteries away, they contain metals which are harmful to the environment. Take them to an approved collection point.

## ! Lost electronic key

Visit a CITROËN dealer with the vehicle's registration document and your personal identification documents and if possible the key code label. The CITROËN dealer will be able to retrieve the key code and the transponder code required to order a new key.

## Electronic key

The electronic key is a sensitive system; do not operate it while it is in your pocket as there is a possibility that it may unlock the vehicle, without you being aware of it.

Do not repeatedly press the buttons of your electronic key out of range and out of sight of your vehicle. You run the risk of stopping it from working and the remote control would have to be reinitialised.

The electronic key cannot operate as a remote control when it is in the reader or even when the ignition is switched on.

## Locking the vehicle

Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency. As a safety precaution (with children on board), take the electronic key with you when you leave the vehicle, even for a short time.

## Electrical interference

The electronic key may not operate if close to certain electronic devices: telephone, laptop computer, strong magnetic fields, ...

## Anti-theft protection


Do not make any modifications to the electronic engine immobiliser system; this could cause malfunctions.

## When purchasing a second-hand vehicle

Have all of the keys in your possession paired by a CITROËN dealer, to ensure that only your keys allow your vehicle to be unlocked and started.

# Central locking

## Manual central locking

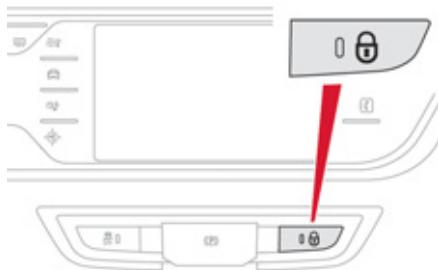

- Press this button to operate the central locking of the vehicle (doors and boot) from inside the vehicle.
- Pressing the button again unlocks the vehicle completely.

### ! When locking / deadlocking from the outside

If the vehicle is locked or deadlocked from the outside, the button is not active.

- After normal locking, pull one of the interior door handles to unlock the vehicle.
- After deadlocking, you have to use the remote control, the Keyless Entry and Starting system or the integral key to unlock the vehicle.

## Automatic central locking of doors (anti-intrusion security)

The doors and boot lock automatically when driving, as soon as the speed exceeds 6 mph (10 km/h).

To activate or deactivate this function (activated by default):

- with the ignition on, press this button until a message appears in the instrument panel.


! If one of the doors or the boot is open, automatic central locking does not complete: the sound of the locks rebounding can be heard.

### i Transporting long or voluminous objects

If you want to drive with the boot open but the vehicle's side doors locked, press the central locking control button to lock the doors.


! Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.

## Doors Opening

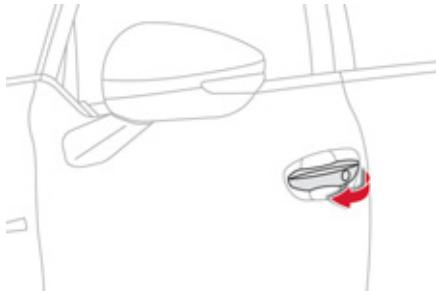

### From outside

- After unlocking the vehicle using the remote control or the Keyless Entry and Starting system, pull the door handle.

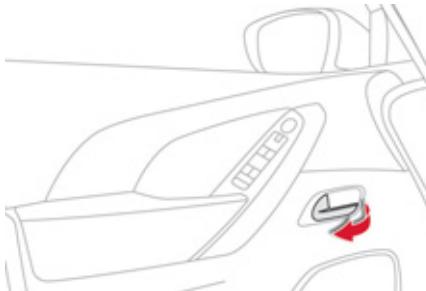

### From inside

- Pull the front or rear door lever to open the door.

## Closing




If a door is not properly closed:

- with the engine running**, this warning lamp and a message appear in the instrument panel (type 1) for a few seconds,
- when driving** (speed above 6 mph (10 km/h)), this warning lamp and a message, accompanied by an audible signal, appear in the instrument panel (type 1 and type 2) for a few seconds.

## Back-up control

System allowing the doors to be locked and unlocked manually in the event of a malfunction of the central locking system or battery failure.

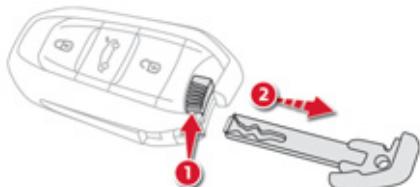


### Locking the driver's door

- ☞ Insert the integral key in the door lock, then turn it to the rear.

You can also apply the procedure described for the passenger doors.

### Unlocking the driver's door

- ☞ Insert the integral key in the door lock, then turn it to the front.

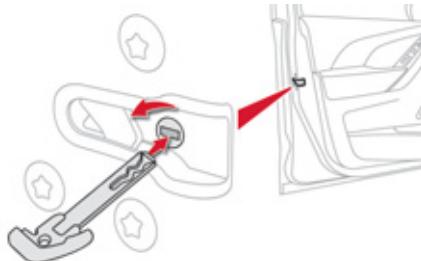

### Locking the front and rear passenger doors

- ☞ Open the doors.
- ☞ For the rear doors, check that the child lock is not on (see the "Manual child lock" section).
- ☞ Insert the integral key in the latch located on the edge of the door and turn it an eighth of a turn to the right for the right hand door, and to the left for the left hand door.

Locking is effective when the slot is horizontal.

- ☞ Close the doors and check that the vehicle has locked correctly from the outside.

### Unlocking the front and rear passenger doors

- ☞ Pull the interior door opening control.

! To ensure complete locking of the vehicle, only disconnecting the battery inhibits opening of the tailgate from the outside.

# Boot

## Opening the tailgate


### With the electronic key / remote control



- ☞ Make a long press on this button to release the tailgate. If the vehicle was locked, this action first unlocks the vehicle.
- ☞ Raise the tailgate.



When selective unlocking is activated, the electronic key must be close to the rear of the vehicle.

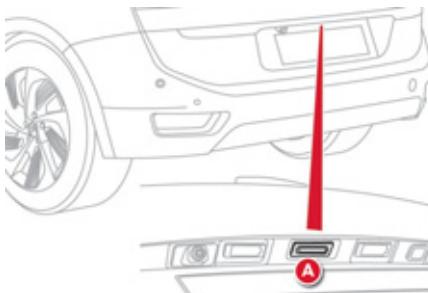

### With the tailgate opening control

- ☞ With the vehicle unlocked or with the electronic key of the Keyless Entry and Starting system in the zone covered, press the tailgate control A.
- ☞ Raise the tailgate.



The tailgate is not designed to take a bicycle carrier.

## Closing the tailgate


- ☞ Lower the tailgate using the interior grips.
- ☞ Release the grips and press down on the outside of the tailgate to close it.

If the tailgate is not properly closed:



- **engine running**, this warning lamp and a message appear in the instrument panel (type 1) for a few seconds,
- **vehicle running** (speed above 6 mph (10 km/h)), this warning lamp and a message appear in the instrument panel (type 1 and type 2) for a few seconds, accompanied by an audible signal.

# Motorised tailgate

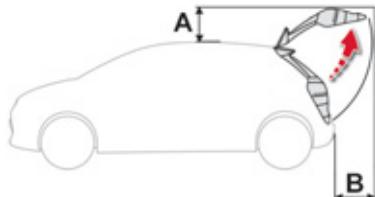


	<b>A = 517 mm</b>
	<b>B = 431 mm</b>
	<b>A = 448 mm</b>
	<b>B = 573 mm</b>

Check that there is enough space to allow for the movement of the tailgate.

Activation and deactivation of the motorised tailgate function is done in the "**Driving assistance**" menu, then "**Vehicle settings**". This function is deactivated by default.


**!** The tailgate is not designed to support a bicycle carrier. When installing a bicycle carrier on a towbar, it is essential to deactivate the automatic operation.

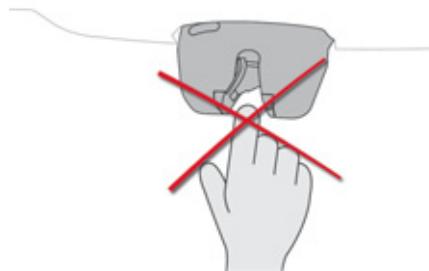

## Tailgate controls



**A: Exterior control**

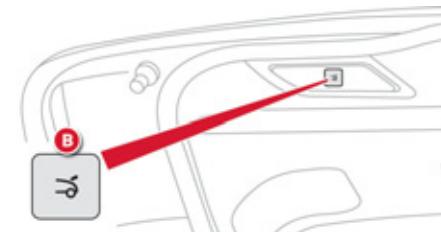

**B: Interior control**

**!** Never place a finger in the tailgate locking system: risk of a serious accident!

**!** To avoid the risk of injury, ensure that there is no person close to the rear of the vehicle when opening and closing the motorised tailgate. Be careful of rear passengers.

The motorised tailgate has an obstacle detection system that automatically interrupts its operation if it contacts an obstacle (the movement is reversed by a few degrees to allow the tailgate to be freed).

## Motorised opening

### Unlocking and opening the tailgate with the electronic key / remote control



- Make a long press on this button.

### Unlocking and opening the tailgate with the Keyless Entry and Starting system

- Press button **A** on the tailgate, with the electronic key in the area of coverage.

**i** When selective locking is activated, the electronic key must be near the rear of the vehicle.

## Opening the tailgate

- After complete unlocking of the vehicle, press control **A** on the tailgate.

The instruction is confirmed by an audible signal.

**i** By default, the tailgate opens completely or alternatively to the memorised position.

## Motorised closing

There are two possibilities:

- Press and release the exterior control **A**.

or



- Press and then release button **B**.

**i** The motorised tailgate has an anti-pinch system that interrupts closing if it encounters an obstacle.

**i** Operation of the tailgate can be interrupted at any time:



- by pressing one of these two buttons,

or

- by pressing the exterior control **A**.

After interruption of an operation, another press on one of the controls resumes the movement, with the exception of a press on the remote control button, which only allows opening.

## Memorising an opening position

Where height is restricted (garage with a low ceiling, ...) it is possible to limit and memorise the opening angle of the tailgate.

This memorisation is done as follows:

- open the tailgate to the desired position,
- press button **B** or the exterior control **A** for more than 3 seconds.

Memorisation of the maximum opening position of the tailgate is confirmed by an audible signal.

To cancel the memorised position:

- stop the tailgate in an intermediate position,
- press button **B** or the exterior control **A** for more than 3 seconds.

## Manual operation

The motorised tailgate can be opened and closed manually, even if motorisation is activated.

When opening and closing a motorised tailgate manually, there is no assistance from gas-filled struts. Resistance to opening and closing is therefore entirely normal.

## Reinitialising the tailgate

This operation is necessary where there is no movement - after detection of an obstacle, after connecting or recharging the battery, ...

- ☞ Open the tailgate by hand, if necessary.
- ☞ Manually close the tailgate fully.

If the problem persists, contact a CITROËN dealer or a qualified workshop.

### Precautions in use

In the event of an accumulation of snow on the tailgate, clear the snow before commanding an automatic opening of the tailgate.

The formation of ice can block the tailgate and prevent its opening: wait until the ice melts with the heating of the passenger compartment.


When washing the vehicle in an automatic car wash, don't forget to lock your vehicle to avoid the risk of unexpected opening.

Repeated opening and closing of the tailgate can cause overheating of its electric motor, after which opening and closing will not be possible.

Allow 10 minutes for the motor to cool down before operating the tailgate again.

## Tailgate release

System allowing the mechanical unlocking of the boot in the event of a battery or central locking system malfunction.

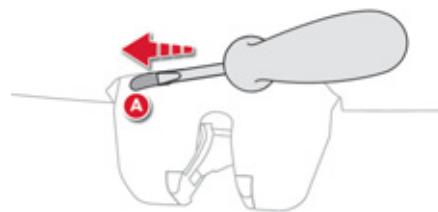

### Unlocking


- ☞ Fold back the rear seats to gain access to the lock from inside the boot.
- ☞ Insert a small screwdriver into hole A of the lock to unlock the tailgate.
- ☞ Move the latch to the left.

### Locking after closing

If the fault persists after closing again, the boot will remain locked.

# Alarm

System which protects and provides a deterrent against theft and break-ins. It provides the following types of monitoring:

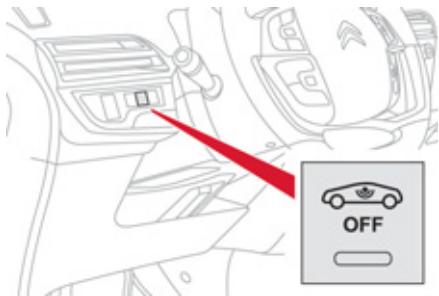

## - Exterior perimeter

The system checks for opening of the vehicle. The alarm is triggered if anyone tries to open a door, the boot or the bonnet...

## - Interior volumetric

The system checks for any variation in the volume in the passenger compartment. The alarm is triggered if anyone breaks a window, enters the passenger compartment or moves inside the vehicle.



## Self-protection function

The system checks for the disconnection of any of its components. The alarm is triggered if the battery, the button or the wires of the siren are disconnected or damaged.

For all work on the alarm system, contact a CITROËN dealer or a qualified workshop.

## Locking the vehicle with full alarm system

### Activation

- ☞ Switch off the ignition and get out of the vehicle.
- ☞ Lock the vehicle using the remote control.
- or
- ☞ Lock the vehicle using the "Keyless Entry and Starting" system.

The monitoring system is active: the indicator lamp in the button flashes once per second and the the direction indicators come on for about 2 seconds.

After an instruction to lock the vehicle locked using the remote control or the Keyless Entry and Starting system, the exterior perimeter monitoring is activated after a delay of 5 seconds, the interior volumetric monitoring after 45 seconds.

If an opening (door, boot, bonnet...) is not closed fully, the vehicle is not locked but the exterior perimeter monitoring will be activated after a delay of 45 seconds, at the same time as the interior volumetric monitoring.

## Deactivation

- ☞ Press one of the unlocking buttons on the remote control:



short press



long press

or

- ☞ Unlock the vehicle using the "Keyless Entry and Starting" system.

The monitoring system is deactivated: the indicator lamp in the button is off and the direction indicators flash for about 2 seconds.

**i** In the case of automatic locking of the vehicle (which occurs after a period of 30 seconds if a door or the boot is not opened), the monitoring system is not reactivated automatically. To reactivate it, it is necessary to unlock the vehicle and lock it again, using the remote control or the "Keyless Entry and Starting" system.

## Locking the vehicle with exterior perimeter monitoring only

Deactivate the interior volumetric monitoring to avoid unwanted triggering of the alarm in certain cases such as:

- leaving a window partially open,
- washing your vehicle,
- changing a wheel,

## Deactivation of the volumetric monitoring



- ☞ Switch off the ignition and within ten seconds press this button until its indicator lamp is on fixed.

- ☞ Get out of the vehicle.
- ☞ Immediately lock the vehicle using the remote control or the "Keyless Entry and Starting" system.

Only the exterior perimeter protection system is active: the indicator lamp in the button flashes once per second.

To be effective, this deactivation must be done every time the ignition is switched off.

## Reactivation of the interior volumetric monitoring

- ☞ Deactivate the exterior perimeter monitoring by unlocking the vehicle using the remote control or the Keyless Entry and Starting system.

The indicator lamp in the button goes off.

- ☞ Reactivate the full alarm system by locking the vehicle using the remote control or the "Keyless Entry and Starting" system.

The indicator lamp in the button flashes once per second again.

## Triggering of the alarm

This is indicated by sounding of the siren and flashing of the direction indicators for thirty seconds.

The monitoring functions remain active until the alarm has been triggered eleven times in succession.

When the vehicle is unlocked using the remote control or the Keyless Entry and Starting system, rapid flashing of the indicator lamp in the button informs you that the alarm was triggered during your absence. When the ignition is switched on, this flashing stops immediately.

## Failure of the remote control

To deactivate the monitoring functions:

- ☞ Unlock the vehicle using the key (integral with the remote control) in the driver's door lock.
- ☞ Open the door; the alarm is triggered.
- ☞ Switch on the ignition; the alarm stops. The indicator lamp in the button goes off.

## Locking the vehicle without activating the alarm

- ☞ Lock or deadlock the vehicle using the key (integral with the remote control) in the driver's door lock.

## Operating fault

When the ignition is switched on, fixed illumination of the indicator lamp in the button indicates a fault in the system.

Have it checked by a CITROËN dealer or a qualified workshop.


## Automatic activation\*

2 minutes after the last door or the boot is closed, the system is activated automatically.

- ☞ To avoid triggering the alarm on entering the vehicle, first press the unlocking button on the remote control or unlock the vehicle using the Keyless Entry and Starting system.

\* According to country.

# Electric windows

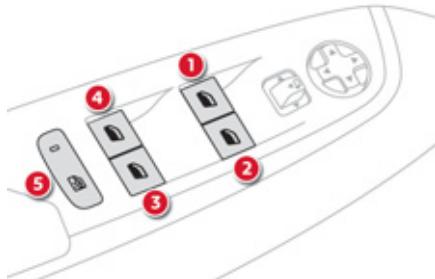

1. Left hand front electric window.
2. Right hand front electric window.
3. Right hand rear electric window.
4. Left hand rear electric window.
5. Deactivating the electric window switches located at the rear seats.

## Manual operation

To open or close the window, press or pull the switch gently. The window stops as soon as the switch is released.

## Automatic operation

To open or close the window, press or pull switch fully: the window opens or closes completely when the switch is released. Pressing the switch again stops the movement of the window.

The electric window switches remain operational for approximately 45 seconds after switching off the ignition. Once this time has elapsed, the electric windows will not operate. To reactivate them, switch the ignition on again.

## Safety anti-pinch

When the window rises and meets an obstacle, it stops and immediately partially lowers again. In the event of unwanted opening of the window on closing, press the switch until the window opens completely, then pull the switch immediately until the window closes. Continue to hold the switch for approximately one second after the window has closed.

The safety anti-pinch function is not active during this operation.

## Deactivating the rear controls for the rear windows



For the safety of your children, press switch **5** to prevent operation of the rear windows irrespective of their positions.

The warning lamp in the button comes on, accompanied by a message confirming activation. It remains on, as long as the child lock is deactivated.

Use of the rear electric windows from the driver's controls remains possible.

## Reinitialisation of the electric windows

Following reconnection of the battery, the safety anti-pinch function must be reinitialised. The safety anti-pinch function is not active during these operations.

For each window:

- lower the window completely, then raise it, it will rise in steps of a few centimetres with each action. Repeat the operation until the window closes completely,
- continue to pull the switch for at least one second after reaching this position, window closed.



In the event of contact during operation of the windows, you must reverse the movement of the window. To do this, press the switch concerned.

When operating the passenger electric window switches, the driver must ensure that nothing is preventing correct closing of the windows.

The driver must ensure that the passengers use the electric windows correctly.

Be aware of children when operating the windows.

Be aware of passengers or other persons present when closing the windows using the the electronic key or the "Keyless Entry and Starting" system.

# Front seats

Seat consisting of a seat cushion, a seat back and a head restraint which can all be adjusted to adapt your position for ease of driving and comfort.

! As a safety measure, seat adjustments should only be done when stationary.

## Manual adjustments



### Forwards-backwards


- ☞ Raise the control bar and slide the seat forwards or backwards.

When the seat is in the correct position, push it forwards and backwards without raising the control bar to check that it has latched.



### Driver's seat backrest angle

- ☞ Turn the knob to adjust the seat backrest.

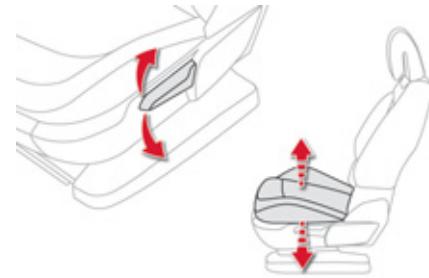

### Driver's seat height


- ☞ Pull the control upwards to raise or push it downwards to lower, as many times as necessary, to obtain the position required.



### Passenger's seat backrest angle

- ☞ Pull the control upwards to adjust the backrest.  
When the backrest angle is correct, release the control.

! When the backrest is at the correct angle, release the control lever. To ensure that the backrest does not suddenly fold forwards and hurt you, restrain it with your back or your hand while operating the control.

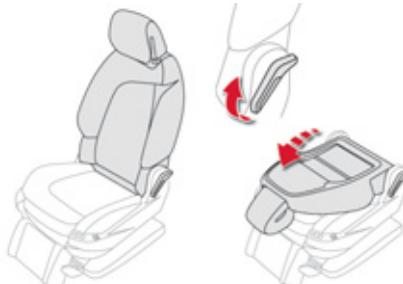

### Table position for the passenger's seat backrest


! Check that there is no object that could interfere with the movement of the seat, both above and below.

- ☞ Place the head restraint in the low position, raise the armrest and fold the fixed table onto the back of the seat.
- ☞ Pull the control fully up and tip the backrest forwards.  
To return to the normal position, guide the backrest backwards until it locks.

This position, associated with the position of the rear seats, allows you to carry long objects inside the vehicle.

# Front seats

## Electric adjustments

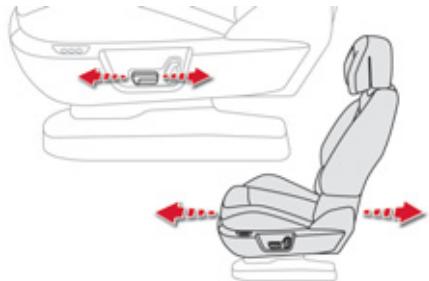


### Forwards-backwards (driver's seat)

- Push the control forwards or rearwards to slide the seat.



### Seat backrest angle

- Tilt the control forwards or rearwards to adjust the angle of the seat backrest.

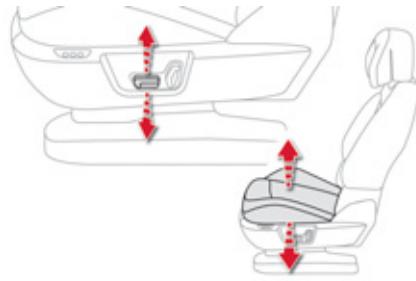


### Seat cushion height and angle

- Operate the rear part of the control upwards or downwards to obtain the desired height.
- Operate the front part of the control upwards or downwards to obtain the desired angle.

**i** To avoid discharging the battery, carry out these adjustments with the engine running.

## Storing driving positions

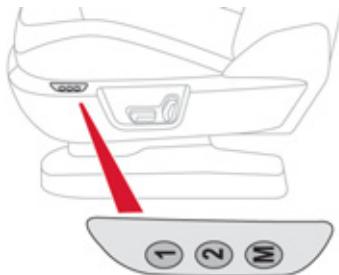

System which registers the electrical settings of the driver's seat and door mirrors. It enables you to store and recall two positions using the buttons on the side of the driver's seat.

### Storing a position

#### Using buttons M / 1 / 2


- ☞ Switch on the ignition.
- ☞ Adjust your seat and the door mirrors.
- ☞ Press button **M**, then press button **1** or **2** within four seconds.  
An audible signal indicates that the position has been stored.  
Storing a new position cancels the previous position.

### Recalling a stored position

#### Ignition on or engine running

- ☞ Press button **1** or **2** to recall the corresponding position.  
An audible signal confirms that adjustment is complete.
- You can interrupt the current movement by pressing button **M**, **1** or **2** or by using one of the seat controls.
- A stored position cannot be recalled while driving.
- Recalling stored positions is deactivated 45 seconds after switching off the ignition.

## Additional adjustments

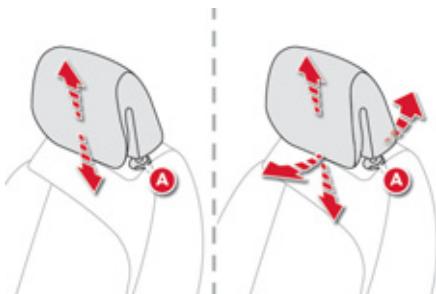

### Head restraint height and angle (depending on version)


- >To raise a head restraint, pull it upwards.
- To lower the head restraint, press the lug A and the head restraint at the same time.
- To adjust the angle of the head restraint, tilt its lower part forwards or rearwards.

The head restraint is fitted with a frame with notches which prevents it from lowering; this is a safety device in case of impact.

**The adjustment is correct when the upper edge of the head restraint is level with the top of the head.**

### Removing a head restraint

- To remove the head restraint, press the lug A and pull the head restraint upwards.
- To put the head restraint back in place, engage the head restraint stems in the openings keeping them in line with the seat back and press the lug A at the same time.

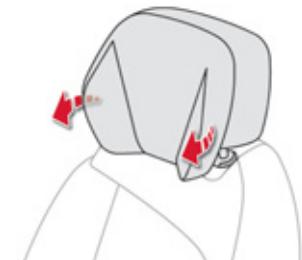


### Comfort head restraints

Depending on version, you can fold the sides to obtain a more comfortable position.


! Never drive with the head restraints removed; they must be in place and adjusted correctly.

## Electric lumbar adjustment

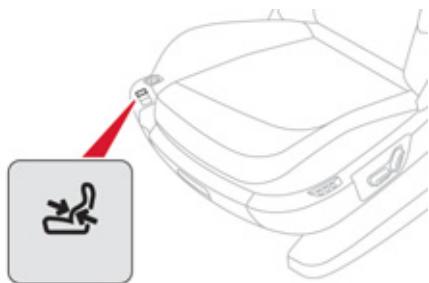

☞ Press the control to obtain the desired lumbar support.

## Massage function

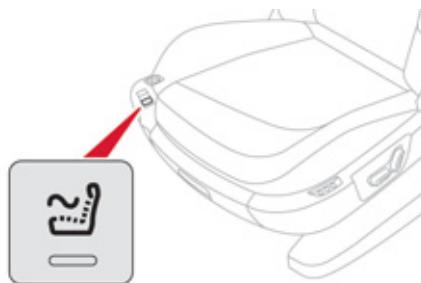

### Activation



☞ Press this switch.

Its indicator lamp comes on and the massage function is activated for a period of 1 hour. During this time, massage is performed in 6 cycles of 10 minutes (6 minutes of massage followed by 4 minutes break). After one hour, the function is deactivated, the indicator lamp goes off.

### Deactivation



You can deactivate the massage function at any time by pressing this switch, its indicator lamp goes off.


This function provides the front occupants with a lumbar massage. It only operates when the engine is running or in STOP mode of the Stop & Start system.

### Adjustment of intensity




Press this button to select one of the two levels of massage intensity offered.

## Electric leg rest

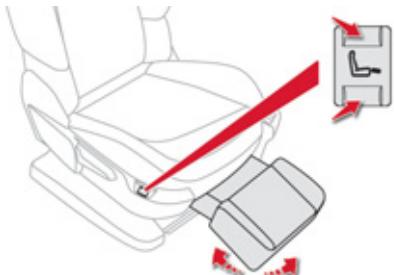

### Manual passenger seat

- ☞ Press the front or rear part of the control to unfold or fold away the leg rest.  
The movement stops when you release the control.

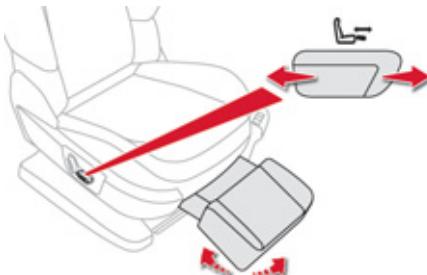


### Electric passenger seat

- ☞ Push the control forwards or backwards to unfold or fold away the leg rest.  
The movement stops when you release the control.



Before operating the leg rest, ensure that nothing could interfere with its movement.


## Heated seats control

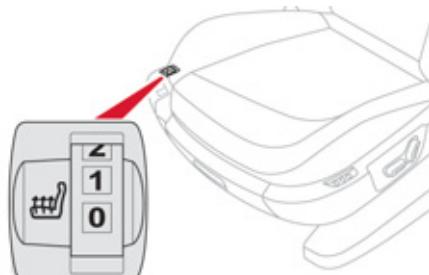

- ☞ Use the adjustment wheel to switch on and select the level of heating required:
  - 0: Off.
  - 1: Low.
  - 2: Medium.
  - 3: High.

With the engine running, the front seats can be heated separately.

## Front armrest

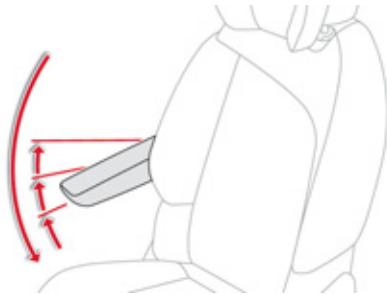


Comfort system for the driver and front passenger.

### Height adjustment

- ☞ Fully lower the armrest.
- ☞ Raise it to the required position (low, intermediate or high).
- ☞ Once in the high position, lift to release it and return it to the low position.

## Second-row seats

The 3 seats in the 2<sup>nd</sup> row are independent of each other and are all the same width. Their backrests can be folded to vary the load space in the boot.

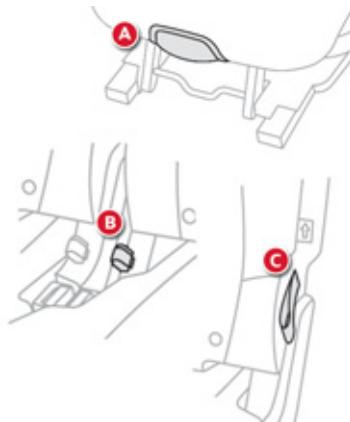

### Forwards-backwards adjustment



- ☞ Raise the lever **A**, located at the front of the seat cushion, and adjust the seat to the desired position.

## "Comfort" position




- Pull the strap **B** and guide the seat rearwards.  
The backrest reclines and the seat base pivots slightly.

## Returning the seat to the initial position

- Pull the strap **B** and guide the seat forwards.

! **Supervise any movements of seats when made by children.**

## Rear head restraints

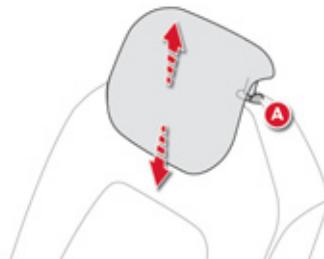

The rear head restraints can be removed and have two positions:

- high, position for use,
- low, storage position.

To raise a head restraint, pull it upwards.  
To lower it, press lug **A** then the head restraint.

To remove it:

- move the head restraint to the high position,
- press lug **A** pulling the head restraint upwards at the same time.

To refit it:

- engage the rods of the head restraint in the openings keeping them in line with the seat back.



## Comfort head restraints

Depending on version, the sides can be folded to obtain a more comfortable position.




Never drive with the head restraints removed; they must be in place and correctly adjusted.

## Flat floor

Each seat can be folded onto the floor to vary the the space available in the boot.


### Folding a seat

- Place the seats in the fully back position.

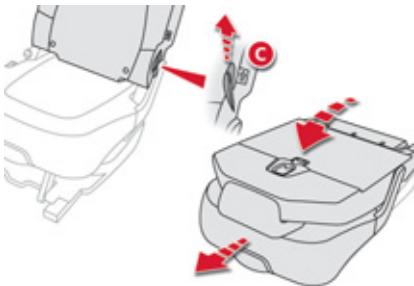

#### From the outside

- Pull firmly upwards on strap **C**, as indicated by the arrow, to unlock the seat; keep pulling until the seat is fully folded. Push the seat backrest gently forwards so that the backrest folds onto the seat cushion. The assembly lowers onto the floor.

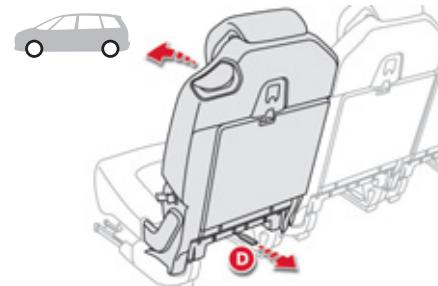

#### From the boot, when loading for example


- You can fold the second-row seats from the boot, after first folding the third-row seats.
- Pull on the strap **D** to release the seat in question then push forwards lightly on the backrest. To avoid any damage to the mechanism, the strap **D** unclips if too much force is applied. Simply clip it in place again for the system to be operational again.



## Repositioning a seat

- ☞ If necessary, straighten the continuity panels for the seats in the 2<sup>nd</sup> row and lock them in place.
- ☞ Raise the backrest and push it rearwards until it locks in position

! Before operating the rear seats, check that the outer rear seat belts are not loose, to avoid damaging them. The centre belt must be stowed. Fix the tongues of the three belts to their anchorage points.

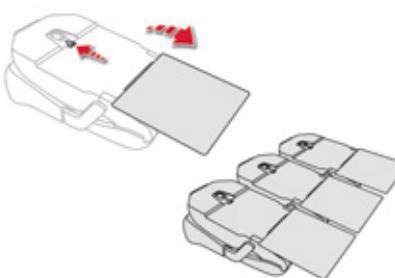

## Continuity panels

Each seat has a continuity panel at the bottom of the backrest, that once unfolded:

- provides a continuous load surface in the boot, whatever the position of the seats,
- avoids objects sliding under the seats in the 2<sup>nd</sup> row.



These continuity panels are not designed to support a weight greater than 30 kg.

## Releasing / locking the continuity panels

- ☞ Before unfolding the continuity panels, check that the seats in the 2<sup>nd</sup> row are fully back.
- ☞ Slide the continuity panel latch upwards to release.
- ☞ Straighten the continuity panel, then slide the latch downwards to lock it.



## Access to the third row seats

Access to the third-row seats is via the outer second-row seats.




- ☞ Pull the lever **E**. The seat unlocks and the seat cushion comes up against the backrest.
- ☞ Hold the lever **E** in the raised position, pushing forwards. The whole seat slides towards the front seat.

Space becomes free behind the seat, the third-row passengers can get to their seats.

**i** Before operating the seats, ensure that the tables on the back of the first-row seats are folded away.

## Leaving the vehicle from the third-row seats

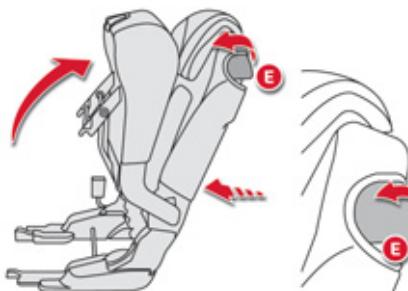

- ☞ Lift the lever **E**. The seat unlocks and the seat cushion comes up against the backrest.
- ☞ Push the seat backrest, still holding the lever **E** in the raised position.

## Repositioning a seat, from the outside, with the door open

If there are passengers seated in the third row:

- ☞ manually return the assembly as far as possible rearwards; the seat does not return to the fully back position, so as to retain legroom for the third-row passengers,
- ☞ fold the seat cushion until it locks.


Ensure that there is no object on or under the seat that you want to move.

**!** In the event of a failure of this system (lever **E**), the passengers in the third row can also leave the vehicle after first folding the backrests of the second-row seats using the strap **D**. Do not allow children to operate the seats without supervision.

# Third row seats

## Concertina boards

Two rigid concertina boards, which cannot be separated from the vehicle, cover the 2 third-row seats, when these are in the folded position.

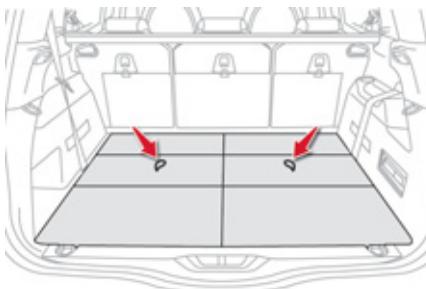

### Folding the concertina boards


Pull on the control, the 3 sections of the board will fold like a concertina.

When the third-row seats are upright, these concertina boards can be left either:

- flat behind the seats,
- in the vertical position,  
thereby leaving a storage area available.



## Repositioning the seats

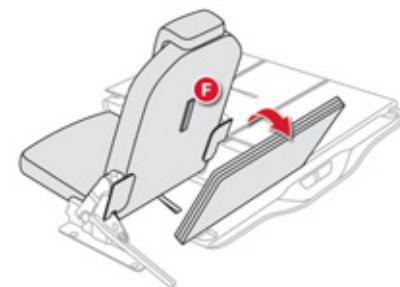

3


- ☞ Remove the luggage net (see the "Boot fittings" section).
- ☞ Return the second-row continuity panels to their initial position and lock them.
- ☞ Fold the concertina boards and position them vertically.
- ☞ Pull on the strap F located behind the seat backrest. The backrest pivots rearwards, pulling the seat base with it. The seat locks in the open position.



Each of the two floor panels can support a load of 100 kg.



## Folding the seats

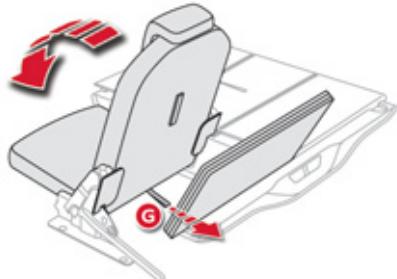


- ☞ Return the second-row continuity panels to their initial position and lock them.
- ☞ Lower the head restraints.
- ☞ Correctly position the concertina board vertically behind the seat.
- ☞ Check that the seat belts for the 3<sup>rd</sup> row seats are correctly fixed to the loops and are not folded.
- ☞ Pull the strap **G**, located at the bottom of the seat backrest. The seat unlocks.
- ☞ Next push the backrest gently forwards. The backrest pivots, folding onto the seat base. The seat base then folds into the stowage area provided for that purpose.
- ☞ Reposition the concertina boards over the folded seats.

! Before moving the third-row seats, return the rigid floor plates of the second-row seats to the upright position and lock them. Do not try to fold a third-row seat that has not first had the backrest fully locked in place. Do not leave objects either on or underneath the seat bases of the third-row seats when you are folding them. Do not leave your hand on the control **G** as you fold the seats, as you risk trapping your fingers. Do not allow children to operate the seats without supervision.




## Seat modularity and configurations


### Examples of configurations

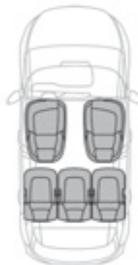


5 seats

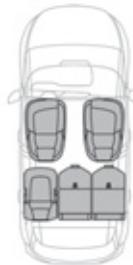

3 seats

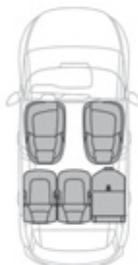

4 seats

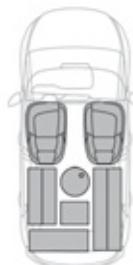

Maximum loadspace


3



## Examples of seat configurations



7 seats

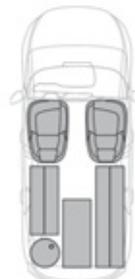

Maximum loadspace



4 seats



6 seats




5 seats


**i** For easy modification of your interior vehicle space, all the rear seats can be individually folded: onto the second-row floor, and under the third-row floor. You can then have a load floor that is continuous up to the front seat backrests. The seats must only be folded and unfolded with the vehicle stationary.

# Mirrors

## Door mirrors

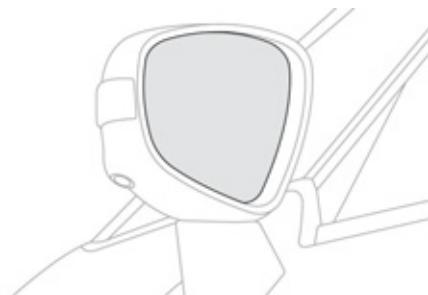

Each fitted with an adjustable mirror glass providing the lateral rearward vision necessary for overtaking or parking. They can also be folded for parking in confined spaces.

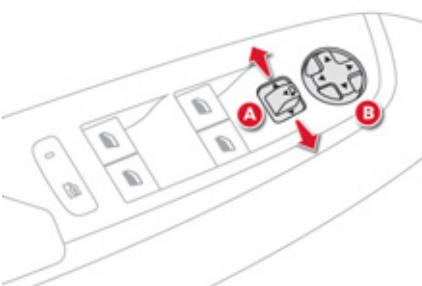

### Adjustment

- ☞ Move control **A** to the right or to the left to select the corresponding mirror.
- ☞ Move control **B** in all four directions to adjust.
- ☞ Return control **A** to the central position.

### Demisting - Defrosting



Demisting-defrosting of the door mirrors operates with the engine running, by switching on the heated rear screen (refer to the "Rear screen demist-defrost" section).



The objects observed are, in reality, closer than they appear. Take this into account in order to correctly judge the distance of vehicles approaching from behind.

### Folding

- ☞ From outside: lock the vehicle using the electronic key or the Keyless Entry and Starting system.
- ☞ From inside: with the ignition on, pull the control **A** in the central position rearwards.

**i** If the mirrors are folded using control **A**, they will not unfold when the vehicle is unlocked. Pull again on control **A**.

### Unfolding

- ☞ From outside: unlock the vehicle using the electronic key or the Keyless Entry and Starting system.
- ☞ From inside: with the ignition on, pull the control **A** in the central position rearwards.

**i** The folding and unfolding of the door mirrors using the remote control can be deactivated by a CITROËN dealer or a qualified workshop.

**i** If necessary, it is possible to fold the mirrors manually.

## Automatic tilting in reverse gear

System which provides a view of the ground during parking manoeuvres in reverse gear.

With the engine running, on engaging reverse gear, the mirror glasses tilt downwards.

They return to their initial position:

- a few seconds after coming out of reverse gear,
- once the speed of the vehicle exceeds 6 mph (10 km/h),
- on switching off the engine.

This function can be deactivated in the "Driving assistance" menu, then "Vehicle settings".

## Rear view mirror


Adjustable mirror providing a central rearward view.

Equipped with an anti-dazzle system, which darkens the mirror glass and reduces the nuisance to the driver caused by the sun, headlamps from other vehicles...




As a safety measure, the mirrors should be adjusted to reduce the "blind spot".

### Manual day/night model

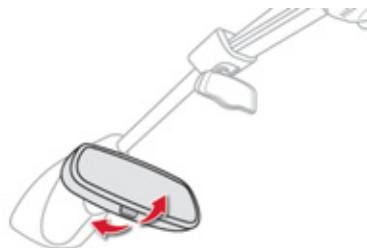

### Automatic day/night model

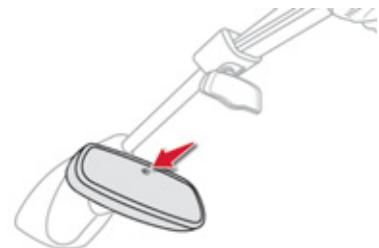

## Adjustment

- ☞ Adjust the mirror so that the glass is directed correctly in the "day" position.

## Day / night position

- ☞ Pull the lever to change to the "night" anti-dazzle position.
- ☞ Push the lever to change to the normal "day" position.


By means of a sensor, which measures the light from the rear of the vehicle, this system automatically and progressively changes between the day and night uses.



In order to ensure optimum visibility during your manoeuvres, the mirror lightens automatically when reverse gear is engaged.


## Steering wheel adjustment

### Child surveillance mirror

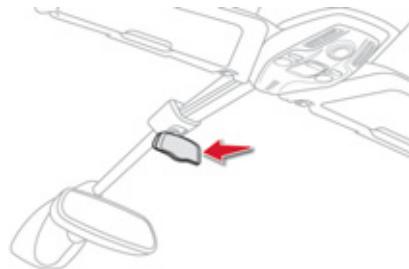

A child surveillance mirror is fitted above the rear view mirror. This allows you to monitor the vehicle's rear passengers, or it can facilitate conversation between the front and rear passengers without the need to move the rear view mirror.

It can be folded away to eliminate dazzle.

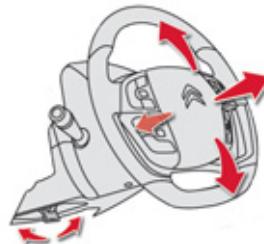

- ☞ **When stationary**, pull the control lever to release the adjustment mechanism.
- ☞ Adjust the height and reach to suit your driving position.
- ☞ Push the control lever to lock the adjustment mechanism.



As a safety precaution, these operations should only be carried out while the vehicle is stationary.

# Ventilation

## Air intake

The air circulating in the passenger compartment is filtered and originates either from the outside via the grille located at the base of the windscreen or from the inside in air recirculation mode.

## Air treatment


The incoming air follows various routes depending on the controls selected by the driver:

- direct arrival in the passenger compartment (air intake),
- passage through a heating circuit (heating),
- passage through a cooling circuit (air conditioning).

## Control panel

The controls of this system are accessible in the **"Air conditioning"** menu of the touch screen tablet **A**.

The demisting/defrosting controls for the windscreen and rear screen are located on the left of the touch screen tablet.

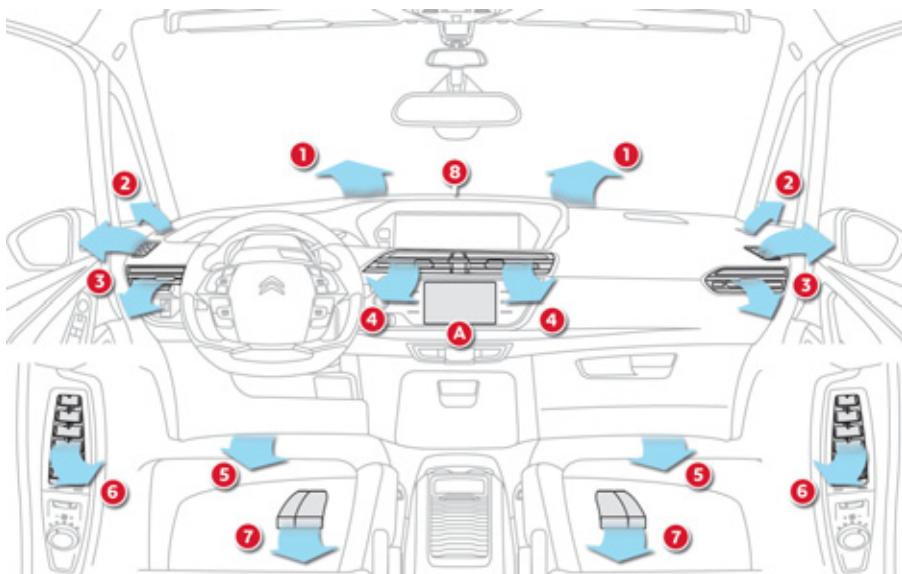

## Air distribution

1. Windscreen demisting-defrosting vents.
2. Front quarter light demisting-defrosting vents.
3. Front side window demisting/defrosting vents.
4. Central adjustable air vents.
5. Air outlets for the front footwells.
6. Side vents for the 2<sup>nd</sup> row.
7. Air outlets for 2<sup>nd</sup> row footwells.
8. Sunshine sensor.

Adjustable side air vents.

# Recommendations for ventilation and air conditioning

**i** In order for these systems to be fully effective, follow the operation and maintenance guidelines below:

- ☞ To obtain an even air distribution, take care not to obstruct the exterior air intake grilles located at the base of the windscreens, the nozzles, the vents and the air outlets, as well as the air extractor located in the boot.
- ☞ Do not cover the sunshine sensor, located on the dashboard; this is used for regulation of the digital air conditioning system.
- ☞ Operate the air conditioning system for at least 5 to 10 minutes, once or twice a month to keep it in perfect working order.
- ☞ Ensure that the passenger compartment filter is in good condition and have the filter elements replaced regularly.

We recommend the use of a combined passenger compartment filter. Thanks to its special active additive, it contributes to the purification of the air breathed by the occupants and the cleanliness of the passenger compartment (reduction of allergic symptoms, bad odours and greasy deposits).

- ☞ To ensure correct operation of the air conditioning system, you are also advised to have it checked regularly as recommended in the maintenance and warranty guide.
- ☞ If the system does not produce cold air, switch it off and contact a CITROËN dealer or a qualified workshop.

When towing the maximum load on a steep gradient in high temperatures, switching off the air conditioning increases the available engine power and so improves the towing ability.

**3**  If after an extended stop in sunshine, the interior temperature is very high, first ventilate the passenger compartment for a few moments.

Put the air flow control at a setting high enough to quickly change the air in the passenger compartment.

The air conditioning system does not contain chlorine and does not present any danger to the ozone layer.

**i** The condensation created by the air conditioning results in a discharge of water under the vehicle which is perfectly normal.


## **i** Stop & Start

The heating and air conditioning systems only work when the engine is running. To maintain a comfortable temperature in the passenger compartment, you can temporarily deactivate the Stop & Start system (see the corresponding section).

# Heating

The heating system works only when the engine is running.

Press the button for the "Air conditioning" menu to display the page for the system controls.

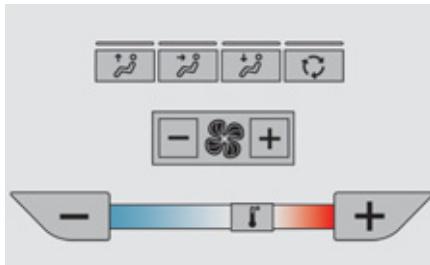

## Temperature adjustment

-   Press one of these buttons, or move the cursor from blue (cold) to red (hot) to adjust the temperature to your wishes.

## Air flow adjustment

-   Press one of these buttons to increase or decrease the speed of the booster fan.

The symbol for airflow (a fan) fills progressively according to the air flow setting made. By reducing the air flow to the minimum, you are stopping ventilation of the passenger compartment.



Avoid driving for too long without ventilation (risk of misting and deterioration of air quality).

The air distribution can be varied by using more than one button.


Each press of a button activates or deactivates the function.

The indicator lamp is on when the button is activated. For an even distribution of air in the passenger compartment, the three buttons can be activated simultaneously.

## Air intake / Air recirculation

The intake of exterior air prevents and eliminates misting of the windscreen and side windows.

The recirculation of interior air prevents exterior odours and smoke entering the passenger compartment.

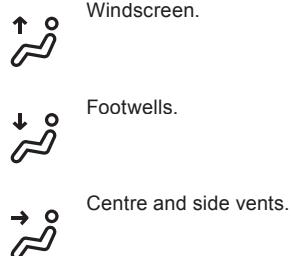

-  Press this button to recirculate the interior air. The indicator lamp in the button comes on.
-  Press the button again to allow the intake of exterior air. This is confirmed by the indicator lamp going off.

# Dual-zone manual air conditioning with temperature regulation

The air conditioning system operates with the engine running.

The temperature at the nozzles and vents is regulated by the system according to the temperature in the passenger compartment and the temperature setting.

Press the button for the "Air conditioning" menu to display the system controls page.



## Temperature adjustment

The driver and front passenger can each adjust the temperature.



Press one of these buttons to reduce (blue) or increase (red) the value.

The value indicated corresponds to a level of comfort and not to a temperature in degrees Celsius or Fahrenheit (depending on the unit selected). A setting of around 21 provides optimum comfort. Depending on your requirements, a setting between 18 and 24 is normal.

In addition, it is recommended that a difference between left and right of more than 3 should be avoided.

## Air flow adjustment



Press one of these buttons to increase or decrease the speed of the air booster fan.

3

The air flow symbol (a fan) fills progressively according to the quantity of air wanted. By reducing the air flow to minimum, you are stopping ventilation.



Avoid driving too long without ventilation (risk of misting and deterioration of air quality).

## Air distribution adjustment

These buttons are used to arrange the distribution of air in the passenger compartment by combining several air outlets.



Windscreens.



Footwells.



Central and side vents.

The air distribution can be adapted by using several buttons: illumination of the indicator lamp confirms the presence of fan boosted air in the direction indicated, the indicator lamp off indicates the absence of fan boosted air in the direction indicated.

For a uniform distribution of air in the passenger compartment, the three buttons can be activated simultaneously.

## Air intake / Air recirculation

The intake of exterior air prevents the formation of mist on the windscreens and side windows. The recirculation of interior air isolates the passenger compartment from exterior odours and smoke.



This function allows hot or cold air to be delivered selectively and more quickly.



- ☞ Press the button to recirculate the interior air. The indicator lamp comes on.
- ☞ Press the button again to permit the intake of exterior air. The indicator lamp goes off to confirm this.



Avoid driving too long without recirculation of interior air (risk of misting and deterioration of air quality).

## Air conditioning On / Off

**A/C** The air conditioning is designed to operate effectively in all seasons, with the windows closed.

It enables you to:

- lower the temperature, in summer,
- increase the effectiveness of the demisting in winter, above 3°C.

### Switching on

**A/C** ☞ Press this button, the associated indicator lamp comes on.



The air conditioning does not operate when the air flow adjustment is set to off.

### Switching off

**A/C** ☞ Press the button again, the associated indicator lamp switches off.


# Dual-zone digital air conditioning

This air conditioning system operates with the engine running, but the ventilation and its controls are available with the ignition on.


Operation of the air conditioning and regulation of temperature, air flow and air distribution in the passenger compartment are automatic.

Press the button for the "**Air conditioning**" menu to display the controls for the air conditioning system.

Depending on the colour scheme chosen, the system controls page is displayed differently:

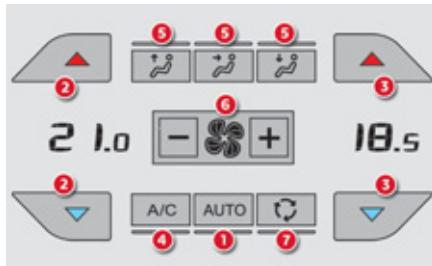


1. Automatic mode.
2. Driver's side temperature adjustment.
3. Passenger's side temperature adjustment.

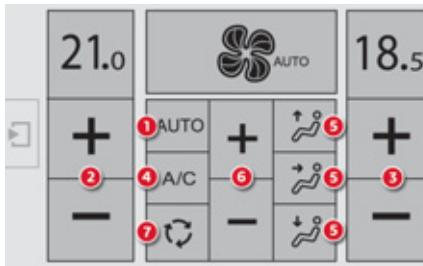

4. Air conditioning On / Off.
5. Air distribution adjustment.
6. Air flow adjustment.
7. Air intake / air recirculation.

## Temperature adjustment

The driver and front passenger can each set the temperature.

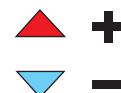

- Press one of these buttons to increase the value.
- Press one of these buttons to decrease the value.

3

It is recommended that you avoid a left/right setting difference of more than 3.


The value indicated corresponds to a level of comfort and not to a precise temperature.

## Automatic comfort programme

- ☞ Press the "AUTO" button to activate or deactivate the automatic mode of the air conditioning system.

When the indicator lamp in the button is on, the air conditioning system operates automatically: the system manages the temperature, air flow and air distribution in the passenger compartment in an optimum way according to the comfort level you have selected.

It is possible to modulate the intensity of the automatic comfort programme by choosing one of three mode settings offered in a secondary page of the **"Air conditioning"** menu.

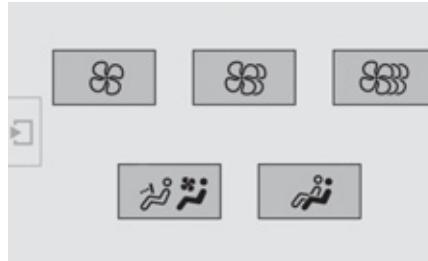

To change the current setting, shown by the green indicator lamp, press the button for the desired mode:



"Soft": provides soft and quiet operation by limiting air flow.



"Normal": offers the best compromise between a comfortable temperature and quiet operation (default setting).



"Fast": provides strong and effective air flow.

This setting is associated with AUTO mode only. However, on deactivation of AUTO mode, the indicator for the last setting remains on. Changing the setting does not reactivate AUTO mode if deactivated.



In cold weather with the engine cold, the air flow is increased gradually until the system has warmed up, in order to limit the delivery of cold air into the passenger compartment. On entering the vehicle, if the interior temperature is much colder or warmer than the comfort value setting, there is no need to alter the value displayed in order to reach more quickly the required level of comfort. The system compensates automatically and corrects the temperature difference as quickly as possible.

## Resuming manual control

You can manually adjust one or more settings, while retaining automatic control of the other functions:

- air flow,
- air distribution.

As soon as you modify a setting, the indicator lamp in the "AUTO" button goes off.

 Press the "AUTO" button again to activate the automatic comfort programme again.

### Air flow adjustment



 Press one of these buttons to increase or decrease the speed of the booster fan.

The air flow symbol (a fan) is filled in progressively in relation to the quantity of air wanted.

By reducing the air flow to minimum, you are stopping ventilation.  
"OFF" is displayed alongside the fan.



Avoid driving for too long with the ventilation off (risk of misting and deterioration of air quality).

### Air distribution adjustment

You can modulate the distribution of air in the passenger compartment using these three buttons.

Windscreen.

Footwells.

Centre and side vents.

Each press on a button activates or deactivates the function. The indicator lamp is on when the button is activated. For a uniform distribution in the passenger compartment, all three buttons can be pressed simultaneously.

In AUTO mode, the indicator lamps in all three buttons are off.

## Air conditioning On/Off

**A/C** The air conditioning is designed to operate efficiently in all seasons, with the windows closed.

It allows you:

- in summer, to lower the temperature,
- in winter, above 3 °C, to improve demisting.

### Switching on

☞ Press the "A/C" button to activate the air conditioning  
When the indicator lamp under the button is on, the air conditioning function is activated.

The air conditioning cannot operate when the air flow is set to off.

### Switching off

☞ Press the "A/C" button again to deactivate the air conditioning  
When the indicator lamp under the button is off, the air conditioning function is deactivated.

## Air intake/Air recirculation

The intake of exterior air avoids misting of the windscreen and side windows.

Air recirculation prevents exterior odours and smoke from entering the passenger compartment.

This function also allows faster heating or cooling of the air in the passenger compartment.



☞ Press this button to choose the mode for air entry to the passenger compartment.

When the indicator lamp under the button is off, the intake of exterior air is active.

When the indicator lamp under the button is on, air recirculation is activated, the intake of exterior air is off.



Avoid prolonged operation of the air recirculation function (risk of misting and of deterioration of the air quality).

## "Mono" function

The comfort setting for the passenger's side can be indexed to the driver's comfort setting (mono-zone).

From the secondary page of the "Air conditioning" menu:



☞ Press this button to activate / deactivate the "Mono" function. The indicator lamp in the button is on when the function is activated.

The function is deactivated automatically when the passenger uses their temperature setting buttons.

## "Rear" function

This function gives rear passengers access to the adjustment controls and allows.


- the distribution of air conditioned air to the vents for the 2<sup>nd</sup> row of seats,
- the distribution of ambient air to the vents for the 3<sup>rd</sup> row of seats.

From the secondary page of the "Air conditioning" menu:



- ☞ Press this button to activate / deactivate the "Rear" function  
The indicator lamp in the button is on when the function is activated.

## Settings for passengers in the 2<sup>nd</sup> row of seats

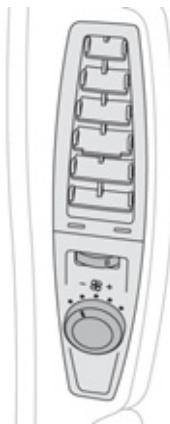

- ☞ Turn the upper wheel to open or close the rear vent.
- ☞ Turn the lower knob to reduce (to the left) or increase (to the right) the air flow.



## Settings for passengers in the 3<sup>rd</sup> row of seats



- ☞ Press the vent cover.
- ☞ Adjust the flow of air to the two vents using the four-position wheel (off, low, medium, high).
- ☞ Direct the vent by turning the cover.

## Front Demist - Defrost

### Ventilation with ignition on function

With the ignition on, you can use the ventilation system and have access to the "Air conditioning" menu to adjust the air flow and air distribution in the passenger compartment. This function is available for a few minutes, depending on the state of charge of the battery of your vehicle.

This function does not activate the air conditioning.

You can make use of the residual heat in the engine to warm the passenger compartment using the temperature setting buttons.



☞ Press this button to demist or defrost the windscreens and side windows as quickly as possible. The indicator lamp in the button comes on.

The system automatically manages the air conditioning, air flow and air intake, and provides optimum distribution towards the windscreens and side windows.

☞ To switch it off press this button, the indicator lamp goes off.

**i** With Stop & Start, when demisting has been activated, the STOP mode is not available.

# Rear screen demist - defrost



## Switching off

The demisting/defrosting switches off automatically to prevent an excessive consumption of current.



☞ It is possible to stop the demisting/defrosting operation before it is switched off automatically by pressing the button again. The indicator lamp associated with the button switches off.



Switch off the heating of the rear screen and door mirrors as soon as you judge it possible, as reducing the consumption of electrical current reduces fuel consumption.

## Switching on

- ☞ Press this button to demist/defrost the rear screen and (depending on version) the door mirrors. The indicator lamp associated with the button comes on.




The rear screen demist - defrost can only operate when the engine is running.

# Scented air freshener

The scented air freshener releases a fragrance into the passenger compartment via the central air vents.

**i** The air freshener contains an empty cartridge when your vehicle is delivered. You therefore need to insert a cartridge in order to use the air freshener.

## Adjustment of flow

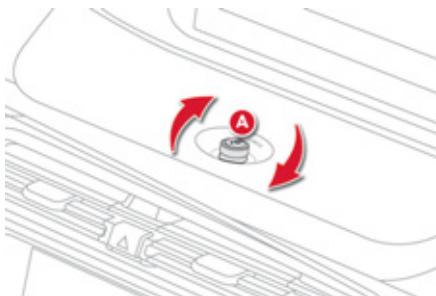


☞ Rotate the button **A** to adjust (to the left to reduce, to the right to increase) or stop (maximum to the left) the flow of scented air.

The central air vents have to be open.


**i** A cartridge lasts on average 3 months, based on one hour's usage per day.

## To remove the air freshener

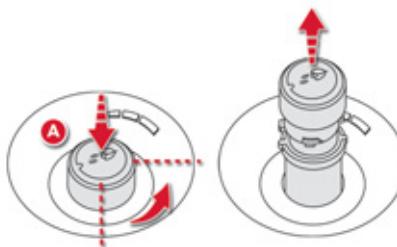

- ☞ Press the button **A**, rotating it a quarter turn to the left as far as it will go.
- ☞ Remove the air freshener from the dashboard.
- ☞ Replace the cartridge (see "Replacing a cartridge").


## To insert the air freshener

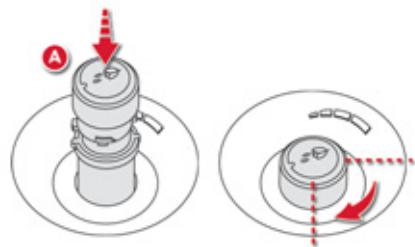

After fitting or changing a cartridge:

- ☞ place the air freshener back in its housing.
- ☞ rotate it a quarter turn to the right.

## Replacing a cartridge

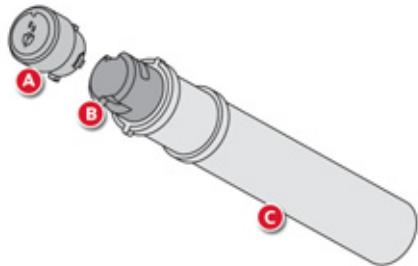


The recharge for the air freshener consists of a cartridge **B** and its sealed container **C**.

- ☞ Remove the protective film **D**.
- ☞ Place the head of the cartridge **B** on the button **A** of the air freshener.
- ☞ Rotate it a quarter turn to lock it on the button and remove the container.
- ☞ Insert the air freshener into its housing.

You can change cartridges at any time, keeping the used cartridges in their original containers.

## Air freshener button

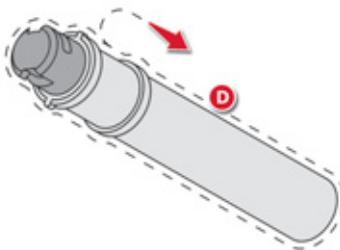

The air freshener button **A** is independent of the cartridge. Cartridges are supplied without the air freshener button **A**.

The button of the air freshener **A** can only be fitted to the centre of the dashboard with a cartridge attached. Therefore always keep the air freshener button **A** and one cartridge.

Replacement cartridges are available, depending on country, either on the Internet site or from a CITROËN dealer or a qualified workshop.

Locations are provided in the glove box for storing cartridges and containers.



For safety, use only cartridges that are provided for this purpose.

Retain the containers for storing used cartridges.

Do not recharge or dismantle the cartridges.

Keep them out of reach of children and animals.


Avoid all contact with the skin and with the eyes.

In the event of ingestion, consult a doctor and show them the product packaging or label.

Do not install or remove a cartridge while you are driving.


# Front fittings

1. Sun visor.
2. Card holder.
3. Glove box.
4. Central storage.  
It contains the power and audio sockets.
5. Raised console with closed storage, low console or removable console.
6. Cup holder.
7. Door pockets.
8. Storage below the steering wheel.  
(Handbook pack).

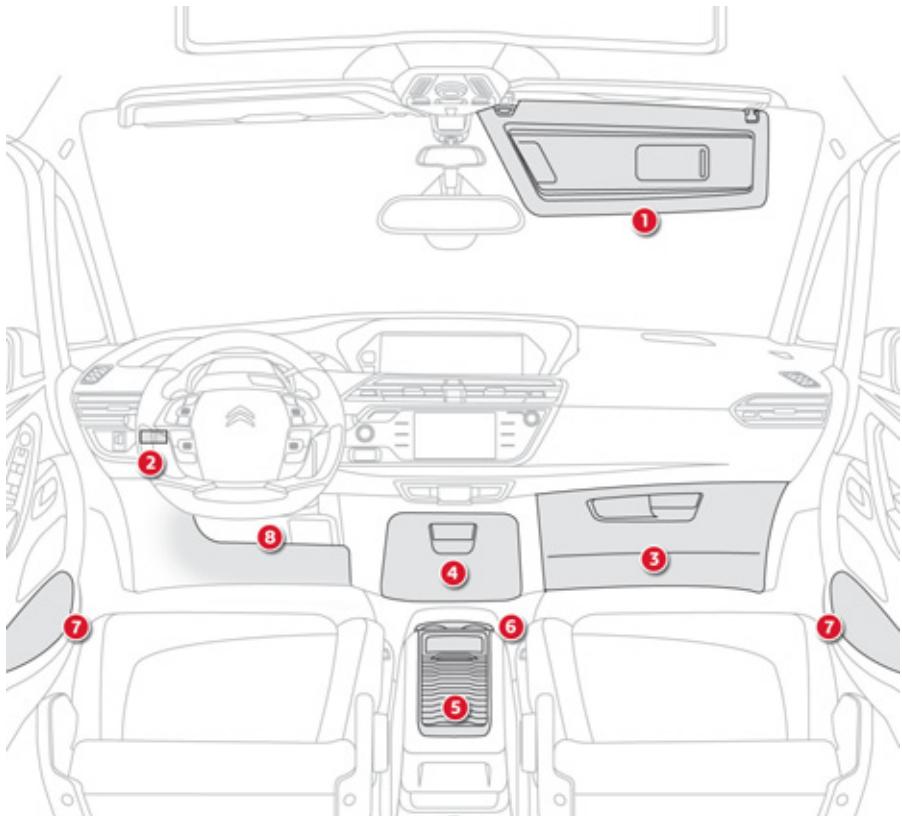

## Sliding sun visor


### Sliding blinds

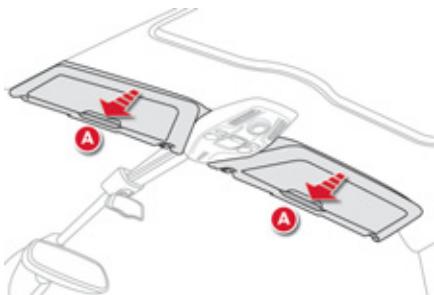

Sliding blinds are provided for your protection against bright sunlight. They can be adjusted manually.

- Slide the blind to the desired position by pushing at A.

### Sun visor rails

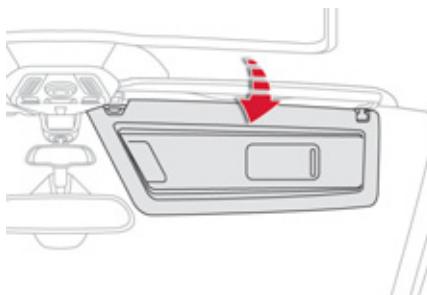


The blinds are extended on the sun visor rails. Fold the visor downwards, to protect against dazzle to the face.

If dazzle is coming from the side windows, detach the visor from its housing above the centre of the windscreen and pivot it to the side. The visors are fitted with a locking system on their central housing when the blind is reeled in. To detach the visor or to reposition it, it must be in a vertical position.



Do not attach or suspend heavy objects on the slide rail of the sun blind.

## Glove box

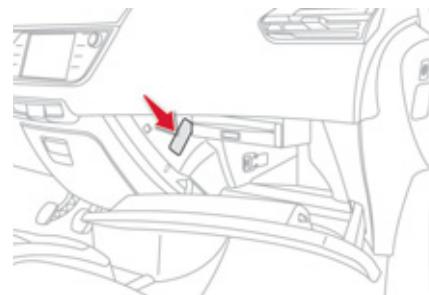

Depending on equipment, it may contain a CD player.

- To open the glove box, raise the handle. It is illuminated when the lid is opened. It is cooled by a manual directional ventilation nozzle.

It is connected directly to your vehicle's air conditioning system and is supplied with cool air whatever the temperature setting for the passenger compartment.


The refrigeration of your glove box operates only with the engine running and the air conditioning on.

## Removable console

The removable console is a portable storage space secured to the lower centre console.


It has a sliding lid, an open storage space and two cup holders.

### Releasing the removable console

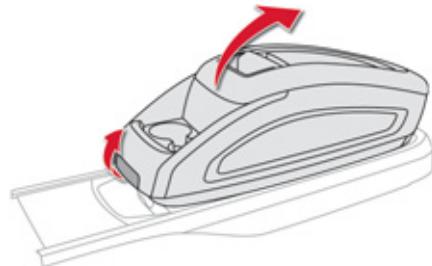

- ☞ Raise the locking control located at the front of the console.
- ☞ With one hand, lift the front part of the console.
- ☞ With the other hand, grasp the rear part to release the removable console.

### Refitting the removable console

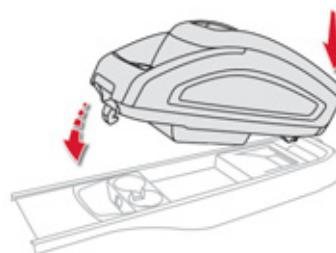


- ☞ Carry out these operations in reverse order. Ensure that the console has locked into place.



When not fixed to its carrier, the removable console should be stowed in the boot. It could become a projectile in the event of a sudden stop or violent impact.

## Central storage compartment

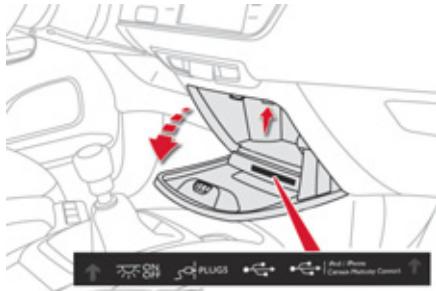

- To open the central storage compartment, pull the grip and lower the cover.


It is illuminated on opening.

A button on the upper part allows the lighting to be deactivated.

Depending on equipment, it may contain:

- one 230 V socket,
- one 12 V socket,
- one or two USB ports,
- one auxiliary socket

## 230 V / 50 Hz power socket

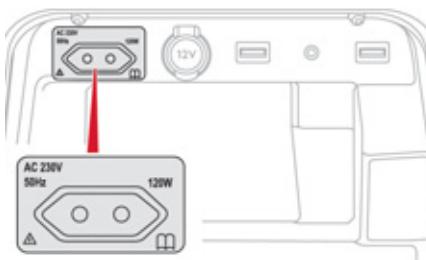

A 230 V / 50 Hz socket (maximum power: 120 W) is fitted in the central storage box.

To use the socket:

- open the central storage box,
- check that the warning lamp is on green,
- connect your multimedia or other electrical device (telephone charger, laptop computer, CD-DVD player, baby food warmer...).

This socket works with the engine running, as well as in STOP mode with Stop & Start.

In the event of a fault with the socket, the green warning lamp flashes.

Have it checked by a CITROËN dealer or a qualified workshop.




Connect only one device at a time to the socket (no extension or multi-way connector).

Connect only devices with class II insulation (shown on the device).


As a safety measure, when electrical consumption is high and when required by the vehicle's electrical system (particular weather conditions, electrical overload...), the current supply to the socket will be cut off; the green warning lamp goes off.

## 12 V accessory socket

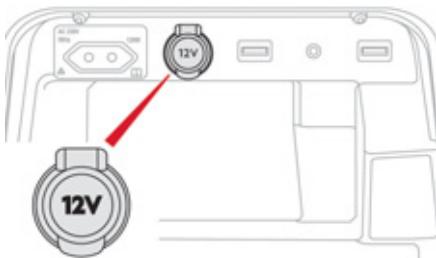

- To connect a 12 V accessory (maximum power: 120 Watts), lift the cover and connect a suitable adaptor.


## Auxiliary socket

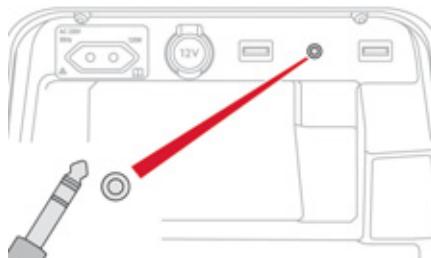

The auxiliary socket is located in the central storage box. It permits the connection of a portable device, such as a digital audio player of the iPod® type, to listen to your music files using the vehicle's speakers. The management of the files is done using your portable device.

For more information on the use of this equipment, refer to the "Audio and telematics" section.

## USB ports

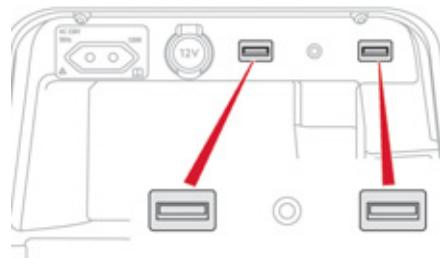

Depending on equipment, one or two USB ports are located in the central storage box. They allow the connection of a portable device or a USB memory stick. They read the audio files which are transmitted to your audio equipment and played via the vehicle's speakers. You can manage these files using the steering mounted or touch screen tablet controls.


**i** When a USB port is used, the portable device charges automatically.

**!** Only the right hand USB port can be used to connect an Apple® player or the "CITROËN MULTICITY CONNECT" connection key.

# Mats

Removable carpet protection.

## Fitting

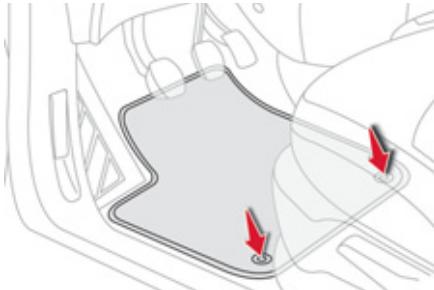

When fitting the mat for the first time, on the driver's side use only the fixings provided in the wallet attached.

The other mats are simply placed on the carpet.

## Removal

To remove the mat on the driver's side:

- ☞ move the seat as far back as possible,
- ☞ unclip the fixings,
- ☞ remove the mat.

## Refitting

To refit the mat on the driver's side:

- ☞ position the mat correctly,
- ☞ refit the fixings by pressing,
- ☞ check that the mat is secured correctly.



To avoid any risk of jamming of the pedals:

- only use mats which are suited to the fixings already present in the vehicle; these fixings must be used,
- never fit one mat on top of another.

The use of mats not approved by CITROËN may interfere with access to the pedals and hinder the operation of the cruise control / speed limiter.


The mats approved by CITROËN have two fixings located below the seat.

3

## Storage boxes

Depending on equipment, storage boxes are located under the front seat.

### Opening

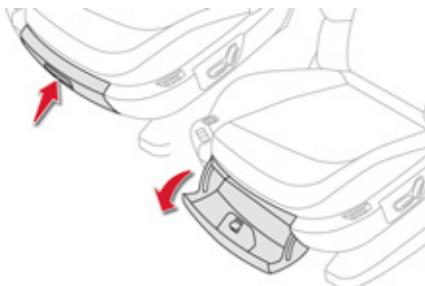


- ☞ Raise the grip and lower the storage box cover.



Do not place heavy objects in the boxes.

### Storage below the steering wheel

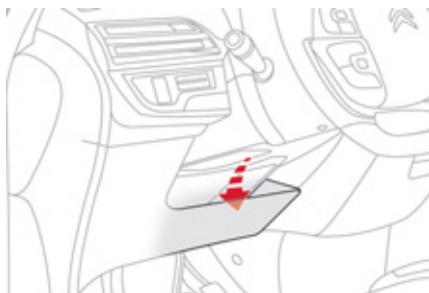

This storage compartment below the steering wheel is intended for stowing your vehicle's handbook pack.

# Rear fittings

## Aircraft-style rear tables



Rear table stowed




Rear table opened

These tables, fitted to the backs of the front seats, incorporate a cup-holder recess **A** and a retaining strap **B**.

- ☞ Pull the table downwards to open.
- ☞ To stow the table, raise it until the latch locks.

For safety reasons, these tables collapse downwards if excessive pressure is exerted on them.

## Individual reading lamps

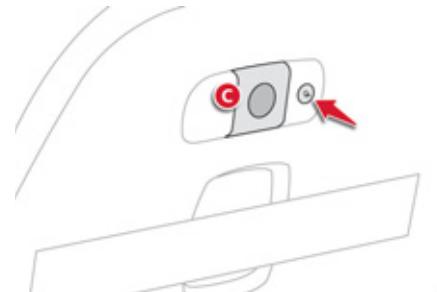


Reading lamps **C** may be fitted in the front seat backrests, behind the tables. They illuminate the surface of the tables without disturbing the other passengers.

They can be used only while the table is down.

- ☞ Press the "on/off" button to turn the lamp on or off.


## Side blinds

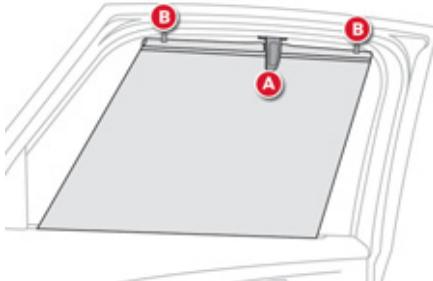

Fitted to the windows for the 2<sup>nd</sup> row seats, they protect the passenger compartment from the sun's rays.


- ☞ Pull the tab **A** and anchor the blind on the hook **B**.

## Storage wells

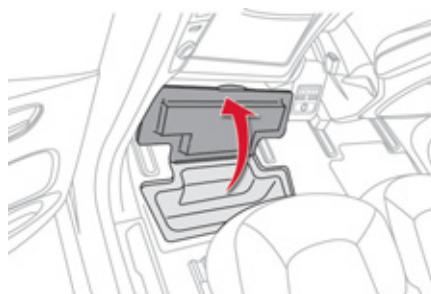

There are two storage wells under the rear passengers' feet.  
To open them, lift the cover at the cutout.

## 12 V accessory socket

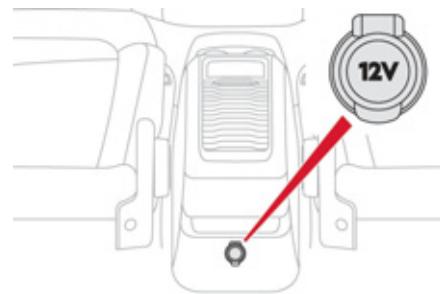

- ☞ To connect a 12 V accessory (maximum power: 120 Watts), lift the cover and connect a suitable adaptor.



## Rear multimedia



This multimedia system allows rear passengers to connect one or two external portable systems (audio or video player, games consoles, DVD player...). The sound is played through two Bluetooth® wireless headphone sets, while the video content is displayed in two 7-inch screens built into the backs of the front seat head restraints.




This system operates only with the engine running.

### Description

The pack includes:


- the connection and control panel fitted on the rear face of the centre console,
- two 7-inch screens built into the front head restraints (with protective covers),
- two wireless Bluetooth technology headphone sets with rechargeable batteries,
- a 12 V charger with two outlets allowing the simultaneous charging of two headphones,

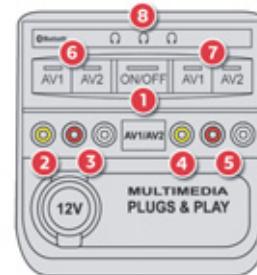

3

1. Power switch
2. AV1 video input (yellow RCA socket)
3. Stereo audio input A (red and white RCA sockets)
4. AV2 video input (yellow RCA socket)
5. Stereo audio input B (red and white RCA sockets)
6. Selection of display in the left hand screen (AV1 or AV2)
7. Selection of display in the right hand screen (AV1 or AV2)
8. Connection indicator lamps for the Bluetooth audio headphones (blue)


## Operation

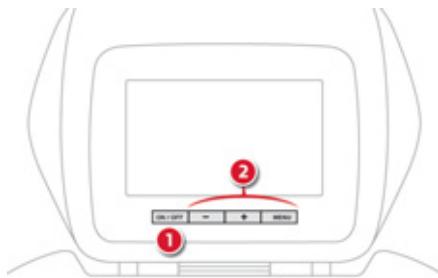

1. Screen power switch
2. Display adjustment buttons



Each headphone set has a switch, a connection indicator lamp (blue) and a channel selector (A or B).

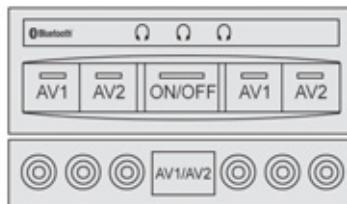

- ☞ With the engine running, connect your portable system to the RCA connectors (e.g. with AV1 on the left).
- ☞ Press the switch on the control panel, the indicator lamp comes on and the AV1 indicator lamps come on.
- ☞ Make a long press on the switch, its indicator lamp flashes in blue.
- ☞ Make a long press on the control panel switch, the pairing with the headphone set is complete when the blue indicator lamps on the headphones and on the system are on continuously.
- ☞ Repeat the operation for the other headphone set.
- ☞ Press the screen switch if you have a video source.
- ☞ Start playing your portable system.

- ☞ It is possible at any time to modify the source for the video display (using button **6** or **7** on the control panel: the indicator lamp for the source selected comes on) as well as the audio channel (using the selector on the headphones).

**i** The Multimedia system allows the connection of a third Bluetooth headphone set, not supplied.




**i** If your seat is in the table position, position a cover to avoid damaging the screen. These covers also conceal each screen.




## Boot fittings

1. Rear parcel shelf  
(see details on a following page)
2. Hooks  
(see details on a following page)
3. Torch  
(see details on a following page)
4. Storage boxes  
(see details on a following page)
5. Storage net
6. Lashing eyes
7. 12 V socket (maximum power: 120 Watts)

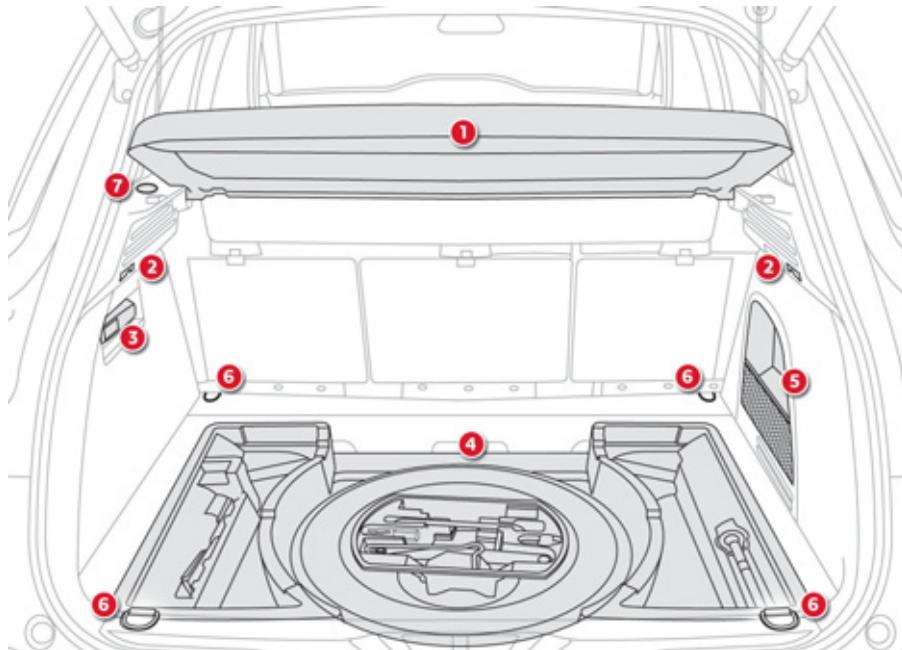

! Versions with storage boxes: these boxes must be put in place before loading the boot.

## Rear parcel shelf

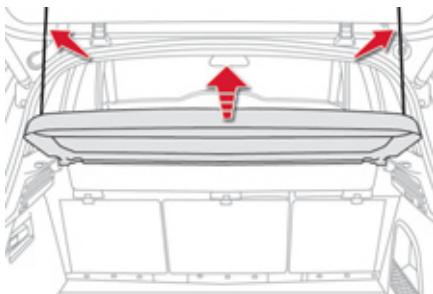

To remove the shelf:

- ☞ unhook the two cords,
- ☞ raise the shelf slightly, then remove it.

There are several options for storing the shelf:


- either upright behind the front seats,
- or flat at the base of the boot.

## Hooks



The hooks can be used to secure shopping bags.

## Storage boxes

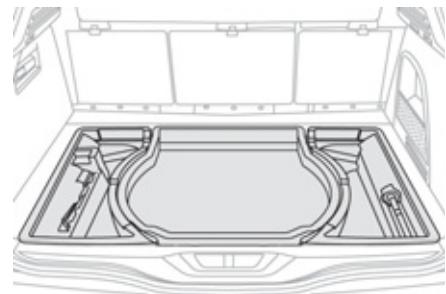

- ☞ Remove the boot carpet for access to the storage boxes.


Depending on the configuration, they are laid out for storing:

- wheel chocks,
- a tyre repair kit,
- two warning triangles,
- ...



## Boot fittings

1. Luggage cover blind  
(see details on a following page)
2. Torch  
(see details on a following page)
3. Concertina boards
4. Lashing eyes
5. 12 V socket (maximum power: 120 Watts)
6. Arm rest with cup holder and storage space
7. Retaining straps
8. Location for stowing the luggage cover blind
9. Open storage


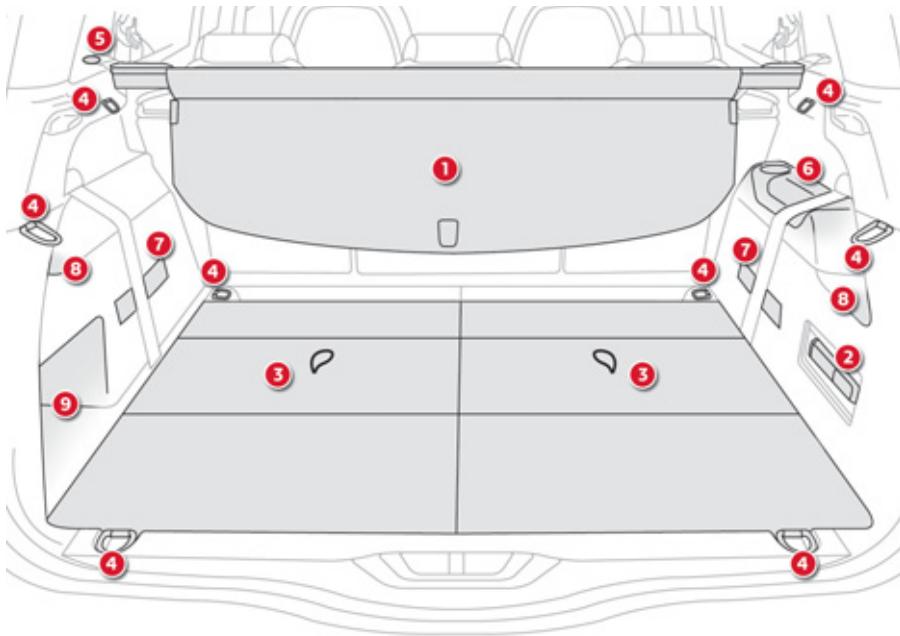




## Luggage cover roller

In the 5-seat configuration, it is installed behind the second-row seats, with the third-row seats folded away.

In the 7-seat configuration, it is stowed behind the third row seats.

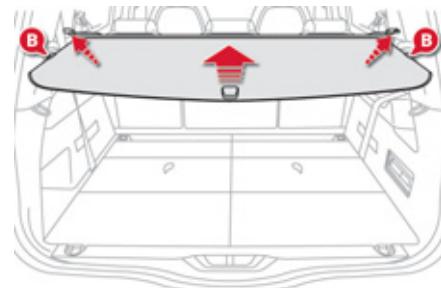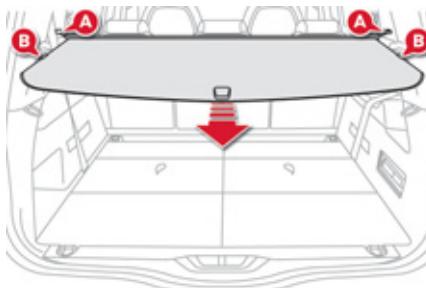

### Installation


- Position the left and right hand ends of the roller in cut-out **A**, with the mobile flap at the front.
- Pull out the blind until it reaches the boot pillars.
- Insert the guides of the blind into the rails on the pillars **B**.

### Removal

- Disengage the roller guides from the rails in the pillars **B**.
- Guide the blind as it is reeled in.
- Unlock the roller by pressing one of the grips located at the ends of the reel support.



The mobile flap allows passengers in the second row to place their seats in the "comfort" position.

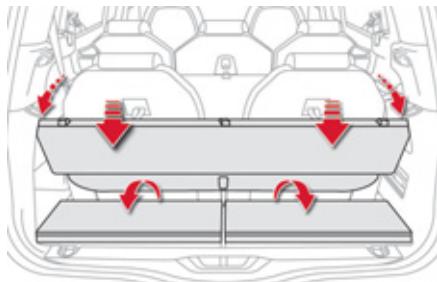

### Stowing behind the 3<sup>rd</sup> row seats



- ☞ Ensure that the 3<sup>rd</sup> row seats are folded.
- ☞ Fold the first two concertina boards.
- ☞ Install the roller in the space above the arm rest, one side after the other, inclining it slightly.
- ☞ Slide the roller as far as it will go, up to the cut-outs provided at the back of the boot, with the two flaps directed downwards.
- ☞ Unfold the third row seats.

The folded concertina boards can be positioned horizontally or vertically.

To fold the 3<sup>rd</sup> row seats with the roller stowed at the rear, it is necessary to raise the concertina boards in order to allow access to the seat locking controls (red straps).


## Torch

This is a removable lamp, fitted in the side of the boot, which can be used to illuminate the boot or as a torch.

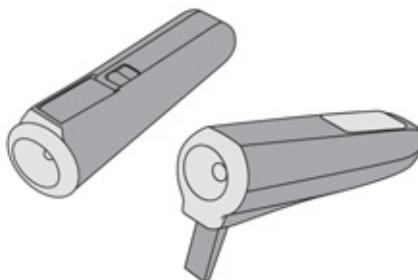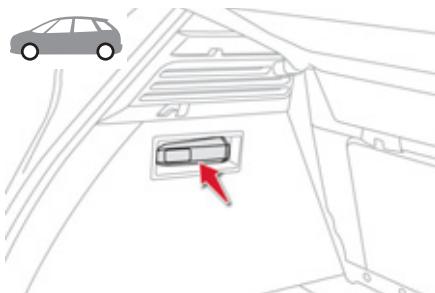

### Operation

This torch operates with NiMH type rechargeable batteries. It has a battery life of approximately 45 minutes and charges while you are driving.

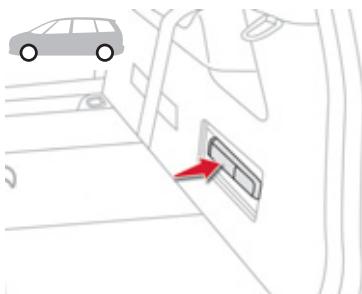

### Use

- Extract the torch from its location by pulling it from the front.
- Press the switch, located on the back, to switch the torch on or off.
- Unfold the support, located on the back, to set down and raise the torch; for example, when changing a wheel.

### Storing

- Put the torch back in place in its location starting with the rear. If you have forgotten to switch off the torch, this switches it off automatically.




Observe the polarities when fitting the batteries. Never replace the rechargeable batteries with single-use batteries.



If the torch is not engaged correctly, it may not charge and may not come on when the boot is opened.

# Starting-switching off the engine with the electronic key

## Starting the engine

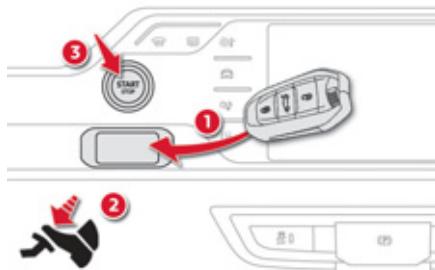

- ☞ Place the gear selector lever at **N** for vehicles with an electronic gearbox, **P** or **N** for vehicles with an automatic gearbox or neutral with a manual gearbox.
- ☞ Insert the electronic key in the reader.
- ☞ Press the brake pedal for vehicles with an electronic or automatic gearbox, or fully declutch for vehicles with a manual gearbox.



- ☞ Briefly press the "**START/STOP**" button.  
The steering column unlocks and the engine starts more or less immediately (see the advice for Diesel versions).

**i** If one of the starting conditions is not met, a reminder message appears in the instrument panel screen. In some circumstances, it is necessary to turn the steering wheel slightly while pressing the "START/STOP" button to assist unlocking of the steering; a message warns you when this is needed.

**!** For **Diesel vehicles**, in temperatures below zero the engine will not start until the preheater warning lamp has gone off. If this warning lamp comes on after pressing "START/STOP", you should hold the brake or clutch pedal down until the warning lamp goes off and do not press the START/STOP button again.

## Switching off the engine

- ☞ Immobilise the vehicle.
- ☞ Place the gear selector lever at **N** for vehicles with an electronic gearbox, **P** or **N** for an automatic gearbox, or neutral with a manual gearbox.



- ☞ Briefly press the "**START/STOP**" button
- The engine stops and the steering column locks.
- ☞ Remove the electronic key from the reader.

**i** If the vehicle is not immobilised, the engine will not stop.

## Emergency stop



In the event of an emergency only, the engine can be switched off without any conditions. To do this, press the "START/STOP" button for about three seconds.

In this case the steering column locks as soon as the vehicle stops



### Electronic key left in the reader

If the electronic key is left in the reader, on opening the driver's door a message appears to warn you.

# Starting-switching off the engine with the "Keyless Entry and Starting" system

## Starting the engine



- Place the gear selector lever at **N** for vehicles with an electronic gearbox, **P** or **N** with an automatic gearbox, or neutral with a manual gearbox.
- With the electronic key inside the vehicle (it is not necessary to put it in the reader), press the brake pedal for vehicles with an electronic or automatic gearbox, or fully declutch for vehicles with a manual gearbox.



- Briefly press the "**START/STOP**" button.  
The steering column locks and the engine starts more or less instantly (see the advice for Diesel versions).



If the electronic key is not detected in the zone, a message is displayed. Move the electronic key into the zone so that the engine can be started.

4

- If one of the starting conditions is not met, a reminder message appears in the instrument panel screen. In some circumstances, it is necessary to turn the steering wheel slightly while pressing the "START/STOP" button to assist unlocking of the steering; a message warns you when this is needed.

The presence in the defined zone of the electronic key for the "Keyless Entry and Starting" system is essential.  
For safety reasons, do not leave this zone with the vehicle running.



For **Diesel vehicles**, in temperatures below zero the engine will not start until the preheater warning lamp has gone off.

If this warning lamp comes on after pressing "START/STOP", you should hold the brake or clutch pedal down until the warning lamp goes off and do not press the START/STOP button again.

## Switching off the engine

- ☞ Immobilise the vehicle.
- ☞ Place the gear selector lever at **N** for vehicles with an electronic gearbox, **P** or **N** with an automatic gearbox, or neutral with a manual gearbox.




- ☞ With the electronic key inside the vehicle, press the "**START/STOP**" button.
- The engine stops and the steering column locks.

**i** If the vehicle is not immobilised, the engine will not stop.

**!** Do not leave your vehicle with the electronic key still inside.

## Emergency starting

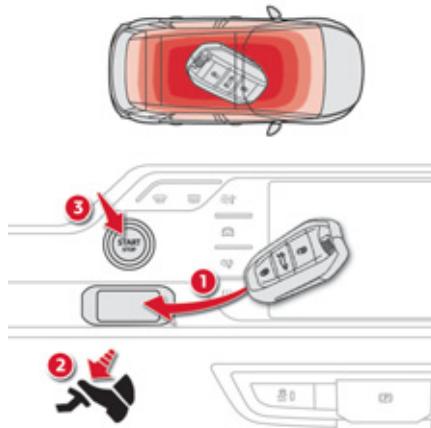

When the electronic key is in the defined zone and your vehicle does not start after pressing the "**START/STOP**" button:

- ☞ Place the gear selector at **N** for vehicles with an electronic gearbox, **P** or **N** for vehicles with an automatic gearbox or neutral for vehicles with a manual gearbox.

- ☞ Insert the electronic key in the reader.
- ☞ Press the brake pedal on vehicles with an electronic or automatic gearbox, or fully declutch with a manual gearbox.
- ☞ Press the "**START/STOP**" button.
- The engine starts.

## Emergency switch-off



In the event of an emergency only, the engine can be switched off without conditions. To do this, press and hold the "START/STOP" button for about 3 seconds.

In this case the steering column locks as soon as the vehicle stops.

## Electronic key not recognised



If the electronic key is no longer in the defined zone when driving or when you (later) request switching off the engine, a message appears in the instrument panel.



☞ Press and hold the "START/STOP" button for about 3 seconds if you want to force switching off the engine (**note that restarting will not be possible without the key**).

## Ignition on without starting

With the electronic key in the reader or the Keyless Entry and Starting key inside the vehicle, pressing the "START/STOP" button, **with no action on the pedals**, allows the ignition to be switched on.



- ☞ Press the "START/STOP" button, the instrument panel comes on but the engine does not start.
- ☞ Press the button again to switch off the ignition and so allow the vehicle to be locked.



With the ignition on, the system goes into energy economy mode when necessary to maintain the state of charge of the battery.

## Anti-theft protection

### Electronic engine immobiliser

The keys contain an electronic chip which has a secret code. When the ignition is switched on, this code must be recognised in order for starting to be possible.

This electronic engine immobiliser locks the engine management system a few minutes after the ignition is switched off and prevents starting of the engine by anyone who does not have the key.

In the event of a malfunction, you are informed by a message in the instrument panel screen. In this case, your vehicle does not start; contact a CITROËN dealer as soon as possible.

# Electric parking brake



The system provides, in automatic operation, the application of the parking brake on switching off the engine and release as the vehicle moves off.

The driver can take over at any time to apply or release the parking brake, by operating the control lever:

- by briefly **pulling** the control lever to apply the brake,
- by briefly **pushing** the control lever, while pressing the foot brake, to release.

Automatic mode is activated by default.

## Indicator lamp

 This indicator lamp comes on in the instrument panel and in the control lever to confirm the application of the parking brake.

It goes off to confirm the release of the parking brake.

The indicator lamp in the control lever flashes during manual application or release.

After the parking brake has been applied, the simultaneous flashing of the two indicator lamps in the instrument panel and the control lever alerts you to the need to fully secure your vehicle by engaging a gear (with a manual or electronic gearbox) or by placing the gear selector in position P with an automatic gearbox, or by fitting a chock to one of the wheels. (E.g. : parking on a very steep slope or on a slope with a low battery).



In the event of a battery failure, the electric parking brake no longer works. As a safety measure, if the parking brake is not applied, immobilise the vehicle by engaging a gear or placing a chock at one of the wheels. Contact a CITROËN dealer or a qualified workshop.

4

 The technology adopted for the electric parking brake does not allow the fitment of wheels smaller than 16 inches.



## Label on door panel

! Before leaving the vehicle, check that parking brake is applied: the indicator lamps in the instrument panel and the control lever must be on fixed, not flashing.

If the parking brake is not applied, there is an audible signal and a message is displayed on opening the driver's door.

! Never leave a child alone inside the vehicle with the ignition on, as they could release the parking brake.

! When towing, parking on a steep slope, or if your vehicle is heavily laden, turn the wheels towards the kerb and engage a gear (with a manual or electronic gearbox) or place the gear selector in position **P** with an automatic gearbox). For towing, your vehicle is approved for parking on slopes of up to 12%.

## Manual operation

### Manual release

With the ignition on or the engine running, to release the parking brake:

- press the brake pedal,
- while maintaining pressure on the brake pedal, briefly push the control lever.

The complete release of the parking brake is confirmed by the brake indicator lamp and the **P** indicator lamp in the control lever going off, accompanied by the display of the message "Parking brake released".

**i** If you push the control lever without pressing the brake pedal, the parking brake will not be released and a message is displayed.

### Manual application

With the vehicle stationary: briefly pull the control lever.

Confirmation of the instruction is signaled by flashing of the indicator lamp in the control lever.



Application of the parking brake is confirmed by illumination of the brake indicator lamp and the **P** indicator lamp in the control lever, accompanied by the display of the message "Parking brake applied".

## Automatic operation

### Automatic release

Ensure first that the engine is running and the driver's door is properly closed.

The electric parking brake **releases automatically and progressively** when you press the accelerator:

- ☞ Manual gearbox: fully depress the clutch pedal, engage 1<sup>st</sup> or reverse gear; press the accelerator pedal and let up the clutch pedal.
- ☞ Automatic gearbox: select position **D**, **M** or **R** then press the accelerator.
- ☞ Electronic gearbox: select position **A**, **M** or **R** then press the accelerator pedal.



The complete release of the parking brake is confirmed by the brake indicator lamp and the **P** indicator lamp in the control lever going off, accompanied by the display of the message "Parking brake released".



When stationary with the engine running, do not depress the accelerator pedal unnecessarily, you risk releasing the parking brake.

### Automatic application

With the vehicle stationary, the parking brake **is automatically applied when the engine is switched off** by pressing the START/STOP button.



Application of the parking brake is confirmed by illumination of the brake indicator lamp and the **P** indicator lamp in the control lever, accompanied by the display of the message "Parking brake applied".



With the engine stalled or in STOP mode of Stop & Start, automatic application does not take place.



In automatic mode, you can manually apply or release the parking brake using the control lever.

## Special cases

In some situations, you may need to operate the parking brake manually.

### Immobilisation of the vehicle with the engine running

To immobilise the vehicle with the engine running, briefly pull the control lever.



Application of the parking brake is confirmed by illumination of the brake indicator lamp and the P indicator lamp in the control lever, accompanied by the display of the message "Parking brake applied".

### Parking the vehicle with the brake released



In very cold conditions, it is recommended that the parking brake not be applied (risk of freezing). To immobilise your vehicle, engage a gear or fit a chock to one of the wheels.



The complete release of the parking brake is confirmed by the brake indicator lamp and the P indicator lamp in the control lever going off, accompanied by the display of the message "Parking brake released".

### Immobilisation of the vehicle with the parking brake released

- ☞ Switch off the engine.
- Illumination of the warning lamps in the instrument panel and control lever confirm application of the parking brake,
- ☞ Switch on the ignition again, without starting the engine.
- ☞ Release the parking brake manually by pushing the control lever while keeping your foot on the brake.

- ☞ Switch off the ignition.

## Deactivating automatic operation

In some situations, such as very cold weather or towing (caravan, recovery), it may be necessary to deactivate automatic operation of the system.

- ☞ Start the engine.
- ☞ Apply the parking brake with the control lever, if it is released.
- ☞ Take your foot off the brake pedal.
- ☞ Push and hold the control lever in the release direction for at least 10 seconds and no more than 15 seconds.
- ☞ Release the control lever.
- ☞ Press and hold the brake pedal.
- ☞ Pull the control lever in the apply direction for 2 seconds.



Deactivation of the automatic functions is confirmed by illumination of this indicator lamp in the instrument panel.

- ☞ Release the control lever and the brake pedal.

From this point the parking brake can only be applied and released manually using the control lever.

Repeat this procedure to reactivate automatic operation.

Reactivation of automatic operation is confirmed by the indicator lamp in the instrument panel going off.

## Emergency braking

! The emergency braking should only be used in an exceptional situation.

In the event of a failure of the main service brake or in an exceptional situation (e.g. driver taken ill, under instruction, etc) a continuous pull on the control lever will brake the vehicle. Braking takes place while the control lever is being pulled. It is interrupted if the control lever is released.

The ABS and DSC systems provide stability of the vehicle during emergency braking.

If the emergency braking malfunctions, the message "Parking brake control faulty" will be displayed.



If a failure of the ABS and DSC systems, signalled by the illumination of one or both warning lamps in the instrument panel, then stability of the vehicle is no longer guaranteed. In this event, stability must be assured by the driver by repeating alternate "pull-release" actions on the control lever until the vehicle is immobilised.

## Operating faults

The various alert situations are described in the table below.

In the event of a fault with the electric parking brake it is recommended that you contact a CITROËN dealer or a qualified workshop without delay.

Situations	Consequences
Display of the message " <b>Parking brake fault</b> " and the following warning lamps: 	<ul style="list-style-type: none"> <li>- Automatic release is not available.</li> <li>- If you attempt an automatic release, a help message is displayed on acceleration when the parking brake is applied, prompting you to use manual release.</li> </ul>
Display of the message " <b>Parking brake fault</b> " and of the following warning lamps:  	<ul style="list-style-type: none"> <li>- Secondary braking does not have full power.</li> <li>- If automatic release is not available, a help message is displayed on acceleration when the parking brake is applied, prompting you to use manual release.</li> </ul>
Display of the message " <b>Parking brake fault</b> " and of the following warning lamps:  	<ul style="list-style-type: none"> <li>- Automatic application is not available: use the control lever.</li> <li>- The electric parking brake can only be used manually.</li> <li>- If automatic release is also not available, a help message is displayed on acceleration when the parking brake is applied, prompting you to use manual release.</li> </ul>
Display of the message " <b>Parking brake fault</b> " and of the following warning lamps:  	<ul style="list-style-type: none"> <li>- If manual application and release do not work, the control lever is faulty.</li> <li>- The automatic functions must be used in all circumstances: they are automatically reactivated in the event of failure of the control lever.</li> <li>- You can no longer immobilise the vehicle with the engine running.</li> </ul>

Situations	Consequences
<p>Display of the message "<b>Parking brake fault</b>" and of the following warning lamps:</p> 	<p>The Parking Brake is faulty, the manual and automatic functions may not operate.</p> <p><b>When stationary</b>, to immobilise your vehicle:</p> <ul style="list-style-type: none"> <li>- Pull and hold the control lever for about 7 to 15 seconds, until the warning lamp comes on in the instrument panel.</li> </ul> <p>If this procedure does not work, you should make your vehicle safe:</p> <ul style="list-style-type: none"> <li>- Park on a level surface.</li> <li>- Engage a gear with a manual or electronic gearbox, or place the gear selector in position <b>P</b> with an automatic gearbox.</li> <li>- If possible, fit a wheel chock.</li> </ul> <p>Call on a CITROËN dealer or a qualified workshop.</p>
<p>Display of the message "<b>Parking brake fault</b>" and of the following warning lamps:</p> 	<ul style="list-style-type: none"> <li>- The parking brake does not have its full performance to securely hold the vehicle in all situations.</li> </ul> <p>You should make your vehicle safe:</p> <ul style="list-style-type: none"> <li>- Park on a level surface.</li> <li>- Engage a gear with a manual or electronic gearbox, or place the gear selector in position <b>P</b> with an automatic gearbox.</li> <li>- If possible, fit a wheel chock.</li> </ul> <p>Call on a CITROËN dealer or a qualified workshop.</p> <p>The flashing of the <b>P</b> warning lamps on starting the vehicle indicates that the parking brake is not correctly applied.</p> <p>As soon as possible, stop the vehicle and try to completely release the parking brake, using the control lever, with your foot on the brake pedal.</p>
<p>Display of the message "<b>Battery fault</b>" and the following warning lamp:</p> 	<ul style="list-style-type: none"> <li>- The state of charge of the battery is very low and requires immobilisation of the vehicle in a safe place: engage a gear with a manual gearbox or fit a chock to one of the wheels.</li> <li>- Once the battery is completely discharged, the controls do not operate: to release the parking brake, call on a CITROËN dealer or a qualified workshop.</li> </ul>

# Hill start assist

System which keeps your vehicle immobilised temporarily (approximately 2 seconds) when starting on a gradient, the time it takes to move your foot from the brake pedal to the accelerator pedal.

This system only operates when:


- the vehicle is completely stationary, with your foot on the brake pedal,
- certain conditions of slope are met,
- with the driver's door closed.

The hill start assist system cannot be deactivated.



Do not exit the vehicle while it is being held in the hill start assist phase. If you need to exit the vehicle with the engine running, apply the parking brake manually then ensure that the parking brake warning lamp (and the warning lamp **P** in the lever of the electric parking brake) are on fixed (not flashing).

## Operation

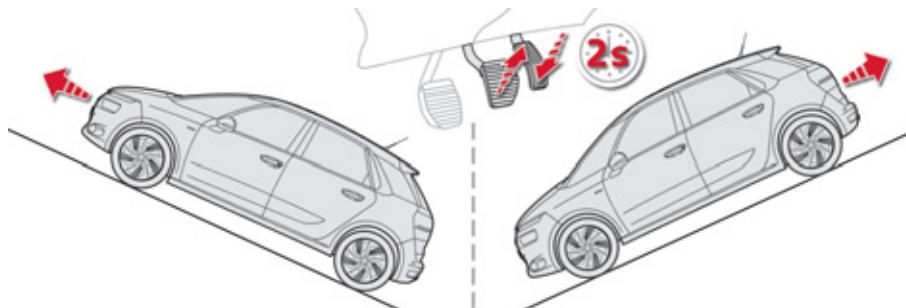

On an ascending slope, with the vehicle stationary, the vehicle is held for a momentarily when you release the brake pedal:

- provided you are in first gear or neutral on a manual gearbox,
- provided you are in position **A** or **M** on an electronic gearbox, **D** or **M** on an automatic gearbox.

On a descending slope, with the vehicle stationary and reverse gear engaged, the vehicle is held momentarily when you release the brake pedal.

## Operating fault




### SERVICE

If a fault in the system occurs, these warning lamps come on, accompanied by an alert message. Contact a CITROËN dealer or a qualified workshop to have the system checked.

## 5-speed manual gearbox

### Engaging reverse gear

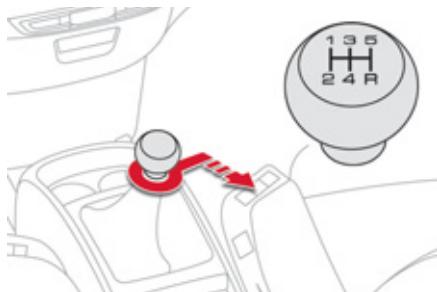

- With clutch pedal fully down, place the gear lever in neutral.
- Push the gear lever to the right then backwards.


**!** Only engage reverse gear when the vehicle is stationary with the engine at idle.

**i** As a safety precaution and to facilitate starting of the engine:

- always select neutral,
- press the clutch pedal.

## 6-speed manual gearbox

### Engaging 5<sup>th</sup> or 6<sup>th</sup> gear

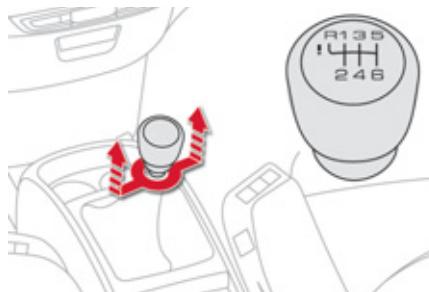

- Move the lever fully to the right to engage 5<sup>th</sup> or 6<sup>th</sup> gear.

**!** Failure to follow this advice may cause permanent damage to the gearbox (engagement of 3<sup>rd</sup> or 4<sup>th</sup> gear by mistake).

### Engaging reverse gear

- Raise the ring under the knob and move the gear lever to the left then forwards.

**!** Only engage reverse gear when the vehicle is stationary with the engine at idle.

**i** As a safety precaution and to facilitate starting of the engine:

- always select neutral,
- press the clutch pedal.

# 6-speed electronic gearbox system

Six-speed electronic gearbox system which offers a choice between the comfort of fully automatic operation and manual gear changing.

There are two driving modes:

- **automated** mode for automatic control of the gears by the gearbox, without any action on the part of the driver
- **manual** mode for sequential gear changing by the driver using the steering mounted paddles.


In automated mode, you can temporarily take over control of gear changing.

## Gear selector lever



- R.** Reverse
  - ☞ With your foot on the brake, move the selector lever.
- N.** Neutral.
  - ☞ With your foot on the brake, select this position to start the engine.
- A.** Automated mode.
  - ☞ Move the selector lever to position **A** to select this mode.
- M.** Manual mode with sequential manual gear changing.
  - ☞ Move the selector lever to position **M** to select this mode, then use the steering mounted control paddles to change gear.


## Steering mounted control paddles

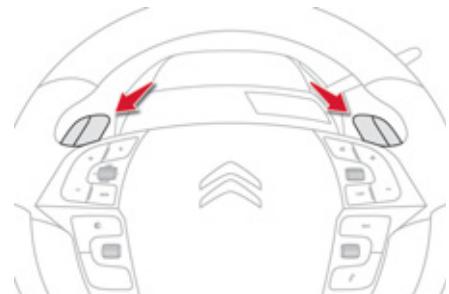

- +. Change up paddle to the right of the steering wheel.
  - ☞ Pull the "+" steering mounted paddle towards you to change up a gear.
- Change down paddle to the left of the steering wheel.
  - ☞ Pull the "-" steering mounted paddle towards you to change down a gear.

**i** The steering mounted paddles cannot be used to select neutral or to engage or disengage reverse gear.

## Displays in the instrument panel

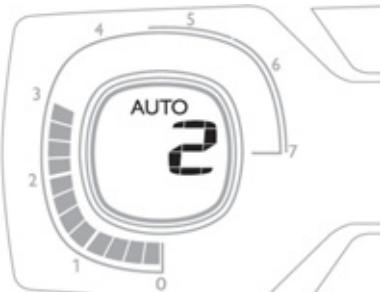

- N. Neutral
- R. Reverse
- M. (gear engaged) Manual mode.
- AUTO or A. Automated mode.

## Moving off

- ☞ Select position **N**.
- ☞ Press the brake pedal down fully.
- ☞ Start the engine.

**N** appears in the instrument panel screen.

**i** **N** flashes in the instrument panel, accompanied by an audible signal and a message, if the selector lever is not in position **N** on starting.



The **Foot on brake** warning lamp comes on the instrument panel, accompanied by an audible signal and a message, if the brake pedal is not pressed on starting the engine.

- ☞ Select automated mode (position **A**) or manual mode (position **M**) or reverse (position **R**).
- ☞ Release the parking brake by pulling the control lever, if automatic operation has been deactivated.
- ☞ Progressively take your foot off the brake pedal,
- ☞ If the parking brake is released, the vehicle moves off.
- ☞ If the parking brake is applied and the automatic mode is activated, accelerate progressively.

**AUTO** **A** or **AUTO** and **1**, **1** or **R** is displayed in the instrument panel.

## Automated mode

☞ Select position **A**.



**AUTO** or **A** and the gear engaged is displayed in the instrument panel.


The gearbox operates in auto-active mode, without any action on the part of the driver. It continuously selects the most suitable gear for:

- optimisation of fuel consumption,
- the style of driving,
- the profile of the road.
- the vehicle load.



For optimum acceleration, for example when overtaking another vehicle, press the accelerator pedal firmly past the point of resistance.

Never select neutral **N** when driving.

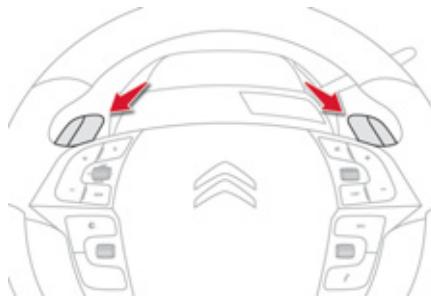

### Temporary control of gear changing

You can temporarily take over control of gear changing using the "+" and "-" steering mounted paddles. If the engine speed allows, the instruction to change gear is acted on. This function allows you to anticipate certain situations such as overtaking a vehicle or the approach to a corner.

After a few moments without any action on the control paddles, the gearbox resumes automatic control of the gears.

## Manual mode

☞ Select position **M**.

The gears engaged are displayed in succession in the instrument panel.

The gear change requests are only acted on if the engine speed permits.

It is not necessary to release the accelerator during gear changes.

When braking or slowing down, the gearbox changes down automatically to allow the vehicle to accelerate in the correct gear.

On sharp acceleration, the gearbox will not change up unless the driver acts on the steering mounted paddles.

You can change mode at any time by moving the selector lever from **A** to **M** or the other way round.

Never select neutral **N** while the vehicle is moving.

## Reverse

To engage reverse gear **R**, the vehicle must be immobilised with your foot on the brake pedal.

☞ Select position **R**.

Engagement of reverse gear is accompanied by an audible signal.

At low speed, if reverse gear is requested, the **N** indicator flashes and the gearbox goes into neutral automatically. To engage reverse, put the selector lever in position **N**, then position **R**.

## Stopping the vehicle

Before switching off the engine, you can:

- move to position **N** to engage neutral, or
- leave the gear engaged; in this case, it will not be possible to move the vehicle.

In both cases, if automatic operation of the electric parking brake has been deactivated, you must **apply the parking brake** by pulling the control lever.

## Operating fault

With the ignition on, the flashing of **A** or **AUTO**, accompanied by an audible signal and a message, indicates a malfunction of the gearbox.

Have it checked by a CITROËN dealer or a qualified workshop.

4



When immobilising the vehicle, with the engine running, you must place the selector lever in neutral **N**. Before carrying out any work in the engine compartment, ensure that the selector lever is in neutral **N** and that the parking brake is applied. Whatever the circumstances, you must manually apply the parking brake when parking, if automatic operation has been deactivated.

# Automatic gearbox


This gearbox offers two driving modes.

- **automated** mode for automatic management of the gears by the gearbox, without any action on the part of the driver,
- **manual** mode for sequential gear changing by the driver using the steering mounted paddles.

**i** It is possible to change from one mode to the other at any time.

With the automated mode, you can temporarily take control of the gear changes at any time.

## Gear selector lever

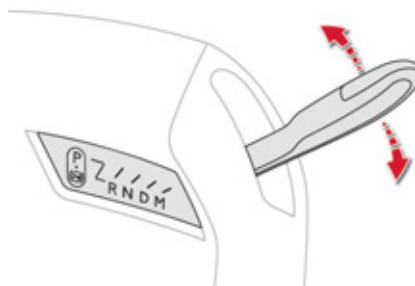

### P. Park.

- Immobilisation of the vehicle, parking brake applied or released.
- Starting the engine.

### R. Reverse.

- Reversing, vehicle stationary and engine at idle.

### N. Neutral.

- Immobilisation of the vehicle, parking brake applied.
- Starting the engine.

### D. Automatic operation.

- Manual operation with sequential changing of the six gears.


**i** To come out of position **P**, move the gear selector to the right to the desired position, while keeping your foot on the brake pedal.

**i** To select position **P**, move the gear selector to the highest position (towards **R**), then push it forwards and then to the left.

Only engage it when the vehicle is at a complete stop. In this position, the front wheels are locked. Ensure that the gear selector is correctly positioned.

**i** To move the gear selector, switch on the ignition or start the engine. If the battery is not sufficiently charged, it is not possible to move the gear selector.


## Steering mounted control paddles

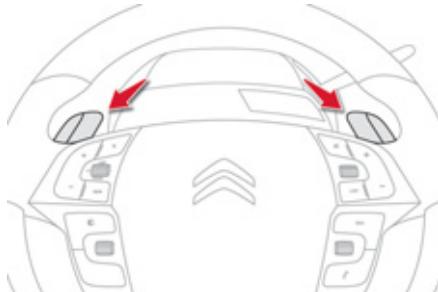

- +. Control paddle for changing up, to the right of the steering wheel.  
Pull the "+" paddle towards you to change up.
- . Control paddle for changing down, to the left of the steering wheel.  
Pull the "-" paddle towards you to change down.

**i** The steering mounted control paddles cannot be used to select neutral or to select or come out of reverse.

## Displays in the instrument panel

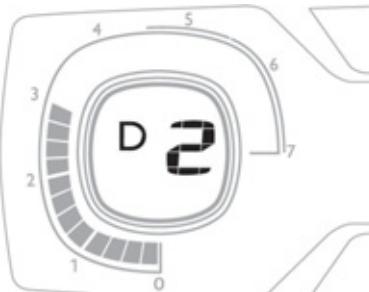

When you move the gear selector, the symbol corresponding to its position is displayed in the instrument panel.

- P. Park.
- R. Reverse.
- N. Neutral.
- D. Drive (automatic forward drive).
- 1 to 6. Gears engaged in manual operation.
- . Invalid value in manual operation.

## Moving off

- With your foot on the brake pedal, select position **P** or **N**.
- Start the engine.

**i** Otherwise, there is an audible signal accompanied by a message.

**i** If **P** is displayed in the instrument panel, although the gear selector is in another position, place the gear selector in position **P** to be able to start the engine.

- With the engine running, press the brake pedal.
- Select automated mode (position **D**), manual mode (position **M**) or reverse (position **R**).

**i**  If you do not press the brake pedal to come out of position **P**, this warning lamp or symbol appears in the instrument panel, accompanied by the message "Place automatic gearbox in position P", flashing of **P** in the instrument panel and an audible signal.

- Check that the symbol displayed in the instrument panel agrees with the position engaged.
- Progressively release the brake pedal.
- If the parking brake is release, the vehicle moves off.  
If the parking brake is applied and automatic operation is activated, accelerate away.

! Never press the accelerator and brake pedals at the same time. Braking and acceleration should be done only with the right foot. Pressing both pedals together risks damaging the gearbox.

! When the engine is running at idle, brakes releases, if position **R**, **D** or **M** is selected, the vehicle will move even if the accelerator is not pressed.

! Never select position **N** when driving. If position **N** is engaged in error when moving, allow the engine to idle, then engage position **D** to accelerate.

! Never leave children unsupervised in the vehicle when the engine is running. When carrying out a maintenance operation with the engine running, apply the parking brake and select position **P**.

! Never select position **P** or **R** unless the vehicle is a complete stop with the brake applied. When you want to engage reverse, to avoid jolt, do not accelerate immediately after engaging **R**. Changing into position **R** is accompanied by an audible signal.

## Automated mode



- ☞ Select position **D**.


**D** and the gear engaged are displayed in the instrument panel.

The gearbox operates in auto-active mode, without any action from the driver. It continuously selects the most appropriate gear according to the following conditions:

- optimisation of fuel consumption,
- driving style,
- relief of the road,
- vehicle load.

For maximum acceleration, without touching the gear selector, press the accelerator fully down (kick down). The gearbox changes down automatically and maintains the gear selected until the maximum engine speed is reached. When braking, the gearbox changes down automatically for more effective engine braking. When you take your foot off the accelerator pedal suddenly, the gearbox does not change up, so as to improve safety.

## Temporary manual control of the gears

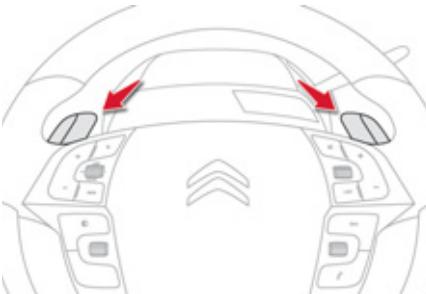

You can temporarily take control of gear changes using the "+" and "-" steering mounted control paddles. If the engine speed allows, the instruction to change gear is acted on.

This function allows you to anticipate certain situations such as overtaking another vehicle or approaching a bend.

After a few moments with no action on the control paddles, the gearbox manages the gears automatically again.

## Manual mode

- ☞ Select position **M**.
- ☞ Use the "+" and "-" steering mounted control paddles to change gear.

The gears engaged are displayed successively in the instrument panel.

When stationary or at very low speed, the gearbox automatically engages **1st gear**.

In manual mode, it is not necessary to release the accelerator pedal when changing gear.

The change from one gear to another is only effected if the conditions of vehicle speed and engine speed allow; otherwise the automatic laws of operation are imposed temporarily.

If the engine speed is too high or too low, the display of the gear selected flashes for a few seconds, then the new gear engaged is displayed.

### Invalid value in manual operation



This symbol is displayed if a gear is not engaged correctly (gear selector between two positions).



It is possible to change mode at any time, by moving the gear selector from **D** to **M** or the other way round.

## Parking the vehicle

Before switching off the engine, you can change to position **P** or **N** to be in neutral. In either case, apply the parking brake to immobilise the vehicle, unless it is programmed in automatic mode.

If the lever is not in position **P**, on opening the driver's door or approximately 45 seconds after switching off the ignition there is an audible signal and a message appears:

- ☞ move the gear selector to position **P**; the audible signal stops and the message disappears.

Whenever parking, you must apply the parking brake to immobilise the vehicle, if automatic operation has been deactivated.



In all circumstances, ensure that the gear selector is in position **P** before leaving your vehicle.

## Operating fault

### SERVICE

In the event of a fault with the gearbox, the service warning lamp comes on in the instrument panel, accompanied by a message and an audible signal.

In this case the gearbox goes into back-up mode and stays in 3<sup>rd</sup> gear. You may then feel a noticeable jolt when going from **P** to **R** and from **N** to **R**. This jolt does not present any risk to the gearbox.

Do not exceed 60 mph (100 km/h) while also observing legal speed limits.

Have it checked by a CITROËN dealer or a qualified workshop.

# Gear shift indicator

System which reduces fuel consumption by advising the driver to change up.

With an electronic gearbox, the system is only active in Manual mode.

## Operation

Depending on the driving situation and your vehicle's equipment, the system may advise you to skip one (or more) gear(s). You can follow this instruction without engaging the intermediate gears.

The gear engagement recommendations must not be considered compulsory. In fact, the configuration of the road, the amount of traffic and safety remain determining factors when choosing the best gear. Therefore, the driver remains responsible for deciding whether or not to follow the advice given by the system.

This function cannot be deactivated.

Example:

- You are in third gear.
- You press the accelerator pedal.
- The system may suggest that you engage a higher gear.



The information appears in the instrument panel in the form of an arrow. On vehicles with manual gearbox, the arrow can be accompanied by the recommended gear.



The system adapts its gear change recommendation according to the driving conditions (slope, load, ...) and the demands of the driver (power, acceleration, braking, ...).

The system never suggests:

- engaging first gear,
- engaging reverse gear,
- engaging a lower gear.

# Stop & Start

The Stop & Start system puts the engine temporarily into standby - STOP mode - during stops in the traffic (red lights, traffic jams, or other...). The engine restarts automatically - START mode - as soon as you want to move off. The restart takes place instantly, quickly and silently. Perfect for urban use, the Stop & Start system reduces fuel consumption and exhaust emissions as well as the noise level when stationary.

## Operation

### Going into engine STOP mode

**ECO** The "ECO" warning lamp comes on in the instrument panel and the engine goes into standby automatically:

- **with a manual gearbox**, at speeds below 12 mph (20 km/h), when you place the gear lever in neutral, and you release the clutch pedal,
- **with an electronic gearbox**, at speeds below 5 mph (8 km/h), when you press the brake pedal or place the gear selector lever in position **N**,
- **with an automatic gearbox**, with the vehicle stationary, when you press the brake pedal or place the gear selector lever in position **N**.

If your vehicle is fitted with the system, a time counter calculates the sum of the periods in STOP mode during a journey. It resets itself to zero every time the ignition is switched on with the START/STOP button.

**i** For your comfort, during parking manoeuvres, STOP mode is not available for a few seconds after coming out of reverse gear. STOP mode does not affect the functionality of the vehicle, such as for example, braking, power steering...

**!** Never refuel with the engine in STOP mode; you must switch off the ignition with the START/STOP button.

### Special cases: STOP mode not available

STOP mode is not invoked when:

- the driver's door is open,
- the driver's seat belt is not fastened,
- the vehicle has not exceeded 6 mph (10 km/h) since the last engine start using the START/STOP button,
- the electric parking brake is applied or being applied,
- the engine is needed to maintain a comfortable temperature in the passenger compartment,
- demisting is active,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed to assure control of a system.

**ECO** In this case, the "ECO" warning lamp flashes for a few seconds then goes off.

**This operation is perfectly normal.**

## Going into engine START mode

**ECO** The "ECO" warning lamp goes off and the engine starts automatically:

- **with a manual gearbox**, when you fully depress the clutch pedal,
- **with an electronic gearbox**:
  - gear selector lever in position **A** or **M**, when you release the brake pedal,
  - or gear selector lever in position **N** and the brake pedal released, when you place the gear selector lever in position **A** or **M**,
  - or when you engage reverse gear.
- **with an automatic gearbox**:
  - gear selector in position **D** or **M**, when you release the brake pedal,
  - or gear selector in position **N** and brake pedal released, when you place the gear selector in position **D** or **M**,
  - or when you engage reverse.

## Special cases: START invoked automatically

START mode is invoked automatically when:

- you open the the driver's door,
- you unfasten the driver's seat belt,
- the speed of the vehicle exceeds 15 mph (25 km/h) with a manual gearbox, 7 mph (11 km/h) with an electronic gearbox and 2 mph (3 km/h) with an automatic gearbox,
- the electric parking brake is being applied,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed for control of a system.

**ECO** In this case the "ECO" warning lamp flashes for a few seconds, then goes off.

**This operation is perfectly normal.**

## Deactivation

Deactivation of Stop & Start is done in the "Driving assistance" menu.

**ECO OFF** Press this button to deactivate the system.

**ECO OFF** This is confirmed by the indicator lamp in the button and this symbol.

**i** If the system has been deactivated in STOP mode, the engine restarts immediately.

**!** When driving on a flooded road, it is recommended that the Stop & Start function be deactivated and that you drive very slowly.

## Reactivation

**ECO OFF** Press this button again.

**ECO** The system is active again; this is confirmed by the indicator lamp in the button going off and illumination of this symbol.

**i** The system is reactivated automatically every time the engine is started by the driver.


## Operating fault

**SERVICE** In the event of a fault with the system, this warning lamp comes on continuously.

Have it checked by a CITROËN dealer or a qualified workshop.  
In the event of a fault in STOP mode, the vehicle may stall.  
All of the instrument panel warning lamps come on.  
Depending on version, an alert message may also be displayed, asking you to place the gear selector lever in position **N** and put your foot on the brake pedal.  
It is then necessary to switch off the ignition and start the engine again using the "START/STOP" button.

**!** Before doing anything under the bonnet, deactivate the Stop & Start system to avoid any risk of injury resulting from automatic operation of START mode.

## Maintenance

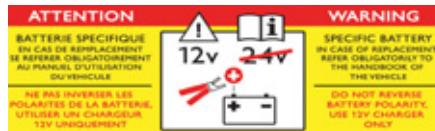

This system requires a 12 V battery with a special specification and technology (reference numbers available from CITROËN dealers). Fitting a battery not listed by CITROËN introduces the risk of malfunction of the system.  
For charging, use a 12 V charger and do not reverse the polarity.

**!** The Stop & Start system makes use of advanced technology. For any work on the system go to a qualified workshop with the skills and equipment required, which a CITROËN dealer is able to provide.

# Display of inter-vehicle time

Using a radar located at the front of the vehicle, this system helps the driver maintain a safe distance between their vehicle and the one in front, by displaying the inter-vehicle time in the instrument panel.

It is the time interval, expressed in seconds, that separates two vehicles in line. The recommended safe value is about 2 seconds: refer to the legislation or highway code in force in your country.



**i** The system is active in a speed range between 42 and 93 mph (70 and 150 km/h).

Stationary vehicles and certain other road users (such as bicycles for example) are not detected.

The system displays inter-vehicle time values of between 3 seconds and 0.5 of a second.

Below 0.5 of a second, the value displayed is maintained at this level, even if the true inter-vehicle time is less.

**!** The measurement is displayed for information only: the system takes no action on the vehicle.

This system does not in any circumstances replace the vigilance and responsibility of the driver who must remain in control of their vehicle at all times.

The system is not designed for urban use nor during more dynamic driving (bends, acceleration, harsh braking...) but rather when driving at stable speed.

## Activation / deactivation

Activation of the system is done in the "Driving assistance" menu, with the ignition on.



☞ Press this button, the indicator lamp comes on.

The state of the system is memorised when the ignition is switched off.

**i** Activation of the active cruise control automatically deactivates the system.

**i** This system is only available with the "DRIVING" display mode of the type 2 instrument panel.

## Displays

Once the system has been activated and the speed conditions are met, a symbol is displayed in the instrument panel.

Symbol	Associated message	Comments
		No vehicle detected by the radar.
		A vehicle is detected but the inter-vehicle time is more than 3 seconds. No value is displayed.
		A vehicle is detected. The inter-vehicle time is 3 seconds or less. The minimum value displayed is 0.5 seconds, even if the true inter-vehicle time is lower.

Symbol	Associated message	Comments
 System Inact. Vis. inadap.	<b>"SYSTEM INACTIVE: Speed unsuitable"</b>	<p>If the speed of your vehicle is outside the operating range. Where the speed is not suitable, a message is displayed while the speed is outside limits (below 42 mph (70 km/h) or above 93 mph (150 km/h), approximately). However, when decelerating, the system is deactivated below 27 mph (45 km/h).</p>
 System deactived	<b>"System deactivated"</b>	<p>On deactivating the function, in "DRIVING" display mode.</p>
 !	<b>"SYSTEM INACTIVE: Visibility reduced"</b>	<p>The system switches to standby automatically if the sensor does not detect the vehicle in front correctly (very difficult weather conditions, sensor out of adjustment, ...).</p>

## Operating limits

The vehicle being followed may not be detected in certain conditions such as, for example:

- when turning,
- when changing lane,
- when the vehicle in front is out of the range of the sensor (maximum range: around 100 m).

## Operating fault

### SERVICE

In the event of a fault with the system, this warning lamp is displayed accompanied by a message.

Have the system checked by a CITROËN dealer or a qualified workshop.



At the first use of the system after repair, a message may be displayed indicating that the system is initialising. The system is not available while this is in progress. As soon as the message disappears the system is operational again. If the message does not disappear, contact a CITROËN dealer or a qualified workshop.



The operation of the radar, located in the front bumper, may be disturbed by accumulations of grime (dust, mud...) or in certain weather conditions (snow, ice...).

The message "SYSTEM INACTIVE: Visibility reduced" is displayed to signal that the system has been put into standby.

Clean the front bumper regularly.

# Memorising speeds


This function allows speeds to be saved, which can then be offered to set the two systems: the speed limiter (to limit the speed of the vehicle) or the cruise control (for a vehicle cruising speed).

You can memorise up to six speed settings for each of the two systems. By default, some speeds are already memorised.

## Memorisation

☞ Go to the "Driving assistance" menu.

☞ Select the "Speed settings".

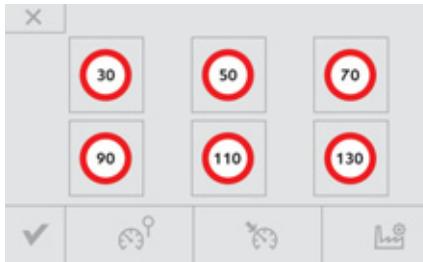

☞ Select the system for which you want to memorise speeds:

- speed limiter or
- cruise control.

☞ Choose the speed setting you want to modify.



☞ Enter the new value using the numerical keypad and confirm.

☞ Confirm to save the modification and quit the menu.



For safety reasons, the driver must carry out these operations when stationary.



This button allows you return to the factory settings.

4

# Speed limiter

Once the programmed speed limit is reached, additional pressure on the accelerator pedal has no effect.

System which prevents the vehicle from exceeding the speed programmed by the driver.

The speed limiter is **switched on** manually:

it requires a programmed speed of at least 20 mph (30 km/h).

The speed limiter is **paused** by operation of the control.

The programmed speed can be exceeded temporarily by pressing the accelerator firmly beyond the point of resistance.

To return to the programmed speed, simply release the accelerator pedal until the vehicle returns to the programmed speed limit.




The programmed speed remains in the memory when the ignition is switched off.



The speed limiter cannot, in any circumstances, replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.


## Steering mounted controls

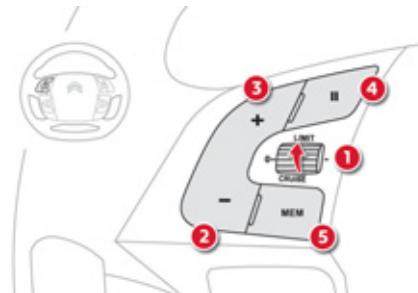

The controls are grouped together at the steering wheel.

1. Speed limiter mode selection wheel.
2. Value decrease button.
3. Value increase button.
4. Speed limiter on / pause button.
5. List of memorised speeds display button.

## Displays in the instrument panel

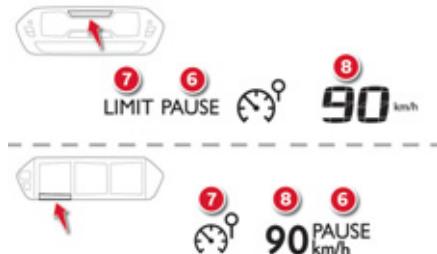


The information is grouped together in the instrument panel.

6. Speed limiter on / pause indication.
7. Speed limiter mode selection indication.
8. Speed value setting.

For more information on the list of memorised speeds, refer to the "Memorising speeds" section.

## Switching on / Pause

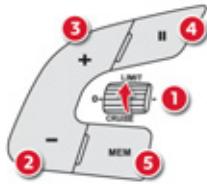

- ☞ Turn wheel **1** to the "LIMIT" position: the speed limiter mode is selected but is not switched on (Pause).
- ☞ Switch the speed limiter back on by pressing button **4**, if the speed displayed is suitable (by default, the last speed programmed).
- ☞ You can temporarily stop the speed limiter by pressing button **4** again: the display confirms that it has been stopped (Pause).

## Adjusting the speed limit setting



You do not have to switch the speed limiter on in order to set the speed.

Once the function is selected, you can modify the speed setting by:

- using buttons **2** and **3**, increasing or decreasing the speed displayed:
  - ☞ by successive short presses, to modify by + or -  $\frac{1}{2}$  mph (1 km/h),
  - ☞ by a maintained press, to modify in steps of + or - 3 mph (5 km/h).

- a press on button **5**:
  - ☞ the six speeds memorised, displayed in the touch screen tablet,
  - ☞ choosing a speed: it is displayed in the instrument panel.

The selection screen closes after a few moments.

## Temporarily exceeding the programmed speed

- Press firmly on the accelerator pedal, going beyond the **point of resistance**, to exceed the programmed speed limit.

The speed limiter is deactivated temporarily and the displayed programmed speed flashes. An audible signal accompanies the flashing of the programmed speed when exceeding the speed is not due to an action by the driver (steep hill...).

As soon as the vehicle's speed returns to the programmed value, the limiter operates again: the display of the programmed speed becomes steady again.



## Operating fault

Flashing of the dashes indicates a fault with the speed limiter.

Have it checked by a CITROËN dealer or a qualified workshop.

! On sharp acceleration, as when descending a steep hill, the speed limiter will not be able to prevent the vehicle from exceeding the programmed speed.

The limiter is temporarily deactivated and the displayed programmed speed flashes.

An audible signal accompanies the flashing of the programmed speed when exceeding the speed is not due to an action by the driver.

The use of mats not approved by CITROËN may interfere with the operation of the speed limiter.

To avoid any risk of jamming of the pedals:

- ensure that the mat is positioned correctly,
- do not fit one mat on top of another.

## Switching off

- Turn wheel 1 to the "0" position. The display of information related to the speed limiter disappears.

# Cruise control

System which automatically maintains the speed of the vehicle at the value programmed by the driver, without any action on the accelerator pedal.

The cruise control is **switched on** manually: it requires a minimum vehicle speed of 25 mph (40 km/h) and engagement of:

- at least fourth gear on a manual gearbox,
- second gear on an electronic or automatic gearbox, in manual driving mode,
- position **A** on an electronic gearbox or **D** on an automatic gearbox.


The cruise control is **paused** manually or by pressing the brake or clutch pedal or on triggering of the ESP system for safety reasons.

It is possible to exceed the programmed speed temporarily by pressing the accelerator pedal. To return to the programmed speed, simply release the accelerator pedal until the programmed cruise speed is reached again.

**i** Switching off the ignition cancels any programmed speed value.

**!** The cruise control system cannot, in any circumstances, replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.  
You are advised to keep your feet near the pedals at all times.

## Steering mounted controls

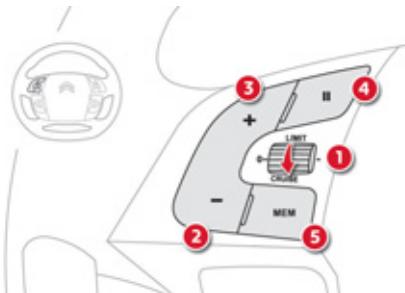


The controls of this system are grouped together at the steering wheel.

1. Cruise control mode selection wheel.
2. Decrease value or speed setting on the fly button.
3. Increase value or speed setting on the fly button.
4. Cruise control pause / resume button.
5. Memorised speeds display button.

For more information on the list of memorised speeds, refer to "Memorising speeds" section).


## Displays in the instrument panel

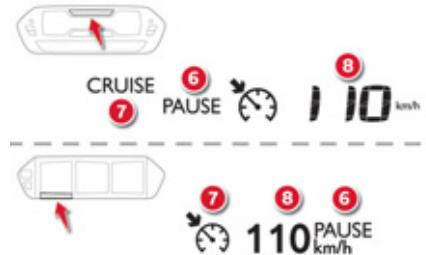

The information is grouped together in the instrument panel.

6. Cruise control pause / resume indication.
7. Cruise control mode selection indication.
8. Speed value setting.

## Switching on

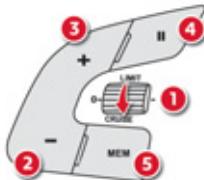

- Turn wheel **1** to the "CRUISE" position: the cruise control mode is selected but is not switched on (Pause).
- Press button **2** or **3**: your vehicle's current speed becomes the cruise speed (selected on the fly).

The cruise control is activated (ON).



### Modification of the initial speed setting

If the cruise control is on, you can then modify the initial speed in one of the following ways:

- using buttons **2** or **3**:
  - by successive short presses, to modify the speed by + or - 1 mph (km/h),
  - by a long press, to modify the speed in steps of + or - 5 mph (km/h),

- pressing button **5**:
  - the six memorised speeds are displayed in the touch screen tablet,
  - choose a value: it is displayed in the instrument panel.

The selection screen closes after a few moments.  
The modification is then accepted.

### Pause

Once switched on, you can pause the cruise control at any time by pressing button **4**: the screen confirms the pause.

## Operating fault

### Exceeding the programmed speed

If the programmed speed is exceeded, the displayed speed flashes.

Once the vehicle returns to the programmed speed, the display becomes steady again.

### Switching off

Turn wheel **1** to the "0" position.

The display of information related to the cruise control disappears.

Flashing of the dashes indicates a fault with the cruise control.

Have it checked by a CITROËN dealer or a qualified workshop.



When the cruise control is switched on, be careful if you maintain the pressure on one of the programmed speed changing buttons: this may result in a very rapid change in the speed of your vehicle.

Do not use the cruise control on slippery roads or in heavy traffic.

On a steep descent, the cruise control will not be able to prevent the vehicle from exceeding the programmed speed. On steep climbs or when towing, the programmed speed may not be reached or maintained.

The use of mats not approved by CITROËN may interfere with the operation of the cruise control.

To avoid any risk of jamming of the pedals:

- ensure that the mat is positioned correctly,
- never fit one mat on top of another.

# Active cruise control

This system allows, in addition to maintaining your vehicle's speed at a value that you have defined, the inter-vehicle time you have selected between your vehicle and the one ahead to be maintained (2 seconds by default, on activating the function).

## Principles of operation

Using a radar with a range of about 100 metres, located at the front of the vehicle, this system detects a vehicle running in front of your vehicle.

It automatically adapts the speed of the vehicle to that of the vehicle in front.

If the vehicle in front is running more slowly, the system progressively reduces the speed of your vehicle using just engine braking (as if the driver had pressed the "-" button).

If your vehicle is too close to or approaching too quickly the vehicle in front, the cruise control is automatically deactivated. The driver is then alerted by an audible signal, accompanied by a message.

If the vehicle in front accelerates or changes lane, the active cruise control progressively accelerates your vehicle to return to the programmed speed.

If the driver operates a direction indicator to the left (left hand drive) or the right (right hand drive), to overtake a slower vehicle, the active cruise control allows your vehicle to temporarily approach the vehicle in front to assist the overtaking manoeuvre, though never exceeding the programmed speed.

**i** The active cruise control operates by day and at night, in fog or in moderate rainfall.

**i** The activation of this system deactivates the function of inter-vehicle time.

**!** The system does not act on the braking system, but works only with engine braking.  
The regulation range is limited: there will no longer be any adjustment of speed if the difference between the programmed speed setting and the speed of the vehicle in front becomes too high (18 mph (30 km/h)).

**!** If the difference between the programmed speed setting and the speed of the vehicle in front is too great, the speed cannot be adjusted: the cruise control is automatically deactivated.

## General points

The active cruise control is **switched on** manually: it requires that the speed of the vehicle be between 25 mph (40 km/h) and 90 mph (150 km/h), as well as the engagement of:

- at least fourth gear with a manual gearbox,
- second gear with an electronic or automatic gearbox in manual mode,
- position **A** with an electronic gearbox or **D** with an automatic gearbox.

! If the speed setting selected is above 93 mph (150 km/h), the system switches to normal cruise control operation (a message appears in the instrument panel).

The active cruise control can above be **paused** manually with the control, or automatically:


- by pressing the brake or clutch pedal,
- in the event of operation of the DSC, for safety reasons,
- in the event of an action of the electric parking brake control,
- when an inter-vehicle time threshold is reached (calculated according to the relative speeds of your vehicle and the vehicle in front and the inter-vehicle time setting chosen),
- when the distance between your vehicle and the one in front becomes too small,
- when the speed of the vehicle in front is too low,
- when the speed of your vehicle becomes too low.

! Switching off the ignition cancels any programmed value, and the inter-vehicle time is reset to 2 seconds.



The active cruise control cannot in any circumstances replace the observation of speed limits, nor the the vigilance and responsibility of the driver. It is recommended that you always keep your feet close to the pedals.

## Steering mounted controls

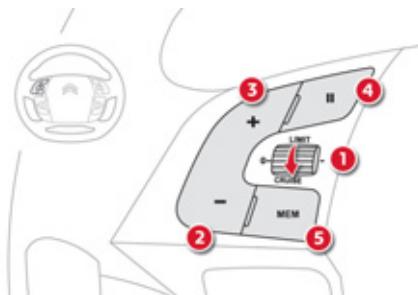

The controls for this system are grouped together on the steering wheel.

1. Cruise control mode selection wheel.
2. Button for reducing the cruise value setting or for setting the cruise value on the fly.
3. Button for increasing the cruise value setting or for setting the cruise value on the fly.
4. Button for pausing / resuming the cruise control.
5. Button for displaying the list of memorised speeds and for adjusting the inter-vehicle time.

For more information on the list of memorised speeds, refer to "Memorising speeds".

## Operation

### Switching on

- Turn the wheel **1** to the "CRUISE" position: cruise control mode is selected, but not started (Pause).
- Press one of the buttons **2** or **3**: the current speed of your vehicle becomes the cruise speed setting (set on the fly).

The cruise control is activated (ON).

The inter-vehicle time is set at 2 seconds.

### Modification of the cruise control speed only

#### Buttons **2** and **3**

- By successive short presses, to modify by steps of + or - 1 mph (km/h),
- by a maintained press, to modify in steps of + or - 5 mph (km/h).

As a precaution, it is recommended that you select a speed setting close to the current speed of your vehicle.



### Modification of the cruise control speed and/or the inter-vehicle time

#### Button **5** (MEM)

Press button **5**, the six memorised speeds and the inter-vehicle time setting are displayed in the touch screen tablet.

- Choose a speed setting: it is displayed in the instrument panel,
- press or the "+" or "-" button to choose a new inter-vehicle time setting between 2.5 seconds and 1 second.

The selection screen closes after a few moments. The modifications are then accepted.

**i** If the active cruise control has not been switched on, pressing this button has no effect.

## Displays in the instrument panel

**i** In the event of the presence of a vehicle detected by the radar, if the speed selected is much higher than the speed of that vehicle, the system is not activated and the alert message "Activation not possible, conditions unsuitable" is displayed until driving conditions are safe to allow activation of the system.

### Exceeding the programmed speed

It is possible to exceed the programmed speed temporarily by depressing the accelerator pedal. Simply release the accelerator pedal to return to the programmed speed.

If the programmed speed is unintentionally exceeded, descending a steep hill for example, the speed setting in the instrument panel flashes as a warning.



The information is grouped together in the instrument panel.

6. Indication of cruise control pause/resume.
7. Indication of selection of cruise control mode, or vehicle speed adjustment phase.
8. Cruise speed setting, or adjusted speed lower than the cruise setting.

## Driving situations and associated alerts

The table below describes the alerts and the messages displayed for the different driving situations.

The display of these alerts is not sequential.

Symbol	Display in the instrument panel	Associated message	Comments
			No vehicle detected: the system operates as a conventional cruise control.
			Detection of a vehicle, at the limit of the range of the radar: the system operates as a conventional cruise control.

Symbol	Display in the instrument panel	Associated message	Comments
		"SPEED ADJUSTED"	<p>Detection of a vehicle that is too close or running at a speed lower than your vehicle's cruise speed setting.</p> <p>The system uses engine braking to slow your vehicle and then hold it at the speed of the vehicle in front so as to maintain the programmed inter-vehicle time.</p> <p>The regulation range is limited to a maximum difference of 20 mph (30 km/h) between the speed setting and the speed of the vehicle ahead.</p>
		"Cruise control paused".	<p>If the system exceeds the limit of speed adjustment possible by the system and in the absence of any reaction by the driver (operation of the direction indicator, change of lane, reduction of the speed of the vehicle), the system is automatically paused.</p> <p>The display of the deactivation message is accompanied by an audible signal.</p>

! When the active cruise control is automatically paused, it can only be reactivated when safe conditions are restored. The message "Activation not possible, conditions unsuitable" is displayed while reactivation is not possible.

When the conditions allow, it is recommended that the function be reactivated by pressing button **2** or **3**, which will make the current speed of your vehicle the new cruise speed setting, rather than by pressing button **4** (on/pause) which reactivates the cruise control using the old cruise speed setting, which may be very different from the current speed of your vehicle.

## Limits of operation

The active cruise control uses only engine braking to slow the vehicle. Consequently the vehicle loses speed slowly, as when releasing the accelerator pedal.


The system is paused automatically:

- if the vehicle in front slows down too much or too suddenly, and the driver does not brake,
- if a vehicle comes between your vehicle and the vehicle in front,
- if the system does not slow the vehicle enough to continue to maintain a safe distance, for example when descending a steep hill.

The regulation range is limited to a maximum difference of 20 mph (30 km/h) between the speed setting and the speed of the vehicle ahead. Above this, the system goes into pause if a safe distance is not maintained.

**■** Severe weather conditions (very heavy rain, accumulations of snow in front of the radar) can interfere with the operation of the system, resulting in the display of the message "SYSTEM INACTIVE: Visibility reduced". The function remains unavailable until the message disappears.


As the radar's field of view is quite narrow, it is possible that the system may not detect:

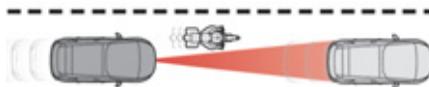

- vehicles of reduced width, such as motorcycles, for example,



- vehicles not running in the middle of the lane,

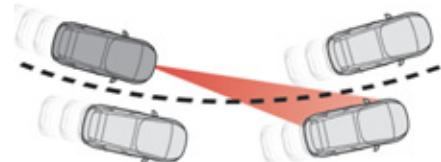

- vehicles entering a corner,
- vehicles changing lane at the last moment.

The cruise control does not take account of:

- stationary vehicles,
- vehicles driving in the opposite direction.

## Operating fault

In the event of a fault with the active cruise control, you are alerted by an audible signal and display of the message message "Driving aid functions fault".

Have the system checked by a CITROËN dealer or a qualified workshop.



When the cruise control is working, take care if making a maintained press on one of the cruise control programmed speed modification buttons: this can lead to a very quick change in the speed of your vehicle.

Do not use the active cruise control on slippery surfaces or in heavy traffic.

When descending a steep hill, the cruise control may not be able to prevent the vehicle from exceeding the programmed speed.

When ascending a steep hill or when towing, it might not be possible to attain or maintain the programmed speed.

The use of mats not approved by CITROËN may interfere with the operation of the cruise control.

To avoid any risk of jamming the pedals:

- ensure that mats are positioned correctly,
- never fit one mat on top of another.



The operation of the radar, located in the front bumper, may be disturbed by accumulations of grime (dust, mud...) or in certain weather conditions (snow, ice...).

The message "SYSTEM INACTIVE: Visibility reduced" is displayed to signal that the system has been put into standby.

Clean the front bumper regularly.

# Collision risk alert

System providing a warning to the driver that their vehicle is at risk of collision with the vehicle in front.



**i** This system operates from 20 mph (30 km/h), only when other vehicles are running in the same direction as your vehicle; the system does not detect stationary objects. A radar is fitted at the front of the vehicle.

**!** This system has been designed to improve driving safety. It is the responsibility of the driver to keep a constant check on the state of the traffic, to assess the relative speed and distance of other vehicles. The collision risk alert system can never replace the vigilance and responsibility of the driver.

The collision risk alert system can be activated or deactivated by the driver.

From the secondary page of the "Driving assistance" menu:

- ☞ select the "Vehicle settings" menu,
- ☞ check the "Collision risk alert" line and confirm.

**i** This function can be deactivated permanently by a CITROËN dealer or a qualified workshop.

## Setting the thresholds for the alert

The alert thresholds determine how you want to be alerted to the presence of a vehicle running in front of you.

You can choose from three thresholds:

- 1: "Distant", to be given an early alert (cautious driving).
- 2: "Normal".
- 3: "Close", to be given a later alert (sporty driving).

From the secondary page of the "Driving assistance" menu:

- ☞ select the "Vehicle settings" menu,
- ☞ check the "Collision risk alert" line,
- ☞ press on the magnifying glass,
- ☞ modify the alert threshold and press on "Finish" to memorise the threshold and leave the menu.

## Alerts

According to the collision risk detected by the system and the alert threshold chosen, three levels of alert can be triggered:



**Level 1:** visual alert only (orange) indicating that the vehicle in front is very close. The message "**Vehicle close**" is displayed.

This level of alert is based on the inter-vehicle time between your vehicle and the one in front.



**Level 2:** visual (red) and audible alerts indicating that a collision is imminent. The message "**Brake!**" is displayed.

This level of alert is based on a time before collision. It takes account of the vehicle dynamics, the speed of your vehicle and the speed of the vehicle in front, the driving conditions, the situation with your vehicle (cornering, pedals pressed, etc.) to trigger the alert at the right moment.



**Level 3:** an increase in the tension of the driver's seat belt, to hold the driver against the backrest of their seat.



The 3<sup>rd</sup> level of alert is not triggered or is interrupted in the event of an impact between the two vehicles.

The increase in the tension of the driver's seat belt is not intended as an alert for the driver: it does not in any circumstances assure the function of driver safety.

The triggering of this alert does not act on the safety functions provided by the seat belts.



The change from one level of alert to the next takes place if the driving conditions do not change (speed unchanged, no change of lane...)



If the speed of your vehicle is too high when approaching another vehicle, the first level of alert may not be displayed: the level 2 alert may be displayed directly.

On the other hand, the level 1 alert is never displayed with the triggering threshold 3 (close).



Severe weather conditions (very heavy rain, accumulation of snow in front of the radar) may interfere with the operation of the system, resulting in the display of the message "**System inactive: Reduced visibility**". The system remains unavailable until the message disappears.

## Operating fault

**SERVICE** In the event of a fault, you are alerted by the display of the Service warning lamp, accompanied by a message.  
Consult a CITROËN dealer or a qualified workshop.

! The operation of the radar, located in the front bumper, may be disturbed by accumulations of grime (dust, mud...) or in certain weather conditions (snow, ice...).  
The message "SYSTEM INACTIVE: Visibility reduced" is displayed to signal that the system has been put into standby.  
Clean the front bumper regularly.

# Lane departure warning system



System which, using a camera which recognises solid or broken lines, detects the involuntary crossing of longitudinal traffic lane markings on the ground.

To provide safe driving, the camera analyses the image then, if the driver's attention drops, triggers a warning if the vehicle drifts over a lane marking (speed higher than 50 mph (80 km/h)).

This system is particularly useful on motorways and main roads.

**!** The lane departure warning system cannot, in any circumstances, replace the need for vigilance and responsibility on the part of the driver.

## Activation / deactivation

Activation and deactivation of the function is done in the "**Driving assistance**" menu of the touch screen tablet.



- ☞ Press this button, the indicator lamp comes on. The function is activated
- ☞ Press this button again, the indicator lamp goes off. The function is deactivated

The status of the system remains in the memory when the ignition is switched off.

## Detection - alert

The driver is alerted by vibration of the seat belt (at the level of the reel):

No warning is transmitted while the direction indicator is active and for approximately 20 seconds after the direction indicator is switched off.

## Operating fault

### SERVICE

In the event of a fault, this warning lamp comes on accompanied by an audible signal and a message.

Contact a CITROËN dealer or a qualified workshop.


4




The detection may be impeded:

- if the markings on the ground are worn,
- if there is little contrast between the markings on the ground and the road surface,
- if the windscreen is dirty,
- in certain severe weather conditions: fog, heavy rain, snow, bright sunlight or direct exposure to the sun (low sun, leaving a tunnel, ...) and shade.

# Blind spot sensors

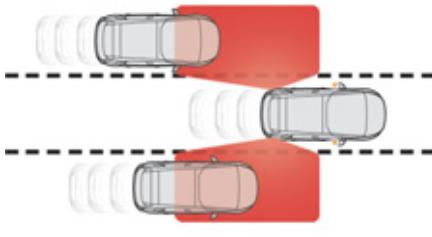

This driving assistance system warns the driver of the presence of another vehicle in the blind spot angle of their vehicle (areas masked from the driver's field of vision), as soon as this presents a potential danger.

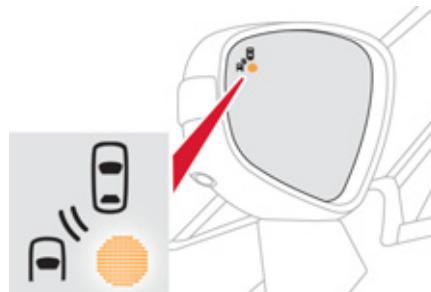

A warning lamp appears in the door mirror on the side in question:

- immediately, when being overtaken,
- after a delay of about one second, when overtaking a vehicle slowly.

## Operation

Activation of the system is done in the "Driving assistance" menu, with the ignition on.



Press this button to activate the function; the associated indicator lamp comes on.



This indicator lamp comes on in the instrument panel.


Sensors fitted in the front and rear bumpers monitor the blind spots.



This system is designed to improve safety when driving and is in no circumstances a substitute for the use of the interior rear view mirror and door mirrors. It is the driver's responsibility to constantly check the traffic, to assess the distances and relative speeds of other vehicles and to predict their movements before deciding whether to change lane. The blind spot sensor system can never replace the vigilance and responsibility of the driver.

The alert is given by a warning lamp which comes on in the door mirror on the side in question as soon as a vehicle - car, lorry, bicycle - is detected and the following conditions are fulfilled:

- all the vehicles must be moving in the same direction,
- the speed of your vehicle is between 7 and 87 mph (12 and 140 km/h),
- the difference in speed between your vehicle and the other vehicles must be less than 6 mph (10 km/h),
- the traffic must be flowing normally,
- in the case of an overtaking manoeuvre, if this is prolonged and the vehicle being overtaken remains in the blind spot,
- you are driving on a straight or slightly curved road,
- your vehicle is not pulling a trailer, a caravan...

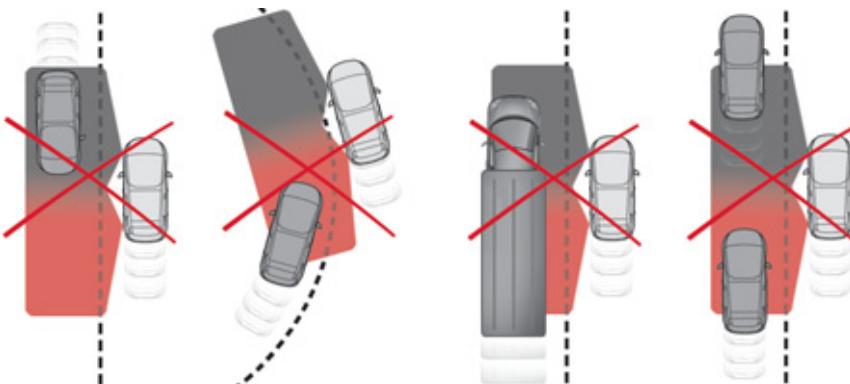

No alert will be given in the following situations:

- in the presence of stationary objects (parked vehicles, barriers, street lamps, road signs...),
- with vehicles moving in the opposite direction,
- driving on a sinuous road or a sharp corner,
- when overtaking (or being overtaken by) a very long vehicle (lorry, coach...) which is at the same time detected at the rear in the blind spot angle and present in the driver's forward field of vision,
- in very heavy traffic: vehicles detected in front and behind are confused with a lorry or a stationary object,
- when overtaking quickly.

## Operating fault



- To deactivate the system, press this button again; its indicator lamp goes off as well as the associated indicator in the instrument panel.

The state of the system remains in memory on switching off the ignition.



The system is automatically deactivated when towing with a towbar approved by CITROËN.



In the event of a fault, the warning lamp flashes then goes off.

Have it checked by a CITROËN dealer or a qualified workshop.




The system may suffer temporary interference in certain weather conditions (rain, hail...). In particular, driving on a wet surface or moving from a dry area to a wet area can cause false alerts (for example, the presence of a fog of water droplets in the blind spot angle is interpreted as a vehicle). In bad or wintry weather, ensure that the sensors are not covered by mud, ice or snow. Take care not to cover the warning zone in the door mirrors or the detection zones on the front and rear bumpers with adhesive labels or other objects; they may hamper the correct operation of the system.



### High pressure jet wash

When washing your vehicle, direct the lance at least 30 cm away from the sensors.

# Parking sensors

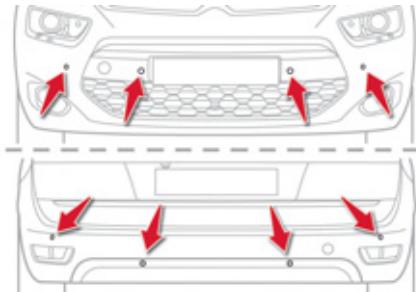

This system indicates the proximity of an obstacle (person, vehicle, tree, gate, etc.) which comes within the field of detection of sensors located in the bumper.

Certain types of obstacle (stake, roadworks cone, etc.) detected initially will no longer be detected at the end of the manoeuvre due to the presence of blind spots.

! This function cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.

## Rear parking sensors

The system is switched on by engaging reverse gear. This is accompanied by an audible signal. The system is switched off when you exit reverse gear.



## Audible assistance

The proximity information is given by an intermittent audible signal, the frequency of which increases as the vehicle approaches the obstacle. The sound emitted by the speaker (right or left) indicates the side on which the obstacle is located. When the distance between the vehicle and the obstacle becomes less than approximately thirty centimetres, the audible signal becomes continuous.



## Visual assistance

This supplements the audible signal by displaying bars in the screen or the instrument panel which move progressively nearer to the vehicle. When the obstacle is near, the "Danger" symbol is displayed.

## Front parking sensors

In addition to the rear parking sensors, the front parking sensors are triggered when an obstacle is detected in front and the speed of the vehicle is still below 6 mph (10 km/h).

The front parking sensors are interrupted if the vehicle stops for more than three seconds in forward gear, if no further obstacles are detected or when the speed of the vehicle exceeds 6 mph (10 km/h).

**i** The sound emitted by the speaker (front or rear) indicates whether the obstacle is in front or behind.

### Deactivation / Activation of the front and rear parking sensors

The system is deactivated in the "Driving assistance" menu in the touch screen tablet.



☞ Press this button. The indicator lamp in the button comes on.

Pressing this button again reactivates the system. The indicator lamp in the button goes off.

**i** The system will be deactivated automatically if a trailer is being towed or a bicycle carrier is fitted on a towbar (vehicle fitted with a towbar installed in line with the manufacturer's recommendations).

**i** The parking sensors are deactivated while the Park Assist system is measuring a space. See the "Park Assist" section.

## Operating fault


### SERVICE

In the event of a malfunction of the system, when reverse gear is engaged this warning lamp is displayed in the instrument panel and/or a message appears, accompanied by an audible signal (short beep). Contact a CITROËN dealer or a qualified workshop.

**i** In bad weather or in winter, ensure that the sensors are not covered with mud, ice or snow. When reverse gear is engaged, an audible signal (long beep) indicates that the sensors may be dirty. Certain sound sources (motorcycle, lorry, pneumatic drill, etc.) may trigger the audible signals of the parking sensor system.

**!** **High pressure jet wash**  
When washing your vehicle, do not direct the lance within 30 cm of the sensors.

# Reversing camera

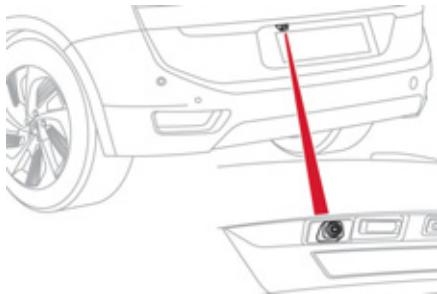


The reversing camera is activated automatically when reverse gear is engaged. Depending on version, the image is displayed in the touch screen tablet or the instrument panel.

**i** The reversing camera function may be completed with parking sensors.

**!** The reversing camera cannot in any circumstances be a substitute for the vigilance and responsibility of the driver.



The space between the blue lines represents the width of your vehicle except for the door mirrors.

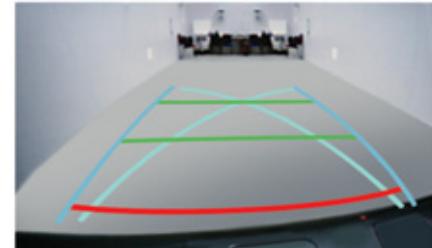

The blue lines represent the general direction of the vehicle. The red lines represent a distance of about 30 cm beyond the edge of your vehicle's rear bumper. The audible signal becomes continuous from this limit.

The green lines represent distances of about 1 and 2 metres beyond the edge of your vehicle's rear bumper.


The turquoise blue curves represent the maximum turning circle.

**!** **High pressure jet washing**  
When washing your vehicle, do not direct the lance within 30 cm of the camera lens.

**!** Opening the tailgate causes the display to disappear.

**i** Clean the reversing camera regularly using a soft, dry cloth.

# 360 Vision

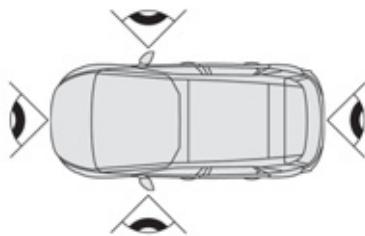


This system provides a view in the instrument panel of the near surroundings of your vehicle, using cameras mounted at the front and rear of your vehicle and under the door mirrors. Depending on the angle of view chosen (front view, rear view or 360° panoramic view), 360 Vision provides special visual assistance in particular driving conditions such as when entering a blind crossing or monoeuvring in areas of reduced visibility. Once activated, this function operates up to 9 mph (15 km/h). Above 18 mph (30 km/h), the function is deactivated automatically.



This system is a visual aid which in no circumstances can replace the vigilance and responsibility of the driver. The images provided by the cameras may be deformed by the relief. The presence of areas in shade, in sunny conditions, or of low ambient light may darken the image and reduce contrast.

## Forward vision

The camera located in the front bumper is activated and views of the areas located at front left and front right appear simultaneously in the instrument panel.

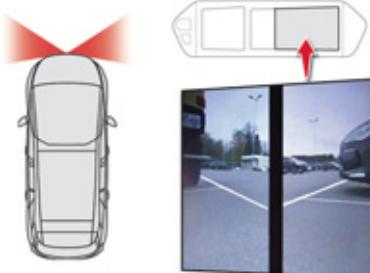


## Rear vision

The camera located in the tailgate is activated and the view of the area behind your vehicle is displayed in the instrument panel and behaves like a reversing camera, whatever the position of the gear selector lever.

The blue lines represent the width of your vehicle (excluding mirrors): they move according to the position of the steering wheel. The red line represents a distance of 30 cm from the rear bumper, and the two green lines, 1 m and 2 m from the rear bumper, respectively.



Rear vision is displayed automatically when engaging reverse, regardless of the state of the system.

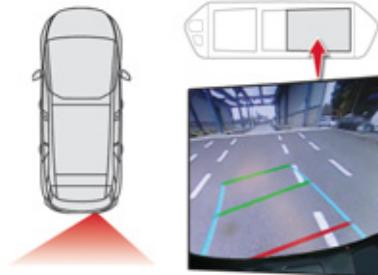


## Operation

### 360 vision

The cameras located in the front and rear bumpers and under the door mirrors are activated and a reconstruction of the view from above your vehicle in its immediate surroundings is displayed in the instrument panel.

- i** Opening a door or the tailgate disturbs the 360 and rear views.  
Fitting the very cold conditions screen affects the image transmitted by the front camera.

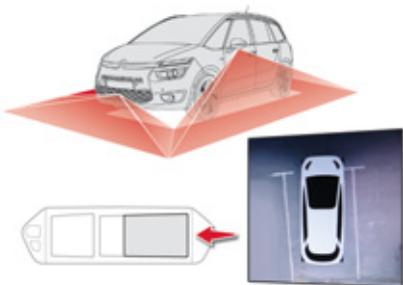

- i** The image transmitted by the camera can be slightly affected by the presence of the very cold conditions screen.



### Activating the function

With the engine running:

- ☞ Select the "Driving assistance" menu of the touch screen tablet.
- ☞ Press this button for access to the "360 vision" sub-menu.



With this menu displayed, select one of the three views:



"Front camera".



"360° camera".



"Rear camera".

The view selected is displayed in the instrument panel.

- i** The display in the instrument panel disappears above 9 mph (15 km/h).

4

### Deactivating the function

- ☞ Accelerate so as to exceed 18 mph (30 km/h).  
or
- ☞ Select the "Driving assistance" menu of the touch screen tablet.



- ☞ Press this button for access to the "360 vision" sub-menu.



- ☞ Select "Camera Off".



OFF

- !** Check the cleanliness of the camera lenses regularly.

#### High pressure jet wash

When washing your vehicle, direct the lance at least 30 cm away from the camera.

# Park Assist


This system provides active assistance with parking, detecting a parking space then controlling the steering to park in the space. It controls the steering while the driver manages the accelerator, brakes, gears and clutch (manual gearbox). During phases of entry into and exit from a parking space, the system provides visual and audible information to the driver in order to make the manoeuvres safe. It may be necessary to move forwards and backwards more than once.

The driver can take control at any time by gripping the steering wheel.


**!** The Park Assist system cannot in any circumstances replace the care and responsibility of the driver. The driver must remain in control of their vehicle ensuring that the space remains clear throughout the manoeuvre. In some circumstances, the sensors may not detect small obstacles located in their blind spots.

**i** The Park Assist system cannot work with the engine off.


The Park Assist system provides assistance for the following manoeuvres:

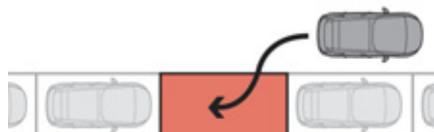

- entry into a parallel parking space

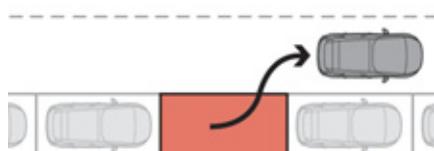

- exiting from a parallel parking space

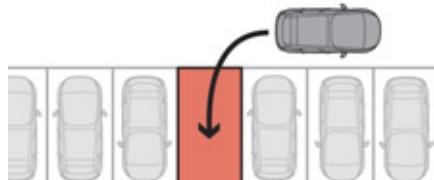

- bay parking

**!** During a manoeuvre the steering wheel turns quickly: do not hold the steering wheel, do not place your hand between the spokes of the steering wheel and take care with loose and bulky clothing, scarves, handbags... There is a risk of injury.

**i** When Park Assist is activated, it prevents a change to STOP mode of Stop & Start. In STOP mode, activation of Park Assist restarts the engine.

**i** The Park Assist system takes control of the power steering for a maximum of 4 manoeuvre cycles. The function is deactivated after these 4 cycles. If you think that your vehicle is not positioned correctly, you should then take control of the steering to carry out the manoeuvre.

! The sequence of manoeuvres and the driving instructions are displayed in the instrument panel.



The assistance is activated: the display of this symbol and a speed limit indicate that the steering manoeuvres are controlled by the system: do not touch the steering wheel.




The assistance is deactivated: the display of this symbol indicates that the steering manoeuvres are no longer controlled by the system: you must take control of the steering.

! You should always check the surroundings of your vehicle before starting a manoeuvre.

i The park sensors function is not available during parking space measurement. It intervenes later when manoeuvring to warn you that your vehicle is approaching an obstacle: the audible signal becomes continuous when the obstacle is less than thirty centimetres away.  
If you have deactivated the parking sensors, they are automatically reactivated during assisted parking manoeuvres.

! Activation of Park Assist inhibits the blind spot monitoring function.

## Operation

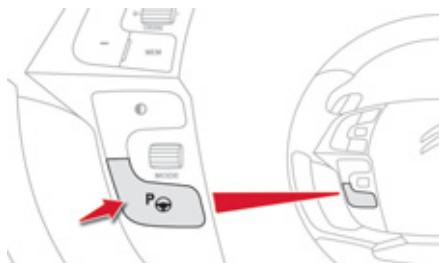

### Assistance with parallel parking manoeuvres

When you have identified a parking space,



Press this control at the steering wheel,


or



Select "Park Assist" in the "Driving assistance" menu of the touch screen tablet to activate the function.



This indicator lamp comes on in the instrument panel to confirm activation of the function.

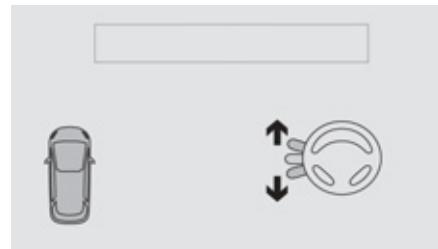

Operate the direction indicator on the parking side chosen to activate the measurement function. You should drive at a distance of between 0.5 m and 1.5 m from the row of parked vehicles.




Limit the speed of the vehicle to a maximum of 12 mph (20 km/h) and select "Enter parking slot" in the touch screen tablet.



To enter a parking space, the system does not identify spaces that are clearly smaller or larger than the vehicle.



Drive slowly following the instructions until the system finds a free space.

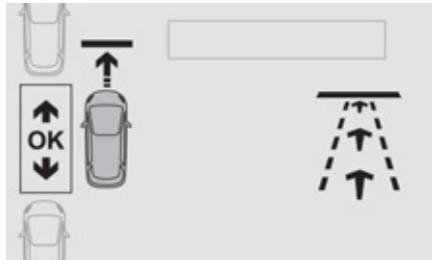

☞ Move forwards slowly until a message is displayed, accompanied by an audible signal, asking you to engage reverse gear.




☞ The assisted parking manoeuvre is in progress.  
Without exceeding 5 mph (8 km/h), move forwards and backwards, aided by the warnings from the "Parking sensors" system, until the indication of the end of the manoeuvre.



☞ At the end of the manoeuvre, the operating indicator lamp goes out in the instrument panel, accompanied by a message and an audible signal.  
The assistance is deactivated: you can take over control.



☞ Select reverse, release the steering wheel and start moving without exceeding 5 mph (8 km/h).

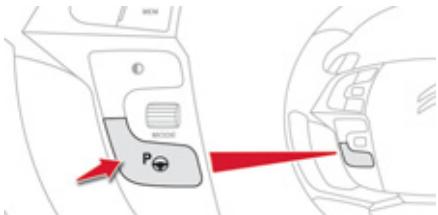

### Assistance in exiting from a parallel parking space

- When you want to leave a parallel parking space, start the engine.



or



- With the vehicle stationary, press this control at the steering wheel,

- Select "Park Assist" in the "Driving assistance" menu of the touch screen tablet to activate the function.



This indicator lamp comes on in the instrument panel to confirm the activation of the function.



- Press on "Exit parking slot" in the touch screen tablet.




- Operate the direction indicator for the exit side chosen.
- Engage reverse or forward gear and release the steering wheel.



- The assisted parking manoeuvre is in progress. Without exceeding 3 mph (5 km/h), move forwards and backwards, aided by the warnings from the "Parking sensors" system, until the indication of the end of the manoeuvre.



The manoeuvre is complete when the vehicle's front wheels are clear of the parking space. At the end of the manoeuvre, the indicator lamp in the instrument panel goes off, accompanied by a message and an audible signal. The assistance is deactivated: you can take over control.

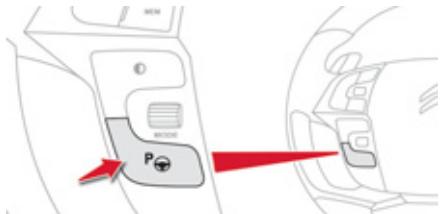

## Assistance with bay parking manoeuvres



or



- Once you have identified a parking zone, press this control at the steering wheel,


- Select "Park Assist" in the "Driving assistance" menu of the touch screen tablet to activate the function.




This indicator lamp comes on in the instrument panel to confirm the activation of the function.



- Limit the speed of the vehicle to a maximum of 12 mph (20 km/h) and select "Start parking in a bay" on the touch screen tablet.

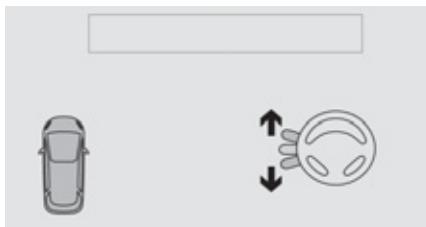


- Operate the direction indicator on the parking side chosen to activate the measurement function. You should drive at a distance of between 0.5 m and 1.5 m from the row of parked vehicles.

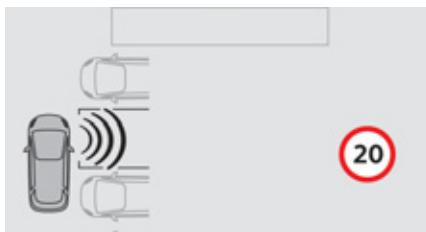


- Drive slowly following the instructions until the system finds a free space.

**i** When several successive bays are found, the vehicle will be directed towards the last one.

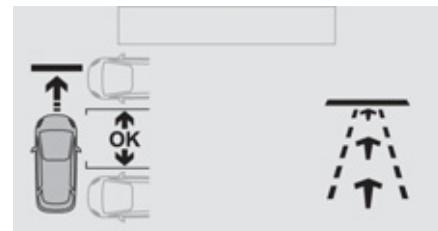


- Move forwards slowly until a message is displayed, accompanied by an audible signal, asking you to engage reverse gear.

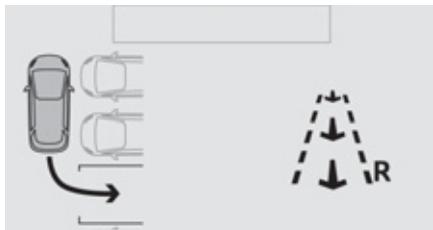

- Select reverse, release the steering wheel and start moving without exceeding 5 mph (8 km/h).



- The assisted parking manoeuvre is in progress.  
Without exceeding 5 mph (8 km/h), follow the instructions displayed in the instrument panel, aided by the warnings from the "Parking sensors" system, until the indication of the end of the manoeuvre.

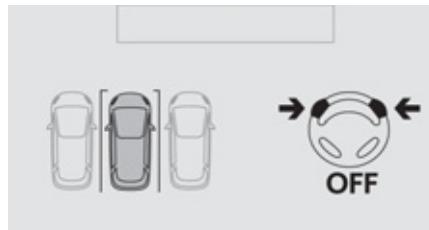

At the end of the manoeuvre, the operating indicator lamp goes out in the instrument panel, accompanied by a message and an audible signal.

The assistance is deactivated: you can take over control.

**i** During a bay parking manoeuvre, the Park Assist system is automatically deactivated once the rear of the vehicle is within 50 cm of an obstacle.

**i** During parking and exit from parking manoeuvres, the reversing camera function may come into operation. It facilitates monitoring of the surroundings of the vehicle, by displaying additional information in the instrument panel (see the corresponding section).

## Deactivation

The system is deactivated automatically:

- on switching off the ignition,
- if the engine stalls,
- if no manoeuvre is started within 5 minutes of selection of the type of manoeuvre,
- after a prolonged stop of the vehicle during a manoeuvre,
- if the road wheel anti-spin regulation (ASR) is triggered,
- if the speed of the vehicle exceeds the stated limit,
- when the driver interrupts movement of the steering wheel,
- if the driver presses the Park Assist control,
- after 4 manoeuvre cycles,
- on opening the driver's door,
- if one of the front wheels encounters an obstacle.

The operation indicator lamp goes off in the instrument panel and a message is displayed accompanied by an audible signal.

The driver should then take back control of the vehicle's steering.

If the system is deactivated during a manoeuvre, the drive should reactivate it manually to repeat the measurement.

## Switching off

The system is switched off automatically:

- when towing a trailer,
- if the driver's door is opened,
- if the speed of the vehicle is above 42 mph (70 km/h).

To switch the system off for a prolonged period, contact a CITROËN dealer or a qualified workshop.

## Operating faults

### SERVICE

In the event of a fault with the system, this warning lamp is displayed in the instrument panel and a message appears, accompanied by an audible signal.



The indicator lamp for the function flashes for a few seconds. If the fault occurs during the use of the system, the indicator lamp goes off.

### STOP

In the event of a fault with the power steering, this warning lamp comes on in the instrument panel accompanied by an alert message.

Contact a CITROËN dealer or a qualified workshop.



If the lateral distance between your vehicle and the space is too great, the system may not be able to measure the space. Anything projecting beyond the envelope of the vehicle (long or wide load) is not taken into account by the Park Assist system during a manoeuvre.



In bad weather or in winter, ensure that the sensors are not covered by road dirt, ice or snow.

In the event of a fault, have the system checked by a CITROËN dealer or a qualified workshop.

# Exterior lighting controls

System for selection and control of the various front and rear lamps providing the vehicle's lighting.

## Main lighting

The various front and rear lamps of the vehicle are designed to adapt the driver's visibility progressively according to the climatic conditions:

- sidelamps, to be seen,
- dipped beam headlamps to see without dazzling other drivers,
- main beam headlamps to see clearly when the road is clear.

## Additional lighting

Other lamps are provided to meet the requirements of particular driving conditions:

- rear foglamps,
- front foglamps with cornering lighting,
- directional headlamps for improved visibility when cornering,
- daytime running lamps to be more visible during the day,
- guide-me-home and welcome lighting to facilitate access to the vehicle,
- parking lamps as vehicle position markers.

## Programming

The setting of some functions can be adjusted:

- automatic illumination of headlamps,
- Automatic headlamps,
- guide-me-home lighting,
- welcome lighting,
- cornering lighting,
- directional lighting.

### Travelling abroad

#### **Halogen headlamps**

For motoring in countries that drive on the other side of the road, it is necessary to adapt the adjustment of the dipped beams so as to not dazzle the drivers of approaching vehicles.

Contact a CITROËN dealer or qualified workshop.


#### **Xenon headlamps**

The design of the dipped beam headlamps allows you to drive in a country that drives on the other side of the road, without the need for any modification.


 In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

 In the event of the failure of one or more bulbs, a message advises you to check the lamp(s) in question.

## Main lighting

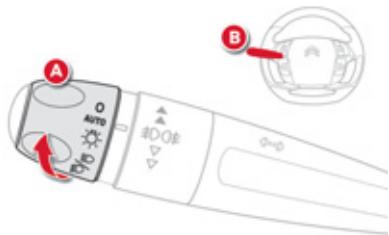

### Model without AUTO lighting

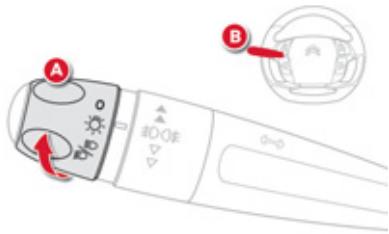

### Model with AUTO lighting

## Selection of main lighting mode

Turn the ring **A** to place the desired symbol against the mark.

 **O** Lighting off / daytime running lamps.

 **AUTO** Automatic illumination of headlamps. Daytime running lamps / Dipped beam / Main beam.

 Sidelamps.

 Dipped headlamps or main beam headlamps.


## Headlamp dipping

Pull the stalk **B** towards you to switch the lighting between dipped and main beam headlamps or to activate automatic headlamp dipping.

In the lamps off and sidelamps modes, the driver can switch on the main beam headlamps temporarily ("headlamp flash") by maintaining a pull on the stalk.


## Displays

Illumination of the corresponding indicator lamp in the instrument panel confirms that the lighting selected is on.

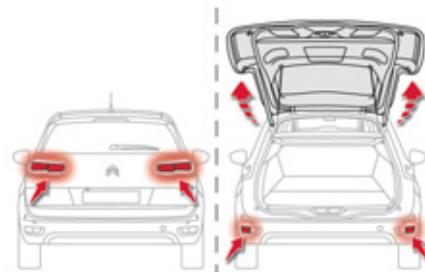


5

 The rear sidelamps and direction indicators are located on the tailgate. When they are on, opening the tailgate automatically transfers illumination to the lamps located in the rear bumper, to maintain the safety of the vehicle.

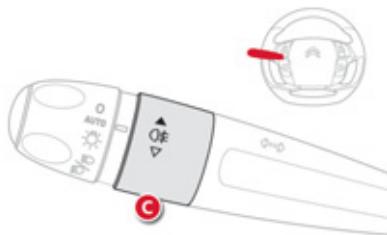


## Model with rear foglamps only

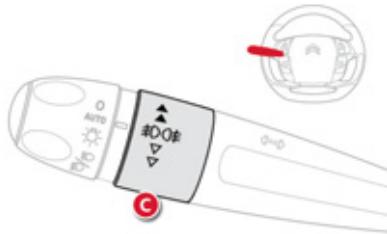

## Model with front and rear foglamps


### Foglamps

The foglamps operate with the dipped and main beam headlamps.

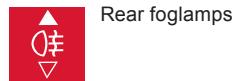

- ☞ To switch on the foglamps, turn the ring **C** forwards.
- ☞ To switch off the foglamps, turn the ring **C** rearwards.

**i** When switching off dipped beam manually, the rear foglamps also go off.

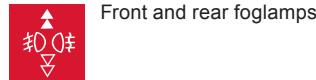

Rotate and release the ring **C**:

- ☞ forwards a first time to switch on the front foglamps,
- ☞ forwards a second time to switch on the rear foglamps,
- ☞ rearwards a first time to switch off the rear foglamps,
- ☞ rearwards a second time to switch off the front fog lamps.

When the headlamps switch off with automatic illumination of headlamps or when the dipped beam headlamps are switched off manually, the foglamps and sidelamps remain on.

- ☞ Turn the ring rearwards to switch off the foglamps, the sidelamps will then switch off.

! Operation of the rear foglamps is inhibited with the tailgate open. Opening the boot when these lamps are on causes them and their indicator lamp in the instrument panel to go off. They do not come back on automatically when the boot is closed: they must be switched on again using the control stalk.

! In good or rainy weather, by both day and night, the front foglamps and the rear foglamps are prohibited. In these situations, the power of their beams may dazzle other drivers. They should only be used in fog or falling snow. In these weather conditions, you should switch on the foglamps and dipped beam headlamps manually, as the sunshine sensor may detect sufficient light. Do not forget to switch off the front and rear foglamps when they are no longer necessary.

### **i Switching off the lighting when switching off the ignition**


When the ignition is switched off, all of the lamps switch off immediately, except for the dipped beam headlamps if automatic guide-me-home lighting is activated.

### **i Switching on the lighting when switching on the ignition**

To reactivate the lighting control stalk, turn the ring **A** to position "**0**" - lighting off, then to the position of your choice.

If the lighting is switched on manually after switching off the ignition, there is an audible signal when a front door is opened to warn the driver that they have forgotten to switch off the vehicle's lighting, with the ignition off. They switch off automatically after a period which depends on the state of charge of the battery (entry to energy economy mode).

## Parking lamps

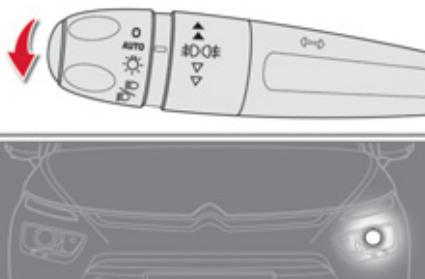


Side markers for the vehicle by illumination of the sidelamps on the traffic side only.

- Within one minute of switching off the ignition, operate the lighting control stalk up or down depending on the traffic side (for example: when parking on the left; lighting control stalk upwards; the right hand sidelamps are on).

This is confirmed by an audible signal and illumination of the corresponding direction indicator warning lamp in the instrument panel.

To switch off the parking lamps, return the lighting control stalk to the central position.

## Manual guide-me-home lighting

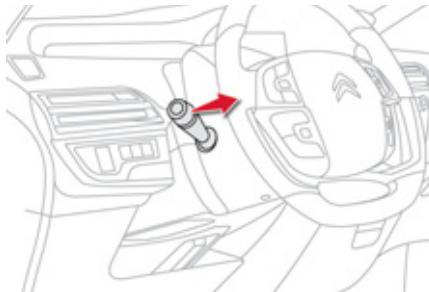

The temporary illumination of the dipped beam headlamps after the vehicle's ignition has been switched off makes the driver's exit easier when the light is poor.


### Switching on

- With the ignition off, "flash" the headlamps using the lighting stalk.
- A further "headlamp flash" switches the function off.

### Switching off

The manual guide-me-home lighting switches off automatically after a set time.

## Automatic illumination of headlamps

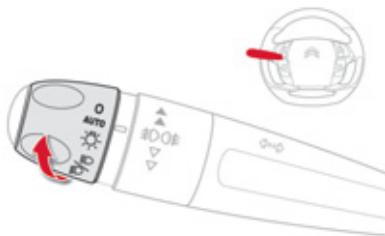

When a low level of ambient light is detected by a sunshine sensor, the number plate lamps, sidelamps and dipped beam headlamps are switched on automatically, without any action on the part of the driver. They can also come on if rain is detected, at the same time as automatic operation of the windscreens wipers. As soon as the brightness returns to a sufficient level or after the windscreens wipers are switched off, the lamps are switched off automatically.

### Activation

Turn the ring to the "AUTO" position. The activation of the function is accompanied by the display of a message.

### Deactivation

Turn the ring to another position. Deactivation of the function is accompanied by the display of a message.

### Operating fault

**SERVICE** In the event of a malfunction of the sunshine sensor, the lighting comes on, this warning lamp is displayed in the instrument panel accompanied by an audible signal and/or a message.

Contact a CITROËN dealer or a qualified workshop.



In fog or snow, the sunshine sensor may detect sufficient light. In this case, the lighting will not come on automatically. Do not cover the sunshine sensor, coupled with the rain sensor and located in the centre of the windscreens behind the rear view mirror; the associated functions would no longer be controlled.

## Automatic "guide-me-home" lighting

When the automatic illumination of headlamps function is activated, under low ambient light the dipped beams headlamps come on automatically when the ignition is switched off.

### Programming





Activation or deactivation, as well as the duration of the guide-me-home lighting, is set in the "Driving aids" menu, then "Vehicle settings".

## Automatic headlamp dipping

System which automatically changes between dipped and main beam according to the ambient light level and the driving conditions, using a camera located in the rear view mirror.

! This automatic headlamp dipping system is a driving aid. The driver remains responsible for the vehicle's lighting, its correct use for the prevailing conditions of light, visibility and traffic and observation of driving and vehicle regulations.

! The system will be operational as soon as you have exceeded 15 mph (25 km/h). If the speed drops below 9 mph (15 km/h), the system no longer operates.

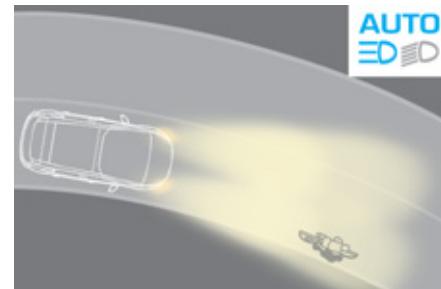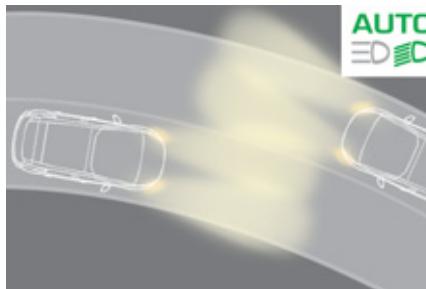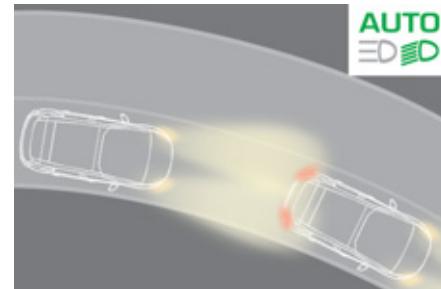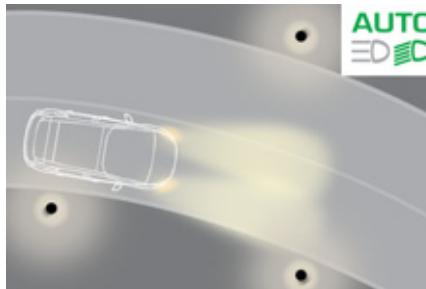

## Switching on



- Put the lighting control stalk ring in the "AUTO" position.



- In the "Driving assistance" menu, press the button, its indicator lamp comes on.



- Flash the headlamps (going beyond the point of resistance) to activate the function.

## Operation

Once the function is activated, the system operates as follows:

If the ambient light level is sufficient and/or if the traffic conditions do not allow illumination of the main beam headlamps:



- dipped beam is maintained, this indicator lamp comes on in the instrument panel.

If the ambient light level is very low and the traffic conditions permit:



- main beam comes on automatically: this indicator lamp comes on in the instrument panel.

## Pause

If the situation requires a change of headlamp beam, driver can take over at any time.



- Flashing the headlamps again pauses the function and the system changes to "automatic illumination of headlamps" mode:

- if the AUTO indicator lamp was on in green, the system changes to main beam,
- if the AUTO indicator lamp was on in blue, the system changes to dipped beam.

To reactivate the system, flash the headlamps again.



Depending on the situation, one of these two indicator lamps comes on.

## Switching off



- In the "Driving assistance" menu, press the button, its indicator lamp goes off and the the system changes to "automatic illumination of headlamps" mode.




The system may suffer interference or not work correctly:

- under conditions of poor visibility (for example, snowfall, heavy rain or thick fog, ...),
- if the windscreen is dirty, misted or obscured (by a sticker, ...) in front of the camera,
- if the vehicle is facing highly reflective signs.

The system is not able to detect:

- road users that do not have their own lighting, such as pedestrians,
- road users whose lighting is obscured, such as vehicles running behind a safety barrier (on a motorway, for example),
- road users at the top or bottom of a steep slope, on twisty roads, on crossroads.

## Daytime running lamps (LEDs)

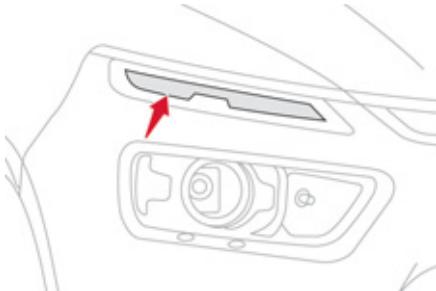

They come on automatically when the engine is started, when the lighting control stalk is in position "0" or "AUTO".

**i** In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

## Door mirror spotlamps



To make your approach to the vehicle easier, these illuminate:

- the zones facing the driver's and passenger's doors,
- the zones forward of the door mirrors and rearward of the front doors.

### Switching on

The spotlamps come on automatically:

- when you unlock the vehicle,
- when you remove the electronic key from the reader,
- when you open a door,
- when you use the remote control to locate the vehicle.

### Switching off

They go off automatically after 30 seconds.

## Exterior welcome lighting

The remote switching on of the lighting makes your approach to the vehicle easier in poor light. It is activated when the lighting control is in the "AUTO" position and the level of light detected by the sunshine sensor is low.

### Switching on



Press the open padlock on the remote control or one of the front door handles with Keyless Entry and Starting.

The dipped beam headlamps and the sidelamps come on; your vehicle is also unlocked.


### Switching off

The exterior welcome lighting switches off automatically after a set time, when the ignition is switched on or on locking the vehicle.

### Programming

The activation, deactivation and choice of welcome lighting duration are done in the "Driving assistance" menu then "Vehicle settings".

# Manual adjustment of headlamps

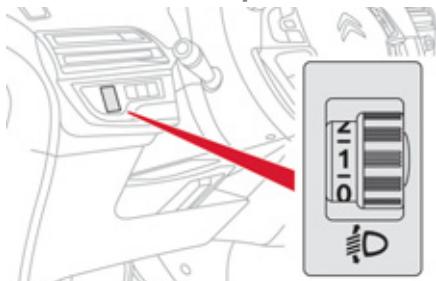


To avoid causing a nuisance to other road users, the headlamps should be adjusted according to the load in the vehicle.

0. 1 or 2 people in the front seats.
  - Intermediate setting.
1. 5 people + maximum authorised load.
  - Intermediate setting.
2. Driver + maximum authorised load.
  - Intermediate setting.
3. 5 people + maximum load in the boot.




The initial setting is position "0".


# Cornering lighting

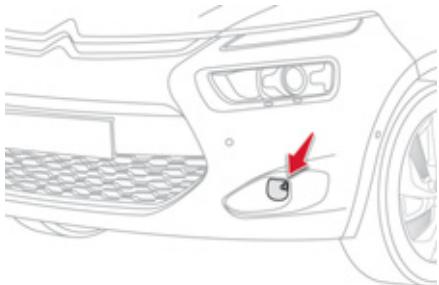

With dipped or main beams, this system makes use of the beam from a front foglamp to illuminate the inside of a bend, when the vehicle speed is below 25 mph (approximately 40 km/h) (urban driving, winding road, intersections, parking manoeuvres...).

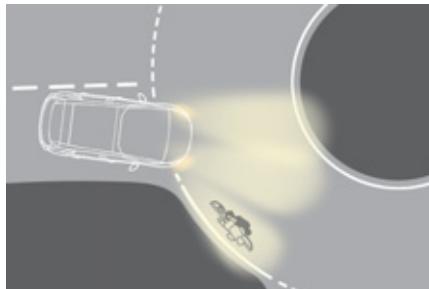

with cornering lighting

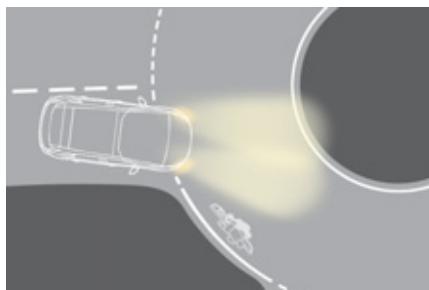

without cornering lighting

## Switching on

This system starts:

- when the corresponding direction indicator is switched on,
- or
- from a certain angle of rotation of the steering wheel.

## Switching off

The system does not operate:


- below a certain angle of rotation of the steering wheel,
- above 25 mph (40 km/h),
- when reverse gear is engaged.

The cornering lighting can be activated or deactivated in the **"Driving assistance menu"** menu, then **"Vehicle settings"**.


# Directional lighting

When the dipped or main beam headlamps are on, this system allows the light beams to better follow the road.

The use of this system, coupled with the xenon headlamps and the cornering lighting, considerably improves the quality of your lighting round bends.

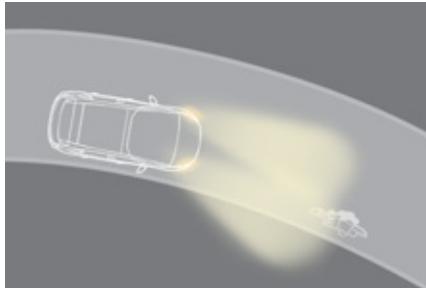

with directional lighting

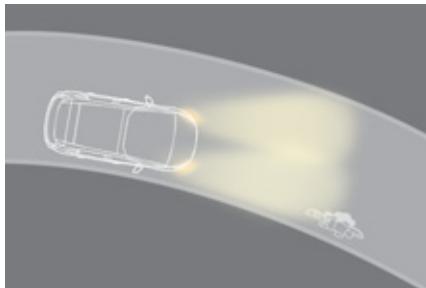

without directional lighting



- This system is inactive:
  - when stationary or at low speeds,
  - when reverse is engaged.

## Operating fault

If a fault occurs, this warning lamp flashes in the instrument panel, accompanied by a message in the screen.

Contact a CITROËN dealer or a qualified workshop.

The directional lighting can be activated or deactivated via the "Driving aids" menu, then "Vehicle settings".

# Wiper controls

## Programming

Your vehicle may also include some functions that can be configured:


- automatic rain sensitive windscreen wipers,
- rear wiping on engaging reverse gear.

**i** In wintry conditions, remove snow, ice or frost present on the windscreen, around the wiper arms and blades and the windscreen seal, before operating the wipers.


**!** Do not operate the wipers on a dry windscreen. Under extremely hot or cold conditions, ensure that the wiper blades are not stuck to the windscreen, before operating the wipers.

## Manual controls

The wipers are controlled directly by the driver.

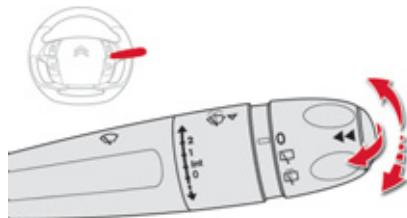

### Model without AUTO wiping

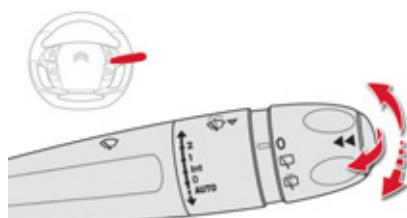

### Model with AUTO wiping


## Windscreen wipers

**i** The front wiper system includes a safety device which can temporarily inhibit operation if it detects obstacles such as ice or snow.

Wiping speed control stalk: raise or lower the stalk to the desired position.

<b>2</b>	Fast wipe (heavy rain).
<b>1</b>	Normal wipe (moderate rain).
<b>Int</b>	Intermittent wipe (proportional to the speed of the vehicle).
<b>0</b>	Park.
<b>↓</b>	Single wipe (press downwards or pull the stalk briefly towards you, then release).
<b>or</b>	
<b>AUTO ↓</b>	Automatic wiping (press down, then release). Single wipe (pull the stalk briefly towards you).

## Rear wiper

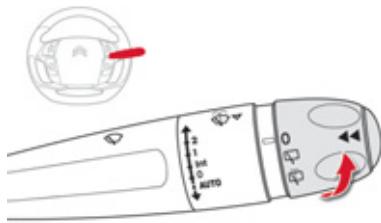

Rear wiper selection ring:



park,



intermittent wipe,



wash-wipe (set duration).




If a significant accumulation of snow or ice is present, deactivate the automatic rear wiper via the **"Driving assistance"** menu, then **"Vehicle settings"**.

## Reverse gear

When reverse gear is engaged, the rear wiper will come into operation if the windscreen wipers are operating.

This function can be deactivated in the **"Driving assistance"** menu, then **"Vehicle settings"**.


## Windscreen wash and headlamp wash

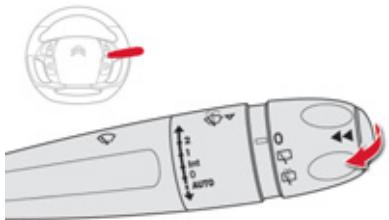

### Screenwash and washer jets

- ☞ Pull the windscreen wiper stalk towards you. The windscreen wash then the windscreen wipers operate for a fixed period.


A few moments after releasing the wiper stalk, there is a last wipe to clear any runs from the screen.

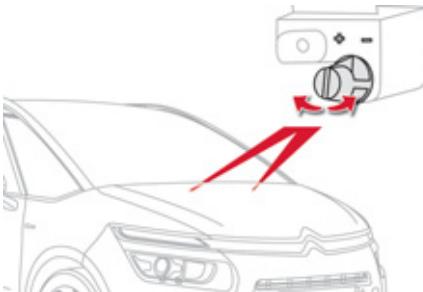

### Adjusting the jets

The front washers include an adjustment for the height of delivery from the jets.

If you want to modify the factory setting, turn the screw on each jet anti-clockwise, towards the "+" to raise the jet or clockwise, towards the "-" to lower it.

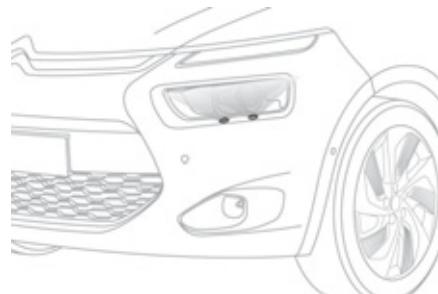


### Headlamp wash

The headlamps operate when the vehicle is moving and when the dipped beam headlamps are on. However, to reduce the consumption of screenwash fluid, the headlamp wash only operates with every 7th use of the screenwash or once every 25 miles (40 km), during a given journey.

## Automatic rain sensitive windscreen wipers

The windscreen wipers operate automatically, without any action on the part of the driver, if rain is detected (sensor behind the rear view mirror), adapting their speed to the intensity of the rainfall.

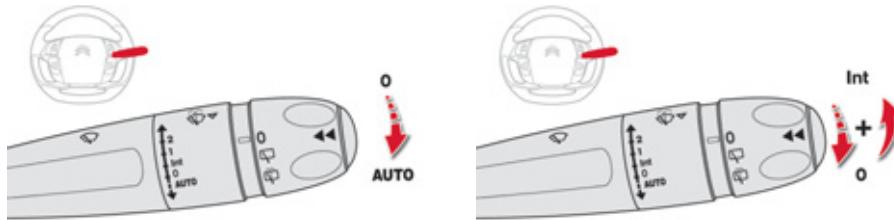

### Switching on

**AUTO** Briefly push the control stalk downwards.

 A wiping cycle confirms that the instruction has been accepted.

This warning lamp comes on in the instrument panel and a message is displayed.

### Switching off

 Briefly push the control stalk downwards again, or place the control stalk in another position (Int, 1 or 2).

This warning lamp goes off in the instrument panel and a message is displayed.



The automatic rain sensitive windscreen wipers must be reactivated by pushing the control stalk downwards, if the ignition has been off for more than one minute.

## Operating fault


If a fault occurs with the automatic rain sensitive wipers, the wipers will operate in intermittent mode.

Have it checked by CITROËN dealer or a qualified workshop.

**!** Do not cover the rain sensor, linked with the sunshine sensor and located in the centre of the windscreen behind the rear view mirror.

Switch off the automatic rain sensitive wipers when using an automatic car wash. In winter, it is advisable to wait until the windscreen is completely clear of ice before activating the automatic rain sensitive wipers.

## Special position of the windscreens wipers

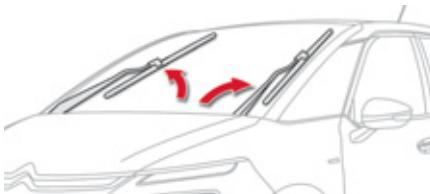

This position permits release of the windscreen wiper blades.

It is used for cleaning or replacement of the blades. It can also be useful, in winter, to detach the blades from the windscreen.

On switching off the ignition:



- ☞ any action on the wiper stalk in the minute after switching off the ignition places the blades vertically on the screen.
- When the system is no longer powered - at least one minute after switching off the ignition - it is possible to move the arms manually.
- ☞ To park the blades again, switch on the ignition and operate the wiper stalk.

**i** To maintain the effectiveness of the "flat-blade" type of wiper blades, it is advisable to:

- handle them with care,
- clean them regularly using soapy water,
- avoid using them to retain cardboard on the windscreen,
- replace them at the first signs of wear.

**!** Replacement of the arms must only be done by a CITROËN dealer or a qualified workshop.

# Courtesy lamps

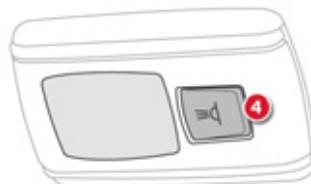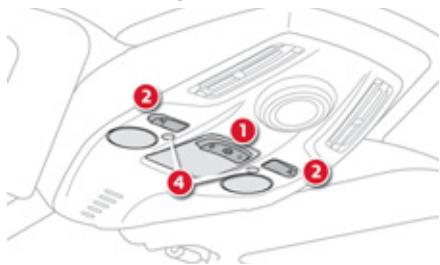

1. Front courtesy lamp
2. Front map reading lamps
3. Rear courtesy lamp
4. Rear map reading lamps

## Front - rear courtesy lamps



In this position, the courtesy lamp comes on gradually:

- when the vehicle is unlocked,
- when the electronic key is removed from the reader,
- when opening a door,
- when the remote control locking button is activated, in order to locate your vehicle.

It switches off gradually:


- when the vehicle is locked,
- when the ignition is switched on,
- 30 seconds after the last door is closed.



Permanently off.



Permanent lighting.

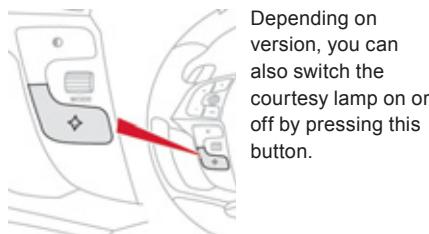

## Front - rear map reading lamps

☞ With the ignition on, press the corresponding switch.



Take care to avoid leaving anything in contact with the courtesy lamps.

5




With the "permanent lighting" mode, the lighting time varies according to the circumstances:

- with the ignition off, approximately ten minutes,
- in energy economy mode, approximately thirty seconds,
- with the engine running, unlimited.

# Panoramic sunroof

It is fitted with an electrically controlled blind.

## Opening the roof blind

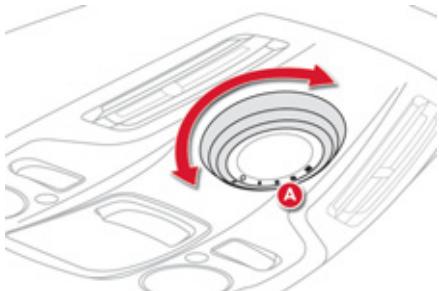


- ☞ Rotate the control **A** to slide the roof blind to the desired position (positions **1** to **4**).

## Closing the roof blind

- ☞ Rotate the control **A** to position **0** to close the roof blind.

## Anti-pinch

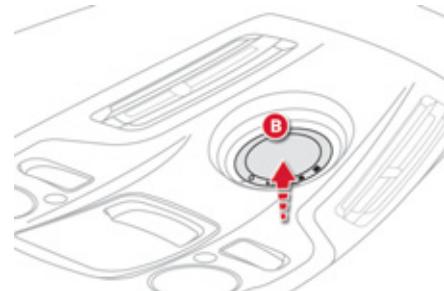

The blind has an anti-pinch function. At the end of its travel, when the blind encounters an obstacle on closing, it stops and moves back slightly.

Following a fault or after a battery disconnection during the movement of the blind or after it has stopped, you must re-initialise the anti-pinch function:

- ☞ place the blind in the closed position,
- ☞ press control knob **B** for approximately two seconds.

## Interior mood lighting

The dimmed passenger compartment lighting improves visibility in the vehicle when the light is poor.

### Switching on



At night, the lighting of the dashboard, centre console, courtesy lamp... come on automatically when the sidelamps are switched on.

The interior mood lighting switches off automatically when the sidelamps are switched off.

The interior mood lighting can be activated or deactivated via the "**Driving assistance**" menu, then "**Vehicle settings**".

## Footwell lighting




5

The soft lighting provided by the footwell lamps improves visibility in the vehicle when the light is poor.

### Activation


Its operation is identical to that of the courtesy lamps. The lamps come on when one of the doors is opened.

## Direction indicators

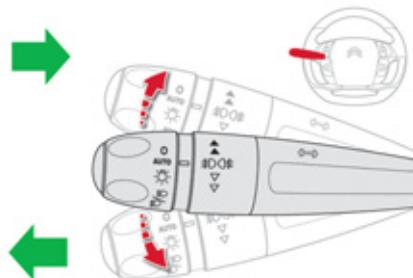

- Left: lower the lighting stalk passing the point of resistance.
- Right: raise the lighting stalk passing the point of resistance.


## Hazard warning lamps

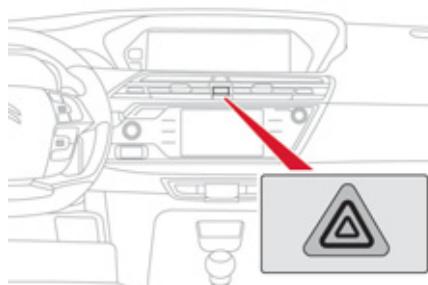

A visual warning by means of the direction indicators to alert other road users to a vehicle breakdown, towing or accident.

- Press this button, the direction indicators flash.

They can operate with the ignition off.

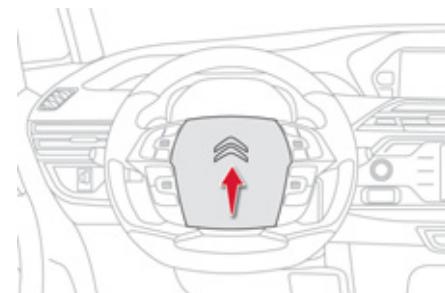

Audible warning system to alert other road users to an imminent danger.

- Press the central part of the steering wheel.

### Three flashes of the direction indicators

- Press briefly upwards or downwards, without going beyond the point of resistance; the direction indicators will flash 3 times.

### Automatic operation of hazard warning lamps

When braking in an emergency, depending on the deceleration, the hazard warning lamps come on automatically.

They switch off automatically the first time you accelerate.

- You can also switch them off by pressing the button.

**i** Use the horn moderately and only in the following circumstances:

- immediate danger,
- overtaking a cyclist or pedestrian
- approaching a location lacking visibility.

## Emergency or assistance call




This system allows you to make an emergency or assistance call to the emergency services or to the dedicated CITROËN service.

For more information on the use of this function, refer to the "Audio and telematics" section.

## Warning triangle

This safety device should be used in addition to the hazard warning lamps. Its presence in the vehicle is mandatory.

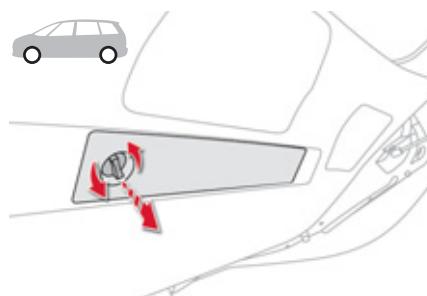

A location for stowing the warning triangle is provided in the tailgate interior trim.



Before leaving your vehicle to set up and install the triangle, switch on the hazard warning lamps and put on your high visibility vest.



Refer to the manufacturer's instructions on unfolding and installing supplied with the triangle.

6

### Placing the triangle in the road

- Place the triangle behind the vehicle, as required by the legislation in force in your country.

# Tyre under-inflation detection

System which automatically checks the pressure of the tyres while driving.

The system continuously monitors the pressures on the four tyres, once the vehicle is moving.

It compares the information given by the four wheel speed sensors with reference values, which must be reinitialised every time the tyre pressures are adjusted or a wheel changed.

The system triggers an alert as soon as it detects a drop in the inflation pressure of one or more tyres.



The under-inflation detection system does not replace the vigilance or the responsibility of the driver. This system does not avoid the need to check the tyre pressures (including the spare wheel) every month as well as before a long journey. Driving with under-inflated tyres impairs road holding, extends braking distances and causes premature tyre wear, particularly under arduous condition (high loading, high speed, long journey).



The inflation pressures defined for your vehicle can be found on the tyre pressure label (see the "Identification markings" section). Tyre pressures should be checked when the tyres are "cold" (vehicle stopped for 1 hour or after a journey of less than 6 miles (10 km) at moderate speeds). Otherwise, add 0.3 bar to the pressures shown on the label.



Driving with under-inflated tyres increases fuel consumption.

## Under-inflation alert



This is given by fixed illumination of this warning lamp, accompanied by an audible signal and, depending on equipment, the display of a message.

- ☞ Reduce speed immediately, avoid excessive steering movements and sudden braking.
- ☞ Stop the vehicle as soon as it is safe to do so.


! The loss of pressure detected does not always cause visible bulging of the tyre. Do not satisfy yourself with just a visual check.

- ☞ In the event of a puncture, use the temporary puncture repair kit or the spare wheel (depending on equipment),  
or
- ☞ if you have a compressor, such as the one in the temporary puncture repair kit, check the pressures of the four tyres when cold,  
or
- ☞ if it is not possible to make this check immediately, drive carefully at reduced speed.

! The alert is maintained until the system is reinitialised.

## Reinitialisation

A label reminds you of the need to reinitialise the system every time one or more tyre pressure is adjusted, and after changing one or more wheels.

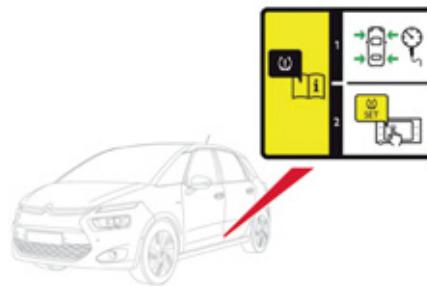

6



Before reinitialising the system, ensure that the pressures of the four tyres are correct for the use of the vehicle and in line with the recommendations on the tyre pressure label.  
The under-inflation detection system does not give a warning if a pressure is incorrect at the time of reinitialisation.



## Snow chains

The system does not have to be reinitialised after fitting or removing snow chains.

Reinitialisation of the system is done with the ignition on and the vehicle stationary. From the secondary page of the "Driving assistance" menu:



☞ Press "Under-inflation initialisation".

☞ Confirm the instruction by pressing "Yes".

The new pressure settings registered are considered to be reference values by the system.



The under-inflation alert can only be considered reliable if reinitialisation of the system is done with the the four tyre pressures correctly set.

## Operating fault



### SERVICE

The flashing and then fixed illumination of the under-inflation warning lamp accompanied by illumination of the "service" warning lamp indicates a fault with the system.

In this case, under-inflation monitoring of the tyres is no longer assured.  
Have the system checked by a CITROËN dealer or a qualified workshop.



Before doing anything to the system, the pressures of the four tyres must be checked and the system reinitialised.

# Electronic stability programme (ESC)

Electronic Stability Programme (ESC: Electronic Stability Control) incorporating the following systems:

- the anti-lock braking system (ABS) and the electronic brake force distribution (EBFD),
- the emergency braking assistance,
- the anti-slip regulation (ASR) or traction control,
- the dynamic stability control (DSC).

## Definitions

### **Anti-lock braking system (ABS) and electronic brake force distribution (EBFD)**

This system improves the stability and manoeuvrability of your vehicle when braking and provides improved control in corners, in particular on poor or slippery road surfaces. The ABS prevents wheel lock in the event of emergency braking.

The electronic brake force distribution system manages the braking pressure wheel by wheel.

### **Emergency braking assistance**

In an emergency, this system enables you to reach the optimum braking pressure more quickly and therefore reduce the stopping distance.

It is triggered according to the speed at which the brake pedal is pressed. This is felt by a reduction in the resistance of the pedal and an increase in the effectiveness of the braking.

### **Anti-slip regulation (ASR)**

The ASR system (also known as Traction Control) optimises traction in order to avoid wheel slip by acting on the brakes of the driving wheels and on the engine. It also improves the directional stability of the vehicle on acceleration.

6

### **Dynamic stability control (DSC)**

If there is a difference between the path followed by the vehicle and that required by the driver, the DSC monitors each wheel and automatically acts on the brake of one or more wheels and on the engine to return the vehicle to the required path, within the limits of the laws of physics.

## Intelligent traction control system ("Snow motion")

Your vehicle has a system to help driving on snow: **intelligent traction control**.

This system detects situations of difficult surface adhesion that could make it difficult to move off or make progress on deep fresh snow or compacted snow.

In these situations, the **intelligent traction control** limits the amount of wheel slip to provide the best traction and trajectory control for your vehicle.

In extremely severe conditions (deep snow, mud, ...), when it proves impossible to move off, it may be useful to temporarily deactivate the ESP/ASR systems to allow the wheels to spin freely and so allow movement of the vehicle.

The use of snow tyres is strongly recommended on surfaces offering low levels of adhesion.

## Operation

### Anti-lock braking system (ABS) and electronic brake force distribution (EBFD)



When this warning lamp comes on, accompanied by an audible signal and a message, it indicates that there is a fault with the ABS, which could cause loss of control of the vehicle when braking.




When this warning lamp comes on, coupled with the **STOP** warning lamp, accompanied by an audible signal and a message, it indicates that there is a fault with the electronic brake force distribution (EBFD), which could cause loss of control of the vehicle when braking.

**You must stop as soon as it is safe to do so.**  
In both cases, contact a CITROËN dealer or a qualified workshop.

**i** When changing wheels (tyres and rims), make sure that these are approved for your vehicle.  
Normal operation of the ABS may make itself felt by slight vibrations of the brake pedal.

**i** **In emergency braking, press very firmly without releasing the pressure.**

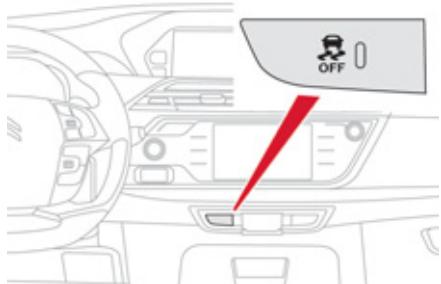

## Dynamic stability control (DSC)

### Activation

This system is activated automatically each time the vehicle is started.

It comes into operation in the event of a grip or trajectory problem.



This is indicated by flashing of this warning lamp in the instrument panel.

### Deactivation

In exceptional conditions (starting a vehicle which is bogged down, stuck in snow, on soft ground...), it may be advisable to deactivate the DSC system, so that the wheels can move freely and regain grip.

But it is recommended that the system be reactivated as soon as possible.



☞ Press the button.



This warning lamp and the indicator lamp in the button come on: the DSC system no longer acts on the operation of the engine.

### Reactivation

The system is reactivated automatically each time the ignition is switched back on or from 30 mph (50 km/h).



☞ Press the button again to reactivate it manually.

### Operating fault



If this warning lamp comes on, accompanied by an audible signal and a message, this indicates a fault with the system.

Contact a CITROËN dealer or a qualified workshop to have the system checked.



The DSC system offers exceptional safety in normal driving, but this should not encourage the driver to take extra risks or drive at high speed. The correct operation of the system depends on observation of the manufacturer's recommendations regarding the wheels (tyres and rims), the braking components, the electronic components and the assembly and repair procedures used by CITROËN dealers.

After an impact, have the system checked by a CITROËN dealer or a qualified workshop.

# Seat belts

## Front seat belts




The front seat belts are fitted with a pretensioning and force limiting system. This system improves safety in the front seats in the event of a front or side impact. Depending on the severity of the impact, the pretensioning system instantly tightens the seat belts against the body of the occupants. The pretensioning seat belts are active when the ignition is on. The force limiter reduces the pressure of the seat belt on the chest of the occupant, so improving their protection.

### Seat belt reels with reversible pretension

This system provides automatic adjustment of the tension of the driver's and passenger's seat belts after fastening, once the vehicle's speed is above 6 mph (10 km/h).

In addition, as soon as the system detects a potentially dangerous driving situation, this system reacts by drawing in slack in the belt, (for example, under heavy or sharp braking or sudden avoiding manoeuvres). By automatically increasing the tension of the seat belts, the system holds the driver and passenger against their seat backrests.

Once the driving situation returns to normal, the belt reel is released: the belt tension returns to the initial level of comfort.

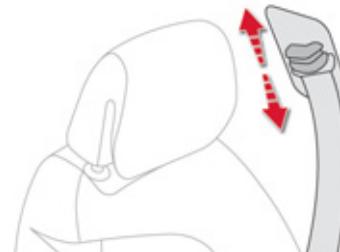


### Front seat belt anchorage height adjustment

- To adjust the height of the anchorage point, squeeze the control and slide it up or down to the desired notch.


**i** Deactivation of the passenger's airbag causes deactivation of the reversible seat belt reel on the passenger's side.

## 2<sup>nd</sup> row seat belts

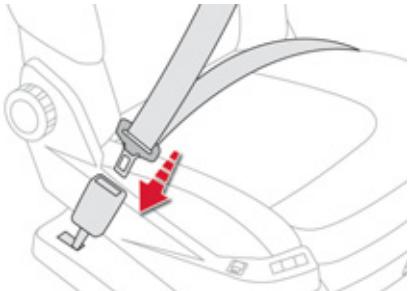


### Fastening

- ☞ Pull the strap, then insert the tongue in the buckle.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.

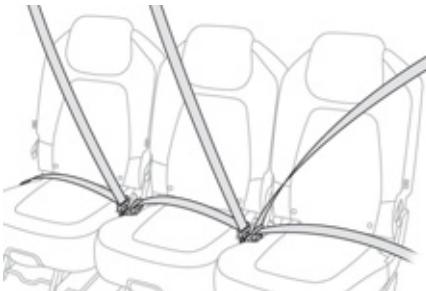

The rear seats are each fitted with a seat belt, three-point anchorages with inertia reel and force limiter (except for the centre rear seat).

## 2<sup>nd</sup> row outer seat belts (stowing)

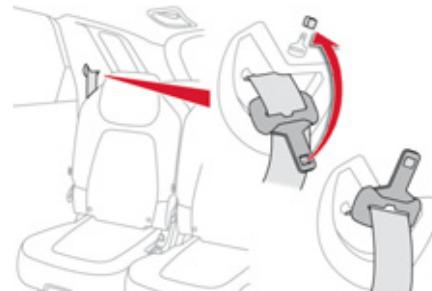


Guide the belt as it reels in and place the tongue on the magnet at the side anchorage point.

### Unfastening

- ☞ Press the red button on the buckle.
- ☞ Guide the seat belt as it reels in.

## 2<sup>nd</sup> row centre seat belt

The seat belt for the centre rear seat is built into the roof.

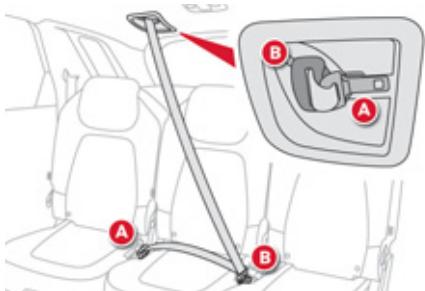

### Fastening


- ☞ Pull the strap and insert the tongue **A** into the right hand buckle.
- ☞ Insert tongue **B** into the left hand buckle.
- ☞ Check that each buckle is correctly fastened by pulling on the belt webbing.

### Unfastening

- ☞ Press the red button in buckle **B**, then buckle **A**.
- ☞ Guide the seat belt as it reels in and place the tongue **B** and then **A** on the magnet in the roof anchorage point.

**!** Before any operation of the rear seats, to avoid damage to the seat belts check that there is no slack in the outer belts and secure their tongues on the anchorage points. The centre seat belt must be fully reeled in.

## 3rd row seat belts

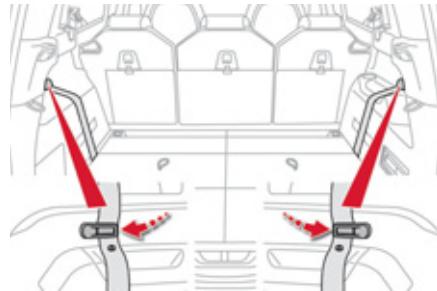

### Fastening

- ☞ Detach the seat belt strap from its retaining loop located on the side trim of the boot.
- ☞ Pull on the strap and insert the tongue into the buckle.
- ☞ Check that the buckle is correctly fastened by pulling on the belt strap.

### Unfastening and stowing

- ☞ Press the red button in buckle.
- ☞ Guide the seat belt strap as it reels in.
- ☞ Secure the strap, flat in the retaining loop.

**!** Ensure that the the seat belts are secured when not in use.

## Seat belt not fastened and unfastened alerts



The instrument panel includes a seat belt not fastened warning lamp **A** as well as an indicator of the location of the non-fastened belts **B**. When the system detects a non-fastened or unfastened seat belt, the warning lamp **A** comes on as well as the corresponding points in the indicator **B**.

### Front seat belts not fastened alert



On switching on the ignition, the warning lamp **A** comes on, as well as the corresponding points in the indicator **B**, if the driver and/or front passenger have not fastened their seat belt.

At speeds above 12 mph (20 km/h), these alerts flash, accompanied by an audible signal for two minutes. After this period, these alerts remain on fixed, while the front seat belts are not fastened.

### Rear seat belts not fastened alert



On switching on the ignition, engine running or the vehicle at a speed of up to 12 mph (20 km/h), the warning lamp **A** as well as the corresponding points in the indicator **B** come on for about thirty seconds, if one or more rear passengers have not fastened their seat belt.

### Seat belts unfastened alert



On switching on the ignition, the warning lamp **A** remains on, as well as the corresponding points in the indicator **B**, if the driver and/or one or more passengers have not fastened their seat belt.

At speeds above 12 mph (20 km/h), these alerts flash, accompanied by a message and an audible signal for two minutes. After this period, these alerts remain on fixed, while the seat belts are not fastened.

**i** The driver must ensure that passengers use the seat belts correctly and that they are all restrained securely before setting off.

Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

Do not interchange the seat belt buckles as they will not fulfil their role fully.

The seat belts are fitted with an inertia reel permitting automatic adjustment of the length of the strap to your size. The seat belt is stowed automatically when not in use.

Before and after use, ensure that the seat belt is reeled in correctly.

The lower part of the strap must be positioned as low as possible on the pelvis. The upper part must be positioned in the hollow of the shoulder.

The inertia reels are fitted with an automatic locking device which comes into operation in the event of a collision, emergency braking or if the vehicle rolls over. You can release the device by pulling firmly on the strap and releasing it so that it reels in slightly.

In order to be effective, a seat belt must:

- be tightened as close to the body as possible,
- be pulled in front of you with a smooth movement, checking that it does not twist,
- be used to restrain only one person,
- not bear any trace of cuts or fraying,
- not be converted or modified to avoid affecting its performance.

In accordance with current safety regulations, for all repairs on your vehicle, go to a qualified workshop with the skills and equipment needed, which a CITROËN dealer is able to provide.

Have your seat belts checked regularly by a CITROËN dealer or a qualified workshop, particularly if the straps show signs of damage.

Clean the seat belt straps with soapy water or a textile cleaning product, sold by CITROËN dealers.

After folding or moving a seat or rear bench seat, ensure that the seat belt is positioned and reeled in correctly.

## Recommendations for children

Use a suitable child seat if the passenger is less than 12 years old or shorter than one and a half metres.

Never use the same seat belt to secure more than one person.

Never allow a child to travel on your lap.

## In the event of an impact

Depending on the nature and seriousness of the impact, the pretensioning device may be deployed before and independently of the airbags. Deployment of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

In all cases, the airbag warning lamp comes on.

Following an impact, have the seat belts system checked, and if necessary replaced, by a CITROËN dealer or a qualified workshop.


# Airbags

System designed to maximise the safety of the occupants (with the exception of the rear centre passenger) in the event of violent collisions.

The airbags supplement the action of the force-limiting seat belts (with the exception of the centre rear passenger).

If a collision occurs, the electronic detectors record and analyse the front and side impacts sustained in the impact detection zones:

- in the case of a serious impact, the airbags are deployed instantly and contribute towards better protection of the occupants of the vehicle (with the exception of the rear centre passenger); immediately after the impact, the airbags deflate rapidly so that they do not hinder visibility or the exit of the occupants,
- in the case of a minor or rear impact or in certain roll-over conditions, the airbags will not be deployed; the seat belt alone contributes towards ensuring your protection in these situations.

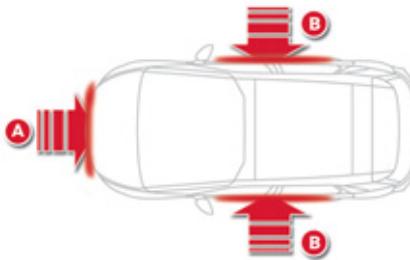

## Impact detection zones


- A. Front impact zone.
- B. Side impact zone.

! **The airbags do not operate when the ignition is switched off.**

This equipment will only deploy once. If a second impact occurs (during the same or a subsequent accident), the airbag will not be deployed again.

**i** Deployment of the airbag(s) is accompanied by a slight emission of smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system. This smoke is not harmful, but sensitive individuals may experience slight irritation. The noise of the detonation may result in a slight loss of hearing for a short time.

## Front airbags

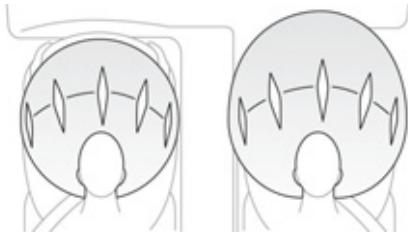

System which protects the driver and front passenger in the event of a serious front impact in order to limit the risk of injury to the head and thorax.

The driver's airbag is fitted in the centre of the steering wheel; the front passenger's airbag is fitted in the dashboard above the glove box.

### Deployment

The airbags are deployed, except the passenger's front airbag if it is deactivated, in the event of a serious front impact to all or part of the front impact zone **A**, in the longitudinal centreline of the vehicle on a horizontal plane and directed from the front to the rear of the vehicle.

The front airbag inflates between the thorax and head of the front occupant of the vehicle and the steering wheel, driver's side, and the dashboard, passenger's side to cushion their forward movement.



### Deactivation

Only the passenger's front airbag can be deactivated.

- ☞ **With the ignition off**, insert the key in the passenger airbag deactivation switch.
- ☞ Turn it to the "**OFF**" position.
- ☞ Remove the key keeping the switch in the new position.



When the ignition is on, this warning lamp comes in the instrument panel. It stays on while the airbag is deactivated.

! To assure the safety of your child, the passenger's front airbag must be deactivated when you install a "rear facing" child seat on the front passenger seat. Otherwise, the child would risk being seriously injured or killed if the airbag were deployed.

### Reactivation

When you remove the child seat, **with the ignition off**, turn the switch to the "**ON**" position to reactivate the airbag and so assure the safety of your front passenger in the event of an impact.



When the ignition is switched on, this warning lamp comes on in the instrument panel for approximately one minute to signal that the front airbag is activated.

## Operating fault



If this warning lamp comes on in the instrument panel, accompanied by an audible warning and a message, contact a CITROËN dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



If this warning lamp flashes, contact a CITROËN dealer or a qualified workshop. The passenger's front airbag may no longer be deployed in the event of a serious impact.



In the event of a fault, identified by at least one of the two airbag warning lamps, do not install a child seat or seat an adult on the front passenger seat. Have it checked by a CITROËN dealer or qualified workshop.

## Lateral airbags




System which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest, between the hip and the shoulder.

Each lateral airbag is fitted in the seat backrest frame, door side.

### Deployment

The lateral airbags are deployed unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The lateral airbag inflates between the hip and shoulder of the front occupant of the vehicle and the corresponding door trim panel.

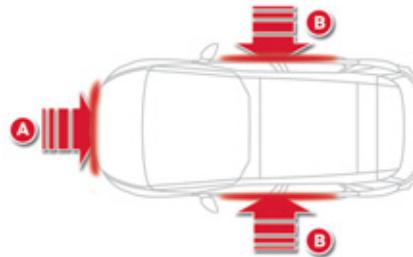

### Impact detection zones

- A. Front impact zone.
- B. Side impact zone.

## Curtain airbags

System which protects the driver and passengers (with the exception of the rear centre passenger) in the event of a serious side impact in order to limit the risk of injury to the side of the head.

Each curtain airbag is built into the pillars and the upper passenger compartment area.

### Deployment

The curtain airbag is deployed at the same time as the corresponding lateral airbag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The curtain airbag inflates between the front or rear occupant of the vehicle and the windows.

### Operating fault



If this warning lamp comes on in the instrument panel, accompanied by an audible signal and a message, contact a CITROËN dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be deployed.

In the event of a rear or front collision, the curtain airbag is not deployed.

## ! For the airbags to be fully effective, observe the following safety rules:

Sit in a normal upright position.

Wear a correctly adjusted seat belt.

Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system must be carried out by a CITROËN dealer or a qualified workshop.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is deployed cannot be ruled out. The bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

### Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Passengers must not place their feet on the dashboard.

If possible, do not smoke as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.

### Lateral airbags

Use only approved covers on the seats, compatible with the deployment the lateral airbags. For information on the range of seat covers suitable for your vehicle, you can contact a CITROËN dealer.

Refer to the "Accessories" section.

Do not fix or attach anything to the seat backs (clothing...). This could cause injury to the chest or arms if the lateral airbag is deployed.

Do not sit with the upper part of the body any nearer to the door than necessary.

### Curtain airbags

Do not fix or attach anything to the roof. This could cause injury to the head if the curtain airbag is deployed.

If fitted on your vehicle, do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.

# General points relating to child seats

Although one of CITROËN main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please observe the following recommendations:

- in accordance with European regulations, **all children under the age of 12 or less than one and a half metres tall must travel in approved child seats suited to their weight**, on seats fitted with a seat belt or ISOFIX mountings\*,
- **statistically, the safest seats in your vehicle for carrying children are the rear seats**,
- **a child weighing less than 9 kg must travel in the "rearwards-facing" position both in the front and in the rear**.





**CITROËN recommends** that children should travel in the **rear seats** of your vehicle.

- "rearward-facing" up to the age of 3,
- "forward-facing" over the age of 3.

\* The rules for carrying children are specific to each country. Refer to the legislation in force in your country.

# Child seat in the front

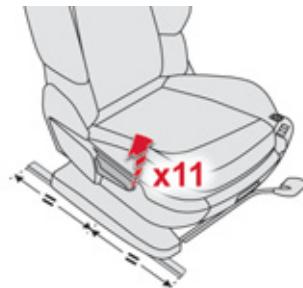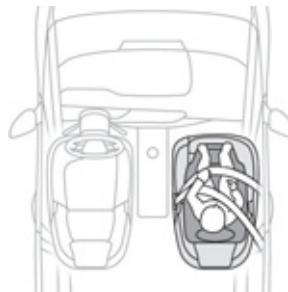

## "Rearward facing"

When a "rearward-facing" child seat is installed on the **front passenger seat**, adjust the vehicle seat to the midway longitudinal position, the lowest height position, backrest straightened. Then pull the height control lever 11 times.

The passenger's airbag must be deactivated. Otherwise, **the child risks being seriously injured or killed if the airbag is deployed.**

## "Forward facing"

When a "rearward-facing" child seat is installed on the **front passenger seat**, adjust the vehicle seat to the midway longitudinal position, the lowest height position, backrest straightened. Then pull the height control lever 11 times. Leave the passenger's airbag active.

**Passenger seat in the midway longitudinal position, the lowest height position, then the height control lever pulled 11 times.**

**i** Ensure that the seat belt is properly tightened. For child seats with a stay, ensure that this is in firm and steady contact with the floor. If necessary, adjust the passenger's seat.


## Deactivating the passenger's airbag

! Never install a rearward-facing child restraint system on a seat protected by an active front airbag. This could cause the death of the child or serious injury.

The warning label present on both sides of the passenger's sun visor repeats this advice. In line with current legislation, the following two pages contain this warning in all of the languages required.



Passenger airbag OFF

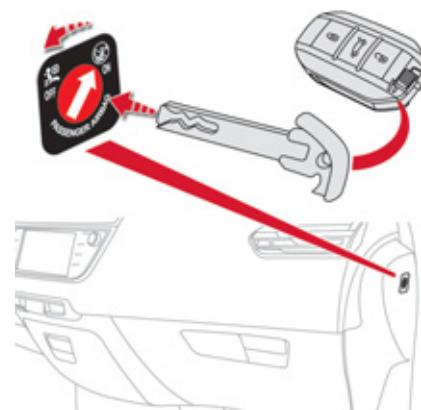

6

For information on deactivating the airbag, refer to the "Airbags" section.

AR	لاجلاس الطفل الرجبه باتجاه الوراء على مقعد سيارة مجهز بوسادة أمان هوائية أمامية مغلقة، فقد يؤدي هذا إلى التسبب بموت الطفل أو بإصابات خطيرة لديه.
BG	НИКОГА НЕ инсталирайте детско столче на седалка с АКТИВИРАНА предна ВЪЗДУШНА ВЪЗГЛАВНИЦА. Това можеда причини СМЪРТ или СЕРИОЗНО НАРАНЯВАНЕ на детето.
CS	NIKDÝ neumisťujte dětské zádržné zařízení orientované směrem dozadu na sedadlo chráněné AKTIVOVANÝM čelním AIRBAGEM. Hrozí nebezpečí SMRTI DÍTĚTE nebo VAŽNÉHO ZRANĚNÍ.
DA	Brug aldrig en bagudvendt barnestol på et sæde der er beskyttet af en aktiv airbag. Død eller alvorlig skade på barnet kan forekomme.
DE	Verwenden Sie NIEMALS einen Kindersitz oder Babyschale gegen die Fahrtrichtung bei AKTIVIERTEM Airbag, TOD oder ERNSTHAFTEN VERLETZUNGEN können die Folge sein.
EL	Μη χρησιμοποιείτε ΠΟΤΕ παιδικό κάθισμα με την πλάτη του προς το εμπρός μέρος του αυτοκινήτου, σε μια θέση που προστατεύεται από ΜΕΤΩΠΙΚΟ αερόσακο που είναι ΕΝΕΡΓΟΣ. Αυτό μπορεί να έχει σαν συνέπεια το ΘΑΝΑΤΟ ή το ΣΟΒΑΡΟ ΤΡΑΥΜΑΤΙΣΜΟ του ΠΑΙΔΙΟΥ
EN	NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur
ES	NO INSTALAR NUNCA EL SISTEMA DE RETENCIÓN PARA NIÑOS DE ESPALDAS AL SENTIDO DE LA CIRCULACIÓN SOBRE UN ASIENTO PROTEGIDO CON UN COJÍN INFLABLE FRONTAL ( AIRBAG ) ACTIVADO. ESTO PUEDE CAUSAR LA MUERTE DEL BEBÉ O HERIRLO GRAVEMENTE.
ET	Ärge kasutage kunagi lapse turvatooli seljaga sõidusuunas sõiduki istmel mis on kaitstud AKTIVEERITUD TURVAPADJAGA. See võib põhjustada lapsele RASKEID VIGASTUSI või SURMA.
FI	ÄLÄ KOSKAAN aseta lapsen turvaistuinta selkä ajosuuntaan istuimelle, jonka edessä suojana on käyttöön aktivoitu TURVATYYNY. Sen laukeaminen voi aiheuttaa LAPSEN KUOLEMAN tai VAKAVAN LOUKKAANTUMISEN.
FR	NE JAMAIS installer de système de retenue pour enfants faisant face vers l'arrière sur un siège protégé par un COUSSIN GONFLABLE frontal ACTIVÉ. Cela peut provoquer la MORT de l'ENFANT ou le BLESSER GRAVEMENT
HR	NIKADA ne postavljati dječju sjedalicu leđima u smjeru vožnje na sjedalo zaštićeno UKLJUČENIM prednjim ZRAČNIM JASTUKOM. To bi moglo uzrokovati SMRT ili TEŠKU OŽLJEDU djeteta.
HU	SOHA ne használjon menetírálynak háttal beszerelt gyermekekülést olyan ülésen, amely AKTIVÁLT ÁLLAPOTÚ (BEKAPCSOLT) FRONTLÉGZSÁKKAL van védve. Ez a gyermek halálát vagy súlyos sérülését okozhatja.
IT	NON installare MAI seggiolini per bambini posizionati in senso contrario a quello di marcia su un sedile protetto da un AIRBAG frontale ATTIVATO. Ciò potrebbe provocare la MORTE o FERITE GRAVI al bambino.
LT	NIEKADA nejrenkite vaiko priliaikymo priemonės su atgal atgręžtu vaiku ant sédynės, kuri saugoma VEIKIANČIOS priekinės ORO PAGALVĖS. Išsiskleidus oro pagalvei vaikas gali būti MIRTINAI arba SUNKIAI TRAUMUOTAS.
LV	NAV PIEŁAUJAMS uzstādīt uz aizmuguri vērstu bērnu sēdeklīti priekšējā pasažiera vietā, kurā ir AKTIVIZĒTS priekšējais DROŠĪBAS GAISA SPILVENS. Tas var izraisīt BĒRNA NĀVI vai radīt NOPIETNUS IEVAINOJUMUS.

MT	Qatt m'ghandek thalli tifel/tifla marbut f'siggu dahru lejn l-Airbag attiva, għaliex tista' tikkawza korriġent serju jew anke mewt lit-tifel/tifla
NL	Plaats NOOIT een kinderzitje met de rug in de rijrichting op een zitplaats waarvan de AIRBAG is INGESCHAKELD. Bij het afgaan van de airbag kan het KIND ERNSTIG OF DODELIJK GEWOND raken.
NO	Installer ALDRI et barnesete med ryggen mot kjøreretninga i et sete som er beskyttet med en frontal AKTIVERT KOLLISJONSPUTE, BARNET risikerer å bli DREPT eller HARDT SKADET.
PL	NIGDY nie instalować fotelika dziecięcego w pozycji "tyłem do kierunku jazdy" na siedzeniu wyposażonym w CZOŁOWĄ PODUSZKĘ POWIETRZNA w stanie AKTYWNYM. W przeciwnym razie dziecko narażone będzie na ŚMIERĆ lub BARDZO POWAŻNE OBRAŻENIA CIAŁA w momencie wyzwolenia poduszki powietrznej
PT	NUNCA instale um sistema de retenção para crianças de costas para a estrada, num banco protegido por um AIRBAG frontal ACTIVADO. Esta instalação poderá provocar FERIMENTOS GRAVES ou a MORTE da CRIANÇA.
RO	Nu instalati NICIODATA un sistem de reținere pentru copii, dispus cu spatele in directia de mers, pe un loc din vehicul protejat cu AIRBAG frontal ACTIVAT. Aceasta ar putea provoca MOARTEA COPILULUI sau RANIREA lui GRAVA.
RU	ВО ВСЕХ СЛУЧАЯХ ЗАПРЕЩАЕТСЯ использовать обращенное назад детское удерживающее устройство на сиденье, защищенном ФУНКЦИОНИРУЮЩЕЙ ПОДУШКОЙ БЕЗОПАСНОСТИ, установленной перед этим сиденьем. Это может привести к ГИБЕЛИ РЕБЕНКА или НАНЕСЕНИЮ ЕМУ СЕРЬЕЗНЫХ ТЕЛЕСНЫХ ПОВРЕЖДЕНИЙ
SK	NIKDÝ nepoužívajte na prednom sedadle chránenom AKTÍVNÝM AIRBAGOM detské zadržiavacie zariadenie umiestnené v proti smere jazdy. Môže to spôsobiť SMRT, alebo VÁŽNE ZRANENIE DIETĀTA.
SL	NIKOLI ne nameščajte otroškega sedeža s hrbotom v smeri vožnje, če je VARNOSTNA BLAZINA pred sprednjim sopotnikovim sedežem AKTIVIRANA. Takšna namestitev lahko povzroči SMRT OTROKA ali HUDE POŠKODBE.
SR	NIKADA ne koristite dečje sedište koje se okreće unazad na sedištu zaštićenim AKTIVNIM VAZDUŠNIM JASTUKOM ispred njega, jer mogu nastupiti SMRT ili OZBILJNA POVREDA DETETA.
SV	Använd ALDRIG en bakåtvänd barnstol i ett sätte skyddat av en AKTIV AIRBAG framför det. Det kan orsaka ALLVARLIGA eller DÖDLIGA skador på barnet.
TR	KESİNLİKLE HAVA YASTIĞI AKTİF olan ön koltuğa yüzü arkaya dönük bir çocuk koltuğu yerleştirmeyiniz. Bu ÇOCUĞUN ÖLMESİNE veya ÇOK AĞIR YARALANMASINA sebep olabilir.

# Child seat at the rear

## "Rearward facing"

When a "rearward facing" child seat is installed **on a rear passenger seat**, move the vehicle's front seat forwards and straighten the backrest so that the "rearward facing" child seat does not touch the vehicle's front seat.

## "Forward facing"

When a "forward facing" child seat is installed **on a rear passenger seat**, move the vehicle's front seat forwards and straighten the backrest so that the legs of the child in the "forward facing" child seat do not touch the vehicle's front seat.



## Seats in the 3<sup>rd</sup> row

When a child seat is installed **on a 3<sup>rd</sup> row passenger seat**, move the 2<sup>nd</sup> row seat forwards and straighten the backrest so that the child seat and the legs of the child do not touch the 2<sup>nd</sup> row seat.  
A child seat with a stay must never be installed on a **3<sup>rd</sup> row passenger seat**.

# Child seats recommended by CITROËN

CITROËN offers a complete range of recommended child seats which are secured using a **three point seat belt**:

Group 0+: from birth to 13 kg	Groups 1, 2 and 3: from 9 to 36 kg
 <b>L1</b> "RÖMER Baby-Safe Plus" Installed in the rearwards-facing position.	 <b>L2</b> "KIDDY Comfort Pro" The impact shield must be used for carrying young children (from 9 to 18 kg).
Groups 2 and 3: from 15 to 36 kg	
 <b>L4</b> "KLIPPAN Optima" From approximately 6 years (22 kg), the booster is used on its own.	
 <b>L5</b> "RÖMER KIDFIX" Can be fitted to the vehicle's ISOFIX mountings. The child is restrained by the seat belt.	



## Installation of child seats secured using the seat belt

In accordance with European regulations, this table indicates the options for installing child seats secured using the seat belt and universally approved (a) in relation to the weight of the child and the seat in the vehicle.

Seat		Weight of the child / indicative age			
		Groups 0 (b) and 0+ Birth to 13 kg	Group 1 From 9 to 18 kg	Group 2 From 15 to 25 kg	Group 3 From 22 to 36 kg
1 <sup>st</sup> row	Front passenger seat (c)				
	- fixed	U	U	U	U
2 <sup>nd</sup> row	Fixed outer rear seats (d)	U(R)	U(R)	U(R)	U(R)
	Outer rear seats with longitudinal adjustment (d) (e)	U	U	U	U
	Centre rear seat (d)	U	U	U	U

- (a) Universal child seat: child seat which can be installed in all vehicles using the seat belt.
- (b) Group 0: from birth to 10 kg. Infant car seats and "car cots" cannot be installed on the front passenger seat. When installed in the 2<sup>nd</sup> row, they may prevent use of the other seats.
- (c) Consult the legislation in force in your country before installing your child on this seat.
- (d) To install a child seat on a rear seat, "rearward facing" or "forward facing", move the front seat forward, then straighten the backrest to allow enough space for the child seat and the child's legs.
- (e) To install a child seat on a rear seat, "rearward facing" or "forward facing", adjust the rear seat to the fully back position, with the backrest upright.

**U:** seat suitable for the installation of a child seat secured using the seat belt and universally approved "rearward facing" and/or "forward facing", with the passenger seat adjusted to the midway longitudinal position.

**U(R):** same as **U**, with the passenger's seat adjusted to the low position with 11 actions on the height control lever and in the midway longitudinal position.



Remove and stow the head restraint before installing a child seat on a passenger seat. Refit the head restraint once the child seat has been removed.



## Installation of child seats secured using the seat belt

In accordance with European regulations, this table indicates the options for installing child seats secured using the seat belt and universally approved (a) in relation to the weight of the child and the seat in the vehicle.

Seat		Weight of the child / indicative age			
		Groups 0 (b) and 0+ Birth to 13 kg	Group 1 From 9 to 18 kg	Group 2 From 15 to 25 kg	Group 3 From 22 to 36 kg
1 <sup>st</sup> row	Front passenger seat (c)				
	- fixed	U	U	U	U
2 <sup>nd</sup> row	Outer rear seats	U(R)	U(R)	U(R)	U(R)
	Outer rear seats with longitudinal adjustment (d) (e)	U	U	U	U
	Centre rear seat (d)	U	U	U	U
3 <sup>rd</sup> row	Outer rear seats	U	U	U	U

- (a) Universal child seat: child seat which can be installed in all vehicles using the seat belt.
- (b) Group 0: from birth to 10 kg. Infant car seats and "car cots" cannot be installed on the front passenger seat or in the 3<sup>rd</sup> row. When installed in the 2<sup>nd</sup> row, they may prevent use of the other seats.
- (c) Consult the legislation in force in your country before installing your child on this seat.
- (d) To install a child seat on a rear seat, "rearward facing" or "forward facing", move the front seat forward, then straighten the backrest to allow enough space for the child seat and the child's legs.
- (e) To install a child seat on a rear seat, "rearward facing" or "forward facing", adjust the rear seat to the fully back position, with the backrest upright.

**U:** seat suitable for the installation of a child seat secured using the seat belt and universally approved "rear facing" and/or "forward facing", with the passenger seat adjusted to the midway longitudinal position.

**U(R):** same as **U**, with the passenger's seat adjusted to the low position with 11 actions on the height control lever and in the midway longitudinal position.





Remove and stow the head restraint before installing a child seat on a passenger seat. Refit the head restraint once the child seat has been removed.

# "ISOFIX" mountings

Your vehicle has been approved in accordance with the **latest ISOFIX regulations**.

The seats, represented below, are fitted with regulation ISOFIX mountings:

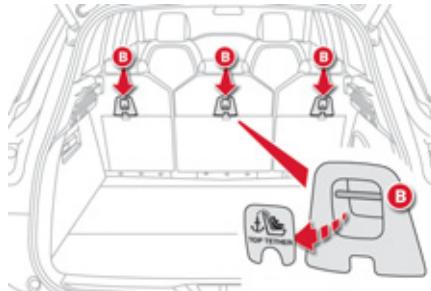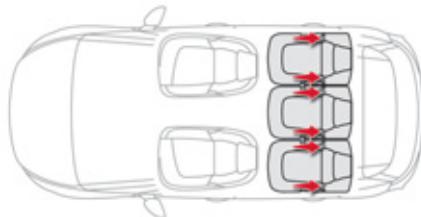

The ISOFIX mountings are three rings for each seat:



- two rings **A**, located between the vehicle seat back and cushion, indicated by a marking,

- a ring **B**, located under a cover on the back of the top of the seat backrest, referred to as the **TOP TETHER** for fixing the upper strap. Its position is indicated by a marking.

Located on the back of the seat backrest, the top tether is used to secure the upper strap of child seats that have one. This device limits forward tipping of the child seat, in the event of a front impact.

This ISOFIX mounting system ensures fast, reliable and safe fitting of the child seat in your vehicle.

The **ISOFIX child seats** are fitted with two latches which are secured easily on the two rings **A**.

Some also have an **upper strap** (or top tether) which is attached to ring **B**.

To secure the child seat to the **TOP TETHER**:

- remove and stow the head restraint before installing the child seat on this seat (refit it after the child seat has been removed),
- remove the **TOP TETHER** cover by pulling at its cut-out,
- pass the child seat strap behind the seat backrest, centred between the holes for the head restraint rods,
- secure the upper strap fixing to the ring **B**,
- tighten the upper strap.


! The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident. Observe strictly the fitting instructions provided with the child seat.

For information on the possibilities for fitting ISOFIX child seats to your vehicle, refer to the table of seating positions.

# ISOFIX child seats recommended by CITROËN and approved for your vehicle

"RÖMER Baby-Safe Plus and its Baby-Safe Plus ISOFIX base" (size category: **E**)

Group 0+: from birth to 13 kg

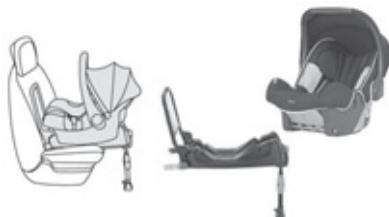

Installed "rearward facing" using an ISOFIX base which is attached to the rings **A**.

The base has a stay, adjustable for height, which sits on the vehicle's floor.

This seat can be secured with a seat belt. In this case, only the shell is used and attached to the vehicle's seat by the three-point seat belt.

**Baby P2C Midi and its ISOFIX base** (size categories: **D, C, A, B, B1**)

Group 1: from 9 to 18 kg



Installed "rearward facing" using an ISOFIX base which is attached to the rings **A**

The base has a stay, adjustable for height, which sits on the vehicle's floor.

This child seat can also be used "forward facing".

This seat can **not** be secured with a seat belt.

We recommend that you use the seat in the "rearward facing" position up to the age of 3 years.

**i** Follow the instructions for fitting child seats contained in the seat manufacturer's installation guide.



# Locations for installing ISOFIX child seats

In accordance with European Regulations, this table indicates the options for installing ISOFIX child seats on seats in the vehicle fitted with ISOFIX mountings.

In the case of universal and semi-universal ISOFIX child seats, the ISOFIX size category, determined by a letter from **A** to **G**, is indicated on the child seat next to the ISOFIX logo.

Weight of the child / indicative age											
Type of ISOFIX child seat	Less than 10 kg (group 0) Up to approx. 6 months		Less than 10 kg (group 0) Less than 13 kg (group 0+) Up to approx. 1 year			From 9 to 18 kg (group 1) From approx. 1 to 3 years					
	F	G	C	D	E	C	D	A	B	B1	
Front passenger seat	Not ISOFIX										
Outer rear seats, fixed	IL-SU**		IL-SU			IL-SU		X	IUF / IL-SU		
Outer rear seats, adjustable longitudinally	IL-SU**		IL-SU			IL-SU		IUF / IL-SU (1)	IUF / IL-SU		
Centre rear seat	X		IL-SU			IL-SU		IUF / IL-SU	IUF / IL-SU		

\* Sleeper cots cannot be fitted to the front passenger's seat.

\*\* The ISOFIX sleeper cot, secured to the lower rings of an ISOFIX seat, occupies the full width of the rear seats.

**IUF:** seat suitable for the installation of an ISOFIX Universal seat, "Forwards-facing" secured using the top strap to the top tether on ISOFIX seats.

**IL-SU:** seat suitable for the installation of an

Isofix **Semi-Universal** seat either:

- "rearwards-facing" fitted with a top belt or a stay,
- "forwards-facing" fitted with a stay, a sleeper cot fitted with an upper strap or a stay.

For advice on securing of the top belt, refer to the "Isofix Mountings" section.

**X:** seat not suitable for the installation of a child seat or sleeper cot for the weight group indicated.

**(1):** The outer seat in row 2 must be adjusted to 3 notches back from the fully forward position.



Remove and stow the head restraint before installing a child seat on a passenger seat. Refit the head restraint once the child seat has been removed.



# Locations for installing ISOFIX child seats

In accordance with European Regulations, this table indicates the options for installing ISOFIX child seats on seats in the vehicle fitted with ISOFIX mountings.

In the case of universal and semi-universal ISOFIX child seats, the ISOFIX size category, determined by a letter from **A** to **G**, is indicated on the child seat next to the ISOFIX logo.

	Weight of the child / indicative age										
	Less than 10 kg (group 0) Up to approx. 6 months		Less than 10 kg (group 0) Less than 13 kg (group 0+) Up to approx. 1 year			From 9 to 18 kg (group 1) From approx. 1 to 3 years					
	Type of ISOFIX child seat		Sleeper cot*		"rearwards-facing"			"rearwards-facing"		"forwards-facing"	
ISOFIX size category	F	G	C	D	E	C	D	A	B	B1	
Front passenger seat	Not ISOFIX										
Outer rear seats, fixed	IL-SU**		IL-SU			IL-SU		IUF / IL-SU		IUF / IL-SU	
Outer rear seats, adjustable longitudinally	IL-SU**		IL-SU			IL-SU		IUF / IL-SU		IUF / IL-SU	
Centre rear seat	X		IL-SU			IL-SU		IUF / IL-SU		IUF / IL-SU	
Rear seat in the 3 <sup>rd</sup> row	Not ISOFIX										

\* Sleeper cots cannot be fitted to the front passenger's seat.

\*\* The ISOFIX sleeper cot, secured to the lower rings of an ISOFIX seat, occupies the full width of the rear seats.

**IUF:** seat suitable for the installation of an ISOFIX Universal seat, "Forwards-facing" secured using the top strap to the top tether on ISOFIX seats.

**IL-SU:** seat suitable for the installation of an Isofix **Semi-Universal** seat either:

- "rearwards-facing" fitted with a top belt or a stay,
- "forwards-facing" fitted with a stay, a sleeper cot fitted with an upper strap or a stay.

For advice on securing of the top belt, refer to the "Isofix Mountings" section.

**X:** seat not suitable for the installation of a child seat or sleeper cot for the weight group indicated.

**(1):** The outer seat in row 2 must be adjusted to 3 notches back from the fully forward position.



Remove and stow the head restraint before installing a child seat on a passenger seat. Refit the head restraint once the child seat has been removed.

# Advice on child seats



The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Remember to fasten the seat belts or the child seat harnesses **keeping the slack** in relation to the child's body **to a minimum**, even for short journeys.

For optimum installation of the "forward facing" child seat, ensure that the back of the child seat is as close as possible to the backrest of the vehicle's seat, or in contact if possible

The head restraint must be removed before installing a child seat with a backrest on the passenger seat.

Ensure that the head restraint is stowed or attached securely so that it is not thrown around the vehicle in the event of sharp braking.

Refit the head restraint as soon as the child seat is removed.

## Children at the front

The legislation on carrying a child on the front passenger seat is specific to each country. Refer to the legislation in force in your country.

Deactivate the passenger's airbag when a "rearward facing" child seat is installed on the front seat. Otherwise, the child would risk being seriously injured or killed if the airbag were deployed.

## Installing a booster cushion

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs.

CITROËN recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, do not leave:

- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To prevent accidental opening of the doors, use the "Child lock".


Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds on the rear windows.

# Manual child lock

This mechanical system prevents opening of the rear door using its interior control.

The control is located on the edge of each rear door.

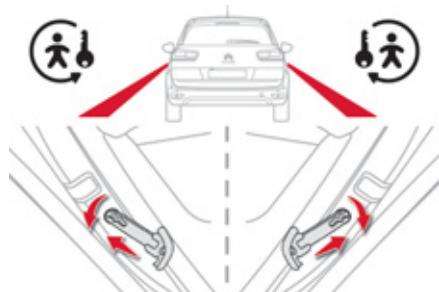

## Locking

- ☞ Using the integral ignition key, turn the control as far as it will go:
  - to the left on the left-hand rear door,
  - to the right on the right-hand rear door.

## Unlocking


- ☞ Using the integral ignition key, turn the control as far as it will go:
  - to the right on the left-hand rear door,
  - to the left on the right-hand rear door.

# Temporary puncture repair kit

Complete system consisting of a compressor and a sealant cartridge which permits **temporary repair** of a tyre so that you can drive to the nearest garage.

It is designed to repair most punctures which could affect the tyre, located on the tyre tread or shoulder.


## Access to the kit

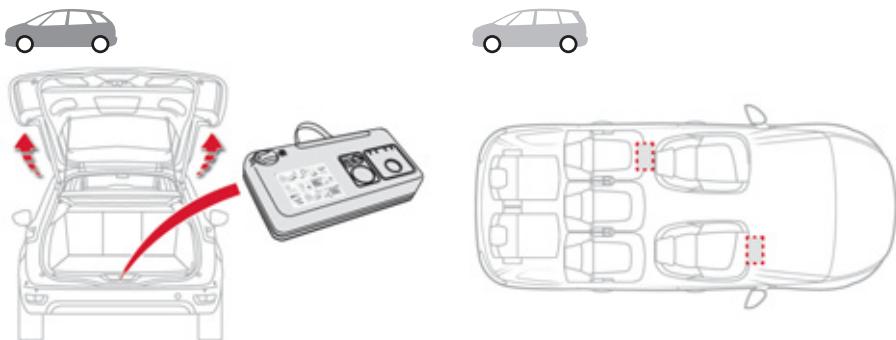

This kit is installed in the storage box, under the boot floor.

Depending on version, the kit is stowed under the front passenger's seat or in the storage box under the second row footwell.


## List of tools

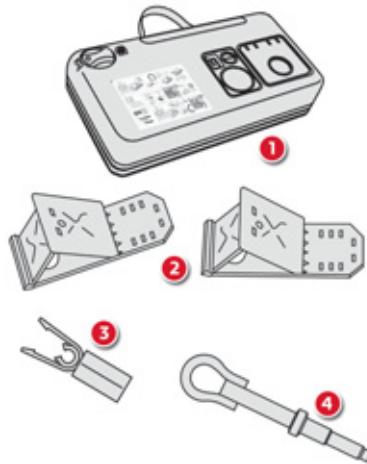

All of these tools are specific to your vehicle and can vary according to equipment. Do not use them for other purposes.

1. 12 V compressor.  
Contains a sealant cartridge for the temporary repair of a tyre and can also be used for adjusting tyre pressures.
2. Chocks\* to immobilise the wheels of the vehicle.
3. Bolt cover removal tool\*.  
For removing the wheel bolt finishers (covers) on alloy wheels.
4. Removable towing eye.  
See the "Towing the vehicle" section.

\* Depending on equipment.

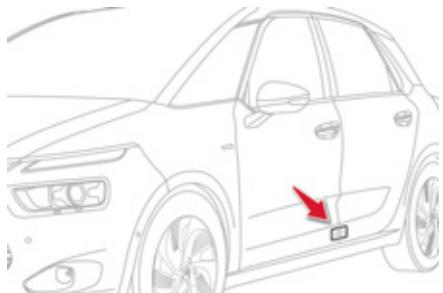

The tyre inflation pressures are given on this label.

## Description of the kit




- A. "Sealant" or "Air" position selector.
- B. On "I" / off "O" switch.
- C. Deflation button.
- D. Pressure gauge (in bar and p.s.i.).
- E. Compartment housing:
  - a cable with adaptor for 12 V socket,
  - various inflation adaptors for accessories, such as balls, bicycle tyres...



- F. Sealant cartridge.
- G. White pipe with cap for repair.
- H. Black pipe for inflation.
- I. Speed limit sticker.


**i** The speed limit sticker I must be affixed to the vehicle's steering wheel to remind you that a wheel is in temporary use. Do not exceed a speed of 50 mph (80 km/h) when driving with a tyre repaired using this type of kit.

## Repair procedure

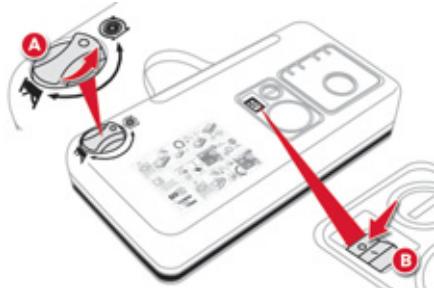


### 1. Sealing

- ☞ Switch off the ignition.
- ☞ Turn the selector **A** to the "sealant" position.
- ☞ Check that the switch **B** is in position "O".

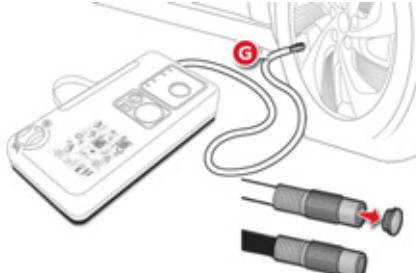

- ☞ Uncoil the white pipe **G** fully.
- ☞ Unscrew the cap from the white pipe.
- ☞ Connect the white pipe to the valve of the tyre to be repaired.


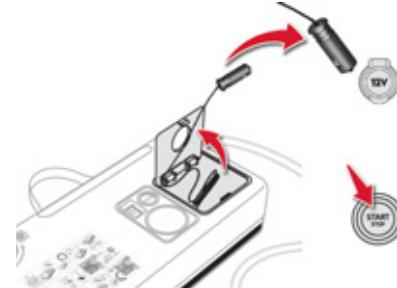


- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket.
- ☞ Start the vehicle and leave the engine running.

**i** Avoid removing any foreign bodies which have penetrated into the tyre.

! Take care, this product is harmful (e.g. ethylene-glycol, colophony...) if swallowed and causes irritation to the eyes. Keep this product out of the reach of children.

**i** Do not start the compressor before connecting the white pipe to the tyre valve: the sealant product would be expelled through the pipe.

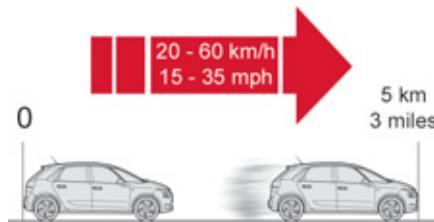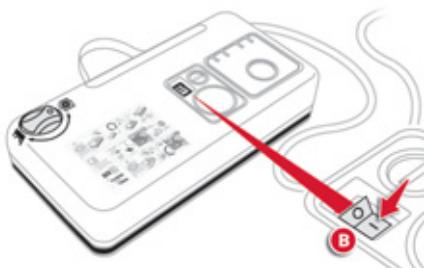

- Switch on the compressor by moving the switch **B** to position "I" until the tyre pressure reaches 2.0 bars. The sealant is injected into the tyre under pressure; do not disconnect the pipe from the valve during this operation (risk of splashing).



**i** If after around 5 to 7 minutes the pressure is not attained, this indicates that the tyre is not repairable; contact a CITROËN dealer or a qualified workshop for assistance.

- Remove the kit and screw the cap back on the white pipe. Take care to avoid staining your vehicle with traces of fluid. Keep the kit to hand.
- Drive immediately for approximately three miles (five kilometres), at reduced speed (between 15 and 35 mph (20 and 60 km/h)), to plug the puncture.
- Stop to check the repair and the tyre pressure using the kit.

## **i** Tyre under-inflation detection

After repair of the tyre, the warning lamp will remain on until the system is reinitialised.

For more information, refer to the "Under-inflation detection" section.

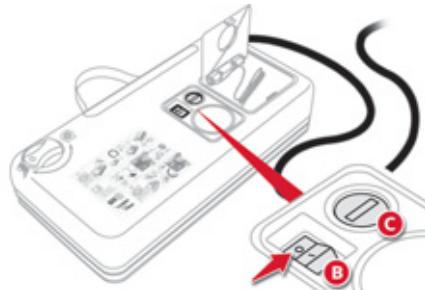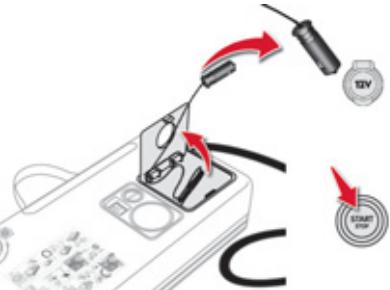

## 2. Inflation

- ☞ Turn the selector **A** to the "air" position.
- ☞ Uncoil the black pipe **H** fully.
- ☞ Connect the black pipe to the valve of the wheel.



- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket.
- ☞ Start the vehicle again and leave the engine running.



As soon as possible, go to a CITROËN dealer or a qualified workshop. You must inform the technician that you have used this kit. After inspection, the technician will advise you on whether the tyre can be repaired or if it must be replaced.

- ☞ Adjust the pressure using the compressor (to inflate: switch **B** in position "**I**"; to deflate: switch **B** in position "**O**" and press button **C**), in accordance with the vehicle's tyre pressure label (located on the left hand door aperture).

A loss of pressure indicates that the puncture has not been fully plugged; contact a CITROËN dealer or qualified workshop for assistance.

- ☞ Remove and stow the kit.
- ☞ Drive at reduced speed (50 mph [80 km/h] max) limiting the distance travelled to approximately 120 miles (200 km).

## Removing the cartridge





- ☞ Stow the black pipe.
- ☞ Detach the angled base from the white pipe.
- ☞ Support the compressor vertically.
- ☞ Unscrew the cartridge from the bottom.



Beware of discharges of fluid.  
The expiry date of the fluid is indicated on the cartridge.  
The sealant cartridge is designed for single use; even if only partly used, it must be replaced.  
After use, do not discard the cartridge into the environment, take it to an authorised waste disposal site or a CITROËN dealer.  
Do not forget to obtain a new sealant cartridge, available from CITROËN dealers or from a qualified workshop.

## Checking tyre pressures / inflating accessories

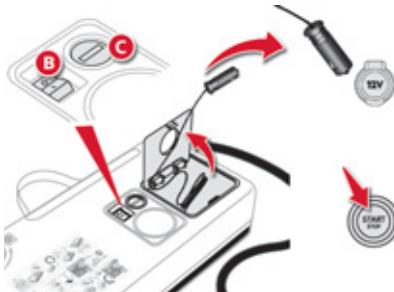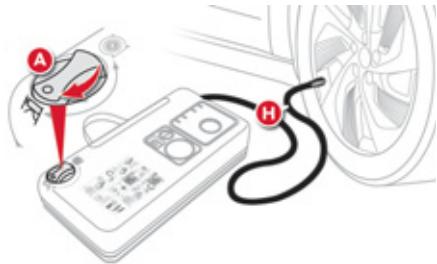

You can also use the compressor, without injecting any product, to:

- check or adjust the pressure of your tyres,
- inflate other accessories (balls, bicycle tyres...).

- ☞ Turn the selector **A** to the "Air" position.
- ☞ Uncoil the black pipe **H** fully.
- ☞ Connect the black pipe to the valve of the wheel or accessory. If necessary, fit one of the adaptors supplied with the kit first.



- ☞ Connect the compressor's electrical connector to the vehicle's 12 V socket.
- ☞ Start the vehicle and let the engine run.
- ☞ Adjust the pressure using the compressor (to inflate: switch **B** in position "I"; to deflate: switch **B** in position "O" and press button **C**), according to the vehicle's tyre pressure label or the accessory's pressure label.
- ☞ Remove the kit then stow it.




Should the pressure of one or more tyres be adjusted, it is necessary to reinitialise the tyre pressures (see the "Under-inflation detection" section).



# Changing a wheel


Procedure for changing a faulty wheel for the spare wheel using the tools provided with the vehicle.

## Access to the tools

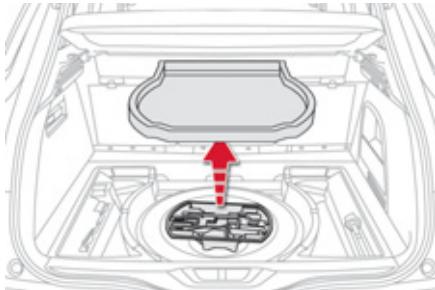

The tools are installed in the boot under the floor.

Remove the boot carpet for access to them.

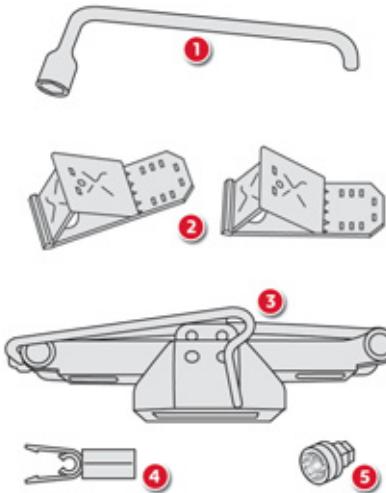

## List of tools\*

All of these tools are specific to your vehicle and can vary according to the level of equipment. Do not use them for other purposes.


1. Wheelbrace.  
For removing the wheel trim and removing the wheel bolts.
2. Chocks for immobilising the vehicle (except versions with manual gearbox).
3. Jack with integral handle.  
For raising the vehicle.
4. Wheel bolt cover removal tool.  
For removing the finishers on the heads of the wheel bolts on alloy wheels.
5. Socket for the security bolts (located in the glove box).  
For adapting the wheelbrace to the special "security" bolts.

\* According to equipment.

## Access to the spare wheel


The spare wheel is located in the boot under the floor.

For access to the spare wheel, refer to the "Access to the tools" section.

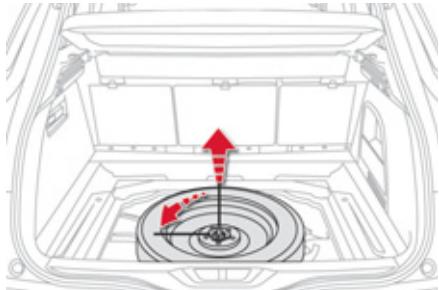


### Taking out the wheel

- ☞ Unscrew the central green screw.
- ☞ Lift the spare wheel towards you from the rear.
- ☞ Remove the wheel from the boot.

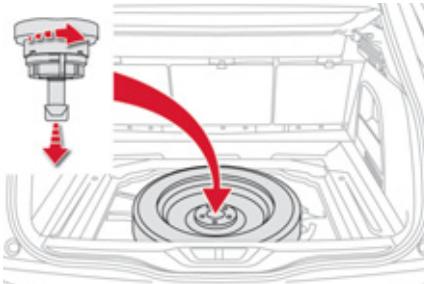

### Putting the spare wheel back in place

- ☞ Return the wheel to its housing.
- ☞ Unscrew the central screw a few turns, then put it in place in the middle of the wheel.
- ☞ Fully tighten the central screw to secure the wheel correctly.

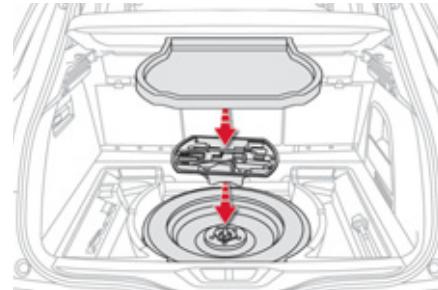

- ☞ Return the box to its position in the middle of the wheel.


**i** As the spare wheel is narrower than the wheels on the vehicle, in the event of a puncture, the punctured wheel must be carried in the boot.



# Changing a wheel

Procedure for changing a wheel with a punctured tyre by the spare wheel using the tools provided with the vehicle.

## Access to the vehicle's tools\*

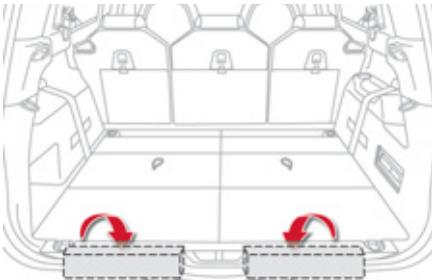


Some of the tools are accessible from inside the boot. The wheel chocks **2** as well as the wheelbrace extension **6** are stowed under the right hand boot sill.

The wheelbrace **1** and the towing eye **7** are stowed under the left hand boot sill.

The other tools, the jack **3** and the tool for removing the wheel bolt head finishers for alloy wheels **4**, are stowed in a box attached to the spare wheel. The assembly is secured under the vehicle in a carrier. See the "Access to the spare wheel" section).

\* Depending on version. The complete tooling is with the spare wheel.

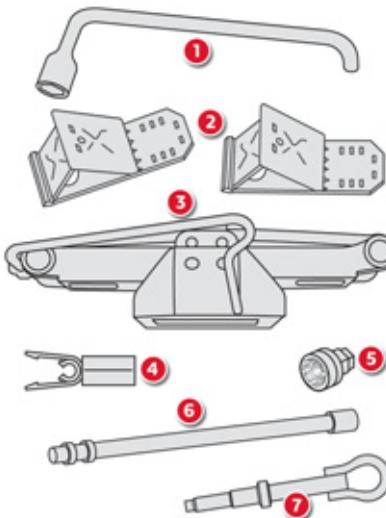

## List of tools\*

All of these tools are specific to your vehicle and can vary according to equipment. Do not use them for other purposes.

1. Wheelbrace.  
For removing the wheel trim and the wheel fixing bolts.

2. Wheel chocks for immobilising the vehicle (except versions with manual gearbox).
3. Jack with integral handle.  
For raising the vehicle.
4. Wheel bolt head cover removal tool.  
For removing the wheel bolt head finishers on alloy wheels.
5. Socket for the security bolts (stowed in the glove box).  
For adapting the wheelbrace to the special security bolts.
6. Wheelbrace extension.  
For unscrewing/tightening the spare wheel carrier drive.
7. Towing eye.

## Wheel with trim

**When removing the wheel**, detach the trim first using the wheelbrace **1** pulling at the valve passage hole.


**When refitting the wheel**, refit the trim starting by placing its notch facing the valve and press around its edge with the palm of your hand.

## Access to the spare wheel\*




The spare wheel is supported by a carrier underneath the vehicle.

**i** Only a "space-saver" type of spare wheel can be fitted under the vehicle.

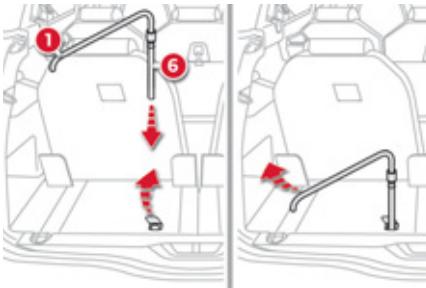


### Taking out the spare wheel

- ☞ Fold the concertina board and put the left hand third row seat into position (if your vehicle has them).
- ☞ Raise the pre-cut section of carpet to expose the nut for operating the spare wheel carrier.
- ☞ Using the extension **6** fitted to the end of the wheelbrace, turn the nut clockwise to unwind the carrier cable until the spare wheel reaches the ground. Unwind the length needed for access to the wheel.

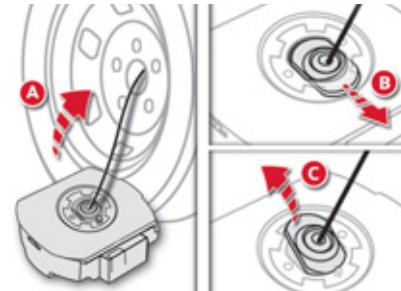

- ☞ Detach the wheel/box assembly from the rear of the vehicle.
- ☞ Remove the hook with its connection plate to release the wheel/box assembly, as shown in the illustration.
- ☞ Pull out the wheel to gain access to the box.

\* Depending on version.

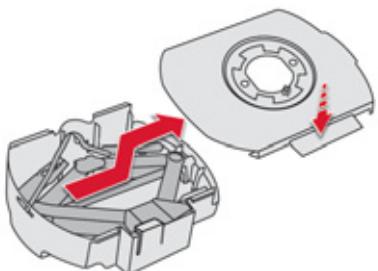

- ☞ Press the tongue, slide the box cover to the centre and remove it for access to the other tools (jack and wheel bolt head finisher removal tool for alloy wheels).

## Stowing the tools


- ☞ Return the tools to the box and stow the box in the vehicle's boot.
- ☞ Wind in the carrier by turning the wheelbrace clockwise: once the cable is fully wound in you should no longer feel any resistance.
- ☞ Stow the other tools in the locations provided in the boot.



A puncture wheel from the vehicle cannot be fitted under the vehicle. It must be carried in the boot. Use a cover to protect the boot.

## Putting the spare wheel back in place

- ☞ Stow the corresponding tools in the box and close the cover.
- ☞ Position the tool box on the ground.

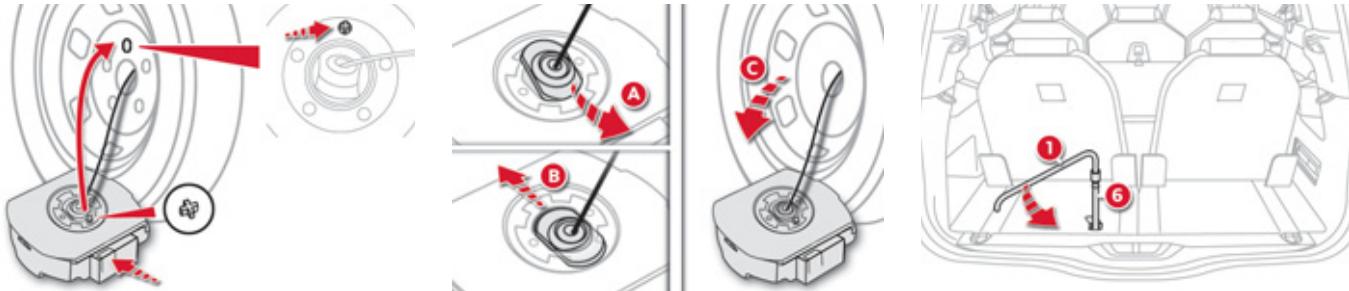

- ☞ Position the spare wheel on the box so that the positioning indicator will be introduced into the bolt hole in the middle of the box.
- ☞ Pass the hook with its connection plate into the wheel then the box, as illustrated.
- ☞ Raise the wheel/box assembly underneath the vehicle by turning the carrier drive nut anticlockwise using the wheelbrace and the extension.
- ☞ Tighten fully. When the cable is fully wound in, rotation of the nut no longer presents any resistance.  
Check that the wheel is horizontally flat against the floor.

## Removing a wheel

### **i** Parking the vehicle


Immobilise the vehicle where it does not block traffic: the ground must be level, stable and not slippery.

Apply the parking brake unless it has been programmed to automatic mode, switch off the ignition and engage first gear\* to block the wheels.

Check that the braking warning lamp and the **P** warning lamp in the parking brake control lever come on.

For greater safety, place a chock **2** against the wheel opposite to the one being changed.




The occupants must get out of the vehicle and wait where they are safe. Never go underneath a vehicle raised using a jack; use an axle stand.

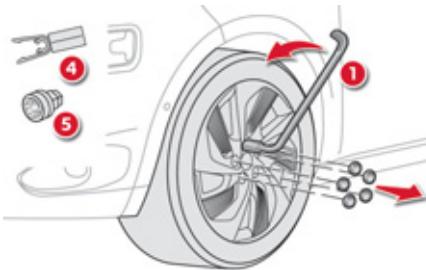

### List of operations

- ☞ Remove the finisher from from each of bolts using the tool **4** (depending on equipment).
- ☞ Fit the security socket **5** on the wheelbrace **1** to slacken the security bolt (if fitted).
- ☞ Slacken the other bolts (no more than a 1/4 turn) using the wheelbrace **1** only.

\* Position **R** for an electronic gearbox or **P** for an automatic gearbox.

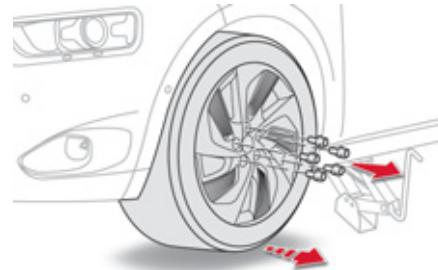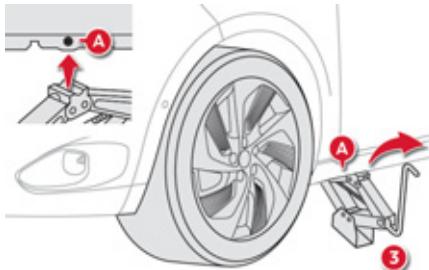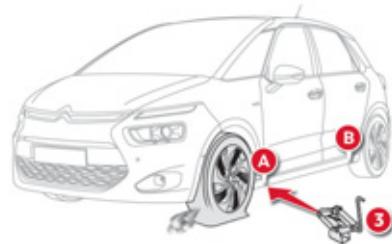


- ☞ Place the jack 3 in contact with one of the two front A or rear B locations provided on the underbody, whichever is closest to the wheel to be changed.
- ☞ Extend the jack 3 until its base plate is in contact with the ground. Ensure that the centreline of the jack base plate is directly below the location A or B used.
- ☞ Raise the vehicle until there is sufficient space between the wheel and the ground to admit the spare (not punctured) wheel easily.
- ☞ Remove the bolts and store them in a clean place.
- ☞ Remove the wheel.

## Fitting a wheel



### **i** Fitting the "space-saver" spare wheel

If your vehicle is fitted with alloy wheels, when tightening the bolts on fitting, it is normal to notice that the washers do not come into contact with the "space-saver" spare wheel. The wheel is secured by the conical surface of each bolt.

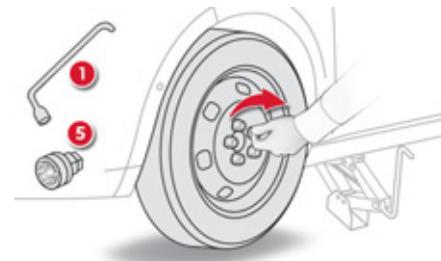

### **i** After changing a wheel

To correctly store the punctured wheel in the boot (**not in the location of the space-saver wheel**), first remove the central cover.



When using the "space-saver" type spare wheel, do not exceed 50 mph (80 km/h).

Have the tightening of the bolts and the pressure of the spare wheel checked by a CITROËN dealer or a qualified workshop without delay.

Have the punctured wheel repaired and refitted to the vehicle as soon as possible.

### List of operations

- ☞ Put the wheel in place on the hub.
- ☞ Screw in the bolts fully by hand.
- ☞ Pre-tighten the security bolt using the wheelbrace 1 fitted with the security socket 5 (depending on equipment).
- ☞ Pre-tighten the other bolts using the wheelbrace 1 only.

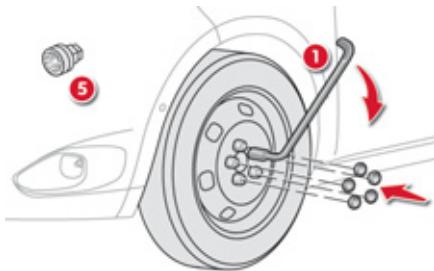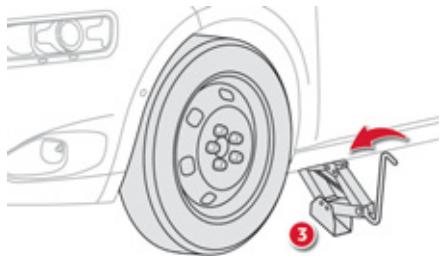

- ☞ Lower the vehicle fully.
- ☞ Fold the jack **3** and detach it.
- ☞ Tighten the security bolt using the wheelbrace **1** fitted with the security socket **5** (depending on equipment).
- ☞ Tighten the other bolts using the wheelbrace **1** only.
- ☞ Refit the bolt covers on each of the bolts or the hub cap (depending on equipment).
- ☞ Store the tools in the box.



The tyre inflation pressures are given on this label.

## Snow chains

In wintry conditions, snow chains improve traction as well as the behaviour of the vehicle when braking.

**i** The snow chains must be fitted only to the front wheels. They must never be fitted to "space-saver" type spare wheels.

Use only chains designed to be fitted the type of wheel on your vehicle:

Original tyre size	Specification of chains.
205/60 R16	Maximum link size: 9 mm
205/55 R17	
225/45 R18	THULE model K-Summit K34 only

For more information on snow chains, contact a CITROËN dealer or a qualified workshop.

**i** Take account of the legislation in force in your country on the use of snow chains and the maximum running speed authorised.


### Advice on installation

- ☞ If you have to fit the chains during a journey, stop the vehicle on a flat surface on the side of the road.
- ☞ Apply the parking brake and position any wheel chocks to prevent movement of your vehicle.
- ☞ Fit the chains following the instructions provided by the manufacturer.
- ☞ Move off gently and drive for a few moments, without exceeding 30 mph (50 km/h).
- ☞ Stop your vehicle and check that the snow chains are correctly tightened.

**i** Avoid driving on roads that have been cleared of snow, to avoid damaging your vehicle's tyres and the road surface. It is recommended that before you leave, you practise fitting the snow chains on a level and dry surface. If your vehicle is fitted with alloy wheels, check that no part of the chain or its fixings is in contact with the wheel rim.


# Changing a bulb

## Front lamps

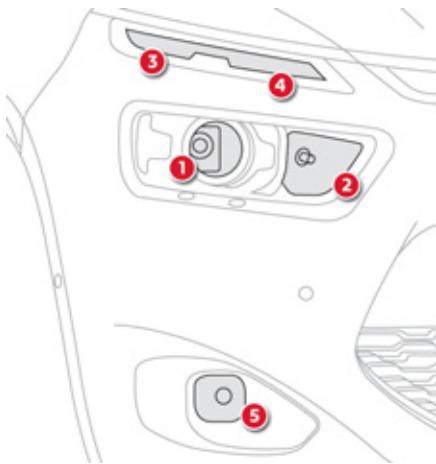

### Model with xenon headlamps

1. Directional dipped beam headlamps (D5S-25W).
2. Main beam headlamps (H7-55W).
3. Daytime running lamps / sidelamps (6 light emitting diodes - LEDs).
4. Direction indicators (6 light emitting diodes - LEDs).
5. Front foglamps (H11-55W).

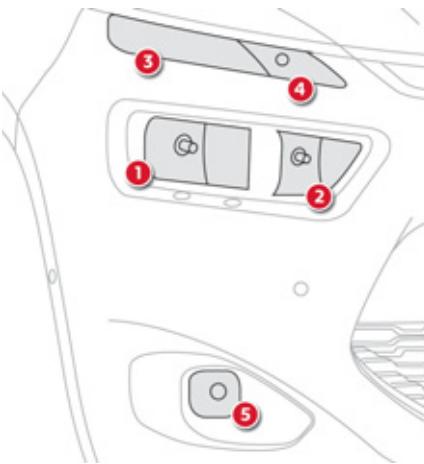

### Model with halogen headlamps

1. Dipped beam headlamps (H7-55W).
2. Main beam headlamps (H7-55W).
3. Daytime running lamps/sidelamps (4 light emitting diodes - LEDs).
4. Direction indicators (PWY24W).
5. Foglamps (H11-55W).



### Risk of electrocution

Xenon bulbs (D5S-25W) must be replaced by a CITROËN dealer or a qualified workshop.



For H7 type bulbs with lugs... take care to observe their correct installation so as to ensure the best lighting performance.

In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

## Changing the light emitting diode-LED lamps

For replacement, contact a CITROËN dealer or qualified workshop.

! The headlamps are fitted with polycarbonate glass with a protective coating:



- ☞ **do not clean them using a dry or abrasive cloth, nor with a detergent or solvent product,**
- ☞ use a sponge and soapy water or a pH neutral product,
- ☞ when using a high pressure washer on persistent marks, do not keep the lance directed towards the lamps or their edges for too long, so as not to damage their protective coating and seals.

Changing a bulb should only be done after the headlamp has been switched off for a few minutes (risk of serious burns).

- ☞ Do not touch the bulb directly with your fingers, use a lint-free cloth.

It is imperative to use only anti-ultraviolet (UV) type bulbs to avoid damaging the headlamp.

Always replace a failed bulb with a new bulb with the same type and specification.

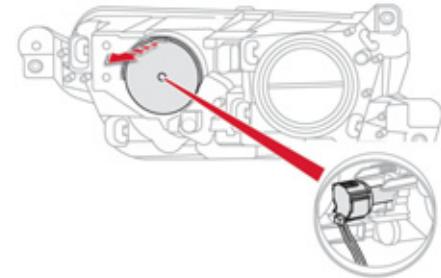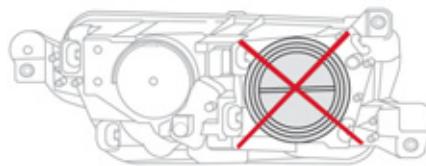

### Directional dipped beam headlamps (xenon model)




D5S xenon bulbs must be changed by a CITROËN dealer or a qualified workshop, as there is a risk of electrocution.

In the event of failure of one of the D5S bulbs, it is recommended that the bulb on the other side be changed at the same time.

### Main beam headlamps (xenon model)

- ☞ Remove the protective plastic cover by pulling the tab.
- ☞ Push the connector.
- ☞ Remove the bulb and change it.


For reassembly, carry out these operations in reverse order.

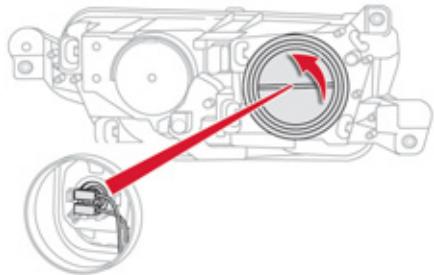

### Dipped beam headlamps (halogen model)

- ☞ Turn the protective plastic cover to remove it.
- ☞ Disconnect the connector.
- ☞ Release the clips.
- ☞ Remove the bulb and change it.


For reassembly, carry out these operations in reverse order.

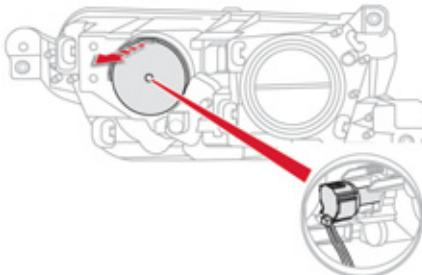

### Main beam headlamps (halogen model)


- ☞ Remove the protective plastic cover by pulling the tab.
- ☞ Push the connector.
- ☞ Remove the bulb and change it.

For reassembly, carry out these operations in reverse order.

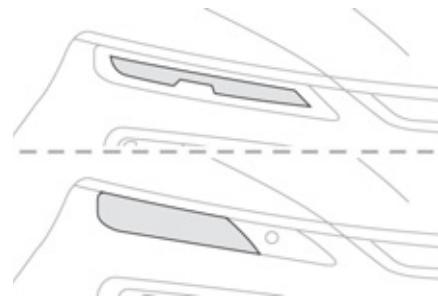

### Daytime running lamps / sidelamps

For the replacement of this type of LED lamp and lighting guides, contact a CITROËN dealer or a qualified workshop. A replacement kit for the LEDs is available from CITROËN dealers.

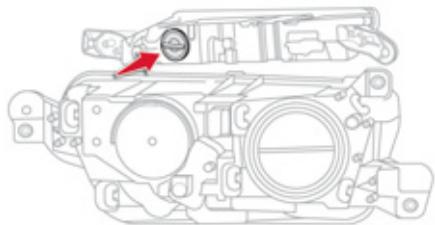

## Direction indicators

**i** Faster flashing of a direction indicator warning lamp (left or right) indicates a failed bulb on that side.


The direction indicator bulb is located below the front lamp.

- ☞ Turn the bulb holder a quarter turn anti-clockwise.
- ☞ Remove the bulb holder.
- ☞ Change the failed bulb.

For reassembly, carry out these operations in reverse order.

## Direction indicators (light emitting diodes - LED)

For the replacement of this type of lamp, contact a CITROËN dealer or a qualified workshop.

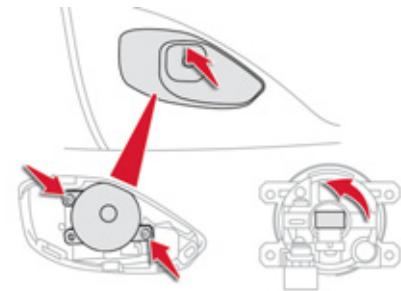


## Front foglamps

- ☞ Unclip the finisher by pulling at the top.
- ☞ Remove the two screws to remove the unit.
- ☞ Turn the bulb holder a quarter turn.
- ☞ Remove the bulb holder.
- ☞ Change the failed bulb.

For reassembly, carry out these operations in reverse order, pressing on the finisher to refit it.

## Door mirror spotlamps

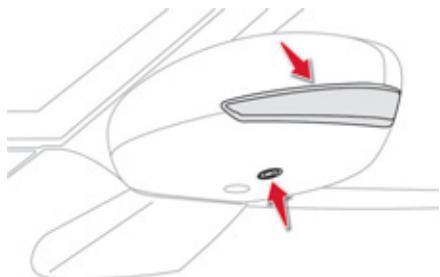

You should contact a CITROËN dealer or a qualified workshop for the replacement of the light emitting diode - LED.


## Integrated direction indicator side repeaters

You should contact a CITROËN dealer or a qualified workshop for the replacement of these bulbs.

## Rear lamps




1. Direction indicator (PY21W amber).
2. Sidelamp / foglamp (P21/5W).

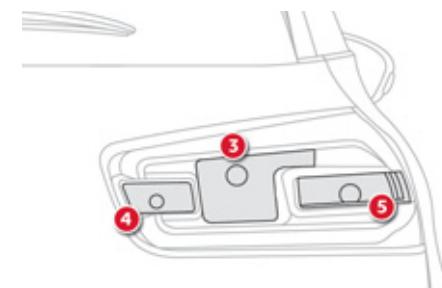

## Model with conventional bulb lamps

3. Brake lamp / sidelamp (P21/5W).
4. Reversing lamp (W16W).
5. Direction indicator (PY21W).

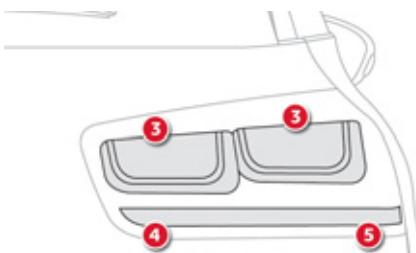


## Model with LED lamps

3. Brake lamp / sidelamp (light emitting diodes-LED).
4. Reversing lamp (W16W).
5. Direction indicator (PY21W).

### Changing the light emitting diode-LED lamps


For replacement, contact a CITROËN dealer or qualified workshop.

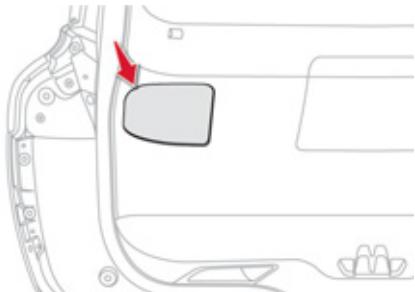

## Lamps on the tailgate


Identify the failed bulb.

- ☞ Open the boot.
- ☞ Remove the access cover.

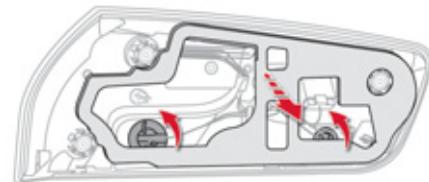

Model with LED lamps

- ☞ Remove the three lamp fixing screws **A**.
- ☞ Disconnect the lamp connector.
- ☞ Carefully remove the lamp from the outside by pressing the retaining clip **B**.

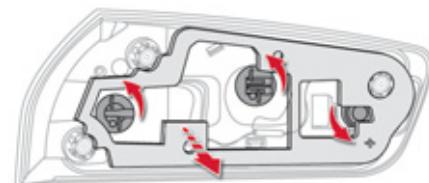


Model with conventional bulb lamps

- ☞ Turn the bulb holder a quarter of a turn anti-clockwise and pull the bulb out.
- ☞ Change the bulb.


For reassembly, carry out these operations in reverse order.



## Rear lamps

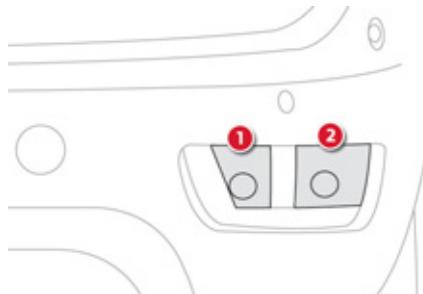


1. Direction indicator (PY21W amber).
2. Sidelamp / foglamp (P21/5W).

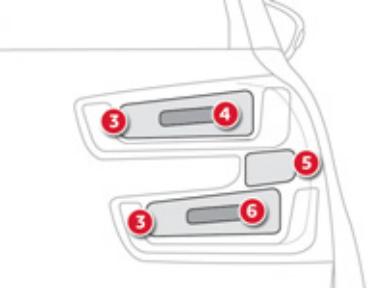


### Model with LED lamps

3. Sidelamp (light emitting diodes-LED).
4. Brake lamp (light emitting diodes-LED).
5. Direction indicator (PY21W).
6. Reversing lamp (light emitting diodes-LED).

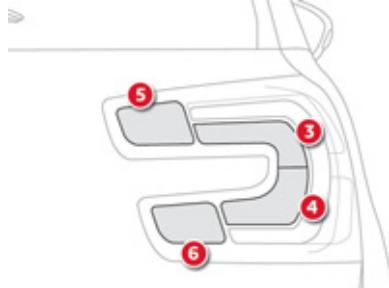

### Model with conventional bulb lamps

3. Sidelamp (P21/5W).
4. Brake lamp / sidelamp (P21/5W).
5. Direction indicator (PY21W).
6. Reversing lamp (P21W).

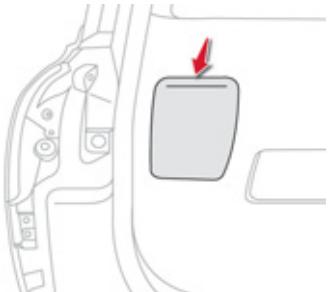

### Lamps on the tailgate


Identify the failed bulb.

- ☞ Open the boot.
- ☞ Remove the access cover.




- ☞ Remove the three lamp fixing screws **A**.
- ☞ Disconnect the lamp connector.
- ☞ Carefully remove the lamp from its housing.
- ☞ Turn the bulb holder a quarter of a turn anti-clockwise and pull the bulb out.
- ☞ Change the bulb.


For reassembly, carry out these operations in reverse order.

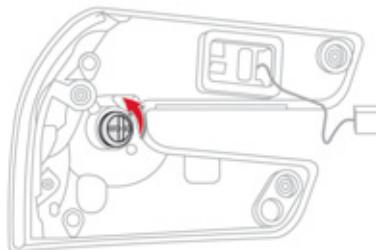

Model with LED lamps

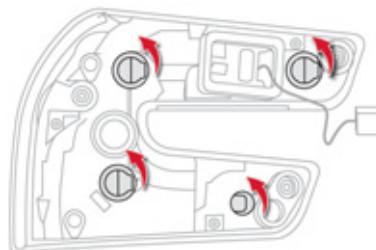

Model with conventional bulb lamps

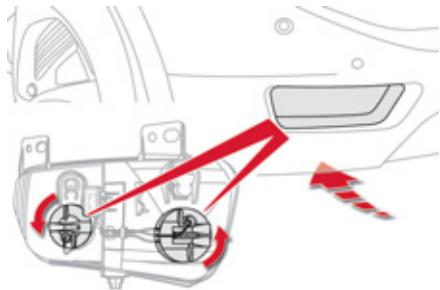


### Direction indicator, sidelamp and foglamp

Access is by passing a hand under the bumper.

- ☞ Turn the bulb holder a quarter of a turn and pull it out.
- ☞ Change the bulb.


For reassembly carry out these operations in reverse order.

You can also contact a CITROËN dealer or a qualified workshop for the replacement of these bulbs.

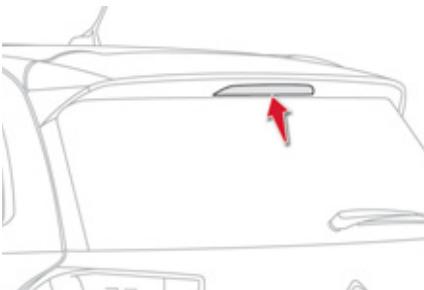

### Third brake lamp (light emitting diodes-LED)

For the replacement of this type of lamp, contact a CITROËN dealer or a qualified workshop.

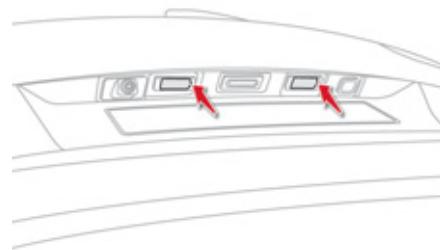


### Number plate lamps (W5W)

- ☞ Insert a thin screwdriver into one of the cutouts in the the lens.
- ☞ Push it outwards to unclip it.
- ☞ Remove the lens.
- ☞ Change the faulty bulb.

To refit, press on the lens to clip it in place.

# Changing a fuse

## Access to the tools

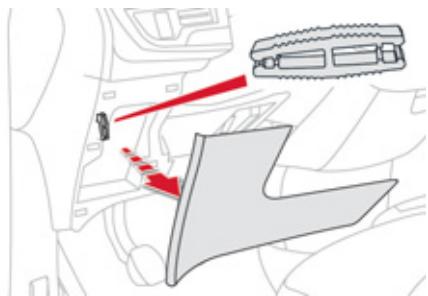

The extraction tweezer is located in the dashboard fusebox compartment.


For access to it:

- ☞ unclip the cover by pulling at the top right, then left,
- ☞ disengage the cover completely, by carefully pulling in the direction indicated by the arrow,
- ☞ remove the tweezer.

## Changing a fuse

Before changing a fuse:

- ☞ the cause of the failure must be identified and rectified,
- ☞ all electrical consumers must be switched off,
- ☞ the vehicle must be immobilised with the ignition off,
- ☞ identify the failed fuse using the tables and layout drawings in the following pages.

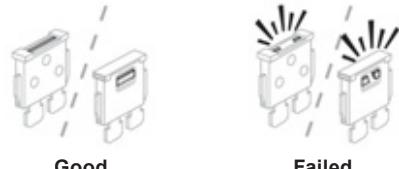

To replace a fuse, you must:

- ☞ use the special tweezer to extract the fuse from its housing and check the condition of its filament.
- ☞ always replace the failed fuse with a fuse of the same rating (same colour); using a different rating could cause faults (risk of fire).

If the fuse fails again soon after replacement, have the vehicle's electrical system checked by a CITROËN dealer or a qualified workshop.



Tweezer


! The replacement of a fuse not shown in the tables below may cause a serious malfunction of your vehicle. Contact a CITROËN dealer or a qualified workshop.

## Configurations

### **Installing electrical accessories**

Your vehicle's electrical system is designed to operate with standard or optional equipment.

Before installing other electrical equipment or accessories on your vehicle, contact a CITROËN dealer or a qualified workshop.

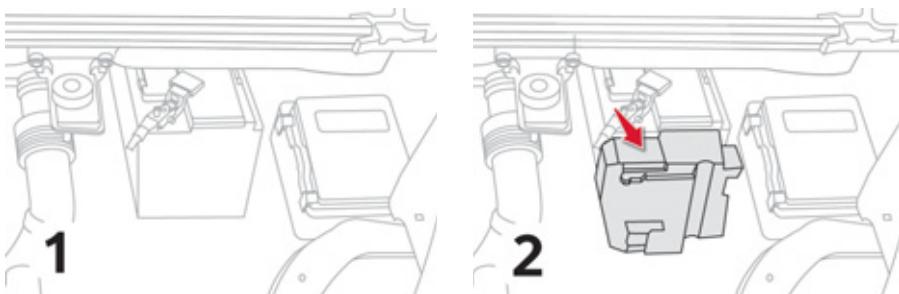


 CITROËN will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying malfunctions resulting from the installation of accessories not supplied and not recommended by CITROËN and not installed in accordance with its instructions, in particular when the combined consumption of all of the additional equipment connected exceeds 10 milliamperes.

The type of electrical system of the vehicle depends on its level of equipment.


To identify the type of electrical system on your vehicle, open the bonnet: the presence of an additional fusebox in front of the battery indicates that it is type 2.

The type 1 electrical system does not have any fuses in front of the battery.

## Dashboard fuses

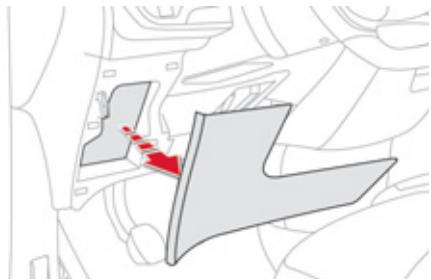

The fusebox is located in the lower dashboard (left-hand side).

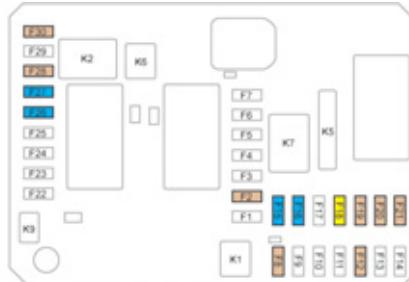


### Access to the fuses

☞ Refer to the paragraph "Access to the tools".

### Type 1 fuse tables


#### Fusebox 1

Fuse N°	Rating	Functions
<b>F8</b>	<b>5 A</b>	Steering mounted controls
<b>F18</b>	<b>20 A</b>	Touch screen tablet, audio and navigation system, CD player, USB ports and auxiliary sockets.
<b>F16</b>	<b>15 A</b>	Front 12V socket.
<b>F15</b>	<b>15 A</b>	Boot 12V socket.
<b>F28</b>	<b>5 A</b>	START/STOP button.
<b>F30</b>	<b>15 A</b>	Rear wiper.
<b>F27</b>	<b>15 A</b>	Front screenwash pump, rear screenwash pump.
<b>F26</b>	<b>15 A</b>	Horn.
<b>F20</b>	<b>5 A</b>	Airbags.
<b>F21</b>	<b>5 A</b>	Instrument panel.
<b>F19</b>	<b>5 A</b>	Rain and sunshine sensor.
<b>F12</b>	<b>5 A</b>	Keyless starting unit.
<b>F2</b>	<b>5 A</b>	Manual headlamp adjustment control.

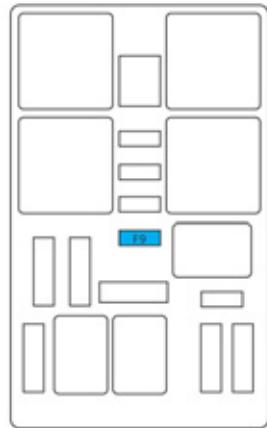**Fusebox 2**


Fuse N°	Rating	Functions
<b>F9</b>	<b>15 A</b>	Rear 12V socket.

## Type 2 fuse tables

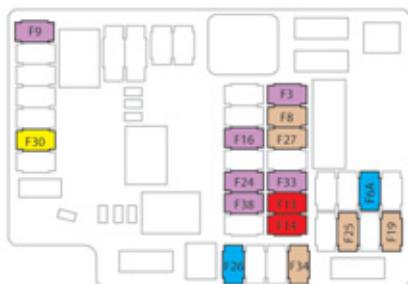


Fuse N°	Rating	Functions
<b>F3</b>	<b>3 A</b>	START/STOP button.
<b>F6 A</b>	<b>15 A</b>	Touch screen tablet, audio and navigation system, CD player, USB ports and auxiliary sockets.
<b>F8</b>	<b>5 A</b>	Alarm.
<b>F9</b>	<b>3 A</b>	Steering mounted controls.
<b>F19</b>	<b>5 A</b>	Instrument panel.
<b>F24</b>	<b>3 A</b>	Rain and sunshine sensor.
<b>F25</b>	<b>5 A</b>	Airbags.
<b>F33</b>	<b>3 A</b>	Memorisation of driving position.
<b>F34</b>	<b>5 A</b>	Electric power steering.
<b>F13</b>	<b>10 A</b>	Front 12V socket.
<b>F14</b>	<b>10 A</b>	Boot 12V socket.
<b>F16</b>	<b>3 A</b>	Map reading lamps in row 1 courtesy lamps.
<b>F27</b>	<b>5 A</b>	Electronic gearbox gear selector.
<b>F30</b>	<b>20 A</b>	Rear wiper.
<b>F38</b>	<b>3 A</b>	Manual headlamp adjustment control.

## Engine compartment fuses

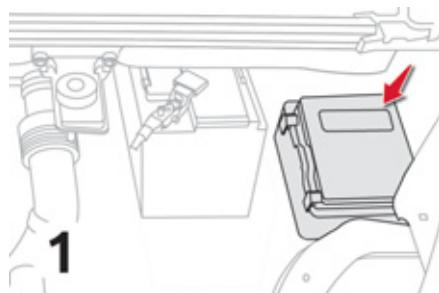


1  
The fusebox is placed in the engine compartment near the battery (left-hand side).

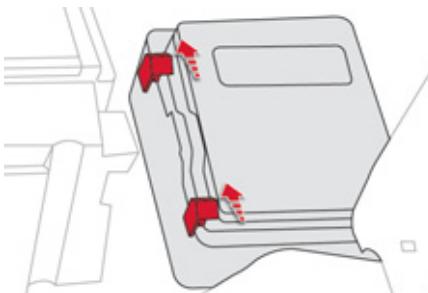

### Access to the fuses

- ☞ Unclip the cover, by pushing the two red latches towards the rear of the vehicle.
- ☞ Change the fuse (see corresponding paragraph).
- ☞ When you have finished, close the cover carefully to ensure correct sealing of the fusebox.

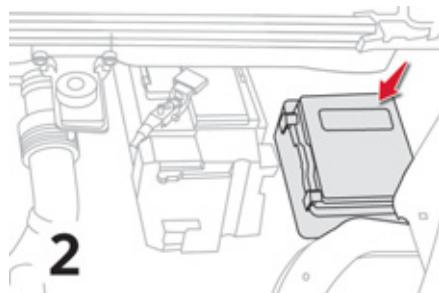

2  
An additional fusebox is fitted in front of the battery, for type 2.


## Type 1 fuse table

Fuse N°	Rating	Functions
<b>F18</b>	<b>10 A</b>	Right hand main beam
<b>F19</b>	<b>10 A</b>	Left hand main beam.

## Type 2 fuse table

### Fusebox 1

Fuse N°	Rating	Functions
<b>F9</b>	<b>30 A</b>	Motorised tailgate.
<b>F18</b>	<b>25 A</b>	Hi-Fi amplifier.
<b>F21</b>	<b>3 A</b>	Hands-free starting reader unit.

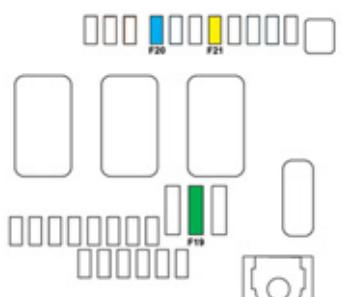


### Fusebox 2

Fuse N°	Rating	Functions
<b>F19</b>	<b>30 A</b>	Front wiper slow / fast speed.
<b>F20</b>	<b>15 A</b>	Front and rear screenwash pump.
<b>F21</b>	<b>20 A</b>	Headlamp wash pump.

# 12 V battery


Procedure for starting the engine using another battery or charging a discharged battery.

## Access to the battery

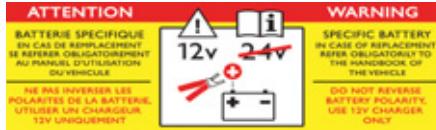

! The presence of this label, in particular with the Stop & Start system, indicates the use of a 12 V lead-acid battery with special technology and specification; the involvement of a CITROËN dealer or a qualified workshop is essential when replacing or disconnecting the battery.

! After refitting the battery, the Stop & Start system will only be active after a continuous period of immobilisation of the vehicle, a period which depends on the climatic conditions and the state of charge of the battery (up to about 8 hours).

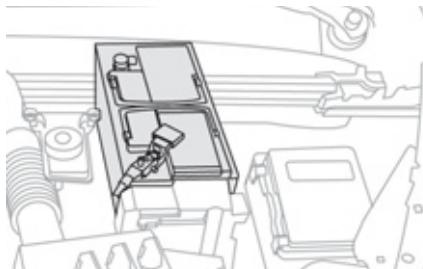

The battery is located under the bonnet. For access to the (+) terminal:

- ☞ release the bonnet using the interior lever, then the exterior safety catch,
- ☞ raise the bonnet and secure it with its stay,
- ☞ lift the plastic cover for access to the (+) terminal.

## ! Before doing any work

Immobilise the vehicle: apply the parking brake, put the gearbox in neutral, then switch off the ignition. Check that all electrical equipment is switched off.

## Starting using another battery


When your vehicle's battery is discharged, the engine can be started using a slave battery (external or on another vehicle) and jump lead cables.

! First check that the slave battery has a nominal voltage of 12 V and a capacity at least equal to that of the discharged battery.

Do not try to start the engine by connecting a battery charger.

Do not disconnect the (+) terminal when the engine is running.

- ☞ Connect the red cable to the positive terminal (+) of the flat battery **A**, then to the positive terminal (+) of the slave battery **B**.
- ☞ Connect one end of the green or black cable to the negative terminal (-) of the slave battery **B** (or earth point on the other vehicle).
- ☞ Connect the other end of the green or black cable to the earth point **C** on the broken down vehicle (or on the engine mounting).
- ☞ Start the engine of the vehicle with the good battery and leave it running for a few minutes.

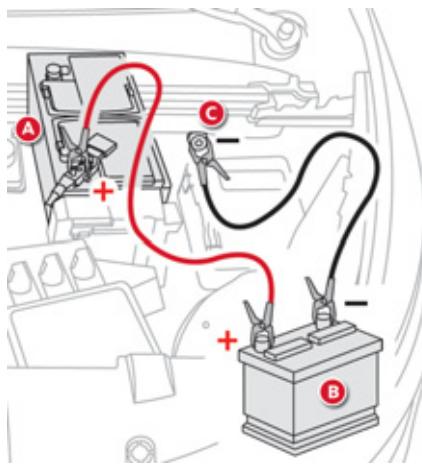

- ☞ Operate the starter on the broken down vehicle and let the engine run. If the engine does not start straight away, switch off the ignition and wait a few moments before trying again.
- ☞ Wait until the engine returns to idle then disconnect the jump lead cables in the reverse order.


## Before disconnecting the battery

Wait 2 minutes after switching off the ignition before disconnecting the battery.  
Close the windows and the doors before disconnecting the battery.

## Following reconnection of the battery

Following reconnection of the battery, switch on the ignition and wait 1 minute before starting to permit initialisation of the electronic systems. However, if problems remain following this operation, contact a CITROËN dealer or a qualified workshop. Referring to the corresponding section, you must yourself reinitialise (depending on version):

- the remote control key,
- the electric blind(s),
- ...

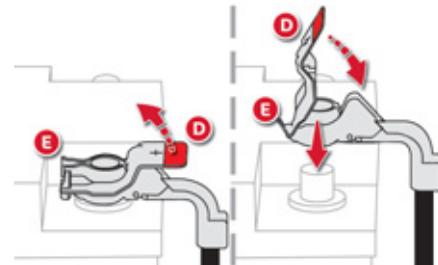

## Disconnecting the (+) cable

- ☞ Raise the locking tab **D** fully to release the cable terminal clamp **E**.

## Reconnecting the (+) cable

- ☞ Position the open clamp **E** of the cable on the positive post (+) of the battery.
- ☞ Press vertically on the clamp **E** to position it correctly on the battery.
- ☞ Lock the clamp by spreading the positioning lug and then lowering the tab **D**.

! Do not apply excessive force on the tab as locking will not be possible if the clamp is not positioned correctly; start the procedure again.

## Charging the battery using a battery charger

 The Stop & Start battery does not have to be disconnected for charging.

- ☞ Disconnect the battery from the vehicle.
- ☞ Follow the instructions for use provided by the manufacturer of the charger.
- ☞ Connect the battery starting with the negative terminal (-).
- ☞ Check that the terminals and connectors are clean. If they are covered with sulphate (whitish or greenish deposit), remove them and clean them.



The batteries contain harmful substances such as sulphuric acid and lead. They must be disposed of in accordance with regulations and must not, in any circumstances, be discarded with household waste.

Take used remote control batteries and vehicle batteries to a special collection point.



It is advisable to disconnect the battery if the vehicle is to be left unused for more than one month.



! Protect your eyes and face before handling the battery.

All operations on the battery must be carried out in a well ventilated area and away from naked flames and sources of sparks, so as to avoid the risk of explosion or fire.

Do not try to charge a frozen battery; the battery must first be thawed out to avoid the risk of explosion. If the battery has been frozen, before charging have it checked by a CITROËN dealer or a qualified workshop who will check that the internal components have not been damaged and the casing is not cracked, which could cause a leak of toxic and corrosive acid.

Do not reverse the polarity and use only a 12 V charger.

Do not disconnect the terminals while the engine is running.

Do not charge the batteries without disconnecting the terminals first. Wash your hands afterwards.

Do not push the vehicle to start the engine if you have an electronic gearbox or automatic gearbox.

## Load reduction mode

System which manages the use of certain functions according to the level of charge remaining in the battery.

When the vehicle is being driven, the load reduction function temporarily deactivates certain functions, such as the air conditioning, the heated rear screen...

The deactivated functions are reactivated automatically as soon as conditions permit.

## Energy economy mode

System which manages the duration of use of certain functions to conserve a sufficient level of charge in the battery.

After the engine has stopped, you can still use functions such as the audio and telematics system, windscreen wipers, dipped beam headlamps, courtesy lamps, etc. for a maximum combined duration of about forty minutes.

## Switching to economy mode

A message then appears in the instrument panel screen indicating that the vehicle has switched to economy mode and the active functions are put on standby.

If a telephone call is being made at this time, it will be maintained for around 10 minutes with the Bluetooth hands-free system of your audio system.

## Exiting economy mode

These functions are reactivated automatically next time the vehicle is driven.


- ☞ In order to restore the use of these functions immediately, start the engine and let it run:
  - for less than ten minutes, to use the equipment for approximately five minutes,
  - for more than ten minutes, to use the equipment for up to approximately thirty minutes.

Let the engine run for the duration specified to ensure that the battery charge is sufficient.

Do not repeatedly and continuously restart the engine in order to charge the battery.

A flat battery prevents the engine from starting (refer to the "Battery" section).

# Changing a wiper blade

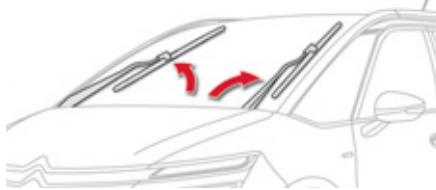

## Before removing a front wiper blade

- ☞ Within one minute after switching off the ignition, operate the wiper stalk to position the wiper blades vertically on the windscreens,  
or
- ☞ From one minute after switching off the ignition, reposition the arms manually.

## Removing

- ☞ Raise the corresponding wiper arm.
- ☞ Unclip the wiper blade and remove it.

## Fitting

- ☞ Put the corresponding new wiper blade in place and clip it.
- ☞ Fold down the wiper arm carefully.

## After fitting a front wiper blade

- ☞ Switch on the ignition.
- ☞ Operate the wiper stalk again to park the wiper blades.




Replacement of the arms must be done by a CITROËN dealer or a qualified workshop.

# Towing the vehicle

Procedure for having your vehicle towed or for towing another vehicle using the towing eye.

## Access to the tools

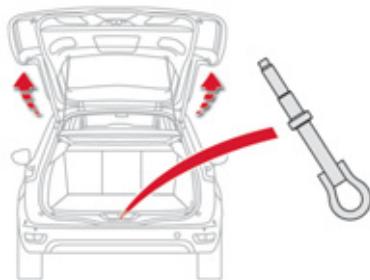

The towing eye is installed in the boot under the floor.

To gain access to it:

- ☞ open the boot,
- ☞ lift the floor and remove it,
- ☞ remove the towing eye from its housing.

### ! General recommendations

Observe the legislation in force in your country.

Ensure that the weight of the towing vehicle is higher than that of the towed vehicle.

The person at the wheel of the towed vehicle must have a valid driving licence.


When towing a vehicle with all four wheels on the ground, always use an approved towing bar; rope and straps are prohibited.

When towing a vehicle with the engine off, there is no longer any power assistance for braking or steering.

In the following cases, you must always call on a professional recovery service:

- vehicle broken down on a motorway or fast road,
- 4 wheel drive vehicle,
- when it is not possible to put the gearbox into neutral, unlock the steering, or release the parking brake,
- towing with only two wheels on the ground,
- where there is no approved towing bar available...

## Towing your vehicle

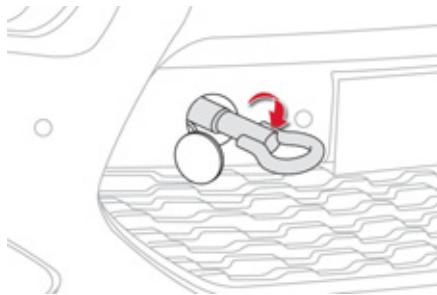


- On the front bumper, unclip the cover by pressing on the left.
- Screw the towing eye in fully.
- Install the towing bar.



Place the gear lever in neutral (position **N** on an electronic or automatic gearbox). Failure to observe this instruction could result in damage to certain components (braking, transmission...) and the absence of braking assistance the next time the engine is started.

- Unlock the steering by turning the key in the ignition one notch and release the parking brake.
- Switch on the hazard warning lamps on both vehicles.
- Move off gently, drive slowly and for a short distance.

## Towing another vehicle

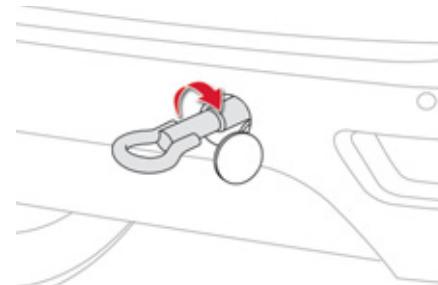

- On the rear bumper, unclip the cover by pressing at the bottom.
- Screw the towing eye in fully.
- Install the towing bar.
- Switch on the hazard warning lamps on both vehicles.
- Move off gently, drive slowly and for a short distance.

## Towing a trailer



Towbar suitable for the attachment of a trailer or installation of a bicycle carrier, with additional lighting and signalling.

Your vehicle is primarily designed for transporting people and luggage, but it may also be used for towing a trailer.

**i** We recommend the use of genuine CITROËN towbars and their harnesses that have been tested and approved from the design stage of your vehicle, and that the fitting of the towbar is entrusted to a CITROËN dealer or a qualified workshop. If the towbar is not fitted by a CITROËN dealer, it is imperative that it is fitted in accordance with the vehicle manufacturer's instructions.

**i** Driving with a trailer places greater demands on the towing vehicle and the driver must take particular care.

## Driving advice

### Distribution of loads

- ☞ Distribute the load in the trailer so that the heaviest items are as close as possible to the axle and the nose weight approaches the maximum permitted without exceeding it.

Air density decreases with altitude, thus reducing engine performance. Above 1 000 metres, the maximum towed load must be reduced by 10 % for every 1 000 metres of altitude.

Refer to the "Technical data" section for details of the weights and towed loads which apply to your vehicle.

### Side wind

- ☞ Take into account the increased sensitivity to side wind.

### Cooling

Towing a trailer on a slope increases the temperature of the coolant. As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

- ☞ To lower the engine speed, reduce your speed.

The maximum towed load on a long incline depends on the gradient and the ambient temperature.

In all cases, keep a check on the coolant temperature.



- ☞ If the warning lamp and the **STOP** warning lamp come on, stop the vehicle and switch off the engine as soon as possible.



When not towing a trailer, remove the quickly-detachable tow ball before driving.

### Braking

Towing a trailer increases the braking distance. To avoid overheating of the brakes on a long mountain type of descent, the use of engine braking is recommended.

### Tyres

- ☞ Check the tyre pressures of the towing vehicle and of the trailer, observing the recommended pressures.

### Lighting

- ☞ Check the electrical lighting and signalling on the trailer.




The rear parking sensors will be deactivated automatically if a genuine CITROËN towbar is used.

## Roof bars

For safety reasons and to avoid damaging the roof, it is essential to use transverse roof bars that are approved for your vehicle.


Observe the fitting instructions and the conditions of use given in the information provided with the roof bars.

### Version without longitudinal bars

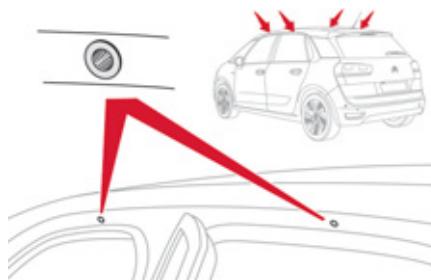

To install the roof bars, you must secure them only to the four anchorage points in the roof frame. These points are masked by the vehicle's doors when closed. The roof bar fixings include a stud that should be introduced into the aperture at each anchorage point.

### Version with longitudinal bars

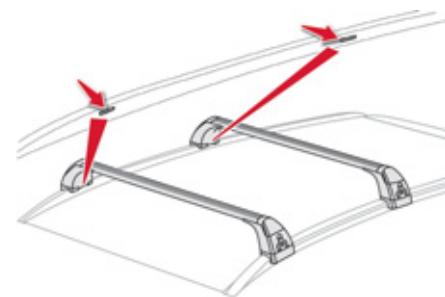

You must fit the transverse bars to the longitudinal bars at the fixing points indicated by engraved markings on the longitudinal bars.

## Recommendations

- ☞ Distribute the load evenly, avoiding overloading on one side.
- ☞ Arrange the heaviest part of the load as close as possible to the roof.
- ☞ Anchor the load securely and fit a warning flag if part of it overhangs the vehicle.
- ☞ Drive gently, as the vehicle will be more liable to the effects of side winds (vehicle stability may be affected).
- ☞ Remove the roof bars as soon as they are no longer needed.



Maximum load, distributed over the roof bars, for a loading height not exceeding 40 cm: **80 kg**.

This value is subject to change, please check the maximum load stated in the instructions provided with the roof bars. If the height exceeds 40 cm, adapt the speed of the vehicle to the profile of the road to avoid damaging the roof bars and the fixings on the vehicle. Please refer to national legislation so as to meet the requirements on carrying objects that are longer than the vehicle.



When carrying long objects, it is recommended that you deactivate the motorised operation of the tailgate.

# Very cold climate screen\*

Removable protective screen which prevents the accumulation of snow at the radiator cooling fan.

## Fitting


- Offer up the very cold climate screen to the front of the lower section of the front bumper.
- Press around its edge to engage its fixing clips one by one.

## Removal

- Use a screwdriver as a lever to release each fixing clip in turn.

Do not forget to remove the very cold climate screen when:

- the ambient temperature exceeds 10 °C,
- towing,
- driving at speeds above 75 mph (120 km/h).

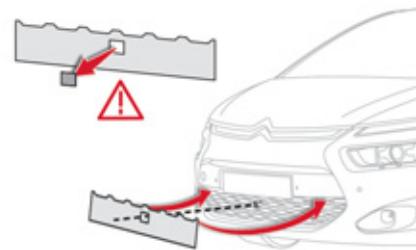

## **i 360 Vision system**

The pre-cut zone must be removed before fitting the screen to the front bumper, to allow operation of the camera.

When the very cold climate screen is fitted, the image provided by the camera is slightly different.

\* According to country.

# Accessories

A wide range of accessories and genuine parts is available from the CITROËN dealer network. These accessories and parts have been tested and approved for reliability and safety. They are all adapted to your vehicle and benefit from CITROËN's recommendation and warranty.

## "Comfort":

door deflectors, side window blinds, rear screen blind, insulated module, coat hanger fixed to head restraint, mobile reading lamp, mirror for caravan, parking sensors, programmable additional heating, smoker's kit, solar film for rear door windows...

## "Transport systems":

child seats and booster cushions, boot carpet, boot liner, boot net, boot spacers, transverse roof bars, ski carrier, roof boxes, towbars, towbar wiring harnesses, bicycle carriers for towbar and roof bars, towbars with fixed and detachable towball, high level load retaining net, sliding carrier, boot organiser (Grand C4 Picasso)...

If a towbar and wiring harness are fitted outside the CITROËN dealer network, the installation must be done strictly in line with the manufacturer's recommendations.

If your vehicle has a detachable towball, it is recommended that the ball be removed when not towing.

## "Styling":

gear lever knobs, aluminium foot rest, alloy wheels...

## "Security and safety":

anti-intrusion alarm, stolen vehicle tracking system, child seats and booster cushions, breathalyser, first aid kit, fire extinguisher, warning triangle, high visibility vest, wheel security bolts, snow chains, non-slip covers, winter tyres, foglamp kit, security film for front door windows, load retaining net, pet seat belt...

## "Protection":

mats\*, seat covers compatible with lateral airbags, mud flaps, door protective mouldings, bumper protection strips, vehicle cover, boot sill protector, door sill protectors, seat and boot protective covers for pets...

The rear bodywork has been designed to avoid spray.

- \* To avoid any risk of jamming the pedals:
  - ensure that mats are correctly positioned and secured,
  - never fit one mat on top of another.

## "Multimedia":

Speakers, Hi-Fi module, Bluetooth hands-free system, head-up display screen, portable satellite navigation system, semi-integral support bracket for portable navigation system, driving assistance systems, reversing camera, portable video screen, portable video carrier, telephone carrier, two-screen video pack, portable video player, CD player, solar USB charger, 230 V/50 Hz socket, 230 V/12 V adaptor, iPhone/iPad charger, Wi-Fi on board...

By visiting a CITROËN dealer you can also obtain cleaning and maintenance products (interior and exterior) - including ecological products in the "TECHNATURE" range, products for topping up (screenwash...), paint touch-up pens and aerosols for the exact colour of your vehicle, refills (sealant cartridge for the temporary puncture repair kit...), ...

### Installation of radio communication transmitters

Before installing any after-market radio communication transmitter, you can contact a CITROËN dealer for the specification of transmitters which can be fitted (frequency, maximum power, aerial position, specific installation requirements), in line with the Vehicle Electromagnetic Compatibility Directive (2004/104/EC).

 Depending on the legislation in force in the country, it may be compulsory to have a high visibility safety vest, warning triangle, breathalyzers and spare bulbs and fuses available in the vehicle.

 The fitting of electrical equipment or accessories which are not recommended by CITROËN may result in a failure of your vehicle's electronic system and excessive electrical consumption.

Please note this precaution. You are advised to contact a CITROËN representative to be shown the range of recommended equipment and accessories.

# TOTAL & CITROËN

## Partners in performance and protecting the environment

### Innovation in the search for performance

For over 40 years, the TOTAL Research and Development departments have developed for CITROËN, lubricants to match the latest technical innovations on CITROËN vehicles, both for competition and for everyday motoring.

For you, this is an assurance that you will obtain of the best performance for your engine.

### Optimum protection for your engine

By having your CITROËN vehicle serviced with TOTAL lubricants, you are contributing towards improving the life and performances of your engine, while also protecting the environment.



CITROËN prefers TOTAL




# Bonnet

! Before doing anything under the bonnet, switch off the Stop & Start system to avoid any risk of injury resulting from an automatic change to START mode.




## Opening

- ☞ Open the left hand front door.
- ☞ Pull the release lever, located at the bottom of the door aperture, towards you.

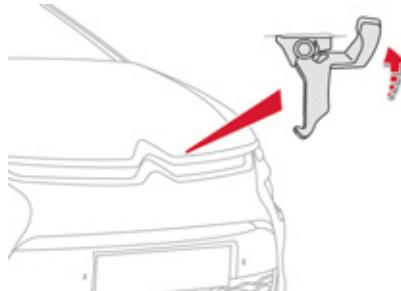

- ☞ Lift the safety catch and raise the bonnet.

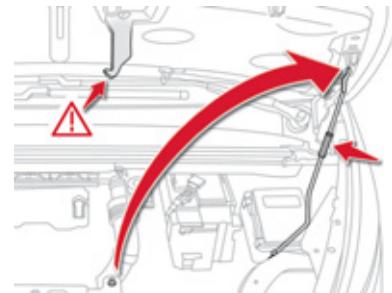

- ☞ Unclip the stay from its housing and place it in the support slot to hold the bonnet open.

! Do not open the bonnet under very windy conditions.  
When the engine is hot, handle the exterior safety catch and the stay with care (risk of burns), using the protected area.

! When the bonnet is open, take care not to damage the safety catch.

## Closing



- ☞ Take the stay out of its support slot.
- ☞ Clip the stay back into its housing.
- ☞ Lower the bonnet and release it at the end of its travel.
- ☞ Pull on the bonnet to check that it has latched correctly.

! The cooling fan may start after switching off the engine: take care with articles and clothing that might become caught by the fan blades.

# Petrol engines

The various caps and covers allow access for checking the levels of the various fluids and for replacing certain components.


1. Screenwash and headlamp wash reservoir.
2. Coolant reservoir.
3. Brake fluid reservoir.
4. Battery / Fuses.
5. Fusebox.
6. Air filter.
7. Engine oil dipstick.
8. Engine oil filler cap.

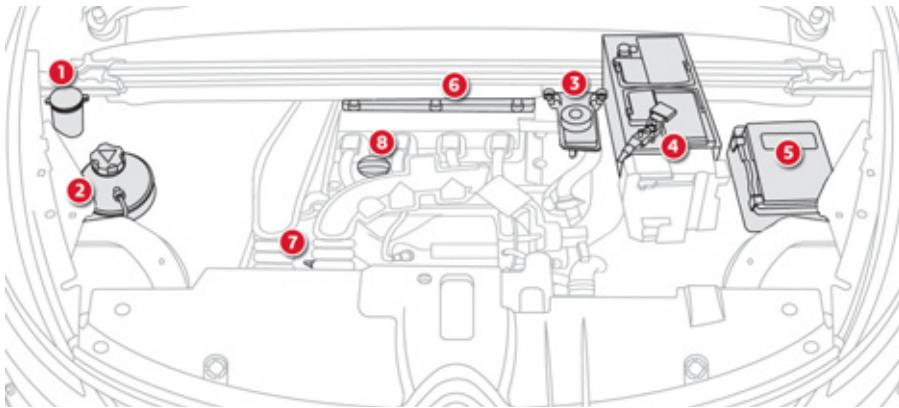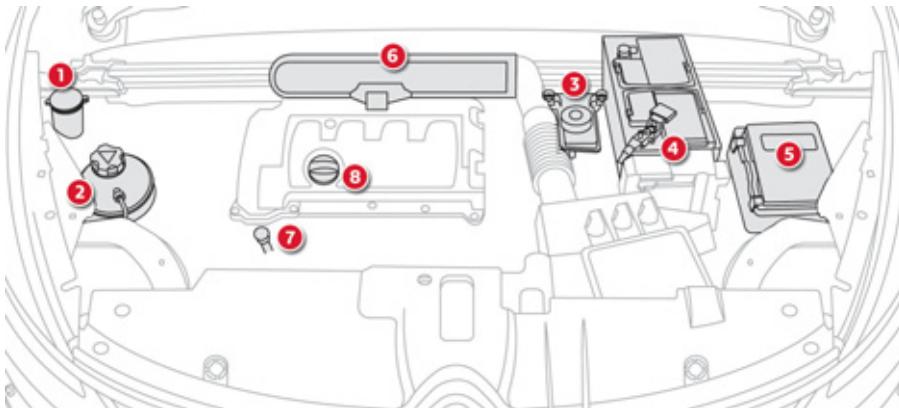

## Diesel engines

The various caps and covers allow access for checking the levels of the various fluids, for replacing certain components and for priming the fuel system.

1. Screenwash and headlamp wash reservoir.
2. Coolant reservoir.
3. Brake fluid reservoir.
4. Battery / Fuses.
5. Fusebox.
6. Air filter.
7. Engine oil dipstick.
8. Engine oil filler cap.
9. Priming pump\*.

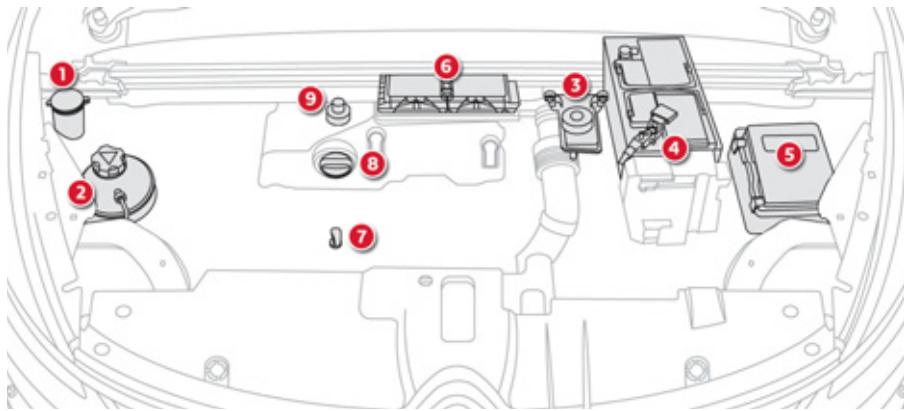

\* According to engine.

# Fuel

Capacity of the tank: approximately 57 litres (petrol) or 55 litres (Diesel).

## Low fuel level



When the low fuel level is reached, this warning lamp in the instrument panel comes on, accompanied by an audible warning, a message and the last bar of the fuel gauge comes on in orange.

When it first comes on, **about 6 litres** of fuel remain in the tank.


Until sufficient fuel has been added, this warning lamp appears every time the ignition is switched on, accompanied by an audible warning and a message. This audible warning and message are repeated with increasing frequency as the fuel level drops towards "0".

Refuel as soon as possible to avoid running out.



With Stop & Start, never refuel with the system in STOP mode; you must switch off the ignition with the START/STOP button.


## Refuelling

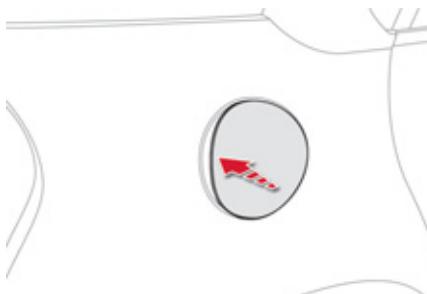

A label on the inside of the fuel filler flap reminds you of the type of fuel to use, depending on your engine type. Additions of fuel must be of at least 5 litres to be registered by the fuel gauge.

Opening the filler flap may result in an inrush of air. This is entirely normal and results from the sealing of the fuel system.

Press the rear edge of the flap to open it (the filler cap is part of it).

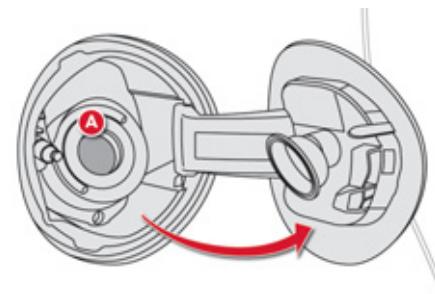

- ☞ Take care to select the pump that delivers the correct type of fuel for your vehicle.
- ☞ Introduce the nozzle so as to push in the metal non-return flap **A**.
- ☞ Make sure that the nozzle is pushed in as far as possible before starting to refuel (risk of blowback).
- ☞ Maintain this position throughout the refuelling operation.
- ☞ Push the fuel flap to close it.

**If you are filling your tank to the top, do not persist after the 3rd cut-off; this could cause malfunctions.**

The petrol or Diesel engine of your vehicle is fitted with a catalytic converter, a device which helps to reduce the level of harmful emissions in the exhaust gases.

**For petrol engines, you must use unleaded fuel.**

The filler neck is narrower, allowing only unleaded petrol nozzles to be introduced.


## Fuel cut-off

Your vehicle is equipped with a safety device which cuts off the fuel supply in the event of a collision.

! If you have put in the wrong fuel for your vehicle, you must have the fuel tank drained and filled with the correct fuel before starting the engine.

# Misfuel prevention (Diesel)\*

Mechanical device which prevents filling the tank of a Diesel vehicle with petrol. It avoids the risk of engine damage that can result from filling with the wrong fuel.

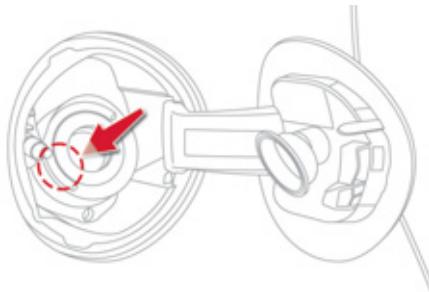

## Operation

When a petrol filler nozzle is introduced into the fuel filler neck of your Diesel vehicle, it comes into contact with the flap. The system remains closed and prevents filling.

**Do not persist but introduce a Diesel type filler nozzle.**

**i** It remains possible to use a fuel can to fill the tank.  
In order to ensure a good flow of fuel, do not place the nozzle of the fuel can in direct contact with the flap of the misfuel prevention device and pour slowly.

## Travelling abroad

As Diesel fuel pump nozzles may be different in other countries, the presence of the misfuel prevention device may make refuelling impossible. Before travelling abroad, we recommend that you check with the CITROËN dealer network, whether your vehicle is suitable for the fuel pumps in the country in which you want to travel.

\* Depending on country of sale.

## **Quality of the fuel used for petrol engines**

The petrol engines are perfectly compatible with E10 or E24 type petrol biofuels (containing 10 % or 24 % ethanol), conforming to European standards EN 228 and EN 15376.

E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

## **Quality of the fuel used for Diesel engines**

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Contact a CITROËN dealer or a qualified workshop.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).

# Running out of fuel (Diesel)



On vehicle fitted with HDi engines, the fuel system must be primed if you run out of fuel; refer to the corresponding engine compartment view.

## 1.6 litre HDi engine

- ☞ Fill the fuel tank with at least five litres of diesel.
- ☞ Open the bonnet.
- ☞ If necessary, unclip the styling cover for access to the priming pump.
- ☞ Squeeze and release the priming pump repeatedly until resistance is felt (there may be resistance at the first press).
- ☞ Operate the starter until the engine starts (if the engine does not start at the first attempt, wait around 15 seconds before trying again).
- ☞ If the engine does not start after a few attempts, operate the priming pump again then start the engine.
- ☞ Clip the styling cover back in place.
- ☞ Close the bonnet.

**i** If the tank on your vehicle is fitted with a misfuel prevention device, refer to the "Misfuel prevention (Diesel)" section.

**!** If the engine does not start first time, don't keep trying but start the procedure again from the beginning.

# Checking levels

Check all of these levels regularly, in line with the maintenance and warranty guide. Top them up if necessary, unless otherwise indicated. If a level drops significantly, have the corresponding system checked by a CITROËN dealer or a qualified workshop.

! Take care when working under the bonnet, as certain areas of the engine may be extremely hot (risk of burns) and the cooling fan could start at any time (even with the ignition off).

## Oil level

 The check is carried out either when the ignition is switched on using the oil level indicator in the instrument panel, or using the dipstick.

It will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.

It is normal to top up the oil level between two services (or oil changes). CITROËN recommends that you check the level, and top up if necessary, every 3 000 miles (5 000 kms). After topping up the oil, the check when switching on the ignition with the oil level indicator in the instrument panel is not valid during the 30 minutes after topping up.

## Engine oil change

Refer to the maintenance and warranty guide for details of the interval for this operation.

In order to maintain the reliability of the engine and emission control system, the use of additives in the engine oil is prohibited.

## Oil specification

The oil must be the correct grade for your engine and conform to the manufacturer's recommendations.

## Dipstick

There are two marks on the dipstick:



**A** = maximum

If you fill past this mark, contact a CITROËN dealer or a qualified workshop.

**B** = minimum

Top up the level through the oil filler orifice, using the correct grade of oil for your engine. The level must never be below this mark.

## Brake fluid level



The brake fluid level should be close to the "MAX" mark. If it is not, check the brake pad wear.

## Changing the fluid

Refer to the maintenance and warranty guide for details of the interval for this operation.

## Fluid specification

The brake fluid must conform to the manufacturer's recommendations and meet the DOT3 or DOT4 standard.

## Coolant level



The coolant level should be close to the "MAX" mark but should never exceed it.

When the engine is warm, the temperature of the coolant is regulated by the fan.

**The cooling fan may start after switching off the engine: take care with articles and clothing that might become caught by the fan blades.**

In addition, as the cooling system is pressurised, wait at least one hour after switching off the engine before carrying out any work.

To avoid any risk of scalding, unscrew the cap by two turns to allow the pressure to drop. When the pressure has dropped, remove the cap and top up the level.

## Fluid specification

The coolant must conform to the manufacturer's recommendations.

## Screenwash/headlamp wash level low

**SERVICE** In the case of vehicles fitted with headlamp washers, when the fluid reservoir low level is reached this warning lamp comes on in the instrument panel, accompanied by an audible signal and a message.

The warning lamp comes on when the ignition is switched on, or every time the stalk is operated, until the reservoir is refilled. Next time you stop, refill the screenwash / headlamp wash reservoir.

## Diesel fuel additive level (Diesel with particle emissions filter)

**SERVICE** The additive reservoir low level is indicated by fixed illumination of this warning lamp, accompanied by an audible signal and a message that the particle emissions filter additive level is too low.

### Topping up

The reservoir must be topped up without delay by a CITROËN dealer or a qualified workshop.

## Used products

! Avoid prolonged contact of used oil or fluids with the skin. Most of these fluids are harmful to health or indeed very corrosive.



Do not discard used oil or fluids into sewers or onto the ground. Take used oil to a CITROËN dealer or a qualified workshop (France) or to an authorised waste disposal site.

# Checks


Unless otherwise indicated, check these components in accordance with the maintenance and warranty guide and according to your engine. Otherwise, have them checked by a CITROËN dealer or a qualified workshop.

## 12 V battery



The battery does not require any maintenance. However, check that the terminals are clean and correctly tightened, particularly in summer and winter.

When carrying out work on the battery, refer to the "12 V battery" section for details of the precautions to be taken before disconnecting the battery and following its reconnection.

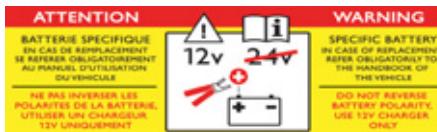

The presence of this label, in particular with the Stop & Start system, indicates the use of a specific 12 V lead-acid battery with special technology and specification. The involvement of a CITROËN dealer or a qualified workshop is essential when replacing or disconnecting the battery.

## Air filter and passenger compartment filter



Refer to the maintenance and warranty guide for details of the replacement intervals for these components.

Depending on the environment (e.g. dusty atmosphere) and the use of the vehicle (e.g. city driving), **replace them twice as often if necessary**.

A clogged passenger compartment filter may have an adverse effect on the performance of the air conditioning system and generate undesirable odours.

## Oil filter



Replace the oil filter each time the engine oil is changed. Refer to the maintenance and warranty guide for details of the replacement interval for this component.

## Particle emissions filter (Diesel)

### SERVICE

The start of saturation of the particle filter is indicated by the fixed illumination of this warning lamp accompanied by a warning message.

**i** As soon as the traffic conditions permit, regenerate the filter by driving at a speed of at least 40 mph (60 km/h) until the warning lamp goes off. If the warning lamp stays on, this indicates a low additive level.

On a new vehicle, the first particle filter regeneration operations may be accompanied by a "burning" smell, which is perfectly normal. Following prolonged operation of the vehicle at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust on acceleration. This does not affect the behaviour of the vehicle or the environment.

## Manual gearbox



The gearbox does not require any maintenance (no oil change). Refer to the maintenance and warranty guide for the details of the level checking interval for this component.

## 6-speed electronic gearbox



The gearbox does not require any maintenance (no oil change). Refer to the maintenance and warranty guide for details of the checking interval for this component.

## Automatic gearbox



The gearbox does not require any maintenance (no oil change). Refer to the maintenance and warranty guide for details of the level checking interval for this component.

## Brake pads



Brake wear depends on the style of driving, particularly in the case of vehicles used in town, over short distances. It may be necessary to have the condition of the brakes checked, even between vehicle services. Unless there is a leak in the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

## Brake disc wear



For information on checking brake disc wear, contact a CITROËN dealer or a qualified workshop.



To avoid damaging the electrical units, the use of a high pressure washer in the engine compartment is strictly prohibited.

## Electric parking brake



This system does not require any routine servicing. However, in the event of a problem, have the system checked by a CITROËN dealer or a qualified workshop.

For more information, refer to the "Electric parking brake - Operating faults" section.



Only use products recommended by CITROËN or products of equivalent quality and specification. In order to optimise the operation of units as important as those in the braking system, CITROËN selects and offers very specific products. After washing the vehicle, dampness, or in wintry conditions, ice can form on the brake discs and pads: braking efficiency may be reduced. Make light brake applications to dry and defrost the brakes.

# Petrol engines and gearboxes

Petrol engines	VTi 120	THP 155
Gearboxes	Manual (5-speed)	Manual (6-speed)
Model codes: 3D... 3E... 3A...	5FS0/1	5FV8 - 8/1
Cubic capacity (cc)	1 598	1 598
Bore x stroke (mm)	77 x 85.8	77 x 85.8
Max power*: EU standard (kW)	88	115
Max power engine speed (rpm)	6 000	6 000
Max torque: EU standard (Nm)	160	240
Max torque engine speed (rpm)	4 250	1 400
Fuel	Unleaded	Unleaded
Catalytic converter	yes	yes
Oil capacities (in litres)		
Engine (with filter replacement)	4.25	4.25

**3D...:** CITROËN C4 Picasso (5-seat).

**3E...:** CITROËN Grand C4 Picasso (5-seat).

**3A...:** CITROËN Grand C4 Picasso (7-seat).

# Petrol weights and towed loads (in kg)

Petrol engines	VTi 120	THP 155
Gearboxes	Manual (5-speed)	Manual (6-speed)
Model codes:	3D... 3E... 3A... 5FS0/1	3D... 3E... 3A... 5FV8 - 8/1
- Unladen weight	1 252 - 1 276 - 1 278	1 296 - 1 311 - 1 313
- Kerb weight*	1 327 - 1 351 - 1 353	1 371 - 1 386 - 1 388
- Gross vehicle weight (GVW)	1 900 - 2 060 - 2 110	1 940 - 2 100 - 2 150
- Gross train weight (GTW) on a 12 % gradient	2 900 - 2 860 - 2 860	3 360 - 3 350 - 3 350
- Braked trailer (within GTW limit) on a 10 % or 12 % gradient	1 000 - 800 - 750	1 420 - 1 250 - 1 200
- Braked trailer** (with load transfer within the GTW limit)	1 200 - 1 100 - 1 050	1 620 - 1 550 - 1 500
- Unbraked trailer	660 - 675 - 675	685 - 690 - 690
- Recommended nose weight	70 - 70 - 70	70 - 70 - 70

\* The kerb weight is equal to the unladen weight + driver (75 kg).

\*\* The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

# Diesel engines and gearboxes

Diesel engines	HDI 90	e-HDI 90 Airdream
Gearboxes	Manual (5-speed)	Electronic gearbox system (6-speed)
Model codes: 3D... 3E... 3A...	9HP0/1	9HP8/2PS
Cubic capacity (cc)	1 560	
Bore x stroke (mm)	75 x 88.3	
Max power*: EU standard (kW)	68	
Max power engine speed (rpm)	4 000	
Max torque: EU standard (Nm)	230	
Max torque engine speed (rpm)	1 750	
Fuel	Diesel	
Catalytic converter	yes	
Particle emission filter	yes	
<b>Oil capacities (in litres)</b>		
Engine (with filter replacement)	3.75	

.../S: e-HDI model fitted with Stop & Start.

3D...: CITROËN C4 Picasso (5-seat).

3E...: CITROËN Grand C4 Picasso (5-seat).

3A...: CITROËN Grand C4 Picasso (7-seat).

\* The maximum power corresponds to the value type-approved on a test bed, under conditions defined in European legislation (Directive 1999/99/EC).

# Diesel engines and gearboxes

Diesel engines	HDI 115	e-HDI 115 Airdream	
Gearboxes	Manual (6-speed)	Manual (6-speed)	Electronic gearbox system (6-speed)
Model codes: 3D... 3E... 3A...	9HC8/1	9HC8/1S	9HC8/1PS - 8/2PS
Cubic capacity (cc)	1 560	1 560	
Bore x stroke (mm)	75 x 88.3	75 x 88.3	
Max power*: EU standard (kW)	85	85	
Max power engine speed (rpm)	3 600	3 600	
Max torque: EU standard (Nm)	270	270 - 285	
Max torque engine speed (rpm)	1 750	1 750	
Fuel	Diesel	Diesel	
Catalytic converter	yes	yes	
Particle emission filter	no	yes	
<b>Oil capacities (in litres)</b>			
Engine (with filter replacement)	3.75	3.75	

.../S: e-HDI model fitted with Stop & Start.

**3D...:** CITROËN C4 Picasso (5-seat).

**3E...:** CITROËN Grand C4 Picasso (5-seat).

**3A...:** CITROËN Grand C4 Picasso (7-seat).

\* The maximum power corresponds to the value type-approved on a test bed, under conditions defined in European legislation (Directive 1999/99/EC).

# Diesel engines and gearboxes

Diesel engines	e-HDi 150 Airdream	
Gearboxes	Manual (6-speed)	Automatic (6-speed)
Model codes: 3D... 3E... 3A...	AHXM/S - M/1S	
Cubic capacity (cc)		1 997
Bore x stroke (mm)		85 x 88
Max power*: EU standard (kW)		110
Max power engine speed (rpm)		3 750
Max torque: EU standard (Nm)		370
Max torque engine speed (rpm)		1 750
Fuel		Diesel
Catalytic converter		yes
Particle emission filter		yes
<b>Oil capacities (in litres)</b>		
Engine (with filter replacement)	6.1	

.../S: e-HDi model fitted with Stop & Start.

3D...: CITROËN C4 Picasso (5-seat).

3E...: CITROËN Grand C4 Picasso (5-seat).

3A...: CITROËN Grand C4 Picasso (7-seat).

\* The maximum power corresponds to the value type-approved on a test bed, under conditions defined in European legislation (Directive 1999/99/EC).

# Diesel weights and towed loads (in kg)

Diesel engines	HDi 90	e-HDi 90 Airdream
Gearboxes	Manual (5-speed)	Electronic gearbox system (6-speed)
Model codes:	3D 9HP0/1	3D... 3E... 3A 9HP8/2PS
- Unladen weight	1 279	1 289 - 1 314 - 1 316
- Kerb weight*	1 354	1 364 - 1 389 - 1 391
- Gross vehicle weight (GVW)	1 920	1 940 - 2 110 - 2 160
- Gross train weight (GTW) on a 12% gradient	3 170	3 140 - 3 160 - 3 160
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 250	1 200 - 1 050 - 1 000
- Braked trailer** (with load transfer with the GTW limit)	1 450	1 400 - 1 350 - 1 300
- Unbraked trailer	675	680 - 690 - 695
- Recommended nose weight	70	70 - 70 - 70

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

\* The kerb weight is equal to the unladen weight + driver (75 kg).

\*\* The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

# Diesel weights and towed loads (in kg)

Diesel engines	HDI 115	e-HDI 115 Airdream	
Gearboxes	Manual (6-speed)	Manual (6-speed)	Electronic gearbox system (6-speed)
Model codes:	3D... 3E... 3A... 9HC8/1	3D... 3E... 3A... 9HC8/1S	3D... 3E... 3A... 9HC8/1PS - 8/2PS
- Unladen weight	1 298 - 1 318 - 1 320	1 298 - 1 318 - 1 320	1 295 - 1 318 - 1 320
- Kerb weight*	1 373 - 1 393 - 1 395	1 373 - 1 393 - 1 395	1 370 - 1 393 - 1 395
- Gross vehicle weight (GVW)	1 940 - 2 110 - 2 150	1 940 - 2 110 - 2 150	1 940 - 2 110 - 2 150
- Gross train weight (GTW) on a 12% gradient	2 740 - 2 910 - 2 950	3 340 - 3 350 - 3 350	3 340 - 3 350 - 3 350
- Braked trailer (within GTW limit) on a 10% or 12% gradient	800 - 800 - 800	1 400 - 1 240 - 1 200	1 400 - 1 240 - 1 200
- Braked trailer** (with load transfer with the GTW limit)	800 - 800 - 800	1 600 - 1 540 - 1 500	1 600 - 1 540 - 1 500
- Unbraked trailer	685 - 695 - 695	685 - 695 - 695	685 - 695 - 695
- Recommended nose weight	70 - 70 - 70	70 - 70 - 70	70 - 70 - 70

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

\* The kerb weight is equal to the unladen weight + driver (75 kg).

\*\* The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

# Diesel weights and towed loads (in kg)

Diesel engines	e-HDi 150 Airdream	
Gearboxes	Manual (6-speed)	Electronic gearbox system (6-speed)
Model codes:	3D... 3E... 3A... AHXM/S - M/1S	3E... 3A ... AHXT/S - T/1S
- Unladen weight	1 415 - 1 428 - 1 430	1 474 - 1 476
- Kerb weight*	1 490 - 1 503 - 1 505	1 549 - 1 551
- Gross vehicle weight (GVW)	2 030 - 2 200 - 2 250	2 200 - 2 280
- Gross train weight (GTW) on a 12% gradient	3 530 - 3 560 - 3 650	3 580 - 3 580
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 500 - 1 450 - 1 400	1 380 - 1 300
- Braked trailer** (with load transfer with the GTW limit)	1 700 - 1 750 - 1 700	1 680 - 1 600
- Unbraked trailer	745 - 750 - 750	750 - 750
- Recommended nose weight	70 - 70 - 70	70 - 70

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).




High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

\* The kerb weight is equal to the unladen weight + driver (75 kg).

\*\* The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

# Dimensions (in mm)




These dimensions have been measured on a vehicle that is not loaded.

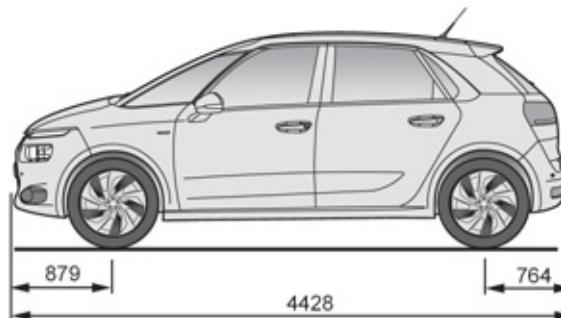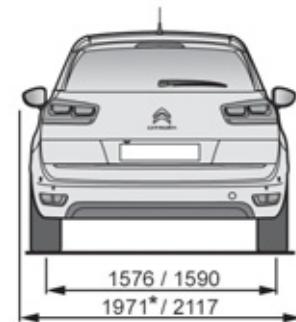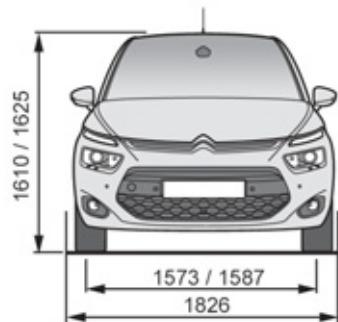

\* Mirrors folded.

## Dimensions (in mm)


These dimensions have been measured on an unladen vehicle.

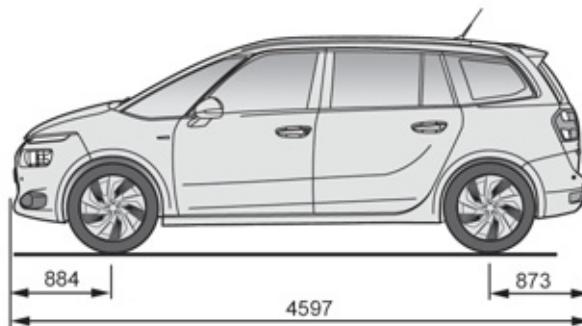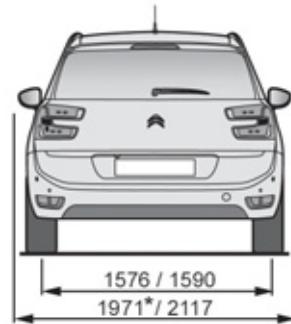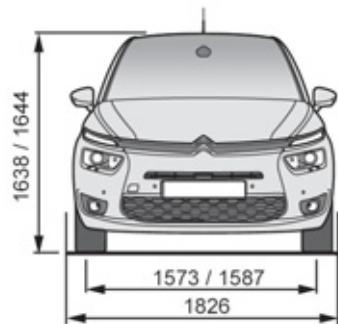

\* Mirrors folded.

# Identification markings

Various visible markings for the identification of your vehicle.

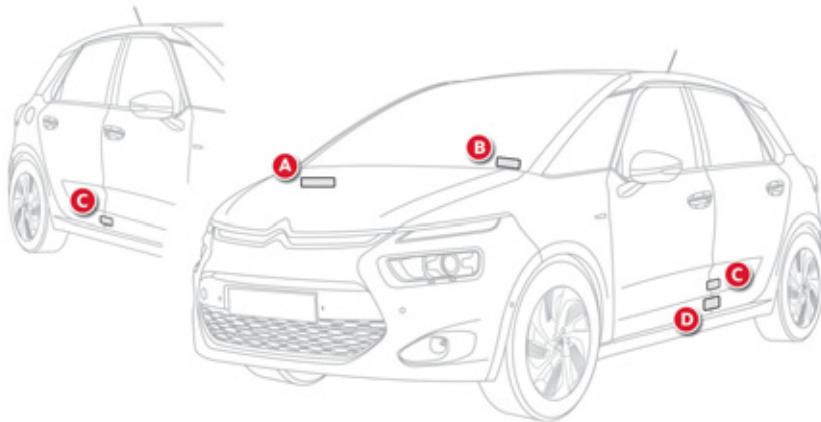

## A. Vehicle Identification Number (VIN) under the bonnet.

This number is engraved on the chassis near the right hand front wheel arch.

## B. Vehicle Identification Number (VIN) on the windscreen lower cross member.

This number is indicated on a self-adhesive label which is visible through the windscreen.

## C. Manufacturer's label.

This self-destroying label affixed to the centre pillar, right or left hand side, contains the following information.

- the manufacturer's name,
- the European whole vehicle type approval number,
- the vehicle identification number (VIN),
- the maximum authorised weight (gross vehicle weight),
- the maximum authorised weight with trailer (gross train weight),
- the maximum front axle weight,
- the maximum rear axle weight.

## D. Tyre/paint label.

This label, affixed to the centre pillar, on the driver's side, contains the following information.


- the tyre inflation pressures with and without load,
- the tyre sizes (including the tyre load index and speed rating),
- the inflation pressure for the spare wheel,
- the paint colour code.

**Tip** The tyre pressures must be checked when the tyres are cold, at least once a month.



If the tyre pressures are too low, this increases fuel consumption.



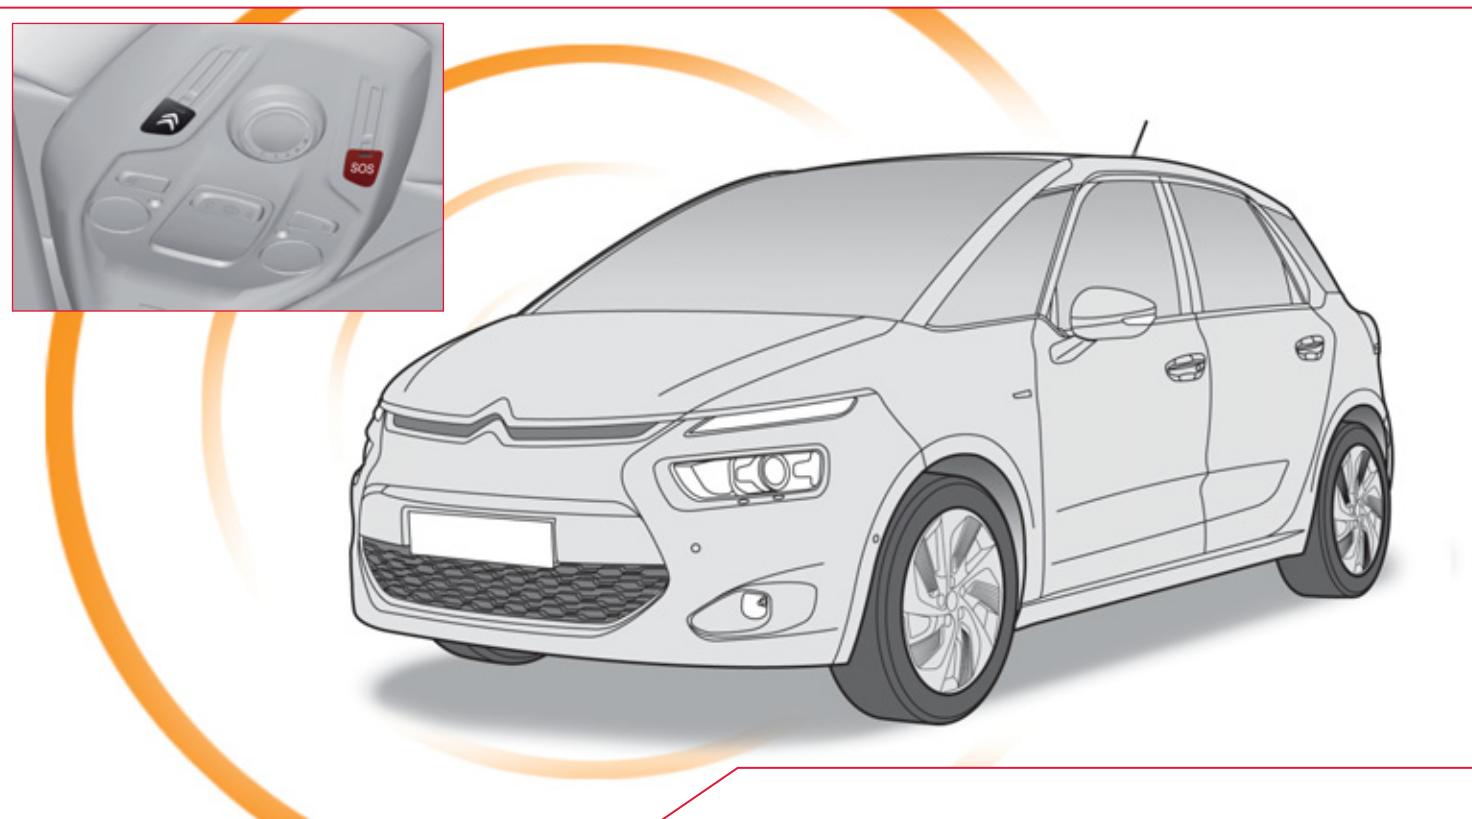

## EMERGENCY OR ASSISTANCE CALL

# EMERGENCY OR ASSISTANCE CALL

## CITROËN Localised Emergency Call



In an emergency, press this button for more than 2 seconds. Flashing of the green LED and a voice message confirm that the call has been made to the "CITROËN Localised Emergency Call" service\*.

Pressing this button again immediately cancels the request. The green LED goes off.

The green LED remains on (without flashing) when communication is established. It goes off at the end of communication.

This call is dealt with by the "CITROËN Localised Emergency Call" centre which receives locating information from the vehicle and can send a detailed alert to the appropriate emergency services. In countries in which the team is not operational, or when the locating service has been expressly declined, the call is dealt with directly by the emergency services (112) without the vehicle location.

**!** If an impact is detected by the airbag control unit, and independently of the deployment of any airbags, an emergency call is made automatically.

If you benefit from the CITROËN eTouch offer, you also have available additional services in your MyCITROËN personal space, via the CITROËN Internet website in your country, accessible on [www.citroen.com](http://www.citroen.com).

\* These services are subject to conditions and availability.  
Consult a CITROËN dealer.

## CITROËN Localised Assistance Call



Press this button for more than 2 seconds to request assistance if the vehicle breaks down. A voice message confirms that the call has been made\*.

Pressing this button again immediately cancels the request. The cancellation is confirmed by a voice message.

## Operation of the system



When the ignition is switched on, the green LED comes on for 3 seconds indicating that the system is operating correctly.



If the orange LED flashes: there is a system fault.  
If the orange LED is on continuously: the backup battery must be replaced.  
In either case, contact a CITROËN dealer.

If you purchased your vehicle outside the CITROËN dealer network, we invite you to have a dealer check the configuration of these services and, if desired, modified to suit your wishes. In a multi-lingual country, configuration is possible in the official national language of your choice.

For technical reasons, particularly to improve the quality of Telematic services to customers, the manufacturer reserves the right to carry out updates to the vehicle's on-board telematic system.



# Touch screen tablet

## SATELLITE NAVIGATION SYSTEM

## MULTIMEDIA AUDIO SYSTEM

## BLUETOOTH TELEPHONE



The system is protected in such a way that it will only operate in your vehicle.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off following the activation of the energy economy mode.

## CONTENTS

<b>01</b>	<b>General operation</b>	<b>p. 338</b>
<b>02</b>	<b>First steps - Control panel</b>	<b>p. 340</b>
<b>03</b>	<b>Steering mounted controls</b>	<b>p. 341</b>
<b>04</b>	<b>Media</b>	<b>p. 342</b>
<b>05</b>	<b>Navigation</b>	<b>p. 358</b>
<b>06</b>	<b>Configuration</b>	<b>p. 378</b>
<b>07</b>	<b>Connected services</b>	<b>p. 388</b>
<b>08</b>	<b>Telephone</b>	<b>p. 390</b>
<b>Frequently asked questions</b>		<b>p. 400</b>

# 01 GENERAL OPERATION



**"Air conditioning"**  
allows control of the settings for temperature, air flow.




**"Driving assistance"**  
allows certain vehicle functions to be activated, deactivated and settings adjusted.




**"Media"**  
allows selection of a radio station, MP3 music, display of photographs.



**"Navigation"**  
allows settings for navigation and the choice of a destination (depending on version).

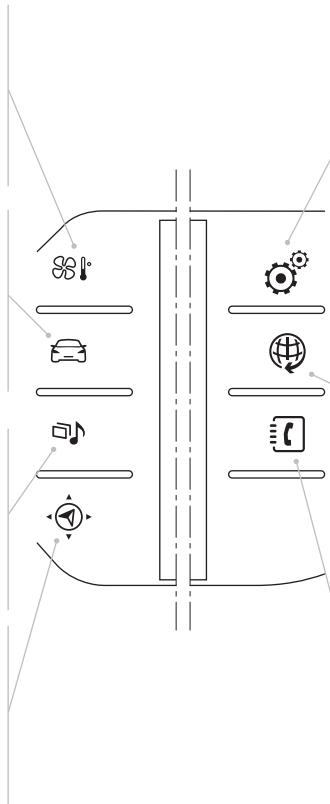

**"Configuration"**  
allows settings for sound, the colour scheme.

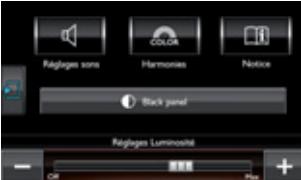

**"Connected services"**  
allows connection to an applications portal to facilitate, make safe and personalise journeys by means of a connection key available on subscription from a CITROËN dealer.



**"Telephone"**  
allows the connection of a mobile telephone via Bluetooth so as to be able to make calls safely.




# 01 GENERAL OPERATION

Use the buttons on either side of the touch screen tablet for access to the menus, then press the virtual buttons on the touch screen tablet.

Each menu is displayed on one or two pages (primary page and secondary page).



An example of using the touch screen tablet:

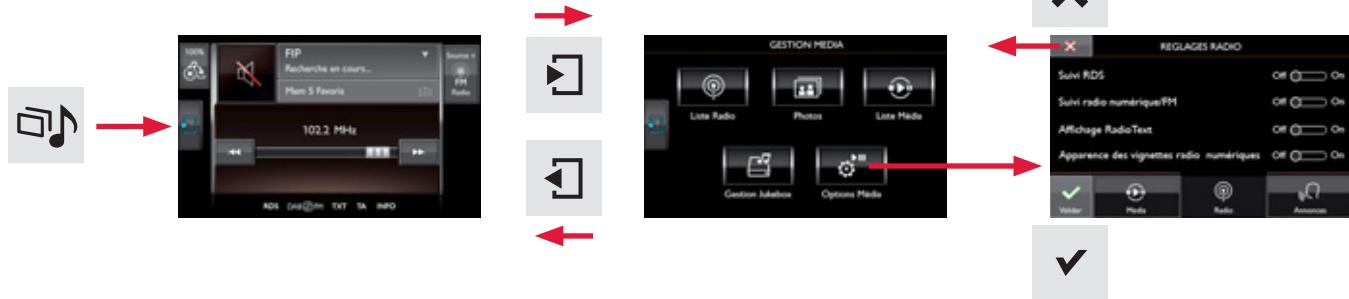


These screens are the representation of a colour scheme.  
To change the colour scheme refer to the "**CONFIGURATION**" section.



In very hot conditions, the system may go into stand-by (screen and sound completely off) for a minimum period of 5 minutes.


## 02 FIRST STEPS

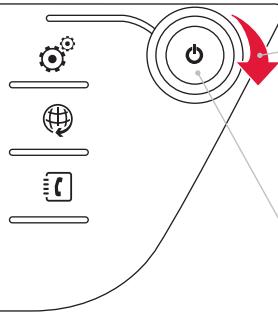

Volume adjustment (each source is independent, including Traffic announcements (TA) and navigation instructions).

**i** Following prolonged operation in sunny conditions, the volume may be limited to protect the system. The return to normal takes place when the temperature in the passenger compartment drops.

Press to mute the sound.

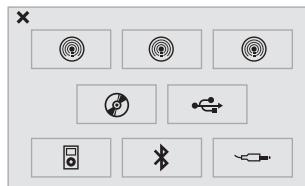

Selecting the audio source (depending on version):

- "FM" / "AM" / "DAB"\*\* radio wavebands.
- "USB" memory stick.
- CD player (located in the glove box)\*.
- Jukebox\*, after first copying audio files to the internal memory of the touch screen tablet.
- Telephone connected by Bluetooth and Bluetooth audio streaming.
- Media player connected to the auxiliary socket (jack, cable not supplied).




**i** The screen is of the "resistive" type, it is necessary to press firmly, particularly for "flick" gestures (scrolling through a list, moving the map...). A simple wipe will not be enough. pressing with more than one finger is not recognised.

The screen can be used when wearing gloves. This technology allows use at all temperatures.



**!** To clean the screen, use a soft non-abrasive cloth (spectacles cloth) without any additional product.  
Do not use pointed objects on the screen.  
Do not touch the screen with wet hands.

\* Depending on equipment.

# 03 STEERING MOUNTED CONTROLS

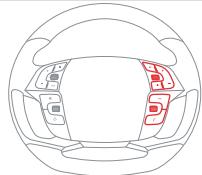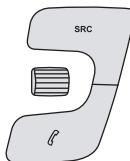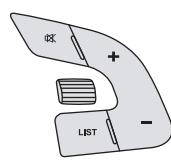

	- Mute.
	- Volume increase / decrease.
	- Radio: display the list of stations. Media: display the list of tracks.
	- Rotation Radio: automatic selection of next / previous frequency. Media: previous / next track. - Press then rotation: access to preset stations.
	- Change the audio source.
	- Move in the menus. Zoom the map in and out Press: confirmation, choice of source accepted
	- TEL button: Access to the telephone menu: Call list / Contacts / Hands-free mode / Answer / Hang up. Accept an incoming call Long press: reject an incoming call or end the current call.

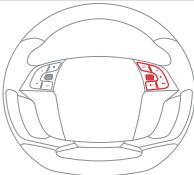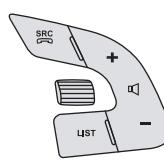

	- Short press: Change the multimedia source. Accept an incoming call. Call in progress: access to the telephone menu (End call, Secret mode, Hands-free mode). - Long press: Reject an incoming call. End a call in progress. Other than call in progress: access to the telephone menu (Dial, Contacts, Call log, Answerphone).
	- Rotation. Radio: automatic search for previous / next station. Media: previous / next track. - Press: confirmation.
	- Short press: Radio: display the list of stations. Media: display the list of tracks. - Long press: update the list of stations received.
	- Increase volume. - Decrease volume.

# 04 MEDIA



Level 1






"Media"  
Primary page

Level 2



>List of FM stations

Level 3

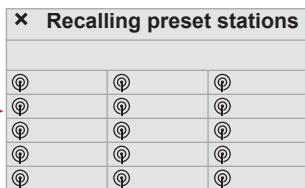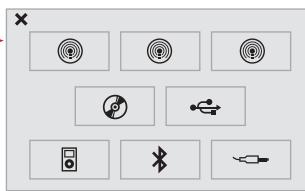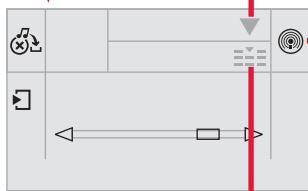

Recalling preset stations

Level 1	Level 2	Level 3	Comments
 	<b>Media</b> ↓ <b>List</b> 	▼ <b>List of FM stations</b>	Press on a radio station to select it.
		✓ <b>Confirm</b>	Save the settings.
 	<b>Media</b> ↓ <b>Source</b> 	 <b>FM Radio</b>  <b>DAB Radio</b>  <b>AM Radio</b>  <b>Jukebox</b>  <b>CD</b>  <b>USB</b>  <b>iPod</b>  <b>Bluetooth</b>  <b>AUX</b>  <b>Video</b>	Select change of source
 	<b>Media</b> ↓ <b>Memo</b> 	☰ <b>Recall of preset stations</b>	Press on a radio station to select it.

# 04 MEDIA




Level 1





"Media"



Secondary page

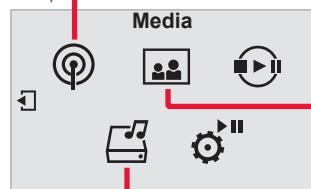

Level 2

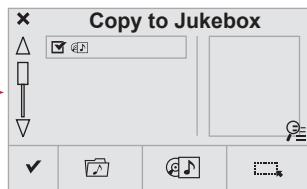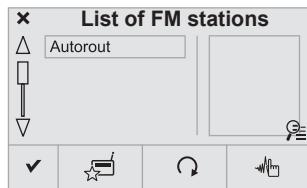

Level 3



Level 1		Level 2		Level 3		Comments	
  	<b>Media</b> ↓ <b>Secondary page</b> ↓ <b>Radio list</b> →	 <b>Preset</b>				Press a radio station to select it.	
		 <b>Update list</b>				Update the list of stations received.	
		 <b>Frequency</b>				Enter the desired radio frequency.	
		 <b>Confirm</b>				Save the settings.	
  	<b>Media</b> ↓ <b>Secondary page</b> ↓ <b>Photos</b> →	 <b>Page selection</b>				Display the selected photo full screen.	
		 <b>Rotate</b>				Rotate the photo 90°.	
		 <b>Select all</b>				Select all the photos in the list. Press again to deselect.	
		 <b>Slideshow</b>	 <b>Previous photo.</b>			Display the photos in sequence, full screen.	
			  <b>Pause / Play.</b>				
			 <b>Next photo.</b>				
		 <b>Confirm</b>				Save the settings.	
  	<b>Media</b> ↓ <b>Secondary page</b> ↓ <b>Manage Jukebox</b> →	 <b>Sort by folder</b>					
		 <b>Sort by album</b>				Choose the selection mode.	
		 <b>Select all</b>					
		 <b>Magnifying glass</b>	 <b>Create folder</b>			Choose the handling mode.	
			 <b>Rename</b>				
			 <b>Delete</b>				
			 <b>Select all</b>				
			 <b>Confirm</b>				
			 <b>Copy</b>				

# 04 MEDIA



Level 1

Level 2




Level 3



"Media"



Secondary page

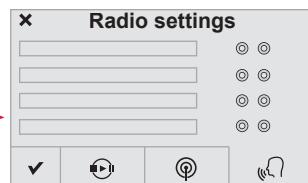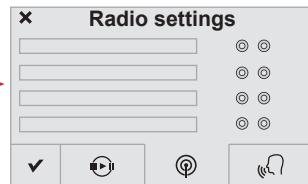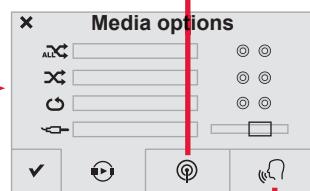

Level 1		Level 2		Level 3		Comments	
	Media ↓ Secondary page ↓ Media list →						Presentation of the last media used.
					Random (all tracks): Random (current album): Loop: Aux. amplification		Choose the play settings.
	Media ↓ Secondary page ↓ Media options →				RDS options DAB/FM options Display Radio Text DAB radio thumbnails		Activate or deactivate the options.
					Traffic announcements (TA) Weather Varied - Sport Alert settings		Activate or deactivate the options.
					Confirm		Save the settings.

# 04 RADIO

## Selecting a station


**1a** Press on **Media** to display the primary page.  
or  
Press on **Media** to display the primary page  
then go to the secondary page.



**2a** Select "**List**" in the primary page.  
or  
Select "**Radio list**" in the secondary page.




**3a** Select a radio station from the list offered.

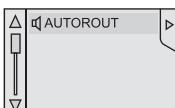

**3b** Select "**Update list**" to refresh the list.



**1b** Press **Media** to display the primary page then select "**Memo**".

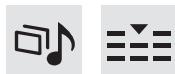

OR

**2b** Select a preset radio station in the list.



**1** If necessary, select change of source.



**2** Select "**FM Radio**" or "**AM Radio**".



! The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

# 04 RADIO

## Changing a radio frequency

**1a** Press on **Media** to display the primary page.



**2a** **By automatic frequency search**

Press **◀** or **▶** to move the cursor for an automatic search down or up for a radio frequency.



OR

**1b** Press on **Media** to display the primary page then press on the secondary page.



**2b** Press on "Enter frequency" to display the primary page then press on the secondary page.



THEN

**3a**  
Select change source.



**3b**  
Select "FM Radio" or "AM Radio".



**3c**  
Enter the frequency in full (e.g.: 92.10 MHz) using the keypad then "Confirm".



OR

**3d** **By alphabetical list**

Press the current radio band then choose the radio station from the list offered.



# 04 RADIO

## Preset a station

- 1 Select a radio station or frequency (refer to the corresponding section).

- 2 Press on "Preset".



- 3 Select a number in the list to preset the previously chosen radio station.

A long press on a number presets (memorises) the station.

Or

A press on this button presets all of the stations one after the other.



## Recall pre-set stations

Press on **Media** to display the primary page then select "**Memo**".



## Activate/ Deactivate RDS

- 1 Press on **Media** to display the primary page then go to the secondary page.



- 2 Select "**Settings**".



- 3 Select "**Radio**".



- 4 Activate/deactivate "**RDS options**".



**i** RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

# 04 RADIO

## DAB (Digital Audio Broadcasting) - Digital radio

! Digital radio provides higher quality reception and also the graphical display of current information on the radio station, by selecting "Video mode" in "Radio settings".  
The range of all stations available is displayed in alphabetical order.

1 Press on **Media** to display the primary page.



2 Select change of source.




3 Select "DAB Radio".



4 Select "List" in the primary page.  
or  
Select "Radio list" in the secondary page.



5 Select the radio station from the list offered.

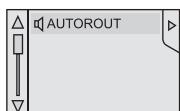

Automatic DAB-FM station tracking allows you to continue listening to the same station, by temporarily switching to the equivalent analogue station until the digital signal is stable again.

1 Press on **Media** to display the primary page then go to the secondary page.



2 Select "Settings".



3 Select "RADIO".



4 Select "Digital/FM station tracking" then "Confirm".



# 04 MUSIC

## CD, MP3 CD, USB player, auxiliary input




Insert the CD in the player, insert the USB memory stick in the USB player or connect the USB peripheral to the USB port using a suitable cable (not supplied)



The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick. However, the system memorises these lists and if they are not modified, the loading time will be shorter.

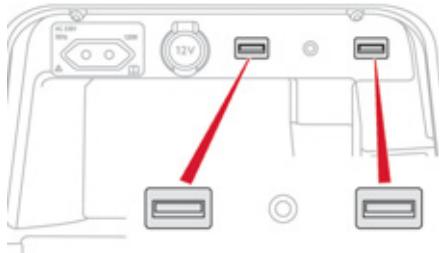


### Selection of source

1


Press on **Media** to display the primary page.

2

Select change of source then choose the source.

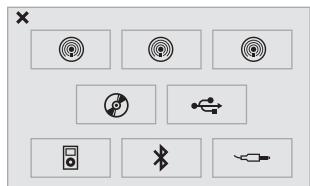

The steering mounted **SRC** (source) button can be used to go to the next media source, available if the source is active.

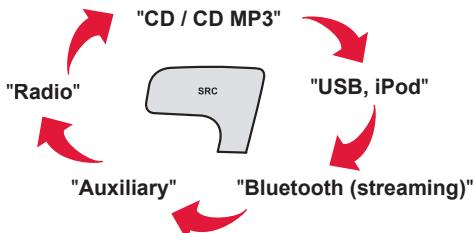

# 04 MUSIC

## CD, MP3 CD / USB player

### Information and advice



The audio equipment will only play audio files with ".wma, .aac, .flac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode.

No other type of file (.mp4, ...) can be played.

WMA files must be of the standard wma 9 type.

The sampling rates supported are 11, 22, 44 and 48 KHz.



It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ü) to avoid any playing and displaying problems.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



The system supports USB mass storage devices, BlackBerry® devices or Apple players via the right hand USB port. The adaptor cable is not supplied.

Control of the peripheral device is with the audio system controls. Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).



In order to be read, a USB memory stick must be formatted FAT 16 or 32.



The system does not support two identical devices connected at the same time (two memory sticks, two Apple® players) but it is possible to connect one memory stick and one Apple® player at the same time.



It is recommended that official Apple® USB cables are used to ensure correct operation.

## 04 MUSIC

### Selecting a track to play

Previous track.	 /  	
Next track.	 /  	
Previous folder.		
Next folder.		
Pause.		
List of USB or CD tracks and folders.		
Up or down in the list.	 	
Confirm, next menu level.		
Up one menu level.		

# 04 MUSIC

## Connecting APPLE® players

**1** For issues related to the power consumption of devices, connect the Apple® player to the right hand USB port using a suitable cable (not supplied).

Play starts automatically.



**2** Control is via the audio system.

**i** The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).

The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

**i** Copies of photos and album artwork are not compatible with the audio system. These appear only with a USB memory stick.

**!** The version of software in the audio system may not be compatible with the generation of your Apple® player.

The list of devices compatible with software versions is available from CITROËN dealers.

## Audio streaming



Streaming allows audio files on your telephone to be played via the vehicle's speakers.

**1**

Connect the telephone : see the "Telephone" section, then "Bluetooth".

Choose the "Audio" or "All" profile.

**2**

If play does not start automatically, it may be necessary to start the audio playback from the telephone.

Control is from the peripheral device or by using the audio system buttons.

**!**


Once connected in streaming mode, the telephone is considered to be a media source.

It is recommended that you activate "Repeat" on the Bluetooth peripheral.

## 04 MUSIC

### Using the auxiliary input (AUX) (cable not supplied)

1 Connect the portable device (MP3 player...) to the auxiliary JACK socket using an audio cable.

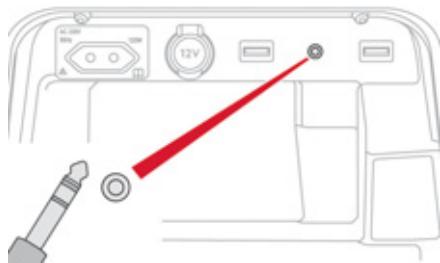

2 Select **Media** to display the primary page.



3 Select change the source.



4 Select the **AUXILIARY** source.



**i** First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.  
Display and management of the controls are via the portable device.

# 04 MUSIC

## Managing the Jukebox

1

Connect the device (MP3 player...) to the USB port or auxiliary socket using a suitable audio cable.

i

When no audio file is copied to the system with a capacity of 8GB, all of the Jukebox function symbols are greyed and are not available.

2

Select "Media list".



3

Select copy "Copy Jukebox".



4

Select "Sort by folder" or "Sort by album".



5

Select the magnifying glass to enter the folder or album and select audio file by audio file.



6

Select "Confirm" then "Copy".



7

Select "New folder" to create a folder structure in the Jukebox or select "Keep structure" to retain the structure from the device.



8

While copying the system returns to the primary page; you can go back to the copy view at any time by selecting this button.



# 05 NAVIGATION




Level 1




**"Navigation"**

Primary page

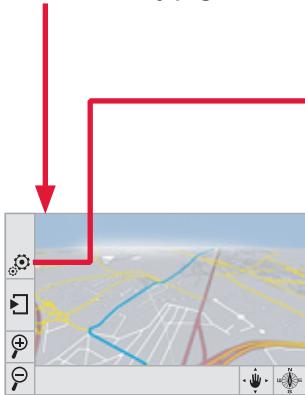


Level 2


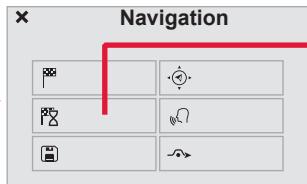


**Navigation**

Level 3

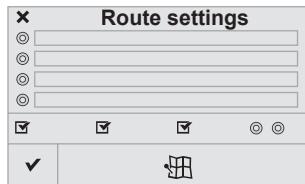

**Route settings**

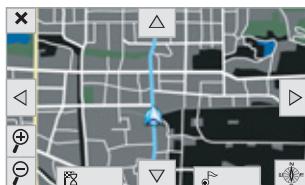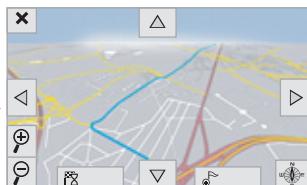

Level 1		Level 2		Level 3		Comments	
  	<p><b>Navigation</b></p> <p>↓</p> <p><b>Settings</b></p> <p><b>Navigation</b></p> <p>→</p>	 	<p><b>Recent destinations</b></p> <p><b>Calculator criteria</b></p>	        	<p>Fastest</p> <p>Shortest</p> <p>Time/distance</p> <p>Ecological</p> <p>Tolls</p> <p>Ferries</p> <p>Strict - Close</p> <p>Show route on map</p> <p>Confirm</p>	<p>Display recent destinations</p> <p>Choose the navigation criteria. The map displays the route chosen according to these criteria.</p> <p>Display the map and start navigation.</p> <p>Save the options.</p> <p>Save the current address.</p> <p>Delete the navigation information.</p> <p>Choose the volume for voice and announcement of street names.</p> <p>Detour from your initial route by a certain distance.</p>	
  	<p><b>Navigation</b></p> <p>↓</p> <p><b>Map</b></p> <p>→</p>	     					

# 05 NAVIGATION




Level 1



"Navigation"



Secondary page

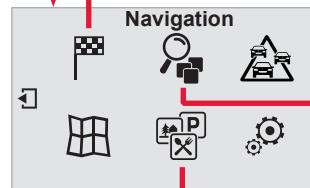

Level 2

Enter destination

Les trois moutiers

Search for a point of interest

Point of interest displayed on the map

Level 3

Enter address

Contacts


Search for a point of interest

For managing contacts and their addresses, refer to the "Communications" section.

To use the telephone functions, refer to the "Communications" section.

Level 1	Level 2	Level 3	Comments
  		     	<p>Curr. location</p> <p>Address settings</p> <p>Save the current address.</p> <p>Add a waypoint to the route.</p> <p>Press to calculate the route.</p>
		    	<p>Addresses</p> <p>Select a contact then calculate the route.</p>
	   		<p>From map</p> <p>Add waypoint</p> <p>Stop navigation</p> <p>Navigate to</p> <p>Display the map and zoom to view the roads.</p> <p>Create, add or delete a waypoint or view the itinerary.</p> <p>Delete navigation information.</p> <p>Press to calculate the route.</p>
  		     	<p>List of categories available.</p> <p>After choosing the category, select the points of interest.</p> <p>Save the settings.</p>
  		   	<p>Choose the display settings for POIs.</p> <p>Save the options.</p>

# 05 NAVIGATION

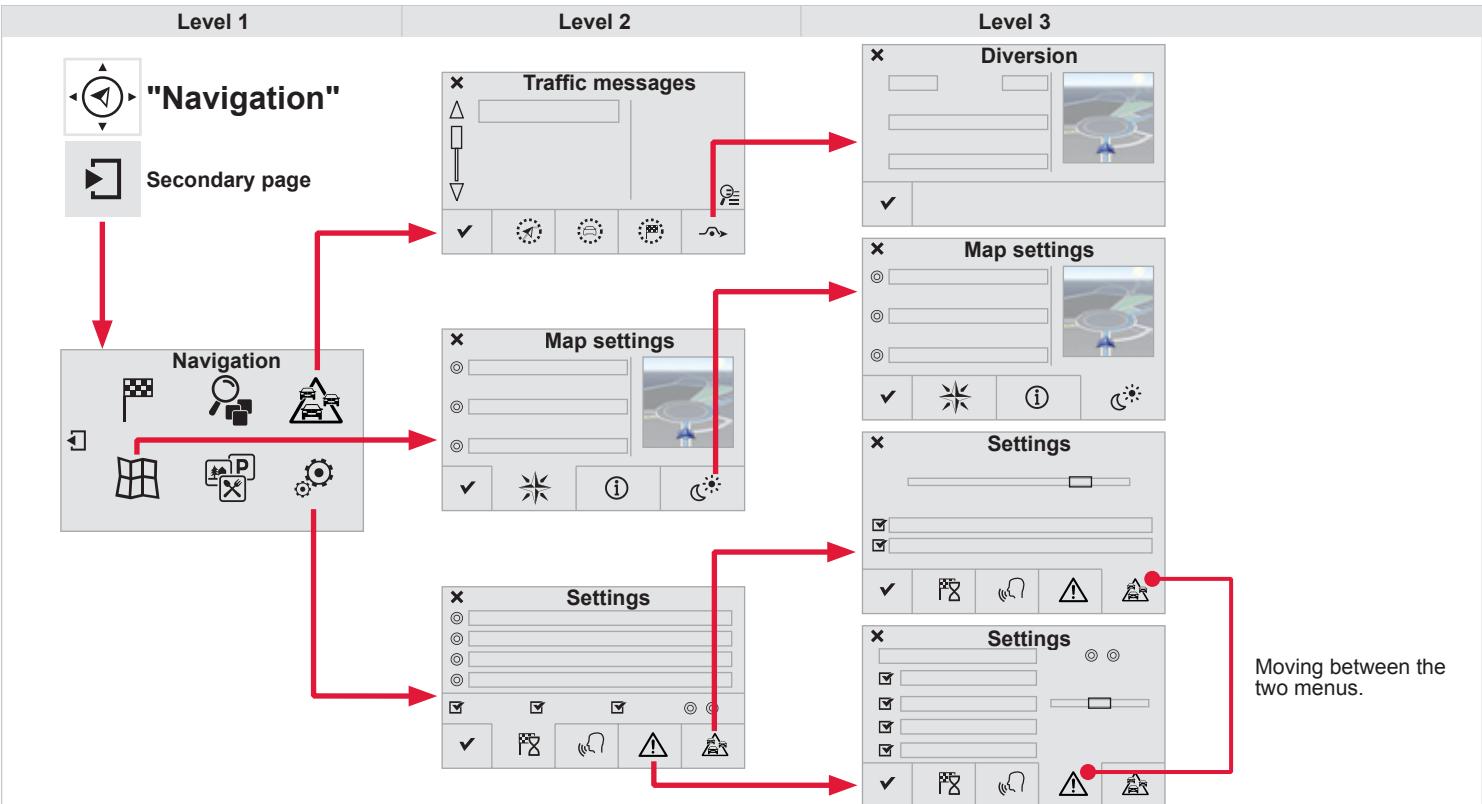

Level 1	Level 2	Level 3	Comments
 <b>Navigation</b>  <b>Secondary page</b>  <b>Traffic messages</b> →	 <b>On the route</b>  <b>Around</b>  <b>Near destination</b>  <b>Detour</b>  <b>Finish</b>	 Detour over a distance  Recalculate route	<p>Settings for the choice of messages and the filter radius.</p>
			Save the options.
 <b>Navigation</b>  <b>Secondary page</b>  <b>Map settings</b> →	 <b>Orientation</b>  <b>News</b>  <b>Aspect</b>  <b>Confirm</b>	 Flat view north heading  Flat view vehicle heading  Perspective view  "Day" map colour  "Night" map colour  Automatic day/night	<p>Choose the display and orientation of the map.</p>
			Save the settings.
 <b>Navigation</b>  <b>Secondary page</b>  <b>Settings</b> →	 <b>Route settings</b>  <b>Voice synthesis</b>  <b>Alert!</b>  <b>Traffic options</b>  <b>Confirm</b>		<p>Enter settings and choose the volume for the voice and announcement of street names.</p>
			Save the options.

# 05 NAVIGATION - GUIDANCE

## Choosing a new destination

### Towards a new destination

1

Press on **Navigation** to display the primary page then go to the secondary page.



2

Select "**Enter destination**".



3

Select "**Address**".



4

Select the "**Country**:" from the list offered then in the same way : the "**City**:" or its post code, the "**Road**:", the "**N°**:". Confirm each time.

▼	FRANCE	▼
▼	PARIS	▼
▼	Blvd Hossein	▼
N°/A	20	



Select "**Save**" to save the address entered as a contact entry.  
The system allows up to 200 entries.



5

Select "**Navigate to**".



6

Choose the navigation criteria : "**Fastest**" or "**Shortest**" or "**Time/distance**" or "**Ecological**".



7

Choose the restriction criteria : "**Include tollroads**", "**Include ferries**", "**Traffic**", "**Strict**", "**Close**".



8

Select "**Confirm**" or press "**Show route on map**" to start navigation guidance.



i

To delete navigation information, press on "**Settings**" then "**Stop navigation**".



To restore the navigation information press on "**Settings**" then "**Resume navigation**".



# 05 NAVIGATION - GUIDANCE

## Towards a recent destination

- 1 Press on **Navigation** to display the primary page then go to the secondary page.



- 2 Select "**Enter destination**".



- 3 Select an address from the list offered.



- 4 Select "**Navigate to**".  
Select the criteria then "**Confirm**" or press "**Show route on map**" to start guidance.



## Towards a contact

**i** Navigation towards a contact imported from a telephone is only possible if the address entered is compatible with the system.

- 1 Press on **Navigation** to display the primary page then go to the secondary page.




- 2 Select "**Enter destination**".



- 3 Select "**Contacts**".



- 4 Select a destination from the contacts in the list offered.

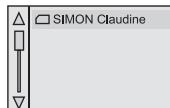

- 5 Select "**Navigate to**".  
Select the criteria then "**Confirm**" to start guidance.



# 05 NAVIGATION - GUIDANCE

## Towards GPS coordinates

- 1 Press on **Navigation** to display the primary page then go to the secondary page.



- 2 Select "Enter destination".



- 3 Select "Address".



- 4 Enter the "Longitude:" then the "Latitude:". 6°54'689"

- 5 Select "Navigate to".  
Select the criteria then "Confirm" or press "Show route on map" to start guidance.



## Towards a point on the map

- 1 Press on **Navigation** to display the primary page then go to the secondary page.



- 2 Select "Enter destination".



- 3 Select "From map".



- 4 Zoom in on the map then select the point.



- 5 A long press displays the surrounding tourist attractions.

# 05 NAVIGATION - GUIDANCE

## Towards points of interest (POI)

1

Press on **Navigation** to display the primary page then go to the secondary page.



2

Select "**Search for a point of interest**".



3

Select "**All POIs**" or "**Garage**" or "**Dining/ hotels**" or "**Personal**" or "**By name**".



4

Select a category from the list offered.



5

Select "**Search**".



Points of Interest (POI) show all of the locations of services nearby (hotels, retail outlet, airports, ...).

6

Select a point of interest from the list offered.



7

Select "**Navigate to**".



i

An annual mapping update allows new points of interest to be presented to you.  
You can also update the Risk areas / Danger areas every month.  
The detailed procedure is available on <http://citroen.navigation.com>.

## 05 NAVIGATION - GUIDANCE

### Towards points of interest (POI)

1

Press on **Navigation** to display the primary page then go to the secondary page.



2

Select "Show POIs".



3

Select a category from the list offered then "Confirm".



# 05 NAVIGATION - GUIDANCE

## Risk area alert settings

1

Press on **Navigation** to display the primary page then go to the secondary page.



2

Select "**Settings**".



3

Select "**Alert config.**".



4

It is then possible to activate Risk Areas alerts then:

- "Audible warning"
- "Alert only when navigating"
- "Alert only for overspeed"
- "Display speed limits"
- Timing: the choice of timing allows the time before giving a Risk Area alert to be defined.

5

Select "**Confirm**".



!

These functions are only available if Risk Areas have been downloaded and installed on the system.

# 05 NAVIGATION - GUIDANCE

## Adding a waypoint

1 Press on **Navigation** to display the primary page then go to the secondary page.



2 Select "**Enter destination**".



3 Select "**Itinerary**".



4 Select "**Add waypoint**" then "**Enter address**".



5 The address of the waypoint is entered in the same way as a destination, so enter the "**City**:" or post code, the "**Road**:" and the "**N°**:". Confirm each time.  
Then select "**Add waypoint**".



6 Select "**Navigate to**".  
Select the criteria then "**Confirm**" to start guidance and give the general direction of the navigation route.



## Organising waypoints

4 To organise waypoints, carry out the previous operations 1 to 3 again (Adding a waypoint).



5 Select the waypoint that you want to move in the order.



6a Select "**Up**".



6b Select "**Down**".



6c Select "**Delete**".



Select "**Road map**" to view the changes made to the route.



# 05 NAVIGATION - GUIDANCE

## Route options

### Calculation criteria

1

Press **Navigation** to display the primary page then go to the secondary page.



2

Select "**Settings**".



3

Select "**Criteria**".



4

It is then possible to choose:

- the navigation criteria: "**Fastest**", "**Shortest**", "**Time/distance**", "**Ecological**".
- the exclusion criteria: "**Include tollroads**", "**Include ferries**", "**Traffic**", "**Strict**", "**Close**".

5

Select "**Confirm**".



!

The ecological calculation is based on mapping data but this may not always be correct.

# 05 TRAFFIC

## Traffic information

### Display of messages

- 1 Press on **Navigation** to display the primary page then go to the secondary page.




- 2 Select "Traffic messages".



- 3 Set the "**On the route**", "**Around**", "**Near destination**" filters to fine-tune the list .  
Press again to remove the filter.



- 4 Select the message from the list offered.  
Select the magnifying glasses to have the information spoken.

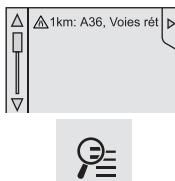

**i** TMC (Traffic Message Channel) messages contain information on traffic and weather conditions, received in real time and transmitted to the driver in the form of audible announcements and symbols on the navigation map.

### Setting filters

- 1 Press on **Navigation** to display the primary page then go to the secondary page.



- 2 Select "Settings".



- 3 Select "Info option".



- 4 Select:
  - "Warn of new messages"**,
  - "Speak messages"**,Then enter the filter radius.



- 5 Select "Confirm".



**i** We recommend a filter radius of:

- 12 miles (20 km) in urban areas,
- 30 miles (50 km) on motorways.

# 05 TRAFFIC

## Main traffic symbols

1 Red and yellow triangle: traffic information, for example:



Modified signs



Narrow carriageway



Slippery surface



Accident



Delay



Roadworks



Risk of explosion



Road closed



Demonstration



Danger



No entry



Traffic jam

2 Black and blue triangle: general information, for example:



Weather reports



Traffic reports



Wind



Fog



Parking



Snow / ice

## Receiving TA messages

1 Press on **Navigation** to display the primary page then go to the secondary page.



2 Select "**Settings**".



3 Select "**Voice**".



4 Activate / Deactivate "**Traffic (TA)**".



**i** The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

# 05 TRAFFIC

## Diverting from a route

1 Press on **Navigation** to display the primary page then go to the secondary page.



2 Select "**Traffic messages**".



3 Select "**Diversion**".



4 Select the diversion distance by pressing + or -.



5 Select "**Recalculate route**". The route will be modified in time and distance.

+183 km +00:20

6 Select "**Confirm**".



The route may be diverted following the reception of a traffic information message.

# 05 MAP

## Map settings

### Map orientation

1

Press on **Navigation** to display the primary page then go to the secondary page.



2

Select "**Map settings**".



3

Select "**Orientation**".



4

Select:

- "**Flat view north heading**" to keep the map always North up,
- "**Flat view vehicle heading**" to have the map follow the direction of travel,
- "**Perspective view**" to display a perspective view.



5

Select "**Confirm**" to save the modifications.



# 05 MAP

## Configure

1

Press on **Navigation** to display the primary page then go to the secondary page.



2

Select "**Map settings**".



3

Select "**Aspect**".



4

Select:

- "**Day**" map colour" to have the map always in day mode.
- "**Night**" map colour" to have the map always in night mode.
- "**Automatic day/night**" to have the brightness of the map adjusted automatically according to the ambient light level.



This mode makes use of the vehicle's sunshine sensor or by manual operation of the vehicle's lighting.

5

Then "**Confirm**" to save the modifications.



Street names are visible on the map from the 100 m scale.

# 05 SETTINGS

## Navigation speech synthesis

### Volume / Street names

1

Press on **Navigation** to display the primary page then go to the secondary page.



2

Select "**Settings**".



3

Select "**Voice synthesis**".



4

Select "**Voice synthesis**" and/or "**Male voice**" and/or "**Female voice**" and/or "**Speak road names**".



5

Select "**Confirm**" to save the modifications.




# 06 CONFIGURATION



Level 1

"Configuration"  
Primary page

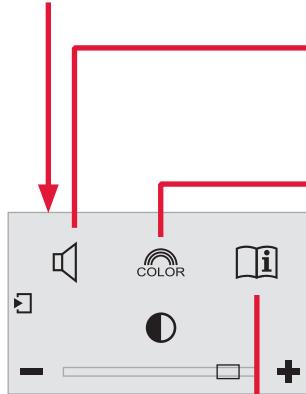

Level 2

**Audio settings**  
Volume controls, checkboxes, and icons for L/R, volume, and music.

**Choice of colours**  
Color selection interface with a color wheel and sliders.


Level 3

**Audio settings**  
Volume control, checkboxes, and icons for L/R, volume, and music.

**Audio settings**  
Volume control, checkboxes, and icons for L/R, volume, and music.

Level 1	Level 2	Level 3	Comments
 	 <b>Ambience</b>		Choose the sound ambience.
<b>Configuration</b> ↓ <b>Audio settings</b> ↓ <b>Audio settings</b> →	 <b>Balance</b>		Set the position of the sound in the vehicle using the Arkamys system.
	 <b>Sound effects</b>		Choose the volume or activate the link to vehicle speed.
	 <b>Voice</b>		Choose the volume for the voice and announcement of street names.
	 <b>Ringtones</b>		Choose the telephone ringtone and volume.
	✓ <b>Confirm</b>		Save the settings.
 	<b>Configuration</b> ↓ <b>Color</b> ↓ <b>Choice of colour scheme</b> →	✓ <b>Confirm</b>	After choosing the colour scheme, save the setting.
 	<b>Configuration</b> ↓ <b>Interactive help</b> →		Consult the Interactive help.

# 06 CONFIGURATION

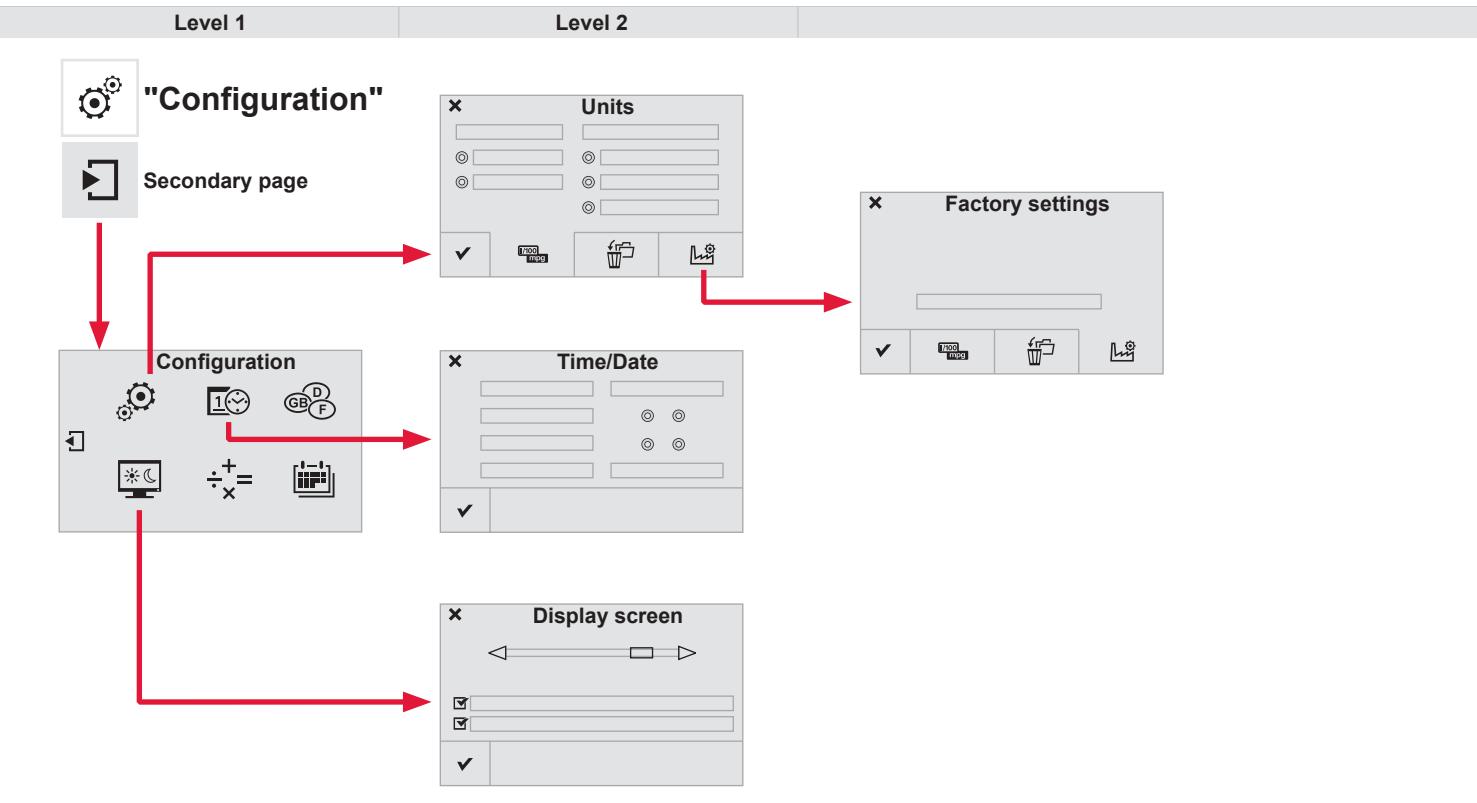

Level 1	Level 2		Comments
 Configuration  Secondary page  System Configuration 	 Units		Set the units used to display distance, fuel consumption and temperature.
	 Erase data		Select the desired data in the list then press Delete.
	 Factory settings		Return to factory settings.
	 Confirm		Save the settings.
 Configuration  Secondary page  Time/Date 	 Confirm		Set the date and time then confirm.
 Configuration  Secondary page  Screen settings 	 Brightness		
	 Automatic text scrolling		
	 Deactivate animations		Make the setting then confirm.
	 Validate		

# 06 CONFIGURATION



Level 1




"Configuration"



Secondary page


Level 2

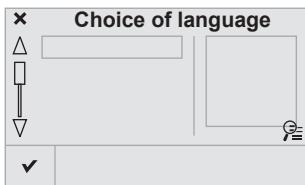

Calculator

1	2	3
4	5	6
7	8	9
	0	

Calendar

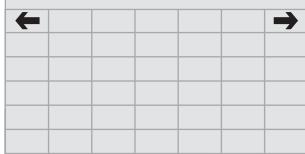

Level 1	Level 2	Comments
  	<p>Configuration</p> <p>↓</p> <p>Secondary page</p> <p>↓</p> <p>System languages</p> <p>→</p> <p>✓ Confirm</p>	<p>Select the language then confirm.</p>
  	<p>Configuration</p> <p>↓</p> <p>Secondary page</p> <p>↓</p> <p>Calculator</p> <p>→</p>	<p>Select the calculator.</p>
  	<p>Configuration</p> <p>↓</p> <p>Secondary page</p> <p>↓</p> <p>Calendar</p> <p>→</p>	<p>Select the calendar.</p>

# 06 CONFIGURATION

## Audio settings


1 Press on **Configuration** to display the primary page.



2 Select "**Audio settings**".



3 Select "**Ambience**" or "**Balance**" or "**Sound effects**" or "**Voice**" or "**Ringtones**".

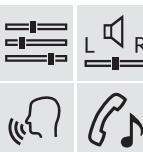

! The distribution (or spatialisation using the Arkamys® system) of sound is an audio process that allows the audio quality to be adapted to the number of listeners in the vehicle.

! The audio settings (**Ambience**, **Bass**, **Treble** and **Loudness**) are different and independent for each sound source. The settings for **distribution** and **balance** are common to all sources.

!

- "**Ambience**" (choice of 6 musical ambiances)
- "**Bass**"
- "**Treble**"
- "**Loudness**" (Activate/Deactivate)
- **Balance** ("**Surround**", "**Driver**", "**All passengers**", "**Front only**", "**ByPass**")
- "**Audio setting on touch screen**"
- "**Volume linked to vehicle speed:**" (Activate/Deactivate)

!

On-board audio: Arkamys® Sound Staging. With Sound Staging, the driver and passengers are immersed in an "audio scene" recreating the natural atmosphere of an auditorium: truly a part of the scene and its surroundings.

This new sensation is made possible by software in the audio system which processes the digital signals from the media players (radio, CD, MP3...) without changing the audio settings. This processing takes account of the characteristics of the passenger compartment to produce optimum results.

The Arkamys® software installed in your audio system processes the digital signal from the media players (radio, CD, MP3, ...) and recreates a natural musical scene, with harmonious placement of instruments and voices in the space in front of passengers, level with the windscreen.

# 06 CONFIGURATION

## Colour schemes

- 1 Press on **Configuration** to display the primary page.  

- 2 Select "**Colour schemes**".  

- 3 Select the colour scheme in the list then "**Confirm**".  


**i** At each change of colour scheme the touch screen tablet's system restarts, showing a black screen for a few moments.

**!** For safety reasons, the procedure for changing the colour scheme is only possible with the vehicle stationary.

## Interactive help

- 1 Press on **Configuration** to display the primary page.  

- 2 Select "**Interactive help**".  


**i** The interactive version of your handbook available in this touch screen is not intended as a substitute for the more complete content of the printed document.

**!** For safety reasons, consultation of your handbook is only possible with the vehicle stationary.

# 06 CONFIGURATION

## System

### Modify system settings

1 Press on **Configuration** to display the primary page then go to the secondary page.



2 Select "**System configuration**".



3 Select "**Units**" to change the units of distance, fuel consumption and temperature.



4 Select "**Delete data**" to delete the list of recent destinations, personal points of interest, contacts in the list.  
Choose the item then select "**Delete**".



5 Select "**Factory settings**" to return to the original settings.



1 Press on **Configuration** to display the primary page then go to the secondary page.



2 Select "**Screen settings**".



3 Select "**Brightness**" to switch off the screen or adjust the brightness.  
Activate or deactivate "**Activate automatic text scrolling**" and "**Activate animations**".



# 06 CONFIGURATION

1


Press on **Configuration** to display the primary page then go to the secondary page.



2

Select:

- **"Time/Date"** to change the time zone, synchronisation with GPS, time and its format and then the date.
- **"Languages"** to change the language.
- **"Calculator"** to display a calculator
- **"Calendar"** to display a calendar.

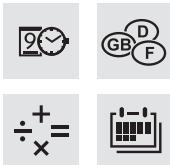

# 07 CONNECTED SERVICES



Level 1

Level 2






## "Connected services"

**Primary page:**  
Driving assistance  
applications, see following  
page on "CITROËN  
MULTICITY CONNECT"\*\*.



**Secondary page:**  
Internet navigation via  
Bluetooth telephone Dial-Up  
Networking (DUN).

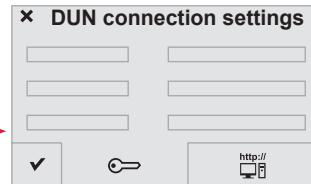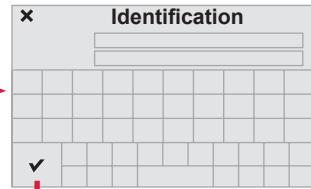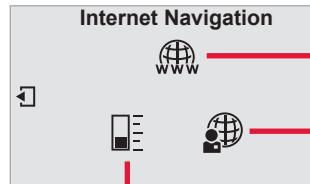

It may be that certain new  
generation smartphones  
are not compatible with this  
standard.

\* Depending on country.


# 07 CITROËN MULTICITY CONNECT

! "CITROËN MULTICITY CONNECT" is a driving assistance applications service that gives access in real time to useful information such as the state of the traffic, danger zones, fuel prices, the availability of parking places, tourist sites, weather conditions, correct addresses... It includes access to the mobile network associated with the use of these applications. "CITROËN MULTICITY CONNECT" is a service contract taken out at CITROËN dealer, available according to country and the type of touch screen, either before or after delivery of the vehicle.

1 Plug the "CITROËN MULTICITY CONNECT" connection key into the right hand USB port.



2 Press on the "Connected services" menu to display the applications.

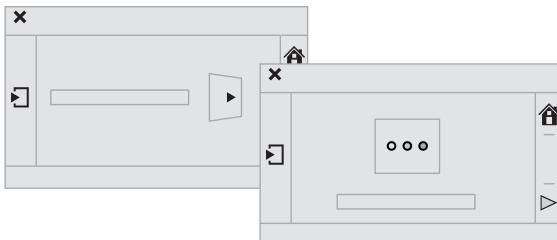


3



The applications use vehicle data such as the current speed, mileage, remaining fuel range or even GPS position to provide pertinent information.

!

For safety reasons, some functions can only be used when stationary.

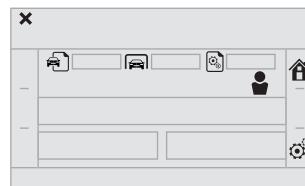

The "MyCITROËN" application is a link between the user, the manufacturer and its dealer network.

It allows the customer to know everything about their vehicle: servicing booklet, accessory range, service contracts taken out.

It also makes possible the sending of the vehicle's mileage to the "MyCITROËN" website, or to identify a dealer.

# 08 TELEPHONE



Level 1






Level 2

Level 3



"Telephone"

Primary page

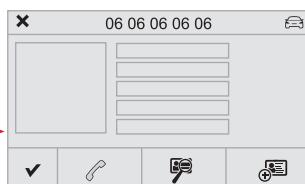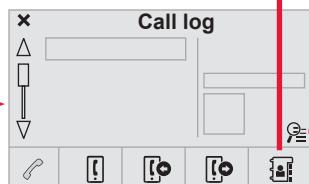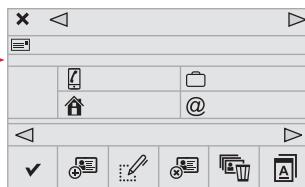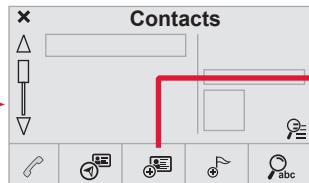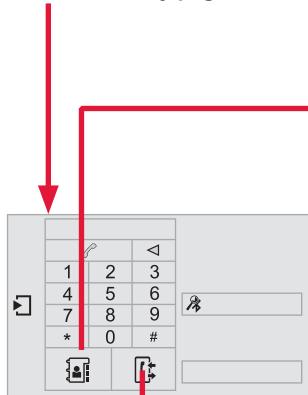

Level 1	Level 2	Level 3	Comments
   	 <b>Addresses</b>   <b>Add contact</b>   <b>Add waypoint</b>   <b>By name</b>   <b>Call</b>	 New  Modify  Delete  Delete all  Search for contact  Confirm	After making choices, start the call.
	 <b>All calls</b>   <b>Incoming calls</b>   <b>Outgoing calls</b>   <b>Contact</b>   <b>Magnifying glass</b>   <b>Call</b>	 View contact  New	After making choices, start the call.

# 08 TELEPHONE



Level 1




"Telephone"




Secondary page

Level 2

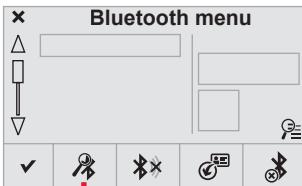

Level 3

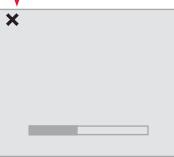

Level 1		Level 2		Level 3		Comments			
    	<b>Telephone</b>  <b>Secondary page</b>  <b>Bluetooth menu</b> 	 <b>Search</b>			Start the search for another peripheral device to connect.				
		 <b>Disconnect</b>			Stop the Bluetooth connection to the selected peripheral device.				
		 <b>Update</b>			Import the contacts from the selected telephone to store them in the audio system.				
		 <b>Delete</b>			Delete the selected telephone.				
		 <b>Confirm</b>			Save the settings.				
  	<b>Telephone</b>  <b>Secondary page</b>  <b>Search for devices</b> 			<input checked="" type="checkbox"/> Telephone profile					
				<input checked="" type="checkbox"/> Streaming profile	Start the search for peripheral devices				
				<input checked="" type="checkbox"/> Internet profile					
  	<b>Telephone</b>  <b>Secondary page</b>  <b>Telephone options</b> 	 <b>Put on hold</b>			Cut the microphone temporarily so that the contact cannot hear your conversation with a passenger.				
		 <b>Update</b>			Import the contacts from the selected telephone to save them in the audio system.				
		 <b>Choice of ringtone:</b>			Choose the telephone ringtone and volume.				
		 <b>Memory info.</b>			Contact records used and free, percentage of storage space used by internal contacts and Bluetooth contacts.				
		 <b>Confirm</b>			Save the settings.				

# 08 BLUETOOTH

## Pairing a Bluetooth telephone First connection

1 Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).



2 Press on **Telephone** to display the primary page then go to the secondary page.



3 Select the "Bluetooth" menu.



4 Select **Search**.  
The list of peripherals detected is displayed.



i If the peripheral is not detected, it is recommended that you switch the Bluetooth function on your telephone off and then on again.

5 Select the name of the desired peripheral from the list and **Confirm**.



! For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio system must be carried out with the **vehicle stationary**.

6 Choose a code for the connection then "**Confirm**".



7 Enter the same code on the telephone then accept the connection.



8 The system offers to connect the telephone:  
- in "**Telephone profile**" (telephone only).  
- in "**Streaming profile**" (streaming: playing audio files from the telephone),  
- in "**Internet profile**" (internet browser only).  
Select and Confirm.

! The "**Hands-free**" profile should be used in preference if "Streaming" is not desired.

! The ability of the system to connect with only one profile depends on the telephone. The two profiles may both connect by default.

! Visit [www.citroen.co.uk](http://www.citroen.co.uk) for more information (compatibility, additional help, ...).

# 08 BLUETOOTH

! The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.

9

The telephone is added to the list.



10

Depending on your telephone, you may be asked to accept automatic connection every time the ignition is switched on.

!

Depending on the type of telephone, the system will ask you to accept or not the transfer of your contacts.



If not, select "Update".

!

On return to the vehicle, the last telephone connected automatically reconnects, within around 30 seconds after switching on the ignition (Bluetooth activated).

To modify the automatic connection mode, select the telephone in the list then select the desired profile.

## Connecting a Bluetooth peripheral


### Automatic reconnection

1

On switching on the ignition, the telephone connected when the ignition was last switched off is automatically reconnected, if this connection mode had been activated during the pairing procedure (see previous pages).

2

The connection is confirmed by the display of a message and the name of the telephone.

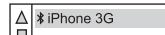

### Manual connection

1

Press on **Telephone** to display the primary page then go to the secondary page.



2

Select "**Bluetooth**" to display the list of paired peripherals.



3

Select the peripheral to connect.



4

Press on "**Search**".



5

The connection is confirmed by the display of a message and the name of the telephone.



# 08 BLUETOOTH

## Managing paired telephones



This function allows the connection or disconnection of a peripheral device as well as the deletion of a pairing.

1

Press on **Telephone** to display the primary page then go to the secondary page.



2

Select "**Bluetooth**" to display the list of paired peripheral devices.



3


Select the peripheral in the list.



4

Select:

- "**Search**" or "**Disconnect**" to connect or disconnect the Bluetooth connection with the peripheral selected.
- "**Delete**" to remove the pairing.

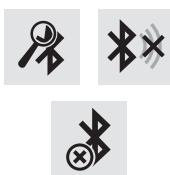

## Receiving a call

1

An incoming call is announced by a ring and a superimposed display in the screen.

2a

Make a short press on the steering mounted **TEL** button to accept an incoming call.



2b

Make a long press on the steering mounted **TEL** button to reject the call.



or

Select "**End call**".



# 08 CONTACTS

## Making a call

### Calling a new number

- 1 Press on **Telephone** to display the primary page.



- 2 Enter the phone number using the keypad then "Call" to start the call.



! Use of the telephone is not recommended while driving. We recommend that you park safely or make use of the steering mounted controls.

### Calling a contact

- 1 Press on **Telephone** to display the primary page.




Or make a long press on the steering mounted **TEL** button.



- 2 Select "Contacts".



3 Select the desired contact from the list offered.

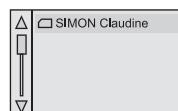

- 4 Select "CALL".



## 08 CALL LOG

### Ending a call

#### Calling a recently used number


- 1 Press on **Telephone** to display the primary page.



- 2 Select "**Call log**".



- 3 Select the desired contact from the list offered.

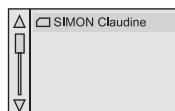

**i** It is always possible to make a call directly from the telephone; park the vehicle first as a safety measure.

- 1 Select "**End call**".  
or  
Make a long press on the steering mounted **TEL** button.



# 08 SETTINGS

## Ringtones

1

Press on **Telephone** to display the primary page then go to the secondary page.



2

Select "**Telephone options**".



3

Select "**Choice of ringtone:**".



4

You can select the ringtone used and adjust its volume.

5

Select "**Confirm**".



## Managing contacts / Entries

1

Press on **Telephone** to display the primary page.



2

Select "**Contacts**".



3

Select "**View contact**".



4

Select:

- "**New**" to add a new contact.
- "**Modify**" to edit the selected contact.
- "**Delete**" to delete the selected contact.
- "**Delete all**" to delete all of the information for the selected contact.



5

Select "**Directory information**" for the number of entries used, available, ...



# FREQUENTLY ASKED QUESTIONS

The following table groups together the answers to the most frequently asked questions concerning your audio system.

QUESTION	ANSWER	SOLUTION
<b>Navigation, guidance</b>		
The route calculation is not successful.	The guidance criteria may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the guidance criteria on the Navigation Menu, "Guidance options"\ "Define calculation criteria".
I am unable to enter my post code.	The system only accepts post codes of up to 5 characters.	
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
The risk areas audible warning does not work.	The audible warning is not active.	Activate audible warnings in the Guidance options menu, "Navigation - guidance", "Set parameters for risk areas".
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Traffic info" function in the list of guidance criteria.
I receive a Risk area alert which is not on my route.	Other than guidance, the system announces all Risk areas positioned in a cone located in front of the vehicle. It may provide an alert for a Risk area located on nearby or parallel roads.	Zoom in on the map to view the exact position of the Risk area. Select "On the route" to no longer receive alerts other than guidance or to reduce the time for the announcement.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the "Geographic filter" settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the SETUP button, then select "GPS coverage").
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.
<b>Telephone, Bluetooth</b>		
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	<ul style="list-style-type: none"> <li>- Check that your telephone's Bluetooth function is switched on.</li> <li>- Check in the telephone settings that it is "visible to all".</li> </ul>
	The Bluetooth telephone is not compatible with the system.	A list of compatible Bluetooth mobile telephones is available from the dealer network.
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	
<b>CD, MP3</b>		
The CD is ejected automatically or is not played by the player.	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.</p> <p>The CD has been recorded in a format that is not compatible with the player.</p> <p>The CD is protected by an anti-pirating protection system which is not recognised by the audio system.</p>	<ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: refer to the advice in the "AUDIO" section.</li> <li>- The audio system's CD player does not play DVDs.</li> <li>- Some recorded CDs will not be played by the audio system because they are not of the correct quality.</li> </ul>
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiences) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	
Radio		
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a CITROËN dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	
	Some radio stations send other information in place of their name (the title of the song for example).	
The name of the radio station changes.	The system interprets this information as the name of the station.	

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
<b>Settings, configuration</b>		
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings for Volume, Bass, Treble, Equalizer and Loudness can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings for (Volume, Bass, Treble, Equalizer, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Fr-Re balance, Le-Ri balance) to the middle position, select the "None", musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
With the engine off, the system switches off after a few minutes of use.	<p>When the engine is switched off, the system's operating time depends on the battery charge.</p> <p>The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.</p>	Start the vehicle's engine to increase the battery charge.
<b>USB, portable player, connection key</b>		
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
When I connect my iPhone as telephone and to the USB port at the same time, I am unable to play the music files.	When the iPhone connects automatically as a telephone, it forces the streaming function. The streaming function takes the place of the USB function which is then not useable, there is a period without sound of the track being played with Apple® players.	Disconnect and reconnect to the USB port (the USB function takes priority over streaming).
When I connect my Apple® player, my Blackberry® or my connection key to the left hand USB port, I get an error message.	<p>Apple® players, Blackberry® devices and connection keys draw more than 0.5 amp.</p> <p>The left hand USB port is limited to 0.5 amp, the right hand USB port is limited to 1 amp.</p>	Disconnect all devices from all the USB ports then reconnect the Apple® player, Blackberry® or connection key to the right hand USB port.

360 vision ..... 192

**A**

Accessories ..... 307

Accessory position ..... 140

Accessory socket, 12V ..... 118, 122, 126

Access to the 3rd row ..... 96

Adjusting headlamps ..... 211

Adjusting head restraints ..... 88, 93

Adjusting seat belt height ..... 230

Adjusting the steering wheel ..... 103

Advice on care and maintenance ..... 322

Airbags ..... 48, 235

Airbags, curtain ..... 239, 240

Airbags, front ..... 236, 240

Airbags, lateral ..... 238, 240

Air conditioning ..... 24, 105

Air conditioning, digital ..... 105, 109

Air conditioning, manual ..... 105, 107

Air distribution adjustment ..... 106, 108, 111

Air filter ..... 321

Air flow ..... 104

Air flow adjustment ..... 106, 107, 111

Air intake ..... 108, 112

Air recirculation ..... 108, 112

Air vents ..... 104

Alarm ..... 79

Anti-pinch ..... 82, 220

Anti-theft ..... 140

Armrest, front ..... 91

Assistance call ..... 223, 335, 336

Audible warning ..... 222

Audio cable ..... 356

Audio streaming (Bluetooth) ..... 352, 355

Automatic headlamps ..... 40, 208

Automatic illumination of headlamps ..... 203, 207

Automatic operation of hazard warning lamps ..... 222

Automatic rain sensitive windscreen wipers ..... 214, 217

Auxiliary ..... 352, 356

Capacity, fuel tank ..... 313

CD ..... 352

CD MP3 ..... 352

Central locking ..... 61, 64, 68

Changing a bulb ..... 279-287

Changing a fuse ..... 288-294

Changing a wheel ..... 268-277

Changing a wiper blade ..... 218, 299

Changing the date ..... 57

Changing the remote control battery ..... 70

Changing the time ..... 57

Checking levels ..... 318-320

Checking the engine oil level ..... 53, 318

Checking tyre pressures (using the kit) ..... 267

Checks ..... 311, 312, 321, 322

Child lock ..... 259

Children ..... 103, 234, 236, 243-259

Child seats ..... 241, 242, 246-248, 250, 258

Child seats, conventional ..... 247

Child surveillance mirror ..... 103

Citroën Localised Assistance Call ..... 336

Citroën Localised Emergency Call ..... 336

CITROËN MULTICITY CONNECT ..... 389

Closing the boot ..... 75, 76

Closing the doors ..... 62, 65, 67

Cold climate screen ..... 306

Colour screen ..... 338

Concertina boards ..... 97

Connectors, audio ..... 122

Coolant level ..... 319

Courtesy lamps ..... 219

Cruise control ..... 167, 171, 174

Cruise control, active ..... 174

Cup holder ..... 118

Backup starting ..... 295

Battery ..... 295-297, 321

Battery, charging ..... 297

Battery, remote control ..... 70, 71

Black panel ..... 56

Blind for panoramic sunroof ..... 220

Blinds ..... 119, 126

Blind spot sensors ..... 186

Bluetooth (hands-free) ..... 394, 395

Bluetooth (telephone) ..... 394, 395

Bonnet ..... 310

Bonnet stay ..... 310

Boot ..... 75-78

Boot (opening) ..... 61

Boot lamp ..... 134

Brake discs ..... 322

Brake lamps ..... 283-287

Brake pads ..... 322

Brakes ..... 322

**B**

**D**

DAB (Digital Audio Broadcasting) .....	351
Date (setting).....	57
Daytime running lamps .....	210, 279, 281
Deactivating ESP .....	229
Deactivating the passenger airbag.....	236
Deadlocking .....	63, 66, 69
Defrosting.....	114, 115
Demisting .....	114, 115
Diesel .....	41, 316
Diesel additive level .....	320
Diesel engine pre-heat warning lamp.....	41
Digital Audio Broadcasting (DAB) .....	351
Dimensions .....	331, 332
Dipped beam.....	99, 202, 279, 280
Dipstick.....	53, 318
Directional lighting .....	212, 213
Direction indicators .....	222, 279, 282-286
Distance alert.....	163, 182, 183
Doors.....	73
Doors back-up control .....	74
Driving positions (storing) .....	87
Driving economically.....	24
Dynamic emergency braking .....	145
Dynamic stability control (DSC).....	43, 47, 229

**E**

Eco-driving .....	24
Economy mode .....	298
Electronic engine immobiliser .....	71, 140
Electronic stability programme (ESC) .....	227
Emergency boot release.....	78
Emergency call .....	223, 335, 336

Emergency warning lamps .....	222, 223
Energy economy mode.....	298
Engine, Diesel .....	312, 316, 317, 325-327
Engine, petrol .....	311, 316, 323
Engine compartment .....	311, 312
Engine compartment fusebox.....	293
Engine oil .....	318
Engine oil level indicator .....	53, 318
Engines .....	323, 325-327
Environment .....	24, 70, 105, 115, 224, 297, 320
ESC/ASR.....	227

Filling with fuel .....	313, 315, 316
Fitting a wheel.....	276
Fitting roof bars .....	304
Fittings, rear .....	125
Flashing indicators .....	222
Foglamps, front .....	204, 212, 282
Foglamps, rear .....	204
Folding the rear seats .....	92, 94, 96, 97
Fragrance cartridge .....	116
Frequency (radio) .....	349, 350
Front seats .....	84, 86, 87
Fuel.....	316
Fuel consumption .....	24
Fuel filler cap .....	313
Fuel filler flap .....	313, 315
Fuel gauge .....	33, 34, 313
Fuel tank .....	313, 315
Fusebox, dashboard .....	290
Fuses .....	288

Gearbox, automatic .....	154, 160, 297, 322
Gearbox, electronic.....	150, 160, 297, 322
Gearbox, manual .....	149, 160, 322
Gear shift indicator .....	159
Gear lever, manual gearbox .....	149
Gear selector .....	150, 154
Glove box .....	118, 119
Guidance .....	358
Guide-me-home .....	206, 207

**G**

Halogen headlamps .....	279
Hands-free kit.....	394, 395
Hazard warning lamps .....	222, 223
Headlamp adjustment .....	211
Headlamps, directional .....	213, 279
Headlamp wash .....	216
Head restraints, front .....	88
Head restraints, rear .....	93
Heated seats .....	90
Heating .....	106, 107, 109
Height and reach adjustment, steering wheel .....	103
Hill start assist .....	148
Hooks .....	130

**H**

Identification plates.....	333
Ignition on.....	140
Indicator lamps, status.....	38-50
Indicators, direction .....	222, 282, 285, 287
Inflating accessories (using the kit).....	267
Inflating tyres .....	24
Instrument panels .....	33, 34
Instrument panel screen .....	35, 159
Intelligent Traction Control.....	228
Interior fittings .....	118, 119
Interior mood lighting .....	221
ISOFIX child seats .....	252-256
ISOFIX mountings .....	252

**J**

Jack .....	268-270
Jack cable .....	356
JACK socket.....	356
Jukebox (playing).....	357

**K**

Keeping children safe ...	103, 234, 236, 243-259
Key .....	61-71, 140
Key, electronic.....	61-63
Keyless Entry and Starting .....	61-63

Labels, identification .....	333
Lamps, warning and indicator.....	38-50
Lane Departure Warning System (LDWS) .....	185
LED daytime running lamps.....	210
Leg rest, electric .....	90
Level, brake fluid .....	319
Level, headlamp wash .....	320
Levels and checks.....	310-322
Lighting, guide-me home .....	206, 207
Lighting, interior .....	219, 221
Lighting bulbs (replacement) .....	279-287
Lighting control stalk .....	202, 206
Loading .....	24
Load reduction mode .....	298
Locating your vehicle .....	63
Locking from the inside .....	72
Locking the doors .....	72
Low fuel level .....	313
Luggage cover .....	132
Lumbar .....	89

**L**

Mirror, rear view .....	102
Mirrors, door .....	101, 102, 186
Misfuel prevention .....	315
Modularity, seats .....	99
Motorised boot .....	76, 77
Motorway function (three flashes of the direction indicators) .....	222
Mountings for ISOFIX seats .....	252
Multimedia, rear .....	127

**N**

Number plate lamps .....	287
--------------------------	-----

**O**

Oil filter .....	321
Oil level .....	53, 318
Opening the bonnet .....	310
Opening the boot .....	61, 64, 75
Opening the doors .....	61, 64
Opening the panoramic sunroof blind .....	220
Operation indicator lamps .....	38-50

Main beam .....	40, 202, 279-281, 283
Maintenance .....	24
Map reading lamps .....	219
Markings, identification .....	333
Massage function .....	89
Mat .....	123
Memorising a speed .....	167
Menu .....	342, 344, 346, 358, 360, 362, 378, 390, 392

**P**

Paint colour code .....	333
Panoramic glass sunroof .....	220
Parcel shelf, rear .....	130
Park Assist .....	194
Parking brake, electric .....	141, 322
Parking lamps .....	206
Parking sensors, front .....	190
Parking sensors, rear .....	189
Particle emission filter .....	310, 319-321
Passenger compartment filter .....	321
Port, USB .....	122
Priming the fuel system .....	317
Protecting children .....	103, 234, 236, 243-259
Puncture .....	260

**R**

Radio .....	348
RDS .....	350
Reading lamps, rear .....	125
Rear foglamp .....	204, 283, 285, 287
Rear screen (demisting) .....	115
Recharging the battery .....	297
Reduction of electrical load .....	298
Regeneration of the particle emissions filter .....	321
Reinitialising the remote control .....	70
Remote control .....	61-71
Removable screen (snow shield) .....	306
Removing a wheel .....	274
Removing the mat .....	123
Repair kit, puncture .....	260
Replacing bulbs .....	279-287
Replacing fuses .....	288

Replacing the air filter .....	321
Replacing the oil filter .....	321
Replacing the passenger compartment filter .....	321
Replacing wiper blades .....	218, 299
Resetting the service indicator .....	52
Resetting the trip recorder .....	54
Reversing camera .....	191
Reversing lamp .....	283-286
Risk areas (update) .....	367
Roof bars .....	304
Routine checks .....	321, 322
Running out of fuel (Diesel) .....	317

Spare wheel .....	271-273
Speed limiter .....	167, 168
Spotlamps, side .....	210, 283
Starting using another battery .....	295
Starting the vehicle .....	135, 137, 150, 154
Steering mounted controls .....	341
Stopping the vehicle .....	135, 137, 150, 154
Stop Start .....	60, 114, 160, 161, 295, 310, 313, 321
Storage .....	118
Storage boxes .....	124, 126
Storing driving positions .....	87
Sun visor .....	119
Synchronising the remote control .....	70
Synthesiser, voice .....	377
System settings .....	386

**S**

Safety for children .....	103, 234, 236, 243-259
Scented air freshener .....	116
Screen menu .....	342, 344, 346, 358, 360, 362, 378, 390, 392
Screenwash, front .....	216
Screenwash fluid level .....	320
Seat adjustment .....	84-94
Seat belts .....	230-234
Seat configurations .....	99
Seats, electric .....	86
Seats, rear .....	92-98
Serial number, vehicle .....	333
Service indicator .....	51
Servicing .....	24
Setting the clock .....	57
Sidelamps .....	202, 206, 279, 281, 283, 285
Side repeater .....	283
Snow chains .....	278

**T**

Table of weights .....	324, 328-330
Tables of engines .....	323, 325-327
Tables of fuses .....	288
Tank, fuel .....	313, 315
Technical data .....	323-330
Telephone .....	394-398
Temperature adjustment .....	106, 107, 109
Temperature control for heated seats .....	90
Temporary tyre repair kit .....	260
TMC (Traffic info) .....	372
Tools .....	268, 270
Torch .....	134

Total distance recorder .....	54
Touch screen .....	55-58, 337
Towbar .....	302
Towed loads .....	324, 328-330
Towing another vehicle .....	301
Traction control (ASR) .....	43, 47, 227
Traffic information (TA) .....	373
Traffic information (TMC) .....	372, 373
Trailer .....	302
Trip computer .....	58-60
Trip distance recorder .....	54
Tyre pressures .....	262, 267, 277, 333
Tyres .....	24
Tyre under-inflation detection .....	224

## U

Under-inflation (detection) .....	224
Under floor storage .....	130
Unlocking .....	61, 64
Unlocking from the inside .....	72
Unlocking the boot .....	61
Unlocking the doors .....	72
Update risk areas .....	367
Updating the date .....	57
Updating the time .....	57
USB .....	352

## V

Vehicle identification .....	333
Ventilation .....	104, 105, 107, 111, 114
Visibility .....	114

## W

Warning lamps .....	38-50
Warning triangle .....	223
Wash-wipe, rear .....	215
Washing (advice) .....	322
Weights .....	324, 328-330
Welcome lighting .....	210
Window controls .....	82
Wiper, rear .....	215
Wiper control stalk .....	214, 215, 217
Wipers .....	42, 214, 217

## X

Xenon headlamps .....	279
-----------------------	-----

# Exterior

Electronic key / "Keyless Entry and Starting" system  
61-71

- opening / closing
- anti-theft protection
- back-up control
- battery

Boot  
75-78

- opening / closing
- emergency release

Changing bulbs  
283-287

- rear lamps
- 3rd brake lamp
- number plate lamps
- foglamps

Parking sensors  
189-190

Reversing camera  
191

360 Vision  
192-193

Park Assist  
194-201


Towbar  
302-303

Towing  
300-301

Panoramic sunroof  
220

Roof bars  
304-305

Accessories  
307-308

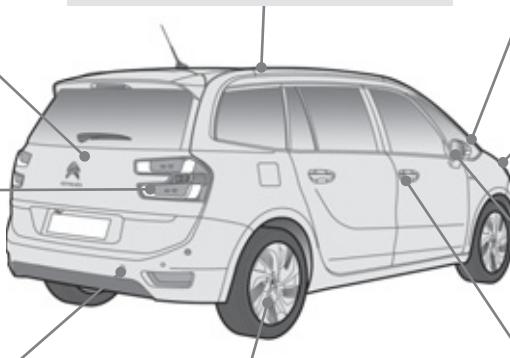

Wipers, screenwash  
214-218

Changing a wiper blade  
299

Exterior welcome lighting  
210

Door mirror spotlamps  
210

Cornering lighting  
212

Directional lighting  
213

Headlamp height adjustment  
211

Changing bulbs  
279-283

- front lamps
- foglamps
- direction indicator repeaters

Door mirrors  
101-102

Doors  
73-74

- opening / closing
- emergency control


Central locking  
72

Alarm  
79-81

Electric windows  
82-83

Fuel tank, misfuel  
prevention  
313-315


# Interior

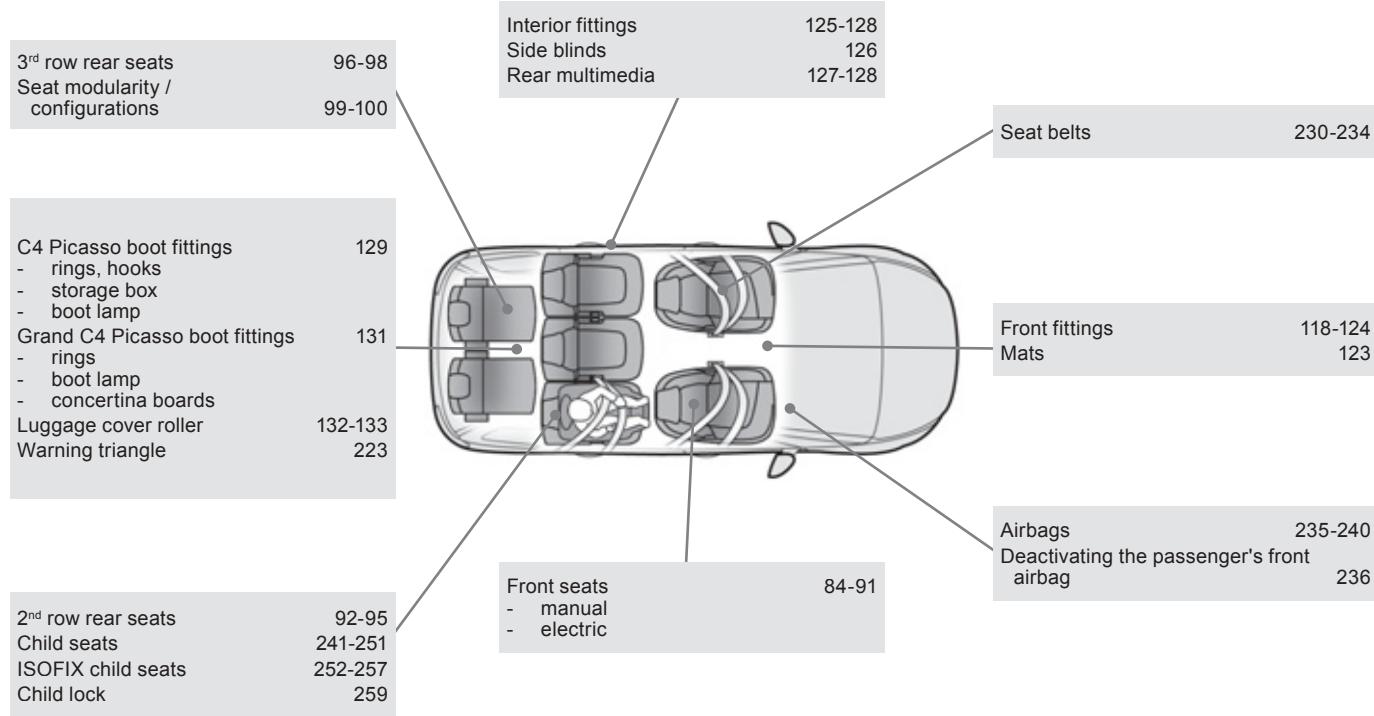

# Instruments and controls

Automatic gearbox	154-158	Courtesy lamps	219	Instrument panels	33-37
Electronic gearbox system	150-153	Rear view mirror	102	Lighting dimmer	55
Gear shift indicator	159	Panoramic sunroof	220	Warning lamps	38-50
Door mirrors	101-102			Indicators	51-53
Electric windows, deactivating	82-83			- service indicator	
Opening the bonnet	310			- oil level indicator	
5/6-speed manual gearbox	149				
Gear shift indicator	159				
				Touch screen tablet	26-32
				Equipment settings	28-30
				Setting the date/time	57
				GPS Navigation / Multimedia audio system / Bluetooth telephone	337-405
				Ventilation	104-105
				Heating	106
				Dual-zone manual air conditioning	107-108
				Dual-zone automatic air conditioning	109-114
				Demisting / defrosting	114-115
				Electric parking brake	141-147

# Instruments and controls (cont.)

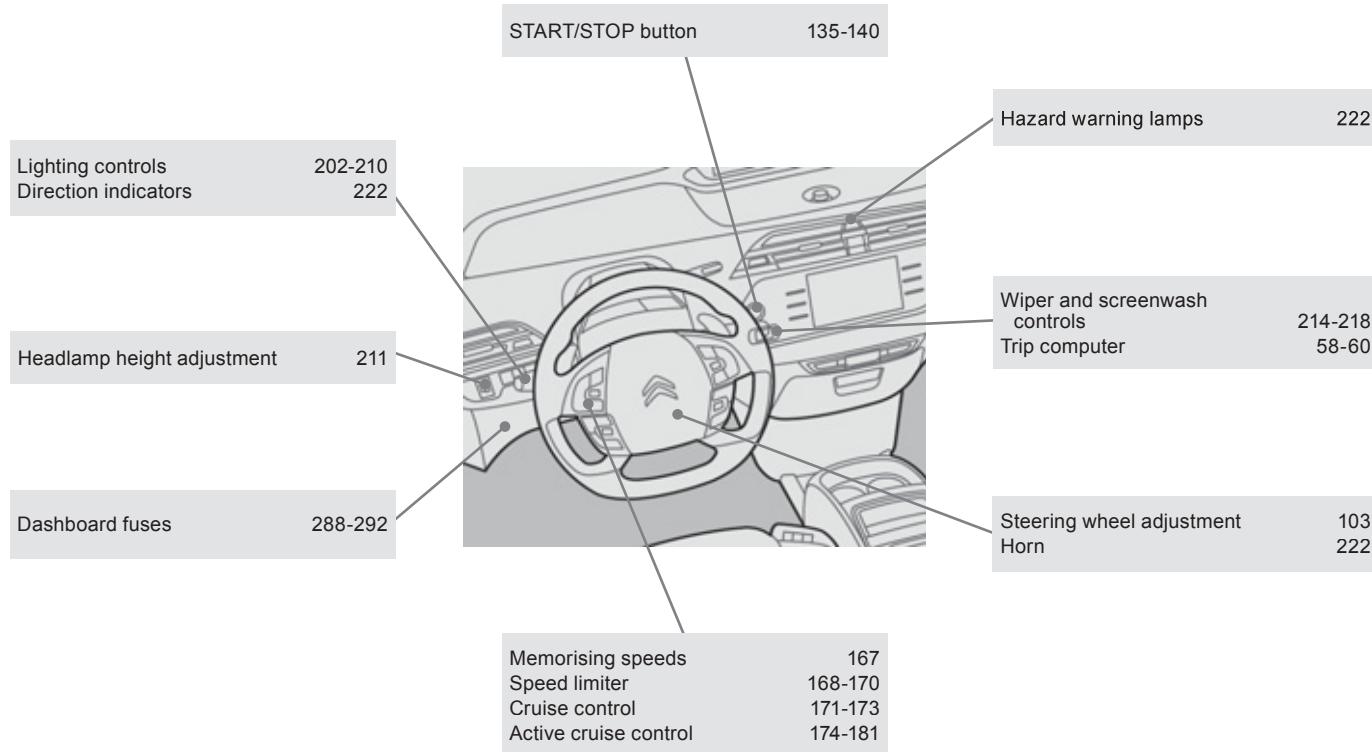

# Maintenance - Technical data

Running out of fuel, Diesel 317

Checking levels 318-320

- oil
- brake fluid
- coolant
- screenwash/headlamp wash fluid


Checking components 321-322

- air filter
- passenger compartment filter
- oil filter
- electric parking brake
- brake pads / discs

Changing bulbs 279-287


- front
- rear

12V battery 295-297  
 Load reduction, economy mode 298  
 Engine compartment fuses 288-289, 293-294

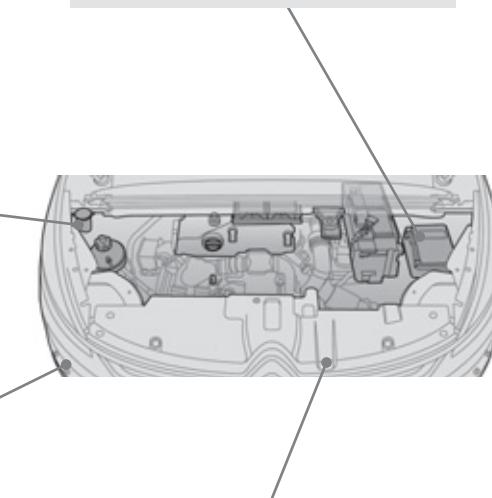

Opening the bonnet 310  
 Under the bonnet, petrol 311  
 Under the bonnet, Diesel 312  
 Petrol engines 323  
 Diesel engines 325-327

Petrol weights 324  
 Diesel weights 328-330

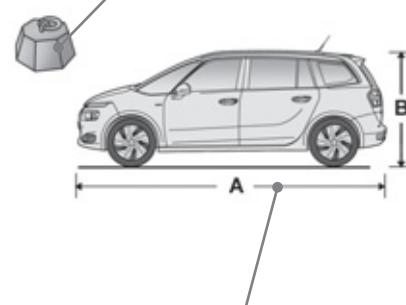

Identification markings 333  
 Dimensions 331-332



This handbook describes all of the equipment available in the whole range.

Your vehicle will be fitted with some of this equipment described in this document, depending on its trim level, version and the specification for the country in which it is sold.

The descriptions and illustrations are given without any obligation. Automobiles CITROËN reserves the right to modify the technical specifications, equipment and accessories without having to update this edition of the handbook.

This document is an integral part of your vehicle. It should be passed on to the new user in the event of sale or transfer.

Automobiles CITROËN declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

Reproduction or translation of all or part of this handbook is prohibited without written authorisation from Automobiles CITROËN.

For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a CITROËN dealer is able to provide.

Printed in the EU  
Anglais

03-13

Automobiles CITROËN

Siège social : 6 rue Fructidor - 75835 Paris Cedex 17 - France

TÉL. : +33 (0) 1 58 79 79 79 - [www.citroen.fr](http://www.citroen.fr)

S.A. au capital de 159 000 000 € - R.C.S. Paris 642 050 199 - Siret 642 050 199 00 990 - APE 741 J



13B78.0041

Anglais

2013 – DOCUMENTATION DE BORD

4Dconcept

Diadeis

Edipro

CRÉATIVE TECHNOLOGIE

